



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-2 R1

Date: May 01, 2002

Document Effectivity: D6-27370-BBJ

Subject: Emergency Airworthiness Directive 2002-08-52

Reason: This is a reissue of BBJ-2, dated June 19, 2001, which informed flight crews of an operation limitation associated with elevator control surface vibration on 737-800 airplanes. The purpose of this reissue is to inform flight crews that this limitation now exists for the 737-600/-700/-700C and BBJ. Service Bulletin information is also provided.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

In May 2001, a 737-800 airplane experienced a significant airplane vibration event associated with speed brake deployment as the airplane descended through flight level 220 at 320 knots IAS. Additionally, vibration events were experienced during the 737-900 flight test program that were attributed to a lack of sufficient damping necessary to prevent elevator tab vibration in certain flight conditions. The 737-900 elevator tab was stiffened to provide increased damping. Based on data gathered during the 737-900 flight test program, we believe it is likely that the 737-800 vibration event noted above was similar to these events.

Recently, a 737-700 airplane also experienced a similar vibration event associated with speedbrake deployment as the airplane descended through FL195 at an airspeed of 315 KIAS.

As a result an operational limitation as noted below has been expanded to include the 737-600/-700/-700C/BBJ airplanes until stiffened elevator tabs are installed. The new elevator tab will be incorporated in production at line number 1175, scheduled for delivery in July 2002. Retrofit of in-service airplanes per Boeing Service Bulletin 737-55-1080 will begin in the third quarter of 2002. Boeing anticipates this corrective action will provide sufficient damping to eliminate vibration. This limitation is identical to that currently in effect for 737-800 airplanes.

Operating Instructions

The following AFM limitation will be placed on the 737-600/-700/-700C/-800/BBJ fleet until terminated by the installation of a stiffened elevator tab:

Do not operate the airplane at speeds in excess of 300 KIAS with speedbrakes extended.

WARNING: Use of speedbrakes at speeds in excess of 320 KIAS could result in a severe vibration, which, in turn, could cause extreme damage to the horizontal stabilizer.

The FAA confirmed that in a situation requiring an Emergency Descent, the pilot in command may deviate from subject AD in accordance with the responsibility and authority provided in FAR 91.3.

Flight Crew Operations Manual Information

Attached are the replacement pages which reflect the revised information. Remove the pages listed below and replace with the attached pages to your Volume 1. A revised list of effective pages will be included in the next revision of your operations manual.

Remove Page No.	Date	Insert Page No.	Date
L.10.5	April 15, 2002	L.10.5	May 1, 2002

Administrative Information

This bulletin replaces bulletin BBJ-2, dated June 19, 2001. Discard bulletin BBJ-2. Revise the Bulletin Record page to show BBJ-2 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-2 R1 "INCORPORATED" (INC).

This bulletin will be canceled after Boeing is notified that all affected airplanes in your fleet have been modified by Service Bulletin 737-55-1080.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-3 R1

Date: June 30, 2004

Document Effectivity: D6-27370-BBJ

Subject: Inflight Start EGT Display

Reason: To inform flight crews that the inflight start EGT start limit and exceedance indications may not appear correctly below 20,000 feet. The purpose of this reissue is to provide Service Bulletin information.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Exhaust Gas Temperature (EGT) is normally displayed on the center instrument panel upper display unit (DU) as both a digital readout and a round dial/moving pointer indication. Maximum operating limits are indicated by redlines.

The EGT Start Limit redline is displayed during engine start when N2 is less than idle. If an exceedance is noted by the electronic engine control (EEC), the digital readout, box, pointer and indicator change color to red.

Flight testing has shown that the Exhaust Gas Temperature (EGT) Start Limit redline and associated exceedance indications may not display during inflight engine starts below 20,000 feet due to an EEC software error. An EEC software update, due early first quarter 2002, will correct the anomaly.

Operating Instructions

Monitor EGT when performing the Inflight Engine Start procedure to ensure EGT does not rise rapidly or exceed the start limit of 725°C during the start attempt.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-3 R1 "IN EFFECT" (IE).

This bulletin replaces bulletin BBJ-3, dated September 16, 2001. Discard bulletin BBJ-3. Revise the Bulletin Record to show BBJ-3 as "CANCELLED" (CANC).

This bulletin will be canceled after Boeing is notified that all affected airplanes in your fleet have been modified by CFM 56-7B Service Bulletin 73-0082.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707 M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-6 R1

Date: November 01, 2002

Document Effectivity: D6-27370-BBJ

Subject: Airworthiness Directive 2002-08-20, AMOC Letter 120S-02-907

Reason: This is a reissue of BBJ-6, dated May 15, 2002, which notified flight crews of operational limitations and Non-Normal procedures associated with elevator control surface vibration (limit cycle oscillation) on the 737-600/-700/-700C/-800 and BBJ following deicing/anti-icing operations. The purpose of this reissue is to provide flight crews with additional information from Alternate Means of Compliance (AMOC) Letter 120S-02-907 which limits the restrictions to deicing/anti-icing with Type II or Type IV fluids.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing has received reports of incidents of severe airframe vibration (limit cycle oscillation) on 737-600/-700/-800 airplanes after the horizontal stabilizer had been deiced/anti-iced with Type II or Type IV fluids. These events have been attributed to accumulation of deicing/anti-icing fluid or other residue inside the elevator balance bay and on the exterior surfaces of the elevator tab. The accumulation of fluid in the balance bays has been attributed to inadequate drainage provisions. A previous Operations Manual Bulletin provided recommendations to the flight crew to help reduce accumulation of fluid in the elevator balance bays by ensuring the stabilizer is trimmed to the full APL NOSE DOWN position prior to any deicing/anti-icing operations, in accordance with the B737 Adverse Weather Supplementary Procedures. Following application of Type II or Type IV deicing/anti-icing fluid, the control column should be cycled slowly full forward to full aft a minimum of three times to help drain residual fluid from the elevator balance bay.

Boeing believes these limit cycle oscillation (LCO) events can be attributed to a lack of sufficient elevator tab damping to prevent elevator tab vibration in certain flight conditions. An elevator tab LCO is characterized by a high frequency (approximately 40 Hz) resonant vibration. This vibration originates, and is strongest, in the aft part of the airplane, but can be felt in the entire structure. It may or may not be felt in the control wheel. If the flight deck door is open, the vibration can be heard coming from the back of the airplane. In addition, aft cabin personnel will notice a strong vibration.

Operational limitations as noted below will be required for the 737-600/-700/-700C/-800 and BBJ airplanes following any deicing/anti-icing with Type II or Type IV fluids until stiffened elevator tabs are installed. The new elevator tabs can be distinguished from the original tabs by the six-hinge design.

Flight test of the new tabs was completed in April 2002 and was incorporated in production at line number 1175 in July 2002. Retrofit of in-service airplanes per Boeing Service Bulletin 737-55A1080 began in September 2002. Boeing anticipates this corrective action will provide sufficient damping to eliminate vibration.

Service Bulletin 737-55A1084 was released to improve draining of fluid from the elevator balance bay area and to help reduce fluid accumulation. Service Letter 737-SL-55-021 was released to provide instructions to periodically clean the external surface of the elevator tab. Service Letter 737-SL-12-017 provided cleaning instructions for the elevator balance bays.

The effects of airframe vibration can be cumulative and can affect the life of the airframe. After completion of a flight during which a suspected ice-related airframe vibration is encountered, the flight crew is encouraged to complete a vibration report. An example of a flight deck vibration event log can be found in 737-SL-02-002-D, dated July 3, 2001.

Operating Instructions

After any ground deicing/anti-icing of the horizontal stabilizer using Type II or Type IV fluids, airspeed must be limited to 270 KIAS for all follow-on flights until the applicable maintenance procedures have been accomplished. Mach limits are not affected. Once the applicable maintenance procedures have been accomplished, exceeding 270 KIAS is permissible until the next application of Type II or Type IV deicing/anti-icing fluids.

These speed restrictions are not applicable if the horizontal stabilizer was deiced only, using hot water, Type I deicing fluid, or a mixture of hot water and Type I fluid. These speed restrictions are also not applicable if the horizontal stabilizer was deiced using mechanical or infrared means.

The speed restrictions and maintenance requirements remain in effect until the new stiffened elevator tabs are installed.

If a limit cycle oscillation (LCO) is suspected in flight for any reason, immediately reduce airspeed to 270 KIAS, or until the vibration ceases, whichever indicated airspeed is lower. Do not use speedbrakes or change configuration to reduce airspeed. Remain at or below the indicated airspeed at which the vibration ceased for the remainder of the flight, but do not exceed 270 KIAS. Do not use speedbrakes for the remainder of the flight. Evaluate the need to land at the nearest practicable airport. Landing airport selection should be based on all pertinent factors such as weather, distance to destination, range available at the reduced airspeed, maximum landing weight and possible airframe damage. Ground spoilers may be used for landing.

In a situation requiring an Emergency Descent, the pilot in command may deviate from the 270 KIAS airspeed restriction and may use speedbrakes as required. If structural integrity is in doubt, limit speed as much as possible and avoid high maneuvering loads.

In the event a non-normal procedure must be performed that requires a higher airspeed (e.g., PACK/PACK TRIP OFF, etc.) the pilot in command may deviate from the 270 KIAS airspeed restriction as necessary to comply with the non-normal checklist.

Flight Crew Operations Manual Information

The following information will be included in the Limitations chapter of your Volume 1 in the next revision of the Operations Manual. This information will also be added to the Limitations chapter of the Airplane Flight Manual.

After ground deicing/anti-icing of the horizontal stabilizer using Type II or Type IV fluids, airspeed must be limited to 270 KIAS until the flight crew has been informed that applicable maintenance procedures have been accomplished that would allow exceedance of 270 KIAS. Once the applicable maintenance procedures have been accomplished, exceeding 270 KIAS is permissible until the next application of Type II or Type IV deicing/anti-icing fluids.

Administrative Information

This bulletin replaces bulletin BBJ-6, dated May 15, 2002. Discard bulletin BBJ-6. Revise the Bulletin Record page to show BBJ-6 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-6 R1 "IN EFFECT" (IE).

This bulletin will be cancelled after Boeing is notified that all affected airplanes in your fleet have been modified by Service Bulletin 737-55A1080.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-10

Date: September 16, 2002

Document Effectivity: D6-27370-BBJ

Subject: AD-2002-19-51, Flight Control Modules

Reason: This bulletin informs flight crews of the potential for failure of a flight control module. This bulletin also provides operating instructions for flight crews.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Flight control module failures have been reported on 737-600/-700/-700C/-800/-900/BBJ airplanes since June 2002. The majority of the failures have occurred during preflight checks prior to delivery acceptance test flights, but failures have also been reported on four in-service airplanes. Discussions with the supplier indicate the potential for this condition is most likely isolated to Flight Control Module Part Number 65-44891-7, Serial Numbers 8726 through 8936, installed on airplanes delivered after May 21, 2002. The FAA has issued Emergency Telegraphic AD 2002-19-51 to address required operator action.

There are two identical flight control modules on each airplane. Each module controls hydraulic fluid distribution from its respective hydraulic system to the aileron, elevator and rudder. The failure mode is a partial or complete blockage in the return passage of the module resulting in inadequate differential pressure available to flight control power control actuators (ailerons, elevators, rudder). Failure of one flight control module in flight may result in an increase in flight control forces. Failure of a second flight control module could result in serious degradation of airplane controllability, including high control forces.

Because the blockage is in the return passage, the associated Flight Control LOW PRESSURE Light remains extinguished for the affected flight control module. The Hydraulic LOW PRESSURE Light also remains extinguished. The most likely flight deck indication is failure of both Autopilot A and B to engage. Other indications include possible increase in flight control forces (similar to manual reversion) and possible yaw damper disengagement.

Airplanes with two suspect modules are not to be flown until at least one non-suspect module has been installed.

In order to help identify a flight control module failure prior to flight, Boeing has developed Flight Control and Autopilot preflight checks to be performed on airplanes with a suspect flight control module installed. These checks can be performed anytime after the Electric Hydraulic Pump A and B Switches are positioned ON and prior to Engine Start. If MEL dispatch with one or both autopilot channels inoperative is planned, it is acceptable not to perform the Autopilot check on the inoperative channel(s).

If it is determined that a flight control module has failed, subsequent flights must not be made until the failed module has been removed and replaced.

Operating Instructions

Preflight Check:

The following Flight Control and Autopilot checks must be performed prior to each flight on an airplane with a suspect flight control module installed. These checks can be performed anytime after the Electric Hydraulic Pump A and B Switches are positioned ON and prior to Engine Start. Ensure ground personnel are clear of all control surfaces.

Note: These checks are only designed to detect a failed flight control module.

Flight Control Check

1. Ensure FLT CONTROL A & B Switches are ON
2. FLT CONTROL A Switch . . . OFF
 - Verify Flight Control LOW PRESSURE Light illuminates within 2 seconds
3. FLT CONTROL A Switch . . . ON
 - Verify Flight Control LOW PRESSURE Light extinguishes
4. FLT CONTROL B Switch . . . OFF
 - Verify Flight Control LOW PRESSURE Light illuminates within 2 seconds
5. FLT CONTROL B Switch . . . ON

Autopilot Check

If MEL dispatch with one or both autopilot channels inoperative is planned, it is acceptable not to perform the Autopilot check on the inoperative channel(s).

1. Ensure both IRUs are in the NAV Mode
2. A/P ENGAGE Switch CMD A
 - Wait 10 seconds and verify autopilot CMD mode engages
3. Disengage Autopilot A
4. A/P ENGAGE Switch CMD B
 - Wait 10 seconds and verify autopilot CMD mode engages
5. Disengage Autopilot B
6. To fail this test, one autopilot will fail to engage and the other will fail to remain engaged

Note: Failure of the autopilots to engage as described in Step 6 may indicate a failure of a flight control module.

Note: If either Flight Control Module Preflight Check fails, do not takeoff until the failed module has been replaced.

In-flight Failure

Failure of both Autopilot A and B to engage may indicate a failure of the module in flight. Other indications include possible increase in flight control forces (similar to manual reversion) and possible yaw damper disengagement.

Failure of a second flight control module in flight could result in serious degradation of airplane controllability, including high control forces.

If a failure is suspected in flight:

- Plan to land at the nearest suitable airport
 - Crosswind capability may be reduced
- Do not turn off any Flight Control Switches
- Plan a flaps 15 landing
- Use VREF 15 + 5 or VREF ICE + 5
- Place the GROUND PROXIMITY FLAP INHIBIT Switch to FLAP INHIBIT

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-10 "IN EFFECT" (IE)

This bulletin will be cancelled after Boeing has been notified that no suspect flight control modules are installed in any airplanes in your fleet.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-11 R1

Date: November 01, 2004

Document Effectivity: D6-27370-BBJ

Subject: Flight Director and Autopilot Mode Entry Failures

Reason: This bulletin informs flight crews of flight director and autopilot anomalies that may be seen on airplanes equipped with the Collins Enhanced Digital Flight Control System (EDFCS). The purpose of this reissue is to provide Service Bulletin information.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing has received reports of failure of the flight director (F/D) to enter takeoff mode and failure of the autopilot and flight director to enter pitch cruise modes on airplanes equipped with the Collins Enhanced Digital Flight Control System (EDFCS).

In certain scenarios, an error in the Collins FCC software may leave the glide slope engage logic set internally in either FCC without a corresponding G/S flight mode annunciation (FMA) on that side. This will cause the F/D takeoff mode and some autopilot or F/D pitch cruise modes to be inhibited.

This condition may also occur when an autopilot or F/D approach is discontinued using means other than autopilot or F/D go-around.

This anomaly will be corrected in a future FCC software upgrade.

Operating Instructions

Prior to takeoff, turn both flight director (F/D) switches OFF. Cycle F/D A ON then OFF. Cycle F/D B ON then OFF. At the completion of these steps, resume normal AFDS operations. This procedure should be accomplished whether the F/Ds are used for takeoff or not.

If an ILS approach is exited after G/S capture by means other than using the TO/GA switch, turn the autopilot and both F/D switches OFF. Cycle F/D A ON then OFF. Cycle F/D B ON then OFF. At the completion of these steps, resume normal AFDS operations.

Administrative Information

This bulletin replaces bulletin BBJ-11, dated April 29, 2003. Discard bulletin BBJ-11. Revise the Bulletin Record to show BBJ-11 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-11 R1 "IN EFFECT" (IE).

This bulletin will be canceled after Boeing is notified that all affected airplanes in your fleet have been modified by Service Bulletin 737-22A1164. If you do not plan to modify all your airplanes and would like to have the contents of this bulletin incorporated in your FCOM, please advise Boeing accordingly.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-12 R1

Date: November 01, 2004

Document Effectivity: D6-27370-BBJ

Subject: Autopilot Altitude Acquire/Altitude Capture Anomaly

Reason: This bulletin informs flight crews of an anomaly reported in the Collins Enhanced Digital Flight Control System (EDFCS). The purpose of this reissue is to provide Service Bulletin information.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing has received a report of excessive pitch up and speed loss on an airplane equipped with the Collins Enhanced Digital Flight Control System (EDFCS) after selection of a new MCP altitude during an autopilot Altitude Acquire (ALT ACQ) maneuver.

Normally, if a new altitude is selected while in ALT ACQ, the Flight Control Computer (FCC) will automatically transition to vertical speed (V/S), synchronizing to the existing airplane vertical speed. If the selection is made after transition to Altitude Hold (ALT HLD), the FCC will remain in ALT HLD at the previously selected altitude.

It has been determined that if a new altitude selection is made when the FCC is in the final transition between ALT ACQ and ALT HLD (within a 200 msec window), an altitude somewhere between the previously selected MCP altitude and the new MCP altitude will be stored as the reference ALT HLD altitude. The FCC will command a pitch maneuver in the direction of this new altitude. This new pitch command may be excessive and if the autopilot is engaged, may require flight crew intervention to return the airplane to a normal flight path.

This anomaly will be corrected in a future FCC software upgrade.

Operating Instructions

If the MCP altitude is adjusted during ALT ACQ or when ALT HLD is first displayed, monitor autopilot and flight director commands. The autopilot or flight director should transition to V/S or continue to level in ALT HLD at the previously selected altitude. If autopilot or flight director pitch commands are excessive, ensure proper flight path control and select a new pitch mode if required.

Administrative Information

This bulletin replaces bulletin BBJ-12, dated June 09, 2003. Discard bulletin BBJ-12. Revise the Bulletin Record to show BBJ-12 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-12 R1 "IN EFFECT" (IE).

This bulletin will be canceled after Boeing is notified that all affected airplanes in your fleet have been modified by Service Bulletin 737-22A1164. If you do not plan to modify all your airplanes and would like to have the contents of this bulletin incorporated in your FCOM, please advise Boeing accordingly.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-14 R1

Date: November 01, 2004

Document Effectivity: D6-27370-BBJ

Subject: Target Speed Anomaly with Flaps Extended and VNAV Engaged

Reason: This bulletin informs flight crews of target speed anomalies on airplanes equipped with the Collins Enhanced Digital Flight Control System (EDFCS) when flaps are extended and operating in VNAV. The purpose of this reissue is to provide Service Bulletin information.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing has received reports of target speed anomalies with flaps extended when operating in VNAV during approach. The anomaly may occur at any flap setting from Flaps 2 to Flaps 40, but the discrepancy is most likely to occur at Flaps 15 due to system tolerances.

The Flight Management Computer (FMC) uses flap position data as output by the Flight Control Computer (FCC). Due to an implementation error in the Collins Enhanced Digital Flight Controls System (EDFCS), the FCC sends uncorrected flap position data rather than adjusted data. The FMC switches to the next higher flap setting when it receives a signal that the flap position has increased more than 0.5 degrees above the selected flap detent. With the flap handle at Flaps 15, the uncorrected flap position data may be as high as 19.5 degrees depending on airplane installation and tolerances. Similar differences between uncorrected and adjusted data exist for other flap settings, but the system tolerances are much smaller. As a result, the anomaly is less likely to occur at flap settings other than Flaps 15.

When Flaps 15 is selected, the target speed initially indicates the correct airspeed for the flap setting as the flaps transition from 10.5 to 15 degrees. If the tolerances at this flap setting result in an uncorrected output greater than 15.5 degrees, the target speed (magenta bug) may reduce to a speed consistent with Flaps 25 and the autothrottles will adjust to capture this lower speed. This results in the aircraft slowing to near minimum maneuver speed for Flaps 15.

When flying a VNAV approach on airplanes equipped with speed intervention (SPD INTV), the flight crew should select SPD INTV prior to the initial flap selection and manually set the correct flap speed on the MCP. The autothrottles will adjust to capture the MCP speed. SPD INTV should be used for the duration of the approach.

On airplanes without speed intervention, VNAV must be disengaged and the approach flown in another mode if the anomaly is observed. When landing flaps are selected, VNAV may be re-engaged.

On airplanes equipped with the Head-Up Display (HUD), the AOA approach band may not be correctly displayed with Flaps 15 selected. When Flaps 30 or 40 have been selected, the AOA approach band will be correctly displayed on the HUD.

This anomaly will be corrected in a future FCC software upgrade targeted for early 2004.

Operating Instructions

When flying VNAV approaches on airplanes equipped with speed intervention (SPD INTV), select SPD INTV prior to the initial flap selection and manually select the correct speed on the MCP. Remain in SPD INTV for the duration of the approach.

On airplanes without speed intervention, disengage VNAV and fly the approach in another mode if the anomaly is observed. When landing flaps are selected, VNAV may be re-engaged.

On airplanes equipped with HUD, if the AOA approach band is not correctly displayed at Flaps 15, do not use this information.

Administrative Information

This bulletin replaces bulletin BBJ-14, dated September 30, 2003. Discard bulletin BBJ-14. Revise the Bulletin Record to show BBJ-14 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-14 R1 "IN EFFECT" (IE)

This bulletin will be canceled after Boeing is notified that all affected airplanes in your fleet have been modified by Service Bulletin 737-22A1164. If you do not plan to modify all your airplanes and would like to have the contents of this bulletin incorporated in your FCOM, please advise Boeing accordingly.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-17 R1

Date: November 15, 2005

Document Effectivity: D6-27370-BBJ

Subject: Flight Director Anomaly

Reason: This bulletin informs flight crews of a Flight Director anomaly during Flight Director Takeoffs on airplanes equipped with the Collins Enhanced Digital Flight Control System (EDFCS). The purpose of this reissue is to provide service letter information.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing has discovered a flight director anomaly on airplanes equipped with the Collins Enhanced Digital Flight Control System (EDFCS). The anomaly may occur if the TO/GA switch is pressed a second time after liftoff while the flight director is already in takeoff mode. This anomaly only occurs during a flight director takeoff. Go-around mode is not affected, nor is operation with the autopilot engaged.

If LNAV has been selected prior to takeoff and a TO/GA switch has been pushed, pushing a TO/GA switch a second time after liftoff results in loss of flight director roll guidance and roll mode annunciation. Flight director roll guidance will be removed from view on those airplanes equipped with the split axis flight director and both pitch and roll flight director guidance will be removed from view on those airplanes equipped with the integrated cue flight director. This anomaly will occur anytime the airplane is in takeoff mode, regardless of altitude. LNAV or another roll mode can be re-selected anytime above 400 feet AGL and the correct flight director information will be displayed.

In addition, on those airplanes with the Heading Select-on-Takeoff option, pushing a TO/GA switch a second time while in Takeoff Heading Select mode above 400 feet AGL, will also result in loss of flight director roll guidance and roll mode annunciation. The flight director bar(s) will be removed from view. The correct flight director information will be displayed after re-selecting a roll mode.

This anomaly is present on all airplanes equipped with the Collins EDFCS, regardless of software load (i.e., P1.1 or P2.0). It will be corrected in a future FCC software upgrade targeted for first quarter 2005.

Operating Instructions

If roll mode annunciation and flight director guidance (roll, or pitch and roll) is lost following a second push of a TO/GA switch, reselect the appropriate roll mode when above 400 feet AGL.

Administrative Information

This bulletin replaces bulletin BBJ-17, dated January 12, 2004. Discard bulletin BBJ-17. Revise the Bulletin Record to show BBJ-17 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-17 R1 "IN EFFECT" (IE).

This bulletin will be canceled after Boeing is notified that all affected airplanes in your fleet have been modified by Service Letter 737-SL-22-056-B. If you do not plan to modify all your airplanes and would like to have the contents of this bulletin incorporated in your FCOM, please advise Boeing accordingly.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-19 R1

Date: March 04, 2005

Document Effectivity: D6-27370-BBJ

Subject: Nuisance Stall Warning Stick Shaker Events

Reason: This bulletin provides information about nuisance stall warning stick shaker events experienced on 737-600/700/800/900 airplanes. The purpose of this reissue is to revise the crew action when maneuvering during flap retraction from Flaps 1 to Flaps Up with anti-ice selected ON.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

A nuisance stall warning stick shaker event is one in which the stick shaker activates although the airplane is not near a stall condition. In-service incidents have revealed corners of the operating envelope where turbulence or additional maneuver loads can result in momentary nuisance stick shaker events. Boeing has determined the following flight conditions can lead to nuisance stick shaker events:

1. Encountering moderate to severe turbulence when operating at or near the Maximum Operating Altitude.
2. Maneuvering during flap retraction from Flaps 1 to Flaps Up after takeoff or during a missed approach when Engine Anti-Ice is ON or when Wing Anti-Ice has been selected ON after liftoff.
3. Maneuvering at V2 speed following an engine failure on takeoff when Wing Anti-Ice has been selected ON after liftoff.

Boeing is investigating design changes to the Stall Management/Yaw Damper (SMYD) computer logic to minimize the frequency of these events.

Operating Instructions

Scenario 1: Moderate to severe turbulence is encountered when operating at or near the Maximum Operating Altitude.

Crew Action:

No change in operations is required. Flight crews should be aware stall warning stick shaker events have occurred in moderate turbulence, particularly when flying near the lower amber band when at or near maximum operating altitudes.

Scenario 2: After takeoff or missed approach, the airplane is maneuvered during flap retraction from Flaps 1 to Flaps Up with Engine Anti-Ice ON or Wing Anti-Ice selected ON after liftoff.

Crew Action:

During flap retraction from Flaps 1 to Flaps Up, limit bank angle to 15 degrees and avoid higher maneuver loading of the aircraft until the Leading Edge Flaps Transit light has extinguished. If a higher bank angle is required during this time, avoid the selection of Flaps 1 to Flaps Up until maneuvering is complete or bank angles are 15 degrees or less.

NOTE: A non-maneuvering segment of approximately 1 nm during all-engine operations or approximately 2.5 nm for an engine-out operation will allow for flaps to be retracted from Flaps 1 to Flaps Up.

Scenario 3: The airplane is maneuvered at V2 speed following an engine failure on takeoff when Wing Anti Ice has been selected ON after liftoff.

Crew Action:

Do not turn Wing Anti-Ice ON until airspeed has increased to at least V2+15 knots.

Administrative Information

This bulletin replaces bulletin BBJ-19, dated November 16, 2004. Discard bulletin BBJ-19. Revise the Bulletin Record to show BBJ-19 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-19 R1 "IN EFFECT" (IE).

This FCOM bulletin will be revised to include Service Bulletin information when available.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighthtraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-22 R1

Date: April 11, 2006

Document Effectivity: D6-27370-BBJ

Subject: FMC Update 549849-015 U10.6 Prediction Errors

Reason: This bulletin informs flight crews of a potential for erroneous ETA, RTA, fuel remaining and Mach number predictions. The purpose of this re-issue is to provide Service Bulletin information.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Smiths Aerospace has discovered an error in the Update 549849-015 U10.6 FMC software. The software incorrectly processes wind data for certain downstream route legs which can result in erroneous values for ETA and fuel remaining for downstream waypoints. This anomaly also affects the ability of the FMC to control to a Required Time of Arrival (RTA) at a downstream waypoint. The error is a function of the entered/sensed wind, leg length, and course change between the incoming leg and outgoing leg for a downstream waypoint.

The 549849-015 U10.6 FMC predictions will be incorrect for leg segments that follow intermediate waypoints with a less than a two degree course change between the incoming and outgoing leg, for non-flyover points. The error will occur for leg segments with less than a ten degree course change for flyover points. This results in the FMC incorrectly applying winds for the particular leg. Depending on the magnitude and direction of the wind and the length and direction of the leg, the error in the ETA can range from nothing at all to more than 40 minutes. Fuel predictions and Mach targets will also be proportionally affected. This anomaly does not occur when there is a greater than two degree course change (ten-degree change for flyover waypoints) between the incoming and outgoing legs.

Flight crews should not use FMC downstream predictions for ETA, RTA, fuel remaining or Mach number target when operating with 549849-015 U10.6 FMC software. All predictions should be verified by conventional methods.

Boeing plans to revise, certify and deliver new 549849-016 U10.6 FMC software. Until that time, Boeing recommends all operators re-install U10.5A FMC software on those airplanes that delivered with 549849-015 U10.6.

Operating Instructions

When operating with 549849-015 U10.6 FMC software, do not use FMC predictions for ETA, RTA, fuel remaining or target Mach number. Verify all predictions by conventional methods.

Administrative Information

This bulletin replaces bulletin BBJ-22, dated May 02, 2005. Discard bulletin BBJ-22. Revise the Bulletin Record to show BBJ-22 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-22 R1 "IN EFFECT" (IE).

This bulletin will be cancelled after Boeing is notified that all affected airplanes in your fleet have been modified by Boeing Service Bulletin 737-34-1768 which installs FMC software U10.6 part number 549849-016. If you do not plan to modify all your airplanes and would like to have the contents of this bulletin incorporated in your Operations Manual, please advise Boeing accordingly.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-24

Date: April 01, 2006

Document Effectivity: D6-27370-BBJ

Subject: Flight Deck Display Unit Blanking Anomaly

Reason: This bulletin informs flight crews of the potential for multiple flight deck display units blanking on PFD/ND airplanes with Navigation Performance Scales (NPS) enabled.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

An operator has reported events of both Inboard Display Units (DU's) and parts of the Center Upper and Center Lower DU's blanking during flight. During the DU blanking events multiple other indications/faults occurred, including MACH TRIM FAIL, SPEED TRIM FAIL, SPD LIM, EEC ALTN and the inability to engage the second autopilot during approach. DU blanking events have lasted from several minutes to a few hours in duration, with the DU's recovering automatically. When the DU's recovered, all other related indications/faults also cleared.

These events occur when the Right Outboard DU overheats. The overheat condition causes an invalid calculation in the Common Display System (CDS) software.

The root cause of the Right Outboard DU overheat is accumulation of dust in the DU vent holes, preventing effective draw-through cooling. Previous to the subject events, Boeing released Maintenance Tip 737 MT 31-005 that recommends operators check and clean the DU vents.

This anomaly is present on all PFD/ND airplanes with NPS enabled. A solution for this anomaly is planned to be incorporated in CDS Block Point 2006.

Operating Instructions

If multiple flight deck DU's blank, together with the associated indications/faults listed above, the Captain's EFIS Control Panel should be selected to VOR or APP mode. Since NPS is not active in the VOR or APP mode, this action will restore the DU's and clear the associated indications/faults.

If the Right Outboard DU cools sufficiently for the DU's to recover automatically, normal Navigation Display mode selection may be resumed.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-24 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until CDS Block Point 2006 is delivered and Boeing is notified that all affected airplanes in your fleet have it installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-26

Date: August 04, 2006

Document Effectivity: D6-27370-BBJ

Subject: Head-Up Display (HUD) Software Anomaly

Reason: This bulletin informs flight crews of a discrepancy between the airspeed indications on the HUD and on the EFIS or PFD for 737-800/900 airplanes.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

In Common Display System (CDS) Block Points 2004 and on, the VREF+15 (white) bug on the EFIS Mach/Airspeed Indicator and on the PFD speed tape is changed to a VREF+20 (white) bug for 737-800/900 airplanes. This change provides the appropriate tail clearance margin during a one engine inoperative flaps 15 landing.

The Head-Up Display (HUD) has a VREF+15 (PRI in flight mode) bug for all 737-600/700/800/900 airplanes.

A fix for 737-800/900 airplanes is being considered for a future update of the HUD software.

Operating Instructions

On 737-800/900 airplanes with CDS Block Points 2004 and later, do not use the HUD indication of VREF+15 for a one engine inoperative flaps 15 landing. Use the EFIS Mach/Airspeed Indicator or PFD speed tape indication of VREF+20.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-26 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until the new HUD software has been delivered and Boeing is notified that all affected airplanes in your fleet have it installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707 M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-27

Date: November 03, 2006

Document Effectivity: D6-27370-BBJ

Subject: FMC Update U10.6 Erroneous Holding Pattern

Reason: This bulletin informs flight crews of the potential for an erroneous holding pattern.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Several operators have reported events of unusually large holding patterns being shown on the FMC MAP display. In each case, the holding pattern was initially shown correctly but when either the DECEL was sequenced prior to the hold or the airplane was established in the hold, the holding pattern became larger than expected. When LNAV was engaged, the autopilot or flight director commanded very shallow bank angles during the turns. In addition, the scratchpad message "UNABLE HOLD AIRSPACE" was shown prior to entering the holding pattern. In all events, the flight crew had made a manual airspeed, not Mach speed, entry on the RTE HOLD page.

Boeing and Smiths Aerospace have confirmed that the anomaly was introduced in the U10.6 FMC software update and affects U10.6 only. This anomaly occurs when a manual airspeed entry is made on the RTE HOLD page and, in all cases, the anomaly results in display of the FMC alerting message "UNABLE HOLD AIRSPACE".

The unusually large holding pattern can be returned to normal by deleting the airspeed entry from the SPD/TGT ALT line on the RTE HOLD page.

Operating Instructions

Do not enter an airspeed on the RTE HOLD page.

If an airspeed is entered on the RTE HOLD page and an unusually large holding pattern is shown on the FMC MAP display, delete the airspeed entry from the SPD/TGT ALT line on the RTE HOLD page. After the airspeed entry is deleted, the holding pattern will be sized correctly.

If a holding airspeed change is required, use the SPD INTV switch (if installed), or discontinue VNAV flight and use the IAS/MACH selector on the MCP.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-27 "IN EFFECT" (IE).

This anomaly has been corrected in the U10.7 FMC software update. This FCOM bulletin will remain in effect until the new U10.7 FMC software has been delivered and Boeing is informed that all affected airplanes in your fleet have it installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707 M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-28 R1

Date: January 17, 2007

Document Effectivity: D6-27370-BBJ

Subject: FMC Failure

Reason: This bulletin informs flight crews of the potential for failure of the FMC with Update U10.5, U10.5a or U10.6 software installed. The purpose of this revision is to provide new operating instructions.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Operators have reported events in which the FMC has momentarily failed and then returned with an inactive route. When the route was again activated, the FMC failed a second time.

Analysis of the events has revealed an anomaly in the Smiths Aerospace FMC U10.5, U10.5a and U10.6 software which can prevent correct implementation of flight plan legs longer than approximately 1000 NM. When a leg over 1000 NM becomes the active leg for any reason (planned or modified route), an incorrect FMC speed prediction can cause the FMC(s) to fail. FMC function will return but the route will be inactive and a discontinuity will be inserted on the CDU before the previously entered route. If the same route is once again selected, the FMC(s) may fail a second time. FMC function will return a second time; however, all of the route information will be lost. If the leg is entered into the FMC again within two minutes of the original failure, the FMC(s) may fail a third time. A third FMC failure causes a latched failure and the FMC(s) will not be available for the remainder of the flight. This failure can occur with either single or dual FMC installation. With the dual FMC installation, both FMCs will fail.

Further investigation has revealed the potential for this anomaly is extremely rare.

Flight conditions must be such that the predicted speed is limited by current conditions (e.g., thrust limited) to a value less than the target speed. Because the target speed is not reached, the prediction routine exceeds its maximum number of iterations and a FMC restart occurs. If the speeds are not near a limiting boundary, the failure will not occur. It is therefore possible to fly the same flight plan many times with no failure, and then experience a failure on a different flight. If the criteria for the anomaly exist, the failure will occur when the route is modified whether or not the modification is executed.

The anomaly exists in Smiths FMC Update U10.5, U10.5a and U10.6 software. It has been corrected in FMC Update U10.7 software which is scheduled to be available via Service Bulletin in the first quarter of 2007.

Operating Instructions

If a re-route is desired and the route modification results in a leg greater than 1000 NM:

1. Prior to entry into the CDU, modify the route to ensure no leg exceeds 1000 NM. Confirm and execute the desired route.
2. If the FMC(s) fails after the route is modified and then returns with an inactive route, do not recreate the route that caused the failure. Advise ATC that you are unable to accept the re-routing and request clearance to an intermediate waypoint that results in a leg length less than 1000 NM.
3. In the event of a latched failure, accomplish the FMC FAIL Non-Normal Checklist.

Administrative Information

This bulletin replaces bulletin BBJ-28, dated December 04, 2006. Discard bulletin BBJ-28. Revise the Bulletin Record to show BBJ-28 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your Flight Crew Operations Manual (FCOM). Amend the FCOM Bulletin Record Page to show Bulletin BBJ-28 R1 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until FMC Update U10.7 software has been delivered and Boeing is informed that it has been installed on all affected airplanes.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707 M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

This
Page
Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-29

Date: February 12, 2007

Document Effectivity: D6-27370-BBJ

Subject: Incorrect Implementation of TO/GA to LNAV Feature with CDS Blockpoint 06 (BP06) and FMC Update U10.5 or U10.5A Installed.

Reason: This bulletin informs flight crews of incorrect implementation of the optional TO/GA to LNAV feature when CDS BP06 is installed in conjunction with FMC Update U10.5 or U10.5A.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

During production flight test of an airplane with FMC Update U10.5A and CDS Blockpoint 06 (BP06) installed, flight crews noticed the optional TO/GA to LNAV mode (Go-Around Roll Mode – LNAV) was unexpectedly armed after flaps were extended. Further investigation revealed CDS BP06 software can inadvertently enable the TO/GA to LNAV mode when installed in conjunction with FMC Update U10.5 or U10.5A software. If CDS BP06 is installed with FMC Update U10.6, the TO/GA to LNAV mode is correctly implemented and is only available if the option has been purchased by an operator. If CDS BP06 is installed with FMC Update U10.5 or U10.5A, however, the TO/GA to LNAV mode is armed whenever the leading edge devices are extended to the commanded position, an FMC approach has been selected and the logic for LNAV arm is satisfied.

Boeing did not intend the TOGA to LNAV feature to be enabled with FMC Update U10.5 or U10.5A, and this software combination has never been certified by the FAA. Because the function may be confusing to the flight crew when it is inadvertently enabled, Boeing recommends operators ensure CDS BP06 is not installed with FMC Update U10.5 or U10.5A. Operators should install FMC

Update U10.6 with CDS BP06 or install an earlier CDS BP with FMC Update U10.5A and earlier. Operators should be aware, however, that FMC Update U10.6 is required for correct implementation of all short field performance features.

Operating Instructions

If CDS BP06 is installed with FMC Update U10.5 or U10.5A:

1. On the ground, if LNAV arm is displayed in white on the FMA without selection of LNAV prior to TOGA, there is no operational effect. The indication is a nuisance display only and will extinguish when TO/GA is pressed. No crew action is required.
2. On the ground, if LNAV is selected prior to TO/GA, all FMA indications and LNAV operation are correct. No additional crew action is required.

3. During approach:

Collins FCCs installed

If LNAV arm is displayed in white on the FMA, the go-around roll mode will automatically transition from track hold to LNAV above 50 feet RA during a flight director missed approach. During an autopilot go-around, LNAV will engage when the airplane is above 400 feet AGL. Below these transition altitudes, the roll mode will be TO/GA (flight director or autopilot commands track hold).

Honeywell -709 FCCs installed

If LNAV arm is displayed in white on the FMA, the go-around roll mode will automatically transition from track hold to LNAV above 400 feet RA during a flight director or autopilot go-around. Below this transition altitude, the roll mode will be TO/GA (flight director or autopilot commands track hold).

With either FCC software installed, the flight crew must be aware the flight director will provide roll guidance to the LNAV path. If an alternate missed approach has been assigned, the PF must maintain the correct course manually. A different roll mode can be selected above 400 feet AGL.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-29 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have the correct FMC and CDS BP software combinations installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighthtraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-30

Date: March 16, 2007

Document Effectivity: D6-27370-BBJ

Subject: Instrument Procedure, Transition Altitude and FMC Loss of Flight Information (FMC Update U10.6)

Reason: This bulletin informs flight crews of the potential for FMC software restarts on airplanes with FMC Update U10.6 installed.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Operators of B737 airplanes with FMC Update U10.6 installed have reported events in which instrument departure procedures (SIDs or DPs) have triggered FMC software restarts when using altimeter settings above standard. This FMC restart anomaly has, in rare instances, occurred both on the ground and inflight at a very limited number of airports which have instrument procedures in which an FMC path prediction step terminates at an altitude that is within a specified altitude block below the transition altitude.

Further investigation has determined the anomaly is related to FMC vertical predictions being affected by a combination of barometric setting, transition altitude and other altitudes used by the FMC prediction routine. The anomaly does not exist at altitudes above the transition altitude or during cruise and descent.

FMC predictions are done in steps that are calculated based on altitude, speed, or distance. Each step predicts flight parameters up to a waypoint, a deceleration, a restriction altitude, or something similar. Some of these terminations are visible points in a flight plan and some are not. Some represent entered data; some do not. Each new step starts where the previous one ended.

If the local barometric setting is greater than 29.92 inches Hg (1013 mB) and any prediction step terminates at an altitude that is within a specified altitude block below the transition altitude, the anomaly may occur. The FMC will be unable to complete its prediction and will force a restart. During the restart, all FMC functionality, including vertical and lateral guidance, will be lost. If the flight crew continuously attempts to re-enter FMC data while below transition altitude, a total FMS failure may occur and the FMC will not be available for the remainder of the flight. Once the airplane has climbed above the transition altitude, "FMC" can be selected on the MENU page, FMC data can be re-entered and executed, and the FMC will operate normally.

This anomaly is corrected in FMC Update U10.7 and does not exist in Update U10.5/U10.5A. The software retrofit, Boeing Service Bulletin 737-34-1918, is scheduled for release in early second quarter 2007.

Operating Instructions

The anomaly will not occur if the local barometric setting is equal to or less than 29.92 inches Hg (1013 mB). No crew action is required.

If the local barometric setting is greater than 29.92 inches Hg (1013 mB), Boeing recommends operators consider one or more of the following:

1. If an instrument departure procedure (SID or DP) has been identified as one in which this type of FMC restart has occurred or is believed to have occurred, do not use the instrument procedure. Use an alternate SID or DP, or plan to use non-FMS dependent navigation methods until climbing above the transition level. If the procedure can be flown using ground based navigation aids by conventional means, do so. Do not enter the departure into the FMC. Fly the procedure using conventional navigation methods.
2. If an affected departure procedure must be flown and the method described above is not possible, a workaround may be used. If the local barometric setting is greater than 29.92 inches Hg (1013 mB), overwrite the transition altitude (TRANS ALT) on the PERF INIT page with an altitude 1000 feet above the cruise altitude. If the cruise altitude is subsequently raised, the transition altitude in the FMC must also be raised. Flight crews must be aware that all altitudes on the FMC LEGS pages will now be displayed in thousands of feet rather than Flight Levels.

The standard barometric setting must be selected on the altimeters as usual when passing through the actual transition altitude. On those airplanes with the PFD/ND display, the barometric indication will not turn boxed amber to indicate the local barometric setting is still set and the airplane is climbing above the actual transition altitude.

The correct transition altitude can be entered on the PERF INIT page at any time after climbing through the actual transition altitude. The correct value for the descent transition level can be entered on the DES FORECASTS page at any time, including during preflight.

3. If a departure procedure not previously identified as susceptible to FMC restarts is flown and an FMC restart occurs during the climb, do not attempt to re-enter FMC data until the airplane has climbed above the transition altitude. Resume conventional navigation using ground based navigation aids. If a total FMC failure occurs and the FMC is no longer available (e.g., no "FMC" prompt on the MENU page), accomplish the FMC FAIL Non-Normal Checklist.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-30 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have FMC Update U10.7 installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-31

Date: May 01, 2007

Document Effectivity: D6-27370-BBJ

Subject: Center Tank Fuel System Changes

Reason: This bulletin provides information about center tank fuel system changes for 737-600/-700/-700C/-800/-900 airplanes. The purpose of this bulletin is to provide visibility for the fuel usage procedures contained in the Flight Crew Operations Manual (FCOM) Normal Procedures.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing introduced center tank fuel system changes in production, at Production Line Number 1494 and on, with deliveries starting in May 2004. These revisions included a Master Caution system logic change, center tank fuel pump auto shutoff and CONFIG alert logic change. These system updates were made available for post-production retrofit via Boeing Service Bulletin 737-28A1206, dated 11 January 2006.

The Master Caution system logic has been revised so the Master Caution lights and the FUEL system annunciator light illuminate when either center tank fuel pump indicates low pressure, as opposed to the original Master Caution system logic that requires both center tank fuel pumps to indicate low pressure before the Master Caution lights and the FUEL system annunciator light illuminate. As a result of this system logic change, Master Caution light recall will no longer cause the Master Caution and FUEL annunciator lights to illuminate if one center tank fuel pump switch is positioned OFF and the other is positioned ON.

To limit the potential for prolonged dry running of the center tank fuel pumps, a Center Tank Boost Pump Auto Shutoff system has been installed to automatically turn the affected center tank fuel pump off after 15 seconds of continuous low fuel pressure indication. The center tank fuel pump switch will remain in the ON position and LOW PRESSURE will be illuminated until the flight crew positions the fuel pump switch to OFF. The auto shutoff feature will individually control the center tank fuel pumps and can be manually reset by turning the respective center tank fuel pump switch OFF, then ON. If no fuel is available, the pump will again turn off after 15 seconds of continuous low pressure. This system is intended to be a backup to normal flight crew procedures.

The CONFIG alert logic has been changed so that the alert is illuminated when center tank quantity is greater than 1600 pounds/726 kilograms, either engine is running and both center tank fuel pump switches are positioned OFF.

As a result of these changes, new normal procedures were developed for airplanes with the center tank fuel system changes installed. However, operators may continue to use the procedures contained in AD 2002-19-52 and AD 2002-24-51, or the procedures approved in FAA Approval Letter 140S-03-189 as an Alternative Method of Compliance (AMOC), until all center tank fuel pumps have been inspected and all airplanes in their fleet have been modified. All three fuel usage procedures have been incorporated into the Before Takeoff, Climb and Cruise, and Descent Procedures in the Flight Crew Operations Manual (FCOM).

A step was added to the Before Start Procedure for all operators to ensure the integrity of the pressure sensor and indication system of the center tank fuel pumps. Flight crews are directed to turn the left and right center tank fuel pump switches to ON if the center fuel tank contains more than 1000 pounds/453 kilograms. The crew should verify the amber LOW PRESSURE lights illuminate momentarily and then extinguish. If an amber light remains illuminated, the associated center tank fuel pump switch must be turned OFF. These procedures are applicable to all airplanes, regardless of which of the three fuel usage procedures have been adopted.

Flight crews should be aware when flying airplanes equipped with the auto shutoff system that it is possible for the center tank pump inlets to be uncovered long enough to trigger the auto shutoff system while in climb, descent, acceleration, deceleration, or during maneuvers when the center tank fuel quantity is low but the tank not empty. If this occurs, the affected center tank fuel pump(s) should be selected OFF when the center tank fuel pump LOW PRESSURE light illuminates. Per the normal procedures, once the airplane is in level flight, with fuel remaining in the center tank, the center tank fuel pump(s) should be selected ON again. When the center tank fuel pump LOW PRESSURE light(s) once again illuminates, the pump(s) should be selected OFF.

Flight Crew Operations Manual Information

Refer to the FCOM Normal Procedures for fuel usage procedures for Before Start, Before Takeoff, Climb and Cruise, and Descent.

Administrative Information

This bulletin serves to cancel BBJ-9 R3, dated July 7, 2003. Discard bulletin BBJ-9 R3. Revise the Bulletin Record to show BBJ-9 R3 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-31 "IN EFFECT" (IE).

This bulletin will be cancelled in a future revision of the FCOM.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Intentionally
Blank



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-33

Date: June 11, 2007

Document Effectivity: D6-27370-BBJ

Subject: Arming VNAV on the Ground (FMC Update U10.7)

Reason: This bulletin informs flight crews of the inconsistencies associated with arming VNAV on the ground and provides flight crew instructions to not arm VNAV prior to takeoff.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

Boeing has received reports of inconsistencies associated with the arming of VNAV prior to takeoff on 737NG airplanes equipped with FMC Update U10.7. These inconsistencies can occur even on those airplanes with the configuration specified in Service Bulletin 737-34-1918 installed, i.e., FMC Update U10.7, CDS Blockpoint 06 and Collins Autopilot P4.0.

Additionally, VNAV may incorrectly engage rather than arm if an FCC version earlier than Collins FCC P4.0 or Honeywell -710 is installed. For FCC P4.0 or Honeywell -710 or later installations, VNAV may engage rather than arm under certain conditions when the departure is not aligned within 5 degrees of the runway. With VNAV engaged on the ground, when TOGA is pressed VNAV will disengage and the MCP IAS/MACH display will open and display 120 knots (Collins FCC) or 100 knots (Honeywell FCC).

This anomaly exists only with FMC Update U10.7. It will be corrected in a future software upgrade of the FMC and/or FCC.

Operating Instructions

1. Do not attempt to arm VNAV on the ground prior to takeoff.
2. In the event the VNAV button is pressed inadvertently on the ground, turn both flight director (F/D) switches OFF. Turn the F/D switch ON for the pilot flying first and then turn the F/D switch ON for the pilot monitoring. Verify the correct V2 speed is entered in the MCP IAS/MACH display.
3. Once airborne, VNAV can be selected after flaps and slats retraction is complete.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-33 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have the correct FMC and FCC software upgrade installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-34

Date: June 19, 2007

Document Effectivity: D6-27370-BBJ

Subject: Unintentional Initiation of the FMC Engine Out Mode (FMC Update U10.7)

Reason: This bulletin informs flight crews of the potential for the FMC to unintentionally enter the ENG OUT mode on airplanes with FMC Update U10.7 installed.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

During production flight test of an airplane with FMC Update U10.7 installed, the flight crew inadvertently set a condition in which the FMC transitioned into the “ENG OUT” mode while on the ground. The event occurred when one thrust lever was advanced to stow the speedbrakes, to verify the autostow function, while the ground speed was greater than 30 knots.

The difference in thrust lever position is sensed by the FMC and when the difference exceeds 52 degrees, the FMC will transition into the ENG OUT mode if ground speed is greater than 30 knots. Subsequently, the ALL ENG prompt will be displayed in LSK 4L on the CLB page.

Further investigation has determined that the FMC will not transition back into the ALL ENG mode until one of the following occurs:

1. The flight crew selects the ALL ENG prompt in LSK 4L on the CLB page and the page is executed,
2. The airplane becomes airborne and the FMC transitions into CRZ mode, or
3. The FMC is powered down completely and re-powered on the ground.

As a result, if the ENG OUT mode is set during taxi and the crew neglects to select and execute ALL ENG on the CLB page or remove power from the FMC, VNAV will remain in the ENG OUT mode during climb and provide climb target speeds that are lower than normally expected in the ALL ENG mode.

This anomaly exists only in FMC Update U10.7. A correction to the software is planned for U10.8.

Operating Instructions

To prevent inadvertent transition into the "ENG OUT" mode while on the ground:

1. Do not stow the speedbrake lever following a normal landing or a rejected takeoff by advancing one thrust lever. Manually stow the speedbrake lever.
2. Avoid taxi speeds above 30 knots when accomplishing a single engine taxi.
3. Do not split the thrust levers when operating at taxi speeds at or above 30 knots.

If an inadvertent transition into the "ENG OUT" mode has occurred:

1. On the ground or inflight, select the ALL ENG prompt in LSK 4L on the CLB page and execute, or
2. On the ground, remove all power from the FMC prior to the next takeoff.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-34 "IN EFFECT" (IE).

This bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have FMC Update U10.8 installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-36

Date: January 28, 2008

Document Effectivity: D6-27370-BBJ

Subject: FMC Lockup with Selection of a Standard Instrument Departure (SID) on Missed Approach (FMC Update U10.0 and later)

Reason: This bulletin informs flight crews of the potential for the FMC to lockup following selection of a SID during a missed approach procedure.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

During simulator testing, a Boeing flight crew experienced an FMC lockup and subsequent reset following selection of an engine out (EO) standard instrument departure (SID) procedure while flying an LNAV missed approach. The FMC reset shortly after the lockup and all entered data was retained. The crew was able to select the desired active waypoint and re-capture the LNAV route by using the INTC ARC function.

Further discussions with GE Aerospace have determined the problem can occur when the leg after the active waypoint in the flight plan for the missed approach is an arc leg, and a SID (normal or EO) is selected to create a modified flight plan.

This anomaly exists in FMC Update U10.0 and later. The anomaly will be corrected in FMC Update U10.8.

Boeing recommends operators evaluate this information to determine if it is applicable to their flight operations. A decision can then be made as to whether it is necessary to release this bulletin to Flight Crew.

Operating Instructions

Do not select a SID (normal SID or EO SID) while flying an LNAV missed approach procedure.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-36 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have FMC Update U10.8 installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flightraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-37 R1

Date: June 08, 2009

Document Effectivity: D6-27370-BBJ

Subject: Cabin Altitude Warning Indications and Procedures Briefing

Reason: This revision is to inform flight crews that the FAA has agreed to an Alternative Method of Compliance (AMOC) to the takeoff briefing mandated by AD 2008-23-07. The requirement to don oxygen masks only applies when the intermittent warning horn sounds and the airplane flight altitude is above 10,000 feet MSL.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

The B737 cabin altitude warning system consists of an intermittent warning horn that sounds when cabin altitude exceeds 10,000 feet. Both the cabin altitude warning and takeoff configuration warning use the same intermittent horn.

Following a fatal accident in August 2005, the FAA initiated planned Airworthiness Directive (AD) action to provide additional cabin altitude warning information for B737 flight crews.

To support this planned AD, Boeing has designed a change to the warning system to provide separate "CABIN ALTITUDE" and "TAKEOFF CONFIG" warning lights to accompany the existing dual-purpose intermittent warning horn. This design change is now available on production airplanes. Service bulletin information to support the planned AD will become available in mid-2009.

To help mitigate any possible confusion associated with the B737 cabin altitude warning system, the FAA issued AD 2006-13-13 which required changes to the

AFM procedures in Section 2 for responding to the intermittent cabin altitude/configuration warning horn. These AFM changes and associated Flight Crew Operations Manual (FCOM) Quick Reference Handbook (QRH) non-normal checklist changes were intended to make it easier for flight crews to determine whether the intermittent horn was sounding for cabin altitude or for takeoff configuration.

The FAA believed, however, that additional interim action was necessary until such time as the new warning lights could be fully implemented in the B737 fleet.

In mid-2008, the FAA determined that the most practical interim solution was to issue AD 2008-23-07. This AD requires flight crews to brief cabin altitude warning indications and procedures as part of the takeoff briefing before engine start on the first flight of the day or following a flight crew member change. This briefing is required in any B737 in which the CABIN ALTITUDE and TAKEOFF CONFIG lights are not installed, or are installed but not activated.

Following further discussions, the FAA has agreed that a need exists for crews to recognize the difference between an intermittent warning horn sounding in flight below 10,000 feet MSL, as opposed to sounding at or above 10,000 feet MSL. In flight below 10,000 feet MSL, the intermittent warning horn is associated with an inflight failure of the Air-Ground Sensor switch. At or above 10,000 feet MSL, sounding of the intermittent warning horn requires the crew to immediately don oxygen masks and set regulators to 100%.

The FAA has therefore approved an Alternative Method of Compliance (AMOC) to the Non-Normal Procedures mandated by AD 2006-13-13 and to the Takeoff Briefing mandated by AD 2008-23-07. The AMOC was approved by FAA Approval Letter 130S-09-134a dated April 28, 2009.

AD 2006-13-13

The current WARNING HORN – CABIN ALTITUDE OR CONFIGURATION Non-Normal Procedure in the AFM will be revised as follows:

1. The title will be changed to WARNING HORN OR WARNING LIGHT – CABIN ALTITUDE OR TAKEOFF CONFIGURATION.
2. The condition statement and the procedure will include reference to the CABIN ALTITUDE and TAKEOFF CONFIG lights.
3. The requirement to don oxygen masks, establish crew communications and do the CABIN ALTITUDE or Rapid Depressurization checklist will only apply if the intermittent warning horn sounds or a CABIN ALTITUDE light illuminates in flight at an airplane flight altitude above 10,000 feet MSL.
4. Reference to the steady horn in the condition statement will be deleted. The corresponding step in the procedure will be deleted.

A new AFM Non-Normal Procedure, LANDING CONFIGURATION, will be created to direct crews to assure correct landing configuration if the steady horn sounds in flight.

The current WARNING HORN – CABIN ALTITUDE OR CONFIGURATION QRH non-normal checklist will be revised in a future revision of the FCOM QRH to include the changes defined in the AMOC. In addition, a new checklist, titled LANDING CONFIGURATION will be added. The QRH checklists may not be an exact replica of the AFM procedures, but will be written for consistency with the Boeing format.

AD 2008-23-07

The Cabin Altitude Warning Takeoff Briefing in Section 3 of the AFM will be revised to clarify that immediate donning of oxygen masks and accomplishment of the subsequent memory item steps from the WARNING HORN OR WARNING LIGHT – CABIN ALTITUDE OR TAKEOFF CONFIGURATION non-normal checklist are only required if the intermittent warning horn sounds in flight at an aircraft flight altitude above 10,000 feet MSL.

The Takeoff briefing in the Before Start Procedure in the Normal Procedures section of the FCOM will be updated in a future revision to reflect this change.

Operating Instructions

To further reduce the risk of flight crew incapacitation due to hypoxia following loss of cabin pressurization, cabin altitude warning indications and memory item procedures must be briefed on airplanes in which the CABIN ALTITUDE and TAKEOFF CONFIG lights are not installed, or are installed but not activated. This briefing will be included as an additional item on the Takeoff briefing before engine start for the first flight of the day or following any change of either flight crew member.

The briefing must include the following:

- Whenever the intermittent warning horn sounds in flight at an airplane flight altitude above 10,000 feet MSL:
 1. Immediately, don oxygen masks and set regulators to 100%.
 2. Establish crew communications.
 3. Do the CABIN ALTITUDE WARNING or Rapid Depressurization non-normal checklist.
- Both pilots must verify on the overhead Cabin Altitude Panel that the cabin altitude is stabilized at or below 10,000 feet before removing oxygen masks.

Operators may want to seek an Alternative Method of Compliance (AMOC) to develop a new crew briefing or to utilize current approved briefings to meet the compliance of this AD.

Administrative Information

This bulletin replaces bulletin BBJ-37, dated November 25, 2008. Discard bulletin BBJ-37. Revise the Bulletin Record to show BBJ-37 as "CANCELLED" (CANC).

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-37 R1 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have the CABIN ALTITUDE and TAKEOFF CONFIG lights installed and activated.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-38

Date: April 27, 2009

Document Effectivity: D6-27370-BBJ

Subject: Instrument Approach Procedures with an FMC Missed Approach Altitude Constraint Above 10,000 feet MSL

Reason: This bulletin informs flight crews of an anomaly associated with approaches having a missed approach with an altitude constraint above 10,000 feet MSL in the FMC.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

During simulator testing, an anomaly was identified when attempting to fly an instrument approach using VNAV for an RNAV (RNP) procedure having a missed approach point with an altitude constraint above 10,000 feet MSL.

The FMC builds the descent path upward and back in the direction of the Final Approach Fix (FAF) by starting at the location of the missed approach waypoint (MAP) and its associated altitude constraint. The FMC calculates this path using the coded Glide Path (GP) angle, also called the vertical angle. The MAP is normally shown on the LEGS page as an RWxx or MXxx waypoint. When the MAP is the runway threshold, the altitude constraint is typically the threshold elevation plus threshold crossing height.

For a missed approach point with an altitude constraint above 10,000 feet MSL, the FMC does not consider the altitude constraint to be valid. The FMC uses the airport elevation rather than the MAP altitude as the starting altitude for path construction. The difference between the missed approach point altitude constraint and the airport elevation results in an incorrect VNAV path.

This anomaly exists in FMC Updates U7.1 and later. The anomaly will be corrected in FMC Update U11, currently scheduled for release in the 4th quarter of 2010.

Boeing recommends operators evaluate this information to determine if it is applicable to their flight operations by reviewing their approach procedures to airports with an elevation above 9000 feet. A decision can then be made as to whether it is necessary to release this bulletin to Flight Crew.

Operating Instructions

1. On an approach procedure that has a missed approach point with an altitude constraint above 10,000 feet MSL, do not use VNAV after the Final Approach Fix (FAF). LNAV or other appropriate roll modes may be used through the approach procedure.
2. Do not use the VNAV path deviation indication on the MAP display or the Vertical Deviation (VERT DEV) information on the FMC Descent page for descent rate guidance after passing the FAF.
3. Ensure compliance with each minimum altitude constraint on the final approach segment (step-down fixes).

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-38 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have FMC Update U11 installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



Flight Crew Operations Manual Bulletin for Boeing Business Jet

The Boeing Company
Seattle, Washington 98124-2207



BBJ

Number: BBJ-40

Date: June 26, 2009

Document Effectivity: D6-27370-BBJ

Subject: VNAV Not to Be Used for Approach Operations with FMC Update U10.8 Installed

Reason: This bulletin informs flight crews that VNAV approaches are no longer authorized with FMC Update U10.8 software installed.

Information in this Flight Crew Operations Manual (FCOM) bulletin is recommended by The Boeing Company, but may not be FAA approved at the time of writing. In the event of conflict with the FAA approved Airplane Flight Manual (AFM), the AFM shall supersede. The Boeing Company regards the information or procedures described herein as having a direct or indirect bearing on the safe operation of this model airplane.

THE FOLLOWING PROCEDURE AND/OR INFORMATION IS EFFECTIVE UPON RECEIPT

Background Information

An operator with FMC Update U10.8 installed has reported incidents in which an inappropriate STEEP DESCENT AFTER XXXXX message is displayed, where XXXXX is the name of a waypoint in the flight plan. Upon reaching the specified waypoint, the autoflight system commands the airplane to descend below the expected path on approach. GE has been able to reproduce the anomaly and has identified that the issue is due to incorrect prediction logic.

The VNAV descent path is predicted backwards, starting at the destination and ending at cruise altitude. GE has determined that an error in FMC Update U10.8 results in the VNAV path being built to the wrong waypoint, specifically to a waypoint with an AT constraint upstream of the waypoint where the steep descent takes place.

This can occur during descent or approach where a waypoint with an AT OR ABOVE constraint is between two waypoints with AT constraints. It is possible that an error in the prediction logic will calculate an incorrect path between the AT waypoints that is lower than the published navigation database (NDB) path. Under these conditions, the published NDB path is not honored, and after

sequencing the waypoint with the AT OR ABOVE constraint, the aircraft may attempt to dive to capture the incorrect predicted path.

During analysis, it was determined that the STEEP DESCENT message may not always be displayed when this anomaly occurs. The STEEP DESCENT message only indicates that the vertical path discrepancy is 200 feet or more. A discrepancy of less than 200 feet will not be annunciated by the STEEP DESCENT message.

This anomaly exists only in FMC Update U10.8; VNAV approaches can still be flown with FMC Update U10.7 and earlier. A correction to the software is planned for U10.8A.

Operating Instructions

With FMC Update U10.8 installed, do not fly any instrument approach using VNAV.

Use a conventional approach, if available. If an RNAV approach without GP or VNAV guidance is absolutely required, consider flying the approach using V/S by selecting the approach procedure from the arrivals page of the FMC. Do not use the VNAV path deviation indication on the map display for descent rate guidance. Ensure compliance with all minimum altitude constraints on the approach (step-down fixes).

LNAV is still available. IAN and VSD are not affected by this anomaly.

Administrative Information

Insert this bulletin behind the FCOM Bulletin Record Page in Volume 1 of your FCOM. Amend the FCOM Bulletin Record Page to show Bulletin BBJ-40 "IN EFFECT" (IE).

This FCOM bulletin will remain in effect until Boeing is informed that all affected airplanes in your fleet have FMC Update U10.7 and earlier, or U10.8A installed.

Please send all correspondence regarding FCOM bulletin status to one of the following addresses:

Mailing Address: Boeing Commercial Airplanes
Commercial Aviation Services
ATTN: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA

E-MAIL: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743



BBJ™

Flight Crew Operations Manual

Boeing Business Jet

Copyright © 2001
The Boeing Company
All Rights Reserved

Document Number D6-27370-BBJ
June 6, 2001

Revision Number: 18
Revision Date: April 27, 2010



Copyright Information

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

The right to reproduce, distribute, display, and make derivative works from this document, or any portion thereof, requires a license from Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle, Washington 98124.

Boeing, the Boeing signature, the Boeing logo, 707, 717, 727, 737, 747, 757, 767, 777, 787, BBJ, DC-8, DC-9, DC-10, MD-10, MD-11, MD-80, MD-88 and MD-90 and the Boeing livery are all trademarks of The Boeing Company. No trademark license is granted in connection with this document unless provided in writing by Boeing.

Preface

Chapter Table of Contents

Chapter 0

Section 0

Volume 1

Title Page	0
Preface	0
Model Identification	0.1
Introduction	0.2
Abbreviations	0.3
Revision Record	0.4
V1V2 List of Effective Pages	0.5
Limitations	L
Normal Procedures	NP
Supplementary Procedures	SP
Performance Dispatch	PD
Performance Inflight	PI

Volume 2

Airplane General, Emergency Equipment, Doors, Windows	1
Air Systems	2
Anti-Ice, Rain	3
‘Automatic Flight	4
Communications	5
Electrical	6
Engines, APU - Over/Under – Displays	7
Fire Protection	8
Flight Controls	9
Flight Instruments, Displays - PFD/ND – Displays	10
Flight Management, Navigation	11
Fuel	12
Hydraulics	13
Landing Gear	14
Warning Systems	15

Intentionally
Blank

General

The airplanes listed in the table below are covered in the Flight Crew Operations Manual (FCOM). The table information is used to distinguish data peculiar to one or more, but not all of the airplanes. Where data applies to all airplanes listed, no reference is made to individual airplanes.

Airplane number is supplied by the operator. Registry number is supplied by the national regulatory agency. Serial and tabulation number are supplied by Boeing.

Airplane Number	Registry Number	Serial Number	Tabulation Number
BBJ	YX701	YX701	YX701
BBJ2	YX801	YX801	YX801
BBJ3	YX901	YX901	YX901

Intentionally
Blank

General

This Flight Crew Operations Manual (FCOM) has been prepared by The Boeing Company. The purpose of this manual is to:

- provide the necessary operating limitations, procedures, performance, and systems information the flight crew needs to safely and efficiently operate the BBJ airplane during all anticipated airline operations
- serve as a comprehensive reference for use during transition training for the BBJ airplane
- serve as a review guide for use in recurrent training and proficiency checks
- provide necessary operational data from the FAA approved Airplane Flight Manual (AFM) to ensure that legal requirements are satisfied
- establish standardized procedures and practices to enhance Boeing operational philosophy and policy.

This manual is prepared for the owner/operator named on the title page specifically for the airplanes listed in the "Model Identification" section. It contains operational procedures and information, which apply only to these airplanes. The manual covers the Boeing delivered configuration of these airplanes. Changes to the delivered configuration are incorporated when covered by contractual revision agreements between the owner/operator and The Boeing Company

This manual is not suitable for use for any airplanes not listed in the "Model Identification" section. Further, it may not be suitable for airplanes that have been transferred to other owners/operators.

Owners/operators are solely responsible for ensuring the operational documentation they are using is complete and matches the current configuration of the listed airplanes. This includes the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in the operational procedures and information contained in this manual.

This manual is structured in a two-volume format with a Quick Reference Handbook (QRH). Volume 1 includes operational limitations, normal and supplementary procedures, and dispatch performance data. Volume 2 contains systems information. The QRH contains all checklists necessary for normal and non-normal procedures as well as in-flight performance data.

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

The manual is periodically revised to incorporate pertinent procedural and systems information. Items of a more critical nature will be incorporated in operational bulletins and distributed in a timely manner. In all cases, such revisions and changes must remain compatible with the approved AFM with which the operator must comply. In the event of conflict with the AFM, the AFM shall supersede.

This manual is written under the assumption that the user has had previous multi-engine jet aircraft experience and is familiar with basic jet airplane systems and basic pilot techniques common to airplanes of this type. Therefore, the FCOM does not contain basic flight information that is considered prerequisite training.

Any questions about the content or use of this manual can be directed to:

Boeing Commercial Airplanes
Commercial Airplane Services
Attn: 737 Manager, Flight Technical Data
P. O. Box 3707, M/C 20-89
Seattle, Washington 98124-2207 USA
Email: flighttraining@boeing.com
Telephone: (206) 662-4000
Fax: (206) 662-4743

Organization

The FCOM is organized in the following manner.

Volume 1

- Preface – contains general information regarding the manual's purpose, structure, and content. It also contains lists of abbreviations, a record of revisions, bulletins, and a list of effective pages.
- Limitations and Normal Procedures chapters cover operational limitations and normal procedures. All operating procedures are based on a thorough analysis of crew activity required to operate the airplane, and reflect the latest knowledge and experience available.
- Supplementary Procedures chapter covers those procedures accomplished as required rather than routinely on each flight.
- Performance Dispatch chapter contains performance information necessary for self dispatch.


Volume 2 – Chapters 1 through 15 contain general airplane and systems information. These chapters are generally subdivided into sections covering controls and indicators and systems descriptions.

Quick Reference Handbook (QRH) – The QRH covers normal checklists, in-flight performance, non-normal checklists, and non-normal maneuvers.

Page Numbering

The FCOM uses a decimal page numbering system. The page number is divided into three fields; chapter, section, and page. An example of a page number for the hydraulics chapter follows: chapter 13, section 20, page 3.


Example Page Number

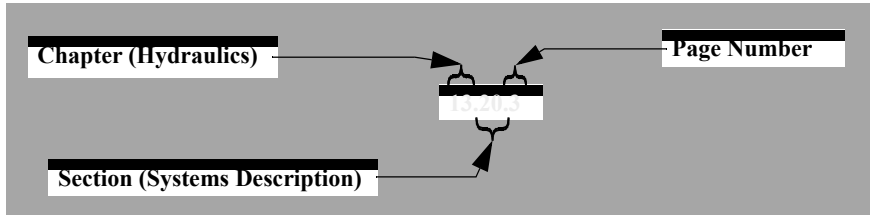

Page Identification

Each page is identified by a customer document number and a page date. The customer document number is composed of the general BBJ FCOM number, D6-27370-, and is followed by the airplane model and customer identification.

Example Page Identification

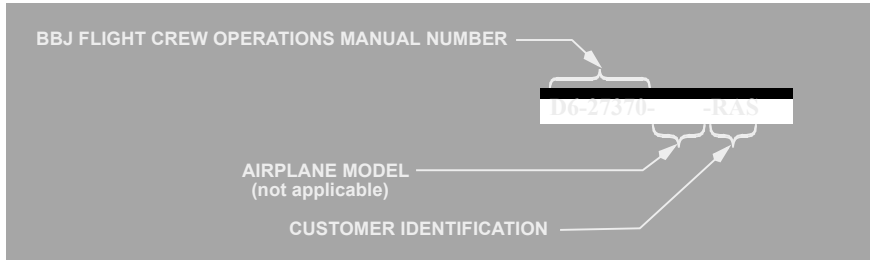

Warnings, Cautions, and Notes

The following levels of written advisories are used throughout the manual.

WARNING: An operating procedure, technique, etc., that may result in personal injury or loss of life if not carefully followed.

CAUTION: An operating procedure, technique, etc., that may result in damage to equipment if not carefully followed.

Note: An operating procedure, technique, etc., considered essential to emphasize. Information contained in notes may also be safety related.

Flight Crew Operations Manual Configuration

Customer airplane configuration determines the data provided in this manual. The Boeing Company keeps a list of each airplane configuration as it is built and modified through the service bulletin process. The FCOM does not reflect customer originated modifications without special contract provisions.

Configuration [Option] Annotations

Throughout this document, technical data is provided for many of the configuration options available for BBJ/BBJ-2 airplanes.

Options at Chapter / Section Level

Configuration specific information is shown (distinguished) by:

- options annotated at the chapter/section title; e.g.
 - Air Conditioning System Description (Section 2.30 [BBJ], 2.31 [BBJ-2])


Options Within a Chapter / Section

Configuration specific information is shown (distinguished) by:

- model sensitive options using only the model designator; e.g.
 - [BBJ-2]
 - Tail skid Check
- obvious single options [Option] where the configuration variable or nomenclature stands out in surrounding text, graphic or title; e.g.
 - [Option]
 - VOICE RECORDER switch As required
- specific options [Option - xxx, xxxx] where the configuration variable(s) are stated within the annotation (multiple variables, if applicable, are separated by commas); e.g.
 - [Option - VHF-3, ACARS, audio entertainment system]
 - Do not use VHF-3 for ATC communications with ACARS operational, or if audio entertainment system is in use.
- generic options [Option - Typical, xxx, xxxx] where multiple configuration options exist, but only a single option is shown (multiple variables, if applicable, are separated by commas); e.g.
 - [Option - Typical]
 - ‘one of numerous possible VHF control panel graphics might be shown here’
- part number options [Option - ‘Boeing or vendor part number’] where the option is part number specific (multiple variables, if applicable, are separated by commas); e.g.
 - [Option - Gables G7400-04, -06]
 - ‘a part number specific graphic might be shown here’.


Schematic Symbols

Symbols shown are those which may not be identified on schematic illustrations.

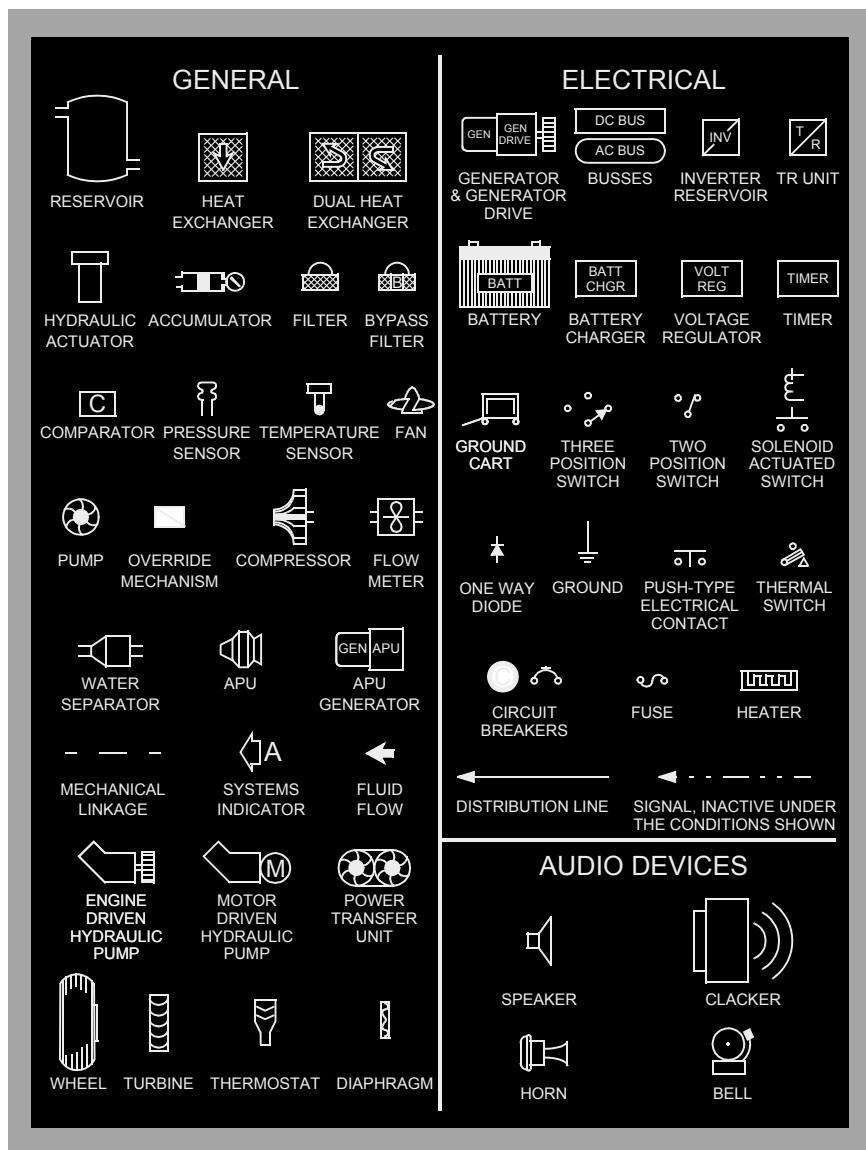

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual


VALVES

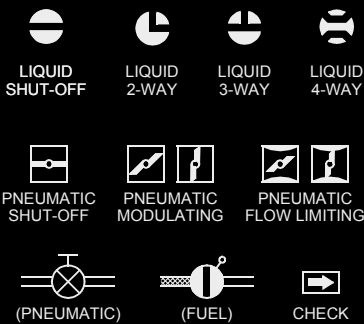


MANUALLY CONTROLLED VALVES



MOTORS AND SOLENOIDS

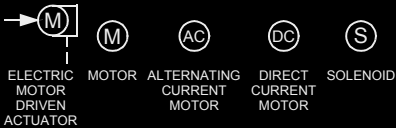

INDICATORS



Preface Abbreviations

Chapter 0 Section 3

General

The following abbreviations may be found throughout the manual. Some abbreviations may also appear in lowercase letters. Abbreviations having very limited use are explained in the chapter where they are used.

A	
AC	Alternating Current
ACARS	Aircraft Communications Addressing and Reporting System
ACP	Audio Control Panel
ACT	Active
ADF	Automatic Direction Finder
ADIRS	Air Data Inertial Reference System
ADIRU	Air Data Inertial Reference Unit
ADM	Air Data Module
AFDS	Autopilot Flight Director System
AED	Automatic External Defibrillator
AFE	Above Field Elevation
AFM	Airplane Flight Manual (FAA approved)
AGL	Above Ground Level
AI	Anti-Ice
AIL	Aileron
ALT	Altitude
ALTN	Alternate

AM	Amplitude Modulation
ANP	Actual Navigation Performance
ANT	Antenna
AOA	Angle of Attack
A/P	Autopilot
APP	Approach
APU	Auxiliary Power Unit
ARINC	Aeronautical Radio, Incorporated
ARPT	Airport
A/T	Autothrottle
ATA	Actual Time of Arrival
ATC	Air Traffic Control
ATT	Attitude
AUTO	Automatic
AUX	Auxiliary
AVAIL	Available
B	
BAC	Back Course
BARO	Barometric
B/CRS	Back Course
BCS	Back Course
BRT	Bright

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

BTL DISCH	Bottle Discharge (fire extinguishers)
B/C	Back Course
C	
C	Captain Celsius Center
CANC/ RCL	Cancel/Recall
CAPT	Captain
CB	Circuit Breaker
CDS	Common Display System
CDU	Control Display Unit
CG	Center of Gravity
CHKL	Checklist
CLB	Climb
COMM	Communication
CON	Continuous
CONFIG	Configuration
CRS	Course
CRZ	Cruise
CTL	Control
D	
DC	Direct Current
DDG	Dispatch Deviations Guide
DEP ARR	Departure Arrival
DES	Descent
DEU	Display Electronics Unit
DISC	Disconnect
DME	Distance Measuring Equipment

DSP	Display Select Panel
DSPL	Display
DU	Display Unit
E	
ECS	Environmental Control System
E/D	End of Descent
E/E	Electrical and Electronic
EEC	Electronic Engine Control
EFIS	Electronic Flight Instrument System
EGPWS	Enhanced Ground Proximity Warning System
EGT	Exhaust Gas Temperature
ELEC	Electrical
ELEV	Elevator
EMER	Emergency
ENG	Engine
EO	Engine Out
ETOPS	Extended Operations
EVAC	Evacuation
EXEC	Execute
EXT	Extend
F	
F	Fahrenheit
FAC	Final Approach Course
FCOM	Flight Crew Operations Manual
FCTL	Flight Control
F/D or FLT DIR	Flight Director

BBJ Flight Crew Operations Manual

FMA	Flight Mode Annunciations
FMC	Flight Management Computer
FMS	Flight Management System
F/O	First Officer
FPA	Flight Path Angle
FPM	Feet Per Minute
FPV	Flight Path Vector
FREQ	Frequency
FT	Feet
FWD	Forward
G	
GA	Go-Around
GEN	Generator
GLS	GPS Landing System or GNSS Landing System
G/P	Glidepath
GPS	Global Positioning System
GPWS	Ground Proximity Warning System
GS	Ground Speed
G/S	Glide Slope
H	
HDG	Heading
HDG REF	Heading Reference
HDG SEL	Heading Select
HF	High Frequency
HPA	Hectopascals
HUD	Head-Up Display

HYD	Hydraulic
I	
IAN	Integrated Approach Navigation
IAS	Indicated Airspeed
IDENT	Identification
IFE	In-Flight Entertainment System
IGN	Ignition
IN	Inches
IND LTS	Indicator Lights
ILS	Instrument Landing System
INBD	Inboard
INOP	Inoperative
INT or INTPH	Interphone
INTC CRS	Intercept Course
IRS	Inertial Reference System
ISFD	Integrated Standby Flight Display
ISLN	Isolation
K	
K	Knots
KGS	Kilograms
KIAS	Knots Indicated Airspeed
L	
L	Left
LBS	Pounds
LDA	Localizer type Directional Aid
LDG ALT	Landing Altitude

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

LIM	Limit
LNAV	Lateral Navigation
LOC	Localizer
LWR CTR	Lower Center
LWR DSPL	Lower Display
M	
M	Mach
MAG	Magnetic
MAN	Manual
MCP	Mode Control Panel
MDA	Minimum Descent Altitude
MEL	Minimum Equipment List
MFD	Multifunction Display
MHZ	Megahertz
MIC	Microphone
MIN	Minimum
MKR	Marker
MMO	Maximum Mach Operating Speed
MOD	Modify
MSG	Message
MTRS	Meters
MUH	Minimum Use Height
N	
NAV RAD	Navigation Radio
ND	Navigation Display
NM	Nautical Miles
NORM	Normal
NPS	Navigation Performance Scales

N1	Low Pressure Rotor Speed
N2	High Pressure Rotor Speed
O	
OAT	Outside Air Temperature
OFST	Offset
OHU	Overhead Unit
OUTBD DSPL	Outboard Display
OVHD	Overhead
OVHT	Overheat
OVRD	Override
OXY or O2	Oxygen
P	
PA	Passenger Address
PASS	Passenger
PERF INIT	Performance Initialization
PF	Pilot Flying
PFC	Primary Flight Computers
PFD	Primary Flight Display
PM	Pilot Monitoring
PNF	Pilot Not Flying
PNL	Panel
POS	Position
PREV	Previous
P-RNAV	Precision Area Navigation
PROX	Proximity
POS INIT	Position Initialization

BBJ Flight Crew Operations Manual

PRI	Primary
PSI	Pounds Per Square Inch
PTH	Path
PTT	Push To Talk
PWR	Power
PWS	Predictive Windshear System
R	
R	Right
RA	Radio Altitude Resolution Advisory
RDMI	Radio Distance Magnetic Indicator
REC	Recorder
RECIRC	Recirculation
REF	Reference
RET	Retract
RF	Refill
RNP	Required Navigation Performance
RPM	Revolutions Per Minute
RST	Reset
RTE	Route
RTO	Rejected Takeoff
RTP	Radio Tuning Panel
RUD	Rudder
RVSM	Reduced Vertical Separation Minimum
S	
SAT	Static Air Temperature
S/C	Step Climb

SDF	Simplified Directional Facility
SELCAL	Selective Calling
SEL	Select
SPD	Speed
STA	Station
STAB	Stabilizer
STAT	Status
STBY	Standby
STD	Standard
SYS	System
T	
T or TRU	True
T or TK or TRK	Track
TA	Traffic Advisory
TAS	True Airspeed
TAT	Total Air Temperature
T/C	Top of Climb
TCAS	Traffic Alert and Collision Avoidance System
TDZE	Touch Down Zone Elevation
T/D	Top of Descent
TEMP	Temperature
TERR	Terrain
TFC	Traffic
TFR	Transfer
THR HOLD	Throttle Hold
TO	Takeoff

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

TO/GA	Takeoff/Go-Around
TRU	Transformer Rectifier Unit
U	
UNLKD	Unlocked
USB	Upper Side Band
UPR DSPL	Upper Display
UTC	Coordinated Universal Time
UTIL	Utility
V	
VA	Design Maneuvering Speed
VANP	Vertical Actual Navigation Performance
VERT	Vertical
VHF	Very High Frequency
VMO	Maximum Operating Speed
VNAV	Vertical Navigation
VOR	VHF Omnidirectional Range
VR	Rotation Speed
VREF	Reference Speed
VRNP	Vertical Required Navigation Performance
VSD	Vertical Situation Display
VSI	Vertical Speed Indicator
V/S	Vertical Speed
VTK	Vertical Track
V1	Takeoff Decision Speed
V2	Takeoff Safety Speed
W	

WPT	Waypoint
WXR	Weather Radar
X	
XPDR or XPNDR	Transponder
XTK	Cross Track

Revision Transmittal Letter

To: All holders of Boeing Business Jet 737 Flight Crew Operations Manual (FCOM), Boeing Document Number D6-27370-BBJ.

To: All holders of Boeing Business Jet BBJ Flight Crew Operations Manual (FCOM), Boeing Document Number D6-27370-BBJ.

Subject: Flight Crew Operations Manual Revision.

This revision reflects the most current information available to The Boeing Company 45 days before the subject revision date. The following revision highlights explain changes in this revision. General information below explains the use of revision bars to identify new or revised information.

Boeing has added the following Chapters to the Quick Reference Handbook (QRH):

- CI.ModID QRH Model Identification
- CI.RR QRH Revision Record
- CI.LEP QRH List of Effective Pages

This change will support future publication enhancements as well as provide FCOM (V1V2/QRH) users with more precise page and revision accountability.

Refer to the above-listed Chapters for detailed descriptions and user instructions.

Revision Record

No.	Revision Date	Date Filed
0	June 6, 2001	
2	April 15, 2002	
4	April 30, 2003	
6	April 26, 2004	
8	April 25, 2005	
10	April 28, 2006	
12	April 30, 2007	
14	April 29, 2008	
16	April 24, 2009	

No.	Revision Date	Date Filed
1	September 15, 2001	
3	October 31, 2002	
5	October 30, 2003	
7	October 25, 2004	
9	October 28, 2005	
11	October 27, 2006	
13	October 31, 2007	
15	October 29, 2008	
17	October 23, 2009	

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

No.	Revision Date	Date Filed
18	April 27, 2010	

No.	Revision Date	Date Filed

General

The Boeing Company issues FCOM revisions to provide new or revised procedures and information. Formal revisions also incorporate appropriate information from previously issued FCOM bulletins.

The revision date is the approximate date the manual is made available to the customer and is effective upon receipt.

Formal revisions include a Transmittal Letter, a new Revision Record, Revision Highlights, and a current List of Effective Pages. Use the information on the new Revision Record and List of Effective Pages to verify the Systems Handbook content.

Pages containing revised technical material have revision bars associated with the changed text or illustration. Editorial revisions (for example, spelling corrections) may have revision bars with no associated highlight.

The Revision Record should be completed by the person incorporating the revision into the manual.

Filing Instructions

Consult the List of Effective Pages (0.5). Pages identified with an asterisk (*) are either replacement pages or new (original) issue pages. Remove corresponding old pages and replace or add new pages. Remove pages that are marked DELETED; there are no replacement pages for deleted pages.

Be careful when inserting changes not to throw away pages from the manual that are not replaced. Using the List of Effective Pages (0.5) can help determine the correct content of the manual.

Revision Highlights

This section (0.4) replaces the existing section 0.4 in your manual.

Throughout the manual, airplane effectivity may be updated to reflect coverage as listed on the Preface - Model Identification page, or to show service bulletin airplane effectivity. Highlights are not supplied.

This manual is published from a database; the text and illustrations are marked with configuration information. Occasionally, because the editors rearrange the database markers, or mark items with configuration information due to the addition of new database content, some customers may receive revision bars on content that appears to be unchanged. Pages may also be republished without revision bars due to slight changes in the flow of the document.

Chapter 0 - Preface

Section 2 - Introduction

General

0.2.2 - Updated address information.

Section 3 - Abbreviations

0.3.1 - Added abbreviation.

Chapter L - Limitations

Section 10 - Operating Limitations

Autopilot/Flight Director System

L.10.4 - Added verbiage to clarify limitation applies to airplanes operating under FAA authority.

L.10.4-5 - Added verbiage to clarify limitation applies to airplanes operating under JAA authority.

APU

L.10.6 - Added verbiage to clarify limitation applies to airplanes operating under JAA authority.

L.10.6 - Added verbiage to clarify limitation applies to airplanes operating under FAA authority.

Flight Controls

L.10.7 - Added verbiage to clarify limitation applies to airplanes operating under JAA authority.

Landing Gear

L.10.9 - Added verbiage to clarify limitation applies to airplanes operating under JAA authority.

Chapter NP - Normal Procedures

Section 21 - Amplified Procedures

Preflight Procedure – First Officer

NP.21.22 - Clarified light description.

Chapter SP - Supplementary Procedures

Section 3 - Anti-Ice, Rain

Cold-Soaked Fuel Frost

SP.3.1 - Revised terminology for consistency with SP16 and specified snow, ice and frost as the contaminants that must be removed from all surfaces.

Section 11 - Flight Management, Navigation

Other Operations

SP.11.12 - Revised to clarify that the procedure should be done if both GPS INVALID messages are shown on the CDU scratchpad. Other changes were made for readability and simplification.

SP.11.12 - Changed for readability and simplification.

Section 16 - Adverse Weather

Cold Weather Operations

SP.16.2 - Revised terminology for consistency with SP3 Cold-Soaked Fuel Frost and for Boeing cross-model standardization.

Chapter PD - Performance Dispatch

Section 10 - Takeoff

Takeoff Field & Climb Limit Weights - Dry Runway

PD.10.6-7 - Extended data up to 14500 ft pressure altitude.

Takeoff Field & Climb Limit Weights - Wet Runway

PD.10.12-13 - Extended data up to 14500 ft pressure altitude.

Takeoff Obstacle Limit Weight

PD.10.15-16 - Added Obstacle Limit Weight High Altitude data.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate

PD.10.22 - Consolidated duplicate tables in publishing system. No data change.

PD.10.23 - Extended data up to 14500 ft pressure altitude.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)

PD.10.28-29 - Extended data up to 14500 ft pressure altitude.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)

PD.10.43-44 - Extended data up to 14500 ft pressure altitude.

Takeoff Obstacle Limit Weight - High Altitude (24K Derate)

PD.10.46-47 - Revised data to show the high altitude obstacle limit weight for 10000 ft to 14500 ft altitude. Previous data did not provide high altitude coverage.

Section 12 - Landing

Landing Field Limit Weight - Dry Runway

PD.12.3 - Extended data up to 14500 ft pressure altitude.

Landing Field Limit Weight - Wet Runway

PD.12.7 - Extended data up to 14500 ft pressure altitude.

Landing Climb Limit Weight

PD.12.10 - Extended data up to 14500 ft pressure altitude.

Quick Turnaround Limit Weight - Category M Carbon Brakes

PD.12.13 - Added alternate procedure.

Quick Turnaround Limit Weight - Category F Steel Brakes - High Altitudes

PD.12.15 - Added Category M Carbon Brakes data.

PD.12.15 - Added alternate procedure.

Section 14 - Text

Takeoff

PD.14.2 - Removed JAA Weight Decrement as it is no longer applicable

PD.14.2 - Removed JAA Weight Decrement as it is no longer applicable.

Enroute

PD.14.4-5 - Corrected titles.

Section 20 - Takeoff

Takeoff

PD.20.1 - 737-700BBJW CFM56-7B27B3 LB FAA CATF/M was added as Section 20.

Section 22 - Landing

Quick Turnaround Limit Weight - Category M Carbon Brakes

PD.22.16 - Added alternate procedure.

Quick Turnaround Limit Weight - Category F Steel Brakes - High Altitudes

PD.22.18 - Added Category M Carbon Brakes data.

PD.22.18 - Added alternate procedure.

Section 24 - Text

Takeoff

PD.24.2 - Removed JAA Weight Decrement as it is no longer applicable

PD.24.2 - Removed JAA Weight Decrement as it is no longer applicable.

Enroute

PD.24.4-5 - Corrected titles.

Section 30 - Takeoff

Takeoff Field & Climb Limit Weights - Dry Runway

PD.30.5-6 - Extended data up to 14500 ft pressure altitude.

Takeoff Field & Climb Limit Weights - Wet Runway

PD.30.11-12 - Extended data up to 14500 ft pressure altitude.

Section 32 - Landing

Landing Field Limit Weight - Dry Runway - High Altitudes

PD.32.3-4 - Extended data up to 14500 ft pressure altitude.

Landing Field Limit Weight - Wet Runway

PD.32.7 - Extended data up to 14500 ft pressure altitude.

Landing Field Limit Weight - Wet Runway - High Altitudes

PD.32.8 - Extended data up to 14500 ft pressure altitude.

Landing Climb Limit Weight - High Altitudes

PD.32.10 - Extended data up to 14500 ft pressure altitude.

Go-Around Climb Gradient

PD.32.12 - Added Go-Around Climb Gradient High Altitude information.

Quick Turnaround Limit Weight - Category N Carbon Brakes

PD.32.14,16 - Added alternate procedure.

PD.32.16 - Added Category N Carbon Brakes data.

Section 34 - Text

Takeoff

PD.34.1 - Removed JAA Weight Decrement as it is no longer applicable

PD.34.2 - Removed JAA Weight Decrement as it is no longer applicable.

Enroute

PD.34.4-5 - Corrected titles.

Section 40 - Takeoff

Takeoff

PD.40.1 - 737-800BBJW CFM56-7B27B3 LB FAA CATC/N was added as Section 40.

Section 42 - Landing

Quick Turnaround Limit Weight - Category N Carbon Brakes

PD.42.8 - Added alternate procedure.

Section 44 - Text

Takeoff

PD.44.1 - Removed JAA Weight Decrement as it is no longer applicable

PD.44.2 - Removed JAA Weight Decrement as it is no longer applicable.

Enroute

PD.44.4-5 - Corrected titles.

Section 50 - Takeoff

Takeoff Field & Climb Limit Weights - Dry Runway

PD.50.2 - Removed JAA Weight Decrement as it is no longer applicable.

PD.50.3-4 - Removed JAA Weight Decrement as it is no longer applicable

PD.50.5-6 - Extended data up to 14500 ft pressure altitude.

Takeoff Field & Climb Limit Weights - Wet Runway

PD.50.8-10 - Removed JAA Weight Decrement as it is no longer applicable

PD.50.11-12 - Extended data up to 14500 ft pressure altitude.

Takeoff Obstacle Limit Weight

PD.50.14 - Removed JAA Weight Decrement as it is no longer applicable

Section 52 - Landing

Landing Field Limit Weight - Dry Runway - High Altitudes

PD.52.3 - Added Engine Inop Go-Around Climb Gradient information.

Landing Field Limit Weight - Dry Runway High Altitude

PD.52.4 - Added Engine Inop Go-Around Climb Gradient information.

Landing Field Limit Weight - Wet Runway High Altitude

PD.52.7-8 - Added Engine Inop Go-Around Climb Gradient information.

Landing Climb Limit Weight - High Altitudes

PD.52.10 - Added Engine Inop Go-Around Climb Gradient information.

Go-Around Climb Gradient - High Altitude

PD.52.12 - Added Engine Inop Go-Around Climb Gradient information.

Quick Turnaround Limit Weight - Category P Carbon Brakes - High Altitudes

PD.52.16 - Added Category P Carbon Brakes data.

PD.52.16 - Added alternate procedure.

Section 54 - Text

Takeoff

PD.54.1 - Removed JAA Weight Decrement as it is no longer applicable

PD.54.2 - Removed JAA Weight Decrement as it is no longer applicable.

Enroute

PD.54.4-5 - Corrected titles.

Section 60 - Takeoff

Takeoff Field & Climb Limit Weights - Dry Runway

PD.60.5-6 - Extended data up to 14500 ft pressure altitude.

Takeoff Field & Climb Limit Weights - Wet Runway

PD.60.11-12 - Extended data up to 14500 ft pressure altitude.

Section 62 - Landing

Landing Field Limit Weight - Dry Runway - High Altitudes

PD.62.3 - Added Engine Inop Go-Around Climb Gradient information.

Landing Field Limit Weight - Dry Runway High Altitude

PD.62.4 - Added Engine Inop Go-Around Climb Gradient information.

Landing Field Limit Weight - Wet Runway High Altitude

PD.62.8-9 - Added Engine Inop Go-Around Climb Gradient information.

Landing Climb Limit Weight - High Altitudes

PD.62.11 - Added Engine Inop Go-Around Climb Gradient information.

Go-Around Climb Gradient - High Altitude

PD.62.13 - Added Engine Inop Go-Around Climb Gradient information.

Quick Turnaround Limit Weight - Category P Carbon Brakes - High Altitudes

PD.62.17 - Added Category P Carbon Brakes data.

PD.62.17 - Added alternate procedure.

Section 64 - Text

Takeoff

PD.64.1 - Removed JAA Weight Decrement as it is no longer applicable

PD.64.2 - Removed JAA Weight Decrement as it is no longer applicable.

Enroute

PD.64.4-5 - Corrected titles.

Chapter PI - Performance Inflight

Section 10 - General

Maximum Allowable Clearway - High Altitudes

PI.10.8 - Extended data up to 14500 ft pressure altitude.

PI.10.8 - Revised maximum allowable clearway.

Clearway and Stopway V1 Adjustments - High Altitudes

PI.10.8 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - High Altitudes

PI.10.28 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - High Altitudes

PI.10.30 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (26K Derate)

PI.10.38 - Extended data up to 14500 ft pressure altitude.

PI.10.38 - Revised maximum allowable clearway.

Clearway and Stopway V1 Adjustments (26K Derate)

PI.10.38 - Extended data up to 14500 ft pressure altitude.

Slush/Standing Water Takeoff (26K Derate)

PI.10.44-47 - Extended data up to 14500 ft pressure altitude.

Slippery Runway Takeoff (26K Derate)

PI.10.52-53 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - (26K Derate)

PI.10.56 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - (26K Derate)

PI.10.58 - Extended data up to 14500 ft pressure altitude.

Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)

PI.10.62 - Extended data up to 14500 ft pressure altitude.

Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)

PI.10.65 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (24K Derate)

PI.10.66 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments (24K Derate)

PI.10.66 - Extended data up to 14500 ft pressure altitude.

Slush/Standing Water Takeoff (24K Derate)

PI.10.72-73 - Extended data up to 14500 ft pressure altitude.

Slippery Runway Takeoff (24K Derate)

PI.10.80-81 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 (24K Derate)

PI.10.84 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust (24K Derate)

PI.10.86 - Extended data up to 14500 ft pressure altitude.

Go-around %N1

PI.10.90 - Extended data up to 14500 ft pressure altitude.

Section 12 - Advisory Information

Recommended Brake Cooling Schedule

PI.12.12,14 - Added (1000 FT) to header to read PRESSURE ALTITUDE (1000 FT).

PI.12.14 - Extended data up to 14500 ft pressure altitude.

Section 14 - Alternate Mode EEC

Alternate Mode EEC Limit Weight

PI.14.1 - Added New Alternate Mode EEC (26K Bump) Section.

Section 20 - General

Maximum Allowable Clearway - High Altitudes

PI.20.7 - Extended data up to 14500 ft pressure altitude.

PI.20.7 - Revised maximum allowable clearway.

Clearway and Stopway V1 Adjustments - High Altitudes

PI.20.7 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - High Altitudes

PI.20.28 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - High Altitudes

PI.20.30 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (26K Derate)

PI.20.38 - Extended data up to 14500 ft pressure altitude.

PI.20.38 - Revised maximum allowable clearway.

Clearway and Stopway V1 Adjustments (26K Derate)

PI.20.38 - Extended data up to 14500 ft pressure altitude.

Slippery Runway Takeoff (26K Derate)

PI.20.55 - Added No Reverse Thrust Data.

Takeoff %N1 - (26K Derate)

PI.20.58 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - (26K Derate)

PI.20.60 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (24K Derate)

PI.20.68 - Extended data up to 14500 ft pressure altitude.

PI.20.68 - Revised maximum allowable clearway.

Clearway and Stopway V1 Adjustments (24K Derate)

PI.20.68 - Extended data up to 14500 ft pressure altitude.

Slush/Standing Water Takeoff (24K Derate)

PI.20.74 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 (24K Derate)

PI.20.88 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust (24K Derate)

PI.20.90 - Extended data up to 14500 ft pressure altitude.

Go-around %N1

PI.20.94 - Extended data up to 14500 ft pressure altitude.

Section 22 - Advisory Information

Recommended Brake Cooling Schedule

PI.22.12,14 - Added (1000 FT) to header to read PRESSURE ALTITUDE (1000 FT).

PI.22.14 - Extended data up to 14500 ft pressure altitude.

Section 24 - Alternate Mode EEC

Alternate Mode EEC Limit Weight

PI.24.1 - Added New Alternate Mode EEC (26K Bump) Section.

Section 30 - General

Slush/Standing Water Takeoff (24K Derate)

PI.30.64 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 (24K Derate)

PI.30.76 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust (24K Derate)

PI.30.78 - Extended data up to 14500 ft pressure altitude.

Go-around %N1

PI.30.82 - Extended data up to 14500 ft pressure altitude.

Section 32 - Advisory Information

Recommended Brake Cooling Schedule

PI.32.14 - Extended data up to 14500 ft pressure altitude.

PI.32.14 - Added (1000 FT) to header to read PRESSURE ALTITUDE (1000 FT).

Section 42 - Advisory Information

Recommended Brake Cooling Schedule

PI.42.12 - Added (1000 FT) to header to read PRESSURE ALTITUDE (1000 FT).

Section 50 - General

Maximum Allowable Clearway - High Altitudes

PI.50.5 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments - High Altitudes

PI.50.5 - Extended data up to 14500 ft pressure altitude.

Slippery Runway Takeoff

PI.50.21,23 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - High Altitudes

PI.50.26 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - High Altitudes

PI.50.28 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (26K Derate)

PI.50.34 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments (26K Derate)

PI.50.34 - Extended data up to 14500 ft pressure altitude.

Slippery Runway Takeoff (26K Derate)

PI.50.47,49 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - (26K Derate)

PI.50.52 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - (26K Derate)

PI.50.54 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (24K Derate)

PI.50.60 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments (24K Derate)

PI.50.60 - Extended data up to 14500 ft pressure altitude.

Slush/Standing Water Takeoff (24K Derate)

PI.50.64 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 (24K Derate)

PI.50.76 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust (24K Derate)

PI.50.78 - Extended data up to 14500 ft pressure altitude.

Go-around %N1

PI.50.82 - Extended data up to 14500 ft pressure altitude.

Section 52 - Advisory Information

Recommended Brake Cooling Schedule

PI.52.14 - Extended data up to 14500 ft pressure altitude.

Section 60 - General

Maximum Allowable Clearway - High Altitudes

PI.60.5 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments - High Altitudes

PI.60.5 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - High Altitudes

PI.60.24 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - High Altitudes

PI.60.26 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (26K Derate)

PI.60.32 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments (26K Derate)

PI.60.32 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 - (26K Derate)

PI.60.50 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust - (26K Derate)

PI.60.52 - Extended data up to 14500 ft pressure altitude.

Maximum Allowable Clearway (24K Derate)

PI.60.58 - Extended data up to 14500 ft pressure altitude.

Clearway and Stopway V1 Adjustments (24K Derate)

PI.60.58 - Extended data up to 14500 ft pressure altitude.

Slush/Standing Water Takeoff (24K Derate)

PI.60.64 - Extended data up to 14500 ft pressure altitude.

Takeoff %N1 (24K Derate)

PI.60.76 - Extended data up to 14500 ft pressure altitude.

Assumed Temperature Reduced Thrust (24K Derate)

PI.60.78 - Extended data up to 14500 ft pressure altitude.

Go-around %N1

PI.60.82 - Extended data up to 14500 ft pressure altitude.

Section 62 - Advisory Information

Recommended Brake Cooling Schedule

PI.62.14 - Extended data up to 14500 ft pressure altitude.

Chapter 1 - Airplane General, Emergency Equipment, Doors, Windows

Section 40 - Systems Description

Exterior Control

1.40.38 - Changed the color of the AIRSTAIR light to amber.

Chapter 2 - Air Systems

Section 10 - Controls and Indicators

Cabin Pressurization Panel

2.10.14 - Added per Technical Bulletin 737-09-3

Chapter 3 - Anti-Ice, Rain

Section 10 - Controls and Indicators

Probe Heat Panel

3.10.3 - Changed for clarity.

Chapter 4 - Automatic Flight

Section 20 - System Description

Autothrottle Disengagement

4.20.9 - Added description to clarify thrust lever position.

Chapter 9 - Flight Controls

Section 10 - Controls and Indicators

Leading Edge Devices

9.10.13 - Revised condition for which the LE FLAPS TRANSIT light would be illuminated.

Chapter 10 - Flight Instruments, Displays

Section 11 - PFD/ND – Displays

Vertical Situation Display (VSD)

10.11.41 - Revised VSD color descriptions.

10.11.41 - Added note for terrain warning considerations.

Section 16 - EFIS Instruments (PFD) – Controls

Displays Source Control Panel

10.16.4 - Revised Title for clarity.

Flight Recorder

10.16.22 - OFF Light color is amber.

Section 65 - Electronic Flight Bag (EFB)

Main Menu

10.65.9 - Revised description to reflect updated information.

Chapter 11 - Flight Management, Navigation

Section 10 - Controls and Indicators

VHF NAV Transfer Switch

11.10.20 - Revised the description of the VHF NAV Transfer Switch.

Section 40 - FMC Preflight

Performance Initialization Page

11.40.32 - Added to reflect additional information on MAX/OPT altitude predictions.

N1 LIMIT Page - Preflight

11.40.37 - Revised paragraph to delete reference to N1 display bugs that are covered in chapter 7.

Takeoff Reference Page 1/2

11.40.40 - Revised paragraph to delete reference to N1 display bugs that are covered in chapter 7.

Takeoff Reference Page 2/2

11.40.47 - Revised paragraph to delete reference to N1 display bugs that are covered in chapter 7.

Section 60 - FMC Messages

FMC Alerting Messages

11.60.5 - Revised GPS-L or R INVALID Alert Message.

Chapter 12 - Fuel

Section 10 - Controls and Indicators

Fuel Quantity Indications

12.10.4 - Added fuel quantity indication accuracy tolerance.

Section 20 - System Description

Auxiliary Fuel Tank Configurations

12.20.3 - Added auxiliary fuel tank configuration for 737-700 to reflect fleet configuration.

Fuel Tank Location and Capacities (Usable Fuel)

- 12.20.6 - Revised auxiliary tank quantities.
- 12.20.8 - Added auxiliary fuel quantity information for BBJ-2.
- 12.20.9 - Added auxiliary fuel quantity information for BBJ-3.

Chapter 13 - Hydraulics

Section 20 - System Description

Hydraulic Power Distribution Schematic

- 13.20.2 - Added schematic with two position tail skid.

Chapter 14 - Landing Gear

Section 20 - System Description

Nose Wheel Steering

- 14.20.3 - Revised nose wheel steering description for clarification.

Chapter 15 - Warning Systems

Section 10 - Controls and Indicators

Terrain Display

- 15.10.11 - Revised digital terrain display description.

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Intentionally
Blank

Preface**Chapter 0****V1V2 List of Effective Pages****Section 5**

Page	Date
Volume 1	
* Title Page	April 27, 2010
* Copyright	April 27, 2010
0.TOC.0.1-2	October 23, 2009
* 0.1.1-2	April 27, 2010
0.2.1	April 29, 2008
* 0.2.2	April 27, 2010
0.2.3-6	April 29, 2008
* 0.3.1	April 27, 2010
0.3.2	October 23, 2009
0.3.3-6	April 29, 2008
Revision Record (tab)	
* 0.4.1-18	April 27, 2010
List of Effective Pages	
* 0.5.1-12	April 27, 2010
Bulletins (tab)	
* 0.6.1-3	April 27, 2010
0.6.4	April 29, 2008
Limitations (tab)	
L.TOC.0.1-2	October 29, 2008
L.10.1	October 28, 2005
L.10.2	April 30, 2003
L.10.3	April 29, 2008
* L.10.4-7	April 27, 2010
L.10.8	October 29, 2008
* L.10.9	April 27, 2010
L.10.10	April 30, 2007

Page	Date
Normal Procedures (tab)	
* NP.TOC.0.1-2	April 27, 2010
NP.11.1-4	October 29, 2008
NP.11.5	October 31, 2007
NP.11.6	April 24, 2009
NP.11.7	October 23, 2009
NP.11.8	April 28, 2006
* NP.21.1-74	April 27, 2010
Supplementary Procedures (tab)	
* SP.TOC.0.1-6	April 27, 2010
SP.05.1	October 29, 2008
SP.05.2	June 6, 2001
SP.1.1-2	April 29, 2008
SP.1.3	April 30, 2003
SP.1.4	April 26, 2004
SP.1.5-6	April 29, 2008
SP.1.7-8	April 24, 2009
SP.2.1	June 6, 2001
SP.2.2	April 24, 2009
SP.2.3	April 28, 2006
SP.2.4-5	April 29, 2008
SP.2.6	April 24, 2009
SP.2.7-8	April 29, 2008
* SP.3.1-3	April 27, 2010
SP.3.4	October 28, 2005
SP.4.1	April 15, 2002
SP.4.2-10	October 23, 2009
SP.4.11-12	April 24, 2009
SP.5.1-2	June 6, 2001

* = Revised, Added, or Deleted

Copyright © The Boeing Company. See title page for details.

BBJ Flight Crew Operations Manual

Page	Date	Page	Date
Supplementary Procedures (cont)		Supplementary Procedures (cont)	
SP.6.1	April 28, 2006	SP.16.7-12	October 23, 2009
SP.6.2	April 30, 2007	SP.16.13	October 29, 2008
SP.6.3	October 31, 2007	SP.16.14-15	April 24, 2009
SP.6.4-6	April 30, 2007	SP.16.16	October 23, 2009
SP.7.1-6	April 24, 2009	SP.16.17-22	October 29, 2008
SP.8.1	October 29, 2008	Performance - Dispatch (tab)	
SP.8.2	June 6, 2001	PD.TOC.1-2	October 23, 2009
SP.10.1-8	October 29, 2008	* PD.TOC.10.1-4	April 27, 2010
* SP.11.1-2	April 27, 2010	PD.10.1-5	October 23, 2009
SP.11.3	October 25, 2004	* PD.10.6-48	April 27, 2010
SP.11.4	October 28, 2005	PD.11.1-12	October 23, 2009
SP.11.5-7	April 26, 2004	PD.12.1-2	October 23, 2009
SP.11.8-10	April 29, 2008	* PD.12.3-16	April 27, 2010
SP.11.11	April 26, 2004	PD.13.1-8	October 23, 2009
* SP.11.12	April 27, 2010	PD.14.1	October 23, 2009
SP.11.13	October 29, 2008	* PD.14.2	April 27, 2010
SP.11.14	October 27, 2006	PD.14.3	October 23, 2009
SP.11.15	April 26, 2004	* PD.14.4-5	April 27, 2010
SP.11.16-20	October 23, 2009	PD.14.6-8	October 23, 2009
SP.11.21-22	April 29, 2008	* PD.TOC.20.1-4	April 27, 2010
SP.11.23-24	April 26, 2004	* PD.20.1	April 27, 2010
SP.12.1	October 27, 2006	PD.20.2-5	October 23, 2009
SP.12.2-3	June 6, 2001	* PD.20.6-44	April 27, 2010
SP.12.4-6	April 26, 2004	PD.21.1-10	October 23, 2009
* SP.15.1-2	April 27, 2010	PD.22.1	October 23, 2009
SP.16.1	October 23, 2009	* PD.22.2-18	April 27, 2010
* SP.16.2	April 27, 2010	PD.23.1-8	October 23, 2009
SP.16.3	April 24, 2009	PD.24.1	October 23, 2009
SP.16.4	October 23, 2009	* PD.24.2	April 27, 2010
SP.16.5-6	April 24, 2009	PD.24.3	October 23, 2009

* = Revised, Added, or Deleted

Page	Date	Page	Date
Performance - Dispatch (cont)		Performance - Dispatch (cont)	
* PD.24.4-5	April 27, 2010	* PD.TOC.60.1-2	April 27, 2010
PD.24.6-8	October 23, 2009	PD.60.1-4	October 23, 2009
* PD.TOC.30.1-2	April 27, 2010	* PD.60.5-18	April 27, 2010
PD.30.1-4	October 23, 2009	PD.61.1-10	October 23, 2009
* PD.30.5-18	April 27, 2010	PD.62.1-2	October 23, 2009
PD.31.1-12	October 23, 2009	* PD.62.3-18	April 27, 2010
PD.32.1-2	October 23, 2009	PD.63.1-10	October 23, 2009
* PD.32.3-16	April 27, 2010	* PD.64.1-2	April 27, 2010
PD.33.1-10	October 23, 2009	PD.64.3	October 23, 2009
* PD.34.1-7	April 27, 2010	* PD.64.4-5	April 27, 2010
PD.34.8	October 23, 2009	PD.64.6-8	October 23, 2009
PD.TOC.40.1-2	October 23, 2009	Performance - Inflight (tab)	
* PD.40.1-12	April 27, 2010	PI.TOC.1-2	October 23, 2009
PD.41.1-10	October 23, 2009	* PI.TOC.10.1-4	April 27, 2010
PD.42.1-7	October 23, 2009	* PI.10.1-92	April 27, 2010
* PD.42.8	April 27, 2010	PI.11.1-8	October 23, 2009
PD.43.1-10	October 23, 2009	PI.12.1-11	October 23, 2009
* PD.44.1-7	April 27, 2010	* PI.12.12-16	April 27, 2010
PD.44.8	October 23, 2009	PI.13.1-12	October 23, 2009
* PD.TOC.50.1-2	April 27, 2010	* PI.14.1-4	April 27, 2010
PD.50.1	October 23, 2009	PI.15.1-6	October 23, 2009
* PD.50.2-16	April 27, 2010	PI.16.1-2	October 23, 2009
PD.51.1-10	October 23, 2009	* PI.16.3-4	April 27, 2010
PD.52.1-2	October 23, 2009	PI.17.1	October 23, 2009
* PD.52.3-16	April 27, 2010	* PI.17.2	April 27, 2010
PD.53.1-10	October 23, 2009	PI.17.3-4	October 23, 2009
* PD.54.1-2	April 27, 2010	* PI.17.5	April 27, 2010
PD.54.3	October 23, 2009	PI.17.6-10	October 23, 2009
* PD.54.4-5	April 27, 2010	* PI.17.11	April 27, 2010
PD.54.6-8	October 23, 2009	PI.17.12-14	October 23, 2009

* = Revised, Added, or Deleted

BBJ Flight Crew Operations Manual

Page	Date	Page	Date
Performance - Inflight (cont)		Performance - Inflight (cont)	
* PI.TOC.20.1-4	April 27, 2010	* PI.37.4	April 27, 2010
* PI.20.1-96	April 27, 2010	PI.37.5-10	October 23, 2009
PI.21.1-8	October 23, 2009	* PI.37.11	April 27, 2010
PI.22.1-11	October 23, 2009	PI.37.12-14	October 23, 2009
* PI.22.12	April 27, 2010	PI.TOC.40.1-4	October 23, 2009
PI.22.13	October 23, 2009	PI.40.1	October 23, 2009
* PI.22.14-16	April 27, 2010	* PI.40.2-15	April 27, 2010
PI.23.1-12	October 23, 2009	PI.40.16	October 23, 2009
* PI.24.1-4	April 27, 2010	* PI.40.17-18	April 27, 2010
PI.25.1-6	October 23, 2009	PI.40.19-26	October 23, 2009
PI.26.1-4	October 23, 2009	* PI.40.27-45	April 27, 2010
PI.27.1	October 23, 2009	PI.40.46	October 23, 2009
* PI.27.2	April 27, 2010	PI.41.1-8	October 23, 2009
PI.27.3-4	October 23, 2009	PI.42.1-11	October 23, 2009
* PI.27.5	April 27, 2010	* PI.42.12	April 27, 2010
PI.27.6-10	October 23, 2009	PI.42.13-14	October 23, 2009
* PI.27.11	April 27, 2010	PI.43.1-12	October 23, 2009
PI.27.12-14	October 23, 2009	PI.44.1-2	October 23, 2009
* PI.TOC.30.1-4	April 27, 2010	PI.45.1-6	October 23, 2009
PI.30.1	October 23, 2009	PI.46.1-6	October 23, 2009
* PI.30.2-84	April 27, 2010	PI.47.1-3	October 23, 2009
PI.31.1-10	October 23, 2009	* PI.47.4	April 27, 2010
PI.32.1-13	October 23, 2009	PI.47.5-10	October 23, 2009
* PI.32.14-16	April 27, 2010	* PI.47.11	April 27, 2010
PI.33.1-12	October 23, 2009	PI.47.12-14	October 23, 2009
PI.34.1-2	October 23, 2009	* PI.TOC.50.1-4	April 27, 2010
PI.35.1-6	October 23, 2009	PI.50.1	October 23, 2009
PI.36.1-2	October 23, 2009	* PI.50.2-84	April 27, 2010
* PI.36.3-6	April 27, 2010	PI.51.1-8	October 23, 2009
PI.37.1-3	October 23, 2009	PI.52.1-13	October 23, 2009

* = Revised, Added, or Deleted

Page	Date
Performance - Inflight (cont)	
* PI.52.14-16	April 27, 2010
PI.53.1-12	October 23, 2009
PI.54.1-2	October 23, 2009
PI.55.1-6	October 23, 2009
PI.56.1-4	October 23, 2009
PI.57.1-3	October 23, 2009
* PI.57.4	April 27, 2010
PI.57.5-10	October 23, 2009
* PI.57.11	April 27, 2010
PI.57.12-14	October 23, 2009
* PI.TOC.60.1-4	April 27, 2010
PI.60.1	October 23, 2009
* PI.60.2-84	April 27, 2010
PI.61.1-8	October 23, 2009
PI.62.1-13	October 23, 2009
* PI.62.14-16	April 27, 2010
PI.63.1-12	October 23, 2009
PI.64.1-2	October 23, 2009
PI.65.1-6	October 23, 2009
PI.66.1-6	October 23, 2009
PI.67.1-3	October 23, 2009
* PI.67.4	April 27, 2010
PI.67.5-10	October 23, 2009
* PI.67.11	April 27, 2010
PI.67.12-14	October 23, 2009
(blank tab)	

* = Revised, Added, or Deleted

BBJ Flight Crew Operations Manual

Page	Date	Page	Date
Volume 2		2 Air Systems (cont)	
1 Airplane General, Emergency Equipment, Doors, Windows (tab)		2.10.6	April 24, 2009
* 1.TOC.0.1-4	April 27, 2010	2.10.7-12	October 30, 2003
1.10.1-2	April 30, 2007	* 2.10.13-16	April 27, 2010
1.10.3	April 29, 2008	2.20.1	October 30, 2003
1.10.4-8	April 24, 2009	2.20.2	April 29, 2008
1.20.1-2	April 26, 2004	2.20.3-4	October 30, 2003
1.20.3-16	October 29, 2008	2.20.5	October 27, 2006
1.20.17	April 24, 2009	2.20.6	April 29, 2008
1.20.18	October 29, 2008	2.20.7-8	October 27, 2006
1.30.1-5	October 30, 2003	2.30.1	October 23, 2009
1.30.6	October 29, 2008	2.30.2-4	October 30, 2003
1.30.7	October 30, 2003	2.30.5	April 30, 2007
1.30.8	April 25, 2005	2.30.6	October 30, 2003
1.30.9	October 30, 2003	2.31.1	October 23, 2009
1.30.10	October 23, 2009	2.31.2-5	October 30, 2003
1.30.11	April 26, 2004	2.31.6	April 30, 2007
1.30.12	April 25, 2005	2.31.7-8	October 30, 2003
* 1.30.13-24	April 27, 2010	2.40.1-10	April 29, 2008
1.40.1-3	October 29, 2008	3 Anti-Ice, Rain (tab)	
1.40.4-5	October 23, 2009	3.TOC.0.1-2	April 29, 2008
1.40.6-7	April 24, 2009	3.10.1-2	October 27, 2006
1.40.8-10	October 29, 2008	* 3.10.3	April 27, 2010
1.40.11	October 23, 2009	3.10.4-6	October 30, 2003
1.40.12-14	April 24, 2009	3.20.1-2	April 29, 2008
* 1.40.15-40	April 27, 2010	3.20.3	October 27, 2006
2 Air Systems (tab)		3.20.4	April 30, 2007
2.TOC.0.1-4	April 29, 2008	3.20.5-6	April 29, 2008
2.10.1-4	October 30, 2003	3.20.7-8	October 30, 2003
2.10.5	April 26, 2004		

* = Revised, Added, or Deleted

Page	Date	Page	Date
4 Automatic Flight (tab)		5 Communications (tab)	
4.TOC.0.1-2	October 23, 2009	5.TOC.0.1-2	April 29, 2008
4.10.1-3	October 25, 2004	5.10.1	April 24, 2009
4.10.4-6	October 29, 2008	5.10.2-3	October 30, 2003
4.10.7-8	October 23, 2009	5.10.4	April 26, 2004
4.10.9-11	April 29, 2008	5.10.5	October 28, 2005
4.10.12-17	October 28, 2005	5.10.6-12	April 26, 2004
4.10.18	April 28, 2006	5.20.1-3	October 30, 2003
4.10.19-23	October 28, 2005	5.20.4	April 30, 2007
4.10.24	October 27, 2006	5.20.5-6	October 28, 2005
4.20.1	October 30, 2003	6 Electrical (tab)	
4.20.2-5	October 27, 2006	6.TOC.0.1-2	October 29, 2008
4.20.6-7	April 30, 2007	6.10.1	October 29, 2008
4.20.8	April 29, 2008	6.10.2-10	April 29, 2008
* 4.20.9	April 27, 2010	6.20.1	October 28, 2005
4.20.10-11	October 23, 2009	6.20.2-3	October 30, 2003
4.20.12-14	October 27, 2006	6.20.4	April 30, 2007
4.20.15	October 23, 2009	6.20.5-9	October 29, 2008
4.20.16	October 27, 2006	6.20.10-12	October 30, 2003
4.20.17-20	October 23, 2009	6.20.13	April 26, 2004
4.20.21-23	October 27, 2006	6.20.14	April 25, 2005
4.20.24	April 24, 2009	6.20.15-18	October 30, 2003
		7 Engines, APU (tab)	
		7.TOC.0.1-2	April 29, 2008
		7.11.1	October 30, 2003
		7.11.2	April 28, 2006
		7.11.3-7	April 29, 2008
		7.11.8	October 23, 2009
		7.11.9-20	April 29, 2008
		7.15.1-4	April 29, 2008
		7.15.5-8	October 30, 2003

* = Revised, Added, or Deleted

Copyright © The Boeing Company. See title page for details.

BBJ Flight Crew Operations Manual

Page	Date	Page	Date
7 Engines, APU (cont)		9 Flight Controls (cont)	
7.20.1-3	October 30, 2003	* 9.20.1-2	April 27, 2010
7.20.4	April 29, 2008	9.20.3-7	October 30, 2003
7.20.5-8	October 30, 2003	9.20.8	April 29, 2008
7.20.9-10	April 29, 2008	9.20.9-16	October 30, 2003
7.20.11-12	October 30, 2003	9.20.17	April 30, 2007
7.20.13	October 29, 2008	9.20.18	April 29, 2008
7.20.14	October 30, 2003	9.20.19-22	April 25, 2005
7.30.1	October 30, 2003	10 Flight Instruments, Displays (tab)	
7.30.2-3	October 28, 2005	* 10.TOC.0.1-6	April 27, 2010
7.30.4	April 30, 2007	10.11.1-8	October 30, 2003
8 Fire Protection (tab)		10.11.9	October 29, 2008
8.TOC.0.1-2	October 29, 2008	10.11.10	October 23, 2009
8.10.1	October 30, 2003	10.11.11-12	October 30, 2003
8.10.2-3	October 29, 2008	10.11.13-15	October 23, 2009
8.10.4	October 30, 2003	10.11.16	April 24, 2009
8.10.5	October 31, 2007	10.11.17-26	October 30, 2003
8.10.6	October 25, 2004	10.11.27-28	April 24, 2009
8.10.7	October 30, 2003	10.11.29-40	October 23, 2009
8.10.8	October 29, 2008	* 10.11.41	April 27, 2010
8.20.1-2	October 29, 2008	10.11.42-56	October 23, 2009
8.20.3	October 30, 2003	10.12.1-6	October 27, 2006
8.20.4-8	October 29, 2008	10.12.7	October 23, 2009
9 Flight Controls (tab)		10.12.8	October 27, 2006
* 9.TOC.0.1-2	April 27, 2010	10.12.9-10	October 31, 2007
9.10.1-9	October 30, 2003	10.12.11-12	October 27, 2006
9.10.10	October 23, 2009	10.12.13	April 30, 2007
9.10.11-12	October 29, 2008	10.12.14	October 27, 2006
* 9.10.13	April 27, 2010	10.16.1	October 30, 2003
9.10.14	April 24, 2009	10.16.2-3	October 31, 2007
9.10.15-16	October 29, 2008	* 10.16.4	April 27, 2010

* = Revised, Added, or Deleted

Page	Date	Page	Date
10 Flight Instruments, Displays (cont)		10 Flight Instruments, Displays (cont)	
10.16.5	October 23, 2009	10.43.1-4	October 30, 2003
10.16.6-21	October 30, 2003	10.65.1	October 29, 2008
* 10.16.22	April 27, 2010	10.65.2-6	April 24, 2009
10.17.1	October 30, 2003	10.65.7-8	October 29, 2008
10.17.2-3	April 24, 2009	* 10.65.9-34	April 27, 2010
10.17.4	October 27, 2006	* 10.65.35-36	Deleted
10.17.5-6	October 23, 2009	11 Flight Management, Navigation (tab)	
10.21.1	October 30, 2003	* 11.TOC.0.1-8	April 27, 2010
10.21.2-3	October 23, 2009	11.10.1	October 30, 2003
10.21.4-12	October 30, 2003	11.10.2-3	April 29, 2008
10.21.13-14	October 31, 2007	11.10.4-19	October 31, 2007
10.21.15	April 24, 2009	* 11.10.20-23	April 27, 2010
10.21.16	October 29, 2008	11.10.24	October 31, 2007
10.22.1-3	October 27, 2006	11.20.1-5	October 30, 2003
10.22.4	April 29, 2008	11.20.6	April 25, 2005
10.22.5-8	October 27, 2006	11.20.7	April 29, 2008
10.31.1	April 24, 2009	11.20.8	October 30, 2003
10.31.2	October 23, 2009	11.20.9-10	April 29, 2008
10.31.3-5	April 29, 2008	11.20.11-12	April 25, 2005
10.31.6	October 30, 2003	11.30.1	October 30, 2003
10.41.1	October 30, 2003	11.30.2	April 25, 2005
10.41.2-7	April 25, 2005	11.30.3-4	October 30, 2003
10.41.8-10	April 29, 2008	11.31.1-5	October 30, 2003
10.41.11	October 29, 2008	11.31.6-7	April 29, 2008
10.41.12-20	April 29, 2008	11.31.8	October 30, 2003
10.41.21	April 24, 2009	11.31.9	April 30, 2007
10.41.22	April 29, 2008	11.31.10-14	October 29, 2008
10.42.1-9	October 27, 2006	* 11.31.15-16	April 27, 2010
* 10.42.10-16	April 27, 2010	11.31.17	October 29, 2008
10.42.17-22	October 27, 2006	11.31.18	April 24, 2009

* = Revised, Added, or Deleted

BBJ Flight Crew Operations Manual

Page	Date	Page	Date
11 Flight Management, Navigation (cont)		11 Flight Management, Navigation (cont)	
11.31.19	October 23, 2009	11.42.1	October 30, 2003
11.31.20	April 24, 2009	11.42.2-11	October 25, 2004
11.31.21-22	April 29, 2008	11.42.12	October 27, 2006
11.31.23-24	April 24, 2009	11.42.13-15	April 29, 2008
11.31.25-26	October 23, 2009	11.42.16-33	October 27, 2006
11.31.27-40	April 24, 2009	11.42.34	April 30, 2007
11.32.1	October 30, 2003	11.42.35-40	October 27, 2006
11.32.2-6	October 29, 2008	11.42.41	April 24, 2009
11.33.1-30	October 30, 2003	11.42.42-43	October 27, 2006
11.40.1-3	October 30, 2003	11.42.44-46	October 23, 2009
11.40.4	April 29, 2008	11.43.1-7	April 24, 2009
11.40.5-6	October 30, 2003	11.43.8	April 25, 2005
11.40.7	October 27, 2006	11.43.9	October 28, 2005
11.40.8-15	October 30, 2003	11.43.10-12	April 30, 2007
11.40.16	April 25, 2005	11.43.13	April 25, 2005
11.40.17-20	October 30, 2003	11.43.14-15	October 27, 2006
11.40.21	October 25, 2004	11.43.16-19	October 31, 2007
11.40.22-28	October 30, 2003	11.43.20-34	October 27, 2006
11.40.29-30	April 29, 2008	11.50.1-4	October 30, 2003
* 11.40.31-44	April 27, 2010	11.50.5-12	April 26, 2004
11.40.45-46	April 24, 2009	11.60.1	October 27, 2006
* 11.40.47	April 27, 2010	11.60.2-4	April 29, 2008
11.40.48-52	April 24, 2009	* 11.60.5	April 27, 2010
11.41.1	April 24, 2009	11.60.6-32	April 29, 2008
11.41.2	October 23, 2009		
11.41.3-5	April 24, 2009		
11.41.6-10	October 31, 2007		
11.41.11-12	October 29, 2008		
* 11.41.13-17	April 27, 2010		
11.41.18-32	October 29, 2008		

* = Revised, Added, or Deleted

Page	Date	Page	Date
12 Fuel (tab)		14 Landing Gear (cont)	
* 12.TOC.0.1-2	April 27, 2010	14.20.7	October 28, 2005
12.10.1	October 29, 2008	14.20.8	April 24, 2009
12.10.2	October 25, 2004	15 Warning Systems (tab)	
12.10.3	October 28, 2005	15.TOC.0.1-2	October 29, 2008
* 12.10.4	April 27, 2010	15.10.1-2	October 30, 2003
12.10.5-6	April 29, 2008	15.10.3-10	October 31, 2007
12.10.7	October 25, 2004	* 15.10.11	April 27, 2010
12.10.8-11	October 29, 2008	15.10.12	October 31, 2007
12.10.12-14	October 25, 2004	15.20.1	October 27, 2006
12.20.1-2	April 24, 2009	15.20.2-3	October 29, 2008
* 12.20.3-12	April 27, 2010	15.20.4	October 30, 2003
13 Hydraulics (tab)		15.20.5	October 31, 2007
* 13.TOC.0.1-2	April 27, 2010	15.20.6	April 29, 2008
13.10.1	October 29, 2008	15.20.7	October 31, 2007
13.10.2	April 24, 2009	15.20.8	April 24, 2009
13.10.3-4	October 30, 2003	15.20.9-16	October 31, 2007
13.20.1	October 23, 2009	15.20.17-18	April 24, 2009
* 13.20.2-5	April 27, 2010	15.20.19-21	October 31, 2007
13.20.6-8	October 30, 2003	15.20.22-24	April 29, 2008
14 Landing Gear (tab)		(blank tab)	
14.TOC.0.1-2	April 29, 2008		
14.10.1-3	October 30, 2003		
14.10.4	April 24, 2009		
14.10.5-6	October 30, 2003		
14.10.7-8	October 29, 2008		
14.20.1-2	October 30, 2003		
* 14.20.3	April 27, 2010		
14.20.4	October 28, 2005		
14.20.5	April 29, 2008		
14.20.6	October 31, 2007		

* = Revised, Added, or Deleted

Intentionally
Blank

Preface**Bulletin Record****Chapter 0****Section 6****General**

The Boeing Company issues Flight Crew Operations Manual (FCOM) bulletins as required. Bulletins transmit temporary information which must be issued before the next formal revision to the FCOM or information of interest to all operators.

Bulletins are numbered sequentially for each operator. Each new bulletin is recorded in this record when received and filed as instructed. A bulletin may not apply to all airplane models. When appropriate, the next formal FCOM revision will include an updated bulletin record page.

Bulletin status is defined as follows:

- In Effect (IE) - the bulletin contains pertinent information not otherwise covered in the FCOM. The bulletin is active and should be retained in the manual.
- Incorporated (INC) - the bulletin operating information has been incorporated into the FCOM. The bulletin is active and should be retained in the manual.
- Cancelled (CANC) - the bulletin is no longer in active and should be removed from the FCOM. Previously cancelled bulletins are no longer listed in the Bulletin Record.

The record below should be accomplished by the person revising the material.

Number	Subject	Date	Status
BBJ-2R1	Emergency Airworthiness Directive 2002-08-52	May 1, 2002	INC
BBJ-3R1	Inflight Start EGT Display	Jun 30, 2004	IE
BBJ-6R1	Airworthiness Directive 2002-08-20, AMOC Letter 120S-02-907	Nov 1, 2002	IE
BBJ-10	AD-2002-19-51, Flight Control Modules	Sep 16, 2002	IE
BBJ-11R1	Flight Director and Autopilot Mode Entry Failures	Nov 1, 2004	IE
BBJ-12R1	Autopilot Altitude Acquire/Altitude Capture Anomaly	Nov 1, 2004	IE
BBJ-14R1	Target Speed Anomaly with Flaps Extended and VNAV Engaged	Nov 1, 2004	IE
BBJ-17R1	Flight Director Anomaly	Oct 21, 2005	IE

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Number	Subject	Date	Status
BBJ-19R1	Nuisance Stall Warning Stick Shaker Events	Mar 4, 2005	IE
BBJ-22R1	FMC Update 549849-015 U10.6 Prediction Errors	Apr 11, 2006	IE
BBJ-24	Flight Deck Display Unit Blanking Anomaly	Apr 1, 2006	IE
BBJ-26	Head-Up Display (HUD) Software Anomaly	Aug 4, 2006	IE
BBJ-27	FMC Update U10.6 Erroneous Holding Pattern	Nov 3, 2006	IE
BBJ-28R1	FMC Failure	Jan 17, 2007	IE
BBJ-29	Incorrect Implementation Of TO/GA To LNAV Feature With CDS Blockpoint 06 (BP06) and FMC Update U10.5 Or U10.5A Installed	Feb 12, 2007	IE
BBJ-30	Instrument Procedure, Transition Altitude and FMC Loss of Flight Information (FMC Update U10.6)	Mar 16, 2007	IE
BBJ-31	Center Tank Fuel System Changes	May 1, 2007	IE
BBJ-33	Arming VNAV on the Ground (FMC Update U10.7)	Jun 11, 2007	IE
BBJ-34	Unintentional Initiation of the FMC Engine Out Mode (FMC Update U10.7)	Jun 19, 2007	IE
BBJ-36	FMC Lockup with Selection of a Standard Instrument Departure (SID) on Missed Approach (FMC Update U10.0 and later)	Jan 28, 2008	IE
BBJ-37R1	Cabin Altitude Warning Indications and Procedures Briefing	Jun 8, 2009	IE
BBJ-38	Instrument Approach Procedures With An FMC Missed Approach Altitude Constraint Above 10,000 Feet MSL	Apr 27, 2009	IE
BBJ-40	VNAV Not to Be Used for Approach Operations with FMC Update U10.8 Installed	Jun 26, 2009	IE

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Preface - Bulletin Record

[illegible]

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Intentionally
Blank

Limitations**Chapter L****Table of Contents****Section 0**

Operating Limitations	L.10
General	L.10.1
Airplane General	L.10.1
Operational Limitations	L.10.1
Non-AFM Operational Information	L.10.1
Weight Limitations	L.10.2
Air Systems	L.10.3
Pressurization	L.10.3
Non-AFM Operational Information	L.10.3
Anti-Ice, Rain	L.10.4
Autopilot/Flight Director System	L.10.4
HUD System	L.10.5
Non-AFM Operational Information	L.10.5
Communications	L.10.5
Non-AFM Operational Information	L.10.5
Engines and APU	L.10.6
Engine Limit Display Markings	L.10.6
Engine Ignition	L.10.6
Reverse Thrust	L.10.6
APU	L.10.6
Non-AFM Operational Information	L.10.6
Fire Protection	L.10.7
Flight Controls	L.10.7
Non-AFM Operational Information	L.10.7
Flight Management, Navigation	L.10.8
Air Data Inertial Reference Unit (ADIRU)	L.10.8
[Option - Altimeters with QFE]	L.10.8
Look-Ahead Terrain Alerting (GPWS)	L.10.8
Non-AFM Operational Information	L.10.8
Fuel System	L.10.8
Fuel Balance	L.10.9

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Fuel Loading	L.10.9
Landing Gear	L.10.9
Non-AFM Operational Information	L.10.9

Limitations Operating Limitations

Chapter L Section 10

General

This chapter contains Airplane Flight Manual (AFM) limitations and Boeing recommended operating limitations. Limitations that are obvious, shown on displays or placards, or incorporated within an operating procedure are not contained in this chapter.

Airplane General

Operational Limitations

Runway slope	+/- 2%
Maximum Takeoff and Landing Tailwind Component	[Option - 15 kt tailwind] 15 knots
Maximum speeds	Observe gear and flap placards
Maximum Operating Altitude	41,000 ft
Maximum Takeoff and Landing Altitude	10,000 ft

[Option - Without polar navigation]

Maximum flight operating latitude – 82° North and 82° South, except for the region between 80° West and 130 ° West longitude, the maximum flight operating latitude is 70° North, and the region between 120° East and 160° East longitude, the maximum flight operating latitude is 60° South.

Installation of handle covers on the overwing exits must be verified prior to departure whenever passengers are carried.

[Option - Flight deck security door]

Verify that an operational check of the flight deck door access system has been accomplished according to approved procedures once each flight day.

Non–AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

On revenue flights, the escape slide retention bar (girt bar) must be installed during taxi, takeoff and landing.

[Option - Winglets]

The maximum demonstrated takeoff and landing crosswind is 33 knots.

Altitude Display Limits for RVSM Operations

Standby altimeters do not meet altimeter accuracy requirements of RVSM airspace.

The maximum allowable in-flight difference between Captain and First Officer altitude displays for RVSM operations is 200 feet.

The maximum allowable on-the-ground altitude display differences for RVSM operations are:

Field Elevation	Max Difference Between Captain & F/O	Max Difference Between Captain or F/O & Field Elevation
Sea Level to 5,000 feet	50 feet	75 feet
5,001 to 10,000 feet	60 feet	75 feet

Weight Limitations

[Option - Typical BBJ]

Weights	Pounds / Kilograms
Maximum Taxi Weight	171,500 / 77,791
Maximum Takeoff Weight	171,000 / 77,564
Maximum Landing Weight	134,000 / 60,781
Maximum Zero Fuel Weight	126,000 / 57,152

[Option - Typical BBJ]

Note: Minimum Takeoff Weight – 130,000 lbs. / 58,967 kgs
(125,000 lbs / 56,699 kgs with 26K Derate).

Lower minimum takeoff weights that account for the actual pressure altitude, outside air temperature and thrust rating may be obtained by using the Minimum Takeoff Weight tables in the Takeoff section of the Performance Dispatch (PD) chapter.

[\[Option - BBJ-2\]](#)

Weights	Pounds / Kilograms
Maximum Taxi Weight	174,700 / 79,242
Maximum Takeoff Weight	174,200 / 79,015
Maximum Landing Weight	146,300 / 66,360
Maximum Zero Fuel Weight	138,300 / 62,731

[\[Option - BBJ-3\]](#)

Weights	Pounds / Kilograms
Maximum Taxi Weight	188,200 / 85,366
Maximum Takeoff Weight	187,700 / 85,139
Maximum Landing Weight	157,300 / 71,350
Maximum Zero Fuel Weight	149,300 / 67,721

Air Systems

Pressurization

[\[Option - Normal Cabin Altitude\]](#)

The maximum cabin differential pressure (relief valves) is 9.1 psi.

[\[Option - Reduced Cabin Altitude\]](#)

The maximum cabin differential pressure (relief valves) is 9.74 psi.

Non-AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

With engine bleed air switches ON, do not operate the air conditioning packs in HIGH for takeoff, approach or landing.

Note: The fire protection Non-Normal procedures takes precedence over the statement regarding no air conditioning pack in HIGH during takeoff, approach, or landing. The CARGO FIRE and SMOKE/ FUMES REMOVAL checklists require the Operating PACK switch(es) HIGH. Switch(es) need to be placed in HIGH in order to open overboard exhaust valve (OEV).

Anti-Ice, Rain

Engine TAI must be on when icing conditions exist or are anticipated, except during climb and cruise below -40°C SAT.

[Option - 737-600/-700/-800 without stiffened elevator tabs]
[PRR 38506 or Service Bulletin 737-55A1080]

After any ground deicing/anti-icing of the horizontal stabilizer using Type II or Type IV fluids, airspeed must be limited to 270 KIAS until the crew has been informed that applicable maintenance procedures have been accomplished that would allow exceedance of 270 KIAS. Once the applicable maintenance procedures have been accomplished, exceeding 270 KIAS is permissible only until the next application of Type II or Type IV deicing/anti-icing fluids.

Autopilot/Flight Director System

Use of aileron trim with the autopilot engaged is prohibited.

Do not engage the autopilot for takeoff below 400 feet AGL.

[Option - FAA rules]

- Airplanes operating under FAA Rules: For single channel operation during approach, the autopilot shall not remain engaged below 50 feet AGL.

[Option - With polar navigation]

Do not use HDG SEL or ROLL CWS north of 89 degrees 30 minutes North latitude or south of 89 degrees 30 minutes South latitude.

[Option - JAA rules]

- Airplanes operating under JAA Rules: The autopilot must be disengaged before the airplane descends more than 50 feet below the minimum descent altitude (MDA) unless it is coupled to an ILS glide slope and localizer or in the go-around mode.
 - Airplanes operating under JAA Rules: The Minimum Use Height (MUH) for single channel autopilot operation is defined as 125 feet AGL.
- [Option - Typical, FAA rules, 15 kt tailwind]
- Airplanes operating under FAA Rules: Maximum allowable wind speeds when landing weather minima are predicated on autoland operations:
 - Headwind 25 knots
 - Crosswind 20 knots
 - Tailwind 15 knots.

Airplanes operating under JAA Rules: Maximum allowable wind speeds, when conducting a dual channel

Cat II landing predicated on autoland operations, are:

- Headwind 25 knots
- Crosswind 20 knots
- Tailwind 15 knots.
- Tailwind:

[Option - Typical 737-900, 15 kt tailwind]

Field Elevation	Flaps 30	Flaps 40
2000 feet or less	15 knots	15 knots
2001 to 4000 feet	10 knots	15 knots
4001 to 6000 feet	5 knots	15 knots
Greater than 6000 feet	0 knots	15 knots

Maximum and minimum glideslope angles for autoland are 3.25 degrees and 2.5 degrees respectively.

Autoland capability may only be used with flaps 30 or 40 and both engines operative.

[Option - Landing altitudes above 8,400 ft]

Autoland capability may only be used to runways at or below 8,400 ft pressure altitude.

HUD System

Non-AFM Operational Information

[Option - With HGS 4000 Phase I]

Note: The following items are not AFM limitations, but are provided for flight crew information.

AIII mode approach and landings are not approved for airplanes with Flight Dynamics Model 4000 Phase I HGS installed.

Communications

Flights predicated on the use of the following frequencies (MHz) are prohibited: 29.490, 29.489.

Non-AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

Use the VHF radio connected to the top of fuselage antenna for primary ATC communications on the ground.

Engines and APU

Engine Limit Display Markings

Maximum and minimum limits are red.

Caution limits are amber.

Engine Ignition

Engine ignition must be on for:

- takeoff
- landing
- operation in heavy rain
- anti-ice operation.

Reverse Thrust

Intentional selection of reverse thrust in flight is prohibited.

APU

[Option - Typical JAA]

- Airplanes operating under JAA Rules: APU bleed + electrical load: max alt 10,000 ft.

[Option - Typical FAA]

- Airplanes operating under FAA Rules: Inflight - APU bleed + electrical load: max alt 10,000 ft.

[Option - Typical FAA]

- Airplanes operating under FAA Rules: Ground only - APU bleed + electrical load: max alt 15,000 ft.

APU bleed: max alt 17,000 ft.

APU electrical load: max alt 41,000 ft.

Non-AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

APU bleed valve must be closed when:

- ground air connected and isolation valve open
- engine no. 1 bleed valve open
- isolation and engine no. 2 bleed valves open.

APU bleed valve may be open during engine start, but avoid engine power above idle.

Fire Protection

No cargo may be carried in the forward and/or aft cargo compartment if the corresponding cargo fire protection equipment is not operational.

Flight Controls

Max flap extension altitude is 20,000 ft.

Holding in icing conditions with flaps extended is prohibited.

Do not deploy the speedbrakes in flight at radio altitudes less than 1,000 feet.

[Option - 737-600/-700/-800 without stiffened elevator tabs]
(PRR 38506 or Service Bulletin 737-55A1080)

Do not operate the airplane at speeds in excess of 300 KIAS with speedbrakes extended.

WARNING: Use of speedbrakes at speeds in excess of 320 KIAS could result in a severe vibration, which, in turn, could cause extreme damage to the horizontal stabilizer.

In flight, do not extend the SPEED BRAKE lever beyond the FLIGHT DETENT.

Avoid rapid and large alternating control inputs, especially in combination with large changes in pitch, roll, or yaw (e.g. large side slip angles) as they may result in structural failure at any speed, including below VA.

[Option - JAA rules]

Airplanes operating under JAA rules: Flaps 15 normal landings are prohibited. A Flaps 15 landing may be performed when required by a non-normal procedure.

Non-AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

Alternate flap duty cycle:

- When extending or retracting flaps with the ALTERNATE FLAPS position switch, allow 15 seconds after releasing the ALTERNATE FLAPS position switch before moving the switch again to avoid damage to the alternate flap motor clutch.
- After a complete extend/retract cycle, i.e., 0 to 15 and back to 0, allow 5 minutes cooling before attempting another extension.

Flight Management, Navigation

Air Data Inertial Reference Unit (ADIRU)

ADIRU alignment must not be attempted at latitudes greater than 78 degrees 15 minutes.

[Option - Altimeters with QFE]

QFE Selection

The use of VNAV or LNAV with the altimeters referenced to QFE is prohibited.

[Option - Vertical Situation Display]

The use of the vertical situation display (VSD) with the altimeters referenced to QFE is prohibited.

A QFE altitude reference for the PFDs must be selected in the FMS whenever QFE is used instead of QNH.

Look-Ahead Terrain Alerting (GPWS)

[Option - With Enhanced GPWS]

Do not use the terrain display for navigation.

Do not use the look-ahead terrain alerting and terrain display functions:

- within 15 nm of takeoff, approach or landing at an airport not contained in the GPWS terrain database

Note: Refer to Honeywell Document 060-4267-000 for airports and runways contained in the installed GPWS terrain database.

Non-AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

Do not operate the weather radar in a hangar or within 50 feet of any personnel or a fuel spill.

Note: The hangar and personnel restrictions do not apply to the weather radar test mode.

Fuel System

Maximum tank fuel temperature: 49°C.

Minimum inflight tank fuel temperature: 3°C above the freezing point of the fuel being used or -43°C, whichever is higher.

Engaging the auxiliary fuel Maintenance (MAINT) Switch in flight is prohibited.

The center tank should be used until all auxiliary fuel has been transferred.

Fuel Balance

Lateral imbalance between main tanks 1 and 2 must be scheduled to be zero. Random fuel imbalance must not exceed 1000 lbs for taxi, takeoff, flight or landing.

Fuel Loading

Main tanks 1 and 2 must be full if center tank contains more than 1000 lbs.

The center and main fuel tanks must be scheduled to be full if the auxiliary fuel system is to be loaded or contains fuel.

Landing Gear

Operation with assumed temperature reduced takeoff thrust is not permitted with anti-skid inoperative.

[\[Option - JAA rules\]](#)

Airplanes operating under JAA Rules: Towing operations without the use of a tow bar is restricted to tow vehicles that are designed and operated to preclude damage to the airplane steering system or which provide a reliable and unmistakable warning when damage to the steering system may have occurred.

Non-AFM Operational Information

Note: The following items are not AFM limitations, but are provided for flight crew information.

Do not apply brakes until after touchdown.

Intentionally
Blank

Normal Procedures**Chapter NP****Table of Contents****Section 0**

Introduction	NP.11
General	NP.11.1
Normal Procedures Philosophy and Assumptions	NP.11.1
Configuration Check	NP.11.1
Crew Duties	NP.11.2
Control Display Unit (CDU) Procedures	NP.11.3
Autopilot Flight Director System (AFDS) Procedures	NP.11.3
Preflight and Postflight Scan Flow	NP.11.5
Areas of Responsibility - Captain as Pilot Flying or Taxiing	NP.11.6
Areas of Responsibility - First Officer as Pilot Flying or Taxiing	NP.11.7
Amplified Procedures	NP.21
Preliminary Preflight Procedure – Captain or First Officer	NP.21.1
CDU Preflight Procedure - Captain and First Officer	NP.21.3
Exterior Inspection	NP.21.6
Preflight Procedure – First Officer	NP.21.12
Preflight Procedure – Captain	NP.21.26
Before Start Procedure	NP.21.31
Pushback or Towing Procedure	NP.21.35
Engine Start Procedure	NP.21.36
Before Taxi Procedure	NP.21.38
Before Takeoff Procedure	NP.21.40
Before Takeoff Procedure [AD 2002-19-52 and AD 2002-24-51]	NP.21.41
Before Takeoff Procedure [Alternate Method of Compliance (AMOC) to AD 2002-24-51]	NP.21.42

Before Takeoff Procedure [Alternate Method of Compliance (AMOC) to AD 2001-08-24 and AD 2002-24-51 for Airplanes with Master Caution System Logic Change and Automatic Shutoff]	NP.21.43
Takeoff Procedure	NP.21.44
Takeoff Procedure	NP.21.47
Takeoff Flap Retraction Speed Schedule	NP.21.50
Climb and Cruise Procedure [AD 2002-19-52 and AD 2002-24-51]	NP.21.51
Climb and Cruise Procedure [Alternate Method of Compliance (AMOC) to AD 2002-24-51].	NP.21.53
Climb and Cruise Procedure [Alternate Method of Compliance (AMOC) to AD 2001-08-24 and AD 2002-24-51 for Airplanes with Master Caution System Logic Change and Automatic Shutoff].	NP.21.54
Descent Procedure [AD 2002-19-52 and AD 2002-24-51]	NP.21.56
Descent Procedure [Alternate Method of Compliance (AMOC) to AD 2002-24-51].	NP.21.57
Descent Procedure [Alternate Method of Compliance (AMOC) to AD 2001-08-24 and AD 2002-24-51 for Airplanes with Master Caution System Logic Change and Automatic Shutoff]	NP.21.59
Approach Procedure	NP.21.61
Flap Extension Schedule	NP.21.62
Landing Procedure - ILS	NP.21.63
Landing Procedure - Instrument Approach using VNAV	NP.21.64
Go-Around and Missed Approach Procedure	NP.21.66
Landing Roll Procedure	NP.21.68
After Landing Procedure	NP.21.69
Shutdown Procedure.	NP.21.70
Secure Procedure	NP.21.73

Normal Procedures**Chapter NP****Introduction****Section 11**

General

This chapter gives:

- an introduction to the normal procedures philosophy and assumptions
- step by step normal procedures.

Normal Procedures Philosophy and Assumptions

Normal procedures verify for each phase of flight that:

- the airplane condition is satisfactory
- the flight deck configuration is correct.

Normal procedures are done on each flight. Refer to the Supplementary Procedures (SP) chapter for procedures that are done as needed, for example the adverse weather procedures.

Normal procedures are used by a trained flight crew and assume:

- all systems operate normally
- the full use of all automated features (LNAV, VNAV, autoland, autopilot, and autothrottle).

Normal procedures also assume coordination with the ground crew before:

- hydraulic system pressurization, or
- flight control surface movement, or
- airplane movement.

Normal procedures do not include steps for flight deck lighting and crew comfort items.

Normal procedures are done by memory and scan flow. The panel illustration in this section shows the scan flow. The scan flow sequence may be changed as needed.

Configuration Check

It is the crew member's responsibility to verify correct system response. Before engine start, use system lights to verify each system's condition or configuration. After engine start, the master caution system alerts the crew to warnings or cautions away from the normal field of view.

If there is an incorrect configuration or response:

- verify that the system controls are set correctly
- check the respective circuit breaker as needed. Maintenance must first determine that it is safe to reset a tripped circuit breaker on the ground
- test the respective system light as needed

Before engine start, use individual system lights to verify the system status. If an individual system light indicates an improper condition:

- check the Dispatch Deviations Procedures Guide (DDPG) or the operator equivalent to decide if the condition has a dispatch effect
- decide if maintenance is needed

If, during or after engine start, a red warning or amber caution light illuminates:

- do the respective non-normal checklist (NNC)
- on the ground, check the DDPG or the operator equivalent

If, during recall, an amber caution illuminates and then extinguishes after a master caution reset:

- check the DDPG or the operator equivalent
- the respective non-normal checklist is not needed

Crew Duties

Preflight and postflight crew duties are divided between the captain and first officer. Phase of flight duties are divided between the Pilot Flying (PF) and the Pilot Monitoring (PM.)

Each crewmember is responsible for moving the controls and switches in their area of responsibility:

- the phase of flight areas of responsibility for both normal and non-normal procedures are shown in the Area of Responsibility illustrations in this section. Typical panel locations are shown
- the preflight and postflight areas of responsibility are defined by the "Preflight Procedure - Captain" and "Preflight Procedure - First Officer."

The captain may direct actions outside of the crewmember's area of responsibility.

The general PF phase of flight responsibilities are:

- taxiing
- flight path and airspeed control
- airplane configuration
- navigation.

The general PM phase of flight responsibilities are:

- checklist reading
- communications

-
- tasks asked for by the PF
 - monitoring taxiing, flight path, airspeed, airplane configuration and navigation.

PF and PM duties may change during a flight. For example, the captain could be the PF during taxi but be the PM during takeoff through landing.

Normal procedures show who does a step by crew position (C, F/O, PF, or PM):

- in the procedure title, or
- in the far right column, or
- in the column heading of a table

The mode control panel is the PF's responsibility. When flying manually, the PF directs the PM to make the changes on the mode control panel.

The captain is the final authority for all tasks directed and done.

Control Display Unit (CDU) Procedures

Before taxi, the captain or first officer may make CDU entries. The other pilot must verify the entries.

Make CDU entries before taxi or when stopped, when possible. If CDU entries must be made during taxi, the PM makes the entries. The PF must verify the entries before they are executed.

In flight, the PM usually makes the CDU entries. The PF may also make simple, CDU entries when the workload allows. The pilot making the entries executes the change only after the other pilot verifies the entries.

During high workload times, for example departure or arrival, try to reduce the need for CDU entries. Do this by using the MCP heading, altitude, and speed control modes. The MCP can be easier to use than entering complex route modifications into the CDU.

Autopilot Flight Director System (AFDS) Procedures

The crew must always monitor:

- airplane course
- vertical path
- speed

When selecting a value on the MCP, verify that the respective value changes on the flight instruments, as applicable.

The crew must verify manually selected or automatic AFDS changes. Use the FMA to verify mode changes for the:


- autopilot
- flight director
- autothrottle

During LNAV and VNAV operations, verify all changes to the airplane's:


- course
- vertical path
- thrust
- speed

Announcing changes on the FMA and thrust mode display when they occur is a good CRM practice.


Preflight and Postflight Scan Flow

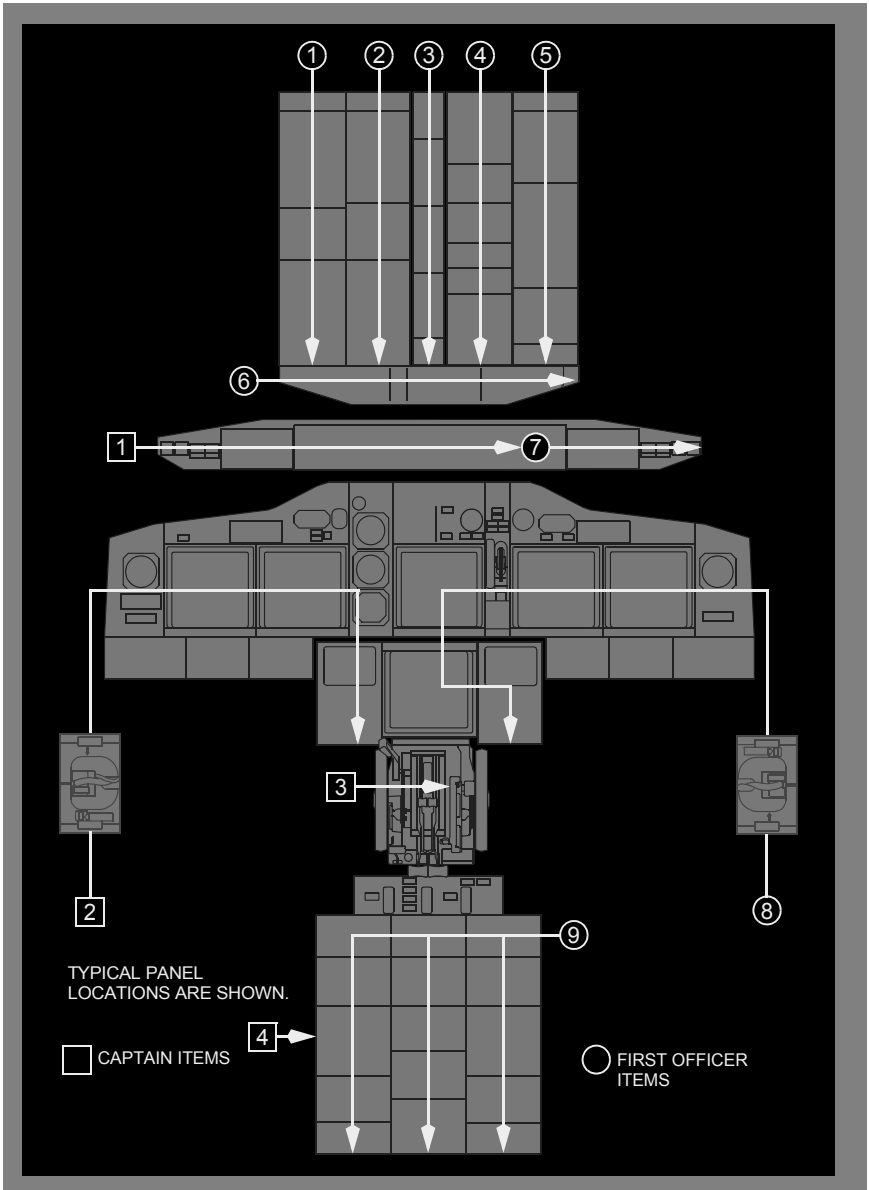

Areas of Responsibility - Captain as Pilot Flying or Taxiing

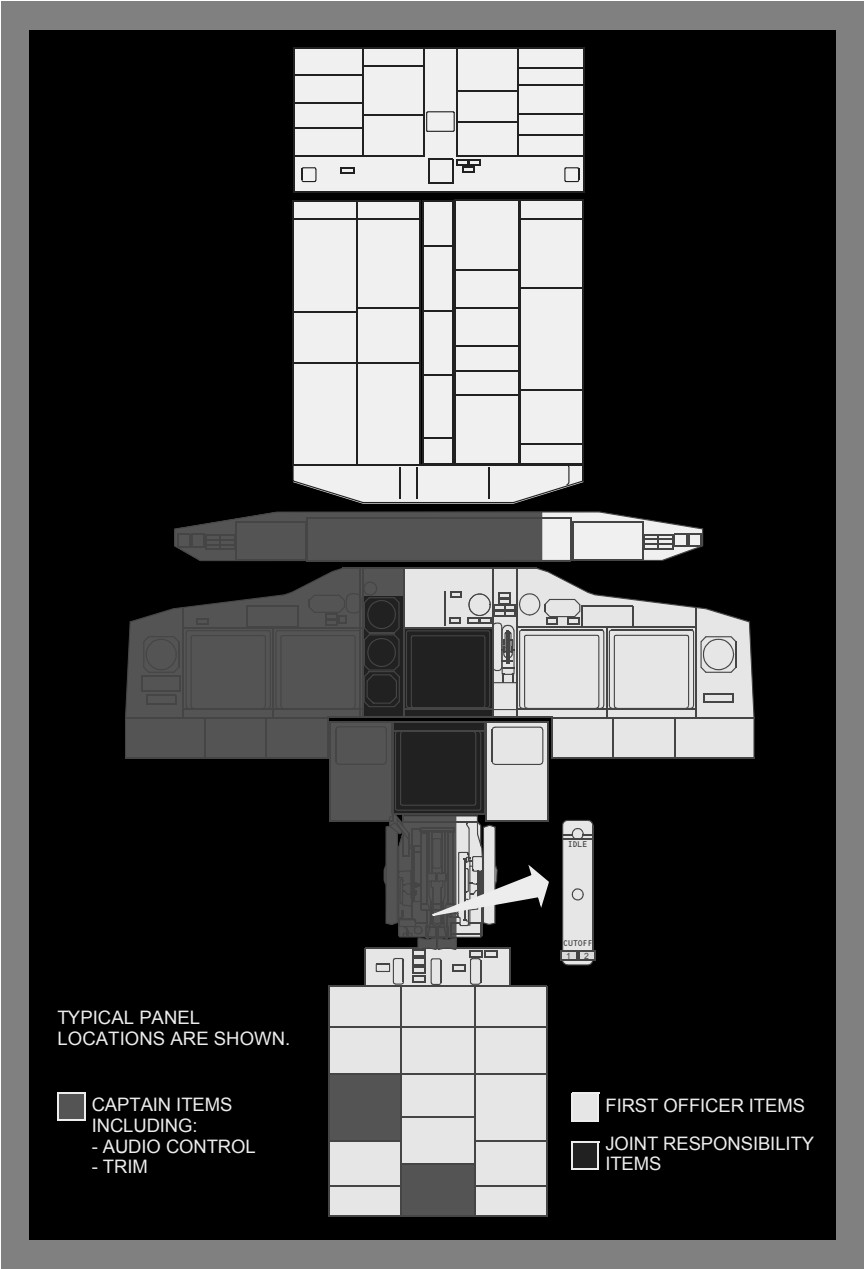

Areas of Responsibility - First Officer as Pilot Flying or Taxiing

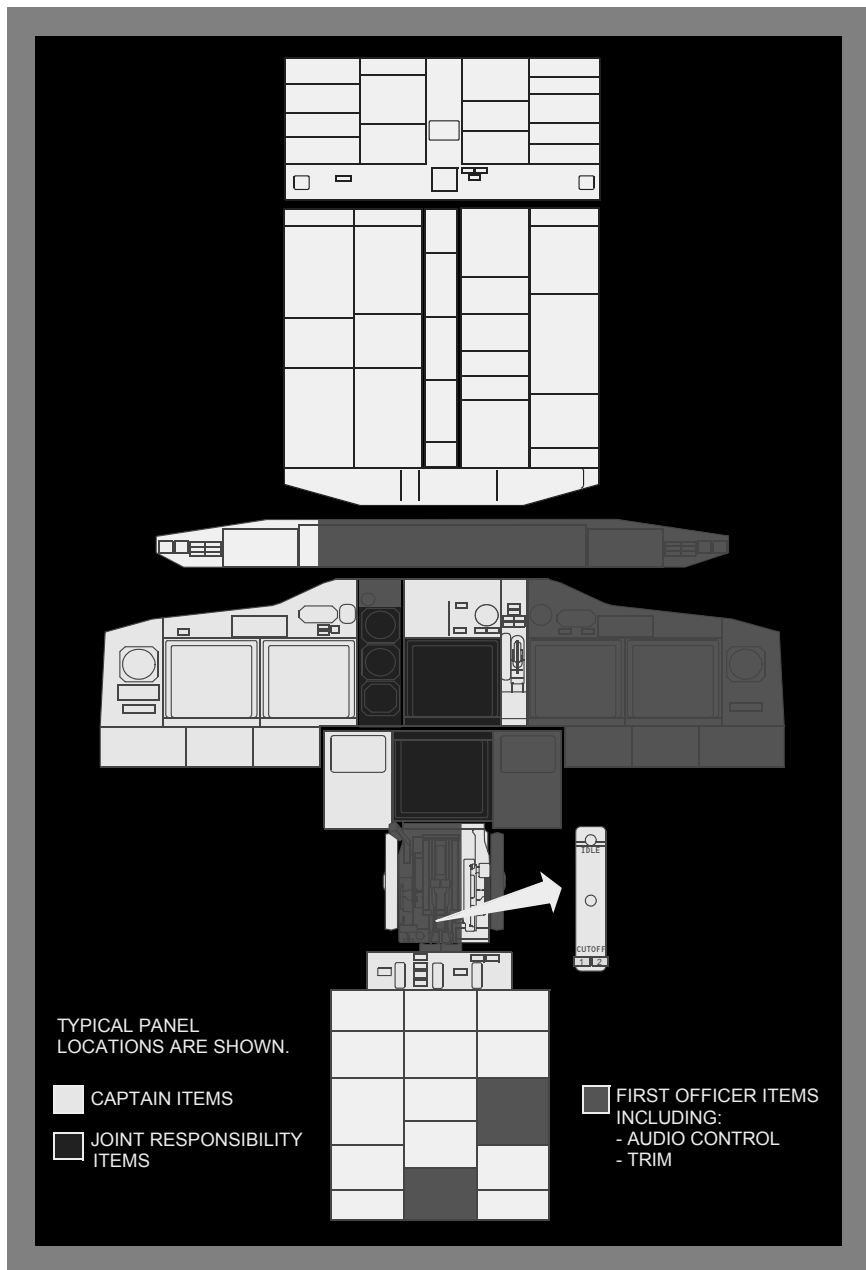

Intentionally
Blank

Preliminary Preflight Procedure – Captain or First Officer

The Preliminary Preflight Procedure assumes that the Electrical Power Up supplementary procedure is complete.

A full IRS alignment is recommended before each flight. If time does not allow a full alignment, do the Fast Realignment supplementary procedure.

IRS mode selectorsOFF, then NAV

Verify that the ON DC lights illuminate then extinguish.

Verify that the ALIGN lights are illuminated.

The UNABLE REQD NAV PERF-RNP message may show until IRS alignment is complete.

[Option]

VOICE RECORDER switchAs needed

Verify that the following are sufficient for flight:

- oxygen pressure
- hydraulic quantity
- engine oil quantity

Do the remaining actions after a crew change or maintenance action.

Maintenance documents Check

[\[Option\]](#)

FLIGHT DECK ACCESS SYSTEM switch Guard closed

Emergency equipment Check

Fire extinguisher – Checked and stowed

Crash axe – Stowed

Escape ropes – Stowed

Other needed equipment – Checked and stowed

PSEU light Verify extinguished

GPS light Verify extinguished

SERVICE INTERPHONE switch OFF

ENGINE panel Set

Verify that the REVERSER lights are extinguished.

Verify that the ENGINE CONTROL lights are extinguished.

EEC switches – ON

Oxygen panel Set

Note: PASSENGER OXYGEN switch activation causes
deployment of the passenger oxygen masks.

PASSENGER OXYGEN switch - Guard closed

Verify that the PASS OXY ON light is extinguished.

Verify pressure meets dispatch requirements.

Landing gear indicator lights Verify illuminated

AUXILIARY FUEL BLEED AIR panel Set

BLEED AIR switches – OFF

GROUND TRANSFER switch – OFF

Flight recorder switch Guard closed

Circuit breakers (P6 panel)	Check
Manual gear extension access door	Closed
Circuit breakers (control stand, P18 panel)	Check
Parking brake	As needed
Set the parking brake if brake wear indicators will be checked during the exterior inspection.	

CDU Preflight Procedure - Captain and First Officer

Start the CDU Preflight Procedure anytime after the Preliminary Preflight Procedure. The Initial Data and Navigation Data entries must be complete before the flight instrument check during the Preflight Procedure. The Performance Data entries must be complete before the Before Start Checklist.

The captain or first officer may make CDU entries. The other pilot must verify the entries.

Enter data in all the boxed items on the following CDU pages.

Enter data in the dashed items or modify small font items that are listed in this procedure. Enter or modify other items at pilot's discretion.

Failure to enter enroute winds can result in flight plan time and fuel burn errors.

Initial DataSet

IDENT page:

Verify that the MODEL is correct.

Verify that the ENG RATING is correct.

Verify that the navigation data base ACTIVE date range is current.

POS INIT page:

Verify that the time is correct.

Enter the present position on the SET IRS POS line. Use the most accurate latitude and longitude.

Navigation Data Set

ROUTE page:

Enter the ORIGIN.

Enter the route.

Enter the FLIGHT NUMBER.

Activate and execute the route.

DEPARTURES page:

Select the runway and departure routing.

Execute the runway and departure routing.

LEGS page:

Verify or enter the correct RNP for the departure.

Verify that the route is correct on the RTE pages. Check the LEGS pages as needed to ensure compliance with the flight plan.

Performance Data Set

PERF INIT page:

CAUTION: Do not enter the ZFW into the GW boxes. The FMC will calculate performance data with significant errors.

Enter the ZFW.

Verify that the FUEL on the CDU, the dispatch papers, and the fuel quantity indicators agree.

If refueling is not complete, enter the PLAN trip fuel as needed.

Verify that the fuel is sufficient for flight.

Verify that the gross weight and cruise CG (GW/CRZ CG) on the CDU and the dispatch papers agree.

Thrust mode display:

[Option - Aspirated TAT]

Verify that TO shows.

[Option - FMC U 10.1 and later]

N1 LIMIT page:

Select an assumed temperature, or a fixed derate takeoff, or both as needed.

Select a full or a derated climb thrust as needed.

[Option - FMC U 10.1 and later]

TAKEOFF REF page:

Make data entries on page 2/2 before page 1/2.

Enter the CG.

Verify that a trim value is shown.

Select or enter the takeoff V speeds.

[Option – With automatic thrust reduction after takeoff]

Verify or enter a thrust reduction altitude.

Verify that the preflight is complete.

Exterior Inspection

Before each flight the captain, first officer, or maintenance crew must verify that the airplane is satisfactory for flight.


Items at each location may be checked in any sequence.

Use the detailed inspection route below to check that:

- the surfaces and structures are clear, not damaged, not missing parts and there are no fluid leaks
- the tires are not too worn, not damaged, and there is no tread separation
- the gear struts are not fully compressed
- the engine inlets and tailpipes are clear, the access panels are secured, the exterior is not damaged, and the reversers are stowed
- the doors and access panels that are not in use are latched
- the probes, vents, and static ports are clear and not damaged
- the skin area adjacent to the pitot probes and static ports is not wrinkled
- the antennas are not damaged
- the light lenses are clean and not damaged

For cold weather operations see the Supplementary Procedures.

Inspection Route

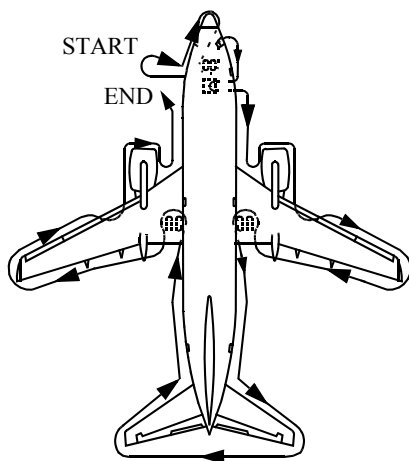

Left Forward Fuselage

Probes, sensors, ports, vents, and drains (as applicable) Check

Doors and access panels (not in use) Latched

Nose

Radome Check

Conductor straps - Secure

Forward E and E door Secure

Nose Wheel Well

Tires and wheels Check

Exterior light Check

Gear strut and doors Check

Nose wheel steering assembly Check

Nose gear steering lockout pin As needed

Gear pin As needed

Nose wheel spin brake (snubbers) In place

Right Forward Fuselage

Probes, sensors, ports, vents, and drains (as applicable) Check

Oxygen pressure relief green disc In place

Doors and access panels (not in use) Latched

Right Wing Root, Pack, and Lower Fuselage

Ram air deflector door Extended

Pack and pneumatic access doors Secure

Probes, sensors, ports, vents, and drains (as applicable) Check

Exterior lights Check

Leading edge flaps Check

Number 2 Engine

Access panels Latched

Probes, sensors, ports, vents, and drains (as applicable)	Check
Fan blades, probes, and spinner	Check
Thrust reverser	Stowed
Exhaust area and tailcone	Check

Right Wing and Leading Edge

Access panels	Latched
Leading edge flaps and slats	Check
Fuel measuring sticks	Flush and secure
Wing Surfaces	Check
Fuel tank vent	Check

Right Wing Tip and Trailing Edge

Position and strobe lights	Check
Static discharge wicks	Check
Aileron and trailing edge flaps	Check

Right Main Gear

Tires, brakes and wheels	Check
--------------------------------	-------

Verify that the wheel chocks are in place as needed.

If the parking brake is set, the brake wear indicator pins must extend out of the guides.

Gear strut, actuators, and doors	Check
Hydraulic lines	Secure
Gear pin	As needed

Right Main Wheel Well

APU FIRE CONTROL handle	Up
-------------------------------	----

Wheel well Check

Right Aft Fuselage

Doors and access panels (not in use) Latched

Negative pressure relief door Closed

Outflow valve Check

Probes, sensors, ports, vents, and drains (as applicable) Check

APU air inlet Open

Tail

Vertical stabilizer and rudder Check

Elevator feel probes Check

[\[737-800/900\]](tel:737-800-900)

Tail skid Check

Verify that the tail skid is not damaged.

Horizontal stabilizer and elevator Check

Static discharge wicks Check

Strobe light Check

APU cooling air inlet and exhaust outlet Check

Left Aft Fuselage

Doors and access panels (not in use) Latched

Probes, sensors, ports, vents, and drains (as applicable) Check

Left Main Gear

Tires, brakes and wheels Check

Verify that the wheel chocks are in place as needed.

If the parking brake is set, the brake wear indicator pins must extend out of the guides.

Gear strut, actuators, and doors Check

Hydraulic lines Secure

Gear pin As needed

Left Main Wheel Well

Wheel well Check

Engine fire bottle pressure Check

Left Wing Tip and Trailing Edge

Aileron and trailing edge flaps Check

Static discharge wicks Check

Position and strobe lights Check

Left Wing and Leading Edge

Fuel tank vent Check

Wing Surfaces Check

Fuel measuring sticks Flush and secure

Leading edge flaps and slats Check

Access panels Latched

Number 1 Engine

Exhaust area and tailcone Check

Thrust reverser Stowed

Fan blades, probes, and spinner Check

Probes, sensors, ports, vents, and drains (as applicable) Check

Access panels Latched

Left Wing Root, Pack, and Lower Fuselage

Leading edge flaps Check

Probes, sensors, ports, vents, and drains (as applicable) Check

Exterior lights Check

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

**Normal Procedures -
Amplified Procedures**

Pack and pneumatic access doors Secure
Ram air deflector door Extended

Preflight Procedure – First Officer

The first officer normally does this procedure. The captain may do this procedure as needed.

Flight control panel Check

FLIGHT CONTROL switches – Guards closed

Verify that the flight control LOW PRESSURE lights are illuminated.

Flight SPOILER switches – Guards closed

YAW DAMPER switch – ON

Verify that the YAW DAMPER light is extinguished.

Verify that the standby hydraulic LOW QUANTITY light is extinguished.

Verify that the standby hydraulic LOW PRESSURE light is extinguished.

[Option - RSEP airplanes]

Verify that the STBY RUD ON light is extinguished.

ALTERNATE FLAPS master switch – Guard closed

ALTERNATE FLAPS position switch – OFF

Verify that the FEEL DIFF PRESS light is extinguished.

Verify that the SPEED TRIM FAIL light is extinguished.

Verify that the MACH TRIM FAIL light is extinguished.

Verify that the AUTO SLAT FAIL light is extinguished.

NAVIGATION panel Set

VHF NAV transfer switch – NORMAL

IRS transfer switch – NORMAL

[Option]

FMC transfer switch – NORMAL

DISPLAYS panelSet

SOURCE selector – AUTO

CONTROL PANEL select switch – NORMAL

Fuel panelSet

Verify that the ENG VALVE CLOSED lights are illuminated dim.

Verify that the SPAR VALVE CLOSED lights are illuminated dim.

Verify that the FILTER BYPASS lights are extinguished.

CROSSFEED selector – Closed

Verify that the VALVE OPEN light is extinguished.

FUEL PUMP switches – OFF

Verify that the center tank fuel pump LOW PRESSURE lights are extinguished.

Verify that the main tank fuel pump LOW PRESSURE lights are illuminated.

AUXILIARY FUEL TRANSFER valve switches OFF

Electrical panel Set

BATTERY switch – Guard closed

[Option]

CAB/UTIL power switch – ON

[Option]

IFE/PASS SEAT power switch – ON

STANDBY POWER switch – Guard closed

Verify that the STANDBY PWR OFF light is extinguished.

Verify that the BAT DISCHARGE light is extinguished.

Verify that the TR UNIT light is extinguished.

Verify that the ELEC light is extinguished.

Generator drive DISCONNECT switches – Guards closed

Verify that the DRIVE lights are illuminated.

BUS TRANSFER switch – Guard closed

Verify that the TRANSFER BUS OFF lights are extinguished.

Verify that the SOURCE OFF lights are extinguished.

Verify that the GEN OFF BUS lights are illuminated.

Overheat and fire protection panel Check

Do this check if the flight crew did not do the Electrical Power Up supplementary procedure. This check is needed once per flight day.

Verify that the engine No. 1, APU, and engine No. 2 fire switches are in.

Alert ground personnel before the following test is accomplished:

OVERHEAT DETECTOR switches – NORMAL

TEST switch – Hold to FAULT/INOP

Verify that the MASTER CAUTION lights are illuminated.

Verify that the OVHT/DET annunciator is illuminated.

Verify that the FAULT light is illuminated.

If the FAULT light fails to illuminate, the fault monitoring system is inoperative.

Verify that the APU DET INOP light is illuminated.

Do not run the APU if the APU DET INOP light does not illuminate.

Note: The fire warning light flashes and the horn sounds on the APU ground control panel when this test is done with the APU running. This can be mistaken by the ground crew as an APU fire.

TEST switch – Hold to OVHT/FIRE

Verify that the fire warning bell sounds.

Verify that the master FIRE WARN lights are illuminated.

Verify that the MASTER CAUTION lights are illuminated.

Verify that the OVHT/DET annunciator is illuminated.

Master FIRE WARN light – Push

Verify that the master FIRE WARN lights are extinguished.

Verify that the fire warning bell cancels.

Verify that the engine No. 1, APU and engine No. 2 fire switches stay illuminated.

Verify that the ENG 1 OVERHEAT and ENG 2 OVERHEAT lights stay illuminated.

Verify that the WHEEL WELL light stays illuminated.

EXTINGUISHER TEST switch – Check

TEST switch – Position to 1 and hold.

Verify that the three green extinguisher test lights are illuminated.

TEST switch – Release

Verify that the three green extinguisher test lights are extinguished.

Repeat for test position 2.

APU switch (as needed) START

Note: If extended APU operation is needed on the ground, position an AC operated fuel pump ON. If fuel is loaded in the center tank, position the left center tank fuel pump switch ON to prevent a fuel imbalance before takeoff.

CAUTION: Center tank fuel pump switches should be positioned ON only if the fuel quantity in the center tank exceeds 1000 lbs.

CAUTION: Do not operate the center tank fuel pumps with the flight deck unattended.

When the APU GEN OFF BUS light is illuminated:

APU GENERATOR bus switches – ON

Verify that the SOURCE OFF lights are extinguished.

Verify that the TRANSFER BUS OFF lights are extinguished.

EQUIPMENT COOLING switches NORM

Verify that the OFF lights are extinguished.

EMERGENCY EXIT LIGHTS switch Guard closed

Verify that the NOT ARMED light is extinguished.

Passenger signs Set

NO SMOKING switch – AUTO or ON

FASTEN BELTS switch – AUTO or ON

Windshield WIPER selectors PARK

Verify that the windshield wipers are stowed.

WINDOW HEAT switches ON

Position switches ON at least 10 minutes before takeoff.

Verify that the OVERHEAT lights are extinguished.

[\[Option\]](#)

Verify that the ON lights are illuminated (except at high ambient temperatures.)

PROBE HEAT switches OFF

Verify that all lights are illuminated.

WING ANTI-ICE switch OFF

Verify that the VALVE OPEN lights are extinguished.

ENGINE ANTI-ICE switches OFF

Verify that the COWL ANTI-ICE lights are extinguished.

Verify that the COWL VALVE OPEN lights are extinguished.

Hydraulic panel Set

ENGINE HYDRAULIC PUMPS switches – ON

Verify that the LOW PRESSURE lights are illuminated.

ELECTRIC HYDRAULIC PUMPS switches – OFF

Verify that the OVERHEAT lights are extinguished.

Verify that the LOW PRESSURE lights are illuminated.

Air conditioning panel Set

AIR TEMPERATURE source selector – As needed

[737-800/900]

TRIM AIR switch – ON

[737-600/700]

Verify that the DUCT OVERHEAT lights are extinguished.

[737-800/900]

Verify that the ZONE TEMP lights are extinguished.

Temperature selectors – As needed

Verify that the RAM DOOR FULL OPEN lights are illuminated.

[737-600/700]

RECIRCULATION FAN switch – AUTO

[737-800/900]

RECIRCULATION FAN switches – AUTO

Air conditioning PACK switches – AUTO or HIGH

ISOLATION VALVE switch – OPEN

Engine BLEED air switches – ON

APU BLEED air switch – ON

Verify that the DUAL BLEED light is illuminated.

[737-600/700]

Verify that the PACK TRIP OFF lights are extinguished.

[737-800/900]

Verify that the PACK lights are extinguished.

Verify that the WING–BODY OVERHEAT lights are extinguished.

Verify that the BLEED TRIP OFF lights are extinguished.

Cabin pressurization panel Set

Verify that the AUTO FAIL light is extinguished.

Verify that the OFF SCHED DESCENT light is extinguished.

FLIGHT ALTITUDE indicator – Cruise altitude

LANDING ALTITUDE indicator – Destination field elevation

Pressurization mode selector – AUTO

Verify that the ALTN light is extinguished.

Verify that the MANUAL light is extinguished.

Lighting panelSet

LANDING light switches – RETRACT and OFF

RUNWAY TURNOFF light switches – OFF

TAXI light switch – OFF

Ignition select switch IGN L or R

Alternate the ignition select switch position on subsequent starts.

[Without automatic ignition]

ENGINE START switches OFF

Lighting panelSet

[Option]

LOGO light switch – As needed

POSITION light switch – As needed

ANTI-COLLISION light switch – OFF

WING illumination switch – As needed

WHEEL WELL light switch – As needed

Mode control panelSet

COURSE(S) – Set

FLIGHT DIRECTOR switch – ON

Move the switch for the pilot flying to ON first.

EFIS control panel Set

MINIMUMS reference selector – RADIO or BARO

MINIMUMS selector – Set decision height or altitude reference

[\[Option\]](#)

FLIGHT PATH VECTOR switch – As needed

METERS switch – As needed

BAROMETRIC reference selector – IN or HPA

BAROMETRIC selector – Set local altimeter setting

VOR/ADF switches – As needed

Mode selector – MAP

CENTER switch – As needed

Range selector – As needed

TRAFFIC switch – As needed

WEATHER RADAR – Off

Verify that the weather radar indications are not shown on the
MAP.

Map switches – As needed

Oxygen Test and set

[\[Chemical passenger oxygen\]](#)

Crew oxygen pressure – Check

Verify that the pressure is sufficient for dispatch.

Oxygen mask – Stowed and doors closed

RESET/TEST switch – Push and hold

Verify that the yellow cross shows momentarily in the flow
indicator.

EMERGENCY/Test selector – Push and hold

Continue to hold the RESET/TEST switch down and push the EMERGENCY/Test selector for 5 seconds. Verify that the yellow cross shows continuously in the flow indicator.

Verify that the crew oxygen pressure does not decrease more than 100 psig.

If the oxygen cylinder valve is not in the full open position, pressure can:

- decrease rapidly, or
- decrease more than 100 psig, or
- increase slowly back to normal.

Release the RESET/TEST switch and the EMERGENCY/Test selector. Verify that the yellow cross does not show in the flow indicator.

Normal/100% switch – 100%

[Option - Electronic Flight Bag]

ELECTRONIC FLIGHT BAGSet

ClockSet

TIME/DATE pushbutton - UTC time

Display select panelSet

MAIN PANEL DISPLAY UNITS selector – NORM

LOWER DISPLAY UNIT selector – NORM

TAKEOFF CONFIG light

(if installed and operative) Verify extinguished

CABIN ALTITUDE light

(if installed and operative) Verify extinguished

Disengage light TEST switchHold to 1

Verify that the A/P light is illuminated steady amber.

Verify that the A/T light is illuminated steady amber.

Verify that the FMC light is illuminated steady amber.

Disengage light TEST switch Hold to 2

Verify that the A/P light is illuminated steady red.

Verify that the A/T light is illuminated steady red.

Verify that the FMC light is illuminated steady amber.

Do the Initial Data and Navigation Data steps from the CDU Preflight Procedure and verify that the IRS alignment is complete before checking the flight instruments.

Flight instruments Check

Verify that the flight instrument indications are correct.

Verify that only these flags are shown:

- TCAS OFF
- NO VSPD until V-speeds are selected
- expected RMI flags.

Verify that the flight mode annunciations are correct:

- autothrottle mode is blank
- roll mode is blank
- pitch mode is blank
- AFDS status is FD.

Select the map mode.

GROUND PROXIMITY panel Check

FLAP INHIBIT switch – Guard closed

GEAR INHIBIT switch – Guard closed

TERRAIN INHIBIT switch – Guard closed

Verify that the GROUND PROXIMITY INOP light is extinguished.

Landing gear panel Set

LANDING GEAR lever – DN

Verify that the green landing gear indicator lights are illuminated.

Verify that the red landing gear indicator lights are extinguished.

AUTO BRAKE select switch RTO

Verify that the AUTO BRAKE DISARM light is extinguished

ANTISKID INOP light Verify extinguished

Engine display control panel Set

N1 SET selector – AUTO

SPEED REFERENCE selector – AUTO

FUEL FLOW switch – RATE

Move switch to RESET, then RATE.

Engine instruments Check

Verify that the primary and secondary engine indications show existing conditions.

Verify that no exceedance is shown.

[\[Option\]](#)

Verify that the hydraulic quantity indications do not show RF.

CARGO FIRE panel Check

This check is needed once per flight day or following a flight crew change.

DETECTOR SELECT switches – As needed

DETECTOR SELECT FWD switch position:

Fuel Cells In Forward Cargo Compartment	DETECTOR SELECT Switch Position
0, 1	NORM
2, 3, 4	B

DETECTOR SELECT AFT switch position:

Fuel Cells In Aft Cargo Compartment	DETECTOR SELECT Switch Position
0, 1, 2, 3, 4	NORM
5	A

TEST switch – Push

Verify that the fire warning bell sounds.

Verify that the master FIRE WARN lights are illuminated.

Master FIRE WARN light – Push

Verify that the master FIRE WARN lights are extinguished.

Verify that the fire warning bell cancels.

Verify that the FWD and AFT lights stay illuminated.

Verify that the DETECTOR FAULT light stays extinguished.

Verify that the green EXTINGUISHER test lights stay illuminated.

Verify that the DISCH light stays illuminated.

[Option]

HUD system As needed

[Option]

Radio tuning panel Set

**WARNING: Do not key HF radio while airplane is being fueled.
Injury to personnel or fire may result.**

Verify that the OFF light is extinguished.

VHF NAVIGATION radiosSet for departure

Audio control panelSet

ADF radiosSet

Transponder panelSet

STABILIZER TRIM override switchGuard closed

**WARNING: Do not put objects between the seat and the aisle
stand. Injury can occur when the seat is adjusted.**

Seat Adjust

Adjust the seat for optimum eye reference.

Verify a positive horizontal (fore and aft) seat lock.

Rudder pedals Adjust

Adjust the rudder pedals to allow full rudder pedal and brake pedal
movement.

Seat belt and shoulder harness Adjust

Do the PREFLIGHT checklist on the captain's command.

Preflight Procedure – Captain

The captain normally does this procedure. The first officer may do this procedure if needed.

Lights Test

Master LIGHTS TEST and DIM switch – TEST

The fire warning lights are not checked during this test. Use individual test switches or push to test features to check lights which do not illuminate during the light test. Use scan flow to verify that all other lights are flashing or illuminated. Verify that all system annunciator panel lights are illuminated.

Master LIGHTS TEST and DIM switch – As needed

EFIS control panel Set

MINIMUMS reference selector – RADIO or BARO

MINIMUMS selector – Set decision height or altitude reference

[\[Option\]](#)

FLIGHT PATH VECTOR switch – As needed

METERS switch – As needed

BAROMETRIC reference selector – IN or HPA

BAROMETRIC selector – Set local altimeter setting

VOR/ADF switches – As needed

Mode selector – MAP

CENTER switch – As needed

Range selector – As needed

TRAFFIC switch – As needed

WEATHER RADAR – Off

Verify that the weather radar indications are not shown on the MAP.

Map switches – As needed

Mode control panelSet

COURSE(S) – Set

FLIGHT DIRECTOR switch – ON

Move the switch for the pilot flying to ON first.

Bank angle selector – As needed

Autopilot DISENGAGE bar – UP

OxygenTest and set

[\[Chemical passenger oxygen\]](#)

Crew oxygen pressure – Check

Verify that the pressure is sufficient for dispatch.

Oxygen mask – Stowed and doors closed

RESET/TEST switch – Push and hold

Verify that the yellow cross shows momentarily in the flow indicator.

EMERGENCY/Test selector – Push and hold

Continue to hold the RESET/TEST switch down and push the EMERGENCY/Test selector for 5 seconds. Verify that the yellow cross shows continuously in the flow indicator.

Verify that the crew oxygen pressure does not decrease more than 100 psig.

If the oxygen cylinder valve is not in the full open position, pressure can:

- decrease rapidly, or
- decrease more than 100 psig, or
- increase slowly back to normal.

Release the RESET/TEST switch and the EMERGENCY/Test selector. Verify that the yellow cross does not show in the flow indicator.

Normal/100% switch – 100%

[\[Option - Electronic Flight Bag\]](#)

ELECTRONIC FLIGHT BAGSet

-
- Clock Set
TIME/DATE pushbutton - UTC time
- NOSE WHEEL STEERING switch Guard closed
- Display select panel Set
MAIN PANEL DISPLAY UNITS selector – NORM
LOWER DISPLAY UNIT selector – NORM
- TAKEOFF CONFIG light
(if installed and operative) Verify extinguished
- CABIN ALTITUDE light
(if installed and operative) Verify extinguished
- Disengage light TEST switch Hold to 1
Verify that the A/P light is illuminated steady amber.
Verify that the A/T light is illuminated steady amber.
Verify that the FMC light is illuminated steady amber.
- Disengage light TEST switch Hold to 2
Verify that the A/P light is illuminated steady red.
Verify that the A/T light is illuminated steady red.
Verify that the FMC light is illuminated steady amber.
- STAB OUT OF TRIM light Verify extinguished
- Do the Initial Data and Navigation Data steps from the CDU Preflight Procedure and verify that the IRS alignment is complete before checking the flight instruments.
- Flight instruments Check
Verify that the flight instrument indications are correct.
Verify that only these flags are shown:
- TCAS OFF
 - NO VSPD until V-speeds are selected
 - expected RMI flags

Verify that the flight mode annunciations are correct:

- autothrottle mode is blank
- roll mode is blank
- pitch mode is blank
- AFDS status is FD

Select the map mode.

[Option]

Standby instruments Check

Standby horizon – Set

Gyro caging control – Pull, then release

Approach mode selector – As needed

Verify that the flight instrument indications are correct.

Verify that no flags are shown.

Standby altimeter – Set

Verify that the flight instrument indications are correct.

Verify that no flags are shown.

[Option]

Standby RMI Set

Select either VOR or ADF.

SPEED BRAKE lever DOWN detent

Verify that the SPEED BRAKE ARMED light is extinguished.

Verify that the SPEED BRAKE DO NOT ARM light is extinguished.

Verify that the SPEEDBRAKES EXTENDED light is extinguished.

Reverse thrust levers Down

Forward thrust levers Closed

FLAP lever Set

Set the flap lever to agree with the flap position.

Parking brake Set

Verify that the parking brake warning light is illuminated

Note: Do not assume that the parking brake will prevent airplane movement. Accumulator pressure can be insufficient.

Engine start levers CUTOFF

STABILIZER TRIM cutout switches NORMAL

[Option]

HUD system As needed

[Option]

Radio tuning panel Set

WARNING: Do not key the HF radio when the airplane is being refueled. Injury to personnel or fire can occur.

Verify that the OFF light is extinguished.

VHF NAVIGATION radios Set for departure

Audio control panel Set

WARNING: Do not put objects between the seat and the aisle stand. Injury can occur when the seat is adjusted.

Seat Adjust

Adjust the seat for optimum eye reference.

Verify a positive horizontal (fore and aft) seat lock.

Rudder pedals Adjust

Adjust the rudder pedals to allow full rudder pedal and brake pedal movement.

Seat belt and shoulder harness Adjust

Call “PREFLIGHT CHECKLIST.”

Before Start Procedure

Start the Before Start Procedure after papers are on board.

Flight deck door Closed and locked F/O

Verify that the CAB DOOR UNLOCKED light is extinguished.

Verify that the LOCK FAIL light is extinguished.

Do the CDU Preflight Procedure – Performance Data steps before completing this procedure.

CDU display Set C, F/O

Normally the PF selects the TAKEOFF REF page.

Normally the PM selects the LEGS page.

N1 bugs Check C, F/O

Verify that the N1 reference bugs are correct.

IAS bugs Set C, F/O

MCP Set C

AUTOTHROTTLE ARM switch – ARM

IAS/MACH selector – Set V2

Arm LNAV as needed

Initial heading – Set

Initial altitude – Set

Taxi and Takeoff briefings Complete C, F/O

The pilot who will do the takeoff does the taxi and takeoff briefings.

As part of the takeoff briefing for the first flight of the day and following a change of either flight crew member, cabin altitude warning indications and memory item procedures must be briefed on airplanes in which the CABIN ALTITUDE and TAKEOFF CONFIG lights are not installed, or are installed but not activated. The briefing must contain the following information:

Whenever the intermittent warning horn sounds in flight at an airplane flight altitude above 10,000 feet MSL:

1. Immediately, don oxygen masks and set regulators to 100%.
2. Establish crew communications.
3. Do the CABIN ALTITUDE WARNING or Rapid Depressurization non-normal checklist.

Both pilots must verify on the overhead Cabin Altitude Panel that the cabin altitude is stabilized at or below 10,000 feet before removing oxygen masks.

Exterior doors Verify closed F/O

Flight deck windows Closed and locked C, F/O

Start clearance Obtain C, F/O

Obtain a clearance to pressurize the hydraulic systems.

Obtain a clearance to start the engines.

If pushback is needed:

Verify that the nose gear steering lockout pin is installed, or, if the nose gear steering lockout pin is not used, depressurize hydraulic system A during the hydraulic panel set step C, F/O

Fuel panel Set F/O

If the center tank fuel quantity exceeds 1,000 pounds/460 kilograms:

LEFT and RIGHT CENTER FUEL PUMPS switches – ON

Verify that the LOW PRESSURE lights illuminate momentarily and then extinguish.

If the LOW PRESSURE light stays illuminated turn off the CENTER FUEL PUMPS switch.

AFT and FORWARD FUEL PUMPS switches – ON

Verify that the LOW PRESSURE lights are extinguished.

If there is fuel in the auxiliary tanks:

AUXILIARY FUEL TRANSFER valve switches (for tanks with fuel) – AUTO

Verify that the AUXILIARY FUEL ALERT light is extinguished.

Verify that the AUXILIARY FUEL MAINTENANCE light is extinguished.

Hydraulic panelSet F/O

If pushback is needed and the nose gear steering lockout pin is not installed:

**WARNING: Do not pressurize hydraulic system A.
Unwanted tow bar movement can occur.**

System A HYDRAULIC PUMP switches – OFF

Verify that the system A pump LOW PRESSURE lights are illuminated.

System B electric HYDRAULIC PUMP switch – ON

Verify that the system B electric pump LOW PRESSURE light is extinguished.

Verify that the brake pressure is 2,800 psi minimum.

Verify that the system B pressure is 2,800 psi minimum.

If pushback is not needed, or if pushback is needed and the nose gear steering lockout pin is installed:

Electric HYDRAULIC PUMP switches – ON

Verify that the electric pump LOW PRESSURE lights are extinguished.

Verify that the brake pressure is 2,800 psi minimum.

Verify that the system A and B pressures are 2,800 psi minimum.

ANTI COLLISION light switch ON F/O

TrimSet C

Check each trim for freedom of movement.

Stabilizer trim – ____ UNITS

Set the trim for takeoff.

Verify that the trim is in the green band.

Aileron trim – 0 units

Rudder trim – 0 units

Call “BEFORE START CHECKLIST.”	C
--------------------------------	---

Do the BEFORE START checklist.	F/O
--------------------------------	-----

Pushback or Towing Procedure

The Engine Start procedure may be done during pushback or towing.

Establish communications with ground handling personnel.	C
--	---

CAUTION: Do not hold or turn the nose wheel steering wheel during pushback or towing. This can damage the nose gear or the tow bar.

CAUTION: Do not use airplane brakes to stop the airplane during pushback or towing. This can damage the nose gear or the tow bar.

Set or release the parking brake as directed by ground handling personnel.	C or F/O
--	----------

When pushback or towing is complete:

Verify that the tow bar is disconnected	C
---	---

Verify that the nose gear steering lockout pin is removed	C
---	---

System A HYDRAULIC PUMPS switches – ON	F/O
--	-----

Verify that the system A pump LOW PRESSURE lights are extinguished

Verify that the system A pressure is 2800 psi minimum.

Engine Start Procedure

[Option]

Select the secondary engine indications. F/O

Air conditioning PACK switchesOFF F/O

Start sequenceAnnounce C

Call “START ____ ENGINE” C

ENGINE START switchGRD F/O

Verify that the N2 RPM increases. C, F/O

When N1 rotation is seen and N2 is at 25%, or (if 25% N2 is not possible), at maximum motoring and a minimum of 20% N2:

Note: Maximum motoring occurs when N2 acceleration is less than 1% in approximately 5 seconds.

Engine start leverIDLE C

Monitor fuel flow and EGT indications. C, F/O

[Without automatic ignition]

At 56% N2, verify that the ENGINE START switch moves to OFF. If not, move the ENGINE START switch to OFF. F/O

[Without automatic ignition]

Verify that the START VALVE OPEN alert extinguishes when the ENGINE START switch moves to OFF. F/O

Call “STARTER CUTOUT.” F/O

Monitor N1, N2, EGT, fuel flow and oil pressure for normal indications while the engine accelerates to a stable idle. C, F/O

After the engine is stable at idle, start the other engine.

Starter duty cycle:

- Do not exceed 2 minutes during each start attempt
- A minimum of 10 seconds is needed between start attempts

Normal engine start considerations:

- do not move an engine start lever to idle early or a hot start can occur
- keep a hand on the engine start lever while monitoring RPM, EGT and fuel flow until stable
- if fuel is shutoff accidentally (by closing the engine start lever) do not reopen the engine start lever in an attempt to restart the engine
- failure of the ENGINE START switch to stay in GRD until the starter cutout RPM can cause a hot start. Do not re-engage the ENGINE START switch until engine RPM is below 20% N2.

Do the ABORTED ENGINE START checklist for one or more of the following abort start conditions:

- the N1 or N2 does not increase or increases very slowly after the EGT increases
- there is no oil pressure indication by the time that the engine is stable at idle
- the EGT does not increase by 10 seconds after the engine start lever is moved to IDLE
- the EGT quickly nears or exceeds the start limit

Before Taxi Procedure

GENERATOR 1 and 2 switches	ON	F/O
PROBE HEAT switches	ON	F/O
WING ANTI-ICE switch	As needed	F/O
ENGINE ANTI-ICE switches	As needed	F/O
PACK switches	AUTO	F/O
ISOLATION VALVE switch	AUTO	F/O
APU BLEED air switch	OFF	F/O
APU switch	OFF	F/O
[Without automatic ignition]		
ENGINE START switches	CONT	F/O
Engine start levers	IDLE detent	C
Verify that the ground equipment is clear.		C, F/O
Call “FLAPS ____” as needed for takeoff.		C
Flap lever	Set takeoff flaps	F/O
Verify that the LE FLAPS EXT green light is illuminated.		
Flight controls	Check	C

[\[Option - Flight Control Surface Position Indicator\]](#)

Push the MFD SYS switch to display the flight control surface position indications on the lower display unit, if desired.

Make slow and deliberate inputs, one direction at a time.

Move the control wheel and the control column to full travel in both directions and verify:

- freedom of movement
- that the controls return to center

[\[Option - Flight Control Surface Position Indicator\]](#)

- correct flight control movement if the flight control surface position indications are displayed on the lower display unit.

Hold the nose wheel steering wheel during the rudder check to prevent nose wheel movement.

Move the rudder pedals to full travel in both directions and verify:

- freedom of movement
- that the rudder pedals return to center

[Option - Flight Control Surface Position Indicator]

- correct flight control movement if the flight control surface position indications are displayed on the lower display unit.

[Option]

Blank the lower display unit.

F/O

Transponder As needed

F/O

At airports where ground tracking is not available, select STBY. At airports equipped to track airplanes on the ground, select an active transponder setting, but not a TCAS mode.

Recall Check

C, F/O

Verify that all system annunciator panel lights illuminate and then extinguish.

[Option - Electronic Flight Bag]

EFB AIRPORT MAP application Select

C, F/O

Select map as desired.

CAUTION: Do not use the Airport Map application as a primary navigation reference. The Airport Map application is designed to aid flight crew positional awareness only.

Update changes to the taxi briefing, as needed.

C or PF

Call “BEFORE TAXI CHECKLIST.”

C

Do the BEFORE TAXI checklist.

F/O

Before Takeoff Procedure

Engine warm up requirement:

- verify an increase in engine oil temperature before takeoff.

Engine warm up recommendations:

- run the engines for at least 2 minutes
- use a thrust setting normally used for taxi operations.

Pilot Flying	Pilot Monitoring
	Notify the cabin crew to prepare for takeoff. Verify that the cabin is secure.
The pilot who will do the takeoff updates changes to the takeoff briefing as needed.	
Set the weather radar display as needed. [Option - with EGPWS] Set the terrain display as needed.	
Call “BEFORE TAKEOFF CHECKLIST.”	Do the BEFORE TAKEOFF checklist.

Before Takeoff Procedure [AD 2002-19-52 and AD 2002-24-51]

Engine warm up requirement:

- verify an increase in engine oil temperature before takeoff.

Engine warm up recommendations:

- run the engines for at least 2 minutes
- use a thrust setting normally used for taxi operations.

Pilot Flying	Pilot Monitoring
	Check the center tank fuel quantity. Both center tank fuel pump switches must be OFF for takeoff if center tank fuel is less than 5000 pounds/2300 kilograms. Do not accomplish the CONFIG non-normal checklist with less than 5000 pounds/2300 kilograms in the center tank prior to takeoff.
	Notify the cabin crew to prepare for takeoff. Verify that the cabin is secure.
The pilot who will do the takeoff updates changes to the takeoff briefing as needed.	
Set the weather radar display as needed. [Option - with EGPWS] Set the terrain display as needed.	
Call “BEFORE TAKEOFF CHECKLIST.”	Do the BEFORE TAKEOFF checklist.

Before Takeoff Procedure [Alternate Method of Compliance (AMOC) to AD 2002-24-51]

Engine warm up requirement:

- verify an increase in engine oil temperature before takeoff.

Engine warm up recommendations:

- run the engines for at least 2 minutes
- use a thrust setting normally used for taxi operations.

Pilot Flying	Pilot Monitoring
	Check the center tank fuel quantity. Both center tank fuel pump switches must be OFF for takeoff if center tank fuel is less than 5000 pounds/2300 kilograms. Do not accomplish the CONFIG non-normal checklist with less than 5000 pounds/2300 kilograms in the center tank prior to takeoff.
	Notify the cabin crew to prepare for takeoff. Verify that the cabin is secure.
The pilot who will do the takeoff updates changes to the takeoff briefing as needed.	
Set the weather radar display as needed. [Option - with EGPWS] Set the terrain display as needed.	
Call “BEFORE TAKEOFF CHECKLIST.”	Do the BEFORE TAKEOFF checklist.

Before Takeoff Procedure [Alternate Method of Compliance (AMOC) to AD 2001-08-24 and AD 2002-24-51 for Airplanes with Master Caution System Logic Change and Automatic Shutoff]

Engine warm up requirement:

- verify an increase in engine oil temperature before takeoff.

Engine warm up recommendations:

- run the engines for at least 2 minutes
- use a thrust setting normally used for taxi operations.

Pilot Flying	Pilot Monitoring
	Notify the cabin crew to prepare for takeoff. Verify that the cabin is secure.
The pilot who will do the takeoff updates changes to the takeoff briefing as needed.	
Set the weather radar display as needed. [Option - with EGPWS] Set the terrain display as needed.	
Call “BEFORE TAKEOFF CHECKLIST.”	Do the BEFORE TAKEOFF checklist.

Takeoff Procedure

[Option - With auto T/O thrust reduction and with FMC U10.7 and earlier]

Pilot Flying	Pilot Monitoring
	[Option - Runway position update (Runway Remaining) with TO/GA activation] Enter the RWY REMAIN on the CDU TAKEOFF REF page.
Before entering the departure runway, verify that the runway and runway entry point are correct.	
	When entering the departure runway, set the STROBE light switch to ON. Use other lights as needed. Set the transponder mode selector to TA/RA.
Verify that the brakes are released. Align the airplane with the runway.	
Verify that the airplane heading agrees with the assigned runway heading.	
	When cleared for takeoff, set the FIXED LANDING light switches to ON.
Advance the thrust levers to approximately 40% N1. Allow the engines to stabilize.	
Push the TO/GA switch.	
Verify that the correct takeoff thrust is set.	
	Monitor the engine instruments during the takeoff. Call out any abnormal indications. Adjust takeoff thrust before 60 knots as needed. During strong headwinds, if the thrust levers do not advance to the planned takeoff thrust by 60 knots, manually advance the thrust levers.

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Normal Procedures -
Amplified Procedures

Pilot Flying	Pilot Monitoring
After takeoff thrust is set, the captain's hand must be on the thrust levers until V1.	
Monitor airspeed. Maintain light forward pressure on the control column.	Monitor airspeed and call out any abnormal indications.
Verify 80 knots and call "CHECK."	Call "80 KNOTS."
Verify V1 speed.	Verify the automatic V1 callout or call "V1."
At VR, rotate toward 15° pitch attitude. After liftoff, follow F/D commands.	At VR, call "ROTATE." Monitor airspeed and vertical speed.
Establish a positive rate of climb.	
	Verify a positive rate of climb on the altimeter and call "POSITIVE RATE."
Verify a positive rate of climb on the altimeter and call "GEAR UP."	
	Set the landing gear lever to UP.
Above 400 feet radio altitude, call for a roll mode as needed.	Select or verify the roll mode.
At thrust reduction height, verify that climb thrust is set.	
At acceleration height, call for flaps up maneuvering speed.	
	Set the flaps up maneuvering speed.
Verify acceleration. Call "FLAPS ____" according to the flap retraction schedule.	
	Set the FLAP lever as directed. Monitor flaps and slats retraction.
After flaps and slats retraction is complete, call "VNAV."	
	Push the VNAV switch.

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Pilot Flying	Pilot Monitoring
Engage the autopilot when above the minimum altitude for autopilot engagement.	
	After flap retraction is complete: • Set or verify engine bleeds and air conditioning packs are operating [Without automatic ignition] • Set the engine start switches as needed • Set the AUTO BRAKE select switch to OFF • Set the landing gear lever to OFF after landing gear retraction is complete.
Call “AFTER TAKEOFF CHECKLIST.”	
	Do the AFTER TAKEOFF checklist.

CAUTION: Do not allow the shoulder harness straps to retract quickly. Buckles can pull or damage circuit breakers.

Takeoff Procedure

[Option - Without auto T/O thrust reduction and with FMC U10.7 and earlier]

Pilot Flying	Pilot Monitoring
	[Option - Runway position update (Runway Remaining) with TO/GA activation] Enter the RWY REMAIN on the CDU TAKEOFF REF page.
Before entering the departure runway, verify that the runway and runway entry point are correct.	
	When entering the departure runway, set the STROBE light switch to ON. Use other lights as needed. Set the transponder mode selector to TA/RA.
Verify that the brakes are released. Align the airplane with the runway.	
Verify that the airplane heading agrees with the assigned runway heading.	
	When cleared for takeoff, set the FIXED LANDING light switches to ON.
Advance the thrust levers to approximately 40% N1. Allow the engines to stabilize.	
Push the TO/GA switch.	

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Pilot Flying	Pilot Monitoring
Verify that the correct takeoff thrust is set.	
	Monitor the engine instruments during the takeoff. Call out any abnormal indications. Adjust takeoff thrust before 60 knots as needed. During strong headwinds, if the thrust levers do not advance to the planned takeoff thrust by 60 knots, manually advance the thrust levers.
After takeoff thrust is set, the captain's hand must be on the thrust levers until V1.	
Monitor airspeed. Maintain light forward pressure on the control column.	Monitor airspeed and call out any abnormal indications.
Verify 80 knots and call "CHECK."	Call "80 KNOTS."
Verify V1 speed.	Verify the automatic V1 callout or call "V1."
At VR, rotate toward 15° pitch attitude. After liftoff, follow F/D commands.	At VR, call "ROTATE." Monitor airspeed and vertical speed.
Establish a positive rate of climb.	
	Verify a positive rate of climb on the altimeter and call "POSITIVE RATE."
Verify a positive rate of climb on the altimeter and call "GEAR UP."	
	Set the landing gear lever to UP.
Above 400 feet radio altitude, call for a roll mode as needed.	Select or verify the roll mode.
At thrust reduction height, call "SET CLIMB THRUST."	
	Push the N1 switch.
Verify that climb thrust is set.	

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Normal Procedures -
Amplified Procedures

Pilot Flying	Pilot Monitoring
At acceleration height, call for flaps up maneuvering speed.	
	Set the flaps up maneuvering speed.
Verify acceleration. Call “FLAPS ____” according to the flap retraction schedule.	
	Set the FLAP lever as directed. Monitor flaps and slats retraction.
After flaps and slats retraction is complete, call “VNAV.”	
	Push the VNAV switch.
Engage the autopilot when above the minimum altitude for autopilot engagement.	
	After flap retraction is complete: • Set or verify engine bleeds and air conditioning packs are operating [Without automatic ignition] • Set the engine start switches as needed • Set the AUTO BRAKE select switch to OFF • Set the landing gear lever to OFF after landing gear retraction is complete.
Call “AFTER TAKEOFF CHECKLIST.”	
	Do the AFTER TAKEOFF checklist.

CAUTION: Do not allow the shoulder harness straps to retract quickly. Buckles can pull or damage circuit breakers.

Takeoff Flap Retraction Speed Schedule

Takeoff Flaps	At Speed (display)	Select Flaps
25	V2 + 15 “15” “5” “1”	15 5 1 UP
15 or 10	V2 + 15 “5” “1”	5 1 UP
5	V2 + 15 “1”	1 UP
1	“1”	UP
Limit bank angle to 15° until reaching V2 + 15		

Climb and Cruise Procedure [AD 2002-19-52 and AD 2002-24-51]

Complete the After Takeoff Checklist before starting the Climb and Cruise Procedure.

Pilot Flying	Pilot Monitoring
	If the center tank fuel pump switches were OFF for takeoff and the center tank contains more than 1000 pounds/500 kilograms, set both center tank fuel pump switches ON above 10,000 feet or after the pitch attitude has been reduced to begin acceleration to a climb speed of 250 knots or greater.
	During climb, set both center tank fuel pump switches OFF when center tank fuel quantity reaches approximately 1000 pounds/500 kilograms.
	At or above 10,000 feet MSL, set the LANDING light switches to OFF.
	Set the passenger signs as needed.
At transition altitude, set and crosscheck the altimeters to standard.	
	When established in a level attitude at cruise, if the center tank contains more than 1000 pounds/500 kilograms and the center tank fuel pump switches are OFF, set the center tank fuel pump switches ON again. Set both center tank fuel pump switches OFF when center tank fuel quantity reaches approximately 1000 pounds/500 kilograms.
	When the auxiliary tank fuel is empty, set both auxiliary fuel transfer switches OFF.
	During an ETOPS flight, additional steps must be done. See the ETOPS supplementary procedure in SP.1.

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Pilot Flying	Pilot Monitoring
	Before the top of descent, modify the active route as needed for the arrival and approach. Verify or enter the correct RNP for arrival.

Climb and Cruise Procedure [Alternate Method of Compliance (AMOC) to AD 2002-24-51]

Complete the After Takeoff Checklist before starting the Climb and Cruise Procedure.

Pilot Flying	Pilot Monitoring
	If the center tank fuel pump switches were OFF for takeoff and the center tank contains more than 2000 pounds/950 kilograms, set both center tank fuel pump switches ON above 10,000 feet or after the pitch attitude has been reduced to begin acceleration to a climb speed of 250 knots or greater.
	At or above 10,000 feet MSL, set the LANDING light switches to OFF.
	Set the passenger signs as needed.
At transition altitude, set and crosscheck the altimeters to standard.	
	During climb or cruise, set one center tank fuel pump switch OFF when center tank fuel quantity reaches approximately 2000 pounds/950 kilograms. Open the crossfeed valve to minimize fuel imbalance. Set the remaining center tank fuel pump switch OFF without delay and close the crossfeed valve when the Master Caution and FUEL system annunciator illuminate.
	When the auxiliary tank fuel is empty, set both auxiliary fuel transfer switches OFF.
	During an ETOPS flight, additional steps must be done. See the ETOPS supplementary procedure in SP.1.
	Before the top of descent, modify the active route as needed for the arrival and approach. Verify or enter the correct RNP for arrival.

Climb and Cruise Procedure [Alternate Method of Compliance (AMOC) to AD 2001-08-24 and AD 2002-24-51 for Airplanes with Master Caution System Logic Change and Automatic Shutoff]

Complete the After Takeoff Checklist before starting the Climb and Cruise Procedure.

Pilot Flying	Pilot Monitoring
	At or above 10,000 feet MSL, set the LANDING light switches to OFF.
	Set the passenger signs as needed.
At transition altitude, set and crosscheck the altimeters to standard.	
	During climb, set the affected center tank fuel pump switch to OFF when a center tank fuel pump LOW PRESSURE light illuminates. Set both center tank fuel pump switches to OFF when a center tank fuel pump LOW PRESSURE light illuminates if the center tank is empty.
	When established in a level flight attitude, if the center tank contains usable fuel and a center tank fuel pump switch(es) is OFF, set the center tank fuel pump switch(es) to ON again. Set the affected center tank fuel pump switch to OFF when a center tank fuel pump LOW PRESSURE light illuminates. Set both center tank fuel pump switches to OFF when a center tank fuel pump LOW PRESSURE light illuminates if the center tank is empty.
	When the auxiliary tank fuel is empty, set both auxiliary fuel transfer switches OFF.
	During an ETOPS flight, additional steps must be done. See the ETOPS supplementary procedure in SP.1.

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

**Normal Procedures -
Amplified Procedures**

Pilot Flying	Pilot Monitoring
	Before the top of descent, modify the active route as needed for the arrival and approach. Verify or enter the correct RNP for arrival.

Descent Procedure [AD 2002-19-52 and AD 2002-24-51]

Start the Descent Procedure before the airplane descends below the cruise altitude for arrival at destination.

Complete the Descent Procedure by 10,000 feet MSL.

Pilot Flying	Pilot Monitoring
	Set both center tank fuel pump switches OFF when center tank fuel quantity reaches approximately 3000 pounds/1400 kilograms. Do not accomplish the CONFIG non-normal checklist.
	Verify that pressurization is set to landing altitude.
Review the system annunciator lights.	Recall and review the system annunciator lights.
Verify VREF on the APPROACH REF page.	Enter VREF on the APPROACH REF page.
Set the RADIO/BARO minimums as needed for the approach.	
Set or verify the navigation radios and course for the approach.	
	Set the AUTO BRAKE select switch to the needed brake setting
Do the approach briefing.	
Call “DESCENT CHECKLIST.”	Do the DESCENT checklist.

Descent Procedure [Alternate Method of Compliance (AMOC) to AD 2002-24-51]

Start the Descent Procedure before the airplane descends below the cruise altitude for arrival at destination.

Complete the Descent Procedure by 10,000 feet MSL.

Pilot Flying	Pilot Monitoring
	Set one center tank fuel pump switch OFF when center tank fuel quantity reaches approximately 3000 pounds/1400 kilograms. Open the crossfeed valve to minimize fuel imbalance. Turn the remaining center tank fuel pump switch OFF without delay and close the crossfeed valve when the Master Caution and FUEL system annunciator illuminate.
	If established in level flight for an extended period of time prior to approach and landing with more than 2000 pounds/950 kilograms in the center tank and the center tank fuel pump switches OFF, one center tank fuel pump switch may be turned ON again. Open the crossfeed valve to minimize fuel imbalance. Turn the remaining center tank fuel pump switch OFF without delay and close the crossfeed valve when the Master Caution and FUEL system annunciator illuminate.
	Verify that pressurization is set to landing altitude.
Review the system annunciator lights.	Recall and review the system annunciator lights.
Verify VREF on the APPROACH REF page.	Enter VREF on the APPROACH REF page.
Set the RADIO/BARO minimums as needed for the approach.	

Pilot Flying	Pilot Monitoring
Set or verify the navigation radios and course for the approach.	
	Set the AUTO BRAKE select switch to the needed brake setting
Do the approach briefing.	
Call “DESCENT CHECKLIST.”	Do the DESCENT checklist.

**Descent Procedure [Alternate Method of Compliance (AMOC)
to AD 2001-08-24 and AD 2002-24-51 for Airplanes with
Master Caution System Logic Change and Automatic Shutoff]**

Start the Descent Procedure before the airplane descends below the cruise altitude for arrival at destination.

Complete the Descent Procedure by 10,000 feet MSL.

Pilot Flying	Pilot Monitoring
	Set the affected center tank fuel pump switch to OFF when a center tank fuel pump LOW PRESSURE light illuminates. Set both center tank fuel pump switches to OFF when a center tank fuel pump LOW PRESSURE light illuminates if the center tank is empty.
	If established in a level flight attitude, for an extended period of time with usable fuel in the center tank and a center tank fuel pump switch(es) OFF, set the center tank fuel pump switch(es) to ON again. Set the affected center tank fuel pump switch to OFF when a center tank fuel pump LOW PRESSURE light illuminates. Set both center tank fuel pump switches to OFF when a center tank fuel pump LOW PRESSURE light illuminates if the center tank is empty.
	Verify that pressurization is set to landing altitude.
Review the system annunciator lights.	Recall and review the system annunciator lights.
Verify VREF on the APPROACH REF page.	Enter VREF on the APPROACH REF page.
Set the RADIO/BARO minimums as needed for the approach.	
Set or verify the navigation radios and course for the approach.	

Pilot Flying	Pilot Monitoring
	Set the AUTO BRAKE select switch to the needed brake setting
Do the approach briefing.	
Call “DESCENT CHECKLIST.”	Do the DESCENT checklist.

Approach Procedure

The Approach Procedure is normally started at transition level.

Complete the Approach Procedure before:

- the initial approach fix, or
- the start of radar vectors to the final approach course, or
- the start of a visual approach

For an ILS, LOC, BCRS, SDF or LDA approach, select the appropriate localizer frequency.

For a BCRS approach, enter the front course in the Mode Control Panel COURSE window. Do not select VOR/LOC.

[FAA]

If a flaps 15 landing is needed because of performance:

GROUND PROXIMITY flap inhibit
switch

FLAP INHIBIT

F/O

Pilot Flying	Pilot Monitoring
	Set the passenger signs as needed.
	At or above 10,000 feet MSL, set the FIXED LANDING light switches to ON.
At transition level, set and crosscheck the altimeters.	
Update the arrival and approach procedures as needed. Update the RNP as needed.	
Update the approach briefing as needed.	
Call "APPROACH CHECKLIST."	Do the APPROACH checklist.

Flap Extension Schedule

Current Flap Position	At Speedtape “Display”	Select Flaps	Command Speed for Selected Flaps
UP	“UP”	1	“1”
1	“1”	5	“5”
5	“5”	15	“15”
15	“15”	30 or 40	(VREF30 or VREF40) + wind additives

Landing Procedure - ILS

[Option - Glideslope inhibited before Localizer capture]

Pilot Flying	Pilot Monitoring
	Notify the cabin crew to prepare for landing. Verify that the cabin is secure.
Call “FLAPS ____” according to the flap extension schedule.	Set the flap lever as directed. Monitor flaps and slats extension.
When on localizer intercept heading: • verify that the ILS is tuned and identified • verify that the LOC and G/S pointers are shown	
Arm the APP mode. Engage the other autopilot.	
Use HDG SEL to intercept the final approach course as needed.	
Verify that the localizer is captured.	
	Call “GLIDE SLOPE ALIVE.”
At glide slope alive, call: • “GEAR DOWN” • “FLAPS 15”	Set the landing gear lever to DN. Verify that the green landing gear indicator lights are illuminated. Set the flap lever to 15. [Without automatic ignition] Set the engine start switches to CONT.
Set the speed brake lever to ARM. Verify that the SPEED BRAKE ARMED light is illuminated.	
At glide slope capture, call “FLAPS ____” as needed for landing.	Set the flap lever as directed.
Set the missed approach altitude on the MCP.	
Call “LANDING CHECKLIST.”	Do the LANDING checklist.
At the final approach fix or OM, verify the crossing altitude.	
Monitor the approach. [Without Fail Operational Autoland capability] Verify the AFDS status at 500 feet radio altitude.	

Landing Procedure - Instrument Approach using VNAV

[Without VNAV ALT enabled]

Use the autopilot during the approach to give:

- autopilot alerts and mode fail indications
- more accurate course and glide path tracking
- lower RNP limits.

This procedure is not authorized using QFE.

Pilot Flying	Pilot Monitoring
	Notify the cabin crew to prepare for landing. Verify that the cabin is secure.
Call “FLAPS ____” according to the flap extension schedule.	Set the flap lever as directed. Monitor flaps and slats extension.
The recommended roll modes for the final approach are: • for an RNAV or GPS approach use LNAV • for a LOC-BC, VOR or NDB approach use LNAV • for a LOC, SDF or LDA approach use LNAV or VOR/LOC.	
	Verify that the VNAV glide path angle is shown on the final approach segment of the LEGS page.
When on the final approach course intercept heading for LOC, LOC-BC, SDF or LDA approaches: • verify that the localizer is tuned and identified • verify that the LOC pointer is shown.	
Select LNAV or arm the VOR/LOC mode.	
WARNING: When using LNAV to intercept the localizer, LNAV might parallel the localizer without capturing it. The airplane can then descend on the VNAV path with the localizer not captured.	
Use LNAV or HDG SEL to intercept the final approach course as needed.	
Verify that LNAV is engaged or that VOR/LOC is captured.	

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Normal Procedures -
Amplified Procedures

Pilot Flying	Pilot Monitoring
Approximately 2 NM before the final approach fix and after ALT HOLD or VNAV PTH is annunciated: • verify that the autopilot is engaged • set DA(H) or MDA(H) on the MCP • select or verify speed intervention • select or verify VNAV.	Call “APPROACHING GLIDE PATH.”
Approaching glide path, call: • “GEAR DOWN” • “FLAPS 15.”	Set the landing gear lever to DN. Verify that the green landing gear indicator lights are illuminated. Set the flap lever to 15. [Without automatic ignition] Set the engine start switches to CONT.
Set the speed brake lever to ARM. Verify that the SPEED BRAKE ARMED light is illuminated.	
Beginning the final approach descent, call “FLAPS ____” as needed for landing.	Set the flap lever as directed.
Call “LANDING CHECKLIST.”	Do the LANDING checklist.
When at least 300 feet below the missed approach altitude, set the missed approach altitude on the MCP.	
At the final approach fix, verify the crossing altitude and crosscheck the altimeters.	
Monitor the approach.	
If suitable visual reference is established at DA(H), MDA(H) or the missed approach point, disengage the autopilot and autothrottle. Maintain the glide path to landing.	

Go-Around and Missed Approach Procedure

Pilot Flying	Pilot Monitoring
At the same time: • push the TO/GA switch • call “FLAPS 15.”	Position the FLAP lever to 15 and monitor flap retraction
Verify: • the rotation to go-around attitude • that the thrust increases.	
	Verify that the thrust is sufficient for the go-around or adjust as needed.
Verify a positive rate of climb on the altimeter and call “GEAR UP.”	Verify a positive rate of climb on the altimeter and call “POSITIVE RATE.” Set the landing gear lever to UP.
	Verify that the missed approach altitude is set.
If the airspeed is within the amber band, limit bank angle to 15°.	
[Option - Airplanes without TO/GA to LNAV feature] Above 400 feet, select appropriate roll mode and verify proper mode annunciation.	Observe mode annunciation.
Verify that the missed approach route is tracked.	
At acceleration height, call “FLAPS ____” according to the flap retraction schedule.	Set the FLAP lever as directed. Monitor flaps and slats retraction.
After flap retraction to the planned flap setting, select LVL CHG. VNAV may be selected if the flaps are up.	
Verify that climb thrust is set.	
Verify that the missed approach altitude is captured.	

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Normal Procedures -
Amplified Procedures

Pilot Flying	Pilot Monitoring
	Set the landing gear lever to OFF after landing gear retraction is complete. [Without automatic ignition] Set the engine start switches as needed.
Call “AFTER TAKEOFF CHECKLIST.”	Do the AFTER TAKEOFF checklist.

Landing Roll Procedure

[Option - Electronic Flight Bag]

Pilot Flying	Pilot Monitoring
Disengage the autopilot. Control the airplane manually.	
Verify that the thrust levers are closed. Verify that the SPEED BRAKE lever is UP. Without delay, fly the nose wheel smoothly onto the runway.	Verify that the SPEED BRAKE lever is UP. Call “SPEED BRAKES UP.” If the SPEED BRAKE lever is not UP, call “SPEED BRAKES NOT UP.” Monitor the rollout progress.
Verify correct autobrake operation.	
WARNING: After the reverse thrust levers are moved, a full stop landing must be made. If an engine stays in reverse, safe flight is not possible.	
Without delay, move the reverse thrust levers to the interlocks and hold light pressure until the interlocks release. Then apply reverse thrust as needed.	
By 60 knots, start movement of the reverse thrust levers to be at the reverse idle detent before taxi speed.	Call “60 KNOTS.”
After the engines are at reverse idle, move the reverse thrust levers full down.	
Before taxi speed, disarm the autobrake. Use manual braking as needed.	
CAUTION: Do not use the Airport Map application as a primary navigation reference. The Airport Map application is designed to aid flight crew positional awareness only.	

After Landing Procedure

[Without automatic ignition]

Start the After Landing Procedure when clear of the active runway.

Engine cooldown recommendations:

- run the engines for at least 3 minutes
- use a thrust setting normally used for taxi operations
- routine cooldown times less than 3 minutes are not recommended.

Pilot Flying	Pilot Monitoring
The captain moves or verifies that the SPEED BRAKE lever is DOWN.	
	Start the APU, as needed.
	Set the PROBE HEAT switches to OFF.
	Set the exterior lights as needed.
	Set the ENGINE START switches to OFF.
Set the weather radar to OFF.	
	Set the AUTO BRAKE select switch to OFF.
	Set the flap lever to UP.
	Set the transponder mode selector as needed. At airports where ground tracking is not available, select STBY. At airports equipped to track airplanes on the ground, select an active transponder setting, but not a TCAS mode.

Shutdown Procedure

Start the Shutdown Procedure after taxi is complete.

Parking brakeSet C or F/O

Verify that the parking brake warning light is illuminated.

Electrical powerSet F/O

If APU power is needed:

Verify that the APU GENERATOR OFF BUS light is illuminated.

APU GENERATOR bus switches – ON

Verify that the SOURCE OFF lights are extinguished.

If external power is needed:

Verify that the GRD POWER AVAILABLE light is illuminated.

GRD POWER switch – ON

Verify that the SOURCE OFF lights are extinguished.

Engine start leversCUTOFF C

Operate the engines at or near idle thrust for a minimum of three minutes before shutdown to thermally stabilize the engines and reduce undercowl soak-back temperatures. Taxi thrust can be considered idle thrust for this purpose.

If idle reverse thrust or no reverse thrust is used during the landing rollout, the three minute period can begin when thrust is reduced to idle for landing.

Routine cooldown times of less than three minutes before engine shutdown can cause engine degradation.

If towing is needed:

Establish communications with ground handling personnel C

WARNING: If the nose gear steering lockout pin is not installed and hydraulic system A is pressurized, any change to electrical or hydraulic power with the tow bar connected may cause unwanted tow bar movement.

Verify that the nose gear steering lockout pin is installed, or, if the nose gear steering lockout pin is not used C

System A HYDRAULIC PUMP switches – OFF

Verify that the system A pump LOW PRESSURE lights are illuminated.

CAUTION: Do not hold or turn the nose wheel steering wheel during pushback or towing. This can damage the nose gear or the tow bar.

CAUTION: Do not use airplane brakes to stop the airplane during pushback or towing. This can damage the nose gear or the tow bar.

Set or release the parking brake as directed by ground handling personnel. C or F/O

FASTEN BELTS switch OFF F/O

ANTI COLLISION light switch OFF F/O

FUEL PUMP switches OFF F/O

CAUTION: Do not operate the center tank fuel pumps with the flight deck unattended.

CAUTION: Center tank fuel pump switches should be positioned ON only if the fuel quantity in the center tank exceeds 1000 lbs.

[Option]

CAB/UTIL power switch As needed F/O

[Option]

IFE/PASS SEAT power switch As needed F/O

WING ANTI-ICE switch OFF F/O

ENGINE ANTI-ICE switchesOFF F/O

Hydraulic panelSet F/O

ENGINE HYDRAULIC PUMPS switches - ON

ELECTRIC HYDRAULIC PUMPS switches - OFF

[737-600/700]

RECIRCULATION FAN switch As needed F/O

[737-800/900]

RECIRCULATION FAN switches As needed F/O

Air conditioning PACK switches AUTO F/O

ISOLATION VALVE switch OPEN F/O

Engine BLEED air switches..... ON F/O

APU BLEED air switch ON F/O

Exterior lights switches As needed F/O

FLIGHT DIRECTOR switchesOFF C, F/O

Transponder mode selectorSTBY F/O

[Option - Electronic Flight Bag]

EFB CLOSE FLIGHT Select C, F/O

After the wheel chocks are in place:

Parking brake – Release C or F/O

APU switch As needed F/O

Flight deck door Unlock F/O

Verify that the CABIN DOOR UNLOCKED light is illuminated.

Call “SHUTDOWN CHECKLIST.” C

Do the SHUTDOWN checklist. F/O

Secure Procedure

IRS mode selectors	OFF	F/O
EMERGENCY EXIT LIGHTS switch	OFF	F/O
WINDOW HEAT switches	OFF	F/O
Air conditioning PACK switches	OFF	F/O
[Option - Electronic Flight Bag]		
EFB POWER switch	Push	C, F/O
Call “SECURE CHECKLIST.”		C
Do the SECURE checklist.		F/O

Intentionally
Blank

Supplementary Procedures
Table of Contents**Chapter SP**
Section 0

Introduction	SP.05
General	SP.05.1
Airplane General, Emer. Equip., Doors, Windows	SP.1
Interior Inspection	SP.1.1
Flight Deck Door Access System Test	SP.1.1
Water System Draining	SP.1.2
Forward Airstair Operation	SP.1.4
Interior Control	SP.1.4
Exterior Control	SP.1.5
Oxygen Mask Microphone Test	SP.1.7
ETOPS	SP.1.7
APU Operation	SP.1.7
Fuel Crossfeed Valve Check	SP.1.8
Air Systems	SP.2
Wing–Body Overheat Test	SP.2.1
External Air Cart Use	SP.2.1
Ground Conditioned Air Use	SP.2.2
Isolated Pack Operation during Engine Start	SP.2.2
Pressurization System Manual Mode Test	SP.2.2
Manual Mode Operation	SP.2.3
Pressurization Control Operation – Landing at Alternate Airport	SP.2.4
Automatic Pressurization Control – Departure Airport Elevation Above 8400 Feet	SP.2.4
Automatic Pressurization Control – Landing Airport Elevation Above 6000 Feet	SP.2.5
Unpressurized Takeoff and Landing	SP.2.5
Takeoff	SP.2.6
After Takeoff	SP.2.6
Landing	SP.2.6
No Engine Bleed Takeoff and Landing	SP.2.6
Takeoff	SP.2.6

After Takeoff	SP.2.7
Landing	SP.2.7
Anti-Ice, Rain	SP.3
Anti-Ice Operation	SP.3.1
Cold-Soaked Fuel Frost	SP.3.1
Exterior Safety Inspection - Airplanes with Defined Cold-Soaked Fuel Frost Area	SP.3.1
Exterior Safety Inspection - Airplanes without Defined Cold-Soaked Fuel Frost Area	SP.3.2
Window Heat System Tests	SP.3.4
Overheat Test	SP.3.4
Power Test	SP.3.4
Automatic Flight	SP.4
Level Change Climb/Descent	SP.4.1
Vertical Speed (V/S) Climb/Descent	SP.4.1
Intervention of FMC Altitude Constraints during VNAV Climb	SP.4.2
Intervention of FMC Cruise Altitude during VNAV Cruise	SP.4.2
Intervention of FMC Altitude Constraints during VNAV Descent	SP.4.2
Intervention of FMC Airspeed Constraints during VNAV	SP.4.3
Altitude Hold	SP.4.3
Heading Select	SP.4.3
VOR Navigation	SP.4.3
Instrument Approach using Vertical Speed (V/S)	SP.4.4
Circling Approach	SP.4.5
Instrument Approach - RNAV (RNP) SAAAR/AR	SP.4.6
Pre-approach Requirements	SP.4.6
Cruise Procedure	SP.4.7
Descent Procedure	SP.4.8
Approach Procedure	SP.4.8
Landing Procedure	SP.4.8
Instrument Approach - RNAV (RNP) SAAAR/AR	SP.4.11
Communications	SP.5
Cockpit Voice Recorder Test	SP.5.1

Electrical	SP.6
Electrical Power Up	SP.6.1
Electrical Power Down	SP.6.4
Standby Power Test	SP.6.4
Engines, APU	SP.7
Battery Start	SP.7.1
Starting with Ground Air Source (AC electrical power available)	SP.7.4
Engine Crossbleed Start	SP.7.5
Setting N1 Bugs with No Operative FMC (Manual N1 Bug Setting)	SP.7.5
High Altitude Airport Engine Start (Above 8400 Feet)	SP.7.6
Fire Protection	SP.8
Fire and Overheat System Test with an Inoperative Loop	SP.8.1
Flight Instruments, Displays	SP.10
Altimeter Difference	SP.10.1
QFE Operation	SP.10.2
Setting Airspeed Bugs with No Operative FMC (Manual Airspeed Bug Setting)	SP.10.3
Heading Reference Switch Operation	SP.10.5
HUD System Procedures	SP.10.6
Preflight Procedure	SP.10.6
Descent	SP.10.6
Landing	SP.10.7
Shutdown	SP.10.8
Flight Management, Navigation	SP.11
Tests	SP.11.1
Transponder Test	SP.11.1
Weather Radar Test	SP.11.1
IRS	SP.11.2
Align Light(s) Flashing	SP.11.2
Fast Realignment	SP.11.3
Inadvertent Selection of Attitude Mode (while on the ground)	SP.11.3

IRS Entries	SP.11.3
Lateral Navigation (LNAV)	SP.11.4
Proceeding Direct to a Waypoint (overwrite)	SP.11.4
Intercepting a Leg (Course) to a Waypoint	SP.11.5
Route Modification	SP.11.5
Route Removal	SP.11.5
Linking a Route Discontinuity	SP.11.6
Determining ETA and Distance to Cross Radial (Bearing) or Distance from a Fix	SP.11.6
Changing Destination	SP.11.6
Entering Holding Fix Into Route	SP.11.6
Exiting Holding Pattern	SP.11.7
Along Track Displacement	SP.11.7
Entering Created Waypoints on the Route or Route Legs Pages	SP.11.8
Entering Created Waypoints on the Nav Data Pages	SP.11.8
Deleting Created Waypoints on the Nav Data Pages	SP.11.9
Entering a Crossing Radial (Bearing) or Distance from a Fix as a Route Waypoint	SP.11.10
Entering a Lateral Offset	SP.11.11
Change SID or Runway	SP.11.11
Change STAR, PROF DES, or APP	SP.11.11
Delete Procedure Turn	SP.11.12
Other Operations	SP.11.12
FMC Navigation Check	SP.11.12
Alternate Navigation using the ANCDU	SP.11.13
Inhibiting VOR/DME Use for Position Updating	SP.11.15
Inhibiting GPS Updating	SP.11.16
Vertical Navigation (VNAV)	SP.11.16
Temporary Level Off during Climb or Descent (Not at FMC Cruise Altitude)	SP.11.16
Intervention of FMC Altitude Constraints during VNAV Climb	SP.11.17
Intervention of FMC Cruise Altitude during VNAV Cruise	SP.11.17
Intervention of FMC Altitude Constraints during VNAV Descent	SP.11.17
Intervention of FMC Airspeed Constraints during VNAV	SP.11.17
Entering Waypoint Speed and Altitude Restriction (On Climb or Descent Legs Only)	SP.11.18

BBJ Flight Crew Operations Manual

Deleting Waypoint Speed and Altitude Restriction	SP.11.18
Changing Speed and/or Altitude Restriction during Climb or Descent	SP.11.18
Changing Climb/Cruise/Descent Speed Schedule	SP.11.19
Early Descent	SP.11.19
Step Climb or Descent from Cruise	SP.11.19
Performance and Progress Functions.	SP.11.20
Determining ETA and Fuel Remaining for New Destination	SP.11.20
Estimated Wind Entries for Cruise Waypoints.	SP.11.20
Step Climb Evaluation	SP.11.20
Entering Descent Forecasts	SP.11.21
Engine Out	SP.11.21
Required Time of Arrival (RTA).	SP.11.21
Entering an RTA Waypoint and Time	SP.11.21
Entering Speed Restrictions for RTA Navigation	SP.11.22
Entering New Time Error Tolerances for RTA Navigation .	SP.11.22
Additional CDU Functions	SP.11.23
Navigation Display Plan Mode (Center Step Operation) . .	SP.11.23
Enter Position Shift on Runway	SP.11.23
Fuel.	SP.12
Fuel Balancing	SP.12.1
Inflight Transfer of Fuel from Auxiliary Tanks.	SP.12.2
Refueling	SP.12.3
Fuel Load Distribution	SP.12.3
Fuel Pressure.	SP.12.3
Normal Refueling	SP.12.3
Refueling with Battery Only.	SP.12.3
Refueling with No AC or DC Power Source Available . . .	SP.12.3
Ground Transfer of Fuel	SP.12.4
Ground Transfer of Fuel from Auxiliary Tanks	SP.12.5
Auxiliary Fuel Display Panel Test.	SP.12.5
Fuel Crossfeed Valve Check	SP.12.6
Warning Systems	SP.15
Ground Proximity Warning System (GPWS) Test	SP.15.1

Adverse Weather	SP.16
Introduction	SP.16.1
Takeoff - Wet or Contaminated Runway Conditions.....	SP.16.1
Cold Weather Operations	SP.16.1
Exterior Inspection	SP.16.2
Preflight Procedure - First Officer	SP.16.3
Engine Start Procedure	SP.16.3
Engine Anti-ice Operation - On the Ground.....	SP.16.4
Wing Anti-ice Operation - On the Ground	SP.16.5
Before Taxi Procedure	SP.16.5
Taxi-Out	SP.16.6
De-icing/Anti-icing	SP.16.7
Before Takeoff Procedure	SP.16.8
Takeoff Procedure.....	SP.16.9
Engine Anti-Ice Operation - In Flight.....	SP.16.9
Fan Ice Removal	SP.16.10
Wing Anti-ice Operation - In Flight	SP.16.11
Cold Temperature Altitude Corrections	SP.16.12
Approach and Landing	SP.16.13
After Landing Procedure.....	SP.16.14
Shutdown Procedure	SP.16.15
Secure Procedure.....	SP.16.16
Hot Weather Operation.....	SP.16.17
Moderate to Heavy Rain, Hail or Sleet	SP.16.18
Turbulence	SP.16.19
Severe Turbulence.....	SP.16.19
Windshear.....	SP.16.21
Avoidance	SP.16.21
Precautions	SP.16.21

Supplementary Procedures
Introduction**Chapter SP**
Section 05

General

This section contains procedures (adverse weather operation, engine crossbleed start, and so on) that are accomplished as required rather than routinely performed on each flight.

Supplementary procedures may be required because of adverse weather, unscheduled maintenance or as a result of a procedure referenced in a Non-Normal Checklist. Additionally, some may be performed if the flight crew must accomplish preflight actions normally performed by maintenance personnel.

At the discretion of the Captain, procedures may be performed by memory, by reviewing the procedure prior to accomplishment, or by reference to the procedure during its accomplishment.

Supplementary procedures are provided by section. Section titles correspond to the respective chapter title for the system being addressed except for the adverse weather section.

Intentionally
Blank

Supplementary Procedures**Chapter SP****Airplane General, Emer. Equip., Doors, Windows****Section 1**

Interior Inspection

Emergency exit lights	Check
Passenger signs	Check
Service and entry doors	Check
Escape slides	Check pressure
Emergency exits	Check
Wing upper surfaces	Check
Lavatory fire extinguishers	Check
Emergency equipment	Check

Check availability and condition of emergency equipment, as required.

Flight Deck Door Access System Test

Flight deck access system switch	NORM
Flight deck door	Open
Flight deck door lock selector	AUTO
Emergency access code	Enter
ENT key	Push

Verify alert sounds.

Verify AUTO UNLK light illuminates.

Flight deck door lock selector	DENY
--------------------------------------	------

Verify AUTO UNLK light extinguishes.

Flight deck door lock selector	UNLKD
--------------------------------------	-------

Flight deck access system switch	OFF
--	-----

Verify LOCK FAIL light illuminates.

Flight deck access system switch NORM

Guard - Down

Verify LOCK FAIL light extinguishes.

Water System Draining

Lavatory water supply selector valves SUPPLY/DRAIN

Galley water supply shutoff valves SUPPLY ON

The shutoff valve is found adjacent to each wet galley sink.

Drain line Connect to drain ports

There are two drain port locations:

- below the main passenger entry door
- aft of the water service panel

Water service panel Open

Tank drain valve handle OPEN

Drains potable water tank and water system aft of the wings.

Forward lavatory drain valve OPEN

Drain valve is found below the sink in the forward lavatory only.

Drain valves for coffee maker and
water boiler (if installed) OPEN

All galley and lavatory water faucets Open

Close faucets when water flow stops.

Accomplish the following items after verifying the potable water system
is empty:

Drain valves for coffee maker and
water boiler (if installed) CLOSED

Forward lavatory drain valve CLOSED

Tank drain valve handle CLOSED

Water service panel Close

Drain line Disconnect from drain ports

If the potable water tank will not be refilled immediately after the system is emptied, open the following circuit breakers and attach DO-NOT-CLOSE tags:

P18-3 circuit breaker panel

- LAVATORY WATER HEATER A
- LAVATORY WATER HEATER D
- LAVATORY WATER HEATER E

Power distribution panel number 1

- POT WATER COMPRESSOR
- WATER QTY IND

Forward Airstair Operation

[Option]

WARNING: Use care not to fall from the airstair platform when operating the forward entry door. The small platform area and bad weather can make the door difficult to operate.

CAUTION: Operation of airstair in winds exceeding 40 knots is not recommended.

CAUTION: Do not move airplane with stair extended.

Interior Control

WARNING: Open entry door to cocked position to allow clear visibility of area outside airplane to prevent injury to personnel. Do not open door beyond cocked position while operating airstair.

To extend:

Forward entry door Open to cocked position

When operating the airstair from the interior control panel, the forward entry door must be open to the cocked position. Safety circuits prevent airstair operation if the entry door is closed.

Control switch EXTEND

Note: For interior standby operation, the battery switch must be ON.

Hold until extension is complete.

The STAIRS OPER light illuminates during extension until the airstair is fully extended.

Note: The STAIRS OPER light will not illuminate with loss of AC power.

Control switch Release

Handrail extensions Engage

Release latch and pull inboard and up, extend and engage on the supports at the sides of the forward entry doorway.

To Retract:

Handrail extensions Disengage

Disengage from door supports, depress latch at base of forward extension to permit retraction within upper segment of handrail. Slide right and left extensions down along upper rails. Stowing in appropriate stowage points provides circuit continuity for energizing retract relay.

CAUTION: Use of the standby control switch bypasses all safety circuits. Airstair handrail extensions must be stowed or substantial damage could result.

Control switch RETRACT

Hold until retraction is complete.

The STAIRS OPER light illuminates during retraction until the airstair door is fully closed.

Note: The STAIRS OPER light will not illuminate with loss of AC power.

Control switch Release

Exterior Control

To Extend:

Normal mode:

AIRSTAIRS switch EXTEND

Standby mode:

POWER switch Hold in STANDBY

AIRSTAIRS switch EXTEND

Forward entry door Open to cocked position

WARNING: Extend and connect the airstair aft handrail to protect against falling and prevent injuries to personnel.

Aft handrail extension Engage

Release latch and pull inboard and up, extend and engage on the support at the side of the forward entry door.

WARNING: Step down the airstair as the forward entry door moves to the open position to prevent injuries to personnel.

Forward entry door Fully open

Forward handrail extension Engage

Release latch and pull inboard and up, extend and engage on the support at the side of the forward entry door.

To Retract:

WARNING: Do not disengage the airstair aft handrail at this time. Injuries to personnel can occur during forward entry door operations if the aft handrail is disengaged.

Forward handrail extension Disengage

Disengage from door support, depress latch at base of forward extension to permit retraction within upper segment of handrail. Slide right and left extensions down along upper rails. Stowing in appropriate stowage points provides circuit continuity for energizing retract relay.

WARNING: Step down the airstair as the forward entry door moves to the cocked position to prevent injuries to personnel.

Forward entry door Close to cocked position

Aft handrail extension Disengage

Disengage from door support, depress latch at base of forward extension to permit retraction within upper segment of handrail. Slide right and left extensions down along upper rails. Stowing in appropriate stowage points provides circuit continuity for energizing retract relay.

Forward entry door Fully close

CAUTION: Use of the standby control switch bypasses all safety circuits. Airstair handrail extension must be stowed or substantial damage could result.

Normal mode:

AIRSTAIRS switch RETRACT

Standby mode:

POWER switch Hold in STANDBY

AIRSTAIRS switch RETRACT

Oxygen Mask Microphone Test

[Without Mask/Boom switch]

FLT INT switch Push

SPKR switch On

RESET/TEST switch Push and hold

EMERGENCY/Test selector Push and hold

Push-to-Talk switch I/C

Simultaneously push the Push-to-Talk switch, the
EMERGENCY/Test selector and the RESET/TEST switch.

Verify oxygen flow sound is heard through the flight deck speaker.

Push-to-Talk switch Release

EMERGENCY/Test selector Release

RESET/TEST switch Release

SPKR switch As needed

ETOPS

Operators conducting ETOPS are required to comply with appropriate regulations. An operator must have an ETOPS configured and approved airplane, and approved flight operations and maintenance programs in place to support ETOPS.

APU Operation

Unless otherwise authorized, start the APU before the ETOPS segment.
The APU must be on for the entire ETOPS segment.

Fuel Crossfeed Valve Check

During the last hour of cruise, do the following steps:

- Crossfeed selectorOpen
Verify that the VALVE OPEN light illuminates bright, then dim.
- Crossfeed selectorClose
Verify that the VALVE OPEN light illuminates bright, then
extinguishes.

Wing–Body Overheat Test

Wing–body OVHT TEST switch Push
Hold for a minimum of 5 seconds.

Both WING–BODY OVERHEAT lights – illuminated

MASTER CAUTION – illuminated

AIR COND system annunciator – illuminated

Wing–body OVHT TEST switch Release

Both WING–BODY OVERHEAT lights – extinguished

MASTER CAUTION lights – extinguished

AIR COND system annunciator – extinguished

External Air Cart Use

CAUTION: The BAT switch should always be on when using the airplane air conditioning system since the protective circuits are DC. This ensures protection in the event of loss of AC power.

Note: For engine start with a ground air source, see section SP.7.

APU BLEED air switch OFF

ISOLATION VALVE switch OPEN

[\[737-600/700\]](#)

RECIRC FAN switch AUTO

[\[737-800/900\]](#)

RECIRC FAN switches AUTO

[\[737-800/900\]](#)

Trim Air Switch ON

PACK switches AUTO or HIGH

Cabin temperature selectors AUTO

Set for desired temperature.

Duct pressure 20 psi minimum

If external air cannot hold 20 psi minimum and the APU is operating:

ISOLATION VALVE switch AUTO

APU BLEED air switch ON

APU supplies left pack and external air source supplies right pack.

Ground Conditioned Air Use

Before connecting ground conditioned air:

PACK switches OFF

Prevents pack operation if bleed air is supplied to the airplane.

After disconnecting ground conditioned air:

PACK switches As required

Isolated Pack Operation during Engine Start

To improve cabin air quality between starting the first and second engine:

CAUTION: Moving engine BLEED air switches while a starter is engaged can damage the starter.

Engine No. 2 Start

After engine No. 2 stabilized:

ISOLATION VALVE switch CLOSE

Right PACK switch AUTO

Duct pressure Stabilized

Engine No. 1 Start

After engine No. 1 stabilized:

ISOLATION VALVE switch AUTO

Pressurization System Manual Mode Test

PACK switches OFF

Pressurization mode selector MAN

AUTO FAIL and ALTN lights – extinguished.

MANUAL light – illuminated.

Outflow valve switch CLOSE

Verify outflow valve position indicator moves toward CLOSE.

Outflow valve switch OPEN

Verify outflow valve position indicator moves toward OPEN.

Pressurization mode selector AUTO

Verify outflow valve position indicator moves toward OPEN.

MANUAL light – extinguished.

Manual Mode Operation

CAUTION: Switch actuation to the manual mode causes an immediate response by the outflow valve. Full range of motion of the outflow valve can take up to 20 seconds.

Pressurization mode selector MAN

MANUAL light – illuminated

CABIN/FLIGHT ALTITUDE placard Check

Determine the desired cabin altitude.

If a higher cabin altitude is desired:

Outflow valve switch (momentarily) OPEN

Verify the outflow valve position indicator moves right, cabin altitude climbs at the desired rate, and differential pressure decreases. Repeat as necessary.

If a lower cabin altitude is desired:

Outflow valve switch (momentarily) CLOSE

Verify the outflow valve position indicator moves left, cabin altitude descends at the desired rate, and differential pressure increases. Repeat as necessary.

During Descent

Thrust lever changes should be made as slowly as possible to prevent excessive pressure bumps.

Outflow valve switch (momentarily) CLOSE

During descent, intermittently position the outflow valve switch toward CLOSE, observing cabin altitude decrease as the airplane descends.

Before entering the landing pattern, slowly position the outflow valve to full open to depressurize the airplane. Verify differential pressure is zero.

Pressurization Control Operation – Landing at Alternate Airport

At top of descent:

LAND ALT Indicator Reset
Reset to new destination field elevation.

Automatic Pressurization Control – Departure Airport Elevation Above 8400 Feet

[Option - High Altitude Landing option without High Altitude Landing switch]

Note: This procedure is not authorized if the CABIN ALTITUDE lights are installed and operative.

Oxygen masks and regulators ON, Normal

Supplemental oxygen must be used from departure until the cabin altitude is below 8000 feet.

After electrical power is applied to the airplane:

ALT HORN CUTOUT switch Push

Monitor CABIN ALT and CABIN rate of CLIMB indicators during climbout to ensure cabin altitude is descending below 8500 feet. No cabin altitude warning is provided until the cabin altitude warning system is reset to 10,000 feet after the cabin altitude descends below 8500 feet.

If landing altitude is at or below 6000 feet:

LAND ALT indicator Destination field elevation

If landing altitude is above 6000 feet:

Do the Automatic Pressurization Control - Landing Airport Elevation
Above 6000 Feet supplementary procedure.

Automatic Pressurization Control – Landing Airport Elevation Above 6000 Feet

**[Option - High Altitude Landing option without High Altitude Landing
switch]**

Note: This procedure is not authorized at airports with a landing field
elevation above 8400 feet if the CABIN ALTITUDE lights are
installed and operative.

Do the normal Preflight Procedure - First Officer except as modified
below:

Prior to takeoff:

LAND ALT indicator 6000 feet

At initial descent or approximately 20 minutes prior to landing:

LAND ALT indicator Destination field elevation

If landing elevation is above 9000 feet:

Note: The intermittent cabin altitude/configuration warning
horn will sound and the CABIN ALTITUDE lights (if
installed and operative) will illuminate at a cabin
altitude of approximately 10,000 feet.

Oxygen masks and regulators ON, Normal
Supplemental oxygen must be used anytime the cabin
altitude is above 10,000 feet.

ALT HORN CUTOUT switch Push

Unpressurized Takeoff and Landing

When making a no engine bleed takeoff or landing with the APU
inoperative:

Takeoff

PACK switches AUTO
ISOLATION VALVE switch CLOSE
Engine BLEED air switches OFF

After Takeoff

Note: If engine failure occurs, do not position engine BLEED air switches ON until reaching 1500 feet or until obstacle clearance height has been attained.

At not less than 400 feet, and prior to 2000 feet above field elevation:

Engine No. 2 BLEED air switch ON

When CABIN rate of CLIMB indicator stabilizes:

Engine No. 1 BLEED air switch ON

ISOLATION VALVE switch AUTO

Landing

When below 10,000 feet and starting the turn to final approach:

Engine BLEED air switches OFF

Avoid high rates of descent for passenger comfort.

No Engine Bleed Takeoff and Landing

When making a no engine bleed takeoff or landing with the APU operating.

Takeoff

Note: If anti-ice is required for taxi, configure for a “No Engine Bleed Takeoff” just prior to take-off.

Note: If anti-ice is not required for taxi, configure for a “No Engine Bleed Takeoff” just after engine start.

Right PACK switch AUTO

ISOLATION VALVE switch CLOSE

Left PACK switch AUTO

Engine No. 1 BLEED air switch OFF
APU BLEED air switch ON
Engine No. 2 BLEED air switch OFF
[\[737-800/-900\]](#)
Trim Air Switch ON
WING ANTI-ICE switch OFF

The WING ANTI-ICE switch must remain OFF until the engine BLEED air switches are repositioned to ON and the ISOLATION VALVE switch is repositioned to AUTO.

After Takeoff

Note: If engine failure occurs, do not position engine BLEED air switches ON until reaching 1500 feet or until obstacle clearance height has been attained.

Engine No. 2 BLEED air switch ON
APU BLEED air switch OFF
When CABIN rate of CLIMB indicator stabilizes:

Engine No. 1 BLEED air switch ON
ISOLATION VALVE switch AUTO

Landing

If additional go-around thrust is desired, configure for a “No Engine Bleed Landing.”

When below 10,000 feet:

WING ANTI-ICE switch OFF
Right PACK switch AUTO
ISOLATION VALVE switch CLOSE
Left PACK switch AUTO
Engine No. 1 BLEED air switch OFF
APU BLEED air switch ON

Engine No. 2 BLEED air switch OFF

Supplementary Procedures
Anti-Ice, Rain

Chapter SP
Section 3

Anti-Ice Operation

Requirements for use of anti-ice and operational procedures for engine and wing anti-ice are contained in Supplementary Procedures, Adverse Weather Section SP.16.

Cold-Soaked Fuel Frost

Frost may form on the lower and upper wing surfaces due to cold-soaked fuel touching the wing surface after long flights with large fuel loads.

Exterior Safety Inspection - Airplanes with Defined Cold-Soaked Fuel Frost Area

Note: The presence of the painted cold soaked fuel frost area on the upper wing and the inclusion of these procedures in the FCOM do not constitute operational approval. Operators may be allowed to use these procedures by referring to the appropriate regulatory authority for approval or exemption, as required, to implement the procedure.

Surfaces Check

Visually inspect the lower and upper wing surfaces.

If there is frost or ice on the lower surface outboard of measuring stick 4, there may also be frost or ice on the upper surface. The distance that the frost extends outboard of measuring stick 4 can be used as an indication of the extent of the frost on the upper surface.

[Option: With Blended Winglets]


Takeoff with light coatings of frost, up to 1/8 inch (3 mm) in thickness, on lower wing surfaces due to cold fuel is allowable; however, all leading edge devices, all control surfaces, tab surfaces, winglet surfaces and control balance cavities must be free of snow, ice and frost. If the frost on the lower surface is greater than 1/8 inch (3 mm) in thickness, all snow, ice and frost on the wings must be removed using appropriate deicing/anti-icing procedures.

Takeoff with light coatings of frost on upper wing surfaces due to cold fuel (cold-soaked fuel frost) is allowable, provided the following conditions are met:

- the frost on the upper surface is less than 1/16 inch (1.5 mm) in thickness
- the extent of the frost is similar on both wings
- the frost is on or between the black lines defining the allowable cold-soaked fuel frost area (see figure) with no ice or frost on the leading edges or control surfaces
- the ambient air temperature is above freezing (0°C, 32°F)
- there is no precipitation or visible moisture (rain, snow, drizzle or fog with less than 1 mile visibility, etc.)

If all the above criteria are not met, all snow, ice and frost on the wings must be removed using appropriate deicing/anti-icing procedures.

Note: If the frost on the lower surface is less than 1/16 inch (1.5 mm) in thickness, the frost on the upper surface will be less than 1/16 inch (1.5 mm) in thickness.

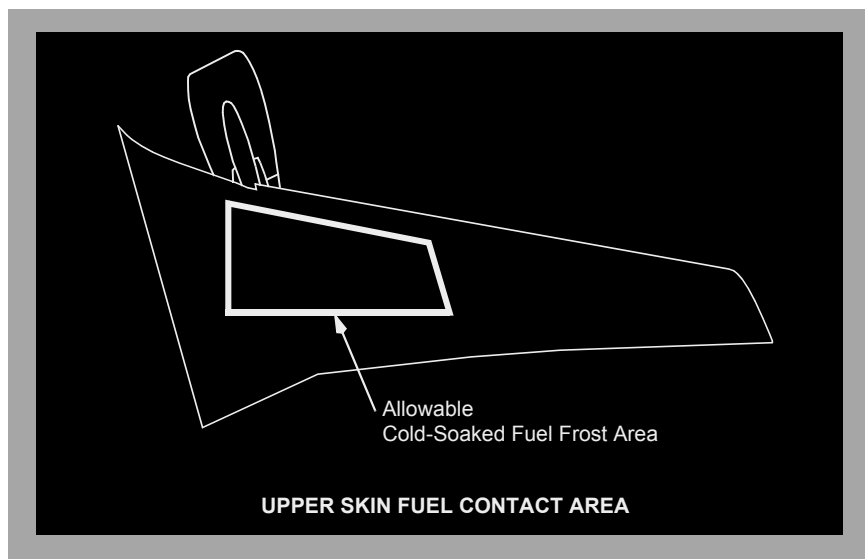

Exterior Safety Inspection - Airplanes without Defined Cold-Soaked Fuel Frost Area

Surfaces Check

Visually inspect the lower and upper wing surfaces.

If there is frost or ice on the lower surface outboard of measuring stick 4, there may also be frost or ice on the upper surface. The distance that the frost extends outboard of measuring stick 4 can be used as an indication of the extent of the frost on the upper surface.

[Option: With Blended Winglets]

Takeoff with light coatings of frost, up to 1/8 inch (3 mm) in thickness, on lower wing surfaces due to cold fuel is allowable; however, all leading edge devices, all control surfaces, tab surfaces, winglet surfaces and control balance cavities must be free of snow, ice and frost. If the frost on the lower surface is greater than 1/8 inch (3 mm) in thickness, all snow, ice and frost on the wings must be removed using appropriate deicing/anti-icing procedures.

Takeoff with frost on upper wing surfaces due to cold fuel (cold-soaked fuel frost) is not allowable. If any frost is present on the upper wing surface, all snow, ice and frost on the wings must be removed using appropriate deicing/anti-icing procedures.

Window Heat System Tests

Overheat Test

The overheat test simulates an overheat condition to check the overheat warning function of the window heat system.

WINDOW HEAT switches ON

WINDOW HEAT TEST switch OVHT

OVERHEAT lights – On

[Option - Green ON light]

ON lights – Extinguish

Lights extinguish after approximately 1 minute.

MASTER CAUTION – On

ANTI-ICE system annunciator – On

WINDOW HEAT switches Reset

Position the WINDOW HEAT switches OFF, then ON.

Power Test

[Option - Green ON light]

The power test verifies operation of the window heat system. The test may be accomplished when any of the window heat ON lights are extinguished and the associated WINDOW HEAT switch is ON.

WINDOW HEAT switches ON

Note: Do not perform the power test when all ON lights are illuminated

WINDOW HEAT TEST switch PWR

The controller is forced to full power, bypassing normal temperature control. Overheat protection is still available.

WINDOW HEAT ON lights Illuminated

If any ON light remains extinguished, the window heat system is inoperative. Observe the maximum airspeed limit of 250 kts below 10,000 feet.

Supplementary Procedures
Automatic Flight

Chapter SP
Section 4

Level Change Climb/Descent

ALTITUDE selector Set desired altitude

Note: If a new MCP altitude is selected while in ALT ACQ, the AFDS engages in V/S and the existing vertical speed is maintained.

LVL CHG switch Push

Verify FMA display:

Thrust mode (climb) – N1

Thrust mode (descent) – RETARD then ARM

Pitch mode – MCP SPD

IAS/MACH Selector Set desired speed

Vertical Speed (V/S) Climb/Descent

ALTITUDE selector Set desired altitude

Note: If a new MCP altitude is selected while in ALT ACQ, the AFDS engages in V/S and the existing vertical speed is maintained.

V/S thumbwheel Set desired vertical speed

Verify FMA display:

Thrust mode (climb or descent) – MCP SPD

Pitch mode – V/S

IAS/MACH Selector Set desired speed

To transition to the vertical speed mode from another engaged climb or descent mode:

V/S mode switch Push

V/S climb mode engages at existing V/S.

V/S thumbwheel Set desired vertical speed

Verify FMA display:

Thrust mode (climb or descent) – MCP SPD

Pitch mode – V/S

IAS/MACH Selector Set desired speed

Intervention of FMC Altitude Constraints during VNAV Climb

[Option - Speed and altitude intervention]

MCP altitude selector Set new altitude

New altitude must be higher than the FMC altitude constraint(s) to be deleted.

ALT INTV switch Push

Each push of the ALT INTV switch will delete an FMC altitude constraint.

Intervention of FMC Cruise Altitude during VNAV Cruise

[Option - Speed and altitude intervention]

MCP altitude selector Set

ALT INTV switch Push

If a higher altitude is selected, a CRZ climb will be initiated.

If a lower altitude is selected, an early descent will be initiated.

Intervention of FMC Altitude Constraints during VNAV Descent

[Option - Speed and altitude intervention]

MCP altitude selector Set new altitude

New altitude must be lower than the FMC altitude constraint (s) to be deleted.

ALT INTV switch Push

Each push of the ALT INTV switch will delete an FMC altitude constraint.

If all FMC altitude constraints are deleted, the descent mode will revert to a VNAV speed descent.

Intervention of FMC Airspeed Constraints during VNAV

[Option - Speed and altitude intervention]

SPD INTV switch Push

MCP IAS/MACH display shows current FMC target speed.

IAS/MACH Selector Set desired speed

VNAV remains engaged.

To resume former FMC speed:

SPD INTV switch Push

MCP IAS/MACH display blanks and FMC commanded VNAV
speed is active.

Altitude Hold

Altitude HOLD switch Push

Verify FMA display:

Pitch mode – ALT HOLD

Heading Select

Heading selector Set desired heading

Heading select switch Push

Verify FMA display:

Roll mode – HDG SEL

VOR Navigation

VHF NAV radio(s) Tune and Identify

COURSE selector Set desired course

When on an intercept heading to the VOR course:

VOR LOC mode switch Push

Verify VOR LOC armed mode annunciates.

A/P automatically captures the VOR course.

Verify VOR LOC engaged mode annunciates upon course capture.

Note: If change to a localizer frequency is desired when captured in the VOR mode, disengage VOR LOC mode prior to selection of the localizer. VOR LOC mode can then be reengaged.

Instrument Approach using Vertical Speed (V/S)

Note: Autopilot use is recommended until suitable visual reference is established.

Note: If required to remain at or above the MDA during the missed approach, the missed approach must be initiated at least 50 feet above MDA.

Recommended roll modes:

- RNAV, GPS, TACAN, LOC-BC, VOR or NDB approach: LNAV or HDG SEL.
- LOC, SDF or LDA approach: LOC or LNAV.

Ensure appropriate nav aids (VOR, LOC or NDB) are tuned and identified prior to commencing approach.

RNP appropriate for approach (if required) Verify/Enter
Allows appropriate alerting to occur if ANP exceeds RNP.

Before descent to MDA(H):

MCP altitude Set

Set the first intermediate altitude constraint or the MDA(H).
When the current constraint is assured, the next constraint may be set prior to ALT HOLD is engaged to achieve continuous descent path.

If constraints or MDA(H) do not end in zero zero, for example, 1820, set MCP ALTITUDE window to the closest 100 foot increment above the constraint.

At descent point:

Desired V/SSet

Set desired V/S to descend to MDA(H). Use a V/S that results in no level flight segment at the MDA(H).

Verify V/S mode annunciates.

Approximately 300 feet above MDA(H):

MCP altitude Set missed approach altitude

At MDA(H)/missed approach point:

If suitable visual reference is not established, execute a missed approach.

After a suitable visual reference is established:

A/P disengage switch Push

Disengage the autopilot before descending below MDA(H).

A/T disengage switch Push

Disengage the autothrottle before descending below MDA(H).

Circling Approach

Note: Autopilot use is recommended until intercepting the landing profile.

MCP altitude selectorSet

If the MDA(H) does not end in zero zero, for example, 1820, set MCP ALTITUDE window to the closest 100 foot increment above the MDA(H).

Accomplish an instrument approach, establish suitable visual reference and level off at MCP altitude.

[Option - VNAV ALT not enabled]

Verify ALT HLD mode annunciates.

MCP altitude selector Set missed approach altitude

HDG SEL switch Push

Verify HDG SEL mode annunciates.

Intercepting the landing profile:

Autopilot disengage switch Push

Autothrottle disengage switch Push

Instrument Approach - RNAV (RNP) SAAAR/AR

Note: Operators need approval to conduct RNAV (RNP) SAAAR/AR Instrument Approaches. For RNAV (GPS) and RNAV (GNSS) procedures use the Landing Procedure - Instrument Approach using VNAV in Normal Procedures.

Note: This procedure is not authorized using QFE.

The RNAV (RNP) SAAAR/AR Instrument Approach Procedure below supplements Normal Cruise, Descent and Approach Procedures and replaces the complete Landing Procedure. Additional information is given in case of a go-around.

Pre-approach Requirements

Airplane equipment required to begin the approach:

- EGPWS
- 2 FMCs, CDUs *
- 2 GPS Receivers
- Current Navigation Database
- 2 Radio Altimeters
- 2 ADIRUs, IRSs in NAV mode *
- 2 EFIS/MAP or PFD/ND displays (as installed) *
- 1 A/P and 2 F/Ds capable of LNAV and VNAV * (for RNP 0.15 or greater)
- 2 A/P and 2 F/Ds capable of LNAV and VNAV * (for RNP less than 0.15)

Note: Go-around/missed approach is required if the UNABLE REQ'D NAV PERF-RNP, FMC DISAGREE, or VERIFY POSITION alert is displayed unless suitable visual reference is established and maintained.

Note: Single failure of (*) items should cause the crew to consider a go-around/missed approach if that is the safest course of action.

Do the following prior to beginning the approach

- verify that the UNABLE REQD NAV PERF-RNP alert is not displayed
- review RNP availability predictions
- verify that the approach RNP is equal to or greater than:

[With NPS]

- 0.10 (A/P or F/D)
- set current local altimeter (remote altimeter settings not allowed)
- verify that wind is within limits published for the approach (if applicable)
- verify that the reported airport temperature is within published limits for the approach
- review maximum IAS for Radius-to-Fix (RF) legs for each segment of the approach (if applicable)
 - IAF to FAF: 240 knots
 - FAF to DA(H): maximum IAS for Category C minimums is 140 knots. For IAS 141 to 165 knots use Category D minimums. Do not exceed 165 knots.
 - missed approach: 240 knots
 - other speed restrictions as published for the approach.

Cruise Procedure

Pilot Flying	Pilot Monitoring
	When selecting the approach from the navigation database verify FMC LEGS page matches the charted approach. If the IAF has an “at or above” altitude restriction, it may be changed to an “at” altitude restriction using the same altitude. Speed modifications are allowed as long as the maximum published speed is not exceeded. No other lateral or vertical modifications after the IAF may be made.

Descent Procedure

Pilot Flying	Pilot Monitoring
In the approach briefing include speed and altitude restrictions, missed approach, engine failure, and unable RNP procedures.	Select VOR UPDATE - OFF on the NAV OPTIONS page. Inhibit other navaids as needed per NOTAM.

Approach Procedure

Complete the Approach Procedure before the initial approach fix, or the start of radar vectors to the final approach course.

Note: Conditions permitting, when ATC clears the crew to proceed direct to an intermediate fix or the FAF, a direct-to or intercept-course-to modification is acceptable unless the fix or FAF is immediately before an RF leg.

Pilot Flying	Pilot Monitoring
	On the RNP PROGRESS Page set or verify RNP for the approach.

[With NPS]

Note: For airplanes with NPS, the flight crew may enter 125 feet for vertical RNP. While there are no vertical RNP values published on the approach chart, the use of 125 feet will cause the NPS amber deviation exceedance alert to occur at 75 feet or slightly less deviation, since vertical ANP will be at least 50 feet at all times.

Landing Procedure

[With NPS]

Pilot Flying	Pilot Monitoring
	Notify the cabin crew to prepare for landing. Verify that the cabin is secure.
Select TERR on map. Select CDU: LEGS page.	Select TERR or WX radar on map.

BBJ Flight Crew Operations Manual


Pilot Flying	Pilot Monitoring
Use LNAV and VNAV or other pitch mode for initial descent. VNAV is required FAF inbound. Some approach procedures may require use of VNAV from the IAF onward.	
Call “FLAPS ____” according to the flap extension schedule or approach speed constraint.	Set the flap lever as directed. Monitor flaps and slats extension.
Approximately 2 NM before the FAF and after ALT HOLD or VNAV PTH or VNAV ALT (as installed) is annunciated: • set DA(H) on the MCP • select or verify VNAV • select or verify speed intervention (as installed)	
Maximum Lateral Deviation (XTK ERROR): NPS amber indication or 1 x RNP Maximum Vertical Deviation - FAF to DA: -75 feet Monitor NPS	
Approaching glide path, call: • “GEAR DOWN” • “FLAPS 15”	Set the landing gear lever to DN. Verify that the green landing gear indicator lights are illuminated. Set the flap lever to 15. [Without automatic ignition] Set the engine start switches to CONT.
Set the speed brake lever to ARM. Verify that the SPEED BRAKE ARMED light is illuminated.	
Beginning the final approach descent, call “FLAPS ____” as needed for landing.	Set the flap lever as directed.
Call “LANDING CHECKLIST.”	Do the LANDING checklist.

Pilot Flying	Pilot Monitoring
When at least 300 feet below the missed approach altitude, set the missed approach altitude on the MCP.	
At the final approach fix, verify the crossing altitude and crosscheck the altimeters (maximum 100 feet difference between primary altimeters).	
Monitor the approach.	
If suitable visual reference is established at DA(H), disengage the autopilot and autothrottle. Maintain the glide path to landing.	

[Without TO/GA to LNAV option]

Note: If a go-around/missed approach is needed, track the required course manually using the trend vector and map until LNAV is re-engaged.

Instrument Approach - RNAV (RNP) SAAAR/AR

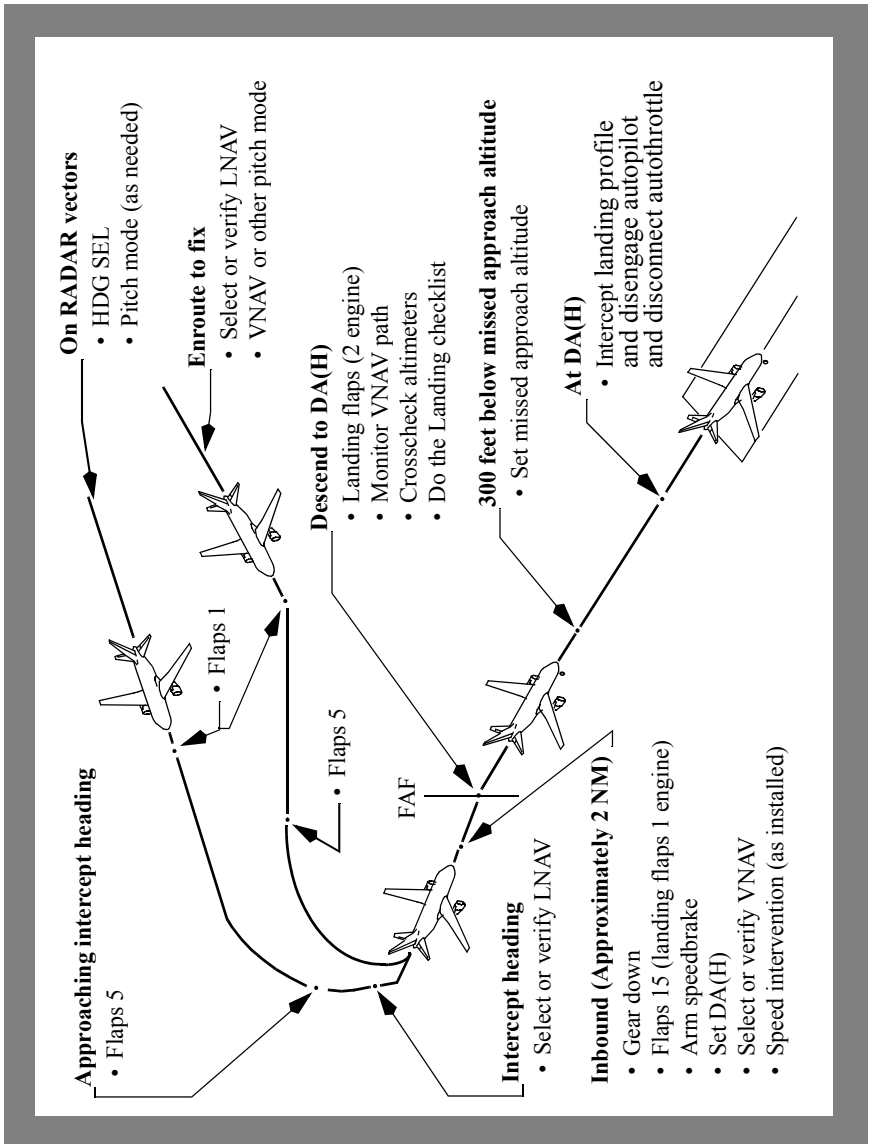

Intentionally
Blank

Cockpit Voice Recorder Test

[Option - Voice Recorder switch]

Note: The Cockpit VOICE RECORDER switch must be in the ON position or at least one engine must be operating to perform this test.

Test switch Push

After a slight delay:

[Option]

Test light ON

A tone may be heard through a headset plugged into the headset jack.

Test switch Release

Intentionally
Blank

Supplementary Procedures
Electrical**Chapter SP**
Section 6**Electrical Power Up**

The following procedure is accomplished to permit safe application of electrical power.

BATTERY switch Guard closed
STANDBY POWER switch Guard closed
ALTERNATE FLAPS master switch Guard closed
Windshield WIPER selector(s) PARK
ELECTRIC HYDRAULIC PUMPS switches OFF
LANDING GEAR lever DN

Verify that the green landing gear indicator lights are illuminated.

Verify that the red landing gear indicator lights are extinguished.

If external power is needed:

Verify that the GRD POWER AVAILABLE light is illuminated.

GRD POWER switch – ON

Verify that the SOURCE OFF lights are extinguished.

Verify that the TRANSFER BUS OFF lights are extinguished.

Verify that the STANDBY PWR OFF light is extinguished.

If APU power is needed:

Verify that the engine No. 1, APU and the engine No. 2 fire switches are in.

Alert ground personnel before the following test is accomplished.

OVERHEAT DETECTOR switches – NORMAL

TEST switch – Hold to FAULT/INOP

Verify that the MASTER CAUTION lights are illuminated.

Verify that the OVHT/DET annunciator is illuminated.

Verify that the FAULT light is illuminated.

If the FAULT light fails to illuminate, the fault monitoring system is inoperative.

Verify that the APU DET INOP light is illuminated.

Do not operate the APU if the APU DET INOP light fails to illuminate.

TEST switch – Hold to OVHT/FIRE

Verify that the fire warning bell sounds.

Verify that the master FIRE WARN lights are illuminated.

Verify that the MASTER CAUTION lights are illuminated.

Verify that the OVHT/DET annunciator is illuminated.

Master FIRE WARN light – Push

Verify that the master FIRE WARN lights are extinguished.

Verify that the fire warning bell cancels.

Verify that the engine No. 1, APU and the engine No. 2 fire switches stay illuminated.

Verify that the ENG 1 OVERHEAT and ENG 2 OVERHEAT lights stay illuminated.

EXTINGUISHER TEST switch – Check

TEST Switch - Position to 1 and hold

Verify that the three green extinguisher test lights are illuminated.

TEST Switch - Release

Verify that the three green extinguisher test lights are extinguished.

Repeat for test position 2.

APU - Start

Note: If extended APU operation is needed on the ground, position an AC operated fuel pump ON. If fuel is loaded in the center tank, position the left center tank fuel pump switch ON to prevent a fuel imbalance before takeoff.

CAUTION: Center tank fuel pump switches should be positioned ON only if the fuel quantity in the center tank exceeds 1000 lbs.

CAUTION: Do not operate the center tank fuel pumps with the flight deck unattended.

When the APU GEN OFF BUS light is illuminated:

APU GENERATOR bus switches - ON

Verify that the SOURCE OFF lights are extinguished.

Verify that the TRANSFER BUS OFF lights are extinguished.

Verify that the STANDBY PWR OFF light is extinguished.

Verify that the APU MAINT light is extinguished.

Verify that the APU LOW OIL PRESSURE light is extinguished.

Verify that the APU FAULT light is extinguished.

Verify that the APU OVERSPEED light is extinguished.

Wheel well fire warning system Test

Test switch – Hold to OVHT/FIRE

Verify fire warning bell sounds, master FIRE WARN lights, MASTER CAUTION lights and OVHT/DET annunciator illuminate.

Fire warning BELL CUTOFF switch – Push

Verify that the master FIRE WARN lights extinguish.

Verify that the fire warning bell cancels.

Verify that the WHEEL WELL fire warning light is illuminated.

Electrical Power Down

This procedure assumes the Secure procedure is complete.

APU switch and/or GRD POWER switch OFF

If APU was operating:

Delay approximately 2 minutes after the APU GEN OFF BUS
light extinguishes before placing the BATTERY switch OFF.

BATTERY switch OFF

Standby Power Test

[Option – Dual battery]

Battery switch ON

AC–DC meter selectors STBY PWR

If APU generator is on–line:

APU GEN No. 1 switch OFF

APU GEN No. 2 switch OFF

If ground power is on–line:

GRD PWR switch OFF

STANDBY POWER switch OFF

Check STANDBY PWR OFF light illuminated.

AC–DC voltmeters Zero

STANDBY POWER switch BAT

Check STANDBY PWR OFF Light extinguished.

AC–DC voltmeters Check

AC voltmeter 115 +/-5 volts

DC voltmeter 24 +/-2 volts

Frequency meter Check

Check frequency meter for normal indication: 400 +/- 10 CPS.

DC meter selector BAT

Check DC voltmeter for normal indication: 24 +/- 2 volts.

Check DC ammeter for discharge indication: a negative value.

DC meter selector AUX BAT

Check DC voltmeter for normal indication: 24 +/- 2 volts.

Check DC ammeter for discharge indication: a negative value.

STANDBY POWER switch AUTO

GRD PWR switch or APU GEN No. 1 and No. 2 switches ON

Note: It may take up to 3 minutes for CDS displays to recover when power is interrupted for more than 2 seconds on the ground.

Intentionally
Blank

Supplementary Procedures
Engines, APU

Chapter SP
Section 7

Battery Start

(With APU bleed or ground air available)

Maintenance documents Check

[Option]

FLIGHT DECK ACCESS SYSTEM

switch Guard closed

BATTERY switch Guard closed

ELECTRIC HYDRAULIC PUMPS

switches OFF

LANDING GEAR lever DN

Verify that the green landing gear indicator lights are illuminated.

Verify that the red landing gear indicator lights are extinguished.

Emergency equipment Check

Fire extinguisher - Checked and stowed

Crash axe - Stowed

Escape ropes - Stowed

Other needed equipment - Checked and stowed.

Flight recorder switch Guard closed

Circuit breakers (P6 panel) Check

Circuit breakers (control stand, P18 panel) Check

Accomplish the Interior and Exterior Inspection if required, except for items requiring electrical or hydraulic power.

Verify that the oxygen pressure is sufficient for flight.

Accomplish the following Preflight Procedure - First Officer items:

Overheat and fire protection panel Check

OVERHEAT DETECTOR switches - NORMAL

TEST switch - Hold to FAULT/INOP

TEST switch - Hold to OVHT/FIRE

EXTINGUISHER TEST switch - Check

APU switch

(bleed air source, if available) START

On the captain's command, the first officer reads and the captain does the following items:

Oxygen Test and set

CAB/UTIL power switch ON

IFE/PASS seat power switch ON

EMERGENCY EXIT LIGHTS switch Guard closed

Passenger signs Set

HYDRAULIC PUMP switches ON

Air conditioning panel Set

PACK switches - AUTO or HIGH

Engine BLEED air switches - ON

APU BLEED air switch - ON

SPEED BRAKE lever DOWN detent

Reverse thrust levers Down

Forward thrust levers Closed

Parking brake Set

Note: The wheels should be chocked in case the brake pressure has bled down.

Engine start levers CUTOFF

Papers Aboard

When cleared for Engine Start, do the following:

Air conditioning PACK switches OFF

ANTICOLLISION light switch ON

Ignition select switch IGN-R

Engine Start

Engine No. 1 start Accomplish

Only N1, N2, and oil quantity are displayed until the EECs are powered.

Generator 1 switch ON

IRS mode selectors OFF, then NAV

Verify that the ON DC lights illuminate, then extinguish

Verify that the ALIGN lights are illuminated.

FMC/CDU Set IRS position

Verify that the following are sufficient for flight:

- hydraulic quantity
- engine oil quantity

WARNING: If engine No. 1 was started using a ground air source, to minimize the hazard to ground personnel, the external air should be disconnected and engine No. 2 started using the Engine Crossbleed Start procedure.

Engine No. 2 start Accomplish

Generator 2 switch ON

Cabin pressurization panel Set

FLIGHT ALTITUDE indicator - Cruise altitude

LANDING ALTITUDE indicator - Destination field elevation

Pressurization mode selector - AUTO

Verify that the ALTN light is extinguished.

Verify that the MANUAL light is extinguished.

Complete the Preliminary Preflight Procedure - Captain or First Officer by doing the following items:

PSEU light Verify extinguished

GPS light Verify extinguished

SERVICE INTERPHONE switch OFF

ENGINE panel Set

Verify that the REVERSER lights are extinguished

Verify that the ENGINE CONTROL lights are extinguished

EEC switches - ALTN then ON

Oxygen panel Set

CREW OXYGEN pressure indicator - Check

Verify that the pressure meets dispatch requirements.

Note: PASSENGER OXYGEN switch activation causes
deployment of the passenger oxygen masks.

PASSENGER OXYGEN switch - Guard closed

Verify that the PASS OXY ON light is extinguished.

Landing gear indicator lights Verify illuminated

Manual gear extension access door Closed

Accomplish the normal CDU Preflight Procedure - Captain and First
Officer, Preflight Procedure - First Officer, Preflight Procedure - Captain,
Before Start Procedure and Before Taxi Procedure to ensure that the
flight deck preparation is complete.

BEFORE TAXI checklist Accomplish

IRS alignment Complete

The airplane is ready for taxi. Refer to the normal checklists for
subsequent checks.

Starting with Ground Air Source (AC electrical power available)

Engine No. 1 must be started first.

When cleared to start:

APU BLEED air switch OFF

Engine No. 1 start Accomplish

Use normal start procedures.

WARNING: To minimize the hazard to ground personnel, the external air should be disconnected, and engine No. 2 started using the Engine Crossbleed Start procedure.

Engine Crossbleed Start

Prior to using this procedure, ensure that the area to the rear is clear.

Engine BLEED air switches ON

APU BLEED air switch OFF

PACK switches OFF

ISOLATION VALVE switch AUTO

Ensures bleed air supply for engine start.

Engine thrust lever

(operating engine) Advance thrust lever

Advance thrust lever until bleed duct pressure indicates 30 PSI.

Non-operating engine Start

Use normal start procedures with crossbleed air.

After starter cutout, adjust thrust on both engines, as required.

Setting N1 Bugs with No Operative FMC (Manual N1 Bug Setting)

Reference the Performance – Inflight section to determine N1 setting for desired phase of flight.

N1 SET outer knob BOTH

The last FMC computed value is displayed by reference N1 bugs and readouts. If the FMC has not calculated an input since power up, a default value of 104% is displayed.

N1 SET inner knob Set N1

Note: If the N1 SET outer knob is returned to the AUTO position, the bugs and readouts will revert to the last FMC computed value or 104% if the FMC has not calculated an input since power up.

High Altitude Airport Engine Start (Above 8400 Feet)

[Option - High Altitude Landing option with or without High Altitude Landing switch]

Engine start Accomplish

An indication of N1 rotation plus maximum motoring and a minimum of 20% N2 are required prior to introducing fuel to the engine.

Note: Maximum motoring occurs when N2 acceleration is less than 1% in approximately 5 seconds.

Fire and Overheat System Test with an Inoperative Loop

To determine the specific inoperative loop:

OVHT DET switchesA

Test switchOVHT/FIRE

If the FAULT light remains extinguished and both ENG OVERHEAT lights and engine fire switches illuminate, loop A is good.

If the FAULT light illuminates and one of the ENG OVERHEAT lights and corresponding engine fire switch remain extinguished, there is a fault in loop A of the detection system of that engine.

OVHT DET switchesB

Test switchOVHT/FIRE

If the FAULT light remains extinguished and both ENG OVERHEAT lights and engine fire switches illuminate, loop B is good.

If the FAULT light illuminates and one of the ENG OVERHEAT lights and corresponding engine fire switch remain extinguished, there is a fault in loop B of the detection system of that engine.

OVHT DET switchesAs required

Select the good loop for each engine (NORMAL if both loops tested good).

Test switchOVHT/FIRE

If the test is successful leave the fire panel in this configuration for flight.

Intentionally
Blank

Supplementary Procedures Flight Instruments, Displays

Chapter SP Section 10

Altimeter Difference

Note: If flight in RVSM airspace is planned use the RVSM table in the limitations section.

This procedure is accomplished when there is a noticeable difference between the altimeters. Accomplish this procedure in stabilized level flight or on the ground.

Altimeter barometric settings Check

Check all altimeters set to proper barometric setting for phase of flight.

Standby altimeter baro set control Rotate and reset

Rotate to a different setting, then reset proper barometric setting.

Altimeters Crosscheck

Maximum differences between the altimeter readings:

Altitude	CDS/CDS	CDS/Standby
Sea Level	50 feet	60 feet
5,000 feet	50 feet	80 feet
10,000 feet	60 feet	120 feet
15,000 feet	70 feet	(see note)
20,000 feet	80 feet	(see note)
25,000 feet	100 feet	(see note)
30,000 feet	120 feet	(see note)
35,000 feet	140 feet	(see note)
40,000 feet	160 feet	(see note)
41,000 feet	170 feet	(see note)

Note: Above 10,000 feet and 0.4 Mach, position error causes the tolerance to diverge rapidly and direct crosscheck becomes inconclusive. Between 10,000 feet and 29,000 feet, differences greater than 400 feet should be suspect and verified by ground maintenance checks. Between 29,000 feet and the maximum operating altitude, differences greater than 500 feet should be suspect and verified by ground maintenance checks.

If it is not possible to identify which altimeter is indicating the correct altitude:

ATCNotify

QFE Operation

This procedure is accomplished when ATC altitude assignments are referenced to QFE altimeter settings.

- Note:** Do not use LNAV or VNAV below transition altitude/level.
- Altitudes in the navigation data base are not referenced to QFE.
- Use only raw data for navigation.

[Option - Altimeter with QFE]

FMC/CDU APPROACH REFERENCE page
or TAKEOFF REFERENCE page 2/2 Select

LANDING REF line select key Push

Verify QFE selected.
[This sets the landing altitude to zero.]

Altimeters Set

Set altimeters to QFE when below transition altitude/level.

- Note:** If QFE altimeter setting is beyond the range of the altimeters, QNH procedures must be used with QNH set in the altimeters.

Landing altitude indicator Set at zero

Setting Airspeed Bugs with No Operative FMC (Manual Airspeed Bug Setting)

To set reference airspeed bugs for takeoff:

Speed reference selector (outer) V1
 Default speed of 80 knots is displayed.

Speed reference selector (inner) Set V1 speed
 V1 bug is displayed when a speed greater than 80 knots is set.
 The NO VSPD flag is displayed until both V1 and VR are set.

Speed reference selector (outer) VR
 Default speed of 80 knots is displayed.

Speed reference selector (inner) Set VR speed
 VR bug is displayed when a speed greater than 80 knots is set.
 The NO VSPD flag is removed after both V1 and VR are set.

MCP speed selector Set V2
 Airspeed cursor and V2+15 bug move to the correct speeds.

Speed reference selector (outer) WT
 Default weight of 32,000 kgs / 70,000 lbs is displayed.

Speed reference selector (inner) Set takeoff gross weight
 Flaps up maneuver speed bug is displayed.

Note: If VREF is selected on the ground, INVALID ENTRY is displayed.

To set the spare bug, if desired:

Speed Reference selector (outer) Spare bug
 Default speed of 60 knots is displayed.

Speed reference selector (inner) Set
 Set speed as desired.

Speed reference selector (outer) SET

Digital readout is removed.

Note: When the flap lever is set to any takeoff flap setting above flaps 1, a bug comes into view for the next smaller flap maneuvering speed, between takeoff flaps and flaps up. For example, if the flap lever is set to 15 for takeoff, a bug for flaps 5 maneuvering speed will appear. For a flaps 1 takeoff, the flaps 1 maneuvering speed will be displayed.

To set reference airspeed bugs for approach:

Speed reference selector (outer) WT

Default weight of 70,000 lbs is displayed.

Speed reference selector (inner) Set current gross weight

Flaps up maneuver speed bug is displayed.

Speed reference selector (outer) VREF

Default speed of 80 knots is displayed.

Speed reference selector (inner) Set VREF speed

The green VREF bug and white VREF +15 bug are shown when a speed greater than 80 knots is set.

Note: If V1 or VR is selected in flight, INVALID ENTRY is displayed.

To set the spare bug, if desired:

Speed reference selector (outer) Spare bug

Default speed of 60 knots is displayed.

Speed reference selector (inner) Set

Set speed as desired.

Speed reference selector (outer) SET

Digital readout is removed.

Heading Reference Switch Operation

Use TRUE when flying in regions where true referencing is required. Use NORM at other times.

Heading reference switch NORM or TRUE

Note: The following information applies when using the heading reference switch:

If the AFDS is in the HDG SEL mode and the heading reference switch position is changed, the AFDS mode changes to HGD HOLD; HDG SEL may be reselected.

If making an ILS approach using true referencing, the localizer course referenced to true north must be set on the MCP course display.

RDMI VOR bearings are not available when the heading reference switch is in TRUE.

Do not use the HUD System when the heading reference switch is in TRUE.

Note: Do not use HDG SEL or ROLL CWS north of N89° 30' or south of S89° 30'.

HUD System Procedures

[Option - Rockwell Collins HUD]

HUD system procedures supplement normal procedures and should be accomplished when applicable.

Preflight Procedure

If the HUD will be used for takeoff, or configured for a possible return for landing, accomplish the following during the Preflight Procedure:

HUD System Set

Combiner – Lowered, cover removed

Runway Data – Set in control panel

Enter runway length

The runway length entered must be between 7,500 and 13,500 feet (2,287 and 4,114 meters).

Enter TDZE (if available) or field elevation

Enter glideslope angle for possible return for landing.

The glideslope angle must be set between -2.51° and -3.00° for an AIII approach.

Mode – Set

Select IMC or VMC to verify proper alignment

ALIGN HUD light – Extinguished

After checking alignment, select PRI mode

Note: CLR may be selected to blank display during taxi. Push CLR again to restore display. If the HUD will not be used for takeoff, the combiner should be stowed.

For a low visibility takeoff, enter the ILS frequency and set the course to takeoff runway magnetic heading.

Descent

If HUD will be used for approach and landing, accomplish the following steps:

Prior to completing the DESCENT checklist:

HUD SystemSet

Combiner – Lowered, cover removed

Runway Data – Set in control panel

Enter runway length.

The runway length entered must be between 7,500 and 13,500 feet (2,287 and 4,114 meters) for an AIII guided landing rollout.

Enter runway TDZE (if available) or field elevation

Enter glideslope angle

The glideslope angle must be set between -2.51° and -3.00° for an AIII approach.

Mode – Set

Select IMC or VMC to verify proper alignment

ALIGN HUD light – Extinguished

After checking alignment, select PRI mode

Prior to intercepting final on a visual approach:

Select VMC mode

After intercepting final on an instrument approach:

Select IMC mode, if needed

IMC mode is an alternate approach mode primarily intended for AFDS approaches.

Note: During approach, the PM will monitor the HUD ANNUNCIATOR panel.

Landing

If HUD will be used for a CAT II or CAT IIIa approach:

At glideslope capture:

Select/verify AIII mode active

Shutdown

Accomplish the following step during the Shutdown Procedure:

HUD Combiner Stowed

If the airplane will be secured, install cover before stowing.

Supplementary Procedures Flight Management, Navigation

Chapter SP Section 11

Tests

Transponder Test

Transponder mode selector TEST

Check FAIL light illuminates.

Check all code segments illuminate. Verify no error codes exist.

Verify aural indicates TCAS system test passed.

Note: TCAS TEST is displayed on the navigation display during the test followed by TCAS TEST PASSED or TCAS TEST FAILED. This test remains in view for 8 seconds then blanks. An aural annunciation sounds at the completion of the test.

[Option - Collins TCAS computer]

AURAL ALERTS	DEFINITION
“TCAS SYSTEM TEST FAIL”	Test failed. Maintenance required.
“TCAS SYSTEM TEST OK”	Test complete. System operable.

Weather Radar Test

EFIS mode selector MAP, MAP CTR, VOR, or APP

Weather Radar Mode TEST

WXR (EFIS control panel) ON

Verify test pattern consisting of the following colors appears:

- Green
- Yellow
- Red
- Magenta.

[Option - With predictive wind shear]

If testing of the PWS system is desired:

Weather Radar Mode Deselect TEST

WXR (EFIS control panel) ON

Weather Radar Mode TEST

Verify the amber WINDSHEAR caution, red WINDSHEAR warning and PWS FAIL annunciations display momentarily and then extinguish.

Note: In the short time the weather radar is on and not in the TEST position, it will radiate.

IRS

Align Light(s) Flashing

Do not move IRS Mode selector to OFF except where called for in procedure.

POS INIT page Select

Set IRS position Enter present position

Enter present position using the most accurate latitude and longitude available. If the present position is being entered via the CDU and a position is already displayed on the SET IRS POS line, enter new position over displayed position.

If ALIGN light continues to flash:

Set IRS position Enter present position

Re-enter same present position.

If ALIGN light continues to flash after re-entry:

IRS OFF

Rotate IRS Mode Selector to OFF and verify ALIGN light extinguished.

Note: Light must be extinguished before continuing with procedure (approximately 30 seconds.)

IRS NAV

Rotate IRS Mode Selector to NAV and verify ALIGN light illuminated.

Set IRS position Enter present position

Enter present position. If ALIGN light flashes, re-enter same present position over displayed position.

Note: Approximately five to seventeen minutes are required for alignment.

If ALIGN light continues to flash, maintenance action is required.

Fast Realignment

Prior to commencing procedure the airplane must be parked and not moved until procedure is complete and ALIGN lights extinguish.

IRS mode selectors ALIGN

Observe ALIGN lights illuminate steadily.

CDUSet

Enter present position on SET IRS POS line of the POS INIT page.

IRS mode selectorNAV

Observe ALIGN light extinguished within 30 seconds.

Note: If time permits it is preferable to perform a full alignment of the IRS. A more precise alignment will result.

Note: If the mode selector is accidentally switched to OFF or ATT, position mode selector to OFF, wait for ALIGN light(s) to extinguish, then perform full alignment procedure.

Inadvertent Selection of Attitude Mode (while on the ground)

Inadvertent selection of the attitude mode may be due to physically overpowering the switch during turn-on or may be the result of a faulty switch which prevents the flight crew from accurately determining which mode is selected.

If ATT position is selected inadvertently when switching to NAV

IRS mode selectors OFF

Observe ALIGN lights extinguish.

After ALIGN lights extinguish, initiate a full alignment.

IRS Entries

Present Position Entry

IRS mode selectorNAV

ALIGN lights must be illuminated (steady or flashing).

IRS display selectorPPOS

LatitudeEnter

Key—in latitude in the data display, beginning with N or S, then press the ENT Key (the Cue Lights extinguish).

LongitudeEnter

Key—in longitude in the data display, beginning with E or W, then press the ENT key (the cue lights extinguish). Observe that proper latitude and longitude are displayed and that the ALIGN light is not flashing.

Heading – Enter through CDU

FMC/CDU POS INIT page Select

Enter the correct heading into the CDU scratch pad then press line select key 5R. Verify entered heading appears on line 5R. Select HDG on the IRS display selector and verify that the entered heading is displayed on the navigation displays.

Heading – Enter through ISDU

IRS display selectorHDG

Press the H key to initiate a heading entry.

Key—in present magnetic heading. Press the ENT key (the cue lights extinguish). Observe proper heading displayed on the navigation displays.

Lateral Navigation (LNAV)

Proceeding Direct to a Waypoint (overwrite)

RTE LEGS page Select

On page 1/XX, line 1L, enter desired waypoint over the presently active waypoint.

Correct any ROUTE DISCONTINUITY if entered waypoint was not in original flight plan.

[Option - With abeam points]

If abeam waypoints are desired:

ABEAM PTS key Push

EXEC key Push

Observe the MOD RTE LEGS page changes to ACT.

Intercepting a Leg (Course) to a Waypoint

RTE LEGS page Select

On page 1/XX, line 1L, enter desired waypoint over presently active waypoint.

Observe INTC CRS prompt displayed in line 6R.

Enter the desired intercept course in the INTC CRS line. Observe the desired course is displayed on line 6R but, with magnetic variation differences in line 1.

Correct any ROUTE DISCONTINUITY if the entered waypoint was not in original flight plan.

EXEC key Push

Observe MOD RTE LEGS page changes to ACT.

LNAV may disengage after execution of an intercept leg to a waypoint. If LNAV disengages, turn to a heading to satisfy LNAV capture criteria, as described in Chapter 11, and then engage LNAV.

Route Modification

RTE LEGS or RTE page Select

Line select existing waypoints in the desired sequence.

Key-in any new waypoints in the scratch pad and line select into the flight plan. Correct any ROUTE DISCONTINUITIES.

EXEC key Push

Observe MOD RTE or MOD RTE LEGS page changes to ACT.

Route Removal

RTE page Select

ORIGIN Enter

If EXEC key illuminates

EXEC key Push

Linking a Route Discontinuity

Correct the ROUTE DISCONTINUITY by entering or deleting waypoints in a sequence that provides a continuous flight-plan path.

EXEC key Push

Observe MOD RTE or MOD RTE LEGS page changes to ACT.

Determining ETA and Distance to Cross Radial (Bearing) or Distance from a Fix

FIX INFO page Select

Enter the identifier of the reference waypoint (normally an off-route waypoint) onto the FIX line. Enter the desired radial or distance from the FIX on a RAD/DIS line, or line select the ABM prompt if the desired radial from the FIX is perpendicular to the present route/course.

Time and distance to go Check

Check ETA and DTG, as desired.

Note: If ETA and DTG are not displayed, the fix radial and/or distance do not intersect the route.

Changing Destination

RTE page Select

Enter the new destination over the original DEST. Enter desired routing to the new destination using the RTE, RTE LEGS, and ARRIVALS pages, as appropriate. Correct any ROUTE DISCONTINUITY.

EXEC key Push

Observe the MOD RTE or MOD RTE LEGS page changes to ACT.

Note: If destination is changed during climb, performance predictions may be blanked if the new flight plan is incompatible with the entered cruise altitude. Correct by entering a lower CRZ ALT on the CLB page.

Entering Holding Fix Into Route

HOLD key Push

(If RTE HOLD page is displayed, observe NEXT HOLD prompt. Line select 6L until (RTE LEGS) HOLD AT page is displayed.)

Observe HOLD AT box prompts and PPOS prompt (if in flight) are displayed. Enter the holding fix in line 6L, or line select PPOS.

If the holding fix is a waypoint in the active route, or PPOS was selected, observe MOD RTE HOLD page displayed. If the holding fix is a waypoint not in the active route, observe message HOLD AT XXXXX displayed in the scratch pad. Enter the holding fix into the route by line selecting in the desired waypoint sequence. Observe the MOD RTE HOLD page displayed. If displayed holding details are incorrect or inadequate, enter correct information on appropriate line(s).

EXEC key Push

Observe MOD RTE HOLD page changes to RTE HOLD (ACT RTE HOLD if holding at PPOS).

Exiting Holding Pattern

HOLD key Push

Observe EXIT HOLD prompt displayed.

EXIT HOLD line select key Push

Observe EXIT HOLD prompt changes to EXIT ARMED.

EXEC key Push

Observe EXIT ARMED is highlighted in reverse video and LNAV flight returns to the holding fix and resumes the active route.

Note: The holding pattern may be exited by performing a DIRECT TO modification if desired. In this case, the flight path may not return to the holding fix before proceeding to the selected waypoint.

[Option - FMC update U10.2 and later]

Note: A late sequencing of the hold exit waypoint may occur if multiple route modifications are performed just prior to exiting the hold. LNAV guidance may be temporarily interrupted while sequencing the hold exit waypoint.

Along Track Displacement

RTE LEGS page Select

Line select the reference waypoint to the scratch pad. Add a “/” and the + or – distance desired. (EX: SEA/15 for a point 15 miles downtrack from SEA)

Line select the reference waypoint. (The FMC will automatically position the created waypoint to appropriate position.)

EXEC key Push
Observe the MOD RTE LEGS page change to ACT.

Entering Created Waypoints on the Route or Route Legs Pages

Note: Created waypoints are stored in the temporary navigation data base for one flight only.

RTE or RTE LEGS page Select

Using any of the following methods, key into the scratch pad the parameters which define the new created waypoint (place identifiers must already be stored in one of the FMC data bases):

- Place bearing/distance (for example, SEA250/40);
- Place bearing/place bearing (for example, SEA180/ELN270);
- Along-track displacement (for example, SEA/-10);
- Latitude and longitude (for example, N4731.8W12218.3).

Enter into the route by line selecting to the appropriate waypoint sequence.

Repeat the above steps to define additional created waypoints as desired.
Correct any ROUTE DISCONTINUITY.

EXEC key Push
Observe the MOD RTE or MOD RTE LEGS page changes to ACT
(for an inactive route, activate and execute on the RTE or RTE LEGS page).

Entering Created Waypoints on the Nav Data Pages

Note: Created waypoints entered on the SUPP NAV DATA pages (permitted on the ground only) are stored in the supplemental navigation data base for an indefinite time period; those entered on REF NAV DATA pages are stored in the temporary navigation data base for one flight only.

INIT/REF key Push

Observe INDEX prompt displayed.

INIT/REF INDEX page Select

Observe the NAV DATA prompt displayed. To access the SUPP NAV DATA page, enter SUPP into the scratch pad.

NAV DATA page Select

(If the SUPP NAV DATA page is selected, observe the EFF FRM date line displayed. If an effective date had not been previously entered, box prompts are displayed. The effective date must be entered before proceeding. If required, enter the current or appropriate date on EFF FRM line and execute.)

Data Enter

Enter a crew-assigned identifier on either the WPT IDENT, NAVAID IDENT, or AIRPORT IDENT line, as appropriate. Use the navaid category only for stations with DME.

For a WPT IDENT entry, define the waypoint with entries for either latitude and longitude, or with entries for REF IDENT and RADIAL/DIST (REF IDENT identifier must already be stored in one of the FMC data bases).

For a NAVAID IDENT or AIRPORT IDENT entry, enter appropriate data.

EXEC key illuminates when data has been entered into all box prompts.

EXEC key Push

Repeat above steps to define additional created waypoints as desired. To enter a new identifier in the same category, simply overwrite the previous identifier.

Note: To enter a created waypoint into the flight plan, key the identifier into the scratch pad and follow the route modification procedure.

Deleting Created Waypoints on the Nav Data Pages

INIT/REF key Push

Observe the INDEX prompt displayed.

INIT/REF INDEX page Select

Observe the NAV DATA prompt displayed. To access the SUPP NAV DATA page, key SUPP into the scratch pad.

NAV DATA page Select

Enter the identifier on either the WPT IDENT, NAVAID IDENT, or AIRPORT IDENT line, as appropriate.

Data Delete

Push the DEL key and then line select the identifier. Observe the EXEC key illuminates.

EXEC key Push

Data previously entered is deleted. Observe NAV DATA page displayed with prompts.

Entering a Crossing Radial (Bearing) or Distance from a Fix as a Route Waypoint

FIX INFO page Select

Enter identifier of the reference waypoint (normally an off-route waypoint) onto the FIX line. Enter the desired radial or distance from the FIX on a RAD/DIS line, or line select the ABM prompt if the desired radial or distance from the FIX is perpendicular to the present route/course.

Line select the desired intersection (lines 2L–5L) into the scratch pad and observe the new created waypoint displayed as FIX/Radial/Distance.

RTE LEGS page Select

Line select the new created waypoint, displayed in the scratch pad, to the desired waypoint sequence.

Repeat the above steps to define additional created waypoints as desired. Correct any ROUTE DISCONTINUITIES.

EXEC key Push

Observe the MOD RTE LEGS page changes to ACT.

Note: These created waypoints are stored in the temporary navigation data base for one flight only.

Entering a Lateral Offset

RTE page Select

Observe the OFFSET prompt displayed.

LATERAL OFFSET page Select

Observe dash prompts for OFFSET DIST.

OFFSET DIST Enter

Enter desired offset distance using format Lxx or Rxx for left or right offset up to 99 nm. Observe dash prompts for START WAYPOINT and END WAYPOINT.

START/END WAYPOINT Enter

If no start/end waypoint is entered, offset will begin/end at first/last valid offset leg.

Change SID or Runway

This entire procedure must be accomplished when a SID is used and the runway or SID is changed. This will prevent the possibility of incorrect routing or inadequate obstacle clearance.

DEPARTURES page Select

RUNWAY Reselect

SID Reselect

TRANSITION (if required) Reselect

RTE LEGS page Select

WAYPOINT SEQUENCE and ALTITUDES Check

Modify as necessary to agree with clearance.

EXEC key Push

Change STAR, PROF DES, or APP

The associated airport must be entered as route origin or destination.

ARRIVAL page Select

STAR or PROFILE DESCENT (if required) Select

TRANSITION (if required) Select

APPROACH Select

APPROACH TRANSITION (if required) Select

RTE LEGS page Select

WAYPOINT SEQUENCECHECK

 Modify as necessary to agree with clearance.

EXEC key Push

Delete Procedure Turn

DEP/ARR page Select

Approach Select

 Reselecting same approach or selecting a new approach will remove procedure turn and select a straight in approach on the LEGS page.

EXEC key Push

or

RTE LEGS page Select

 Select last waypoint of procedure turn to scratchpad and overwrite PROC TURN line. Check waypoint sequencing to comply with clearance.

EXEC key Push

Other Operations

FMC Navigation Check

[Option - FMC update U10.7 and later]

If the VERIFY POSITION, UNABLE REQD NAV PERF – RNP, or both GPS-L INVALID and GPS-R INVALID messages are shown in the scratch pad, or course deviation is suspected, do the following as necessary to ensure navigation accuracy:

[Option - FMC update prior to U10.7]

If the VERIFY POSITION, or UNABLE REQD NAV PERF – RNP message is shown in the scratch pad, or course deviation is suspected, do the following as necessary to ensure navigation accuracy:

Actual position Determine and compare with FMC position
Determine actual airplane position using raw data from VHF
navigation or ADF radios.

If radio nav aids are unavailable:

FMC position Compare with the IRS position
Use the POS SHIFT page of the FMC CDU. If the two IRS
positions are in agreement and the FMC position is significantly
different, the FMC position is probably unreliable. The POS
SHIFT page may be used to shift FMC position to one of the IRS
positions. This is accomplished by line selecting the IRS or radio
position and then pressing the EXEC Key.

Actual position Confirm with ATC radar or visual reference points.

Navigate using most accurate information available (continue to monitor
FMC position using VOR/ADF raw data displays on non-flying pilot's
navigation display).

**CAUTION: Navigating in LNAV mode with an unreliable FMC
position may result in significant navigation errors.**

Navigate by conventional VOR/ADF procedures, radar vectors from
ATC, dead reckoning from last known position, and/or use of visual
references.

Alternate Navigation using the ANCDU

[Option - ANCDU]

Entering Active FMC Flight Plan into ANCDU

MENU key Push
Observe the ALT NAV prompt is displayed.

GPS LEGS page Select
Push the ALT NAV prompt. Observe the GPS LEGS page displayed
and the prompt in line 5L: CROSSLOAD prompt if an active FMC
flight plan exists; LAST FMC PLAN prompt if the FMC has failed
and an active FMC flight plan existed prior to the failure.

FMC flight planEnter

Line select 5L to display the active (most recent) flight plan. A maximum of 60 waypoints can be displayed. The destination airport is shown as the last waypoint to the crossloaded FMC flight plan. Undefined procedural legs contained in the FMC flight plan are bypassed.

Modify the flight plan if desired.

EXEC key Push

Observe the GPS LEG page changes to ACT.

Manual Entry of ANCDU Flight Plan

MENU key Push

Observe the ALT NAV prompt is displayed.

GPS LEGS page Select

Push the ALT NAV prompt. Observe the GPS LEGS page displayed and the GPS WPT DATA prompt in line (6R).

GPS WPT DATA page Select

Key any of the following into the scratch pad:

- For a crew assigned identifier, key in the identifier (6 characters maximum) followed by latitude and longitude (for example, SIMONE/N4802.2W12241.3).

- For an ANCDU assigned identifier, key in only latitude and longitude (for example, S3618.5E14136.9). The ANCDU assigns a sequential identifier such as WPT04, etc.

- If repeating an identifier which is already in the flight plan, key in only the identifier (for example, SEA).

Enter each wayp[oint into the route by line selecting to the desired sequence. A maximum of 60 waypoints can be in the flight plan at any one time.

EXEC key Push

Observe the GPS LEG page changes to ACT.

Proceeding Direct to a Waypoint

GPS LEGS page Select

Key any of the following into the scratch pad:

- For a crew assigned identifier, key in the identifier (6 characters maximum) followed by latitude and longitude (for example, SIMONE/N4802.2W12241.3).
- For an ANCDU assigned identifier, key in only latitude and longitude (for example, S3618.5E14136.9). The ANCDU assigns a sequential identifier such as WPT04, etc.
- If repeating an identifier which is already in the flight plan, key in only the identifier (for example, SEA).

On page 1/XX, line 1L, enter the desired waypoint over the presently active waypoint.

EXEC key Push

Observe the MOD GPS LEG page changes to ACT.

Route Modification

GPS LEGS page Select

Line select existing waypoints in the desired sequence.

Key in any new waypoints into the scratch pad and line select into the flight plan.

EXEC key Push

Observe the GPS LEG page changes to ACT.

Inhibiting VOR/DME Use for Position Updating

Note: This procedure inhibits the use of VOR/DME information for FMC position updating. Use DEL key to remove a VOR/DME from inhibit status.

PROG page Select

Observe NAV STATUS prompt displayed.

NAV STATUS page Select

NAV OPTIONS page Select (NEXT/PREV page)

Observe dash prompts for VOR/DME INHIBIT. Enter desired VOR/DME identifier (a previous entry may be overwritten but will no longer be inhibited).

Inhibiting GPS Updating

[Option - With GPS]

Note: GPS position updates are allowed for all United States National Airspace approach operations. Outside this region, GPS position updates are allowed during approaches only if the FMC database and approach charts are referenced to the WGS-84 reference datum. GPS updates should be inhibited for all other approach operations, unless other appropriate procedures are used.

PROG page Select
Observe NAV STATUS prompt displayed.

NAV STATUS page Select

NAV OPTIONS page Select (NEXT/PREV page)

GPS UPDATE OFF

Vertical Navigation (VNAV)

Temporary Level Off during Climb or Descent (Not at FMC Cruise Altitude)

MCP altitude selectorSet desired altitude

[Option - Without VNAV ALT]

Verify ALT HOLD is annunciated on the flight mode annunciator when leveling at the selected MCP altitude.

MCP N1 light extinguishes if leveling from a climb.

N1 limit changes to CRZ if leveling from a climb.

To continue climb or descent:

MCP altitude selectorSet desired altitude

[Option - Without VNAV ALT]

VNAV switch Push

Climb or descent is initiated. Mode annunciations appear as initial climb or descent.

Intervention of FMC Altitude Constraints during VNAV Climb

[Option - With speed and altitude intervention]

- MCP altitude selector Set new altitude
New altitude must be higher than the FMC altitude constraint(s) to be deleted.
- ALT INTV switch Push
Each push of the ALT INTV switch will delete an FMC altitude constraint.

Intervention of FMC Cruise Altitude during VNAV Cruise

[Option - With speed and altitude intervention]

- MCP altitude selector Set
ALT INTV switch Push
If a higher altitude is selected, a CRZ climb will be initiated.
If a lower altitude is selected, an early descent will be initiated.

Intervention of FMC Altitude Constraints during VNAV Descent

[Option - With speed and altitude intervention]

- MCP altitude selector Set new altitude
New altitude must be lower than the FMC altitude constant (s) to be deleted.
- ALT INTV switch Push
Each push of the ALT INTV switch will delete an FMC altitude constraint.
If all FMC altitude constraints are deleted, the descent mode will revert to a VNAV speed descent.

Intervention of FMC Airspeed Constraints during VNAV

[Option - With speed and altitude intervention]

- SPD INTV switch Push
MCP IAS/MACH display shows current FMC target speed.
- MCP speed selector Set desired speed
VNAV remains engaged.

To resume former FMC speed:

SPD INTV switch Push
MCP IAS/MACH display blanks and FMC commanded VNAV
speed is active.

Entering Waypoint Speed and Altitude Restriction (On Climb or Descent Legs Only)

RTE LEGS page Select

Key-in desired speed and altitude, or speed only (followed by /), or altitude only, into scratch pad.

An altitude followed by A or B signifies a requirement to be “at or above” or “at or below” that altitude at the waypoint (for example, key-in 220A or 240B).

Line select to desired waypoint line.

EXEC key Push

Observe MOD RTE LEGS page changes to ACT.

Note: This changes any prior speed and altitude restriction at this waypoint.

Deleting Waypoint Speed and Altitude Restriction

RTE LEGS page Select

Push DEL key to enter DELETE in scratch pad. Line select to appropriate waypoint line.

EXEC key Push

Observe MOD RTE LEGS page changes to ACT and restriction is deleted and replaced with an FMC predicted value (small size characters).

Changing Speed and/or Altitude Restriction during Climb or Descent

CLB/DES page Select

Push DEL key to enter DELETE in the scratch pad, or key-in the desired speed and altitude in the scratch pad. Line select to the SPD REST line.

EXEC key Push
Observe the MOD CLB or the MOD DES page changes to ACT and the restriction is changed or deleted.

Changing Climb/Cruise/Descent Speed Schedule

CLB/CRZ/DES page Select
Select the prompt for the desired climb/cruise/descent schedule, or key—in the desired speed in the scratch pad and line select to the TGT SPD line.

EXEC key Push
Observe the MOD CLB, MOD CRZ, or MOD DES page changes to ACT and new speed schedule is specified.

Early Descent

MCP altitude selector Set
Set next level-off altitude.

DES page Select
Line select DES NOW prompt.

EXEC key Push
Observe MOD DES page changes to ACT. Observe descent is initiated (if VNAV engaged).

Note: For a PATH DES, this will result in a 1000 FPM rate of descent until the planned path is intercepted. For a SPD DES, this will result in an idle thrust normal rate of descent.

Step Climb or Descent from Cruise

MCP altitude selector Set
Set new level-off altitude.

FLT ALT indicator Set
Set new level-off altitude.

CRZ page Select
Enter new altitude on the CRZ ALT line. The display changes to MOD CRZ CLB or MOD CRZ DES.

If the desired climb/descent speed is different from the displayed cruise speed, manually enter the desired TGT SPD, or use access prompts to select desired CLB/DES page.

EXEC key Push

Observe the MOD CRZ CLB/MOD CRZ DES page (or other selected MOD CLB/MOD DES page) changes to ACT. Observe climb/descent is initiated at the TGT SPD (if VNAV engaged).

Performance and Progress Functions

Determining ETA and Fuel Remaining for New Destination

RTE page Select

Enter the new destination over the original DEST. Enter correct routing to the new destination using RTE, RTE LEGS, and ARRIVALS pages, as appropriate. Correct any ROUTE DISCONTINUITY.

PROGRESS page Select

Observe new destination with a MOD title. Check ETA and FUEL remaining.

RTE page Select

EXEC or ERASE the new destination/routing, as desired. Observe MOD RTE page changes to ACT.

Estimated Wind Entries for Cruise Waypoints

RTE LEGS page Select

Observe the DATA prompt displayed.

RTE DATA page Select

Enter the estimated true wind direction/speed on the appropriate line(s).

Step Climb Evaluation

CRZ page Select

Enter the desired step climb altitude on the STEP line. If known, enter the estimated average true wind direction/speed for the desired step climb altitude on the ACTUAL WIND line.

Step climb savings Determine

Observe the fuel SAVINGS/PENALTY and FUEL AT _____
 (destination) lines to determine if a higher cruise altitude is
 advantageous.

If step climb fuel savings are significant, use the appropriate climb
 procedure to initiate climb to the higher altitude when NOW is
 displayed on STEP POINT line.

Note: Step climb evaluations do not consider buffet margin limits.
 If the altitude entered for the step climb evaluation is higher
 than the maximum altitude for flight with an adequate buffet
 margin, the message “MAX ALT FLXXX” will be displayed
 in the scratch pad. Ensure the new cruise altitude entered for
 the climb is at or below the MAX ALT displayed in the
 message in order to maintain a safe buffet margin.

Entering Descent Forecasts

DES page Select

Observe FORECAST prompt displayed.

DES FORECASTS page Select

Verify the TRANS LVL and revise if required. Enter average ISA
 DEV forecast for descent and destination QNH. Enter forecast
 descent WINDs (for up to three different altitudes).

EXEC key Push

Observe MOD DES FORECASTS page changes to ACT.

Engine Out

Engine out climb and cruise pages provide advisory information for engine
 out operation. Refer to section 11.41 and 11.42 for a complete description
 of ENG OUT CLB and ENG OUT CRZ pages.

Required Time of Arrival (RTA)

Note: An active FMC flight plan complete with all performance data
 must exist before the required time of arrival (RTA) mode can
 be used.

Entering an RTA Waypoint and Time

RTA PROGRESS page Select

On PROGRESS page 2, line 1L, enter the flight plan waypoint where required time of arrival is applicable. Observe the MOD RTA PROGRESS page displayed with the computed ETA, for the entered waypoint, displayed in line 1R.

RTAEnter

Enter required time of arrival into line 1R. Time should be entered in hours, minutes, and seconds (Examples: 174530, 1745, 1745.5).

Observe MOD RTA PROGRESS page displayed with pertinent data for complying with entered RTA. Observe EXEC key illuminated.

EXEC key Push

Observe ACT RTA PROGRESS page displayed.

Entering Speed Restrictions for RTA Navigation

PERF LIMITS page Select

Enter minimum or maximum speed restriction for RTA navigation in lines 2, 3, or 4 depending on phase of flight. Observe RTA parameters change to reflect new limits (RTA PROGRESS page) and EXEC key illuminated.

EXEC key Push

Observe MOD PERF LIMITS page change to ACT PERF LIMITS page.

Note: Entered restrictions on line 2, 3, and 4 also restrict other navigation modes such as ECON.

Entering New Time Error Tolerances for RTA Navigation

PERF LIMITS page Select

Enter desired time error tolerance (5 to 30 seconds) for the RTA waypoint on line 1L (Example: 25). Observe MOD PERF LIMITS page displayed and EXEC key illuminated.

EXEC key Push

Observe ACT PERF LIMITS page displayed.

Additional CDU Functions

Navigation Display Plan Mode (Center Step Operation)

EFIS Control Panel Mode Selector PLAN

RTE LEGS page Select

EFIS Control Panel Range Selector As required

MAP CTR STEP key Push

Each push moves the CTR label to the next geographically fixed waypoint in the route. Selecting PREV PAGE or NEXT PAGE moves the CTR label to the first geographically fixed waypoint on the new page.

EFIS Control Panel Mode Selector As required

Enter Position Shift on Runway

TAKEOFF REF page Select

[\[Option - Runway remaining update with TO/GA activation\]](#)

RWY REMAIN distance Enter

Enter runway remaining distance. When TO/GA is pushed, FMC will update to the runway remaining distance.

If position shift must be removed

RTE page Select

RWY Enter

Reenter runway on RTE page. Check and reenter other performance data as required.

Intentionally
Blank

Fuel Balancing

If an engine fuel leak is suspected:

Accomplish the ENGINE FUEL LEAK checklist.

Maintain main tank No. 1 and No. 2 fuel balance within limitations.

Note: Fuel pump pressure should be supplied to the engines at all times. At high altitude, without fuel pump pressure, thrust deterioration or engine flameout may occur.

If the center tank contains fuel:

Center tank fuel pump switches OFF
[Fuel CONFIG indication may be displayed with fuel in the center tank.]

Crossfeed selector Open

Fuel pump switches (low tank) OFF

When quantities are balanced:

Fuel pump switches (main tank) ON

Center tank fuel pump switches ON

Crossfeed selector Close

If the center tank contains no fuel:

Crossfeed selector Open

Fuel pump switches (low tank) OFF

When quantities are balanced:

Fuel pump switches ON

Crossfeed selector Close

Inflight Transfer of Fuel from Auxiliary Tanks

The normal transfer procedure is:

All AUXILIARY FUEL TRANSFER switches AUTO

Both Auxiliary fuel BLEED AIR switches OFF

Auxiliary fuel GROUND TRANSFER switch OFF

Note: Maintain airplane center of gravity within limitations during fuel transfer.

To move the center of gravity forward:

AFT A & B AUXILIARY FUEL
TRANSFER switches AUTO

FWD A & B AUXILIARY FUEL
TRANSFER switches OFF

Note: Transfer is automatically initiated during cruise providing at least 15 minutes have elapsed since takeoff and center tank fuel weight is down to approximately 24,000 lbs.

To move the center of gravity aft:

FWD A & B AUXILIARY FUEL
TRANSFER switches AUTO

AFT A & B AUXILIARY FUEL
TRANSFER switches OFF

Note: Transfer is automatically initiated during cruise providing at least 15 minutes have elapsed since takeoff and center tank fuel weight is down to approximately 24,000 lbs.

When CG is normal:

Return to normal operation.

Refueling

Fuel Load Distribution

Main tanks No. 1 and No. 2 should normally be serviced equally until full. Additional fuel is loaded into the center tank until the desired fuel load is reached.

Note: Main tanks No. 1 and No. 2 must be scheduled to be full if the center tank contains more than 1,000 lbs of fuel. With less than 1,000 lbs of center tank fuel, partial main tank fuel may be loaded provided the effects of balance have been considered.

Fuel Pressure

Apply from a truck or fuel pit. A nozzle pressure of 50 psi provides approximately 300 U.S. gallons per minute.

Normal Refueling

[Option - Fuel Quantity selector]

When a full fuel load is required, the fuel shutoff system closes the fueling valves automatically when the tanks are full. When a partial fuel load is required, the fuel shutoff system closes the fueling valves automatically when the quantity preselected on the fuel quantity selector (located on the test gauges and fueling panel) is reached.

Refueling with Battery Only

When the APU is inoperative and external power is not available, refueling can be accomplished as follows:

Battery switch ON

Note: The refueling system will operate normally. Operation is limited only by battery life.

Refueling with No AC or DC Power Source Available

When it becomes necessary to refuel with the APU inoperative, the aircraft battery depleted, and no external power source available, refueling can still be accomplished:

Fueling hose nozzleAttached to the refueling receptacle

Fueling valvesOpen for the tanks to be refueled

Note: Main tanks No. 1 and No. 2, and the center tank refueling valves each have a red override button that must be pressed and held while fuel is being pumped into the tank. Releasing the override button allows the spring in the valve to close the valve.

Caution must be observed not to overfill a tank, since there is no automatic fuel shutoff during manual operation. When the desired amount of fuel has been pumped into the tanks, the refueling valves for the respective tanks can be released.

Ground Transfer of Fuel

Fuel can be transferred from one tank to another tank by using the appropriate fuel pumps, the fueling valve, the defueling valve, and the crossfeed valve. AC power must be available. To transfer fuel from the main tanks to the center tank:

Main tank fuel pump switches ON

Crossfeed selectorOpen

Manual defueling valveOpen

Center tank fueling valve switchOPEN

Fuel transfer Monitor

The center tank fuel quantity indicator shows an increase in fuel.

The main tank indicators show a decrease in fuel.

Center tank fueling valve switchCLOSED

When the required amount of fuel has been transferred, the switch is closed at the fueling panel.

Manual defueling valve Close

Crossfeed selector Close

Main tank fuel pump switches OFF

Main Tanks Refill

Refueling panel and defuel panel access doors Close

Ground Transfer of Fuel from Auxiliary Tanks

Ground transfer is similar to in-flight transfer except that bleed air is required to pressurize the auxiliary fuel tanks.

Electrical power Establish
 Verify APU or external power on busses.

Left Bleed Air DUCT
 PRESSURE Indicator Verify positive pressure

Note: If no aircraft bleed air is available, connect an external source to the AFS bleed air ports located on the bleed air assemblies near the aft walls of the rear cells in the FWD and AFT tanks. The external pressure source should not exceed 8 psi.

GROUND TRANSFER switch ON

AUXILIARY FUEL TRANSFER switches AUTO

Place the switches to AUTO for tanks from which fuel is to be transferred.

Note: The bleed air valves will open automatically and will cycle open and closed to regulate proper tank pressure for transfer.

After transfer is complete:

All AUXILIARY FUEL TRANSFER switches OFF

Auxiliary fuel BLEED AIR FWD and AFT switches OFF

GROUND TRANSFER switch OFF

Auxiliary Fuel Display Panel Test

This procedure should be accomplished daily.

Note: This test requires DC power and must be accomplished on both the captain's and first officer's panels.

Test switch Push
 Hold for a minimum of 4 seconds.

Verify ALERT and MAINTENANCE message display characters illuminate all dot pixels (two cycles at two second intervals).

Verify Auxiliary FUEL QUANTITY indicator display characters illuminate all segments (two alternating cycles of “8”s at two second intervals).

Verify auxiliary fuel ALERT and MAINTENANCE lights illuminate.

Note: ALERT and MAINTENANCE lights illuminate on both the captain’s and first officer’s panel when either test button is pushed.

Fuel Crossfeed Valve Check

Crossfeed selectorOpen
Verify crossfeed VALVE OPEN light illuminates bright and then dim.

Crossfeed selectorClose
Verify crossfeed VALVE OPEN light illuminates bright and then extinguishes.

Supplementary Procedures
Warning Systems**Chapter SP**
Section 15**Ground Proximity Warning System (GPWS) Test****[Option - Baseline, Without Runway Awareness and Advisory System]**

Verify IRS alignment is complete.

Verify that the guards are closed for all GROUND PROXIMITY INHIBIT switches.

Ground proximity SYS TEST switch Push momentarily

[Option - Enhanced GPWS]

Verify the following:

- BELOW G/S and GPWS INOP lights illuminate
- TERR FAIL and TERR TEST show on navigation displays
- PULL UP and WINDSHEAR alerts illuminate
- “GLIDESLOPE”, “PULL UP” and “WINDSHEAR” aural sound
- terrain display test pattern shows on navigation displays
- “CAUTION TERRAIN” aural sounds and TERRAIN caution message shows on navigation displays.

Note: If the test switch is held until the aural begin, additional GPWS aural warnings are tested.

Intentionally
Blank

Supplementary Procedures
Adverse Weather**Chapter SP**
Section 16

Introduction

Airplane operation in adverse weather conditions may require additional considerations due to the effects of extreme temperatures, precipitation, turbulence and windshear. Procedures in this section supplement normal procedures and should be observed when applicable.

Takeoff - Wet or Contaminated Runway Conditions

The following information applies to takeoffs on wet or contaminated runways:

- For wet runways, reduced thrust (fixed derate, assumed temperature method, or both) is allowed provided suitable takeoff performance accountability is made for the increased stopping distance on a wet surface
- For runways contaminated by slush, snow, standing water, or ice, reduced thrust (fixed derate) is allowed provided takeoff performance accounts for the runway surface condition. Reduced thrust using assumed temperature method, whether alone or in combination with a fixed derate, is not allowed
- V1 may be reduced to minimum V1 to provide increased stopping margin provided the field length required for a continued takeoff from the minimum V1 and obstacle clearance meet the regulatory requirements. The determination of such minimum V1 may require a real-time performance calculation tool or other performance information supplied by dispatch
- Takeoffs are not recommended when slush, wet snow, or standing water depth is more than 1/2 inch (13 mm) or dry snow depth is more than 4 inches (102 mm).

Cold Weather Operations

Considerations associated with cold weather operation are primarily concerned with low temperatures and with ice, snow, slush and standing water on the airplane, ramps, taxiways, and runways.

Icing conditions exist when OAT (on the ground) or TAT (in flight) is 10°C or below and any of the following exist:

- visible moisture (clouds, fog with visibility of one statute mile (1600m) or less, rain, snow, sleet, ice crystals, and so on) is present, or
- ice, snow, slush or standing water is present on the ramps, taxiways, or runways.

CAUTION: Do not use engine or wing anti-ice when OAT (on the ground) or TAT (in flight) is above 10°C.

| Exterior Inspection

Although removal of surface snow, ice and frost is normally a maintenance function, during preflight procedures, the captain or first officer should carefully inspect areas where surface snow, ice or frost could change or affect normal system operations.

Do the normal Exterior Inspection with the following additional steps:

Surfaces Check

[Option - With Blended Winglets]

Takeoff with light coatings of frost, up to 1/8 inch (3 mm) in thickness, on lower wing surfaces due to cold fuel is allowable; however, all leading edge devices, all control surfaces, tab surfaces, upper wing surfaces, winglet surfaces and control balance cavities must be free of snow, ice and frost.

Thin hoarfrost is acceptable on the upper surface of the fuselage provided all vents and ports are clear. Thin hoarfrost is a uniform white deposit of fine crystalline texture, which usually occurs on exposed surfaces on a cold and cloudless night, and which is thin enough to distinguish surface features underneath, such as paint lines, markings or lettering.

Control balance cavities Check

Check drainage after snow removal. Puddled water may freeze in flight.

Pitot probes and static ports Check

Verify that all pitot probes and static ports free of snow and ice. Water rundown after snow removal may freeze immediately forward of static ports and cause an ice buildup which disturbs airflow over the static ports resulting in erroneous static readings even when static ports are clear.

Air conditioning inlets and exits Check

Verify that the air inlets and exits, including the outflow valve, are free of snow and ice.

If the APU is operating, verify that the outflow valve is fully open.

Engine inlets Check

Verify that the inlet cowl is free of snow and ice.

Verify that the fan is free to rotate.

Snow or ice that accumulates on the fan spinner or fan blades during extended shutdown periods must be removed by maintenance or other means before engine start.

Snow or ice that accumulates on the fan spinner or fan blades as a result of operation in icing conditions, such as during approach or taxi in, is allowed if the fan is free to rotate and the snow or ice is removed using the ice shedding procedure during taxi out and before setting takeoff thrust.

Fuel tank vents Check

Verify all traces of ice and frost are removed.

Landing gear doors Check

Landing gear doors should be free of snow and ice.

APU air inlets Check

The APU inlet door and cooling air inlet must be free of snow and ice before APU start.

Preflight Procedure - First Officer

Do the following step after completing the normal Preflight Procedure - First Officer:

PROBE HEAT switches ON

Verify that all probe heat lights are extinguished.

Engine Start Procedure

Do the normal Engine Start Procedure with the following modifications:

- If the engine has been cold soaked for one or more hours at ambient temperatures below -40°C, do not start or motor the engine.

Maintenance personnel should do appropriate procedures for adverse weather heating of the Hydro-Mechanical Unit.

- If the engine has been cold soaked for three or more hours at ambient temperatures below -40°C, do not start or motor the engine. Maintenance personnel should do appropriate procedures for adverse weather servicing.
- If ambient temperature is below -35°C, idle the engine for two minutes before changing thrust lever position.
- Several minutes may be needed for oil pressure to reach the normal operating pressure. During this period, oil pressure may go above the normal range and the FILTER BYPASS light may illuminate. Operate the engine at idle thrust until oil pressure returns to the normal range.
- If the oil pressure remains above the normal range after the oil temperature has stabilized within limits, shut down the engine.
- Display units may require additional warm-up time before displayed engine indications accurately show changing values. Display units may appear less bright than normal.

Engine Anti-ice Operation - On the Ground

Engine anti-ice must be selected ON immediately after both engines are started and remain on during all ground operations when icing conditions exist or are anticipated.

WARNING: Do not rely on airframe visual icing cues before activating engine anti-ice. Use the temperature and visible moisture criteria because late activation of engine anti-ice may allow excessive ingestion of ice and result in engine damage or failure.

CAUTION: Do not use engine anti-ice when OAT is above 10°C.

When engine anti-ice is needed:

[Without automatic ignition]

ENGINE START switches CONT F/O

ENGINE ANTI-ICE switches ON F/O

Verify that the COWL VALVE OPEN lights illuminate bright, then dim.

Verify that the COWL ANTI-ICE lights are extinguished.

Note: If the COWL VALVE OPEN lights remain illuminated bright with engines at IDLE, position APU BLEED air switch to OFF and increase thrust slightly (up to a maximum of 30% N1).

When engine anti-ice is no longer needed:

ENGINE ANTI-ICE switches OFF F/O

Verify that the COWL VALVE OPEN lights illuminate bright,
then extinguish.

Wing Anti-ice Operation - On the Ground

Use wing anti-ice during all ground operations between engine start and takeoff when icing conditions exist or are anticipated, unless the airplane is, or will be protected by the application of Type II or Type IV fluid in compliance with an approved ground de-icing program.

WARNING: Do not use wing anti-ice as an alternative for ground de-icing/anti-icing. Close inspection is still needed to ensure that no frost, snow or ice is adhering to the wing, leading edge devices, stabilizer, control surfaces or other critical airplane components at takeoff.

CAUTION: Do not use wing anti-ice when OAT is above 10°C.

When wing anti-ice is needed:

WING ANTI-ICE switch ON F/O

Verify that the L and R VALVE OPEN lights illuminate bright,
then dim.

Note: The wing anti-ice VALVE OPEN lights may cycle
bright/dim due to the control valves cycling closed/open in
response to thrust setting and duct temperature logic.

When wing anti-ice is no longer needed:

WING ANTI-ICE switch OFF F/O

Verify that the L and R VALVE OPEN lights illuminate bright,
then extinguish.

Before Taxi Procedure

Do the normal Before Taxi Procedure with the following modifications:

GENERATOR 1 and 2 switches ON F/O

Normally the IDG's will stabilize within one minute, although due to cold oil, up to five minutes may be needed to produce steady power.

Flight controls Check C

An increase in control forces can be expected at low temperatures.

CAUTION: The flap position indicator and the leading edge devices annunciator panel should be closely observed for positive movement. If the flaps should stop, the flap lever should be placed immediately in the same position as indicated.

Flaps Check F/O

Move the flaps from Flaps up to Flaps 40 back to Flaps up (i.e., full travel) to ensure freedom of movement.

If taxi route is through ice, snow, slush or standing water in low temperatures or if precipitation is falling with temperatures below freezing, taxi out with the flaps up. Taxiing with the flaps extended subjects the flaps and flap drives to contamination. Leading edge devices are also susceptible to slush accumulations.

Call "FLAPS ____" as needed. C

Flap lever Set flaps, as needed F/O

Taxi-Out

CAUTION: Taxi at a reduced speed. Use smaller nose wheel steering wheel and rudder inputs and apply minimum thrust evenly and smoothly. Taxiing on slippery taxiways or runways at excessive speed or with high crosswinds may start a skid.

CAUTION: When operating the engines over significant amounts of standing de-icing or anti-icing fluid, limit thrust to the minimum required. Excessive ingestion of de-icing or anti-icing fluid can cause the fluid to build up on the engine compressor blades resulting in compressor stalls and engine surges.

When engine anti-ice is required and the OAT is 3°C or below, do an engine run up, as needed, to minimize ice build-up. Use the following procedure:

Check that the area behind the airplane is clear. C

Run-up to a minimum of 70% N1 for approximately 30 seconds duration at intervals no greater than 30 minutes. C

Note: Fan blade ice build up is cumulative. If the fan spinner and fan blades were not deiced prior to taxi out, the time the engines were operating during the taxi in should be included in the 30 minute interval.

If airport surface conditions and the concentration of aircraft do not allow the engine thrust level to be increased to 70% N1, then set a thrust level as high as practical and time at that thrust level. C

Note: When operating in conditions of freezing rain, freezing drizzle, freezing fog or heavy snow, run-ups to a minimum of 70% N1 for approximately 1 second duration at intervals no greater than 10 minutes enhance ice shedding.

De-icing/Anti-icing

Testing of undiluted de-icing/anti-icing fluids has shown that some of the fluid remains on the wing during takeoff rotation and initial climb. The residual fluid causes a temporary decrease in lift and increase in drag, however, the effects are temporary. Use the normal takeoff rotation rate.

CAUTION: Operate the APU during de-icing only if necessary. If the APU is running, ingestion of de-icing fluid causes objectionable fumes and odors to enter the airplane. Ingestion of snow, slush, ice, or de-icing/anti-icing fluid can also cause damage to the APU.

If de-icing/anti-icing is needed:

APU As needed F/O

The APU should be shut down unless APU operation is necessary.

Call “FLAPS UP”. C

Flaps UP F/O

Prevents ice and slush from accumulating in flap cavities during de-icing.

Thrust levers Idle C
Reduces the possibility of injury to personnel at inlet or exhaust areas.

WARNING: Ensure that the stabilizer trim wheel handles are stowed before using electric trim to avoid personal injury.

Stabilizer trim Full APL NOSE DOWN C
Trim the airplane to the electrical APL NOSE DOWN limit. Then continue trimming manually to the manual APL NOSE DOWN limit. The full nose down position prevents de-icing fluid and slush run-off from entering the stabilizer balance panel cavity.

Engine BLEED air switches OFF F/O
Reduces the possibility of fumes entering the air conditioning system.

APU BLEED air switch OFF F/O
Reduces the possibility of fumes entering the air conditioning system.

After de-icing/anti-icing is completed:

APU As needed F/O

Wait approximately one minute after de-icing is completed to turn engine BLEED air switches on to ensure all de-icing fluid has been cleared from the engines:

Engine BLEED air switches ON F/O

[Without PRR 38506 or Service Bulletin 737-55A-1080]

Control column Move full forward/full aft C

Slowly cycle the control column full forward to full aft a minimum of 3 times to drain residual fluid from the elevator balance bay.

Stabilizer trim ____ UNITS C

Verify that the stabilizer trim is set for takeoff.

Before Takeoff Procedure

Do the normal Before Takeoff Procedure with the following modifications:

Call “FLAPS ____” as needed for takeoff.	PF
--	----

Flap lever Set takeoff flaps, as needed	PM
---	----

Extend the flaps to the takeoff setting at this time if they have been held because of slush, or standing water, or icing conditions, or because of exterior de-icing/anti-icing.

Verify that the LE FLAPS EXT green light is illuminated.

Takeoff Procedure

Do the normal Takeoff Procedure with the following modification:

When engine anti-ice is required and the OAT is 3°C or below, the takeoff must be preceded by a static engine run-up. Use the following procedure:

Run-up to a minimum of 70% N1 for approximately 30 seconds and confirm stable engine operation before the start of the takeoff roll.

Engine Anti-Ice Operation - In Flight

Engine anti-ice must be ON during all flight operations when icing conditions exist or are anticipated, except during climb and cruise when the temperature is below -40°C SAT. Engine anti-ice must be ON before, and during descent in all icing conditions, including temperatures below -40°C SAT.

When operating in areas of possible icing, activate engine anti-ice before entering icing conditions.

[Without Icing Advisory Light]

WARNING: Do not rely on airframe visual icing cues before activating engine anti-ice. Use the temperature and visible moisture criteria because late activation of engine anti-ice may allow excessive ingestion of ice and result in engine damage or failure.

CAUTION: Do not use engine anti-ice when TAT is above 10°C

When engine anti-ice is needed:

[Without automatic ignition]

ENGINE START switches	CONT	PM
-----------------------------	------	----

ENGINE ANTI-ICE switches	ON	PM
--------------------------------	----	----

Verify that the COWL VALVE OPEN lights illuminate bright, then dim.

Verify that the COWL ANTI-ICE lights are extinguished.

Note: If the COWL VALVE OPEN lights remain illuminated bright with engines at IDLE, increase thrust slightly (up to a minimum of 30% N1).

When engine anti-ice is no longer needed:

ENGINE ANTI-ICE switchesOFF PM

Verify that the COWL VALVE OPEN lights illuminate bright, then extinguish.

[Without automatic ignition]

ENGINE START switchesOFF PM

Fan Ice Removal

CAUTION: Avoid prolonged operation in moderate to severe icing conditions.

Severe icing can usually be avoided by a change in altitude and/or airspeed. If flight in moderate to severe icing conditions cannot be avoided, do the following on both engines, one engine at a time at approximately 15 minute intervals:

ThrustIncrease PF

Increase thrust to a minimum of 80% N1 for approximately 1 second to ensure the fan blades and spinner are clear of ice.

Engine vibration may occur due to fan blade/spinner icing. If engine vibration continues after increasing thrust, do the following on both engines, one engine at a time:

ENGINE START switch FLT PM

Thrust Adjust PF

Adjust thrust to 45% N1. After approximately five seconds, increase thrust lever slowly to a minimum of 80% N1.

Note: Engine vibration may reduce to a low level before 80% N1 is reached, however, thrust increase must continue to a minimum of 80% N1 to remove ice from the fan blades.

Note: Engine vibration may indicate full scale prior to shedding ice, however, this has no adverse effect on the engine.

If vibration does not decrease, do the procedure for HIGH ENGINE VIBRATION “If not in icing conditions.”

Wing Anti-ice Operation - In Flight

Ice accumulation on the flight deck window frames, windshield center post, or on the windshield wiper arm may be used as an indication of structural icing conditions and the need to turn on wing anti-ice.

In flight, the wing anti-ice system may be used as a de-icer or as an anti-icer. The primary method is to use it as a de-icer by allowing ice to accumulate before turning wing anti-ice on. This procedure provides the cleanest airfoil surface, the least possible runback ice formation, and the least thrust and fuel penalty. Normally it is not necessary to shed ice periodically unless extended flight through icing conditions is necessary (holding).

The secondary method is to use wing anti-ice before ice accumulation. Operate the wing anti-ice system as an anti-icer only during extended operations in moderate or severe icing conditions, such as holding.

CAUTION: Do not use wing anti-ice when TAT is above 10°C.

CAUTION: Use of wing anti-ice above approximately FL350 may cause bleed trip off and possible loss of cabin pressure.

Note: Prolonged operation in icing conditions with the leading edge and trailing edge flaps extended is not recommended. Holding in icing conditions with flaps extended is prohibited.

When wing anti-ice is needed:

WING ANTI-ICE switchON PM

Verify that the L and R VALVE OPEN lights illuminate bright, then dim.

When wing anti-ice is no longer needed:

WING ANTI-ICE switch OFF PM

Verify that the L and R VALVE OPEN lights illuminate bright, then extinguish.

Cold Temperature Altitude Corrections

Extremely low temperatures create significant altimeter errors and greater potential for reduced terrain clearance. When the temperature is colder than ISA, true altitude will be lower than indicated altitude. Altimeter errors become significantly larger when the surface temperature approaches -30°C or colder, and also become larger with increasing height above the altimeter reference source.

Apply the altitude correction table when needed:

- no corrections are needed for reported temperatures above 0°C or if the airport temperature is at or above the minimum published temperature for the procedure being flown
- do not correct altimeter barometric reference settings
- ATC assigned altitudes or flight levels should not be adjusted for temperature when under radar control
- corrections apply to QNH and QFE operations
- apply corrections to all published minimum departure, en route and approach altitudes, including missed approach altitudes, according to the table below. Advise ATC of the corrections
- MDA/DA settings should be set at the corrected minimum altitudes for the approach
- subtract the elevation of the altimeter barometric reference setting source (normally the departure or destination airport elevation) from the published minimum altitude to be flown to determine “height above altimeter reference source”
- enter the table with Airport Temperature and with “height above altimeter reference source”. Read the correction where these two entries intersect. Add the correction to the published minimum altitude to be flown to determine the corrected indicated altitude to be flown. To correct an altitude above the altitude in the last column, use linear extrapolation (e.g., to correct 6000 feet or 1800 meters, use twice the correction for 3000 feet or 900 meters, respectively.) The corrected altitude must always be greater than the published minimum altitude
- if the corrected indicated altitude to be flown is between 100 foot increments, set the MCP altitude to the closest 100 foot increment above the corrected indicated altitude to be flown.

BBJ Flight Crew Operations Manual**Altitude Correction Table (Heights and Altitudes in Feet)**

Airport Temp °C	Height Above Altimeter Reference Source											
	200 feet	300 feet	400 feet	500 feet	600 feet	700 feet	800 feet	900 feet	1000 feet	1500 feet	2000 feet	3000 feet
0°	20	20	30	30	40	40	50	50	60	90	120	170
-10°	20	30	40	50	60	70	80	90	100	150	200	290
-20°	30	50	60	70	90	100	120	130	140	210	280	420
-30°	40	60	80	100	120	140	150	170	190	280	380	570
-40°	50	80	100	120	150	170	190	220	240	360	480	720
-50°	60	90	120	150	180	210	240	270	300	450	590	890

Altitude Correction Table (Heights and Altitudes in Meters)

Airport Temp °C	Height Above Altimeter Reference Source											
	60 m	90 m	120 m	150 m	180 m	210 m	240 m	270 m	300 m	450 m	600 m	900 m
0°	5	5	10	10	10	15	15	15	20	25	35	50
-10°	10	10	15	15	20	20	25	30	30	45	60	90
-20°	10	15	20	25	25	30	35	40	45	65	85	130
-30°	15	20	25	30	35	40	45	55	60	85	115	170
-40°	15	25	30	40	45	50	60	65	75	110	145	220
-50°	20	30	40	45	55	65	75	80	90	135	180	270

Approach and Landing

Use normal procedures and reference speeds unless a flaps 15 landing is planned.

If a flaps 15 landing will be made:

Set VREF 15

If any of the following conditions apply, set VREF ICE = VREF 15 + 10:

- engine anti-ice will be used during landing

- wing anti-ice has been used any time during the flight
- icing conditions were encountered during the flight and the landing temperature is below 10°C.

After Landing Procedure

CAUTION: Taxi at a reduced speed. Use smaller nose wheel steering wheel and rudder inputs and apply minimum thrust evenly and smoothly. Taxiing on slippery taxiways or runways at excessive speed or with high crosswinds may start a skid.

CAUTION: When operating the engines over significant amounts of standing de-icing or anti-icing fluid, limit thrust to the minimum required. Excessive ingestion of de-icing or anti-icing fluid can cause the fluid to build up on the engine compressor blades resulting in compressor stalls and engine surges.

Do the normal After Landing Procedure with the following modifications:

After prolonged operation in icing conditions with the flaps extended, or when an accumulation of airframe ice is observed, or when operating on a runway or taxiway contaminated with ice, snow, slush or standing water:

Do not retract the flaps to less than flaps 15 until the flap areas have been checked to be free of contaminants.

Engine anti-ice must be selected ON and remain on during all ground operations when icing conditions exist or are anticipated.

WARNING: Do not rely on airframe visual icing cues before activating engine anti-ice. Use the temperature and visible moisture criteria because late activation of engine anti-ice may allow excessive ingestion of ice and result in engine damage or failure.

CAUTION: Do not use engine anti-ice when OAT is above 10°C.

When engine anti-ice is needed:

[Without automatic ignition]

ENGINE START switches	CONT	F/O
ENGINE ANTI-ICE switches	ON	F/O

Verify that the COWL VALVE OPEN lights illuminate bright, then dim.

Verify that the COWL ANTI-ICE lights are extinguished.

Note: If the COWL VALVE OPEN lights remain illuminated bright with engines at IDLE, increase thrust slightly (up to a maximum of 30% N1).

When engine anti-ice is no longer needed:

ENGINE ANTI-ICE switches OFF F/O

Verify that the COWL VALVE OPEN lights illuminate bright, then extinguish.

[Without automatic ignition]

ENGINE START switches OFF F/O

When engine anti-ice is required and the OAT is 3°C or below, do an engine run up, as needed, to minimize ice build-up. Use the following procedure: C

Check that the area behind the airplane is clear.

Run-up to a minimum of 70% N1 for approximately 30 seconds duration at intervals no greater than 30 minutes.

If airport surface conditions and the concentration of aircraft do not allow the engine thrust level to be increased to 70% N1, then set a thrust level as high as practical and time at that thrust level.

Note: When operating in conditions of freezing rain, freezing drizzle, freezing fog or heavy snow, run-ups to a minimum of 70% N1 for approximately 1 second duration at intervals no greater than 10 minutes should be considered.

Shutdown Procedure

Do the following step before starting the normal Shutdown Procedure:

After landing in icing conditions:

WARNING: Ensure that the stabilizer trim wheel handles are stowed before using electric trim to avoid personal injury.

Stabilizer trim.....	Set 4 units	C
Prevents melting snow and ice from running into balance bay areas. Water in these areas can freeze and lock controls. With flaps retracted, one unit of stabilizer trim requires approximately 16 hand wheel turns of manual trim.		

Secure Procedure

Do the normal Secure Procedure with the following modifications:

If the airplane will be attended and warm air circulation throughout the cargo E/E compartments is desired:

CAUTION: Do not leave the interior unattended with a pack operating and all doors closed. With the airplane in this configuration, accidental closure of the main outflow valve can cause unscheduled pressurization of the airplane.

APU	Start	F/O
APU GENERATOR bus switches	ON	F/O
PACK switches	AUTO	F/O
ISOLATION VALVE switch	OPEN	F/O
Pressurization mode selector	MAN	F/O
Outflow valve switch	OPEN	F/O
Prevents aircraft pressurization.		

Note: The airplane must be parked into the wind when the outflow valve is full open.

APU BLEED air switch	ON	F/O
----------------------------	----	-----

If the airplane will not be attended, or if staying overnight at off-line stations or at airports where normal support is not available, the flight crew must arrange for or verify that the following steps are done:

Pressurization mode selector	MAN	F/O
Outflow valve	CLOSE	F/O
Position the outflow valve fully closed to inhibit the intake of snow or ice.		

BBJ Flight Crew Operations Manual

Wheel chocks Verify in place C or F/O

Parking brake Released C

Reduces the possibility of frozen brakes.

Cold weather maintenance procedures for securing the airplane may be required. These procedures are normally done by maintenance personnel, and include, but are not limited to:

- protective covers and plugs installed
- water storage containers drained
- toilets drained
- doors and sliding windows closed

[Option - Dual battery]

- batteries removed. If the batteries will be exposed to temperatures below -18°C, the batteries should be removed and stored in an area warmer than -18°C, but below 40°C. Subsequent installation of the warm batteries ensures the starting capability of the APU.

Hot Weather Operation

During ground operation the following considerations will help keep the airplane as cool as possible:

- While the airplane is electrically powered, packs should be run or cooling air supplied to the airplane when the OAT exceeds 40° C (103° F) to protect the reliability of electrical and electronic equipment in the airplane.
- If cooling air is available from an outside source, the supply should be plugged in immediately after engine shutdown and should not be removed until just prior to engine start.
- Keep all doors and windows, including cargo doors, closed as much as possible.
- Electronic components which contribute to a high temperature level in the flight deck should be turned off while not needed.
- Open all passenger cabin gasper outlets and close all window shades on the sun-exposed side of the passenger cabin.

Note: If only cooling air from a ground air conditioning cart is supplied (no pressurized air from the APU or ground external air), then the TAT probes are not aspirated. Because of high TAT probe temperatures, the FMC's may not accept an assumed temperature derate. Delay selecting an assumed temperature derate until after bleed air is available.

Brake temperature levels may be reached which can cause the wheel fuse plugs to melt and deflate the tires. Consider the following actions:

- Be aware of brake temperature buildup when operating a series of short flight sectors. The energy absorbed by the brakes from each landing is accumulative
- Extending the landing gear early during the approach provides additional cooling for tires and brakes.
- In-flight cooling time can be determined from the “Brake Cooling Schedule” in the Performance–Inflight section of the QRH.

During flight planning consider the following:

- High temperatures inflict performance penalties which must be taken into account on the ground before takeoff
- Alternate takeoff procedures (No Engine Bleed Takeoff, Improved Climb Performance, etc.)

Moderate to Heavy Rain, Hail or Sleet

Flights should be conducted to avoid thunderstorm or hail activity. If visible moisture is present at high altitude, avoid flight over the storm cell. (Storm cells that do not produce visible moisture at high altitude may be overflown safely.) To the maximum extent possible, moderate to heavy rain, hail or sleet should also be avoided.

If moderate to heavy rain, hail or sleet is encountered:

ENGINE START switches CONT

Autothrottle Disengage

Thrust Levers Adjust Slowly

If thrust changes are necessary, move the thrust levers slowly. Avoid changing thrust lever direction until engines have stabilized at a selected setting. Maintain an increased minimum thrust setting.

IAS/MACH Use a slower speed

Using a slower speed improves engine tolerance to heavy precipitation intake.

Consider starting the APU (if available).

Turbulence

During flight in light to moderate turbulence, the autopilot and/or autothrottle may remain engaged unless performance is objectionable. Increased thrust lever activity can be expected when encountering wind, temperature changes and large pressure changes. Short-time airspeed excursions of 10 to 15 knots can be expected.

Passenger signs ON

Advise passengers to fasten seat belts prior to entering areas of reported or anticipated turbulence. Instruct flight attendants to check that all passengers' seat belts are fastened.

Severe Turbulence

Yaw Damper ON

Autothrottle Disengage

AUTOPILOT CWS

A/P status annunciators display CWS for pitch and roll.

Note: If sustained trimming occurs, disengage the autopilot.

ENGINE START switches FLT

Thrust Set

Set thrust as needed for the phase of flight. Change thrust setting only if needed to modify an unacceptable speed trend.

PHASE OF FLIGHT	AIRSPEED
CLIMB	280 knots or .76 Mach
CRUISE	Use FMC recommended thrust settings. If the FMC is inoperative, refer to the Unreliable Airspeed page in the Performance–Inflight section of the QRH for approximate N1 settings that maintain near optimum penetration airspeed.
DESCENT	.76 Mach/280/250 knots. If severe turbulence is encountered at altitudes below 15,000 feet and the airplane gross weight is less than the maximum landing weight, the airplane may be slowed to 250 knots in the clean configuration.

Note: If an approach must be made into an area of severe turbulence, delay flap extension as long as possible. The airplane can withstand higher gust loads in the clean configuration.

Windshear

Windshear is a change of wind speed and/or direction over a short distance along the flight path. Indications of windshear are listed in the Windshear non-normal maneuver in this manual.

Avoidance

The flight crew should search for any clues to the presence of windshear along the intended flight path. Presence of windshear may be indicated by:

- Thunderstorm activity
- Virga (rain that evaporates before reaching the ground)
- Pilot reports
- Low level windshear alerting system (LLWAS) warnings.

Stay clear of thunderstorm cells and heavy precipitation and areas of known windshear. If the presence of windshear is confirmed, delay takeoff or do not continue an approach.

Precautions

If windshear is suspected, be especially alert to any of the danger signals and be prepared for the possibility of an inadvertent encounter. The following precautionary actions are recommended if windshear is suspected:

Takeoff

- Use maximum takeoff thrust instead of reduced thrust
- For optimum takeoff performance, use flaps 5, 10 or 15 unless limited by obstacle clearance and/or climb gradient
- Use the longest suitable runway provided it is clear of areas of known windshear
- Consider increasing V_r speed to the performance limited gross weight rotation speed, not to exceed actual gross weight $V_r + 20$ knots. Set V speeds for the actual gross weight. Rotate at the adjusted (higher) rotation speed. This increased rotation speed results in an increased stall margin and meets takeoff performance requirements. If windshear is encountered at or beyond the actual gross weight V_r , do not attempt to accelerate to the increased V_r but rotate without hesitation
- Be alert for any airspeed fluctuations during takeoff and initial climb. Such fluctuations may be the first indication of windshear

- Know the all-engine initial climb pitch attitude. Rotate at the normal rate to this attitude for all non-engine failure takeoffs. Minimize reductions from the initial climb pitch attitude until terrain and obstruction clearance is assured, unless stick shaker activates
- Crew coordination and awareness are very important. Develop an awareness of normal values of airspeed, attitude, vertical speed, and airspeed build-up. Closely monitor vertical flight path instruments such as vertical speed and altimeters. The pilot monitoring should be especially aware of vertical flight path instruments and call out any deviations from normal
- Should airspeed fall below the trim airspeed, unusual control column forces may be required to maintain the desired pitch attitude. Stick shaker must be respected at all times.

Approach and Landing

- Use flaps 30 for landing
- Establish a stabilized approach no lower than 1000 feet above the airport to improve windshear recognition capability
- Use the most suitable runway that avoids the areas of suspected windshear and is compatible with crosswind or tailwind limitations. Use ILS G/S, VNAV path or VASI/PAPI indications to detect flight path deviations and help with timely detection of windshear
- If the autothrottle is disengaged, or is planned to be disengaged prior to landing, add an appropriate airspeed correction (correction applied in the same manner as gust), up to a maximum of 20 knots
- Avoid large thrust reductions or trim changes in response to sudden airspeed increases as these may be followed by airspeed decreases
- Crosscheck flight director commands using vertical flight path instruments
- Crew coordination and awareness are very important, particularly at night or in marginal weather conditions. Closely monitor the vertical flight path instruments such as vertical speed, altimeters, and glideslope displacement. The pilot monitoring should call out any deviations from normal. Use of the autopilot and autothrottle for the approach may provide more monitoring and recognition time.

Recovery

Accomplish the Windshear Escape Maneuver found in the Non-Normal Maneuvers section of this manual.

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Performance Dispatch

Chapter PD

Table of Contents

737-700BBJW CFM56-7B27B3 KG FAA CATF/M - PD.10.1
737-700BBJW CFM56-7B27B3 LB FAA CATF/M - PD.20.1
737-800BBJW CFM56-7B27B3 KG FAA CATC/N - PD.30.1
737-800BBJW CFM56-7B27B3 LB FAA CATC/N - PD.40.1
737-900ERBBJ CFM56-7B27B3 KG FAA CATH/P PD.50.1
737-900ERBBJ CFM56-7B27B3 LB FAA CATH/P PD.60.1

Intentionally
Blank

Performance Dispatch**Chapter PD****Table of Contents****Section 10****737-700BBJW CFM56-7B27B3 KG FAA CATF/M**

Takeoff	PD.10.1
Minimum Takeoff Weight	PD.10.1
Takeoff Field Corrections - Dry Runway	PD.10.2
Takeoff Field & Climb Limit Weights - Dry Runway	PD.10.3
Takeoff Field Corrections - Wet Runway	PD.10.8
Takeoff Field & Climb Limit Weights - Wet Runway	PD.10.9
Takeoff Obstacle Limit Weight	PD.10.14
Minimum Takeoff Weight (26K Derate)	PD.10.17
Takeoff Field Corrections - Dry Runway 26K Derate	PD.10.18
Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate	PD.10.19
Takeoff Field Corrections - Wet Runway (26K Derate)	PD.10.24
Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)	PD.10.25
Takeoff Obstacle Limit Weight (26K Derate)	PD.10.30
Takeoff Field Corrections - Dry Runway (24K Derate)	PD.10.33
Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)	PD.10.34
Takeoff Field Corrections - Wet Runway (24K Derate)	PD.10.39
Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)	PD.10.40
Takeoff Obstacle Limit Weight (24K Derate)	PD.10.45
Takeoff Obstacle Limit Weight - High Altitude (24K Derate)	PD.10.46
Enroute	PD.11.1
.80M Maximum Operating Altitude	PD.11.1
.80M Trip Fuel and Time	PD.11.2

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

.80M Step Climb	PD.11.4
Short Trip Fuel and Time	PD.11.5
Holding Planning	PD.11.6
Flight Crew Oxygen Requirements	PD.11.7
Net Level Off Weight	PD.11.8
Decompression Critical Fuel Reserves - LRC Cruise	PD.11.9
Decompression Critical Fuel Reserves - LRC Cruise ...	PD.11.10
Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise	PD.11.11
Landing	PD.12.1
Landing Field Limit Weight - Dry Runway	PD.12.1
Landing Field Limit Weight - Wet Runway	PD.12.5
Landing Climb Limit Weight	PD.12.9
Go-Around Climb Gradient	PD.12.11
Quick Turnaround Limit Weight - Category F Steel Brakes	PD.12.12
Quick Turnaround Limit Weight - Category M Carbon Brakes	PD.12.13
Quick Turnaround Limit Weight - Category F Steel Brakes - High Altitudes	PD.12.14
Gear Down	PD.13.1
Takeoff Climb Limit Weight	PD.13.1
Landing Climb Limit Weight	PD.13.2
Takeoff Obstacle Limit Weight	PD.13.3
Long Range Cruise Altitude Capability	PD.13.5
Long Range Cruise Trip Fuel and Time	PD.13.6
Holding Planning	PD.13.7
Net Level Off Weight	PD.13.8
Text	PD.14.1
Introduction	PD.14.1
Takeoff	PD.14.1
Enroute	PD.14.2

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

**Performance Dispatch -
Table of Contents**

Landing	PD.14.5
Gear Down	PD.14.6

Intentionally
Blank

Performance Dispatch

Chapter PD

Takeoff

Section 10

Minimum Takeoff Weight

Weight Limit (1000 KG)

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)								
	S.L. & BELOW	1000	2000	3000	4000	5000	6000	7000	8000 & ABOVE
50	51.4	49.9	48.4	46.9	45.5	43.8	42.1	40.5	
45	53.1	51.6	50.1	48.6	47.1	45.4	43.8	42.1	40.4
40	54.6	53.1	51.6	50.1	48.6	46.9	45.3	43.6	42.0
35	56.1	54.5	53.0	51.4	49.9	48.2	46.5	44.9	43.3
30	57.5	55.8	54.1	52.4	50.8	49.1	47.5	45.9	44.3
25	58.5	56.1	54.4	52.8	51.3	49.7	48.2	46.6	45.0
20	59.0	56.2	54.4	53.0	51.6	50.1	48.5	47.0	45.5
15	59.0	56.2	54.4	53.0	51.6	50.1	48.6	47.2	45.9
10 & BELOW	59.0	56.2	54.4	53.0	51.6	50.1	48.6	47.4	46.1

Takeoff at the -7B27/B3 and -7B26/B1 thrust ratings requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the assumed temperature method of reducing thrust may not be used as a means to comply with this restriction.

Takeoff Field Corrections - Dry Runway
Slope Corrections

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1250	1240	1220	1210	1200	1190	1170	1160	1150
1400	1470	1450	1440	1420	1400	1370	1350	1320	1300
1600	1700	1670	1650	1620	1600	1560	1520	1480	1440
1800	1920	1890	1860	1830	1800	1750	1690	1640	1590
2000	2150	2110	2070	2040	2000	1930	1870	1800	1730
2200	2370	2330	2290	2240	2200	2120	2040	1960	1880
2400	2600	2550	2500	2450	2400	2310	2210	2120	2020
2600	2820	2770	2710	2660	2600	2490	2380	2270	2170
2800	3050	2990	2920	2860	2800	2680	2560	2430	2310
3000	3270	3200	3140	3070	3000	2860	2730	2590	2460
3200	3500	3420	3350	3270	3200	3050	2900	2750	2600
3400	3720	3640	3560	3480	3400	3240	3070	2910	2750
3600	3950	3860	3770	3690	3600	3420	3250	3070	2890
3800	4170	4080	3990	3890	3800	3610	3420	3230	3040
4000	4400	4300	4200	4100	4000	3800	3590	3390	3180
4200	4620	4520	4410	4310	4200	3980	3760	3550	3330
4400	4850	4740	4620	4510	4400	4170	3940	3700	3470
4600	5070	4950	4840	4720	4600	4350	4110	3860	3620
4800	5300	5170	5050	4920	4800	4540	4280	4020	3760
5000	5520	5390	5260	5130	5000	4730	4450	4180	3910

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	860	980	1090	1200	1270	1340	1420	1500
1400	1030	1150	1280	1400	1470	1550	1630	1720
1600	1200	1330	1470	1600	1670	1750	1840	1930
1800	1360	1510	1650	1800	1880	1960	2050	2150
2000	1530	1690	1840	2000	2080	2170	2270	2370
2200	1700	1860	2030	2200	2280	2380	2480	2590
2400	1860	2040	2220	2400	2490	2580	2690	2800
2600	2030	2220	2410	2600	2690	2790	2900	3020
2800	2190	2400	2600	2800	2890	3000	3110	3240
3000	2360	2570	2790	3000	3100	3210	3330	3460
3200	2530	2750	2980	3200	3300	3410	3540	3670
3400	2690	2930	3160	3400	3510	3620	3750	3890
3600	2860	3110	3350	3600	3710	3830	3960	4110
3800	3030	3280	3540	3800	3910	4040	4180	4330
4000	3190	3460	3730	4000	4120	4250	4390	4540
4200	3360	3640	3920	4200	4320	4450	4600	4760
4400	3520	3820	4110	4400	4520	4660	4810	4980
4600	3690	3990	4300	4600	4730	4870	5020	5200
4800	3860	4170	4490	4800	4930	5080	5240	5420
5000	4020	4350	4670	5000	5130	5280	5450	5630

Takeoff Field & Climb Limit Weights - Dry Runway

Flaps 5

Sea Level Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	65.5	63.2	62.8	62.5	62.1	61.7	61.3	58.5	57.0	55.5	54.0
1600	70.3	67.8	67.4	67.0	66.5	66.1	65.7	62.8	61.1	59.5	57.9
1800	74.7	72.1	71.6	71.2	70.7	70.3	69.8	66.7	64.9	63.2	61.5
2000	79.0	76.2	75.7	75.3	74.8	74.3	73.8	70.5	68.7	66.9	65.1
2200	82.5	79.6	79.1	78.7	78.2	77.7	77.2	73.8	71.9	70.1	68.2
2400	85.5	82.6	82.1	81.6	81.1	80.7	80.2	76.7	74.7	72.9	71.0
2600	86.1	85.9	85.3	84.8	84.3	83.8	83.3	79.7	77.7	75.8	73.8
2800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.5	80.4	78.4	76.4
3000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.0	82.9	80.8	78.8
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.3	83.2	81.1
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.5	83.3
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.4
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.2	79.1	76.3	73.5

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	64.4	59.3	58.9	58.6	58.2	57.8	56.9	54.2	52.7	51.3	49.5
1600	69.0	63.6	63.2	62.8	62.4	61.9	61.0	58.1	56.5	55.0	53.1
1800	73.3	67.6	67.2	66.7	66.3	65.8	64.8	61.7	60.1	58.5	56.4
2000	77.6	71.5	71.0	70.6	70.1	69.6	68.6	65.3	63.6	61.9	59.7
2200	81.0	74.8	74.3	73.8	73.3	72.9	71.8	68.4	66.6	64.9	62.7
2400	84.1	77.7	77.2	76.7	76.2	75.7	74.6	71.2	69.4	67.6	65.4
2600	86.1	80.7	80.2	79.7	79.2	78.7	77.6	74.1	72.1	70.3	68.0
2800	86.1	83.5	83.0	82.5	82.0	81.5	80.3	76.6	74.6	72.8	70.4
3000	86.1	86.1	85.6	85.1	84.5	84.0	82.7	79.0	77.0	75.0	72.5
3200	86.1	86.1	86.1	86.1	86.1	86.1	85.2	81.3	79.2	77.2	74.7
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.6	81.4	79.3	76.7
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.6	83.4	81.3	78.7
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.2	83.1	80.3
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.7	82.0
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.6
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	84.4	83.9	83.8	83.7	83.6	83.5	81.8	76.5	73.6	71.1	67.6

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Dry Runway

Flaps 5

4000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	60.2	55.1	54.8	54.4	54.0	53.4	52.5	50.1	48.7	47.3	46.2
1600	64.6	59.1	58.7	58.3	57.9	57.2	56.3	53.7	52.3	50.8	49.5
1800	68.6	62.8	62.4	61.9	61.5	60.8	59.9	57.1	55.5	53.9	52.6
2000	72.6	66.5	66.0	65.5	65.1	64.3	63.3	60.4	58.8	57.1	55.7
2200	75.9	69.6	69.1	68.7	68.2	67.4	66.4	63.4	61.7	60.0	58.6
2400	78.8	72.4	71.9	71.5	71.0	70.2	69.1	66.1	64.4	62.6	61.2
2600	81.9	75.3	74.8	74.3	73.8	73.0	71.9	68.7	67.0	65.1	63.6
2800	84.8	77.9	77.4	76.9	76.4	75.5	74.4	71.1	69.3	67.4	65.9
3000	86.1	80.3	79.8	79.3	78.7	77.8	76.7	73.3	71.4	69.5	67.9
3200	86.1	82.7	82.1	81.6	81.1	80.1	79.0	75.5	73.6	71.6	69.9
3400	86.1	85.0	84.4	83.8	83.3	82.3	81.1	77.6	75.6	73.5	71.8
3600	86.1	86.1	86.1	85.9	85.3	84.4	83.2	79.5	77.5	75.3	73.6
3800	86.1	86.1	86.1	86.1	86.1	86.1	84.9	81.2	79.1	77.0	75.2
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.8	80.7	78.5	76.7
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	82.3	80.0	78.2
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.8	81.5	79.7
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.4	83.0	81.1
CLIMB LIMIT WT (1000 KG)	79.0	78.5	78.4	78.4	78.3	77.5	76.0	71.3	68.6	65.8	63.5

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	56.1	51.0	50.7	50.3	49.7	49.1	48.4	46.1	45.0	43.9	42.7
1600	60.1	54.7	54.4	54.0	53.3	52.7	51.9	49.5	48.3	47.1	45.9
1800	63.9	58.2	57.7	57.3	56.7	56.0	55.1	52.6	51.3	50.0	48.7
2000	67.6	61.5	61.1	60.7	60.0	59.3	58.3	55.7	54.3	52.9	51.6
2200	70.8	64.6	64.1	63.7	62.9	62.2	61.2	58.5	57.1	55.7	54.3
2400	73.6	67.3	66.8	66.4	65.6	64.9	63.9	61.1	59.6	58.2	56.8
2600	76.5	70.0	69.5	69.0	68.3	67.5	66.5	63.6	62.1	60.6	59.1
2800	79.2	72.4	71.9	71.4	70.6	69.8	68.8	65.8	64.2	62.7	61.2
3000	81.6	74.6	74.1	73.6	72.8	72.0	70.9	67.8	66.2	64.7	63.1
3200	84.1	76.8	76.3	75.8	75.0	74.1	73.0	69.9	68.2	66.6	65.0
3400	86.1	78.9	78.4	77.9	77.0	76.1	75.0	71.8	70.1	68.4	66.8
3600	86.1	80.9	80.4	79.8	79.0	78.0	76.9	73.6	71.8	70.1	68.4
3800	86.1	82.7	82.1	81.5	80.6	79.7	78.5	75.1	73.3	71.6	69.9
4000	86.1	84.3	83.7	83.2	82.3	81.3	80.1	76.6	74.8	73.0	71.3
4200	86.1	86.0	85.4	84.8	83.9	82.9	81.7	78.1	76.2	74.4	72.6
4400	86.1	86.1	86.1	86.1	85.5	84.5	83.2	79.6	77.7	75.8	74.0
4600	86.1	86.1	86.1	86.1	86.1	86.0	84.8	81.0	79.1	77.2	75.3
CLIMB LIMIT WT (1000 KG)	74.1	73.5	73.4	73.3	72.6	71.8	70.3	65.6	63.3	61.1	59.0

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	51.9	47.3	47.0	46.5	45.9	45.3	44.3	42.1	41.0	39.8	38.7
1600	55.7	50.7	50.4	49.8	49.3	48.6	47.5	45.2	44.0	42.8	41.6
1800	59.2	53.9	53.5	52.9	52.4	51.6	50.5	48.0	46.7	45.4	44.2
2000	62.6	57.0	56.7	56.0	55.4	54.6	53.5	50.8	49.4	48.1	46.8
2200	65.7	59.9	59.5	58.9	58.3	57.4	56.2	53.5	52.1	50.7	49.4
2400	68.4	62.6	62.2	61.5	60.9	60.0	58.8	56.0	54.6	53.2	51.8
2600	71.1	65.1	64.7	64.0	63.3	62.4	61.2	58.3	56.8	55.4	53.9
2800	73.6	67.3	66.9	66.2	65.5	64.6	63.3	60.3	58.8	57.3	55.8
3000	75.9	69.4	69.0	68.3	67.6	66.6	65.3	62.2	60.6	59.1	57.6
3200	78.1	71.5	71.0	70.3	69.6	68.6	67.2	64.1	62.5	60.8	59.3
3400	80.3	73.4	73.0	72.2	71.5	70.5	69.1	65.8	64.2	62.5	60.9
3600	82.3	75.3	74.8	74.0	73.3	72.2	70.8	67.5	65.8	64.1	62.4
3800	84.0	76.9	76.4	75.6	74.8	73.8	72.3	68.9	67.2	65.4	63.7
4000	85.7	78.4	77.9	77.1	76.3	75.3	73.8	70.3	68.5	66.7	65.0
4200	86.1	80.0	79.4	78.6	77.8	76.7	75.2	71.6	69.8	68.0	66.2
4400	86.1	81.5	80.9	80.1	79.3	78.2	76.6	72.9	71.1	69.2	67.4
4600	86.1	83.0	82.4	81.6	80.7	79.6	78.0	74.2	72.4	70.5	68.6
CLIMB LIMIT WT (1000 KG)	69.4	68.7	68.6	67.9	67.2	66.1	64.0	59.3	57.2	55.1	53.1

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	47.6	43.5	43.0	42.4	41.9	41.2	40.2	38.0	37.0	35.9	34.9
1600	51.0	46.7	46.1	45.5	44.9	44.2	43.1	40.8	39.7	38.6	37.4
1800	54.2	49.6	49.0	48.3	47.7	46.9	45.8	43.3	42.1	40.9	39.8
2000	57.4	52.5	51.9	51.2	50.5	49.7	48.5	45.9	44.6	43.4	42.1
2200	60.3	55.3	54.6	53.9	53.2	52.4	51.2	48.5	47.2	45.9	44.6
2400	62.9	57.8	57.1	56.4	55.7	54.9	53.6	50.9	49.6	48.3	46.9
2600	65.4	60.2	59.4	58.7	58.0	57.1	55.8	53.0	51.6	50.3	48.9
2800	67.7	62.3	61.5	60.8	60.0	59.1	57.8	54.9	53.4	52.0	50.6
3000	69.8	64.2	63.4	62.7	61.9	61.0	59.6	56.6	55.1	53.6	52.2
3200	71.9	66.1	65.3	64.5	63.7	62.8	61.4	58.2	56.7	55.3	53.8
3400	73.9	67.9	67.1	66.3	65.5	64.5	63.0	59.8	58.3	56.8	55.2
3600	75.7	69.6	68.8	67.9	67.1	66.1	64.6	61.3	59.7	58.2	56.6
3800	77.3	71.1	70.2	69.4	68.5	67.5	66.0	62.6	61.0	59.4	57.8
4000	78.9	72.5	71.6	70.8	69.9	68.8	67.3	63.9	62.2	60.6	58.9
4200	80.4	73.9	73.0	72.1	71.2	70.1	68.6	65.1	63.4	61.7	60.0
4400	81.9	75.3	74.4	73.5	72.5	71.4	69.8	66.3	64.5	62.8	61.1
4600	83.4	76.7	75.7	74.8	73.8	72.7	71.1	67.4	65.7	63.9	62.2
CLIMB LIMIT WT (1000 KG)	63.7	63.1	62.3	61.5	60.6	59.4	57.3	53.3	51.3	49.5	47.5

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1300	43.9	41.0	40.5	40.0	39.5	39.0	38.5	37.9	37.0	35.2	33.3
1400	45.6	42.5	42.0	41.4	40.9	40.4	39.8	39.2	38.2	36.2	34.1
1600	48.8	45.4	44.8	44.2	43.7	43.1	42.5	41.8	40.8	38.5	36.3
1800	51.7	48.2	47.6	47.0	46.4	45.8	45.2	44.5	43.4	41.0	38.7
2000	54.4	50.8	50.1	49.5	48.9	48.3	47.6	46.8	45.7	43.3	40.9
2200	56.9	53.1	52.4	51.8	51.1	50.5	49.8	49.0	47.8	45.2	42.7
2400	59.3	55.2	54.6	53.9	53.2	52.5	51.8	50.9	49.7	47.0	44.4
2600	61.6	57.4	56.7	55.9	55.2	54.5	53.8	52.9	51.6	48.8	46.1
2800	63.8	59.4	58.7	58.0	57.2	56.5	55.7	54.8	53.5	50.6	47.7
3000	65.8	61.3	60.5	59.8	59.0	58.2	57.4	56.5	55.1	52.1	49.2
3200	67.6	62.9	62.2	61.4	60.6	59.8	59.0	58.0	56.5	53.4	50.4
3400	69.3	64.5	63.7	62.9	62.0	61.2	60.4	59.4	57.9	54.7	51.5
3600	70.9	66.0	65.1	64.3	63.4	62.6	61.7	60.7	59.1	55.8	52.6
3800	72.4	67.3	66.4	65.5	64.7	63.8	62.9	61.8	60.3	56.9	53.5
4000	73.9	68.6	67.7	66.8	65.9	65.0	64.1	63.0	61.4	57.9	54.4
4200	75.3	69.9	69.0	68.1	67.2	66.2	65.3	64.2	62.5	58.9	55.4
4400	76.8	71.2	70.3	69.4	68.4	67.5	66.5	65.4	63.7	60.0	56.5
4600	78.2	72.6	71.7	70.7	69.7	68.8	67.8	66.6	64.9	61.2	57.5
CLIMB LIMIT WT (1000 KG)	60.6	59.9	59.2	58.3	57.6	56.8	55.9	54.6	52.7	48.6	44.7

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1300	40.9	38.0	37.5	37.0	36.6	36.1	35.7	35.1	34.5	33.1	31.7
1400	42.4	39.2	38.7	38.2	37.7	37.2	36.7	36.1	35.4	33.9	32.4
1600	45.2	41.8	41.3	40.7	40.2	39.7	39.1	38.5	37.7	36.1	34.4
1800	48.0	44.5	43.9	43.3	42.8	42.2	41.7	41.0	40.2	38.5	36.8
2000	50.6	46.9	46.3	45.7	45.1	44.5	43.9	43.2	42.4	40.6	38.8
2200	52.9	49.0	48.4	47.8	47.2	46.5	45.9	45.1	44.3	42.4	40.5
2400	55.1	51.0	50.3	49.7	49.0	48.4	47.8	46.9	46.0	44.1	42.1
2600	57.2	52.9	52.2	51.6	50.9	50.2	49.6	48.7	47.8	45.7	43.7
2800	59.3	54.8	54.1	53.4	52.7	52.1	51.4	50.5	49.5	47.4	45.3
3000	61.1	56.5	55.8	55.1	54.4	53.7	52.9	52.0	51.0	48.8	46.6
3200	62.7	58.0	57.3	56.5	55.8	55.0	54.3	53.3	52.3	50.0	47.8
3400	64.3	59.4	58.6	57.8	57.1	56.3	55.6	54.6	53.5	51.2	48.8
3600	65.7	60.7	59.9	59.1	58.3	57.5	56.8	55.7	54.6	52.2	49.8
3800	67.1	61.9	61.1	60.2	59.4	58.6	57.8	56.8	55.6	53.1	50.7
4000	68.4	63.0	62.2	61.3	60.5	59.7	58.8	57.8	56.6	54.0	51.5
4200	69.7	64.2	63.3	62.5	61.6	60.8	59.9	58.8	57.6	55.0	52.4
4400	71.0	65.4	64.5	63.7	62.8	61.9	61.0	59.9	58.7	56.0	53.4
4600	72.4	66.7	65.8	64.9	64.0	63.1	62.2	61.1	59.8	57.1	54.4
CLIMB LIMIT WT (1000 KG)	56.5	55.2	54.4	53.6	52.9	52.2	51.4	50.2	48.8	45.7	42.8

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1500 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2050 kg and climb limit weight by 2900 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****14500 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1300	40.1	37.2	36.8	36.3	35.9	35.4	35.0	34.4	33.9	32.6	31.3
1400	41.6	38.4	37.9	37.4	37.0	36.5	36.0	35.4	34.8	33.4	32.0
1600	44.4	41.0	40.4	39.9	39.4	38.9	38.3	37.7	37.0	35.5	34.0
1800	47.1	43.6	43.0	42.5	41.9	41.4	40.8	40.2	39.4	37.9	36.3
2000	49.7	45.9	45.3	44.8	44.2	43.6	43.1	42.3	41.6	40.0	38.3
2200	51.9	48.0	47.4	46.8	46.2	45.6	45.0	44.3	43.5	41.8	40.0
2400	54.0	49.9	49.3	48.7	48.0	47.4	46.8	46.0	45.2	43.4	41.6
2600	56.1	51.8	51.2	50.5	49.9	49.2	48.6	47.8	46.9	45.0	43.1
2800	58.1	53.7	53.0	52.3	51.7	51.0	50.3	49.5	48.6	46.6	44.7
3000	60.0	55.4	54.7	54.0	53.3	52.6	51.9	51.0	50.1	48.1	46.0
3200	61.6	56.8	56.1	55.3	54.6	53.9	53.2	52.3	51.3	49.3	47.2
3400	63.1	58.2	57.4	56.6	55.9	55.2	54.4	53.5	52.5	50.3	48.2
3600	64.5	59.4	58.6	57.9	57.1	56.3	55.6	54.6	53.6	51.4	49.2
3800	65.8	60.6	59.8	58.9	58.1	57.4	56.6	55.6	54.5	52.3	50.0
4000	67.0	61.7	60.8	60.0	59.2	58.4	57.6	56.6	55.5	53.2	50.8
4200	68.3	62.8	62.0	61.1	60.3	59.5	58.6	57.6	56.5	54.1	51.7
4400	69.6	64.0	63.1	62.3	61.4	60.6	59.7	58.7	57.5	55.1	52.6
4600	70.9	65.3	64.4	63.5	62.6	61.8	60.9	59.8	58.7	56.2	53.7
CLIMB LIMIT WT (1000 KG)	55.5	54.0	53.3	52.5	51.8	51.1	50.3	49.2	47.9	45.1	42.4

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1500 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2050 kg and climb limit weight by 2900 kg.

Takeoff Field Corrections - Wet Runway
Slope Corrections

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1240	1230	1220	1210	1200	1190	1170	1160	1150
1400	1460	1450	1430	1420	1400	1380	1360	1330	1310
1600	1680	1660	1640	1620	1600	1570	1540	1510	1480
1800	1910	1880	1850	1830	1800	1760	1720	1690	1650
2000	2130	2100	2060	2030	2000	1950	1910	1860	1820
2200	2350	2310	2280	2240	2200	2150	2090	2040	1980
2400	2570	2530	2490	2440	2400	2340	2280	2210	2150
2600	2800	2750	2700	2650	2600	2530	2460	2390	2320
2800	3020	2960	2910	2850	2800	2720	2640	2560	2490
3000	3240	3180	3120	3060	3000	2910	2830	2740	2650
3200	3460	3400	3330	3270	3200	3110	3010	2920	2820
3400	3690	3620	3540	3470	3400	3300	3190	3090	2990
3600	3910	3830	3750	3680	3600	3490	3380	3270	3160
3800	4130	4050	3970	3880	3800	3680	3560	3440	3320
4000	4350	4270	4180	4090	4000	3870	3750	3620	3490
4200	4580	4480	4390	4290	4200	4060	3930	3790	3660
4400	4800	4700	4600	4500	4400	4260	4110	3970	3830
4600	5020	4920	4810	4710	4600	4450	4300	4140	3990
4800	5240	5130	5020	4910	4800	4640	4480	4320	4160
5000	5470	5350	5230	5120	5000	4830	4660	4500	4330

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	840	960	1080	1200	1280	1360	1440	1510
1400	1010	1140	1270	1400	1480	1570	1650	1740
1600	1180	1320	1460	1600	1690	1780	1870	1960
1800	1350	1500	1650	1800	1890	1990	2090	2190
2000	1520	1680	1840	2000	2100	2200	2300	2420
2200	1690	1860	2030	2200	2300	2410	2520	2640
2400	1860	2040	2220	2400	2500	2620	2740	2870
2600	2040	2220	2410	2600	2710	2830	2950	3090
2800	2210	2400	2600	2800	2910	3040	3170	3320
3000	2380	2580	2790	3000	3120	3250	3390	3540
3200	2550	2760	2980	3200	3320	3460	3600	3770
3400	2720	2940	3170	3400	3520	3660	3820	3990
3600	2890	3120	3360	3600	3730	3870	4040	4220
3800	3060	3300	3550	3800	3930	4080	4260	4450
4000	3230	3480	3740	4000	4140	4290	4470	4670
4200	3400	3660	3930	4200	4340	4500	4690	4900
4400	3570	3850	4120	4400	4540	4710	4910	5120
4600	3740	4030	4310	4600	4750	4920	5120	5350
4800	3910	4210	4500	4800	4950	5130	5340	5570
5000	4080	4390	4690	5000	5160	5340	5560	5800

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	74.4	70.9	70.5	70.0	69.6	69.1	68.7	65.4	63.6	62.0	60.4
2000	78.5	74.8	74.3	73.9	73.4	72.9	72.4	69.0	67.1	65.4	63.7
2200	82.4	78.5	78.0	77.5	77.0	76.4	75.9	72.3	70.3	68.5	66.8
2400	85.9	81.9	81.3	80.8	80.3	79.7	79.2	75.4	73.3	71.5	69.6
2600	86.1	84.9	84.3	83.7	83.2	82.7	82.1	78.1	76.0	74.1	72.2
2800	86.1	86.1	86.1	86.1	86.0	85.5	84.9	80.8	78.6	76.6	74.6
3000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.4	81.1	79.1	77.0
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.9	83.6	81.4	79.3
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.0	83.7	81.6
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.0	83.8
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.2	79.1	76.3	73.5

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	72.3	66.3	65.9	65.4	64.9	64.5	63.5	60.5	59.0	57.5	55.7
2000	76.3	70.0	69.5	69.0	68.5	68.0	66.9	63.8	62.1	60.6	58.6
2200	80.0	73.4	72.8	72.3	71.8	71.3	70.2	66.9	65.1	63.5	61.5
2400	83.5	76.5	76.0	75.4	74.9	74.3	73.2	69.8	67.9	66.2	64.1
2600	86.1	79.3	78.7	78.2	77.6	77.0	75.8	72.3	70.4	68.6	66.4
2800	86.1	82.0	81.4	80.8	80.2	79.7	78.4	74.7	72.8	70.9	68.6
3000	86.1	84.7	84.0	83.4	82.8	82.3	81.0	77.2	75.1	73.2	70.8
3200	86.1	86.1	86.1	85.9	85.3	84.7	83.4	79.5	77.3	75.4	72.9
3400	86.1	86.1	86.1	86.1	86.1	86.1	85.8	81.7	79.5	77.5	75.0
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.0	81.7	79.6	77.0
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.9	81.7	79.1
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.8	81.0
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.8	82.9
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.7
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	84.4	83.9	83.8	83.7	83.6	83.5	81.8	76.5	73.6	71.1	67.6

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Wet Runway

Flaps 5

4000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	67.5	61.6	61.1	60.7	60.3	59.6	58.7	56.1	54.8	53.3	52.1
2000	71.2	64.9	64.4	64.0	63.5	62.8	61.9	59.1	57.7	56.1	54.8
2200	74.7	68.0	67.5	67.1	66.6	65.8	64.9	62.0	60.4	58.8	57.4
2400	77.9	70.9	70.4	69.9	69.5	68.7	67.6	64.6	63.0	61.3	59.9
2600	80.7	73.5	73.0	72.5	72.0	71.1	70.1	66.9	65.3	63.5	62.0
2800	83.5	76.0	75.5	74.9	74.4	73.6	72.5	69.2	67.5	65.6	64.1
3000	86.1	78.5	77.9	77.4	76.8	75.9	74.8	71.5	69.7	67.8	66.2
3200	86.1	80.8	80.2	79.7	79.1	78.2	77.0	73.6	71.7	69.8	68.1
3400	86.1	83.1	82.5	81.9	81.4	80.4	79.2	75.6	73.8	71.7	70.0
3600	86.1	85.4	84.8	84.2	83.6	82.6	81.4	77.7	75.7	73.6	71.9
3800	86.1	86.1	86.1	86.1	85.9	84.9	83.6	79.8	77.7	75.5	73.8
4000	86.1	86.1	86.1	86.1	86.1	86.1	85.7	81.8	79.7	77.4	75.6
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.6	81.5	79.2	77.3
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.4	83.2	80.8	78.9
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.8	82.4	80.4
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.9	81.8
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.2	83.2
CLIMB LIMIT WT (1000 KG)	79.0	78.5	78.4	78.4	78.3	77.5	76.0	71.3	68.6	65.8	63.5

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	62.7	57.1	56.7	56.3	55.7	55.1	54.3	51.9	50.7	49.5	48.4
2000	66.1	60.2	59.8	59.4	58.7	58.1	57.2	54.7	53.4	52.1	50.9
2200	69.3	63.1	62.6	62.2	61.5	60.9	60.0	57.3	55.9	54.6	53.3
2400	72.3	65.8	65.3	64.9	64.2	63.5	62.5	59.7	58.3	56.9	55.6
2600	74.9	68.1	67.7	67.2	66.5	65.7	64.8	61.9	60.4	58.9	57.6
2800	77.5	70.5	70.0	69.5	68.7	68.0	66.9	64.0	62.4	60.9	59.5
3000	80.0	72.7	72.2	71.7	71.0	70.2	69.1	66.0	64.4	62.9	61.4
3200	82.4	74.9	74.4	73.8	73.1	72.2	71.2	68.0	66.3	64.7	63.2
3400	84.7	77.0	76.4	75.9	75.1	74.3	73.1	69.9	68.1	66.5	65.0
3600	86.1	79.1	78.5	78.0	77.1	76.3	75.1	71.7	69.9	68.3	66.7
3800	86.1	81.2	80.6	80.1	79.2	78.3	77.1	73.6	71.7	70.0	68.3
4000	86.1	83.3	82.7	82.1	81.2	80.2	79.0	75.4	73.5	71.7	70.0
4200	86.1	85.2	84.6	84.0	83.0	82.1	80.8	77.1	75.1	73.3	71.5
4400	86.1	86.1	86.1	85.7	84.8	83.8	82.5	78.7	76.7	74.8	73.0
4600	86.1	86.1	86.1	86.1	86.1	85.4	84.1	80.2	78.2	76.2	74.4
4800	86.1	86.1	86.1	86.1	86.1	86.1	85.6	81.6	79.6	77.6	75.7
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.0	80.9	78.9	77.0
CLIMB LIMIT WT (1000 KG)	74.1	73.5	73.4	73.3	72.6	71.8	70.3	65.6	63.3	61.1	59.0

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	58.2	53.2	52.8	52.3	51.7	51.0	50.0	47.6	46.4	45.3	44.2
2000	61.3	56.0	55.6	55.0	54.4	53.7	52.6	50.1	48.9	47.7	46.5
2200	64.3	58.7	58.3	57.7	57.0	56.2	55.1	52.4	51.2	49.9	48.7
2400	67.0	61.2	60.8	60.1	59.5	58.6	57.4	54.7	53.3	52.0	50.8
2600	69.4	63.4	62.9	62.3	61.6	60.7	59.5	56.6	55.2	53.9	52.6
2800	71.8	65.5	65.1	64.4	63.7	62.8	61.5	58.5	57.1	55.7	54.3
3000	74.1	67.6	67.2	66.4	65.7	64.8	63.5	60.4	58.9	57.5	56.1
3200	76.3	69.6	69.1	68.4	67.7	66.7	65.3	62.2	60.6	59.2	57.7
3400	78.5	71.5	71.1	70.3	69.5	68.5	67.1	63.9	62.3	60.8	59.3
3600	80.6	73.5	73.0	72.2	71.4	70.4	68.9	65.5	63.9	62.3	60.8
3800	82.8	75.4	74.9	74.0	73.2	72.2	70.7	67.2	65.5	63.8	62.2
4000	84.9	77.2	76.7	75.9	75.0	73.9	72.4	68.7	67.0	65.3	63.6
4200	86.1	79.0	78.4	77.6	76.7	75.6	74.0	70.2	68.5	66.7	65.0
4400	86.1	80.6	80.1	79.2	78.3	77.2	75.5	71.7	69.9	68.1	66.3
4600	86.1	82.2	81.6	80.7	79.8	78.6	77.0	73.1	71.2	69.4	67.6
4800	86.1	83.7	83.1	82.2	81.2	80.0	78.3	74.4	72.5	70.6	68.8
5000	86.1	85.0	84.4	83.5	82.6	81.4	79.6	75.6	73.7	71.8	70.0
CLIMB LIMIT WT (1000 KG)	69.4	68.7	68.6	67.9	67.2	66.1	64.0	59.3	57.2	55.1	53.1

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	53.6	49.1	48.5	47.9	47.3	46.6	45.5	43.4	42.3	41.3	40.2
2000	56.5	51.7	51.1	50.4	49.8	49.0	47.9	45.6	44.5	43.4	42.3
2200	59.2	54.1	53.5	52.8	52.1	51.3	50.2	47.7	46.6	45.4	44.3
2400	61.7	56.4	55.7	55.0	54.3	53.5	52.3	49.8	48.5	47.3	46.1
2600	63.9	58.4	57.7	57.0	56.3	55.4	54.1	51.5	50.2	49.0	47.7
2800	66.1	60.4	59.7	58.9	58.2	57.3	55.9	53.2	51.9	50.6	49.3
3000	68.2	62.4	61.6	60.8	60.0	59.1	57.7	55.0	53.6	52.3	50.9
3200	70.2	64.2	63.4	62.6	61.8	60.8	59.4	56.5	55.1	53.8	52.4
3400	72.2	66.0	65.1	64.3	63.5	62.5	61.0	58.1	56.6	55.2	53.7
3600	74.1	67.7	66.8	66.0	65.1	64.1	62.6	59.5	58.0	56.6	55.1
3800	76.1	69.4	68.5	67.6	66.7	65.7	64.1	60.9	59.4	57.9	56.3
4000	77.9	71.1	70.1	69.2	68.3	67.2	65.6	62.3	60.7	59.2	57.6
4200	79.7	72.6	71.7	70.8	69.8	68.7	67.0	63.6	62.0	60.4	58.7
4400	81.4	74.1	73.2	72.2	71.2	70.1	68.4	64.9	63.3	61.6	59.9
4600	83.0	75.6	74.6	73.6	72.6	71.4	69.7	66.2	64.5	62.8	61.1
4800	84.4	76.9	75.9	74.9	73.9	72.7	71.0	67.4	65.6	63.9	62.2
5000	85.8	78.2	77.2	76.2	75.1	74.0	72.2	68.5	66.8	65.0	63.3
CLIMB LIMIT WT (1000 KG)	63.7	63.1	62.3	61.5	60.6	59.4	57.3	53.3	51.3	49.5	47.5

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1750	50.0	46.4	45.8	45.2	44.6	44.1	43.5	42.8	41.7	39.6	37.4
1800	50.7	46.9	46.3	45.8	45.2	44.6	44.0	43.3	42.3	40.1	37.9
2000	53.2	49.3	48.7	48.1	47.5	46.9	46.2	45.5	44.4	42.1	39.8
2200	55.6	51.5	50.9	50.2	49.6	49.0	48.3	47.5	46.4	44.0	41.6
2400	57.8	53.5	52.9	52.2	51.5	50.9	50.2	49.4	48.2	45.7	43.2
2600	59.9	55.5	54.8	54.2	53.5	52.8	52.1	51.2	50.0	47.4	44.9
2800	62.1	57.5	56.8	56.1	55.4	54.7	53.9	53.0	51.8	49.1	46.5
3000	63.9	59.2	58.5	57.8	57.0	56.3	55.5	54.6	53.3	50.5	47.8
3200	65.8	60.9	60.2	59.4	58.6	57.9	57.1	56.2	54.8	52.0	49.2
3400	67.6	62.6	61.8	61.0	60.2	59.4	58.6	57.7	56.3	53.3	50.4
3600	69.3	64.2	63.4	62.5	61.7	60.9	60.1	59.1	57.7	54.6	51.7
3800	71.0	65.7	64.9	64.0	63.2	62.4	61.5	60.5	59.0	55.9	52.8
4000	72.7	67.2	66.4	65.5	64.6	63.8	62.9	61.9	60.4	57.1	54.0
4200	74.3	68.7	67.8	66.9	66.0	65.2	64.2	63.2	61.6	58.3	55.1
4400	75.8	70.1	69.2	68.3	67.4	66.5	65.5	64.4	62.8	59.4	56.1
4600	77.3	71.4	70.5	69.6	68.6	67.7	66.8	65.7	64.0	60.5	57.1
4800	78.7	72.7	71.8	70.8	69.9	68.9	68.0	66.8	65.2	61.6	58.1
5000	80.1	74.0	73.0	72.0	71.1	70.1	69.1	67.9	66.2	62.6	59.0
CLIMB LIMIT WT (1000 KG)	60.6	59.9	59.2	58.3	57.6	56.8	55.9	54.6	52.7	48.6	44.7

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1750	46.4	42.8	42.2	41.7	41.1	40.6	40.1	39.4	38.6	37.0	35.4
1800	47.0	43.3	42.7	42.2	41.6	41.1	40.6	39.9	39.1	37.5	35.9
2000	49.4	45.5	44.9	44.3	43.8	43.2	42.6	41.9	41.1	39.4	37.7
2200	51.6	47.5	46.9	46.3	45.7	45.1	44.5	43.8	42.9	41.1	39.4
2400	53.6	49.4	48.8	48.1	47.5	46.9	46.3	45.5	44.6	42.8	40.9
2600	55.6	51.2	50.6	49.9	49.3	48.7	48.0	47.2	46.3	44.4	42.5
2800	57.6	53.1	52.4	51.7	51.0	50.4	49.7	48.9	48.0	45.9	44.0
3000	59.3	54.6	53.9	53.2	52.6	51.9	51.2	50.3	49.4	47.3	45.3
3200	61.0	56.2	55.5	54.7	54.0	53.3	52.6	51.7	50.7	48.6	46.5
3400	62.7	57.7	56.9	56.2	55.5	54.7	54.0	53.1	52.1	49.9	47.7
3600	64.3	59.1	58.4	57.6	56.8	56.1	55.3	54.4	53.4	51.1	48.8
3800	65.8	60.5	59.7	58.9	58.2	57.4	56.6	55.6	54.6	52.2	49.9
4000	67.3	61.9	61.1	60.3	59.5	58.7	57.9	56.9	55.8	53.4	51.0
4200	68.8	63.2	62.3	61.5	60.7	59.9	59.1	58.0	56.9	54.4	52.0
4400	70.2	64.4	63.6	62.7	61.9	61.1	60.2	59.2	58.0	55.5	53.0
4600	71.5	65.7	64.8	63.9	63.1	62.2	61.3	60.2	59.1	56.5	53.9
4800	72.8	66.8	65.9	65.0	64.2	63.3	62.4	61.3	60.1	57.4	54.8
5000	74.1	67.9	67.0	66.1	65.2	64.3	63.4	62.3	61.0	58.3	55.7
CLIMB LIMIT WT (1000 KG)	56.5	55.2	54.4	53.6	52.9	52.2	51.4	50.2	48.8	45.7	42.8

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1250 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 kg and climb limit weight by 2900 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****14500 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1750	45.5	41.9	41.3	40.8	40.3	39.8	39.2	38.6	37.9	36.4	35.0
1800	46.1	42.4	41.9	41.3	40.8	40.3	39.7	39.1	38.4	36.9	35.4
2000	48.5	44.6	44.0	43.4	42.9	42.3	41.8	41.1	40.4	38.8	37.2
2200	50.6	46.5	45.9	45.4	44.8	44.2	43.6	42.9	42.1	40.5	38.9
2400	52.6	48.4	47.8	47.1	46.5	46.0	45.3	44.6	43.8	42.1	40.4
2600	54.6	50.2	49.5	48.9	48.3	47.7	47.0	46.3	45.4	43.7	41.9
2800	56.5	52.0	51.3	50.6	50.0	49.4	48.7	47.9	47.1	45.2	43.4
3000	58.2	53.5	52.8	52.1	51.5	50.8	50.1	49.3	48.4	46.5	44.7
3200	59.9	55.0	54.3	53.6	52.9	52.2	51.5	50.7	49.8	47.8	45.9
3400	61.5	56.5	55.8	55.0	54.3	53.6	52.9	52.0	51.1	49.1	47.1
3600	63.0	57.9	57.1	56.4	55.7	54.9	54.2	53.3	52.3	50.2	48.2
3800	64.5	59.3	58.5	57.7	57.0	56.2	55.4	54.5	53.5	51.4	49.3
4000	66.0	60.6	59.8	59.0	58.2	57.5	56.7	55.7	54.7	52.5	50.3
4200	67.4	61.9	61.0	60.2	59.4	58.6	57.8	56.8	55.8	53.5	51.3
4400	68.8	63.1	62.2	61.4	60.6	59.8	58.9	57.9	56.9	54.5	52.2
4600	70.1	64.3	63.4	62.5	61.7	60.9	60.0	59.0	57.9	55.5	53.2
4800	71.4	65.4	64.5	63.6	62.8	61.9	61.1	60.0	58.9	56.4	54.0
5000	72.6	66.5	65.6	64.7	63.8	62.9	62.1	61.0	59.8	57.3	54.9
CLIMB LIMIT WT (1000 KG)	55.5	54.0	53.3	52.5	51.8	51.1	50.3	49.2	47.9	45.1	42.4

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1250 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 kg and climb limit weight by 2900 kg.

Takeoff Obstacle Limit Weight**Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 KG)**

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	79.0	84.9									
20	72.6	78.4	82.9								
40	67.0	72.6	77.1	80.6	83.6						
60	62.8	68.1	72.6	76.2	79.2	81.8	83.9				
80	59.3	64.4	68.8	72.5	75.6	78.3	80.5	82.4	84.1	85.5	
100	56.3	61.4	65.6	69.3	72.5	75.2	77.5	79.5	81.2	82.8	84.2
120	53.6	58.7	62.9	66.5	69.7	72.4	74.8	76.9	78.7	80.3	81.8
140	51.3	56.2	60.4	64.0	67.2	69.9	72.4	74.5	76.4	78.1	79.5
160	49.1	54.0	58.2	61.8	64.9	67.7	70.1	72.3	74.2	76.0	77.5
180	47.2	52.1	56.2	59.8	62.9	65.6	68.1	70.3	72.3	74.0	75.6
200	45.4	50.2	54.3	57.9	61.0	63.7	66.2	68.4	70.4	72.2	73.8
220	43.7	48.5	52.6	56.1	59.2	62.0	64.4	66.6	68.7	70.5	72.1
240	42.2	47.0	51.0	54.5	57.6	60.3	62.8	65.0	67.0	68.9	70.5
260		45.5	49.5	53.0	56.0	58.8	61.2	63.5	65.5	67.3	69.0
280		44.1	48.1	51.5	54.6	57.3	59.8	62.0	64.0	65.9	67.6
300		42.8	46.8	50.2	53.2	56.0	58.4	60.6	62.7	64.5	66.2

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
30 & BELOW	0	0	0	0	0	0	0
32	-0.6	-0.7	-0.9	-1.0	-1.2	-1.3	-1.4
34	-1.2	-1.5	-1.7	-2.0	-2.3	-2.6	-2.9
36	-1.8	-2.2	-2.6	-3.0	-3.5	-3.9	-4.3
38	-2.4	-2.9	-3.5	-4.0	-4.6	-5.2	-5.7
40	-3.0	-3.7	-4.4	-5.1	-5.8	-6.4	-7.1
42	-3.6	-4.4	-5.2	-6.0	-6.9	-7.7	-8.5
44	-4.2	-5.1	-6.1	-7.0	-8.0	-8.9	-9.9
46	-4.8	-5.8	-6.9	-8.0	-9.1	-10.1	-11.2
48	-5.4	-6.6	-7.8	-9.0	-10.2	-11.4	-12.6
50	-6.0	-7.3	-8.6	-9.9	-11.3	-12.6	-13.9

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
S.L. & BELOW	0	0	0	0	0	0	0
1000	-1.5	-1.8	-2.1	-2.4	-2.7	-3.0	-3.2
2000	-3.0	-3.6	-4.2	-4.8	-5.3	-5.9	-6.5
3000	-4.4	-5.2	-6.1	-6.9	-7.7	-8.6	-9.4
4000	-5.7	-6.8	-7.9	-9.0	-10.2	-11.3	-12.4
5000	-6.9	-8.3	-9.7	-11.1	-12.4	-13.8	-15.2
6000	-8.2	-9.8	-11.5	-13.1	-14.7	-16.4	-18.0
7000	-9.6	-11.6	-13.5	-15.4	-17.3	-19.3	-21.2
8000	-11.1	-13.3	-15.5	-17.7	-19.9	-22.2	-24.4
9000	-12.5	-15.0	-17.5	-20.0	-22.5	-25.0	-27.5
10000	-13.9	-16.6	-19.4	-22.2	-25.0	-27.8	-30.6

Takeoff Obstacle Limit Weight**Wind Adjustments**

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
15 TW	-8.3	-8.1	-7.9	-7.7	-7.5	-7.3	-7.1
10 TW	-5.5	-5.4	-5.2	-5.1	-5.0	-4.8	-4.7
5 TW	-2.8	-2.7	-2.6	-2.6	-2.5	-2.4	-2.4
0	0	0	0	0	0	0	0
10 HW	1.2	1.1	1.0	1.0	0.9	0.8	0.8
20 HW	2.4	2.2	2.1	2.0	1.8	1.7	1.5
30 HW	3.7	3.5	3.2	3.0	2.8	2.5	2.3
40 HW	5.0	4.7	4.4	4.0	3.7	3.4	3.1

With engine bleed for packs off, increase weight by 600 kg.

With engine anti-ice on, decrease weight by 300 kg.

With engine and wing anti-ice on, decrease weight by 1700 kg (optional system).

Takeoff Obstacle Limit Weight - High Altitudes**Flaps 5**

10000 ft, 10°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 LB)

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKERE LEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	55.5	59.7	63.0	65.2	67.0						
20	51.3	55.3	58.6	61.2	63.2	64.7	65.9				
40	47.6	51.4	54.5	57.1	59.2	61.0	62.5	63.7	64.6	65.4	66.2
60		48.4	51.4	54.0	56.2	58.0	59.6	60.9	62.1	63.1	63.9
80			48.9	51.4	53.6	55.5	57.1	58.5	59.7	60.8	61.8
100				49.2	51.4	53.3	55.0	56.4	57.7	58.8	59.8
120				47.3	49.5	51.4	53.1	54.5	55.9	57.0	58.1
140					47.7	49.7	51.4	52.9	54.2	55.4	56.5
160						48.1	49.8	51.3	52.7	53.9	55.0
180						46.6	48.4	49.9	51.3	52.5	53.7
200							47.0	48.6	50.0	51.2	52.4
220								47.3	48.7	50.0	51.2
240									47.6	48.9	50.1
260										47.8	49.0
280										46.8	48.0
300											47.0

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

Takeoff Obstacle Limit Weight - High Altitudes

Flaps 5

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)						
	44	48	52	56	60	64	68
10 & BELOW	0	0	0	0	0	0	0
12	-0.3	-0.3	-0.4	-0.4	-0.4	-0.5	-0.5
14	-0.6	-0.7	-0.7	-0.8	-0.9	-0.9	-1.0
16	-1.0	-1.0	-1.1	-1.2	-1.3	-1.4	-1.4
18	-1.3	-1.4	-1.5	-1.6	-1.7	-1.8	-1.9
20	-1.6	-1.7	-1.9	-2.0	-2.1	-2.3	-2.4
22	-2.1	-2.3	-2.5	-2.6	-2.8	-3.0	-3.2
24	-2.5	-2.8	-3.0	-3.3	-3.6	-3.8	-4.1
26	-3.0	-3.3	-3.6	-4.0	-4.3	-4.6	-4.9
28	-3.5	-3.9	-4.2	-4.6	-5.0	-5.4	-5.7
30	-3.9	-4.4	-4.8	-5.3	-5.7	-6.1	-6.6
32	-4.6	-5.1	-5.6	-6.1	-6.6	-7.2	-7.7
34	-5.3	-5.9	-6.4	-7.0	-7.6	-8.2	-8.8
36	-5.9	-6.6	-7.2	-7.9	-8.5	-9.2	-9.8
38	-6.6	-7.3	-8.0	-8.8	-9.5	-10.2	-10.9
40	-7.3	-8.1	-8.8	-9.6	-10.4	-11.2	-12.0
42	-7.8	-8.7	-9.5	-10.4	-11.3	-12.2	-13.0
44	-8.3	-9.3	-10.2	-11.2	-12.1	-13.1	-14.1
46	-8.9	-9.9	-10.9	-12.0	-13.0	-14.0	-15.1
48	-9.4	-10.5	-11.6	-12.7	-13.9	-15.0	-16.1
50	-9.9	-11.1	-12.3	-13.5	-14.7	-15.9	-17.1

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	44	48	52	56	60	64	68
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-1.8	-1.9	-2.1	-2.3	-2.4	-2.6	-2.7
12000	-3.6	-3.9	-4.2	-4.6	-4.9	-5.2	-5.5
13000	-5.4	-5.8	-6.3	-6.8	-7.2	-7.7	-8.1
14000	-7.0	-7.6	-8.3	-8.9	-9.5	-10.1	-10.8
14500	-7.8	-8.5	-9.3	-9.9	-10.6	-11.3	-12.1

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMITWEIGHT (1000 KG)						
	44	48	52	56	60	64	68
15 TW	-6.2	-6.0	-5.8	-5.6	-5.4	-5.1	-4.9
10 TW	-4.2	-4.0	-3.9	-3.7	-3.6	-3.4	-3.3
5 TW	-2.1	-2.0	-1.9	-1.9	-1.8	-1.7	-1.6
0	0	0	0	0	0	0	0
10 HW	0.8	0.7	0.7	0.6	0.5	0.5	0.4
20 HW	1.6	1.5	1.3	1.2	1.1	1.0	0.8
30 HW	2.4	2.2	2.0	1.8	1.6	1.5	1.3
40 HW	3.2	3.0	2.7	2.5	2.2	1.9	1.7

With engine bleed for packs off, increase weight by 650 kg.

With engine anti-ice on, decrease weight by 1900 kg.

With engine and wing anti-ice on, decrease weight by 3100 kg (optional system).

Minimum Takeoff Weight (26K Derate)
Weight Limit (1000 KG)

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)								
	S.L. & BELOW	1000	2000	3000	4000	5000	6000	7000	8000 & ABOVE
50	49.6	48.3	47.0	45.7	44.3	42.8	41.3	39.8	
45	51.4	50.0	48.7	47.3	45.9	44.4	42.9	41.4	39.8
40	53.0	51.6	50.2	48.8	47.4	45.9	44.4	42.9	41.4
35	54.5	53.1	51.7	50.3	48.8	47.3	45.7	44.1	42.5
30	55.9	54.4	52.9	51.4	49.9	48.4	46.8	45.2	43.6
25	56.5	54.5	53.2	51.8	50.4	48.9	47.4	45.9	44.3
20	56.7	54.6	53.3	52.0	50.7	49.2	47.8	46.3	44.8
15	56.7	54.6	53.3	52.0	50.7	49.3	47.9	46.6	45.2
10 & BELOW	56.7	54.6	53.3	52.0	50.7	50.7	47.9	46.7	45.4

Takeoff at the 26K Derate thrust rating requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the assumed temperature method of reducing thrust may not be used as a means to comply with this restriction.

Takeoff Field Corrections - Dry Runway 26K Derate
Slope Corrections

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1240	1230	1220	1210	1200	1190	1170	1160	1150
1400	1460	1450	1430	1420	1400	1370	1350	1320	1290
1600	1690	1670	1640	1620	1600	1560	1520	1480	1440
1800	1910	1890	1860	1830	1800	1750	1690	1640	1580
2000	2140	2100	2070	2030	2000	1930	1860	1800	1730
2200	2360	2320	2280	2240	2200	2120	2040	1950	1870
2400	2590	2540	2490	2450	2400	2300	2210	2110	2020
2600	2810	2760	2710	2650	2600	2490	2380	2270	2160
2800	3040	2980	2920	2860	2800	2680	2550	2430	2310
3000	3260	3200	3130	3070	3000	2860	2730	2590	2450
3200	3490	3420	3340	3270	3200	3050	2900	2750	2600
3400	3710	3640	3560	3480	3400	3240	3070	2910	2740
3600	3940	3850	3770	3680	3600	3420	3240	3060	2880
3800	4160	4070	3980	3890	3800	3610	3410	3220	3030
4000	4390	4290	4190	4100	4000	3790	3590	3380	3170
4200	4610	4510	4410	4300	4200	3980	3760	3540	3320
4400	4840	4730	4620	4510	4400	4170	3930	3700	3460
4600	5060	4950	4830	4720	4600	4350	4100	3860	3610
4800	5290	5170	5040	4920	4800	4540	4280	4010	3750
5000	5510	5380	5260	5130	5000	4720	4450	4170	3900

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	860	980	1090	1200	1270	1350	1420	1500
1400	1030	1150	1280	1400	1480	1550	1630	1720
1600	1200	1330	1470	1600	1680	1760	1850	1940
1800	1360	1510	1650	1800	1880	1970	2060	2150
2000	1530	1690	1840	2000	2090	2180	2270	2370
2200	1690	1860	2030	2200	2290	2390	2490	2590
2400	1860	2040	2220	2400	2500	2590	2700	2810
2600	2030	2220	2410	2600	2700	2800	2910	3020
2800	2190	2400	2600	2800	2900	3010	3120	3240
3000	2360	2570	2790	3000	3110	3220	3340	3460
3200	2530	2750	2980	3200	3310	3430	3550	3680
3400	2690	2930	3160	3400	3510	3640	3760	3890
3600	2860	3110	3350	3600	3720	3840	3970	4110
3800	3020	3280	3540	3800	3920	4050	4190	4330
4000	3190	3460	3730	4000	4130	4260	4400	4550
4200	3360	3640	3920	4200	4330	4470	4610	4760
4400	3520	3820	4110	4400	4530	4680	4830	4980
4600	3690	3990	4300	4600	4740	4880	5040	5200
4800	3860	4170	4490	4800	4940	5090	5250	5420
5000	4020	4350	4670	5000	5150	5300	5460	5640

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	65.5	62.0	61.6	61.2	60.8	60.4	60.0	57.3	55.9	54.4	53.0
1600	70.2	66.4	66.0	65.6	65.2	64.8	64.4	61.4	59.9	58.3	56.8
1800	74.6	70.6	70.1	69.7	69.3	68.8	68.4	65.2	63.6	62.0	60.3
2000	78.7	74.5	74.0	73.6	73.1	72.6	72.2	68.9	67.2	65.5	63.8
2200	82.4	78.1	77.6	77.1	76.7	76.2	75.7	72.3	70.5	68.8	67.0
2400	85.9	81.4	80.9	80.4	79.9	79.4	78.9	75.4	73.6	71.7	69.9
2600	86.1	84.4	83.8	83.3	82.8	82.3	81.8	78.2	76.2	74.4	72.4
2800	86.1	86.1	86.1	86.1	85.5	85.0	84.5	80.7	78.8	76.8	74.9
3000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.2	81.2	79.2	77.2
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.6	83.5	81.5	79.4
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.8	83.7	81.5
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.8	83.5
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.4
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	85.9	85.4	85.3	85.1	85.0	84.9	84.7	78.9	76.2	73.6	70.9

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	63.5	58.5	58.1	57.7	57.3	56.9	55.9	53.2	51.9	50.5	49.2
1600	68.1	62.7	62.3	61.9	61.5	61.0	59.9	57.1	55.6	54.2	52.7
1800	72.3	66.6	66.2	65.7	65.3	64.8	63.7	60.6	59.1	57.5	56.0
2000	76.3	70.3	69.9	69.4	68.9	68.5	67.2	64.1	62.4	60.8	59.3
2200	80.0	73.8	73.3	72.8	72.3	71.9	70.6	67.3	65.6	63.9	62.3
2400	83.4	77.0	76.5	76.0	75.5	75.0	73.6	70.2	68.5	66.7	65.0
2600	86.1	79.7	79.2	78.7	78.2	77.7	76.3	72.8	71.0	69.2	67.4
2800	86.1	82.4	81.8	81.3	80.8	80.3	78.8	75.2	73.3	71.5	69.7
3000	86.1	84.9	84.3	83.8	83.2	82.7	81.3	77.5	75.6	73.7	71.9
3200	86.1	86.1	86.1	86.1	85.7	85.1	83.6	79.7	77.8	75.8	73.9
3400	86.1	86.1	86.1	86.1	86.1	86.1	85.9	81.9	79.9	77.9	75.9
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.9	81.8	79.8	77.8
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.8	83.7	81.6	79.5
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.4	83.3	81.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.9	82.8
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.9
CLIMB LIMIT WT (1000 KG)	81.9	81.4	81.3	81.2	81.1	81.0	79.0	73.8	71.3	68.8	66.4

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate

Flaps 5

4000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	59.5	54.5	54.1	53.7	53.4	52.6	51.7	49.3	48.1	46.9	45.8
1600	63.8	58.4	58.0	57.6	57.2	56.4	55.5	52.9	51.6	50.3	49.2
1800	67.8	62.1	61.6	61.2	60.8	59.9	58.9	56.2	54.8	53.4	52.2
2000	71.6	65.6	65.1	64.7	64.2	63.3	62.3	59.4	58.0	56.6	55.3
2200	75.1	68.8	68.4	67.9	67.5	66.5	65.4	62.4	61.0	59.5	58.1
2400	78.3	71.8	71.4	70.9	70.4	69.4	68.3	65.2	63.7	62.2	60.8
2600	81.1	74.5	74.0	73.5	73.0	72.0	70.8	67.6	66.0	64.5	63.0
2800	83.8	76.9	76.4	75.9	75.4	74.4	73.1	69.9	68.2	66.6	65.2
3000	86.1	79.3	78.8	78.2	77.7	76.7	75.4	72.0	70.4	68.7	67.2
3200	86.1	81.6	81.0	80.5	80.0	78.9	77.6	74.1	72.4	70.7	69.1
3400	86.1	83.8	83.2	82.7	82.1	81.0	79.7	76.1	74.3	72.5	70.9
3600	86.1	85.9	85.3	84.7	84.2	83.0	81.6	78.0	76.1	74.3	72.7
3800	86.1	86.1	86.1	86.1	86.0	84.8	83.4	79.7	77.8	75.9	74.2
4000	86.1	86.1	86.1	86.1	86.1	86.1	85.2	81.3	79.4	77.5	75.8
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.0	81.0	79.1	77.3
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.5	82.5	80.6	78.7
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.0	82.0	80.2
CLIMB LIMIT WT (1000 KG)	77.1	76.5	76.5	76.4	76.3	75.2	73.6	68.9	66.6	64.2	62.2

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	55.4	50.6	50.3	49.9	49.2	48.6	47.8	45.7	44.5	43.5	42.5
1600	59.4	54.2	53.9	53.5	52.8	52.1	51.2	49.0	47.8	46.6	45.5
1800	63.1	57.6	57.2	56.8	56.1	55.3	54.4	52.0	50.7	49.5	48.3
2000	66.7	60.9	60.5	60.1	59.3	58.5	57.6	55.1	53.7	52.5	51.2
2200	70.0	64.0	63.6	63.2	62.3	61.5	60.6	57.9	56.5	55.2	54.0
2400	73.0	66.9	66.4	66.0	65.1	64.3	63.3	60.5	59.1	57.8	56.4
2600	75.7	69.3	68.8	68.4	67.5	66.6	65.6	62.8	61.3	59.9	58.5
2800	78.2	71.6	71.1	70.7	69.8	68.9	67.8	64.9	63.4	62.0	60.5
3000	80.6	73.8	73.3	72.9	71.9	71.0	69.9	66.9	65.4	63.9	62.4
3200	82.9	76.0	75.5	75.0	74.0	73.1	71.9	68.8	67.2	65.7	64.2
3400	85.2	78.0	77.5	77.0	76.0	75.0	73.8	70.7	69.0	67.4	65.9
3600	86.1	79.9	79.4	78.9	77.8	76.8	75.6	72.4	70.7	69.1	67.5
3800	86.1	81.7	81.1	80.6	79.6	78.5	77.3	74.0	72.2	70.6	68.9
4000	86.1	83.4	82.8	82.3	81.2	80.2	78.9	75.5	73.7	72.0	70.3
4200	86.1	85.1	84.5	83.9	82.8	81.8	80.5	77.0	75.1	73.4	71.7
4400	86.1	86.1	86.1	85.5	84.4	83.3	82.0	78.4	76.5	74.8	73.0
4600	86.1	86.1	86.1	86.1	86.0	84.9	83.5	79.9	77.9	76.2	74.4
CLIMB LIMIT WT (1000 KG)	72.3	71.9	71.8	71.8	70.8	69.8	68.3	63.9	61.6	59.6	57.7

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	51.4	47.1	46.8	46.2	45.6	44.9	44.0	41.9	40.8	39.8	38.9
1600	55.1	50.5	50.1	49.5	48.9	48.1	47.2	44.9	43.8	42.7	41.7
1800	58.6	53.6	53.2	52.6	51.9	51.1	50.1	47.7	46.5	45.4	44.2
2000	61.9	56.7	56.4	55.7	55.0	54.1	53.1	50.5	49.3	48.1	46.9
2200	65.0	59.7	59.3	58.6	57.8	57.0	55.9	53.2	51.9	50.7	49.5
2400	67.9	62.3	61.9	61.2	60.4	59.6	58.4	55.7	54.3	53.1	51.8
2600	70.4	64.6	64.2	63.5	62.7	61.8	60.6	57.7	56.4	55.1	53.8
2800	72.7	66.8	66.4	65.6	64.8	63.9	62.6	59.7	58.3	57.0	55.6
3000	75.0	68.9	68.4	67.7	66.8	65.9	64.6	61.6	60.2	58.8	57.4
3200	77.1	70.9	70.4	69.6	68.7	67.7	66.4	63.3	61.9	60.4	59.0
3400	79.2	72.7	72.3	71.4	70.6	69.5	68.2	65.0	63.5	62.0	60.5
3600	81.2	74.5	74.0	73.2	72.3	71.2	69.8	66.6	65.0	63.5	62.0
3800	83.0	76.1	75.7	74.8	73.8	72.8	71.3	68.0	66.4	64.8	63.3
4000	84.7	77.7	77.2	76.3	75.4	74.2	72.8	69.4	67.7	66.1	64.5
4200	86.1	79.3	78.8	77.8	76.9	75.7	74.2	70.7	69.0	67.4	65.8
4400	86.1	80.8	80.2	79.3	78.3	77.1	75.6	72.0	70.3	68.7	67.0
4600	86.1	82.2	81.7	80.7	79.7	78.5	77.0	73.3	71.6	69.9	68.2
CLIMB LIMIT WT (1000 KG)	67.8	67.4	67.3	66.5	65.7	64.4	62.5	58.1	56.2	54.4	52.7

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	47.8	43.8	43.2	42.7	42.1	41.5	40.6	38.4	37.4	36.3	35.3
1600	51.2	47.0	46.4	45.8	45.2	44.5	43.5	41.2	40.1	39.0	37.8
1800	54.4	49.9	49.2	48.6	48.0	47.2	46.2	43.8	42.5	41.4	40.2
2000	57.6	52.8	52.2	51.5	50.8	50.1	49.0	46.5	45.2	43.9	42.7
2200	60.5	55.6	54.9	54.2	53.5	52.8	51.6	49.0	47.7	46.4	45.1
2400	63.2	58.1	57.4	56.7	56.0	55.2	54.0	51.3	49.9	48.6	47.2
2600	65.6	60.3	59.6	58.8	58.1	57.3	56.1	53.2	51.8	50.4	49.0
2800	67.8	62.4	61.6	60.8	60.1	59.2	58.0	55.1	53.6	52.2	50.8
3000	69.9	64.3	63.5	62.8	62.0	61.1	59.8	56.8	55.3	53.9	52.4
3200	71.9	66.1	65.3	64.5	63.7	62.8	61.5	58.4	56.9	55.4	53.8
3400	73.8	67.9	67.0	66.2	65.4	64.4	63.1	59.9	58.3	56.8	55.2
3600	75.6	69.5	68.7	67.8	67.0	66.0	64.6	61.3	59.7	58.1	56.5
3800	77.3	71.0	70.1	69.3	68.4	67.4	66.0	62.6	61.0	59.3	57.7
4000	78.9	72.5	71.6	70.7	69.8	68.8	67.3	63.9	62.2	60.5	58.8
4200	80.4	73.9	73.0	72.1	71.2	70.1	68.6	65.1	63.4	61.6	59.9
4400	82.0	75.3	74.4	73.4	72.5	71.4	69.9	66.3	64.5	62.8	61.0
4600	83.5	76.7	75.7	74.8	73.8	72.7	71.2	67.5	65.7	63.9	62.1
CLIMB LIMIT WT (1000 KG)	63.7	63.1	62.3	61.5	60.6	59.4	57.6	53.4	51.5	49.6	47.6

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1300	43.9	41.0	40.5	40.0	39.5	39.0	38.5	37.9	37.1	35.3	33.6
1400	45.6	42.4	41.8	41.3	40.8	40.2	39.7	39.0	38.1	36.2	34.3
1600	48.8	45.4	44.8	44.2	43.6	43.1	42.5	41.7	40.8	38.7	36.7
1800	51.7	48.2	47.6	47.0	46.4	45.8	45.2	44.4	43.4	41.3	39.2
2000	54.4	50.8	50.1	49.5	48.9	48.3	47.6	46.8	45.8	43.6	41.4
2200	56.9	53.1	52.4	51.8	51.1	50.5	49.8	49.0	47.9	45.6	43.3
2400	59.3	55.2	54.6	53.9	53.2	52.5	51.8	51.0	49.8	47.4	45.0
2600	61.6	57.4	56.7	55.9	55.2	54.5	53.8	52.9	51.7	49.2	46.7
2800	63.8	59.4	58.7	58.0	57.2	56.5	55.7	54.8	53.6	50.9	48.3
3000	65.8	61.3	60.5	59.8	59.0	58.2	57.4	56.5	55.2	52.5	49.8
3200	67.6	62.9	62.2	61.4	60.6	59.8	59.0	58.0	56.7	53.9	51.1
3400	69.3	64.5	63.7	62.8	62.0	61.2	60.4	59.4	58.0	55.1	52.2
3600	70.9	66.0	65.1	64.3	63.4	62.6	61.7	60.7	59.3	56.3	53.3
3800	72.4	67.3	66.4	65.5	64.7	63.8	62.9	61.9	60.4	57.3	54.3
4000	73.9	68.6	67.7	66.8	65.9	65.0	64.1	63.0	61.5	58.4	55.2
4200	75.3	69.9	69.0	68.1	67.2	66.3	65.3	64.2	62.7	59.4	56.2
4400	76.8	71.3	70.3	69.4	68.4	67.5	66.6	65.4	63.8	60.6	57.3
4600	78.2	72.6	71.7	70.7	69.8	68.8	67.8	66.7	65.1	61.7	58.4
CLIMB LIMIT WT (1000 KG)	60.6	59.9	59.2	58.3	57.5	56.8	55.9	54.6	52.9	49.3	45.7

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1300	40.9	37.9	37.5	37.0	36.5	36.1	35.6	35.0	34.4	33.1	31.7
1400	42.2	39.0	38.5	38.0	37.5	37.0	36.5	35.9	35.2	33.7	32.3
1600	45.2	41.8	41.2	40.7	40.1	39.6	39.1	38.4	37.7	36.1	34.5
1800	48.0	44.5	43.9	43.3	42.8	42.2	41.7	41.0	40.2	38.6	36.9
2000	50.6	46.9	46.3	45.7	45.1	44.5	43.9	43.2	42.4	40.7	39.0
2200	52.9	49.0	48.4	47.8	47.2	46.6	45.9	45.2	44.4	42.6	40.8
2400	55.1	51.0	50.3	49.7	49.0	48.4	47.8	47.0	46.1	44.2	42.3
2600	57.2	52.9	52.2	51.6	50.9	50.2	49.6	48.7	47.9	45.9	43.9
2800	59.3	54.8	54.1	53.4	52.7	52.1	51.4	50.5	49.6	47.5	45.5
3000	61.1	56.5	55.8	55.1	54.4	53.7	52.9	52.0	51.1	49.0	46.9
3200	62.7	58.0	57.3	56.5	55.8	55.0	54.3	53.4	52.4	50.2	48.0
3400	64.3	59.4	58.6	57.9	57.1	56.3	55.6	54.6	53.6	51.4	49.1
3600	65.7	60.7	59.9	59.1	58.3	57.6	56.8	55.8	54.7	52.4	50.1
3800	67.1	61.9	61.1	60.2	59.4	58.6	57.8	56.8	55.7	53.3	51.0
4000	68.4	63.1	62.2	61.4	60.5	59.7	58.9	57.8	56.7	54.3	51.8
4200	69.7	64.2	63.4	62.5	61.7	60.8	60.0	58.9	57.7	55.2	52.7
4400	71.0	65.5	64.6	63.7	62.8	62.0	61.1	60.0	58.8	56.3	53.7
4600	72.4	66.7	65.8	64.9	64.0	63.1	62.3	61.2	60.0	57.4	54.7
CLIMB LIMIT WT (1000 KG)	56.5	55.2	54.4	53.6	52.9	52.2	51.4	50.2	48.9	46.0	43.2

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1500 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2050 kg and climb limit weight by 2900 kg.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****14500 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1300	40.1	37.2	36.7	36.3	35.8	35.4	34.9	34.4	33.8	32.5	31.2
1400	41.4	38.2	37.7	37.2	36.7	36.3	35.8	35.2	34.5	33.2	31.8
1600	44.3	40.9	40.4	39.8	39.3	38.8	38.3	37.6	36.9	35.5	34.0
1800	47.1	43.6	43.0	42.5	41.9	41.4	40.8	40.2	39.5	37.9	36.4
2000	49.7	45.9	45.3	44.8	44.2	43.6	43.1	42.4	41.6	40.0	38.4
2200	51.9	48.0	47.4	46.8	46.2	45.6	45.0	44.3	43.5	41.8	40.2
2400	54.0	50.0	49.3	48.7	48.0	47.4	46.8	46.0	45.2	43.5	41.7
2600	56.1	51.9	51.2	50.5	49.9	49.2	48.6	47.8	46.9	45.1	43.3
2800	58.1	53.7	53.0	52.3	51.7	51.0	50.3	49.5	48.6	46.7	44.8
3000	60.0	55.4	54.7	53.9	53.2	52.6	51.9	51.0	50.1	48.1	46.2
3200	61.6	56.8	56.1	55.3	54.6	53.9	53.2	52.3	51.4	49.3	47.3
3400	63.1	58.2	57.4	56.6	55.9	55.2	54.4	53.5	52.5	50.5	48.3
3600	64.5	59.5	58.7	57.9	57.1	56.4	55.6	54.6	53.7	51.5	49.3
3800	65.8	60.6	59.8	59.0	58.2	57.4	56.6	55.6	54.6	52.4	50.1
4000	67.0	61.7	60.9	60.0	59.2	58.4	57.6	56.6	55.6	53.3	51.0
4200	68.3	62.9	62.0	61.2	60.3	59.5	58.7	57.6	56.6	54.2	51.9
4400	69.6	64.1	63.2	62.3	61.5	60.6	59.8	58.7	57.6	55.2	52.8
4600	71.0	65.3	64.4	63.5	62.6	61.8	60.9	59.9	58.7	56.3	53.8
CLIMB LIMIT WT (1000 KG)	55.5	54.0	53.3	52.5	51.8	51.1	50.3	49.2	47.9	45.2	42.6

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1500 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2050 kg and climb limit weight by 2900 kg.

Takeoff Field Corrections - Wet Runway (26K Derate)
Slope Corrections

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1230	1220	1210	1210	1200	1190	1170	1160	1140
1400	1450	1440	1430	1410	1400	1380	1350	1330	1310
1600	1680	1660	1640	1620	1600	1570	1540	1510	1480
1800	1910	1880	1850	1830	1800	1760	1720	1680	1640
2000	2140	2100	2070	2030	2000	1950	1900	1860	1810
2200	2360	2320	2280	2240	2200	2140	2090	2030	1980
2400	2590	2540	2500	2450	2400	2340	2270	2210	2140
2600	2820	2760	2710	2650	2600	2530	2460	2380	2310
2800	3050	2980	2920	2860	2800	2720	2640	2560	2480
3000	3270	3200	3140	3070	3000	2910	2820	2730	2640
3200	3500	3430	3350	3280	3200	3100	3010	2910	2810
3400	3730	3650	3560	3480	3400	3290	3190	3080	2980
3600	3950	3870	3780	3690	3600	3490	3370	3260	3140
3800	4180	4090	3990	3900	3800	3680	3560	3430	3310
4000	4410	4310	4200	4100	4000	3870	3740	3610	3480
4200	4640	4530	4420	4310	4200	4060	3920	3780	3650
4400	4860	4750	4630	4520	4400	4250	4110	3960	3810
4600	5090	4970	4850	4720	4600	4440	4290	4130	3980
4800	5320	5190	5060	4930	4800	4640	4470	4310	4150
5000	5550	5410	5270	5140	5000	4830	4660	4480	4310

Wind Corrections

FIELD LENGTH AVAILABLE (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	RUNWAY SLOPE (%)							
	-15	-10	-5	0	10	20	30	40
1200	840	960	1080	1200	1270	1350	1430	1530
1400	1010	1140	1270	1400	1470	1560	1650	1750
1600	1180	1320	1460	1600	1680	1770	1870	1970
1800	1350	1500	1650	1800	1890	1980	2080	2190
2000	1520	1680	1840	2000	2090	2190	2300	2410
2200	1690	1860	2030	2200	2300	2400	2510	2630
2400	1860	2040	2220	2400	2500	2610	2730	2860
2600	2030	2220	2410	2600	2710	2820	2940	3080
2800	2200	2400	2600	2800	2910	3030	3160	3300
3000	2370	2580	2790	3000	3120	3240	3380	3520
3200	2540	2760	2980	3200	3320	3450	3590	3740
3400	2710	2940	3170	3400	3530	3660	3810	3960
3600	2880	3120	3360	3600	3730	3870	4020	4180
3800	3050	3300	3550	3800	3940	4080	4240	4400
4000	3230	3480	3740	4000	4140	4290	4450	4620
4200	3400	3660	3930	4200	4350	4510	4670	4840
4400	3570	3840	4120	4400	4550	4720	4890	5060
4600	3740	4020	4310	4600	4760	4930	5100	5280
4800	3910	4200	4500	4800	4960	5140	5320	5500
5000	4080	4380	4690	5000	5170	5350	5530	5720

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	74.8	69.7	69.2	68.8	68.3	67.8	67.4	64.0	62.3	60.7	59.1
2000	78.6	73.3	72.8	72.3	71.8	71.3	70.8	67.3	65.6	63.9	62.2
2200	82.3	76.8	76.3	75.7	75.2	74.7	74.2	70.5	68.7	67.0	65.2
2400	85.8	80.1	79.6	79.0	78.5	78.0	77.4	73.6	71.7	69.9	68.1
2600	86.1	83.1	82.5	82.0	81.4	80.9	80.3	76.3	74.4	72.5	70.6
2800	86.1	85.9	85.3	84.7	84.2	83.6	83.0	78.9	76.9	75.0	73.0
3000	86.1	86.1	86.1	86.1	86.1	86.1	85.7	81.4	79.4	77.4	75.3
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.9	81.8	79.8	77.6
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.2	82.1	79.9
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3	82.1
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.1
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	85.9	85.4	85.3	85.1	85.0	84.9	84.7	78.9	76.2	73.6	70.9

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	71.6	65.4	64.9	64.4	64.0	63.5	62.3	59.3	57.8	56.3	54.9
2000	75.2	68.8	68.3	67.8	67.3	66.8	65.6	62.4	60.8	59.3	57.8
2200	78.8	72.1	71.5	71.0	70.5	70.0	68.7	65.4	63.8	62.2	60.7
2400	82.2	75.2	74.7	74.1	73.6	73.1	71.7	68.3	66.6	64.9	63.3
2600	85.3	78.0	77.4	76.9	76.3	75.8	74.4	70.8	69.1	67.3	65.7
2800	86.1	80.6	80.1	79.5	78.9	78.3	76.9	73.2	71.4	69.6	67.9
3000	86.1	83.2	82.6	82.0	81.4	80.8	79.3	75.6	73.7	71.8	70.1
3200	86.1	85.8	85.1	84.5	83.9	83.3	81.8	77.9	75.9	74.0	72.2
3400	86.1	86.1	86.1	86.1	86.1	85.8	84.2	80.2	78.1	76.2	74.3
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.3	80.3	78.2	76.3
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	82.2	80.1	78.2
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.2	82.0	80.0
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.0	83.8	81.7
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.6	83.4
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.1
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	81.9	81.4	81.3	81.2	81.1	81.0	79.0	73.8	71.3	68.8	66.4

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	66.8	60.7	60.3	59.8	59.4	58.6	57.6	55.0	53.6	52.3	51.2
2000	70.3	63.9	63.4	63.0	62.5	61.7	60.6	57.9	56.5	55.2	53.9
2200	73.6	67.0	66.5	66.0	65.6	64.6	63.6	60.7	59.3	57.9	56.6
2400	76.8	69.9	69.4	68.9	68.4	67.5	66.3	63.4	61.9	60.4	59.1
2600	79.7	72.5	72.0	71.5	71.0	70.0	68.8	65.8	64.2	62.7	61.3
2800	82.3	75.0	74.4	73.9	73.4	72.4	71.2	68.0	66.4	64.8	63.4
3000	84.9	77.3	76.8	76.2	75.7	74.7	73.4	70.1	68.5	66.9	65.4
3200	86.1	79.7	79.2	78.6	78.1	77.0	75.7	72.3	70.6	68.9	67.4
3400	86.1	82.0	81.5	80.9	80.3	79.2	77.9	74.4	72.6	70.9	69.3
3600	86.1	84.3	83.7	83.1	82.5	81.3	80.0	76.4	74.6	72.8	71.1
3800	86.1	86.1	85.8	85.2	84.6	83.4	81.9	78.2	76.4	74.5	72.8
4000	86.1	86.1	86.1	86.1	86.1	85.3	83.9	80.0	78.1	76.2	74.5
4200	86.1	86.1	86.1	86.1	86.1	86.1	85.7	81.8	79.8	77.8	76.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.5	81.5	79.5	77.6
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.2	83.1	81.1	79.2
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.7	82.6	80.7
5000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.2	82.2
CLIMB LIMIT WT (1000 KG)	77.1	76.5	76.5	76.4	76.3	75.2	73.6	68.9	66.6	64.2	62.2

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	61.8	56.3	55.9	55.5	54.8	54.1	53.2	50.8	49.6	48.5	47.4
2000	65.1	59.3	58.9	58.5	57.8	57.0	56.1	53.6	52.3	51.2	50.0
2200	68.2	62.2	61.8	61.4	60.6	59.8	58.8	56.3	54.9	53.7	52.5
2400	71.2	64.9	64.5	64.1	63.3	62.4	61.4	58.8	57.4	56.1	54.9
2600	73.8	67.3	66.9	66.5	65.6	64.8	63.7	60.9	59.5	58.2	56.9
2800	76.3	69.6	69.2	68.7	67.9	67.0	65.9	63.0	61.5	60.2	58.9
3000	78.7	71.8	71.3	70.9	70.0	69.1	68.0	65.0	63.5	62.1	60.7
3200	81.2	74.0	73.5	73.1	72.2	71.2	70.1	67.0	65.4	64.0	62.5
3400	83.6	76.2	75.7	75.2	74.2	73.3	72.1	68.9	67.2	65.8	64.3
3600	85.8	78.2	77.7	77.2	76.2	75.2	74.0	70.7	69.0	67.5	66.0
3800	86.1	80.1	79.6	79.1	78.1	77.0	75.8	72.4	70.6	69.0	67.5
4000	86.1	82.0	81.4	80.9	79.9	78.8	77.5	74.0	72.2	70.6	69.0
4200	86.1	83.8	83.2	82.7	81.6	80.5	79.2	75.6	73.7	72.1	70.4
4400	86.1	85.6	85.0	84.4	83.3	82.2	80.8	77.2	75.3	73.6	71.9
4600	86.1	86.1	86.1	86.1	85.0	83.9	82.5	78.7	76.8	75.0	73.3
4800	86.1	86.1	86.1	86.1	86.1	85.5	84.1	80.3	78.3	76.5	74.7
5000	86.1	86.1	86.1	86.1	86.1	86.1	85.6	81.8	79.7	77.9	76.2
CLIMB LIMIT WT (1000 KG)	72.3	71.9	71.8	71.8	70.8	69.8	68.3	63.9	61.6	59.6	57.7

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	57.3	52.4	52.0	51.4	50.7	50.0	48.9	46.6	45.5	44.5	43.5
2000	60.4	55.2	54.9	54.2	53.5	52.7	51.6	49.2	48.1	47.0	45.9
2200	63.3	57.9	57.6	56.9	56.1	55.3	54.2	51.6	50.5	49.4	48.2
2400	66.1	60.5	60.1	59.4	58.6	57.7	56.6	53.9	52.7	51.6	50.4
2600	68.5	62.8	62.3	61.6	60.8	59.9	58.7	56.0	54.7	53.5	52.3
2800	70.9	64.9	64.5	63.7	62.9	61.9	60.7	57.9	56.6	55.3	54.1
3000	73.1	66.9	66.5	65.7	64.9	63.9	62.6	59.7	58.4	57.1	55.8
3200	75.4	69.0	68.5	67.7	66.9	65.8	64.5	61.5	60.1	58.8	57.5
3400	77.5	71.0	70.5	69.6	68.8	67.7	66.4	63.2	61.8	60.4	59.1
3600	79.6	72.8	72.4	71.5	70.6	69.5	68.1	64.9	63.4	62.0	60.6
3800	81.6	74.6	74.1	73.2	72.2	71.1	69.7	66.3	64.8	63.4	61.9
4000	83.5	76.3	75.8	74.8	73.9	72.7	71.2	67.8	66.2	64.7	63.2
4200	85.4	77.9	77.4	76.4	75.5	74.3	72.7	69.2	67.6	66.1	64.5
4400	86.1	79.6	79.0	78.0	77.0	75.8	74.3	70.6	69.0	67.4	65.8
4600	86.1	81.2	80.6	79.6	78.6	77.3	75.7	72.0	70.4	68.8	67.1
4800	86.1	82.7	82.2	81.1	80.1	78.8	77.2	73.4	71.7	70.1	68.4
5000	86.1	84.3	83.7	82.7	81.6	80.3	78.7	74.8	73.1	71.4	69.8
CLIMB LIMIT WT (1000 KG)	67.8	67.4	67.3	66.5	65.7	64.4	62.5	58.1	56.2	54.4	52.7

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1800	53.4	48.7	48.1	47.5	46.8	46.1	45.1	42.9	41.8	40.7	39.6
2000	56.2	51.4	50.7	50.1	49.4	48.7	47.6	45.3	44.1	43.0	41.9
2200	59.0	53.9	53.2	52.6	51.9	51.1	50.0	47.6	46.4	45.2	44.0
2400	61.6	56.3	55.6	54.9	54.2	53.4	52.3	49.7	48.5	47.3	46.0
2600	63.9	58.4	57.7	57.0	56.2	55.4	54.2	51.6	50.3	49.0	47.7
2800	66.1	60.4	59.7	58.9	58.2	57.3	56.1	53.4	52.0	50.7	49.4
3000	68.1	62.3	61.5	60.8	60.0	59.1	57.8	55.0	53.7	52.3	50.9
3200	70.2	64.2	63.4	62.6	61.8	60.9	59.6	56.7	55.3	53.9	52.4
3400	72.2	66.0	65.2	64.4	63.5	62.6	61.2	58.3	56.8	55.3	53.9
3600	74.2	67.8	66.9	66.1	65.2	64.2	62.8	59.7	58.2	56.7	55.2
3800	75.9	69.3	68.4	67.6	66.7	65.7	64.2	61.0	59.5	57.9	56.4
4000	77.7	70.9	69.9	69.0	68.1	67.1	65.6	62.3	60.7	59.1	57.5
4200	79.4	72.4	71.4	70.5	69.6	68.5	67.0	63.6	61.9	60.3	58.7
4400	81.0	73.9	72.9	72.0	71.0	69.9	68.3	64.9	63.2	61.5	59.8
4600	82.7	75.4	74.4	73.4	72.4	71.3	69.7	66.2	64.4	62.7	61.0
4800	84.3	76.8	75.8	74.8	73.8	72.7	71.1	67.5	65.7	64.0	62.2
5000	85.8	78.3	77.2	76.2	75.2	74.1	72.4	68.8	67.0	65.2	63.4
CLIMB LIMIT WT (1000 KG)	63.7	63.1	62.3	61.5	60.6	59.4	57.6	53.4	51.5	49.6	47.6

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1700	49.3	45.6	45.1	44.5	43.9	43.4	42.8	42.1	41.1	39.2	37.3
1800	50.6	46.9	46.3	45.8	45.2	44.6	44.0	43.3	42.3	40.3	38.4
2000	53.2	49.3	48.7	48.1	47.5	46.9	46.3	45.5	44.5	42.4	40.3
2200	55.6	51.5	50.9	50.2	49.6	49.0	48.3	47.5	46.5	44.3	42.1
2400	57.8	53.5	52.9	52.2	51.5	50.9	50.2	49.4	48.3	46.0	43.8
2600	59.9	55.5	54.8	54.1	53.5	52.8	52.1	51.2	50.1	47.7	45.4
2800	62.1	57.5	56.8	56.1	55.4	54.7	53.9	53.0	51.9	49.4	47.0
3000	63.9	59.2	58.5	57.8	57.0	56.3	55.5	54.6	53.4	50.9	48.4
3200	65.8	60.9	60.2	59.4	58.6	57.9	57.1	56.2	54.9	52.3	49.7
3400	67.6	62.6	61.8	61.0	60.2	59.4	58.6	57.7	56.4	53.7	51.0
3600	69.3	64.2	63.4	62.5	61.7	60.9	60.1	59.1	57.8	55.0	52.3
3800	71.0	65.7	64.9	64.0	63.2	62.4	61.5	60.5	59.2	56.3	53.5
4000	72.7	67.2	66.4	65.5	64.6	63.8	62.9	61.9	60.5	57.5	54.6
4200	74.3	68.7	67.8	66.9	66.0	65.2	64.2	63.2	61.7	58.7	55.8
4400	75.8	70.1	69.2	68.3	67.4	66.5	65.5	64.4	63.0	59.9	56.8
4600	77.3	71.4	70.5	69.6	68.6	67.7	66.8	65.6	64.1	61.0	57.8
4800	78.7	72.7	71.8	70.8	69.9	68.9	68.0	66.8	65.3	62.0	58.8
5000	80.1	74.0	73.0	72.0	71.1	70.1	69.1	67.9	66.4	63.0	59.8
CLIMB LIMIT WT (1000 KG)	60.6	59.9	59.2	58.3	57.5	56.8	55.9	54.6	52.9	49.3	45.7

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1700	45.7	42.1	41.5	41.0	40.5	40.0	39.4	38.8	38.1	36.5	35.0
1800	47.0	43.3	42.7	42.2	41.6	41.1	40.6	39.9	39.2	37.6	36.0
2000	49.4	45.5	44.9	44.4	43.8	43.2	42.6	41.9	41.2	39.5	37.9
2200	51.6	47.5	46.9	46.3	45.7	45.1	44.5	43.8	43.0	41.3	39.6
2400	53.6	49.4	48.8	48.1	47.5	46.9	46.3	45.5	44.7	42.9	41.1
2600	55.6	51.2	50.6	49.9	49.3	48.7	48.0	47.2	46.4	44.5	42.7
2800	57.6	53.1	52.4	51.7	51.0	50.4	49.7	48.9	48.0	46.1	44.2
3000	59.3	54.6	53.9	53.2	52.6	51.9	51.2	50.3	49.4	47.4	45.5
3200	61.0	56.2	55.5	54.7	54.0	53.3	52.6	51.7	50.8	48.8	46.7
3400	62.7	57.7	56.9	56.2	55.5	54.7	54.0	53.1	52.1	50.0	47.9
3600	64.3	59.1	58.3	57.6	56.8	56.1	55.3	54.4	53.4	51.2	49.1
3800	65.8	60.5	59.7	58.9	58.2	57.4	56.6	55.7	54.7	52.4	50.2
4000	67.3	61.9	61.1	60.3	59.5	58.7	57.9	56.9	55.8	53.5	51.2
4200	68.8	63.2	62.3	61.5	60.7	59.9	59.1	58.1	57.0	54.6	52.3
4400	70.2	64.4	63.6	62.7	61.9	61.1	60.2	59.2	58.1	55.6	53.2
4600	71.5	65.7	64.8	63.9	63.0	62.2	61.3	60.3	59.1	56.6	54.2
4800	72.8	66.8	65.9	65.0	64.1	63.3	62.4	61.3	60.1	57.6	55.1
5000	74.1	67.9	67.0	66.1	65.2	64.3	63.4	62.3	61.1	58.5	55.9
CLIMB LIMIT WT (1000 KG)	56.5	55.2	54.4	53.6	52.9	52.2	51.4	50.2	48.9	46.0	43.2

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1250 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 kg and climb limit weight by 2900 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****14500 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1700	44.8	41.2	40.7	40.2	39.6	39.1	38.6	38.0	37.3	35.9	34.5
1800	46.1	42.4	41.9	41.3	40.8	40.3	39.7	39.1	38.4	36.9	35.5
2000	48.5	44.6	44.0	43.4	42.9	42.3	41.8	41.1	40.4	38.8	37.3
2200	50.6	46.6	46.0	45.4	44.8	44.2	43.6	42.9	42.2	40.6	39.0
2400	52.6	48.4	47.8	47.1	46.5	46.0	45.3	44.6	43.8	42.2	40.5
2600	54.6	50.2	49.5	48.9	48.3	47.7	47.0	46.3	45.5	43.7	42.0
2800	56.5	52.0	51.3	50.6	50.0	49.4	48.7	47.9	47.1	45.3	43.5
3000	58.2	53.5	52.8	52.1	51.5	50.8	50.1	49.3	48.5	46.6	44.8
3200	59.9	55.0	54.3	53.6	52.9	52.2	51.5	50.7	49.8	47.9	46.0
3400	61.5	56.5	55.7	55.0	54.3	53.6	52.9	52.0	51.1	49.1	47.2
3600	63.0	57.9	57.1	56.4	55.7	54.9	54.2	53.3	52.4	50.3	48.3
3800	64.5	59.3	58.5	57.7	57.0	56.2	55.5	54.5	53.6	51.5	49.4
4000	66.0	60.6	59.8	59.0	58.2	57.5	56.7	55.7	54.7	52.6	50.4
4200	67.4	61.9	61.0	60.2	59.4	58.6	57.8	56.9	55.8	53.6	51.4
4400	68.8	63.1	62.2	61.4	60.6	59.8	59.0	58.0	56.9	54.6	52.4
4600	70.1	64.3	63.4	62.5	61.7	60.9	60.0	59.0	57.9	55.6	53.3
4800	71.4	65.4	64.5	63.6	62.8	61.9	61.1	60.0	58.9	56.5	54.2
5000	72.6	66.5	65.6	64.7	63.8	62.9	62.0	61.0	59.9	57.4	55.0
CLIMB LIMIT WT (1000 KG)	55.5	54.0	53.3	52.5	51.8	51.1	50.3	49.2	47.9	45.2	42.6

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1250 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 kg and climb limit weight by 2900 kg.

Takeoff Obstacle Limit Weight (26K Derate)**Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 KG)**

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	77.1	82.7									
20	70.5	76.2	80.4	83.7							
40	65.0	70.3	74.6	78.1	80.8	83.1	84.9				
60	60.9	65.9	70.2	73.7	76.6	79.0	81.0	82.7	84.1		
80	57.5	62.4	66.6	70.1	73.0	75.5	77.7	79.5	81.0	82.4	83.6
100	54.5	59.4	63.5	67.0	70.0	72.5	74.7	76.7	78.3	79.8	81.0
120	51.9	56.8	60.8	64.3	67.3	69.9	72.1	74.1	75.9	77.4	78.7
140	49.7	54.4	58.5	61.9	64.9	67.5	69.8	71.8	73.6	75.2	76.6
160	47.6	52.3	56.3	59.7	62.7	65.3	67.6	69.7	71.5	73.2	74.7
180	45.6	50.4	54.3	57.7	60.7	63.3	65.7	67.8	69.6	71.3	72.8
200	43.9	48.6	52.5	55.9	58.9	61.5	63.8	65.9	67.8	69.6	71.1
220	42.3	46.9	50.8	54.2	57.2	59.8	62.2	64.3	66.2	67.9	69.5
240		45.4	49.3	52.7	55.6	58.3	60.6	62.7	64.6	66.4	68.0
260		44.0	47.9	51.2	54.1	56.8	59.1	61.2	63.2	64.9	66.5
280		42.6	46.5	49.8	52.7	55.4	57.7	59.8	61.8	63.5	65.1
300		41.4	45.2	48.5	51.4	54.0	56.4	58.5	60.5	62.2	63.8

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
30 & BELOW	0	0	0	0	0	0	0
32	-0.6	-0.7	-0.9	-1.0	-1.1	-1.3	-1.4
34	-1.2	-1.5	-1.7	-2.0	-2.3	-2.6	-2.8
36	-1.8	-2.2	-2.6	-3.0	-3.4	-3.8	-4.2
38	-2.4	-3.0	-3.5	-4.0	-4.6	-5.1	-5.6
40	-3.0	-3.7	-4.4	-5.0	-5.7	-6.4	-7.1
42	-3.6	-4.4	-5.2	-6.0	-6.8	-7.6	-8.4
44	-4.1	-5.1	-6.0	-6.9	-7.9	-8.8	-9.7
46	-4.7	-5.8	-6.8	-7.9	-9.0	-10.0	-11.1
48	-5.3	-6.5	-7.7	-8.9	-10.0	-11.2	-12.4
50	-5.8	-7.2	-8.5	-9.8	-11.1	-12.5	-13.8

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
S.L. & BELOW	0	0	0	0	0	0	0
1000	-1.5	-1.7	-2.0	-2.2	-2.5	-2.8	-3.0
2000	-2.9	-3.5	-4.0	-4.5	-5.0	-5.5	-6.0
3000	-4.3	-5.1	-5.8	-6.6	-7.4	-8.2	-8.9
4000	-5.6	-6.7	-7.7	-8.7	-9.8	-10.8	-11.9
5000	-6.9	-8.2	-9.4	-10.7	-12.0	-13.3	-14.6
6000	-8.1	-9.6	-11.2	-12.7	-14.3	-15.8	-17.4
7000	-9.3	-11.2	-13.0	-14.8	-16.6	-18.5	-20.3
8000	-10.6	-12.7	-14.8	-16.9	-19.0	-21.1	-23.2
9000	-11.7	-14.1	-16.4	-18.7	-21.0	-23.4	-25.7
10000	-12.9	-15.5	-18.0	-20.6	-23.1	-25.7	-28.2

Takeoff Obstacle Limit Weight (26K Derate)**Flaps 5****Wind Adjustments**

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	84
15 TW	-8.4	-8.2	-7.9	-7.7	-7.4	-7.2	-7.0
10 TW	-5.6	-5.4	-5.3	-5.1	-5.0	-4.8	-4.6
5 TW	-2.8	-2.7	-2.6	-2.6	-2.5	-2.4	-2.3
0	0	0	0	0	0	0	0
10 HW	1.1	1.1	1.0	0.9	0.8	0.7	0.6
20 HW	2.3	2.1	1.9	1.8	1.6	1.5	1.3
30 HW	3.5	3.2	3.0	2.7	2.4	2.2	1.9
40 HW	4.7	4.3	4.0	3.6	3.3	2.9	2.6

With engine bleed for packs off, increase weight by 600 kg.

With engine anti-ice on, decrease weight by 300 kg.

With engine and wing anti-ice on, decrease weight by 1350 kg (optional system).

Takeoff Obstacle Limit Weight - High Altitudes (26K Derate)**Flaps 5****10000 ft, 10°C & Below, Zero Wind**

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 LB)

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	55.5	59.8	63.0	65.2	67.0						
20	51.3	55.3	58.6	61.2	63.3	64.7	65.9				
40	47.6	51.4	54.5	57.1	59.3	61.0	62.5	63.7	64.6	65.5	66.2
60		48.4	51.4	54.0	56.2	58.0	59.6	60.9	62.1	63.1	63.9
80			48.9	51.4	53.6	55.5	57.1	58.5	59.7	60.8	61.8
100			46.7	49.2	51.4	53.3	55.0	56.4	57.7	58.8	59.8
120				47.3	49.5	51.4	53.1	54.6	55.9	57.0	58.1
140					47.7	49.7	51.4	52.9	54.2	55.4	56.5
160					46.2	48.1	49.8	51.3	52.7	53.9	55.0
180						46.6	48.4	49.9	51.3	52.5	53.7
200							47.0	48.6	50.0	51.3	52.4
220								47.3	48.8	50.0	51.2
240								46.2	47.6	48.9	50.1
260									46.5	47.8	49.0
280										46.8	48.0
300										45.8	47.0

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

Takeoff Obstacle Limit Weight - High Altitudes (26K Derate)
Flaps 5
OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)						
	44	48	52	56	60	64	68
10 & BELOW	0	0	0	0	0	0	0
12	-0.3	-0.3	-0.4	-0.4	-0.4	-0.5	-0.5
14	-0.6	-0.7	-0.7	-0.8	-0.9	-0.9	-1.0
16	-1.0	-1.0	-1.1	-1.2	-1.3	-1.4	-1.4
18	-1.3	-1.4	-1.5	-1.6	-1.7	-1.8	-1.9
20	-1.6	-1.7	-1.9	-2.0	-2.1	-2.3	-2.4
22	-2.1	-2.3	-2.5	-2.6	-2.8	-3.0	-3.2
24	-2.6	-2.8	-3.1	-3.3	-3.5	-3.8	-4.0
26	-3.1	-3.4	-3.7	-3.9	-4.2	-4.5	-4.8
28	-3.5	-3.9	-4.2	-4.6	-4.9	-5.3	-5.6
30	-4.0	-4.4	-4.8	-5.2	-5.6	-6.1	-6.5
32	-4.7	-5.2	-5.6	-6.1	-6.6	-7.1	-7.5
34	-5.3	-5.9	-6.4	-7.0	-7.5	-8.1	-8.6
36	-6.0	-6.6	-7.2	-7.8	-8.5	-9.1	-9.7
38	-6.6	-7.3	-8.0	-8.7	-9.4	-10.1	-10.8
40	-7.3	-8.0	-8.8	-9.6	-10.3	-11.1	-11.9
42	-7.8	-8.7	-9.5	-10.4	-11.2	-12.1	-12.9
44	-8.3	-9.3	-10.2	-11.1	-12.1	-13.0	-13.9
46	-8.9	-9.9	-10.9	-11.9	-12.9	-14.0	-15.0
48	-9.4	-10.5	-11.6	-12.7	-13.8	-14.9	-16.0
50	-9.9	-11.1	-12.3	-13.5	-14.7	-15.9	-17.1

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	44	48	52	56	60	64	68
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-1.8	-2.0	-2.1	-2.3	-2.4	-2.6	-2.7
12000	-3.7	-4.0	-4.3	-4.6	-4.9	-5.2	-5.5
13000	-5.4	-5.9	-6.3	-6.8	-7.2	-7.7	-8.1
14000	-7.0	-7.7	-8.3	-8.9	-9.5	-10.2	-10.8
14500	-7.8	-8.6	-9.3	-10.0	-10.7	-11.5	-12.2

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	44	48	52	56	60	64	68
15TW	-6.2	-6.0	-5.8	-5.6	-5.3	-5.1	-4.9
10TW	-4.2	-4.0	-3.9	-3.7	-3.6	-3.4	-3.3
5TW	-2.1	-2.0	-1.9	-1.9	-1.8	-1.7	-1.6
0	0	0	0	0	0	0	0
10HW	0.8	0.7	0.7	0.6	0.5	0.5	0.4
20HW	1.6	1.4	1.3	1.2	1.1	1.0	0.9
30HW	2.4	2.2	2.0	1.8	1.6	1.5	1.3
40HW	3.2	2.9	2.7	2.4	2.2	1.9	1.7

With engine bleed for packs off, increase weight by 650 kg.
With engine anti-ice on, decrease weight by 1900 kg.
With engine and wing anti-ice on, decrease weight by 3100 kg (optional system).

Takeoff Field Corrections - Dry Runway (24K Derate)**Slope Corrections**

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1250	1240	1230	1210	1200	1180	1170	1150	1130
1400	1470	1460	1440	1420	1400	1370	1340	1300	1270
1600	1700	1670	1650	1620	1600	1550	1510	1460	1410
1800	1920	1890	1860	1830	1800	1740	1680	1610	1550
2000	2140	2110	2070	2040	2000	1920	1850	1770	1690
2200	2370	2330	2280	2240	2200	2110	2020	1930	1830
2400	2590	2540	2500	2450	2400	2290	2190	2080	1970
2600	2820	2760	2710	2650	2600	2480	2360	2240	2120
2800	3040	2980	2920	2860	2800	2660	2530	2390	2260
3000	3260	3200	3130	3070	3000	2850	2700	2550	2400
3200	3490	3420	3340	3270	3200	3030	2870	2700	2540
3400	3710	3630	3560	3480	3400	3220	3040	2860	2680
3600	3930	3850	3770	3680	3600	3400	3210	3010	2820
3800	4160	4070	3980	3890	3800	3590	3380	3170	2960
4000	4380	4290	4190	4100	4000	3780	3550	3330	3100
4200	4610	4500	4400	4300	4200	3960	3720	3480	3240
4400	4830	4720	4610	4510	4400	4150	3890	3640	3380
4600	5050	4940	4830	4710	4600	4330	4060	3790	3520
4800	5280	5160	5040	4920	4800	4520	4230	3950	3660
5000	5500	5370	5250	5120	5000	4700	4400	4100	3810

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	850	970	1080	1200	1290	1370	1440	1500
1400	1020	1140	1270	1400	1490	1580	1650	1720
1600	1180	1320	1460	1600	1690	1780	1860	1940
1800	1350	1500	1650	1800	1900	1990	2070	2150
2000	1510	1680	1840	2000	2100	2190	2280	2370
2200	1680	1850	2030	2200	2300	2400	2490	2590
2400	1850	2030	2220	2400	2500	2600	2710	2810
2600	2010	2210	2400	2600	2700	2810	2920	3020
2800	2180	2390	2590	2800	2910	3020	3130	3240
3000	2350	2560	2780	3000	3110	3220	3340	3460
3200	2510	2740	2970	3200	3310	3430	3550	3680
3400	2680	2920	3160	3400	3510	3630	3760	3890
3600	2840	3100	3350	3600	3720	3840	3970	4110
3800	3010	3270	3540	3800	3920	4040	4180	4330
4000	3180	3450	3730	4000	4120	4250	4390	4550
4200	3340	3630	3910	4200	4320	4460	4600	4760
4400	3510	3810	4100	4400	4520	4660	4810	4980
4600	3670	3980	4290	4600	4730	4870	5020	5200
4800	3840	4160	4480	4800	4930	5070	5240	5420
5000	4010	4340	4670	5000	5130	5280	5450	5630

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	64.2	59.2	58.9	58.5	58.1	57.7	57.3	54.4	53.0	51.5	50.0
1600	68.8	63.5	63.1	62.6	62.2	61.8	61.4	58.3	56.8	55.2	53.6
1800	73.1	67.4	66.9	66.5	66.1	65.6	65.2	61.9	60.3	58.6	56.9
2000	77.2	71.2	70.7	70.2	69.8	69.3	68.9	65.4	63.6	61.8	60.0
2200	80.9	74.6	74.1	73.6	73.2	72.7	72.2	68.5	66.7	64.8	62.9
2400	84.3	77.7	77.2	76.7	76.2	75.7	75.2	71.4	69.5	67.5	65.6
2600	86.1	80.5	80.0	79.4	78.9	78.4	77.9	73.9	72.0	69.9	67.9
2800	86.1	82.9	82.4	81.8	81.3	80.8	80.2	76.2	74.2	72.1	70.0
3000	86.1	85.1	84.6	84.1	83.5	83.0	82.4	78.2	76.2	74.0	71.9
3200	86.1	86.1	86.1	86.1	85.8	85.2	84.6	80.3	78.2	76.0	73.8
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.4	80.2	77.9	75.6
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	82.2	79.8	77.5
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.1	81.7	79.3
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.0	83.6	81.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.3	82.8
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.9
CLIMB LIMIT WT (1000 KG)	78.3	77.7	77.5	77.4	77.3	77.2	77.0	71.6	68.9	66.3	63.6

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	61.0	56.0	55.7	55.3	54.9	54.6	53.2	50.4	49.1	47.8	46.4
1600	65.3	60.0	59.6	59.2	58.8	58.5	57.0	54.1	52.6	51.2	49.8
1800	69.4	63.7	63.3	62.9	62.5	62.0	60.5	57.4	55.8	54.3	52.8
2000	73.3	67.3	66.8	66.4	65.9	65.5	63.8	60.5	58.8	57.2	55.7
2200	76.9	70.5	70.1	69.6	69.1	68.7	66.9	63.4	61.7	60.0	58.3
2400	80.0	73.5	73.0	72.5	72.0	71.5	69.7	66.1	64.3	62.5	60.8
2600	82.9	76.1	75.6	75.1	74.6	74.1	72.2	68.4	66.6	64.8	63.0
2800	85.4	78.4	77.9	77.4	76.8	76.3	74.4	70.5	68.6	66.7	64.9
3000	86.1	80.5	80.0	79.4	78.9	78.4	76.4	72.4	70.5	68.5	66.6
3200	86.1	82.7	82.1	81.6	81.0	80.5	78.4	74.3	72.3	70.3	68.4
3400	86.1	84.8	84.3	83.7	83.1	82.6	80.5	76.2	74.1	72.1	70.1
3600	86.1	86.1	86.1	85.7	85.2	84.6	82.4	78.1	75.9	73.8	71.8
3800	86.1	86.1	86.1	86.1	86.1	86.1	84.4	80.0	77.8	75.6	73.5
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.8	79.5	77.3	75.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.5	81.2	78.9	76.7
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.1	82.7	80.4	78.2
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.2	81.9	79.6
CLIMB LIMIT WT (1000 KG)	75.3	74.7	74.6	74.5	74.4	74.3	71.6	66.4	63.9	61.4	59.0

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1450 kg.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	57.8	52.9	52.6	52.2	51.8	50.5	49.2	46.8	45.5	44.3	43.2
1600	61.9	56.7	56.3	55.9	55.5	54.1	52.8	50.1	48.8	47.5	46.3
1800	65.7	60.2	59.7	59.3	58.9	57.4	56.0	53.1	51.8	50.3	49.1
2000	69.4	63.5	63.1	62.6	62.2	60.6	59.1	56.0	54.6	53.1	51.7
2200	72.7	66.6	66.1	65.7	65.2	63.5	61.9	58.7	57.2	55.6	54.2
2400	75.8	69.3	68.9	68.4	67.9	66.2	64.5	61.2	59.6	58.0	56.5
2600	78.4	71.8	71.3	70.8	70.4	68.6	66.8	63.4	61.7	60.0	58.5
2800	80.8	74.0	73.5	73.0	72.5	70.6	68.8	65.3	63.6	61.9	60.3
3000	83.0	76.0	75.5	75.0	74.5	72.6	70.7	67.1	65.3	63.6	61.9
3200	85.3	78.0	77.5	77.0	76.4	74.5	72.6	68.8	67.0	65.2	63.5
3400	86.1	80.0	79.5	78.9	78.4	76.4	74.4	70.6	68.7	66.8	65.1
3600	86.1	82.0	81.4	80.9	80.3	78.2	76.2	72.3	70.4	68.4	66.6
3800	86.1	84.0	83.4	82.8	82.2	80.1	78.0	74.0	72.0	70.0	68.2
4000	86.1	85.9	85.3	84.7	84.1	81.9	79.8	75.7	73.6	71.6	69.7
4200	86.1	86.1	86.1	86.1	85.8	83.6	81.4	77.2	75.2	73.1	71.2
4400	86.1	86.1	86.1	86.1	86.1	85.2	83.0	78.7	76.6	74.5	72.6
4600	86.1	86.1	86.1	86.1	86.1	86.1	84.5	80.1	78.0	75.8	73.8
CLIMB LIMIT WT (1000 KG)	72.3	71.8	71.7	71.6	71.5	68.9	66.3	61.5	59.2	56.9	54.8

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	54.3	49.8	49.5	49.2	48.0	46.8	45.7	43.3	42.1	41.1	40.1
1600	58.2	53.4	53.0	52.7	51.5	50.2	48.9	46.4	45.2	44.1	43.0
1800	61.8	56.6	56.3	55.9	54.6	53.2	51.9	49.2	47.9	46.7	45.6
2000	65.2	59.7	59.4	59.0	57.6	56.1	54.7	51.8	50.4	49.2	48.0
2200	68.4	62.6	62.2	61.8	60.3	58.8	57.3	54.3	52.9	51.6	50.3
2400	71.2	65.3	64.8	64.4	62.9	61.3	59.8	56.6	55.1	53.8	52.4
2600	73.8	67.6	67.1	66.7	65.1	63.5	61.9	58.6	57.1	55.7	54.3
2800	76.0	69.6	69.2	68.8	67.1	65.4	63.8	60.4	58.8	57.4	56.0
3000	78.1	71.5	71.1	70.6	68.9	67.2	65.5	62.0	60.4	58.9	57.5
3200	80.2	73.4	72.9	72.5	70.7	69.0	67.2	63.6	62.0	60.4	59.0
3400	82.2	75.3	74.8	74.3	72.5	70.7	68.9	65.2	63.5	61.9	60.4
3600	84.2	77.1	76.6	76.1	74.3	72.4	70.6	66.8	65.0	63.4	61.8
3800	86.1	79.0	78.4	77.9	76.0	74.1	72.2	68.3	66.5	64.8	63.2
4000	86.1	80.7	80.2	79.7	77.8	75.8	73.8	69.9	68.0	66.3	64.7
4200	86.1	82.4	81.9	81.3	79.4	77.4	75.4	71.3	69.4	67.7	66.0
4400	86.1	84.0	83.4	82.9	80.9	78.8	76.8	72.7	70.7	69.0	67.3
4600	86.1	85.5	84.9	84.4	82.3	80.2	78.2	74.0	72.0	70.2	68.4
CLIMB LIMIT WT (1000 KG)	69.3	68.8	68.8	68.7	66.2	63.7	61.3	56.7	54.6	52.7	50.9

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1450 kg.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	51.0	47.0	46.6	45.6	44.5	43.4	42.2	40.0	39.0	38.1	37.1
1600	54.6	50.3	50.0	48.9	47.7	46.5	45.3	42.9	41.8	40.8	39.8
1800	58.0	53.4	53.0	51.9	50.6	49.3	48.0	45.5	44.3	43.2	42.2
2000	61.2	56.3	55.9	54.7	53.3	51.9	50.5	47.9	46.7	45.5	44.4
2200	64.1	59.0	58.6	57.3	55.9	54.4	53.0	50.2	48.9	47.7	46.5
2400	66.8	61.5	61.1	59.7	58.3	56.7	55.2	52.3	51.0	49.7	48.5
2600	69.2	63.7	63.3	61.9	60.4	58.8	57.2	54.2	52.8	51.5	50.2
2800	71.3	65.6	65.2	63.7	62.2	60.6	59.0	55.9	54.5	53.1	51.8
3000	73.2	67.4	66.9	65.5	63.9	62.2	60.6	57.4	55.9	54.5	53.2
3200	75.2	69.1	68.7	67.2	65.5	63.8	62.1	58.8	57.3	55.9	54.5
3400	77.1	70.9	70.4	68.8	67.2	65.4	63.6	60.2	58.7	57.2	55.8
3600	79.0	72.6	72.1	70.5	68.8	66.9	65.1	61.7	60.1	58.6	57.1
3800	80.9	74.3	73.8	72.2	70.4	68.5	66.7	63.1	61.5	59.9	58.4
4000	82.7	76.0	75.5	73.8	72.0	70.0	68.2	64.5	62.8	61.2	59.7
4200	84.4	77.6	77.0	75.3	73.5	71.5	69.6	65.8	64.1	62.5	60.9
4400	86.0	79.0	78.5	76.8	74.9	72.9	70.9	67.1	65.4	63.7	62.1
4600	86.1	80.4	79.9	78.1	76.2	74.2	72.2	68.3	66.5	64.8	63.2
CLIMB LIMIT WT (1000 KG)	66.1	65.7	65.7	63.4	61.1	58.7	56.5	52.3	50.5	48.7	47.0

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1400	47.9	44.1	43.3	42.3	41.2	40.1	39.0	36.9	35.9	35.0	34.0
1600	51.3	47.3	46.4	45.3	44.1	42.9	41.8	39.6	38.5	37.5	36.5
1800	54.4	50.1	49.1	48.0	46.8	45.5	44.3	41.9	40.8	39.7	38.6
2000	57.4	52.8	51.8	50.6	49.3	47.9	46.6	44.1	42.9	41.7	40.6
2200	60.1	55.4	54.3	53.0	51.6	50.2	48.9	46.2	45.0	43.7	42.5
2400	62.7	57.7	56.6	55.3	53.8	52.4	51.0	48.2	46.9	45.6	44.4
2600	64.9	59.8	58.6	57.3	55.8	54.2	52.8	50.0	48.6	47.3	46.0
2800	66.9	61.6	60.4	59.0	57.5	55.9	54.4	51.5	50.1	48.7	47.4
3000	68.7	63.3	62.0	60.6	59.0	57.4	55.9	52.9	51.4	50.0	48.7
3200	70.5	64.9	63.6	62.2	60.5	58.9	57.3	54.2	52.7	51.2	49.9
3400	72.3	66.5	65.2	63.7	62.0	60.3	58.7	55.5	53.9	52.4	51.0
3600	74.0	68.1	66.7	65.2	63.5	61.7	60.0	56.8	55.2	53.6	52.2
3800	75.8	69.7	68.3	66.7	65.0	63.2	61.4	58.1	56.5	54.9	53.4
4000	77.5	71.3	69.9	68.2	66.4	64.6	62.8	59.4	57.7	56.1	54.5
4200	79.1	72.8	71.3	69.6	67.8	65.9	64.1	60.6	58.9	57.2	55.6
4400	80.6	74.2	72.7	71.0	69.1	67.2	65.3	61.7	60.0	58.3	56.7
4600	82.0	75.5	74.0	72.2	70.3	68.3	66.5	62.8	61.1	59.4	57.7
CLIMB LIMIT WT (1000 KG)	62.8	62.4	60.6	58.5	56.3	54.1	52.0	48.1	46.3	44.4	42.7

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 700 kg and climb limit weight by 1450 kg.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1200	41.7	38.7	38.4	37.7	36.9	36.0	34.9	33.9	32.9	31.1	29.3
1400	44.9	41.7	41.5	40.8	39.9	38.9	37.8	36.8	35.8	33.9	32.1
1600	48.1	44.8	44.6	43.8	42.9	41.9	40.8	39.7	38.6	36.7	34.7
1800	51.0	47.6	47.3	46.5	45.6	44.5	43.3	42.2	41.1	39.1	37.0
2000	53.7	50.1	49.8	49.0	48.1	46.9	45.7	44.5	43.3	41.2	39.0
2200	56.2	52.4	52.1	51.2	50.2	49.0	47.7	46.5	45.3	43.0	40.7
2400	58.5	54.5	54.2	53.3	52.2	51.0	49.6	48.3	47.0	44.7	42.3
2600	60.7	56.6	56.3	55.3	54.3	53.0	51.5	50.2	48.9	46.4	44.0
2800	63.0	58.7	58.3	57.4	56.2	54.9	53.4	52.1	50.7	48.1	45.6
3000	64.8	60.4	60.0	59.0	57.8	56.5	54.9	53.5	52.1	49.4	46.8
3200	66.6	62.0	61.6	60.5	59.3	57.9	56.3	54.8	53.3	50.6	47.9
3400	68.3	63.5	63.1	62.0	60.8	59.3	57.6	56.1	54.6	51.7	48.9
3600	69.9	65.0	64.6	63.5	62.2	60.6	58.9	57.4	55.8	52.8	49.9
3800	71.5	66.5	66.0	64.9	63.5	62.0	60.2	58.6	56.9	53.9	50.9
4000	73.0	67.9	67.4	66.2	64.9	63.2	61.4	59.7	58.1	55.0	51.9
4200	74.5	69.2	68.8	67.5	66.1	64.5	62.6	60.9	59.2	56.0	52.8
4400	76.0	70.5	70.1	68.8	67.4	65.7	63.8	62.0	60.2	57.0	53.8
4600	77.4	71.8	71.4	70.1	68.6	66.8	64.9	63.1	61.3	58.0	54.7
CLIMB LIMIT WT (1000 KG)	59.0	58.5	58.4	57.2	55.8	53.9	51.7	49.8	47.9	44.5	41.2

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1200	38.5	35.7	35.1	34.4	33.7	32.9	31.9	31.0	30.2	28.6	26.9
1400	41.6	38.7	38.0	37.4	36.6	35.7	34.7	33.8	32.9	31.3	29.6
1600	44.7	41.6	40.9	40.3	39.5	38.5	37.5	36.6	35.6	33.9	32.1
1800	47.4	44.2	43.5	42.8	42.0	41.0	39.9	38.9	38.0	36.2	34.3
2000	50.0	46.6	45.9	45.1	44.3	43.2	42.1	41.0	40.1	38.1	36.2
2200	52.2	48.7	47.9	47.1	46.2	45.2	43.9	42.9	41.8	39.8	37.8
2400	54.3	50.6	49.8	49.0	48.1	46.9	45.6	44.5	43.4	41.3	39.2
2600	56.4	52.6	51.8	50.9	49.9	48.8	47.4	46.3	45.1	42.9	40.7
2800	58.5	54.5	53.7	52.8	51.8	50.5	49.2	48.0	46.8	44.5	42.2
3000	60.2	56.1	55.2	54.2	53.2	51.9	50.5	49.3	48.1	45.7	43.3
3200	61.8	57.5	56.6	55.6	54.5	53.2	51.7	50.4	49.2	46.7	44.3
3400	63.3	58.9	57.9	56.9	55.8	54.4	52.9	51.6	50.3	47.7	45.2
3600	64.8	60.2	59.2	58.2	57.0	55.6	54.1	52.7	51.3	48.7	46.1
3800	66.2	61.5	60.5	59.4	58.2	56.8	55.2	53.7	52.3	49.6	46.9
4000	67.6	62.8	61.7	60.6	59.4	57.9	56.2	54.8	53.4	50.6	47.8
4200	69.0	64.0	62.9	61.8	60.6	59.0	57.3	55.8	54.3	51.5	48.6
4400	70.3	65.2	64.1	62.9	61.7	60.1	58.3	56.8	55.3	52.4	49.5
4600	71.6	66.4	65.2	64.1	62.8	61.1	59.4	57.8	56.3	53.3	50.3
CLIMB LIMIT WT (1000 KG)	55.1	54.6	53.5	52.5	51.2	49.4	47.4	45.8	44.2	41.1	37.9

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 1700 kg and climb limit weight by 1900 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2200 kg and climb limit weight by 2700 kg.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)

Flaps 5

14500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1200	37.7	34.9	34.3	33.7	33.0	32.1	31.1	30.3	29.5	27.9	26.4
1400	40.8	37.8	37.2	36.6	35.8	34.9	33.9	33.1	32.2	30.6	29.0
1600	43.8	40.7	40.1	39.4	38.7	37.7	36.7	35.8	34.9	33.2	31.5
1800	46.6	43.3	42.6	42.0	41.1	40.2	39.1	38.1	37.2	35.4	33.6
2000	49.0	45.7	44.9	44.2	43.4	42.3	41.2	40.2	39.2	37.4	35.5
2200	51.3	47.7	46.9	46.2	45.3	44.2	43.0	42.0	41.0	39.0	37.0
2400	53.3	49.6	48.8	48.0	47.1	45.9	44.7	43.6	42.5	40.5	38.4
2600	55.4	51.5	50.7	49.9	48.9	47.7	46.4	45.3	44.2	42.1	39.9
2800	57.4	53.4	52.5	51.7	50.7	49.5	48.1	47.0	45.8	43.6	41.4
3000	59.1	54.9	54.0	53.1	52.1	50.8	49.5	48.3	47.1	44.8	42.5
3200	60.6	56.3	55.3	54.5	53.4	52.1	50.6	49.4	48.2	45.8	43.4
3400	62.1	57.6	56.6	55.7	54.6	53.3	51.8	50.5	49.2	46.7	44.3
3600	63.5	58.9	57.9	57.0	55.8	54.4	52.9	51.5	50.2	47.7	45.1
3800	64.9	60.2	59.1	58.2	57.0	55.5	53.9	52.6	51.2	48.6	45.9
4000	66.3	61.4	60.3	59.3	58.1	56.6	55.0	53.6	52.2	49.5	46.8
4200	67.6	62.6	61.5	60.5	59.2	57.7	56.0	54.6	53.1	50.4	47.6
4400	68.9	63.8	62.6	61.6	60.3	58.7	57.0	55.5	54.1	51.2	48.4
4600	70.1	64.9	63.7	62.7	61.4	59.8	58.0	56.5	55.0	52.1	49.2
CLIMB LIMIT WT (1000 KG)	54.1	53.4	52.3	51.4	50.1	48.4	46.4	44.8	43.2	40.2	37.1

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 1700 kg and climb limit weight by 1900 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2200 kg and climb limit weight by 2700 kg.

Takeoff Field Corrections - Wet Runway (24K Derate)**Slope Corrections**

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1230	1220	1210	1210	1200	1190	1170	1160	1140
1400	1450	1440	1430	1410	1400	1370	1350	1320	1300
1600	1680	1660	1640	1620	1600	1560	1530	1490	1460
1800	1910	1880	1850	1830	1800	1750	1710	1660	1620
2000	2140	2100	2070	2030	2000	1940	1890	1830	1780
2200	2360	2320	2280	2240	2200	2130	2070	2000	1930
2400	2590	2540	2500	2450	2400	2320	2250	2170	2090
2600	2820	2760	2710	2650	2600	2510	2430	2340	2250
2800	3050	2980	2920	2860	2800	2700	2610	2510	2410
3000	3270	3200	3140	3070	3000	2890	2780	2680	2570
3200	3500	3430	3350	3280	3200	3080	2960	2850	2730
3400	3730	3650	3560	3480	3400	3270	3140	3020	2890
3600	3950	3870	3780	3690	3600	3460	3320	3180	3050
3800	4180	4090	3990	3900	3800	3650	3500	3350	3200
4000	4410	4310	4200	4100	4000	3840	3680	3520	3360
4200	4640	4530	4420	4310	4200	4030	3860	3690	3520
4400	4860	4750	4630	4520	4400	4220	4040	3860	3680
4600	5090	4970	4850	4720	4600	4410	4220	4030	3840
4800	5320	5190	5060	4930	4800	4600	4400	4200	4000
5000	5550	5410	5270	5140	5000	4790	4580	4370	4160

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	840	960	1080	1200	1270	1350	1440	1530
1400	1010	1140	1270	1400	1480	1570	1660	1760
1600	1180	1320	1460	1600	1690	1780	1880	1980
1800	1350	1500	1650	1800	1900	2000	2100	2200
2000	1520	1680	1840	2000	2110	2220	2320	2430
2200	1690	1860	2030	2200	2320	2430	2540	2650
2400	1860	2040	2220	2400	2530	2650	2770	2870
2600	2020	2220	2410	2600	2740	2870	2990	3100
2800	2190	2400	2600	2800	2950	3080	3210	3320
3000	2360	2580	2790	3000	3160	3300	3430	3540
3200	2530	2760	2980	3200	3370	3520	3650	3770
3400	2700	2930	3170	3400	3580	3730	3870	3990
3600	2870	3110	3360	3600	3790	3950	4090	4210
3800	3040	3290	3550	3800	4000	4170	4310	4440
4000	3210	3470	3740	4000	4200	4380	4540	4660
4200	3380	3650	3930	4200	4410	4600	4760	4880
4400	3550	3830	4120	4400	4620	4820	4980	5110
4600	3720	4010	4310	4600	4830	5030	5200	5330
4800	3890	4190	4500	4800	5040	5250	5420	5550
5000	4060	4370	4690	5000	5250	5470	5640	5780

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1600	68.4	62.6	62.2	61.7	61.3	60.9	60.4	57.3	55.8	54.2	52.8
1800	72.6	66.4	65.9	65.5	65.0	64.5	64.1	60.7	59.1	57.5	55.9
2000	76.5	70.0	69.5	69.0	68.5	68.0	67.5	64.0	62.3	60.6	58.9
2200	80.0	73.3	72.7	72.2	71.7	71.1	70.6	66.9	65.1	63.4	61.6
2400	83.2	76.2	75.6	75.1	74.5	74.0	73.5	69.6	67.8	65.9	64.1
2600	86.1	79.0	78.4	77.8	77.3	76.7	76.2	72.2	70.3	68.3	66.5
2800	86.1	81.7	81.1	80.5	79.9	79.4	78.8	74.7	72.7	70.7	68.7
3000	86.1	84.3	83.7	83.1	82.5	81.9	81.3	77.1	75.0	72.9	70.9
3200	86.1	86.1	86.1	85.7	85.1	84.5	83.8	79.5	77.3	75.2	73.1
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.8	79.5	77.3	75.2
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.0	81.7	79.4	77.2
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.8	81.4	79.1
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.7	83.3	81.0
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.1	82.7
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.8
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	78.3	77.7	77.5	77.4	77.3	77.2	77.0	71.6	68.9	66.3	63.6

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1600	64.7	59.0	58.6	58.1	57.7	57.3	55.9	53.0	51.7	50.3	49.0
1800	68.6	62.5	62.1	61.6	61.2	60.8	59.2	56.2	54.7	53.3	51.9
2000	72.4	65.9	65.4	65.0	64.5	64.1	62.4	59.2	57.7	56.2	54.7
2200	75.7	68.9	68.4	68.0	67.5	67.0	65.3	61.9	60.3	58.7	57.2
2400	78.7	71.7	71.2	70.7	70.2	69.7	67.9	64.4	62.8	61.1	59.5
2600	81.6	74.3	73.8	73.3	72.8	72.3	70.4	66.8	65.1	63.3	61.7
2800	84.4	76.9	76.3	75.8	75.3	74.7	72.8	69.0	67.3	65.5	63.8
3000	86.1	79.3	78.8	78.2	77.7	77.1	75.2	71.3	69.5	67.6	65.8
3200	86.1	81.8	81.2	80.7	80.1	79.5	77.5	73.4	71.6	69.6	67.8
3400	86.1	84.2	83.6	83.0	82.4	81.8	79.7	75.5	73.6	71.6	69.7
3600	86.1	86.1	85.9	85.3	84.6	84.0	81.9	77.5	75.5	73.5	71.5
3800	86.1	86.1	86.1	86.1	86.1	86.1	84.0	79.5	77.4	75.3	73.3
4000	86.1	86.1	86.1	86.1	86.1	86.1	85.9	81.3	79.2	77.1	75.0
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.1	80.9	78.7	76.5
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.7	82.5	80.2	78.0
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.9	81.7	79.5
4800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.3	83.0	80.8
CLIMB LIMIT WT (1000 KG)	75.3	74.7	74.6	74.5	74.4	74.3	71.6	66.4	63.9	61.4	59.0

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1450 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1600	60.9	55.6	55.2	54.8	54.4	53.0	51.7	49.2	48.0	46.7	45.6
1800	64.6	58.9	58.5	58.0	57.6	56.2	54.8	52.1	50.8	49.5	48.3
2000	68.1	62.1	61.6	61.2	60.7	59.2	57.8	54.9	53.5	52.1	50.8
2200	71.2	64.9	64.4	64.0	63.5	61.9	60.4	57.4	56.0	54.5	53.1
2400	74.1	67.5	67.0	66.6	66.1	64.4	62.8	59.7	58.2	56.7	55.3
2600	76.8	70.0	69.5	69.0	68.5	66.8	65.1	61.9	60.4	58.8	57.3
2800	79.4	72.4	71.9	71.4	70.9	69.1	67.4	64.0	62.4	60.8	59.3
3000	82.0	74.7	74.2	73.7	73.1	71.3	69.5	66.1	64.4	62.7	61.2
3200	84.5	77.0	76.5	75.9	75.4	73.5	71.6	68.1	66.3	64.6	63.0
3400	86.1	79.2	78.7	78.1	77.5	75.5	73.7	70.0	68.2	66.3	64.7
3600	86.1	81.4	80.8	80.2	79.6	77.5	75.6	71.8	69.9	68.0	66.3
3800	86.1	83.4	82.8	82.2	81.6	79.5	77.5	73.6	71.7	69.7	67.9
4000	86.1	85.4	84.8	84.2	83.5	81.4	79.3	75.3	73.3	71.3	69.5
4200	86.1	86.1	86.1	86.0	85.3	83.1	81.0	76.9	74.9	72.8	71.0
4400	86.1	86.1	86.1	86.1	86.1	84.7	82.6	78.4	76.3	74.2	72.4
4600	86.1	86.1	86.1	86.1	86.1	86.1	84.0	79.8	77.7	75.6	73.7
4800	86.1	86.1	86.1	86.1	86.1	86.1	85.4	81.1	79.0	76.9	75.0
CLIMB LIMIT WT (1000 KG)	72.3	71.8	71.7	71.6	71.5	68.9	66.3	61.5	59.2	56.9	54.8

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1600	57.2	52.3	51.9	51.6	50.4	49.1	47.9	45.5	44.4	43.3	42.3
1800	60.6	55.4	55.0	54.7	53.4	52.0	50.8	48.2	47.0	45.9	44.8
2000	63.9	58.4	58.0	57.6	56.2	54.8	53.5	50.8	49.5	48.3	47.2
2200	66.8	61.0	60.6	60.2	58.8	57.3	55.9	53.1	51.8	50.5	49.3
2400	69.5	63.5	63.1	62.7	61.2	59.6	58.2	55.2	53.9	52.6	51.3
2600	72.1	65.8	65.4	65.0	63.4	61.8	60.3	57.3	55.8	54.5	53.2
2800	74.5	68.1	67.6	67.2	65.6	63.9	62.4	59.2	57.7	56.3	55.0
3000	76.9	70.3	69.8	69.3	67.7	66.0	64.4	61.1	59.6	58.1	56.8
3200	79.3	72.4	71.9	71.4	69.7	68.0	66.3	62.9	61.3	59.8	58.4
3400	81.6	74.4	73.9	73.5	71.7	69.9	68.1	64.6	63.0	61.4	60.0
3600	83.8	76.4	75.9	75.4	73.6	71.7	69.9	66.3	64.6	63.0	61.5
3800	86.0	78.3	77.8	77.3	75.4	73.5	71.6	67.9	66.1	64.5	62.9
4000	86.1	80.2	79.6	79.1	77.1	75.1	73.2	69.4	67.6	65.9	64.3
4200	86.1	81.9	81.3	80.8	78.8	76.7	74.8	70.9	69.0	67.3	65.7
4400	86.1	83.5	82.9	82.3	80.3	78.2	76.3	72.3	70.4	68.7	67.0
4600	86.1	84.9	84.4	83.8	81.7	79.7	77.7	73.7	71.7	70.0	68.3
4800	86.1	86.1	85.7	85.1	83.1	81.0	79.0	74.9	73.0	71.2	69.6
CLIMB LIMIT WT (1000 KG)	69.3	68.8	68.8	68.7	66.2	63.7	61.3	56.7	54.6	52.7	50.9

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1450 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1600	53.6	49.2	48.9	47.8	46.6	45.4	44.3	42.1	41.1	40.1	39.2
1800	56.8	52.1	51.8	50.6	49.4	48.1	46.9	44.6	43.5	42.5	41.5
2000	59.9	54.9	54.5	53.3	52.0	50.7	49.4	46.9	45.8	44.7	43.6
2200	62.6	57.4	57.0	55.7	54.4	53.0	51.7	49.1	47.9	46.7	45.6
2400	65.1	59.7	59.3	58.0	56.6	55.2	53.8	51.1	49.9	48.6	47.5
2600	67.5	61.9	61.5	60.1	58.7	57.2	55.7	52.9	51.7	50.4	49.2
2800	69.8	64.0	63.6	62.2	60.7	59.1	57.7	54.8	53.4	52.1	50.9
3000	72.1	66.1	65.6	64.2	62.6	61.0	59.5	56.5	55.1	53.8	52.5
3200	74.3	68.1	67.6	66.1	64.4	62.8	61.2	58.1	56.7	55.3	54.0
3400	76.4	70.0	69.5	67.9	66.2	64.5	62.9	59.7	58.2	56.8	55.4
3600	78.4	71.8	71.3	69.7	67.9	66.2	64.5	61.2	59.7	58.2	56.8
3800	80.4	73.6	73.1	71.4	69.6	67.8	66.0	62.6	61.0	59.5	58.0
4000	82.3	75.3	74.7	73.0	71.2	69.3	67.5	64.0	62.4	60.8	59.3
4200	84.1	76.9	76.3	74.6	72.7	70.8	68.9	65.4	63.7	62.1	60.6
4400	85.7	78.4	77.8	76.0	74.1	72.2	70.3	66.7	65.0	63.4	61.8
4600	86.1	79.8	79.2	77.4	75.5	73.5	71.7	68.0	66.3	64.6	63.0
4800	86.1	81.1	80.5	78.7	76.8	74.8	72.9	69.2	67.5	65.9	64.3
CLIMB LIMIT WT (1000 KG)	66.1	65.7	65.7	63.4	61.1	58.7	56.5	52.3	50.5	48.7	47.0

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1600	50.3	46.1	45.2	44.2	43.1	42.0	41.0	38.9	37.9	36.9	35.9
1800	53.3	48.9	47.9	46.8	45.6	44.5	43.3	41.1	40.1	39.0	38.0
2000	56.2	51.5	50.4	49.3	48.0	46.8	45.6	43.3	42.1	41.0	40.0
2200	58.7	53.8	52.7	51.5	50.2	48.9	47.7	45.3	44.1	42.9	41.8
2400	61.1	56.0	54.9	53.6	52.3	50.9	49.7	47.1	45.9	44.7	43.5
2600	63.4	58.1	56.9	55.6	54.2	52.8	51.5	48.8	47.5	46.3	45.1
2800	65.5	60.0	58.8	57.5	56.0	54.6	53.2	50.5	49.2	47.9	46.6
3000	67.6	62.0	60.7	59.3	57.8	56.3	54.9	52.1	50.7	49.4	48.1
3200	69.7	63.8	62.5	61.0	59.5	58.0	56.5	53.6	52.1	50.7	49.4
3400	71.6	65.5	64.2	62.7	61.1	59.5	58.0	54.9	53.5	52.0	50.7
3600	73.5	67.2	65.8	64.3	62.6	61.0	59.4	56.3	54.8	53.3	51.9
3800	75.3	68.9	67.4	65.8	64.1	62.4	60.8	57.6	56.0	54.5	53.0
4000	77.1	70.4	68.9	67.3	65.5	63.8	62.1	58.8	57.2	55.6	54.1
4200	78.7	71.9	70.4	68.7	66.9	65.2	63.5	60.1	58.4	56.8	55.3
4400	80.2	73.3	71.8	70.1	68.3	66.5	64.7	61.3	59.6	58.0	56.4
4600	81.7	74.7	73.1	71.4	69.6	67.8	66.0	62.5	60.8	59.2	57.6
4800	83.0	76.0	74.4	72.7	70.8	69.0	67.3	63.8	62.1	60.4	58.8
CLIMB LIMIT WT (1000 KG)	62.8	62.4	60.6	58.5	56.3	54.1	52.0	48.1	46.3	44.4	42.7

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 750 kg and climb limit weight by 1450 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1450	45.0	41.7	41.4	40.7	39.9	39.0	38.0	37.0	36.1	34.3	32.6
1600	47.3	43.8	43.5	42.8	42.0	41.0	39.9	38.9	37.9	36.1	34.3
1800	50.0	46.4	46.1	45.3	44.5	43.4	42.3	41.3	40.2	38.3	36.4
2000	52.6	48.8	48.4	47.7	46.7	45.7	44.5	43.4	42.3	40.2	38.2
2200	54.9	50.9	50.6	49.8	48.8	47.7	46.4	45.3	44.1	42.0	39.9
2400	57.1	52.9	52.6	51.7	50.7	49.5	48.2	47.1	45.9	43.6	41.5
2600	59.2	54.9	54.5	53.6	52.6	51.4	50.0	48.8	47.5	45.3	43.0
2800	61.3	56.8	56.5	55.5	54.5	53.2	51.8	50.6	49.3	46.9	44.6
3000	63.1	58.6	58.2	57.2	56.1	54.8	53.4	52.1	50.7	48.3	45.9
3200	64.9	60.2	59.8	58.8	57.7	56.4	54.9	53.5	52.2	49.7	47.2
3400	66.7	61.9	61.4	60.4	59.3	57.9	56.4	55.0	53.6	51.0	48.4
3600	68.4	63.4	63.0	62.0	60.8	59.4	57.8	56.3	54.9	52.2	49.6
3800	70.1	64.9	64.5	63.4	62.2	60.7	59.1	57.6	56.1	53.4	50.7
4000	71.7	66.4	66.0	64.9	63.6	62.1	60.4	58.9	57.4	54.5	51.7
4200	73.3	67.8	67.4	66.3	65.0	63.4	61.7	60.1	58.6	55.7	52.8
4400	74.8	69.2	68.8	67.6	66.3	64.7	62.9	61.3	59.7	56.7	53.8
4600	76.3	70.6	70.1	68.9	67.6	66.0	64.2	62.5	60.9	57.8	54.8
4800	77.8	71.9	71.4	70.2	68.8	67.2	65.3	63.7	62.0	58.8	55.8
CLIMB LIMIT WT (1000 KG)	59.0	58.5	58.4	57.2	55.8	53.9	51.7	49.8	47.9	44.5	41.2

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1450	41.8	38.7	38.0	37.4	36.7	35.9	34.9	34.1	33.3	31.7	30.1
1600	43.9	40.7	40.0	39.4	38.6	37.7	36.7	35.9	35.0	33.4	31.7
1800	46.5	43.1	42.4	41.7	40.9	40.0	38.9	38.0	37.1	35.4	33.7
2000	48.8	45.3	44.6	43.8	43.0	42.0	40.9	40.0	39.0	37.2	35.4
2200	51.0	47.3	46.5	45.8	44.9	43.9	42.7	41.7	40.8	38.9	37.0
2400	53.0	49.1	48.3	47.6	46.7	45.6	44.4	43.4	42.3	40.4	38.4
2600	55.0	50.9	50.1	49.3	48.4	47.3	46.0	45.0	43.9	41.8	39.8
2800	56.9	52.8	51.9	51.1	50.2	49.0	47.7	46.6	45.5	43.4	41.3
3000	58.6	54.4	53.5	52.6	51.7	50.5	49.1	48.0	46.9	44.7	42.5
3200	60.3	55.9	55.0	54.1	53.1	51.9	50.5	49.3	48.2	45.9	43.7
3400	61.9	57.4	56.5	55.6	54.5	53.3	51.9	50.6	49.4	47.1	44.8
3600	63.5	58.8	57.9	57.0	55.9	54.6	53.1	51.9	50.6	48.2	45.9
3800	65.0	60.2	59.3	58.3	57.2	55.8	54.3	53.0	51.8	49.3	46.8
4000	66.5	61.5	60.6	59.6	58.4	57.0	55.5	54.2	52.9	50.3	47.8
4200	67.9	62.9	61.8	60.8	59.7	58.2	56.6	55.3	53.9	51.3	48.7
4400	69.3	64.1	63.1	62.0	60.8	59.4	57.8	56.4	55.0	52.3	49.6
4600	70.7	65.4	64.3	63.2	62.0	60.5	58.8	57.4	56.0	53.3	50.5
4800	72.0	66.6	65.5	64.4	63.1	61.6	59.9	58.4	57.0	54.2	51.4
CLIMB LIMIT WT (1000 KG)	55.1	54.6	53.5	52.5	51.2	49.4	47.4	45.8	44.2	41.1	37.9

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 1400 kg and climb limit weight by 1900 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1750 kg and climb limit weight by 2700 kg.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)

Flaps 5

14500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	2	6	10	14	18	22	26	30	38	46
1450	41.0	37.9	37.2	36.7	36.0	35.1	34.2	33.4	32.6	31.0	29.5
1600	43.1	39.8	39.2	38.6	37.8	36.9	36.0	35.1	34.3	32.7	31.1
1800	45.6	42.2	41.5	40.9	40.1	39.1	38.1	37.2	36.4	34.7	33.0
2000	47.9	44.3	43.6	43.0	42.2	41.2	40.1	39.2	38.2	36.5	34.7
2200	50.0	46.3	45.5	44.9	44.0	43.0	41.8	40.9	39.9	38.1	36.2
2400	52.0	48.1	47.3	46.6	45.7	44.6	43.5	42.5	41.5	39.5	37.6
2600	53.9	49.9	49.1	48.3	47.4	46.3	45.1	44.0	43.0	41.0	39.0
2800	55.9	51.7	50.8	50.1	49.1	48.0	46.7	45.6	44.6	42.5	40.4
3000	57.5	53.2	52.4	51.6	50.6	49.4	48.1	47.0	45.9	43.8	41.6
3200	59.2	54.8	53.9	53.0	52.0	50.8	49.5	48.3	47.2	45.0	42.8
3400	60.8	56.2	55.3	54.4	53.4	52.1	50.8	49.6	48.4	46.2	43.9
3600	62.3	57.6	56.7	55.8	54.7	53.4	52.0	50.8	49.6	47.3	44.9
3800	63.8	59.0	58.0	57.1	56.0	54.6	53.2	51.9	50.7	48.3	45.9
4000	65.2	60.3	59.2	58.3	57.2	55.8	54.3	53.0	51.8	49.3	46.8
4200	66.6	61.5	60.5	59.5	58.4	57.0	55.4	54.1	52.8	50.3	47.7
4400	68.0	62.8	61.7	60.7	59.5	58.1	56.5	55.2	53.8	51.2	48.6
4600	69.3	64.0	62.9	61.9	60.7	59.2	57.6	56.2	54.8	52.1	49.5
4800	70.6	65.1	64.0	63.0	61.8	60.3	58.6	57.2	55.8	53.1	50.3
CLIMB LIMIT WT (1000 KG)	54.1	53.4	52.3	51.4	50.1	48.4	46.4	44.8	43.2	40.2	37.1

With engine bleed for packs off, increase field limit weight by 400 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 1400 kg and climb limit weight by 1900 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1750 kg and climb limit weight by 2700 kg.

Takeoff Obstacle Limit Weight (24K Derate)**Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 KG)**

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	72.6	77.4	80.4	82.7							
20	66.1	71.1	74.9	77.6	79.4	80.9	82.1	83.1			
40	60.8	65.5	69.2	72.3	74.7	76.6	78.0	79.2	80.2	81.0	81.8
60	56.8	61.4	65.1	68.1	70.7	72.8	74.5	76.0	77.2	78.2	79.0
80	53.6	58.0	61.7	64.8	67.4	69.6	71.5	73.1	74.4	75.6	76.6
100	50.8	55.2	58.9	61.9	64.6	66.8	68.8	70.5	71.9	73.2	74.3
120	48.3	52.7	56.4	59.5	62.1	64.4	66.4	68.1	69.7	71.0	72.2
140	46.1	50.5	54.2	57.2	59.9	62.2	64.2	66.0	67.6	69.0	70.3
160	44.2	48.5	52.1	55.2	57.9	60.2	62.3	64.1	65.7	67.2	68.5
180	42.4	46.7	50.3	53.4	56.1	58.4	60.5	62.3	64.0	65.5	66.8
200		45.0	48.6	51.7	54.4	56.7	58.8	60.7	62.4	63.9	65.2
220		43.5	47.0	50.1	52.8	55.2	57.3	59.2	60.9	62.4	63.8
240		42.0	45.6	48.7	51.4	53.7	55.8	57.7	59.5	61.0	62.4
260			44.2	47.3	50.0	52.4	54.5	56.4	58.1	59.7	61.1
280			43.0	46.0	48.7	51.1	53.2	55.1	56.8	58.4	59.9
300			41.8	44.8	47.5	49.9	52.0	53.9	55.6	57.2	58.7

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
30 & BELOW	0	0	0	0	0	0	0
32	-0.7	-0.8	-1.0	-1.1	-1.3	-1.4	-1.6
34	-1.3	-1.6	-1.9	-2.2	-2.5	-2.8	-3.1
36	-2.0	-2.4	-2.9	-3.3	-3.8	-4.3	-4.7
38	-2.6	-3.2	-3.8	-4.5	-5.1	-5.7	-6.3
40	-3.3	-4.0	-4.8	-5.6	-6.3	-7.1	-7.8
42	-3.9	-4.8	-5.7	-6.7	-7.6	-8.5	-9.4
44	-4.6	-5.6	-6.7	-7.8	-8.8	-9.9	-10.9
46	-5.2	-6.4	-7.6	-8.8	-10.1	-11.3	-12.5
48	-5.9	-7.2	-8.6	-9.9	-11.3	-12.7	-14.0
50	-6.5	-8.0	-9.5	-11.0	-12.5	-14.1	-15.6

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
S.L. & BELOW	0	0	0	0	0	0	0
1000	-1.6	-1.9	-2.2	-2.4	-2.7	-3.0	-3.2
2000	-3.2	-3.8	-4.3	-4.9	-5.4	-5.9	-6.5
3000	-4.7	-5.5	-6.3	-7.2	-8.0	-8.8	-9.6
4000	-6.1	-7.2	-8.3	-9.4	-10.5	-11.7	-12.8
5000	-7.5	-8.9	-10.2	-11.6	-13.0	-14.4	-15.8
6000	-8.9	-10.5	-12.2	-13.8	-15.4	-17.1	-18.7
7000	-10.1	-12.0	-13.9	-15.9	-17.8	-19.7	-21.6
8000	-11.4	-13.5	-15.7	-17.9	-20.1	-22.3	-24.5
9000	-12.5	-14.9	-17.4	-19.8	-22.3	-24.7	-27.2
10000	-13.6	-16.3	-19.0	-21.7	-24.4	-27.1	-29.8

Takeoff Obstacle Limit Weight (24K Derate)

Flaps 5

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	48	56	64	72	80	88
15 TW	-8.8	-8.4	-7.9	-7.4	-6.9	-6.5	-6.0
10 TW	-5.9	-5.6	-5.3	-4.9	-4.6	-4.3	-4.0
5 TW	-2.9	-2.8	-2.6	-2.5	-2.3	-2.2	-2.0
0	0	0	0	0	0	0	0
10 HW	1.1	1.0	0.9	0.8	0.6	0.5	0.4
20 HW	2.3	2.0	1.8	1.5	1.3	1.1	0.8
30 HW	3.5	3.1	2.7	2.3	2.0	1.6	1.2
40 HW	4.6	4.1	3.6	3.1	2.6	2.1	1.6

With engine bleed for packs off, increase weight by 650 kg.

With engine anti-ice on, decrease weight by 250 kg.

With engine and wing anti-ice on, decrease weight by 1250 kg (optional system).

Takeoff Obstacle Limit Weight - High Altitude (24K Derate)

Flaps 5

10000 ft, 10°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 KG)

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)											
	25	30	35	40	45	50	55	60	65	70	75	
5	55.2	59.4	62.5	64.6								
20	51.0	54.9	58.1	60.7	62.7	64.1	65.3					
40	47.2	51.0	54.1	56.6	58.7	60.5	61.9	63.1	64.0	64.8	65.5	
60	44.3	48.0	51.0	53.5	55.7	57.5	59.0	60.3	61.5	62.4	63.2	
80		45.5	48.5	51.0	53.1	55.0	56.6	58.0	59.2	60.2	61.1	
100		43.3	46.3	48.8	51.0	52.8	54.5	55.9	57.1	58.2	59.2	
120		41.4	44.4	46.9	49.0	50.9	52.6	54.0	55.3	56.5	57.5	
140			42.6	45.1	47.3	49.2	50.9	52.4	53.7	54.9	55.9	
160				43.6	45.7	47.6	49.3	50.8	52.2	53.4	54.5	
180				42.1	44.3	46.2	47.9	49.4	50.8	52.0	53.1	
200					42.9	44.9	46.6	48.1	49.5	50.7	51.9	
220					41.7	43.6	45.3	46.9	48.3	49.5	50.7	
240						42.5	44.2	45.7	47.1	48.4	49.6	
260							43.1	44.6	46.1	47.3	48.5	
280							42.1	43.6	45.0	46.3	47.5	
300							41.1	42.6	44.1	45.4	46.5	

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

Takeoff Obstacle Limit Weight - High Altitude (24K Derate)**Flaps 5****OAT Adjustments**

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)								
	40	44	48	52	56	60	64	68	72
10 & BELOW	0	0	0	0	0	0	0	0	0
12	-0.6	-0.7	-0.8	-0.8	-0.9	-1.0	-1.0	-1.1	-1.2
14	-1.2	-1.4	-1.5	-1.7	-1.8	-2.0	-2.1	-2.2	-2.4
16	-1.8	-2.1	-2.3	-2.5	-2.7	-2.9	-3.1	-3.4	-3.6
18	-2.5	-2.8	-3.0	-3.3	-3.6	-3.9	-4.2	-4.5	-4.8
20	-3.1	-3.4	-3.8	-4.2	-4.5	-4.9	-5.2	-5.6	-6.0
22	-3.7	-4.1	-4.6	-5.0	-5.5	-5.9	-6.3	-6.8	-7.2
24	-4.3	-4.8	-5.4	-5.9	-6.4	-6.9	-7.5	-8.0	-8.5
26	-4.9	-5.5	-6.1	-6.7	-7.4	-8.0	-8.6	-9.2	-9.8
28	-5.5	-6.2	-6.9	-7.6	-8.3	-9.0	-9.7	-10.4	-11.1
30	-6.1	-6.9	-7.7	-8.5	-9.2	-10.0	-10.8	-11.6	-12.3
32	-6.6	-7.4	-8.3	-9.2	-10.0	-10.9	-11.8	-12.6	-13.5
34	-7.0	-7.9	-8.9	-9.9	-10.8	-11.8	-12.8	-13.7	-14.7
36	-7.4	-8.4	-9.5	-10.6	-11.6	-12.7	-13.7	-14.8	-15.8
38	-7.8	-8.9	-10.1	-11.2	-12.4	-13.6	-14.7	-15.9	-17.0
40	-8.2	-9.5	-10.7	-11.9	-13.2	-14.4	-15.7	-16.9	-18.2
42	-8.2	-9.6	-11.0	-12.4	-13.8	-15.2	-16.6	-18.0	-19.4
44	-8.2	-9.7	-11.3	-12.8	-14.4	-16.0	-17.5	-19.1	-20.7
46	-8.1	-9.8	-11.6	-13.3	-15.0	-16.7	-18.5	-20.2	-21.9
48	-8.1	-10.0	-11.9	-13.7	-15.6	-17.5	-19.4	-21.3	-23.2
50	-8.1	-10.1	-12.2	-14.2	-16.2	-18.3	-20.3	-22.4	-24.4

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)								
	40	44	48	52	56	60	64	68	72
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-1.8	-2.0	-2.2	-2.3	-2.5	-2.7	-2.9	-3.1	-3.2
12000	-3.6	-3.9	-4.2	-4.6	-4.9	-5.2	-5.6	-5.9	-6.2
13000	-5.3	-5.8	-6.3	-6.7	-7.2	-7.7	-8.2	-8.7	-9.2
14000	-6.8	-7.5	-8.1	-8.8	-9.4	-10.1	-10.7	-11.4	-12.1
14500	-7.5	-8.3	-9.0	-9.8	-10.5	-11.3	-11.9	-12.7	-13.5

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)								
	40	44	48	52	56	60	64	68	72
15 TW	-6.3	-6.1	-5.9	-5.7	-5.5	-5.3	-5.1	-4.9	-4.7
10 TW	-4.2	-4.1	-3.9	-3.8	-3.7	-3.5	-3.4	-3.2	-3.1
5 TW	-2.1	-2.0	-2.0	-1.9	-1.8	-1.8	-1.7	-1.6	-1.6
0	0	0	0	0	0	0	0	0	0
10 HW	0.8	0.7	0.7	0.6	0.6	0.5	0.5	0.4	0.4
20 HW	1.6	1.5	1.4	1.3	1.2	1.0	0.9	0.8	0.7
30 HW	2.4	2.2	2.1	1.9	1.7	1.6	1.4	1.2	1.1
40 HW	3.2	3.0	2.8	2.5	2.3	2.1	1.9	1.7	1.4

With engine bleed for packs off, increase weight by 700 kg.

With engine anti-ice on, decrease weight by 1950 kg.

With engine and wing anti-ice on, decrease weight by 2950 kg (optional system).

Intentionally
Blank

Performance Dispatch

Enroute

Chapter PD

Section 11

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
80	32100	-9	34600*	34600*	34600*	33200	31700
75	33500	-12	36100*	36100*	36100	34500	33100
70	35000	-15	37500*	37500*	37500	36000	34500
65	36500	-17	38900*	38900*	38900*	37500	36100
60	38200	-17	40400*	40400*	40400*	39200	37800
55	40000	-17	41000	41000	41000	41000	39600
50	41000	-17	41000	41000	41000	41000	41000
45	41000	-17	41000	41000	41000	41000	41000
40	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
80	32100	-3	33400*	33400*	33400*	33200	31700
75	33500	-6	35200*	35200*	35200*	34500	33100
70	35000	-9	36700*	36700*	36700*	36000	34500
65	36500	-12	38100*	38100*	38100*	37500	36100
60	38200	-12	39600*	39600*	39600*	39200	37800
55	40000	-12	41000	41000	41000	41000	39600
50	41000	-12	41000	41000	41000	41000	41000
45	41000	-12	41000	41000	41000	41000	41000
40	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
80	32100	3	29300*	29300*	29300*	29300*	29300*
75	33500	0	33200*	33200*	33200*	33200*	33100
70	35000	-4	35400*	35400*	35400*	35400*	34500
65	36500	-6	36900*	36900*	36900*	36900*	36100
60	38200	-6	38400*	38400*	38400*	38400*	37800
55	40000	-6	39900*	39900*	39900*	39900*	39600
50	41000	-6	41000	41000	41000	41000	41000
45	41000	-6	41000	41000	41000	41000	41000
40	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
271	253	237	223	211	200	191	182	174	167	161
527	496	468	443	420	400	383	367	352	339	326
783	738	698	662	630	600	575	551	530	510	492
1039	981	928	881	839	800	767	736	708	682	658
1294	1223	1158	1100	1048	1000	959	921	886	853	823
1550	1465	1388	1319	1257	1200	1151	1105	1063	1024	989
1805	1708	1618	1538	1466	1400	1343	1290	1241	1196	1154
2061	1950	1848	1758	1676	1600	1535	1474	1418	1367	1320
2317	2193	2079	1977	1885	1800	1727	1659	1596	1538	1485
2573	2435	2309	2196	2094	2000	1919	1844	1774	1710	1651
2829	2678	2539	2415	2303	2200	2111	2028	1952	1881	1816
3085	2920	2770	2635	2512	2400	2303	2213	2129	2052	1982
3341	3163	3000	2854	2722	2600	2495	2398	2307	2224	2147
3597	3406	3230	3073	2931	2800	2687	2582	2485	2395	2313
3853	3648	3460	3292	3140	3000	2880	2767	2663	2566	2478
4109	3891	3690	3512	3349	3200	3072	2952	2841	2738	2644
4365	4133	3921	3731	3559	3400	3264	3137	3018	2909	2809
4620	4375	4151	3950	3768	3600	3456	3321	3196	3081	2975
4876	4618	4381	4169	3977	3800	3648	3506	3374	3252	3140
5132	4860	4611	4388	4186	4000	3840	3691	3552	3424	3306
5388	5103	4841	4607	4395	4200	4032	3875	3730	3595	3472
5643	5345	5072	4827	4605	4400	4224	4060	3908	3767	3637
5899	5588	5302	5046	4814	4600	4416	4245	4086	3938	3803
6155	5830	5532	5265	5023	4800	4609	4430	4263	4110	3968
6411	6073	5763	5485	5232	5000	4801	4614	4441	4281	4134
6667	6315	5993	5704	5442	5200	4993	4799	4619	4452	4299
6923	6558	6223	5923	5651	5400	5185	4983	4796	4624	4465
7179	6801	6454	6142	5860	5600	5377	5168	4974	4795	4630
7435	7043	6684	6362	6069	5800	5569	5352	5152	4966	4796
7691	7286	6914	6581	6279	6000	5761	5537	5329	5137	4961

.80M Trip Fuel and Time**Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.5	0:36	1.5	0:36	1.5	0:36	1.4	0:36	1.5	0:36
400	2.7	1:01	2.6	1:01	2.5	1:02	2.4	1:02	2.4	1:02
600	3.8	1:26	3.7	1:27	3.5	1:28	3.4	1:28	3.3	1:28
800	5.0	1:52	4.8	1:53	4.5	1:54	4.4	1:54	4.2	1:54
1000	6.2	2:17	5.9	2:18	5.6	2:20	5.3	2:20	5.2	2:20
1200	7.4	2:43	7.0	2:44	6.6	2:45	6.4	2:45	6.1	2:45
1400	8.6	3:08	8.1	3:10	7.7	3:11	7.4	3:11	7.1	3:11
1600	9.8	3:34	9.2	3:35	8.8	3:37	8.4	3:37	8.1	3:37
1800	11.0	3:59	10.3	4:01	9.8	4:03	9.4	4:03	9.0	4:03
2000	12.1	4:24	11.5	4:27	10.9	4:29	10.4	4:29	10.0	4:29
2200	13.4	4:50	12.6	4:52	12.0	4:55	11.4	4:55	11.0	4:55
2400	14.6	5:15	13.8	5:18	13.1	5:21	12.5	5:21	12.1	5:21
2600	15.8	5:41	14.9	5:44	14.2	5:46	13.5	5:46	13.1	5:46
2800	17.0	6:06	16.1	6:09	15.3	6:12	14.6	6:12	14.1	6:12
3000	18.2	6:32	17.2	6:35	16.3	6:38	15.6	6:38	15.1	6:38
3200	19.5	6:57	18.4	7:01	17.5	7:04	16.7	7:04	16.2	7:04
3400	20.7	7:23	19.6	7:26	18.6	7:30	17.8	7:30	17.3	7:30
3600	22.0	7:48	20.8	7:52	19.8	7:56	18.9	7:56	18.4	7:56
3800	23.3	8:13	22.0	8:18	20.9	8:22	20.0	8:22	19.5	8:22
4000	24.5	8:39	23.2	8:43	22.1	8:48	21.1	8:48	20.6	8:48
4200	25.8	9:04	24.4	9:09	23.3	9:13	22.3	9:13		
4400	27.1	9:30	25.7	9:35	24.5	9:39	23.5	9:39		
4600	28.4	9:55	26.9	10:00	25.7	10:05	24.7	10:05		
4800	29.7	10:21	28.2	10:26	26.9	10:31	25.9	10:31		
5000	31.0	10:46	29.4	10:52	28.1	10:57	27.1	10:57		
5200	32.4	11:12	30.7	11:17	29.4	11:23				
5400	33.7	11:37	32.0	11:43	30.6	11:49				
5600	35.1	12:02	33.3	12:09	31.9	12:15				
5800	36.4	12:28	34.7	12:34	33.2	12:41				
6000	37.8	12:53	36.0	13:00	34.5	13:06				

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	LANDING WEIGHT (1000 KG)						
	40	45	50	55	60	65	70
5	-0.1	0.0	0.0	0.2	0.6	0.9	1.4
10	-0.1	-0.1	0.0	0.6	1.3	2.2	3.4
15	-0.2	-0.1	0.0	1.0	2.2	3.9	6.1
20	-0.3	-0.2	0.0	1.4	3.3	5.9	9.4
25	-0.4	-0.2	0.0	2.0	4.5	8.3	13.4
30	-0.5	-0.3	0.0	2.7	6.0	11.1	18.1
35	-0.7	-0.4	0.0	3.4	7.7	14.3	23.3
40	-0.9	-0.5	0.0	4.3	9.5	17.8	29.3

Based on .280/.80 climb, .80M Cruise and .80/280/250 descent.

.80M Step Climb
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
1309	1233	1165	1104	1050	1000	955	914	876	841	809
1820	1717	1625	1542	1468	1400	1338	1282	1230	1182	1137
2332	2202	2085	1981	1886	1800	1721	1650	1583	1522	1466
2843	2686	2545	2419	2304	2200	2105	2017	1937	1863	1794
3354	3170	3006	2857	2722	2600	2488	2385	2291	2204	2123
3865	3655	3466	3295	3141	3000	2871	2753	2645	2544	2451
4376	4139	3925	3733	3559	3400	3255	3121	2999	2885	2780
4887	4623	4385	4171	3977	3800	3638	3490	3353	3226	3109
5398	5106	4845	4609	4395	4200	4022	3858	3707	3567	3437
5908	5590	5305	5047	4813	4600	4405	4226	4061	3908	3766
6418	6073	5764	5485	5231	5000	4788	4594	4415	4249	4095
6927	6557	6223	5922	5649	5400	5172	4962	4769	4590	4424
7437	7039	6682	6360	6067	5800	5555	5331	5123	4932	4754
7946	7522	7141	6797	6485	6200	5939	5699	5478	5273	5083
8454	8005	7600	7235	6903	6600	6323	6068	5832	5615	5413
8963	8487	8059	7672	7321	7000	6706	6436	6187	5957	5743

Trip Fuel and Time Required (1000 KG)

AIR DIST (NM)	TRIP FUEL (1000 KG)						TIME (HRS:MIN)
	LANDING WEIGHT (1000 KG)						
	40	45	50	55	60	65	
1000	4.6	4.8	5.1	5.4	5.8	6.2	2:22
1400	6.3	6.6	6.9	7.4	8.0	8.5	3:14
1800	8.0	8.4	8.9	9.5	10.2	10.9	4:06
2200	9.7	10.2	10.8	11.7	12.5	13.3	4:59
2600	11.4	12.0	12.9	13.9	14.9	15.9	5:51
3000	13.2	14.0	14.9	16.1	17.3	18.5	6:43
3400	15.0	15.9	17.1	18.4	19.8	21.2	7:35
3800	16.9	18.0	19.3	20.8	22.4	23.9	8:27
4200	18.8	20.1	21.6	23.3	25.1	26.8	9:19
4600	20.8	22.2	23.9	25.8	27.8	29.7	10:11
5000	22.8	24.4	26.3	28.4	30.6	32.7	11:02
5400	24.9	26.7	28.8	31.1	33.5	35.8	11:54
5800	27.1	29.0	31.3	33.9	36.5		12:46
6200	29.3	31.4	34.0	36.7			13:37
6600	31.5	33.9	36.7				14:28
7000	33.8	36.5					15:19

Based on 280/.80 climb, .80M cruise and .80/280/250 descent.
Valid for all pressure altitudes with 4000 ft step climb to 2000 ft above optimum altitude.

Short Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
94	80	69	61	55	50	46	42	39	36	34
160	143	129	118	108	100	93	87	82	77	73
226	205	188	173	161	150	141	132	125	118	112
291	266	246	229	213	200	188	178	168	160	152
354	327	303	283	266	250	236	224	213	202	193
417	387	361	338	318	300	284	270	257	245	234
479	446	418	392	370	350	332	316	301	288	276
543	507	475	447	422	400	380	362	345	330	317
608	568	533	502	475	450	428	408	389	373	357
674	630	592	558	527	500	475	453	433	414	397

Trip Fuel and Time Required (1000 KG)

AIR DIST (NM)		LANDING WEIGHT (1000 KG)						TIME (HRS:MIN)
		40	45	50	55	60	65	
50	FUEL (1000 KG)	0.5	0.5	0.6	0.6	0.6	0.7	0:14
	ALT (FT)	12000	11000	11000	9000	9000	8000	
100	FUEL (1000 KG)	0.8	0.9	0.9	0.9	1.0	1.0	0:23
	ALT (FT)	18000	18000	16000	16000	17000	16000	
150	FUEL (1000 KG)	1.1	1.1	1.2	1.2	1.3	1.4	0:30
	ALT (FT)	26000	24000	24000	24000	23000	22000	
200	FUEL (1000 KG)	1.3	1.4	1.4	1.5	1.6	1.7	0:38
	ALT (FT)	33000	29000	28000	27000	26000	25000	
250	FUEL (1000 KG)	1.5	1.6	1.7	1.8	1.9	2.0	0:44
	ALT (FT)	41000	35000	37000	35000	31000	31000	
300	FUEL (1000 KG)	1.7	1.8	1.9	2.0	2.1	2.2	0:50
	ALT (FT)	41000	41000	39000	37000	35000	35000	
350	FUEL (1000 KG)	1.9	2.0	2.1	2.2	2.4	2.5	0:57
	ALT (FT)	41000	41000	39000	37000	35000	35000	
400	FUEL (1000 KG)	2.0	2.2	2.3	2.5	2.6	2.7	1:03
	ALT (FT)	41000	41000	41000	39000	37000	35000	
450	FUEL (1000 KG)	2.2	2.4	2.5	2.7	2.8	3.0	1:10
	ALT (FT)	41000	41000	41000	39000	37000	35000	
500	FUEL (1000 KG)	2.4	2.6	2.7	2.9	3.1	3.3	1:17
	ALT (FT)	41000	41000	41000	39000	37000	35000	

Based on 280/78 climb, Long Range Cruise speed and .78/80/250 descent.

Holding Planning
Flaps Up

WEIGHT (1000 KG)	TOTAL FUEL FLOW (KG/HR)									
	PRESSURE ALTITUDE (FT)									
	1500	5000	10000	15000	20000	25000	30000	35000	40000	41000
80	2770	2730	2700	2690	2640	2640	2710	2900		
75	2610	2570	2540	2530	2480	2470	2520	2640		
70	2460	2410	2380	2360	2320	2290	2340	2410		
65	2300	2260	2220	2200	2170	2110	2160	2200	2480	
60	2150	2100	2070	2040	2010	1950	1980	2020	2180	2250
55	2000	1950	1910	1880	1850	1800	1810	1840	1940	1980
50	1850	1790	1750	1720	1690	1690	1660	1680	1750	1770
45	1730	1680	1630	1590	1560	1530	1510	1510	1560	1580
40	1590	1530	1480	1440	1410	1380	1370	1340	1380	1400

This table includes 5% additional fuel for holding in a racetrack pattern.

Flight Crew Oxygen Requirements

Required Pressure (PSI) for 76 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	735	1055	1360
45	113	725	1040	1340
40	104	715	1020	1320
35	95	700	1005	1300
30	86	690	990	1280
25	77	680	975	1255
20	68	670	960	1240
15	59	655	940	1215
10	50	645	925	1195
5	41	635	910	1175
0	32	620	890	1150
-5	23	610	875	1130
-10	14	600	860	1110

Required Pressure (PSI) for 114/115 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	530	735	945
45	113	520	725	930
40	104	510	715	915
35	95	505	700	900
30	86	495	690	885
25	77	485	680	870
20	68	480	670	860
15	59	470	655	840
10	50	460	645	830
5	41	455	635	815
0	32	445	620	800
-5	23	440	610	785
-10	14	430	600	770

ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 KG)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	44.5	43.1	41.5
28	48.1	46.5	44.9
26	51.8	50.1	48.4
24	56.2	54.3	52.4
22	61.2	59.0	56.9
20	66.6	64.1	61.5
18	71.4	68.7	65.9
16	76.2	73.5	70.5
14	80.6	78.0	75.3
12	85.4	82.4	79.1

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 KG)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-2.0	-1.9	-1.8	-1.8	-1.7	-1.5	-1.4	-1.3	-1.2
ENGINE & WING	-7.8	-7.3	-6.8	-6.8	-6.6	-6.0	-5.4	-5.0	-5.0

ALL ENGINES**Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
292	267	247	229	213	200	188	178	168	160	152
603	548	501	462	429	400	375	353	333	315	299
915	828	756	696	644	600	561	527	497	471	446
1226	1108	1011	929	860	800	748	702	662	626	594
1538	1389	1266	1163	1075	1000	935	877	827	781	741
1850	1669	1520	1396	1291	1200	1121	1052	991	937	888
2161	1949	1775	1630	1506	1400	1308	1227	1156	1092	1035
2473	2230	2030	1863	1722	1600	1494	1402	1320	1248	1183
2785	2510	2285	2097	1937	1800	1681	1577	1485	1403	1330

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)								
	40	45	50	55	60	65	70	75	80
200	1.7	1.7	1.8	1.8	1.9	2.0	2.1	2.1	2.2
300	2.3	2.4	2.5	2.6	2.7	2.8	2.9	3.0	3.1
400	3.0	3.1	3.2	3.3	3.4	3.6	3.7	3.8	3.9
500	3.7	3.8	3.9	4.1	4.2	4.3	4.5	4.6	4.8
600	4.3	4.5	4.6	4.8	5.0	5.1	5.3	5.5	5.6
700	5.0	5.1	5.3	5.5	5.7	5.9	6.1	6.3	6.5
800	5.7	5.8	6.0	6.3	6.5	6.7	6.9	7.1	7.3
900	6.3	6.5	6.7	7.0	7.2	7.4	7.7	7.9	8.1
1000	7.0	7.2	7.4	7.7	7.9	8.2	8.4	8.7	9.0
1100	7.6	7.8	8.1	8.4	8.7	9.0	9.2	9.5	9.8
1200	8.3	8.5	8.8	9.1	9.4	9.7	10.0	10.3	10.6
1300	8.9	9.2	9.5	9.8	10.1	10.5	10.8	11.1	11.5
1400	9.6	9.8	10.2	10.5	10.9	11.2	11.6	11.9	12.3
1500	10.2	10.5	10.8	11.2	11.6	12.0	12.3	12.7	13.1
1600	10.9	11.2	11.5	11.9	12.3	12.7	13.1	13.5	13.9
1700	11.5	11.8	12.2	12.6	13.0	13.4	13.8	14.3	14.7
1800	12.2	12.5	12.8	13.3	13.7	14.2	14.6	15.0	15.5

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.3.% per 10°C above ISA.

-When icing conditions are forecast, use the greater of engine and wing anti-ice on (12%) for the total forecast time or engine and wing anti-ice on and ice drag (16%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP

MAX CONTINUOUS THRUST

**Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
310	279	254	233	215	200	187	175	165	156	148
621	559	509	466	431	400	373	350	330	311	295
933	840	764	700	646	600	560	525	494	467	442
1245	1120	1018	933	862	800	747	700	659	622	589
1556	1401	1273	1167	1077	1000	933	875	823	778	737
1868	1681	1528	1400	1292	1200	1120	1050	988	933	884
2180	1961	1783	1634	1508	1400	1307	1225	1153	1088	1031
2492	2242	2037	1867	1723	1600	1493	1400	1317	1244	1178
2803	2522	2292	2101	1939	1800	1680	1575	1482	1399	1326

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)								
	40	45	50	55	60	65	70	75	80
200	1.4	1.5	1.6	1.6	1.7	1.8	1.9	1.9	2.0
300	2.0	2.1	2.2	2.3	2.4	2.5	2.6	2.7	2.8
400	2.6	2.7	2.8	3.0	3.1	3.2	3.4	3.5	3.6
500	3.2	3.3	3.5	3.6	3.8	4.0	4.1	4.3	4.4
600	3.7	3.9	4.1	4.3	4.5	4.7	4.9	5.1	5.2
700	4.3	4.5	4.7	5.0	5.2	5.4	5.6	5.8	6.0
800	4.9	5.1	5.4	5.6	5.9	6.1	6.4	6.6	6.8
900	5.5	5.7	6.0	6.3	6.5	6.8	7.1	7.3	7.6
1000	6.0	6.3	6.6	6.9	7.2	7.5	7.8	8.1	8.4
1100	6.6	6.9	7.2	7.5	7.9	8.2	8.5	8.8	9.2
1200	7.1	7.5	7.8	8.2	8.5	8.9	9.2	9.6	9.9
1300	7.7	8.0	8.4	8.8	9.2	9.6	10.0	10.3	10.7
1400	8.2	8.6	9.0	9.4	9.9	10.3	10.7	11.1	11.5
1500	8.8	9.2	9.6	10.1	10.5	11.0	11.4	11.8	12.2
1600	9.3	9.8	10.2	10.7	11.2	11.6	12.1	12.5	13.0
1700	9.9	10.4	10.8	11.3	11.8	12.3	12.8	13.2	13.7
1800	10.4	10.9	11.4	11.9	12.4	13.0	13.5	14.0	14.5

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.5% per 10°C above ISA.
- When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
267	250	235	222	210	200	190	181	173	166	159
538	503	473	445	421	400	380	362	346	331	318
812	758	711	670	633	600	570	543	518	496	475
1088	1015	951	894	844	800	759	723	690	660	632
1365	1272	1191	1119	1056	1000	949	903	861	823	788
1643	1530	1431	1345	1268	1200	1138	1083	1032	987	945
1921	1788	1672	1570	1480	1400	1327	1262	1204	1150	1101
2198	2045	1912	1795	1692	1600	1517	1442	1375	1313	1257
2475	2302	2152	2020	1903	1800	1706	1622	1546	1477	1414

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)								
	40	45	50	55	60	65	70	75	80
200	1.4	1.4	1.5	1.5	1.6	1.6	1.7	1.8	1.8
300	1.8	1.9	1.9	2.0	2.1	2.2	2.3	2.4	2.6
400	2.2	2.3	2.4	2.5	2.7	2.8	3.0	3.1	3.3
500	2.6	2.7	2.9	3.1	3.2	3.4	3.6	3.8	4.0
600	3.0	3.2	3.4	3.6	3.8	4.0	4.2	4.5	4.7
700	3.3	3.6	3.9	4.1	4.3	4.6	4.9	5.1	5.4
800	3.7	4.0	4.3	4.6	4.9	5.2	5.5	5.8	6.1
900	4.1	4.4	4.8	5.1	5.4	5.8	6.1	6.5	6.8
1000	4.5	4.9	5.2	5.6	6.0	6.3	6.7	7.1	7.5
1100	4.8	5.3	5.7	6.1	6.5	6.9	7.3	7.8	8.2
1200	5.2	5.7	6.1	6.6	7.0	7.5	7.9	8.4	8.9
1300	5.6	6.1	6.6	7.0	7.5	8.0	8.5	9.0	9.5
1400	5.9	6.5	7.0	7.5	8.0	8.6	9.1	9.7	10.2
1500	6.3	6.9	7.4	8.0	8.6	9.1	9.7	10.3	10.9
1600	6.7	7.3	7.9	8.5	9.1	9.7	10.3	10.9	11.5
1700	7.0	7.7	8.3	8.9	9.6	10.2	10.8	11.5	12.2
1800	7.4	8.0	8.7	9.4	10.1	10.7	11.4	12.1	12.8

Based on: Driftdown to and cruise at level off altitude, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.5% per 10°C above ISA.
- When icing conditions are forecast, use the greater of the engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (26%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

Intentionally
Blank

Performance Dispatch Landing

Chapter PD Section 12

Landing Field Limit Weight - Dry Runway

Flaps 40

Based on anti-skid operative and automatic speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1000			900	1000	1070	1140	1200	1270
1200	890	980	1090	1200	1270	1350	1420	1490
1400	1060	1160	1280	1400	1480	1560	1630	1710
1600	1240	1350	1470	1600	1680	1770	1850	1940
1800	1420	1540	1670	1800	1890	1980	2070	2160
2000	1600	1720	1860	2000	2090	2190	2290	2380
2200	1780	1910	2050	2200	2290	2400	2500	2600
2400	1960	2100	2250	2400	2500	2610	2720	2820
2600	2140	2280	2440	2600	2700	2820	2940	3050
2800	2260	2410	2570	2800	2910	3030	3150	
3000	2330	2480	2640	3000	3110			
3200	2400	2550	2710	3200				
3400	2480	2630	2780					
3600	2550	2700	2840					
3800	2620	2770	2910					
4000	2690	2840	2980					
4200	2760	2910	3050					
4400	2830	2980	3120					
4600	2900	3050	3190					
4800	2980	3130						

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
1200	47.3	44.5	41.8	39.3		
1400	57.5	54.8	51.6	48.5	45.5	42.6
1600	66.3	63.0	60.0	57.0	54.1	50.6
1800	75.7	71.5	67.6	64.0	60.8	57.7
2000		80.0	75.8	71.5	67.5	63.8
2200			83.4	79.1	74.6	70.3
2400					81.5	77.1
2600						83.2

Decrease field limit weight by 4500 kg when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1800				1800	1940	2110	2250	2420
2000			1750	2000	2140	2320	2470	2650
2200		1700	1950	2200	2350	2530	2690	2870
2400	1640	1890	2140	2400	2560	2740	2910	3090
2600	1820	2080	2330	2600	2760	2950	3130	3320
2800	2000	2260	2530	2800	2970	3160	3350	3540
3000	2180	2450	2720	3000	3170	3380	3560	3760
3200	2360	2630	2910	3200	3380	3590	3780	3980
3400	2540	2820	3100	3400	3590	3800	4000	4210
3600	2720	3010	3300	3600	3790	4010	4220	4430
3800	2900	3190	3490	3800	4000	4220	4440	4650
4000	3080	3380	3680	4000	4200	4440	4650	4880
4200	3260	3570	3880	4200	4410	4650	4870	5100
4400	3440	3750	4070	4400	4620	4860	5090	5320
4600	3620	3940	4260	4600	4820	5070	5310	5550
4800	3800	4120	4450	4800	5030	5280	5530	5770
5000	3980	4310	4650	5000	5230	5490	5750	
5200	4160	4500	4840	5200	5440	5710		
5400	4340	4680	5030	5400	5650			
5600	4520	4870	5230	5600				

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
2200	42.4	39.8				
2400	47.5	44.6	41.5	38.8		
2600	52.7	49.5	46.1	43.1	40.2	
2800	57.9	54.4	50.8	47.5	44.3	41.3
3000	63.0	59.3	55.4	51.8	48.5	45.1
3200	68.5	64.1	60.0	56.1	52.5	48.9
3400	74.2	69.2	64.4	60.3	56.4	52.6
3600	79.7	74.5	69.2	64.5	60.3	56.3
3800		79.6	74.1	68.9	64.2	59.9
4000			79.0	73.5	68.4	63.6
4200			83.5	78.2	72.6	67.4
4400				82.4	77.1	71.4
4600					81.1	75.5
4800						79.4
5000						83.1

Landing Field Limit Weight - Dry Runway - High Altitudes**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	1100	1140	1160	1200	1250	1350	1430	1500
1400	1230	1290	1330	1400	1460	1560	1640	1720
1600	1360	1430	1500	1600	1670	1770	1850	1940
1800	1490	1580	1670	1800	1880	1980	2070	2160
2000	1620	1730	1850	2000	2080	2190	2280	2380
2200	1760	1880	2020	2200	2290	2400	2500	2600
2400	1890	2020	2190	2400	2500	2600	2710	2820
2600	2020	2170	2360	2600	2710	2810	2930	3040
2800	2150	2320	2530	2800	2920	3020	3140	3260
3000	2280	2460	2710	3000	3130	3230	3360	3480
3200	2410	2610	2880	3200	3340	3440	3570	3700
3400	2540	2760	3050	3400	3550	3650	3780	3930
3600	2670	2900	3220	3600	3760	3860	4000	
3800	2800	3050	3390	3800	3970			
4000	2940	3200	3570	4000				
4200	3070	3350	3740					
4400	3200	3490	3910					
4600	3330	3640						
4800	3460	3790						
5000	3590	3930						

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
1400	42.6	41.2	39.8	38.5		
1600	50.6	48.9	47.3	45.7	44.1	43.3
1800	57.7	56.1	54.6	52.8	51.0	50.1
2000	63.8	62.1	60.4	58.8	57.2	56.4
2200	70.3	68.2	66.2	64.3	62.6	61.7
2400	77.1	74.7	72.4	70.3	68.2	67.1
2600	83.2	80.9	78.7	76.4	74.0	72.8
2800			82.1	80.5	78.9	78.1
3000				82.5	80.9	80.1
3200					82.7	81.9

Decrease field limit weight by 3550 kg when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway - High Altitudes
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
2600				2600	2790	2970	3150	3340
2800			2520	2800	2990	3180	3360	3560
3000		2440	2720	3000	3200	3390	3580	3780
3200		2620	2910	3200	3400	3600	3790	4000
3400	2530	2810	3100	3400	3600	3800	4010	4220
3600	2710	3000	3300	3600	3800	4010	4220	4440
3800	2890	3190	3490	3800	4010	4220	4440	4660
4000	3070	3370	3680	4000	4210	4430	4650	4880
4200	3250	3560	3880	4200	4410	4640	4870	5100
4400	3430	3750	4070	4400	4610	4840	5080	5320
4600	3610	3930	4260	4600	4820	5050	5300	5540
4800	3790	4120	4460	4800	5020	5260	5520	5750
5000	3970	4310	4650	5000	5220	5470	5730	5970
5200	4160	4500	4840	5200	5430	5680	5950	6190
5400	4340	4680	5040	5400	5630	5880	6160	6410
5600	4520	4870	5230	5600	5830	6090	6380	6630
5800	4700	5060	5420	5800	6030	6300	6590	
6000	4880	5250	5610	6000	6240	6510		
6200	5060	5430	5810	6200	6440	6720		
6400	5240	5620	6000	6400	6640			

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
2800	41.3	40.0	38.7			
3000	45.1	43.6	42.2	40.9	39.5	38.8
3200	48.9	47.3	45.7	44.2	42.7	42.0
3400	52.6	50.9	49.2	47.6	46.0	45.2
3600	56.3	54.5	52.7	50.9	49.2	48.3
3800	59.9	58.0	56.1	54.3	52.4	51.5
4000	63.6	61.5	59.5	57.6	55.6	54.6
4200	67.4	65.0	62.9	60.9	58.8	57.8
4400	71.4	68.9	66.4	64.1	62.0	60.9
4600	75.5	72.8	70.2	67.6	65.2	64.0
4800	79.4	76.8	73.9	71.3	68.6	67.3
5000	83.1	80.4	77.8	74.9	72.1	70.7
5200			81.2	78.6	75.7	74.2
5400				81.8	79.1	77.7
5600					82.3	80.8

Landing Field Limit Weight - Wet Runway**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1000				1000	1080	1150	1220	1290
1200		960	1080	1200	1280	1360	1430	1520
1400	1040	1140	1270	1400	1480	1570	1650	1740
1600	1210	1330	1460	1600	1690	1780	1870	1960
1800	1390	1520	1660	1800	1890	1990	2090	2180
2000	1570	1700	1850	2000	2100	2200	2300	2400
2200	1750	1890	2040	2200	2300	2410	2520	2630
2400	1930	2070	2240	2400	2510	2620	2740	2850
2600	2110	2260	2430	2600	2710	2830	2950	3070
2800	2290	2450	2620	2800	2910	3040	3170	3290
3000	2470	2630	2810	3000	3120	3250	3390	3510
3200	2590	2770	2950	3200	3320	3460	3600	
3400	2660	2840	3020	3400	3530	3670		
3600	2740	2910	3080	3600				
3800	2810	2980	3150					
4000	2880	3050	3220					
4200	2950	3120	3290					
4400	3020	3190	3360					
4600	3090	3270	3430					
4800	3160	3340	3500					

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
1200	38.9					
1400	48.3	45.4	42.7	40.1		
1600	57.2	54.4	51.2	48.1	45.1	42.2
1800	64.7	61.6	58.7	55.7	52.6	49.2
2000	72.8	68.8	65.2	61.9	58.8	55.8
2200	80.6	76.5	72.2	68.2	64.5	61.1
2400		83.4	79.2	74.8	70.6	66.6
2600				81.2	76.9	72.3
2800					82.6	78.2
3000						83.4

Decrease field limit weight by 4500 kg when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1800					1950	2140	2300	2490
2000				2000	2160	2350	2520	2710
2200			1920	2200	2360	2560	2730	2930
2400			2110	2400	2570	2770	2950	3150
2600		2020	2310	2600	2770	2980	3170	3380
2800	1920	2210	2500	2800	2980	3190	3390	3600
3000	2100	2400	2690	3000	3190	3410	3610	3820
3200	2280	2580	2880	3200	3390	3620	3830	4050
3400	2460	2770	3080	3400	3600	3830	4040	4270
3600	2640	2950	3270	3600	3800	4040	4260	4490
3800	2820	3140	3460	3800	4010	4250	4480	4720
4000	3000	3330	3660	4000	4220	4470	4700	4940
4200	3180	3510	3850	4200	4420	4680	4920	5160
4400	3360	3700	4040	4400	4630	4890	5130	5390
4600	3540	3890	4230	4600	4830	5100	5350	5610
4800	3720	4070	4430	4800	5040	5310	5570	5830
5000	3900	4260	4620	5000	5250	5520	5790	6050
5200	4080	4440	4810	5200	5450	5740	6010	6280
5400	4260	4630	5010	5400	5660	5950	6230	6500
5600	4440	4820	5200	5600	5860	6160	6440	

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
2400	39.5					
2600	43.9	41.2	38.3			
2800	48.4	45.5	42.3	39.5		
3000	52.9	49.7	46.3	43.3	40.4	
3200	57.4	54.0	50.4	47.1	44.0	40.9
3400	61.9	58.2	54.4	50.9	47.6	44.3
3600	66.5	62.4	58.4	54.6	51.1	47.6
3800	71.5	66.7	62.3	58.3	54.5	50.9
4000	76.5	71.3	66.3	61.9	57.9	54.1
4200	81.0	75.9	70.5	65.6	61.3	57.2
4400		80.3	74.8	69.5	64.7	60.4
4600			79.0	73.5	68.4	63.6
4800			82.9	77.6	72.1	66.9
5000				81.3	75.9	70.4
5200					79.5	73.9
5400					82.9	77.5
5600						80.7

Landing Field Limit Weight - Wet Runway - High Altitudes**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200		1180	1180	1200	1240	1370	1450	1530
1400	1280	1330	1350	1400	1450	1580	1660	1750
1600	1410	1470	1520	1600	1660	1780	1880	1970
1800	1540	1620	1690	1800	1870	1990	2090	2190
2000	1670	1770	1870	2000	2080	2200	2300	2410
2200	1800	1910	2040	2200	2290	2410	2520	2630
2400	1930	2060	2210	2400	2500	2620	2730	2850
2600	2060	2210	2380	2600	2710	2830	2950	3070
2800	2200	2350	2550	2800	2920	3040	3160	3290
3000	2330	2500	2730	3000	3130	3250	3380	3510
3200	2460	2650	2900	3200	3340	3450	3590	3730
3400	2590	2800	3070	3400	3550	3660	3810	3950
3600	2720	2940	3240	3600	3760	3870	4020	4170
3800	2850	3090	3410	3800	3970	4080	4230	4390
4000	2980	3240	3590	4000	4180	4290	4450	
4200	3110	3380	3760	4200	4390	4500		
4400	3240	3530	3930	4400	4600			
4600	3380	3680	4100	4600				
4800	3510	3830	4270					
5000	3640	3970	4450					

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
1600	42.2	40.8	39.5	38.2		
1800	49.2	47.6	46.0	44.4	42.9	42.1
2000	55.8	54.2	52.4	50.6	48.9	48.0
2200	61.1	59.5	57.9	56.3	54.8	53.9
2400	66.6	64.7	62.9	61.2	59.5	58.7
2600	72.3	70.2	68.1	66.1	64.2	63.3
2800	78.2	75.9	73.5	71.3	69.2	68.1
3000	83.4	81.2	78.9	76.6	74.2	73.0
3200			81.9	80.3	78.7	77.8
3400				82.1	80.5	79.7
3600					82.1	81.2
3800						82.8

Decrease field limit weight by 3550 kg when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway - High Altitudes
Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
2600					2810	3010	3200	3420
2800				2800	3020	3220	3410	3640
3000				3000	3220	3430	3630	3850
3200			2880	3200	3420	3640	3840	4070
3400			3080	3400	3620	3840	4060	4290
3600		2940	3270	3600	3830	4050	4270	4510
3800	2810	3130	3460	3800	4030	4260	4490	4730
4000	2990	3320	3660	4000	4230	4470	4710	4950
4200	3170	3500	3850	4200	4440	4680	4920	5170
4400	3350	3690	4040	4400	4640	4880	5140	5390
4600	3530	3880	4240	4600	4840	5090	5350	5610
4800	3710	4070	4430	4800	5040	5300	5570	5830
5000	3890	4250	4620	5000	5250	5510	5780	6050
5200	4070	4440	4820	5200	5450	5720	6000	6270
5400	4250	4630	5010	5400	5650	5920	6210	6490
5600	4430	4820	5200	5600	5850	6130	6430	6710
5800	4620	5000	5390	5800	6060	6340	6640	6920
6000	4800	5190	5590	6000	6260	6550	6860	7140
6200	4980	5380	5780	6200	6460	6760	7070	7360
6400	5160	5560	5970	6400	6660	6960	7290	7580

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
3200	40.9	39.7	38.4			
3400	44.3	42.8	41.5	40.1	38.8	38.1
3600	47.6	46.0	44.5	43.1	41.6	40.9
3800	50.9	49.2	47.6	46.0	44.4	43.6
4000	54.1	52.3	50.6	48.9	47.2	46.4
4200	57.2	55.4	53.6	51.8	50.0	49.1
4400	60.4	58.5	56.6	54.7	52.8	51.9
4600	63.6	61.5	59.5	57.6	55.6	54.6
4800	66.9	64.6	62.5	60.4	58.4	57.4
5000	70.4	67.9	65.5	63.3	61.2	60.1
5200	73.9	71.2	68.7	66.2	63.9	62.8
5400	77.5	74.7	72.0	69.4	66.8	65.5
5600	80.7	78.1	75.3	72.5	69.8	68.5
5800		81.2	78.6	75.7	72.9	71.5
6000			81.5	78.8	76.0	74.5
6200				81.7	79.0	77.6
6400					81.7	80.3
6600						83.0

Landing Climb Limit Weight**Valid for approach with Flaps 15 and landing with Flaps 40****Based on engine bleed for packs on and anti-ice off**

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	65.8					
52	126	67.5					
50	122	69.2	63.8				
48	118	70.6	65.4				
46	115	71.9	67.1	61.8			
44	111	73.1	68.3	63.3			
42	108	74.4	69.5	64.8	59.4		
40	104	75.8	70.7	65.9	60.7		
38	100	77.1	71.9	67.0	62.0	56.5	
36	97	78.4	73.2	68.3	63.2	57.5	
34	93	79.7	74.5	69.5	64.2	58.4	53.7
32	90	81.1	75.7	70.4	65.2	59.5	54.8
30	86	82.4	76.9	71.4	66.1	60.5	55.8
28	82	82.5	77.8	72.2	67.0	61.4	56.6
26	79	82.6	78.7	72.9	67.5	62.2	57.5
24	75	82.6	78.7	73.4	68.0	63.0	58.1
22	72	82.7	78.8	73.9	68.4	63.4	58.5
20	68	82.7	78.8	74.0	68.9	63.8	59.0
18	64	82.8	78.9	74.0	69.3	64.2	59.3
16	61	82.9	78.9	74.1	69.3	64.5	59.7
14	57	82.9	78.9	74.1	69.4	64.9	60.0
12	54	83.0	79.0	74.1	69.4	64.9	60.4
10	50	83.0	79.0	74.2	69.4	64.9	60.7
-40	-40	83.5	79.5	74.7	69.8	65.3	61.3

With engine bleed for packs off, increase weight by 1050 kg.**With engine anti-ice on, decrease weight by 250 kg.****With engine and wing anti-ice on, decrease weight by 800 kg .****When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 7300 kg.**

Landing Climb Limit Weight - High Altitudes
Valid for approach with Flaps 15 and landing with Flaps 40
Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	10000	11000	12000	13000	14000	14500
34	93	53.7					
32	90	54.8	52.4				
30	86	55.7	53.3	51.1			
28	82	56.6	54.2	52.0	49.8		
26	79	57.4	55.0	52.9	50.6	48.9	
24	75	58.0	55.7	53.4	51.3	49.3	48.4
22	72	58.5	56.2	54.0	51.8	49.7	48.7
20	68	58.9	56.6	54.4	52.2	50.0	49.0
18	64	59.3	57.0	54.7	52.6	50.4	49.3
16	61	59.6	57.3	55.1	52.9	50.7	49.7
14	57	60.0	57.7	55.4	53.2	51.0	50.0
12	54	60.3	58.0	55.8	53.5	51.3	50.3
10	50	60.7	58.4	56.1	53.9	51.7	50.6
-40	-40	61.3	59.7	58.1	56.1	54.2	53.2

With engine bleed for packs off, increase weight by 1100 kg.
With engine anti-ice on, decrease weight by 1600 kg.
With engine and wing anti-ice on, decrease weight by 2050 kg .
When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 5350 kg.

ENGINE INOP**ADVISORY INFORMATION****Go-Around Climb Gradient****Flaps 15****Based on engine bleed for packs on and anti-ice off**

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	4.20					
50	4.94	3.76				
46	5.49	4.47	3.32			
42	6.06	4.99	3.98	2.81		
38	6.63	5.52	4.47	3.40	2.20	
34	7.21	6.08	4.98	3.88	2.62	1.61
30	7.81	6.59	5.41	4.29	3.07	2.07
26	7.85	6.98	5.73	4.59	3.45	2.44
22	7.88	7.00	5.96	4.79	3.72	2.68
18	7.90	7.02	5.98	4.98	3.89	2.86
14	7.93	7.03	6.00	5.00	4.05	3.01
10	7.95	7.05	6.01	5.01	4.06	3.17

Gradient Adjustment for Weight (%)

WEIGHT (1000 KG)	REFERENCE GO-AROUND GRADIENT (%)							
	1	2	3	4	5	6	7	8
80	-3.38	-3.71	-4.04	-4.37	-4.70	-5.03	-5.35	-5.68
75	-2.92	-3.20	-3.48	-3.76	-4.04	-4.32	-4.60	-4.88
70	-2.37	-2.59	-2.82	-3.04	-3.27	-3.49	-3.72	-3.94
65	-1.72	-1.88	-2.04	-2.20	-2.36	-2.53	-2.69	-2.85
60	-0.95	-1.04	-1.12	-1.21	-1.29	-1.38	-1.47	-1.55
55	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
50	1.04	1.16	1.27	1.39	1.51	1.62	1.74	1.85
45	2.38	2.63	2.88	3.14	3.39	3.64	3.90	4.15
40	4.05	4.48	4.91	5.35	5.78	6.21	6.65	7.08

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)										
	0	1	2	3	4	5	6	7	8	9	10
VREF40	-0.24	-0.25	-0.25	-0.26	-0.26	-0.27	-0.27	-0.28	-0.29	-0.29	-0.30
VREF40+5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VREF40+10	0.13	0.12	0.12	0.12	0.12	0.12	0.11	0.11	0.11	0.11	0.11
VREF40+15	0.20	0.19	0.18	0.17	0.16	0.16	0.15	0.14	0.13	0.12	0.11
VREF40+20	0.23	0.20	0.18	0.16	0.14	0.12	0.09	0.07	0.05	0.03	0.01
VREF40+25	0.20	0.16	0.13	0.09	0.06	0.02	-0.01	-0.05	-0.08	-0.12	-0.16
VREF40+30	0.14	0.08	0.03	-0.02	-0.07	-0.12	-0.17	-0.22	-0.27	-0.33	-0.38

With engine bleed for packs off, increase gradient by 0.3%.**With engine anti-ice on, decrease gradient by 0.1%.****With engine and wing anti-ice on, decrease gradient by 0.3%.****When operating in icing conditions during any part of the flight with forecast landing temperatures below 10°C, decrease gradient by 0.9%.**

Quick Turnaround Limit Weight - Category F Steel Brakes
Flaps 40

OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	81.3					
50	81.6	78.6				
45	81.6	79.3	76.1			
40	81.6	79.9	76.8	73.5		
35	81.6	80.6	77.5	74.2	71.0	
30	81.6	81.3	78.1	74.8	71.6	68.6
25	81.6	81.6	78.8	75.5	72.3	69.2
20	81.6	81.6	79.4	76.2	72.9	69.8
15	81.6	81.6	80.1	76.9	73.6	70.4
10	81.6	81.6	80.8	77.6	74.3	71.1
5	81.6	81.6	81.5	78.3	75.0	71.7
0	81.6	81.6	81.6	79.0	75.7	72.4
-5	81.6	81.6	81.6	79.8	76.5	73.1
-10	81.6	81.6	81.6	80.5	77.3	73.9
-15	81.6	81.6	81.6	81.3	78.0	74.6
-20	81.6	81.6	81.6	81.6	78.8	75.4
-30	81.6	81.6	81.6	81.6	80.4	77.1
-40	81.6	81.6	81.6	81.6	81.6	78.7
-50	81.6	81.6	81.6	81.6	81.6	80.4
-54	81.6	81.6	81.6	81.6	81.6	81.2

Increase weight by 800 kg per 1% uphill slope. Decrease weight by 1050 kg per 1% downhill slope.
Increase weight by 1850 kg per 10 knots headwind. Decrease weight by 6850 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate temperature, without artificial cooling, is less than 425°F as follows:
No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 425°F, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the Systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category M Carbon Brakes
Flaps 40

OAT		LIMIT WEIGHT (100 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	75.2					
50	122	75.7	72.6				
45	113	76.3	73.2	70.3			
40	104	77.0	73.9	70.9	67.9		
35	95	77.7	74.5	71.5	68.5	65.6	
30	86	78.3	75.2	72.1	69.1	66.2	63.4
25	77	79.0	75.9	72.7	69.7	66.8	64.0
20	68	79.7	76.6	73.4	70.3	67.4	64.5
15	59	80.3	77.3	74.1	71.0	68.0	65.1
10	50	81.0	78.0	74.8	71.6	68.6	65.7
5	41	81.8	78.7	75.5	72.3	69.3	66.3
0	32	82.5	79.4	76.2	73.0	69.9	66.9
-5	23	83.3	80.1	77.0	73.7	70.6	67.6
-10	14	84.0	80.8	77.7	74.5	71.3	68.3
-15	5	84.8	81.6	78.5	75.2	72.1	69.0
-20	-4	85.7	82.4	79.2	76.0	72.8	69.7
-30	-22	86.1	84.0	80.8	77.7	74.4	71.2
-40	-40	86.1	85.8	82.5	79.3	76.0	72.7
-50	-58	86.1	86.1	84.3	81.0	77.8	74.4
-54	-65	86.1	86.1	85.0	81.7	78.5	75.1

Increase weight by 650 kg per 1% uphill slope. Decrease weight by 1150 kg per 1% downhill slope.
Increase weight by 1650 kg per 10 knots headwind. Decrease weight by 7900 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category F Steel Brakes - High Altitudes
Flaps 40

OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	68.6	67.0	65.5			
25	69.2	67.6	66.1	64.7		
20	69.8	68.2	66.7	65.2	63.8	63.1
15	70.4	68.9	67.3	65.8	64.4	63.6
10	71.1	69.5	67.9	66.4	64.9	64.2
5	71.7	70.2	68.6	67.0	65.5	64.8
0	72.4	70.8	69.3	67.7	66.2	65.4
-5	73.1	71.5	69.9	68.4	66.8	66.0
-10	73.9	72.2	70.6	69.0	67.5	66.7
-15	74.6	72.9	71.3	69.7	68.1	67.4
-20	75.4	73.7	72.1	70.4	68.8	68.0
-25	76.2	74.5	72.8	71.2	69.6	68.7
-30	77.1	75.3	73.6	71.9	70.3	69.5
-35	77.9	76.2	74.4	72.7	71.1	70.2
-40	78.7	77.0	75.3	73.5	71.8	71.0
-45	79.6	77.9	76.2	74.4	72.7	71.8
-50	80.4	78.8	77.1	75.3	73.5	72.6
-54	81.1	79.4	77.8	76.0	74.2	73.3

Increase weight by 650 kg per 1% uphill slope. Decrease weight by 1050 kg per 1% downhill slope.
Increase weight by 1500 kg per 10 knots headwind. Decrease weight by 6650 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate temperature, without artificial cooling, is less than 425°F as follows:
No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 425°F, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the Systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category M Carbon Brakes - High Altitudes**Flaps 40**

OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	63.4	62.1	60.8			
25	64.0	62.6	61.3	60.0		
20	64.5	63.2	61.8	60.5	59.2	58.5
15	65.1	63.7	62.4	61.0	59.7	59.0
10	65.7	64.3	62.9	61.6	60.2	59.6
5	66.3	64.9	63.5	62.1	60.8	60.1
0	66.9	65.5	64.1	62.7	61.3	60.7
-5	67.6	66.1	64.7	63.3	61.9	61.2
-10	68.3	66.8	65.3	63.9	62.5	61.8
-15	69.0	67.4	65.9	64.5	63.1	62.4
-20	69.7	68.1	66.6	65.1	63.7	63.0
-25	70.4	68.8	67.3	65.8	64.3	63.6
-30	71.2	69.6	68.0	66.5	65.0	64.3
-35	71.9	70.3	68.8	67.2	65.7	64.9
-40	72.7	71.1	69.5	68.0	66.4	65.6
-45	73.6	71.9	70.3	68.7	67.2	66.4
-50	74.4	72.8	71.1	69.5	67.9	67.2
-54	75.1	73.4	71.8	70.2	68.6	67.8

Increase weight by 600 kg per 1% uphill slope. Decrease weight by 1000 kg per 1% downhill slope.

Increase weight by 1450 kg per 10 knots headwind. Decrease weight by 6550 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Intentionally
Blank

Performance Dispatch

Gear Down Planning

Chapter PD

Section 13

GEAR DOWN

Takeoff Climb Limit Weight

Flaps 5

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		TAKEOFF CLIMB WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	62.0	58.5	55.2	51.4	46.1	
52	126	63.4	58.5	55.2	51.9	47.1	
50	122	64.8	58.8	55.2	51.9	48.0	42.9
48	118	66.2	60.2	55.2	51.9	48.4	43.8
46	115	67.7	61.5	55.5	51.9	48.3	44.6
44	111	69.1	62.9	56.8	51.8	48.3	45.5
42	108	70.4	64.2	58.1	52.2	48.3	45.4
40	104	71.7	65.5	59.4	53.5	48.3	45.4
38	100	73.1	66.8	60.7	54.7	48.6	45.4
36	97	74.4	68.0	61.9	56.0	49.9	45.4
34	93	75.8	69.3	63.2	57.2	51.2	45.8
32	90	77.3	70.6	64.4	58.4	52.4	47.0
30	86	78.8	72.0	65.7	59.6	53.6	48.2
28	82	79.9	73.5	66.9	60.8	54.8	49.4
26	79	79.9	75.1	68.3	62.1	56.0	50.6
24	75	80.0	75.4	69.8	63.3	57.2	51.9
22	72	80.0	75.4	70.5	64.6	58.5	53.1
20	68	80.1	75.5	70.6	65.7	59.6	54.3
18	64	80.1	75.5	70.6	66.0	60.9	55.3
16	61	80.2	75.5	70.6	66.0	61.4	55.6
14	57	80.2	75.6	70.7	66.0	61.7	56.0
12	54	80.2	75.6	70.7	66.1	61.7	56.4
10	50	80.3	75.6	70.7	66.1	61.7	56.7

With engine bleed for packs off, increase weight by 300 kg.

With engine anti-ice on, decrease weight by 250 kg.

With engine and wing anti-ice on, decrease weight by 5150 kg (optional system).

GEAR DOWN

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 30 or 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	57.4					
52	126	58.9					
50	122	60.4	55.7				
48	118	61.5	57.2				
46	115	62.6	58.6	54.0			
44	111	63.7	59.6	55.3			
42	108	64.8	60.7	56.6	51.9		
40	104	66.0	61.7	57.6	53.0		
38	100	67.2	62.7	58.6	54.2	49.4	
36	97	68.4	63.8	59.6	55.2	50.3	
34	93	69.6	65.0	60.7	56.2	51.1	46.9
32	90	70.9	66.1	61.7	57.0	52.1	47.9
30	86	72.1	67.1	62.4	57.9	52.9	48.8
28	82	72.2	68.0	63.1	58.6	53.8	49.6
26	79	72.3	68.8	63.7	59.1	54.5	50.3
24	75	72.3	68.9	64.2	59.5	55.2	50.9
22	72	72.4	68.9	64.7	60.0	55.6	51.3
20	68	72.5	69.0	64.7	60.4	56.0	51.8
18	64	72.5	69.0	64.7	60.8	56.3	52.1
16	61	72.6	69.1	64.8	60.8	56.7	52.4
14	57	72.6	69.1	64.8	60.8	57.0	52.7
12	54	72.7	69.1	64.8	60.9	57.0	53.0
10	50	72.7	69.2	64.9	60.9	57.0	53.3
-40	-40	73.3	69.6	65.3	61.3	57.4	53.8

With engine bleed for packs off, increase weight by 1200 kg.

With engine anti-ice on, decrease weight by 200 kg.

With engine and wing anti-ice on, decrease weight by 1250 kg (optional system).

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 7950 kg.

GEAR DOWN

Takeoff Obstacle Limit Weight

Flaps 5

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 KG)

TO BE SUPPLIED

OAT Adjustments

TO BE SUPPLIED

GEAR DOWN

Takeoff Obstacle Limit Weight
Flaps 5
Sea Level, 30°C & Below, Zero Wind
Based on engine bleed for packs on and anti-ice off
Pressure Altitude Adjustments

TO BE SUPPLIED

Wind Adjustments

TO BE SUPPLIED

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	18700	15800	12900
75	21400	18700	15900
70	23900	21700	18800
65	26300	24700	22100
60	28800	27300	25500
55	31000	29800	28400
50	33000	32100	30900
45	35300	34300	33100
40	37700	36700	35600

GEAR DOWN

**Long Range Cruise Trip Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
340	300	266	239	218	200	187	174	164	155	147
676	598	531	479	437	400	374	350	329	311	295
1007	892	794	717	654	600	561	526	495	467	443
1333	1183	1055	954	872	800	749	702	661	624	593
1656	1472	1315	1190	1089	1000	936	878	827	782	743
1975	1759	1573	1426	1305	1200	1124	1056	995	941	894
2290	2043	1830	1661	1522	1400	1312	1233	1162	1100	1045
2601	2324	2086	1895	1737	1600	1501	1411	1330	1259	1197
2909	2604	2340	2128	1953	1800	1689	1588	1498	1419	1349
3214	2880	2592	2360	2168	2000	1877	1766	1667	1579	1502

Reference Fuel and Time Required

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	10		14		20		24	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.5	0:53	2.4	0:52	2.3	0:49	2.2	0:48
400	5.0	1:42	4.7	1:37	4.3	1:31	4.1	1:27
600	7.5	2:29	7.0	2:22	6.4	2:12	6.1	2:06
800	10.0	3:16	9.4	3:06	8.5	2:53	8.1	2:45
1000	12.6	4:02	11.8	3:50	10.7	3:33	10.1	3:23
1200	15.3	4:46	14.3	4:32	12.9	4:12	12.2	4:00
1400	18.0	5:31	16.8	5:14	15.2	4:51	14.3	4:37
1600	20.8	6:14	19.4	5:56	17.5	5:29	16.4	5:13
1800	23.6	6:56	22.1	6:36	19.9	6:07	18.7	5:49
2000	26.5	7:38	24.7	7:16	22.3	6:44	20.9	6:25

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	LANDING WEIGHT (1000 KG)					
	40	45	50	55	60	65
2	-0.2	-0.1	0.0	0.1	0.3	0.4
4	-0.4	-0.2	0.0	0.2	0.5	0.7
6	-0.6	-0.3	0.0	0.4	0.7	1.1
8	-0.8	-0.4	0.0	0.5	0.9	1.4
10	-1.0	-0.5	0.0	0.6	1.2	1.7
12	-1.2	-0.6	0.0	0.7	1.4	2.1
14	-1.4	-0.7	0.0	0.8	1.6	2.4
16	-1.6	-0.8	0.0	0.9	1.8	2.7
18	-1.8	-0.9	0.0	1.0	2.0	3.0
20	-1.9	-1.0	0.0	1.1	2.2	3.3
22	-2.1	-1.1	0.0	1.2	2.4	3.7
24	-2.3	-1.2	0.0	1.3	2.7	4.0
26	-2.5	-1.3	0.0	1.5	2.9	4.3
28	-2.7	-1.4	0.0	1.6	3.1	4.6

Based on VREF40 + 70 climb, Long Range Cruise and VREF40 + 70 descent.

GEAR DOWN

**Holding Planning
Flaps Up**

WEIGHT (1000 KG)	TOTAL FUEL FLOW (KG/HR)							
	PRESSURE ALTITUDE (FT)							
	1500	5000	10000	15000	20000	25000	30000	35000
80	4130	4100	4080	4100	4120			
75	3900	3870	3840	3850	3850	3980		
70	3670	3630	3610	3600	3600	3660		
65	3450	3410	3380	3360	3350	3380		
60	3220	3180	3140	3120	3090	3110	3260	
55	3000	2950	2910	2880	2850	2850	2930	
50	2770	2730	2680	2650	2610	2600	2650	
45	2560	2510	2470	2430	2380	2360	2400	2480
40	2340	2300	2260	2220	2170	2130	2160	2190

This table includes 5% additional fuel for holding in a racetrack pattern.

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 KG)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
22	41.3		
20	44.6	43.4	42.1
18	48.2	46.6	44.9
16	51.6	49.8	47.9
14	54.6	53.1	51.3
12	58.2	56.3	54.1
10	61.7	59.6	56.9
8	65.5	63.1	60.2
6	69.3	66.6	63.4
4	72.9	69.9	66.5
2	76.4	73.1	69.7
0	79.6	76.2	72.9

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 KG)										
	PRESSURE ALTITUDE (1000 FT)										
	0	2	4	6	8	10	12	14	16	18	20
ENGINE ONLY	-1.2	-1.2	-1.2	-1.3	-1.3	-1.3	-1.3	-1.2	-1.2	-1.1	-0.9
ENGINE AND WING	-6.1	-6.1	-5.9	-5.7	-5.5	-5.3	-5.1	-5.0	-4.8		

Performance Dispatch**Text****Chapter PD****Section 14**

Introduction

This chapter contains self dispatch performance data intended primarily for use by flight crews in the event that information cannot be obtained from the airline dispatch office. The takeoff data provided is for a single takeoff flap. The range of conditions covered is limited to those normally encountered in airline operation. In the event of conflict between the data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

Takeoff

The maximum allowable takeoff weight will be the least of the Field, Climb and Obstacle Limit Weights as determined from the tables shown. Tire and Brake Energy Limits are not shown as they are not limiting for the range of conditions shown in this chapter.

Minimum Takeoff Weight

Takeoff at the -7B27/B3 and -7B26/B1 thrust ratings requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the assumed temperature method of reducing thrust may not be used as a means to comply with this restriction. Conservative minimum takeoff weights are 58967 kg at -7B27/B3 takeoff thrust and 56699 kg at -7B26/B1 thrust. Alternatively, lower minimum takeoff weights may be obtained, for the actual pressure altitude and outside air temperature, by using the Minimum Takeoff Weight tables provided.

Field Limit Weight - Slope and Wind Corrections

These tables for dry and wet runways provide corrections to the field length available for the effects of runway slope and wind component along the runway. Enter the appropriate table with the available field length and runway slope to determine the slope corrected field length. Next enter the appropriate table with slope corrected field length and wind component to determine the slope and wind corrected field length.

Field and Climb Limit Weight

Tables are presented for selected airport pressure altitudes and runway conditions and show both Field and Climb Limit Weights. Enter the appropriate table for pressure altitude and runway condition with “Slope and Wind Corrected Field Length” determined above and airport OAT to obtain Field Limit Weight. Also read Climb Limit Weight for the same OAT. Intermediate altitudes may be interpolated or use next higher altitude. When finding a maximum weight for a wet runway, the dry runway limit weight must also be determined and the lower of the two weights used.

Obstacle Limit Weight

The Reference Obstacle Limit Weight table provides obstacle limit weights for reference airport conditions based on obstacle height above the runway surface and distance from brake release. Enter the adjustment tables to adjust the reference Obstacle Limit Weight for the effects of OAT, pressure altitude and wind as indicated. In the case of multiple obstacles, enter the tables successively with each obstacle and determine the most limiting weight.

Enroute

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. Note that this table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Trip Fuel and Time

.80M Trip Fuel and Time tables are provided to determine trip time and fuel required to destination.

To determine trip fuel and time for a constant altitude cruise, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel

Required Adjustment table with the Reference Fuel and the planned landing weight to obtain the adjustment to the fuel required at the planned landing weight.

.80M Step Climb Trip Fuel and Time

.80M Step Climb Trip Fuel and Time tables are provided to determine trip time and fuel required to destination when flying a step climb profile. Step climb profiles are based on 4000 ft step climbs to keep the flight within 2000 ft of the optimum altitude for the current cruise weight. To determine trip fuel and time, enter the Ground to Air Miles Conversion table and determine air distance as discussed above. Then enter the Trip Fuel and Time Required table with air distance and planned landing weight to read trip fuel. Continue across the table to read trip time.

Short Trip Fuel and Time

These tables are provided to determine trip fuel and time for short distances or alternates. Obtain air distance from the table using the ground distance and wind component to the alternate. Enter the Trip Fuel and Time Required table with air distance and read trip fuel required for the expected landing weight, together with time to alternate at right. For distances greater than shown or other altitudes, use the .80M Trip Fuel and Time tables.

Holding Planning

This table provides total fuel flow information necessary for planning flaps up holding and reserve fuel requirements. Data is based on the FMC holding speed schedule which is the higher of the maximum endurance and flaps up maneuver speeds. As noted, the fuel flow is based on flight in a racetrack holding pattern. For holding in straight and level flight, reduce table values by 5%.

Flight Crew Oxygen Requirements

Regulations require that sufficient oxygen be provided to the flight crew to account for the greater of supplemental breathing oxygen in the event of a cabin depressurization or protective breathing in the event of smoke or harmful fumes in the flight deck. The oxygen quantity associated with the above requirements is achieved with the minimum dispatch oxygen cylinder pressure.

To determine the minimum dispatch oxygen cylinder pressure enter the appropriate flight crew oxygen table with the number of crew plus observers using oxygen and read the minimum cylinder pressure required for the appropriate cylinder temperature.

Net Level Off Weight

The Net Level Off Weight table is provided to determine terrain clearance capability in straight and level flight following an engine failure. Regulations require terrain clearance planning based on net performance which is the gross (or actual) gradient performance degraded by 1.1%. In addition, the net level off pressure altitude must clear the terrain by 1000 ft.

To determine the maximum weight for terrain clearance, enter the table with required net level off pressure altitude and expected ISA deviation to obtain weight. Adjust weight for anti-ice operation as noted below the table.

| Extended Range Operations

ETOPS regulations require that flights conducted over a route that contains a point further than one hour's time at "normal one-engine-inoperative speed" from an adequate airport comply with rules specific to extended operations for airplanes with two or more engines. This section provides reserve fuel planning information for the "Critical Fuel Diversion Scenario".

ETOPS regulations require reserve planning to include a "Critical Fuel Diversion Scenario" calculation. The information shown is the fuel required to satisfy the flight profile as described below the charts. This information is shown for all engines operating and one engine inoperative at Long Range Cruise (LRC). There are two engine-inoperative scenarios, a decompression scenario and a driftdown scenario. The decompression scenario assumes an engine failure, loss of pressurization, emergency descent, and subsequent cruise at 10000 ft. The driftdown scenario assumes an engine failure without loss of pressurization, where the airplane "drifts down" to the thrust limited level-off altitude for the remainder of the diversion.

The ETOPS critical fuel required is the greater of the all-engine fuel or the engine-inoperative fuel. The ETOPS critical fuel required is compared to the amount of fuel that is predicted to be onboard the airplane at the critical point. If the fuel required by the ETOPS critical fuel reserves of the route exceeds the amount of fuel predicted, the fuel load must be adjusted accordingly. The data does not include an allowance for performance deterioration. However, regulations require a 5% allowance for performance deterioration, unless a value has been established by the operator for in-service deterioration.

To determine the ETOPS critical fuel required, enter the Ground to Air Mile Conversion table with the forecast wind (factored if applicable) and ground distance to the diversion airport from the critical point to obtain the air distance. Then enter the Critical Fuel table with air distance and expected weight at the critical point and read the required fuel. Apply the noted fuel adjustments for non-standard conditions, as necessary. When using a wind forecasting model acceptable to the FAA (such as the World Area Forecast System, WAFS), regulations allow the wind factor applied in this step to be 5% of the forecast wind (increase headwinds, decrease tailwinds), as indicated in the note below the chart. However, if a FAA-acceptable wind forecasting model is not used, the ETOPS critical fuel must be increased by 5%, instead of factoring the forecast winds.

Critical Fuel Reserves

Enter the Ground to Air Miles Conversion table with forecast wind and ground distance to diversion airport from critical point to obtain air distance. Now enter the Critical Fuel table with air distance and expected weight at the critical point and read required fuel. Apply the noted fuel adjustments as necessary. Regulations require a 5% allowance for performance deterioration unless a value has been established by the operator for inservice deterioration.

As noted below each table, the fuel required is the greater of the two engine fuel and the single engine fuel. This fuel is compared to the amount of fuel normally onboard the airplane at that point in the route. If the fuel required by the critical fuel reserves exceeds the amount of fuel normally expected, the fuel load must be adjusted accordingly.

Landing

Tables are provided for determining the maximum landing weight as limited by field length or climb requirements for a single landing flap.

Maximum landing weight is the lowest of the field length limit weight, climb limit weight, or maximum certified landing weight.

Landing Field Limit Weight

For the expected runway condition and anti-skid system configuration, obtain wind corrected field length by entering the Wind Corrected Field Length table with field length available and wind component along the runway. Now enter the Field Limit Weight table with wind corrected field length and pressure altitude to read field limit weight.

Landing Climb Limit Weight

Enter the table with airport OAT and pressure altitude to read landing climb limit weight. Apply the noted adjustments as required.

Go-Around Climb Gradient

Enter the Reference Go-Around Gradient table with airport OAT and pressure altitude to determine the reference go-around gradient. Then adjust the reference gradient for airplane weight and speed using the tables provided to determine the weight and speed adjusted go-around gradient. Apply the necessary corrections for engine bleed configuration and icing conditions as noted.

Quick Turnaround Limit Weight

Enter the appropriate table (Steel or Carbon Brakes) with airport pressure altitude and OAT to read maximum quick turnaround weight. Apply the noted adjustments as required.

If the landing weight exceeds the maximum quick turnaround weight, wait the specified time and then check that the wheel thermal plugs have not melted before executing a subsequent takeoff. For Steel Brakes, the alternate procedures on the charts can be used to ensure the brake temperature is within limits. These procedures cannot be used for carbon brakes.

Gear Down

This section provides flight planning data for revenue operation with gear down. Unless otherwise noted, the gear down tables in this section are identical in format and usage to the corresponding gear up tables previously described.

To eliminate erroneous displays the flight crew should enter only gross weight data on the PERF INIT page of the Control Display Unit (CDU). Omission of the cost index and cruise altitude entries on the PERF INIT page will render the VNAV function unavailable during flight. As a result, the following information will not be provided: VNAV guidance and speed schedules, trip fuel and ETA predictions, optimum and maximum altitude data, step climb and top of descent predictions, and the VNAV descent guidance path.

The gross weight entry allows the FMCS takeoff and approach speed schedules to be generated. In addition, the flap maneuver speed and VREF speed bugs will be available for display on the primary flight display speed tape. Except for VNAV, normal autopilot and autothrottle modes will remain available for use during the flight, as will the LNAV mode.

Takeoff/Landing Climb Limit Weight

Enter the appropriate table with airport OAT and pressure altitude to determine Takeoff/Landing Climb Limit Weight with gear down. Correct the weight obtained for engine bleed configuration as required.

Intentionally
Blank

Performance Dispatch**Chapter PD****Table of Contents****Section 20****737-700BBJW CFM56-7B27B3 LB FAA CATF/M**

Takeoff	PD.20.1
Minimum Takeoff Weight	PD.20.1
Takeoff Field Corrections - Dry Runway	PD.20.2
Takeoff Field & Climb Limit Weights - Dry Runway	PD.20.3
Takeoff Field Corrections - Wet Runway	PD.20.7
Takeoff Field & Climb Limit Weights - Wet Runway	PD.20.8
Takeoff Obstacle Limit Weight	PD.20.12
Minimum Takeoff Weight (26K Derate)	PD.20.16
Takeoff Field Corrections - Dry Runway 26K Derate	PD.20.17
Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate	PD.20.18
Takeoff Field Corrections - Wet Runway (26K Derate)	PD.20.22
Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)	PD.20.23
Takeoff Obstacle Limit Weight (26K Derate)	PD.20.27
Takeoff Field Corrections - Dry Runway (24K Derate)	PD.20.31
Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)	PD.20.32
Takeoff Field Corrections - Wet Runway (24K Derate)	PD.20.36
Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)	PD.20.37
Takeoff Obstacle Limit Weight (24K Derate)	PD.20.41
Takeoff Obstacle Limit Weight - High Altitude (24K Derate)	PD.20.43
Enroute	PD.21.1
.80M Maximum Operating Altitude	PD.21.1
.80M Trip Fuel and Time	PD.21.2

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

.80M Step Climb	PD.21.3
Short Trip Fuel and Time	PD.21.4
Holding Planning	PD.21.5
Flight Crew Oxygen Requirements	PD.21.6
Net Level Off Weight	PD.21.7
Decompression Critical Fuel Reserves - LRC Cruise	PD.21.8
Decompression Critical Fuel Reserves - LRC Cruise	PD.21.9
Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise	PD.21.10
Landing	PD.22.1
Landing Field Limit Weight - Dry Runway	PD.22.1
Landing Field Limit Weight - Wet Runway	PD.22.7
Landing Climb Limit Weight	PD.22.12
Go-Around Climb Gradient	PD.22.14
Quick Turnaround Limit Weight - Category F Steel Brakes	PD.22.15
Quick Turnaround Limit Weight - Category M Carbon Brakes	PD.22.16
Quick Turnaround Limit Weight - Category F Steel Brakes - High Altitudes	PD.22.17
Gear Down	PD.23.1
Takeoff Climb Limit Weight	PD.23.1
Landing Climb Limit Weight	PD.23.2
Takeoff Obstacle Limit Weight	PD.23.3
Long Range Cruise Altitude Capability	PD.23.5
Long Range Cruise Trip Fuel and Time	PD.23.6
Holding Planning	PD.23.7
Net Level Off Weight	PD.23.8
Text	PD.24.1
Introduction	PD.24.1
Takeoff	PD.24.1
Enroute	PD.24.2

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

**Performance Dispatch -
Table of Contents**

Landing	PD.24.5
Gear Down	PD.24.6

Intentionally
Blank

Performance Dispatch

Chapter PD

Takeoff

Section 20

Minimum Takeoff Weight

Weight Limit (1000 LB)

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)								
	S.L. & BELOW	1000	2000	3000	4000	5000	6000	7000	8000 & ABOVE
50	113.3	110.0	106.8	103.5	100.2	96.6	92.9	89.2	
45	117.0	113.7	110.4	107.1	103.8	100.1	96.5	92.8	89.1
40	120.4	117.1	113.8	110.5	107.2	103.5	99.9	96.2	92.6
35	123.6	120.2	116.8	113.3	109.9	106.3	102.6	99.0	95.4
30	126.7	123.0	119.3	115.6	111.9	108.3	104.8	101.3	97.7
25	129.0	123.6	120.0	116.5	113.1	109.6	106.2	102.8	99.3
20	130.0	124.0	120.0	116.9	113.7	110.4	107.0	103.7	100.4
15	130.0	124.0	120.0	116.9	113.8	110.5	107.2	104.1	101.1
10 & BELOW	130.0	124.0	120.0	116.9	113.8	110.5	107.2	104.4	101.6

Takeoff at the -7B27/B3 and -7B26/B1 thrust ratings requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the assumed temperature method of reducing thrust may not be used as a means to comply with this restriction.

Takeoff Field Corrections - Dry Runway
Slope Corrections

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4270	4250	4240	4220	4200	4110	4020	3930	3850
4600	4730	4700	4660	4630	4600	4480	4370	4250	4140
5000	5190	5140	5090	5050	5000	4860	4710	4570	4430
5400	5640	5580	5520	5460	5400	5230	5060	4890	4720
5800	6100	6030	5950	5880	5800	5600	5400	5200	5010
6200	6560	6470	6380	6290	6200	5970	5750	5520	5300
6600	7010	6910	6810	6700	6600	6350	6090	5840	5590
7000	7470	7350	7240	7120	7000	6720	6440	6160	5880
7400	7930	7800	7660	7530	7400	7090	6780	6470	6170
7800	8390	8240	8090	7950	7800	7460	7130	6790	6460
8200	8840	8680	8520	8360	8200	7840	7470	7110	6750
8600	9300	9130	8950	8780	8600	8210	7820	7430	7030
9000	9760	9570	9380	9190	9000	8580	8160	7740	7330
9400	10210	10010	9810	9600	9400	8950	8510	8060	7620
9800	10670	10450	10240	10020	9800	9330	8850	8380	7900
10200	11130	10900	10660	10430	10200	9700	9200	8700	8200
10600	11590	11340	11090	10850	10600	10070	9540	9010	8490
11000	12040	11780	11520	11260	11000	10440	9890	9330	8780
11400	12500	12230	11950	11680	11400	10820	10230	9650	9070
11800	12960	12670	12380	12090	11800	11190	10580	9970	9350

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3070	3440	3820	4200	4460	4730	4990	5270
4600	3400	3800	4200	4600	4870	5150	5420	5710
5000	3730	4160	4580	5000	5280	5570	5850	6150
5400	4070	4510	4960	5400	5690	5990	6280	6590
5800	4400	4870	5330	5800	6100	6410	6720	7030
6200	4730	5220	5710	6200	6510	6830	7150	7470
6600	5070	5580	6090	6600	6920	7250	7580	7910
7000	5400	5930	6470	7000	7330	7670	8010	8350
7400	5730	6290	6840	7400	7740	8090	8440	8790
7800	6070	6640	7220	7800	8150	8510	8870	9230
8200	6400	7000	7600	8200	8560	8930	9300	9670
8600	6730	7360	7980	8600	8970	9350	9730	10110
9000	7070	7710	8360	9000	9380	9770	10160	10550
9400	7400	8070	8730	9400	9790	10190	10590	11000
9800	7730	8420	9110	9800	10200	10610	11020	11440
10200	8070	8780	9490	10200	10610	11030	11450	11880
10600	8400	9130	9870	10600	11020	11450	11880	12320
11000	8730	9490	10240	11000	11430	11870	12310	12760
11400	9070	9840	10620	11400	11840	12290	12740	13200
11800	9400	10200	11000	11800	12250	12710	13170	13640

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4500	146.6	136.7	135.9	135.1	134.3	133.5	132.8	127.0	124.1	121.4	118.5
4600	148.5	138.5	137.7	136.9	136.1	135.3	134.5	128.7	125.7	123.0	120.1
5000	155.1	144.6	143.8	142.9	142.1	141.3	140.4	134.4	131.3	128.4	125.4
5400	161.2	150.3	149.5	148.6	147.7	146.9	146.0	139.7	136.5	133.5	130.3
5800	167.2	155.9	155.0	154.1	153.2	152.3	151.4	144.9	141.5	138.4	135.1
6200	173.0	161.2	160.3	159.4	158.4	157.5	156.5	149.8	146.3	143.0	139.7
6600	178.6	166.4	165.5	164.5	163.5	162.5	161.6	154.5	150.9	147.6	144.0
7000	184.1	171.5	170.5	169.5	168.5	167.5	166.5	159.2	155.5	152.0	148.4
7400	189.6	176.6	175.6	174.5	173.5	172.4	171.4	163.9	160.0	156.4	152.6
7800	189.9	181.4	180.4	179.3	178.2	177.2	176.1	168.3	164.4	160.7	156.8
8200	189.9	186.1	185.0	183.9	182.8	181.7	180.6	172.7	168.7	164.8	160.9
8600	189.9	189.9	189.5	188.3	187.2	186.1	185.0	176.9	172.7	168.8	164.8
9000	189.9	189.9	189.9	189.9	189.9	189.9	189.0	180.7	176.5	172.5	168.3
9400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	184.0	179.7	175.6	171.4
9800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.2	182.8	178.7	174.4
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	185.7	181.5	177.2
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	188.5	184.2	179.8
11000	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	186.9	182.5
CLIMB LIMIT WT (1000 LB)	189.9	189.9	189.9	189.9	189.9	189.9	189.9	181.3	174.4	168.3	162.2

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4500	138.6	128.7	127.9	127.2	126.5	125.7	124.0	118.8	115.8	113.1	109.4
4600	140.4	130.4	129.6	128.9	128.1	127.4	125.7	120.4	117.4	114.6	110.9
5000	146.6	136.1	135.4	134.6	133.8	133.0	131.3	125.7	122.6	119.7	115.9
5400	152.4	141.5	140.7	139.9	139.1	138.3	136.4	130.7	127.4	124.4	120.4
5800	158.0	146.7	145.9	145.0	144.2	143.4	141.4	135.5	132.1	128.9	124.8
6200	163.5	151.7	150.8	150.0	149.1	148.2	146.2	140.0	136.5	133.2	128.9
6600	168.8	156.6	155.6	154.7	153.8	153.0	150.9	144.4	140.8	137.4	132.9
7000	174.0	161.3	160.4	159.4	158.5	157.6	155.4	148.8	145.0	141.4	136.8
7400	179.1	166.0	165.1	164.1	163.1	162.2	159.9	153.1	149.1	145.5	140.7
7800	184.0	170.6	169.6	168.6	167.6	166.6	164.3	157.2	153.2	149.4	144.5
8200	188.8	175.0	174.0	172.9	171.9	170.9	168.6	161.3	157.2	153.3	148.3
8600	189.9	179.2	178.1	177.1	176.1	175.0	172.6	165.2	161.0	157.1	151.9
9000	189.9	183.1	182.0	180.9	179.9	178.8	176.4	168.8	164.5	160.5	155.2
9400	189.9	186.4	185.3	184.2	183.2	182.1	179.6	171.9	167.5	163.4	158.1
9800	189.9	189.7	188.5	187.4	186.4	185.3	182.7	174.9	170.4	166.3	160.9
10200	189.9	189.9	189.9	189.9	189.3	188.2	185.6	177.7	173.2	169.0	163.5
10600	189.9	189.9	189.9	189.9	189.9	189.9	188.4	180.3	175.8	171.5	166.0
11000	189.9	189.9	189.9	189.9	189.9	189.9	189.9	183.0	178.3	174.0	168.4
CLIMB LIMIT WT (1000 LB)	186.0	185.0	184.8	184.6	184.4	184.2	180.5	168.8	162.4	156.7	149.0

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4500	130.6	120.7	120.0	119.3	118.5	117.3	115.6	110.5	107.7	104.7	102.1
4600	132.3	122.3	121.6	120.9	120.1	118.8	117.1	112.0	109.2	106.1	103.5
5000	138.2	127.8	127.0	126.2	125.4	124.1	122.3	117.0	114.0	110.8	108.1
5400	143.7	132.8	132.0	131.2	130.4	129.0	127.2	121.6	118.5	115.2	112.3
5800	148.9	137.7	136.9	136.0	135.2	133.7	131.8	126.0	122.8	119.4	116.4
6200	154.0	142.3	141.5	140.6	139.7	138.2	136.2	130.2	126.9	123.3	120.2
6600	159.0	146.8	145.9	145.0	144.1	142.5	140.5	134.3	130.8	127.0	123.9
7000	163.8	151.2	150.3	149.4	148.4	146.8	144.7	138.2	134.6	130.8	127.5
7400	168.6	155.6	154.7	153.7	152.7	151.0	148.8	142.2	138.5	134.5	131.1
7800	173.2	159.8	158.9	157.8	156.8	155.1	152.8	146.0	142.2	138.1	134.6
8200	177.7	164.0	163.0	162.0	160.9	159.2	156.8	149.8	145.9	141.7	138.1
8600	182.0	167.9	166.9	165.9	164.8	163.0	160.6	153.5	149.5	145.2	141.5
9000	185.9	171.6	170.6	169.5	168.4	166.6	164.1	156.8	152.7	148.3	144.6
9400	189.3	174.7	173.7	172.6	171.5	169.6	167.2	159.7	155.6	151.1	147.3
9800	189.9	177.8	176.7	175.6	174.5	172.6	170.1	162.5	158.3	153.7	149.8
10200	189.9	180.6	179.5	178.4	177.3	175.3	172.8	165.1	160.9	156.2	152.3
10600	189.9	183.3	182.2	181.1	179.9	178.0	175.4	167.6	163.3	158.6	154.7
11000	189.9	186.0	184.8	183.7	182.5	180.6	178.0	170.1	165.7	161.0	157.0
CLIMB LIMIT WT (1000 LB)	174.2	173.2	173.0	172.8	172.6	170.8	167.6	157.3	151.4	145.1	140.1

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4500	122.6	112.6	111.8	111.1	109.9	108.7	107.0	102.0	99.6	97.2	94.9
4600	124.2	114.1	113.3	112.6	111.4	110.1	108.4	103.4	101.0	98.6	96.2
5000	129.8	119.2	118.4	117.6	116.4	115.0	113.3	108.0	105.5	103.0	100.5
5400	134.9	123.8	123.0	122.3	120.9	119.6	117.7	112.3	109.6	107.0	104.5
5800	139.8	128.4	127.5	126.7	125.4	123.9	122.0	116.4	113.6	110.9	108.2
6200	144.5	132.6	131.8	130.9	129.5	128.0	126.0	120.2	117.3	114.5	111.7
6600	149.1	136.8	135.9	135.0	133.5	132.0	129.9	123.8	120.8	117.9	115.1
7000	153.6	140.8	139.9	139.0	137.4	135.8	133.7	127.4	124.3	121.3	118.3
7400	158.1	144.8	143.9	142.9	141.4	139.7	137.5	131.0	127.8	124.7	121.6
7800	162.4	148.8	147.8	146.8	145.2	143.5	141.2	134.5	131.2	128.0	124.9
8200	166.6	152.6	151.6	150.6	149.0	147.2	144.9	138.0	134.7	131.4	128.1
8600	170.6	156.4	155.3	154.3	152.6	150.8	148.4	141.4	138.0	134.6	131.3
9000	174.3	159.8	158.7	157.7	155.9	154.1	151.7	144.5	141.0	137.6	134.2
9400	177.5	162.7	161.6	160.6	158.8	157.0	154.5	147.2	143.6	140.1	136.7
9800	180.6	165.6	164.5	163.4	161.6	159.7	157.2	149.8	146.2	142.6	139.1
10200	183.5	168.2	167.1	166.0	164.2	162.3	159.7	152.3	148.6	145.0	141.4
10600	186.2	170.8	169.6	168.5	166.7	164.8	162.2	154.6	150.9	147.3	143.7
11000	188.9	173.3	172.1	171.0	169.2	167.2	164.6	156.9	153.2	149.5	145.9
CLIMB LIMIT WT (1000 LB)	163.5	162.0	161.9	161.7	160.1	158.3	155.0	144.8	139.5	134.7	130.1

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4500	114.4	104.7	104.0	102.8	101.7	100.3	98.3	93.6	91.2	89.0	86.8
4600	115.9	106.1	105.4	104.2	103.1	101.7	99.7	94.9	92.5	90.2	88.0
5000	121.1	110.8	110.1	108.9	107.7	106.2	104.1	99.1	96.7	94.3	91.9
5400	125.8	115.2	114.4	113.2	112.0	110.4	108.2	103.0	100.5	98.0	95.6
5800	130.4	119.3	118.6	117.3	116.0	114.4	112.1	106.7	104.1	101.5	99.0
6200	134.8	123.3	122.5	121.1	119.8	118.1	115.8	110.1	107.4	104.7	102.1
6600	139.0	127.0	126.2	124.8	123.4	121.7	119.2	113.4	110.5	107.8	105.0
7000	143.1	130.7	129.9	128.4	127.0	125.2	122.7	116.7	113.7	110.8	108.0
7400	147.2	134.4	133.5	132.1	130.6	128.7	126.1	119.9	116.8	113.8	110.9
7800	151.2	138.0	137.1	135.6	134.1	132.2	129.5	123.1	119.9	116.8	113.8
8200	155.2	141.7	140.7	139.1	137.6	135.6	132.9	126.3	123.1	119.9	116.8
8600	158.9	145.1	144.2	142.6	141.0	139.0	136.1	129.4	126.1	122.9	119.8
9000	162.4	148.3	147.3	145.7	144.1	142.0	139.1	132.3	128.9	125.7	122.4
9400	165.4	151.1	150.1	148.4	146.7	144.7	141.7	134.7	131.3	128.0	124.7
9800	168.3	153.7	152.7	151.0	149.3	147.2	144.2	137.1	133.6	130.3	126.9
10200	171.0	156.2	155.2	153.5	151.8	149.6	146.6	139.4	135.9	132.5	129.1
10600	173.5	158.6	157.6	155.8	154.1	152.0	148.9	141.6	138.1	134.6	131.2
11000	176.1	161.0	159.9	158.2	156.5	154.3	151.2	143.8	140.2	136.7	133.3
CLIMB LIMIT WT (1000 LB)	153.1	151.5	151.3	149.8	148.3	145.7	141.0	130.8	126.1	121.6	117.2

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4500	105.1	96.7	95.6	94.4	93.3	91.8	89.7	85.2	83.1	81.0	78.9
4600	106.5	98.0	96.9	95.7	94.5	93.1	90.9	86.4	84.3	82.2	80.0
5000	111.2	102.4	101.2	100.0	98.8	97.3	95.0	90.3	88.1	85.9	83.7
5400	115.6	106.5	105.2	104.0	102.7	101.1	98.7	93.9	91.6	89.3	86.9
5800	119.8	110.3	109.0	107.7	106.4	104.7	102.3	97.2	94.8	92.4	90.0
6200	123.8	113.9	112.5	111.2	109.8	108.1	105.5	100.3	97.8	95.3	92.8
6600	127.6	117.3	115.9	114.5	113.0	111.3	108.6	103.2	100.6	98.0	95.4
7000	131.3	120.6	119.2	117.7	116.2	114.4	111.7	106.1	103.3	100.7	98.0
7400	135.0	124.0	122.5	121.0	119.5	117.6	114.7	108.9	106.1	103.4	100.6
7800	138.6	127.3	125.8	124.2	122.6	120.7	117.8	111.8	108.9	106.1	103.2
8200	142.2	130.7	129.1	127.5	125.8	123.9	120.9	114.7	111.8	108.9	106.0
8600	145.7	133.9	132.3	130.6	129.0	127.0	123.9	117.6	114.6	111.6	108.6
9000	148.9	136.8	135.2	133.5	131.8	129.8	126.6	120.2	117.2	114.1	111.1
9400	151.7	139.4	137.7	136.0	134.3	132.2	129.0	122.5	119.3	116.3	113.2
9800	154.3	141.8	140.1	138.4	136.6	134.5	131.3	124.7	121.5	118.3	115.2
10200	156.9	144.2	142.5	140.7	138.9	136.8	133.5	126.8	123.6	120.4	117.2
10600	159.3	146.5	144.7	143.0	141.2	139.0	135.6	128.9	125.6	122.4	119.2
11000	161.7	148.7	146.9	145.1	143.3	141.1	137.7	130.9	127.6	124.3	121.1
CLIMB LIMIT WT (1000 LB)	140.5	139.1	137.4	135.7	133.7	130.9	126.4	117.5	113.3	109.1	104.9

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3500 lb.

**Takeoff Field & Climb Limit Weights - Dry Runway
Flaps 5**

12000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4300	96.7	89.5	88.6	87.4	85.9	84.5	82.7	80.2	77.4	74.5	71.7
4600	100.5	93.0	92.1	90.9	89.4	87.9	86.1	83.5	80.5	77.6	74.7
5000	105.0	97.3	96.4	95.1	93.5	92.0	90.1	87.5	84.4	81.4	78.4
5400	109.1	101.2	100.3	99.0	97.4	95.8	93.9	91.2	88.1	84.9	81.8
5800	113.1	105.0	104.0	102.7	101.0	99.4	97.5	94.7	91.5	88.2	85.1
6200	116.8	108.5	107.5	106.2	104.5	102.8	100.8	97.9	94.7	91.4	88.1
6600	120.4	111.9	110.9	109.5	107.7	106.0	104.0	101.0	97.7	94.3	90.9
7000	123.9	115.1	114.1	112.6	110.8	109.1	107.0	103.9	100.5	97.0	93.6
7400	127.1	118.1	117.0	115.5	113.7	111.9	109.7	106.6	103.1	99.5	96.0
7800	130.3	121.0	119.9	118.4	116.5	114.6	112.4	109.2	105.6	101.9	98.3
8200	133.5	124.0	122.8	121.3	119.3	117.4	115.2	111.9	108.1	104.3	100.6
8600	136.6	126.8	125.7	124.1	122.1	120.1	117.8	114.4	110.6	106.7	102.9
9000	139.5	129.5	128.3	126.7	124.7	122.6	120.3	116.8	112.9	108.9	105.1
9400	142.2	132.1	130.9	129.2	127.1	125.0	122.6	119.1	115.1	111.0	107.1
9800	144.9	134.6	133.3	131.6	129.5	127.4	124.9	121.3	117.2	113.1	109.0
10200	147.4	136.8	135.6	133.8	131.7	129.5	127.0	123.3	119.1	114.9	110.8
10600	149.7	138.9	137.6	135.9	133.7	131.4	128.9	125.1	120.9	116.5	112.3
11000	152.0	141.0	139.7	137.9	135.6	133.4	130.7	126.9	122.6	118.2	113.9
CLIMB LIMIT WT (1000 LB)	133.6	131.7	130.5	128.7	126.5	124.4	121.3	116.3	110.7	105.1	99.6

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4300	91.3	84.0	83.1	82.0	80.6	79.2	77.5	75.3	73.1	70.7	68.5
4600	94.8	87.4	86.5	85.3	83.9	82.4	80.6	78.4	76.1	73.7	71.4
5000	99.2	91.5	90.5	89.3	87.9	86.4	84.5	82.3	79.8	77.4	75.0
5400	103.2	95.2	94.3	93.1	91.6	90.0	88.1	85.8	83.4	80.8	78.4
5800	107.0	98.8	97.9	96.6	95.1	93.5	91.6	89.2	86.7	84.1	81.5
6200	110.6	102.2	101.2	100.0	98.3	96.7	94.8	92.3	89.7	87.1	84.5
6600	114.0	105.4	104.4	103.1	101.4	99.8	97.8	95.3	92.6	89.9	87.2
7000	117.2	108.5	107.4	106.1	104.4	102.7	100.6	98.0	95.3	92.5	89.8
7400	120.3	111.3	110.2	108.8	107.1	105.3	103.2	100.5	97.7	94.8	92.0
7800	123.3	114.0	112.9	111.5	109.7	107.9	105.7	103.0	100.1	97.1	94.2
8200	126.3	116.8	115.6	114.2	112.3	110.5	108.2	105.4	102.5	99.4	96.5
8600	129.2	119.5	118.3	116.8	114.9	113.0	110.7	107.8	104.8	101.7	98.7
9000	132.0	122.0	120.8	119.2	117.3	115.4	113.0	110.1	107.0	103.8	100.7
9400	134.6	124.4	123.2	121.6	119.6	117.6	115.2	112.2	109.0	105.8	102.6
9800	137.1	126.7	125.5	123.8	121.8	119.8	117.3	114.3	111.0	107.7	104.5
10200	139.4	128.8	127.5	125.9	123.8	121.8	119.2	116.1	112.8	109.4	106.1
10600	141.6	130.7	129.4	127.7	125.7	123.6	121.0	117.8	114.4	110.9	107.6
11000	143.7	132.6	131.3	129.6	127.5	125.3	122.7	119.4	116.0	112.5	109.0
CLIMB LIMIT WT (1000 LB)	126.8	123.9	122.6	120.9	118.9	116.8	113.6	109.4	104.8	100.3	96.0

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3100 lb.
With engine anti-ice on, decrease field limit weight by 3400 lb and climb limit weight by 4000 lb.
With engine and wing anti-ice on (optional system), decrease field limit weight by 4500 lb and climb limit weight by 6400 lb.

**Takeoff Field Corrections - Wet Runway
Slope Corrections**

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4260	4250	4230	4220	4200	4140	4090	4030	3970
4600	4730	4700	4660	4630	4600	4530	4450	4380	4310
5000	5190	5140	5100	5050	5000	4910	4820	4740	4650
5400	5650	5590	5530	5460	5400	5300	5190	5090	4980
5800	6120	6040	5960	5880	5800	5680	5560	5440	5320
6200	6580	6480	6390	6290	6200	6060	5930	5790	5660
6600	7040	6930	6820	6710	6600	6450	6300	6150	5990
7000	7510	7380	7250	7130	7000	6830	6670	6500	6330
7400	7970	7830	7680	7540	7400	7220	7030	6850	6670
7800	8430	8270	8120	7960	7800	7600	7400	7200	7000
8200	8890	8720	8550	8370	8200	7990	7770	7560	7340
8600	9360	9170	8980	8790	8600	8370	8140	7910	7680
9000	9820	9620	9410	9210	9000	8750	8510	8260	8010
9400	10280	10060	9840	9620	9400	9140	8880	8610	8350
9800	10750	10510	10270	10040	9800	9520	9240	8970	8690
10200	11210	10960	10710	10450	10200	9910	9610	9320	9030
10600	11670	11410	11140	10870	10600	10290	9980	9670	9360
11000	12140	11850	11570	11280	11000	10670	10350	10020	9700
11400	12600	12300	12000	11700	11400	11060	10720	10380	10040
11800	13060	12750	12430	12120	11800	11440	11090	10730	10370

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	2990	3390	3800	4200	4470	4740	5030	5320
4600	3330	3750	4180	4600	4880	5170	5470	5770
5000	3670	4110	4560	5000	5290	5590	5910	6230
5400	4010	4470	4940	5400	5700	6020	6340	6680
5800	4350	4830	5320	5800	6120	6450	6780	7130
6200	4690	5200	5700	6200	6530	6870	7220	7580
6600	5030	5560	6080	6600	6940	7300	7660	8040
7000	5380	5920	6460	7000	7360	7720	8100	8490
7400	5720	6280	6840	7400	7770	8150	8540	8940
7800	6060	6640	7220	7800	8180	8570	8980	9400
8200	6400	7000	7600	8200	8590	9000	9420	9850
8600	6740	7360	7980	8600	9010	9430	9860	10300
9000	7080	7720	8360	9000	9420	9850	10300	10750
9400	7420	8080	8740	9400	9830	10280	10740	11210
9800	7760	8440	9120	9800	10240	10700	11170	11660
10200	8100	8800	9500	10200	10660	11130	11610	12110
10600	8440	9160	9880	10600	11070	11550	12050	12570
11000	8780	9520	10260	11000	11480	11980	12490	13020
11400	9130	9880	10640	11400	11900	12410	12930	13470
11800	9470	10240	11020	11800	12310	12830	13370	13920

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5600	163.4	151.7	150.8	149.9	149.0	148.0	147.1	140.4	137.0	133.5	130.1
5800	166.3	154.5	153.5	152.6	151.6	150.7	149.7	142.9	139.4	135.9	132.4
6200	172.0	159.6	158.7	157.7	156.7	155.7	154.7	147.7	144.0	140.4	136.7
6600	177.4	164.7	163.7	162.7	161.6	160.6	159.6	152.3	148.5	144.7	140.9
7000	182.8	169.6	168.5	167.5	166.4	165.4	164.3	156.7	152.8	148.9	145.0
7400	187.9	174.3	173.2	172.1	171.1	170.0	168.9	161.1	157.1	153.1	149.0
7800	189.9	178.9	177.8	176.7	175.6	174.5	173.3	165.3	161.2	157.1	152.9
8200	189.9	183.5	182.3	181.2	180.1	178.9	177.8	169.5	165.3	161.1	156.8
8600	189.9	187.9	186.7	185.6	184.4	183.2	182.0	173.6	169.2	164.9	160.5
9000	189.9	189.9	189.9	189.9	189.9	188.4	187.2	186.0	177.3	172.9	168.4
9400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.5	180.7	176.1	171.6
9800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	183.9	179.3	174.7
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.3	182.5	177.8
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	185.7	180.9
11000	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	188.9	184.0
11400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.0
11800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.0
12200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.0
CLIMB LIMIT WT (1000 LB)	189.9	189.9	189.9	189.9	189.9	189.9	189.9	181.3	174.4	168.3	162.2

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5600	154.4	142.3	141.4	140.5	139.6	138.8	136.8	130.4	127.0	123.8	119.8
5800	157.1	144.8	143.9	143.0	142.1	141.2	139.2	132.7	129.2	126.0	121.9
6200	162.4	149.6	148.7	147.8	146.8	145.9	143.8	137.1	133.4	130.1	125.8
6600	167.6	154.3	153.3	152.4	151.4	150.5	148.3	141.3	137.5	134.1	129.6
7000	172.5	158.9	157.9	156.9	155.9	154.9	152.6	145.4	141.5	137.9	133.4
7400	177.3	163.3	162.2	161.2	160.2	159.2	156.9	149.5	145.5	141.8	137.1
7800	182.0	167.6	166.5	165.5	164.4	163.4	161.0	153.4	149.3	145.5	140.6
8200	186.7	171.8	170.7	169.7	168.6	167.5	165.1	157.3	153.0	149.1	144.2
8600	189.9	175.9	174.8	173.7	172.6	171.5	169.0	161.0	156.6	152.6	147.5
9000	189.9	179.8	178.6	177.5	176.4	175.2	172.7	164.4	160.0	155.9	150.6
9400	189.9	183.1	182.0	180.8	179.6	178.5	175.9	167.5	162.9	158.7	153.4
9800	189.9	186.5	185.3	184.1	182.9	181.8	179.1	170.5	165.8	161.6	156.2
10200	189.9	189.8	188.6	187.4	186.2	185.0	182.3	173.5	168.8	164.4	158.9
10600	189.9	189.9	189.9	189.9	189.5	188.3	185.5	176.6	171.7	167.3	161.6
11000	189.9	189.9	189.9	189.9	189.9	189.9	188.6	179.5	174.6	170.1	164.3
11400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	182.5	177.4	172.8
11800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	185.4	180.2	175.5
12200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	188.2	183.0	178.2	172.1
CLIMB LIMIT WT (1000 LB)	186.0	185.0	184.8	184.6	184.4	184.2	180.5	168.8	162.4	156.7	149.0

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5600	144.6	132.7	131.8	130.9	130.0	128.5	126.6	121.0	117.9	114.5	111.9
5800	147.2	135.0	134.1	133.2	132.3	130.8	128.8	123.1	119.9	116.5	113.8
6200	152.1	139.5	138.5	137.6	136.6	135.1	133.0	127.1	123.8	120.2	117.5
6600	156.9	143.8	142.8	141.8	140.8	139.2	137.1	131.0	127.5	123.8	121.0
7000	161.5	148.0	147.0	146.0	145.0	143.3	141.1	134.8	131.2	127.4	124.4
7400	166.0	152.1	151.0	150.0	149.0	147.2	145.0	138.5	134.8	130.9	127.9
7800	170.4	156.1	155.0	153.9	152.9	151.1	148.8	142.1	138.4	134.3	131.2
8200	174.7	160.0	158.9	157.8	156.7	154.9	152.5	145.7	141.8	137.6	134.4
8600	178.9	163.8	162.7	161.5	160.4	158.5	156.1	149.1	145.1	140.8	137.5
9000	182.8	167.4	166.2	165.0	163.9	161.9	159.5	152.2	148.2	143.8	140.4
9400	186.2	170.5	169.3	168.1	166.9	164.9	162.4	155.0	150.9	146.4	143.0
9800	189.6	173.5	172.3	171.1	169.9	167.9	165.3	157.8	153.6	149.0	145.5
10200	189.9	176.6	175.4	174.2	172.9	170.9	168.3	160.6	156.3	151.6	148.0
10600	189.9	179.7	178.4	177.2	176.0	173.9	171.2	163.3	158.9	154.2	150.5
11000	189.9	182.8	181.5	180.2	178.9	176.8	174.1	166.0	161.6	156.7	153.0
11400	189.9	185.8	184.4	183.1	181.9	179.7	176.9	168.7	164.2	159.2	155.4
11800	189.9	188.7	187.4	186.0	184.7	182.5	179.7	171.4	166.7	161.7	157.8
12200	189.9	189.9	189.9	188.9	187.5	185.3	182.4	173.9	169.2	164.1	160.2
CLIMB LIMIT WT (1000 LB)	174.2	173.2	173.0	172.8	172.6	170.8	167.6	157.3	151.4	145.1	140.1

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5600	135.1	123.2	122.4	121.6	120.2	118.8	117.0	111.8	109.1	106.6	104.1
5800	137.5	125.4	124.5	123.7	122.3	120.9	119.0	113.7	111.0	108.4	105.9
6200	142.0	129.4	128.6	127.7	126.3	124.8	122.9	117.3	114.5	111.9	109.3
6600	146.5	133.4	132.5	131.6	130.1	128.6	126.6	120.8	117.9	115.2	112.5
7000	150.7	137.2	136.3	135.4	133.9	132.3	130.2	124.3	121.3	118.4	115.6
7400	154.9	141.0	140.1	139.1	137.6	136.0	133.8	127.7	124.6	121.7	118.8
7800	159.0	144.7	143.7	142.8	141.2	139.5	137.3	131.0	127.8	124.8	121.9
8200	163.0	148.3	147.3	146.3	144.7	143.0	140.7	134.3	131.0	127.9	124.9
8600	166.9	151.8	150.8	149.8	148.1	146.3	144.0	137.3	134.0	130.8	127.7
9000	170.5	155.1	154.0	152.9	151.2	149.4	147.0	140.2	136.8	133.6	130.4
9400	173.7	157.9	156.8	155.8	154.0	152.2	149.7	142.8	139.3	136.0	132.7
9800	176.8	160.7	159.6	158.5	156.7	154.9	152.4	145.3	141.7	138.4	135.1
10200	180.0	163.6	162.4	161.3	159.5	157.6	155.0	147.8	144.2	140.7	137.4
10600	183.1	166.4	165.2	164.1	162.2	160.3	157.7	150.3	146.6	143.1	139.6
11000	186.2	169.2	168.0	166.8	164.9	162.9	160.3	152.8	149.0	145.4	141.9
11400	189.3	171.9	170.7	169.5	167.6	165.6	162.9	155.2	151.3	147.7	144.1
11800	189.9	174.6	173.4	172.2	170.2	168.1	165.4	157.6	153.7	149.9	146.3
12200	189.9	177.2	176.0	174.8	172.8	170.7	167.9	159.9	155.9	152.1	148.4
CLIMB LIMIT WT (1000 LB)	163.5	162.0	161.9	161.7	160.1	158.3	155.0	144.8	139.5	134.7	130.1

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5600	125.3	114.4	113.7	112.5	111.3	109.8	107.6	102.5	100.1	97.7	95.4
5800	127.5	116.4	115.7	114.5	113.3	111.7	109.5	104.3	101.8	99.4	97.0
6200	131.7	120.1	119.4	118.1	116.9	115.3	112.9	107.6	105.0	102.5	100.0
6600	135.7	123.7	122.9	121.6	120.4	118.7	116.3	110.7	108.0	105.4	102.9
7000	139.7	127.3	126.5	125.1	123.8	122.1	119.6	113.8	111.1	108.4	105.8
7400	143.5	130.8	130.0	128.6	127.2	125.4	122.9	117.0	114.1	111.4	108.7
7800	147.3	134.2	133.3	131.9	130.5	128.7	126.1	120.0	117.1	114.2	111.5
8200	151.0	137.5	136.6	135.2	133.7	131.9	129.2	122.9	119.9	117.0	114.2
8600	154.5	140.7	139.8	138.3	136.8	134.9	132.1	125.7	122.6	119.6	116.7
9000	157.8	143.7	142.7	141.2	139.7	137.7	134.9	128.3	125.1	122.1	119.1
9400	160.7	146.3	145.3	143.8	142.2	140.2	137.3	130.6	127.4	124.3	121.2
9800	163.6	148.9	147.9	146.3	144.8	142.7	139.7	132.9	129.6	126.4	123.3
10200	166.5	151.5	150.5	148.9	147.3	145.2	142.1	135.2	131.8	128.5	125.4
10600	169.4	154.1	153.0	151.4	149.8	147.6	144.5	137.4	134.0	130.6	127.4
11000	172.2	156.6	155.6	153.9	152.2	150.0	146.9	139.6	136.1	132.7	129.4
11400	175.0	159.1	158.0	156.3	154.6	152.4	149.2	141.8	138.2	134.8	131.4
11800	177.8	161.6	160.5	158.7	157.0	154.7	151.5	143.9	140.3	136.8	133.3
12200	180.5	164.0	162.9	161.1	159.3	157.0	153.7	146.0	142.3	138.7	135.2
CLIMB LIMIT WT (1000 LB)	153.1	151.5	151.3	149.8	148.3	145.7	141.0	130.8	126.1	121.6	117.2

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5600	115.3	105.8	104.6	103.3	102.0	100.5	98.2	93.6	91.4	89.2	87.0
5800	117.3	107.6	106.4	105.1	103.8	102.2	99.9	95.2	92.9	90.7	88.5
6200	121.0	111.0	109.7	108.4	107.0	105.4	103.0	98.1	95.7	93.5	91.1
6600	124.7	114.3	112.9	111.6	110.1	108.5	106.0	100.9	98.5	96.1	93.7
7000	128.2	117.6	116.1	114.7	113.2	111.5	108.9	103.7	101.2	98.7	96.3
7400	131.8	120.8	119.3	117.9	116.4	114.6	111.9	106.6	104.0	101.4	98.9
7800	135.2	123.9	122.4	120.9	119.4	117.5	114.8	109.3	106.6	104.0	101.4
8200	138.6	127.0	125.4	123.9	122.3	120.4	117.6	111.9	109.2	106.5	103.8
8600	141.8	129.9	128.3	126.7	125.0	123.1	120.2	114.4	111.6	108.9	106.1
9000	144.8	132.6	130.9	129.3	127.6	125.7	122.7	116.7	113.9	111.0	108.2
9400	147.4	135.0	133.3	131.6	129.9	127.9	124.9	118.8	115.9	113.0	110.1
9800	150.0	137.3	135.6	133.9	132.2	130.1	127.1	120.9	117.9	114.9	112.0
10200	152.7	139.7	137.9	136.2	134.4	132.3	129.2	122.9	119.8	116.8	113.8
10600	155.3	142.0	140.2	138.5	136.7	134.5	131.3	124.9	121.7	118.7	115.6
11000	157.8	144.3	142.5	140.7	138.8	136.7	133.4	126.8	123.6	120.5	117.4
11400	160.3	146.6	144.7	142.9	141.0	138.8	135.5	128.7	125.5	122.3	119.1
11800	162.8	148.8	146.9	145.1	143.1	140.9	137.5	130.6	127.3	124.1	120.9
12200	165.2	151.0	149.1	147.2	145.2	142.9	139.5	132.5	129.1	125.9	122.5
CLIMB LIMIT WT (1000 LB)	140.5	139.1	137.4	135.7	133.7	130.9	126.4	117.5	113.3	109.1	104.9

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
5400	107.0	98.7	97.8	96.6	95.0	93.5	91.7	89.1	86.2	83.2	80.4
5800	110.8	102.3	101.3	100.1	98.5	96.9	95.0	92.4	89.4	86.3	83.4
6200	114.4	105.6	104.6	103.3	101.7	100.0	98.1	95.4	92.3	89.2	86.1
6600	117.8	108.8	107.8	106.4	104.7	103.0	101.1	98.3	95.1	91.9	88.7
7000	121.0	111.8	110.8	109.4	107.6	105.9	103.9	101.0	97.7	94.4	91.2
7400	124.0	114.6	113.5	112.1	110.3	108.5	106.5	103.5	100.2	96.8	93.5
7800	127.0	117.3	116.2	114.8	112.9	111.1	109.0	106.0	102.5	99.1	95.7
8200	130.0	120.1	119.0	117.5	115.6	113.8	111.6	108.5	105.0	101.5	98.0
8600	132.9	122.8	121.7	120.2	118.3	116.3	114.1	111.0	107.4	103.8	100.3
9000	135.6	125.3	124.2	122.6	120.6	118.7	116.5	113.2	109.5	105.9	102.3
9400	138.2	127.7	126.5	124.9	122.9	120.9	118.6	115.3	111.6	107.8	104.1
9800	140.7	130.0	128.8	127.1	125.1	123.1	120.7	117.4	113.6	109.7	106.0
10200	143.2	132.2	131.0	129.4	127.3	125.2	122.8	119.4	115.5	111.6	107.8
10600	145.7	134.5	133.2	131.5	129.4	127.3	124.9	121.4	117.4	113.4	109.5
11000	148.1	136.7	135.4	133.7	131.5	129.4	126.9	123.3	119.3	115.2	111.2
11400	150.5	138.9	137.6	135.8	133.6	131.4	128.9	125.2	121.1	116.9	112.9
11800	152.8	141.0	139.7	137.9	135.6	133.4	130.8	127.1	122.9	118.7	114.5
12200	155.1	143.1	141.7	139.9	137.6	135.3	132.7	128.9	124.7	120.3	116.1
CLIMB LIMIT WT (1000 LB)	133.6	131.7	130.5	128.7	126.5	124.4	121.3	116.3	110.7	105.1	99.6

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
5400	101.1	92.9	92.0	90.8	89.4	87.9	86.1	83.9	81.6	79.2	76.9
5800	104.7	96.3	95.4	94.1	92.6	91.1	89.3	87.0	84.6	82.1	79.8
6200	108.1	99.4	98.5	97.2	95.7	94.1	92.2	89.9	87.4	84.9	82.4
6600	111.4	102.4	101.4	100.1	98.5	96.9	95.0	92.6	90.0	87.4	84.9
7000	114.5	105.3	104.3	102.9	101.3	99.6	97.6	95.2	92.5	89.9	87.3
7400	117.3	107.9	106.9	105.5	103.8	102.1	100.1	97.5	94.9	92.1	89.5
7800	120.1	110.5	109.4	108.0	106.3	104.6	102.5	99.9	97.1	94.3	91.6
8200	123.0	113.1	112.0	110.6	108.8	107.0	104.9	102.3	99.5	96.6	93.8
8600	125.7	115.7	114.6	113.1	111.3	109.5	107.3	104.6	101.7	98.8	96.0
9000	128.3	118.0	116.9	115.4	113.5	111.7	109.5	106.7	103.8	100.8	97.9
9400	130.7	120.2	119.0	117.5	115.6	113.7	111.5	108.6	105.6	102.6	99.6
9800	133.1	122.4	121.2	119.6	117.7	115.8	113.5	110.6	107.5	104.4	101.4
10200	135.4	124.5	123.3	121.7	119.7	117.8	115.4	112.5	109.4	106.2	103.1
10600	137.7	126.6	125.4	123.7	121.7	119.7	117.3	114.3	111.1	107.9	104.8
11000	140.0	128.6	127.4	125.7	123.7	121.6	119.2	116.1	112.9	109.6	106.4
11400	142.2	130.6	129.4	127.7	125.6	123.5	121.0	117.9	114.6	111.2	108.0
11800	144.4	132.6	131.3	129.6	127.5	125.4	122.8	119.6	116.3	112.8	109.5
12200	146.6	134.5	133.2	131.5	129.3	127.2	124.6	121.3	117.9	114.4	111.0
CLIMB LIMIT WT (1000 LB)	126.8	123.9	122.6	120.9	118.9	116.8	113.6	109.4	104.8	100.3	96.0

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3100 lb.

With engine anti-ice on, decrease field limit weight by 2700 lb and climb limit weight by 4000 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 3800 lb and climb limit weight by 6400 lb.

Takeoff Obstacle Limit Weight
Sea Level, 30°C & Below, Zero Wind
Based on engine bleed for packs on and anti-ice off
Reference Obstacle Limit Weight (1000 LB)

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	174.8								
50	161.7	177.5	189.2						
100	151.3	166.7	178.1	186.9					
150	143.1	158.0	169.6	178.4	185.5				
200	136.4	150.7	162.3	171.4	178.6	184.5	189.3		
250	130.5	144.5	155.9	165.1	172.6	178.6	183.7	188.0	
300	125.2	139.1	150.3	159.6	167.2	173.4	178.7	183.1	186.9
350	120.5	134.2	145.3	154.5	162.2	168.7	174.1	178.6	182.6
400	116.2	129.7	140.7	149.9	157.7	164.3	169.8	174.5	178.6
450	112.2	125.7	136.6	145.7	153.5	160.1	165.8	170.7	174.9
500	108.5	121.9	132.8	141.8	149.6	156.3	162.1	167.0	171.4
550	105.1	118.4	129.2	138.3	146.0	152.7	158.5	163.6	168.0
600	101.9	115.1	125.8	134.9	142.6	149.3	155.2	160.3	164.8
650	98.9	112.1	122.7	131.7	139.4	146.2	152.1	157.2	161.8
700	96.1	109.2	119.7	128.7	136.4	143.1	149.1	154.3	158.9
750	93.4	106.4	116.9	125.9	133.6	140.3	146.2	151.5	156.2
800	90.9	103.8	114.3	123.2	130.9	137.6	143.5	148.8	153.5
850		101.3	111.8	120.6	128.3	135.0	140.9	146.2	151.0
900		99.0	109.4	118.2	125.9	132.6	138.5	143.8	148.6
950		96.7	107.1	115.9	123.5	130.2	136.1	141.4	146.2
1000		94.6	105.0	113.7	121.2	127.9	133.9	139.2	144.0

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
30 & BELOW	0	0	0	0	0	0
32	-1.3	-1.7	-2.0	-2.4	-2.7	-3.1
34	-2.6	-3.3	-4.1	-4.8	-5.5	-6.2
36	-4.0	-5.0	-6.1	-7.1	-8.2	-9.2
38	-5.3	-6.7	-8.1	-9.5	-10.9	-12.3
40	-6.6	-8.4	-10.1	-11.9	-13.7	-15.4
42	-7.9	-10.0	-12.1	-14.2	-16.3	-18.3
44	-9.3	-11.7	-14.1	-16.5	-18.9	-21.3
46	-10.6	-13.3	-16.0	-18.8	-21.5	-24.2
48	-11.9	-15.0	-18.0	-21.1	-24.1	-27.1
50	-13.3	-16.6	-20.0	-23.4	-26.7	-30.1

Takeoff Obstacle Limit Weight**Pressure Altitude Adjustments**

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
S.L. & BELOW	0	0	0	0	0	0
1000	-3.2	-3.9	-4.6	-5.3	-6.0	-6.7
2000	-6.4	-7.8	-9.2	-10.6	-12.0	-13.4
3000	-9.6	-11.7	-13.8	-15.9	-18.0	-20.1
4000	-12.8	-15.6	-18.4	-21.2	-24.0	-26.8
5000	-15.9	-19.3	-22.8	-26.3	-29.8	-33.3
6000	-18.9	-23.1	-27.2	-31.4	-35.6	-39.7
7000	-21.9	-26.8	-31.6	-36.5	-41.3	-46.2
8000	-25.0	-30.5	-36.0	-41.6	-47.1	-52.7
9000	-28.0	-34.2	-40.5	-46.8	-53.1	-59.4
10000	-31.0	-38.0	-45.0	-52.0	-59.0	-66.1

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
15 TW	-18.6	-18.1	-17.5	-17.0	-16.4	-15.8
10 TW	-12.4	-12.0	-11.7	-11.3	-10.9	-10.6
5 TW	-6.2	-6.0	-5.8	-5.7	-5.5	-5.3
0	0	0	0	0	0	0
10 HW	2.6	2.4	2.3	2.1	1.9	1.7
20 HW	5.3	4.9	4.5	4.2	3.8	3.4
30 HW	8.1	7.5	6.9	6.3	5.7	5.2
40 HW	10.9	10.1	9.3	8.5	7.7	6.9

With engine bleed for packs off, increase weight by 1300 lb.

With engine anti-ice on, decrease weight by 600 lb.

With engine and wing anti-ice on, decrease weight by 3000 lb (optional system).

Takeoff Obstacle Limit Weight - High Altitudes**Flaps 5****10000 ft, 10°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	122.8	134.5	141.9	147.4					
50	114.2	125.2	133.8	140.1	144.0	147.4			
100	107.4	117.8	126.0	132.4	137.5	141.1	143.9	146.2	148.2
150	101.8	111.9	120.0	126.4	131.6	135.8	139.2	141.6	143.7
200	97.1	107.0	115.0	121.4	126.6	131.0	134.5	137.5	140.0
250	92.9	102.8	110.6	117.0	122.3	126.8	130.5	133.6	136.3
300		98.9	106.8	113.2	118.5	123.0	126.8	130.1	132.9
350		95.5	103.3	109.7	115.1	119.6	123.5	126.9	129.7
400		92.4	100.1	106.5	111.9	116.5	120.5	123.9	126.8
450			97.2	103.6	109.0	113.6	117.7	121.1	124.2
500			94.4	100.8	106.3	111.0	115.0	118.5	121.6
550			91.9	98.3	103.7	108.4	112.5	116.1	119.2
600				95.9	101.4	106.1	110.2	113.8	117.0
650				93.6	99.1	103.8	108.0	111.6	114.8
700				91.5	97.0	101.7	105.8	109.5	112.8
750					94.9	99.7	103.8	107.5	110.8
800					93.0	97.8	101.9	105.6	109.0
850					91.2	95.9	100.1	103.8	107.2
900						94.1	98.3	102.1	105.4
950						92.5	96.7	100.4	103.8
1000						90.8	95.0	98.8	102.2

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
10 & BELOW	0	0	0	0	0	0	0
12	-0.8	-0.9	-1.0	-1.1	-1.2	-1.3	-1.4
14	-1.6	-1.8	-2.0	-2.2	-2.4	-2.6	-2.9
16	-2.4	-2.7	-3.0	-3.3	-3.7	-4.0	-4.3
18	-3.2	-3.6	-4.0	-4.4	-4.9	-5.3	-5.7
20	-4.0	-4.5	-5.0	-5.6	-6.1	-6.6	-7.2
22	-4.8	-5.4	-6.0	-6.7	-7.3	-7.9	-8.6
24	-5.6	-6.3	-7.0	-7.8	-8.5	-9.3	-10.0
26	-6.4	-7.2	-8.0	-8.9	-9.7	-10.6	-11.4
28	-7.1	-8.1	-9.1	-10.0	-11.0	-11.9	-12.9
30	-7.9	-9.0	-10.1	-11.1	-12.2	-13.2	-14.3
32	-9.3	-10.5	-11.8	-13.0	-14.2	-15.5	-16.7
34	-10.6	-12.0	-13.4	-14.9	-16.3	-17.7	-19.1
36	-12.0	-13.6	-15.1	-16.7	-18.3	-19.9	-21.5
38	-13.3	-15.1	-16.8	-18.6	-20.4	-22.1	-23.9
40	-14.6	-16.6	-18.5	-20.5	-22.4	-24.4	-26.3
42	-15.6	-17.7	-19.9	-22.1	-24.2	-26.4	-28.6
44	-16.5	-18.9	-21.3	-23.7	-26.1	-28.4	-30.8
46	-17.4	-20.0	-22.7	-25.3	-27.9	-30.5	-33.1
48	-18.4	-21.2	-24.0	-26.9	-29.7	-32.5	-35.4
50	-19.3	-22.4	-25.4	-28.5	-31.5	-34.6	-37.6

Takeoff Obstacle Limit Weight - High Altitudes**Flaps 5****Pressure Altitude Adjustments**

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-3.7	-4.0	-4.4	-4.8	-5.2	-5.5	-5.9
12000	-7.3	-8.1	-8.8	-9.6	-10.3	-11.1	-11.9
13000	-10.9	-12.1	-13.2	-14.3	-15.5	-16.6	-17.7
13500	-12.8	-14.0	-15.6	-16.9	-18.0	-19.6	-20.4

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
15 TW	-14.0	-13.4	-12.9	-12.4	-11.9	-11.4	-10.9
10 TW	-9.3	-9.0	-8.6	-8.3	-7.9	-7.6	-7.2
5 TW	-4.7	-4.5	-4.3	-4.1	-4.0	-3.8	-3.6
0	0	0	0	0	0	0	0
10 HW	1.8	1.6	1.5	1.4	1.2	1.1	0.9
20 HW	3.6	3.3	3.0	2.7	2.4	2.1	1.9
30 HW	5.4	4.9	4.5	4.1	3.6	3.2	2.8
40 HW	7.2	6.6	6.0	5.4	4.9	4.3	3.7

With engine bleed for packs off, increase weight by 1500 lb.

With engine anti-ice on, decrease weight by 4400 lb.

With engine and wing anti-ice on, decrease weight by 6800 lb (optional system).

Minimum Takeoff Weight (26K Derate)
Weight Limit (1000 LB)

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)								
	S.L. & BELOW	1000	2000	3000	4000	5000	6000	7000	8000 & ABOVE
50	109.4	106.5	103.6	100.7	97.7	94.4	91.1	87.7	
45	113.3	110.3	107.3	104.3	101.3	97.9	94.6	91.2	87.8
40	116.9	113.8	110.7	107.6	104.6	101.2	97.9	94.6	91.3
35	120.2	117.1	113.9	110.8	107.6	104.2	100.7	97.3	93.8
30	123.3	120.0	116.7	113.4	110.1	106.6	103.1	99.6	96.1
25	124.5	120.2	117.2	114.2	111.2	107.8	104.5	101.1	97.7
20	125.0	120.4	117.5	114.6	111.7	108.5	105.3	102.0	98.8
15	125.0	120.4	117.5	114.6	111.7	108.7	105.7	102.7	99.7
10 & BELOW	125.0	120.4	117.5	114.6	111.7	108.7	105.7	102.9	100.0

Takeoff at the 26K Derate thrust rating requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the assumed temperature method of reducing thrust may not be used as a means to comply with this restriction.

**Takeoff Field Corrections - Dry Runway 26K Derate
Slope Corrections**

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4250	4240	4220	4210	4200	4120	4040	3960	3880
4600	4710	4680	4650	4630	4600	4490	4380	4280	4170
5000	5170	5130	5090	5040	5000	4870	4730	4600	4460
5400	5630	5570	5520	5460	5400	5240	5080	4910	4750
5800	6090	6020	5950	5870	5800	5610	5420	5230	5040
6200	6560	6470	6380	6290	6200	5980	5770	5550	5340
6600	7020	6910	6810	6700	6600	6360	6110	5870	5630
7000	7480	7360	7240	7120	7000	6730	6460	6190	5920
7400	7940	7800	7670	7530	7400	7100	6810	6510	6210
7800	8400	8250	8100	7950	7800	7480	7150	6830	6500
8200	8860	8700	8530	8370	8200	7850	7500	7150	6800
8600	9320	9140	8960	8780	8600	8220	7840	7470	7090
9000	9790	9590	9390	9200	9000	8600	8190	7790	7380
9400	10250	10040	9820	9610	9400	8970	8540	8100	7670
9800	10710	10480	10250	10030	9800	9340	8880	8420	7960
10200	11170	10930	10690	10440	10200	9710	9230	8740	8260
10600	11630	11370	11120	10860	10600	10090	9570	9060	8550
11000	12090	11820	11550	11270	11000	10460	9920	9380	8840
11400	12560	12270	11980	11690	11400	10830	10270	9700	9130
11800	13020	12710	12410	12100	11800	11210	10610	10020	9420

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3260	3570	3890	4200	4470	4710	4930	5120
4600	3580	3920	4260	4600	4870	5130	5350	5560
5000	3900	4270	4630	5000	5280	5540	5780	5990
5400	4220	4610	5010	5400	5690	5960	6200	6430
5800	4540	4960	5380	5800	6100	6380	6630	6870
6200	4860	5310	5750	6200	6510	6790	7060	7300
6600	5180	5650	6130	6600	6910	7210	7480	7740
7000	5500	6000	6500	7000	7320	7630	7910	8180
7400	5820	6350	6870	7400	7730	8040	8340	8610
7800	6140	6690	7250	7800	8140	8460	8760	9050
8200	6460	7040	7620	8200	8550	8880	9190	9490
8600	6780	7390	7990	8600	8950	9290	9610	9920
9000	7100	7730	8370	9000	9360	9710	10040	10360
9400	7420	8080	8740	9400	9770	10130	10470	10800
9800	7740	8430	9110	9800	10180	10540	10890	11230
10200	8060	8770	9490	10200	10590	10960	11320	11670
10600	8380	9120	9860	10600	10990	11380	11750	12110
11000	8700	9470	10230	11000	11400	11790	12170	12540
11400	9020	9810	10610	11400	11810	12210	12600	12980
11800	9340	10160	10980	11800	12220	12630	13020	13420

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4400	142.6	132.5	131.7	130.9	130.1	129.4	128.6	123.2	120.5	117.7	114.8
4600	146.0	135.8	135.0	134.2	133.4	132.6	131.8	126.2	123.5	120.7	117.7
5000	152.5	141.8	141.0	140.1	139.3	138.5	137.6	131.8	129.0	126.0	123.0
5400	158.6	147.4	146.5	145.6	144.8	143.9	143.1	137.0	134.0	131.0	127.8
5800	164.5	152.9	152.0	151.0	150.1	149.2	148.4	142.0	138.9	135.8	132.4
6200	170.2	158.2	157.2	156.3	155.3	154.4	153.5	146.9	143.7	140.4	136.9
6600	175.8	163.3	162.3	161.3	160.3	159.4	158.4	151.7	148.3	144.9	141.3
7000	181.2	168.3	167.2	166.2	165.2	164.2	163.3	156.2	152.8	149.3	145.6
7400	186.3	173.1	172.0	171.0	169.9	168.9	167.9	160.7	157.1	153.5	149.7
7800	189.9	177.7	176.6	175.6	174.5	173.5	172.4	165.0	161.4	157.7	153.7
8200	189.9	182.4	181.3	180.1	179.1	178.0	176.9	169.3	165.6	161.8	157.7
8600	189.9	186.8	185.7	184.5	183.4	182.3	181.2	173.4	169.6	165.7	161.5
9000	189.9	189.9	189.7	188.5	187.4	186.3	185.1	177.2	173.2	169.3	165.0
9400	189.9	189.9	189.9	189.9	189.9	189.9	188.4	180.4	176.4	172.3	168.0
9800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	183.5	179.4	175.3	170.9
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	186.4	182.3	178.1	173.7
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.3	185.1	180.9	176.4
11000	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.9	183.6	179.1
CLIMB LIMIT WT (1000 LB)	189.5	188.3	188.0	187.8	187.5	187.2	186.8	174.1	168.1	162.3	156.3

2000 FT Pressure Altitude

CORRD FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4400	135.5	125.4	124.7	124.0	123.3	122.6	120.6	115.2	112.5	109.8	107.0
4600	138.8	128.6	127.8	127.1	126.3	125.6	123.6	118.2	115.4	112.6	109.7
5000	145.0	134.3	133.5	132.7	131.9	131.2	129.1	123.4	120.5	117.6	114.6
5400	150.7	139.5	138.7	137.9	137.1	136.4	134.1	128.2	125.2	122.2	119.0
5800	156.3	144.7	143.8	143.0	142.2	141.4	139.0	132.9	129.7	126.6	123.3
6200	161.7	149.7	148.8	147.9	147.0	146.2	143.8	137.4	134.1	130.9	127.5
6600	167.0	154.5	153.6	152.7	151.8	150.9	148.4	141.8	138.4	135.0	131.5
7000	172.1	159.2	158.2	157.3	156.4	155.5	152.9	146.1	142.6	139.1	135.4
7400	177.0	163.7	162.7	161.8	160.8	159.9	157.3	150.2	146.7	143.1	139.3
7800	181.7	168.1	167.1	166.1	165.2	164.2	161.5	154.3	150.6	146.9	143.1
8200	186.5	172.5	171.5	170.4	169.5	168.5	165.7	158.3	154.5	150.7	146.8
8600	189.9	176.7	175.6	174.6	173.6	172.6	169.7	162.1	158.2	154.4	150.3
9000	189.9	180.5	179.4	178.3	177.3	176.3	173.4	165.6	161.7	157.7	153.6
9400	189.9	183.7	182.6	181.5	180.5	179.5	176.5	168.6	164.6	160.6	156.4
9800	189.9	186.9	185.8	184.7	183.6	182.6	179.5	171.5	167.5	163.4	159.1
10200	189.9	189.9	188.8	187.7	186.6	185.5	182.5	174.4	170.2	166.1	161.7
10600	189.9	189.9	189.9	189.9	189.5	188.4	185.3	177.1	172.9	168.7	164.3
11000	189.9	189.9	189.9	189.9	189.9	189.9	188.1	179.7	175.5	171.2	166.8
CLIMB LIMIT WT (1000 LB)	180.6	179.5	179.3	179.1	178.9	178.7	174.3	162.9	157.3	151.8	146.4

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4400	127.7	117.8	117.1	116.4	115.6	114.1	112.3	107.2	104.6	102.0	99.6
4600	130.8	120.8	120.0	119.3	118.6	117.0	115.1	110.0	107.3	104.6	102.2
5000	136.6	126.1	125.3	124.6	123.8	122.2	120.2	114.9	112.1	109.3	106.7
5400	142.0	131.1	130.2	129.4	128.7	126.9	124.9	119.3	116.4	113.5	110.8
5800	147.2	135.9	135.0	134.2	133.4	131.6	129.5	123.6	120.6	117.6	114.8
6200	152.3	140.5	139.6	138.7	137.9	136.0	133.8	127.8	124.7	121.5	118.6
6600	157.2	145.0	144.1	143.2	142.3	140.4	138.1	131.9	128.6	125.3	122.3
7000	162.0	149.4	148.4	147.5	146.6	144.6	142.3	135.8	132.5	129.1	126.0
7400	166.6	153.7	152.7	151.7	150.8	148.7	146.3	139.7	136.2	132.7	129.6
7800	171.1	157.8	156.8	155.8	154.8	152.7	150.3	143.4	139.9	136.3	133.0
8200	175.6	161.9	160.8	159.8	158.8	156.7	154.2	147.1	143.5	139.8	136.5
8600	179.8	165.8	164.7	163.7	162.7	160.5	157.9	150.7	147.0	143.2	139.8
9000	183.7	169.4	168.3	167.2	166.2	164.0	161.3	154.0	150.2	146.3	142.8
9400	187.0	172.5	171.3	170.3	169.2	166.9	164.2	156.8	152.9	149.0	145.4
9800	189.9	175.4	174.3	173.2	172.1	169.8	167.1	159.5	155.6	151.6	148.0
10200	189.9	178.3	177.1	176.0	175.0	172.6	169.8	162.2	158.2	154.2	150.5
10600	189.9	181.1	179.9	178.8	177.7	175.3	172.5	164.7	160.7	156.6	152.9
11000	189.9	183.8	182.6	181.5	180.4	177.9	175.1	167.2	163.1	159.0	155.2
CLIMB LIMIT WT (1000 LB)	170.0	168.8	168.7	168.5	168.3	165.8	162.3	152.1	146.9	141.7	137.1

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4400	119.8	109.9	109.2	108.6	107.2	105.7	104.0	99.3	96.9	94.7	92.6
4600	122.8	112.7	112.0	111.3	109.9	108.5	106.6	101.9	99.4	97.2	95.0
5000	128.2	117.7	117.0	116.3	114.8	113.3	111.4	106.4	103.9	101.5	99.3
5400	133.2	122.3	121.5	120.8	119.2	117.7	115.7	110.5	107.8	105.4	103.0
5800	138.1	126.8	125.9	125.2	123.6	121.9	119.8	114.5	111.7	109.2	106.7
6200	142.8	131.0	130.2	129.4	127.7	126.0	123.9	118.3	115.4	112.8	110.2
6600	147.4	135.2	134.3	133.5	131.8	130.0	127.8	122.0	119.0	116.3	113.6
7000	151.9	139.3	138.4	137.5	135.7	133.9	131.6	125.6	122.5	119.7	117.0
7400	156.2	143.2	142.3	141.4	139.6	137.7	135.3	129.2	126.0	123.1	120.3
7800	160.4	147.1	146.1	145.2	143.3	141.4	139.0	132.7	129.4	126.4	123.6
8200	164.6	150.9	149.9	149.0	147.1	145.1	142.6	136.1	132.8	129.7	126.7
8600	168.6	154.5	153.6	152.6	150.6	148.6	146.0	139.4	136.0	132.8	129.8
9000	172.2	157.9	156.9	155.9	153.9	151.8	149.2	142.4	138.9	135.7	132.6
9400	175.3	160.8	159.7	158.7	156.7	154.6	151.9	145.0	141.5	138.2	135.1
9800	178.3	163.6	162.5	161.5	159.4	157.3	154.6	147.6	144.0	140.7	137.5
10200	181.2	166.3	165.2	164.2	162.1	159.9	157.2	150.1	146.4	143.1	139.8
10600	184.0	168.9	167.8	166.7	164.6	162.4	159.6	152.4	148.7	145.3	142.1
11000	186.8	171.4	170.3	169.3	167.1	164.8	162.1	154.8	151.0	147.6	144.3
CLIMB LIMIT WT (1000 LB)	159.5	158.5	158.4	158.3	156.2	153.9	150.6	140.9	135.9	131.5	127.3

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4400	111.5	102.4	101.7	100.5	99.3	97.8	95.9	91.3	89.2	87.2	85.2
4600	114.4	105.0	104.3	103.1	101.8	100.3	98.4	93.7	91.6	89.5	87.5
5000	119.5	109.7	109.0	107.7	106.4	104.8	102.8	97.9	95.7	93.5	91.4
5400	124.1	113.9	113.2	111.8	110.4	108.8	106.7	101.6	99.3	97.0	94.8
5800	128.6	118.0	117.2	115.8	114.4	112.7	110.5	105.2	102.8	100.5	98.2
6200	133.0	121.9	121.2	119.7	118.2	116.4	114.1	108.7	106.2	103.7	101.3
6600	137.2	125.8	125.0	123.4	121.9	120.1	117.7	112.0	109.4	106.9	104.4
7000	141.3	129.5	128.7	127.1	125.5	123.6	121.2	115.3	112.7	110.1	107.5
7400	145.3	133.2	132.4	130.7	129.1	127.2	124.6	118.6	115.9	113.2	110.6
7800	149.3	136.8	135.9	134.2	132.6	130.6	128.0	121.8	119.0	116.2	113.5
8200	153.1	140.4	139.4	137.7	136.0	134.0	131.3	124.9	122.0	119.2	116.5
8600	156.8	143.7	142.8	141.0	139.3	137.2	134.5	127.9	125.0	122.1	119.2
9000	160.2	146.9	145.9	144.1	142.3	140.2	137.4	130.7	127.7	124.7	121.8
9400	163.1	149.6	148.6	146.8	144.9	142.8	139.9	133.2	130.1	127.1	124.2
9800	166.0	152.2	151.2	149.3	147.5	145.3	142.4	135.6	132.4	129.4	126.4
10200	168.7	154.7	153.7	151.8	150.0	147.7	144.8	137.8	134.7	131.6	128.6
10600	171.3	157.2	156.2	154.2	152.3	150.1	147.1	140.1	136.8	133.7	130.7
11000	173.9	159.6	158.5	156.6	154.7	152.4	149.4	142.2	139.0	135.8	132.7
CLIMB LIMIT WT (1000 LB)	149.5	148.6	148.5	146.8	144.9	142.0	137.8	128.2	124.0	120.1	116.1

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4400	103.8	95.5	94.4	93.2	92.1	90.7	88.7	84.3	82.1	80.0	77.9
4600	106.5	98.0	96.8	95.7	94.5	93.1	91.1	86.6	84.3	82.2	80.0
5000	111.2	102.4	101.2	99.9	98.7	97.2	95.1	90.4	88.1	85.9	83.6
5400	115.5	106.3	105.0	103.7	102.5	100.9	98.7	93.8	91.4	89.1	86.7
5800	119.7	110.1	108.7	107.4	106.1	104.5	102.2	97.1	94.6	92.1	89.7
6200	123.7	113.7	112.3	111.0	109.6	107.9	105.5	100.2	97.6	95.1	92.5
6600	127.6	117.3	115.8	114.4	113.0	111.3	108.8	103.3	100.6	98.0	95.3
7000	131.4	120.7	119.3	117.8	116.3	114.5	112.0	106.3	103.6	100.8	98.1
7400	135.1	124.2	122.7	121.2	119.6	117.8	115.2	109.4	106.5	103.7	100.9
7800	138.8	127.5	125.9	124.4	122.8	121.0	118.3	112.3	109.4	106.5	103.6
8200	142.4	130.8	129.2	127.6	126.0	124.1	121.3	115.2	112.2	109.2	106.2
8600	145.8	133.9	132.3	130.7	129.0	127.1	124.2	117.9	114.8	111.8	108.8
9000	148.9	136.9	135.2	133.5	131.8	129.8	126.9	120.5	117.4	114.3	111.2
9400	151.7	139.4	137.7	136.0	134.3	132.3	129.3	122.8	119.6	116.5	113.3
9800	154.3	141.9	140.1	138.5	136.7	134.6	131.7	125.0	121.8	118.6	115.4
10200	156.9	144.3	142.5	140.8	139.0	136.9	133.9	127.2	123.9	120.6	117.4
10600	159.4	146.6	144.8	143.0	141.3	139.1	136.1	129.2	125.9	122.6	119.3
11000	161.8	148.8	147.0	145.2	143.4	141.3	138.2	131.3	127.9	124.6	121.2
CLIMB LIMIT WT (1000 LB)	140.5	139.1	137.4	135.7	133.7	131.0	126.9	117.9	113.6	109.3	105.0

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Dry Runway 26K Derate**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4300	96.7	89.5	88.6	87.4	85.9	84.5	82.7	80.4	77.8	75.2	72.6
4600	100.5	93.0	92.1	90.9	89.4	87.9	86.1	83.7	81.0	78.3	75.6
5000	105.0	97.3	96.4	95.1	93.5	92.0	90.1	87.6	84.9	82.1	79.4
5400	109.1	101.2	100.3	99.0	97.4	95.8	93.9	91.3	88.5	85.7	82.8
5800	113.1	105.0	104.0	102.7	101.0	99.4	97.5	94.8	92.0	89.0	86.1
6200	116.8	108.5	107.5	106.2	104.5	102.8	100.8	98.1	95.2	92.1	89.2
6600	120.4	111.9	110.9	109.5	107.7	106.0	104.0	101.2	98.2	95.1	92.0
7000	123.8	115.1	114.1	112.6	110.8	109.1	107.0	104.1	101.0	97.8	94.7
7400	127.1	118.1	117.0	115.5	113.7	111.9	109.7	106.8	103.6	100.3	97.1
7800	130.3	121.0	119.9	118.4	116.5	114.6	112.4	109.4	106.2	102.8	99.5
8200	133.4	123.9	122.8	121.2	119.3	117.4	115.1	112.1	108.7	105.2	101.8
8600	136.5	126.8	125.6	124.0	122.1	120.1	117.8	114.6	111.2	107.6	104.2
9000	139.5	129.5	128.3	126.7	124.7	122.6	120.3	117.1	113.5	109.9	106.3
9400	142.3	132.1	130.9	129.2	127.1	125.1	122.7	119.4	115.8	112.0	108.4
9800	144.9	134.6	133.3	131.6	129.5	127.4	124.9	121.6	117.9	114.1	110.4
10200	147.4	136.8	135.6	133.8	131.7	129.5	127.0	123.6	119.8	116.0	112.2
10600	149.8	139.0	137.7	135.9	133.7	131.5	129.0	125.5	121.6	117.7	113.8
11000	152.1	141.1	139.8	137.9	135.7	133.5	130.8	127.3	123.4	119.4	115.4
CLIMB LIMIT WT (1000 LB)	133.6	131.7	130.5	128.7	126.5	124.4	121.2	116.7	111.7	106.7	101.8

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4300	91.3	84.0	83.1	82.0	80.6	79.2	77.5	75.5	73.3	71.1	69.0
4600	94.8	87.4	86.5	85.3	83.9	82.4	80.7	78.6	76.4	74.1	71.9
5000	99.2	91.5	90.5	89.3	87.8	86.4	84.6	82.4	80.1	77.8	75.5
5400	103.2	95.2	94.3	93.1	91.5	90.0	88.2	86.0	83.7	81.2	78.9
5800	107.0	98.8	97.9	96.6	95.0	93.5	91.6	89.3	87.0	84.5	82.1
6200	110.6	102.2	101.2	99.9	98.3	96.7	94.8	92.5	90.0	87.5	85.0
6600	114.0	105.4	104.4	103.1	101.4	99.8	97.8	95.4	92.9	90.3	87.8
7000	117.2	108.5	107.4	106.1	104.4	102.7	100.6	98.2	95.6	93.0	90.4
7400	120.3	111.3	110.2	108.8	107.0	105.3	103.2	100.7	98.1	95.3	92.6
7800	123.3	114.0	112.9	111.5	109.7	107.9	105.7	103.1	100.4	97.6	94.9
8200	126.3	116.7	115.6	114.1	112.3	110.5	108.3	105.6	102.8	99.9	97.1
8600	129.2	119.4	118.3	116.7	114.9	113.0	110.7	108.0	105.2	102.2	99.3
9000	132.0	122.0	120.8	119.2	117.3	115.4	113.1	110.3	107.4	104.3	101.4
9400	134.6	124.4	123.2	121.6	119.6	117.7	115.3	112.4	109.5	106.4	103.4
9800	137.1	126.7	125.5	123.8	121.8	119.8	117.4	114.5	111.5	108.3	105.2
10200	139.4	128.8	127.6	125.9	123.9	121.8	119.3	116.4	113.3	110.0	106.9
10600	141.6	130.8	129.5	127.8	125.7	123.6	121.1	118.1	114.9	111.6	108.4
11000	143.8	132.7	131.4	129.7	127.6	125.4	122.9	119.8	116.6	113.2	109.9
CLIMB LIMIT WT (1000 LB)	126.8	123.9	122.6	120.9	118.9	116.8	113.7	109.7	105.5	101.3	97.2

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3100 lb.

With engine anti-ice on, decrease field limit weight by 3400 lb and climb limit weight by 4000 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 4500 lb and climb limit weight by 6400 lb.

Takeoff Field Corrections - Wet Runway (26K Derate)
Slope Corrections

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4270	4250	4240	4220	4200	4140	4080	4030	3970
4600	4740	4700	4670	4630	4600	4530	4450	4380	4300
5000	5200	5150	5100	5050	5000	4910	4820	4730	4640
5400	5660	5600	5530	5470	5400	5290	5190	5080	4970
5800	6130	6050	5960	5880	5800	5680	5550	5430	5310
6200	6590	6490	6400	6300	6200	6060	5920	5780	5640
6600	7060	6940	6830	6710	6600	6440	6290	6130	5980
7000	7520	7390	7260	7130	7000	6830	6660	6490	6310
7400	7980	7840	7690	7550	7400	7210	7030	6840	6650
7800	8450	8290	8120	7960	7800	7600	7390	7190	6990
8200	8910	8730	8560	8380	8200	7980	7760	7540	7320
8600	9380	9180	8990	8790	8600	8360	8130	7890	7660
9000	9840	9630	9420	9210	9000	8750	8500	8240	7990
9400	10300	10080	9850	9630	9400	9130	8860	8590	8330
9800	10770	10530	10280	10040	9800	9520	9230	8950	8660
10200	11230	10970	10720	10460	10200	9900	9600	9300	9000
10600	11690	11420	11150	10870	10600	10280	9970	9650	9330
11000	12160	11870	11580	11290	11000	10670	10330	10000	9670
11400	12620	12320	12010	11710	11400	11050	10700	10350	10000
11800	13090	12760	12440	12120	11800	11430	11070	10700	10340

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	2990	3390	3800	4200	4480	4760	5040	5330
4600	3330	3750	4180	4600	4890	5180	5480	5780
5000	3670	4110	4560	5000	5300	5610	5920	6230
5400	4010	4470	4940	5400	5710	6030	6350	6690
5800	4350	4830	5320	5800	6120	6450	6790	7140
6200	4690	5190	5700	6200	6530	6880	7230	7590
6600	5030	5550	6080	6600	6940	7300	7660	8040
7000	5370	5910	6460	7000	7350	7720	8100	8490
7400	5710	6270	6840	7400	7760	8140	8540	8950
7800	6050	6630	7220	7800	8180	8570	8970	9400
8200	6390	7000	7600	8200	8590	8990	9410	9850
8600	6730	7360	7980	8600	9000	9410	9850	10300
9000	7070	7720	8360	9000	9410	9840	10280	10760
9400	7420	8080	8740	9400	9820	10260	10720	11210
9800	7760	8440	9120	9800	10230	10680	11160	11660
10200	8100	8800	9500	10200	10640	11100	11600	12110
10600	8440	9160	9880	10600	11050	11530	12030	12560
11000	8780	9520	10260	11000	11460	11950	12470	13020
11400	9120	9880	10640	11400	11870	12370	12910	13470
11800	9460	10240	11020	11800	12280	12800	13340	13920

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5400	157.9	146.2	145.3	144.3	143.4	142.5	141.6	135.2	132.0	128.6	125.3
5800	163.7	151.5	150.5	149.6	148.6	147.7	146.7	140.1	136.7	133.2	129.8
6200	169.2	156.5	155.5	154.5	153.6	152.6	151.6	144.7	141.2	137.6	134.0
6600	174.6	161.4	160.4	159.4	158.4	157.3	156.3	149.2	145.5	141.8	138.1
7000	179.8	166.2	165.2	164.1	163.1	162.0	160.9	153.6	149.8	146.0	142.1
7400	185.0	171.0	169.9	168.8	167.7	166.7	165.5	158.0	154.1	150.1	146.1
7800	189.9	175.6	174.4	173.3	172.2	171.1	170.0	162.1	158.1	154.1	150.0
8200	189.9	180.0	178.8	177.6	176.5	175.4	174.2	166.2	162.1	157.9	153.7
8600	189.9	184.1	182.9	181.7	180.6	179.4	178.2	170.0	165.8	161.5	157.2
9000	189.9	188.0	186.8	185.6	184.4	183.2	182.0	173.6	169.3	164.9	160.6
9400	189.9	189.9	189.9	189.1	187.9	186.7	185.4	176.9	172.5	168.0	163.5
9800	189.9	189.9	189.9	189.9	189.9	189.9	188.8	180.1	175.6	171.1	166.5
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	183.3	178.7	174.1	169.4
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	186.5	181.8	177.0	172.3
11000	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.6	184.8	180.0	175.1
11400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	187.9	182.9	178.0
11800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	185.8	180.8
12200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	188.7	183.5
CLIMB LIMIT WT (1000 LB)	189.5	188.3	188.0	187.8	187.5	187.2	186.8	174.1	168.1	162.3	156.3

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5400	149.9	137.9	137.0	136.2	135.3	134.5	132.1	125.7	122.6	119.6	116.6
5800	155.4	142.8	141.9	141.1	140.2	139.3	136.8	130.2	127.0	123.9	120.8
6200	160.6	147.6	146.6	145.7	144.8	143.9	141.3	134.5	131.1	127.9	124.7
6600	165.6	152.2	151.2	150.2	149.3	148.4	145.7	138.6	135.1	131.8	128.4
7000	170.6	156.7	155.7	154.7	153.7	152.7	149.9	142.6	139.0	135.6	132.1
7400	175.5	161.1	160.1	159.1	158.1	157.1	154.2	146.7	143.0	139.4	135.8
7800	180.2	165.4	164.3	163.3	162.3	161.2	158.3	150.5	146.7	143.0	139.4
8200	184.7	169.5	168.4	167.3	166.3	165.2	162.2	154.2	150.3	146.5	142.8
8600	189.0	173.4	172.3	171.2	170.1	169.0	165.9	157.8	153.8	149.9	146.1
9000	189.9	177.1	176.0	174.8	173.7	172.6	169.5	161.1	157.0	153.1	149.1
9400	189.9	180.5	179.3	178.1	177.0	175.9	172.6	164.1	160.0	155.9	151.9
9800	189.9	183.8	182.6	181.4	180.2	179.1	175.8	167.1	162.8	158.7	154.6
10200	189.9	187.0	185.8	184.6	183.4	182.3	178.9	170.0	165.7	161.5	157.3
10600	189.9	189.9	189.0	187.8	186.6	185.4	182.0	172.9	168.5	164.2	159.9
11000	189.9	189.9	189.9	189.9	189.7	188.5	185.0	175.8	171.2	166.9	162.5
11400	189.9	189.9	189.9	189.9	189.9	189.9	188.0	178.6	174.0	169.5	165.1
11800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	181.4	176.7	172.2	167.7
12200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	184.2	179.4	174.8	170.2
CLIMB LIMIT WT (1000 LB)	180.6	179.5	179.3	179.1	178.9	178.7	174.3	162.9	157.3	151.8	146.4

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5400	140.5	128.7	127.8	127.0	126.1	124.4	122.3	116.8	113.9	111.2	108.8
5800	145.6	133.3	132.4	131.5	130.6	128.8	126.7	121.0	118.0	115.1	112.6
6200	150.4	137.7	136.7	135.8	134.9	133.0	130.8	124.9	121.8	118.8	116.2
6600	155.1	141.9	140.9	140.0	139.0	137.1	134.8	128.6	125.4	122.4	119.7
7000	159.7	146.1	145.1	144.1	143.1	141.1	138.7	132.3	129.0	125.9	123.1
7400	164.3	150.2	149.1	148.1	147.1	145.0	142.6	136.0	132.6	129.4	126.5
7800	168.7	154.2	153.1	152.0	151.0	148.9	146.3	139.6	136.1	132.7	129.8
8200	172.8	158.0	156.9	155.8	154.7	152.5	150.0	143.0	139.4	136.0	133.0
8600	176.8	161.6	160.5	159.4	158.3	156.0	153.4	146.3	142.6	139.1	136.0
9000	180.6	165.0	163.9	162.7	161.6	159.3	156.6	149.4	145.6	142.0	138.8
9400	184.0	168.1	166.9	165.8	164.6	162.3	159.6	152.1	148.3	144.6	141.4
9800	187.4	171.2	170.0	168.8	167.6	165.3	162.4	154.9	151.0	147.2	143.9
10200	189.9	174.2	173.0	171.7	170.6	168.1	165.3	157.5	153.5	149.7	146.3
10600	189.9	177.2	175.9	174.7	173.5	171.0	168.1	160.2	156.1	152.2	148.7
11000	189.9	180.1	178.8	177.6	176.3	173.8	170.8	162.8	158.6	154.6	151.1
11400	189.9	183.0	181.7	180.4	179.2	176.6	173.6	165.4	161.1	157.0	153.5
11800	189.9	185.9	184.6	183.3	182.0	179.4	176.3	167.9	163.6	159.5	155.8
12200	189.9	188.8	187.4	186.1	184.8	182.1	179.0	170.5	166.1	161.9	158.2
CLIMB LIMIT WT (1000 LB)	170.0	168.8	168.7	168.5	168.3	165.8	162.3	152.1	146.9	141.7	137.1

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5400	131.1	119.8	119.0	118.2	116.7	115.1	113.2	108.3	105.8	103.5	101.3
5800	135.8	124.0	123.2	122.4	120.8	119.2	117.2	112.1	109.5	107.1	104.8
6200	140.2	128.0	127.2	126.3	124.7	123.0	120.9	115.7	112.9	110.5	108.1
6600	144.6	131.9	131.0	130.2	128.5	126.7	124.6	119.1	116.3	113.7	111.3
7000	148.8	135.7	134.8	133.9	132.2	130.4	128.2	122.5	119.6	116.9	114.4
7400	153.0	139.5	138.6	137.7	135.9	134.0	131.7	125.9	122.9	120.1	117.5
7800	157.1	143.2	142.2	141.3	139.4	137.5	135.1	129.1	126.0	123.2	120.5
8200	161.0	146.7	145.7	144.8	142.9	140.9	138.5	132.3	129.1	126.2	123.5
8600	164.7	150.1	149.1	148.1	146.1	144.1	141.6	135.3	132.1	129.1	126.3
9000	168.2	153.3	152.2	151.2	149.2	147.1	144.6	138.2	134.8	131.8	128.9
9400	171.3	156.1	155.0	154.0	152.0	149.9	147.3	140.7	137.3	134.2	131.3
9800	174.4	158.9	157.8	156.8	154.7	152.5	149.9	143.2	139.7	136.6	133.6
10200	177.5	161.7	160.6	159.5	157.4	155.2	152.5	145.6	142.1	138.9	135.8
10600	180.5	164.4	163.3	162.1	160.0	157.7	155.0	148.0	144.4	141.1	138.0
11000	183.6	167.1	165.9	164.8	162.6	160.3	157.5	150.4	146.7	143.3	140.2
11400	186.5	169.7	168.6	167.4	165.2	162.8	160.0	152.7	149.0	145.6	142.3
11800	189.5	172.4	171.2	170.0	167.7	165.4	162.4	155.0	151.2	147.8	144.4
12200	189.9	175.0	173.8	172.6	170.3	167.9	164.9	157.4	153.5	150.0	146.6
CLIMB LIMIT WT (1000 LB)	159.5	158.5	158.4	158.3	156.2	153.9	150.6	140.9	135.9	131.5	127.3

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5400	121.8	111.5	110.8	109.5	108.2	106.6	104.5	99.7	97.5	95.4	93.4
5800	126.1	115.4	114.7	113.3	112.0	110.3	108.2	103.2	100.9	98.7	96.6
6200	130.2	119.1	118.3	117.0	115.5	113.8	111.6	106.4	104.1	101.8	99.6
6600	134.2	122.7	121.9	120.5	119.0	117.2	114.9	109.5	107.1	104.8	102.5
7000	138.1	126.2	125.4	123.9	122.4	120.5	118.1	112.6	110.1	107.7	105.3
7400	141.9	129.7	128.8	127.3	125.7	123.8	121.4	115.7	113.1	110.6	108.1
7800	145.7	133.0	132.2	130.6	129.0	127.0	124.5	118.6	115.9	113.4	110.9
8200	149.2	136.3	135.4	133.8	132.1	130.1	127.5	121.5	118.8	116.1	113.6
8600	152.7	139.4	138.5	136.9	135.2	133.1	130.4	124.3	121.5	118.8	116.1
9000	155.9	142.4	141.4	139.7	138.0	135.9	133.2	126.9	124.0	121.3	118.5
9400	158.8	145.0	144.0	142.3	140.5	138.4	135.6	129.2	126.2	123.4	120.7
9800	161.7	147.6	146.6	144.8	143.0	140.8	138.0	131.4	128.4	125.6	122.8
10200	164.5	150.1	149.1	147.3	145.5	143.2	140.3	133.6	130.6	127.6	124.8
10600	167.3	152.5	151.6	149.7	147.8	145.5	142.6	135.7	132.6	129.7	126.7
11000	170.0	155.0	154.0	152.1	150.2	147.9	144.8	137.9	134.7	131.7	128.7
11400	172.7	157.4	156.4	154.5	152.5	150.2	147.1	140.0	136.7	133.6	130.6
11800	175.4	159.9	158.8	156.9	154.9	152.4	149.3	142.1	138.8	135.6	132.5
12200	178.1	162.3	161.2	159.2	157.2	154.7	151.5	144.2	140.8	137.6	134.4
CLIMB LIMIT WT (1000 LB)	149.5	148.6	148.5	146.8	144.9	142.0	137.8	128.2	124.0	120.1	116.1

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
5400	113.3	104.0	102.8	101.5	100.3	98.8	96.8	92.2	89.9	87.8	85.6
5800	117.3	107.7	106.4	105.1	103.8	102.3	100.1	95.4	93.0	90.8	88.5
6200	121.1	111.1	109.7	108.4	107.0	105.5	103.2	98.3	95.9	93.5	91.2
6600	124.7	114.4	113.0	111.6	110.2	108.5	106.2	101.1	98.6	96.2	93.8
7000	128.3	117.6	116.2	114.7	113.3	111.6	109.2	103.9	101.3	98.8	96.3
7400	131.9	120.8	119.3	117.9	116.3	114.6	112.2	106.7	104.0	101.4	98.8
7800	135.3	123.9	122.4	120.9	119.3	117.5	115.0	109.4	106.7	104.0	101.3
8200	138.6	127.0	125.4	123.8	122.2	120.4	117.8	112.1	109.2	106.5	103.7
8600	141.8	129.9	128.2	126.7	125.0	123.1	120.5	114.6	111.7	108.9	106.1
9000	144.8	132.6	130.9	129.3	127.6	125.7	123.0	117.0	114.0	111.2	108.3
9400	147.5	135.0	133.3	131.6	129.9	128.0	125.2	119.1	116.1	113.1	110.2
9800	150.1	137.4	135.7	134.0	132.2	130.2	127.4	121.1	118.1	115.1	112.1
10200	152.7	139.7	137.9	136.2	134.4	132.4	129.5	123.1	120.0	116.9	113.8
10600	155.2	141.9	140.1	138.4	136.6	134.5	131.5	125.0	121.8	118.7	115.6
11000	157.7	144.2	142.4	140.6	138.7	136.6	133.6	126.9	123.6	120.5	117.3
11400	160.2	146.4	144.5	142.7	140.8	138.7	135.6	128.8	125.5	122.3	119.0
11800	162.7	148.6	146.7	144.9	142.9	140.7	137.6	130.7	127.3	124.0	120.7
12200	165.1	150.8	148.9	147.0	145.1	142.8	139.6	132.6	129.1	125.8	122.4
CLIMB LIMIT WT (1000 LB)	140.5	139.1	137.4	135.7	133.7	131.0	126.9	117.9	113.6	109.3	105.0

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Wet Runway (26K Derate)**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
5400	107.0	98.7	97.8	96.6	95.0	93.5	91.7	89.3	86.7	83.9	81.3
5800	110.8	102.3	101.3	100.0	98.4	96.9	95.0	92.5	89.8	87.0	84.3
6200	114.3	105.6	104.6	103.3	101.7	100.0	98.1	95.6	92.8	89.9	87.1
6600	117.8	108.8	107.8	106.4	104.7	103.0	101.1	98.4	95.6	92.6	89.7
7000	121.0	111.8	110.8	109.4	107.6	105.9	103.9	101.2	98.2	95.2	92.2
7400	124.0	114.5	113.5	112.1	110.3	108.5	106.4	103.7	100.7	97.5	94.5
7800	127.0	117.3	116.2	114.7	112.9	111.1	109.0	106.2	103.1	99.9	96.8
8200	129.9	120.0	118.9	117.4	115.6	113.7	111.6	108.7	105.5	102.2	99.1
8600	132.9	122.7	121.6	120.1	118.2	116.3	114.1	111.1	107.9	104.5	101.3
9000	135.6	125.3	124.2	122.6	120.6	118.7	116.5	113.4	110.1	106.7	103.4
9400	138.2	127.7	126.5	124.9	122.9	120.9	118.6	115.5	112.2	108.7	105.3
9800	140.7	130.0	128.8	127.1	125.1	123.1	120.7	117.6	114.2	110.6	107.2
10200	143.2	132.2	131.0	129.3	127.3	125.2	122.8	119.6	116.1	112.5	109.0
10600	145.7	134.5	133.2	131.5	129.4	127.3	124.9	121.6	118.0	114.3	110.7
11000	148.1	136.7	135.4	133.7	131.5	129.4	126.9	123.6	119.9	116.1	112.5
11400	150.5	138.9	137.6	135.8	133.6	131.4	128.9	125.5	121.8	117.9	114.2
11800	152.8	141.0	139.7	137.9	135.6	133.4	130.8	127.3	123.6	119.6	115.9
12200	155.1	143.1	141.7	139.9	137.6	135.3	132.7	129.2	125.3	121.3	117.5
CLIMB LIMIT WT (1000 LB)	133.6	131.7	130.5	128.7	126.5	124.4	121.2	116.7	111.7	106.7	101.8

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
5400	101.1	92.9	92.0	90.8	89.4	87.9	86.2	84.1	81.9	79.6	77.4
5800	104.7	96.3	95.4	94.1	92.6	91.1	89.3	87.1	84.9	82.5	80.3
6200	108.1	99.4	98.5	97.2	95.7	94.1	92.2	90.0	87.7	85.3	82.9
6600	111.4	102.4	101.4	100.1	98.5	96.9	95.0	92.7	90.3	87.8	85.4
7000	114.4	105.3	104.3	102.9	101.3	99.6	97.7	95.3	92.9	90.3	87.8
7400	117.3	107.9	106.8	105.5	103.8	102.1	100.1	97.7	95.2	92.5	90.0
7800	120.1	110.5	109.4	108.0	106.3	104.5	102.5	100.0	97.4	94.8	92.2
8200	122.9	113.1	112.0	110.5	108.8	107.0	104.9	102.4	99.7	97.0	94.4
8600	125.7	115.6	114.5	113.0	111.2	109.4	107.3	104.7	102.0	99.2	96.5
9000	128.3	118.0	116.9	115.4	113.5	111.7	109.5	106.9	104.1	101.2	98.5
9400	130.7	120.2	119.0	117.5	115.6	113.8	111.5	108.8	106.0	103.1	100.3
9800	133.1	122.4	121.2	119.6	117.7	115.8	113.5	110.8	107.9	104.9	102.0
10200	135.4	124.5	123.3	121.7	119.7	117.8	115.4	112.6	109.7	106.7	103.7
10600	137.7	126.6	125.3	123.7	121.7	119.7	117.3	114.5	111.5	108.4	105.4
11000	140.0	128.6	127.4	125.7	123.7	121.6	119.2	116.3	113.3	110.1	107.0
11400	142.2	130.6	129.4	127.7	125.6	123.5	121.0	118.1	115.0	111.7	108.6
11800	144.4	132.6	131.3	129.6	127.5	125.4	122.8	119.8	116.7	113.4	110.2
12200	146.6	134.5	133.2	131.5	129.3	127.2	124.6	121.5	118.3	114.9	111.7
CLIMB LIMIT WT (1000 LB)	126.8	123.9	122.6	120.9	118.9	116.8	113.7	109.7	105.5	101.3	97.2

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3100 lb.

With engine anti-ice on, decrease field limit weight by 2700 lb and climb limit weight by 4000 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 3800 lb and climb limit weight by 6400 lb.

Takeoff Obstacle Limit Weight (26K Derate)**Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	170.9	186.1							
50	157.4	172.7	183.6						
100	147.0	161.7	172.7	180.8	187.1				
150	139.0	153.0	164.1	172.6	179.2	184.4	188.4		
200	132.3	145.9	156.9	165.6	172.5	178.0	182.5	186.3	189.2
250	126.5	139.9	150.7	159.5	166.6	172.4	177.2	181.1	184.5
300	121.4	134.7	145.3	154.1	161.3	167.3	172.3	176.5	180.0
350	116.8	129.9	140.4	149.2	156.6	162.7	167.8	172.2	175.9
400	112.6	125.6	136.1	144.8	152.2	158.4	163.7	168.2	172.1
450	108.7	121.6	132.1	140.7	148.1	154.4	159.8	164.4	168.5
500	105.1	117.9	128.4	137.0	144.4	150.7	156.2	160.9	165.1
550	101.7	114.5	124.9	133.6	140.9	147.3	152.8	157.6	161.8
600	98.6	111.3	121.7	130.3	137.7	144.0	149.6	154.5	158.8
650	95.7	108.4	118.6	127.3	134.6	141.0	146.6	151.5	155.9
700	93.0	105.6	115.8	124.4	131.8	138.1	143.7	148.7	153.1
750	90.4	102.9	113.1	121.6	129.0	135.4	141.0	146.0	150.5
800		100.4	110.5	119.0	126.4	132.8	138.4	143.4	147.9
850		98.0	108.1	116.6	123.9	130.4	136.0	141.0	145.5
900		95.7	105.8	114.2	121.6	128.0	133.6	138.7	143.2
950		93.5	103.6	112.0	119.3	125.7	131.4	136.4	140.9
1000		91.5	101.4	109.8	117.1	123.5	129.2	134.3	138.8

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
30 & BELOW	0	0	0	0	0	0
32	-1.4	-1.7	-2.0	-2.4	-2.7	-3.0
34	-2.7	-3.4	-4.1	-4.7	-5.4	-6.1
36	-4.1	-5.1	-6.1	-7.1	-8.1	-9.1
38	-5.4	-6.8	-8.1	-9.5	-10.8	-12.2
40	-6.8	-8.5	-10.2	-11.9	-13.5	-15.2
42	-8.0	-10.1	-12.1	-14.1	-16.1	-18.1
44	-9.3	-11.6	-14.0	-16.3	-18.7	-21.0
46	-10.6	-13.2	-15.9	-18.6	-21.3	-23.9
48	-11.8	-14.8	-17.8	-20.8	-23.8	-26.8
50	-13.1	-16.4	-19.7	-23.1	-26.4	-29.7

Takeoff Obstacle Limit Weight (26K Derate)

Flaps 5

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
S.L. & BELOW	0	0	0	0	0	0
1000	-3.3	-3.9	-4.6	-5.2	-5.9	-6.5
2000	-6.6	-7.9	-9.2	-10.5	-11.8	-13.1
3000	-9.7	-11.6	-13.6	-15.5	-17.5	-19.4
4000	-12.7	-15.3	-17.9	-20.5	-23.1	-25.7
5000	-15.5	-18.8	-22.0	-25.3	-28.6	-31.8
6000	-18.2	-22.2	-26.1	-30.0	-34.0	-37.9
7000	-21.0	-25.6	-30.2	-34.8	-39.4	-44.0
8000	-23.7	-29.0	-34.3	-39.5	-44.8	-50.1
9000	-26.4	-32.2	-38.0	-43.9	-49.7	-55.5
10000	-29.0	-35.4	-41.8	-48.2	-54.6	-61.0

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
15 TW	-18.7	-18.1	-17.5	-16.9	-16.2	-15.6
10 TW	-12.5	-12.1	-11.7	-11.2	-10.8	-10.4
5 TW	-6.2	-6.0	-5.8	-5.6	-5.4	-5.2
0	0	0	0	0	0	0
10 HW	2.5	2.3	2.1	1.9	1.7	1.5
20 HW	5.0	4.6	4.2	3.8	3.3	2.9
30 HW	7.8	7.1	6.5	5.8	5.2	4.5
40 HW	10.5	9.6	8.7	7.9	7.0	6.1

With engine bleed for packs off, increase gradient/weight by 1300 lb.

With engine anti-ice on, decrease gradient/weight by 600 lb.

With engine and wing anti-ice on, decrease gradient/weight by 2900 lb (optional system).

Takeoff Obstacle Limit Weight - High Altitudes (26K Derate)**Flaps 5****10000 ft, 10°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	122.8	134.5	141.9	147.4					
50	114.2	125.2	133.8	140.1	144.1	147.4			
100	107.4	117.8	126.0	132.4	137.5	141.1	143.9	146.3	148.2
150	101.9	112.0	120.0	126.4	131.6	135.8	139.2	141.6	143.7
200	97.2	107.1	115.0	121.4	126.7	131.0	134.6	137.5	140.0
250	93.0	102.8	110.7	117.1	122.4	126.8	130.5	133.6	136.3
300		99.0	106.8	113.2	118.6	123.1	126.9	130.1	132.9
350		95.6	103.3	109.7	115.1	119.7	123.5	126.9	129.8
400		92.4	100.1	106.6	112.0	116.6	120.5	123.9	126.9
450			97.2	103.6	109.0	113.7	117.7	121.1	124.2
500			94.5	100.9	106.3	111.0	115.0	118.6	121.7
550			91.9	98.3	103.8	108.5	112.6	116.1	119.3
600				95.9	101.4	106.1	110.2	113.8	117.0
650				93.7	99.1	103.9	108.0	111.6	114.9
700				91.6	97.0	101.7	105.9	109.6	112.8
750					95.0	99.7	103.9	107.6	110.9
800					93.0	97.8	102.0	105.7	109.0
850					91.2	95.9	100.1	103.9	107.2
900						94.2	98.4	102.1	105.5
950						92.5	96.7	100.4	103.8
1000						90.9	95.1	98.8	102.2

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
10 & BELOW	0	0	0	0	0	0	0
12	-0.8	-0.9	-1.0	-1.1	-1.2	-1.3	-1.4
14	-1.6	-1.8	-2.0	-2.2	-2.4	-2.6	-2.8
16	-2.4	-2.7	-3.0	-3.3	-3.6	-3.9	-4.2
18	-3.2	-3.6	-4.0	-4.4	-4.8	-5.2	-5.6
20	-4.1	-4.5	-5.0	-5.5	-6.0	-6.5	-7.0
22	-4.9	-5.5	-6.1	-6.7	-7.2	-7.8	-8.4
24	-5.7	-6.4	-7.1	-7.8	-8.5	-9.1	-9.8
26	-6.5	-7.3	-8.1	-8.9	-9.7	-10.5	-11.3
28	-7.3	-8.2	-9.1	-10.0	-10.9	-11.8	-12.7
30	-8.1	-9.1	-10.1	-11.1	-12.1	-13.1	-14.1
32	-9.4	-10.6	-11.8	-12.9	-14.1	-15.3	-16.4
34	-10.7	-12.1	-13.4	-14.8	-16.1	-17.5	-18.8
36	-12.0	-13.5	-15.1	-16.6	-18.1	-19.7	-21.2
38	-13.3	-15.0	-16.7	-18.4	-20.2	-21.9	-23.6
40	-14.6	-16.5	-18.4	-20.3	-22.2	-24.1	-26.0
42	-15.6	-17.7	-19.8	-21.9	-24.0	-26.2	-28.3
44	-16.5	-18.9	-21.2	-23.6	-25.9	-28.3	-30.6
46	-17.5	-20.1	-22.7	-25.2	-27.8	-30.3	-32.9
48	-18.5	-21.3	-24.1	-26.9	-29.6	-32.4	-35.2
50	-19.5	-22.5	-25.5	-28.5	-31.5	-34.5	-37.5

Takeoff Obstacle Limit Weight - High Altitudes (26K Derate)

Flaps 5

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-3.7	-4.1	-4.4	-4.8	-5.2	-5.6	-5.9
12000	-7.4	-8.1	-8.9	-9.6	-10.4	-11.1	-11.9
13000	-11.0	-12.1	-13.2	-14.4	-15.5	-16.6	-17.8
13500	-12.8	-14.0	-15.5	-16.9	-18.0	-19.3	-20.5

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
15 TW	-13.9	-13.4	-12.9	-12.4	-11.9	-11.4	-10.9
10 TW	-9.3	-9.0	-8.6	-8.3	-7.9	-7.6	-7.2
5 TW	-4.6	-4.5	-4.3	-4.1	-4.0	-3.8	-3.6
0	0	0	0	0	0	0	0
10 HW	1.8	1.6	1.5	1.4	1.2	1.1	0.9
20 HW	3.6	3.3	3.0	2.7	2.4	2.1	1.9
30 HW	5.4	4.9	4.5	4.1	3.7	3.2	2.8
40 HW	7.2	6.6	6.0	5.5	4.9	4.3	3.7

With engine bleed for packs off, increase weight by 1500 lb.
With engine anti-ice on, decrease weight by 4400 lb.
With engine and wing anti-ice on, decrease weight by 6800 lb (optional system).

Takeoff Field Corrections - Dry Runway (24K Derate)**Slope Corrections**

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4390	4340	4300	4250	4200	4140	4080	4010	3950
4600	4850	4780	4720	4660	4600	4520	4440	4350	4270
5000	5300	5230	5150	5080	5000	4900	4790	4690	4590
5400	5760	5670	5580	5490	5400	5280	5150	5030	4910
5800	6210	6110	6010	5900	5800	5660	5510	5370	5230
6200	6670	6550	6430	6320	6200	6040	5870	5710	5540
6600	7120	6990	6860	6730	6600	6420	6230	6050	5860
7000	7580	7430	7290	7140	7000	6800	6590	6390	6180
7400	8030	7870	7710	7560	7400	7170	6950	6720	6500
7800	8480	8310	8140	7970	7800	7550	7310	7060	6820
8200	8940	8750	8570	8380	8200	7930	7670	7400	7130
8600	9390	9200	9000	8800	8600	8310	8030	7740	7450
9000	9850	9640	9420	9210	9000	8690	8390	8080	7770
9400	10300	10080	9850	9630	9400	9070	8740	8420	8090
9800	10760	10520	10280	10040	9800	9450	9100	8760	8410
10200	11210	10960	10710	10450	10200	9830	9460	9090	8730
10600	11670	11400	11130	10870	10600	10210	9820	9430	9040
11000	12120	11840	11560	11280	11000	10590	10180	9770	9360
11400	12580	12280	11990	11690	11400	10970	10540	10110	9680
11800	13030	12730	12420	12110	11800	11350	10900	10450	10000

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3060	3440	3820	4200	4460	4720	4980	5240
4600	3390	3800	4200	4600	4870	5140	5410	5680
5000	3730	4150	4580	5000	5280	5560	5840	6120
5400	4070	4510	4960	5400	5690	5980	6270	6560
5800	4400	4870	5330	5800	6100	6400	6700	7010
6200	4740	5230	5710	6200	6510	6820	7130	7450
6600	5080	5580	6090	6600	6920	7240	7560	7890
7000	5410	5940	6470	7000	7330	7660	8000	8330
7400	5750	6300	6850	7400	7740	8080	8430	8780
7800	6090	6660	7230	7800	8150	8500	8860	9220
8200	6420	7010	7610	8200	8560	8920	9290	9660
8600	6760	7370	7990	8600	8970	9340	9720	10110
9000	7090	7730	8360	9000	9380	9760	10150	10550
9400	7430	8090	8740	9400	9790	10190	10590	10990
9800	7770	8450	9120	9800	10200	10610	11020	11430
10200	8100	8800	9500	10200	10610	11030	11450	11880
10600	8440	9160	9880	10600	11020	11450	11880	12320
11000	8780	9520	10260	11000	11430	11870	12310	12760
11400	9110	9880	10640	11400	11840	12290	12740	13210
11800	9450	10230	11020	11800	12250	12710	13180	13650

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4000	130.0	121.0	120.2	119.5	118.8	118.1	117.4	112.0	109.1	106.1	103.0
4200	133.3	124.1	123.3	122.6	121.8	121.1	120.4	114.9	112.0	108.8	105.7
4600	139.8	130.1	129.3	128.5	127.8	127.0	126.2	120.5	117.4	114.2	110.9
5000	145.9	135.8	135.0	134.2	133.4	132.6	131.8	125.8	122.6	119.2	115.8
5400	151.7	141.2	140.3	139.5	138.6	137.8	136.9	130.7	127.4	123.8	120.3
5800	157.4	146.4	145.5	144.6	143.7	142.8	142.0	135.5	132.0	128.3	124.6
6200	162.8	151.4	150.5	149.5	148.6	147.7	146.8	140.1	136.5	132.6	128.8
6600	168.2	156.3	155.3	154.4	153.4	152.5	151.5	144.5	140.8	136.8	132.8
7000	173.3	161.1	160.0	159.1	158.1	157.1	156.1	148.9	145.0	140.9	136.8
7400	178.4	165.7	164.7	163.7	162.7	161.7	160.7	153.2	149.2	144.9	140.7
7800	183.2	170.2	169.1	168.1	167.1	166.0	165.0	157.3	153.2	148.8	144.5
8200	187.9	174.6	173.5	172.4	171.3	170.3	169.2	161.4	157.2	152.7	148.2
8600	189.9	178.7	177.6	176.5	175.4	174.3	173.2	165.2	160.9	156.3	151.7
9000	189.9	182.5	181.4	180.2	179.1	178.0	176.9	168.7	164.3	159.6	154.9
9400	189.9	185.8	184.6	183.5	182.3	181.2	180.1	171.7	167.2	162.4	157.6
9800	189.9	189.0	187.8	186.6	185.5	184.3	183.1	174.6	170.0	165.1	160.2
10200	189.9	189.9	189.9	189.6	188.4	187.3	186.1	177.4	172.7	167.7	162.7
10600	189.9	189.9	189.9	189.9	189.9	189.9	188.9	180.0	175.3	170.2	165.1
CLIMB LIMIT WT (1000 LB)	172.6	171.3	171.0	170.8	170.5	170.2	169.9	157.8	151.9	146.1	140.3

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4000	124.1	115.0	114.3	113.6	112.9	112.1	109.4	103.9	101.0	98.2	95.4
4200	127.3	117.9	117.2	116.5	115.8	115.0	112.3	106.5	103.7	100.8	97.9
4600	133.5	123.7	122.9	122.2	121.4	120.6	117.8	111.8	108.8	105.7	102.8
5000	139.4	129.1	128.4	127.6	126.8	126.0	123.0	116.7	113.6	110.4	107.3
5400	144.9	134.2	133.4	132.6	131.7	130.9	127.7	121.2	117.9	114.6	111.4
5800	150.2	139.1	138.2	137.4	136.5	135.6	132.4	125.6	122.1	118.7	115.4
6200	155.4	143.8	142.9	142.1	141.1	140.2	136.8	129.8	126.2	122.6	119.2
6600	160.4	148.4	147.5	146.6	145.7	144.7	141.2	133.9	130.2	126.5	122.8
7000	165.3	152.9	152.0	151.0	150.1	149.1	145.4	137.9	134.0	130.2	126.5
7400	170.1	157.3	156.4	155.4	154.4	153.4	149.6	141.8	137.9	133.9	130.1
7800	174.7	161.6	160.6	159.6	158.5	157.5	153.7	145.6	141.6	137.5	133.6
8200	179.2	165.7	164.7	163.7	162.6	161.5	157.6	149.4	145.2	141.1	137.0
8600	183.5	169.7	168.6	167.6	166.5	165.4	161.3	152.9	148.7	144.4	140.3
9000	187.4	173.3	172.2	171.1	170.0	168.9	164.8	156.1	151.8	147.4	143.2
9400	189.9	176.4	175.3	174.2	173.0	171.9	167.7	158.9	154.4	150.0	145.7
9800	189.9	179.4	178.2	177.1	176.0	174.8	170.5	161.5	157.0	152.5	148.1
10200	189.9	182.2	181.1	179.9	178.7	177.6	173.2	164.0	159.4	154.8	150.3
10600	189.9	185.0	183.8	182.7	181.5	180.2	175.8	166.5	161.8	157.1	152.5
CLIMB LIMIT WT (1000 LB)	166.1	164.7	164.5	164.3	164.1	163.8	157.9	146.5	140.9	135.5	130.2

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4000	117.9	108.9	108.2	107.5	106.8	104.1	101.4	96.0	93.6	91.1	88.9
4200	120.9	111.7	110.9	110.2	109.5	106.8	104.1	98.6	96.1	93.5	91.2
4600	126.8	117.1	116.4	115.6	114.9	112.1	109.2	103.4	100.8	98.2	95.8
5000	132.4	122.3	121.5	120.7	120.0	117.0	114.0	108.0	105.3	102.5	100.0
5400	137.6	127.1	126.2	125.4	124.6	121.5	118.4	112.1	109.3	106.4	103.7
5800	142.7	131.7	130.8	129.9	129.1	125.9	122.6	116.1	113.1	110.1	107.4
6200	147.5	136.1	135.2	134.3	133.4	130.1	126.7	119.9	116.8	113.7	110.8
6600	152.3	140.4	139.5	138.6	137.7	134.2	130.7	123.6	120.4	117.2	114.2
7000	156.9	144.6	143.7	142.7	141.8	138.2	134.6	127.3	124.0	120.6	117.6
7400	161.5	148.8	147.8	146.8	145.9	142.2	138.5	130.9	127.5	124.1	120.9
7800	165.8	152.8	151.8	150.8	149.8	146.0	142.2	134.4	130.9	127.4	124.1
8200	170.1	156.7	155.7	154.7	153.6	149.8	145.8	137.9	134.3	130.6	127.3
8600	174.1	160.5	159.4	158.3	157.3	153.3	149.3	141.2	137.5	133.7	130.3
9000	177.8	163.9	162.8	161.7	160.6	156.5	152.4	144.1	140.4	136.5	133.1
9400	181.0	166.7	165.6	164.5	163.4	159.3	155.1	146.6	142.8	138.9	135.3
9800	184.1	169.6	168.4	167.3	166.2	161.9	157.7	149.0	145.1	141.1	137.5
10200	187.0	172.2	171.1	169.9	168.8	164.5	160.1	151.3	147.3	143.2	139.6
10600	189.9	174.8	173.6	172.5	171.3	166.9	162.5	153.5	149.4	145.3	141.5
CLIMB LIMIT WT (1000 LB)	159.4	158.3	158.1	157.9	157.6	152.0	146.3	135.6	130.6	125.4	120.9

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4000	111.7	102.7	102.0	101.3	98.8	96.2	93.8	89.0	86.7	84.7	82.7
4200	114.6	105.3	104.6	103.9	101.4	98.7	96.2	91.4	89.0	86.9	84.9
4600	120.2	110.5	109.8	109.1	106.4	103.6	101.0	95.9	93.5	91.3	89.2
5000	125.5	115.4	114.6	113.9	111.1	108.2	105.5	100.2	97.6	95.3	93.1
5400	130.4	119.8	119.0	118.2	115.3	112.3	109.5	103.9	101.3	98.9	96.5
5800	135.1	124.1	123.3	122.5	119.5	116.3	113.3	107.6	104.8	102.3	99.9
6200	139.7	128.3	127.4	126.6	123.4	120.1	117.0	111.0	108.2	105.6	103.0
6600	144.2	132.3	131.4	130.5	127.3	123.9	120.7	114.4	111.5	108.7	106.1
7000	148.5	136.2	135.3	134.4	131.0	127.5	124.2	117.8	114.7	111.9	109.2
7400	152.8	140.1	139.2	138.3	134.8	131.2	127.8	121.1	118.0	115.1	112.3
7800	156.9	143.9	142.9	142.0	138.4	134.7	131.2	124.4	121.1	118.1	115.3
8200	160.9	147.6	146.6	145.6	142.0	138.1	134.5	127.5	124.2	121.2	118.2
8600	164.8	151.1	150.1	149.1	145.3	141.4	137.7	130.6	127.2	124.0	121.0
9000	168.2	154.3	153.3	152.2	148.4	144.4	140.6	133.3	129.8	126.6	123.6
9400	171.2	157.0	155.9	154.9	151.0	146.9	143.0	135.6	132.0	128.7	125.6
9800	174.1	159.6	158.5	157.4	153.5	149.3	145.4	137.7	134.1	130.8	127.6
10200	176.9	162.1	161.0	159.9	155.8	151.6	147.6	139.8	136.1	132.7	129.5
10600	179.5	164.5	163.3	162.2	158.1	153.8	149.7	141.8	138.0	134.6	131.2
CLIMB LIMIT WT (1000 LB)	152.8	151.8	151.7	151.5	145.9	140.5	135.2	125.1	120.4	116.2	112.3

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4000	105.0	96.5	95.9	93.8	91.5	89.1	86.9	82.5	80.5	78.5	76.7
4200	107.7	99.0	98.4	96.3	93.9	91.5	89.2	84.7	82.6	80.7	78.7
4600	113.0	103.9	103.3	101.0	98.6	96.0	93.6	89.0	86.8	84.7	82.7
5000	118.0	108.5	107.8	105.5	102.9	100.3	97.8	92.9	90.6	88.5	86.4
5400	122.5	112.7	111.9	109.5	106.8	104.0	101.4	96.3	94.0	91.7	89.5
5800	126.9	116.7	115.9	113.4	110.6	107.7	105.0	99.6	97.2	94.8	92.6
6200	131.2	120.5	119.7	117.1	114.2	111.2	108.3	102.8	100.3	97.8	95.4
6600	135.3	124.3	123.4	120.7	117.7	114.6	111.6	105.9	103.3	100.7	98.3
7000	139.4	127.9	127.1	124.2	121.1	117.9	114.9	108.9	106.2	103.6	101.0
7400	143.4	131.6	130.7	127.8	124.6	121.3	118.1	112.0	109.2	106.5	103.9
7800	147.2	135.1	134.2	131.2	127.9	124.5	121.3	115.0	112.1	109.3	106.6
8200	151.0	138.6	137.6	134.6	131.2	127.7	124.4	118.0	115.0	112.2	109.4
8600	154.6	141.9	140.9	137.8	134.3	130.7	127.3	120.7	117.7	114.8	112.0
9000	157.9	144.8	143.9	140.7	137.1	133.5	130.0	123.3	120.2	117.2	114.3
9400	160.6	147.3	146.3	143.1	139.4	135.7	132.2	125.3	122.2	119.1	116.2
9800	163.3	149.8	148.7	145.4	141.7	137.9	134.3	127.3	124.1	121.0	118.0
10200	165.9	152.1	151.0	147.6	143.9	140.0	136.3	129.2	125.9	122.7	119.6
10600	168.3	154.3	153.2	149.7	145.9	142.0	138.2	130.9	127.6	124.4	121.2
CLIMB LIMIT WT (1000 LB)	145.8	145.0	144.8	139.9	134.7	129.5	124.6	115.5	111.3	107.4	103.6

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4000	98.4	90.8	89.0	86.9	84.7	82.5	80.4	76.2	74.2	72.3	70.4
4200	100.9	93.2	91.3	89.2	86.9	84.7	82.5	78.3	76.3	74.3	72.3
4600	105.9	97.8	95.9	93.7	91.3	88.9	86.7	82.3	80.1	78.0	76.0
5000	110.6	102.2	100.1	97.8	95.3	92.9	90.5	85.9	83.7	81.5	79.4
5400	114.8	106.0	103.9	101.5	98.9	96.3	93.9	89.0	86.7	84.4	82.2
5800	118.9	109.7	107.5	105.0	102.3	99.6	97.1	92.1	89.6	87.2	85.0
6200	122.9	113.3	111.0	108.4	105.6	102.8	100.2	94.9	92.4	89.9	87.5
6600	126.7	116.8	114.4	111.7	108.8	105.9	103.1	97.7	95.1	92.5	90.1
7000	130.4	120.2	117.7	114.9	111.9	108.9	106.1	100.5	97.8	95.1	92.6
7400	134.2	123.6	121.1	118.2	115.1	112.0	109.1	103.3	100.5	97.8	95.2
7800	137.8	126.9	124.3	121.3	118.2	115.0	112.0	106.1	103.2	100.4	97.7
8200	141.3	130.2	127.5	124.4	121.2	117.9	114.9	108.8	105.8	102.9	100.2
8600	144.7	133.3	130.5	127.4	124.1	120.7	117.6	111.4	108.3	105.4	102.5
9000	147.7	136.1	133.3	130.0	126.6	123.2	120.0	113.7	110.6	107.5	104.6
9400	150.3	138.4	135.5	132.2	128.8	125.3	122.0	115.5	112.4	109.3	106.3
9800	152.8	140.6	137.7	134.4	130.8	127.3	123.9	117.3	114.1	110.9	107.9
10200	155.1	142.7	139.8	136.4	132.7	129.1	125.7	119.0	115.7	112.5	109.4
10600	157.4	144.8	141.7	138.3	134.6	130.9	127.4	120.5	117.2	113.9	110.8
CLIMB LIMIT WT (1000 LB)	138.5	137.6	133.7	129.1	124.1	119.2	114.8	106.2	102.0	98.0	94.2

With engine bleed for packs off, increase field limit weight by 1000 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1500 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Dry Runway (24K Derate)**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4000	91.9	85.2	84.7	83.2	81.0	78.3	75.5	72.8	70.4	67.9	65.4
4200	94.3	87.5	87.1	85.5	83.2	80.4	77.6	74.9	72.4	69.9	67.4
4600	99.1	92.0	91.6	90.0	87.6	84.7	81.8	79.0	76.4	73.8	71.2
5000	103.6	96.3	95.8	94.2	91.7	88.8	85.8	82.8	80.1	77.5	74.8
5400	107.7	100.2	99.7	98.0	95.5	92.5	89.4	86.5	83.7	81.0	78.2
5800	111.6	103.9	103.4	101.7	99.1	96.0	92.9	89.8	87.0	84.2	81.4
6200	115.3	107.4	106.9	105.1	102.5	99.3	96.1	92.9	90.0	87.1	84.3
6600	118.9	110.7	110.2	108.4	105.7	102.4	99.1	95.8	92.8	89.9	86.9
7000	122.3	113.9	113.4	111.5	108.7	105.3	101.9	98.5	95.4	92.4	89.3
7400	125.4	116.8	116.3	114.3	111.4	107.9	104.4	101.0	97.8	94.7	91.5
7800	128.5	119.6	119.1	117.1	114.1	110.5	106.9	103.4	100.1	96.9	93.7
8200	131.6	122.5	122.0	119.9	116.9	113.2	109.5	105.9	102.6	99.3	96.0
8600	134.7	125.4	124.9	122.8	119.7	115.9	112.1	108.4	105.0	101.6	98.3
9000	137.6	128.1	127.5	125.4	122.2	118.4	114.5	110.7	107.2	103.8	100.3
9400	140.2	130.5	129.9	127.7	124.5	120.5	116.6	112.7	109.2	105.6	102.1
9800	142.6	132.7	132.1	129.9	126.6	122.6	118.5	114.6	111.0	107.4	103.8
10200	145.1	134.9	134.3	132.0	128.7	124.6	120.4	116.4	112.7	109.0	105.3
10600	147.5	137.1	136.5	134.1	130.7	126.5	122.3	118.1	114.3	110.5	106.8
CLIMB LIMIT WT (1000 LB)	130.1	129.0	128.9	126.3	122.1	116.5	110.8	105.6	100.9	96.2	91.7

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4000	86.7	80.3	79.3	77.8	75.8	73.3	70.6	68.2	65.9	63.7	61.4
4200	89.1	82.5	81.5	80.0	77.9	75.3	72.6	70.2	67.9	65.6	63.3
4600	93.7	86.9	85.8	84.3	82.1	79.4	76.6	74.1	71.7	69.3	66.9
5000	98.0	91.0	89.9	88.3	86.0	83.3	80.4	77.8	75.3	72.9	70.4
5400	101.9	94.8	93.6	92.0	89.7	86.9	84.0	81.3	78.8	76.3	73.7
5800	105.7	98.3	97.2	95.5	93.2	90.3	87.3	84.5	82.0	79.4	76.8
6200	109.2	101.7	100.5	98.8	96.4	93.4	90.3	87.5	84.8	82.2	79.5
6600	112.6	104.9	103.6	101.9	99.4	96.3	93.1	90.2	87.5	84.8	82.0
7000	115.8	107.8	106.6	104.7	102.2	99.1	95.8	92.8	90.0	87.1	84.3
7400	118.8	110.6	109.2	107.4	104.7	101.5	98.1	95.0	92.1	89.3	86.4
7800	121.7	113.2	111.9	109.9	107.2	103.9	100.4	97.3	94.3	91.3	88.3
8200	124.6	116.0	114.6	112.6	109.9	106.5	102.9	99.7	96.6	93.6	90.5
8600	127.6	118.7	117.3	115.3	112.5	109.0	105.4	102.1	98.9	95.8	92.7
9000	130.3	121.2	119.8	117.7	114.9	111.3	107.6	104.2	101.0	97.8	94.7
9400	132.7	123.5	122.0	119.9	117.0	113.3	109.5	106.1	102.8	99.6	96.3
9800	135.0	125.6	124.1	121.9	118.9	115.2	111.3	107.8	104.5	101.2	97.8
10200	137.3	127.6	126.1	123.9	120.8	117.0	113.1	109.4	106.0	102.6	99.2
10600	139.5	129.6	128.0	125.8	122.6	118.8	114.7	111.0	107.5	104.1	100.6
CLIMB LIMIT WT (1000 LB)	123.7	122.5	120.7	118.2	114.4	109.3	103.8	99.2	94.8	90.5	86.1

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3100 lb.

With engine anti-ice on, decrease field limit weight by 3400 lb and climb limit weight by 4000 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 4500 lb and climb limit weight by 6400 lb.

Takeoff Field Corrections - Wet Runway (24K Derate)
Slope Corrections

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4300	4280	4250	4230	4200	4140	4070	4010	3950
4600	4770	4730	4680	4640	4600	4520	4430	4350	4270
5000	5230	5170	5120	5060	5000	4900	4790	4690	4590
5400	5700	5620	5550	5470	5400	5280	5150	5030	4900
5800	6160	6070	5980	5890	5800	5660	5510	5370	5220
6200	6620	6520	6410	6310	6200	6040	5870	5710	5540
6600	7090	6970	6840	6720	6600	6420	6230	6050	5860
7000	7550	7410	7280	7140	7000	6790	6590	6380	6180
7400	8010	7860	7710	7550	7400	7170	6950	6720	6500
7800	8480	8310	8140	7970	7800	7550	7310	7060	6820
8200	8940	8760	8570	8390	8200	7930	7670	7400	7140
8600	9410	9200	9000	8800	8600	8310	8030	7740	7450
9000	9870	9650	9430	9220	9000	8690	8390	8080	7770
9400	10330	10100	9870	9630	9400	9070	8750	8420	8090
9800	10800	10550	10300	10050	9800	9450	9110	8760	8410
10200	11260	11000	10730	10470	10200	9830	9460	9100	8730
10600	11720	11440	11160	10880	10600	10210	9820	9440	9050
11000	12190	11890	11590	11300	11000	10590	10180	9780	9370
11400	12650	12340	12030	11710	11400	10970	10540	10110	9690
11800	13120	12790	12460	12130	11800	11350	10900	10450	10010

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	2980	3390	3790	4200	4480	4760	5040	5330
4600	3320	3740	4170	4600	4890	5180	5480	5780
5000	3660	4100	4550	5000	5300	5610	5920	6230
5400	3990	4460	4930	5400	5710	6030	6360	6690
5800	4330	4820	5310	5800	6130	6460	6800	7140
6200	4670	5180	5690	6200	6540	6890	7240	7590
6600	5010	5540	6070	6600	6950	7310	7680	8050
7000	5350	5900	6450	7000	7370	7740	8120	8500
7400	5690	6260	6830	7400	7780	8160	8550	8950
7800	6030	6620	7210	7800	8190	8590	8990	9410
8200	6360	6980	7590	8200	8600	9010	9430	9860
8600	6700	7340	7970	8600	9020	9440	9870	10310
9000	7040	7690	8350	9000	9430	9870	10310	10770
9400	7380	8050	8730	9400	9840	10290	10750	11220
9800	7720	8410	9110	9800	10250	10720	11190	11670
10200	8060	8770	9490	10200	10670	11140	11630	12130
10600	8400	9130	9870	10600	11080	11570	12070	12580
11000	8730	9490	10240	11000	11490	12000	12510	13030
11400	9070	9850	10620	11400	11910	12420	12950	13490
11800	9410	10210	11000	11800	12320	12850	13390	13940

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4700	141.6	130.3	129.5	128.6	127.8	127.0	126.1	119.8	116.6	113.6	110.5
5000	146.3	134.6	133.7	132.9	132.0	131.2	130.3	123.7	120.5	117.3	114.1
5400	152.0	139.8	138.9	138.0	137.1	136.2	135.3	128.4	125.1	121.8	118.5
5800	157.4	144.8	143.9	142.9	142.0	141.1	140.1	133.0	129.5	126.1	122.6
6200	162.7	149.6	148.6	147.6	146.7	145.7	144.7	137.4	133.7	130.2	126.6
6600	167.8	154.3	153.2	152.2	151.2	150.2	149.2	141.6	137.8	134.1	130.5
7000	172.7	158.8	157.7	156.7	155.6	154.6	153.6	145.7	141.8	138.0	134.2
7400	177.6	163.3	162.2	161.1	160.0	159.0	157.9	149.8	145.8	141.9	138.0
7800	182.3	167.6	166.4	165.3	164.2	163.1	162.0	153.7	149.6	145.6	141.6
8200	186.8	171.7	170.5	169.3	168.2	167.1	166.0	157.4	153.2	149.1	145.0
8600	189.9	175.6	174.4	173.2	172.1	170.9	169.8	161.0	156.7	152.5	148.2
9000	189.9	179.3	178.1	176.9	175.7	174.5	173.4	164.4	160.0	155.6	151.3
9400	189.9	182.7	181.5	180.2	179.0	177.9	176.7	167.5	163.0	158.6	154.2
9800	189.9	186.1	184.8	183.6	182.4	181.1	179.9	170.6	165.9	161.5	156.9
10200	189.9	189.4	188.1	186.9	185.6	184.4	183.1	173.6	168.9	164.3	159.7
10600	189.9	189.9	189.9	189.9	188.8	187.6	186.3	176.5	171.7	167.0	162.3
11000	189.9	189.9	189.9	189.9	189.9	189.9	189.4	179.5	174.6	169.8	165.0
11400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	182.4	177.4	172.5	167.6
CLIMB LIMIT WT (1000 LB)	172.6	171.3	171.0	170.8	170.5	170.2	169.9	157.8	151.9	146.1	140.3

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4700	134.5	123.3	122.4	121.5	120.7	119.8	116.8	110.9	108.0	105.2	102.5
5000	138.9	127.3	126.4	125.5	124.6	123.8	120.6	114.5	111.6	108.6	105.9
5400	144.3	132.2	131.3	130.3	129.4	128.5	125.2	118.9	115.8	112.7	109.9
5800	149.5	136.9	136.0	135.0	134.0	133.1	129.7	123.1	119.9	116.7	113.7
6200	154.4	141.4	140.4	139.4	138.4	137.4	133.9	127.1	123.8	120.4	117.4
6600	159.2	145.8	144.7	143.7	142.7	141.6	138.0	130.9	127.5	124.1	120.9
7000	163.9	150.0	149.0	147.9	146.8	145.8	142.0	134.7	131.2	127.6	124.4
7400	168.6	154.3	153.1	152.0	150.9	149.9	146.0	138.5	134.8	131.2	127.8
7800	173.0	158.3	157.2	156.0	154.9	153.8	149.8	142.1	138.3	134.6	131.1
8200	177.2	162.2	161.0	159.8	158.7	157.5	153.4	145.5	141.7	137.8	134.3
8600	181.3	165.8	164.6	163.4	162.2	161.1	156.9	148.8	144.8	140.9	137.2
9000	185.1	169.3	168.1	166.9	165.7	164.5	160.2	151.9	147.8	143.8	140.1
9400	188.7	172.6	171.3	170.0	168.8	167.6	163.2	154.7	150.6	146.5	142.7
9800	189.9	175.7	174.4	173.2	171.9	170.7	166.2	157.5	153.3	149.1	145.2
10200	189.9	178.9	177.5	176.2	174.9	173.7	169.1	160.3	156.0	151.7	147.7
10600	189.9	181.9	180.6	179.2	177.9	176.6	172.0	162.9	158.5	154.2	150.1
11000	189.9	185.0	183.6	182.2	180.9	179.6	174.8	165.6	161.1	156.7	152.5
11400	189.9	188.0	186.6	185.2	183.8	182.5	177.7	168.2	163.7	159.1	154.9
CLIMB LIMIT WT (1000 LB)	166.1	164.7	164.5	164.3	164.1	163.8	157.9	146.5	140.9	135.5	130.2

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4700	127.2	116.1	115.3	114.6	113.8	110.9	108.1	102.8	100.3	97.8	95.5
5000	131.4	119.9	119.1	118.3	117.5	114.5	111.6	106.1	103.6	101.0	98.6
5400	136.4	124.5	123.7	122.8	122.0	118.9	115.9	110.1	107.5	104.8	102.3
5800	141.3	128.9	128.0	127.2	126.3	123.1	119.9	114.0	111.2	108.4	105.9
6200	146.0	133.1	132.2	131.3	130.5	127.1	123.8	117.6	114.8	111.9	109.2
6600	150.5	137.2	136.3	135.3	134.4	130.9	127.6	121.2	118.2	115.2	112.5
7000	154.9	141.2	140.2	139.2	138.3	134.7	131.2	124.6	121.6	118.5	115.7
7400	159.3	145.2	144.1	143.1	142.2	138.5	134.9	128.1	125.0	121.8	118.9
7800	163.4	148.9	147.9	146.9	145.9	142.1	138.4	131.4	128.2	124.9	121.9
8200	167.4	152.5	151.5	150.4	149.4	145.5	141.7	134.6	131.3	127.9	124.8
8600	171.2	156.0	154.9	153.8	152.8	148.8	144.9	137.6	134.2	130.7	127.6
9000	174.9	159.3	158.1	157.0	156.0	151.9	147.9	140.4	136.9	133.4	130.2
9400	178.2	162.3	161.1	160.0	158.9	154.7	150.7	143.0	139.5	135.8	132.5
9800	181.5	165.2	164.0	162.9	161.8	157.5	153.4	145.6	141.9	138.2	134.9
10200	184.7	168.1	166.9	165.7	164.6	160.3	156.0	148.0	144.3	140.6	137.1
10600	187.9	171.0	169.7	168.5	167.4	163.0	158.6	150.5	146.7	142.8	139.3
11000	189.9	173.8	172.5	171.3	170.1	165.6	161.2	152.9	149.0	145.1	141.5
11400	189.9	176.6	175.3	174.1	172.9	168.3	163.8	155.3	151.3	147.3	143.7
CLIMB LIMIT WT (1000 LB)	159.4	158.3	158.1	157.9	157.6	152.0	146.3	135.6	130.6	125.4	120.9

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4700	119.7	109.3	108.6	107.9	105.2	102.6	100.1	95.3	93.0	90.9	88.9
5000	123.6	112.9	112.2	111.4	108.6	105.9	103.4	98.4	96.0	93.8	91.8
5400	128.4	117.2	116.4	115.7	112.8	109.9	107.3	102.1	99.6	97.4	95.2
5800	132.9	121.3	120.5	119.7	116.7	113.8	111.1	105.7	103.1	100.7	98.5
6200	137.3	125.3	124.4	123.6	120.5	117.5	114.6	109.0	106.3	103.9	101.6
6600	141.5	129.1	128.2	127.3	124.1	121.0	118.0	112.3	109.5	107.0	104.5
7000	145.6	132.8	131.9	131.0	127.7	124.4	121.4	115.4	112.6	110.0	107.5
7400	149.7	136.5	135.6	134.7	131.2	127.9	124.8	118.6	115.7	113.0	110.4
7800	153.6	140.0	139.1	138.2	134.6	131.2	128.0	121.7	118.7	115.9	113.3
8200	157.3	143.4	142.4	141.5	137.9	134.3	131.0	124.6	121.5	118.6	115.9
8600	160.9	146.6	145.6	144.6	140.9	137.3	133.9	127.3	124.1	121.2	118.4
9000	164.3	149.7	148.7	147.6	143.8	140.2	136.7	129.9	126.7	123.7	120.8
9400	167.4	152.5	151.4	150.4	146.5	142.8	139.2	132.3	129.0	125.9	123.0
9800	170.4	155.2	154.2	153.1	149.2	145.3	141.7	134.6	131.2	128.1	125.2
10200	173.5	157.9	156.8	155.8	151.7	147.8	144.1	136.9	133.4	130.3	127.2
10600	176.4	160.6	159.5	158.3	154.2	150.2	146.5	139.1	135.5	132.3	129.2
11000	179.4	163.2	162.0	160.9	156.7	152.6	148.8	141.2	137.6	134.4	131.2
11400	182.3	165.8	164.6	163.5	159.2	155.0	151.1	143.4	139.7	136.4	133.2
CLIMB LIMIT WT (1000 LB)	152.8	151.8	151.7	151.5	145.9	140.5	135.2	125.1	120.4	116.2	112.3

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4700	112.3	102.8	102.2	100.0	97.6	95.1	92.8	88.4	86.4	84.4	82.5
5000	116.0	106.2	105.5	103.2	100.7	98.2	95.8	91.2	89.1	87.1	85.1
5400	120.4	110.2	109.5	107.1	104.5	101.9	99.4	94.6	92.5	90.3	88.3
5800	124.6	114.1	113.4	110.8	108.2	105.4	102.9	97.9	95.6	93.4	91.3
6200	128.7	117.7	117.0	114.4	111.6	108.8	106.1	101.0	98.6	96.3	94.1
6600	132.6	121.3	120.5	117.8	114.9	112.0	109.3	103.9	101.5	99.1	96.9
7000	136.4	124.7	123.9	121.2	118.2	115.2	112.4	106.9	104.3	101.9	99.5
7400	140.2	128.2	127.4	124.5	121.5	118.4	115.5	109.8	107.2	104.7	102.3
7800	143.9	131.5	130.7	127.7	124.6	121.4	118.4	112.6	109.9	107.4	104.9
8200	147.4	134.7	133.8	130.8	127.6	124.3	121.2	115.2	112.5	109.9	107.3
8600	150.7	137.7	136.8	133.7	130.4	127.0	123.9	117.8	115.0	112.2	109.6
9000	153.8	140.5	139.6	136.4	133.1	129.6	126.4	120.1	117.3	114.5	111.8
9400	156.7	143.1	142.2	139.0	135.5	132.0	128.7	122.3	119.4	116.5	113.8
9800	159.5	145.7	144.7	141.4	137.9	134.3	131.0	124.4	121.5	118.6	115.7
10200	162.3	148.2	147.2	143.8	140.2	136.6	133.2	126.5	123.4	120.5	117.6
10600	165.1	150.6	149.6	146.2	142.5	138.8	135.3	128.5	125.3	122.3	119.4
11000	167.8	153.0	152.0	148.5	144.8	140.9	137.4	130.4	127.2	124.2	121.2
11400	170.4	155.4	154.4	150.8	147.0	143.1	139.5	132.4	129.1	126.0	122.9
CLIMB LIMIT WT (1000 LB)	145.8	145.0	144.8	139.9	134.7	129.5	124.6	115.5	111.3	107.4	103.6

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
4700	105.1	96.7	94.8	92.6	90.4	88.1	86.0	81.8	79.8	77.8	75.9
5000	108.5	99.8	97.8	95.6	93.3	90.9	88.7	84.4	82.3	80.2	78.3
5400	112.6	103.6	101.5	99.2	96.8	94.3	92.0	87.5	85.3	83.2	81.1
5800	116.6	107.2	105.0	102.6	100.1	97.6	95.2	90.5	88.2	86.0	83.9
6200	120.4	110.6	108.4	105.9	103.3	100.6	98.2	93.3	91.0	88.7	86.5
6600	124.0	113.9	111.6	109.0	106.3	103.6	101.0	96.0	93.6	91.2	88.9
7000	127.5	117.1	114.8	112.1	109.3	106.5	103.9	98.7	96.2	93.7	91.4
7400	131.1	120.4	117.9	115.2	112.3	109.4	106.7	101.4	98.8	96.3	93.8
7800	134.5	123.5	121.0	118.1	115.2	112.2	109.4	103.9	101.3	98.7	96.2
8200	137.7	126.4	123.8	120.9	117.9	114.8	112.0	106.4	103.6	101.0	98.4
8600	140.8	129.2	126.5	123.6	120.5	117.3	114.4	108.6	105.8	103.1	100.5
9000	143.7	131.8	129.1	126.1	122.9	119.7	116.7	110.8	107.9	105.1	102.5
9400	146.4	134.2	131.5	128.4	125.1	121.9	118.8	112.8	109.9	107.0	104.3
9800	149.0	136.6	133.8	130.7	127.3	124.0	120.9	114.7	111.7	108.8	106.0
10200	151.6	138.9	136.1	132.8	129.4	126.0	122.8	116.5	113.5	110.5	107.7
10600	154.1	141.2	138.2	134.9	131.5	128.0	124.7	118.3	115.2	112.2	109.2
11000	156.5	143.4	140.4	137.0	133.5	129.9	126.6	120.1	116.9	113.8	110.8
11400	159.0	145.6	142.5	139.1	135.5	131.9	128.5	121.8	118.6	115.4	112.4
CLIMB LIMIT WT (1000 LB)	138.5	137.6	133.7	129.1	124.1	119.2	114.8	106.2	102.0	98.0	94.2

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3400 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 500 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3200 lb.

Takeoff Field & Climb Limit Weights - Wet Runway (24K Derate)
Flaps 5

12000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4700	98.6	91.2	90.7	89.2	87.0	84.3	81.5	78.9	76.5	74.0	71.6
5000	101.8	94.2	93.7	92.2	89.9	87.1	84.3	81.6	79.1	76.6	74.2
5400	105.7	97.8	97.4	95.7	93.4	90.5	87.6	84.8	82.2	79.7	77.1
5800	109.4	101.3	100.8	99.1	96.7	93.7	90.8	87.9	85.2	82.6	80.0
6200	112.9	104.6	104.1	102.4	99.9	96.8	93.7	90.8	88.0	85.3	82.6
6600	116.3	107.7	107.2	105.4	102.9	99.7	96.6	93.5	90.7	87.9	85.1
7000	119.5	110.7	110.2	108.4	105.7	102.5	99.2	96.1	93.2	90.3	87.5
7400	122.5	113.5	112.9	111.1	108.3	105.0	101.7	98.5	95.5	92.6	89.7
7800	125.4	116.1	115.6	113.7	110.9	107.5	104.1	100.8	97.8	94.8	91.8
8200	128.4	118.9	118.3	116.4	113.5	110.1	106.6	103.2	100.1	97.0	93.9
8600	131.3	121.6	121.0	119.0	116.1	112.6	109.0	105.6	102.4	99.2	96.1
9000	133.9	124.0	123.4	121.4	118.4	114.8	111.2	107.7	104.4	101.2	98.0
9400	136.4	126.4	125.8	123.7	120.7	117.0	113.3	109.7	106.4	103.1	99.9
9800	138.9	128.7	128.1	125.9	122.9	119.1	115.3	111.7	108.3	105.0	101.7
10200	141.4	130.9	130.3	128.2	125.0	121.2	117.3	113.6	110.2	106.8	103.4
10600	143.8	133.2	132.5	130.3	127.1	123.2	119.3	115.5	112.0	108.5	105.1
11000	146.2	135.3	134.7	132.5	129.2	125.2	121.2	117.4	113.8	110.2	106.7
11400	148.6	137.5	136.8	134.5	131.2	127.2	123.1	119.2	115.5	111.9	108.3
CLIMB LIMIT WT (1000 LB)	130.1	129.0	128.9	126.3	122.1	116.5	110.8	105.6	100.9	96.2	91.7

13500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	3	6	10	15	20	25	30	35	40	45
4700	93.2	86.2	85.1	83.7	81.6	79.1	76.5	74.1	71.9	69.7	67.5
5000	96.3	89.1	88.0	86.5	84.4	81.9	79.1	76.7	74.4	72.2	69.9
5400	100.0	92.5	91.4	89.9	87.7	85.1	82.3	79.8	77.4	75.1	72.7
5800	103.5	95.8	94.7	93.1	90.9	88.1	85.3	82.7	80.3	77.8	75.4
6200	106.9	98.9	97.8	96.2	93.9	91.1	88.1	85.4	82.9	80.4	77.9
6600	110.1	101.9	100.7	99.0	96.7	93.8	90.7	88.0	85.4	82.9	80.3
7000	113.1	104.7	103.5	101.8	99.4	96.4	93.3	90.4	87.8	85.2	82.5
7400	116.0	107.4	106.1	104.3	101.8	98.8	95.6	92.7	90.0	87.3	84.6
7800	118.7	109.9	108.6	106.8	104.2	101.1	97.8	94.9	92.1	89.3	86.6
8200	121.5	112.5	111.2	109.3	106.7	103.5	100.1	97.1	94.3	91.4	88.6
8600	124.3	115.0	113.7	111.8	109.1	105.9	102.4	99.3	96.4	93.5	90.6
9000	126.8	117.4	116.0	114.1	111.3	108.0	104.5	101.4	98.4	95.4	92.5
9400	129.2	119.6	118.2	116.2	113.4	110.0	106.4	103.2	100.2	97.2	94.2
9800	131.5	121.7	120.3	118.3	115.5	112.0	108.4	105.1	102.0	98.9	95.9
10200	133.8	123.9	122.4	120.4	117.5	114.0	110.2	106.9	103.8	100.6	97.5
10600	136.1	126.0	124.5	122.4	119.4	115.9	112.1	108.7	105.5	102.3	99.1
11000	138.4	128.0	126.5	124.4	121.4	117.7	113.8	110.4	107.1	103.9	100.6
11400	140.6	130.0	128.5	126.3	123.2	119.5	115.6	112.1	108.7	105.4	102.1
CLIMB LIMIT WT (1000 LB)	123.7	122.5	120.7	118.2	114.4	109.3	103.8	99.2	94.8	90.5	86.1

With engine bleed for packs off, increase field limit weight by 900 lb and climb limit weight by 3200 lb.
With engine anti-ice on, decrease field limit weight by 3100 lb and climb limit weight by 4200 lb.
With engine and wing anti-ice on (optional system), decrease field limit weight by 3900 lb and climb limit weight by 6000 lb.

Takeoff Obstacle Limit Weight (24K Derate)**Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	161.4	173.4	180.9						
50	147.7	161.5	170.8	176.2	180.3	183.5			
100	137.7	150.5	160.3	167.4	172.3	175.8	178.7	181.1	183.0
150	130.0	142.3	152.1	159.5	165.3	169.8	173.0	175.6	177.8
200	123.6	135.8	145.3	153.0	159.0	163.9	167.8	170.9	173.3
250	118.0	130.1	139.6	147.3	153.6	158.7	162.8	166.3	169.2
300	113.2	125.1	134.6	142.3	148.7	154.0	158.4	162.0	165.1
350	108.7	120.7	130.1	137.9	144.3	149.7	154.2	158.1	161.4
400	104.7	116.6	126.1	133.8	140.3	145.8	150.4	154.4	157.9
450	101.0	112.9	122.3	130.1	136.6	142.1	146.9	151.0	154.6
500	97.6	109.4	118.9	126.6	133.2	138.8	143.6	147.8	151.5
550	94.5	106.2	115.6	123.4	130.0	135.7	140.5	144.8	148.5
600	91.5	103.2	112.6	120.4	127.0	132.7	137.6	141.9	145.7
650		100.4	109.8	117.6	124.2	129.9	134.9	139.2	143.1
700		97.8	107.1	114.9	121.6	127.3	132.3	136.7	140.6
750		95.2	104.6	112.4	119.0	124.8	129.8	134.3	138.2
800		92.9	102.2	110.0	116.6	122.4	127.5	131.9	135.9
850		90.7	99.9	107.7	114.3	120.1	125.2	129.7	133.7
900			97.7	105.5	112.2	118.0	123.1	127.6	131.6
950			95.7	103.4	110.1	115.9	121.0	125.5	129.6
1000			93.7	101.4	108.1	113.9	119.0	123.6	127.6

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
30 & BELOW	0	0	0	0	0	0
32	-1.4	-1.8	-2.2	-2.5	-2.9	-3.3
34	-2.8	-3.6	-4.3	-5.1	-5.9	-6.6
36	-4.2	-5.4	-6.5	-7.6	-8.8	-9.9
38	-5.6	-7.2	-8.7	-10.2	-11.7	-13.2
40	-7.0	-8.9	-10.8	-12.7	-14.6	-16.5
42	-8.4	-10.7	-13.0	-15.3	-17.5	-19.8
44	-9.8	-12.5	-15.1	-17.8	-20.4	-23.1
46	-11.2	-14.3	-17.3	-20.3	-23.3	-26.4
48	-12.6	-16.0	-19.4	-22.8	-26.3	-29.7
50	-14.0	-17.8	-21.6	-25.4	-29.2	-32.9

Takeoff Obstacle Limit Weight (24K Derate)

Flaps 5

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
S.L. & BELOW	0	0	0	0	0	0
1000	-3.5	-4.1	-4.8	-5.5	-6.2	-6.9
2000	-6.9	-8.3	-9.7	-11.0	-12.4	-13.7
3000	-10.0	-12.1	-14.1	-16.2	-18.2	-20.3
4000	-13.1	-15.8	-18.6	-21.4	-24.1	-26.9
5000	-16.2	-19.6	-23.1	-26.5	-29.9	-33.4
6000	-19.3	-23.4	-27.5	-31.7	-35.8	-39.9
7000	-22.2	-27.0	-31.8	-36.5	-41.3	-46.1
8000	-25.1	-30.5	-36.0	-41.4	-46.9	-52.3
9000	-27.7	-33.8	-39.9	-45.9	-52.0	-58.1
10000	-30.4	-37.1	-43.8	-50.5	-57.2	-63.9

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
15 TW	-19.5	-18.3	-17.1	-15.9	-14.7	-13.5
10 TW	-13.0	-12.2	-11.4	-10.6	-9.8	-9.0
5 TW	-6.5	-6.1	-5.7	-5.3	-4.9	-4.5
0	0	0	0	0	0	0
10 HW	2.5	2.2	1.9	1.6	1.3	0.9
20 HW	5.0	4.4	3.7	3.1	2.5	1.9
30 HW	7.6	6.6	5.7	4.7	3.8	2.8
40 HW	10.2	8.9	7.6	6.4	5.1	3.8

With engine bleed for packs off, increase weight by 1500 lb.

With engine anti-ice on, decrease weight by 600 lb.

With engine and wing anti-ice on, decrease weight by 2700 lb (optional system).

Takeoff Obstacle Limit Weight - High Altitude (24K Derate)**Flaps 5****10000 ft, 10°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	122.0	133.6	140.7	146.1					
50	113.4	124.3	132.7	138.8	142.7	146.0			
100	106.6	116.9	125.0	131.3	136.3	139.8	142.5	144.8	146.7
150	101.1	111.1	119.0	125.3	130.4	134.5	137.8	140.2	142.3
200	96.4	106.2	114.0	120.3	125.5	129.7	133.2	136.2	138.5
250	92.2	101.9	109.7	116.0	121.2	125.6	129.2	132.3	134.9
300		98.1	105.8	112.2	117.5	121.9	125.6	128.8	131.5
350		94.7	102.4	108.7	114.0	118.5	122.3	125.6	128.5
400		91.6	99.2	105.6	110.9	115.4	119.3	122.7	125.6
450			96.3	102.6	108.0	112.6	116.5	119.9	122.9
500			93.6	99.9	105.3	109.9	113.9	117.4	120.4
550			91.1	97.4	102.8	107.4	111.5	115.0	118.1
600				95.0	100.4	105.1	109.1	112.7	115.8
650				92.8	98.2	102.8	106.9	110.5	113.7
700				90.7	96.1	100.7	104.8	108.5	111.7
750					94.1	98.7	102.9	106.5	109.7
800					92.1	96.8	101.0	104.6	107.9
850					90.3	95.0	99.1	102.8	106.1
900						93.3	97.4	101.1	104.4
950						91.6	95.7	99.4	102.8
1000						90.0	94.1	97.9	101.2

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
10 & BELOW	0	0	0	0	0	0	0
12	-1.4	-1.6	-1.8	-2.0	-2.2	-2.4	-2.6
14	-2.9	-3.2	-3.6	-4.0	-4.4	-4.8	-5.2
16	-4.3	-4.9	-5.4	-6.0	-6.6	-7.2	-7.7
18	-5.7	-6.5	-7.2	-8.0	-8.8	-9.6	-10.3
20	-7.1	-8.1	-9.1	-10.0	-11.0	-11.9	-12.9
22	-8.6	-9.7	-10.9	-12.0	-13.2	-14.3	-15.5
24	-10.0	-11.3	-12.7	-14.0	-15.4	-16.7	-18.1
26	-11.4	-12.9	-14.5	-16.0	-17.6	-19.1	-20.7
28	-12.8	-14.6	-16.3	-18.0	-19.8	-21.5	-23.2
30	-14.3	-16.2	-18.1	-20.0	-22.0	-23.9	-25.8
32	-15.1	-17.3	-19.4	-21.6	-23.8	-26.0	-28.1
34	-16.0	-18.4	-20.8	-23.2	-25.6	-28.0	-30.4
36	-16.8	-19.5	-22.1	-24.8	-27.4	-30.1	-32.8
38	-17.7	-20.6	-23.5	-26.4	-29.3	-32.2	-35.1
40	-18.5	-21.7	-24.8	-27.9	-31.1	-34.2	-37.4
42	-18.5	-22.0	-25.6	-29.1	-32.7	-36.2	-39.8
44	-18.4	-22.4	-26.4	-30.3	-34.3	-38.3	-42.2
46	-18.4	-22.8	-27.1	-31.5	-35.9	-40.3	-44.6
48	-18.4	-23.1	-27.9	-32.7	-37.5	-42.3	-47.0
50	-18.3	-23.5	-28.7	-33.9	-39.1	-44.3	-49.5

Takeoff Obstacle Limit Weight - High Altitude (24K Derate)
Flaps 5
Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-4.0	-4.4	-4.9	-5.3	-5.7	-6.1	-6.5
12000	-8.1	-8.9	-9.7	-10.6	-11.4	-12.2	-13.1
13000	-11.8	-13.1	-14.3	-15.5	-16.8	-18.0	-19.3
13500	-13.6	-15.2	-16.7	-18.0	-19.7	-20.9	-22.0

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
15 TW	-13.8	-13.3	-12.7	-12.2	-11.7	-11.2	-10.7
10 TW	-9.2	-8.8	-8.5	-8.2	-7.8	-7.5	-7.1
5 TW	-4.6	-4.4	-4.2	-4.1	-3.9	-3.7	-3.6
0	0	0	0	0	0	0	0
10 HW	1.7	1.6	1.5	1.3	1.2	1.0	0.9
20 HW	3.5	3.2	2.9	2.6	2.4	2.1	1.8
30 HW	5.3	4.8	4.4	4.0	3.6	3.1	2.7
40 HW	7.1	6.5	5.9	5.3	4.8	4.2	3.6

With engine bleed for packs off, increase weight by 1500 lb.
With engine anti-ice on, decrease weight by 4500 lb.
With engine and wing anti-ice on, decrease weight by 6500 lb (optional system).

Performance Dispatch

Chapter PD

Enroute

Section 21

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
180	31700	-8	34100*	34100*	34100*	32700	31300
170	32900	-10	35500*	35500*	35500	34000	32500
160	34200	-13	36800*	36800*	36800	35200	33800
150	35600	-16	38000*	38000*	38000*	36600	35100
140	37000	-17	39400*	39400*	39400*	38000	36600
130	38500	-17	40700*	40700*	40700*	39600	38100
120	40200	-17	41000	41000	41000	41000	39800
110	41000	-17	41000	41000	41000	41000	41000
100	41000	-17	41000	41000	41000	41000	41000
90	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
180	31700	-2	32800*	32800*	32800*	32700	31300
170	32900	-5	34500*	34500*	34500*	34000	32500
160	34200	-8	35900*	35900*	35900*	35200	33800
150	35600	-11	37300*	37300*	37300*	36600	35100
140	37000	-12	38500*	38500*	38500*	38000	36600
130	38500	-12	39900*	39900*	39900*	39600	38100
120	40200	-12	41000	41000	41000	41000	39800
110	41000	-12	41000	41000	41000	41000	41000
100	41000	-12	41000	41000	41000	41000	41000
90	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
180	31700	4	28100*	28100*	28100*	28100*	28100*
170	32900	1	31700*	31700*	31700*	31700*	31700*
160	34200	-2	34400*	34400*	34400*	34400*	33800
150	35600	-5	36000*	36000*	36000*	36000*	35100
140	37000	-6	37400*	37400*	37400*	37400*	36600
130	38500	-6	38700*	38700*	38700*	38700*	38100
120	40200	-6	40100*	40100*	40100*	40100*	39800
110	41000	-6	41000	41000	41000	41000	41000
100	41000	-6	41000	41000	41000	41000	41000
90	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
271	253	237	223	211	200	191	182	174	167	161
527	496	468	443	420	400	383	367	352	339	326
783	738	698	662	630	600	575	551	530	510	492
1039	981	928	881	839	800	767	736	708	682	658
1294	1223	1158	1100	1048	1000	959	921	886	853	823
1550	1465	1388	1319	1257	1200	1151	1105	1063	1024	989
1805	1708	1618	1538	1466	1400	1343	1290	1241	1196	1154
2061	1950	1848	1758	1676	1600	1535	1474	1418	1367	1320
2317	2193	2079	1977	1885	1800	1727	1659	1596	1538	1485
2573	2435	2309	2196	2094	2000	1919	1844	1774	1710	1651
2829	2678	2539	2415	2303	2200	2111	2028	1952	1881	1816
3085	2920	2770	2635	2512	2400	2303	2213	2129	2052	1982
3341	3163	3000	2854	2722	2600	2495	2398	2307	2224	2147
3597	3406	3230	3073	2931	2800	2687	2582	2485	2395	2313
3853	3648	3460	3292	3140	3000	2880	2767	2663	2566	2478
4109	3891	3690	3512	3349	3200	3072	2952	2841	2738	2644
4365	4133	3921	3731	3559	3400	3264	3137	3018	2909	2809
4620	4375	4151	3950	3768	3600	3456	3321	3196	3081	2975
4876	4618	4381	4169	3977	3800	3648	3506	3374	3252	3140
5132	4860	4611	4388	4186	4000	3840	3691	3552	3424	3306
5388	5103	4841	4607	4395	4200	4032	3875	3730	3595	3472
5643	5345	5072	4827	4605	4400	4224	4060	3908	3767	3637
5899	5588	5302	5046	4814	4600	4416	4245	4086	3938	3803
6155	5830	5532	5265	5023	4800	4609	4430	4263	4110	3968
6411	6073	5763	5485	5232	5000	4801	4614	4441	4281	4134
6667	6315	5993	5704	5442	5200	4993	4799	4619	4452	4299
6923	6558	6223	5923	5651	5400	5185	4983	4796	4624	4465
7179	6801	6454	6142	5860	5600	5377	5168	4974	4795	4630
7435	7043	6684	6362	6069	5800	5569	5352	5152	4966	4796
7691	7286	6914	6581	6279	6000	5761	5537	5329	5137	4961

Reference Fuel and Time Required
Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	LANDING WEIGHT (1000 LB)					
	90	100	110	120	130	140
10	-0.1	-0.1	0.0	0.4	1.0	1.6
20	-0.2	-0.1	0.0	1.0	2.2	3.8
30	-0.3	-0.2	0.0	1.6	3.7	6.7
40	-0.5	-0.3	0.0	2.4	5.7	9.8
50	-0.7	-0.4	0.0	3.4	7.8	13.3
60	-0.9	-0.5	0.0	4.5	10.4	18.0
70	-1.2	-0.7	0.0	5.7	13.1	22.1
80	-1.6	-0.9	0.0	7.1	15.8	25.6

Based on 280/.80 climb, .80M cruise and .80/280/250 descent.

.80M Step Climb

Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
1309	1233	1165	1104	1050	1000	955	914	876	841	809
1820	1717	1625	1542	1468	1400	1338	1282	1230	1182	1137
2332	2202	2085	1981	1886	1800	1721	1650	1583	1522	1466
2843	2686	2545	2419	2304	2200	2105	2017	1937	1863	1794
3354	3170	3006	2857	2722	2600	2488	2385	2291	2204	2123
3865	3655	3466	3295	3141	3000	2871	2753	2645	2544	2451
4376	4139	3925	3733	3559	3400	3255	3121	2999	2885	2780
4887	4623	4385	4171	3977	3800	3638	3490	3353	3226	3109
5398	5106	4845	4609	4395	4200	4022	3858	3707	3567	3437
5908	5590	5305	5047	4813	4600	4405	4226	4061	3908	3766
6418	6073	5764	5485	5231	5000	4788	4594	4415	4249	4095
6927	6557	6223	5922	5649	5400	5172	4962	4769	4590	4424
7437	7039	6682	6360	6067	5800	5555	5331	5123	4932	4754
7946	7522	7141	6797	6485	6200	5939	5699	5478	5273	5083
8454	8005	7600	7235	6903	6600	6323	6068	5832	5615	5413
8963	8487	8059	7672	7321	7000	6706	6436	6187	5957	5743

Trip Fuel and Time Required (1000 LB)

AIR DIST (NM)	TRIP FUEL (1000 LB)						TIME (HRS:MIN)
	LANDING WEIGHT (1000 LB)						
	90	100	110	120	130	140	
1000	10.2	10.7	11.2	11.9	12.7	13.4	2:22
1400	13.9	14.6	15.3	16.3	17.4	18.4	3:14
1800	17.7	18.5	19.5	20.8	22.3	23.5	4:06
2200	21.5	22.5	23.8	25.5	27.2	28.8	4:59
2600	25.4	26.7	28.3	30.3	32.3	34.3	5:51
3000	29.4	30.9	32.9	35.2	37.6	40.0	6:43
3400	33.5	35.3	37.6	40.3	43.1	45.8	7:35
3800	37.6	39.8	42.5	45.5	48.7	51.8	8:27
4200	41.9	44.4	47.5	50.9	54.5	57.9	9:19
4600	46.3	49.2	52.6	56.4	60.4	64.2	10:11
5000	50.8	54.1	57.9	62.1	66.5	70.7	11:03
5400	55.5	59.1	63.4	68.0	72.8	77.5	11:54
5800	60.3	64.3	69.0	74.0	79.3		12:46
6200	65.3	69.7	74.8	80.2			13:37
6600	70.3	75.2	80.7				14:29
7000	75.5	80.9					15:20

Based on 280/.80 climb, .80M cruise and .80/280/250 descent.

Valid for all pressure altitudes with 4000 ft step climb to 2000 ft above optimum altitude.

Short Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
94	80	69	61	55	50	46	42	39	36	34
160	143	129	118	108	100	93	87	82	77	73
226	205	188	173	161	150	141	132	125	118	112
291	266	246	229	213	200	188	178	168	160	152
354	327	303	283	266	250	236	224	213	202	193
417	387	361	338	318	300	284	270	257	245	234
479	446	418	392	370	350	332	316	301	288	276
543	507	475	447	422	400	380	362	345	330	317
608	568	533	502	475	450	428	408	389	373	357
674	630	592	558	527	500	475	453	433	414	397

Trip Fuel and Time Required (1000 LB)

AIR DIST (NM)		LANDING WEIGHT (1000 LB)						TIME(HRS: MIN)
		90	100	110	120	130	140	
50	FUEL (1000 LB)	1.1	1.2	1.3	1.3	1.4	1.5	0:14
	ALT (FT)	12000	11000	11000	10000	9000	9000	
100	FUEL (1000 LB)	1.8	1.9	2.0	2.1	2.2	2.3	0:23
	ALT (FT)	18000	18000	17000	16000	17000	16000	
150	FUEL (1000 LB)	2.4	2.5	2.6	2.7	2.8	3.0	0:30
	ALT (FT)	23000	25000	24000	24000	23000	23000	
200	FUEL (1000 LB)	2.9	3.0	3.2	3.3	3.5	3.6	0:37
	ALT (FT)	31000	29000	28000	27000	26000	26000	
250	FUEL (1000 LB)	3.3	3.5	3.7	3.9	4.1	4.2	0:44
	ALT (FT)	41000	37000	37000	35000	33000	31000	
300	FUEL (1000 LB)	3.7	3.9	4.2	4.4	4.6	4.8	0:50
	ALT (FT)	41000	41000	39000	37000	35000	35000	
350	FUEL (1000 LB)	4.1	4.4	4.6	4.9	5.1	5.4	0:57
	ALT (FT)	41000	41000	39000	37000	37000	35000	
400	FUEL (1000 LB)	4.5	4.8	5.1	5.4	5.7	6.0	1:03
	ALT (FT)	41000	41000	41000	39000	37000	35000	
450	FUEL (1000 LB)	5.0	5.3	5.6	5.9	6.2	6.5	1:10
	ALT (FT)	41000	41000	41000	39000	37000	35000	
500	FUEL (1000 LB)	5.4	5.7	6.0	6.4	6.7	7.1	1:17
	ALT (FT)	41000	41000	41000	39000	37000	35000	

Based on 280/78 climb, Long Range Cruise speed and .78/280/250 descent.

Holding Planning

Flaps Up

WEIGHT (1000 LB)	TOTAL FUEL FLOW (LB/HR)									
	PRESSURE ALTITUDE (FT)									
	1500	5000	10000	15000	20000	25000	30000	35000	40000	41000
170	5910	5810	5750	5720	5610	5600	5730	6050		
160	5590	5490	5430	5390	5300	5240	5360	5560		
150	5280	5180	5120	5060	4990	4890	5000	5130		
140	4970	4870	4800	4740	4670	4550	4650	4730	5250	
130	4660	4560	4490	4420	4350	4240	4290	4360	4690	4820
120	4360	4250	4170	4100	4030	3940	3940	4000	4220	4300
110	4060	3950	3860	3790	3720	3710	3660	3690	3850	3900
100	3770	3720	3610	3540	3460	3400	3360	3350	3470	3510
90	3550	3430	3310	3230	3160	3100	3070	3020	3110	3140

This table includes 5% additional fuel for holding in a racetrack pattern.

Flight Crew Oxygen Requirements
Required Pressure (PSI) for 76 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	735	1055	1360
45	113	725	1040	1340
40	104	715	1020	1320
35	95	700	1005	1300
30	86	690	990	1280
25	77	680	975	1255
20	68	670	960	1240
15	59	655	940	1215
10	50	645	925	1195
5	41	635	910	1175
0	32	620	890	1150
-5	23	610	875	1130
-10	14	600	860	1110

Required Pressure (PSI) for 114/115 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	530	735	945
45	113	520	725	930
40	104	510	715	915
35	95	505	700	900
30	86	495	690	885
25	77	485	680	870
20	68	480	670	860
15	59	470	655	840
10	50	460	645	830
5	41	455	635	815
0	32	445	620	800
-5	23	440	610	785
-10	14	430	600	770

ENGINE INOP
MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 LB)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	98.2	95.1	91.7
28	106.1	102.6	99.1
26	114.4	110.5	106.9
24	123.9	119.8	115.7
22	135.0	130.2	125.5
20	146.9	141.4	135.8
18	157.6	151.6	145.3
16	168.2	162.2	155.5
14	177.9	172.1	166.2
12	188.4	181.7	174.5

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 LB)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-4.3	-4.0	-3.9	-3.8	-3.6	-3.3	-3.0	-2.7	-2.5
ENGINE & WING	-17.0	-15.9	-14.9	-14.8	-14.5	-13.1	-11.9	-11.0	-11.0

ALL ENGINES

**Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
292	267	247	229	213	200	188	178	168	160	152
603	548	501	462	429	400	375	353	333	315	299
915	828	756	696	644	600	561	527	497	471	446
1226	1108	1011	929	860	800	748	702	662	626	594
1538	1389	1266	1163	1075	1000	935	877	827	781	741
1850	1669	1520	1396	1291	1200	1121	1052	991	937	888
2161	1949	1775	1630	1506	1400	1308	1227	1156	1092	1035
2473	2230	2030	1863	1722	1600	1494	1402	1320	1248	1183
2785	2510	2285	2097	1937	1800	1681	1577	1485	1403	1330

Critical Fuel (1000 LB)

AIRDIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)								
	100	110	120	130	140	150	160	170	180
200	3.8	3.9	4.1	4.2	4.4	4.5	4.6	4.8	4.9
300	5.3	5.5	5.7	5.9	6.1	6.3	6.5	6.7	6.8
400	6.8	7.1	7.3	7.6	7.8	8.1	8.3	8.5	8.7
500	8.4	8.6	8.9	9.2	9.5	9.8	10.1	10.4	10.6
600	9.9	10.2	10.6	10.9	11.2	11.5	11.9	12.2	12.5
700	11.4	11.8	12.2	12.5	12.9	13.3	13.7	14.0	14.4
800	12.9	13.3	13.7	14.2	14.6	15.0	15.4	15.9	16.2
900	14.4	14.8	15.3	15.8	16.3	16.7	17.2	17.7	18.1
1000	15.9	16.3	16.9	17.4	17.9	18.5	19.0	19.5	19.9
1100	17.3	17.8	18.4	19.0	19.6	20.2	20.7	21.3	21.8
1200	18.8	19.4	20.0	20.7	21.3	21.8	22.4	23.1	23.6
1300	20.3	20.9	21.6	22.3	22.9	23.5	24.2	24.8	25.4
1400	21.8	22.4	23.1	23.8	24.5	25.2	25.9	26.6	27.3
1500	23.2	23.9	24.6	25.4	26.1	26.9	27.6	28.4	29.1
1600	24.7	25.4	26.1	27.0	27.8	28.6	29.4	30.1	30.9
1700	26.1	26.8	27.7	28.5	29.4	30.2	31.0	31.9	32.6
1800	27.6	28.3	29.2	30.1	31.0	31.9	32.7	33.6	34.4

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included.

- Adjustments:
- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
 - Increase fuel required 0.3% per 10°C above ISA.
 - When icing conditions are forecast, use the greater of engine and wing anti-ice on (12%) for the total forecast time or engine and wing anti-ice on and ice drag (16%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP**MAX CONTINUOUS THRUST****Decompression Critical Fuel Reserves - LRC Cruise****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
310	279	254	233	215	200	187	175	165	156	148
621	559	509	466	431	400	373	350	330	311	295
933	840	764	700	646	600	560	525	494	467	442
1245	1120	1018	933	862	800	747	700	659	622	589
1556	1401	1273	1167	1077	1000	933	875	823	778	737
1868	1681	1528	1400	1292	1200	1120	1050	988	933	884
2180	1961	1783	1634	1508	1400	1307	1225	1153	1088	1031
2492	2242	2037	1867	1723	1600	1493	1400	1317	1244	1178
2803	2522	2292	2101	1939	1800	1680	1575	1482	1399	1326

Critical Fuel (1000 LB)

AIRDIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)								
	100	110	120	130	140	150	160	170	180
200	3.3	3.5	3.6	3.8	3.9	4.1	4.3	4.4	4.5
300	4.7	4.9	5.1	5.3	5.5	5.8	6.0	6.2	6.3
400	6.0	6.3	6.5	6.8	7.1	7.4	7.7	7.9	8.0
500	7.3	7.7	8.0	8.4	8.7	9.0	9.3	9.6	9.8
600	8.7	9.1	9.5	9.9	10.3	10.6	11.0	11.3	11.6
700	10.0	10.5	10.9	11.4	11.8	12.2	12.6	13.1	13.4
800	11.4	11.9	12.3	12.8	13.3	13.8	14.3	14.8	15.1
900	12.7	13.2	13.7	14.3	14.9	15.4	16.0	16.5	16.9
1000	14.0	14.5	15.1	15.8	16.4	17.0	17.6	18.2	18.6
1100	15.3	15.9	16.5	17.2	17.9	18.6	19.2	19.8	20.3
1200	16.5	17.2	17.9	18.7	19.4	20.2	20.8	21.5	22.0
1300	17.8	18.6	19.3	20.2	20.9	21.7	22.4	23.1	23.8
1400	19.1	19.9	20.7	21.6	22.4	23.2	24.0	24.8	25.5
1500	20.4	21.2	22.1	23.0	23.9	24.7	25.6	26.5	27.2
1600	21.6	22.6	23.5	24.4	25.3	26.3	27.2	28.1	28.8
1700	22.9	23.9	24.8	25.8	26.8	27.8	28.8	29.7	30.5
1800	24.2	25.1	26.2	27.2	28.3	29.3	30.3	31.3	32.2

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.5% per 10°C above ISA.

-When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP

MAX CONTINUOUS THRUST

**Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
267	250	235	222	210	200	190	181	173	166	159
538	503	473	445	421	400	380	362	346	331	318
812	758	711	670	633	600	570	543	518	496	475
1088	1015	951	894	844	800	759	723	690	660	632
1365	1272	1191	1119	1056	1000	949	903	861	823	788
1643	1530	1431	1345	1268	1200	1138	1083	1032	987	945
1921	1788	1672	1570	1480	1400	1327	1262	1204	1150	1101
2198	2045	1912	1795	1692	1600	1517	1442	1375	1313	1257
2475	2302	2152	2020	1903	1800	1706	1622	1546	1477	1414

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)									
	100	110	120	130	140	150	160	170	180	
200	3.1	3.2	3.4	3.4	3.6	3.7	3.8	3.9	4.1	
300	4.1	4.3	4.5	4.6	4.8	5.1	5.3	5.5	5.7	
400	5.1	5.4	5.7	5.9	6.2	6.4	6.8	7.0	7.3	
500	6.1	6.4	6.8	7.1	7.4	7.8	8.2	8.5	8.9	
600	7.0	7.5	7.9	8.3	8.7	9.2	9.7	10.1	10.6	
700	8.0	8.5	9.0	9.5	10.0	10.5	11.1	11.6	12.1	
800	8.9	9.5	10.1	10.7	11.2	11.9	12.5	13.1	13.7	
900	9.8	10.5	11.2	11.8	12.5	13.2	13.9	14.5	15.3	
1000	10.8	11.5	12.3	13.0	13.7	14.5	15.3	16.0	16.8	
1100	11.7	12.5	13.4	14.1	14.9	15.8	16.7	17.5	18.3	
1200	12.6	13.5	14.4	15.3	16.2	17.1	18.0	18.9	19.9	
1300	13.5	14.5	15.5	16.4	17.4	18.4	19.4	20.3	21.4	
1400	14.4	15.4	16.5	17.5	18.5	19.6	20.7	21.8	22.9	
1500	15.2	16.4	17.5	18.6	19.7	20.9	22.1	23.2	24.4	
1600	16.1	17.3	18.6	19.7	20.9	22.1	23.4	24.6	25.8	
1700	17.0	18.3	19.6	20.8	22.1	23.4	24.7	26.0	27.3	
1800	17.8	19.2	20.6	21.9	23.2	24.6	26.0	27.3	28.8	

Based on: Driftdown to and cruise at level off altitude, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.5% per 10°C above ISA.
- When icing conditions are forecast, use the greater of the engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (26%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

Performance Dispatch Landing

Chapter PD Section 22

Landing Field Limit Weight - Dry Runway

Flaps 40

Based on anti-skid operative and automatic speedbrakes

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000			2670	3000	3220	3430	3630	3850
3400		2710	3050	3400	3630	3850	4070	4300
3800	2780	3080	3440	3800	4040	4270	4500	4740
4200	3140	3460	3830	4200	4440	4690	4930	5190
4600	3500	3830	4210	4600	4850	5110	5370	5630
5000	3850	4200	4600	5000	5260	5530	5800	6070
5400	4210	4570	4980	5400	5670	5950	6240	6520
5800	4570	4940	5370	5800	6080	6370	6670	6960
6200	4930	5320	5750	6200	6490	6790	7100	7410
6600	5280	5690	6140	6600	6900	7210	7540	7850
7000	5640	6060	6530	7000	7300	7630	7970	8290
7400	6000	6430	6910	7400	7710	8050	8410	8740
7800	6350	6810	7300	7800	8120	8470	8840	9180
8200	6710	7180	7680	8200	8530	8890	9270	9630
8600	7070	7550	8070	8600	8940	9310	9710	10070
9000	7350	7840	8370	9000	9350	9730	10140	
9400	7490	7990	8500	9400	9760	10150		
9800	7640	8130	8640	9800	10160			
10200	7780	8270	8780	10200				
10600	7920	8410	8910					

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
3400	85.0					
3800	99.4					
4200	114.0	93.5	87.8			
4600	127.1	107.3	100.9	94.7	88.8	
5000	138.7	121.1	114.0	107.1	100.5	94.1
5400	150.9	132.2	125.9	119.3	112.2	105.0
5800	163.5	143.0	136.1	129.3	122.8	115.6
6200	175.7	154.6	146.3	138.7	131.7	125.0
6600		166.4	157.1	148.4	140.5	133.3
		177.5	168.2	158.6	149.8	141.5
7000			178.5	169.1	159.3	150.2
7400				178.6	169.1	159.1
7800					178.1	168.3
8200						176.8
8600						184.9

Decrease field limit weight by 9900 lb when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
6000				6000	6450	7010	7500	8060
6400				6400	6860	7430	7940	8500
6800			5980	6800	7280	7860	8370	8950
7200			6370	7200	7690	8280	8810	9390
7600		5940	6750	7600	8100	8700	9250	9840
8000		6310	7140	8000	8510	9130	9680	10290
8400	5850	6690	7530	8400	8920	9550	10120	10730
8800	6210	7060	7910	8800	9340	9970	10550	11180
9200	6570	7430	8300	9200	9750	10400	10990	11620
9600	6930	7800	8680	9600	10160	10820	11430	12070
10000	7290	8180	9070	10000	10570	11240	11860	12520
10400	7650	8550	9450	10400	10980	11670	12300	12960
10800	8010	8920	9840	10800	11400	12090	12740	13410
11200	8370	9290	10230	11200	11810	12510	13170	13860
11600	8730	9670	10610	11600	12220	12940	13610	14300
12000	9090	10040	11000	12000	12630	13360	14050	14750
12400	9450	10410	11380	12400	13040	13790	14480	15190
12800	9810	10780	11770	12800	13460	14210	14920	15640
13200	10170	11160	12150	13200	13870	14630	15350	16090
13600	10530	11530	12540	13600	14280	15060	15790	16530

Landing Field Limit Weight - Dry Runway

Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
6800	86.3					
7200	93.2	87.4				
7600	100.0	93.9	87.3			
8000	107.0	100.5	93.5	87.4		
8400	113.9	107.0	99.7	93.2	86.9	
8800	120.9	113.6	105.9	99.1	92.5	86.1
9200	127.9	120.2	112.2	104.9	98.0	91.2
9600	134.8	126.8	118.4	110.8	103.6	96.4
10000	141.8	133.3	124.6	116.5	109.1	101.5
10400	149.2	139.7	130.8	122.3	114.4	106.6
10800	156.8	146.4	136.8	128.0	119.7	111.7
11200	164.5	153.4	142.8	133.6	125.0	116.6
11600	172.1	160.5	149.2	139.2	130.2	121.6
12000	179.0	167.8	155.7	145.0	135.5	126.5
12400		174.5	162.4	151.0	140.7	131.4
12800		181.0	169.2	157.2	146.1	136.3
13200			175.4	163.4	151.9	141.2
13600			181.4	169.7	157.6	146.3
14000				175.6	163.5	151.6
14400				181.2	169.5	157.0
14800					174.9	162.4
15200					180.2	168.1
15600						173.4
16000						178.3
16400						183.2

Landing Field Limit Weight - Dry Runway - High Altitudes

Flaps 40

Based on anti-skid operative and automatic speedbrakes

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000			2620	3000	3200	3400	3580	3790
3400		2700	3000	3400	3610	3820	4020	4240
3800	2720	3060	3390	3800	4020	4230	4450	4680
4200	3080	3440	3770	4200	4430	4650	4890	5130
4600	3440	3810	4160	4600	4840	5070	5320	5580
5000	3800	4180	4540	5000	5250	5490	5750	6020
5400	4160	4550	4920	5400	5660	5910	6190	6470
5800	4520	4920	5310	5800	6070	6330	6620	6910
6200	4880	5290	5690	6200	6480	6750	7050	7360
6600	5240	5660	6080	6600	6890	7170	7490	7810
7000	5600	6030	6460	7000	7300	7580	7920	8250
7400	5960	6400	6840	7400	7710	8000	8360	8700
7800	6320	6770	7230	7800	8120	8420	8790	9150
8200	6600	7070	7550	8200	8530	8840	9220	9590
8600	6800	7300	7800	8600	8940	9260	9660	10040
9000	7000	7530	8060	9000	9350	9680	10090	10480
9400	7200	7760	8320	9400	9760	10100	10520	10930
9800	7400	7990	8570	9800	10170	10520	10960	11380
10200	7600	8220	8830	10200	10580	10930	11390	11820
10600	7800	8450	9080	10600	10990	11350	11830	12270

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
4600	94.1	91.0	88.0	85.2	
5000	105.0	101.4	98.0	94.8	93.2
5400	115.6	111.8	108.0	104.3	102.6
5800	125.0	121.7	117.9	113.9	112.0
6200	133.3	129.7	126.3	122.8	121.2
6600	141.5	137.7	134.0	130.4	128.6
7000	150.2	145.8	141.7	137.9	136.0
7400	159.1	154.4	149.9	145.4	143.3
7800	168.3	163.1	158.2	153.5	151.2
8200	176.8	171.9	166.7	161.6	159.1
8600	183.6	179.8	174.9	169.9	167.2
9000	186.7	183.2	179.7	176.2	174.5
9400	189.7	186.0	182.5	179.0	177.2
9800	192.7	188.9	185.2	181.6	179.8
10200		191.8	187.7	184.1	182.3
10600		194.7	190.2	186.5	184.7
11000			192.7	188.8	187.0
11400				191.1	189.2
11800				193.4	191.3
12200					193.4

Decrease field limit weight by 7900 lb when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway - High Altitudes

Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
9000				9000	9570	10160	10780	11400
9400				9400	9980	10570	11210	11840
9800			8870	9800	10390	10990	11640	12290
10200			9260	10200	10790	11410	12070	12730
10600		8710	9640	10600	11200	11830	12500	13170
11000		9090	10030	11000	11610	12250	12940	13610
11400		9460	10420	11400	12020	12660	13370	14050
11800	8880	9830	10800	11800	12430	13080	13800	14490
12200	9240	10210	11190	12200	12840	13500	14230	14930
12600	9600	10580	11580	12600	13240	13920	14660	15370
13000	9960	10950	11960	13000	13650	14340	15100	15810
13400	10320	11330	12350	13400	14060	14750	15530	16250
13800	10680	11700	12740	13800	14470	15170	15960	16690
14200	11050	12070	13130	14200	14880	15590	16390	17130
14600	11410	12450	13510	14600	15290	16010	16820	17570
15000	11770	12820	13900	15000	15700	16430	17260	18010
15400	12130	13200	14290	15400	16100	16850	17690	18460
15800	12490	13570	14670	15800	16510	17260	18120	18900
16200	12850	13940	15060	16200	16920	17680	18550	19340
16600	13220	14320	15450	16600	17330	18100	18980	19780

Landing Field Limit Weight - Dry Runway - High Altitudes
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
8800	86.1					
9200	91.2	88.3	85.6			
9600	96.4	93.3	90.3	87.4		
10000	101.5	98.2	95.0	91.9	88.8	87.2
10400	106.6	103.1	99.7	96.5	93.2	91.5
10800	111.7	108.0	104.4	101.0	97.6	95.8
11200	116.6	112.8	109.1	105.5	101.9	100.1
11600	121.6	117.6	113.8	110.0	106.3	104.3
12000	126.5	122.4	118.4	114.5	110.6	108.6
12400	131.4	127.1	123.0	118.9	114.9	112.8
12800	136.3	131.9	127.6	123.4	119.2	117.1
13200	141.2	136.6	132.2	127.8	123.5	121.3
13600	146.3	141.3	136.7	132.2	127.8	125.5
14000	151.6	146.3	141.3	136.7	132.1	129.7
14400	157.0	151.5	146.1	141.1	136.3	133.9
14800	162.4	156.7	151.1	145.7	140.6	138.1
15200	168.1	161.9	156.1	150.5	145.0	142.3
15600	173.4	167.3	161.2	155.3	149.6	146.7
16000	178.3	172.5	166.4	160.2	154.3	151.3
16400	183.2	177.3	171.6	165.2	159.0	155.9
16800		182.0	176.1	170.2	163.7	160.5
17200			180.7	174.8	168.6	165.2
17600				179.2	173.2	170.0
18000				183.6	177.4	174.3
18400					181.7	178.5
18800						182.7

Landing Field Limit Weight - Wet Runway**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (FT)**

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000				3000	3240	3470	3690	3930
3400			3020	3400	3650	3890	4120	4380
3800		3010	3410	3800	4060	4310	4560	4820
4200	3050	3390	3790	4200	4470	4730	4990	5270
4600	3410	3760	4180	4600	4880	5150	5420	5710
5000	3760	4130	4560	5000	5290	5570	5860	6150
5400	4120	4500	4950	5400	5690	5990	6290	6600
5800	4480	4880	5330	5800	6100	6410	6730	7040
6200	4840	5250	5720	6200	6510	6830	7160	7490
6600	5190	5620	6110	6600	6920	7250	7590	7930
7000	5550	5990	6490	7000	7330	7670	8030	8370
7400	5910	6370	6880	7400	7740	8090	8460	8820
7800	6260	6740	7260	7800	8150	8510	8900	9260
8200	6620	7110	7650	8200	8550	8930	9330	9710
8600	6980	7480	8030	8600	8960	9350	9760	10150
9000	7340	7860	8420	9000	9370	9770	10200	10590
9400	7690	8230	8810	9400	9780	10190	10630	11040
9800	8050	8600	9190	9800	10190	10610	11070	11480
10200	8400	8970	9570	10200	10600	11030	11500	
10600	8540	9110	9710	10600	11010	11450		

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
4200	94.1	88.4				
4600	106.7	100.4	94.3	88.6		
5000	119.3	112.4	105.7	99.3	93.2	87.3
5400	129.9	123.8	117.2	110.1	103.4	96.7
5800	140.0	133.4	127.0	120.5	113.5	106.1
6200	150.6	142.7	135.9	129.1	122.6	115.4
6600	161.6	152.8	144.6	137.3	130.4	123.7
7000	172.5	163.0	154.0	145.6	138.1	130.9
7400	182.2	173.2	163.5	154.4	145.8	138.1
7800		182.3	173.1	163.3	154.1	145.4
8200			181.7	172.3	162.5	153.1
8600				180.4	171.0	160.9
9000					178.6	168.9
9400						176.2
9800						183.3

Decrease field limit weight by 9900 lb when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
6000					6490	7110	7640	8260
6400					6910	7530	8080	8710
6800				6800	7320	7950	8520	9150
7200				7200	7730	8380	8950	9600
7600			6670	7600	8140	8800	9390	10040
8000			7050	8000	8550	9230	9820	10490
8400		6520	7440	8400	8970	9650	10260	10940
8800		6890	7830	8800	9380	10070	10700	11380
9200		7260	8210	9200	9790	10500	11130	11830
9600	6680	7630	8600	9600	10200	10920	11570	12270
10000	7040	8010	8980	10000	10610	11340	12010	12720
10400	7400	8380	9370	10400	11030	11770	12440	13170
10800	7760	8750	9750	10800	11440	12190	12880	13610
11200	8120	9120	10140	11200	11850	12610	13320	14060
11600	8480	9500	10530	11600	12260	13040	13750	14510
12000	8840	9870	10910	12000	12670	13460	14190	14950
12400	9200	10240	11300	12400	13090	13880	14620	15400
12800	9560	10610	11680	12800	13500	14310	15060	15840
13200	9920	10990	12070	13200	13910	14730	15500	16290
13600	10280	11360	12450	13600	14320	15150	15930	16740

Landing Field Limit Weight - Wet Runway**Flaps 40****Based on anti-skid inoperative and manual speedbrakes****Field Limit Weight (1000 LB)**

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
8000	89.0					
8400	95.0	89.1				
8800	100.9	94.8	88.2			
9200	107.0	100.5	93.5	87.4		
9600	113.0	106.2	98.9	92.4	86.2	
10000	119.1	111.9	104.3	97.5	91.0	
10400	125.1	117.6	109.7	102.6	95.8	89.2
10800	131.2	123.4	115.1	107.8	100.7	93.7
11200	137.2	129.1	120.6	112.8	105.5	98.2
11600	143.3	134.7	126.0	117.8	110.3	102.6
12000	149.8	140.3	131.3	122.8	114.9	107.1
12400	156.5	146.1	136.5	127.8	119.5	111.5
12800	163.2	152.2	141.7	132.7	124.1	115.8
13200	169.9	158.4	147.2	137.5	128.6	120.1
13600	176.0	164.6	152.9	142.4	133.2	124.3
14000	182.0	170.9	158.6	147.6	137.8	128.6
14400		176.5	164.4	152.9	142.3	132.9
14800		182.1	170.3	158.2	147.1	137.1
15200			175.7	163.7	152.1	141.4
15600			180.9	169.2	157.1	145.8
16000				174.4	162.2	150.5
16400				179.3	167.4	155.1
16800				184.1	172.4	159.8
17200					177.0	164.6
17600					181.6	169.5

Landing Field Limit Weight - Wet Runway - High Altitudes
Flaps 40
Based on anti-skid operative and automatic speedbrakes
Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000				3000	3220	3440	3630	3860
3400				3400	3630	3850	4070	4300
3800		3000	3350	3800	4040	4270	4500	4750
4200		3370	3730	4200	4450	4690	4940	5200
4600	3330	3740	4120	4600	4860	5110	5370	5640
5000	3690	4110	4500	5000	5270	5530	5800	6090
5400	4060	4480	4890	5400	5680	5950	6240	6530
5800	4410	4850	5270	5800	6090	6370	6670	6980
6200	4770	5220	5650	6200	6500	6790	7100	7430
6600	5140	5590	6040	6600	6910	7200	7540	7870
7000	5500	5960	6420	7000	7320	7620	7970	8320
7400	5850	6330	6810	7400	7730	8040	8410	8770
7800	6220	6700	7190	7800	8140	8460	8840	9210
8200	6570	7070	7570	8200	8550	8880	9270	9660
8600	6930	7440	7960	8600	8960	9300	9710	10100
9000	7290	7810	8340	9000	9370	9720	10140	10550
9400	7580	8110	8660	9400	9780	10140	10570	11000
9800	7780	8340	8920	9800	10190	10550	11010	11440
10200	7980	8570	9170	10200	10600	10970	11440	11890
10600	8180	8800	9430	10600	11010	11390	11880	12340

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
5000	87.3				
5400	96.7	93.5	90.4	87.5	86.0
5800	106.1	102.5	99.1	95.8	94.2
6200	115.4	111.6	107.8	104.1	102.4
6600	123.7	120.3	116.4	112.5	110.5
7000	130.9	127.4	124.0	120.7	118.7
7400	138.1	134.4	130.8	127.3	125.5
7800	145.4	141.3	137.5	133.8	132.0
8200	153.1	148.6	144.3	140.3	138.4
8600	160.9	156.1	151.5	147.0	144.8
9000	168.9	163.7	158.8	154.0	151.7
9400	176.2	171.4	166.2	161.0	158.6
9800	182.9	178.3	173.4	168.3	165.6
10200	185.7	182.2	178.7	174.9	172.6
10600	188.3	184.7	181.2	177.7	176.0
11000	190.9	187.2	183.6	180.1	178.3
11400	193.5	189.7	185.9	182.3	180.6
11800		192.2	188.1	184.5	182.7
12200		194.7	190.3	186.6	184.8
12600			192.4	188.6	186.8
13000			194.6	190.6	188.6
13400				192.6	190.5
13800				194.6	192.4
14200					194.2

Decrease field limit weight by 7900 lb when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway - High Altitudes

Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
8000						9330	9920	10630
8400					9100	9750	10350	11060
8800				8800	9510	10160	10780	11500
9200				9200	9910	10580	11210	11940
9600				9600	10320	11000	11640	12380
10000			8980	10000	10720	11410	12080	12820
10400			9370	10400	11130	11830	12510	13260
10800			9750	10800	11530	12240	12940	13700
11200		9080	10140	11200	11940	12660	13370	14130
11600		9460	10530	11600	12340	13080	13800	14570
12000	8790	9830	10910	12000	12750	13490	14230	15010
12400	9150	10210	11300	12400	13150	13910	14660	15450
12800	9510	10580	11680	12800	13560	14320	15090	15890
13200	9870	10960	12070	13200	13960	14740	15520	16330
13600	10230	11330	12460	13600	14370	15160	15950	16770
14000	10590	11700	12840	14000	14780	15570	16380	17200
14400	10960	12080	13230	14400	15180	15990	16810	17640
14800	11320	12450	13620	14800	15590	16400	17240	18080
15200	11680	12830	14000	15200	15990	16820	17680	18520
15600	12040	13200	14390	15600	16400	17240	18110	18960

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
10400	89.2	86.4				
10800	93.7	90.7	87.8	85.0		
11200	98.2	95.0	91.9	89.0	86.0	
11600	102.6	99.3	96.0	92.9	89.8	88.2
12000	107.1	103.5	100.1	96.8	93.6	91.9
12400	111.5	107.8	104.2	100.8	97.4	95.6
12800	115.8	112.0	108.3	104.7	101.2	99.3
13200	120.1	116.2	112.4	108.6	104.9	103.0
13600	124.3	120.3	116.4	112.5	108.7	106.7
14000	128.6	124.4	120.4	116.4	112.5	110.4
14400	132.9	128.6	124.4	120.3	116.2	114.1
14800	137.1	132.7	128.4	124.1	120.0	117.8
15200	141.4	136.8	132.4	128.0	123.7	121.5
15600	145.8	140.9	136.3	131.9	127.4	125.2
16000	150.5	145.2	140.3	135.7	131.1	128.8
16400	155.1	149.7	144.4	139.6	134.9	132.5
16800	159.8	154.2	148.7	143.4	138.6	136.1
17200	164.6	158.7	153.1	147.6	142.3	139.8
17600	169.5	163.3	157.4	151.8	146.2	143.4
18000	174.0	168.0	161.8	156.0	150.2	147.3
18400	178.3	172.5	166.4	160.2	154.3	151.3
18800	182.5	176.7	170.9	164.5	158.4	155.3
19200		180.8	174.9	168.9	162.5	159.3
19600		184.9	178.9	173.0	166.7	163.4

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	145.0					
52	126	148.8					
50	122	152.7	140.6				
48	118	155.6	144.3				
46	115	158.4	147.9	136.2			
44	111	161.2	150.5	139.5			
42	108	164.1	153.2	142.8	130.9		
40	104	167.0	155.9	145.3	133.8		
38	100	170.0	158.6	147.8	136.8	124.6	
36	97	172.9	161.3	150.5	139.3	126.7	
34	93	175.8	164.3	153.2	141.6	128.8	118.4
32	90	178.7	166.9	155.3	143.7	131.1	120.7
30	86	181.6	169.5	157.4	145.7	133.4	123.0
28	82	181.8	171.6	159.1	147.6	135.4	124.9
26	79	182.0	173.5	160.6	148.8	137.2	126.7
24	75	182.2	173.6	161.9	149.8	138.8	128.0
22	72	182.3	173.7	163.0	150.9	139.7	129.0
20	68	182.4	173.8	163.1	151.9	140.6	130.0
18	64	182.5	173.9	163.2	152.8	141.4	130.8
16	61	182.7	174.0	163.3	152.9	142.3	131.6
14	57	182.8	174.0	163.3	152.9	143.0	132.3
12	54	182.9	174.1	163.4	153.0	143.1	133.1
10	50	183.0	174.2	163.5	153.1	143.1	133.9
-40	-40	184.2	175.3	164.7	153.9	144.0	135.2

With engine bleed for packs off, increase weight by 2400 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 1700 lb.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 16000 lb.

Landing Climb Limit Weight - High Altitudes
Valid for approach with Flaps 15 and landing with Flaps 40
Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)				
		AIRPORT PRESSURE ALTITUDE (FT)				
°C	°F	10000	11000	12000	13000	13500
34	93	118.4				
32	90	120.8	115.6			
30	86	122.9	117.7	112.7		
28	82	124.8	119.7	114.7	109.9	
26	79	126.6	121.3	116.6	111.6	109.2
24	75	127.9	122.8	117.8	113.1	110.7
22	72	129.0	123.9	119.0	114.2	111.8
20	68	130.0	124.8	120.0	115.2	112.7
18	64	130.7	125.6	120.7	115.9	113.5
16	61	131.5	126.4	121.5	116.7	114.2
14	57	132.3	127.2	122.3	117.4	114.9
12	54	133.1	128.0	123.0	118.1	115.7
10	50	133.8	128.8	123.8	118.9	116.4
8	46	133.9	129.6	124.6	119.7	117.2
6	43	134.0	130.3	125.4	120.4	117.9
4	39	134.0	130.5	126.1	121.2	118.7
2	36	134.1	130.5	126.8	121.9	119.4
0	32	134.2	130.6	127.2	122.6	120.1
-40	-40	135.1	131.7	128.2	123.8	121.6

With engine bleed for packs off, increase weight by 2400 lb.
With engine anti-ice on, decrease weight by 3500 lb.
With engine and wing anti-ice on, decrease weight by 4500 lb.
When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 11800 lb.

ENGINE INOP

ADVISORY INFORMATION

Go-Around Climb Gradient

Flaps 15

Based on engine bleed for packs on and anti-ice off

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	4.35					
50	5.09	3.90				
46	5.66	4.62	3.46			
42	6.23	5.15	4.12	2.94		
38	6.81	5.68	4.62	3.53	2.32	
34	7.39	6.25	5.14	4.02	2.75	1.73
30	8.00	6.76	5.57	4.43	3.21	2.19
26	8.03	7.15	5.89	4.74	3.59	2.56
22	8.06	7.17	6.13	4.94	3.85	2.81
18	8.09	7.19	6.15	5.13	4.03	2.99
14	8.12	7.21	6.16	5.15	4.19	3.14
10	8.14	7.23	6.18	5.16	4.20	3.30

Gradient Adjustment for Weight (%)

WEIGHT (1000 LB)	REFERENCE GO-AROUND GRADIENT (%)								
	1	2	3	4	5	6	7	8	9
180	-3.60	-3.95	-4.30	-4.65	-5.00	-5.35	-5.70	-6.05	-6.40
170	-3.20	-3.51	-3.82	-4.13	-4.43	-4.74	-5.05	-5.36	-5.67
160	-2.75	-3.01	-3.28	-3.54	-3.80	-4.06	-4.32	-4.58	-4.84
150	-2.22	-2.43	-2.64	-2.85	-3.06	-3.27	-3.48	-3.69	-3.90
140	-1.61	-1.76	-1.90	-2.05	-2.20	-2.35	-2.50	-2.65	-2.80
130	-0.89	-0.97	-1.04	-1.12	-1.20	-1.28	-1.36	-1.44	-1.52
120	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
110	0.95	1.06	1.16	1.27	1.37	1.48	1.58	1.69	1.79
100	2.14	2.36	2.59	2.82	3.05	3.28	3.50	3.73	3.96
90	3.58	3.97	4.35	4.73	5.12	5.50	5.88	6.27	6.65

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)										
	0	1	2	3	4	5	6	7	8	9	10
VREF40	-0.24	-0.25	-0.25	-0.26	-0.26	-0.27	-0.27	-0.28	-0.29	-0.29	-0.30
VREF40+5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VREF40+10	0.13	0.12	0.12	0.12	0.12	0.12	0.11	0.11	0.11	0.11	0.11
VREF40+15	0.20	0.19	0.18	0.17	0.16	0.16	0.15	0.14	0.13	0.12	0.11
VREF40+20	0.23	0.20	0.18	0.16	0.14	0.12	0.09	0.07	0.05	0.03	0.01
VREF40+25	0.20	0.16	0.13	0.09	0.06	0.02	-0.01	-0.05	-0.08	-0.12	-0.16
VREF40+30	0.14	0.08	0.03	-0.02	-0.07	-0.12	-0.17	-0.22	-0.27	-0.33	-0.38

With engine bleed for packs off, increase gradient by 0.3%.

With engine anti-ice on, decrease gradient by 0.1%.

With engine and wing anti-ice on, decrease gradient by 0.3%.

When operating in icing conditions during any part of the flight with forecast landing temperatures below 10°C, decrease gradient by 0.9%.

Quick Turnaround Limit Weight - Category F Steel Brakes Flaps 40

OAT (°C)	LIMIT WEIGHT (1000 LB)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
50	180.0	173.4				
45	180.0	174.8	167.9			
40	180.0	176.2	169.3	162.1		
35	180.0	177.7	170.8	163.5	156.6	
30	180.0	179.2	172.2	165.0	158.0	151.2
25	180.0	180.0	173.7	166.5	159.4	152.5
20	180.0	180.0	175.1	168.0	160.8	153.9
15	180.0	180.0	176.7	169.6	162.3	155.3
10	180.0	180.0	178.2	171.2	163.8	156.7
5	180.0	180.0	179.8	172.7	165.4	158.2
0	180.0	180.0	180.0	174.3	167.0	159.7
-5	180.0	180.0	180.0	175.9	168.7	161.3
-10	180.0	180.0	180.0	177.5	170.4	162.9
-15	180.0	180.0	180.0	179.2	172.1	164.6
-20	180.0	180.0	180.0	180.0	173.8	166.3
-30	180.0	180.0	180.0	180.0	177.3	170.0
-40	180.0	180.0	180.0	180.0	180.0	173.6
-50	180.0	180.0	180.0	180.0	180.0	177.4

Increase weight by 1700 lb per 1% uphill slope. Decrease weight by 2300 lb per 1% downhill slope.

Increase weight by 4100 lb per 10 knots headwind. Decrease weight by 15100 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate temperature, without artificial cooling, is less than 425°F as follows:

No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 425°F, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the Systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category M Carbon Brakes
Flaps 40

OAT		LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	165.8					
50	122	166.9	160.1				
45	113	168.3	161.5	155.0			
40	104	169.8	162.9	156.3	149.8		
35	95	171.3	164.3	157.6	151.1	144.7	
30	86	172.7	165.8	159.0	152.4	146.0	139.9
25	77	174.2	167.3	160.4	153.7	147.3	141.1
20	68	175.7	168.8	161.8	155.1	148.6	142.3
15	59	177.2	170.4	163.3	156.5	150.0	143.5
10	50	178.7	172.0	164.9	158.0	151.4	144.9
5	41	180.3	173.5	166.4	159.5	152.8	146.2
0	32	181.9	175.0	168.1	161.0	154.3	147.6
-5	23	183.6	176.6	169.7	162.6	155.8	149.1
-10	14	185.3	178.3	171.4	164.2	157.3	150.6
-15	5	187.1	180.0	173.1	165.9	158.9	152.1
-20	-4	188.9	181.7	174.7	167.7	160.5	153.7
-30	-22	189.9	185.3	178.2	171.3	164.0	156.9
-40	-40	189.9	189.3	181.9	174.8	167.7	160.4
-50	-58	189.9	189.9	185.9	178.6	171.6	164.1
-54	-65	189.9	189.9	187.4	180.2	173.1	165.7

Increase weight by 1500 lb per 1% uphill slope. Decrease weight by 2500 lb per 1% downhill slope.
Increase weight by 3700 lb per 10 knots headwind. Decrease weight by 17400 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category F Steel Brakes - High Altitudes Flaps 40

OAT °C	LIMIT WEIGHT (1000 LB)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	151.2	147.9	144.6			
25	152.5	149.2	145.8	142.6		
20	153.9	150.5	147.1	143.8	140.7	139.2
15	155.3	151.9	148.5	145.1	141.9	140.4
10	156.7	153.3	149.9	146.5	143.2	141.6
5	158.2	154.7	151.3	147.9	144.5	142.9
0	159.7	156.2	152.7	149.3	145.9	144.2
-5	161.3	157.7	154.2	150.8	147.3	145.6
-10	162.9	159.3	155.7	152.2	148.8	147.1
-15	164.6	160.9	157.3	153.8	150.3	148.5
-20	166.3	162.6	158.9	155.4	151.8	150.1
-25	168.1	164.3	160.6	157.0	153.4	151.6
-30	170.0	166.1	162.3	158.6	155.0	153.2
-35	171.8	168.0	164.1	160.4	156.7	154.9
-40	173.6	169.9	166.0	162.2	158.5	156.6
-45	175.5	171.8	167.9	164.0	160.2	158.4
-50	177.4	173.7	169.9	166.0	162.1	160.2
-54	179.0	175.2	171.5	167.6	163.6	161.7

Increase weight by 1500 lb per 1% uphill slope. Decrease weight by 2300 lb per 1% downhill slope.

Increase weight by 3300 lb per 10 knots headwind. Decrease weight by 14700 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate temperature, without artificial cooling, is less than 425°F as follows:

No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 425°F, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the Systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category M Carbon Brakes - High Altitudes Flaps 40

OAT (°C)	LIMIT WEIGHT (1000 LB)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	139.8	136.9	134.0			
25	141.1	138.0	135.1	132.3		
20	142.2	139.3	136.2	133.4	130.5	129.0
15	143.5	140.4	137.6	134.5	131.6	130.1
10	144.8	141.8	138.7	135.8	132.7	131.4
5	146.2	143.1	140.0	136.9	134.0	132.5
0	147.5	144.4	141.3	138.2	135.1	133.8
-5	149.0	145.7	142.6	139.6	136.5	134.9
-10	150.6	147.3	144.0	140.9	137.8	136.2
-15	152.1	148.6	145.3	142.2	139.1	137.6
-20	153.7	150.1	146.8	143.5	140.4	138.9
-25	155.2	151.7	148.4	145.1	141.8	140.2
-30	157.0	153.4	149.9	146.6	143.3	141.8
-35	158.5	155.0	151.7	148.2	144.8	143.1
-40	160.3	156.7	153.2	149.9	146.4	144.6
-45	162.3	158.5	155.0	151.5	148.2	146.4
-50	164.0	160.5	156.7	153.2	149.7	148.2
-54	165.6	161.8	158.3	154.8	151.2	149.5

Increase weight by 1300 lb per 1% uphill slope. Decrease weight by 2200 lb per 1% downhill slope.

Increase weight by 3200 lb per 10 knots headwind. Decrease weight by 14400 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Performance Dispatch

Gear Down Planning

Chapter PD

Section 23

GEAR DOWN

Takeoff Climb Limit Weight

Flaps 5

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		TAKEOFF CLIMB WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	130	136.2	129.1	121.8	112.9	101.3	
52	125	140.3	129.0	121.8	114.5	104.2	
49	120	144.7	131.4	121.7	114.5	106.7	95.7
46	115	149.1	135.5	122.2	114.4	106.6	98.4
43	110	153.3	139.6	126.3	114.3	106.6	100.3
41	105	157.4	143.6	130.3	117.1	106.5	100.2
38	100	161.5	147.6	134.2	121.0	107.6	100.2
35	95	165.5	151.4	138.0	124.8	111.5	100.1
32	90	170.1	155.3	141.7	128.5	115.2	103.4
29	85	174.7	159.7	145.6	132.2	118.9	107.0
27	80	176.2	164.5	149.6	136.0	122.6	110.8
24	75	176.4	166.2	154.0	139.8	126.4	114.6
21	70	176.5	166.4	155.6	143.9	130.1	118.3
18	65	176.7	166.5	155.7	145.4	133.8	121.8
16	60	176.8	166.6	155.8	145.6	135.5	122.9
13	55	176.9	166.7	155.9	145.7	136.1	124.0
10	50	177.1	166.8	156.0	145.8	136.1	125.1
-40	-40	178.2	167.7	156.9	147.1	137.6	126.3

With engine bleed for packs off, increase weight by 600 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 11400 lb (optional system).

GEAR DOWN

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 30 or 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	130	126.0					
52	125	130.5					
49	120	134.6	124.7				
46	115	138.0	129.1	118.9			
43	110	141.3	132.2	122.9			
41	105	144.8	135.4	126.4	116.3		
38	100	148.4	138.6	129.4	119.9	109.2	
35	95	152.0	142.0	132.7	122.9	111.8	
32	90	156.1	145.6	135.8	125.6	114.6	105.4
29	85	159.1	148.6	138.1	128.1	117.3	108.1
27	80	159.4	151.2	140.1	130.0	119.7	110.5
24	75	159.6	151.9	141.7	131.4	121.9	112.3
21	70	159.7	152.0	142.7	132.7	123.0	113.7
18	65	159.9	152.2	142.8	134.0	124.1	114.8
16	60	160.1	152.3	142.9	134.1	125.2	115.7
13	55	160.2	152.4	143.0	134.2	125.7	116.7
10	50	160.4	152.5	143.1	134.3	125.8	117.6
-40	-40	161.5	153.6	144.1	135.2	126.6	118.7

With engine bleed for packs off, increase weight by 2700 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 2800 lb.

When operating in icing conditions during any part of the flight with forecast landing temperature below 50°F, decrease weight by 17600 lb.

GEAR DOWN

Takeoff Obstacle Limit Weight
Flaps 5
Sea Level, 30°C & Below, Zero Wind
Based on engine bleed for packs on and anti-ice off
Reference Obstacle Limit Weight (1000 LB)

OBSTACLE HEIGHT (FT)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)								
	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	170.4								
50	157.1	170.4							
100	146.4	159.1	168.4	174.9					
150	138.5	150.8	160.2	167.3	172.7	176.5			
200	132.0	144.0	153.5	160.8	166.6	171.2	174.7		
250		138.3	147.7	155.2	161.2	166.0	170.0	173.2	175.7
300		133.3	142.6	150.2	156.4	161.4	165.6	169.1	172.0
350		128.8	138.1	145.7	152.0	157.2	161.5	165.2	168.4
400			134.0	141.6	148.0	153.3	157.8	161.6	164.9
450			130.3	137.9	144.3	149.7	154.3	158.3	161.7
500			126.7	134.5	140.9	146.4	151.1	155.1	158.6
550				131.2	137.7	143.2	148.0	152.1	155.7
600				128.2	134.7	140.3	145.1	149.3	153.0
650					131.9	137.5	142.4	146.6	150.4
700					129.2	134.9	139.8	144.1	147.9
750					126.7	132.4	137.3	141.6	145.5
800						130.0	135.0	139.3	143.2
850						127.7	132.7	137.1	141.0
900							130.5	135.0	138.9
950							128.4	132.9	136.9
1000								130.9	135.0

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

TO BE SUPPLIED

GEAR DOWN

Takeoff Obstacle Limit Weight

Flaps 5

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	120	130	140	150	160	170	180
S.L. & BELOW	0	0	0	0	0	0	0
1000	-4.8	-5.2	-5.7	-6.2	-6.6	-7.1	-7.6
2000	-9.6	-10.5	-11.4	-12.3	-13.3	-14.2	-15.1
3000	-13.8	-15.0	-16.2	-17.4	-18.6	-19.8	-21.1
4000	-18.0	-19.5	-21.0	-22.5	-24.0	-25.5	-27.0
5000	-21.7	-23.5	-25.4	-27.3	-29.2	-31.0	-32.9
6000	-25.3	-27.6	-29.8	-32.1	-34.3	-36.6	-38.8
7000	-29.6	-32.2	-34.8	-37.4	-40.1	-42.7	-45.3
8000	-33.8	-36.8	-39.8	-42.8	-45.8	-48.8	-51.8
9000	-38.1	-41.4	-44.7	-48.0	-51.3	-54.7	-58.0
10000	-42.4	-46.0	-49.6	-53.3	-56.9	-60.5	-64.1

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)						
	120	130	140	150	160	170	180
15 TW	-10.3	-11.7	-13.0	-14.3	-15.7	-17.0	-18.3
10 TW	-6.9	-7.8	-8.7	-9.6	-10.4	-11.3	-12.2
5 TW	-3.4	-3.9	-4.3	-4.8	-5.2	-5.7	-6.1
0	0	0	0	0	0	0	0
10 HW	2.2	2.0	1.8	1.7	1.5	1.4	1.2
20 HW	4.3	4.0	3.7	3.4	3.0	2.7	2.4
30 HW	6.3	5.9	5.5	5.1	4.7	4.3	3.9
40 HW	8.3	7.8	7.3	6.8	6.3	5.8	5.3

With engine bleed for packs off, increase weight by 500 lb.

With engine anti-ice on, decrease weight by 4400 lb.

With engine and wing anti-ice on, decrease weight by 16700 lb (optional system).

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
170	20300	17500	14700
160	22600	20100	17300
150	24900	22900	19900
140	27000	25500	23100
130	29300	27800	26100
120	31200	30100	28700
110	33100	32100	31000
100	35100	34100	33000
90	37300	36300	35200

GEAR DOWN

**Long Range Cruise Trip Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
340	300	266	239	218	200	187	174	164	155	147
676	598	531	479	437	400	374	350	329	311	295
1007	892	794	717	654	600	561	526	495	467	443
1333	1183	1055	954	872	800	749	702	661	624	593
1656	1472	1315	1190	1089	1000	936	878	827	782	743
1975	1759	1573	1426	1305	1200	1124	1056	995	941	894
2290	2043	1830	1661	1522	1400	1312	1233	1162	1100	1045
2601	2324	2086	1895	1737	1600	1501	1411	1330	1259	1197
2909	2604	2340	2128	1953	1800	1689	1588	1498	1419	1349
3214	2880	2592	2360	2168	2000	1877	1766	1667	1579	1502

Reference Fuel and Time Required

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	10		14		20		24	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	5.6	0:54	5.3	0:52	5.0	0:49	4.8	0:48
400	11.0	1:42	10.3	1:37	9.5	1:31	9.1	1:27
600	16.5	2:29	15.5	2:22	14.1	2:12	13.4	2:06
800	22.1	3:16	20.7	3:06	18.8	2:53	17.7	2:45
1000	27.7	4:02	25.9	3:50	23.5	3:34	22.1	3:23
1200	33.7	4:47	31.5	4:33	28.5	4:13	26.8	4:00
1400	39.7	5:31	37.0	5:15	33.4	4:51	31.4	4:37
1600	45.8	6:14	42.8	5:56	38.5	5:30	36.2	5:13
1800	52.1	6:56	48.6	6:36	43.8	6:07	41.1	5:49
2000	58.4	7:38	54.5	7:16	49.0	6:44	46.0	6:25

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	LANDING WEIGHT (1000 LB)					
	90	100	110	120	130	140
5	-0.5	-0.2	0.0	0.3	0.6	0.9
10	-0.9	-0.5	0.0	0.5	1.1	1.6
15	-1.4	-0.7	0.0	0.8	1.6	2.4
20	-1.8	-0.9	0.0	1.1	2.1	3.1
25	-2.2	-1.1	0.0	1.3	2.6	3.9
30	-2.7	-1.3	0.0	1.6	3.1	4.6
35	-3.1	-1.6	0.0	1.8	3.6	5.4
40	-3.5	-1.8	0.0	2.1	4.1	6.1
45	-4.0	-2.0	0.0	2.3	4.6	6.9
50	-4.4	-2.2	0.0	2.6	5.1	7.6
55	-4.8	-2.4	0.0	2.8	5.5	8.3
60	-5.3	-2.6	0.0	3.0	6.0	9.1

Based on VREF40 + 70 climb, Long Range Cruise and VREF40 + 70 descent.

GEAR DOWN

**Holding Planning
Flaps Up**

WEIGHT (1000 LB)	TOTAL FUEL FLOW (LB/HR)							
	PRESSURE ALTITUDE (FT)							
	1500	5000	10000	15000	20000	25000	30000	35000
170	8800	8740	8690	8710	8740			
160	8350	8280	8220	8220	8220	8420		
150	7900	7810	7760	7730	7710	7820		
140	7460	7350	7290	7240	7210	7260		
130	7000	6900	6820	6760	6710	6740	7010	
120	6550	6450	6360	6300	6220	6230	6390	
110	6100	6010	5910	5840	5740	5730	5830	
100	5670	5580	5480	5400	5290	5240	5330	5530
90	5240	5150	5070	4970	4860	4780	4850	4920

This table includes 5% additional fuel for holding in a racetrack pattern.

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 LB)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
22	91.0		
20	98.3	95.6	92.8
18	106.2	102.7	98.9
16	113.7	109.7	105.6
14	120.3	117.0	113.0
12	128.3	124.1	119.2
10	136.0	131.3	125.4
8	144.4	139.1	132.7
6	152.7	146.8	139.7
4	160.7	154.1	146.6
2	168.4	161.1	153.6
0	175.4	167.9	160.7

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 LB)										
	PRESSURE ALTITUDE (1000 FT)										
	0	2	4	6	8	10	12	14	16	18	20
ENGINE ONLY	-2.7	-2.7	-2.7	-2.9	-2.9	-2.9	-2.9	-2.7	-2.7	-2.5	-2.0
ENGINE AND WING	-13.5	-13.5	-13.0	-12.6	-12.2	-11.7	-11.3	-11.1	-10.6		

Performance Dispatch**Text****Chapter PD****Section 24**

Introduction

This chapter contains self dispatch performance data intended primarily for use by flight crews in the event that information cannot be obtained from the airline dispatch office. The takeoff data provided is for a single takeoff flap. The range of conditions covered is limited to those normally encountered in airline operation. In the event of conflict between the data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

Takeoff

The maximum allowable takeoff weight will be the least of the Field, Climb and Obstacle Limit Weights as determined from the tables shown. Tire and Brake Energy Limits are not shown as they are not limiting for the range of conditions shown in this chapter.

Minimum Takeoff Weight

Takeoff at the -7B27/B3 and -7B26/B1 thrust ratings requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the assumed temperature method of reducing thrust may not be used as a means to comply with this restriction. Conservative minimum takeoff weights are 130000 lb at -7B27/B3 takeoff thrust and 125000 lb at -7B26/B1 thrust. Alternatively, lower minimum takeoff weights may be obtained, for the actual pressure altitude and outside air temperature, by using the Minimum Takeoff Weight tables provided.

Field Limit Weight - Slope and Wind Corrections

These tables for dry and wet runways provide corrections to the field length available for the effects of runway slope and wind component along the runway. Enter the appropriate table with the available field length and runway slope to determine the slope corrected field length. Next enter the appropriate table with slope corrected field length and wind component to determine the slope and wind corrected field length.

Field and Climb Limit Weight

Tables are presented for selected airport pressure altitudes and runway conditions and show both Field and Climb Limit Weights. Enter the appropriate table for pressure altitude and runway condition with “Slope and Wind Corrected Field Length” determined above and airport OAT to obtain Field Limit Weight. Also read Climb Limit Weight for the same OAT. Intermediate altitudes may be interpolated or use next higher altitude. When finding a maximum weight for a wet runway, the dry runway limit weight must also be determined and the lower of the two weights used.

Obstacle Limit Weight

The Reference Obstacle Limit Weight table provides obstacle limit weights for reference airport conditions based on obstacle height above the runway surface and distance from brake release. Enter the adjustment tables to adjust the reference Obstacle Limit Weight for the effects of OAT, pressure altitude and wind as indicated. In the case of multiple obstacles, enter the tables successively with each obstacle and determine the most limiting weight.

Enroute

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. Note that this table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Trip Fuel and Time

.80M Trip Fuel and Time tables are provided to determine trip time and fuel required to destination.

To determine trip fuel and time for a constant altitude cruise, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel

Required Adjustment table with the Reference Fuel and the planned landing weight to obtain the adjustment to the fuel required at the planned landing weight.

.80M Step Climb Trip Fuel and Time

.80M Step Climb Trip Fuel and Time tables are provided to determine trip time and fuel required to destination when flying a step climb profile. Step climb profiles are based on 4000 ft step climbs to keep the flight within 2000 ft of the optimum altitude for the current cruise weight. To determine trip fuel and time, enter the Ground to Air Miles Conversion table and determine air distance as discussed above. Then enter the Trip Fuel and Time Required table with air distance and planned landing weight to read trip fuel. Continue across the table to read trip time.

Short Trip Fuel and Time

These tables are provided to determine trip fuel and time for short distances or alternates. Obtain air distance from the table using the ground distance and wind component to the alternate. Enter the Trip Fuel and Time Required table with air distance and read trip fuel required for the expected landing weight, together with time to alternate at right. For distances greater than shown or other altitudes, use the .80M Trip Fuel and Time tables.

Holding Planning

This table provides total fuel flow information necessary for planning flaps up holding and reserve fuel requirements. Data is based on the FMC holding speed schedule which is the higher of the maximum endurance and flaps up maneuver speeds. As noted, the fuel flow is based on flight in a racetrack holding pattern. For holding in straight and level flight, reduce table values by 5%.

Flight Crew Oxygen Requirements

Regulations require that sufficient oxygen be provided to the flight crew to account for the greater of supplemental breathing oxygen in the event of a cabin depressurization or protective breathing in the event of smoke or harmful fumes in the flight deck. The oxygen quantity associated with the above requirements is achieved with the minimum dispatch oxygen cylinder pressure.

To determine the minimum dispatch oxygen cylinder pressure enter the appropriate flight crew oxygen table with the number of crew plus observers using oxygen and read the minimum cylinder pressure required for the appropriate cylinder temperature.

Net Level Off Weight

The Net Level Off Weight table is provided to determine terrain clearance capability in straight and level flight following an engine failure.

Regulations require terrain clearance planning based on net performance which is the gross (or actual) gradient performance degraded by 1.1%. In addition, the net level off pressure altitude must clear the terrain by 1000 ft.

To determine the maximum weight for terrain clearance, enter the table with required net level off pressure altitude and expected ISA deviation to obtain weight. Adjust weight for anti-ice operation as noted below the table.

| Extended Range Operations

ETOPS regulations require that flights conducted over a route that contains a point further than one hour's time at "normal one-engine-inoperative speed" from an adequate airport comply with rules specific to extended operations for airplanes with two or more engines. This section provides reserve fuel planning information for the "Critical Fuel Diversion Scenario".

ETOPS regulations require reserve planning to include a "Critical Fuel Diversion Scenario" calculation. The information shown is the fuel required to satisfy the flight profile as described below the charts. This information is shown for all engines operating and one engine inoperative at Long Range Cruise (LRC). There are two engine-inoperative scenarios, a decompression scenario and a driftdown scenario. The decompression scenario assumes an engine failure, loss of pressurization, emergency descent, and subsequent cruise at 10000 ft. The driftdown scenario assumes an engine failure without loss of pressurization, where the airplane "drifts down" to the thrust limited level-off altitude for the remainder of the diversion.

The ETOPS critical fuel required is the greater of the all-engine fuel or the engine-inoperative fuel. The ETOPS critical fuel required is compared to the amount of fuel that is predicted to be onboard the airplane at the critical point. If the fuel required by the ETOPS critical fuel reserves of the route exceeds the amount of fuel predicted, the fuel load must be adjusted accordingly. The data does not include an allowance for performance deterioration. However, regulations require a 5% allowance for performance deterioration, unless a value has been established by the operator for in-service deterioration.

To determine the ETOPS critical fuel required, enter the Ground to Air Mile Conversion table with the forecast wind (factored if applicable) and ground distance to the diversion airport from the critical point to obtain the air distance. Then enter the Critical Fuel table with air distance and expected weight at the critical point and read the required fuel. Apply the noted fuel adjustments for non-standard conditions, as necessary. When using a wind forecasting model acceptable to the FAA (such as the World Area Forecast System, WAFS), regulations allow the wind factor applied in this step to be 5% of the forecast wind (increase headwinds, decrease tailwinds), as indicated in the note below the chart. However, if a FAA-acceptable wind forecasting model is not used, the ETOPS critical fuel must be increased by 5%, instead of factoring the forecast winds.

Critical Fuel Reserves

Enter the Ground to Air Miles Conversion table with forecast wind and ground distance to diversion airport from critical point to obtain air distance. Now enter the Critical Fuel table with air distance and expected weight at the critical point and read required fuel. Apply the noted fuel adjustments as necessary. Regulations require a 5% allowance for performance deterioration unless a value has been established by the operator for inservice deterioration.

As noted below each table, the fuel required is the greater of the two engine fuel and the single engine fuel. This fuel is compared to the amount of fuel normally onboard the airplane at that point in the route. If the fuel required by the critical fuel reserves exceeds the amount of fuel normally expected, the fuel load must be adjusted accordingly.

Landing

Tables are provided for determining the maximum landing weight as limited by field length or climb requirements for a single landing flap.

Maximum landing weight is the lowest of the field length limit weight, climb limit weight, or maximum certified landing weight.

Landing Field Limit Weight

For the expected runway condition and anti-skid system configuration, obtain wind corrected field length by entering the Wind Corrected Field Length table with field length available and wind component along the runway. Now enter the Field Limit Weight table with wind corrected field length and pressure altitude to read field limit weight.

Landing Climb Limit Weight

Enter the table with airport OAT and pressure altitude to read landing climb limit weight. Apply the noted adjustments as required.

Go-Around Climb Gradient

Enter the Reference Go-Around Gradient table with airport OAT and pressure altitude to determine the reference go-around gradient. Then adjust the reference gradient for airplane weight and speed using the tables provided to determine the weight and speed adjusted go-around gradient. Apply the necessary corrections for engine bleed configuration and icing conditions as noted.

Quick Turnaround Limit Weight

Enter the appropriate table (Steel or Carbon Brakes) with airport pressure altitude and OAT to read maximum quick turnaround weight. Apply the noted adjustments as required.

If the landing weight exceeds the maximum quick turnaround weight, wait the specified time and then check that the wheel thermal plugs have not melted before executing a subsequent takeoff. For Steel Brakes, the alternate procedures on the charts can be used to ensure the brake temperature is within limits. These procedures cannot be used for carbon brakes.

Gear Down

This section provides flight planning data for revenue operation with gear down. Unless otherwise noted, the gear down tables in this section are identical in format and usage to the corresponding gear up tables previously described.

To eliminate erroneous displays the flight crew should enter only gross weight data on the PERF INIT page of the Control Display Unit (CDU). Omission of the cost index and cruise altitude entries on the PERF INIT page will render the VNAV function unavailable during flight. As a result, the following information will not be provided: VNAV guidance and speed schedules, trip fuel and ETA predictions, optimum and maximum altitude data, step climb and top of descent predictions, and the VNAV descent guidance path.

The gross weight entry allows the FMCS takeoff and approach speed schedules to be generated. In addition, the flap maneuver speed and VREF speed bugs will be available for display on the primary flight display speed tape. Except for VNAV, normal autopilot and autothrottle modes will remain available for use during the flight, as will the LNAV mode.

Takeoff/Landing Climb Limit Weight

Enter the appropriate table with airport OAT and pressure altitude to determine Takeoff/Landing Climb Limit Weight with gear down. Correct the weight obtained for engine bleed configuration as required.

October 23, 2009

Performance Dispatch**Chapter PD****Table of Contents****Section 30****737-800BBJW CFM56-7B27B3 KG FAA CATC/N**

Takeoff	PD.30.1
Takeoff Field Corrections - Dry Runway	PD.30.1
Takeoff Field & Climb Limit Weights - Dry Runway	PD.30.2
Takeoff Field Corrections - Wet Runway	PD.30.7
Takeoff Field & Climb Limit Weights - Wet Runway	PD.30.8
Takeoff Obstacle Limit Weight	PD.30.13
Tire Speed Limit Weight	PD.30.16
Brake Energy Limits VMBE	PD.30.17
 Enroute	 PD.31.1
.80M Maximum Operating Altitude	PD.31.1
.80M Trip Fuel and Time	PD.31.2
.80M Step Climb	PD.31.5
Short Trip Fuel and Time	PD.31.6
Holding Planning	PD.31.6
Flight Crew Oxygen Requirements	PD.31.7
Net Level Off Weight	PD.31.8
Decompression Critical Fuel Reserves - LRC Cruise	PD.31.9
Decompression Critical Fuel Reserves - LRC Cruise	PD.31.10
Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise	PD.31.11
 Landing	 PD.32.1
Landing Field Limit Weight - Dry Runway	PD.32.1
Landing Field Limit Weight - Dry Runway	PD.32.2
Landing Field Limit Weight - Dry Runway - High Altitudes	PD.32.3
Landing Field Limit Weight - Dry Runway - High Altitudes	PD.32.4
Landing Field Limit Weight - Wet Runway	PD.32.5

Landing Field Limit Weight - Wet Runway	PD.32.6
Landing Field Limit Weight - Wet Runway - High Altitudes	PD.32.8
Landing Climb Limit Weight	PD.32.9
Landing Climb Limit Weight - High Altitudes	PD.32.10
Go-Around Climb Gradient	PD.32.11
Quick Turnaround Limit Weight - Category C Steel Brakes	PD.32.13
Quick Turnaround Limit Weight - Category N Carbon Brakes	PD.32.14
Gear Down	PD.33.1
Takeoff Climb Limit Weight	PD.33.1
Landing Climb Limit Weight	PD.33.2
Takeoff Obstacle Limit Weight	PD.33.3
Long Range Cruise Altitude Capability	PD.33.5
Long Range Cruise Trip Fuel and Time	PD.33.6
Holding Planning	PD.33.8
Net Level Off Weight	PD.33.9
Text	PD.34.1
Introduction	PD.34.1
Takeoff	PD.34.1
Enroute	PD.34.2
Landing	PD.34.5
Gear Down	PD.34.6

Performance Dispatch

Chapter PD

Takeoff

Section 30

Takeoff Field Corrections - Dry Runway

Slope Corrections

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1220	1220	1210	1210	1200	1190	1180	1160	1150
1400	1440	1430	1420	1410	1400	1380	1350	1330	1300
1600	1660	1650	1630	1620	1600	1560	1530	1490	1450
1800	1890	1860	1840	1820	1800	1750	1700	1650	1600
2000	2110	2080	2050	2030	2000	1940	1880	1810	1750
2200	2330	2300	2260	2230	2200	2130	2050	1980	1900
2400	2550	2510	2480	2440	2400	2310	2230	2140	2050
2600	2770	2730	2690	2640	2600	2500	2400	2300	2200
2800	2990	2950	2900	2850	2800	2690	2580	2460	2350
3000	3220	3160	3110	3050	3000	2880	2750	2630	2500
3200	3440	3380	3320	3260	3200	3060	2930	2790	2650
3400	3660	3590	3530	3460	3400	3250	3100	2950	2800
3600	3880	3810	3740	3670	3600	3440	3280	3110	2950
3800	4100	4030	3950	3880	3800	3630	3450	3280	3100
4000	4320	4240	4160	4080	4000	3810	3630	3440	3250
4200	4540	4460	4370	4290	4200	4000	3800	3600	3400
4400	4770	4670	4580	4490	4400	4190	3980	3760	3550
4600	4990	4890	4790	4700	4600	4380	4150	3930	3700
4800	5210	5110	5000	4900	4800	4560	4330	4090	3850
5000	5430	5320	5220	5110	5000	4750	4500	4250	4000

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	890	990	1100	1200	1270	1340	1410	1490
1400	1050	1170	1280	1400	1480	1550	1630	1710
1600	1220	1340	1470	1600	1680	1760	1850	1930
1800	1380	1520	1660	1800	1890	1980	2070	2160
2000	1550	1700	1850	2000	2090	2190	2280	2380
2200	1710	1870	2040	2200	2300	2400	2500	2600
2400	1880	2050	2230	2400	2500	2610	2720	2830
2600	2040	2230	2410	2600	2710	2820	2930	3050
2800	2210	2400	2600	2800	2910	3030	3150	3270
3000	2370	2580	2790	3000	3120	3240	3370	3500
3200	2540	2760	2980	3200	3330	3450	3590	3720
3400	2700	2930	3170	3400	3530	3660	3800	3940
3600	2870	3110	3360	3600	3740	3880	4020	4170
3800	3030	3290	3540	3800	3940	4090	4240	4390
4000	3200	3460	3730	4000	4150	4300	4450	4610
4200	3360	3640	3920	4200	4350	4510	4670	4840
4400	3530	3820	4110	4400	4560	4720	4890	5060
4600	3690	3990	4300	4600	4760	4930	5110	5280
4800	3860	4170	4490	4800	4970	5140	5320	5510
5000	4020	4350	4670	5000	5170	5350	5540	5730

Takeoff Field & Climb Limit Weights - Dry Runway

Flaps 5

Sea Level Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	59.6	55.7	54.8	54.4	54.1	53.7	53.4	53.0	50.0	46.7	43.4
1400	64.8	60.6	59.6	59.2	58.8	58.4	58.0	57.7	54.4	50.8	47.2
1600	70.1	65.5	64.5	64.0	63.6	63.2	62.8	62.4	58.8	55.0	51.1
1800	75.0	70.1	69.0	68.5	68.1	67.6	67.2	66.8	62.9	58.8	54.6
2000	79.6	74.4	73.2	72.7	72.2	71.7	71.3	70.8	66.7	62.3	57.8
2200	84.0	78.5	77.1	76.6	76.1	75.6	75.1	74.6	70.3	65.7	60.9
2400	86.1	82.2	80.8	80.3	79.8	79.3	78.7	78.2	73.7	68.8	63.8
2600	86.1	85.5	84.1	83.5	83.0	82.4	81.9	81.3	76.6	71.5	66.2
2800	86.1	86.1	86.1	86.1	86.0	85.4	84.9	84.3	79.3	74.1	68.6
3000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.0	76.5	70.9
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3	78.7	72.9
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	80.7	74.7
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.7	76.6
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.5	78.3
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	80.0
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.6
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.2
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.8
CLIMB LIMIT WT (1000 KG)	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.4	74.5	67.2

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	56.0	52.3	51.4	51.1	50.8	50.5	50.1	49.4	46.5	43.1	40.5
1400	60.9	56.9	55.9	55.6	55.2	54.9	54.5	53.8	50.6	46.9	44.1
1600	65.9	61.6	60.5	60.2	59.8	59.4	59.0	58.2	54.7	50.8	47.7
1800	70.6	65.9	64.8	64.3	63.9	63.5	63.1	62.2	58.5	54.3	51.0
2000	74.9	69.8	68.7	68.2	67.8	67.3	66.9	66.0	62.0	57.5	53.9
2200	78.9	73.6	72.4	71.9	71.4	71.0	70.5	69.5	65.3	60.5	56.8
2400	82.7	77.1	75.8	75.4	74.9	74.4	73.9	72.8	68.4	63.4	59.4
2600	86.0	80.2	78.9	78.3	77.8	77.3	76.8	75.7	71.1	65.8	61.7
2800	86.1	83.1	81.7	81.2	80.6	80.1	79.6	78.4	73.6	68.2	63.9
3000	86.1	85.9	84.5	83.9	83.3	82.8	82.3	81.1	76.0	70.4	66.0
3200	86.1	86.1	86.1	86.1	85.7	85.1	84.6	83.3	78.2	72.4	67.8
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.5	80.2	74.3	69.6
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.2	76.1	71.3
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.0	77.8	72.9
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.8	79.5	74.5
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.1	76.0
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.7	77.5
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3	79.0
CLIMB LIMIT WT (1000 KG)	84.9	84.6	84.4	84.4	84.3	84.2	84.1	82.4	75.8	68.5	62.8

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and engine anti-ice on (optional system), decrease field limit weight by 950 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	52.2	48.8	48.0	47.7	47.4	47.1	46.6	45.9	43.2	40.4	38.0
1400	56.8	53.1	52.2	51.9	51.6	51.3	50.7	49.9	47.1	44.0	41.4
1600	61.5	57.5	56.5	56.2	55.8	55.5	54.9	54.0	50.9	47.6	44.8
1800	65.7	61.5	60.5	60.1	59.7	59.3	58.7	57.8	54.4	50.9	47.9
2000	69.7	65.1	64.1	63.7	63.3	62.8	62.1	61.2	57.6	53.8	50.6
2200	73.5	68.6	67.5	67.1	66.7	66.2	65.5	64.5	60.7	56.6	53.3
2400	77.0	71.9	70.7	70.3	69.8	69.4	68.6	67.5	63.6	59.3	55.8
2600	80.1	74.7	73.5	73.0	72.6	72.1	71.3	70.2	66.0	61.6	57.9
2800	83.0	77.4	76.2	75.7	75.2	74.7	73.8	72.7	68.4	63.7	59.9
3000	85.8	80.0	78.7	78.2	77.7	77.2	76.3	75.1	70.6	65.8	61.8
3200	86.1	82.3	80.9	80.4	79.9	79.3	78.4	77.2	72.6	67.6	63.5
3400	86.1	84.4	83.0	82.5	81.9	81.4	80.4	79.2	74.5	69.4	65.2
3600	86.1	86.1	85.0	84.5	83.9	83.4	82.4	81.1	76.3	71.1	66.8
3800	86.1	86.1	86.1	86.1	85.8	85.2	84.2	83.0	78.0	72.7	68.3
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.0	84.7	79.7	74.3	69.8
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.3	75.8	71.3
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.9	77.3	72.7
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.5	78.8	74.1
CLIMB LIMIT WT (1000 KG)	79.6	79.3	79.1	79.0	78.9	78.9	78.0	76.6	70.6	64.3	59.2

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	48.7	45.4	44.7	44.4	44.1	43.7	43.2	42.5	40.0	37.6	35.2
1400	52.9	49.4	48.6	48.3	48.0	47.5	47.0	46.3	43.6	40.9	38.4
1600	57.3	53.5	52.6	52.3	52.0	51.4	50.9	50.1	47.2	44.3	41.5
1800	61.3	57.2	56.3	55.9	55.6	55.0	54.4	53.5	50.4	47.3	44.3
2000	64.9	60.6	59.6	59.2	58.9	58.2	57.6	56.7	53.3	50.0	46.8
2200	68.4	63.8	62.8	62.4	62.0	61.3	60.6	59.7	56.1	52.6	49.2
2400	71.7	66.9	65.8	65.3	64.9	64.2	63.5	62.5	58.7	55.1	51.5
2600	74.5	69.5	68.3	67.9	67.4	66.7	65.9	64.9	61.0	57.1	53.4
2800	77.2	71.9	70.7	70.3	69.8	69.1	68.3	67.2	63.1	59.1	55.3
3000	79.8	74.3	73.1	72.6	72.1	71.4	70.5	69.4	65.2	61.0	57.0
3200	82.0	76.4	75.1	74.6	74.2	73.4	72.5	71.3	67.0	62.7	58.6
3400	84.2	78.4	77.1	76.6	76.1	75.3	74.4	73.2	68.7	64.4	60.1
3600	86.1	80.3	79.0	78.4	77.9	77.1	76.2	75.0	70.4	65.9	61.6
3800	86.1	82.1	80.7	80.2	79.7	78.8	77.9	76.7	72.0	67.5	63.0
4000	86.1	83.8	82.5	81.9	81.4	80.5	79.6	78.3	73.6	68.9	64.4
4200	86.1	85.6	84.2	83.6	83.1	82.2	81.2	79.9	75.1	70.4	65.8
4400	86.1	86.1	85.8	85.2	84.7	83.8	82.8	81.5	76.6	71.8	67.1
4600	86.1	86.1	86.1	86.1	86.1	85.4	84.4	83.0	78.1	73.1	68.4
CLIMB LIMIT WT (1000 KG)	74.6	74.1	74.0	73.9	73.8	73.1	72.3	70.8	65.0	59.8	54.6

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 950 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	45.3	42.3	41.7	41.4	41.0	40.5	39.9	39.1	36.6	34.3	32.0
1400	49.3	46.1	45.4	45.1	44.6	44.1	43.5	42.6	39.9	37.4	34.9
1600	53.3	49.8	49.1	48.8	48.3	47.7	47.1	46.1	43.2	40.5	37.8
1800	57.0	53.3	52.4	52.1	51.6	51.0	50.3	49.2	46.1	43.2	40.3
2000	60.4	56.4	55.5	55.2	54.6	54.0	53.2	52.0	48.7	45.6	42.5
2200	63.6	59.4	58.4	58.1	57.4	56.8	56.0	54.8	51.2	48.0	44.7
2400	66.6	62.2	61.2	60.8	60.2	59.5	58.6	57.3	53.6	50.2	46.8
2600	69.2	64.6	63.5	63.1	62.4	61.8	60.8	59.5	55.6	52.0	48.4
2800	71.7	66.9	65.8	65.4	64.7	63.9	63.0	61.6	57.6	53.8	50.1
3000	74.1	69.0	67.9	67.5	66.8	66.0	65.0	63.6	59.4	55.5	51.7
3200	76.2	71.0	69.8	69.4	68.6	67.9	66.9	65.4	61.1	57.1	53.1
3400	78.1	72.8	71.7	71.2	70.4	69.6	68.6	67.1	62.7	58.6	54.5
3600	80.0	74.6	73.4	72.9	72.1	71.3	70.3	68.7	64.2	60.0	55.8
3800	81.8	76.3	75.1	74.6	73.8	73.0	71.9	70.3	65.7	61.4	57.1
4000	83.6	77.9	76.7	76.2	75.4	74.5	73.4	71.8	67.1	62.8	58.4
4200	85.3	79.5	78.3	77.8	76.9	76.1	75.0	73.3	68.5	64.1	59.7
4400	86.1	81.1	79.8	79.3	78.5	77.6	76.4	74.8	69.9	65.4	60.9
4600	86.1	82.6	81.3	80.8	79.9	79.1	77.9	76.2	71.2	66.7	62.1
CLIMB LIMIT WT (1000 KG)	69.8	69.3	69.1	69.0	68.3	67.7	66.5	64.4	58.8	53.9	48.8

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	41.8	39.1	38.5	38.0	37.5	37.0	36.5	35.6	33.3	31.2	29.0
1400	45.5	42.6	41.9	41.4	40.9	40.3	39.7	38.8	36.3	34.0	31.7
1600	49.2	46.1	45.4	44.8	44.2	43.7	43.0	41.9	39.3	36.8	34.3
1800	52.6	49.2	48.4	47.8	47.2	46.6	45.9	44.8	42.0	39.3	36.5
2000	55.7	52.0	51.2	50.6	49.9	49.3	48.5	47.3	44.3	41.4	38.5
2200	58.6	54.8	53.9	53.2	52.6	51.8	51.0	49.8	46.6	43.5	40.4
2400	61.4	57.3	56.4	55.7	55.0	54.3	53.4	52.1	48.7	45.5	42.3
2600	63.7	59.5	58.6	57.8	57.1	56.3	55.4	54.0	50.5	47.1	43.8
2800	66.0	61.6	60.6	59.8	59.1	58.3	57.3	55.9	52.2	48.7	45.2
3000	68.2	63.6	62.6	61.8	61.0	60.1	59.2	57.7	53.9	50.3	46.6
3200	70.1	65.4	64.3	63.5	62.7	61.8	60.8	59.3	55.4	51.6	47.9
3400	71.9	67.1	66.0	65.1	64.3	63.4	62.4	60.8	56.8	53.0	49.1
3600	73.6	68.7	67.6	66.7	65.9	65.0	63.9	62.3	58.2	54.3	50.4
3800	75.3	70.3	69.2	68.3	67.4	66.5	65.4	63.8	59.6	55.6	51.6
4000	76.9	71.8	70.7	69.8	68.9	67.9	66.8	65.2	60.9	56.9	52.8
4200	78.5	73.3	72.2	71.2	70.3	69.4	68.2	66.5	62.2	58.1	53.9
4400	80.1	74.8	73.6	72.6	71.7	70.7	69.6	67.9	63.5	59.2	55.0
4600	81.6	76.2	75.0	74.0	73.1	72.1	70.9	69.2	64.7	60.4	56.1
CLIMB LIMIT WT (1000 KG)	64.0	63.6	63.4	62.7	61.9	61.0	59.8	57.8	52.9	48.3	43.6

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 950 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	1	2	6	10	15	20	25	30	40
1200	39.4	36.6	36.5	36.4	35.9	35.4	34.7	34.1	33.4	32.3	29.8
1400	43.2	40.0	39.9	39.8	39.2	38.7	38.0	37.3	36.4	35.3	32.5
1600	46.7	43.4	43.3	43.2	42.6	42.0	41.3	40.5	39.7	38.4	35.6
1800	49.9	46.5	46.4	46.3	45.7	45.1	44.4	43.6	42.7	41.5	38.6
2000	52.7	49.2	49.1	49.0	48.3	47.7	46.9	46.1	45.2	43.9	40.9
2200	55.2	51.6	51.5	51.3	50.7	50.0	49.2	48.4	47.4	46.0	42.9
2400	57.6	53.8	53.7	53.5	52.8	52.1	51.3	50.4	49.4	48.0	44.7
2600	59.8	55.8	55.8	55.6	54.9	54.2	53.3	52.4	51.4	49.8	46.4
2800	62.0	57.9	57.8	57.6	56.9	56.2	55.2	54.3	53.2	51.7	48.1
3000	64.0	59.7	59.6	59.5	58.7	58.0	57.0	56.0	54.9	53.3	49.6
3200	65.8	61.4	61.3	61.1	60.3	59.5	58.6	57.6	56.4	54.8	51.0
3400	67.5	62.9	62.8	62.7	61.8	61.0	60.0	59.0	57.8	56.1	52.2
3600	69.1	64.4	64.3	64.1	63.3	62.5	61.4	60.4	59.2	57.4	53.4
3800	70.6	65.8	65.7	65.6	64.7	63.8	62.8	61.7	60.5	58.6	54.5
4000	72.2	67.2	67.1	66.9	66.1	65.2	64.1	63.0	61.7	59.8	55.6
4200	73.7	68.6	68.5	68.3	67.4	66.5	65.4	64.2	62.9	61.0	56.7
4400	75.1	70.0	69.9	69.7	68.8	67.8	66.7	65.5	64.2	62.2	57.8
4600	76.6	71.4	71.2	71.0	70.1	69.1	68.0	66.8	65.4	63.4	58.9
CLIMB LIMIT WT (1000 KG)	60.8	60.3	60.3	60.2	59.5	58.7	57.7	56.8	55.4	53.2	48.2

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	1	2	6	10	15	20	25	30	40
1200	36.4	33.5	33.4	33.3	32.8	32.3	31.7	31.2	30.5	29.6	27.8
1400	39.8	36.7	36.5	36.4	35.9	35.3	34.7	34.0	33.2	32.3	30.3
1600	43.2	39.9	39.8	39.6	39.1	38.5	37.8	37.1	36.3	35.4	33.3
1800	46.3	43.0	42.8	42.7	42.1	41.5	40.8	40.2	39.3	38.4	36.2
2000	48.9	45.4	45.3	45.2	44.6	44.0	43.2	42.5	41.7	40.6	38.4
2200	51.3	47.7	47.5	47.4	46.7	46.1	45.3	44.6	43.7	42.6	40.3
2400	53.5	49.7	49.5	49.4	48.7	48.1	47.3	46.5	45.5	44.4	42.0
2600	55.6	51.6	51.5	51.3	50.6	49.9	49.1	48.3	47.3	46.2	43.6
2800	57.6	53.5	53.3	53.2	52.5	51.8	50.9	50.1	49.0	47.9	45.2
3000	59.4	55.2	55.0	54.9	54.1	53.4	52.5	51.6	50.6	49.4	46.6
3200	61.1	56.7	56.5	56.4	55.6	54.9	53.9	53.0	52.0	50.7	47.9
3400	62.6	58.1	58.0	57.8	57.0	56.2	55.3	54.4	53.2	51.9	49.1
3600	64.1	59.5	59.3	59.1	58.3	57.5	56.6	55.6	54.5	53.1	50.2
3800	65.5	60.8	60.6	60.4	59.6	58.8	57.8	56.8	55.6	54.2	51.2
4000	66.9	62.0	61.8	61.6	60.8	60.0	58.9	57.9	56.7	55.3	52.2
4200	68.3	63.3	63.1	62.9	62.0	61.2	60.1	59.1	57.8	56.4	53.2
4400	69.6	64.5	64.3	64.1	63.2	62.4	61.3	60.2	59.0	57.5	54.2
4600	71.0	65.8	65.6	65.3	64.4	63.6	62.5	61.4	60.1	58.6	55.2
CLIMB LIMIT WT (1000 KG)	56.7	55.8	55.6	55.4	54.7	54.0	53.1	52.2	50.9	49.2	45.4

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 1500 kg and climb limit weight by 1750 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2050 kg and climb limit weight by 2800 kg.

Takeoff Field & Climb Limit Weights - Dry Runway

Flaps 5

14500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	1	2	6	10	15	20	25	30	40
1200	35.6	32.8	32.7	32.6	32.1	31.6	31.0	30.5	29.8	29.0	27.4
1400	39.0	35.8	35.7	35.6	35.0	34.5	33.9	33.2	32.5	31.7	29.8
1600	42.3	39.0	38.9	38.8	38.2	37.7	37.0	36.3	35.6	34.7	32.8
1800	45.4	42.1	41.9	41.8	41.2	40.7	40.0	39.3	38.5	37.6	35.7
2000	48.0	44.5	44.4	44.2	43.6	43.1	42.3	41.6	40.8	39.9	37.8
2200	50.3	46.7	46.5	46.4	45.8	45.2	44.4	43.7	42.8	41.8	39.7
2400	52.5	48.7	48.5	48.4	47.7	47.1	46.3	45.5	44.6	43.6	41.4
2600	54.5	50.6	50.4	50.2	49.6	48.9	48.1	47.3	46.4	45.3	43.0
2800	56.5	52.4	52.3	52.1	51.4	50.7	49.9	49.0	48.1	47.0	44.5
3000	58.3	54.1	53.9	53.7	53.0	52.3	51.4	50.6	49.6	48.4	46.0
3200	59.9	55.6	55.4	55.2	54.5	53.7	52.8	52.0	50.9	49.7	47.2
3400	61.4	56.9	56.8	56.6	55.8	55.1	54.1	53.2	52.2	51.0	48.3
3600	62.9	58.3	58.1	57.9	57.1	56.3	55.4	54.5	53.4	52.1	49.4
3800	64.3	59.5	59.3	59.1	58.3	57.5	56.6	55.6	54.5	53.2	50.4
4000	65.6	60.7	60.5	60.3	59.5	58.7	57.7	56.7	55.6	54.3	51.4
4200	66.9	62.0	61.8	61.5	60.7	59.9	58.8	57.8	56.6	55.3	52.4
4400	68.3	63.2	63.0	62.8	61.9	61.0	60.0	59.0	57.7	56.4	53.4
4600	69.6	64.4	64.2	64.0	63.1	62.2	61.1	60.1	58.8	57.4	54.4
CLIMB LIMIT WT (1000 KG)	55.7	54.6	54.4	54.3	53.6	52.8	52.0	51.1	49.8	48.3	44.8

With engine bleed for packs off, increase field limit weight by 500 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 1500 kg and climb limit weight by 1750 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2050 kg and climb limit weight by 2800 kg.

Takeoff Field Corrections - Wet Runway**Slope Corrections**

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1220	1210	1210	1200	1200	1190	1180	1180	1170
1400	1440	1430	1420	1410	1400	1380	1370	1350	1340
1600	1660	1640	1630	1610	1600	1580	1550	1530	1510
1800	1870	1850	1840	1820	1800	1770	1740	1710	1680
2000	2090	2070	2050	2020	2000	1960	1920	1880	1850
2200	2320	2290	2260	2230	2200	2150	2110	2060	2010
2400	2550	2510	2480	2440	2400	2350	2290	2240	2180
2600	2790	2740	2690	2650	2600	2540	2480	2420	2350
2800	3020	2970	2910	2860	2800	2730	2660	2590	2520
3000	3260	3190	3130	3060	3000	2920	2850	2770	2690
3200	3490	3420	3350	3270	3200	3120	3030	2950	2860
3400	3730	3640	3560	3480	3400	3310	3220	3120	3030
3600	3960	3870	3780	3690	3600	3500	3400	3300	3200
3800	4200	4100	4000	3900	3800	3690	3580	3470	3360
4000	4430	4320	4220	4110	4000	3880	3760	3640	3520
4200	4670	4550	4430	4320	4200	4070	3940	3810	3680
4400	4900	4780	4650	4530	4400	4260	4120	3980	3840
4600	5130	5000	4870	4730	4600	4450	4300	4150	4000
4800	5370	5230	5080	4940	4800	4640	4480	4320	4160
5000	5600	5450	5300	5150	5000	4830	4660	4490	4320

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	860	970	1090	1200	1280	1360	1440	1520
1400	1030	1150	1280	1400	1480	1570	1660	1750
1600	1200	1330	1470	1600	1690	1780	1880	1980
1800	1370	1510	1660	1800	1900	2000	2100	2210
2000	1540	1690	1850	2000	2100	2210	2320	2440
2200	1710	1870	2040	2200	2310	2430	2540	2670
2400	1880	2050	2230	2400	2520	2640	2770	2890
2600	2050	2230	2420	2600	2720	2850	2990	3120
2800	2220	2410	2610	2800	2930	3070	3210	3350
3000	2390	2590	2800	3000	3140	3280	3430	3580
3200	2560	2770	2990	3200	3350	3500	3650	3810
3400	2730	2950	3180	3400	3550	3710	3870	4040
3600	2900	3130	3370	3600	3760	3920	4090	4270
3800	3070	3310	3560	3800	3970	4140	4310	4500
4000	3240	3490	3750	4000	4170	4350	4540	4730
4200	3410	3670	3940	4200	4380	4570	4760	4950
4400	3580	3850	4130	4400	4590	4780	4980	5180
4600	3750	4030	4320	4600	4790	4990	5200	5410
4800	3920	4210	4510	4800	5000	5210	5420	5640
5000	4090	4390	4700	5000	5210	5420	5640	5870

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	59.7	55.4	54.4	54.0	53.6	53.2	52.8	52.5	49.3	46.3	43.2
1400	64.8	60.2	59.1	58.6	58.2	57.8	57.4	57.0	53.5	50.2	46.9
1600	70.1	65.0	63.8	63.3	62.9	62.4	62.0	61.5	57.8	54.2	50.6
1800	74.9	69.4	68.2	67.7	67.2	66.7	66.2	65.7	61.7	57.9	54.0
2000	79.4	73.6	72.2	71.7	71.2	70.7	70.2	69.6	65.4	61.3	57.2
2200	83.6	77.5	76.1	75.5	75.0	74.4	73.9	73.3	68.8	64.6	60.2
2400	86.1	81.2	79.7	79.1	78.5	77.9	77.3	76.8	72.1	67.6	63.0
2600	86.1	84.3	82.7	82.1	81.5	80.9	80.3	79.7	74.8	70.1	65.3
2800	86.1	86.1	85.7	85.0	84.4	83.8	83.2	82.5	77.4	72.5	67.5
3000	86.1	86.1	86.1	86.1	86.1	86.1	85.9	85.3	79.9	74.9	69.6
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.4	77.1	71.7
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.7	79.3	73.7
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.4	75.6
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.4	77.5
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.3	79.2
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.0
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.7
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3
CLIMB LIMIT WT (1000 KG)	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.4	74.5	67.2

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	55.8	51.7	50.8	50.4	50.1	49.7	49.4	48.6	45.8	42.8	40.3
1400	60.6	56.2	55.1	54.7	54.4	54.0	53.6	52.8	49.7	46.4	43.7
1600	65.5	60.7	59.6	59.1	58.7	58.3	57.9	57.0	53.7	50.1	47.2
1800	70.0	64.8	63.6	63.1	62.7	62.2	61.8	60.9	57.3	53.5	50.3
2000	74.2	68.7	67.4	66.9	66.4	65.9	65.5	64.5	60.7	56.6	53.3
2200	78.1	72.3	71.0	70.5	69.9	69.4	68.9	67.9	63.9	59.6	56.1
2400	81.8	75.7	74.3	73.8	73.2	72.7	72.2	71.0	66.9	62.3	58.7
2600	85.0	78.6	77.1	76.5	76.0	75.4	74.9	73.7	69.4	64.6	60.8
2800	86.1	81.4	79.8	79.2	78.7	78.1	77.5	76.3	71.8	66.8	62.8
3000	86.1	84.1	82.5	81.8	81.2	80.6	80.0	78.8	74.1	68.9	64.8
3200	86.1	86.1	85.0	84.3	83.7	83.1	82.5	81.2	76.3	71.0	66.7
3400	86.1	86.1	86.1	86.1	86.1	85.5	84.8	83.5	78.4	73.0	68.5
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.7	80.5	74.9	70.3
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.5	76.7	72.0
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	78.4	73.6
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	80.1	75.2
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.8	76.8
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.5	78.3
CLIMB LIMIT WT (1000 KG)	84.9	84.6	84.4	84.4	84.3	84.2	84.1	82.4	75.8	68.5	62.8

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 850 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	52.0	48.2	47.3	47.0	46.6	46.3	45.8	45.1	42.7	40.1	37.9
1400	56.5	52.3	51.3	51.0	50.6	50.3	49.7	48.9	46.3	43.5	41.1
1600	61.0	56.5	55.4	55.0	54.6	54.3	53.6	52.8	50.0	46.9	44.3
1800	65.1	60.3	59.2	58.8	58.3	57.9	57.2	56.4	53.3	50.0	47.2
2000	69.0	63.9	62.7	62.2	61.8	61.3	60.6	59.7	56.5	52.9	50.0
2200	72.7	67.3	66.0	65.5	65.1	64.6	63.8	62.9	59.4	55.7	52.6
2400	76.1	70.4	69.1	68.6	68.1	67.6	66.8	65.8	62.2	58.3	55.0
2600	79.0	73.0	71.7	71.1	70.6	70.1	69.3	68.2	64.4	60.4	56.9
2800	81.8	75.6	74.2	73.6	73.1	72.5	71.7	70.6	66.6	62.4	58.8
3000	84.5	78.1	76.6	76.0	75.4	74.9	74.0	72.8	68.8	64.3	60.6
3200	86.1	80.4	78.9	78.3	77.7	77.1	76.2	75.0	70.8	66.2	62.4
3400	86.1	82.7	81.1	80.5	79.9	79.3	78.3	77.1	72.8	68.0	64.1
3600	86.1	84.9	83.3	82.6	82.0	81.4	80.4	79.2	74.7	69.8	65.7
3800	86.1	86.1	85.3	84.6	84.0	83.4	82.4	81.1	76.5	71.5	67.3
4000	86.1	86.1	86.1	86.1	85.9	85.3	84.3	83.0	78.2	73.1	68.8
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.8	79.9	74.7	70.3
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.6	76.2	71.7
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.2	77.8	73.2
CLIMB LIMIT WT (1000 KG)	79.6	79.3	79.1	79.0	78.9	78.9	78.0	76.6	70.6	64.3	59.2

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	48.5	44.8	44.0	43.7	43.4	43.0	42.5	41.9	39.6	37.3	35.1
1400	52.6	48.7	47.8	47.5	47.1	46.6	46.1	45.4	42.9	40.4	38.0
1600	56.8	52.5	51.6	51.2	50.9	50.3	49.7	49.0	46.3	43.6	41.0
1800	60.6	56.1	55.1	54.7	54.3	53.7	53.1	52.3	49.4	46.5	43.7
2000	64.3	59.4	58.3	57.9	57.5	56.9	56.2	55.3	52.2	49.2	46.2
2200	67.6	62.5	61.4	60.9	60.5	59.8	59.1	58.2	55.0	51.7	48.6
2400	70.8	65.4	64.2	63.8	63.3	62.6	61.9	60.9	57.5	54.1	50.8
2600	73.5	67.8	66.6	66.1	65.6	64.9	64.1	63.1	59.5	56.0	52.6
2800	76.0	70.1	68.8	68.4	67.9	67.1	66.3	65.3	61.5	57.8	54.2
3000	78.5	72.4	71.1	70.5	70.0	69.2	68.4	67.3	63.5	59.6	55.9
3200	80.9	74.6	73.2	72.6	72.1	71.3	70.4	69.3	65.3	61.3	57.5
3400	83.2	76.7	75.2	74.7	74.1	73.3	72.4	71.3	67.1	63.0	59.0
3600	85.4	78.7	77.2	76.6	76.1	75.2	74.3	73.1	68.8	64.6	60.5
3800	86.1	80.6	79.1	78.5	77.9	77.0	76.1	74.9	70.5	66.1	61.9
4000	86.1	82.4	80.9	80.3	79.7	78.8	77.8	76.6	72.1	67.6	63.3
4200	86.1	84.2	82.6	82.0	81.4	80.5	79.5	78.2	73.6	69.1	64.7
4400	86.1	86.0	84.4	83.8	83.1	82.2	81.2	79.9	75.2	70.5	66.0
4600	86.1	86.1	86.1	85.4	84.8	83.8	82.8	81.5	76.7	71.9	67.3
CLIMB LIMIT WT (1000 KG)	74.6	74.1	74.0	73.9	73.8	73.1	72.3	70.8	65.0	59.8	54.6

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 850 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	45.1	41.8	41.1	40.8	40.3	39.9	39.3	38.5	36.3	34.1	32.0
1400	48.9	45.3	44.5	44.2	43.7	43.3	42.6	41.8	39.3	37.0	34.7
1600	52.8	48.9	48.0	47.7	47.2	46.7	46.0	45.1	42.4	39.9	37.3
1800	56.4	52.2	51.3	50.9	50.3	49.8	49.1	48.1	45.2	42.5	39.8
2000	59.7	55.3	54.3	53.9	53.3	52.7	51.9	50.9	47.8	44.9	42.1
2200	62.9	58.1	57.1	56.7	56.1	55.5	54.6	53.5	50.3	47.3	44.2
2400	65.8	60.8	59.7	59.3	58.7	58.0	57.2	56.0	52.6	49.4	46.2
2600	68.2	63.0	61.9	61.5	60.8	60.1	59.2	58.0	54.4	51.1	47.7
2800	70.5	65.2	64.0	63.5	62.8	62.1	61.2	59.9	56.2	52.7	49.2
3000	72.8	67.2	66.0	65.5	64.8	64.0	63.1	61.8	57.9	54.3	50.7
3200	75.0	69.2	67.9	67.4	66.7	65.9	64.9	63.5	59.6	55.8	52.1
3400	77.1	71.1	69.8	69.3	68.5	67.7	66.7	65.3	61.2	57.3	53.5
3600	79.1	73.0	71.6	71.1	70.3	69.5	68.4	67.0	62.7	58.8	54.8
3800	81.1	74.7	73.3	72.8	72.0	71.1	70.0	68.5	64.2	60.1	56.0
4000	82.9	76.4	75.0	74.5	73.6	72.7	71.6	70.1	65.6	61.5	57.3
4200	84.7	78.1	76.7	76.1	75.2	74.3	73.2	71.6	67.1	62.8	58.5
4400	86.1	79.8	78.3	77.7	76.8	75.9	74.7	73.1	68.5	64.1	59.7
4600	86.1	81.4	79.8	79.2	78.3	77.4	76.2	74.6	69.8	65.4	60.9
CLIMB LIMIT WT (1000 KG)	69.8	69.3	69.1	69.0	68.3	67.7	66.5	64.4	58.8	53.9	48.8

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	10	14	18	22	26	30	40	50	60
1220	41.7	38.6	38.0	37.5	37.0	36.6	36.0	35.2	33.1	31.1	29.1
1400	45.2	41.9	41.2	40.7	40.1	39.6	39.0	38.1	35.9	33.7	31.5
1600	48.7	45.2	44.4	43.8	43.3	42.7	42.1	41.1	38.7	36.3	33.9
1800	52.0	48.2	47.4	46.8	46.2	45.5	44.8	43.8	41.2	38.7	36.1
2000	55.1	51.0	50.1	49.5	48.8	48.2	47.4	46.3	43.6	40.9	38.1
2200	58.0	53.7	52.7	52.0	51.4	50.7	49.9	48.7	45.8	43.0	40.1
2400	60.6	56.1	55.1	54.4	53.7	53.0	52.2	51.0	47.9	44.9	41.9
2600	62.8	58.1	57.1	56.3	55.6	54.9	54.0	52.7	49.5	46.4	43.2
2800	65.0	60.1	59.0	58.2	57.4	56.6	55.8	54.4	51.1	47.8	44.5
3000	67.0	61.9	60.8	60.0	59.2	58.4	57.5	56.1	52.6	49.2	45.8
3200	69.0	63.7	62.5	61.7	60.9	60.1	59.1	57.7	54.0	50.5	47.0
3400	70.9	65.5	64.2	63.4	62.5	61.7	60.7	59.2	55.5	51.9	48.2
3600	72.7	67.1	65.9	65.0	64.1	63.2	62.2	60.7	56.8	53.1	49.4
3800	74.5	68.7	67.5	66.6	65.6	64.7	63.7	62.1	58.2	54.4	50.5
4000	76.2	70.3	69.0	68.1	67.1	66.2	65.1	63.5	59.5	55.5	51.6
4200	77.8	71.8	70.5	69.5	68.6	67.6	66.5	64.9	60.7	56.7	52.7
4400	79.5	73.3	71.9	71.0	70.0	69.0	67.9	66.2	62.0	57.9	53.8
4600	81.1	74.8	73.4	72.4	71.4	70.4	69.2	67.5	63.2	59.0	54.8
CLIMB LIMIT WT (1000 KG)	64.0	63.6	63.4	62.7	61.9	61.0	59.8	57.8	52.9	48.3	43.6

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1450 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 250 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 850 kg and climb limit weight by 1550 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	1	2	6	10	15	20	25	30	40
1200	38.9	35.8	35.7	35.6	35.1	34.6	33.9	33.3	32.6	31.6	29.3
1400	42.5	39.1	39.0	38.9	38.4	37.8	37.2	36.5	35.7	34.6	32.1
1600	45.8	42.3	42.2	42.1	41.5	40.9	40.2	39.5	38.7	37.5	34.9
1800	48.9	45.2	45.1	45.0	44.4	43.8	43.1	42.3	41.5	40.3	37.5
2000	51.7	47.9	47.8	47.6	47.0	46.4	45.6	44.8	44.0	42.7	39.8
2200	54.3	50.3	50.2	50.1	49.4	48.8	48.0	47.2	46.2	44.9	42.0
2400	56.7	52.6	52.5	52.3	51.7	51.0	50.1	49.3	48.3	47.0	43.9
2600	59.0	54.7	54.6	54.4	53.7	53.0	52.1	51.3	50.3	48.8	45.6
2800	61.1	56.6	56.5	56.4	55.7	54.9	54.0	53.1	52.1	50.6	47.3
3000	63.0	58.4	58.3	58.1	57.4	56.6	55.7	54.8	53.7	52.2	48.7
3200	64.8	60.0	59.9	59.8	59.0	58.2	57.3	56.3	55.2	53.6	50.1
3400	66.5	61.6	61.5	61.3	60.6	59.8	58.8	57.8	56.6	55.0	51.4
3600	68.2	63.2	63.1	62.9	62.1	61.3	60.2	59.2	58.1	56.4	52.6
3800	69.9	64.7	64.6	64.4	63.6	62.7	61.7	60.6	59.4	57.7	53.9
4000	71.5	66.2	66.1	65.9	65.0	64.1	63.1	62.0	60.8	59.0	55.1
4200	73.1	67.6	67.5	67.3	66.4	65.5	64.4	63.3	62.1	60.3	56.2
4400	74.6	69.0	68.9	68.7	67.8	66.9	65.8	64.6	63.3	61.5	57.4
4600	76.1	70.4	70.2	70.0	69.1	68.2	67.0	65.9	64.6	62.7	58.4
CLIMB LIMIT WT (1000 KG)	60.8	60.3	60.3	60.2	59.5	58.7	57.7	56.8	55.4	53.2	48.2

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	1	2	6	10	15	20	25	30	40
1200	35.8	32.8	32.7	32.5	32.1	31.6	31.0	30.4	29.8	29.0	27.2
1400	39.2	35.9	35.8	35.7	35.1	34.6	34.0	33.4	32.6	31.8	29.9
1600	42.4	38.9	38.8	38.6	38.1	37.6	36.9	36.2	35.5	34.6	32.6
1800	45.3	41.7	41.5	41.4	40.8	40.3	39.6	38.9	38.1	37.2	35.1
2000	47.9	44.2	44.0	43.9	43.3	42.7	42.0	41.3	40.5	39.5	37.4
2200	50.4	46.5	46.3	46.2	45.6	44.9	44.2	43.5	42.6	41.6	39.4
2400	52.6	48.6	48.4	48.3	47.6	47.0	46.2	45.4	44.5	43.5	41.2
2600	54.7	50.5	50.4	50.2	49.5	48.9	48.1	47.2	46.3	45.2	42.8
2800	56.7	52.4	52.2	52.0	51.3	50.6	49.8	49.0	48.0	46.9	44.4
3000	58.5	54.0	53.8	53.6	52.9	52.2	51.3	50.5	49.5	48.3	45.7
3200	60.1	55.5	55.3	55.1	54.4	53.6	52.8	51.9	50.8	49.6	47.0
3400	61.7	56.9	56.7	56.6	55.8	55.1	54.1	53.2	52.2	50.9	48.2
3600	63.3	58.4	58.2	58.0	57.2	56.4	55.5	54.5	53.4	52.2	49.4
3800	64.8	59.7	59.5	59.3	58.5	57.8	56.8	55.8	54.7	53.4	50.5
4000	66.3	61.1	60.9	60.7	59.9	59.1	58.1	57.1	55.9	54.6	51.6
4200	67.7	62.4	62.2	62.0	61.1	60.3	59.3	58.3	57.1	55.7	52.7
4400	69.1	63.7	63.5	63.2	62.4	61.5	60.5	59.4	58.2	56.8	53.7
4600	70.5	64.9	64.7	64.5	63.6	62.7	61.6	60.6	59.3	57.9	54.7
CLIMB LIMIT WT (1000 KG)	56.7	55.8	55.6	55.4	54.7	54.0	53.1	52.2	50.9	49.2	45.4

With engine bleed for packs off, increase field limit weight by 450 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 1300 kg and climb limit weight by 1750 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1750 kg and climb limit weight by 2800 kg.

Takeoff Field & Climb Limit Weights - Wet Runway

Flaps 5

14500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	0	1	2	6	10	15	20	25	30	40
1200	35.1	32.0	31.9	31.8	31.3	30.9	30.3	29.7	29.1	28.4	26.8
1400	38.4	35.1	35.0	34.9	34.3	33.8	33.2	32.6	31.9	31.1	29.4
1600	41.5	38.1	37.9	37.8	37.3	36.7	36.1	35.4	34.7	33.9	32.1
1800	44.4	40.8	40.7	40.5	40.0	39.4	38.8	38.1	37.3	36.5	34.6
2000	47.0	43.3	43.1	43.0	42.4	41.8	41.1	40.4	39.6	38.7	36.8
2200	49.4	45.5	45.4	45.2	44.6	44.0	43.3	42.6	41.7	40.8	38.8
2400	51.7	47.6	47.4	47.3	46.6	46.0	45.3	44.5	43.6	42.7	40.5
2600	53.7	49.5	49.3	49.2	48.5	47.9	47.1	46.3	45.4	44.4	42.2
2800	55.7	51.3	51.1	51.0	50.3	49.6	48.8	48.0	47.0	46.0	43.7
3000	57.4	52.9	52.7	52.5	51.8	51.1	50.3	49.4	48.5	47.4	45.0
3200	59.0	54.3	54.2	54.0	53.3	52.5	51.7	50.8	49.8	48.7	46.3
3400	60.6	55.8	55.6	55.4	54.7	53.9	53.0	52.1	51.1	50.0	47.5
3600	62.1	57.2	57.0	56.8	56.0	55.3	54.3	53.4	52.4	51.2	48.6
3800	63.6	58.5	58.3	58.1	57.3	56.6	55.6	54.7	53.6	52.4	49.7
4000	65.0	59.8	59.6	59.4	58.6	57.8	56.9	55.9	54.8	53.5	50.8
4200	66.4	61.1	60.9	60.7	59.9	59.1	58.1	57.1	55.9	54.7	51.9
4400	67.8	62.3	62.1	61.9	61.1	60.2	59.2	58.2	57.0	55.7	52.9
4600	69.1	63.5	63.3	63.1	62.2	61.4	60.3	59.3	58.1	56.8	53.9
CLIMB LIMIT WT (1000 KG)	55.7	54.6	54.4	54.3	53.6	52.8	52.0	51.1	49.8	48.3	44.8

With engine bleed for packs off, increase field limit weight by 450 kg and climb limit weight by 1350 kg.

With engine anti-ice on, decrease field limit weight by 1300 kg and climb limit weight by 1750 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1750 kg and climb limit weight by 2800 kg.

Takeoff Obstacle Limit Weight

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 KG)

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	75.8	82.4									
20	70.0	76.2	81.3								
40	65.0	70.9	75.7	79.7	82.8	85.4					
60	61.1	66.7	71.4	75.3	78.6	81.3	83.6				
80	57.8	63.3	67.9	71.8	75.1	77.9	80.3	82.3	84.0	85.5	
100	54.9	60.4	64.9	68.7	72.0	74.9	77.3	79.5	81.3	82.9	84.3
120	52.4	57.7	62.2	66.0	69.3	72.2	74.7	76.9	78.8	80.5	81.9
140	50.1	55.4	59.8	63.6	66.9	69.8	72.3	74.5	76.5	78.3	79.8
160	48.1	53.3	57.7	61.5	64.7	67.6	70.2	72.4	74.4	76.2	77.8
180	46.1	51.3	55.7	59.5	62.7	65.6	68.1	70.4	72.5	74.3	75.9
200	44.4	49.5	53.9	57.6	60.9	63.7	66.3	68.6	70.6	72.5	74.2
220	42.8	47.9	52.2	55.9	59.1	62.0	64.6	66.9	68.9	70.8	72.5
240	41.3	46.3	50.6	54.3	57.5	60.4	63.0	65.2	67.3	69.2	71.0
260		44.9	49.1	52.8	56.0	58.9	61.4	63.7	65.8	67.7	69.5
280		43.5	47.7	51.4	54.6	57.4	60.0	62.3	64.4	66.3	68.1
300		42.2	46.4	50.0	53.2	56.1	58.6	61.0	63.1	65.0	66.7

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)					
	40	50	60	70	80	90
30 & BELOW	0	0	0	0	0	0
32	-0.6	-0.7	-0.9	-1.1	-1.3	-1.4
34	-1.1	-1.5	-1.8	-2.2	-2.5	-2.9
36	-1.7	-2.2	-2.7	-3.3	-3.8	-4.3
38	-2.2	-2.9	-3.6	-4.3	-5.0	-5.7
40	-2.8	-3.7	-4.5	-5.4	-6.3	-7.2
42	-3.4	-4.4	-5.4	-6.5	-7.5	-8.5
44	-4.0	-5.2	-6.3	-7.5	-8.7	-9.9
46	-4.6	-5.9	-7.2	-8.6	-9.9	-11.2
48	-5.2	-6.7	-8.1	-9.6	-11.1	-12.6
50	-5.8	-7.4	-9.0	-10.7	-12.3	-14.0

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)					
	40	50	60	70	80	90
S.L. & BELOW	0	0	0	0	0	0
1000	-1.5	-1.8	-2.2	-2.6	-3.0	-3.4
2000	-2.9	-3.7	-4.5	-5.2	-6.0	-6.7
3000	-4.3	-5.4	-6.5	-7.6	-8.7	-9.8
4000	-5.6	-7.1	-8.5	-10.0	-11.4	-12.9
5000	-6.9	-8.7	-10.5	-12.2	-14.0	-15.8
6000	-8.2	-10.3	-12.4	-14.5	-16.6	-18.7
7000	-9.6	-12.0	-14.5	-17.0	-19.4	-21.9
8000	-11.0	-13.8	-16.6	-19.4	-22.3	-25.1
9000	-12.3	-15.5	-18.7	-21.9	-25.1	-28.3
10000	-13.6	-17.2	-20.7	-24.3	-27.9	-31.4

Takeoff Obstacle Limit Weight
Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)					
	40	50	60	70	80	90
15 TW	-9.3	-9.1	-8.8	-8.6	-8.3	-8.1
10 TW	-6.2	-6.1	-5.9	-5.7	-5.6	-5.4
5 TW	-3.1	-3.0	-2.9	-2.9	-2.8	-2.7
0	0	0	0	0	0	0
10 HW	1.2	1.1	1.0	0.9	0.8	0.7
20 HW	2.3	2.2	2.0	1.8	1.7	1.5
30 HW	3.6	3.3	3.1	2.8	2.5	2.2
40 HW	4.9	4.5	4.1	3.7	3.4	3.0

With engine bleed for packs off, increase weight by 600 kg.
With engine anti-ice on, decrease weight by 300 kg.
With engine and wing anti-ice on, decrease weight by 1700 kg (optional system).

Takeoff Obstacle Limit Weight - High Altitudes
Flaps 5

10000 ft, 10°C & Below, Zero Wind
Based on engine bleed for packs on and anti-ice off
Reference Obstacle Limit Weight (1000 LB)

OBSTACLE HEIGHT (M)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)														
	DISTANCE FROM BRAKE RELEASE (100 M)														
	25	30	35	40	45	50	55	60	65	70	75	80	85	90	
5	54.4	59.0	62.6	65.0	66.7										
20	50.3	54.6	58.1	60.9	63.1	64.6	65.8								
40	46.7	50.8	54.1	56.9	59.1	61.0	62.5	63.7	64.6	65.4	66.2	66.8	67.4		
60	43.9	47.8	51.1	53.8	56.1	58.0	59.6	61.0	62.2	63.2	64.0	64.6	65.2	65.8	
80		45.4	48.6	51.3	53.6	55.5	57.2	58.6	59.9	61.0	61.9	62.7	63.4	64.0	
100		43.2	46.4	49.1	51.4	53.4	55.1	56.6	57.9	59.0	60.0	60.9	61.7	62.4	
120		41.3	44.5	47.2	49.5	51.5	53.3	54.8	56.1	57.3	58.3	59.3	60.1	60.9	
140			42.8	45.5	47.8	49.8	51.6	53.1	54.5	55.7	56.8	57.8	58.7	59.4	
160				43.9	46.2	48.2	50.0	51.6	53.0	54.2	55.4	56.4	57.3	58.1	
180				42.5	44.8	46.8	48.6	50.2	51.6	52.9	54.0	55.1	56.0	56.9	
200					43.4	45.5	47.3	48.9	50.3	51.6	52.8	53.8	54.8	55.7	
220					42.2	44.2	46.0	47.7	49.1	50.4	51.6	52.7	53.7	54.6	
240					43.1	44.9	46.5	48.0	49.3	50.5	51.6	52.6	53.5		
260						42.0	43.8	45.4	46.9	48.2	49.4	50.5	51.6	52.5	
280							42.7	44.4	45.9	47.2	48.4	49.6	50.6	51.5	
300							41.8	43.4	44.9	46.2	47.5	48.6	49.7	50.6	

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

Takeoff Obstacle Limit Weight - High Altitudes**Flaps 5****OAT Adjustments**

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)							
	44	48	52	56	60	64	68	72
10 & BELOW	0	0	0	0	0	0	0	0
12	-0.3	-0.3	-0.4	-0.4	-0.4	-0.4	-0.5	-0.5
14	-0.7	-0.7	-0.8	-0.8	-0.9	-0.9	-1.0	-1.0
16	-1.0	-1.1	-1.2	-1.2	-1.3	-1.4	-1.5	-1.5
18	-1.4	-1.5	-1.6	-1.7	-1.8	-1.9	-2.0	-2.1
20	-1.7	-1.8	-2.0	-2.1	-2.2	-2.3	-2.5	-2.6
22	-2.2	-2.4	-2.6	-2.7	-2.9	-3.1	-3.3	-3.5
24	-2.7	-2.9	-3.1	-3.4	-3.6	-3.9	-4.1	-4.3
26	-3.1	-3.4	-3.7	-4.0	-4.3	-4.6	-4.9	-5.2
28	-3.6	-4.0	-4.3	-4.7	-5.0	-5.4	-5.7	-6.1
30	-4.1	-4.5	-4.9	-5.3	-5.7	-6.1	-6.5	-6.9
32	-4.7	-5.2	-5.7	-6.2	-6.6	-7.1	-7.6	-8.1
34	-5.4	-5.9	-6.5	-7.0	-7.6	-8.1	-8.6	-9.2
36	-6.0	-6.6	-7.3	-7.9	-8.5	-9.1	-9.7	-10.3
38	-6.7	-7.4	-8.0	-8.7	-9.4	-10.1	-10.8	-11.4
40	-7.3	-8.1	-8.8	-9.6	-10.3	-11.1	-11.8	-12.6
42	-7.8	-8.7	-9.5	-10.3	-11.2	-12.0	-12.8	-13.6
44	-8.4	-9.3	-10.2	-11.1	-12.0	-12.9	-13.8	-14.7
46	-8.9	-9.9	-10.8	-11.8	-12.8	-13.8	-14.8	-15.8
48	-9.4	-10.4	-11.5	-12.6	-13.7	-14.7	-15.8	-16.9
50	-9.9	-11.0	-12.2	-13.3	-14.5	-15.6	-16.8	-17.9

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)							
	44	48	52	56	60	64	68	72
10000	0	0	0	0	0	0	0	0
11000	-1.9	-2	-2.2	-2.4	-2.5	-2.7	-2.8	-3
12000	-3.7	-4	-4.3	-4.6	-4.9	-5.2	-5.5	-5.8
13000	-5.4	-5.9	-6.4	-6.8	-7.3	-7.7	-8.2	-8.6
14000	-7.1	-7.7	-8.4	-9	-9.6	-10.2	-10.8	-11.4
14500	-8.0	-8.6	-9.4	-10.1	-10.8	-11.5	-12.1	-12.8

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)							
	44	48	52	56	60	64	68	72
15 TW	-6.4	-6.2	-6.0	-5.8	-5.6	-5.4	-5.2	-5.0
10 TW	-4.3	-4.1	-4.0	-3.9	-3.8	-3.6	-3.5	-3.4
5 TW	-2.1	-2.1	-2.0	-1.9	-1.9	-1.8	-1.7	-1.7
0	0	0	0	0	0	0	0	0
10 HW	0.8	0.7	0.6	0.6	0.5	0.5	0.4	0.3
20 HW	1.5	1.4	1.3	1.2	1.0	0.9	0.8	0.7
30 HW	2.3	2.1	1.9	1.8	1.6	1.4	1.2	1.0
40 HW	3.1	2.8	2.6	2.4	2.1	1.9	1.6	1.4

With engine bleed for packs off, increase weight by 650 kg.

With engine anti-ice on, decrease weight by 1850 kg.

With engine and wing anti-ice on, decrease weight by 3000 kg (optional system).

Tire Speed Limit Weight

Flaps 5 Limit Weight (1000 KG)

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	86.2	86.2	83.0	76.5	70.5	
52	86.2	86.2	83.5	77.0	71.0	
50	86.2	86.2	84.1	77.6	71.5	65.7
48	86.2	86.2	84.7	78.1	72.0	66.2
46	86.2	86.2	85.3	78.7	72.5	66.7
44	86.2	86.2	86.0	79.3	73.0	67.2
42	86.2	86.2	86.2	79.8	73.5	67.7
40	86.2	86.2	86.2	80.4	74.1	68.2
38	86.2	86.2	86.2	81.0	74.6	68.7
36	86.2	86.2	86.2	81.6	75.2	69.2
34	86.2	86.2	86.2	82.2	75.7	69.7
32	86.2	86.2	86.2	82.9	76.3	70.2
30	86.2	86.2	86.2	83.5	76.9	70.7
28	86.2	86.2	86.2	84.1	77.4	71.3
26	86.2	86.2	86.2	84.7	78.0	71.8
24	86.2	86.2	86.2	85.3	78.6	72.3
22	86.2	86.2	86.2	85.9	79.1	72.8
20	86.2	86.2	86.2	86.2	79.7	73.4
18	86.2	86.2	86.2	86.2	80.3	73.9
16	86.2	86.2	86.2	86.2	80.9	74.4
14	86.2	86.2	86.2	86.2	81.5	75.0
12	86.2	86.2	86.2	86.2	82.1	75.6
10	86.2	86.2	86.2	86.2	82.8	76.1
-40	86.2	86.2	86.2	86.2	86.2	86.2

Increase tire speed limit weight by 600 kg per knot headwind.

Decrease tire speed limit weight by 1100 kg per knot tailwind.

Brake Energy Limits VMBE

Maximum Brake Energy Speed

OAT (°C)	REFERENCE VMBE (KIAS)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	187					
50	188	182				
46	189	182	176			
42	189	183	177	171		
38	190	184	178	171	165	
34	191	185	178	172	166	160
30	191	185	179	173	167	161
26	193	187	180	174	168	162
22	194	188	181	175	169	163
18	195	189	183	176	170	164
14	197	190	184	178	171	165
10	198	192	185	179	173	167
6	200	193	187	180	174	168
2	202	195	188	182	175	169
-2	203	196	190	183	177	170
-6	205	198	191	185	178	172
-10	207	200	193	186	180	173

Weight Adjusted VMBE

WEIGHT (1000 KG)	REFERENCE VMBE (KIAS)														
	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210
86	114	118	122	126	130	134	138	142	145	149	153	157	161	165	169
82	117	121	125	129	133	137	141	145	149	153	157	162	166	170	174
78	119	124	128	132	136	141	145	149	153	157	162	166	170	174	178
74	122	127	131	136	140	144	149	153	157	162	166	171	175	179	184
70	126	131	135	140	144	149	153	158	162	167	171	176	180	185	189
66	130	135	139	144	149	153	158	163	167	172	177	181	186	191	195
62	135	140	144	149	154	159	164	168	173	178	183	188	193	197	202
58	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210
54	145	151	156	161	166	172	177	182	187	193	198	203	208	210	210
50	152	157	163	168	174	179	185	190	196	201	207	210	210	210	210
46	159	165	170	176	182	188	194	200	205	210	210	210	210	210	210
42	167	173	180	186	192	198	204	210	210	210	210	210	210	210	210

Increase VMBE by 1 knot per 1% uphill runway slope. Decrease VMBE by 4 knots per 1% downhill runway slope.

Increase VMBE by 2 knots per 10 knots headwind. Decrease VMBE by 19 knots per 10 knots tailwind.

Decrease brake release weight by 500 kg for each knot V1 exceeds VMBE.

Determine normal V1, VR, V2 speeds for lower brake release weight.

Intentionally
Blank

Performance Dispatch

Chapter PD

Enroute

Section 31

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	32000	-8	33600*	33600*	33500	31900	30400
80	33300	-11	35100*	35100*	34800	33200	31800
75	34700	-14	36500*	36500*	36200	34600	33100
70	36100	-17	37900*	37900*	37600	36100	34600
65	37700	-17	39300*	39300*	39100	37600	36200
60	39300	-17	40800*	40800*	40800	39300	37800
55	41000	-17	41000	41000	41000	41000	39600
50	41000	-17	41000	41000	41000	41000	41000
45	41000	-17	41000	41000	41000	41000	41000
40	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	32000	-3	32100*	32100*	32100*	31900	30400
80	33300	-6	34100*	34100*	34100*	33200	31800
75	34700	-9	35700*	35700*	35700*	34600	33100
70	36100	-12	37200*	37200*	37200*	36100	34600
65	37700	-12	38500*	38500*	38500*	37600	36200
60	39300	-12	40000*	40000*	40000*	39300	37800
55	41000	-12	41000	41000	41000	41000	39600
50	41000	-12	41000	41000	41000	41000	41000
45	41000	-12	41000	41000	41000	41000	41000
40	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	32000	3	24500*	24500*	24500*	24500*	24500*
80	33300	0	25000*	25000*	25000*	25000*	25000*
75	34700	-3	33300*	33300*	33300*	33300*	33100
70	36100	-6	35700*	35700*	35700*	35700*	34600
65	37700	-6	37200*	37200*	37200*	37200*	36200
60	39300	-6	38500*	38500*	38500*	38500*	37800
55	41000	-6	40000*	40000*	40000*	40000*	39600
50	41000	-6	41000	41000	41000	41000	41000
45	41000	-6	41000	41000	41000	41000	41000
40	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
271	253	237	223	211	200	191	182	174	167	161
526	495	467	442	420	400	383	367	352	339	326
782	738	697	662	629	600	575	552	530	510	491
1038	980	928	881	839	800	767	736	707	681	657
1294	1223	1158	1100	1048	1000	959	920	885	852	822
1550	1465	1388	1319	1257	1200	1151	1105	1062	1023	987
1806	1708	1618	1538	1466	1400	1343	1289	1240	1194	1153
2061	1950	1848	1758	1676	1600	1535	1474	1417	1366	1318
2317	2193	2079	1977	1885	1800	1727	1658	1595	1537	1484
2573	2435	2309	2196	2094	2000	1919	1843	1773	1708	1649
2829	2678	2539	2415	2303	2200	2111	2027	1950	1879	1814
3084	2920	2769	2635	2512	2400	2302	2212	2128	2050	1980
3340	3163	3000	2854	2722	2600	2494	2396	2305	2222	2145
3596	3405	3230	3073	2931	2800	2687	2581	2483	2393	2311
3852	3648	3460	3292	3140	3000	2879	2765	2661	2564	2476
4108	3890	3690	3512	3349	3200	3071	2950	2838	2735	2641
4364	4133	3921	3731	3559	3400	3263	3135	3016	2907	2806
4620	4375	4151	3950	3768	3600	3455	3320	3194	3078	2971
4876	4618	4381	4169	3977	3800	3647	3504	3372	3249	3137
5132	4860	4611	4388	4186	4000	3839	3689	3550	3420	3302
5388	5103	4841	4607	4395	4200	4031	3874	3727	3592	3467
5643	5345	5072	4827	4605	4400	4223	4058	3905	3763	3633
5899	5588	5302	5046	4814	4600	4415	4243	4082	3934	3798
6155	5830	5532	5265	5023	4800	4607	4427	4260	4105	3964
6411	6073	5763	5485	5232	5000	4799	4612	4438	4277	4129
6667	6315	5993	5704	5442	5200	4991	4796	4615	4448	4294
6923	6558	6223	5923	5651	5400	5183	4981	4793	4619	4460
7179	6801	6454	6142	5860	5600	5375	5165	4970	4790	4625
7435	7043	6684	6362	6069	5800	5567	5350	5148	4961	4790
7691	7286	6914	6581	6279	6000	5759	5534	5325	5132	4955

.80M Trip Fuel and Time**Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.6	0:36	1.5	0:36	1.5	0:36	1.5	0:36	1.5	0:36
400	2.8	1:01	2.7	1:02	2.6	1:02	2.5	1:02	2.5	1:03
600	4.0	1:27	3.8	1:27	3.7	1:28	3.5	1:29	3.4	1:29
800	5.2	1:52	4.9	1:53	4.7	1:54	4.5	1:55	4.4	1:55
1000	6.4	2:18	6.1	2:19	5.8	2:20	5.6	2:21	5.3	2:21
1200	7.6	2:43	7.2	2:44	6.9	2:46	6.6	2:47	6.3	2:47
1400	8.9	3:09	8.4	3:10	8.0	3:12	7.6	3:13	7.3	3:14
1600	10.1	3:34	9.6	3:36	9.1	3:37	8.6	3:39	8.3	3:40
1800	11.3	3:59	10.7	4:01	10.2	4:03	9.7	4:05	9.3	4:06
2000	12.5	4:25	11.9	4:27	11.3	4:29	10.7	4:31	10.3	4:32
2200	13.8	4:50	13.1	4:53	12.4	4:55	11.8	4:57	11.3	4:59
2400	15.1	5:16	14.3	5:18	13.5	5:21	12.8	5:23	12.3	5:25
2600	16.3	5:41	15.4	5:44	14.6	5:47	13.9	5:50	13.4	5:51
2800	17.6	6:07	16.6	6:10	15.7	6:13	15.0	6:16	14.4	6:17
3000	18.8	6:32	17.8	6:35	16.9	6:39	16.0	6:42	15.4	6:43
3200	20.1	6:58	19.0	7:01	18.0	7:04	17.2	7:08	16.5	7:10
3400	21.4	7:23	20.3	7:27	19.2	7:30	18.3	7:34	17.6	7:36
3600	22.7	7:48	21.5	7:52	20.4	7:56	19.4	8:00	18.7	8:02
3800	24.0	8:14	22.7	8:18	21.5	8:22	20.5	8:26	19.8	8:28
4000	25.3	8:39	23.9	8:44	22.7	8:48	21.6	8:52	20.9	8:55
4200	26.6	9:05	25.2	9:09	23.9	9:14	22.8	9:18	22.1	9:21
4400	27.9	9:30	26.5	9:35	25.1	9:40	24.0	9:44	23.2	9:47
4600	29.3	9:56	27.7	10:01	26.3	10:06	25.2	10:11	24.4	10:13
4800	30.6	10:21	29.0	10:26	27.6	10:31	26.4	10:37	25.6	10:40
5000	31.9	10:47	30.3	10:52	28.8	10:57	27.5	11:03	26.8	11:06
5200	33.3	11:12	31.6	11:18	30.1	11:23	28.8	11:29		
5400	34.7	11:38	32.9	11:43	31.3	11:49	30.1	11:55		
5600	36.1	12:03	34.3	12:09	32.6	12:15	31.4	12:21		
5800	37.5	12:28	35.6	12:35	33.9	12:41	32.7	12:47		
6000	38.9	12:54	36.9	13:00	35.2	13:07	33.9	13:14		

.80M Trip Fuel and Time
Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	LANDING WEIGHT (1000 KG)						
	40	45	50	55	60	65	70
2	-0.1	0.0	0.0	0.1	0.2	0.3	0.4
4	-0.1	0.0	0.0	0.2	0.4	0.6	0.9
6	-0.1	-0.1	0.0	0.3	0.6	1.0	1.5
8	-0.1	-0.1	0.0	0.3	0.8	1.4	2.3
10	-0.1	-0.1	0.0	0.5	1.0	1.8	3.2
12	-0.2	-0.1	0.0	0.6	1.3	2.4	4.2
14	-0.2	-0.1	0.0	0.7	1.7	3.0	5.3
16	-0.2	-0.1	0.0	0.9	2.0	3.6	6.6
18	-0.3	-0.2	0.0	1.1	2.4	4.4	8.0
20	-0.3	-0.2	0.0	1.3	2.8	5.1	9.5
22	-0.3	-0.2	0.0	1.5	3.3	6.0	11.2
24	-0.4	-0.2	0.0	1.7	3.8	6.9	13.0
26	-0.5	-0.3	0.0	1.9	4.4	7.9	14.9
28	-0.5	-0.3	0.0	2.2	5.0	8.9	16.9
30	-0.6	-0.3	0.0	2.5	5.6	10.1	19.1
32	-0.6	-0.4	0.0	2.8	6.2	11.2	21.4
34	-0.7	-0.4	0.0	3.1	6.9	12.5	23.9
36	-0.8	-0.4	0.0	3.4	7.7	13.8	26.4

Based on 280/.80M climb, .80M cruise and .80/280/250 descent.

.80M Step Climb

Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
1309	1233	1165	1104	1050	1000	955	914	876	841	809
1821	1718	1625	1543	1468	1400	1338	1281	1229	1181	1137
2333	2202	2086	1981	1886	1800	1721	1649	1583	1522	1465
2844	2687	2546	2419	2304	2200	2105	2017	1937	1863	1794
3355	3171	3006	2857	2723	2600	2488	2385	2291	2203	2122
3866	3655	3466	3295	3141	3000	2871	2753	2645	2544	2451
4376	4138	3925	3733	3559	3400	3255	3122	2999	2885	2780
4886	4622	4385	4171	3977	3800	3638	3490	3353	3226	3109
5396	5106	4844	4609	4395	4200	4022	3858	3707	3567	3438
5907	5589	5304	5047	4813	4600	4405	4226	4061	3908	3767
6417	6073	5763	5484	5231	5000	4789	4594	4415	4249	4096
6927	6556	6223	5922	5649	5400	5172	4962	4769	4590	4425
7437	7040	6683	6360	6067	5800	5555	5331	5123	4931	4754
7948	7524	7143	6798	6485	6200	5939	5699	5477	5272	5082
8459	8008	7602	7236	6903	6600	6322	6067	5831	5613	5411
8970	8492	8063	7674	7322	7000	6705	6435	6185	5954	5739

Trip Fuel and Time Required

AIR DIST (NM)	TRIP FUEL (1000 KG)							TIME (HRS:MIN)
	LANDING WEIGHT (1000 KG)							
	40	45	50	55	60	65	70	
1000	4.8	5.0	5.2	5.5	5.8	6.3	6.6	2:22
1400	6.5	6.7	7.1	7.5	8.0	8.6	9.0	3:14
1800	8.2	8.6	9.0	9.5	10.3	10.9	11.5	4:07
2200	10.0	10.4	11.0	11.7	12.5	13.4	14.1	4:59
2600	11.8	12.3	13.0	13.9	14.9	15.9	16.8	5:51
3000	13.6	14.2	15.0	16.1	17.3	18.5	19.6	6:43
3400	15.5	16.2	17.2	18.4	19.7	21.1	22.4	7:35
3800	17.3	18.2	19.4	20.8	22.3	23.9	25.3	8:27
4200	19.3	20.3	21.7	23.2	24.9	26.7	28.3	9:19
4600	21.2	22.5	24.0	25.7	27.6	29.6	31.4	10:11
5000	23.2	24.7	26.4	28.3	30.4	32.5	34.6	11:02
5400	25.3	26.9	28.8	31.0	33.3	35.6		11:54
5800	27.5	29.2	31.3	33.7	36.2			12:46
6200	29.7	31.6	33.9	36.5				13:38
6600	32.0	34.1	36.6					14:30
7000	34.3	36.6						15:23

Based on 280/.80 climb, .80M cruise and .80/280/250 descent.

Valid for all pressure altitudes with 4000 ft step climb to 2000 ft above optimum altitude.

Short Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
93	80	69	61	55	50	46	42	39	36	34
161	143	129	118	108	100	93	87	81	77	73
227	206	188	174	161	150	140	132	125	118	112
291	267	246	229	213	200	188	178	168	160	152
355	327	304	283	266	250	236	224	212	202	193
417	387	361	338	318	300	284	270	257	245	234
480	447	418	392	370	350	332	316	301	288	276
543	507	475	447	422	400	380	362	345	330	317
607	567	533	502	475	450	428	408	390	373	358
673	629	591	557	527	500	476	453	433	415	398

Trip Fuel and Time Required

AIR DIST (NM)		LANDING WEIGHT (1000 KG)							TIME (HRS:MIN)
		40	45	50	55	60	65	70	
50	FUEL (1000 KG)	0.5	0.6	0.6	0.6	0.7	0.7	0.7	0:14
	ALT (FT)	12000	12000	11000	8000	8000	10000	8000	
100	FUEL (1000 KG)	0.8	0.9	0.9	1.0	1.0	1.1	1.1	0:23
	ALT (FT)	18000	17000	16000	15000	15000	15000	16000	
150	FUEL (1000 KG)	1.1	1.2	1.2	1.3	1.3	1.4	1.5	0:31
	ALT (FT)	25000	24000	24000	23000	23000	22000	21000	
200	FUEL (1000 KG)	1.3	1.4	1.5	1.6	1.6	1.7	1.8	0:38
	ALT (FT)	31000	29000	27000	26000	26000	25000	24000	
250	FUEL (1000 KG)	1.5	1.6	1.7	1.8	1.9	2.0	2.1	0:44
	ALT (FT)	39000	37000	35000	31000	31000	31000	29000	
300	FUEL (1000 KG)	1.7	1.8	2.0	2.1	2.2	2.3	2.4	0:51
	ALT (FT)	41000	41000	39000	37000	35000	35000	33000	
350	FUEL (1000 KG)	1.9	2.0	2.2	2.3	2.4	2.6	2.7	0:57
	ALT (FT)	41000	41000	39000	39000	37000	35000	35000	
400	FUEL (1000 KG)	2.1	2.2	2.4	2.5	2.7	2.8	3.0	1:03
	ALT (FT)	41000	41000	41000	39000	39000	37000	35000	
450	FUEL (1000 KG)	2.3	2.5	2.6	2.8	2.9	3.1	3.3	1:10
	ALT (FT)	41000	41000	41000	41000	39000	37000	35000	
500	FUEL (1000 KG)	2.5	2.7	2.8	3.0	3.2	3.4	3.5	1:17
	ALT (FT)	41000	41000	41000	41000	39000	37000	35000	

Based on .280/.78 climb, Long Range Cruise and .78/280/250 descent.

Holding Planning
Flaps Up

WEIGHT (1000 KG)	TOTAL FUEL FLOW (KG/HR)								
	PRESSURE ALTITUDE (FT)								
	1500	5000	10000	15000	20000	25000	30000	35000	41000
85	3000	2950	2920	2900	2850	2860	2910		
80	2840	2790	2760	2740	2680	2680	2720		
75	2680	2630	2600	2570	2520	2500	2540		
70	2520	2470	2440	2410	2360	2320	2360	2400	
65	2370	2320	2280	2240	2210	2150	2190	2220	
60	2210	2160	2120	2080	2050	1990	2010	2030	
55	2060	2000	1960	1920	1890	1840	1840	1860	1970
50	1910	1850	1800	1770	1730	1720	1700	1710	1790
45	1750	1700	1680	1640	1600	1570	1540	1540	1600
40	1640	1580	1530	1480	1450	1420	1400	1370	1420

This table includes 5% additional fuel for holding in a racetrack pattern.

Flight Crew Oxygen Requirements
Required Pressure (PSI) for 76 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	735	1055	1360
45	113	725	1040	1340
40	104	715	1020	1320
35	95	700	1005	1300
30	86	690	990	1280
25	77	680	975	1255
20	68	670	960	1240
15	59	655	940	1215
10	50	645	925	1195
5	41	635	910	1175
0	32	620	890	1150
-5	23	610	875	1130
-10	14	600	860	1110

Required Pressure (PSI) for 114/115 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	530	735	945
45	113	520	725	930
40	104	510	715	915
35	95	505	700	900
30	86	495	690	885
25	77	485	680	870
20	68	480	670	860
15	59	470	655	840
10	50	460	645	830
5	41	455	635	815
0	32	445	620	800
-5	23	440	610	785
-10	14	430	600	770

ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 KG)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	44.3	42.9	41.4
28	47.9	46.3	44.7
26	51.7	49.9	48.3
24	56.0	54.1	52.2
22	61.0	58.8	56.7
20	66.3	63.9	61.4
18	71.2	68.5	65.6
16	76.0	73.3	70.3
14	80.4	77.7	75.1
12	85.1	82.1	78.9

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 KG)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-2.0	-1.9	-1.8	-1.8	-1.6	-1.5	-1.4	-1.3	-1.2
ENGINE & WING	-7.8	-7.3	-6.8	-6.8	-6.6	-6.0	-5.4	-5.0	

ALL ENGINES**Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
288	264	245	228	213	200	189	178	169	161	153
592	540	497	460	428	400	376	354	335	318	302
896	816	748	691	642	600	563	530	501	475	451
1201	1091	1000	923	857	800	750	706	667	631	600
1505	1367	1252	1155	1072	1000	937	882	832	788	749
1810	1643	1504	1387	1287	1200	1124	1057	998	945	898
2115	1919	1756	1619	1501	1400	1311	1233	1164	1102	1046
2419	2195	2008	1851	1716	1600	1499	1409	1330	1259	1195
2724	2470	2260	2083	1931	1800	1686	1585	1496	1416	1344

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)							
	45	50	55	60	65	70	75	80
200	1.6	1.7	1.7	1.8	1.9	1.9	2.0	2.1
300	2.3	2.4	2.5	2.6	2.7	2.7	2.8	2.9
400	3.0	3.1	3.3	3.4	3.5	3.6	3.7	3.8
500	3.7	3.9	4.0	4.2	4.3	4.4	4.6	4.7
600	4.5	4.6	4.8	4.9	5.1	5.2	5.4	5.6
700	5.2	5.3	5.5	5.7	5.9	6.1	6.3	6.5
800	5.9	6.1	6.3	6.5	6.7	6.9	7.1	7.3
900	6.6	6.8	7.0	7.2	7.5	7.7	7.9	8.2
1000	7.3	7.5	7.7	8.0	8.3	8.5	8.7	9.0
1100	8.0	8.2	8.5	8.7	9.0	9.3	9.6	9.9
1200	8.6	8.9	9.2	9.5	9.8	10.1	10.4	10.7
1300	9.3	9.6	9.9	10.3	10.6	10.9	11.2	11.6
1400	10.0	10.3	10.7	11.0	11.3	11.7	12.0	12.4
1500	10.7	11.0	11.4	11.7	12.1	12.5	12.8	13.2
1600	11.4	11.7	12.1	12.5	12.9	13.3	13.7	14.1
1700	12.1	12.4	12.8	13.2	13.6	14.0	14.5	14.9
1800	12.8	13.1	13.5	14.0	14.4	14.8	15.3	15.7

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.5% per 10°C above ISA.

-When icing conditions are forecast, use the greater of engine and wing anti-ice on (9%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP

MAX CONTINUOUS THRUST

**Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
292	267	246	229	213	200	188	178	168	160	152
598	544	499	461	428	400	375	353	334	316	301
904	821	752	693	643	600	562	529	499	473	449
1210	1098	1004	925	858	800	749	704	665	629	597
1516	1374	1257	1158	1073	1000	936	880	830	786	746
1823	1651	1509	1390	1288	1200	1123	1056	996	942	894
2129	1928	1762	1622	1503	1400	1310	1231	1161	1099	1043
2435	2205	2015	1854	1718	1600	1497	1407	1327	1255	1191
2742	2482	2267	2087	1933	1800	1684	1583	1492	1412	1340

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)							
	45	50	55	60	65	70	75	80
200	1.4	1.5	1.5	1.6	1.7	1.7	1.8	1.9
300	2.0	2.1	2.2	2.3	2.4	2.5	2.6	2.7
400	2.7	2.8	2.9	3.0	3.2	3.3	3.4	3.5
500	3.3	3.4	3.6	3.8	3.9	4.1	4.2	4.4
600	3.9	4.1	4.3	4.5	4.6	4.8	5.0	5.2
700	4.6	4.8	5.0	5.2	5.4	5.6	5.8	6.0
800	5.2	5.4	5.7	5.9	6.1	6.4	6.6	6.8
900	5.8	6.1	6.3	6.6	6.8	7.1	7.4	7.6
1000	6.4	6.7	7.0	7.3	7.5	7.8	8.1	8.4
1100	7.0	7.3	7.6	8.0	8.3	8.6	8.9	9.2
1200	7.6	7.9	8.3	8.6	9.0	9.3	9.7	10.0
1300	8.2	8.6	9.0	9.3	9.7	10.1	10.4	10.8
1400	8.8	9.2	9.6	10.0	10.4	10.8	11.2	11.6
1500	9.4	9.8	10.3	10.7	11.1	11.5	11.9	12.4
1600	10.0	10.5	10.9	11.4	11.8	12.2	12.7	13.1
1700	10.6	11.1	11.5	12.0	12.5	13.0	13.4	13.9
1800	11.2	11.7	12.2	12.7	13.2	13.7	14.2	14.7

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.5% per 10°C above ISA.
- When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
263	247	233	221	210	200	190	182	174	167	161
529	497	468	443	420	400	381	364	348	334	321
796	747	704	665	631	600	571	546	522	500	481
1065	999	940	888	841	800	761	727	695	666	640
1335	1251	1177	1111	1052	1000	952	908	869	832	799
1605	1503	1414	1334	1263	1200	1142	1089	1042	998	958
1874	1755	1650	1557	1474	1400	1332	1271	1215	1164	1117
2143	2007	1887	1780	1685	1600	1522	1452	1388	1330	1276
2411	2257	2122	2003	1896	1800	1713	1634	1562	1496	1436

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)							
	45	50	55	60	65	70	75	80
200	1.5	1.5	1.6	1.6	1.7	1.7	1.8	1.9
300	1.9	2.0	2.1	2.2	2.3	2.4	2.5	2.6
400	2.4	2.5	2.6	2.8	2.9	3.0	3.2	3.4
500	2.8	3.0	3.2	3.4	3.5	3.7	3.9	4.1
600	3.3	3.5	3.7	3.9	4.2	4.4	4.6	4.9
700	3.7	4.0	4.2	4.5	4.8	5.0	5.3	5.6
800	4.2	4.5	4.8	5.1	5.4	5.6	6.0	6.3
900	4.6	4.9	5.3	5.6	6.0	6.3	6.7	7.0
1000	5.0	5.4	5.8	6.2	6.6	6.9	7.3	7.7
1100	5.5	5.9	6.3	6.7	7.1	7.5	8.0	8.4
1200	5.9	6.3	6.8	7.3	7.7	8.2	8.7	9.1
1300	6.3	6.8	7.3	7.8	8.3	8.8	9.3	9.8
1400	6.7	7.3	7.8	8.3	8.9	9.4	10.0	10.5
1500	7.1	7.7	8.3	8.8	9.4	10.0	10.6	11.2
1600	7.5	8.1	8.8	9.4	10.0	10.6	11.3	11.9
1700	7.9	8.6	9.2	9.9	10.6	11.2	11.9	12.6
1800	8.3	9.0	9.7	10.4	11.1	11.8	12.5	13.2

Based on: Driftdown to and cruise at level off altitude, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.5% per 10°C above ISA.

-When icing conditions are forecast, use the greater of the engine and wing anti-ice on (10%) for the total forecast time or engine and wing anti-ice on and ice drag (30%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

Intentionally
Blank

Performance Dispatch Landing

Chapter PD Section 32

Landing Field Limit Weight - Dry Runway

Flaps 40

Based on anti-skid operative and automatic speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200			1090	1200	1270	1350	1420	1500
1400	1060	1160	1270	1400	1480	1560	1640	1720
1600	1240	1340	1460	1600	1680	1770	1850	1940
1800	1420	1520	1650	1800	1890	1980	2070	2170
2000	1600	1710	1840	2000	2090	2190	2290	2390
2200	1770	1890	2030	2200	2300	2400	2500	2610
2400	1950	2070	2220	2400	2500	2610	2720	2830
2600	2110	2250	2380	2600	2710	2820	2930	3050
2800	2210	2350	2530	2800	2910	3030	3150	3280
3000	2300	2450	2680	3000	3120	3240	3360	3500
3200	2390	2540	2840	3200	3320	3450	3580	
3400	2480	2630	2990	3400	3530			
3600	2570	2730	3140	3600				
3800	2660	2820	3290					
4000	2750	2910	3450					
4200	2850	3000	3600					
4400	2940	3100						
4600	3030	3190						
4800	3120	3280						
5000	3210	3380						

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
1200	46.2	43.6	41.1	38.7		
1400	56.0	53.2	50.2	47.3	44.5	41.8
1600	64.0	61.1	58.3	55.6	52.7	49.5
1800	72.7	69.0	65.5	62.5	59.5	56.7
2000	81.8	77.5	73.5	69.7	66.0	62.8
2200		85.6	81.6	77.3	73.2	69.2
2400			88.1	84.8	80.4	75.9
2600					85.9	81.9
2800						85.3

Decrease field limit weight by 4350 kg when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway
Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1350	1470	1650	1770
1400			1170	1400	1560	1680	1860	1990
1600		1130	1370	1600	1760	1890	2070	2210
1800	1080	1320	1560	1800	1960	2100	2290	2430
2000	1260	1500	1750	2000	2170	2310	2500	2650
2200	1440	1690	1950	2200	2370	2520	2710	2870
2400	1620	1880	2140	2400	2570	2730	2920	3090
2600	1800	2060	2330	2600	2780	2940	3130	3310
2800	1980	2250	2520	2800	2980	3150	3340	3530
3000	2160	2440	2720	3000	3180	3360	3550	3750
3200	2340	2620	2910	3200	3390	3580	3760	3970
3400	2520	2810	3100	3400	3590	3790	3970	4190
3600	2700	3000	3300	3600	3790	4000	4180	4410
3800	2890	3180	3490	3800	4000	4210	4400	4630
4000	3070	3370	3680	4000	4200	4420	4610	4850
4200	3250	3560	3870	4200	4400	4630	4820	5070
4400	3430	3750	4070	4400	4610	4840	5030	5290
4600	3610	3930	4260	4600	4810	5050	5240	5510
4800	3790	4120	4450	4800	5020	5260	5450	5730
5000	3970	4310	4650	5000	5220	5470	5660	5950

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
2200	41.8	39.1				
2400	46.6	43.7	40.3			
2600	51.4	48.2	44.7	41.8	39.1	
2800	56.2	52.8	49.0	45.9	43.0	40.0
3000	60.9	57.3	53.3	50.0	46.8	43.7
3200	65.8	61.8	57.6	54.1	50.7	47.4
3400	71.2	66.5	61.9	58.2	54.6	51.1
3600	76.6	71.6	66.3	62.3	58.4	54.7
3800	82.2	76.8	71.2	66.5	62.3	58.4
4000	87.8	82.1	76.1	71.1	66.2	62.0
4200		87.4	81.1	75.7	70.6	65.7
4400			86.1	80.4	74.9	69.8
4600				85.1	79.4	73.9
4800					83.8	77.9
5000						82.0
5200						86.0

Landing Field Limit Weight - Dry Runway - High Altitudes**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	1020	1040	1090	1200	1260	1310	1380	1460
1400	1150	1190	1260	1400	1460	1520	1600	1680
1600	1270	1340	1430	1600	1660	1730	1810	1900
1800	1400	1490	1610	1800	1870	1940	2030	2120
2000	1530	1640	1780	2000	2070	2150	2240	2340
2200	1650	1790	1950	2200	2270	2360	2460	2560
2400	1780	1940	2130	2400	2480	2570	2670	2780
2600	1900	2080	2300	2600	2680	2780	2890	3000
2800	2030	2230	2470	2800	2880	2990	3110	3220
3000	2150	2380	2640	3000	3090	3200	3320	3440
3200	2280	2530	2820	3200	3290	3410	3540	3660
3400	2410	2680	2990	3400	3490	3620	3750	3880
3600	2530	2830	3160	3600	3700	3830	3970	4100
3800	2660	2980	3330	3800	3900	4040	4180	4320
4000	2780	3120	3510	4000	4100	4250	4400	4540
4200	2910	3270	3680	4200	4310	4460	4610	4760
4400	3030	3420	3850	4400	4510	4660		
4600	3160	3570	4020	4600	4710			
4800	3290	3720	4200	4800				
5000	3410	3870	4370					

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
1400	41.8	40.5	39.2			
1600	49.5	48.0	46.5	45.0	43.5	42.8
1800	56.7	55.3	53.8	52.1	50.4	49.6
2000	62.8	61.2	59.7	58.3	56.8	56.0
2200	69.2	67.3	65.5	63.8	62.2	61.4
2400	75.9	73.9	71.9	69.8	67.8	66.8
2600	82.6	80.2	78.0	75.8	73.7	72.6
2800	85.0	83.4	81.8	80.2	78.6	77.8
3000	87.3	85.5	83.9	82.3	80.6	79.8
3200		87.6	85.8	84.1	82.5	81.6
3400			87.7	85.9	84.2	83.3
3600				87.6	85.8	84.9
3800					87.3	86.4
4000						87.9

Decrease field limit weight by 3550 kg when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway - High Altitudes
Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1320	1480	1610	1780
1400			1170	1400	1530	1690	1830	2000
1600		1120	1360	1600	1730	1900	2040	2220
1800	1050	1300	1550	1800	1940	2110	2260	2440
2000	1240	1490	1750	2000	2150	2320	2470	2660
2200	1420	1680	1940	2200	2350	2530	2690	2880
2400	1600	1870	2130	2400	2560	2750	2900	3100
2600	1780	2050	2330	2600	2760	2960	3120	3320
2800	1960	2240	2520	2800	2970	3170	3330	3540
3000	2150	2430	2710	3000	3180	3380	3550	3760
3200	2330	2620	2910	3200	3380	3590	3760	3980
3400	2510	2800	3100	3400	3590	3800	3980	4200
3600	2690	2990	3290	3600	3790	4010	4190	4420
3800	2870	3180	3490	3800	4000	4230	4410	4640
4000	3060	3370	3680	4000	4210	4440	4630	4860
4200	3240	3550	3870	4200	4410	4650	4840	5080
4400	3420	3740	4070	4400	4620	4860	5060	5300
4600	3600	3930	4260	4600	4820	5070	5270	5520
4800	3780	4110	4450	4800	5030	5280	5490	5740
5000	3960	4300	4650	5000	5240	5500	5700	5960

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
2800	40.0	38.8				
3000	43.7	42.4	41.1	39.8	38.5	
3200	47.4	46.0	44.6	43.2	41.8	41.1
3400	51.1	49.5	48.0	46.5	45.0	44.3
3600	54.7	53.1	51.5	49.9	48.3	47.5
3800	58.4	56.6	54.9	53.2	51.6	50.7
4000	62.0	60.2	58.3	56.6	54.8	53.9
4200	65.7	63.7	61.8	59.9	58.0	57.0
4400	69.8	67.4	65.2	63.2	61.2	60.2
4600	73.9	71.4	69.0	66.7	64.4	63.3
4800	77.9	75.3	72.9	70.4	67.9	66.6
5000	82.0	79.2	76.6	74.1	71.5	70.1
5200	86.0	83.0	80.3	77.6	74.9	73.6
5400		86.9	83.9	81.1	78.3	76.9
5600			87.6	84.6	81.7	80.2
5800				88.1	85.0	83.5
6000						86.8

Landing Field Limit Weight - Wet Runway**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1280	1360	1440	1530
1400			1270	1400	1480	1570	1660	1750
1600	1220	1330	1460	1600	1690	1780	1870	1970
1800	1390	1510	1640	1800	1890	1990	2090	2190
2000	1570	1690	1830	2000	2100	2200	2300	2410
2200	1750	1870	2020	2200	2300	2410	2520	2630
2400	1920	2050	2210	2400	2510	2620	2740	2860
2600	2100	2230	2400	2600	2710	2830	2950	3080
2800	2280	2420	2590	2800	2920	3040	3170	3300
3000	2440	2600	2740	3000	3120	3250	3380	3520
3200	2530	2700	2900	3200	3330	3460	3600	3740
3400	2620	2790	3050	3400	3530	3670	3820	3970
3600	2710	2880	3200	3600	3740	3880	4030	
3800	2800	2980	3350	3800	3940	4090		
4000	2890	3070	3510	4000				
4200	2980	3160	3660					
4400	3080	3250	3810					
4600	3170	3350	3960					
4800	3260	3440	4120					
5000	3350	3530						

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
1200	38.4					
1400	47.1	44.5	41.9	39.5		
1600	55.6	52.8	49.8	46.9	44.1	41.5
1800	62.6	59.8	57.1	54.4	51.2	48.2
2000	70.0	66.5	63.3	60.4	57.6	54.8
2200	77.8	73.8	70.0	66.4	63.2	60.1
2400	85.3	81.3	77.0	73.0	69.1	65.4
2600		87.5	84.0	79.6	75.4	71.3
2800				85.7	81.6	77.1
3000					86.0	82.1
3200						85.0
3400						88.0

Decrease field limit weight by 4350 kg when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway

Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1370	1500	1710	1840
1400				1400	1580	1710	1920	2060
1600			1340	1600	1780	1920	2130	2280
1800		1260	1530	1800	1980	2130	2340	2500
2000	1180	1450	1730	2000	2190	2340	2550	2720
2200	1360	1640	1920	2200	2390	2550	2760	2940
2400	1540	1820	2110	2400	2590	2760	2980	3160
2600	1720	2010	2310	2600	2800	2970	3190	3380
2800	1900	2200	2500	2800	3000	3180	3400	3600
3000	2080	2380	2690	3000	3200	3390	3610	3820
3200	2260	2570	2880	3200	3410	3610	3820	4040
3400	2440	2760	3080	3400	3610	3820	4030	4260
3600	2620	2940	3270	3600	3810	4030	4240	4480
3800	2800	3130	3460	3800	4020	4240	4450	4700
4000	2980	3320	3660	4000	4220	4450	4660	4920
4200	3160	3500	3850	4200	4420	4660	4880	5140
4400	3350	3690	4040	4400	4630	4870	5090	5360
4600	3530	3880	4230	4600	4830	5080	5300	5580
4800	3710	4060	4430	4800	5040	5290	5510	5800
5000	3890	4250	4620	5000	5240	5500	5720	6020

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
2400	39.0					
2600	43.2	40.5				
2800	47.4	44.5	41.1	38.4		
3000	51.6	48.4	44.9	42.0	39.2	
3200	55.7	52.4	48.6	45.6	42.6	39.7
3400	59.9	56.3	52.4	49.2	46.0	42.9
3600	64.1	60.3	56.2	52.7	49.4	46.1
3800	68.6	64.2	59.9	56.3	52.7	49.3
4000	73.3	68.5	63.6	59.8	56.1	52.5
4200	78.1	73.0	67.6	63.3	59.4	55.7
4400	82.9	77.5	71.9	67.0	62.8	58.8
4600	87.8	82.1	76.1	71.1	66.2	62.0
4800		86.7	80.5	75.1	70.0	65.2
5000			84.8	79.2	73.8	68.7
5200				83.3	77.6	72.3
5400				87.4	81.5	75.8
5600					85.4	79.3
5800						82.8
6000						86.4

Landing Field Limit Weight - Wet Runway - High Altitudes**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1260	1320	1390	1480
1400	1190	1210	1270	1400	1470	1530	1610	1700
1600	1310	1360	1440	1600	1670	1740	1820	1920
1800	1440	1510	1620	1800	1870	1950	2040	2140
2000	1570	1660	1790	2000	2080	2160	2260	2360
2200	1690	1810	1960	2200	2280	2370	2470	2580
2400	1820	1960	2130	2400	2480	2580	2690	2800
2600	1940	2110	2310	2600	2690	2790	2900	3020
2800	2070	2260	2480	2800	2890	3000	3120	3240
3000	2190	2400	2650	3000	3090	3210	3330	3460
3200	2320	2550	2820	3200	3300	3420	3550	3680
3400	2450	2700	3000	3400	3500	3630	3760	3900
3600	2570	2850	3170	3600	3700	3830	3980	4120
3800	2700	3000	3340	3800	3900	4040	4200	4340
4000	2820	3150	3510	4000	4110	4250	4410	4560
4200	2950	3300	3690	4200	4310	4460	4630	4780
4400	3070	3440	3860	4400	4510	4670	4840	5000
4600	3200	3590	4030	4600	4720	4880	5060	5220
4800	3330	3740	4200	4800	4920	5090	5270	5440
5000	3450	3890	4380	5000	5120	5300	5490	

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
1600	41.5	40.1	38.8			
1800	48.2	46.7	45.2	43.7	42.3	41.6
2000	54.8	53.2	51.6	49.9	48.3	47.5
2200	60.1	58.7	57.2	55.8	54.3	53.4
2400	65.5	63.8	62.2	60.7	59.1	58.3
2600	71.3	69.3	67.4	65.5	63.8	63.0
2800	77.1	75.0	72.9	70.9	68.8	67.8
3000	82.7	80.4	78.2	76.1	73.9	72.8
3200	84.8	83.2	81.6	80.0	78.3	77.4
3400	86.8	85.1	83.4	81.8	80.2	79.4
3600		86.9	85.2	83.5	81.8	81.0
3800			86.8	85.1	83.4	82.5
4000				86.6	84.8	83.9
4200				88.0	86.2	85.3
4400					87.5	86.6
4600						87.9

Decrease field limit weight by 3550 kg when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway - High Altitudes
Flaps 40

Based on anti-skid inoperative and manual speedbrakes

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1330	1510	1660	1850
1400				1400	1540	1720	1870	2070
1600			1330	1600	1750	1930	2090	2290
1800		1250	1520	1800	1950	2140	2310	2510
2000		1430	1720	2000	2160	2350	2520	2730
2200	1330	1620	1910	2200	2360	2570	2740	2950
2400	1510	1810	2100	2400	2570	2780	2950	3170
2600	1690	2000	2300	2600	2780	2990	3170	3390
2800	1880	2180	2490	2800	2980	3200	3380	3610
3000	2060	2370	2680	3000	3190	3410	3600	3830
3200	2240	2560	2880	3200	3390	3620	3810	4050
3400	2420	2750	3070	3400	3600	3830	4030	4270
3600	2600	2930	3260	3600	3810	4050	4240	4490
3800	2790	3120	3460	3800	4010	4260	4460	4710
4000	2970	3310	3650	4000	4220	4470	4670	4930
4200	3150	3500	3840	4200	4420	4680	4890	5150
4400	3330	3680	4040	4400	4630	4890	5100	5370
4600	3510	3870	4230	4600	4840	5100	5320	5590
4800	3700	4060	4430	4800	5040	5320	5530	5810
5000	3880	4240	4620	5000	5250	5530	5750	6030

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
3200	39.7	38.5				
3400	42.9	41.6	40.3	39.0		
3600	46.1	44.7	43.3	42.0	40.6	39.9
3800	49.3	47.8	46.4	44.9	43.5	42.7
4000	52.5	50.9	49.4	47.8	46.3	45.5
4200	55.7	54.0	52.4	50.8	49.2	48.3
4400	58.8	57.1	55.4	53.7	52.0	51.1
4600	62.0	60.2	58.3	56.6	54.8	53.9
4800	65.2	63.2	61.3	59.5	57.6	56.6
5000	68.7	66.4	64.3	62.3	60.4	59.4
5200	72.3	69.9	67.5	65.2	63.2	62.1
5400	75.8	73.3	70.9	68.5	66.0	64.8
5600	79.3	76.7	74.2	71.7	69.2	67.8
5800	82.8	80.0	77.4	74.9	72.3	70.9
6000	86.4	83.4	80.6	77.9	75.2	73.9
6200		86.7	83.8	81.0	78.2	76.7
6400			87.0	84.0	81.1	79.6
6600				87.0	84.0	82.5
6800					86.9	85.3

Landing Climb Limit Weight**Valid for approach with flaps 15 and landing with flaps 40****Based on engine bleed for packs on and anti-ice off**

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)												
		AIRPORT PRESSURE ALTITUDE (FT)												
°C	°F	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
54	129	68.6	66.6	64.5										
52	126	69.8	68.3	66.2	63.6									
50	122	71.1	69.6	67.9	65.2	62.6								
48	118	72.4	70.9	69.2	66.9	64.2	61.6							
46	115	73.9	72.3	70.5	68.1	65.8	63.2	60.6						
44	111	75.2	73.6	71.7	69.3	67.0	64.7	62.1	59.6					
42	108	76.5	74.9	73.0	70.5	68.2	65.8	63.6	61.0	58.3				
40	104	77.8	76.2	74.3	71.8	69.4	67.0	64.7	62.5	59.6	56.9			
38	100	79.1	77.5	75.6	73.1	70.6	68.2	65.8	63.6	60.9	58.0	55.5		
36	97	80.4	78.8	76.9	74.5	71.8	69.5	67.1	64.7	62.1	59.2	56.5	54.1	
34	93	81.6	80.1	78.3	75.8	73.2	70.7	68.3	65.8	63.1	60.3	57.4	55.2	52.7
32	90	81.7	81.4	79.7	77.0	74.5	71.8	69.4	66.8	64.1	61.3	58.5	56.2	53.8
30	86	81.8	81.5	81.1	78.2	75.6	72.8	70.2	67.8	65.1	62.3	59.5	57.1	54.8
28	82	81.9	81.6	81.2	79.3	76.6	73.7	71.1	68.4	66.0	63.2	60.4	58.1	55.7
26	79	82.0	81.7	81.2	79.4	77.5	74.5	71.8	69.1	66.5	64.1	61.3	58.8	56.6
24	75	82.1	81.7	81.3	79.5	77.6	75.2	72.4	69.6	67.0	64.5	62.1	59.6	57.2
22	72	82.1	81.8	81.4	79.5	77.6	75.3	72.9	70.2	67.5	65.0	62.6	60.2	57.7
20	68	82.2	81.9	81.4	79.6	77.7	75.3	72.9	70.7	68.0	65.4	63.0	60.6	58.2
18	64	82.3	81.9	81.5	79.6	77.7	75.4	73.0	70.7	68.5	65.9	63.4	61.0	58.6
16	61	82.3	82.0	81.6	79.7	77.8	75.4	73.0	70.8	68.5	66.3	63.8	61.4	59.0
14	57	82.4	82.1	81.6	79.7	77.8	75.4	73.1	70.8	68.6	66.3	64.2	61.7	59.4
12	54	82.5	82.1	81.7	79.8	77.9	75.5	73.1	70.8	68.6	66.4	64.2	62.1	59.7
10	50	82.5	82.2	81.7	79.8	77.9	75.5	73.1	70.9	68.6	66.4	64.2	62.1	60.0
-40	-40	83.2	82.9	82.3	80.4	78.5	76.0	73.7	71.4	69.1	65.9	64.6	62.6	60.6

With engine bleeds for packs off, increase weight by 1250 kg.

With engine anti-ice on, decrease weight by 250 kg.

With engine and wing anti-ice on, decrease weight by 1400 kg .

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 7350 kg.

Landing Climb Limit Weight - High Altitudes

Valid for approach with Flaps 15 and landing with Flaps 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	10000	11000	12000	13000	14000	14500
34	93	52.7					
32	90	53.8	51.5				
30	86	54.8	52.5	50.2			
28	82	55.7	53.4	51.1	49.0		
26	79	56.6	54.2	52.0	49.8	48.1	
24	75	57.2	54.9	52.7	50.5	48.6	47.6
22	72	57.7	55.4	53.3	51.1	49.0	48.0
20	68	58.2	55.9	53.7	51.6	49.4	48.4
18	64	58.6	56.3	54.1	52.0	49.8	48.8
16	61	59.0	56.7	54.5	52.3	50.1	49.1
14	57	59.4	57.0	54.8	52.6	50.4	49.4
12	54	59.7	57.4	55.2	53.0	50.7	49.7
10	50	60.0	57.7	55.5	53.3	51.1	50.0
-40	-40	60.6	59.2	57.6	55.7	53.8	52.8

With engine bleeds for packs off, increase weight by 1300 kg.

With engine anti-ice on, decrease weight by 1700 kg.

With engine and wing anti-ice on, decrease weight by 2650 kg .

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 5150 kg.

ENGINE INOP**ADVISORY INFORMATION****Go-Around Climb Gradient****Flaps 15****Based on engine bleed for packs on and anti-ice off**

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	2.91					
50	3.58	2.52				
46	4.09	3.17	2.12			
42	4.60	3.64	2.72	1.66		
38	5.12	4.11	3.16	2.18	1.09	
34	5.64	4.62	3.63	2.62	1.48	0.55
30	6.19	5.08	4.02	2.99	1.89	0.97
26	6.22	5.44	4.31	3.27	2.24	1.30
22	6.25	5.46	4.53	3.46	2.48	1.53
18	6.27	5.48	4.54	3.63	2.64	1.70
14	6.30	5.50	4.55	3.65	2.78	1.84
10	6.32	5.51	4.57	3.66	2.79	1.97
6	6.34	5.53	4.58	3.67	2.80	1.99
2	6.36	5.54	4.59	3.68	2.81	2.00

Gradient Adjustment for Weight (%)

WEIGHT (1000 KG)	REFERENCE GO-AROUND GRADIENT (%)							
	0	1	2	3	4	5	6	7
85	-2.90	-3.11	-3.43	-3.78	-4.09	-4.40	-4.72	-5.04
80	-2.43	-2.67	-2.95	-3.24	-3.51	-3.77	-4.05	-4.32
75	-1.93	-2.14	-2.37	-2.60	-2.81	-3.03	-3.25	-3.47
70	-1.38	-1.54	-1.70	-1.86	-2.02	-2.17	-2.33	-2.49
65	-0.75	-0.83	-0.92	-1.01	-1.09	-1.18	-1.26	-1.34
60	0	0	0	0	0	0	0	0
55	0.88	0.98	1.08	1.18	1.29	1.39	1.49	1.59
50	1.96	2.16	2.37	2.60	2.82	3.05	3.29	3.54
45	3.22	3.53	3.86	4.23	4.59	4.98	5.41	5.88
40	4.67	5.09	5.55	6.09	6.60	7.18	7.85	8.59

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)													
	0	1	2	3	4	5	6	7	8	9	10	11	12	13
VREF40	-0.17	-0.16	-0.17	-0.17	-0.18	-0.18	-0.19	-0.19	-0.19	-0.19	-0.19	-0.19	-0.19	-0.18
VREF40+5	0	0	0	0	0	0	0	0	0	0	0	0	0	0
VREF40+10	0.11	0.10	0.10	0.10	0.10	0.10	0.09	0.09	0.09	0.08	0.08	0.07	0.07	0.08
VREF40+15	0.18	0.16	0.14	0.13	0.12	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05
VREF40+20	0.20	0.16	0.13	0.11	0.09	0.07	0.06	0.04	0.03	0.01	-0.01	-0.03	-0.04	-0.05
VREF40+25	0.17	0.12	0.08	0.04	0.00	-0.03	-0.06	-0.08	-0.10	-0.13	-0.16	-0.19	-0.21	-0.23
VREF40+30	0.10	0.04	-0.02	-0.08	-0.13	-0.18	-0.22	-0.26	-0.29	-0.33	-0.36	-0.40	-0.44	-0.48

With engine bleed for packs off, increase gradient by 0.2%.**With engine anti-ice on, decrease gradient by 0.1%.****With engine and wing anti-ice on, decrease gradient by 0.3%.****When operating in icing conditions during any part of the flight with forecast landing temperatures below 10°C decrease gradient by 1.0%.**

ENGINE INOP

ADVISORY INFORMATION

Go-Around Climb Gradient - High Altitudes

Flaps 15

Based on engine bleed for packs on and anti-ice off

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	15000
34	0.56					
30	0.97	0.50	0.07			
26	1.30	0.83	0.42			
22	1.53	1.08	0.65	0.23		
18	1.70	1.25	0.82	0.40		
14	1.84	1.39	0.96	0.53	0.11	
10	1.97	1.53	1.09	0.66	0.24	
6	1.99	1.65	1.24	0.81	0.38	
2	2.00	1.69	1.37	0.94	0.52	0.10
-2	2.01	1.70	1.41	1.03	0.64	0.22

Gradient Adjustment for Weight (%)

WEIGHT (1000 KG)	REFERENCE GO-AROUND GRADIENT (%)			
	0	1	2	3
80	-2.37	-2.67	-2.96	-3.24
75	-1.93	-2.16	-2.39	-2.61
70	-1.39	-1.55	-1.72	-1.87
65	-0.74	-0.83	-0.92	-1.01
60	0.00	0.00	0.00	0.00
55	0.84	0.95	1.06	1.17
50	1.88	2.12	2.35	2.58

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)						
	0	1	2	3	4	5	6
VREF	-0.21	-0.22	-0.22	-0.23	-0.23	-0.24	-0.24
VREF+5	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VREF+10	0.09	0.09	0.08	0.08	0.08	0.07	0.06
VREF+15	0.12	0.12	0.11	0.10	0.09	0.07	0.05
VREF+20	0.11	0.09	0.08	0.05	0.03	0.01	-0.02
VREF+25	0.04	0.01	-0.02	-0.06	-0.09	-0.13	-0.16
VREF+30	-0.08	-0.13	-0.18	-0.23	-0.28	-0.33	-0.37

With engine bleed for packs off, increase gradient by 0.3%.

With engine anti-ice on, decrease gradient by 0.4%.

With engine and wing anti-ice on, decrease gradient by 0.4% .

When operating in icing conditions during any part of the flight with forecast landing temperatures below 10°C decrease gradient by 1.0%.

Quick Turnaround Limit Weight - Category C Steel Brakes Flaps 40

AIRPORT OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	79.6					
50	80.2	77.2				
45	80.9	77.8	74.8			
40	81.6	78.5	75.4	72.4		
35	82.3	79.2	76.1	73.1	70.1	
30	83.0	79.9	76.7	73.7	70.8	67.9
25	83.8	80.6	77.4	74.4	71.4	68.5
20	84.6	81.3	78.1	75.1	72.1	69.1
15	85.4	82.1	78.9	75.8	72.7	69.8
10	86.1	82.9	79.6	76.5	73.4	70.4
5	86.1	83.7	80.4	77.2	74.1	71.1
0	86.1	84.5	81.2	78.0	74.9	71.8
-5	86.1	85.4	82.0	78.8	75.6	72.5
-10	86.1	86.1	82.8	79.6	76.4	73.3
-15	86.1	86.1	83.7	80.4	77.2	74.0
-20	86.1	86.1	84.6	81.2	78.0	74.8
-30	86.1	86.1	86.1	83.0	79.7	76.4
-40	86.1	86.1	86.1	84.9	81.5	78.1
-50	86.1	86.1	86.1	86.1	83.4	79.9
-54	86.1	86.1	86.1	86.1	84.1	80.7

Increase weight by 700 kg per 1% uphill slope. Decrease weight by 1200 kg per 1% downhill slope.

Increase weight by 1850 kg per 10 knots headwind. Decrease weight by 7750 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate surface temperature, without artificial cooling, is less than 218°C as follows: No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category N Carbon Brakes
Flaps 40

OAT		LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	73.5					
50	122	74.0	71.2				
45	113	74.6	71.8	69.0			
40	104	75.2	72.4	69.6	66.9		
35	95	75.9	73.0	70.2	67.4	64.8	
30	86	76.6	73.7	70.8	68.0	65.3	62.8
25	77	77.3	74.3	71.4	68.6	65.9	63.3
20	68	78.0	75.0	72.1	69.3	66.5	63.9
15	59	78.7	75.7	72.8	69.9	67.1	64.4
10	50	79.4	76.4	73.5	70.6	67.8	65.0
5	41	80.2	77.2	74.2	71.3	68.4	65.6
0	32	81.0	77.9	74.9	72.0	69.1	66.3
-5	23	81.8	78.7	75.6	72.7	69.8	66.9
-10	14	82.6	79.5	76.4	73.4	70.5	67.6
-15	5	83.4	80.3	77.2	74.2	71.2	68.3
-20	-4	84.3	81.1	78.0	74.9	71.9	69.0
-30	-22	86.1	82.9	79.7	76.6	73.5	70.5
-40	-40	86.1	84.7	81.5	78.3	75.2	72.1
-50	-58	86.1	86.1	83.4	80.1	77.0	73.8
-54	-65	86.1	86.1	84.1	80.9	77.7	74.5

Increase weight by 650 kg per 1% uphill slope. Decrease weight by 1200 kg per 1% downhill slope.
Increase weight by 1550 kg per 10 knots headwind. Decrease weight by 8350 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

**Quick Turnaround Limit Weight - Category C Steel Brakes - High Altitudes
Flaps 40**

OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	67.9	66.5	65.1			
25	68.5	67.1	65.7	64.3		
20	69.1	67.7	66.3	64.9	63.6	62.9
15	69.8	68.3	66.9	65.5	64.1	63.4
10	70.4	69.0	67.5	66.1	64.7	64.0
5	71.1	69.6	68.2	66.7	65.3	64.6
0	71.8	70.3	68.9	67.4	65.9	65.2
-5	72.5	71.0	69.5	68.1	66.6	65.8
-10	73.3	71.7	70.2	68.7	67.2	66.5
-15	74.0	72.5	71.0	69.5	67.9	67.1
-20	74.8	73.2	71.7	70.2	68.6	67.8
-25	75.6	74.0	72.5	70.9	69.4	68.6
-30	76.4	74.8	73.3	71.7	70.1	69.3
-35	77.2	75.6	74.0	72.5	70.9	70.1
-40	78.1	76.5	74.9	73.3	71.7	70.9
-45	79.0	77.3	75.7	74.1	72.5	71.7
-50	79.9	78.2	76.6	75.0	73.4	72.5
-54	80.7	79.0	77.3	75.7	74.0	73.2

Increase weight by 600 kg per 1% uphill slope. Decrease weight by 1050 kg per 1% downhill slope.

Increase weight by 1450 kg per 10 knots headwind. Decrease weight by 6750 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate surface temperature, without artificial cooling, is less than 218°C as follows: No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category N Carbon Brakes - High Altitudes Flaps 40

OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	62.8	61.6	60.4			
25	63.3	62.1	60.9	59.7		
20	63.9	62.6	61.4	60.2	58.9	58.3
15	64.4	63.2	61.9	60.7	59.5	58.8
10	65.0	63.7	62.5	61.2	60.0	59.3
5	65.6	64.3	63.1	61.8	60.5	59.9
0	66.3	64.9	63.6	62.4	61.1	60.4
-5	66.9	65.5	64.2	62.9	61.7	61.0
-10	67.6	66.2	64.8	63.5	62.2	61.6
-15	68.3	66.9	65.5	64.2	62.8	62.2
-20	69.0	67.6	66.2	64.8	63.5	62.8
-25	69.8	68.3	66.9	65.5	64.1	63.4
-30	70.5	69.1	67.6	66.2	64.7	64.1
-35	71.3	69.8	68.4	66.9	65.4	64.7
-40	72.1	70.6	69.1	67.7	66.2	65.4
-45	73.0	71.5	70.0	68.5	66.9	66.2
-50	73.8	72.3	70.8	69.3	67.7	67.0
-54	74.5	73.0	71.5	70.0	68.4	67.6

Increase weight by 550 kg per 1% uphill slope. Decrease weight by 950 kg per 1% downhill slope.

Increase weight by 1400 kg per 10 knots headwind. Decrease weight by 6500 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Performance Dispatch

Chapter PD

Gear Down

Section 33

GEAR DOWN

Takeoff Climb Limit Weight

Flaps 5

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		TAKEOFF CLIMB WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54.0	129.0	60.8	57.4	54.2	51.0	46.4	
52.0	126.0	62.1	57.4	54.2	51.0	47.3	
50.0	122.0	63.5	57.7	54.2	51.0	47.6	43.2
48.0	118.0	64.9	59.0	54.2	51.0	47.5	44.0
46.0	115.0	66.3	60.3	54.5	51.0	47.5	44.8
44.0	111.0	67.6	61.6	55.8	50.9	47.5	44.8
42.0	108.0	69.0	62.9	57.1	51.3	47.5	44.7
40.0	104.0	70.3	64.2	58.4	52.5	47.5	44.7
38.0	100.0	71.6	65.4	59.6	53.8	47.8	44.7
36.0	97.0	72.9	66.7	60.8	55.0	49.1	44.7
34.0	93.0	74.3	68.0	62.0	56.3	50.3	45.1
33.0	91.0	75.1	68.6	62.6	56.9	50.9	45.7
32.0	90.0	75.9	69.2	63.2	57.4	51.5	46.3
30.0	86.0	77.4	70.7	64.4	58.6	52.7	47.4
28.0	82.0	79.0	72.2	65.7	59.8	53.9	48.6
26.0	79.0	80.0	73.7	67.1	61.0	55.1	49.9
24.0	75.0	80.0	75.2	68.5	62.2	56.4	51.1
22.0	72.0	80.1	75.5	69.9	63.6	57.6	52.3
20.0	68.0	80.1	75.5	70.6	64.8	58.8	53.5
18.0	64.0	80.2	75.6	70.6	65.9	60.0	54.6
16.0	61.0	80.2	75.6	70.6	66.0	61.2	55.6
14.0	57.0	80.2	75.6	70.7	66.0	61.6	56.0
12.0	54.0	80.3	75.7	70.7	66.0	61.7	56.3
10.0	50.0	80.3	75.7	70.7	66.1	61.7	56.7

With engine bleeds for packs off, increase weight by 300 kg.

With engine anti-ice on, decrease weight by 1200 kg.

With engine and wing anti-ice on, decrease weight by 6700 kg (optional system).

GEAR DOWN

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 30 or 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	56.4					
52	126	57.9					
50	122	59.4	54.8				
48	118	60.5	56.2				
46	115	61.6	57.6	53.0			
44	111	62.6	58.6	54.3			
42	108	63.7	59.6	55.6	51.0		
40	104	64.8	60.6	56.6	52.2		
38	100	66.0	61.7	57.6	53.3	48.6	
36	97	67.1	62.7	58.6	54.3	49.4	
34	93	68.3	63.9	59.7	55.2	50.2	46.1
32	90	69.6	65.0	60.6	56.1	51.2	47.1
30	86	70.7	65.9	61.3	56.9	52.0	48.0
28	82	70.8	66.7	62.0	57.6	52.8	48.7
26	79	70.9	67.5	62.6	58.1	53.6	49.5
24	75	71.0	67.6	63.1	58.5	54.3	50.0
22	72	71.0	67.6	63.6	58.9	54.7	50.4
20	68	71.1	67.7	63.6	59.4	55.0	50.9
18	64	71.1	67.7	63.6	59.7	55.3	51.2
16	61	71.2	67.8	63.7	59.8	55.7	51.5
14	57	71.2	67.8	63.7	59.8	56.0	51.8
12	54	71.3	67.8	63.7	59.8	56.0	52.1
10	50	71.3	67.9	63.7	59.8	56.0	52.4
-40	-40	71.8	68.3	64.2	60.2	56.4	52.9

With engine bleed for packs off, increase weight by 1150 kg.

With engine anti-ice on, decrease weight by 200 kg.

With engine and wing anti-ice on, decrease weight by 1250 kg.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 7600 kg.

GEAR DOWN

Takeoff Obstacle Limit Weight
Flaps 5
Sea Level, 30°C & Below, Zero Wind
Based on engine bleed for packs on and anti-ice off
Reference Obstacle Limit Weight (1000 KG)

OBSTACLE HEIGHT (M)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)										
	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	75.0										
20	68.8	74.0									
40	63.4	68.3	72.2	75.2	77.6						
60	59.4	64.2	68.0	71.2	73.7	75.8	77.5				
80	56.1	60.8	64.7	67.8	70.5	72.7	74.5	76.0	77.3		
100	53.3	58.0	61.8	65.0	67.7	69.9	71.9	73.5	75.0	76.2	77.3
120	50.8	55.5	59.3	62.5	65.2	67.5	69.5	71.3	72.8	74.1	75.2
140	48.6	53.3	57.1	60.3	63.0	65.4	67.4	69.2	70.8	72.2	73.4
160	46.6	51.2	55.1	58.3	61.0	63.4	65.5	67.3	68.9	70.4	71.6
180	44.8	49.4	53.2	56.4	59.2	61.6	63.7	65.6	67.2	68.7	70.0
200	43.1	47.7	51.5	54.7	57.5	59.9	62.0	63.9	65.6	67.1	68.5
220	41.6	46.1	49.9	53.1	55.9	58.4	60.5	62.4	64.1	65.6	67.0
240		44.6	48.4	51.6	54.4	56.9	59.1	61.0	62.7	64.3	65.7
260		43.2	47.0	50.2	53.0	55.5	57.7	59.6	61.4	62.9	64.4
280		42.0	45.7	48.9	51.7	54.2	56.4	58.3	60.1	61.7	63.1
300			44.4	47.6	50.5	52.9	55.2	57.1	58.9	60.5	62.0

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

TO BE SUPPLIED

GEAR DOWN

Takeoff Obstacle Limit Weight

Flaps 5

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

OAT Adjustments

OAT(°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)									
	44	48	52	56	60	64	68	72	76	80
30 & Below	0	0	0	0	0	0	0	0	0	0
32	-0.6	-0.7	-0.8	-0.9	-0.9	-1.0	-1.1	-1.2	-1.2	-1.3
34	-1.3	-1.4	-1.6	-1.7	-1.9	-2.0	-2.2	-2.3	-2.5	-2.6
36	-1.9	-2.1	-2.4	-2.6	-2.8	-3.0	-3.3	-3.5	-3.7	-3.9
38	-2.5	-2.9	-3.1	-3.5	-3.8	-4.0	-4.3	-4.7	-5.0	-5.2
40	-3.2	-3.6	-3.9	-4.3	-4.7	-5.1	-5.4	-5.8	-6.2	-6.6
42	-3.8	-4.2	-4.7	-5.1	-5.6	-6.0	-6.5	-6.9	-7.3	-7.8
44	-4.4	-4.9	-5.4	-6.0	-6.5	-7.0	-7.5	-8.0	-8.5	-9.0
46	-5.0	-5.6	-6.2	-6.8	-7.4	-7.9	-8.5	-9.1	-9.7	-10.3
48	-5.7	-6.3	-7.0	-7.6	-8.3	-8.9	-9.5	-10.2	-10.8	-11.5
50	-6.3	-7.0	-7.7	-8.4	-9.1	-9.9	-10.6	-11.3	-12.0	-12.7

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)									
	44	48	52	56	60	64	68	72	76	80
S.L. & Below	0	0	0	0	0	0	0	0	0	0
1000	-1.6	-1.8	-1.9	-2.1	-2.2	-2.4	-2.6	-2.8	-2.9	-3.1
2000	-3.2	-3.5	-3.8	-4.2	-4.5	-4.8	-5.2	-5.5	-5.8	-6.2
3000	-4.7	-5.1	-5.6	-6.1	-6.5	-7.0	-7.5	-7.9	-8.4	-8.9
4000	-6.2	-6.8	-7.4	-8.0	-8.6	-9.2	-9.8	-10.4	-11.0	-11.6
5000	-7.5	-8.3	-9.0	-9.7	-10.5	-11.2	-12.0	-12.7	-13.4	-14.2
6000	-8.9	-9.8	-10.7	-11.5	-12.4	-13.3	-14.1	-15.0	-15.9	-16.7
7000	-10.6	-11.6	-12.6	-13.6	-14.6	-15.5	-16.5	-17.5	-18.5	-19.5
8000	-12.4	-13.5	-14.5	-15.6	-16.7	-17.8	-18.9	-20.0	-21.1	-22.2
9000	-13.7	-15.0	-16.3	-17.5	-18.8	-20.1	-21.3	-22.6	-23.9	-25.1
10000	-15.1	-16.6	-18.0	-19.4	-20.9	-22.3	-23.8	-25.2	-26.6	-28.1

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)									
	44	48	52	56	60	64	68	72	76	80
15TW	-9.5	-9.3	-9.2	-9.0	-8.8	-8.6	-8.4	-8.3	-8.1	-7.9
10TW	-6.3	-6.2	-6.1	-6.0	-5.9	-5.8	-5.6	-5.5	-5.4	-5.3
5TW	-3.2	-3.1	-3.1	-3.0	-2.9	-2.9	-2.8	-2.8	-2.7	-2.6
0	0	0	0	0	0	0	0	0	0	0
10HW	1.1	1.0	1.0	0.9	0.8	0.8	0.7	0.6	0.6	0.5
20HW	2.2	2.1	1.9	1.8	1.7	1.5	1.4	1.2	1.1	1.0
30HW	3.3	3.1	3.0	2.8	2.6	2.4	2.2	2.1	1.9	1.7
40HW	4.4	4.2	4.0	3.8	3.6	3.3	3.1	2.9	2.7	2.4

With engine bleed for packs off, increase weight by 250 kg.

With engine anti-ice on, decrease weight by 2150 kg.

With engine and wing anti-ice on, decrease weight by 8000 kg (optional system).

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15600	12500	9400
80	18400	15500	12600
75	21100	18500	15700
70	23600	21400	18600
65	26100	24400	21800
60	28600	27100	25300
55	30800	29600	28100
50	32900	31900	30700
45	35100	34100	33000
40	37500	36500	35400

GEAR DOWN

Long Range Cruise Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
340	300	266	239	218	200	187	174	164	155	147
508	449	399	359	328	300	280	262	246	233	221
675	597	531	479	437	400	374	350	329	311	295
841	745	662	598	545	500	467	438	412	389	369
1006	892	794	717	654	600	561	526	495	468	444
1170	1038	925	835	763	700	655	614	578	546	518
1332	1183	1055	954	872	800	749	703	661	625	593
1494	1328	1185	1072	980	900	843	791	745	704	668
1655	1472	1315	1190	1089	1000	937	879	828	783	743
1814	1615	1444	1308	1197	1100	1031	968	911	862	818
1973	1758	1573	1426	1305	1200	1125	1056	995	941	894
2131	1900	1701	1543	1413	1300	1218	1145	1079	1020	969
2288	2041	1829	1660	1521	1400	1313	1233	1162	1100	1045
2444	2182	1957	1777	1629	1500	1407	1322	1246	1179	1121
2599	2323	2084	1894	1737	1600	1501	1411	1330	1259	1197
2754	2463	2212	2011	1845	1700	1595	1500	1414	1339	1273
2907	2602	2338	2127	1953	1800	1689	1589	1499	1419	1350
3060	2741	2465	2243	2060	1900	1784	1678	1583	1499	1426
3212	2879	2591	2359	2168	2000	1878	1767	1668	1580	1503

GEAR DOWN**Long Range Cruise Trip Fuel and Time****Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.6	0:53	2.5	0:51	2.3	0:49	2.2	0:48	2.2	0:47
300	3.8	1:18	3.6	1:14	3.3	1:10	3.2	1:08	3.1	1:05
400	5.0	1:42	4.7	1:37	4.4	1:31	4.2	1:27	4.0	1:24
500	6.3	2:06	5.9	2:00	5.4	1:52	5.1	1:47	5.0	1:43
600	7.6	2:30	7.1	2:22	6.5	2:13	6.1	2:06	5.9	2:01
700	8.9	2:53	8.3	2:44	7.5	2:33	7.1	2:25	6.9	2:19
800	10.2	3:16	9.5	3:06	8.6	2:53	8.1	2:44	7.8	2:37
900	11.5	3:39	10.7	3:28	9.7	3:13	9.2	3:03	8.8	2:56
1000	12.8	4:02	11.9	3:50	10.8	3:33	10.2	3:23	9.7	3:14
1100	14.2	4:24	13.2	4:11	11.9	3:53	11.2	3:41	10.8	3:31
1200	15.5	4:46	14.5	4:32	13.1	4:12	12.3	3:59	11.8	3:49
1300	16.9	5:08	15.8	4:53	14.2	4:31	13.4	4:18	12.8	4:07
1400	18.3	5:30	17.0	5:14	15.4	4:51	14.4	4:36	13.8	4:25
1500	19.6	5:52	18.3	5:35	16.5	5:10	15.5	4:55	14.9	4:42
1600	21.1	6:13	19.7	5:55	17.7	5:29	16.6	5:13		
1700	22.5	6:34	21.0	6:15	18.9	5:48	17.8	5:31		
1800	24.0	6:55	22.4	6:35	20.1	6:06	18.9	5:48		
1900	25.4	7:16	23.7	6:55	21.3	6:25	20.0	6:06		
2000	26.9	7:37	25.1	7:16	22.5	6:44	21.1	6:24		

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	LANDING WEIGHT (1000 KG)						
	40	45	50	55	60	65	70
2	-0.2	-0.1	0.0	0.1	0.3	0.4	0.5
4	-0.4	-0.2	0.0	0.2	0.5	0.7	1.0
6	-0.6	-0.3	0.0	0.4	0.7	1.1	1.4
8	-0.8	-0.4	0.0	0.5	0.9	1.4	1.8
10	-1.0	-0.5	0.0	0.6	1.1	1.7	2.3
12	-1.1	-0.6	0.0	0.7	1.4	2.0	2.7
14	-1.3	-0.7	0.0	0.8	1.6	2.4	3.2
16	-1.5	-0.8	0.0	0.9	1.8	2.7	3.6
18	-1.7	-0.9	0.0	1.0	2.0	3.0	4.0
20	-1.9	-0.9	0.0	1.1	2.2	3.3	4.5
22	-2.1	-1.0	0.0	1.2	2.4	3.7	4.9
24	-2.3	-1.1	0.0	1.3	2.6	4.0	5.3
26	-2.4	-1.2	0.0	1.4	2.9	4.3	5.8
28	-2.6	-1.3	0.0	1.5	3.1	4.6	6.2

Based on VREF40 + 70 climb, Long Range Cruise and VREF40 + 70 descent.

GEAR DOWN

Holding Planning
Flaps Up

WEIGHT (1000 KG)	TOTAL FUEL FLOW (KG/HR)						
	PRESSURE ALTITUDE (FT)						
	1500	5000	10000	15000	20000	25000	30000
80	4240	4210	4190	4210	4220		
75	4000	3970	3940	3940	3950	4100	
70	3770	3730	3700	3690	3680	3750	
65	3550	3500	3470	3440	3430	3460	
60	3310	3260	3220	3190	3170	3180	3340
55	3090	3030	2990	2950	2920	2920	3000
50	2860	2810	2760	2720	2670	2660	2710
45	2630	2590	2540	2490	2440	2420	2450
40	2400	2360	2320	2270	2220	2180	2200

This table includes 5% additional fuel for holding in a racetrack pattern.

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 KG)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
22	42.9	41.7	
20	46.4	45.1	43.8
18	50.0	48.4	46.7
16	53.6	51.7	49.8
14	56.8	55.1	53.3
12	60.5	58.5	56.2
10	64.1	61.9	59.1
8	68.1	65.6	62.6
6	72.1	69.2	66.0
4	75.9	72.7	69.2
2	79.5	76.1	72.6
0	82.9	79.3	75.9

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 KG)				
	PRESSURE ALTITUDE (1000 FT)				
	2	6	10	14	18
ENGINE ONLY	-1.7	-1.3	-1.5	-1.5	-1.3
ENGINE AND WING	-6.6	-5.9	-5.6	-5.1	-4.9

Intentionally
Blank

Performance Dispatch**Text****Chapter PD****Section 34**

Introduction

This chapter contains self dispatch performance data intended primarily for use by flight crews in the event that information cannot be obtained from the airline dispatch office. The takeoff data provided is for a single takeoff flap at max takeoff thrust. The range of conditions covered is limited to those normally encountered in airline operation. In the event of conflict between the data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

Takeoff

or 737-900W

The maximum allowable takeoff weight will be the least of the Field, Climb, Obstacle, Brake Energy and Tire Speed Limit Weights as determined from the tables shown.

Field Limit Weight - Slope and Wind Corrections

These tables for dry and wet runways provide corrections to the field length available for the effects of runway slope and wind component along the runway. Enter the appropriate table with the available field length and runway slope to determine the slope corrected field length. Next enter the appropriate table with slope corrected field length and wind component to determine the slope and wind corrected field length.

Field and Climb Limit Weight

Tables are presented for selected airport pressure altitudes and runway conditions and show both Field and Climb Limit Weights. Enter the appropriate table for pressure altitude and runway condition with "Slope and Wind Corrected Field Length" determined above and airport OAT to obtain Field Limit Weight. Also read Climb Limit Weight for the same OAT. Intermediate altitudes may be interpolated or use next higher altitude. When finding a maximum weight for a wet runway, the dry runway limit weight must also be determined and the lower of the two weights used.

Obstacle Limit Weight

The Reference Obstacle Limit Weight table provides obstacle limit weights for reference airport conditions based on obstacle height above the runway surface and distance from brake release. Enter the adjustment tables to adjust the reference Obstacle Limit Weight for the effects of OAT, pressure altitude and wind as indicated. In the case of multiple obstacles, enter the tables successively with each obstacle and determine the most limiting weight.

Tire Speed Limit

Maximum tire speed limited weights are presented for 225 MPH tires. To determine the tire speed limit weight, enter the table with OAT and airport pressure altitude. Adjust the tire speed limit weight according to the notes below the table to account for wind.

Brake Energy Limit VMBE

The Maximum Brake Energy Speed table provides the Reference VMBE for a variety of airport pressure altitudes and temperatures. Enter the Weight Adjusted VMBE table to adjust the Reference VMBE for the actual brake release gross weight. Correct VMBE for slope and wind. If V1 exceeds VMBE, decrease brake release weight as indicated for each knot that V1 exceeds VMBE and determine V1, VR, and V2 for the lower brake release weight.

Enroute

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. Note that this table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Trip Fuel and Time

.80M Trip Fuel and Time tables are provided to determine trip time and fuel required to destination.

To determine trip fuel and time for a constant altitude cruise, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the planned landing weight to obtain the adjustment to the fuel required at the planned landing weight.

.80M Step Climb Trip Fuel and Time

.80M Step Climb Trip Fuel and Time tables are provided to determine trip time and fuel required to destination when flying a step climb profile. Step climb profiles are based on 4000 ft step climbs to keep the flight within 2000 ft of the optimum altitude for the current cruise weight. To determine trip fuel and time, enter the Ground to Air Miles Conversion table and determine air distance as discussed above. Then enter the Trip Fuel and Time Required table with air distance and planned landing weight to read trip fuel. Continue across the table to read trip time.

Short Trip Fuel and Time

These tables are provided to determine trip fuel and time for short distances or alternates. Obtain air distance from the table using the ground distance and wind component to the alternate. Enter the Trip Fuel and Time Required table with air distance and read trip fuel required for the expected landing weight, together with time to alternate at right. For distances greater than shown or other altitudes, use the .80M Trip Fuel and Time tables.

Holding Planning

This table provides total fuel flow information necessary for planning flaps up holding and reserve fuel requirements. Data is based on the FMC holding speed schedule which is the higher of the maximum endurance and flaps up maneuver speeds. As noted, the fuel flow is based on flight in a racetrack holding pattern. For holding in straight and level flight, reduce table values by 5%.

Flight Crew Oxygen Requirements

Regulations require that sufficient oxygen be provided to the flight crew to account for the greater of supplemental breathing oxygen in the event of a cabin depressurization or protective breathing in the event of smoke or

harmful fumes in the flight deck. The oxygen quantity associated with the above requirements is achieved with the minimum dispatch oxygen cylinder pressure.

To determine the minimum dispatch oxygen cylinder pressure enter the appropriate flight crew oxygen table with the number of crew plus observers using oxygen and read the minimum cylinder pressure required for the appropriate cylinder temperature.

Net Level Off Weight

The Net Level Off Weight table is provided to determine terrain clearance capability in straight and level flight following an engine failure. Regulations require terrain clearance planning based on net performance which is the gross (or actual) gradient performance degraded by 1.1%. In addition, the net level off pressure altitude must clear the terrain by 1000 ft.

To determine the maximum weight for terrain clearance, enter the table with required net level off pressure altitude and expected ISA deviation to obtain weight. Adjust weight for anti-ice operation as noted below the table.

| Extended Range Operations

ETOPS regulations require that flights conducted over a route that contains a point further than one hour's time at "normal one-engine-inoperative speed" from an adequate airport comply with rules specific to extended operations for airplanes with two or more engines. This section provides reserve fuel planning information for the "Critical Fuel Diversion Scenario".

ETOPS regulations require reserve planning to include a "Critical Fuel Diversion Scenario" calculation. The information shown is the fuel required to satisfy the flight profile as described below the charts. This information is shown for all engines operating and one engine inoperative at Long Range Cruise (LRC). There are two engine-inoperative scenarios, a decompression scenario and a driftdown scenario. The decompression scenario assumes an engine failure, loss of pressurization, emergency descent, and subsequent cruise at 10000 ft. The driftdown scenario assumes an engine failure without loss of pressurization, where the airplane "drifts down" to the thrust limited level-off altitude for the remainder of the diversion.

The ETOPS critical fuel required is the greater of the all-engine fuel or the engine-inoperative fuel. The ETOPS critical fuel required is compared to the amount of fuel that is predicted to be onboard the airplane at the critical point. If the fuel required by the ETOPS critical fuel reserves of the route

exceeds the amount of fuel predicted, the fuel load must be adjusted accordingly. The data does not include an allowance for performance deterioration. However, regulations require a 5% allowance for performance deterioration, unless a value has been established by the operator for in-service deterioration.

To determine the ETOPS critical fuel required, enter the Ground to Air Mile Conversion table with the forecast wind (factored if applicable) and ground distance to the diversion airport from the critical point to obtain the air distance. Then enter the Critical Fuel table with air distance and expected weight at the critical point and read the required fuel. Apply the noted fuel adjustments for non-standard conditions, as necessary. When using a wind forecasting model acceptable to the FAA (such as the World Area Forecast System, WAFS), regulations allow the wind factor applied in this step to be 5% of the forecast wind (increase headwinds, decrease tailwinds), as indicated in the note below the chart. However, if a FAA-acceptable wind forecasting model is not used, the ETOPS critical fuel must be increased by 5%, instead of factoring the forecast winds.

Critical Fuel Reserves

Enter the Ground to Air Miles Conversion table with forecast wind and ground distance to diversion airport from critical point to obtain air distance. Now enter the Critical Fuel table with air distance and expected weight at the critical point and read required fuel. Apply the noted fuel adjustments as necessary. Regulations require a 5% allowance for performance deterioration unless a value has been established by the operator for inservice deterioration.

As noted below each table, the fuel required is the greater of the two engine fuel and the single engine fuel. This fuel is compared to the amount of fuel normally onboard the airplane at that point in the route. If the fuel required by the critical fuel reserves exceeds the amount of fuel normally expected, the fuel load must be adjusted accordingly.

Landing

Tables are provided for determining the maximum landing weight as limited by field length or climb requirements for a single landing flap.

Maximum landing weight is the lowest of the field length limit weight, climb limit weight, or maximum certified landing weight.

Landing Field Limit Weight

For the expected runway condition and anti-skid system configuration, obtain wind corrected field length by entering the Wind Corrected Field Length table with field length available and wind component along the runway. Now enter the Field Limit Weight table with wind corrected field length and pressure altitude to read field limit weight.

Landing Climb Limit Weight

Enter the table with airport OAT and pressure altitude to read landing climb limit weight. Apply the noted adjustments as required.

Go-Around Climb Gradient

Enter the Reference Go-Around Gradient table with airport OAT and pressure altitude to determine the reference go-around gradient. Then adjust the reference gradient for airplane weight and speed using the tables provided to determine the weight and speed adjusted go-around gradient. Apply the necessary corrections for engine bleed configuration and icing conditions as noted.

Quick Turnaround Limit Weight

Enter the appropriate table (Steel or Carbon Brakes) with airport pressure altitude and OAT to read maximum quick turnaround weight. Apply the noted adjustments as required.

If the landing weight exceeds the maximum quick turnaround weight, wait the specified time and then check that the wheel thermal plugs have not melted before executing a subsequent takeoff. For Steel Brakes, the alternate procedures on the charts can be used to ensure the brake temperature is within limits. These procedures cannot be used for carbon brakes.

Gear Down

This section provides flight planning data for revenue operation with gear down. Unless otherwise noted, the gear down tables in this section are identical in format and usage to the corresponding gear up tables previously described.

To eliminate erroneous displays the flight crew should enter only gross weight data on the PERF INIT page of the Control Display Unit (CDU). Omission of the cost index and cruise altitude entries on the PERF INIT page will render the VNAV function unavailable during flight. As a result, the following information will not be provided: VNAV guidance and speed

schedules, trip fuel and ETA predictions, optimum and maximum altitude data, step climb and top of descent predictions, and the VNAV descent guidance path.

The gross weight entry allows the FMCS takeoff and approach speed schedules to be generated. In addition, the flap maneuver speed and VREF speed bugs will be available for display on the primary flight display speed tape. Except for VNAV, normal autopilot and autothrottle modes will remain available for use during the flight, as will the LNAV mode.

Takeoff/Landing Climb Limit Weight

Enter the appropriate table with airport OAT and pressure altitude to determine Takeoff/Landing Climb Limit Weight with gear down. Correct the weight obtained for engine bleed configuration as required.

PD.34.8

Performance Dispatch**Chapter PD****Table of Contents****Section 40****737-800BBJW CFM56-7B27B3 LB FAA CATC/N**

Takeoff	PD.40.1
Takeoff Field Corrections - Dry Runway	PD.40.1
Takeoff Field & Climb Limit Weights - Dry Runway	PD.40.2
Takeoff Field Corrections - Wet Runway	PD.40.5
Takeoff Field & Climb Limit Weights - Wet Runway	PD.40.6
Takeoff Obstacle Limit Weight	PD.40.9
Tire Speed Limit Weight	PD.40.11
Brake Energy Limits VMBE	PD.40.12
 Enroute	 PD.41.1
.80M Maximum Operating Altitude	PD.41.1
.80M Trip Fuel and Time	PD.41.2
.80M Step Climb	PD.41.4
Short Trip Fuel and Time	PD.41.5
Holding Planning	PD.41.6
Flight Crew Oxygen Requirements	PD.41.6
Net Level Off Weight	PD.41.7
Decompression Critical Fuel Reserves - LRC Cruise	PD.41.8
Decompression Critical Fuel Reserves - LRC Cruise	PD.41.9
Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise	PD.41.10
 Landing	 PD.42.1
Landing Field Limit Weight - Dry Runway	PD.42.1
Landing Field Limit Weight - Dry Runway	PD.42.2
Landing Field Limit Weight - Wet Runway	PD.42.3
Landing Field Limit Weight - Wet Runway	PD.42.4
Landing Climb Limit Weight	PD.42.5
Go-Around Climb Gradient	PD.42.6

Quick Turnaround Limit Weight - Category C Steel	
Brakes	PD.42.7
Quick Turnaround Limit Weight - Category N	
Carbon Brakes	PD.42.8
Gear Down	PD.43.1
Takeoff Climb Limit Weight	PD.43.1
Landing Climb Limit Weight	PD.43.2
Takeoff Obstacle Limit Weight	PD.43.3
Long Range Cruise Altitude Capability	PD.43.5
Long Range Cruise Trip Fuel and Time	PD.43.6
Holding Planning	PD.43.8
Net Level Off Weight	PD.43.9
Text	PD.44.1
Introduction	PD.44.1
Takeoff	PD.44.1
Enroute	PD.44.2
Landing	PD.44.5
Gear Down	PD.44.6

Performance Dispatch

Chapter PD

Takeoff

Section 40

Takeoff Field Corrections - Dry Runway

Slope Corrections

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4330	4300	4270	4230	4200	4130	4050	3980	3910
4600	4780	4730	4690	4640	4600	4500	4400	4310	4210
5000	5220	5170	5110	5060	5000	4880	4760	4630	4510
5400	5670	5600	5530	5470	5400	5250	5110	4960	4810
5800	6110	6030	5960	5880	5800	5630	5460	5290	5110
6200	6560	6470	6380	6290	6200	6000	5810	5610	5420
6600	7000	6900	6800	6700	6600	6380	6160	5940	5720
7000	7450	7330	7220	7110	7000	6760	6510	6270	6020
7400	7890	7770	7640	7520	7400	7130	6860	6590	6320
7800	8330	8200	8070	7930	7800	7510	7210	6920	6630
8200	8780	8630	8490	8340	8200	7880	7560	7250	6930
8600	9220	9070	8910	8760	8600	8260	7920	7570	7230
9000	9670	9500	9330	9170	9000	8630	8270	7900	7530
9400	10110	9930	9760	9580	9400	9010	8620	8230	7840
9800	10560	10370	10180	9990	9800	9380	8970	8550	8140
10200	11000	10800	10600	10400	10200	9760	9320	8880	8440
10600	11440	11230	11020	10810	10600	10140	9670	9210	8740
11000	11890	11670	11440	11220	11000	10510	10020	9530	9040
11400	12330	12100	11870	11630	11400	10890	10370	9860	9350
11800	12780	12530	12290	12040	11800	11260	10720	10190	9650

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3120	3480	3840	4200	4440	4680	4920	5170
4600	3450	3830	4220	4600	4850	5100	5360	5620
5000	3780	4190	4590	5000	5260	5530	5790	6060
5400	4110	4540	4970	5400	5670	5950	6230	6510
5800	4440	4890	5350	5800	6080	6370	6660	6960
6200	4770	5250	5720	6200	6490	6790	7100	7400
6600	5100	5600	6100	6600	6910	7210	7530	7850
7000	5430	5950	6480	7000	7320	7640	7960	8290
7400	5760	6310	6850	7400	7730	8060	8400	8740
7800	6090	6660	7230	7800	8140	8480	8830	9190
8200	6420	7010	7610	8200	8550	8900	9270	9630
8600	6750	7370	7980	8600	8960	9330	9700	10080
9000	7080	7720	8360	9000	9370	9750	10130	10530
9400	7410	8070	8740	9400	9780	10170	10570	10970
9800	7740	8430	9110	9800	10190	10590	11000	11420
10200	8070	8780	9490	10200	10600	11020	11440	11870
10600	8400	9130	9870	10600	11010	11440	11870	12310
11000	8730	9490	10240	11000	11420	11860	12310	12760
11400	9060	9840	10620	11400	11840	12280	12740	13210
11800	9390	10190	11000	11800	12250	12700	13170	13650

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	132.3	125.3	123.2	121.1	120.3	119.5	118.7	117.9	117.1	110.2	96.0
4200	136.2	129.1	126.9	124.8	123.9	123.1	122.3	121.5	120.7	113.5	98.9
4600	144.0	136.5	134.2	131.9	131.0	130.2	129.3	128.5	127.6	120.1	104.7
5000	151.4	143.5	141.1	138.7	137.8	136.9	136.0	135.1	134.1	126.3	110.1
5400	158.3	150.0	147.5	145.0	144.0	143.1	142.1	141.2	140.2	132.0	115.1
5800	164.9	156.3	153.7	151.1	150.1	149.1	148.1	147.1	146.1	137.5	119.9
6200	171.5	162.5	159.8	157.0	156.0	155.0	153.9	152.9	151.9	142.9	124.5
6600	177.7	168.4	165.5	162.7	161.6	160.6	159.5	158.4	157.4	148.0	128.9
7000	183.5	173.9	170.9	168.0	166.9	165.8	164.7	163.6	162.5	152.8	133.0
7400	188.7	178.7	175.7	172.7	171.5	170.4	169.2	168.1	166.9	157.0	136.6
7800	189.9	183.5	180.3	177.2	176.0	174.8	173.7	172.5	171.3	161.1	140.0
8200	189.9	188.1	184.9	181.7	180.5	179.2	178.0	176.8	175.6	165.1	143.4
8600	189.9	189.9	189.3	186.0	184.8	183.5	182.3	181.0	179.8	168.9	146.7
9000	189.9	189.9	189.9	189.9	189.9	189.0	187.7	186.4	185.1	183.9	149.9
9400	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.2	187.9	176.5
9800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	180.0
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	183.2
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	186.2
CLIMB LIMIT WT (1000 LB)	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	179.4	148.2

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	124.0	117.6	115.6	113.5	112.7	111.9	111.1	110.3	108.7	102.5	89.5
4200	127.7	121.2	119.1	116.9	116.1	115.3	114.5	113.7	112.0	105.7	92.2
4600	135.0	128.1	125.9	123.7	122.8	121.9	121.1	120.2	118.5	111.8	97.6
5000	142.0	134.7	132.4	130.0	129.1	128.2	127.3	126.4	124.6	117.6	102.7
5400	148.4	140.8	138.4	135.9	135.0	134.0	133.1	132.2	130.2	122.9	107.3
5800	154.6	146.8	144.2	141.6	140.6	139.6	138.7	137.7	135.7	128.0	111.8
6200	160.7	152.5	149.9	147.2	146.2	145.1	144.1	143.1	141.0	133.0	116.1
6600	166.6	158.0	155.3	152.5	151.4	150.4	149.3	148.2	146.1	137.8	120.2
7000	172.0	163.2	160.3	157.4	156.3	155.2	154.1	153.0	150.7	142.2	124.0
7400	176.8	167.7	164.8	161.8	160.6	159.5	158.3	157.2	154.9	146.0	127.2
7800	181.5	172.1	169.1	166.0	164.8	163.6	162.4	161.3	158.9	149.7	130.4
8200	186.1	176.4	173.3	170.1	168.9	167.7	166.5	165.3	162.8	153.4	133.5
8600	189.9	180.6	177.4	174.1	172.9	171.6	170.4	169.2	166.6	157.0	136.5
9000	189.9	184.7	181.4	178.1	176.8	175.5	174.2	173.0	170.4	160.5	139.5
9400	189.9	188.7	185.4	182.0	180.6	179.3	178.0	176.7	174.1	163.9	142.4
9800	189.9	189.9	189.2	185.6	184.3	182.9	181.6	180.3	177.6	167.2	145.2
10200	189.9	189.9	189.9	188.9	187.6	186.2	184.8	183.5	180.7	170.1	147.7
10600	189.9	189.9	189.9	189.9	189.9	189.2	187.8	186.4	183.6	172.9	150.1
CLIMB LIMIT WT (1000 LB)	187.2	186.9	186.6	186.2	186.1	185.9	185.7	185.5	181.8	167.2	138.4

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3200 lb.

With engine anti-ice on, decrease field limit weight by 500 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2000 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	115.5	109.7	107.7	105.8	105.0	104.3	103.6	102.4	101.0	95.6	84.0
4200	119.0	113.0	111.0	109.0	107.5	106.7	106.7	105.6	104.1	98.5	86.6
4600	125.8	119.5	117.4	115.3	114.5	113.7	112.9	111.7	110.1	104.3	91.7
5000	132.3	125.7	123.5	121.3	120.4	119.6	118.7	117.4	115.8	109.7	96.4
5400	138.3	131.4	129.1	126.8	125.9	125.0	124.1	122.8	121.1	114.6	100.8
5800	144.1	136.9	134.5	132.0	131.1	130.2	129.3	127.9	126.1	119.4	105.0
6200	149.7	142.2	139.7	137.2	136.2	135.3	134.3	132.9	131.0	124.1	109.0
6600	155.1	147.4	144.8	142.1	141.1	140.1	139.1	137.6	135.7	128.5	112.8
7000	160.2	152.1	149.4	146.7	145.6	144.6	143.6	142.0	140.0	132.5	116.3
7400	164.6	156.2	153.5	150.7	149.6	148.5	147.5	145.8	143.8	136.0	119.3
7800	168.9	160.3	157.4	154.5	153.4	152.3	151.3	149.6	147.5	139.5	122.3
8200	173.1	164.3	161.3	158.4	157.2	156.1	155.0	153.2	151.1	142.9	125.1
8600	177.2	168.1	165.1	162.1	160.9	159.7	158.6	156.8	154.6	146.1	127.9
9000	181.2	171.9	168.8	165.7	164.5	163.3	162.1	160.3	158.0	149.3	130.7
9400	185.2	175.6	172.5	169.3	168.0	166.8	165.6	163.7	161.4	152.5	133.4
9800	188.9	179.2	175.9	172.6	171.4	170.1	168.9	167.0	164.6	155.5	135.9
10200	189.9	182.4	179.0	175.7	174.4	173.1	171.9	170.0	167.5	158.3	138.3
10600	189.9	185.3	181.9	178.5	177.2	175.9	174.7	172.7	170.2	160.8	140.5
CLIMB LIMIT WT (1000LB)	175.4	175.1	174.8	174.4	174.3	174.1	173.9	172.1	168.9	155.8	130.5

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	107.6	102.1	100.4	98.7	98.0	97.3	96.3	95.2	93.8	88.4	77.6
4200	110.8	105.2	103.5	101.7	101.0	100.3	99.2	98.1	96.7	91.1	80.0
4600	117.2	111.3	109.5	107.6	106.9	106.1	105.0	103.8	102.3	96.5	84.7
5000	123.3	117.0	115.1	113.2	112.4	111.6	110.4	109.2	107.6	101.5	89.2
5400	128.9	122.3	120.3	118.3	117.5	116.7	115.4	114.2	112.5	106.1	93.2
5800	134.3	127.4	125.4	123.2	122.4	121.5	120.2	118.9	117.2	110.4	97.0
6200	139.5	132.4	130.3	128.0	127.1	126.3	124.9	123.5	121.7	114.7	100.7
6600	144.5	137.1	134.9	132.6	131.7	130.8	129.4	127.9	126.0	118.8	104.2
7000	149.2	141.5	139.2	136.8	135.8	134.9	133.5	132.0	130.0	122.5	107.4
7400	153.2	145.3	142.9	140.4	139.5	138.5	137.0	135.5	133.4	125.7	110.1
7800	157.2	149.0	146.6	144.0	143.0	142.0	140.5	138.9	136.8	128.8	112.8
8200	161.1	152.7	150.2	147.5	146.5	145.5	143.9	142.2	140.1	131.9	115.4
8600	164.9	156.2	153.6	150.9	149.9	148.8	147.2	145.5	143.3	134.8	117.9
9000	168.5	159.7	157.0	154.2	153.2	152.1	150.4	148.7	146.4	137.8	120.4
9400	172.2	163.1	160.4	157.5	156.4	155.3	153.6	151.8	149.5	140.6	122.8
9800	175.6	166.4	163.6	160.7	159.5	158.4	156.7	154.8	152.5	143.4	125.2
10200	178.8	169.3	166.5	163.5	162.3	161.2	159.4	157.6	155.2	145.9	127.4
10600	181.6	172.0	169.2	166.1	165.0	163.8	162.0	160.1	157.7	148.2	129.4
CLIMB LIMIT WT (1000 LB)	164.5	163.9	163.5	163.1	162.9	162.8	161.2	159.4	156.2	143.5	120.4

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3200 lb.

With engine anti-ice on, decrease field limit weight by 500 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2000 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	100.1	95.0	93.5	92.0	91.4	90.4	89.4	88.1	86.3	80.7	70.4
4200	103.2	97.9	96.4	94.8	94.2	93.2	92.2	90.9	88.9	83.3	72.7
4600	109.2	103.7	102.0	100.4	99.7	98.6	97.6	96.2	94.2	88.2	77.0
5000	114.8	109.0	107.3	105.6	104.9	103.7	102.6	101.2	99.1	92.8	81.1
5400	120.0	114.0	112.1	110.4	109.6	108.4	107.3	105.8	103.5	97.0	84.7
5800	125.0	118.7	116.8	114.9	114.2	112.9	111.7	110.2	107.8	101.0	88.2
6200	129.9	123.3	121.3	119.4	118.6	117.3	116.0	114.4	112.0	104.8	91.5
6600	134.5	127.7	125.6	123.6	122.8	121.5	120.1	118.5	115.9	108.5	94.7
7000	138.8	131.7	129.6	127.5	126.6	125.3	123.9	122.2	119.5	111.8	97.5
7400	142.5	135.2	133.0	130.9	130.0	128.6	127.2	125.4	122.6	114.7	99.9
7800	146.2	138.6	136.3	134.2	133.2	131.8	130.3	128.5	125.7	117.5	102.3
8200	149.7	142.0	139.6	137.4	136.4	134.9	133.4	131.5	128.6	120.2	104.6
8600	153.2	145.2	142.8	140.5	139.5	138.0	136.5	134.5	131.5	122.9	106.8
9000	156.6	148.4	145.9	143.6	142.6	141.0	139.4	137.4	134.4	125.5	109.0
9400	159.9	151.6	149.0	146.6	145.5	143.9	142.3	140.3	137.2	128.1	111.1
9800	163.1	154.6	151.9	149.5	148.4	146.8	145.1	143.0	139.8	130.5	113.2
10200	166.0	157.3	154.6	152.1	151.0	149.3	147.7	145.5	142.3	132.8	115.2
10600	168.7	159.8	157.1	154.5	153.4	151.7	150.0	147.8	144.6	134.9	117.0
CLIMB LIMIT WT (1000 LB)	154.0	153.1	152.8	152.4	152.2	150.7	149.3	146.7	142.1	129.8	107.7

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	92.3	87.7	86.2	84.9	83.8	82.7	81.6	80.4	78.4	73.4	63.7
4200	95.2	90.4	88.9	87.5	86.4	85.3	84.2	82.9	80.8	75.7	65.8
4600	100.7	95.7	94.2	92.7	91.5	90.4	89.2	87.8	85.6	80.2	69.7
5000	106.0	100.7	99.0	97.5	96.3	95.1	93.8	92.3	90.1	84.4	73.4
5400	110.8	105.2	103.5	101.9	100.6	99.4	98.0	96.5	94.2	88.2	76.7
5800	115.4	109.6	107.8	106.1	104.8	103.5	102.1	100.5	98.0	91.8	79.8
6200	119.8	113.8	112.0	110.2	108.8	107.4	106.0	104.3	101.8	95.3	82.8
6600	124.1	117.8	115.9	114.1	112.6	111.2	109.7	108.0	105.3	98.6	85.6
7000	128.0	121.5	119.5	117.6	116.1	114.6	113.1	111.3	108.6	101.6	88.2
7400	131.4	124.7	122.6	120.7	119.1	117.6	116.0	114.2	111.3	104.1	90.3
7800	134.7	127.8	125.7	123.7	122.1	120.5	118.8	116.9	114.0	106.6	92.3
8200	137.9	130.8	128.6	126.6	124.9	123.3	121.6	119.7	116.6	109.0	94.3
8600	141.0	133.7	131.5	129.4	127.7	126.0	124.3	122.3	119.2	111.4	96.3
9000	144.1	136.6	134.3	132.2	130.5	128.7	127.0	124.9	121.7	113.7	98.2
9400	147.1	139.5	137.1	134.9	133.1	131.4	129.6	127.4	124.2	116.0	100.1
9800	150.0	142.2	139.8	137.5	135.7	133.9	132.1	129.9	126.6	118.1	101.9
10200	152.7	144.7	142.2	139.9	138.1	136.2	134.4	132.2	128.8	120.2	103.7
10600	155.1	147.0	144.5	142.2	140.3	138.4	136.5	134.3	130.8	122.1	105.3
CLIMB LIMIT WT (1000 LB)	141.1	140.5	140.2	139.9	138.2	136.6	134.6	131.9	127.5	116.7	96.1

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3200 lb.

With engine anti-ice on, decrease field limit weight by 500 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2000 lb and climb limit weight by 3400 lb.

Takeoff Field Corrections - Wet Runway**Slope Corrections**

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4320	4290	4260	4230	4200	4150	4110	4060	4010
4600	4760	4720	4680	4640	4600	4540	4470	4410	4350
5000	5200	5150	5100	5050	5000	4920	4840	4760	4690
5400	5640	5580	5520	5460	5400	5310	5210	5120	5020
5800	6080	6010	5940	5870	5800	5690	5580	5470	5360
6200	6520	6440	6360	6280	6200	6070	5950	5820	5700
6600	6960	6870	6780	6690	6600	6460	6320	6180	6030
7000	7400	7300	7200	7100	7000	6840	6690	6530	6370
7400	7840	7730	7620	7510	7400	7230	7050	6880	6710
7800	8280	8160	8040	7920	7800	7610	7420	7230	7050
8200	8730	8600	8470	8330	8200	8000	7790	7590	7380
8600	9190	9040	8900	8750	8600	8380	8160	7940	7720
9000	9650	9490	9330	9160	9000	8760	8530	8290	8060
9400	10110	9930	9760	9580	9400	9150	8900	8650	8390
9800	10570	10380	10190	9990	9800	9530	9270	9000	8730
10200	11030	10820	10620	10410	10200	9920	9630	9350	9070
10600	11490	11270	11050	10820	10600	10300	10000	9700	9400
11000	11950	11710	11480	11240	11000	10680	10370	10050	9730
11400	12410	12160	11910	11650	11400	11070	10730	10400	10070
11800	12870	12600	12340	12070	11800	11450	11100	10750	10400

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3050	3430	3820	4200	4460	4730	5000	5290
4600	3390	3790	4200	4600	4870	5160	5450	5750
5000	3730	4150	4580	5000	5290	5580	5890	6200
5400	4070	4510	4960	5400	5700	6010	6330	6660
5800	4410	4870	5340	5800	6120	6440	6770	7120
6200	4750	5230	5720	6200	6530	6870	7220	7570
6600	5090	5590	6100	6600	6940	7300	7660	8030
7000	5420	5950	6470	7000	7360	7720	8100	8490
7400	5760	6310	6850	7400	7770	8150	8540	8950
7800	6100	6670	7230	7800	8180	8580	8990	9400
8200	6440	7030	7610	8200	8600	9010	9430	9860
8600	6780	7390	7990	8600	9010	9440	9870	10320
9000	7120	7750	8370	9000	9430	9860	10310	10780
9400	7460	8110	8750	9400	9840	10290	10760	11230
9800	7800	8470	9130	9800	10250	10720	11200	11690
10200	8140	8830	9510	10200	10670	11150	11640	12150
10600	8480	9190	9890	10600	11080	11580	12080	12600
11000	8820	9550	10270	11000	11490	12000	12530	13060
11400	9160	9910	10650	11400	11910	12430	12970	13520
11800	9500	10270	11030	11800	12320	12860	13410	13980

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	132.3	124.7	122.4	120.1	119.2	118.3	117.4	116.6	115.7	108.8	95.6
4200	136.2	128.4	126.0	123.6	122.7	121.8	120.9	120.0	119.1	112.0	98.4
4600	143.9	135.5	133.0	130.5	129.5	128.6	127.6	126.7	125.7	118.2	103.9
5000	151.1	142.3	139.7	137.1	136.0	135.0	134.0	133.0	132.0	124.1	109.0
5400	157.8	148.7	145.9	143.1	142.0	141.0	139.9	138.9	137.9	129.6	113.8
5800	164.3	154.7	151.8	149.0	147.9	146.7	145.7	144.6	143.5	134.9	118.4
6200	170.6	160.7	157.6	154.7	153.5	152.4	151.2	150.1	149.0	140.0	122.9
6600	176.6	166.3	163.2	160.1	158.9	157.7	156.6	155.4	154.2	144.9	127.2
7000	182.3	171.7	168.4	165.2	164.0	162.8	161.5	160.3	159.1	149.5	131.2
7400	187.5	176.5	173.1	169.9	168.6	167.3	166.0	164.8	163.6	153.6	134.7
7800	189.9	181.2	177.7	174.3	173.0	171.7	170.4	169.1	167.8	157.6	138.1
8200	189.9	185.7	182.2	178.7	177.3	176.0	174.7	173.3	172.0	161.5	141.5
8600	189.9	189.9	186.5	182.9	181.5	180.1	178.8	177.4	176.0	165.3	144.7
9000	189.9	189.9	189.9	187.0	185.5	184.1	182.7	181.3	179.9	168.8	147.7
9400	189.9	189.9	189.9	189.9	189.3	187.8	186.4	185.0	183.5	172.2	150.6
9800	189.9	189.9	189.9	189.9	189.9	189.9	189.9	188.5	187.1	175.5	153.3
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	178.7	156.1
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	181.9	158.9
CLIMB LIMIT WT (1000 LB)	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	179.4	148.2

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	123.5	116.4	114.2	112.1	111.2	110.4	109.6	108.8	107.2	101.2	89.2
4200	127.2	119.8	117.6	115.4	114.5	113.7	112.8	112.0	110.3	104.1	91.8
4600	134.3	126.5	124.1	121.8	120.9	120.0	119.1	118.2	116.5	109.9	96.8
5000	141.0	132.8	130.3	127.9	126.9	126.0	125.1	124.1	122.3	115.4	101.6
5400	147.2	138.7	136.1	133.5	132.5	131.5	130.6	129.6	127.7	120.5	106.1
5800	153.3	144.4	141.6	139.0	137.9	136.9	135.9	134.9	132.9	125.4	110.3
6200	159.1	149.9	147.1	144.3	143.2	142.1	141.1	140.0	137.9	130.1	114.5
6600	164.8	155.2	152.2	149.3	148.2	147.1	146.0	144.9	142.8	134.7	118.5
7000	170.0	160.1	157.1	154.1	152.9	151.8	150.7	149.5	147.3	138.9	122.2
7400	174.8	164.6	161.4	158.3	157.2	156.0	154.8	153.7	151.3	142.7	125.5
7800	179.4	168.9	165.7	162.5	161.2	160.0	158.8	157.7	155.3	146.4	128.6
8200	183.9	173.1	169.8	166.5	165.2	164.0	162.8	161.5	159.1	149.9	131.7
8600	188.3	177.2	173.7	170.4	169.1	167.8	166.5	165.3	162.8	153.4	134.6
9000	189.9	181.1	177.6	174.1	172.8	171.5	170.2	168.9	166.3	156.7	137.4
9400	189.9	184.7	181.1	177.6	176.2	174.9	173.5	172.2	169.6	159.7	140.0
9800	189.9	188.3	184.6	181.0	179.6	178.2	176.8	175.5	172.8	162.7	142.5
10200	189.9	189.9	188.1	184.4	182.9	181.5	180.1	178.8	176.0	165.7	145.1
10600	189.9	189.9	189.9	187.7	186.2	184.8	183.4	182.0	179.1	168.6	147.6
CLIMB LIMIT WT (1000 LB)	187.2	186.9	186.6	186.2	186.1	185.9	185.7	185.5	181.8	167.2	138.4

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3200 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1900 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	115.0	108.4	106.3	104.3	103.6	102.8	102.1	101.0	99.5	94.3	83.6
4200	118.4	111.5	109.4	107.4	106.6	105.8	105.1	103.9	102.5	97.0	86.1
4600	125.0	117.8	115.5	113.3	112.5	111.7	110.9	109.7	108.2	102.4	90.8
5000	131.3	123.6	121.3	119.0	118.1	117.3	116.5	115.2	113.5	107.5	95.3
5400	137.1	129.1	126.6	124.2	123.3	122.4	121.6	120.2	118.5	112.2	99.5
5800	142.7	134.3	131.8	129.3	128.3	127.4	126.5	125.1	123.3	116.7	103.4
6200	148.1	139.5	136.8	134.2	133.2	132.3	131.3	129.8	128.0	121.1	107.3
6600	153.3	144.4	141.6	138.9	137.9	136.9	135.9	134.4	132.5	125.4	111.1
7000	158.2	148.9	146.1	143.3	142.2	141.2	140.2	138.6	136.7	129.3	114.5
7400	162.6	153.0	150.1	147.2	146.1	145.1	144.0	142.4	140.4	132.8	117.5
7800	166.9	157.0	154.0	151.0	149.9	148.8	147.7	146.1	144.0	136.2	120.5
8200	171.0	160.9	157.8	154.7	153.6	152.4	151.3	149.6	147.5	139.4	123.3
8600	175.0	164.6	161.4	158.3	157.1	155.9	154.8	153.0	150.8	142.6	126.0
9000	178.8	168.2	164.9	161.7	160.5	159.3	158.1	156.3	154.0	145.6	128.6
9400	182.4	171.5	168.1	164.8	163.6	162.4	161.2	159.3	157.0	148.4	130.9
9800	186.0	174.8	171.3	168.0	166.7	165.5	164.2	162.3	160.0	151.1	133.3
10200	189.4	178.0	174.5	171.0	169.8	168.5	167.3	165.3	162.9	153.8	135.6
10600	189.9	181.2	177.6	174.1	172.8	171.5	170.2	168.2	165.8	156.5	137.9
CLIMB LIMIT WT (1000 LB)	175.4	175.1	174.8	174.4	174.3	174.1	173.9	172.1	168.9	155.8	130.5

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	107.1	100.9	99.0	97.2	96.5	95.8	94.8	93.7	92.3	87.3	77.4
4200	110.2	103.9	101.9	100.1	99.3	98.6	97.6	96.5	95.0	89.8	79.6
4600	116.4	109.6	107.6	105.6	104.9	104.1	103.0	101.8	100.3	94.8	84.0
5000	122.2	115.1	113.0	110.9	110.1	109.3	108.1	106.9	105.3	99.5	88.2
5400	127.6	120.1	117.9	115.7	114.9	114.1	112.8	111.5	109.9	103.8	92.0
5800	132.8	125.0	122.7	120.4	119.5	118.7	117.4	116.0	114.3	108.0	95.6
6200	137.8	129.8	127.3	125.0	124.1	123.2	121.8	120.4	118.6	112.1	99.2
6600	142.7	134.3	131.8	129.4	128.4	127.5	126.1	124.6	122.8	116.0	102.7
7000	147.2	138.5	136.0	133.4	132.5	131.5	130.0	128.5	126.6	119.6	105.8
7400	151.2	142.3	139.6	137.0	136.0	135.1	133.6	132.0	130.0	122.7	108.6
7800	155.2	146.0	143.2	140.5	139.5	138.5	136.9	135.4	133.3	125.8	111.2
8200	159.0	149.5	146.7	143.9	142.9	141.8	140.2	138.6	136.5	128.8	113.7
8600	162.6	152.9	150.0	147.2	146.1	145.0	143.4	141.7	139.5	131.6	116.2
9000	166.2	156.2	153.2	150.3	149.2	148.1	146.4	144.7	142.5	134.4	118.5
9400	169.4	159.3	156.2	153.2	152.1	151.0	149.2	147.5	145.2	136.9	120.6
9800	172.7	162.2	159.1	156.1	154.9	153.8	152.0	150.2	147.8	139.3	122.7
10200	175.9	165.2	162.0	158.9	157.7	156.5	154.7	152.9	150.5	141.8	124.9
10600	179.0	168.1	164.9	161.7	160.5	159.3	157.5	155.6	153.1	144.3	127.0
CLIMB LIMIT WT (1000 LB)	164.5	163.9	163.5	163.1	162.9	162.8	161.2	159.4	156.2	143.5	120.4

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3200 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1900 lb and climb limit weight by 3400 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	99.7	94.0	92.2	90.5	89.9	88.9	87.9	86.7	85.0	80.0	70.5
4200	102.7	96.7	94.9	93.2	92.5	91.5	90.5	89.2	87.4	82.3	72.6
4600	108.4	102.1	100.2	98.4	97.6	96.6	95.5	94.1	92.3	86.8	76.6
5000	113.8	107.2	105.1	103.2	102.5	101.4	100.2	98.8	96.8	91.1	80.3
5400	118.7	111.8	109.7	107.7	106.9	105.8	104.6	103.1	101.0	95.0	83.8
5800	123.6	116.3	114.2	112.1	111.3	110.0	108.8	107.2	105.1	98.8	87.1
6200	128.3	120.8	118.5	116.3	115.5	114.2	112.9	111.3	109.1	102.6	90.3
6600	132.7	125.0	122.6	120.4	119.5	118.2	116.9	115.2	112.9	106.1	93.4
7000	136.9	128.9	126.5	124.1	123.2	121.9	120.5	118.8	116.4	109.4	96.3
7400	140.6	132.4	129.9	127.5	126.5	125.1	123.7	121.9	119.4	112.3	98.7
7800	144.3	135.7	133.1	130.7	129.7	128.2	126.8	125.0	122.4	115.0	101.1
8200	147.8	139.0	136.3	133.8	132.8	131.3	129.8	127.9	125.3	117.7	103.3
8600	151.1	142.1	139.4	136.8	135.7	134.2	132.7	130.7	128.0	120.2	105.5
9000	154.3	145.1	142.3	139.6	138.6	137.0	135.4	133.4	130.7	122.7	107.6
9400	157.3	147.9	145.0	142.3	141.2	139.6	138.0	135.9	133.1	124.9	109.4
9800	160.3	150.6	147.7	144.9	143.8	142.1	140.5	138.4	135.5	127.1	111.3
10200	163.2	153.3	150.3	147.4	146.3	144.6	143.0	140.8	137.9	129.3	113.1
10600	166.1	156.0	152.9	150.0	148.9	147.1	145.4	143.3	140.2	131.5	115.0
CLIMB LIMIT WT (1000 LB)	154.0	153.1	152.8	152.4	152.2	150.7	149.3	146.7	142.1	129.8	107.7

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-10	0	10	14	18	22	26	30	40	60
4000	92.1	86.8	85.2	83.7	82.6	81.6	80.5	79.3	77.5	72.9	64.1
4200	94.8	89.3	87.7	86.1	85.0	83.9	82.8	81.6	79.7	75.0	65.9
4600	100.1	94.3	92.6	90.9	89.7	88.6	87.4	86.1	84.1	79.2	69.5
5000	105.0	99.0	97.1	95.4	94.2	93.0	91.7	90.4	88.3	83.1	72.9
5400	109.6	103.3	101.4	99.5	98.2	97.0	95.7	94.2	92.1	86.6	76.0
5800	114.0	107.4	105.4	103.5	102.2	100.8	99.5	98.0	95.8	90.0	79.0
6200	118.4	111.5	109.4	107.4	106.0	104.7	103.3	101.7	99.4	93.4	81.9
6600	122.5	115.4	113.2	111.1	109.7	108.3	106.9	105.2	102.8	96.7	84.7
7000	126.3	119.0	116.7	114.6	113.1	111.6	110.2	108.5	106.0	99.6	87.3
7400	129.7	122.1	119.8	117.6	116.1	114.6	113.0	111.3	108.7	102.2	89.4
7800	133.0	125.2	122.8	120.5	119.0	117.4	115.8	114.0	111.4	104.6	91.5
8200	136.2	128.1	125.7	123.3	121.7	120.1	118.5	116.7	113.9	107.0	93.5
8600	139.2	131.0	128.5	126.0	124.4	122.7	121.1	119.2	116.4	109.2	95.4
9000	142.1	133.7	131.1	128.6	126.9	125.2	123.5	121.6	118.7	111.4	97.2
9400	144.8	136.1	133.5	131.0	129.3	127.5	125.8	123.8	120.8	113.3	98.8
9800	147.5	138.6	135.9	133.3	131.6	129.8	128.0	126.0	122.9	115.3	100.4
10200	150.1	141.1	138.3	135.7	133.9	132.1	130.2	128.1	125.1	117.2	102.0
10600	152.8	143.5	140.7	138.0	136.2	134.3	132.4	130.3	127.2	119.2	103.7
CLIMB LIMIT WT (1000 LB)	141.1	140.5	140.2	139.9	138.2	136.6	134.6	131.9	127.5	116.7	96.1

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3200 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1900 lb and climb limit weight by 3400 lb.

Takeoff Obstacle Limit Weight**Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	170.1	188.2							
50	158.4	174.9	187.6						
100	148.2	164.5	176.8	186.2					
150	140.3	156.2	168.4	177.9	185.3				
200	133.8	149.2	161.4	171.0	178.6	184.7	189.5		
250	128.0	143.1	155.2	164.9	172.7	179.0	184.2	188.5	
300	122.9	137.8	149.7	159.5	167.4	173.9	179.3	183.8	187.6
350	118.3	133.0	144.8	154.5	162.6	169.2	174.8	179.5	183.5
400	114.0	128.6	140.3	150.0	158.1	164.9	170.6	175.5	179.6
450	110.1	124.6	136.2	145.8	154.0	160.9	166.7	171.7	176.0
500	106.4	120.8	132.4	142.0	150.1	157.1	163.0	168.1	172.6
550	103.0	117.3	128.8	138.4	146.5	153.5	159.5	164.7	169.3
600	99.8	114.0	125.5	135.1	143.2	150.2	156.3	161.5	166.1
650	96.8	111.0	122.4	131.9	140.0	147.0	153.1	158.5	163.2
700	93.9	108.0	119.4	128.9	137.0	144.0	150.2	155.6	160.3
750	91.3	105.3	116.6	126.1	134.2	141.2	147.4	152.8	157.6
800		102.6	113.9	123.4	131.5	138.5	144.7	150.1	155.0
850		100.1	111.4	120.8	128.9	135.9	142.1	147.6	152.5
900		97.7	109.0	118.4	126.5	133.5	139.7	145.1	150.0
950		95.5	106.6	116.0	124.1	131.1	137.3	142.8	147.7
1000		93.3	104.4	113.8	121.8	128.8	135.0	140.5	145.5

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
30 & BELOW	0	0	0	0	0	0
32	-1.3	-1.6	-2.0	-2.3	-2.7	-3.0
34	-2.6	-3.3	-3.9	-4.6	-5.3	-6.0
36	-3.9	-4.9	-5.9	-6.9	-8.0	-9.0
38	-5.2	-6.5	-7.9	-9.3	-10.6	-12.0
40	-6.5	-8.2	-9.9	-11.6	-13.3	-15.0
42	-7.8	-9.8	-11.8	-13.8	-15.9	-17.9
44	-9.1	-11.4	-13.7	-16.1	-18.4	-20.8
46	-10.4	-13.0	-15.7	-18.3	-21.0	-23.7
48	-11.7	-14.6	-17.6	-20.6	-23.6	-26.6
50	-12.9	-16.3	-19.6	-22.9	-26.2	-29.5

Takeoff Obstacle Limit Weight Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
S.L.& BELOW	0	0	0	0	0	0
1000	-4.4	-5.2	-6.0	-6.9	-7.7	-8.5
2000	-8.8	-10.5	-12.1	-13.7	-15.4	-17.0
3000	-11.8	-14.1	-16.4	-18.8	-21.1	-23.4
4000	-14.7	-17.7	-20.7	-23.8	-26.8	-29.8
5000	-17.4	-21.0	-24.7	-28.4	-32.0	-35.7
6000	-20.0	-24.4	-28.7	-33.0	-37.3	-41.6
7000	-22.7	-27.7	-32.7	-37.8	-42.8	-47.8
8000	-25.3	-31.0	-36.8	-42.5	-48.2	-54.0
9000	-28.0	-34.5	-40.9	-47.4	-53.9	-60.3
10000	-30.7	-37.9	-45.1	-52.3	-59.5	-66.6

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
15 TW	-19.9	-19.4	-18.8	-18.3	-17.7	-17.2
10 TW	-13.3	-12.9	-12.6	-12.2	-11.8	-11.5
5 TW	-6.6	-6.5	-6.3	-6.1	-5.9	-5.7
0	0	0	0	0	0	0
10 HW	2.6	2.4	2.2	2.0	1.8	1.6
2 OHW	5.2	4.8	4.4	4.1	3.7	3.3
3 OHW	8.0	7.4	6.8	6.2	5.5	4.9
40 HW	10.8	10.0	9.1	8.3	7.4	6.6

With engine bleed for packs off, increase weight by 1300lb.

With engine anti-ice on, decrease weight by 600lb.

With engine and wing anti-ice on, decrease weight by 3700 lb (optional system).

**Tire Speed Limit Weight
Flaps 5 Limit Weight (1000 LB)**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	190.0	190.0	182.9	168.6	155.3	
52	190.0	190.0	184.2	169.8	156.4	
50	190.0	190.0	185.5	171.0	157.5	144.9
48	190.0	190.0	186.8	172.2	158.7	146.0
46	190.0	190.0	188.1	173.5	159.8	147.0
44	190.0	190.0	189.5	174.7	161.0	148.1
42	190.0	190.0	190.0	176.0	162.1	149.2
40	190.0	190.0	190.0	177.3	163.3	150.3
38	190.0	190.0	190.0	178.6	164.5	151.4
36	190.0	190.0	190.0	179.9	165.7	152.6
34	190.0	190.0	190.0	181.3	166.9	153.7
32	190.0	190.0	190.0	182.7	168.2	154.8
30	190.0	190.0	190.0	184.0	169.5	156.0
28	190.0	190.0	190.0	185.4	170.7	157.1
26	190.0	190.0	190.0	186.7	171.9	158.2
24	190.0	190.0	190.0	188.1	173.2	159.4
22	190.0	190.0	190.0	189.4	174.5	160.5
20	190.0	190.0	190.0	190.0	175.7	161.7
18	190.0	190.0	190.0	190.0	177.0	162.9
16	190.0	190.0	190.0	190.0	178.3	164.1
14	190.0	190.0	190.0	190.0	179.7	165.3
12	190.0	190.0	190.0	190.0	181.1	166.6
10	190.0	190.0	190.0	190.0	182.4	167.8
-40	190.0	190.0	190.0	190.0	190.0	190.0

Increase tire speed limit weight by 1100 lb per knot headwind.

Decrease tire speed limit weight by 2500 lb per knot tailwind.

Brake Energy Limits VMBE
Maximum Brake Energy Speed

OAT (°C)	REFERENCE VMBE (KIAS)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	187					
50	188	182				
46	189	182	176			
42	189	183	177	171		
38	190	184	178	171	165	
34	191	185	178	172	166	160
30	191	185	179	173	167	161
26	193	187	180	174	168	162
22	194	188	181	175	169	163
18	195	189	183	176	170	164
14	197	190	184	178	171	165
10	198	192	185	179	173	167
6	200	193	187	180	174	168
2	202	195	188	182	175	169
-2	203	196	190	183	177	170
-6	205	198	191	185	178	172
-10	207	200	193	186	180	173

Weight Adjusted VMBE

WEIGHT (1000 LB)	REFERENCE VMBE (KIAS)															
	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	
90	170	176	182	189	195	201	207	210	210	210	210	210	210	210	210	
100	160	166	172	178	184	190	195	201	207	210	210	210	210	210	210	
110	152	157	163	168	174	179	185	190	196	201	207	210	210	210	210	
120	145	150	155	160	166	171	176	181	187	192	197	202	207	210	210	
130	139	144	149	154	159	164	168	173	178	183	188	193	198	203	208	
140	133	138	143	147	152	157	162	166	171	176	181	185	190	195	200	
150	128	133	137	142	146	151	156	160	165	169	174	179	183	188	192	
160	124	128	133	137	141	146	150	155	159	164	168	172	177	181	186	
170	120	124	129	133	137	141	146	150	154	158	163	167	171	175	180	
180	117	121	125	129	133	137	141	146	150	154	158	162	166	170	174	
190	114	118	122	126	130	133	137	141	145	149	153	157	161	165	169	

Increase VMBE by 1 knot per 1% uphill runway slope. Decrease VMBE by 4 knots per 1% downhill runway slope.

Increase VMBE by 2 knots per 10 knots headwind. Decrease VMBE by 19 knots per 10 knots tailwind.

Decrease brake release weight by 1100 lb for each knot V1 exceeds VMBE.

Determine normal V1, VR, V2 speeds for lower brake release weight.

Performance Dispatch

Chapter PD

Enroute

Section 41

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31700	-8	33300*	33300*	33200	31600	30100
180	32900	-10	34600*	34600*	34400	32800	31300
170	34100	-13	35900*	35900*	35600	34000	32600
160	35400	-16	37200*	37200*	36800	35300	33800
150	36700	-17	38400*	38400*	38200	36700	35200
140	38100	-17	39700*	39700*	39600	38100	36700
130	39700	-17	41000	41000	41000	39600	38200
120	41000	-17	41000	41000	41000	41000	39900
110	41000	-17	41000	41000	41000	41000	41000
100	41000	-17	41000	41000	41000	41000	41000
90	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31700	-2	31500*	31500*	31500*	31500*	30100
180	32900	-5	33500*	33500*	33500*	32800	31300
170	34100	-7	35100*	35100*	35100*	34000	32600
160	35400	-10	36400*	36400*	36400*	35300	33800
150	36700	-12	37700*	37700*	37700*	36700	35200
140	38100	-12	39000*	39000*	39000*	38100	36700
130	39700	-12	40300*	40300*	40300*	39600	38200
120	41000	-12	41000	41000	41000	41000	39900
110	41000	-12	41000	41000	41000	41000	41000
100	41000	-12	41000	41000	41000	41000	41000
90	41000	-12	41000	41000	41000	41000	4100

ISA + 20°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31700	4	24300*	24300*	24300*	24300*	24300*
180	32900	1	24800*	24800*	24800*	24800*	24800*
170	34100	-2	30700*	30700*	30700*	30700*	30700*
160	35400	-5	34800*	34800*	34800*	34800*	33800
150	36700	-6	36300*	36300*	36300*	36300*	35200
140	38100	-6	37600*	37600*	37600*	37600*	36700
130	39700	-6	38800*	38800*	38800*	38800*	38200
120	41000	-6	40100*	40100*	40100*	40100*	39900
110	41000	-6	41000	41000	41000	41000	41000
100	41000	-6	41000	41000	41000	41000	41000
90	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
271	253	237	223	211	200	191	182	174	167	161
526	495	467	442	420	400	383	367	352	339	326
782	738	697	662	629	600	575	552	530	510	491
1038	980	928	881	839	800	767	736	707	681	657
1294	1223	1158	1100	1048	1000	959	920	885	852	822
1550	1465	1388	1319	1257	1200	1151	1105	1062	1023	987
1806	1708	1618	1538	1466	1400	1343	1289	1240	1194	1153
2061	1950	1848	1758	1676	1600	1535	1474	1417	1366	1318
2317	2193	2079	1977	1885	1800	1727	1658	1595	1537	1484
2573	2435	2309	2196	2094	2000	1919	1843	1773	1708	1649
2829	2678	2539	2415	2303	2200	2111	2027	1950	1879	1814
3084	2920	2769	2635	2512	2400	2302	2212	2128	2050	1980
3340	3163	3000	2854	2722	2600	2494	2396	2305	2222	2145
3596	3405	3230	3073	2931	2800	2687	2581	2483	2393	2311
3852	3648	3460	3292	3140	3000	2879	2765	2661	2564	2476
4108	3890	3690	3512	3349	3200	3071	2950	2838	2735	2641
4364	4133	3921	3731	3559	3400	3263	3135	3016	2907	2806
4620	4375	4151	3950	3768	3600	3455	3320	3194	3078	2971
4876	4618	4381	4169	3977	3800	3647	3504	3372	3249	3137
5132	4860	4611	4388	4186	4000	3839	3689	3550	3420	3302
5388	5103	4841	4607	4395	4200	4031	3874	3727	3592	3467
5643	5345	5072	4827	4605	4400	4223	4058	3905	3763	3633
5899	5588	5302	5046	4814	4600	4415	4243	4082	3934	3798
6155	5830	5532	5265	5023	4800	4607	4427	4260	4105	3964
6411	6073	5763	5485	5232	5000	4799	4612	4438	4277	4129
6667	6315	5993	5704	5442	5200	4991	4796	4615	4448	4294
6923	6558	6223	5923	5651	5400	5183	4981	4793	4619	4460
7179	6801	6454	6142	5860	5600	5375	5165	4970	4790	4625
7435	7043	6684	6362	6069	5800	5567	5350	5148	4961	4790
7691	7286	6914	6581	6279	6000	5759	5534	5325	5132	4955

.80M Trip Fuel and Time**Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.5	0:36	3.4	0:36	3.4	0:36	3.4	0:36	3.4	0:36
400	6.1	1:01	5.9	1:02	5.7	1:02	5.6	1:02	5.5	1:03
600	8.8	1:27	8.4	1:27	8.1	1:28	7.8	1:28	7.5	1:29
800	11.4	1:52	10.9	1:53	10.4	1:54	10.0	1:55	9.7	1:55
1000	14.1	2:18	13.4	2:19	12.8	2:20	12.2	2:21	11.8	2:21
1200	16.8	2:43	16.0	2:44	15.2	2:46	14.5	2:47	13.9	2:47
1400	19.5	3:09	18.5	3:10	17.6	3:11	16.8	3:13	16.1	3:14
1600	22.2	3:34	21.1	3:36	20.0	3:37	19.0	3:39	18.3	3:40
1800	24.9	3:59	23.6	4:01	22.4	4:03	21.3	4:05	20.5	4:06
2000	27.6	4:25	26.2	4:27	24.8	4:29	23.6	4:31	22.6	4:32
2200	30.4	4:50	28.8	4:53	27.3	4:55	25.9	4:57	24.9	4:59
2400	33.2	5:16	31.4	5:18	29.7	5:21	28.3	5:23	27.2	5:25
2600	36.0	5:41	34.0	5:44	32.2	5:47	30.6	5:50	29.4	5:51
2800	38.8	6:07	36.6	6:10	34.7	6:13	33.0	6:16	31.7	6:17
3000	41.5	6:32	39.3	6:35	37.2	6:39	35.4	6:42	34.0	6:43
3200	44.4	6:58	41.9	7:01	39.7	7:04	37.8	7:08	36.4	7:10
3400	47.2	7:23	44.6	7:27	42.3	7:30	40.3	7:34	38.8	7:36
3600	50.0	7:48	47.3	7:52	44.9	7:56	42.7	8:00	41.2	8:02
3800	52.9	8:14	50.0	8:18	47.4	8:22	45.2	8:26	43.6	8:28
4000	55.7	8:39	52.7	8:44	50.0	8:48	47.7	8:52	46.0	8:55
4200	58.6	9:05	55.5	9:09	52.7	9:14	50.3	9:18	48.6	9:21
4400	61.6	9:30	58.3	9:35	55.3	9:40	52.9	9:44	51.2	9:47
4600	64.5	9:56	61.1	10:01	58.0	10:06	55.5	10:11	53.8	10:13
4800	67.4	10:21	63.9	10:26	60.7	10:31	58.0	10:37	56.4	10:40
5000	70.4	10:47	66.7	10:52	63.4	10:57	60.6	11:03	59.0	11:06
5200	73.4	11:12	69.6	11:18	66.2	11:23	63.5	11:29		
5400	76.5	11:38	72.5	11:43	69.1	11:49	66.3	11:55		
5600	79.5	12:03	75.5	12:09	71.9	12:15	69.1	12:21		
5800	82.6	12:28	78.4	12:35	74.7	12:41	71.9	12:47		
6000	85.6	12:54	81.3	13:00	77.5	13:07	74.7	13:13		

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	LANDING WEIGHT (1000 LB)			
	90	110	130	150
10	-0.2	0.0	0.9	2.0
20	-0.3	0.0	1.8	4.8
30	-0.4	0.0	3.0	8.5
40	-0.6	0.0	4.6	13.2
50	-0.8	0.0	6.4	18.8
60	-1.0	0.0	8.5	25.4
70	-1.3	0.0	10.9	32.9
80	-1.6	0.0	13.5	41.4

Based on 280/.80M climb, .80M cruise and .80/280/250 descent.

.80M Step Climb
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
1309	1233	1165	1104	1050	1000	955	914	876	841	809
1821	1718	1625	1543	1468	1400	1338	1281	1229	1181	1137
2333	2202	2086	1981	1886	1800	1721	1649	1583	1522	1465
2844	2687	2546	2419	2304	2200	2105	2017	1937	1863	1794
3355	3171	3006	2857	2723	2600	2488	2385	2291	2203	2122
3866	3655	3466	3295	3141	3000	2871	2753	2645	2544	2451
4376	4138	3925	3733	3559	3400	3255	3122	2999	2885	2780
4886	4622	4385	4171	3977	3800	3638	3490	3353	3226	3109
5396	5106	4844	4609	4395	4200	4022	3858	3707	3567	3438
5907	5589	5304	5047	4813	4600	4405	4226	4061	3908	3767
6417	6073	5763	5484	5231	5000	4789	4594	4415	4249	4096
6927	6556	6223	5922	5649	5400	5172	4962	4769	4590	4425
7437	7040	6683	6360	6067	5800	5555	5331	5123	4931	4754
7948	7524	7143	6798	6485	6200	5939	5699	5477	5272	5082
8459	8008	7602	7236	6903	6600	6322	6067	5831	5613	5411
8970	8492	8063	7674	7322	7000	6705	6435	6185	5954	5739

Trip Fuel and Time Required

AIR DIST (NM)	TRIP FUEL (1000 LB)							TIME (HRS:MIN)
	LANDING WEIGHT (1000 LB)							
	90	100	110	120	130	140	150	
1000	10.6	11.0	11.5	12.0	12.7	13.6	14.2	2:22
1400	14.4	14.9	15.6	16.4	17.4	18.6	19.4	3:14
1800	18.2	19.0	19.8	20.9	22.3	23.7	24.8	4:07
2200	22.2	23.0	24.1	25.5	27.2	28.9	30.5	4:59
2600	26.1	27.2	28.6	30.3	32.3	34.3	36.3	5:51
3000	30.2	31.5	33.1	35.3	37.5	39.9	42.2	6:43
3400	34.3	35.8	37.9	40.3	42.9	45.7	48.3	7:35
3800	38.5	40.3	42.7	45.4	48.4	51.7	54.5	8:27
4200	42.8	44.9	47.7	50.7	54.1	57.7	61.0	9:19
4600	47.2	49.7	52.8	56.2	60.0	64.0	67.6	10:11
5000	51.7	54.6	58.0	61.8	66.1	70.4	74.5	11:03
5400	56.4	59.6	63.4	67.7	72.3	77.0	81.5	11:55
5800	61.2	64.8	68.9	73.7	78.6			12:46
6200	66.1	70.1	74.7	79.8				13:38
6600	71.2	75.5	80.6					14:30
7000	76.4	81.1						15:22

Based on 280/.80 climb, .80M cruise and .80/280/250 descent.
Valid for all pressure altitudes with 4000 ft step climb to 2000 ft above optimum altitude.

Short Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
94	80	69	61	55	50	46	42	39	36	34
161	143	129	118	108	100	93	87	82	77	73
227	206	188	173	161	150	141	132	125	118	112
291	267	246	229	213	200	188	178	168	160	152
354	327	304	283	266	250	236	224	213	202	193
417	387	361	338	318	300	284	270	257	245	234
479	446	418	392	370	350	332	316	301	288	276
542	506	475	447	422	400	380	362	346	331	317
607	567	532	502	475	450	428	408	390	373	358
673	629	591	557	527	500	476	453	433	415	398

Trip Fuel and Time Required

AIR DIST (NM)		LANDING WEIGHT (1000 LB)							TIME (HRS:MIN)
		90	100	110	120	130	140	150	
50	FUEL (1000 LB)	1.2	1.2	1.3	1.4	1.4	1.5	1.6	0:14
	ALT (FT)	12000	11000	11000	9000	9000	8000	8000	
100	FUEL (1000 LB)	1.9	2.0	2.0	2.1	2.2	2.3	2.4	0:23
	ALT (FT)	18000	17000	17000	16000	16000	16000	16000	
150	FUEL (1000 LB)	2.5	2.6	2.7	2.8	2.9	3.1	3.2	0:30
	ALT (FT)	25000	25000	24000	24000	23000	22000	22000	
200	FUEL (1000 LB)	3.0	3.1	3.3	3.4	3.6	3.7	3.9	0:37
	ALT (FT)	31000	29000	28000	27000	26000	25000	25000	
250	FUEL (1000 LB)	3.4	3.6	3.8	4.0	4.2	4.4	4.6	0:44
	ALT (FT)	39000	37000	35000	35000	31000	31000	29000	
300	FUEL (1000 LB)	3.9	4.1	4.3	4.5	4.7	5.0	5.2	0:50
	ALT (FT)	41000	41000	39000	37000	35000	35000	33000	
350	FUEL (1000 LB)	4.3	4.5	4.8	5.0	5.3	5.6	5.8	0:57
	ALT (FT)	41000	41000	41000	39000	37000	35000	35000	
400	FUEL (1000 LB)	4.7	5.0	5.3	5.5	5.8	6.1	6.4	1:03
	ALT (FT)	41000	41000	41000	39000	39000	37000	35000	
450	FUEL (1000 LB)	5.1	5.4	5.7	6.1	6.4	6.7	7.0	1:10
	ALT (FT)	41000	41000	41000	41000	39000	37000	35000	
500	FUEL (1000 LB)	5.5	5.9	6.2	6.6	6.9	7.3	7.6	1:17
	ALT (FT)	41000	41000	41000	41000	39000	37000	35000	

Based on 280/78 climb, Long Range Cruise and .78/280/250 descent.

Holding Planning
Flaps Up

WEIGHT (1000 LB)	TOTAL FUEL FLOW (LB/HR)								
	PRESSURE ALTITUDE (FT)								
	1500	5000	10000	15000	20000	25000	30000	35000	41000
190	6690	6580	6540	6480	6380	6390	6520		
180	6370	6260	6200	6160	6030	6030	6140		
170	6060	5940	5870	5830	5700	5680	5770	5950	
160	5740	5630	5550	5490	5380	5330	5410	5520	
150	5430	5320	5240	5160	5070	4970	5060	5140	
140	5110	5000	4920	4840	4760	4630	4710	4760	
130	4800	4690	4600	4520	4440	4310	4360	4400	
120	4500	4380	4290	4200	4120	4010	4010	4050	4280
110	4190	4070	3970	3890	3800	3790	3730	3760	3940
100	3890	3760	3730	3640	3550	3480	3430	3420	3560
90	3670	3550	3420	3320	3240	3180	3130	3080	3200

This table includes 5% additional fuel for holding in a racetrack pattern.

Flight Crew Oxygen Requirements
Required Pressure (PSI) for 76 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	735	1055	1360
45	113	725	1040	1340
40	104	715	1020	1320
35	95	700	1005	1300
30	86	690	990	1280
25	77	680	975	1255
20	68	670	960	1240
15	59	655	940	1215
10	50	645	925	1195
5	41	635	910	1175
0	32	620	890	1150
-5	23	610	875	1130
-10	14	600	860	1110

Required Pressure (PSI) for 114/115 Cubic Ft. Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	530	735	945
45	113	520	725	930
40	104	510	715	915
35	95	505	700	900
30	86	495	690	885
25	77	485	680	870
20	68	480	670	860
15	59	470	655	840
10	50	460	645	830
5	41	455	635	815
0	32	445	620	800
-5	23	440	610	785
-10	14	430	600	770

ENGINE INOP
MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 LB)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	97.8	94.7	91.3
28	105.7	102.2	98.7
26	114.0	110.1	106.6
24	123.5	119.3	115.3
22	134.5	129.7	125.1
20	146.3	140.9	135.4
18	157.1	151.1	144.8
16	167.6	161.6	155.0
14	177.3	171.5	165.6
12	187.8	181.1	174.0

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 LB)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-4.3	-4.0	-3.8	-3.8	-3.5	-3.3	-3.0	-2.7	-2.5
ENGINE & WING	-17.0	-15.9	-14.8	-14.8	-14.4	-13.1	-11.9	-10.9	

ALL ENGINES

**Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
286	264	244	227	213	200	189	178	169	161	154
589	538	495	459	427	400	376	354	335	318	303
892	813	747	691	642	600	563	530	501	475	452
1196	1088	998	922	857	800	750	706	667	633	601
1499	1363	1250	1154	1071	1000	938	882	834	790	750
1802	1638	1501	1385	1286	1200	1125	1059	1000	947	899
2106	1913	1752	1617	1501	1400	1312	1235	1166	1104	1049
2409	2188	2004	1848	1715	1600	1499	1411	1332	1261	1198
2712	2463	2255	2080	1930	1800	1687	1587	1498	1418	1347

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)								
	100	110	120	130	140	150	160	170	180
200	3.6	3.7	3.8	4.0	4.1	4.2	4.3	4.5	4.6
300	5.1	5.3	5.5	5.7	5.9	6.0	6.2	6.4	6.5
400	6.7	6.9	7.2	7.4	7.7	7.9	8.1	8.3	8.4
500	8.3	8.5	8.8	9.1	9.5	9.7	9.9	10.2	10.4
600	9.9	10.2	10.5	10.8	11.2	11.5	11.8	12.1	12.3
700	11.4	11.8	12.2	12.5	12.9	13.2	13.6	14.0	14.3
800	13.0	13.4	13.8	14.2	14.6	15.0	15.4	15.9	16.2
900	14.5	15.0	15.4	15.8	16.3	16.8	17.2	17.8	18.1
1000	16.1	16.5	17.0	17.5	18.0	18.6	19.1	19.6	20.0
1100	17.6	18.1	18.6	19.2	19.7	20.4	20.9	21.4	21.9
1200	19.1	19.7	20.3	20.9	21.4	22.1	22.6	23.2	23.8
1300	20.6	21.2	21.9	22.5	23.1	23.8	24.4	25.1	25.7
1400	22.2	22.8	23.5	24.1	24.8	25.5	26.2	26.9	27.6
1500	23.7	24.3	25.0	25.8	26.5	27.2	28.0	28.7	29.4
1600	25.2	25.9	26.6	27.4	28.1	28.9	29.8	30.5	31.2
1700	26.7	27.4	28.2	29.0	29.8	30.6	31.5	32.3	33.1
1800	28.2	28.9	29.8	30.6	31.5	32.3	33.2	34.1	34.9

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included.

- Adjustments:
- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
 - Increase fuel required 0.5% per 10°C above ISA.
 - When icing conditions are forecast, use the greater of engine and wing anti-ice on (9%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inop-erative driftdown and use the higher of the three.

ENGINE INOP**MAX CONTINUOUS THRUST****Decompression Critical Fuel Reserves - LRC Cruise****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
290	266	246	228	213	200	188	178	169	160	153
595	542	498	460	428	400	375	354	334	317	301
900	818	750	692	643	600	563	529	500	474	450
1205	1094	1002	924	858	800	750	705	666	630	599
1510	1370	1254	1156	1072	1000	937	881	831	787	748
1815	1646	1506	1388	1287	1200	1124	1057	997	944	896
2120	1922	1758	1620	1502	1400	1311	1233	1163	1101	1045
2425	2199	2011	1852	1717	1600	1498	1408	1329	1258	1194
2731	2475	2263	2084	1932	1800	1685	1584	1494	1414	1342

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)								
	100	110	120	130	140	150	160	170	180
200	3.1	3.2	3.4	3.5	3.7	3.8	4.0	4.1	4.2
300	4.5	4.7	4.9	5.1	5.3	5.5	5.7	5.9	6.0
400	5.9	6.1	6.4	6.7	6.9	7.2	7.5	7.7	7.8
500	7.3	7.6	7.9	8.3	8.6	8.9	9.2	9.5	9.7
600	8.7	9.0	9.5	9.8	10.2	10.5	10.9	11.2	11.5
700	10.1	10.5	11.0	11.4	11.8	12.2	12.6	13.0	13.3
800	11.5	11.9	12.4	12.9	13.3	13.8	14.3	14.8	15.1
900	12.9	13.3	13.9	14.4	14.9	15.4	16.0	16.5	17.0
1000	14.2	14.7	15.3	15.9	16.5	17.1	17.7	18.3	18.7
1100	15.5	16.1	16.8	17.4	18.1	18.7	19.4	20.0	20.5
1200	16.9	17.5	18.2	19.0	19.7	20.3	21.0	21.7	22.3
1300	18.2	18.9	19.7	20.5	21.2	21.9	22.6	23.4	24.0
1400	19.5	20.3	21.1	22.0	22.7	23.5	24.3	25.1	25.8
1500	20.9	21.7	22.6	23.4	24.2	25.1	25.9	26.8	27.5
1600	22.2	23.1	24.0	24.9	25.7	26.6	27.5	28.5	29.2
1700	23.5	24.4	25.3	26.3	27.3	28.2	29.2	30.1	30.9
1800	24.8	25.7	26.7	27.8	28.8	29.8	30.8	31.8	32.7

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.5% per 10°C above ISA.

-When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP

MAX CONTINUOUS THRUST

**Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
267	250	235	222	210	200	190	181	173	166	159
537	503	472	445	421	400	380	362	346	331	318
811	757	711	669	632	600	570	543	518	496	476
1086	1014	950	894	844	800	759	723	690	660	632
1363	1271	1190	1119	1056	1000	949	903	862	824	789
1641	1529	1431	1344	1268	1200	1138	1083	1033	987	945
1920	1787	1671	1570	1480	1400	1328	1263	1204	1150	1101
2198	2045	1912	1795	1692	1600	1517	1442	1375	1313	1257
2476	2303	2152	2020	1903	1800	1706	1622	1546	1477	1413

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)								
	100	110	120	130	140	150	160	170	180
200	3.2	3.3	3.4	3.5	3.6	3.7	3.9	4.0	4.1
300	4.3	4.4	4.6	4.7	4.9	5.2	5.4	5.6	5.8
400	5.3	5.5	5.8	6.0	6.3	6.6	6.9	7.2	7.5
500	6.3	6.6	7.0	7.3	7.6	8.0	8.4	8.8	9.2
600	7.3	7.7	8.1	8.5	8.9	9.4	9.9	10.3	10.8
700	8.3	8.8	9.3	9.7	10.3	10.8	11.4	11.9	12.5
800	9.2	9.8	10.4	10.9	11.6	12.2	12.9	13.4	14.1
900	10.2	10.9	11.5	12.2	12.8	13.6	14.3	15.0	15.7
1000	11.1	11.9	12.6	13.3	14.1	14.9	15.8	16.5	17.3
1100	12.1	12.9	13.8	14.5	15.4	16.3	17.2	18.0	18.9
1200	13.0	14.0	14.8	15.7	16.6	17.6	18.6	19.5	20.5
1300	14.0	15.0	15.9	16.9	17.9	18.9	20.0	21.0	22.0
1400	14.9	16.0	17.0	18.0	19.1	20.3	21.4	22.4	23.6
1500	15.8	16.9	18.1	19.2	20.4	21.6	22.8	23.9	25.1
1600	16.7	17.9	19.1	20.3	21.6	22.9	24.2	25.4	26.7
1700	17.6	18.9	20.2	21.5	22.8	24.2	25.5	26.8	28.2
1800	18.5	19.9	21.2	22.6	24.0	25.4	26.9	28.2	29.7

Based on: Driftdown to and cruise at level off altitude, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.5% per 10°C above ISA.
- When icing conditions are forecast, use the greater of the engine and wing anti-ice on (10%) for the total forecast time or engine and wing anti-ice on and ice drag (30%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inop-erative driftdown and use the higher of the three.

Performance Dispatch Landing

Chapter PD Section 42

Landing Field Limit Weight - Dry Runway

Flaps 40

Based on anti-skid operative and automatic speedbrakes

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000			2690	3000	3210	3440	3650	3880
3400		2760	3080	3400	3620	3860	4080	4330
3800	2820	3130	3460	3800	4030	4280	4520	4770
4200	3170	3500	3840	4200	4430	4700	4950	5220
4600	3530	3870	4220	4600	4840	5120	5380	5670
5000	3880	4240	4610	5000	5250	5540	5820	6110
5400	4230	4610	4990	5400	5660	5950	6250	6560
5800	4590	4980	5370	5800	6070	6370	6680	7010
6200	4940	5350	5750	6200	6480	6790	7120	7450
6600	5300	5720	6140	6600	6890	7210	7550	7900
7000	5650	6090	6520	7000	7300	7630	7980	8350
7400	6010	6460	6900	7400	7710	8050	8420	8790
7800	6360	6830	7290	7800	8120	8470	8850	9240
8200	6710	7200	7670	8200	8530	8890	9280	9690
8600	7070	7570	8050	8600	8940	9310	9720	10130
9000	7420	7940	8430	9000	9350	9730	10150	10580
9400	7780	8300	8820	9400	9760	10140	10580	11030
9800	8130	8670	9200	9800	10170	10560	11020	11470
10200	8490	9040	9580	10200	10570	10980	11450	
10600	8840	9410	9960	10600	10980	11400		

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
3800	97.4	91.9	86.6			
4200	110.9	104.7	98.7	93.0	87.4	
4600	123.6	117.5	110.9	104.5	98.4	92.4
5000	134.4	128.4	122.6	116.1	109.3	102.7
5400	145.2	138.6	132.3	126.2	120.3	113.1
5800	157.2	149.3	141.9	135.3	129.0	122.9
6200	169.3	160.6	152.3	144.5	137.7	131.1
6600	181.5	172.1	163.1	154.6	146.5	139.2
7000	193.0	183.7	174.0	164.9	156.1	147.8
7400		193.4	184.9	175.1	165.8	156.8
7800			193.4	185.5	175.5	165.8
8200				193.1	185.2	174.8
8600					191.1	182.7
9000						186.0
9400						189.2
9800						192.3

Decrease field limit weight by 9600 lb when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
7000				7000	7500	8050	8630	9180
7400				7400	7910	8470	9060	9630
7800			6950	7800	8320	8900	9490	10070
8200			7330	8200	8740	9320	9920	10520
8600		6840	7720	8600	9150	9740	10350	10960
9000		7210	8100	9000	9560	10160	10780	11410
9400	6690	7590	8490	9400	9970	10580	11210	11850
9800	7060	7960	8870	9800	10380	11000	11640	12300
10200	7420	8330	9260	10200	10800	11420	12080	12740
10600	7780	8710	9650	10600	11210	11850	12510	13190
11000	8140	9080	10030	11000	11620	12270	12940	13630
11400	8500	9450	10420	11400	12030	12690	13370	14080
11800	8860	9830	10800	11800	12440	13110	13800	14530
12200	9230	10200	11190	12200	12860	13530	14230	14970
12600	9590	10570	11570	12600	13270	13950	14660	15420
13000	9950	10950	11960	13000	13680	14370	15090	15860
13400	10310	11320	12350	13400	14090	14790	15520	16310
13800	10670	11690	12730	13800	14500	15220	15950	16750
14200	11030	12070	13120	14200	14920	15640	16380	17200
14600	11400	12440	13500	14600	15330	16060	16810	17640

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
7000	88.6					
7400	95.1	89.0				
7800	101.5	95.2	87.9			
8200	108.0	101.3	93.7	87.7		
8600	114.4	107.4	99.6	93.2	87.1	
9000	120.9	113.6	105.4	98.8	92.3	86.0
9400	127.3	119.7	111.2	104.3	97.6	91.0
9800	133.7	125.8	117.0	109.8	102.8	96.0
10200	140.1	131.9	122.8	115.3	108.0	100.9
10600	146.8	137.9	128.6	120.8	113.2	105.8
11000	154.1	144.0	134.4	126.3	118.4	110.8
11400	161.4	150.9	140.1	131.7	123.6	115.7
11800	168.8	157.8	146.1	137.2	128.8	120.6
12200	176.2	164.8	152.7	142.6	133.9	125.5
12600	183.7	171.8	159.2	148.6	139.1	130.4
13000	191.2	178.9	165.9	154.8	144.2	135.2
13400		186.0	172.5	161.0	150.1	140.1
13800		193.1	179.2	167.3	155.9	145.1
14200			185.9	173.6	161.8	150.6
14600			192.7	179.9	167.7	156.1
15000				186.2	173.7	161.6

Landing Field Limit Weight - Wet Runway**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (FT)**

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000				3000	3230	3490	3710	3960
3400			3050	3400	3640	3900	4140	4410
3800		3080	3430	3800	4050	4320	4580	4850
4200	3090	3450	3810	4200	4460	4740	5010	5300
4600	3440	3820	4200	4600	4860	5160	5440	5750
5000	3800	4190	4580	5000	5270	5580	5880	6190
5400	4150	4550	4960	5400	5680	6000	6310	6640
5800	4510	4920	5350	5800	6090	6420	6740	7090
6200	4860	5290	5730	6200	6500	6840	7180	7530
6600	5210	5660	6110	6600	6910	7260	7610	7980
7000	5570	6030	6490	7000	7320	7680	8040	8430
7400	5920	6400	6880	7400	7730	8090	8480	8870
7800	6280	6770	7260	7800	8140	8510	8910	9320
8200	6630	7140	7640	8200	8550	8930	9340	9770
8600	6990	7510	8020	8600	8960	9350	9780	10210
9000	7340	7880	8410	9000	9370	9770	10210	10660
9400	7690	8250	8790	9400	9780	10190	10640	11110
9800	8050	8620	9170	9800	10190	10610	11080	11550
10200	8400	8990	9550	10200	10600	11030	11510	12000
10600	8760	9360	9940	10600	11000	11450	11940	12450

Field Limit Weight (1000 LB)

WIND CORRECTED FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
4200	92.4	87.2				
4600	104.1	98.3	92.7	87.2		
5000	115.9	109.4	103.2	97.3	91.5	85.8
5400	126.2	120.3	113.8	107.3	101.0	94.9
5800	135.6	129.5	123.6	117.3	110.5	103.9
6200	145.0	138.4	132.0	126.0	120.0	112.9
6600	155.4	147.5	140.4	134.0	127.7	121.5
7000	165.9	157.4	149.3	141.9	135.2	128.8
7400	176.4	167.4	158.7	150.4	142.7	135.9
7800	186.7	177.4	168.1	159.3	150.9	142.9
8200		186.8	177.5	168.2	159.3	150.7
8600			186.6	177.2	167.7	158.6
9000			193.9	186.0	176.1	166.4
9400				192.6	184.6	174.2
9800					190.0	181.3
10200						184.9
10600						187.8
11000						190.5
11400						193.2

Decrease field limit weight by 9600 lb when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway
Flaps 40
Based on anti-skid inoperative and manual speedbrakes
Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
7000						8160	8790	9390
7400					7960	8580	9230	9840
7800				7800	8370	9000	9660	10280
8200				8200	8780	9420	10090	10730
8600			7630	8600	9190	9840	10520	11170
9000			8020	9000	9600	10260	10950	11620
9400			8400	9400	10020	10680	11380	12060
9800		7780	8790	9800	10430	11100	11810	12510
10200		8150	9170	10200	10840	11530	12240	12950
10600		8530	9560	10600	11250	11950	12670	13400
11000	7870	8900	9950	11000	11660	12370	13100	13840
11400	8230	9270	10330	11400	12080	12790	13530	14290
11800	8590	9650	10720	11800	12490	13210	13960	14730
12200	8960	10020	11100	12200	12900	13630	14390	15180
12600	9320	10390	11490	12600	13310	14050	14820	15620
13000	9680	10770	11870	13000	13720	14480	15250	16070
13400	10040	11140	12260	13400	14140	14900	15680	16510
13800	10400	11510	12650	13800	14550	15320	16120	16960
14200	10760	11890	13030	14200	14960	15740	16550	17410
14600	11130	12260	13420	14600	15370	16160	16980	17850

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
7800	85.1					
8200	90.7					
8600	96.3	90.2				
9000	102.0	95.6	88.3			
9400	107.6	100.9	93.4	87.3		
9800	113.2	106.2	98.4	92.2	86.0	
10200	118.8	111.6	103.5	97.0	90.6	
10600	124.4	116.9	108.6	101.8	95.2	88.7
11000	130.0	122.2	113.6	106.6	99.7	93.1
11400	135.5	127.5	118.7	111.4	104.3	97.4
11800	141.1	132.8	123.7	116.1	108.8	101.7
12200	147.0	138.1	128.7	120.9	113.3	106.0
12600	153.3	143.4	133.8	125.7	117.8	110.2
13000	159.7	149.3	138.8	130.4	122.3	114.5
13400	166.1	155.3	143.8	135.2	126.8	118.8
13800	172.5	161.3	149.4	139.9	131.3	123.0
14200	179.0	167.4	155.1	144.8	135.8	127.3
14600	185.5	173.5	160.8	150.1	140.3	131.5
15000	192.0	179.6	166.6	155.5	144.9	135.8

Landing Climb Limit Weight**Valid for approach with flaps 15 and landing with flaps 40****Based on engine bleed for packs on and anti-ice off**

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)												
		AIRPORT PRESSURE ALTITUDE (FT)												
°C	°F	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
54	129	151.3	147.0	142.3										
52	126	154.1	150.8	146.0	140.2									
50	122	156.8	153.6	149.8	143.9	138.1								
48	118	159.8	156.5	152.6	147.6	141.7	136.0							
46	115	162.9	159.4	155.4	150.3	145.2	139.4	133.7						
44	111	165.9	162.3	158.2	153.0	147.8	142.8	137.0	131.5					
42	108	168.8	165.2	161.0	155.6	150.4	145.3	140.3	134.7	128.6				
40	104	171.6	168.1	163.9	158.4	153.0	147.8	142.7	137.9	131.5	125.5			
38	100	174.5	171.0	166.8	161.2	155.7	150.5	145.2	140.4	134.5	128.0	122.4		
36	97	177.3	173.9	169.7	164.3	158.5	153.3	147.9	142.8	136.9	130.6	124.6	119.5	
34	93	180.0	176.8	172.7	167.2	161.5	155.9	150.6	145.2	139.3	133.0	126.7	121.7	116.4
32	90	180.3	179.6	175.8	169.9	164.1	158.3	152.8	147.4	141.5	135.2	129.0	123.9	118.7
30	86	180.5	179.8	178.9	172.5	166.8	160.6	155.0	149.6	143.6	137.4	131.3	126.1	121.0
28	82	180.6	180.0	179.0	175.0	168.9	162.6	156.8	151.0	145.6	139.4	133.4	128.1	122.9
26	79	180.8	180.2	179.2	175.2	171.0	164.3	158.4	152.4	146.8	141.3	135.3	129.8	124.8
24	75	181.0	180.3	179.4	175.3	171.1	165.9	159.7	153.6	147.9	142.4	137.1	131.4	126.2
22	72	181.2	180.5	179.5	175.4	171.2	166.0	160.8	154.9	149.0	143.4	138.1	132.8	127.4
20	68	181.3	180.6	179.7	175.6	171.4	166.1	160.9	156.0	150.1	144.4	139.0	133.7	128.5
18	64	181.5	180.8	179.8	175.7	171.5	166.2	161.0	156.1	151.1	145.4	139.9	134.6	129.4
16	61	181.6	180.9	179.9	175.8	171.6	166.3	161.1	156.2	151.2	146.3	140.8	135.4	130.2
14	57	181.8	181.1	180.1	175.9	171.7	166.4	161.2	156.2	151.3	146.3	141.6	136.2	131.0
12	54	181.9	181.2	180.2	176.0	171.8	166.5	161.3	156.3	151.3	146.4	141.7	137.0	131.7
10	50	182.1	181.3	180.3	176.1	171.9	166.6	161.3	156.4	151.4	146.5	141.7	137.0	132.4
-40	-40	183.6	182.8	181.6	177.4	173.1	167.7	162.5	157.5	152.4	147.4	142.6	138.0	133.6

With engine bleeds for packs off, increase weight by 2800 lb.

With engine anti-ice on, decrease weight by 600 lb.

With engine and wing anti-ice on, decrease weight by 3100 lb.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 16200 lb.

ENGINE INOP

ADVISORY INFORMATION

Go-Around Climb Gradient

Flaps 15

Based on engine bleed for packs on and anti-ice off

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	3.13					
50	3.82	2.73				
46	4.33	3.39	2.33			
42	4.85	3.87	2.93	1.86		
38	5.38	4.36	3.39	2.39	1.28	
34	5.91	4.88	3.86	2.83	1.67	0.73
30	6.47	5.35	4.26	3.22	2.09	1.15
26	6.51	5.71	4.55	3.50	2.44	1.49
22	6.53	5.73	4.78	3.69	2.69	1.72
18	6.56	5.75	4.79	3.87	2.85	1.89
14	6.58	5.76	4.80	3.88	3.00	2.03
10	6.61	5.78	4.82	3.89	3.01	2.17
6	6.63	5.80	4.83	3.90	3.02	2.19
2	6.65	5.81	4.85	3.91	3.03	2.20

Gradient Adjustment for Weight (%)

WEIGHT (1000 LB)	REFERENCE GO-AROUND GRADIENT (%)							
	1	2	3	4	5	6	7	8
190	-3.33	-3.66	-4.01	-4.37	-4.71	-5.06	-5.42	-5.79
180	-2.94	-3.23	-3.53	-3.85	-4.16	-4.46	-4.78	-5.12
170	-2.50	-2.75	-3.00	-3.27	-3.53	-3.79	-4.05	-4.35
160	-2.00	-2.19	-2.40	-2.61	-2.82	-3.02	-3.24	-3.47
150	-1.43	-1.57	-1.71	-1.87	-2.01	-2.16	-2.31	-2.48
140	-0.77	-0.85	-0.92	-1.01	-1.08	-1.16	-1.25	-1.34
130	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
120	0.90	0.99	1.08	1.17	1.26	1.36	1.46	1.56
110	1.98	2.17	2.37	2.58	2.79	3.00	3.22	3.43
100	3.29	3.61	3.95	4.29	4.63	4.98	5.34	5.69

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)													
	0	1	2	3	4	5	6	7	8	9	10	11	12	13
VREF40	-0.17	-0.16	-0.17	-0.17	-0.18	-0.18	-0.19	-0.19	-0.19	-0.19	-0.19	-0.19	-0.19	-0.18
VREF40+5	0	0	0	0	0	0	0	0	0	0	0	0	0	0
VREF40+10	0.11	0.10	0.10	0.10	0.10	0.10	0.09	0.09	0.09	0.08	0.08	0.07	0.07	0.08
VREF40+15	0.18	0.16	0.14	0.13	0.12	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05
VREF40+20	0.20	0.16	0.13	0.11	0.09	0.07	0.06	0.04	0.03	0.01	-0.01	-0.03	-0.04	-0.05
VREF40+25	0.17	0.12	0.08	0.04	0.00	-0.03	-0.06	-0.08	-0.10	-0.13	-0.16	-0.19	-0.21	-0.23
VREF40+30	0.10	0.04	-0.02	-0.08	-0.13	-0.18	-0.22	-0.26	-0.29	-0.33	-0.36	-0.40	-0.44	-0.48

- With engine bleed for packs off, increase gradient by 0.2%.
- With engine anti-ice on, decrease gradient by 0.1%.
- With engine and wing anti-ice on, decrease gradient by 0.3%.
- When operating in icing conditions during any part of the flight with forecast landing temperatures below 10°C decrease gradient by 1.0%.

Quick Turnaround Limit Weight - Category C Steel Brakes

Flaps 40

AIRPORT OAT (°C)	LIMIT WEIGHT (1000 LB)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	175.7					
50	176.9	170.1				
45	178.4	171.6	164.9			
40	179.9	173.1	166.3	159.8		
35	181.5	174.6	167.8	161.2	154.7	
30	183.2	176.2	169.3	162.6	156.1	149.7
25	184.8	177.8	170.8	164.1	157.5	151.1
20	186.5	179.4	172.3	165.6	158.9	152.5
15	188.3	181.1	173.9	167.1	160.4	153.9
10	190.0	182.8	175.6	168.7	161.9	155.3
5	190.0	184.5	177.3	170.3	163.5	156.8
0	190.0	186.3	179.0	172.0	165.1	158.4
-5	190.0	188.2	180.8	173.7	166.8	160.0
-10	190.0	190.0	182.6	175.5	168.4	161.6
-15	190.0	190.0	184.5	177.3	170.2	163.2
-20	190.0	190.0	186.5	179.2	172.0	164.9
-30	190.0	190.0	190.0	183.1	175.8	168.5
-40	190.0	190.0	190.0	187.3	179.8	172.3
-50	190.0	190.0	190.0	190.0	184.0	176.3
-54	190.0	190.0	190.0	190.0	185.8	178.0

Increase weight by 1500 lb per 1% uphill slope. Decrease weight by 2600 lb per 1% downhill slope.

Increase weight by 4000 lb per 10 knots headwind. Decrease weight by 17100 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate surface temperature, without artificial cooling, is less than 218°C as follows: No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category N Carbon Brakes
Flaps 40

OAT		LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	162.1					
50	122	163.1	157.0				
45	113	164.5	158.3	152.2			
40	104	166.0	159.7	153.5	147.4		
35	95	167.4	161.1	154.8	148.7	142.8	
30	86	168.9	162.5	156.2	150.0	144.0	138.5
25	77	170.4	164.0	157.6	151.4	145.3	139.7
20	68	172.0	165.4	159.0	152.8	146.7	140.9
15	59	173.6	167.0	160.5	154.2	148.0	142.1
10	50	175.2	168.5	162.0	155.7	149.4	143.4
5	41	176.9	170.1	163.5	157.2	150.9	144.7
0	32	178.6	171.8	165.1	158.7	152.3	146.1
-5	23	180.4	173.5	166.8	160.3	153.9	147.6
-10	14	182.1	175.2	168.4	161.9	155.4	149.1
-15	5	184.0	177.0	170.2	163.6	157.0	150.6
-20	-4	185.9	178.9	172.0	165.3	158.7	152.2
-30	-22	189.9	182.8	175.7	168.9	162.1	155.5
-40	-40	189.9	186.9	179.7	172.7	165.8	159.1
-50	-58	189.9	189.9	183.9	176.8	169.7	162.8
-54	-65	189.9	189.9	185.5	178.4	171.4	164.4

Increase weight by 1400 lb per 1% uphill slope. Decrease weight by 2700 lb per 1% downhill slope.
Increase weight by 3400 lb per 10 knots headwind. Decrease weight by 18400 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Performance Dispatch

Chapter PD

Gear Down

Section 43

GEAR DOWN

Takeoff Climb Limit Weight

Flaps 5

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		TAKEOFF CLIMB WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	134.1	126.7	119.6	112.6	102.3	
52	126	137.0	126.6	119.6	112.5	104.3	
50	122	140.0	127.3	119.5	112.5	104.9	95.2
48	118	143.0	130.2	119.5	112.4	104.9	97.1
46	115	146.1	133.1	120.2	112.4	104.8	98.8
44	111	149.2	136.0	123.1	112.4	104.8	98.7
42	108	152.1	138.8	126.0	113.1	104.7	98.7
40	104	155.0	141.6	128.8	115.9	104.7	98.7
38	100	158.0	144.3	131.5	118.7	105.5	98.6
36	97	160.8	147.1	134.1	121.4	108.3	98.6
34	93	163.9	149.9	136.8	124.1	110.9	99.4
33	91	165.6	151.3	138.1	125.4	112.3	100.7
32	90	167.3	152.7	139.4	126.7	113.6	102.0
30	86	170.7	155.8	142.1	129.3	116.3	104.7
28	82	174.2	159.2	144.9	132.0	118.9	107.3
26	79	176.3	162.6	148.0	134.6	121.6	110.0
24	75	176.5	165.9	151.1	137.3	124.4	112.7
22	72	176.6	166.5	154.3	140.2	127.1	115.4
20	68	176.7	166.5	155.7	143.0	129.6	118.0
18	64	176.8	166.6	155.7	145.4	132.2	120.5
16	61	176.9	166.7	155.8	145.5	134.9	122.7
14	57	177.0	166.8	155.9	145.6	135.9	123.5
12	54	177.1	166.9	156.0	145.6	136.0	124.3
10	50	177.1	166.9	156.0	145.7	136.1	125.0

With engine bleed for packs off, increase weight by 600 lb.

With engine anti-ice on, decrease weight by 2700 lb.

With engine and wing anti-ice on, decrease weight by 14700 lb (optional system).

GEAR DOWN

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 30 or 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	124.5					
52	126	127.7					
50	122	130.9	120.8				
48	118	133.4	123.9				
46	115	135.8	127.0	117.0			
44	111	138.1	129.2	119.8			
42	108	140.5	131.5	122.7	112.5		
40	104	143.0	133.7	124.8	115.0		
38	100	145.5	136.0	127.0	117.6	107.1	
36	97	148.0	138.3	129.3	119.8	109.0	
34	93	150.6	140.9	131.6	121.8	110.8	101.8
32	90	153.4	143.3	133.7	123.6	112.9	103.9
30	86	156.0	145.3	135.3	125.4	114.8	105.8
28	82	156.2	147.2	136.8	127.1	116.6	107.5
26	79	156.3	149.0	138.1	128.1	118.2	109.1
24	75	156.5	149.1	139.2	129.0	119.7	110.3
22	72	156.6	149.2	140.2	130.0	120.5	111.3
20	68	156.7	149.3	140.3	130.9	121.3	112.2
18	64	156.8	149.4	140.3	131.7	122.1	112.9
16	61	157.0	149.5	140.4	131.8	122.8	113.6
14	57	157.1	149.5	140.5	131.9	123.5	114.3
12	54	157.2	149.6	140.5	131.9	123.6	114.9
10	50	157.3	149.7	140.6	132.0	123.6	115.6
-40	-40	158.4	150.7	141.6	132.8	124.4	116.7

With engine bleed for packs off, increase weight by 2500 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 2800 lb.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 16800 lb.

GEAR DOWN**Takeoff Obstacle Limit Weight****Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)								
	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	166.1								
50	153.7	168.0							
100	143.4	157.0	166.9	173.5					
150	135.6	148.8	158.7	166.2	171.7				
200	129.2	142.1	152.1	159.8	165.8	170.5			
250	123.7	136.4	146.3	154.2	160.4	165.4	169.5	172.7	173.9
300	118.8	131.4	141.3	149.2	155.6	160.9	165.1	168.7	171.6
350	114.3	126.9	136.8	144.8	151.3	156.7	161.2	164.9	168.1
400	110.3	122.8	132.7	140.7	147.3	152.8	157.5	161.4	164.7
450	106.6	119.1	129.0	137.0	143.7	149.3	154.0	158.0	161.5
500	103.1	115.6	125.5	133.6	140.3	145.9	150.8	154.9	158.5
550	99.9	112.3	122.2	130.3	137.1	142.8	147.7	152.0	155.6
600	97.0	109.3	119.2	127.3	134.1	139.9	144.8	149.2	152.9
650	94.2	106.4	116.3	124.5	131.3	137.1	142.1	146.5	150.3
700	91.6	103.7	113.6	121.7	128.6	134.5	139.5	143.9	147.8
750		101.1	111.0	119.2	126.1	132.0	137.1	141.5	145.5
800		98.7	108.5	116.7	123.7	129.6	134.7	139.2	143.2
850		96.4	106.2	114.4	121.3	127.3	132.5	137.0	141.0
900		94.3	103.9	112.1	119.1	125.1	130.3	134.9	138.9
950		92.2	101.8	110.0	117.0	123.0	128.2	132.8	136.9
1000		90.2	99.8	107.9	114.9	120.9	126.2	130.9	135.0

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)									
	90	100	110	120	130	140	150	160	170	180
30 & BELOW	0	0	0	0	0	0	0	0	0	0
32	-1.5	-1.7	-1.9	-2.1	-2.3	-2.5	-2.7	-2.9	-3.1	-3.3
34	-2.9	-3.3	-3.7	-4.1	-4.5	-4.9	-5.3	-5.7	-6.2	-6.6
36	-4.4	-5.0	-5.6	-6.2	-6.8	-7.4	-8.0	-8.6	-9.2	-9.8
38	-5.8	-6.6	-7.4	-8.2	-9.1	-9.9	-10.7	-11.5	-12.3	-13.1
40	-7.3	-8.3	-9.3	-10.3	-11.3	-12.3	-13.4	-14.4	-15.4	-16.4
42	-8.5	-9.6	-10.8	-12.0	-13.2	-14.3	-15.5	-16.7	-17.9	-19.0
44	-9.7	-11.0	-12.3	-13.7	-15.0	-16.3	-17.7	-19.0	-20.4	-21.7
46	-10.9	-12.4	-13.9	-15.4	-16.9	-18.4	-19.8	-21.3	-22.8	-24.3
48	-12.1	-13.7	-15.4	-17.0	-18.7	-20.4	-22.0	-23.7	-25.3	-27.0
50	-13.3	-15.1	-16.9	-18.7	-20.5	-22.4	-24.2	-26.0	-27.8	-29.6

GEAR DOWN

Takeoff Obstacle Limit Weight

Flaps 5

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)									
	90	100	110	120	130	140	150	160	170	180
S.L. & BELOW	0	0	0	0	0	0	0	0	0	0
1000	-3.8	-4.2	-4.7	-5.1	-5.5	-6.0	-6.4	-6.8	-7.3	-7.7
2000	-7.6	-8.5	-9.3	-10.2	-11.1	-11.9	-12.8	-13.7	-14.5	-15.4
3000	-10.2	-11.4	-12.5	-13.7	-14.9	-16.0	-17.2	-18.3	-19.5	-20.6
4000	-12.8	-14.3	-15.7	-17.2	-18.6	-20.1	-21.5	-23.0	-24.5	-25.9
5000	-15.6	-17.5	-19.3	-21.1	-23.0	-24.8	-26.7	-28.5	-30.3	-32.2
6000	-18.4	-20.7	-22.9	-25.1	-27.3	-29.6	-31.8	-34.0	-36.2	-38.4
7000	-21.7	-24.3	-26.8	-29.3	-31.9	-34.4	-37.0	-39.5	-42.0	-44.6
8000	-25.0	-27.9	-30.7	-33.6	-36.4	-39.3	-42.1	-45.0	-47.9	-50.7
9000	-28.2	-31.4	-34.6	-37.8	-41.0	-44.1	-47.3	-50.5	-53.7	-56.9
10000	-31.5	-35.0	-38.5	-42.0	-45.5	-49.0	-52.5	-56.0	-59.5	-63.0

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)									
	90	100	110	120	130	140	150	160	170	180
15 TW	-22.2	-21.6	-21.1	-20.5	-20.0	-19.4	-18.8	-18.3	-17.7	-17.1
10 TW	-14.8	-14.4	-14.1	-13.7	-13.3	-12.9	-12.6	-12.2	-11.8	-11.4
5 TW	-7.4	-7.2	-7.0	-6.8	-6.7	-6.5	-6.3	-6.1	-5.9	-5.7
0	0	0	0	0	0	0	0	0	0	0
10 HW	2.0	1.9	1.7	1.6	1.4	1.3	1.1	1.0	0.9	0.7
20 HW	4.0	3.7	3.4	3.1	2.9	2.6	2.3	2.0	1.7	1.4
30 HW	6.5	6.1	5.6	5.2	4.8	4.4	3.9	3.5	3.1	2.6
40 HW	9.0	8.4	7.9	7.3	6.7	6.1	5.6	5.0	4.4	3.9

With engine bleed for packs off, increase weight by 600 lb.

With engine anti-ice on, decrease weight by 4200 lb.

With engine and wing anti-ice on, decrease weight by 16800 lb (optional system).

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	14900	11800	8700
180	17500	14600	11500
170	20100	17200	14400
160	22300	19900	17100
150	24700	22600	19700
140	26800	25300	22900
130	29100	27600	25900
120	31100	29900	28400
110	32900	31900	30700
100	34900	33900	32800
90	37100	36100	35000

GEAR DOWN

Long Range Cruise Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
340	300	266	239	218	200	187	174	164	155	147
508	449	399	359	328	300	280	262	246	233	221
675	597	531	479	437	400	374	350	329	311	295
841	745	662	598	545	500	467	438	412	389	369
1006	892	794	717	654	600	561	526	495	468	444
1170	1038	925	835	763	700	655	614	578	546	518
1332	1183	1055	954	872	800	749	703	661	625	593
1494	1328	1185	1072	980	900	843	791	745	704	668
1655	1472	1315	1190	1089	1000	937	879	828	783	743
1814	1615	1444	1308	1197	1100	1031	968	911	862	818
1973	1758	1573	1426	1305	1200	1125	1056	995	941	894
2131	1900	1701	1543	1413	1300	1218	1145	1079	1020	969
2288	2041	1829	1660	1521	1400	1313	1233	1162	1100	1045
2444	2182	1957	1777	1629	1500	1407	1322	1246	1179	1121
2599	2323	2084	1894	1737	1600	1501	1411	1330	1259	1197
2754	2463	2212	2011	1845	1700	1595	1500	1414	1339	1273
2907	2602	2338	2127	1953	1800	1689	1589	1499	1419	1350
3060	2741	2465	2243	2060	1900	1784	1678	1583	1499	1426
3212	2879	2591	2359	2168	2000	1878	1767	1668	1580	1503

GEAR DOWN

Long Range Cruise Trip Fuel and Time

Reference Fuel and Time Required

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	5.7	0:53	5.4	0:51	5.1	0:49	4.9	0:48	4.9	0:47
300	8.4	1:18	7.9	1:14	7.3	1:10	7.1	1:08	6.9	1:05
400	11.1	1:42	10.5	1:37	9.6	1:31	9.2	1:27	8.9	1:24
500	13.9	2:06	13.0	2:00	11.9	1:52	11.3	1:47	10.9	1:43
600	16.7	2:29	15.7	2:22	14.3	2:12	13.5	2:06	13.0	2:01
700	19.6	2:52	18.3	2:44	16.6	2:33	15.7	2:25	15.1	2:19
800	22.4	3:16	21.0	3:06	19.0	2:53	18.0	2:44	17.2	2:37
900	25.3	3:39	23.7	3:28	21.4	3:13	20.2	3:04	19.3	2:56
1000	28.2	4:02	26.3	3:50	23.8	3:33	22.4	3:23	21.4	3:14
1100	31.2	4:24	29.1	4:11	26.3	3:53	24.7	3:41	23.7	3:32
1200	34.2	4:46	31.9	4:32	28.8	4:12	27.1	4:00	26.0	3:49
1300	37.2	5:08	34.7	4:53	31.3	4:32	29.4	4:18	28.2	4:07
1400	40.2	5:30	37.5	5:14	33.8	4:51	31.8	4:36	30.5	4:25
1500	43.3	5:53	40.4	5:35	36.3	5:11	34.1	4:55	32.7	4:42
1600	46.4	6:14	43.3	5:56	39.0	5:29	36.6	5:13		
1700	49.6	6:35	46.3	6:16	41.6	5:48	39.1	5:31		
1800	52.8	6:56	49.3	6:36	44.3	6:07	41.6	5:49		
1900	56.0	7:17	52.2	6:56	46.9	6:25	44.1	6:07		
2000	59.2	7:38	55.2	7:16	49.6	6:44	46.5	6:25		

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	LANDING WEIGHT (1000 LB)						
	90	100	110	120	130	140	150
5	-0.5	-0.2	0.0	0.3	0.6	0.9	1.2
10	-0.9	-0.4	0.0	0.5	1.1	1.6	2.2
15	-1.3	-0.7	0.0	0.8	1.6	2.4	3.2
20	-1.7	-0.9	0.0	1.0	2.1	3.1	4.2
25	-2.2	-1.1	0.0	1.3	2.6	3.9	5.2
30	-2.6	-1.3	0.0	1.5	3.1	4.6	6.2
35	-3.0	-1.5	0.0	1.8	3.6	5.4	7.2
40	-3.4	-1.7	0.0	2.0	4.1	6.1	8.2
45	-3.9	-1.9	0.0	2.3	4.5	6.8	9.2
50	-4.3	-2.1	0.0	2.5	5.0	7.6	10.1
55	-4.7	-2.3	0.0	2.7	5.5	8.3	11.1
60	-5.1	-2.6	0.0	3.0	6.0	9.0	12.1

Based on VREF40 + 70 climb, Long Range Cruise and VREF40 + 70 descent.

GEAR DOWN

Holding Planning
Flaps Up

WEIGHT (1000 LB)	TOTAL FUEL FLOW (LB/HR)							
	PRESSURE ALTITUDE (FT)							
	1500	5000	10000	15000	20000	25000	30000	35000
190	10020	9960	9940	10000	10120			
180	9530	9470	9420	9470	9520			
170	9050	8980	8920	8940	8960			
160	8580	8500	8430	8420	8420	8640		
150	8120	8020	7950	7920	7900	8000		
140	7660	7550	7480	7420	7380	7430		
130	7200	7080	7000	6930	6870	6890	7200	
120	6750	6630	6530	6450	6370	6370	6530	
110	6290	6180	6060	5980	5870	5860	5950	
100	5830	5740	5620	5530	5410	5370	5440	5670
90	5380	5280	5190	5080	4960	4880	4940	5020

This table includes 5% additional fuel for holding in a racetrack pattern.

GEAR DOWN**ENGINE INOP****MAX CONTINUOUS THRUST****Net Level Off Weight**

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 LB)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
22	90.3		
20	97.5	94.8	92.0
18	105.2	101.7	98.1
16	112.7	108.7	104.6
14	119.3	115.9	112.0
12	127.1	122.8	118.1
10	134.7	130.1	124.2
8	143.0	137.8	131.3
6	151.3	145.3	138.3
4	159.2	152.6	145.1
2	166.8	159.5	152.1
0	173.8	166.2	159.1

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 LB)								
	PRESSURE ALTITUDE (1000 FT)								
	0	2	4	6	8	10	12	14	16
ENGINE ONLY	-2.6	-2.7	-2.7	-2.9	-2.8	-2.8	-2.9	-2.7	-2.6
ENGINE AND WING	-13.4	-13.4	-13.1	-12.6	-12.1	-11.6	-11.2	-11.0	-10.5

Intentionally
Blank

Performance Dispatch**Text****Chapter PD****Section 44**

Introduction

This chapter contains self dispatch performance data intended primarily for use by flight crews in the event that information cannot be obtained from the airline dispatch office. The takeoff data provided is for a single takeoff flap at max takeoff thrust. The range of conditions covered is limited to those normally encountered in airline operation. In the event of conflict between the data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

Takeoff

or 737-900W

The maximum allowable takeoff weight will be the least of the Field, Climb, Obstacle, Brake Energy and Tire Speed Limit Weights as determined from the tables shown.

Field Limit Weight - Slope and Wind Corrections

These tables for dry and wet runways provide corrections to the field length available for the effects of runway slope and wind component along the runway. Enter the appropriate table with the available field length and runway slope to determine the slope corrected field length. Next enter the appropriate table with slope corrected field length and wind component to determine the slope and wind corrected field length.

Field and Climb Limit Weight

Tables are presented for selected airport pressure altitudes and runway conditions and show both Field and Climb Limit Weights. Enter the appropriate table for pressure altitude and runway condition with "Slope and Wind Corrected Field Length" determined above and airport OAT to obtain Field Limit Weight. Also read Climb Limit Weight for the same OAT. Intermediate altitudes may be interpolated or use next higher altitude. When finding a maximum weight for a wet runway, the dry runway limit weight must also be determined and the lower of the two weights used.

Obstacle Limit Weight

The Reference Obstacle Limit Weight table provides obstacle limit weights for reference airport conditions based on obstacle height above the runway surface and distance from brake release. Enter the adjustment tables to adjust the reference Obstacle Limit Weight for the effects of OAT, pressure altitude and wind as indicated. In the case of multiple obstacles, enter the tables successively with each obstacle and determine the most limiting weight.

Tire Speed Limit

Maximum tire speed limited weights are presented for 225 MPH tires. To determine the tire speed limit weight, enter the table with OAT and airport pressure altitude. Adjust the tire speed limit weight according to the notes below the table to account for wind.

Brake Energy Limit VMBE

The Maximum Brake Energy Speed table provides the Reference VMBE for a variety of airport pressure altitudes and temperatures. Enter the Weight Adjusted VMBE table to adjust the Reference VMBE for the actual brake release gross weight. Correct VMBE for slope and wind. If V1 exceeds VMBE, decrease brake release weight as indicated for each knot that V1 exceeds VMBE and determine V1, VR, and V2 for the lower brake release weight.

Enroute

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. Note that this table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Trip Fuel and Time

.80M Trip Fuel and Time tables are provided to determine trip time and fuel required to destination.

To determine trip fuel and time for a constant altitude cruise, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the planned landing weight to obtain the adjustment to the fuel required at the planned landing weight.

.80M Step Climb Trip Fuel and Time

.80M Step Climb Trip Fuel and Time tables are provided to determine trip time and fuel required to destination when flying a step climb profile. Step climb profiles are based on 4000 ft step climbs to keep the flight within 2000 ft of the optimum altitude for the current cruise weight. To determine trip fuel and time, enter the Ground to Air Miles Conversion table and determine air distance as discussed above. Then enter the Trip Fuel and Time Required table with air distance and planned landing weight to read trip fuel. Continue across the table to read trip time.

Short Trip Fuel and Time

These tables are provided to determine trip fuel and time for short distances or alternates. Obtain air distance from the table using the ground distance and wind component to the alternate. Enter the Trip Fuel and Time Required table with air distance and read trip fuel required for the expected landing weight, together with time to alternate at right. For distances greater than shown or other altitudes, use the .80M Trip Fuel and Time tables.

Holding Planning

This table provides total fuel flow information necessary for planning flaps up holding and reserve fuel requirements. Data is based on the FMC holding speed schedule which is the higher of the maximum endurance and flaps up maneuver speeds. As noted, the fuel flow is based on flight in a racetrack holding pattern. For holding in straight and level flight, reduce table values by 5%.

Flight Crew Oxygen Requirements

Regulations require that sufficient oxygen be provided to the flight crew to account for the greater of supplemental breathing oxygen in the event of a cabin depressurization or protective breathing in the event of smoke or

harmful fumes in the flight deck. The oxygen quantity associated with the above requirements is achieved with the minimum dispatch oxygen cylinder pressure.

To determine the minimum dispatch oxygen cylinder pressure enter the appropriate flight crew oxygen table with the number of crew plus observers using oxygen and read the minimum cylinder pressure required for the appropriate cylinder temperature.

Net Level Off Weight

The Net Level Off Weight table is provided to determine terrain clearance capability in straight and level flight following an engine failure. Regulations require terrain clearance planning based on net performance which is the gross (or actual) gradient performance degraded by 1.1%. In addition, the net level off pressure altitude must clear the terrain by 1000 ft.

To determine the maximum weight for terrain clearance, enter the table with required net level off pressure altitude and expected ISA deviation to obtain weight. Adjust weight for anti-ice operation as noted below the table.

| Extended Range Operations

ETOPS regulations require that flights conducted over a route that contains a point further than one hour's time at "normal one-engine-inoperative speed" from an adequate airport comply with rules specific to extended operations for airplanes with two or more engines. This section provides reserve fuel planning information for the "Critical Fuel Diversion Scenario".

ETOPS regulations require reserve planning to include a "Critical Fuel Diversion Scenario" calculation. The information shown is the fuel required to satisfy the flight profile as described below the charts. This information is shown for all engines operating and one engine inoperative at Long Range Cruise (LRC). There are two engine-inoperative scenarios, a decompression scenario and a driftdown scenario. The decompression scenario assumes an engine failure, loss of pressurization, emergency descent, and subsequent cruise at 10000 ft. The driftdown scenario assumes an engine failure without loss of pressurization, where the airplane "drifts down" to the thrust limited level-off altitude for the remainder of the diversion.

The ETOPS critical fuel required is the greater of the all-engine fuel or the engine-inoperative fuel. The ETOPS critical fuel required is compared to the amount of fuel that is predicted to be onboard the airplane at the critical point. If the fuel required by the ETOPS critical fuel reserves of the route

exceeds the amount of fuel predicted, the fuel load must be adjusted accordingly. The data does not include an allowance for performance deterioration. However, regulations require a 5% allowance for performance deterioration, unless a value has been established by the operator for in-service deterioration.

To determine the ETOPS critical fuel required, enter the Ground to Air Mile Conversion table with the forecast wind (factored if applicable) and ground distance to the diversion airport from the critical point to obtain the air distance. Then enter the Critical Fuel table with air distance and expected weight at the critical point and read the required fuel. Apply the noted fuel adjustments for non-standard conditions, as necessary. When using a wind forecasting model acceptable to the FAA (such as the World Area Forecast System, WAFS), regulations allow the wind factor applied in this step to be 5% of the forecast wind (increase headwinds, decrease tailwinds), as indicated in the note below the chart. However, if a FAA-acceptable wind forecasting model is not used, the ETOPS critical fuel must be increased by 5%, instead of factoring the forecast winds.

Critical Fuel Reserves

Enter the Ground to Air Miles Conversion table with forecast wind and ground distance to diversion airport from critical point to obtain air distance. Now enter the Critical Fuel table with air distance and expected weight at the critical point and read required fuel. Apply the noted fuel adjustments as necessary. Regulations require a 5% allowance for performance deterioration unless a value has been established by the operator for inservice deterioration.

As noted below each table, the fuel required is the greater of the two engine fuel and the single engine fuel. This fuel is compared to the amount of fuel normally onboard the airplane at that point in the route. If the fuel required by the critical fuel reserves exceeds the amount of fuel normally expected, the fuel load must be adjusted accordingly.

Landing

Tables are provided for determining the maximum landing weight as limited by field length or climb requirements for a single landing flap.

Maximum landing weight is the lowest of the field length limit weight, climb limit weight, or maximum certified landing weight.

Landing Field Limit Weight

Obtain wind corrected field length by entering the Wind Corrected Field Length table with field length available and wind component along the runway. Now enter the Field Limit Weight table with wind corrected field length and pressure altitude to read field limit weight for the expected runway condition.

Landing Climb Limit Weight

Enter the table with airport OAT and pressure altitude to read landing climb limit weight. Apply the noted adjustments as required.

Go-Around Climb Gradient

Enter the Reference Go-Around Gradient table with airport OAT and pressure altitude to determine the reference go-around gradient. Then adjust the reference gradient for airplane weight and speed using the tables provided to determine the weight and speed adjusted go-around gradient. Apply the necessary corrections for engine bleed configuration and icing conditions as noted.

Quick Turnaround Limit Weight

Enter the appropriate table (Steel or Carbon Brakes) with airport pressure altitude and OAT to read maximum quick turnaround weight. Apply the noted adjustments as required.

If the landing weight exceeds the maximum quick turnaround weight, wait the specified time and then check that the wheel thermal plugs have not melted before executing a subsequent takeoff. For Steel Brakes, the alternate procedures on the charts can be used to ensure the brake temperature is within limits. These procedures cannot be used for carbon brakes.

Gear Down

This section provides flight planning data for revenue operation with gear down. Unless otherwise noted, the gear down tables in this section are identical in format and usage to the corresponding gear up tables previously described.

To eliminate erroneous displays the flight crew should enter only gross weight data on the PERF INIT page of the Control Display Unit (CDU). Omission of the cost index and cruise altitude entries on the PERF INIT page will render the VNAV function unavailable during flight. As a result, the following information will not be provided: VNAV guidance and speed

schedules, trip fuel and ETA predictions, optimum and maximum altitude data, step climb and top of descent predictions, and the VNAV descent guidance path.

The gross weight entry allows the FMCS takeoff and approach speed schedules to be generated. In addition, the flap maneuver speed and VREF speed bugs will be available for display on the primary flight display speed tape. Except for VNAV, normal autopilot and autothrottle modes will remain available for use during the flight, as will the LNAV mode.

Takeoff/Landing Climb Limit Weight

Enter the appropriate table with airport OAT and pressure altitude to determine Takeoff/Landing Climb Limit Weight with gear down. Correct the weight obtained for engine bleed configuration as required.

Intentionally
Blank

Performance Dispatch**Chapter PD****Table of Contents****Section 50****737-900ERBBJ CFM56-7B27B3 KG FAA CATH/P**

Takeoff	PD.50.1
Takeoff Field Corrections - Dry Runway	PD.50.1
Takeoff Field & Climb Limit Weights - Dry Runway	PD.50.2
Takeoff Field Corrections - Wet Runway	PD.50.7
Takeoff Field & Climb Limit Weights - Wet Runway	PD.50.8
Takeoff Obstacle Limit Weight	PD.50.13
Brake Energy Limits VMBE	PD.50.16
 Enroute	 PD.51.1
.80M Maximum Operating Altitude	PD.51.1
.80M Trip Fuel and Time	PD.51.2
.80M Step Climb Trip Fuel and Time	PD.51.4
Short Trip Fuel and Time	PD.51.5
Holding Planning	PD.51.6
Flight Crew Oxygen Requirements	PD.51.6
Net Level Off Weight	PD.51.7
Decompression Critical Fuel Reserves - LRC Cruise	PD.51.8
Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise	PD.51.10
 Landing	 PD.52.1
Landing Field Limit Weight - Dry Runway	PD.52.1
Landing Field Limit Weight - Dry Runway - High Altitudes	PD.52.3
Landing Field Limit Weight - Dry Runway High Altitude	PD.52.4
Landing Field Limit Weight - Wet Runway	PD.52.5
Landing Field Limit Weight - Wet Runway High Altitude	PD.52.7
Landing Field Limit Weight - Wet Runway High Altitude	PD.52.8

Landing Climb Limit Weight	PD.52.9
Landing Climb Limit Weight - High Altitudes	PD.52.10
Go-Around Climb Gradient	PD.52.11
Go-Around Climb Gradient - High Altitude	PD.52.12
Quick Turnaround Limit Weight - Category H Steel Brakes	PD.52.13
Quick Turnaround Limit Weight - Category P Carbon Brakes	PD.52.14
Quick Turnaround Limit Weight - Category H Steel Brakes - High Altitudes	PD.52.15
Quick Turnaround Limit Weight - Category P Carbon Brakes - High Altitudes	PD.52.16
Gear Down	PD.53.1
Takeoff Climb Limit Weight	PD.53.1
Landing Climb Limit Weight	PD.53.2
Takeoff Obstacle Limit Weight	PD.53.3
Long Range Cruise Altitude Capability	PD.53.5
Long Range Cruise Trip Fuel and Time	PD.53.6
Holding Planning	PD.53.8
Net Level Off Weight	PD.53.9
Text	PD.54.1
Introduction	PD.54.1
Takeoff	PD.54.1
Enroute	PD.54.2
Landing	PD.54.5
Gear Down	PD.54.6

Performance Dispatch**Chapter PD****Takeoff****Section 50****Takeoff Field Corrections - Dry Runway****Slope Corrections**

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1220	1220	1210	1210	1200	1190	1170	1160	1150
1400	1440	1430	1420	1410	1400	1370	1350	1320	1300
1600	1660	1650	1630	1620	1600	1560	1520	1480	1440
1800	1880	1860	1840	1820	1800	1750	1700	1640	1590
2000	2100	2080	2050	2030	2000	1940	1870	1810	1740
2200	2320	2290	2260	2230	2200	2120	2040	1970	1890
2400	2540	2510	2470	2440	2400	2310	2220	2130	2040
2600	2760	2720	2680	2640	2600	2500	2390	2290	2180
2800	2980	2940	2890	2850	2800	2680	2570	2450	2330
3000	3200	3150	3100	3050	3000	2870	2740	2610	2480
3200	3420	3370	3310	3260	3200	3060	2910	2770	2630
3400	3640	3580	3520	3460	3400	3240	3090	2930	2780
3600	3860	3790	3730	3670	3600	3430	3260	3090	2920
3800	4080	4010	3940	3870	3800	3620	3440	3250	3070
4000	4300	4230	4150	4080	4000	3810	3610	3420	3220
4200	4520	4440	4360	4280	4200	3990	3780	3580	3370
4400	4740	4660	4570	4490	4400	4180	3960	3740	3520
4600	4960	4870	4780	4690	4600	4370	4130	3900	3660
4800	5180	5090	4990	4900	4800	4550	4310	4060	3810
5000	5400	5300	5200	5100	5000	4740	4480	4220	3960

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	900	1000	1100	1200	1270	1330	1400	1460
1400	1070	1180	1290	1400	1470	1540	1610	1680
1600	1230	1350	1480	1600	1680	1750	1830	1900
1800	1400	1530	1670	1800	1880	1960	2050	2130
2000	1570	1710	1860	2000	2090	2170	2260	2350
2200	1730	1890	2040	2200	2290	2390	2480	2570
2400	1900	2070	2230	2400	2500	2600	2700	2790
2600	2060	2240	2420	2600	2700	2810	2910	3020
2800	2230	2420	2610	2800	2910	3020	3130	3240
3000	2400	2600	2800	3000	3120	3230	3350	3460
3200	2560	2780	2990	3200	3320	3440	3560	3680
3400	2730	2950	3180	3400	3530	3650	3780	3900
3600	2900	3130	3370	3600	3730	3860	4000	4130
3800	3060	3310	3550	3800	3940	4070	4210	4350
4000	3230	3490	3740	4000	4140	4290	4430	4570
4200	3400	3660	3930	4200	4350	4500	4650	4790
4400	3560	3840	4120	4400	4550	4710	4860	5020
4600	3730	4020	4310	4600	4760	4920	5080	5240
4800	3900	4200	4500	4800	4970	5130	5300	5460
5000	4060	4380	4690	5000	5170	5340	5510	5680

Takeoff Field & Climb Limit Weights - Dry Runway

Flaps 5

Sea Level Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
1220	57.0	52.5	52.1	51.8	51.5	51.1	50.8	49.6	47.2	46.0	44.9
1400	62.5	57.7	57.3	56.9	56.6	56.2	55.8	54.5	51.9	50.7	49.4
1600	67.7	62.5	62.1	61.7	61.3	60.9	60.5	59.1	56.3	55.0	53.6
1800	72.5	66.9	66.5	66.0	65.6	65.2	64.8	63.3	60.3	58.9	57.4
2000	77.0	71.1	70.6	70.2	69.7	69.2	68.8	67.2	64.0	62.5	61.0
2200	81.2	75.0	74.5	74.0	73.5	73.0	72.5	70.9	67.5	65.9	64.3
2400	85.0	78.5	78.0	77.5	76.9	76.4	75.9	74.2	70.7	69.0	67.3
2600	86.1	81.8	81.3	80.8	80.2	79.7	79.2	77.4	73.7	71.9	70.2
2800	86.1	85.0	84.5	83.9	83.4	82.8	82.3	80.4	76.6	74.8	73.0
3000	86.1	86.1	86.1	86.1	85.9	85.3	84.7	82.8	78.9	77.0	75.1
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.0	81.0	79.0	77.1
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.0	81.0	79.0
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.0	82.9	80.9
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.8	82.8
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.6
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.3	78.5	75.7

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
1220	53.7	49.2	48.9	48.5	48.2	47.9	47.2	46.2	43.9	42.9	41.4
1400	59.0	54.1	53.8	53.4	53.1	52.7	51.9	50.9	48.4	47.3	45.7
1600	63.9	58.7	58.3	57.9	57.5	57.2	56.3	55.2	52.5	51.3	49.6
1800	68.4	62.8	62.4	62.0	61.6	61.2	60.3	59.1	56.3	54.9	53.1
2000	72.6	66.7	66.3	65.8	65.4	65.0	64.0	62.7	59.8	58.3	56.4
2200	76.6	70.3	69.9	69.4	69.0	68.5	67.5	66.1	63.0	61.5	59.4
2400	80.2	73.6	73.2	72.7	72.2	71.7	70.7	69.2	65.9	64.4	62.2
2600	83.6	76.8	76.3	75.8	75.3	74.8	73.7	72.2	68.8	67.1	64.9
2800	86.1	79.8	79.3	78.8	78.3	77.7	76.6	75.0	71.5	69.8	67.5
3000	86.1	82.2	81.7	81.1	80.6	80.1	78.9	77.3	73.6	71.8	69.5
3200	86.1	84.4	83.8	83.3	82.7	82.2	81.0	79.3	75.5	73.7	71.3
3400	86.1	86.1	85.9	85.3	84.8	84.2	83.0	81.3	77.4	75.6	73.1
3600	86.1	86.1	86.1	86.1	86.1	86.1	85.0	83.2	79.3	77.4	74.8
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.1	81.1	79.2	76.5
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.9	80.9	78.2
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.6	82.6	79.9
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3	81.5
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.9	83.1
CLIMB LIMIT WT (1000 KG)	86.1	86.0	85.9	85.8	85.7	85.6	83.8	81.3	75.6	73.1	69.6

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 300 kg.

With engine and engine anti-ice on (optional system), decrease field limit weight by 900 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
1220	50.2	45.9	45.6	45.3	45.0	44.5	43.9	43.0	40.8	39.6	38.6
1400	55.2	50.6	50.3	49.9	49.6	49.1	48.4	47.4	45.1	43.7	42.6
1600	59.8	54.9	54.5	54.2	53.8	53.2	52.5	51.5	48.9	47.5	46.3
1800	64.1	58.8	58.4	58.0	57.6	57.0	56.2	55.1	52.4	50.9	49.6
2000	68.0	62.4	62.0	61.6	61.2	60.5	59.7	58.5	55.6	54.0	52.6
2200	71.7	65.8	65.3	64.9	64.5	63.8	62.9	61.7	58.6	56.9	55.5
2400	75.1	68.9	68.4	68.0	67.5	66.8	65.8	64.6	61.4	59.5	58.1
2600	78.3	71.8	71.3	70.9	70.4	69.7	68.7	67.3	64.0	62.1	60.6
2800	81.4	74.6	74.2	73.7	73.2	72.4	71.4	70.0	66.5	64.6	63.0
3000	83.8	76.9	76.4	75.9	75.4	74.6	73.5	72.1	68.5	66.5	64.8
3200	86.0	78.9	78.4	77.9	77.4	76.5	75.4	74.0	70.3	68.2	66.5
3400	86.1	80.9	80.3	79.8	79.3	78.4	77.3	75.8	72.0	69.9	68.2
3600	86.1	82.8	82.2	81.7	81.2	80.3	79.1	77.6	73.8	71.6	69.8
3800	86.1	84.7	84.1	83.6	83.0	82.1	81.0	79.4	75.5	73.2	71.4
4000	86.1	86.1	86.0	85.4	84.9	84.0	82.8	81.2	77.2	74.9	73.0
4200	86.1	86.1	86.1	86.1	86.1	85.7	84.5	82.9	78.8	76.5	74.6
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.6	80.4	78.0	76.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	81.9	79.5	77.5
CLIMB LIMIT WT (1000 KG)	81.0	80.5	80.4	80.4	80.3	79.4	77.9	75.7	70.5	67.6	65.3

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
1220	46.9	42.8	42.6	42.3	41.8	41.3	40.6	39.6	37.6	36.7	35.7
1400	51.6	47.3	46.9	46.6	46.1	45.5	44.8	43.8	41.6	40.6	39.5
1600	56.0	51.3	50.9	50.6	50.0	49.4	48.6	47.6	45.2	44.1	43.0
1800	59.9	54.9	54.6	54.2	53.6	52.9	52.1	50.9	48.4	47.2	46.1
2000	63.6	58.3	57.9	57.5	56.9	56.2	55.3	54.1	51.4	50.1	48.9
2200	67.1	61.4	61.0	60.6	59.9	59.2	58.3	57.0	54.2	52.8	51.5
2400	70.2	64.3	63.9	63.5	62.8	62.0	61.0	59.6	56.7	55.3	53.9
2600	73.2	67.1	66.6	66.2	65.4	64.7	63.6	62.2	59.1	57.7	56.2
2800	76.1	69.7	69.3	68.8	68.0	67.2	66.2	64.7	61.5	60.0	58.5
3000	78.4	71.8	71.3	70.9	70.1	69.2	68.1	66.6	63.3	61.7	60.2
3200	80.5	73.7	73.2	72.7	71.9	71.0	69.9	68.3	64.9	63.3	61.7
3400	82.5	75.5	75.0	74.5	73.7	72.8	71.6	70.0	66.5	64.9	63.3
3600	84.4	77.3	76.8	76.3	75.4	74.5	73.3	71.7	68.1	66.4	64.8
3800	86.1	79.1	78.6	78.1	77.2	76.3	75.0	73.3	69.7	68.0	66.3
4000	86.1	80.9	80.3	79.8	78.9	78.0	76.7	75.0	71.3	69.5	67.8
4200	86.1	82.6	82.0	81.5	80.6	79.6	78.3	76.6	72.8	71.0	69.2
4400	86.1	84.2	83.7	83.1	82.2	81.2	79.9	78.1	74.3	72.4	70.6
4600	86.1	85.9	85.3	84.7	83.8	82.8	81.4	79.6	75.7	73.8	72.0
CLIMB LIMIT WT (1000 KG)	75.9	75.3	75.2	75.1	74.4	73.5	72.0	69.7	64.9	62.8	60.7

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 300 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 900 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
1220	43.7	39.8	39.5	39.0	38.6	38.0	37.2	36.2	34.3	33.4	32.5
1400	48.2	43.9	43.6	43.1	42.6	42.0	41.1	40.0	38.0	37.0	36.0
1600	52.3	47.7	47.4	46.8	46.3	45.6	44.7	43.5	41.3	40.3	39.2
1800	56.0	51.1	50.7	50.2	49.6	48.9	47.9	46.6	44.3	43.1	42.0
2000	59.4	54.2	53.8	53.2	52.7	51.9	50.8	49.5	47.0	45.8	44.6
2200	62.6	57.1	56.7	56.1	55.5	54.7	53.5	52.1	49.5	48.2	46.9
2400	65.6	59.8	59.4	58.7	58.1	57.2	56.0	54.6	51.8	50.4	49.1
2600	68.4	62.4	61.9	61.3	60.6	59.7	58.5	56.9	54.0	52.6	51.3
2800	71.1	64.9	64.4	63.7	63.0	62.1	60.8	59.2	56.2	54.8	53.3
3000	73.2	66.8	66.3	65.6	64.8	63.9	62.6	60.9	57.8	56.3	54.9
3200	75.1	68.5	68.0	67.3	66.5	65.6	64.2	62.5	59.3	57.8	56.3
3400	77.0	70.2	69.7	68.9	68.2	67.2	65.8	64.1	60.8	59.2	57.7
3600	78.8	71.9	71.4	70.6	69.8	68.8	67.3	65.6	62.2	60.6	59.0
3800	80.6	73.6	73.0	72.2	71.4	70.4	68.9	67.1	63.7	62.1	60.4
4000	82.4	75.2	74.7	73.8	73.0	72.0	70.5	68.6	65.1	63.5	61.8
4200	84.2	76.8	76.3	75.4	74.6	73.5	72.0	70.1	66.5	64.8	63.1
4400	85.9	78.3	77.8	76.9	76.1	75.0	73.4	71.5	67.9	66.1	64.4
4600	86.1	79.8	79.3	78.4	77.5	76.4	74.8	72.9	69.2	67.4	65.6
CLIMB LIMIT WT (1000 KG)	71.1	70.3	70.2	69.6	68.9	67.6	65.5	63.1	58.7	56.7	54.8

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
1220	40.1	36.6	36.1	35.6	35.1	34.6	33.7	32.8	31.0	30.2	29.4
1400	44.2	40.5	40.0	39.5	38.9	38.3	37.3	36.4	34.5	33.6	32.6
1600	48.0	44.0	43.5	42.9	42.3	41.6	40.6	39.6	37.5	36.6	35.6
1800	51.5	47.2	46.6	46.0	45.4	44.6	43.5	42.4	40.3	39.2	38.1
2000	54.6	50.0	49.4	48.8	48.1	47.3	46.2	45.0	42.7	41.6	40.4
2200	57.5	52.7	52.0	51.4	50.7	49.9	48.6	47.4	44.9	43.8	42.6
2400	60.2	55.2	54.5	53.8	53.0	52.2	50.9	49.6	47.0	45.8	44.6
2600	62.8	57.6	56.8	56.1	55.3	54.5	53.1	51.7	49.1	47.8	46.5
2800	65.3	59.9	59.1	58.3	57.6	56.6	55.3	53.8	51.1	49.7	48.4
3000	67.3	61.6	60.8	60.0	59.2	58.3	56.8	55.4	52.5	51.2	49.8
3200	69.0	63.2	62.4	61.6	60.8	59.8	58.3	56.8	53.9	52.5	51.0
3400	70.7	64.8	64.0	63.1	62.3	61.3	59.8	58.2	55.2	53.8	52.3
3600	72.4	66.3	65.5	64.6	63.8	62.7	61.2	59.6	56.5	55.0	53.5
3800	74.1	67.9	67.0	66.1	65.2	64.2	62.6	61.0	57.9	56.3	54.8
4000	75.7	69.4	68.5	67.6	66.7	65.6	64.0	62.4	59.2	57.6	56.1
4200	77.3	70.9	70.0	69.1	68.1	67.0	65.4	63.7	60.4	58.9	57.3
4400	78.9	72.3	71.4	70.5	69.5	68.4	66.7	65.0	61.7	60.1	58.4
4600	80.4	73.7	72.8	71.8	70.9	69.7	68.0	66.2	62.9	61.2	59.6
CLIMB LIMIT WT (1000 KG)	65.1	64.5	63.8	63.0	62.1	60.8	58.8	56.7	52.9	51.0	49.1

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 300 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 900 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
1400	41.9	39.0	38.9	38.8	38.6	37.9	37.4	36.7	36.0	34.1	31.4
1600	45.3	42.4	42.3	42.1	42.0	41.3	40.7	40.0	39.3	37.3	34.6
1800	48.6	45.4	45.4	45.2	45.1	44.3	43.7	43.0	42.2	40.1	37.3
2000	51.5	48.3	48.2	48.0	47.9	47.1	46.5	45.7	45.0	42.8	39.8
2200	54.2	50.9	50.8	50.6	50.4	49.7	49.0	48.2	47.4	45.1	42.0
2400	56.8	53.2	53.1	52.9	52.8	51.9	51.3	50.4	49.6	47.2	44.0
2600	59.1	55.4	55.3	55.1	54.9	54.1	53.3	52.5	51.6	49.1	45.7
2800	61.3	57.5	57.4	57.2	57.0	56.1	55.4	54.5	53.5	51.0	47.5
3000	63.1	59.1	59.0	58.8	58.7	57.7	57.0	56.0	55.1	52.4	48.8
3200	64.7	60.7	60.6	60.4	60.2	59.2	58.5	57.5	56.5	53.8	50.1
3400	66.3	62.2	62.1	61.9	61.7	60.7	59.9	58.9	57.9	55.1	51.3
3600	67.9	63.6	63.5	63.3	63.1	62.1	61.3	60.3	59.3	56.4	52.5
3800	69.5	65.1	65.0	64.8	64.5	63.5	62.7	61.6	60.6	57.6	53.6
4000	71.0	66.5	66.4	66.2	66.0	64.9	64.0	63.0	61.9	58.9	54.8
4200	72.5	67.9	67.8	67.6	67.3	66.3	65.4	64.3	63.2	60.1	55.9
4400	74.0	69.3	69.2	68.9	68.7	67.6	66.7	65.6	64.5	61.3	57.0
4600	75.5	70.7	70.5	70.3	70.1	69.0	68.0	66.9	65.7	62.5	58.1
CLIMB LIMIT WT (1000 KG)	61.9	61.4	61.4	61.4	61.4	60.5	59.7	58.7	57.8	54.1	49.0

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
1400	38.5	35.9	35.8	35.6	35.3	34.6	34.1	33.5	32.8	31.2	29.3
1600	41.9	39.1	39.1	38.8	38.6	37.9	37.3	36.7	36.0	34.3	32.3
1800	45.0	42.1	42.0	41.7	41.5	40.8	40.2	39.5	38.8	37.0	35.0
2000	47.8	44.8	44.7	44.4	44.2	43.4	42.8	42.1	41.4	39.6	37.4
2200	50.4	47.2	47.1	46.8	46.6	45.8	45.2	44.4	43.7	41.8	39.5
2400	52.7	49.4	49.3	49.0	48.7	47.9	47.3	46.5	45.7	43.7	41.3
2600	54.8	51.4	51.3	51.0	50.7	49.8	49.2	48.4	47.5	45.5	43.0
2800	56.9	53.3	53.2	52.9	52.6	51.7	51.0	50.2	49.3	47.2	44.6
3000	58.6	54.9	54.8	54.5	54.1	53.2	52.5	51.6	50.8	48.5	45.9
3200	60.1	56.3	56.2	55.9	55.5	54.6	53.9	53.0	52.1	49.8	47.0
3400	61.6	57.7	57.6	57.2	56.9	55.9	55.2	54.2	53.3	51.0	48.2
3600	63.0	59.0	58.9	58.6	58.2	57.2	56.5	55.5	54.6	52.2	49.3
3800	64.4	60.3	60.2	59.9	59.5	58.5	57.7	56.7	55.8	53.3	50.3
4000	65.8	61.6	61.5	61.2	60.8	59.7	58.9	57.9	56.9	54.4	51.4
4200	67.2	62.9	62.8	62.4	62.0	61.0	60.2	59.1	58.1	55.5	52.4
4400	68.6	64.2	64.1	63.7	63.3	62.2	61.4	60.3	59.3	56.6	53.4
4600	70.0	65.5	65.3	64.9	64.5	63.4	62.6	61.5	60.4	57.7	54.5
CLIMB LIMIT WT (1000 KG)	57.7	57.3	57.2	56.9	56.6	55.7	54.9	54.0	53.1	50.0	46.1

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1450 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1950 kg and climb limit weight by 2850 kg.

Takeoff Field & Climb Limit Weights - Dry Runway
Flaps 5
14500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
1400	37.7	35.1	35.0	34.7	34.5	33.8	33.3	32.7	32.1	30.6	28.8
1600	41.1	38.3	38.2	38.0	37.7	37.1	36.5	35.9	35.2	33.7	31.8
1800	44.1	41.2	41.1	40.9	40.6	39.9	39.3	38.7	38.0	36.3	34.4
2000	46.9	43.9	43.8	43.5	43.3	42.5	42.0	41.3	40.6	38.8	36.9
2200	49.4	46.3	46.2	45.9	45.6	44.8	44.3	43.5	42.8	41.0	38.9
2400	51.7	48.4	48.3	48.0	47.7	46.9	46.3	45.5	44.8	42.9	40.7
2600	53.8	50.4	50.3	50.0	49.6	48.8	48.2	47.4	46.6	44.6	42.3
2800	55.8	52.3	52.2	51.9	51.5	50.7	50.0	49.2	48.4	46.3	44.0
3000	57.5	53.8	53.7	53.3	53.0	52.1	51.4	50.6	49.7	47.6	45.2
3200	58.9	55.2	55.1	54.7	54.4	53.5	52.7	51.9	51.0	48.8	46.3
3400	60.4	56.5	56.4	56.1	55.7	54.8	54.0	53.1	52.2	50.0	47.5
3600	61.8	57.9	57.7	57.4	57.0	56.0	55.3	54.4	53.4	51.2	48.5
3800	63.2	59.2	59.0	58.6	58.3	57.3	56.5	55.5	54.6	52.3	49.6
4000	64.6	60.4	60.3	59.9	59.5	58.5	57.7	56.7	55.8	53.4	50.6
4200	65.9	61.7	61.5	61.1	60.7	59.7	58.9	57.9	56.9	54.5	51.6
4400	67.3	62.9	62.8	62.4	62.0	60.9	60.1	59.0	58.0	55.5	52.6
4600	68.6	64.1	64.0	63.6	63.2	62.1	61.2	60.2	59.2	56.6	53.6
CLIMB LIMIT WT (1000 KG)	56.7	56.2	56.1	55.8	55.4	54.5	53.7	52.9	52.0	49.0	45.4

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1450 kg and climb limit weight by 1800 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1950 kg and climb limit weight by 2850 kg.

Takeoff Field Corrections - Wet Runway**Slope Corrections**

FIELD LENGTH AVAILABLE (M)	SLOPE CORRECTED FIELD LENGTH (M)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
1200	1220	1220	1210	1210	1200	1190	1180	1180	1170
1400	1440	1430	1420	1410	1400	1380	1370	1350	1340
1600	1670	1650	1630	1620	1600	1580	1550	1530	1500
1800	1890	1870	1840	1820	1800	1770	1740	1700	1670
2000	2110	2080	2060	2030	2000	1960	1920	1880	1840
2200	2330	2300	2270	2230	2200	2150	2100	2060	2010
2400	2550	2520	2480	2440	2400	2340	2290	2230	2180
2600	2780	2730	2690	2640	2600	2540	2470	2410	2340
2800	3000	2950	2900	2850	2800	2730	2660	2580	2510
3000	3220	3170	3110	3060	3000	2920	2840	2760	2680
3200	3440	3380	3320	3260	3200	3110	3020	2940	2850
3400	3660	3600	3530	3470	3400	3300	3210	3110	3020
3600	3890	3810	3740	3670	3600	3500	3390	3290	3180
3800	4110	4030	3950	3880	3800	3690	3580	3460	3350
4000	4330	4250	4170	4080	4000	3880	3760	3640	3520
4200	4550	4460	4380	4290	4200	4070	3940	3820	3690
4400	4770	4680	4590	4490	4400	4260	4130	3990	3860
4600	5000	4900	4800	4700	4600	4460	4310	4170	4020
4800	5220	5110	5010	4900	4800	4650	4500	4340	4190
5000	5440	5330	5220	5110	5000	4840	4680	4520	4360

Wind Corrections

SLOPE CORR'D FIELD LENGTH (M)	SLOPE & WIND CORRECTED FIELD LENGTH (M)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	870	980	1090	1200	1280	1350	1430	1500
1400	1040	1160	1280	1400	1480	1560	1650	1730
1600	1210	1340	1470	1600	1690	1780	1870	1950
1800	1380	1520	1660	1800	1900	1990	2090	2180
2000	1550	1700	1850	2000	2100	2200	2310	2410
2200	1720	1880	2040	2200	2310	2420	2530	2630
2400	1890	2060	2230	2400	2520	2630	2750	2860
2600	2060	2240	2420	2600	2720	2840	2970	3090
2800	2230	2420	2610	2800	2930	3060	3190	3310
3000	2400	2600	2800	3000	3140	3270	3410	3540
3200	2570	2780	2990	3200	3340	3480	3630	3770
3400	2740	2960	3180	3400	3550	3700	3850	3990
3600	2910	3140	3370	3600	3760	3910	4070	4220
3800	3080	3320	3560	3800	3960	4120	4280	4450
4000	3250	3500	3750	4000	4170	4340	4510	4670
4200	3420	3680	3940	4200	4380	4550	4730	4900
4400	3590	3860	4130	4400	4580	4760	4950	5130
4600	3760	4040	4320	4600	4790	4980	5170	5350
4800	3920	4220	4510	4800	5000	5190	5390	5580
5000	4090	4400	4700	5000	5200	5400	5610	5810

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1220	57.3	52.5	52.2	51.8	51.4	51.1	50.7	48.3	47.1	46.0	44.8
1400	62.8	57.5	57.1	56.7	56.3	55.9	55.5	52.9	51.5	50.3	49.0
1600	67.8	62.2	61.7	61.3	60.8	60.4	60.0	57.1	55.7	54.3	52.9
1800	72.5	66.4	65.9	65.5	65.0	64.6	64.1	61.0	59.5	58.0	56.5
2000	76.9	70.4	69.9	69.4	68.9	68.4	67.9	64.6	63.0	61.4	59.9
2200	81.0	74.1	73.6	73.1	72.6	72.0	71.5	68.1	66.3	64.6	63.0
2400	84.9	77.7	77.1	76.6	76.0	75.5	74.9	71.3	69.4	67.7	66.0
2600	86.1	81.0	80.4	79.8	79.2	78.7	78.1	74.3	72.4	70.5	68.7
2800	86.1	84.1	83.5	82.9	82.3	81.7	81.1	77.2	75.2	73.3	71.4
3000	86.1	86.1	86.1	85.6	85.0	84.4	83.8	79.7	77.6	75.6	73.7
3200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.1	79.9	77.9	75.9
3400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	82.2	80.1	78.0
3600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	82.3	80.1
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.3	82.1
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.1
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1
CLIMB LIMIT WT (1000 KG)	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	81.3	78.5	75.7

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1220	53.8	49.1	48.8	48.5	48.1	47.8	47.1	45.0	43.8	42.8	41.4
1400	58.9	53.8	53.4	53.0	52.7	52.3	51.5	49.2	47.9	46.7	45.3
1600	63.7	58.1	57.7	57.3	56.9	56.5	55.6	53.1	51.7	50.5	48.8
1800	68.1	62.1	61.6	61.2	60.8	60.3	59.4	56.7	55.2	53.9	52.1
2000	72.1	65.8	65.3	64.8	64.4	63.9	62.9	60.0	58.5	57.0	55.2
2200	76.0	69.2	68.7	68.2	67.8	67.3	66.2	63.2	61.6	60.0	58.1
2400	79.6	72.5	72.0	71.5	71.0	70.5	69.4	66.2	64.4	62.8	60.8
2600	83.0	75.6	75.0	74.5	74.0	73.5	72.3	69.0	67.2	65.5	63.3
2800	86.1	78.5	78.0	77.4	76.8	76.3	75.1	71.6	69.7	68.0	65.8
3000	86.1	81.1	80.5	79.9	79.3	78.8	77.5	73.9	72.0	70.1	67.8
3200	86.1	83.5	82.9	82.3	81.7	81.1	79.9	76.1	74.1	72.2	69.8
3400	86.1	85.9	85.3	84.7	84.1	83.5	82.1	78.3	76.2	74.2	71.8
3600	86.1	86.1	86.1	86.1	86.1	85.7	84.3	80.4	78.2	76.2	73.7
3800	86.1	86.1	86.1	86.1	86.1	86.1	86.1	82.4	80.2	78.1	75.5
4000	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.4	82.1	80.0	77.3
4200	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	84.0	81.8	79.1
4400	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.9	83.6	80.8
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	86.1	85.4	82.5
CLIMB LIMIT WT (1000 KG)	86.1	86.0	85.9	85.8	85.7	85.6	83.8	78.5	75.6	73.1	69.6

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 300 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 800 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1220	50.3	45.8	45.5	45.2	44.9	44.4	43.7	41.8	40.8	39.7	38.8
1400	55.0	50.1	49.8	49.4	49.1	48.5	47.8	45.7	44.5	43.3	42.3
1600	59.4	54.1	53.7	53.4	53.0	52.4	51.6	49.3	48.1	46.7	45.7
1800	63.5	57.8	57.4	57.0	56.6	55.9	55.1	52.7	51.3	49.9	48.7
2000	67.3	61.2	60.8	60.3	59.9	59.2	58.3	55.7	54.3	52.8	51.6
2200	70.8	64.4	64.0	63.5	63.1	62.3	61.4	58.7	57.1	55.5	54.2
2400	74.2	67.5	67.0	66.5	66.1	65.3	64.3	61.4	59.8	58.1	56.8
2600	77.4	70.3	69.8	69.3	68.8	68.0	67.0	64.0	62.3	60.5	59.1
2800	80.4	73.1	72.5	72.0	71.5	70.7	69.6	66.4	64.7	62.9	61.4
3000	83.0	75.4	74.9	74.3	73.8	72.9	71.8	68.5	66.7	64.8	63.3
3200	85.5	77.7	77.1	76.5	76.0	75.1	73.9	70.6	68.7	66.7	65.1
3400	86.1	79.9	79.3	78.7	78.1	77.2	76.0	72.5	70.6	68.6	66.9
3600	86.1	82.0	81.4	80.8	80.2	79.3	78.0	74.5	72.5	70.4	68.7
3800	86.1	84.1	83.5	82.8	82.2	81.3	80.0	76.3	74.3	72.1	70.4
4000	86.1	86.1	85.5	84.8	84.2	83.2	81.9	78.1	76.0	73.8	72.1
4200	86.1	86.1	86.1	86.1	86.1	85.1	83.8	79.9	77.8	75.5	73.7
4400	86.1	86.1	86.1	86.1	86.1	86.1	85.6	81.7	79.5	77.2	75.3
4600	86.1	86.1	86.1	86.1	86.1	86.1	86.1	83.4	81.1	78.8	76.9
CLIMB LIMIT WT (1000 KG)	81.0	80.5	80.4	80.4	80.3	79.4	77.9	73.1	70.5	67.6	65.3

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1220	46.9	42.7	42.4	42.1	41.6	41.1	40.5	38.7	37.8	37.0	36.1
1400	51.3	46.7	46.3	46.0	45.5	45.0	44.2	42.3	41.3	40.3	39.4
1600	55.4	50.4	50.0	49.7	49.1	48.5	47.7	45.6	44.5	43.5	42.5
1800	59.2	53.8	53.4	53.0	52.4	51.8	51.0	48.7	47.5	46.4	45.3
2000	62.7	56.9	56.5	56.1	55.5	54.8	53.9	51.5	50.3	49.1	47.9
2200	66.0	59.9	59.5	59.0	58.4	57.7	56.7	54.2	52.9	51.6	50.4
2400	69.1	62.7	62.3	61.8	61.1	60.4	59.4	56.7	55.3	54.0	52.7
2600	72.0	65.3	64.9	64.4	63.7	62.9	61.9	59.1	57.6	56.2	54.9
2800	74.8	67.9	67.4	66.9	66.1	65.3	64.2	61.3	59.8	58.4	57.0
3000	77.2	70.0	69.5	69.0	68.2	67.4	66.2	63.2	61.7	60.2	58.7
3200	79.5	72.1	71.6	71.0	70.2	69.3	68.2	65.1	63.4	61.9	60.4
3400	81.8	74.1	73.6	73.0	72.2	71.3	70.1	66.9	65.2	63.6	62.1
3600	84.0	76.1	75.5	75.0	74.1	73.2	71.9	68.6	66.9	65.3	63.7
3800	86.1	78.0	77.4	76.8	75.9	75.0	73.7	70.3	68.5	66.9	65.2
4000	86.1	79.9	79.3	78.7	77.7	76.8	75.5	72.0	70.2	68.4	66.8
4200	86.1	81.7	81.1	80.5	79.5	78.5	77.2	73.6	71.7	70.0	68.3
4400	86.1	83.5	82.9	82.2	81.3	80.2	78.9	75.2	73.3	71.5	69.7
4600	86.1	85.2	84.6	84.0	83.0	81.9	80.6	76.8	74.8	73.0	71.2
CLIMB LIMIT WT (1000 KG)	75.9	75.3	75.2	75.1	74.4	73.5	72.0	67.3	64.9	62.8	60.7

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 300 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 800 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1220	43.7	39.8	39.5	39.1	38.7	38.1	37.3	35.6	34.8	33.9	33.1
1400	47.8	43.4	43.1	42.7	42.2	41.6	40.8	38.8	37.9	37.0	36.1
1600	51.6	46.8	46.5	46.0	45.5	44.9	43.9	41.8	40.8	39.9	38.9
1800	55.1	50.0	49.7	49.1	48.6	47.9	46.9	44.6	43.6	42.5	41.5
2000	58.3	52.9	52.5	52.0	51.4	50.6	49.6	47.2	46.0	44.9	43.8
2200	61.3	55.7	55.3	54.7	54.0	53.3	52.2	49.6	48.4	47.2	46.1
2400	64.2	58.3	57.8	57.2	56.6	55.7	54.6	51.9	50.6	49.4	48.2
2600	66.9	60.7	60.3	59.6	58.9	58.1	56.8	54.0	52.7	51.4	50.2
2800	69.5	63.0	62.6	61.9	61.2	60.3	59.0	56.1	54.7	53.4	52.1
3000	71.7	65.0	64.5	63.8	63.1	62.1	60.8	57.8	56.4	55.0	53.6
3200	73.9	66.9	66.4	65.6	64.9	63.9	62.6	59.5	58.0	56.5	55.1
3400	75.9	68.7	68.2	67.5	66.7	65.7	64.3	61.1	59.5	58.1	56.6
3600	78.0	70.5	70.0	69.2	68.4	67.4	66.0	62.7	61.1	59.5	58.0
3800	79.9	72.3	71.8	70.9	70.1	69.1	67.6	64.2	62.6	61.0	59.4
4000	81.8	74.0	73.5	72.6	71.8	70.7	69.2	65.7	64.0	62.4	60.8
4200	83.7	75.7	75.1	74.3	73.4	72.3	70.7	67.2	65.4	63.8	62.2
4400	85.6	77.3	76.8	75.9	75.0	73.9	72.3	68.6	66.8	65.1	63.5
4600	86.1	79.0	78.4	77.5	76.6	75.4	73.8	70.0	68.2	66.5	64.8
CLIMB LIMIT WT (1000 KG)	71.1	70.3	70.2	69.6	68.9	67.6	65.5	60.9	58.7	56.7	54.8

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	10	14	18	22	26	30	38	42	46	50
1220	40.3	36.8	36.4	35.9	35.5	34.9	34.1	32.5	31.8	31.0	30.3
1400	44.0	40.2	39.7	39.2	38.7	38.1	37.2	35.5	34.6	33.8	32.9
1600	47.5	43.3	42.8	42.2	41.7	41.0	40.1	38.2	37.3	36.4	35.5
1800	50.7	46.2	45.6	45.1	44.5	43.8	42.8	40.7	39.7	38.8	37.8
2000	53.6	48.9	48.2	47.6	47.0	46.3	45.2	43.0	42.0	40.9	39.9
2200	56.4	51.4	50.7	50.1	49.4	48.6	47.5	45.2	44.1	43.0	41.9
2400	59.0	53.8	53.1	52.4	51.7	50.9	49.7	47.3	46.1	45.0	43.8
2600	61.5	56.0	55.3	54.6	53.8	53.0	51.7	49.2	48.0	46.8	45.6
2800	63.9	58.1	57.4	56.6	55.9	55.0	53.7	51.1	49.8	48.6	47.3
3000	65.9	59.9	59.1	58.4	57.6	56.7	55.3	52.6	51.3	50.0	48.6
3200	67.8	61.6	60.8	60.0	59.2	58.3	56.9	54.1	52.7	51.4	50.0
3400	69.7	63.3	62.5	61.7	60.8	59.8	58.4	55.5	54.1	52.7	51.3
3600	71.5	65.0	64.1	63.3	62.4	61.4	59.9	56.9	55.5	54.0	52.6
3800	73.3	66.6	65.7	64.8	63.9	62.9	61.4	58.3	56.8	55.3	53.8
4000	75.0	68.1	67.2	66.3	65.4	64.3	62.8	59.6	58.1	56.6	55.1
4200	76.8	69.7	68.7	67.8	66.9	65.8	64.2	60.9	59.4	57.8	56.3
4400	78.4	71.2	70.2	69.3	68.3	67.2	65.6	62.2	60.6	59.1	57.4
4600	80.1	72.6	71.7	70.7	69.7	68.6	66.9	63.5	61.9	60.2	58.6
CLIMB LIMIT WT (1000 KG)	65.1	64.5	63.8	63.0	62.1	60.8	58.8	54.7	52.9	51.0	49.1

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1500 kg.

With engine anti-ice on, decrease field limit weight by 200 kg and climb limit weight by 300 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 800 kg and climb limit weight by 1600 kg.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
1400	41.5	38.4	38.4	38.2	38.1	37.4	36.8	36.2	35.5	33.6	31.2
1600	44.8	41.6	41.5	41.4	41.2	40.5	40.0	39.3	38.6	36.6	34.1
1800	47.8	44.5	44.4	44.2	44.0	43.3	42.7	42.0	41.3	39.3	36.6
2000	50.6	47.1	47.0	46.8	46.6	45.9	45.3	44.5	43.8	41.7	38.9
2200	53.1	49.5	49.4	49.2	49.1	48.3	47.6	46.9	46.1	43.9	41.0
2400	55.5	51.8	51.7	51.5	51.3	50.5	49.8	49.0	48.2	45.9	42.9
2600	57.8	53.9	53.8	53.6	53.4	52.5	51.8	51.0	50.1	47.8	44.6
2800	59.9	55.8	55.7	55.5	55.3	54.5	53.8	52.9	52.0	49.5	46.3
3000	61.9	57.7	57.6	57.3	57.1	56.2	55.5	54.6	53.7	51.1	47.8
3200	63.7	59.3	59.2	59.0	58.8	57.9	57.1	56.2	55.2	52.6	49.2
3400	65.4	60.9	60.8	60.6	60.4	59.4	58.6	57.7	56.7	54.0	50.5
3600	67.1	62.5	62.4	62.2	62.0	61.0	60.2	59.2	58.2	55.4	51.8
3800	68.8	64.1	64.0	63.7	63.5	62.5	61.7	60.6	59.6	56.8	53.0
4000	70.5	65.6	65.5	65.3	65.0	64.0	63.1	62.1	61.0	58.1	54.2
4200	72.1	67.1	67.0	66.7	66.5	65.4	64.6	63.5	62.4	59.4	55.4
4400	73.7	68.6	68.4	68.2	67.9	66.8	65.9	64.8	63.7	60.7	56.6
4600	75.2	70.0	69.9	69.6	69.3	68.2	67.3	66.2	65.0	61.9	57.7
CLIMB LIMIT WT (1000 KG)	61.9	61.4	61.4	61.4	61.4	60.5	59.7	58.7	57.8	54.1	49.0

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
1400	38.2	35.4	35.3	35.1	34.8	34.2	33.6	33.0	32.4	30.8	29.0
1600	41.4	38.4	38.3	38.1	37.8	37.2	36.7	36.0	35.4	33.8	31.9
1800	44.2	41.1	41.1	40.8	40.5	39.8	39.3	38.6	37.9	36.3	34.3
2000	46.9	43.6	43.5	43.3	43.0	42.3	41.7	41.0	40.3	38.5	36.5
2200	49.3	45.9	45.8	45.5	45.2	44.5	43.9	43.2	42.4	40.6	38.4
2400	51.5	48.0	47.9	47.6	47.3	46.5	45.9	45.2	44.4	42.5	40.2
2600	53.6	50.0	49.9	49.6	49.2	48.4	47.8	47.0	46.2	44.2	41.9
2800	55.6	51.8	51.7	51.4	51.1	50.2	49.5	48.7	47.9	45.9	43.4
3000	57.4	53.5	53.4	53.1	52.7	51.8	51.2	50.3	49.5	47.3	44.8
3200	59.1	55.0	54.9	54.6	54.2	53.3	52.6	51.7	50.9	48.7	46.1
3400	60.7	56.5	56.4	56.1	55.7	54.8	54.0	53.1	52.2	50.0	47.3
3600	62.2	58.0	57.9	57.5	57.1	56.2	55.4	54.5	53.6	51.2	48.5
3800	63.8	59.4	59.3	58.9	58.5	57.6	56.8	55.8	54.9	52.5	49.7
4000	65.3	60.8	60.7	60.3	59.9	58.9	58.1	57.1	56.2	53.7	50.8
4200	66.8	62.2	62.1	61.7	61.3	60.2	59.4	58.4	57.4	54.9	51.9
4400	68.3	63.5	63.4	63.0	62.6	61.5	60.7	59.6	58.6	56.0	53.0
4600	69.7	64.8	64.7	64.3	63.8	62.8	61.9	60.8	59.8	57.2	54.0
CLIMB LIMIT WT (1000 KG)	57.7	57.3	57.2	56.9	56.6	55.7	54.9	54.0	53.1	50.0	46.1

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1400 kg.

With engine anti-ice on, decrease field limit weight by 1250 kg and climb limit weight by 1900 kg.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1650 kg and climb limit weight by 2850 kg.

Takeoff Field & Climb Limit Weights - Wet Runway
Flaps 5
14500 FT Pressure Altitude

CORR'D FIELD LENGTH (M)	FIELD LIMIT WEIGHT (1000 KG)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
1400	37.5	34.6	34.5	34.3	34.0	33.4	32.9	32.3	31.7	30.2	28.5
1600	40.6	37.6	37.5	37.3	37.0	36.4	35.9	35.2	34.6	33.1	31.3
1800	43.4	40.3	40.2	39.9	39.7	39.0	38.5	37.8	37.1	35.6	33.7
2000	46.0	42.8	42.6	42.4	42.1	41.4	40.8	40.1	39.5	37.8	35.9
2200	48.4	45.0	44.9	44.6	44.3	43.6	43.0	42.3	41.6	39.8	37.8
2400	50.6	47.1	47.0	46.7	46.4	45.6	45.0	44.2	43.5	41.7	39.6
2600	52.6	49.0	48.9	48.6	48.2	47.4	46.8	46.0	45.3	43.4	41.2
2800	54.5	50.8	50.7	50.4	50.0	49.2	48.5	47.7	46.9	45.0	42.8
3000	56.3	52.4	52.3	52.0	51.6	50.8	50.1	49.3	48.5	46.4	44.1
3200	57.9	53.9	53.8	53.5	53.1	52.2	51.5	50.7	49.8	47.8	45.4
3400	59.5	55.4	55.3	54.9	54.6	53.6	52.9	52.0	51.2	49.0	46.6
3600	61.1	56.8	56.7	56.3	56.0	55.0	54.3	53.4	52.5	50.3	47.8
3800	62.6	58.2	58.1	57.7	57.3	56.4	55.6	54.7	53.8	51.5	48.9
4000	64.1	59.6	59.5	59.1	58.7	57.7	56.9	55.9	55.0	52.7	50.0
4200	65.5	60.9	60.8	60.4	60.0	59.0	58.2	57.2	56.2	53.8	51.1
4400	66.9	62.2	62.1	61.7	61.3	60.2	59.4	58.4	57.4	55.0	52.2
4600	68.3	63.5	63.3	62.9	62.5	61.4	60.6	59.6	58.5	56.0	53.2
CLIMB LIMIT WT (1000 KG)	56.7	56.2	56.1	55.8	55.4	54.5	53.7	52.9	52.0	49.0	45.4

With engine bleed for packs off, increase field limit weight by 350 kg and climb limit weight by 1400 kg.
With engine anti-ice on, decrease field limit weight by 1250 kg and climb limit weight by 1900 kg.
With engine and wing anti-ice on (optional system), decrease field limit weight by 1650 kg and climb limit weight by 2850 kg.

Takeoff Obstacle Limit Weight

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 KG)

OBSTACLE HEIGHT (M)	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	74.5	81.4									
20	69.3	75.8	81.1								
40	64.4	70.5	75.5	79.7	83.1						
60	60.6	66.3	71.2	75.3	78.7	81.7	84.1				
80	57.3	62.9	67.6	71.7	75.2	78.1	80.6	82.8	84.7		
100	54.6	60.0	64.6	68.6	72.0	75.0	77.6	79.8	81.8	83.5	
120	52.1	57.4	61.9	65.8	69.3	72.3	74.9	77.2	79.2	81.0	82.6
140	49.9	55.1	59.6	63.4	66.8	69.8	72.5	74.8	76.9	78.7	80.3
160	47.9	53.0	57.4	61.2	64.6	67.6	70.2	72.6	74.7	76.6	78.3
180	46.0	51.1	55.4	59.2	62.6	65.5	68.2	70.6	72.7	74.6	76.3
200	44.3	49.3	53.6	57.4	60.7	63.6	66.3	68.7	70.8	72.8	74.5
220	42.8	47.7	51.9	55.7	59.0	61.9	64.5	66.9	69.1	71.0	72.8
240	41.3	46.2	50.4	54.1	57.3	60.3	62.9	65.3	67.4	69.4	71.2
260		44.8	48.9	52.6	55.8	58.7	61.3	63.7	65.9	67.9	69.7
280		43.4	47.6	51.2	54.4	57.3	59.9	62.3	64.4	66.4	68.2
300		42.2	46.3	49.8	53.0	55.9	58.5	60.9	63.0	65.0	66.9

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)									
	40	45	50	55	60	65	70	75	80	85
30 & BELOW	0	0	0	0	0	0	0	0	0	0
32	-0.6	-0.7	-0.8	-0.8	-0.9	-1.0	-1.1	-1.2	-1.3	-1.3
34	-1.2	-1.3	-1.5	-1.7	-1.8	-2.0	-2.2	-2.4	-2.5	-2.7
36	-1.7	-2.0	-2.3	-2.5	-2.8	-3.0	-3.3	-3.5	-3.8	-4.0
38	-2.3	-2.7	-3.0	-3.3	-3.7	-4.0	-4.4	-4.7	-5.1	-5.4
40	-2.9	-3.3	-3.8	-4.2	-4.6	-5.0	-5.5	-5.9	-6.3	-6.7
42	-3.5	-4.0	-4.5	-5.0	-5.5	-6.0	-6.5	-7.0	-7.5	-8.0
44	-4.1	-4.7	-5.2	-5.8	-6.4	-7.0	-7.5	-8.1	-8.7	-9.3
46	-4.7	-5.3	-6.0	-6.6	-7.3	-7.9	-8.6	-9.2	-9.9	-10.5
48	-5.3	-6.0	-6.7	-7.5	-8.2	-8.9	-9.6	-10.4	-11.1	-11.8
50	-5.9	-6.7	-7.5	-8.3	-9.1	-9.9	-10.7	-11.5	-12.3	-13.1

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)									
	40	45	50	55	60	65	70	75	80	85
S.L. & BELOW	0	0	0	0	0	0	0	0	0	0
1000	-1.5	-1.7	-1.9	-2.0	-2.2	-2.4	-2.6	-2.8	-3.0	-3.2
2000	-3.0	-3.3	-3.7	-4.1	-4.5	-4.8	-5.2	-5.6	-6.0	-6.3
3000	-4.3	-4.9	-5.4	-6.0	-6.5	-7.1	-7.6	-8.1	-8.7	-9.2
4000	-5.7	-6.4	-7.1	-7.8	-8.5	-9.3	-10.0	-10.7	-11.4	-12.1
5000	-6.9	-7.8	-8.7	-9.6	-10.5	-11.4	-12.2	-13.1	-14.0	-14.9
6000	-8.2	-9.2	-10.3	-11.3	-12.4	-13.4	-14.5	-15.6	-16.6	-17.7
7000	-9.6	-10.8	-12.1	-13.3	-14.5	-15.8	-17.0	-18.2	-19.4	-20.7
8000	-11.0	-12.4	-13.8	-15.2	-16.6	-18.1	-19.5	-20.9	-22.3	-23.7
9000	-12.3	-13.9	-15.5	-17.1	-18.7	-20.3	-21.9	-23.5	-25.1	-26.7
10000	-13.6	-15.4	-17.2	-19.0	-20.7	-22.5	-24.3	-26.1	-27.8	-29.6

Takeoff Obstacle Limit Weight

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)									
	40	45	50	55	60	65	70	75	80	85
15 TW	-8.8	-8.7	-8.7	-8.6	-8.5	-8.5	-8.4	-8.4	-8.3	-8.2
10 TW	-5.9	-5.8	-5.8	-5.7	-5.7	-5.7	-5.6	-5.6	-5.5	-5.5
5 TW	-2.9	-2.9	-2.9	-2.9	-2.8	-2.8	-2.8	-2.8	-2.8	-2.7
0	0	0	0	0	0	0	0	0	0	0
10 HW	1.1	1.1	1.1	1.0	1.0	1.0	0.9	0.9	0.9	0.9
20 HW	2.3	2.2	2.1	2.1	2.0	2.0	1.9	1.8	1.8	1.7
30 HW	3.4	3.3	3.2	3.1	3.0	2.9	2.8	2.7	2.6	2.5
40 HW	4.5	4.4	4.2	4.1	4.0	3.9	3.8	3.6	3.5	3.4

With engine bleed for packs off, increase weight by 600 kg.

With engine anti-ice on, decrease weight by 300 kg.

With engine and wing anti-ice on, decrease weight by 1700 kg (optional system).

Takeoff Obstacle Limit Weight - High Altitudes

Flaps 5

10000 ft, 10°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Reference Obstacle Limit Weight (1000 LB)

OBSTACLE HEIGHT (M)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)										
	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	53.5	58.3	62.5	65.5	67.5						
20	49.8	54.3	58.0	61.1	63.6	65.4	66.7	67.8			
40	46.3	50.5	54.0	56.9	59.4	61.4	63.1	64.5	65.5	66.4	67.2
60	43.5	47.5	50.9	53.8	56.2	58.3	60.1	61.6	62.8	63.9	64.8
80		45.1	48.4	51.2	53.7	55.7	57.5	59.1	60.4	61.6	62.6
100		42.9	46.2	49.0	51.4	53.5	55.3	56.9	58.3	59.6	60.6
120		41.1	44.3	47.1	49.5	51.6	53.4	55.0	56.4	57.7	58.9
140			42.6	45.3	47.7	49.8	51.7	53.3	54.8	56.1	57.2
160				43.7	46.1	48.2	50.1	51.7	53.2	54.5	55.7
180				42.3	44.7	46.8	48.6	50.3	51.8	53.1	54.3
200					43.3	45.4	47.3	48.9	50.4	51.8	53.0
220					42.0	44.1	46.0	47.7	49.2	50.6	51.8
240						43.0	44.8	46.5	48.0	49.4	50.7
260						41.8	43.7	45.4	46.9	48.3	49.6
280							42.7	44.3	45.9	47.3	48.5
300							41.7	43.3	44.9	46.3	47.6

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

Takeoff Obstacle Limit Weight - High Altitudes**Flaps 5****OAT Adjustments**

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	45	50	55	60	65	70
10 & BELOW	0	0	0	0	0	0	0
12	-0.3	-0.3	-0.3	-0.4	-0.4	-0.4	-0.5
14	-0.5	-0.6	-0.7	-0.7	-0.8	-0.9	-0.9
16	-0.8	-0.9	-1.0	-1.1	-1.2	-1.3	-1.4
18	-1.1	-1.2	-1.4	-1.5	-1.6	-1.7	-1.9
20	-1.4	-1.5	-1.7	-1.8	-2.0	-2.2	-2.3
22	-1.8	-2.0	-2.3	-2.5	-2.7	-3.0	-3.2
24	-2.2	-2.5	-2.8	-3.1	-3.4	-3.7	-4.0
26	-2.6	-3.0	-3.4	-3.8	-4.1	-4.5	-4.9
28	-3.1	-3.5	-4.0	-4.4	-4.9	-5.3	-5.7
30	-3.5	-4.0	-4.5	-5.0	-5.6	-6.1	-6.6
32	-4.1	-4.7	-5.3	-5.9	-6.5	-7.1	-7.7
34	-4.7	-5.4	-6.0	-6.7	-7.4	-8.1	-8.8
36	-5.3	-6.0	-6.8	-7.6	-8.3	-9.1	-9.9
38	-5.8	-6.7	-7.5	-8.4	-9.2	-10.1	-10.9
40	-6.4	-7.4	-8.3	-9.2	-10.2	-11.1	-12.0
42	-6.9	-7.9	-8.9	-10.0	-11.0	-12.0	-13.1
44	-7.3	-8.4	-9.6	-10.7	-11.8	-13.0	-14.1
46	-7.7	-9.0	-10.2	-11.4	-12.7	-13.9	-15.1
48	-8.2	-9.5	-10.8	-12.2	-13.5	-14.8	-16.1
50	-8.6	-10.0	-11.5	-12.9	-14.3	-15.7	-17.2

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	45	50	55	60	65	70
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-1.6	-1.8	-2.0	-2.2	-2.4	-2.6	-2.8
12000	-3.3	-3.7	-4.1	-4.4	-4.8	-5.2	-5.6
13000	-4.9	-5.5	-6.0	-6.6	-7.2	-7.8	-8.3
14000	-6.5	-7.2	-8.0	-8.8	-9.5	-10.3	-11.1
14500	-7.3	-8.1	-9.0	-10.0	-10.8	-11.6	-12.5

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)						
	40	45	50	55	60	65	70
15TW	-6.3	-6.2	-6.1	-5.9	-5.8	-5.7	-5.6
10TW	-4.2	-4.1	-4.0	-4.0	-3.9	-3.8	-3.7
5TW	-2.1	-2.1	-2.0	-2.0	-1.9	-1.9	-1.9
0	0	0	0	0	0	0	0
10HW	0.8	0.7	0.7	0.6	0.5	0.5	0.4
20HW	1.6	1.5	1.4	1.2	1.1	0.9	0.8
30HW	2.5	2.3	2.1	1.8	1.6	1.4	1.2
40HW	3.3	3.0	2.8	2.5	2.2	1.9	1.6

With engine bleed for packs off, increase weight by 600 kg.

With engine anti-ice on, decrease weight by 1900 kg.

With engine and wing anti-ice on, decrease weight by 3100 kg (optional system).

Brake Energy Limits VMBE
Maximum Brake Energy Speed

OAT (°C)	REFERENCE VMBE (KIAS)						
	PRESSURE ALTITUDE (FT)						
	-2000	0	2000	4000	6000	8000	10000
54	177	170					
50	178	171	165				
46	178	172	166	160			
42	179	172	166	160	155		
38	180	173	167	161	155	148	
34	181	174	168	162	156	149	143
30	182	175	169	163	157	150	144
26	183	176	170	164	158	151	145
22	185	177	171	165	159	153	147
18	186	179	172	166	160	154	148
14	188	180	174	167	161	155	149
10	190	182	175	169	163	157	151
6	191	183	177	170	164	158	152
2	193	185	178	172	165	159	153
-2	195	187	180	173	167	160	155
-6	196	188	181	175	168	162	156
-10	198	190	183	176	170	163	157

Weight Adjusted VMBE

WEIGHT (1000 KG)	REFERENCE VMBE (KIAS)															
	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	
42	188	195	202	208	210	210	210	210	210	210	210	210	210	210	210	210
46	178	184	191	197	204	210	210	210	210	210	210	210	210	210	210	210
50	169	175	181	188	194	200	206	210	210	210	210	210	210	210	210	210
54	161	167	173	179	185	191	197	203	209	210	210	210	210	210	210	210
58	155	160	166	172	178	183	189	195	200	206	210	210	210	210	210	210
62	149	155	160	166	171	176	182	187	193	198	204	209	210	210	210	210
66	144	150	155	160	165	170	176	181	186	191	196	202	207	210	210	210
70	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	210
74	136	141	146	150	155	160	165	170	174	179	184	189	194	198	203	210
78	132	137	142	146	151	155	160	165	169	174	179	183	188	192	197	210
82	129	134	138	142	147	151	156	160	165	169	174	178	182	187	191	210
86	127	131	135	139	144	148	152	156	161	165	169	173	178	182	186	210

Increase VMBE by 1 knot per 1% uphill runway slope. Decrease VMBE by 4 knots per 1% downhill runway slope.

Increase VMBE by 3 knots per 10 knots headwind. Decrease VMBE by 20 knots per 10 knots tailwind.

Decrease brake release weight by 550 kg for each knot V1 exceeds VMBE.

Determine normal V1, VR, V2 speeds for lower brake release weight.

Performance Dispatch

Enroute

Chapter PD

Section 51

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 KG)	OPTIMUM ALT (M)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	31800	-8	33000*	33000*	33000*	31600	30100
80	33100	-11	34600*	34600*	34500	32900	31400
75	34500	-14	36100*	36100*	35800	34300	32800
70	35900	-17	37500*	37500*	37300	35700	34300
65	37500	-17	38900*	38900*	38800	37300	35800
60	39100	-17	40300*	40300*	40300*	38900	37500
55	40900	-17	41000	41000	41000	40800	39300
50	41000	-17	41000	41000	41000	41000	41000
45	41000	-17	41000	41000	41000	41000	41000
40	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 KG)	OPTIMUM ALT (M)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	31800	-3	30200*	30200*	30200*	30200*	30100
80	33100	-6	33000*	33000*	33000*	32900	31400
75	34500	-9	35000*	35000*	35000*	34300	32800
70	35900	-12	36500*	36500*	36500*	35700	34300
65	37500	-12	37900*	37900*	37900*	37300	35800
60	39100	-12	39300*	39300*	39300*	38900	37500
55	40900	-12	40900*	40900*	40900*	40800	39300
50	41000	-12	41000	41000	41000	41000	41000
45	41000	-12	41000	41000	41000	41000	41000
40	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 KG)	OPTIMUM ALT (M)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	31800	3	23100*	23100*	23100*	23100*	23100*
80	33100	0	23700*	23700*	23700*	23700*	23700*
75	34500	-3	30500*	30500*	30500*	30500*	30500*
70	35900	-6	34900*	34900*	34900*	34900*	34300
65	37500	-6	36500*	36500*	36500*	36500*	35800
60	39100	-6	37900*	37900*	37900*	37900*	37500
55	40900	-6	39400*	39400*	39400*	39400*	39300
50	41000	-6	41000	41000	41000	41000	41000
45	41000	-6	41000	41000	41000	41000	41000
40	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
273	255	239	224	211	200	191	182	174	167	160
528	497	468	443	421	400	383	367	352	338	326
783	739	698	662	630	600	574	551	529	509	491
1038	980	927	881	839	800	767	735	707	680	656
1293	1222	1157	1100	1048	1000	959	920	885	852	822
1548	1464	1387	1319	1257	1200	1151	1105	1062	1023	988
1803	1706	1617	1538	1466	1400	1343	1290	1240	1195	1153
2057	1948	1847	1757	1675	1600	1535	1474	1418	1366	1319
2312	2189	2076	1976	1884	1800	1727	1659	1596	1538	1484
2567	2431	2306	2194	2093	2000	1919	1844	1774	1709	1650
2822	2673	2536	2413	2302	2200	2111	2028	1952	1881	1816
3077	2915	2765	2632	2511	2400	2303	2213	2129	2052	1981
3332	3156	2995	2851	2721	2600	2495	2398	2307	2223	2147
3587	3398	3225	3070	2930	2800	2688	2583	2485	2395	2312
3842	3640	3455	3289	3139	3000	2880	2767	2663	2566	2477
4097	3882	3685	3508	3348	3200	3071	2951	2840	2737	2643
4352	4124	3915	3727	3557	3400	3263	3136	3017	2908	2808
4608	4366	4145	3946	3766	3600	3455	3320	3195	3080	2974
4863	4608	4375	4165	3975	3800	3647	3505	3373	3251	3139
5118	4850	4605	4384	4184	4000	3840	3690	3551	3423	3305
5373	5092	4834	4603	4393	4200	4032	3875	3729	3594	3471
5628	5333	5064	4822	4602	4400	4224	4059	3906	3766	3636
5883	5576	5294	5041	4812	4600	4416	4244	4084	3937	3802
6138	5818	5524	5260	5021	4800	4608	4429	4262	4108	3967
6393	6060	5754	5479	5230	5000	4800	4613	4440	4279	4132
6648	6302	5983	5698	5439	5200	4992	4798	4617	4451	4298
6903	6543	6213	5917	5648	5400	5184	4982	4795	4622	4463
7158	6785	6443	6136	5857	5600	5376	5167	4972	4793	4629
7413	7027	6673	6355	6066	5800	5568	5351	5150	4964	4794
7668	7269	6903	6574	6276	6000	5760	5536	5328	5136	4959

.80M Trip Fuel and Time**Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	27		29		31		33		35	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.7	0:37	1.7	0:37	1.7	0:37	1.7	0:38	1.7	0:37
400	3.1	1:02	3.0	1:03	2.9	1:03	2.8	1:03	2.8	1:04
600	4.4	1:27	4.2	1:28	4.1	1:29	4.0	1:29	3.9	1:30
800	5.8	1:53	5.5	1:54	5.3	1:54	5.1	1:55	5.0	1:56
1000	7.1	2:18	6.8	2:19	6.5	2:20	6.3	2:21	6.1	2:22
1200	8.5	2:43	8.1	2:44	7.7	2:46	7.4	2:47	7.2	2:48
1400	9.8	3:08	9.4	3:10	9.0	3:11	8.6	3:13	8.3	3:14
1600	11.2	3:34	10.7	3:35	10.2	3:37	9.8	3:39	9.5	3:40
1800	12.6	3:59	12.0	4:01	11.4	4:03	11.0	4:05	10.6	4:06
2000	14.0	4:24	13.3	4:26	12.7	4:28	12.2	4:30	11.8	4:33
2200	15.4	4:49	14.6	4:52	13.9	4:54	13.4	4:56	13.0	4:59
2400	16.8	5:14	15.9	5:17	15.2	5:20	14.6	5:22	14.2	5:25
2600	18.2	5:40	17.3	5:43	16.5	5:45	15.8	5:48	15.4	5:51
2800	19.6	6:05	18.6	6:08	17.8	6:11	17.1	6:14	16.6	6:17
3000	21.0	6:30	20.0	6:33	19.1	6:37	18.4	6:40	17.9	6:43
3200	22.4	6:55	21.4	6:59	20.4	7:02	19.6	7:06	19.2	7:09
3400	23.9	7:21	22.7	7:24	21.7	7:28	20.9	7:32	20.5	7:35
3600	25.3	7:46	24.1	7:50	23.1	7:54	22.3	7:58		
3800	26.8	8:11	25.5	8:15	24.5	8:19	23.6	8:24		
4000	28.3	8:37	26.9	8:41	25.8	8:45	25.0	8:49		
4200	29.8	9:02	28.4	9:06	27.2	9:11	26.4	9:15		
4400	31.3	9:27	29.8	9:32	28.6	9:37	27.8	9:41		
4600	32.8	9:52	31.3	9:57	30.1	10:02				
4800	34.3	10:18	32.8	10:23	31.5	10:28				
5000	35.8	10:43	34.3	10:48	33.0	10:54				
5200	37.4	11:08	35.8	11:14						
5400	39.0	11:34	37.3	11:40						
5600	40.6	11:59								
5800	42.2	12:24								
6000	43.9	12:50								

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	LANDING WEIGHT (1000 KG)				
	40	50	60	70	80
4	-0.3	-0.2	0.0	0.3	0.8
8	-0.4	-0.3	0.0	0.7	1.7
12	-0.6	-0.4	0.0	1.1	2.8
16	-0.8	-0.5	0.0	1.6	4.1
20	-1.0	-0.6	0.0	2.2	5.6
24	-1.3	-0.8	0.0	2.9	7.3
28	-1.6	-0.9	0.0	3.6	9.2
32	-1.9	-1.1	0.0	4.4	11.3
36	-2.2	-1.3	0.0	5.3	13.6

Based on 280/.80M climb, .80M Cruise and .80/280/250 descent.

.80M Step Climb Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
1310	1233	1165	1104	1050	1000	955	914	876	841	809
1820	1717	1625	1542	1468	1400	1338	1282	1230	1182	1137
2331	2201	2085	1981	1886	1800	1722	1650	1584	1522	1466
2842	2685	2545	2419	2304	2200	2105	2018	1937	1863	1795
3353	3169	3005	2857	2722	2600	2488	2386	2291	2204	2123
3864	3653	3465	3295	3140	3000	2872	2754	2645	2545	2452
4374	4137	3925	3733	3559	3400	3255	3122	2999	2886	2781
4885	4621	4384	4171	3977	3800	3638	3490	3353	3227	3109
5396	5105	4844	4609	4395	4200	4022	3858	3707	3567	3438
5907	5589	5304	5047	4813	4600	4405	4226	4061	3908	3767
6418	6073	5764	5485	5231	5000	4788	4594	4415	4249	4095
6929	6557	6224	5923	5649	5400	5172	4962	4769	4590	4424
7440	7042	6684	6361	6067	5800	5555	5330	5123	4931	4753
7951	7526	7144	6799	6486	6200	5938	5698	5476	5271	5081
8462	8010	7604	7237	6904	6600	6322	6066	5830	5612	5410
8973	8494	8064	7675	7322	7000	6705	6434	6184	5953	5738

Trip Fuel and Time Required

AIR DIST (NM)	TRIP FUEL (1000 KG)								TIME (HRS:MIN)
	LANDING WEIGHT (1000 KG)								
	40	45	50	55	60	65	70	75	
1000	4.7	4.9	5.2	5.6	6.0	6.4	6.8	7.1	2:22
1400	6.3	6.7	7.1	7.7	8.2	8.8	9.3	9.8	3:14
1800	8.0	8.5	9.1	9.9	10.5	11.2	11.9	12.6	4:06
2200	9.7	10.3	11.1	12.0	12.8	13.8	14.6	15.5	4:58
2600	11.5	12.2	13.2	14.3	15.3	16.4	17.4	18.4	5:50
3000	13.3	14.2	15.4	16.6	17.8	19.0	20.3	21.5	6:42
3400	15.2	16.3	17.6	19.0	20.4	21.8	23.2	24.6	7:34
3800	17.1	18.4	19.8	21.5	23.0	24.6	26.3		8:26
4200	19.0	20.5	22.2	24.0	25.7	27.6	29.4		9:19
4600	21.1	22.7	24.6	26.6	28.5	30.6			10:11
5000	23.2	25.0	27.1	29.3	31.5	33.7			11:03
5400	25.3	27.3	29.6	32.1	34.4	36.9			11:55
5800	27.5	29.7	32.3	34.9	37.5				12:47
6200	29.7	32.2	35.0	37.9	40.7				13:39
6600	32.1	34.8	37.8	40.9					14:31
7000	34.5	37.4	40.6	44.0					15:24

Based on 280/.80 climb, .80M Cruise, and .80/280/250 descent.
Valid for all pressure altitudes with 4000 ft step climb to 2000 ft above optimum altitude.

Short Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
95	81	70	62	55	50	46	42	39	36	34
161	144	130	118	108	100	93	87	81	77	72
227	206	188	174	161	150	140	132	125	118	112
292	267	246	229	213	200	188	178	168	160	152
355	328	304	284	266	250	236	224	212	202	193
418	387	361	338	318	300	284	270	257	245	234
481	447	418	393	370	350	332	316	301	287	275
544	508	476	447	422	400	380	362	345	330	316
608	568	533	502	475	450	428	408	389	372	357
674	630	592	558	527	500	475	453	433	414	397

Trip Fuel and Time Required

AIR DIST (NM)		LANDING WEIGHT (1000 KG)					TIME (HRS:MIN)
		40	50	60	70	80	
50	FUEL (1000 KG)	0.5	0.6	0.7	0.8	0.8	0:14
	ALT (FT)	11000	11000	9000	7000	7000	
100	FUEL (1000 KG)	0.9	1.0	1.1	1.2	1.3	0:23
	ALT (FT)	19000	17000	17000	15000	15000	
150	FUEL (1000 KG)	1.1	1.3	1.4	1.5	1.6	0:31
	ALT (FT)	25000	25000	23000	21000	19000	
200	FUEL (1000 KG)	1.4	1.5	1.7	1.8	2.0	0:38
	ALT (FT)	33000	27000	25000	25000	23000	
250	FUEL (1000 KG)	1.6	1.8	2.0	2.2	2.4	0:44
	ALT (FT)	39000	35000	31000	29000	27000	
300	FUEL (1000 KG)	1.8	2.0	2.2	2.5	2.7	0:51
	ALT (FT)	41000	39000	35000	33000	29000	
350	FUEL (1000 KG)	2.0	2.2	2.5	2.8	3.0	0:57
	ALT (FT)	41000	39000	35000	33000	31000	
400	FUEL (1000 KG)	2.1	2.4	2.7	3.1	3.4	1:04
	ALT (FT)	41000	41000	37000	33000	31000	
450	FUEL (1000 KG)	2.3	2.7	3.0	3.3	3.7	1:10
	ALT (FT)	41000	41000	37000	35000	31000	
500	FUEL (1000 KG)	2.5	2.9	3.3	3.6	4.0	1:17
	ALT (FT)	41000	41000	37000	35000	31000	

Based on 280/78 climb, Long Range Cruise, and .78/280/250 descent.

Holding Planning
Flaps Up

WEIGHT (1000 KG)	TOTAL FUEL FLOW (KG/HR)								
	PRESSURE ALTITUDE (FT)								
	1500	5000	10000	15000	20000	25000	30000	35000	41000
90	3160	3110	3100	3080	3060	3090	3210		
85	3000	2950	2930	2910	2880	2900	2990		
80	2840	2790	2760	2740	2700	2710	2790		
75	2690	2640	2600	2580	2530	2530	2590	2720	
70	2530	2480	2440	2410	2370	2340	2400	2480	
65	2380	2320	2280	2240	2210	2160	2220	2270	
60	2220	2170	2130	2080	2050	2000	2030	2070	
55	2070	2010	1970	1930	1890	1840	1850	1890	2040
50	1920	1860	1810	1770	1730	1730	1700	1730	1830
45	1760	1710	1690	1640	1600	1570	1550	1550	1630
40	1650	1600	1540	1490	1450	1420	1400	1380	1440

This table includes 5% additional fuel for holding in a racetrack pattern.

Flight Crew Oxygen Requirements
Required Pressure (PSI) for 76 Cubic FT Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	735	1055	1360
45	113	725	1040	1340
40	104	715	1020	1320
35	95	700	1005	1300
30	86	690	990	1280
25	77	680	975	1255
20	68	670	960	1240
15	59	655	940	1215
10	50	645	925	1195
5	41	635	910	1175
0	32	620	890	1150
-5	23	610	875	1130
-10	14	600	860	1110

Required Pressure (PSI) for 114/115 Cubic FT Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	530	735	945
45	113	520	725	930
40	104	510	715	915
35	95	505	700	900
30	86	495	690	885
25	77	485	680	870
20	68	480	670	860
15	59	470	655	840
10	50	460	645	830
5	41	455	635	815
0	32	445	620	800
-5	23	440	610	785
-10	14	430	600	770

ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 KG)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	43.8	42.5	41.0
28	47.5	45.9	44.5
26	51.3	49.6	48.1
24	55.6	53.8	52.1
22	60.6	58.5	56.4
20	65.9	63.5	61.1
18	70.8	68.2	65.3
16	75.6	73.0	70.0
14	80.0	77.5	75.0
12	84.8	81.9	78.8

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 KG)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-2.0	-1.8	-1.8	-1.8	-1.6	-1.5	-1.4	-1.3	-1.1
ENGINE & WING	-7.6	-7.1	-6.7	-6.7	-6.4	-5.9	-5.3	-4.9	

ALL ENGINES

Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
284	262	243	227	213	200	189	179	170	162	154
577	530	490	456	426	400	377	356	338	321	306
870	798	737	685	640	600	565	534	506	481	458
1163	1066	984	914	853	800	753	711	674	640	610
1455	1334	1231	1143	1067	1000	941	889	842	800	762
1748	1602	1478	1372	1280	1200	1129	1066	1010	959	913
2041	1870	1725	1601	1494	1400	1317	1244	1178	1119	1065
2334	2138	1972	1830	1707	1600	1505	1421	1346	1278	1217
2627	2406	2219	2059	1921	1800	1693	1599	1514	1438	1369

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)				
	50	60	70	80	90
200	1.7	1.9	2.0	2.1	2.2
300	2.5	2.7	2.9	3.0	3.2
400	3.2	3.5	3.7	4.0	4.1
500	4.0	4.3	4.5	4.8	5.0
600	4.7	5.0	5.4	5.7	6.0
700	5.5	5.8	6.2	6.6	6.9
800	6.2	6.6	7.1	7.5	7.8
900	6.9	7.4	7.9	8.4	8.8
1000	7.7	8.2	8.7	9.3	9.7
1100	8.4	8.9	9.5	10.1	10.6
1200	9.1	9.7	10.3	11.0	11.5
1300	9.8	10.5	11.1	11.8	12.4
1400	10.6	11.2	11.9	12.7	13.3
1500	11.3	12.0	12.7	13.5	14.2
1600	12.0	12.7	13.5	14.4	15.1
1700	12.7	13.5	14.3	15.2	16.0
1800	13.4	14.2	15.1	16.1	16.9

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included.

- Adjustments:
- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
 - Increase fuel required 0.7% per 10°C above ISA.
 - When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inop-erative driftdown and use the higher of the three.

ENGINE INOP**MAX CONTINUOUS THRUST****Decompression Critical Fuel Reserves - LRC Cruise****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
289	266	245	228	213	200	188	178	169	160	153
586	536	494	458	427	400	376	355	336	319	304
883	807	743	688	641	600	564	532	503	478	455
1179	1077	991	918	855	800	752	709	671	636	605
1476	1348	1240	1148	1069	1000	939	886	838	795	756
1773	1618	1488	1378	1283	1200	1127	1063	1005	954	907
2069	1889	1737	1608	1497	1400	1315	1240	1172	1112	1058
2366	2159	1986	1838	1711	1600	1503	1417	1340	1271	1209
2663	2430	2234	2068	1925	1800	1690	1594	1507	1430	1360

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)				
	50	60	70	80	90
200	1.5	1.7	1.8	2.0	2.1
300	2.2	2.4	2.6	2.8	2.9
400	2.9	3.2	3.4	3.7	3.8
500	3.6	3.9	4.2	4.5	4.7
600	4.2	4.6	5.0	5.3	5.6
700	4.9	5.3	5.8	6.2	6.5
800	5.6	6.1	6.5	7.0	7.4
900	6.2	6.8	7.3	7.8	8.2
1000	6.9	7.5	8.1	8.6	9.1
1100	7.5	8.2	8.8	9.4	10.0
1200	8.2	8.9	9.6	10.3	10.8
1300	8.8	9.6	10.3	11.1	11.7
1400	9.5	10.3	11.1	11.9	12.6
1500	10.1	11.0	11.8	12.7	13.4
1600	10.7	11.7	12.6	13.5	14.2
1700	11.4	12.3	13.3	14.2	15.1
1800	12.0	13.0	14.0	15.0	15.9

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.7% per 10°C above ISA.

-When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (18%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
268	251	236	222	210	200	190	181	173	165	159
541	505	474	446	422	400	380	362	345	330	317
815	761	713	671	633	600	569	542	517	495	474
1092	1018	953	896	845	800	759	722	689	658	630
1371	1276	1193	1121	1057	1000	948	902	860	822	786
1650	1535	1434	1347	1269	1200	1137	1081	1031	984	942
1930	1794	1676	1572	1481	1400	1327	1261	1201	1147	1098
2209	2053	1917	1798	1693	1600	1516	1440	1372	1310	1254
2488	2311	2158	2023	1905	1800	1705	1620	1543	1473	1410

Critical Fuel (1000 KG)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 KG)				
	50	60	70	80	90
200	1.5	1.6	1.8	1.9	2.1
300	2.1	2.2	2.5	2.7	2.9
400	2.6	2.8	3.1	3.4	3.7
500	3.1	3.4	3.8	4.2	4.6
600	3.6	4.0	4.5	4.9	5.4
700	4.1	4.6	5.1	5.7	6.2
800	4.5	5.1	5.8	6.4	7.1
900	5.0	5.7	6.4	7.1	7.9
1000	5.5	6.3	7.1	7.9	8.7
1100	6.0	6.8	7.7	8.6	9.5
1200	6.4	7.4	8.3	9.3	10.3
1300	6.9	7.9	9.0	10.0	11.1
1400	7.4	8.4	9.6	10.7	11.9
1500	7.8	9.0	10.2	11.4	12.7
1600	8.3	9.5	10.8	12.1	13.4
1700	8.7	10.0	11.4	12.8	14.2
1800	9.2	10.6	12.0	13.4	15.0

Based on: Driftdown to and cruise at level off altitude, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.7% per 10°C above ISA.
- When icing conditions are forecast, use the greater of the engine and wing anti-ice on (10%) for the total forecast time or engine and wing anti-ice on and ice drag (30%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inop-erative driftdown and use the higher of the three.

Performance Dispatch

Landing

Chapter PD

Section 52

Landing Field Limit Weight - Dry Runway

Based on anti-skid operative and automatic speedbrakes

Flaps 40

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1000		810	910	1000	1070	1140	1210	1280
1200	880	990	1100	1200	1270	1350	1420	1490
1400	1050	1170	1290	1400	1480	1550	1630	1710
1600	1220	1350	1470	1600	1680	1760	1840	1920
1800	1390	1530	1660	1800	1880	1970	2050	2140
2000	1560	1710	1850	2000	2090	2180	2270	2360
2200	1730	1880	2040	2200	2290	2390	2480	2570
2400	1900	2060	2220	2400	2500	2590	2690	2790
2600	2050	2210	2380	2600	2700	2800	2900	3000
2800	2160	2310	2480	2800	2900	3010	3110	3220
3000	2260	2410	2580	3000	3110	3220	3330	
3200	2370	2510	2680	3200	3310			
3400	2480	2610	2780	3400				
3600	2580	2710	2880					
3800	2690	2810	2980					
4000	2800	2910	3080					

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
1200	49.3	46.4	43.5	40.8	38.2	
1400	60.5	57.7	54.9	52.3	49.0	45.9
1600	71.1	67.5	64.0	60.8	57.8	54.9
1800	80.1	76.6	72.7	68.8	65.1	61.6
2000	85.9	83.3	80.5	76.5	72.4	68.4
2200			85.7	82.9	79.5	75.1
2400				87.8	84.8	81.5
2600						84.7
2800						87.1

Decrease field limit weight by 5800 kg when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway
Based on anti-skid inoperative and manual speedbrakes
Flaps 40

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1600				1600	1750	1890	2040	2190
1800			1560	1800	1950	2100	2260	2410
2000		1500	1750	2000	2160	2310	2470	2630
2200	1430	1680	1940	2200	2360	2520	2690	2850
2400	1600	1870	2130	2400	2570	2730	2900	3070
2600	1780	2050	2330	2600	2770	2940	3120	3290
2800	1960	2240	2520	2800	2980	3150	3330	3510
3000	2140	2420	2710	3000	3180	3360	3550	3730
3200	2310	2610	2900	3200	3390	3570	3760	3950
3400	2490	2790	3100	3400	3590	3780	3980	4170
3600	2670	2980	3290	3600	3800	3990	4190	4390
3800	2850	3160	3480	3800	4000	4200	4410	4610
4000	3020	3350	3670	4000	4210	4410	4620	4830
4200	3200	3530	3870	4200	4410	4620	4840	5050
4400	3380	3720	4060	4400	4620	4830	5050	5270
4600	3560	3900	4250	4600	4820	5040	5270	5490
4800	3730	4090	4440	4800	5030	5250	5480	5710
5000	3910	4270	4640	5000	5230	5460	5700	
5200	4090	4460	4830	5200	5440	5670		
5400	4270	4640	5020	5400	5640			

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
2000	38.6					
2200	44.5	41.5	38.1			
2400	50.4	47.1	43.4	40.4		
2600	56.3	52.7	48.7	45.4	42.2	39.2
2800	62.1	58.1	53.8	50.3	46.9	43.5
3000	68.1	63.5	58.9	55.1	51.4	47.8
3200	74.0	69.2	64.0	59.8	55.8	52.0
3400	79.2	74.6	69.2	64.5	60.3	56.2
3600	83.8	79.5	74.2	69.2	64.4	60.1
3800		83.9	79.0	73.9	68.8	64.0
4000			83.3	78.4	73.2	68.1
4200			87.4	82.7	77.5	72.2
4400				86.9	81.8	76.2
4600					86.0	80.3
4800						84.3

Landing Field Limit Weight - Dry Runway - High Altitudes**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200	1020	1080	1130	1200	1260	1320	1390	1470
1400	1150	1230	1290	1400	1460	1530	1610	1690
1600	1270	1370	1460	1600	1670	1740	1820	1910
1800	1400	1520	1630	1800	1870	1950	2040	2130
2000	1520	1660	1800	2000	2080	2160	2250	2340
2200	1650	1810	1970	2200	2280	2370	2470	2560
2400	1770	1950	2140	2400	2480	2590	2740	2930
2600	1900	2100	2310	2600	2690	2840	3050	3310
2800	2020	2240	2480	2800	2910	3100	3360	3700
3000	2150	2390	2650	3000	3130	3360	3670	4090
3200	2270	2530	2820	3200	3350	3610	3990	
3400	2400	2680	2990	3400	3570	3870	4300	
3600	2520	2820	3160	3600	3790	4120		
3800	2650	2970	3330	3800	4010	4380		
4000	2770	3110	3500	4000	4220			
4200	2900	3260	3670	4200				
4400	3020	3400	3840	4400				
4600	3150	3550	4010	4600				
4800	3270	3690	4180	4800				
5000	3400	3840	4340	5000				

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
1400	45.9	44.3	42.9	41.4	40.0	39.3
1600	54.9	53.5	52.0	50.3	48.7	47.8
1800	61.6	60.0	58.4	56.9	55.3	54.6
2000	68.4	66.4	64.6	62.8	61.1	60.2
2200	75.1	73.0	70.9	68.9	66.9	65.9
2400	81.5	79.5	77.2	75.0	72.8	71.8
2600	84.7	83.1	81.5	79.8	78.1	77.2
2800	87.1	85.4	83.7	82.1	80.4	79.6
3000		87.5	85.8	84.1	82.4	81.6
3200			87.8	86.0	84.2	83.4
3400				87.8	86.0	85.1
3600					87.6	86.7

Decrease field limit weight by 4600 kg when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway High Altitude
Based on anti-skid inoperative and manual speedbrakes
Flaps 40

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
2400				2400	2580	2750	2930	3110
2600			2330	2600	2780	2960	3150	3330
2800		2250	2520	2800	2990	3170	3360	3550
3000		2440	2720	3000	3190	3380	3580	3770
3200	2340	2620	2910	3200	3390	3590	3790	3990
3400	2520	2810	3100	3400	3600	3800	4010	4210
3600	2710	3000	3300	3600	3800	4010	4220	4430
3800	2890	3190	3490	3800	4010	4220	4440	4650
4000	3070	3370	3680	4000	4210	4430	4650	4880
4200	3250	3560	3880	4200	4420	4640	4870	5100
4400	3430	3750	4070	4400	4620	4850	5080	5320
4600	3610	3940	4260	4600	4830	5060	5300	5540
4800	3800	4120	4460	4800	5030	5270	5510	5760
5000	3980	4310	4650	5000	5240	5480	5720	5980
5200	4160	4500	4840	5200	5440	5690	5940	6200
5400	4340	4690	5040	5400	5650	5900	6150	6420
5600	4520	4870	5230	5600	5850	6110	6370	
5800	4700	5060	5430	5800	6050	6320	6580	
6000	4890	5250	5620	6000	6260	6530		
6200	5070	5430	5810	6200	6460			

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
2600	39.2	38.0				
2800	43.5	42.2	40.8	39.5	38.2	
3000	47.8	46.3	44.8	43.4	41.9	41.2
3200	52.0	50.4	48.8	47.2	45.6	44.8
3400	56.2	54.4	52.7	51.0	49.3	48.4
3600	60.1	58.2	56.3	54.5	52.7	51.8
3800	64.0	61.9	60.0	58.0	56.1	55.1
4000	68.1	65.8	63.6	61.5	59.5	58.5
4200	72.2	69.8	67.4	65.1	62.9	61.8
4400	76.2	73.7	71.2	68.8	66.4	65.1
4600	80.3	77.6	75.0	72.4	69.9	68.7
4800	84.3	81.5	78.8	76.1	73.5	72.2
5000		85.4	82.6	79.8	77.0	75.6
5200			86.4	83.4	80.5	79.1
5400				87.1	84.1	82.6
5600					87.6	86.0

Landing Field Limit Weight - Wet Runway**Based on anti-skid operative and automatic speedbrakes****Flaps 40****Wind Corrected Field Length (M)**

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1000				1000	1080	1150	1230	1300
1200		980	1090	1200	1280	1360	1440	1520
1400	1030	1160	1280	1400	1480	1570	1650	1740
1600	1200	1340	1470	1600	1690	1780	1860	1950
1800	1370	1510	1660	1800	1890	1980	2080	2170
2000	1540	1690	1840	2000	2100	2190	2290	2380
2200	1710	1870	2030	2200	2300	2400	2500	2600
2400	1880	2050	2220	2400	2500	2610	2710	2820
2600	2050	2230	2410	2600	2710	2820	2920	3030
2800	2220	2410	2600	2800	2910	3020	3140	3250
3000	2360	2550	2740	3000	3120	3230	3350	3460
3200	2470	2650	2840	3200	3320	3440	3560	3680
3400	2580	2750	2940	3400	3520	3650	3770	3900
3600	2680	2850	3040	3600	3730	3860		
3800	2790	2950	3140	3800				
4000	2900	3050	3240					
4200	3000	3150	3340					
4400	3110	3250	3440					
4600	3220	3350	3540					
4800	3320	3450	3640					

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
1200	38.5					
1400	50.5	47.6	44.6	41.8	39.2	
1600	60.1	57.3	54.5	51.8	48.6	45.4
1800	69.2	65.7	62.4	59.4	56.4	53.6
2000	77.7	74.1	70.2	66.5	62.9	59.6
2200	83.5	80.9	77.3	73.2	69.2	65.4
2400		85.5	82.8	79.7	75.5	71.3
2600			87.2	84.3	81.4	77.2
2800					85.6	82.3
3000						84.8
3200						86.9

Decrease field limit weight by 5800 kg when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway
Based on anti-skid inoperative and manual speedbrakes
Flaps 40

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1600					1760	1930	2090	2250
1800				1800	1970	2140	2300	2470
2000			1720	2000	2170	2350	2520	2690
2200		1630	1920	2200	2380	2560	2730	2910
2400		1820	2110	2400	2580	2770	2950	3130
2600	1700	2000	2300	2600	2790	2980	3160	3350
2800	1880	2190	2490	2800	2990	3190	3380	3570
3000	2060	2370	2690	3000	3200	3400	3590	3790
3200	2240	2560	2880	3200	3400	3610	3810	4010
3400	2410	2740	3070	3400	3610	3820	4020	4230
3600	2590	2930	3260	3600	3810	4030	4240	4450
3800	2770	3110	3460	3800	4020	4240	4450	4670
4000	2950	3300	3650	4000	4220	4450	4670	4890
4200	3120	3480	3840	4200	4430	4660	4880	5110
4400	3300	3670	4030	4400	4630	4870	5100	5330
4600	3480	3850	4230	4600	4840	5080	5310	5550
4800	3660	4040	4420	4800	5040	5290	5530	5770
5000	3830	4220	4610	5000	5250	5500	5740	5990
5200	4010	4410	4800	5200	5450	5710	5960	6210
5400	4190	4590	5000	5400	5660	5920	6170	6430

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
2400	41.2	38.4				
2600	46.3	43.2	39.7			
2800	51.5	48.1	44.3	41.3	38.4	
3000	56.6	52.9	48.9	45.6	42.4	39.4
3200	61.6	57.6	53.4	49.8	46.5	43.2
3400	66.8	62.4	57.8	54.0	50.4	46.9
3600	72.0	67.2	62.2	58.2	54.3	50.6
3800	76.8	72.1	66.7	62.3	58.2	54.2
4000	81.0	76.6	71.2	66.4	61.9	57.7
4200	85.0	80.6	75.4	70.4	65.6	61.1
4400		84.4	79.6	74.5	69.4	64.5
4600			83.3	78.4	73.2	68.1
4800			86.9	82.2	77.0	71.6
5000				85.8	80.7	75.2
5200					84.3	78.7
5400					88.0	82.2
5600						85.7

Landing Field Limit Weight - Wet Runway High Altitude

Based on anti-skid operative and automatic speedbrakes

Flaps 40

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
1200				1200	1260	1330	1410	1490
1400	1190	1260	1310	1400	1470	1540	1620	1710
1600	1320	1410	1480	1600	1670	1750	1840	1930
1800	1440	1550	1650	1800	1880	1960	2050	2150
2000	1570	1700	1820	2000	2080	2170	2270	2370
2200	1690	1840	1990	2200	2290	2380	2480	2590
2400	1820	1990	2160	2400	2490	2590	2700	2810
2600	1940	2130	2330	2600	2700	2800	2920	3060
2800	2070	2280	2500	2800	2890	3030	3210	3440
3000	2190	2420	2670	3000	3110	3280	3520	3830
3200	2320	2570	2840	3200	3330	3540	3840	4220
3400	2440	2710	3010	3400	3550	3800	4150	4600
3600	2570	2860	3170	3600	3770	4050	4460	4990
3800	2690	3000	3340	3800	3980	4310	4770	
4000	2820	3150	3510	4000	4200	4560		
4200	2940	3290	3680	4200	4420	4820		
4400	3070	3440	3850	4400	4640			
4600	3190	3580	4020	4600	4860			
4800	3320	3730	4190	4800				
5000	3440	3870	4360	5000				

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
1600	45.4	43.9	42.5	41.0	39.7	39.0
1800	53.6	52.1	50.5	48.8	47.2	46.4
2000	59.6	58.1	56.6	55.0	53.6	52.8
2200	65.4	63.6	61.9	60.2	58.6	57.8
2400	71.3	69.3	67.3	65.4	63.6	62.7
2600	77.2	75.0	72.9	70.8	68.7	67.7
2800	82.3	80.6	78.3	76.1	73.9	72.8
3000	84.8	83.2	81.6	79.9	78.3	77.4
3200	86.9	85.2	83.5	81.9	80.2	79.4
3400		87.1	85.3	83.7	82.0	81.1
3600			87.1	85.3	83.6	82.8
3800				87.0	85.1	84.3
4000					86.6	85.7
4200					88.1	87.1

Decrease field limit weight by 4600 kg when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway High Altitude
Based on anti-skid inoperative and manual speedbrakes
Flaps 40

Wind Corrected Field Length (M)

FIELD LENGTH AVAILABLE (M)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
2400				2400	2590	2790	2990	3180
2600				2600	2800	3000	3200	3400
2800				2800	3000	3210	3420	3620
3000			2690	3000	3210	3420	3630	3840
3200		2570	2880	3200	3410	3630	3840	4060
3400		2760	3080	3400	3620	3840	4060	4280
3600	2620	2940	3270	3600	3820	4050	4270	4500
3800	2800	3130	3460	3800	4030	4260	4490	4730
4000	2980	3320	3660	4000	4230	4470	4700	4950
4200	3170	3510	3850	4200	4440	4680	4920	5170
4400	3350	3690	4040	4400	4640	4890	5130	5390
4600	3530	3880	4240	4600	4850	5090	5350	5610
4800	3710	4070	4430	4800	5050	5300	5560	5830
5000	3890	4260	4620	5000	5250	5510	5780	6050
5200	4070	4440	4820	5200	5460	5720	5990	6270
5400	4260	4630	5010	5400	5660	5930	6210	6490
5600	4440	4820	5200	5600	5870	6140	6420	6710
5800	4620	5000	5400	5800	6070	6350	6640	6930
6000	4800	5190	5590	6000	6280	6560	6850	7150
6200	4980	5380	5780	6200	6480	6770	7070	7370

Field Limit Weight (1000 KG)

WIND CORR'D FIELD LENGTH (M)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
3000	39.4	38.2				
3200	43.2	41.8	40.5	39.2		
3400	46.9	45.4	44.0	42.5	41.1	40.4
3600	50.6	49.0	47.4	45.9	44.3	43.6
3800	54.2	52.5	50.8	49.2	47.5	46.7
4000	57.7	55.9	54.1	52.4	50.6	49.8
4200	61.1	59.2	57.3	55.4	53.6	52.7
4400	64.5	62.4	60.4	58.5	56.5	55.6
4600	68.1	65.8	63.6	61.5	59.5	58.5
4800	71.6	69.2	66.9	64.6	62.4	61.3
5000	75.2	72.7	70.2	67.8	65.4	64.2
5200	78.7	76.1	73.5	71.0	68.5	67.3
5400	82.2	79.5	76.8	74.2	71.6	70.3
5600	85.7	82.9	80.1	77.4	74.7	73.4
5800		86.3	83.4	80.6	77.8	76.4
6000			86.7	83.7	80.8	79.4
6200				86.9	83.9	82.4
6400					87.0	85.4

Landing Climb Limit Weight**Valid for approach with flaps 15 and landing with flaps 40****Based on engine bleed for packs on and anti-ice off**

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)						
		AIRPORT PRESSURE ALTITUDE (FT)						
(°C)	(°F)	-2000	0	2000	4000	6000	8000	10000
54	129	67.5	63.6					
52	126	68.8	65.3					
50	122	70.0	67.0	61.8				
48	118	71.3	68.2	63.4				
46	115	72.7	69.5	65.0	59.8			
44	111	74.0	70.7	66.1	61.3			
42	108	75.3	72.0	67.3	62.8	57.6		
40	104	76.7	73.2	68.5	63.9	58.9		
38	100	78.0	74.6	69.7	65.0	60.2	54.8	
36	97	79.3	75.9	70.9	66.2	61.3	55.8	
34	93	80.5	77.2	72.2	67.4	62.4	56.7	52.2
32	90	80.6	78.7	73.4	68.5	63.3	57.8	53.2
30	86	80.7	80.0	74.5	69.3	64.3	58.8	54.2
28	82	80.8	80.1	75.5	70.1	65.1	59.7	55.1
26	79	80.9	80.2	76.4	70.8	65.6	60.6	55.9
24	75	81.0	80.3	76.4	71.3	66.1	61.3	56.5
22	72	81.0	80.3	76.5	71.9	66.6	61.7	57.0
20	68	81.1	80.4	76.5	71.9	67.1	62.2	57.5
18	64	81.2	80.5	76.5	71.9	67.5	62.5	57.8
16	61	81.2	80.5	76.6	72.0	67.5	62.9	58.2
14	57	81.3	80.6	76.6	72.0	67.5	63.2	58.5
12	54	81.4	80.6	76.7	72.0	67.6	63.3	58.9
10	50	81.5	80.7	76.7	72.1	67.6	63.3	59.2
-40	-40	82.1	81.3	77.2	72.6	68.0	63.7	59.8

With engine bleed for packs off, increase weight by 1250 kg.**With engine anti-ice on, decrease weight by 250 kg.****With engine and wing anti-ice on, decrease weight by 1400 kg.****When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 11200 kg.**

Landing Climb Limit Weight - High Altitudes

Valid for approach with flaps 15 and landing with flaps 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
(°C)	(°F)	10000	11000	12000	13000	14000	14500
34	93	52.2					
32	90	53.2	50.9				
30	86	54.2	51.9	49.7			
28	82	55.1	52.8	50.6	48.5		
26	79	55.9	53.6	51.5	49.3	47.7	
24	75	56.5	54.2	52.1	50.0	48.1	47.1
22	72	57.0	54.8	52.6	50.5	48.4	47.5
20	68	57.5	55.2	53.1	50.9	48.8	47.8
18	64	57.8	55.6	53.4	51.3	49.2	48.1
16	61	58.2	55.9	53.8	51.6	49.5	48.5
14	57	58.5	56.3	54.1	51.9	49.8	48.8
12	54	58.9	56.6	54.5	52.3	50.1	49.1
10	50	59.2	57.0	54.8	52.6	50.4	49.4
-40	-40	59.8	58.4	56.9	54.9	53.0	52.1

With engine bleed for packs off, increase weight by 1250 kg.

With engine anti-ice on, decrease weight by 1650 kg.

With engine and wing anti-ice on, decrease weight by 2600 kg.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 7250 kg.

ENGINE INOP**ADVISORY INFORMATION****Go-Around Climb Gradient****Flaps 15****Based on engine bleed for packs on and anti-ice off**

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	3.07					
50	3.74	2.69				
46	4.25	3.34	2.30			
42	4.77	3.81	2.90	1.85		
38	5.28	4.29	3.35	2.38	1.31	
34	5.81	4.79	3.82	2.82	1.69	0.78
30	6.36	5.27	4.21	3.20	2.10	1.20
26	6.40	5.62	4.50	3.47	2.45	1.54
22	6.43	5.64	4.72	3.66	2.69	1.76
18	6.45	5.66	4.73	3.84	2.85	1.93
14	6.47	5.68	4.74	3.85	3.00	2.07
10	6.49	5.69	4.76	3.86	3.01	2.20

Gradient Adjustment for Weight (%)

WEIGHT (1000 KG)	REFERENCE GO-AROUND GRADIENT (%)							
	0	1	2	3	4	5	6	7
85	-2.63	-2.98	-3.31	-3.63	-3.94	-4.26	-4.57	-4.90
80	-2.25	-2.56	-2.85	-3.13	-3.41	-3.67	-3.93	-4.18
75	-1.81	-2.06	-2.30	-2.54	-2.77	-2.98	-3.19	-3.39
70	-1.31	-1.48	-1.66	-1.83	-2.00	-2.16	-2.31	-2.44
65	-0.72	-0.81	-0.91	-1.00	-1.09	-1.18	-1.26	-1.33
60	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
55	0.81	0.92	1.03	1.14	1.25	1.36	1.47	1.59
50	1.80	2.05	2.30	2.54	2.78	3.02	3.27	3.54

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)										
	0	1	2	3	4	5	6	7	8	9	10
VREF	-0.25	-0.26	-0.27	-0.28	-0.28	-0.28	-0.29	-0.29	-0.29	-0.28	-0.28
VREF+5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VREF+10	0.13	0.14	0.14	0.14	0.14	0.14	0.13	0.13	0.12	0.11	0.10
VREF+15	0.21	0.21	0.21	0.21	0.21	0.20	0.19	0.18	0.17	0.16	0.14
VREF+20	0.23	0.22	0.21	0.20	0.19	0.18	0.17	0.16	0.14	0.13	0.11
VREF+25	0.18	0.16	0.14	0.12	0.10	0.08	0.07	0.05	0.04	0.03	0.01
VREF+30	0.08	0.03	-0.01	-0.04	-0.07	-0.10	-0.12	-0.13	-0.14	-0.15	-0.15

With engine bleed for packs off, increase gradient by 0.2%.**With engine anti-ice on, decrease gradient by 0.3%.****With engine and wing anti-ice on, decrease gradient by 0.5%.****With operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease gradient by 1.4%.**

ENGINE INOP

ADVISORY INFORMATION

Go-Around Climb Gradient - High Altitude

Flaps 15

Based on engine bleed for packs on and anti-ice off

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	15000
34	0.78					
30	1.20	0.74	0.31			
26	1.54	1.07	0.66	0.23		
22	1.76	1.32	0.90	0.48	0.09	
18	1.93	1.49	1.06	0.65	0.25	
14	2.07	1.62	1.20	0.78	0.37	
10	2.20	1.77	1.34	0.92	0.50	0.10
6	2.22	1.87	1.49	1.06	0.64	0.24
2	2.23	1.93	1.62	1.20	0.78	0.37
-2	2.24	1.94	1.65	1.29	0.90	0.49

Gradient Adjustment for Weight (%)

WEIGHT (1000 KG)	REFERENCE GO-AROUND GRADIENT (%)			
	0	1	2	3
85	-2.63	-2.98	-3.31	-3.63
80	-2.25	-2.56	-2.85	-3.13
75	-1.81	-2.06	-2.30	-2.54
70	-1.31	-1.48	-1.66	-1.83
65	-0.72	-0.81	-0.91	-1.00
60	0.00	0.00	0.00	0.00
55	0.81	0.92	1.03	1.14
50	1.80	2.05	2.30	2.54

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)					
	0	1	2	3	4	5
VREF	-0.25	-0.26	-0.27	-0.28	-0.28	-0.28
VREF+5	0.00	0.00	0.00	0.00	0.00	0.00
VREF+10	0.13	0.14	0.14	0.14	0.14	0.14
VREF+15	0.21	0.21	0.21	0.21	0.21	0.20
VREF+20	0.23	0.22	0.21	0.20	0.19	0.18
VREF+25	0.18	0.16	0.14	0.12	0.10	0.08
VREF+30	0.08	0.03	-0.01	-0.04	-0.07	-0.10

With engine bleed for packs off, increase gradient by 0.2%.

With engine anti-ice on, decrease gradient by 0.6%.

With engine and wing anti-ice on, decrease gradient by 0.8%.

With operating in icing conditions during any part of the flight with the forecast landing temperature below 10°C, decrease gradient by 1.4%.

Quick Turnaround Limit Weight - Category H Steel Brakes Flaps 40

OAT		QUICK TURNAROUND LIMIT WEIGHT (1000 KG)						
		AIRPORT PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
54	129	84.0	81.2	78.5				
50	122	84.5	81.7	79.0	76.0	72.9		
45	113	85.1	82.4	79.6	76.6	73.5	70.5	
40	104	85.9	83.0	80.2	77.3	74.2	71.1	
35	95	86.1	83.7	80.8	77.9	74.8	71.7	
30	86	86.1	84.3	81.4	78.5	75.4	72.3	69.2
25	77	86.1	85.0	82.1	79.2	76.0	72.9	69.8
20	68	86.1	85.8	82.8	79.8	76.7	73.5	70.4
15	59	86.1	86.1	83.5	80.5	77.4	74.2	71.1
10	50	86.1	86.1	84.2	81.1	78.1	74.9	71.7
5	41	86.1	86.1	84.9	81.9	78.8	75.6	72.4
0	32	86.1	86.1	85.6	82.6	79.5	76.3	73.0
-5	23	86.1	86.1	86.1	83.3	80.2	77.0	73.7
-10	14	86.1	86.1	86.1	84.1	80.9	77.7	74.4
-15	5	86.1	86.1	86.1	84.8	81.7	78.5	75.2
-20	-4	86.1	86.1	86.1	85.7	82.5	79.3	75.9
-30	-22	86.1	86.1	86.1	86.1	84.2	80.9	77.5
-40	-40	86.1	86.1	86.1	86.1	86.0	82.7	79.2
-50	-58	86.1	86.1	86.1	86.1	86.1	84.6	80.9
-54	-65	86.1	86.1	86.1	86.1	86.1	85.4	81.7

Increase weight by 750 kg per 1% uphill slope. Decrease weight by 1200 kg per 1% downhill slope.

Increase weight by 1850 kg per 10 knots headwind. Decrease weight by 7750 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate temperature, without artificial cooling, is less than 218°C as follows:

No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category P Carbon Brakes
Flaps 40

OAT		LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	75.7					
50	122	76.1	73.4				
45	113	76.7	73.9	71.0			
40	104	77.3	74.5	71.6	68.7		
35	95	77.9	75.1	72.2	69.2	66.4	
30	86	78.5	75.8	72.8	69.8	66.9	64.1
25	77	79.2	76.4	73.4	70.4	67.5	64.6
20	68	79.8	77.0	74.0	71.0	68.1	65.2
15	59	80.4	77.7	74.7	71.7	68.7	65.8
10	50	81.1	78.3	75.3	72.3	69.3	66.4
5	41	81.8	79.0	76.0	73.0	70.0	67.0
0	32	82.5	79.7	76.7	73.6	70.6	67.6
-5	23	83.2	80.4	77.4	74.3	71.3	68.3
-10	14	83.9	81.1	78.2	75.1	72.0	68.9
-15	5	84.7	81.8	78.9	75.8	72.7	69.6
-20	-4	85.5	82.6	79.7	76.5	73.4	70.3
-30	-22	86.1	84.1	81.2	78.1	74.9	71.8
-40	-40	86.1	85.9	82.9	79.8	76.6	73.3
-50	-58	86.1	86.1	84.6	81.5	78.3	75.0
-54	-65	86.1	86.1	85.3	82.2	79.0	75.7

Increase weight by 650 kg per 1% uphill slope. Decrease weight by 1200 kg per 1% downhill slope.
Increase weight by 1700 kg per 10 knots headwind. Decrease weight by 8350 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

**Quick Turnaround Limit Weight - Category H Steel Brakes - High Altitudes
Flaps 40**

AIRPORT OAT		QUICK TURNAROUND LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	10000	11000	12000	13000	14000	14500
30	86	69.2	67.7	66.2			
25	77	69.8	68.3	66.8	65.4		
20	68	70.4	68.9	67.4	65.9	64.5	63.7
15	59	71.0	69.5	68.0	66.5	65.0	64.3
10	50	71.7	70.2	68.6	67.1	65.6	64.9
5	41	72.3	70.8	69.3	67.8	66.2	65.4
0	32	73.0	71.4	69.9	68.4	66.9	66.1
-5	23	73.7	72.1	70.6	69.0	67.5	66.7
-10	14	74.4	72.8	71.3	69.7	68.2	67.4
-15	5	75.2	73.6	72.0	70.4	68.9	68.0
-20	-4	75.9	74.3	72.7	71.1	69.5	68.7
-25	-13	76.7	75.1	73.4	71.8	70.3	69.4
-30	-22	77.5	75.8	74.2	72.6	71.0	70.2
-35	-31	78.3	76.7	75.0	73.3	71.7	70.9
-40	-40	79.1	77.5	75.8	74.2	72.5	71.7
-45	-49	80.0	78.3	76.7	75.0	73.3	72.5
-50	-58	80.9	79.2	77.5	75.8	74.1	73.3
-54	-65	81.7	79.9	78.2	76.5	74.8	74.0

Increase weight by 650 kg per 1% uphill slope. Decrease weight by 1050 kg per 1% downhill slope.

Increase weight by 1600 kg per 10 knots headwind. Decrease weight by 6700 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate surface temperature, without artificial cooling, is less than 218°C as follows: No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category P Carbon Brakes - High Altitudes Flaps 40

OAT (°C)	LIMIT WEIGHT (1000 KG)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	64.1	62.7	61.4			
25	64.6	63.3	61.9	60.6		
20	65.2	63.8	62.5	61.2	59.8	59.2
15	65.8	64.4	63.0	61.7	60.4	59.7
10	66.4	65.0	63.6	62.2	60.9	60.2
5	67.0	65.6	64.1	62.8	61.4	60.8
0	67.6	66.2	64.7	63.4	62.0	61.3
-5	68.3	66.8	65.4	63.9	62.6	61.9
-10	68.9	67.5	66.0	64.6	63.2	62.5
-15	69.6	68.1	66.7	65.2	63.8	63.1
-20	70.3	68.8	67.3	65.9	64.4	63.7
-25	71.0	69.5	68.0	66.5	65.1	64.3
-30	71.8	70.2	68.7	67.2	65.7	65.0
-35	72.5	71.0	69.5	68.0	66.4	65.7
-40	73.3	71.8	70.2	68.7	67.2	66.4
-45	74.1	72.6	71.0	69.5	67.9	67.1
-50	75.0	73.4	71.8	70.2	68.7	67.9
-54	75.7	74.1	72.5	70.9	69.3	68.5

Increase weight by 600 kg per 1% uphill slope. Decrease weight by 900 kg per 1% downhill slope.

Increase weight by 1500 kg per 10 knots headwind. Decrease weight by 6400 kg per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Performance Dispatch

Chapter PD

Gear Down

Section 53

GEAR DOWN

Takeoff Climb Limit Weight

Flaps 5

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		TAKEOFF CLIMB WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	62.4	58.8	55.5	51.8	46.5	
52	126	63.7	58.8	55.5	52.1	47.5	
50	122	65.1	59.1	55.5	52.1	48.4	43.3
48	118	66.6	60.5	55.4	52.1	48.5	44.2
46	115	68.0	61.8	55.8	52.1	48.5	45.0
44	111	69.4	63.1	57.1	52.0	48.5	45.6
42	108	70.7	64.5	58.4	52.4	48.5	45.6
40	104	72.0	65.8	59.7	53.7	48.4	45.5
38	100	73.4	67.1	61.0	54.9	48.8	45.5
36	97	74.6	68.3	62.2	56.2	50.1	45.5
34	93	75.9	69.6	63.4	57.4	51.3	45.9
32	90	77.4	70.8	64.6	58.6	52.5	47.1
30	86	78.8	72.3	65.9	59.8	53.7	48.3
28	82	80.1	73.8	67.2	61.0	54.9	49.5
26	79	80.2	75.3	68.6	62.3	56.1	50.7
24	75	80.2	75.7	70.0	63.5	57.4	52.0
22	72	80.3	75.8	70.8	64.8	58.6	53.2
20	68	80.3	75.8	70.9	65.9	59.8	54.4
18	64	80.4	75.8	70.9	66.2	61.0	55.5
16	61	80.4	75.9	71.0	66.3	61.6	55.9
14	57	80.5	75.9	71.0	66.3	61.9	56.2
12	54	80.5	76.0	71.0	66.3	61.9	56.6
10	50	80.6	76.0	71.1	66.4	62.0	56.9
-40	-40	81.1	76.4	71.5	67.0	62.6	57.4

With engine bleeds for packs off, increase weight by 300 kg.

With engine anti-ice on, decrease weight by 250 kg.

With engine and wing anti-ice on, decrease weight by 5300 kg (optional system).

GEAR DOWN

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 KG)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	58.8					
52	126	60.3					
50	122	61.9	57.1				
48	118	63.0	58.6				
46	115	64.2	60.0	55.3			
44	111	65.3	61.1	56.6			
42	108	66.5	62.1	58.0	53.2		
40	104	67.7	63.2	59.0	54.4		
38	100	68.9	64.3	60.0	55.6	50.6	
36	97	70.1	65.4	61.1	56.6	51.5	
34	93	71.3	66.7	62.2	57.6	52.4	48.2
32	90	72.6	67.8	63.2	58.5	53.4	49.2
30	86	73.8	68.8	63.9	59.3	54.3	50.1
28	82	73.9	69.7	64.7	60.1	55.1	50.9
26	79	74.0	70.5	65.3	60.6	55.9	51.6
24	75	74.0	70.5	65.8	61.0	56.6	52.2
22	72	74.1	70.6	66.3	61.4	57.0	52.6
20	68	74.1	70.6	66.3	61.9	57.3	53.0
18	64	74.2	70.7	66.4	62.2	57.7	53.3
16	61	74.3	70.7	66.4	62.3	58.0	53.7
14	57	74.3	70.7	66.4	62.3	58.4	54.0
12	54	74.4	70.8	66.5	62.3	58.4	54.3
10	50	74.4	70.8	66.5	62.3	58.4	54.6
-40	-40	74.9	71.3	67.0	62.7	58.8	55.2

With engine bleed for packs off, increase weight by 1200 kg.

With engine anti-ice on, decrease weight by 250 kg.

With engine and wing anti-ice on, decrease weight by 1300 kg.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 11000 kg.

GEAR DOWN**Takeoff Obstacle Limit Weight****Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 KG)**

OBSTACLE HEIGHT (M)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)										
	DISTANCE FROM BRAKE RELEASE (100 M)										
	25	30	35	40	45	50	55	60	65	70	75
5	73.7										
20	67.7	73.1	77.2								
40	62.5	67.6	71.6	74.8	77.3	79.2					
60	58.6	63.5	67.5	70.7	73.3	75.5	77.3	78.7			
80	55.4	60.2	64.1	67.4	70.1	72.4	74.3	75.9	77.2	78.4	79.4
100	52.7	57.4	61.3	64.5	67.3	69.6	71.6	73.3	74.8	76.1	77.2
120	50.3	54.9	58.8	62.0	64.8	67.2	69.3	71.0	72.6	74.0	75.2
140	48.1	52.7	56.6	59.8	62.6	65.0	67.1	69.0	70.6	72.0	73.3
160	46.2	50.7	54.5	57.8	60.6	63.0	65.1	67.0	68.7	70.2	71.5
180	44.4	48.9	52.7	56.0	58.8	61.2	63.3	65.3	67.0	68.5	69.8
200	42.8	47.2	51.0	54.3	57.1	59.5	61.7	63.6	65.3	66.9	68.3
220		45.7	49.4	52.7	55.5	58.0	60.1	62.1	63.8	65.4	66.8
240		44.3	48.0	51.2	54.0	56.5	58.7	60.6	62.4	64.0	65.4
260		42.9	46.6	49.8	52.6	55.1	57.3	59.3	61.1	62.7	64.1
280		41.6	45.3	48.5	51.3	53.8	56.0	58.0	59.8	61.4	62.9
300			44.1	47.3	50.1	52.6	54.8	56.8	58.6	60.2	61.7

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 KG)								
	40	45	50	55	60	65	70	75	80
30 & BELOW	0	0	0	0	0	0	0	0	0
32	-0.6	-0.7	-0.8	-0.9	-1.0	-1.1	-1.2	-1.3	-1.3
34	-1.2	-1.4	-1.6	-1.8	-1.9	-2.1	-2.3	-2.5	-2.7
36	-1.8	-2.1	-2.3	-2.6	-2.9	-3.2	-3.5	-3.8	-4.0
38	-2.4	-2.8	-3.1	-3.5	-3.9	-4.3	-4.6	-5.0	-5.4
40	-3.0	-3.4	-3.9	-4.4	-4.9	-5.3	-5.8	-6.3	-6.7
42	-3.7	-4.2	-4.8	-5.3	-5.9	-6.5	-7.0	-7.6	-8.1
44	-4.3	-5.0	-5.6	-6.3	-7.0	-7.6	-8.3	-8.9	-9.6
46	-5.0	-5.8	-6.5	-7.3	-8.0	-8.7	-9.5	-10.2	-11.0
48	-5.7	-6.5	-7.4	-8.2	-9.1	-9.9	-10.7	-11.6	-12.4
50	-6.4	-7.3	-8.2	-9.2	-10.1	-11.0	-12.0	-12.9	-13.8

GEAR DOWN

Takeoff Obstacle Limit Weight

Flaps 5

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)								
	40	45	50	55	60	65	70	75	80
S.L. & BELOW	0	0	0	0	0	0	0	0	0
1000	-1.6	-1.8	-2.0	-2.2	-2.4	-2.6	-2.8	-3.0	-3.2
2000	-3.3	-3.7	-4.1	-4.5	-4.9	-5.3	-5.6	-6.0	-6.4
3000	-4.8	-5.4	-6.0	-6.6	-7.2	-7.8	-8.4	-9.0	-9.6
4000	-6.4	-7.2	-8.0	-8.8	-9.6	-10.4	-11.2	-12.0	-12.8
5000	-7.7	-8.7	-9.7	-10.7	-11.8	-12.8	-13.8	-14.8	-15.9
6000	-8.9	-10.2	-11.4	-12.7	-13.9	-15.2	-16.4	-17.6	-18.9
7000	-9.9	-11.4	-12.9	-14.4	-15.9	-17.4	-18.9	-20.4	-21.9
8000	-10.9	-12.7	-14.5	-16.2	-18.0	-19.7	-21.5	-23.3	-25.0
9000	-11.3	-13.4	-15.5	-17.5	-19.6	-21.7	-23.7	-25.8	-27.9
10000	-11.7	-14.1	-16.5	-18.9	-21.2	-23.6	-26.0	-28.4	-30.7

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 KG)								
	40	45	50	55	60	65	70	75	80
15 TW	-9.5	-9.3	-9.1	-8.9	-8.6	-8.4	-8.2	-8.0	-7.8
10 TW	-6.3	-6.2	-6.1	-5.9	-5.8	-5.6	-5.5	-5.3	-5.2
5 TW	-3.2	-3.1	-3.0	-3.0	-2.9	-2.8	-2.7	-2.7	-2.6
0	0	0	0	0	0	0	0	0	0
10 HW	1.1	1.0	0.9	0.8	0.6	0.5	0.4	0.2	0.1
20 HW	2.2	2.0	1.8	1.5	1.3	1.0	0.8	0.5	0.2
30 HW	3.4	3.0	2.6	2.2	1.9	1.5	1.1	0.8	0.4
40 HW	4.5	4.0	3.5	3.0	2.5	2.0	1.5	1.0	0.5

With engine bleed for packs off, increase weight by 250 kg.

With engine anti-ice on, decrease weight by 1950 kg.

With engine and wing anti-ice on, decrease weight by 7400 kg (optional system).

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15100	12000	8900
80	17900	15100	12100
75	20800	18000	15300
70	23300	20900	18200
65	25800	24000	21300
60	28300	26800	24900
55	30600	29400	27800
50	32700	31700	30400
45	34900	33900	32700
40	37300	36300	35200

GEAR DOWN

Long Range Cruise Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT(KTS)				
100	80	60	40	20		20	40	60	80	100
323	288	259	236	217	200	187	175	165	156	148
483	432	389	354	325	300	280	263	247	234	222
642	575	518	471	433	400	374	351	330	312	296
800	718	646	589	542	500	468	438	412	390	370
957	859	774	706	650	600	561	526	495	468	444
1113	1000	902	823	758	700	655	615	578	546	519
1268	1140	1029	940	865	800	749	703	661	625	593
1422	1280	1156	1056	973	900	843	791	745	704	668
1576	1419	1283	1173	1081	1000	937	879	828	783	743
1729	1558	1410	1289	1189	1100	1031	968	911	862	818
1881	1697	1536	1405	1296	1200	1125	1056	995	941	894
2033	1835	1662	1521	1404	1300	1218	1145	1079	1020	969
2184	1972	1788	1637	1511	1400	1313	1233	1162	1100	1045
2334	2109	1913	1753	1619	1500	1407	1322	1246	1179	1121
2483	2245	2038	1868	1726	1600	1501	1411	1330	1259	1197
2632	2381	2163	1984	1833	1700	1595	1500	1414	1339	1273
2780	2517	2287	2099	1940	1800	1689	1589	1499	1419	1349
2927	2652	2411	2214	2047	1900	1784	1678	1583	1499	1426
3074	2786	2535	2328	2154	2000	1878	1767	1668	1579	1502

GEAR DOWN**Long Range Cruise Trip Fuel and Time****Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	10		14		20		24	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.9	0:50	2.7	0:49	2.6	0:47	2.6	0:46
300	4.2	1:12	4.0	1:10	3.8	1:06	3.7	1:04
400	5.6	1:35	5.3	1:31	4.9	1:25	4.7	1:23
500	7.0	1:57	6.6	1:52	6.1	1:45	5.8	1:41
600	8.4	2:18	7.9	2:12	7.3	2:04	7.0	1:59
700	9.9	2:40	9.3	2:32	8.5	2:22	8.1	2:17
800	11.3	3:01	10.6	2:53	9.7	2:41	9.3	2:35
900	12.7	3:23	12.0	3:13	10.9	3:00	10.4	2:53
1000	14.2	3:44	13.3	3:33	12.2	3:18	11.6	3:11
1100	15.7	4:05	14.7	3:53	13.4	3:36		
1200	17.2	4:25	16.2	4:12	14.7	3:55		
1300	18.7	4:45	17.6	4:32	16.0	4:13		
1400	20.2	5:06	19.0	4:51	17.3	4:31		
1500	21.7	5:26	20.4	5:11	18.6	4:49		
1600	23.3	5:46	21.9	5:29				
1700	24.9	6:06	23.4	5:48				
1800	26.5	6:25	24.9	6:07				
1900	28.1	6:45	26.4	6:25				
2000	29.8	7:04	27.9	6:44				

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	LANDING WEIGHT (1000 KG)				
	40	50	60	70	80
2	-0.4	-0.2	0.0	0.2	0.4
4	-0.7	-0.4	0.0	0.4	0.8
6	-1.1	-0.5	0.0	0.6	1.2
8	-1.4	-0.7	0.0	0.8	1.5
10	-1.7	-0.9	0.0	0.9	1.9
12	-2.1	-1.0	0.0	1.1	2.3
14	-2.4	-1.2	0.0	1.3	2.6
16	-2.7	-1.4	0.0	1.5	3.0
18	-3.1	-1.5	0.0	1.7	3.3
20	-3.4	-1.7	0.0	1.8	3.7
22	-3.8	-1.9	0.0	2.0	4.1
24	-4.1	-2.0	0.0	2.2	4.4
26	-4.4	-2.2	0.0	2.4	4.8
28	-4.8	-2.4	0.0	2.6	5.2
30	-5.1	-2.6	0.0	2.7	5.5

Based on VREF40 + 70 climb, Long Range Cruise and VREF40 + 70 descent.

GEAR DOWN

Holding Planning
Flaps Up

WEIGHT (1000 KG)	TOTAL FUEL FLOW (KG/HR)							
	PRESSURE ALTITUDE (FT)							
	1500	5000	10000	15000	20000	25000	30000	35000
90	4780	4760	4760	4810				
85	4520	4490	4480	4510				
80	4260	4230	4210	4230	4250			
75	4010	3980	3950	3950	3960			
70	3770	3730	3690	3680	3680	3760		
65	3530	3480	3450	3420	3410	3440		
60	3300	3240	3200	3170	3140	3160	3340	
55	3060	3010	2960	2920	2880	2890	2970	
50	2830	2780	2730	2690	2640	2630	2680	
45	2600	2560	2500	2460	2400	2380	2410	2510
40	2380	2340	2300	2240	2190	2140	2170	2200

This table includes 5% additional fuel for holding in a racetrack pattern.

GEAR DOWN**ENGINE INOP****MAX CONTINUOUS THRUST****Net Level Off Weight**

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 KG)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
22	42.5	41.3	
20	45.9	44.6	43.3
18	49.6	48.0	46.2
16	53.2	51.3	49.4
14	56.2	54.8	53.0
12	60.0	58.0	55.8
10	63.5	61.4	58.6
8	67.4	64.9	61.9
6	71.1	68.4	65.2
4	74.9	71.8	68.3
2	78.4	75.0	71.6
0	81.7	78.2	74.8

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 KG)										
	PRESSURE ALTITUDE (1000 FT)										
	0	2	4	6	8	10	12	14	16	18	20
ENGINE ONLY	-1.3	-1.3	-1.3	-1.3	-1.4	-1.3	-1.5	-1.4	-1.3	-1.2	-1.0
ENGINE AND WING	-6.3	-6.3	-6.2	-5.9	-5.8	-5.4	-5.3	-5.2	-5.0	-4.5	

Intentionally
Blank

Performance Dispatch**Text****Chapter PD****Section 54**

Introduction

This chapter contains self dispatch performance data intended primarily for use by flight crews in the event that information cannot be obtained from the airline dispatch office. The takeoff data provided is for a single takeoff flap at max takeoff thrust. The range of conditions covered is limited to those normally encountered in airline operation. In the event of conflict between the data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

Takeoff

The maximum allowable takeoff weight will be the least of the Field, Climb and Obstacle Limit Weights as determined from the tables shown. Tire and Brake Energy Limits are not shown as they are not limiting for the range of conditions shown in this chapter.

The maximum allowable takeoff weight will be the least of the Field, Climb, Obstacle, and Brake Energy Limit Weights as determined from the tables shown. Tire Speed Limits are not shown as they are not limiting for the range of conditions shown in this chapter.

Field Limit Weight - Slope and Wind Corrections

These tables for dry and wet runways provide corrections to the field length available for the effects of runway slope and wind component along the runway. Enter the appropriate table with the available field length and runway slope to determine the slope corrected field length. Next enter the appropriate table with slope corrected field length and wind component to determine the slope and wind corrected field length.

Field and Climb Limit Weight

Tables are presented for selected airport pressure altitudes and runway conditions and show both Field and Climb Limit Weights. Enter the appropriate table for pressure altitude and runway condition with "Slope and Wind Corrected Field Length" determined above and airport OAT to obtain Field Limit Weight. Also read Climb Limit Weight for the same OAT. Intermediate altitudes may be interpolated or use next higher

altitude. When finding a maximum weight for a wet runway, the dry runway limit weight must also be determined and the lower of the two weights used.

Obstacle Limit Weight

The Reference Obstacle Limit Weight table provides obstacle limit weights for reference airport conditions based on obstacle height above the runway surface and distance from brake release. Enter the adjustment tables to adjust the reference Obstacle Limit Weight for the effects of OAT, pressure altitude and wind as indicated. In the case of multiple obstacles, enter the tables successively with each obstacle and determine the most limiting weight.

Brake Energy Limit VMBE

The Maximum Brake Energy Speed table provides the Reference VMBE for a variety of airport pressure altitudes and temperatures. Enter the Weight Adjusted VMBE table to adjust the Reference VMBE for the actual brake release gross weight. Correct VMBE for slope and wind. If V1 exceeds VMBE, decrease brake release weight as indicated for each knot that V1 exceeds VMBE and determine V1, VR, and V2 for the lower brake release weight.

Enroute

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. Note that this table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Trip Fuel and Time

.80M Trip Fuel and Time tables are provided to determine trip time and fuel required to destination.

To determine trip fuel and time for a constant altitude cruise, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with

air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the planned landing weight to obtain the adjustment to the fuel required at the planned landing weight.

.80M Step Climb Trip Fuel and Time

.80M Step Climb Trip Fuel and Time tables are provided to determine trip time and fuel required to destination when flying a step climb profile. Step climb profiles are based on 4000 ft step climbs to keep the flight within 2000 ft of the optimum altitude for the current cruise weight. To determine trip fuel and time, enter the Ground to Air Miles Conversion table and determine air distance as discussed above. Then enter the Trip Fuel and Time Required table with air distance and planned landing weight to read trip fuel. Continue across the table to read trip time.

Short Trip Fuel and Time

These tables are provided to determine trip fuel and time for short distances or alternates. Obtain air distance from the table using the ground distance and wind component to the alternate. Enter the Trip Fuel and Time Required table with air distance and read trip fuel required for the expected landing weight, together with time to alternate at right. For distances greater than shown or other altitudes, use the .80M Trip Fuel and Time tables.

Holding Planning

This table provides total fuel flow information necessary for planning flaps up holding and reserve fuel requirements. Data is based on the FMC holding speed schedule which is the higher of the maximum endurance and flaps up maneuver speeds. As noted, the fuel flow is based on flight in a racetrack holding pattern. For holding in straight and level flight, reduce table values by 5%.

Flight Crew Oxygen Requirements

Regulations require that sufficient oxygen be provided to the flight crew to account for the greater of supplemental breathing oxygen in the event of a cabin depressurization or protective breathing in the event of smoke or harmful fumes in the flight deck. The oxygen quantity associated with the above requirements is achieved with the minimum dispatch oxygen cylinder pressure.

To determine the minimum dispatch oxygen cylinder pressure enter the appropriate flight crew oxygen table with the number of crew plus observers using oxygen and read the minimum cylinder pressure required for the appropriate cylinder temperature.

Net Level Off Weight

The Net Level Off Weight table is provided to determine terrain clearance capability in straight and level flight following an engine failure.

Regulations require terrain clearance planning based on net performance which is the gross (or actual) gradient performance degraded by 1.1%. In addition, the net level off pressure altitude must clear the terrain by 1000 ft.

To determine the maximum weight for terrain clearance, enter the table with required net level off pressure altitude and expected ISA deviation to obtain weight. Adjust weight for anti-ice operation as noted below the table.

| Extended Range Operations

ETOPS regulations require that flights conducted over a route that contains a point further than one hour's time at "normal one-engine-inoperative speed" from an adequate airport comply with rules specific to extended operations for airplanes with two or more engines. This section provides reserve fuel planning information for the "Critical Fuel Diversion Scenario".

ETOPS regulations require reserve planning to include a "Critical Fuel Diversion Scenario" calculation. The information shown is the fuel required to satisfy the flight profile as described below the charts. This information is shown for all engines operating and one engine inoperative at Long Range Cruise (LRC). There are two engine-inoperative scenarios, a decompression scenario and a driftdown scenario. The decompression scenario assumes an engine failure, loss of pressurization, emergency descent, and subsequent cruise at 10000 ft. The driftdown scenario assumes an engine failure without loss of pressurization, where the airplane "drifts down" to the thrust limited level-off altitude for the remainder of the diversion.

The ETOPS critical fuel required is the greater of the all-engine fuel or the engine-inoperative fuel. The ETOPS critical fuel required is compared to the amount of fuel that is predicted to be onboard the airplane at the critical point. If the fuel required by the ETOPS critical fuel reserves of the route exceeds the amount of fuel predicted, the fuel load must be adjusted accordingly. The data does not include an allowance for performance

deterioration. However, regulations require a 5% allowance for performance deterioration, unless a value has been established by the operator for in-service deterioration.

To determine the ETOPS critical fuel required, enter the Ground to Air Mile Conversion table with the forecast wind (factored if applicable) and ground distance to the diversion airport from the critical point to obtain the air distance. Then enter the Critical Fuel table with air distance and expected weight at the critical point and read the required fuel. Apply the noted fuel adjustments for non-standard conditions, as necessary. When using a wind forecasting model acceptable to the FAA (such as the World Area Forecast System, WAFS), regulations allow the wind factor applied in this step to be 5% of the forecast wind (increase headwinds, decrease tailwinds), as indicated in the note below the chart. However, if a FAA-acceptable wind forecasting model is not used, the ETOPS critical fuel must be increased by 5%, instead of factoring the forecast winds.

Critical Fuel Reserves

Enter the Ground to Air Miles Conversion table with forecast wind and ground distance to diversion airport from critical point to obtain air distance. Now enter the Critical Fuel table with air distance and expected weight at the critical point and read required fuel. Apply the noted fuel adjustments as necessary. Regulations require a 5% allowance for performance deterioration unless a value has been established by the operator for inservice deterioration.

As noted below each table, the fuel required is the greater of the two engine fuel and the single engine fuel. This fuel is compared to the amount of fuel normally onboard the airplane at that point in the route. If the fuel required by the critical fuel reserves exceeds the amount of fuel normally expected, the fuel load must be adjusted accordingly.

Landing

Tables are provided for determining the maximum landing weight as limited by field length or climb requirements for a single landing flap.

Maximum landing weight is the lowest of the field length limit weight, climb limit weight, or maximum certified landing weight.

Landing Field Limit Weight

For the expected runway condition and anti-skid system configuration, obtain wind corrected field length by entering the Wind Corrected Field Length table with field length available and wind component along the runway. Now enter the Field Limit Weight table with wind corrected field length and pressure altitude to read field limit weight.

Landing Climb Limit Weight

Enter the table with airport OAT and pressure altitude to read landing climb limit weight. Apply the noted adjustments as required.

Go-Around Climb Gradient

Enter the Reference Go-Around Gradient table with airport OAT and pressure altitude to determine the reference go-around gradient. Then adjust the reference gradient for airplane weight and speed using the tables provided to determine the weight and speed adjusted go-around gradient. Apply the necessary corrections for engine bleed configuration and icing conditions as noted.

Quick Turnaround Limit Weight

Enter the appropriate table (Steel or Carbon Brakes) with airport pressure altitude and OAT to read maximum quick turnaround weight. Apply the noted adjustments as required.

If the landing weight exceeds the maximum quick turnaround weight, wait the specified time and then check that the wheel thermal plugs have not melted before executing a subsequent takeoff. For Steel Brakes, the alternate procedures on the charts can be used to ensure the brake temperature is within limits. These procedures cannot be used for carbon brakes.

Gear Down

This section provides flight planning data for revenue operation with gear down. Unless otherwise noted, the gear down tables in this section are identical in format and usage to the corresponding gear up tables previously described.

To eliminate erroneous displays the flight crew should enter only gross weight data on the PERF INIT page of the Control Display Unit (CDU). Omission of the cost index and cruise altitude entries on the PERF INIT page will render the VNAV function unavailable during flight. As a result, the following information will not be provided: VNAV guidance and speed

schedules, trip fuel and ETA predictions, optimum and maximum altitude data, step climb and top of descent predictions, and the VNAV descent guidance path.

The gross weight entry allows the FMCS takeoff and approach speed schedules to be generated. In addition, the flap maneuver speed and VREF speed bugs will be available for display on the primary flight display speed tape. Except for VNAV, normal autopilot and autothrottle modes will remain available for use during the flight, as will the LNAV mode.

Takeoff/Landing Climb Limit Weight

Enter the appropriate table with airport OAT and pressure altitude to determine Takeoff/Landing Climb Limit Weight with gear down. Correct the weight obtained for engine bleed configuration as required.

Intentionally
Blank

Performance Dispatch**Chapter PD****Table of Contents****Section 60****737-900ERBBJ CFM56-7B27B3 LB FAA CATH/P**

Takeoff	PD.60.1
Takeoff Field Corrections - Dry Runway	PD.60.1
Takeoff Field & Climb Limit Weights - Dry Runway	PD.60.2
Takeoff Field Corrections - Wet Runway	PD.60.7
Takeoff Field & Climb Limit Weights - Wet Runway	PD.60.8
Takeoff Obstacle Limit Weight	PD.60.13
Brake Energy Limits VMBE	PD.60.17
 Enroute	 PD.61.1
.80M Maximum Operating Altitude	PD.61.1
.80M Trip Fuel and Time	PD.61.2
.80M Step Climb Trip Fuel and Time	PD.61.4
Short Trip Fuel and Time	PD.61.5
Holding Planning	PD.61.6
Flight Crew Oxygen Requirements	PD.61.6
Net Level Off Weight	PD.61.7
Decompression Critical Fuel Reserves - LRC Cruise	PD.61.8
Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise	PD.61.10
 Landing	 PD.62.1
Landing Field Limit Weight - Dry Runway	PD.62.1
Landing Field Limit Weight - Dry Runway - High Altitudes	PD.62.3
Landing Field Limit Weight - Dry Runway High Altitude	PD.62.4
Landing Field Limit Weight - Wet Runway	PD.62.6
Landing Field Limit Weight - Wet Runway High Altitude	PD.62.8
Landing Field Limit Weight - Wet Runway High Altitude	PD.62.9

Landing Climb Limit Weight	PD.62.10
Landing Climb Limit Weight - High Altitudes	PD.62.11
Go-Around Climb Gradient	PD.62.12
Go-Around Climb Gradient - High Altitude	PD.62.13
Quick Turnaround Limit Weight - Category H Steel Brakes	PD.62.14
Quick Turnaround Limit Weight - Category P Carbon Brakes	PD.62.15
Quick Turnaround Limit Weight - Category H Steel Brakes - High Altitudes	PD.62.16
Quick Turnaround Limit Weight - Category P Carbon Brakes - High Altitudes	PD.62.17
Gear Down	PD.63.1
Takeoff Climb Limit Weight	PD.63.1
Landing Climb Limit Weight	PD.63.2
Takeoff Obstacle Limit Weight	PD.63.3
Long Range Cruise Altitude Capability	PD.63.5
Long Range Cruise Trip Fuel and Time	PD.63.6
Holding Planning	PD.63.8
Net Level Off Weight	PD.63.9
Text	PD.64.1
Introduction	PD.64.1
Takeoff	PD.64.1
Enroute	PD.64.2
Landing	PD.64.5
Gear Down	PD.64.6

Performance Dispatch

Chapter PD

Takeoff

Section 60

Takeoff Field Corrections - Dry Runway

Slope Corrections

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4290	4270	4250	4220	4200	4140	4080	4020	3960
4600	4730	4700	4670	4630	4600	4510	4430	4340	4260
5000	5170	5130	5090	5040	5000	4890	4780	4660	4550
5400	5610	5560	5510	5450	5400	5260	5120	4990	4850
5800	6050	5990	5930	5860	5800	5640	5470	5310	5150
6200	6490	6420	6350	6270	6200	6010	5820	5630	5440
6600	6930	6850	6770	6680	6600	6380	6170	5950	5740
7000	7370	7280	7190	7090	7000	6760	6520	6270	6030
7400	7810	7710	7610	7500	7400	7130	6860	6600	6330
7800	8250	8140	8030	7910	7800	7510	7210	6920	6630
8200	8690	8570	8450	8320	8200	7880	7560	7240	6920
8600	9130	9000	8870	8730	8600	8250	7910	7560	7220
9000	9570	9430	9290	9140	9000	8630	8260	7880	7510
9400	10010	9860	9710	9550	9400	9000	8600	8210	7810
9800	10450	10290	10130	9960	9800	9380	8950	8530	8110
10200	10890	10720	10550	10370	10200	9750	9300	8850	8400
10600	11330	11150	10970	10780	10600	10120	9650	9170	8700
11000	11770	11580	11390	11190	11000	10500	10000	9490	8990
11400	12210	12010	11810	11600	11400	10870	10340	9820	9290
11800	12650	12440	12230	12010	11800	11250	10690	10140	9590

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3170	3510	3860	4200	4420	4640	4860	5080
4600	3500	3870	4230	4600	4830	5060	5300	5530
5000	3830	4220	4610	5000	5240	5490	5730	5970
5400	4170	4580	4990	5400	5650	5910	6160	6420
5800	4500	4930	5370	5800	6070	6330	6600	6860
6200	4830	5290	5740	6200	6480	6750	7030	7300
6600	5170	5640	6120	6600	6890	7170	7460	7750
7000	5500	6000	6500	7000	7300	7600	7900	8190
7400	5830	6360	6880	7400	7710	8020	8330	8640
7800	6170	6710	7260	7800	8120	8440	8760	9080
8200	6500	7070	7630	8200	8530	8860	9200	9530
8600	6830	7420	8010	8600	8940	9290	9630	9970
9000	7170	7780	8390	9000	9350	9710	10060	10420
9400	7500	8130	8770	9400	9770	10130	10500	10860
9800	7830	8490	9140	9800	10180	10550	10930	11300
10200	8160	8840	9520	10200	10590	10970	11360	11750
10600	8500	9200	9900	10600	11000	11400	11800	12190
11000	8830	9550	10280	11000	11410	11820	12230	12640
11400	9160	9910	10650	11400	11820	12240	12660	13080
11800	9500	10260	11030	11800	12230	12660	13100	13530

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	127.1	116.9	116.2	115.4	114.6	113.8	113.1	110.4	105.1	102.5	100.0
4200	130.9	120.5	119.7	118.9	118.1	117.3	116.5	113.8	108.3	105.7	103.1
4600	138.4	127.4	126.6	125.8	124.9	124.1	123.3	120.4	114.7	112.0	109.2
5000	145.5	134.1	133.2	132.3	131.4	130.6	129.7	126.7	120.7	117.9	115.0
5400	152.1	140.2	139.3	138.4	137.5	136.6	135.7	132.6	126.3	123.3	120.4
5800	158.6	146.2	145.2	144.2	143.3	142.4	141.4	138.2	131.7	128.5	125.5
6200	164.8	151.9	150.9	149.9	148.9	147.9	146.9	143.6	136.8	133.6	130.4
6600	170.7	157.4	156.3	155.3	154.3	153.3	152.2	148.8	141.7	138.4	135.0
7000	176.4	162.6	161.5	160.4	159.4	158.3	157.3	153.7	146.4	142.9	139.5
7400	181.8	167.5	166.4	165.3	164.2	163.2	162.1	158.4	150.8	147.3	143.7
7800	187.0	172.3	171.1	170.0	168.9	167.8	166.7	162.9	155.1	151.5	147.8
8200	189.9	177.0	175.8	174.7	173.5	172.4	171.3	167.3	159.4	155.7	151.9
8600	189.9	181.5	180.3	179.2	178.0	176.8	175.6	171.6	163.5	159.7	155.8
9000	189.9	185.6	184.4	183.2	182.0	180.8	179.6	175.5	167.2	163.3	159.4
9400	189.9	189.3	188.1	186.8	185.6	184.4	183.2	179.0	170.5	166.5	162.5
9800	189.9	189.9	189.9	189.9	189.0	187.7	186.5	182.2	173.6	169.5	165.4
10200	189.9	189.9	189.9	189.9	189.9	189.9	189.6	185.3	176.5	172.3	168.2
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	188.1	179.2	175.0	170.7
CLIMB LIMIT WT(1000LB)	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	179.2	173.1	167.0

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	119.7	109.6	108.8	108.1	107.4	106.7	105.1	102.9	97.9	95.5	92.2
4200	123.3	112.9	112.2	111.4	110.7	110.0	108.3	106.1	100.9	98.5	95.1
4600	130.4	119.5	118.7	118.0	117.2	116.4	114.7	112.3	107.0	104.4	100.9
5000	137.1	125.8	125.0	124.2	123.3	122.5	120.8	118.3	112.6	110.0	106.3
5400	143.4	131.6	130.7	129.9	129.0	128.2	126.3	123.7	117.9	115.1	111.2
5800	149.5	137.2	136.3	135.4	134.5	133.6	131.7	129.0	122.9	119.9	116.0
6200	155.3	142.5	141.6	140.7	139.8	138.8	136.8	134.0	127.7	124.6	120.5
6600	161.0	147.7	146.7	145.7	144.8	143.8	141.7	138.8	132.2	129.1	124.8
7000	166.3	152.6	151.6	150.6	149.6	148.6	146.4	143.4	136.6	133.3	128.9
7400	171.4	157.2	156.2	155.1	154.1	153.1	150.9	147.8	140.7	137.4	132.8
7800	176.2	161.7	160.6	159.5	158.5	157.5	155.2	152.0	144.7	141.3	136.6
8200	181.1	166.1	165.0	163.9	162.9	161.8	159.5	156.2	148.8	145.2	140.4
8600	185.7	170.4	169.3	168.2	167.1	166.0	163.6	160.2	152.6	149.0	144.0
9000	189.9	174.2	173.1	172.0	170.8	169.7	167.3	163.8	156.1	152.4	147.3
9400	189.9	177.7	176.5	175.3	174.2	173.1	170.5	167.1	159.1	155.3	150.2
9800	189.9	180.9	179.7	178.5	177.4	176.2	173.6	170.1	162.0	158.1	152.9
10200	189.9	183.9	182.7	181.5	180.3	179.1	176.5	172.9	164.7	160.7	155.4
10600	189.9	186.7	185.5	184.3	183.1	181.9	179.2	175.6	167.2	163.2	157.8
CLIMB LIMIT WT (1000 LB)	189.9	189.6	189.5	189.3	189.1	188.9	184.9	179.4	166.8	161.2	153.5

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 500 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2000 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	111.8	102.3	101.6	100.9	100.3	99.2	97.7	95.8	90.9	88.1	85.9
4200	115.2	105.5	104.8	104.1	103.4	102.3	100.8	98.8	93.8	91.0	88.7
4600	121.9	111.7	111.0	110.3	109.6	108.4	106.8	104.7	99.4	96.5	94.1
5000	128.3	117.6	116.9	116.1	115.4	114.1	112.5	110.3	104.8	101.7	99.2
5400	134.2	123.1	122.3	121.5	120.7	119.4	117.7	115.4	109.7	106.5	103.8
5800	139.9	128.3	127.5	126.6	125.8	124.5	122.7	120.4	114.3	111.0	108.3
6200	145.4	133.3	132.4	131.6	130.7	129.3	127.5	125.0	118.8	115.3	112.5
6600	150.6	138.1	137.2	136.3	135.4	134.0	132.0	129.5	123.0	119.4	116.5
7000	155.6	142.7	141.7	140.8	139.9	138.4	136.4	133.8	127.1	123.4	120.3
7400	160.3	147.0	146.0	145.1	144.1	142.6	140.5	137.8	130.9	127.1	123.9
7800	164.9	151.2	150.2	149.2	148.2	146.6	144.5	141.8	134.6	130.7	127.5
8200	169.4	155.4	154.3	153.3	152.3	150.7	148.6	145.7	138.4	134.4	131.1
8600	173.8	159.4	158.3	157.3	156.3	154.6	152.4	149.5	142.0	137.9	134.5
9000	177.7	163.0	161.9	160.9	159.8	158.1	155.8	152.9	145.2	141.0	137.5
9400	181.2	166.2	165.1	164.0	162.9	161.2	158.9	155.9	148.0	143.7	140.2
9800	184.5	169.2	168.1	167.0	165.9	164.1	161.8	158.7	150.7	146.3	142.7
10200	187.6	172.0	170.8	169.7	168.6	166.8	164.4	161.3	153.2	148.7	145.0
10600	189.9	174.6	173.5	172.3	171.2	169.4	167.0	163.8	155.5	151.0	147.2
CLIMB LIMIT WT (1000 LB)	178.6	177.5	177.4	177.2	177.0	175.1	171.8	167.0	155.4	149.1	144.1

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	104.4	95.4	94.7	94.0	93.0	91.8	90.3	88.2	83.8	81.7	79.6
4200	107.7	98.4	97.7	97.0	95.9	94.7	93.2	91.1	86.5	84.3	82.2
4600	114.0	104.3	103.6	102.9	101.7	100.5	98.9	96.6	91.9	89.6	87.3
5000	120.0	109.9	109.1	108.4	107.1	105.9	104.2	101.8	96.9	94.4	92.1
5400	125.6	115.0	114.2	113.4	112.1	110.8	109.0	106.6	101.4	98.9	96.4
5800	130.9	119.9	119.0	118.2	116.9	115.5	113.7	111.1	105.7	103.1	100.5
6200	136.0	124.5	123.7	122.8	121.4	120.0	118.1	115.5	109.8	107.1	104.4
6600	140.9	129.0	128.1	127.2	125.8	124.3	122.3	119.6	113.7	110.9	108.1
7000	145.6	133.3	132.3	131.4	129.9	128.4	126.3	123.5	117.5	114.6	111.7
7400	150.0	137.3	136.3	135.4	133.9	132.3	130.1	127.2	121.0	118.0	115.1
7800	154.2	141.2	140.2	139.2	137.7	136.0	133.8	130.9	124.5	121.4	118.3
8200	158.5	145.1	144.1	143.1	141.5	139.8	137.6	134.5	128.0	124.8	121.7
8600	162.6	148.9	147.9	146.8	145.2	143.5	141.2	138.0	131.3	128.1	124.9
9000	166.3	152.3	151.2	150.2	148.5	146.7	144.4	141.2	134.3	131.0	127.7
9400	169.5	155.2	154.2	153.1	151.4	149.6	147.2	143.9	136.9	133.5	130.2
9800	172.6	158.0	156.9	155.8	154.1	152.2	149.8	146.5	139.3	135.8	132.5
10200	175.5	160.6	159.5	158.4	156.6	154.7	152.3	148.9	141.6	138.1	134.6
10600	178.2	163.1	162.0	160.8	159.0	157.1	154.6	151.2	143.8	140.2	136.7
CLIMB LIMIT WT (1000 LB)	167.5	166.1	165.9	165.7	164.1	162.2	158.9	153.7	143.2	138.5	133.9

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 500 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2000 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	97.3	88.5	87.9	86.9	85.9	84.6	82.8	80.6	76.3	74.3	72.3
4200	100.4	91.3	90.7	89.7	88.7	87.4	85.5	83.2	78.9	76.8	74.8
4600	106.4	96.9	96.2	95.2	94.1	92.7	90.8	88.4	83.9	81.7	79.5
5000	112.0	102.1	101.4	100.3	99.2	97.8	95.7	93.2	88.5	86.2	84.0
5400	117.2	106.9	106.1	105.0	103.8	102.3	100.2	97.6	92.7	90.3	87.9
5800	122.2	111.4	110.7	109.5	108.3	106.7	104.5	101.8	96.6	94.1	91.7
6200	127.0	115.8	115.0	113.7	112.5	110.9	108.5	105.7	100.4	97.8	95.3
6600	131.5	119.9	119.1	117.8	116.5	114.8	112.4	109.5	103.9	101.2	98.6
7000	135.9	123.8	123.0	121.7	120.3	118.6	116.1	113.1	107.3	104.6	101.8
7400	140.0	127.6	126.7	125.3	123.9	122.2	119.6	116.5	110.5	107.7	104.9
7800	144.0	131.2	130.3	128.9	127.5	125.6	123.0	119.8	113.7	110.8	107.9
8200	148.0	134.9	134.0	132.5	131.1	129.2	126.5	123.2	116.9	113.9	111.0
8600	151.8	138.4	137.5	136.0	134.5	132.5	129.8	126.4	120.0	116.9	113.9
9000	155.2	141.5	140.6	139.0	137.5	135.5	132.7	129.3	122.7	119.6	116.5
9400	158.3	144.3	143.3	141.7	140.2	138.2	135.3	131.8	125.1	121.9	118.7
9800	161.1	146.9	145.9	144.3	142.7	140.6	137.7	134.1	127.3	124.0	120.8
10200	163.8	149.3	148.3	146.6	145.0	142.9	139.9	136.3	129.4	126.0	122.8
10600	166.3	151.6	150.5	148.9	147.2	145.1	142.1	138.4	131.3	127.9	124.6
CLIMB LIMIT WT (1000 LB)	156.7	155.1	154.9	153.4	151.9	149.2	144.4	139.3	129.6	125.2	120.8

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	89.2	81.5	80.4	79.4	78.3	77.0	75.0	73.0	69.1	67.3	65.4
4200	92.1	84.2	83.1	82.0	80.9	79.5	77.5	75.5	71.5	69.6	67.6
4600	97.7	89.4	88.3	87.1	85.9	84.5	82.4	80.3	76.1	74.1	72.1
5000	102.9	94.3	93.1	91.9	90.6	89.2	87.0	84.7	80.4	78.3	76.2
5400	107.7	98.7	97.5	96.2	94.9	93.4	91.1	88.7	84.2	82.0	79.8
5800	112.3	102.9	101.6	100.3	99.0	97.4	95.0	92.5	87.8	85.5	83.2
6200	116.7	106.9	105.6	104.2	102.8	101.2	98.7	96.1	91.2	88.8	86.4
6600	120.9	110.7	109.3	107.9	106.4	104.7	102.2	99.5	94.4	91.9	89.4
7000	124.9	114.4	112.9	111.4	109.9	108.2	105.5	102.8	97.5	94.9	92.4
7400	128.6	117.8	116.3	114.8	113.2	111.4	108.7	105.9	100.4	97.8	95.1
7800	132.3	121.2	119.6	118.1	116.5	114.6	111.8	108.9	103.3	100.6	97.8
8200	136.0	124.6	123.0	121.4	119.8	117.9	115.0	112.0	106.2	103.5	100.7
8600	139.5	127.9	126.2	124.6	122.9	121.0	118.0	115.0	109.1	106.2	103.4
9000	142.7	130.8	129.1	127.4	125.7	123.7	120.7	117.6	111.5	108.6	105.7
9400	145.5	133.3	131.6	129.9	128.1	126.1	123.0	119.8	113.7	110.7	107.7
9800	148.1	135.6	133.9	132.2	130.4	128.3	125.1	121.9	115.6	112.6	109.6
10200	150.5	137.9	136.1	134.3	132.5	130.4	127.2	123.9	117.5	114.4	111.3
10600	152.8	140.0	138.2	136.4	134.5	132.4	129.1	125.8	119.3	116.2	113.0
CLIMB LIMIT WT (1000 LB)	143.5	142.3	140.6	138.9	136.9	134.1	129.6	125.0	116.6	112.5	108.4

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 500 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 2000 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Dry Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
4000	83.9	77.7	77.5	77.2	76.9	75.4	74.2	72.7	71.2	67.0	61.3
4200	86.7	80.4	80.3	80.0	79.7	78.2	77.0	75.5	74.0	69.8	64.1
4600	92.1	85.8	85.6	85.3	85.0	83.5	82.3	80.8	79.3	75.0	69.3
5000	97.2	90.7	90.5	90.2	89.9	88.4	87.2	85.6	84.1	79.8	73.9
5400	101.7	95.1	94.9	94.6	94.2	92.7	91.4	89.8	88.2	83.8	77.7
5800	106.1	99.2	99.0	98.7	98.4	96.8	95.5	93.8	92.2	87.6	81.4
6200	110.1	103.1	103.0	102.6	102.3	100.6	99.3	97.6	96.0	91.2	84.9
6600	114.0	106.9	106.7	106.3	106.0	104.3	102.9	101.2	99.5	94.7	88.2
7000	117.7	110.4	110.2	109.8	109.5	107.8	106.4	104.6	102.9	97.9	91.3
7400	121.2	113.6	113.5	113.1	112.7	111.0	109.5	107.7	105.9	100.8	93.9
7800	124.6	116.8	116.6	116.2	115.8	114.0	112.5	110.7	108.8	103.6	96.5
8200	127.9	119.9	119.7	119.3	118.9	117.0	115.5	113.6	111.7	106.3	99.1
8600	131.0	122.8	122.6	122.2	121.8	119.9	118.3	116.4	114.4	108.9	101.5
9000	133.9	125.5	125.3	124.9	124.5	122.5	120.9	118.9	116.9	111.3	103.7
9400	136.4	127.9	127.6	127.2	126.8	124.8	123.2	121.2	119.1	113.4	105.6
9800	138.9	130.2	129.9	129.5	129.1	127.1	125.4	123.3	121.3	115.4	107.5
10200	141.2	132.3	132.1	131.6	131.2	129.1	127.5	125.3	123.2	117.3	109.2
10600	143.3	134.3	134.1	133.7	133.2	131.1	129.4	127.3	125.1	119.1	110.9
CLIMB LIMIT WT (1000 LB)	136.5	135.5	135.5	135.4	135.4	133.5	131.6	129.5	127.4	119.2	108.1

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
4000	76.7	70.9	70.7	70.2	69.7	68.3	67.1	65.8	64.4	60.9	56.7
4200	79.5	73.7	73.5	73.0	72.5	71.0	69.9	68.5	67.1	63.6	59.4
4600	84.9	78.9	78.8	78.3	77.7	76.3	75.1	73.7	72.3	68.8	64.5
5000	89.8	83.7	83.6	83.1	82.5	81.0	79.9	78.5	77.0	73.4	69.1
5400	94.1	87.9	87.7	87.2	86.6	85.1	83.9	82.4	80.9	77.2	72.7
5800	98.2	91.8	91.6	91.1	90.5	88.9	87.7	86.2	84.7	80.8	76.2
6200	102.1	95.6	95.4	94.8	94.2	92.6	91.4	89.8	88.3	84.3	79.6
6600	105.8	99.1	99.0	98.4	97.8	96.1	94.8	93.3	91.7	87.7	82.9
7000	109.3	102.5	102.3	101.7	101.1	99.4	98.1	96.4	94.8	90.7	85.8
7400	112.5	105.5	105.3	104.7	104.0	102.3	101.0	99.3	97.6	93.4	88.3
7800	115.7	108.4	108.2	107.6	106.9	105.1	103.7	102.0	100.3	95.9	90.7
8200	118.7	111.2	111.1	110.4	109.7	107.9	106.5	104.7	102.9	98.5	93.1
8600	121.6	114.0	113.8	113.1	112.4	110.5	109.1	107.3	105.5	100.9	95.4
9000	124.3	116.5	116.3	115.6	114.9	113.0	111.5	109.6	107.8	103.1	97.5
9400	126.6	118.7	118.5	117.8	117.0	115.1	113.6	111.7	109.8	105.0	99.3
9800	128.9	120.8	120.6	119.9	119.1	117.1	115.6	113.6	111.7	106.8	101.0
10200	131.0	122.7	122.5	121.8	121.0	119.0	117.4	115.5	113.5	108.6	102.6
10600	133.0	124.6	124.4	123.7	122.9	120.8	119.2	117.2	115.2	110.2	104.2
CLIMB LIMIT WT (1000 LB)	127.3	126.3	126.3	125.6	124.8	122.8	121.1	119.2	117.1	110.2	101.7

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 3200 lb and climb limit weight by 3900 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 4300 lb and climb limit weight by 6200 lb.

Takeoff Field & Climb Limit Weights - Dry Runway

Flaps 5

14500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
4000	75.0	69.2	69.0	68.5	67.9	66.5	65.4	64.1	62.7	59.4	55.6
4200	77.8	72.0	71.8	71.2	70.7	69.3	68.2	66.8	65.5	62.2	58.3
4600	83.1	77.2	77.0	76.5	76.0	74.5	73.4	72.0	70.7	67.3	63.4
5000	88.0	82.0	81.8	81.3	80.7	79.3	78.1	76.7	75.4	71.9	68.0
5400	92.2	86.1	85.9	85.3	84.7	83.2	82.1	80.6	79.2	75.7	71.6
5800	96.3	90.0	89.7	89.2	88.6	87.0	85.8	84.3	82.9	79.3	75.1
6200	100.2	93.7	93.4	92.9	92.3	90.7	89.5	87.9	86.5	82.7	78.4
6600	103.8	97.2	97.0	96.4	95.8	94.1	92.9	91.3	89.8	86.0	81.6
7000	107.3	100.5	100.2	99.6	99.0	97.4	96.1	94.5	92.9	89.0	84.5
7400	110.4	103.4	103.2	102.6	101.9	100.2	98.9	97.2	95.6	91.6	87.0
7800	113.5	106.3	106.0	105.4	104.7	103.0	101.6	99.9	98.3	94.2	89.4
8200	116.5	109.1	108.8	108.2	107.5	105.7	104.3	102.6	100.9	96.6	91.7
8600	119.3	111.8	111.5	110.8	110.1	108.3	106.8	105.1	103.3	99.0	94.0
9000	121.9	114.2	113.9	113.3	112.5	110.7	109.2	107.4	105.6	101.2	96.0
9400	124.2	116.4	116.1	115.4	114.6	112.7	111.2	109.4	107.6	103.0	97.8
9800	126.5	118.4	118.1	117.4	116.7	114.7	113.2	111.3	109.5	104.8	99.5
10200	128.5	120.4	120.1	119.3	118.6	116.6	115.0	113.1	111.2	106.5	101.1
10600	130.5	122.2	121.9	121.1	120.4	118.4	116.8	114.8	112.9	108.1	102.6
CLIMB LIMIT WT (1000 LB)	125.0	123.9	123.7	123.0	122.3	120.2	118.5	116.7	114.7	108.1	100.1

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 3200 lb and climb limit weight by 3900 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 4300 lb and climb limit weight by 6200 lb.

Takeoff Field Corrections - Wet Runway**Slope Corrections**

FIELD LENGTH AVAILABLE (FT)	SLOPE CORRECTED FIELD LENGTH (FT)								
	RUNWAY SLOPE (%)								
	-2.0	-1.5	-1.0	-0.5	0.0	0.5	1.0	1.5	2.0
4200	4300	4280	4250	4230	4200	4160	4130	4090	4050
4600	4750	4710	4670	4640	4600	4550	4490	4440	4390
5000	5190	5140	5090	5050	5000	4930	4860	4790	4720
5400	5630	5570	5520	5460	5400	5320	5230	5150	5060
5800	6080	6010	5940	5870	5800	5700	5600	5500	5400
6200	6520	6440	6360	6280	6200	6080	5970	5850	5730
6600	6970	6870	6780	6690	6600	6470	6330	6200	6070
7000	7410	7310	7200	7100	7000	6850	6700	6550	6400
7400	7850	7740	7630	7510	7400	7240	7070	6910	6740
7800	8300	8170	8050	7920	7800	7620	7440	7260	7080
8200	8740	8610	8470	8340	8200	8000	7810	7610	7410
8600	9190	9040	8890	8750	8600	8390	8170	7960	7750
9000	9630	9470	9310	9160	9000	8770	8540	8310	8080
9400	10070	9900	9740	9570	9400	9160	8910	8670	8420
9800	10520	10340	10160	9980	9800	9540	9280	9020	8760
10200	10960	10770	10580	10390	10200	9920	9650	9370	9090
10600	11410	11200	11000	10800	10600	10310	10010	9720	9430
11000	11850	11640	11420	11210	11000	10690	10380	10070	9760
11400	12290	12070	11850	11620	11400	11080	10750	10430	10100
11800	12740	12500	12270	12030	11800	11460	11120	10780	10440

Wind Corrections

SLOPE CORR'D FIELD LENGTH (FT)	SLOPE & WIND CORRECTED FIELD LENGTH (FT)							
	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4200	3070	3440	3820	4200	4450	4710	4960	5220
4600	3410	3800	4200	4600	4870	5140	5400	5670
5000	3750	4160	4580	5000	5280	5560	5840	6130
5400	4090	4520	4960	5400	5690	5990	6280	6580
5800	4430	4880	5340	5800	6110	6420	6720	7030
6200	4770	5240	5720	6200	6520	6840	7160	7490
6600	5110	5600	6100	6600	6930	7270	7600	7940
7000	5450	5960	6480	7000	7350	7700	8040	8390
7400	5790	6320	6860	7400	7760	8120	8480	8850
7800	6130	6680	7240	7800	8170	8550	8920	9300
8200	6460	7040	7620	8200	8590	8980	9360	9750
8600	6800	7400	8000	8600	9000	9400	9800	10210
9000	7140	7760	8380	9000	9410	9830	10240	10660
9400	7480	8120	8760	9400	9830	10260	10680	11110
9800	7820	8480	9140	9800	10240	10680	11120	11570
10200	8160	8840	9520	10200	10650	11110	11560	12020
10600	8500	9200	9900	10600	11070	11540	12000	12470
11000	8840	9560	10280	11000	11480	11960	12440	12930
11400	9180	9920	10660	11400	11890	12390	12880	13380
11800	9520	10280	11040	11800	12310	12820	13320	13830

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****Sea Level Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	127.5	116.9	116.1	115.3	114.5	113.7	112.9	110.2	104.8	102.3	99.8
4200	131.2	120.3	119.5	118.6	117.8	117.0	116.1	113.4	107.8	105.2	102.6
4600	138.6	127.0	126.1	125.2	124.3	123.5	122.6	119.7	113.8	111.0	108.2
5000	145.6	133.4	132.4	131.5	130.5	129.6	128.7	125.6	119.4	116.5	113.6
5400	152.1	139.3	138.3	137.3	136.4	135.4	134.4	131.2	124.7	121.7	118.6
5800	158.4	145.0	144.0	143.0	142.0	141.0	139.9	136.6	129.8	126.6	123.4
6200	164.4	150.5	149.4	148.3	147.3	146.2	145.2	141.7	134.7	131.3	128.0
6600	170.1	155.7	154.6	153.5	152.4	151.3	150.2	146.6	139.3	135.8	132.4
7000	175.7	160.8	159.7	158.5	157.4	156.3	155.1	151.4	143.8	140.2	136.7
7400	181.1	165.8	164.6	163.4	162.2	161.0	159.9	156.0	148.2	144.5	140.8
7800	186.3	170.5	169.2	168.0	166.8	165.6	164.4	160.4	152.4	148.6	144.8
8200	189.9	175.1	173.8	172.6	171.3	170.1	168.9	164.8	156.5	152.6	148.7
8600	189.9	179.5	178.2	176.9	175.7	174.4	173.1	168.9	160.4	156.4	152.4
9000	189.9	183.6	182.3	181.0	179.7	178.4	177.1	172.8	164.1	160.0	155.9
9400	189.9	187.5	186.1	184.8	183.4	182.1	180.8	176.3	167.5	163.2	159.0
9800	189.9	189.9	189.8	188.4	187.0	185.7	184.3	179.8	170.7	166.4	162.1
10200	189.9	189.9	189.9	189.9	189.9	189.2	187.8	183.2	173.9	169.5	165.1
10600	189.9	189.9	189.9	189.9	189.9	189.9	189.9	186.5	177.0	172.5	168.0
CLIMB LIMIT WT (1000 LB)	189.9	189.9	189.9	189.9	189.9	189.9	189.9	189.9	179.2	173.1	167.0

2000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	119.9	109.4	108.6	107.9	107.1	106.4	104.8	102.6	97.5	95.2	92.2
4200	123.4	112.5	111.7	110.9	110.2	109.4	107.8	105.5	100.3	97.9	94.8
4600	130.3	118.7	117.9	117.1	116.3	115.5	113.7	111.3	105.8	103.2	99.9
5000	136.8	124.7	123.8	122.9	122.0	121.2	119.3	116.8	111.0	108.3	104.8
5400	143.0	130.2	129.3	128.4	127.5	126.6	124.6	122.0	115.9	113.1	109.4
5800	148.8	135.5	134.6	133.6	132.7	131.7	129.7	126.9	120.6	117.6	113.9
6200	154.5	140.6	139.6	138.6	137.6	136.7	134.6	131.7	125.1	122.0	118.0
6600	159.8	145.5	144.4	143.4	142.4	141.4	139.2	136.2	129.4	126.2	122.1
7000	165.1	150.2	149.1	148.0	147.0	146.0	143.7	140.6	133.5	130.2	126.0
7400	170.1	154.8	153.7	152.6	151.5	150.4	148.1	144.9	137.6	134.1	129.8
7800	175.0	159.2	158.0	156.9	155.8	154.7	152.3	149.0	141.5	137.9	133.4
8200	179.7	163.5	162.3	161.1	160.0	158.8	156.4	153.0	145.3	141.6	137.0
8600	184.3	167.6	166.4	165.2	164.0	162.8	160.3	156.8	148.9	145.1	140.4
9000	188.5	171.4	170.2	168.9	167.7	166.6	163.9	160.4	152.3	148.4	143.5
9400	189.9	175.0	173.7	172.4	171.2	170.0	167.3	163.6	155.3	151.4	146.4
9800	189.9	178.4	177.1	175.8	174.5	173.3	170.6	166.8	158.3	154.3	149.2
10200	189.9	181.7	180.4	179.1	177.8	176.5	173.7	169.9	161.2	157.1	151.9
10600	189.9	185.0	183.6	182.3	181.0	179.7	176.8	172.9	164.1	159.9	154.6
CLIMB LIMIT WT (1000 LB)	189.9	189.6	189.5	189.3	189.1	188.9	184.9	179.4	166.8	161.2	153.5

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****4000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	111.9	102.0	101.3	100.6	99.9	98.8	97.3	95.4	90.7	88.3	86.3
4200	115.1	104.9	104.2	103.4	102.7	101.6	100.1	98.1	93.3	90.8	88.7
4600	121.5	110.7	109.9	109.1	108.4	107.1	105.5	103.4	98.3	95.7	93.5
5000	127.6	116.2	115.3	114.5	113.7	112.4	110.7	108.5	103.2	100.4	98.1
5400	133.2	121.3	120.4	119.6	118.8	117.4	115.6	113.3	107.7	104.8	102.4
5800	138.7	126.2	125.3	124.5	123.6	122.2	120.3	117.9	112.1	109.0	106.5
6200	143.9	130.9	130.0	129.1	128.2	126.7	124.8	122.3	116.2	113.0	110.4
6600	148.9	135.4	134.5	133.5	132.6	131.0	129.0	126.4	120.1	116.8	114.1
7000	153.7	139.8	138.8	137.8	136.8	135.2	133.2	130.5	124.0	120.5	117.7
7400	158.4	144.1	143.0	142.0	141.0	139.4	137.2	134.5	127.7	124.2	121.3
7800	162.9	148.1	147.1	146.0	145.0	143.3	141.1	138.2	131.3	127.6	124.6
8200	167.3	152.1	151.0	149.9	148.9	147.1	144.9	141.9	134.8	131.0	128.0
8600	171.6	155.9	154.8	153.7	152.6	150.8	148.5	145.5	138.1	134.3	131.2
9000	175.5	159.5	158.3	157.2	156.0	154.2	151.9	148.8	141.2	137.3	134.1
9400	179.1	162.7	161.5	160.4	159.2	157.4	154.9	151.8	144.1	140.0	136.7
9800	182.7	165.9	164.7	163.5	162.3	160.4	157.9	154.7	146.8	142.7	139.3
10200	186.1	168.9	167.7	166.5	165.3	163.3	160.8	157.5	149.4	145.2	141.8
10600	189.4	172.0	170.7	169.5	168.2	166.2	163.7	160.3	152.1	147.8	144.2
CLIMB LIMIT WT (1000 LB)	178.6	177.5	177.4	177.2	177.0	175.1	171.8	167.0	155.4	149.1	144.1

6000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	104.4	95.0	94.3	93.7	92.6	91.5	90.1	88.3	84.2	82.3	80.4
4200	107.4	97.7	97.0	96.3	95.2	94.1	92.7	90.7	86.5	84.5	82.6
4600	113.3	103.0	102.3	101.6	100.4	99.2	97.7	95.7	91.2	89.1	87.0
5000	118.9	108.1	107.3	106.6	105.4	104.1	102.5	100.3	95.6	93.4	91.3
5400	124.2	112.9	112.0	111.2	110.0	108.7	107.0	104.7	99.8	97.5	95.2
5800	129.3	117.4	116.6	115.7	114.4	113.1	111.3	109.0	103.8	101.4	99.0
6200	134.1	121.8	120.9	120.0	118.7	117.2	115.4	112.9	107.6	105.1	102.6
6600	138.7	125.9	125.0	124.1	122.7	121.2	119.3	116.8	111.2	108.6	106.1
7000	143.2	129.9	129.0	128.1	126.6	125.1	123.1	120.5	114.7	112.0	109.4
7400	147.6	133.9	132.9	132.0	130.4	128.9	126.8	124.1	118.2	115.4	112.7
7800	151.7	137.6	136.6	135.7	134.1	132.5	130.4	127.6	121.5	118.6	115.8
8200	155.8	141.3	140.3	139.3	137.7	136.0	133.9	131.0	124.7	121.7	118.9
8600	159.7	144.9	143.8	142.8	141.1	139.4	137.2	134.2	127.8	124.8	121.8
9000	163.4	148.1	147.0	146.0	144.3	142.5	140.3	137.2	130.6	127.5	124.5
9400	166.7	151.1	150.0	148.9	147.2	145.4	143.1	140.0	133.2	130.0	126.9
9800	170.0	154.0	152.9	151.7	150.0	148.1	145.8	142.6	135.7	132.4	129.2
10200	173.1	156.8	155.7	154.5	152.7	150.8	148.4	145.2	138.1	134.8	131.5
10600	176.2	159.6	158.4	157.2	155.4	153.5	151.0	147.7	140.5	137.1	133.8
CLIMB LIMIT WT (1000 LB)	167.5	166.1	165.9	165.7	164.1	162.2	158.9	153.7	143.2	138.5	133.9

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****8000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	97.3	88.5	87.9	86.9	86.0	84.8	83.1	81.1	77.3	75.5	73.7
4200	100.0	90.9	90.3	89.4	88.4	87.1	85.4	83.3	79.4	77.6	75.7
4600	105.5	95.9	95.2	94.2	93.2	91.9	90.0	87.8	83.7	81.7	79.7
5000	110.7	100.6	99.9	98.8	97.7	96.3	94.4	92.1	87.7	85.6	83.6
5400	115.6	105.0	104.3	103.1	102.0	100.5	98.5	96.1	91.5	89.3	87.2
5800	120.3	109.2	108.5	107.3	106.1	104.6	102.4	99.9	95.2	92.9	90.6
6200	124.7	113.2	112.4	111.2	110.0	108.4	106.2	103.5	98.6	96.2	93.9
6600	129.0	117.1	116.2	115.0	113.7	112.0	109.7	107.0	101.9	99.4	97.0
7000	133.1	120.8	119.9	118.6	117.3	115.6	113.2	110.4	105.1	102.5	100.0
7400	137.2	124.4	123.5	122.2	120.8	119.1	116.6	113.7	108.2	105.6	103.0
7800	141.0	127.9	127.0	125.6	124.2	122.4	119.8	116.8	111.2	108.5	105.8
8200	144.8	131.3	130.4	128.9	127.5	125.6	123.0	119.9	114.1	111.3	108.6
8600	148.4	134.6	133.6	132.1	130.7	128.8	126.1	122.9	116.9	114.1	111.3
9000	151.8	137.6	136.6	135.1	133.6	131.6	128.9	125.6	119.5	116.6	113.7
9400	154.9	140.3	139.3	137.8	136.2	134.2	131.4	128.1	121.8	118.8	115.9
9800	157.8	143.0	141.9	140.3	138.8	136.7	133.8	130.4	124.0	121.0	117.9
10200	160.7	145.5	144.5	142.9	141.2	139.2	136.2	132.7	126.2	123.1	120.0
10600	163.6	148.1	147.0	145.3	143.7	141.6	138.5	135.0	128.3	125.1	122.0
CLIMB LIMIT WT (1000 LB)	156.7	155.1	154.9	153.4	151.9	149.2	144.4	139.3	129.6	125.2	120.8

10000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	10	14	18	22	26	30	34	42	46	50
4000	89.7	81.9	80.9	79.9	78.9	77.7	75.9	74.1	70.7	69.0	67.3
4200	92.2	84.2	83.1	82.1	81.0	79.8	78.0	76.2	72.6	70.9	69.1
4600	97.2	88.7	87.6	86.5	85.4	84.1	82.2	80.2	76.4	74.6	72.7
5000	102.0	93.0	91.8	90.7	89.5	88.1	86.1	84.1	80.1	78.1	76.2
5400	106.4	97.1	95.8	94.6	93.4	92.0	89.9	87.7	83.5	81.5	79.4
5800	110.7	100.9	99.7	98.4	97.1	95.6	93.4	91.2	86.8	84.7	82.6
6200	114.8	104.6	103.3	102.0	100.6	99.1	96.8	94.4	89.9	87.7	85.5
6600	118.7	108.1	106.7	105.4	104.0	102.4	100.0	97.6	92.9	90.6	88.3
7000	122.5	111.5	110.1	108.7	107.3	105.6	103.1	100.6	95.7	93.4	91.0
7400	126.2	114.9	113.4	111.9	110.5	108.7	106.2	103.6	98.6	96.1	93.7
7800	129.7	118.0	116.5	115.0	113.5	111.7	109.1	106.4	101.2	98.7	96.2
8200	133.2	121.2	119.6	118.1	116.5	114.7	112.0	109.2	103.9	101.3	98.7
8600	136.5	124.2	122.6	121.0	119.4	117.5	114.8	111.9	106.5	103.8	101.1
9000	139.5	126.9	125.3	123.7	122.0	120.1	117.3	114.4	108.8	106.1	103.3
9400	142.3	129.4	127.7	126.1	124.4	122.4	119.5	116.6	110.8	108.0	105.2
9800	145.0	131.8	130.1	128.4	126.7	124.6	121.7	118.6	112.8	109.9	107.1
10200	147.6	134.1	132.4	130.7	128.9	126.8	123.8	120.7	114.7	111.8	108.9
10600	150.2	136.5	134.7	132.9	131.1	129.0	125.9	122.7	116.6	113.7	110.7
CLIMB LIMIT WT (1000 LB)	143.5	142.3	140.6	138.9	136.9	134.1	129.6	125.0	116.6	112.5	108.4

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3300 lb.

With engine anti-ice on, decrease field limit weight by 400 lb and climb limit weight by 600 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 1700 lb and climb limit weight by 3500 lb.

Takeoff Field & Climb Limit Weights - Wet Runway**Flaps 5****12000 FT Pressure Altitude**

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
4000	83.8	77.0	76.8	76.5	76.2	74.7	73.5	72.0	70.5	66.5	61.1
4200	86.4	79.6	79.4	79.1	78.8	77.3	76.1	74.6	73.2	69.1	63.7
4600	91.5	84.6	84.5	84.1	83.8	82.3	81.1	79.6	78.2	74.1	68.7
5000	96.2	89.2	89.1	88.7	88.4	86.9	85.7	84.2	82.7	78.6	73.1
5400	100.4	93.2	93.1	92.7	92.4	90.9	89.6	88.1	86.5	82.3	76.6
5800	104.4	97.1	96.9	96.5	96.2	94.6	93.3	91.7	90.2	85.8	80.0
6200	108.3	100.7	100.5	100.2	99.8	98.2	96.9	95.2	93.6	89.1	83.1
6600	111.9	104.2	104.0	103.6	103.2	101.6	100.2	98.5	96.9	92.3	86.1
7000	115.4	107.5	107.3	106.9	106.5	104.8	103.4	101.7	100.0	95.3	89.0
7400	118.8	110.6	110.4	110.0	109.6	107.9	106.5	104.7	102.9	98.1	91.7
7800	122.0	113.6	113.4	113.0	112.6	110.8	109.4	107.6	105.8	100.8	94.2
8200	125.1	116.5	116.3	115.9	115.5	113.7	112.2	110.3	108.5	103.4	96.6
8600	128.0	119.3	119.1	118.6	118.2	116.4	114.8	112.9	111.0	105.8	98.9
9000	130.9	121.9	121.7	121.3	120.8	118.9	117.4	115.4	113.5	108.2	101.1
9400	133.5	124.4	124.2	123.8	123.3	121.4	119.8	117.8	115.8	110.4	103.2
9800	136.2	126.9	126.6	126.2	125.7	123.7	122.1	120.1	118.1	112.5	105.2
10200	138.6	129.2	128.9	128.5	128.0	126.0	124.3	122.3	120.2	114.6	107.1
10600	141.0	131.3	131.1	130.6	130.2	128.1	126.4	124.3	122.2	116.5	108.8
CLIMB LIMIT WT (1000 LB)	136.5	135.5	135.5	135.4	135.4	133.5	131.6	129.5	127.4	119.2	108.1

14000 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
4000	76.6	70.3	70.1	69.6	69.0	67.6	66.5	65.1	63.8	60.3	56.3
4200	79.2	72.9	72.7	72.2	71.7	70.2	69.1	67.8	66.4	63.0	59.0
4600	84.2	77.9	77.7	77.2	76.6	75.2	74.1	72.7	71.3	67.9	63.9
5000	88.8	82.4	82.2	81.7	81.1	79.7	78.6	77.2	75.8	72.3	68.2
5400	92.9	86.2	86.0	85.5	84.9	83.4	82.3	80.8	79.4	75.8	71.6
5800	96.7	89.8	89.7	89.1	88.5	87.0	85.8	84.3	82.9	79.2	74.8
6200	100.3	93.3	93.1	92.5	91.9	90.4	89.1	87.6	86.1	82.3	77.9
6600	103.7	96.5	96.4	95.8	95.1	93.5	92.3	90.7	89.2	85.3	80.7
7000	107.0	99.6	99.5	98.9	98.2	96.6	95.3	93.7	92.1	88.1	83.4
7400	110.2	102.6	102.4	101.8	101.1	99.4	98.1	96.5	94.8	90.8	86.0
7800	113.2	105.4	105.2	104.6	103.9	102.2	100.8	99.1	97.5	93.3	88.4
8200	116.1	108.1	107.9	107.3	106.6	104.8	103.4	101.7	100.0	95.7	90.7
8600	118.8	110.7	110.5	109.8	109.1	107.3	105.9	104.1	102.4	98.0	92.8
9000	121.4	113.1	112.9	112.2	111.5	109.7	108.2	106.4	104.6	100.2	94.9
9400	123.9	115.4	115.2	114.5	113.8	111.9	110.4	108.6	106.8	102.2	96.8
9800	126.3	117.7	117.5	116.8	116.0	114.1	112.6	110.7	108.8	104.2	98.7
10200	128.6	119.8	119.6	118.9	118.1	116.1	114.6	112.7	110.8	106.0	100.4
10600	130.8	121.8	121.6	120.9	120.1	118.1	116.5	114.6	112.6	107.8	102.1
CLIMB LIMIT WT (1000 LB)	127.3	126.3	126.3	125.6	124.8	122.8	121.1	119.2	117.1	110.2	101.7

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 2700 lb and climb limit weight by 3900 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 3600 lb and climb limit weight by 6200 lb

Takeoff Field & Climb Limit Weights - Wet Runway

Flaps 5

14500 FT Pressure Altitude

CORR'D FIELD LENGTH (FT)	FIELD LIMIT WEIGHT (1000 LB)										
	OAT (°C)										
	-40	-4	-3	-1	1	6	10	15	20	30	40
4000	74.9	68.6	68.4	67.8	67.3	65.9	64.8	63.5	62.1	58.9	55.2
4200	77.5	71.2	71.0	70.5	69.9	68.5	67.4	66.1	64.8	61.5	57.8
4600	82.5	76.2	76.0	75.4	74.9	73.5	72.4	71.1	69.7	66.5	62.8
5000	87.1	80.7	80.5	79.9	79.4	78.0	76.8	75.5	74.1	70.8	67.1
5400	91.0	84.4	84.2	83.7	83.1	81.6	80.5	79.1	77.7	74.3	70.5
5800	94.8	88.0	87.8	87.2	86.7	85.2	84.0	82.5	81.1	77.6	73.7
6200	98.4	91.4	91.2	90.6	90.0	88.5	87.3	85.8	84.3	80.7	76.6
6600	101.8	94.6	94.4	93.8	93.2	91.6	90.4	88.8	87.3	83.7	79.5
7000	105.0	97.7	97.4	96.8	96.2	94.6	93.3	91.7	90.2	86.4	82.1
7400	108.1	100.6	100.3	99.7	99.1	97.4	96.1	94.5	92.9	89.1	84.6
7800	111.0	103.4	103.1	102.5	101.8	100.1	98.8	97.1	95.5	91.5	87.0
8200	113.9	106.0	105.7	105.1	104.4	102.7	101.3	99.6	98.0	93.9	89.3
8600	116.6	108.5	108.2	107.6	106.9	105.1	103.7	102.0	100.3	96.1	91.4
9000	119.2	110.9	110.7	110.0	109.3	107.4	106.0	104.2	102.5	98.3	93.4
9400	121.6	113.2	112.9	112.2	111.5	109.6	108.2	106.4	104.6	100.3	95.3
9800	124.0	115.4	115.1	114.4	113.7	111.7	110.3	108.4	106.6	102.2	97.2
10200	126.2	117.5	117.2	116.4	115.7	113.7	112.2	110.4	108.5	104.0	98.9
10600	128.3	119.4	119.1	118.4	117.6	115.7	114.1	112.2	110.3	105.8	100.5
CLIMB LIMIT WT (1000 LB)	125.0	123.9	123.7	123.0	122.3	120.2	118.5	116.7	114.7	108.1	100.1

With engine bleed for packs off, increase field limit weight by 800 lb and climb limit weight by 3000 lb.

With engine anti-ice on, decrease field limit weight by 2700 lb and climb limit weight by 3900 lb.

With engine and wing anti-ice on (optional system), decrease field limit weight by 3600 lb and climb limit weight by 6200 lb

Takeoff Obstacle Limit Weight**Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	164.0	183.0							
50	154.1	171.8	185.9						
100	144.9	161.8	175.0	185.5					
150	137.6	153.7	166.7	176.9	185.2				
200	131.5	147.0	159.7	169.9	178.2	185.0			
250	126.1	141.1	153.6	163.8	172.1	179.0	184.8	189.7	
300	121.2	136.0	148.1	158.3	166.7	173.7	179.6	184.6	188.9
350	116.8	131.3	143.3	153.4	161.8	168.9	174.9	180.1	184.5
400	112.8	127.1	138.9	148.9	157.3	164.5	170.6	175.8	180.4
450	109.1	123.2	134.9	144.7	153.2	160.4	166.6	171.9	176.5
500	105.7	119.6	131.2	140.9	149.3	156.6	162.8	168.3	173.0
550	102.5	116.2	127.7	137.4	145.7	153.0	159.3	164.8	169.6
600	99.5	113.1	124.4	134.1	142.3	149.6	156.0	161.5	166.4
650	96.6	110.1	121.4	130.9	139.2	146.4	152.8	158.4	163.3
700	94.0	107.4	118.5	128.0	136.2	143.4	149.8	155.4	160.4
750	91.5	104.7	115.8	125.2	133.4	140.6	146.9	152.6	157.6
800		102.2	113.2	122.6	130.7	137.9	144.2	149.9	155.0
850		99.8	110.7	120.0	128.2	135.3	141.6	147.3	152.4
900		97.6	108.4	117.6	125.7	132.8	139.2	144.8	149.9
950		95.4	106.1	115.3	123.4	130.5	136.8	142.5	147.6
1000		93.3	104.0	113.1	121.2	128.2	134.5	140.2	145.3

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
30 & Below	0	0	0	0	0	0
32	-1.3	-1.6	-2.0	-2.3	-2.7	-3.0
34	-2.6	-3.3	-4.0	-4.7	-5.4	-6.0
36	-3.9	-4.9	-6.0	-7.0	-8.0	-9.1
38	-5.2	-6.6	-7.9	-9.3	-10.7	-12.1
40	-6.5	-8.2	-9.9	-11.7	-13.4	-15.1
42	-7.8	-9.8	-11.9	-13.9	-15.9	-17.9
44	-9.1	-11.4	-13.8	-16.1	-18.4	-20.8
46	-10.4	-13.1	-15.7	-18.3	-21.0	-23.6
48	-11.7	-14.7	-17.6	-20.6	-23.5	-26.4
50	-13.1	-16.3	-19.5	-22.8	-26.0	-29.3

Takeoff Obstacle Limit Weight
Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
S.L. & Below	0	0	0	0	0	0
1000	-3.3	-4.1	-4.8	-5.6	-6.3	-7.1
2000	-6.7	-8.2	-9.7	-11.2	-12.7	-14.2
3000	-9.7	-11.9	-14.1	-16.3	-18.5	-20.7
4000	-12.7	-15.6	-18.5	-21.4	-24.3	-27.1
5000	-15.6	-19.1	-22.7	-26.2	-29.8	-33.3
6000	-18.4	-22.6	-26.8	-31.0	-35.3	-39.5
7000	-21.6	-26.5	-31.4	-36.4	-41.3	-46.3
8000	-24.7	-30.4	-36.0	-41.7	-47.4	-53.0
9000	-27.6	-34.0	-40.4	-46.8	-53.2	-59.6
10000	-30.6	-37.7	-44.8	-52.0	-59.1	-66.3

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)					
	90	110	130	150	170	190
15 TW	-19.7	-19.4	-19.0	-18.7	-18.4	-18.1
10 TW	-13.1	-12.9	-12.7	-12.5	-12.3	-12.1
5 TW	-6.6	-6.5	-6.3	-6.2	-6.1	-6.0
0	0	0	0	0	0	0
10 HW	2.5	2.4	2.3	2.1	2.0	1.9
20 HW	5.1	4.8	4.5	4.3	4.0	3.7
30 HW	7.8	7.4	6.9	6.5	6.0	5.6
40 HW	10.6	9.9	9.3	8.7	8.1	7.4

With engine bleed for packs off, increase weight by 1300 lb.
With engine anti-ice on, decrease weight by 650 lb.
With engine and wing anti-ice on, decrease weight by 3750 lb (optional system).

Takeoff Obstacle Limit Weight - High Altitudes**Flaps 5****10000 ft, 10°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)								
	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	117.8	131.0	142.1	148.2	153.0				
50	110.7	123.0	132.9	140.6	145.5	149.1	152.0		
100	104.2	115.9	125.1	132.5	138.4	142.9	145.9	148.4	150.4
150	98.9	110.2	119.2	126.4	132.3	137.0	140.8	143.7	146.0
200	94.4	105.4	114.2	121.4	127.2	132.1	136.1	139.3	142.1
250	90.4	101.2	109.9	117.0	122.9	127.8	131.9	135.3	138.2
300		97.4	106.0	113.1	119.0	123.9	128.1	131.7	134.7
350		94.0	102.5	109.6	115.5	120.5	124.7	128.4	131.5
400		91.0	99.4	106.4	112.3	117.3	121.6	125.3	128.6
450			96.4	103.4	109.3	114.4	118.7	122.5	125.8
500			93.7	100.7	106.6	111.6	116.0	119.9	123.2
550			91.2	98.1	104.0	109.1	113.5	117.4	120.8
600				95.7	101.6	106.7	111.1	115.0	118.4
650				93.5	99.3	104.4	108.9	112.8	116.2
700				91.3	97.2	102.3	106.7	110.7	114.2
750					95.1	100.2	104.7	108.6	112.2
800					93.2	98.3	102.8	106.7	110.3
850					91.4	96.4	100.9	104.9	108.4
900						94.6	99.1	103.1	106.7
950						92.9	97.4	101.4	105.0
1000						91.3	95.8	99.8	103.4

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)							
	90	100	110	120	130	140	150	160
10 & BELOW	0	0	0	0	0	0	0	0
12	-0.6	-0.7	-0.7	-0.8	-0.9	-0.9	-1.0	-1.0
14	-1.2	-1.3	-1.5	-1.6	-1.7	-1.8	-2.0	-2.1
16	-1.8	-2.0	-2.2	-2.4	-2.6	-2.7	-2.9	-3.1
18	-2.4	-2.7	-2.9	-3.2	-3.4	-3.7	-3.9	-4.2
20	-3.0	-3.3	-3.6	-3.9	-4.3	-4.6	-4.9	-5.2
22	-3.8	-4.3	-4.8	-5.2	-5.7	-6.1	-6.6	-7.1
24	-4.7	-5.3	-5.9	-6.5	-7.1	-7.7	-8.3	-8.9
26	-5.5	-6.3	-7.0	-7.8	-8.5	-9.3	-10.0	-10.8
28	-6.4	-7.3	-8.2	-9.1	-9.9	-10.8	-11.7	-12.6
30	-7.2	-8.2	-9.3	-10.3	-11.4	-12.4	-13.5	-14.5
32	-8.5	-9.7	-10.9	-12.1	-13.3	-14.5	-15.6	-16.8
34	-9.8	-11.1	-12.5	-13.8	-15.2	-16.5	-17.8	-19.2
36	-11.1	-12.6	-14.1	-15.6	-17.1	-18.5	-20.0	-21.5
38	-12.4	-14.0	-15.7	-17.3	-18.9	-20.6	-22.2	-23.9
40	-13.7	-15.5	-17.3	-19.1	-20.8	-22.6	-24.4	-26.2
42	-14.9	-16.8	-18.8	-20.7	-22.7	-24.6	-26.6	-28.5
44	-16.0	-18.1	-20.2	-22.4	-24.5	-26.6	-28.7	-30.8
46	-17.2	-19.5	-21.7	-24.0	-26.3	-28.6	-30.8	-33.1
48	-18.3	-20.8	-23.2	-25.7	-28.1	-30.5	-33.0	-35.4
50	-19.5	-22.1	-24.7	-27.3	-29.9	-32.5	-35.1	-37.7

Takeoff Obstacle Limit Weight - High Altitudes

Flaps 5

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)							
	90	100	110	120	130	140	150	160
10000	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
11000	-3.5	-3.9	-4.3	-4.7	-5.1	-5.5	-5.9	-6.2
12000	-7.0	-7.8	-8.6	-9.4	-10.1	-10.9	-11.7	-12.5
13000	-10.3	-11.5	-12.6	-13.8	-14.9	-16.1	-17.2	-18.4
14000	-13.7	-15.2	-16.7	-18.2	-19.7	-21.2	-22.7	-24.2
14500	-18.0	-19.3	-20.6	-21.9	-23.1	-24.4	-25.7	-27.0

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)							
	90	100	110	120	130	140	150	160
15 TW	-14.0	-13.7	-13.5	-13.2	-12.9	-12.7	-12.4	-12.2
10 TW	-9.3	-9.1	-9.0	-8.8	-8.6	-8.5	-8.3	-8.1
5 TW	-4.7	-4.6	-4.5	-4.4	-4.3	-4.2	-4.1	-4.1
0	0	0	0	0	0	0	0	0
10 HW	1.8	1.7	1.5	1.4	1.2	1.1	0.9	0.8
20 HW	3.6	3.3	3.0	2.8	2.5	2.2	1.9	1.6
30 HW	5.5	5.1	4.6	4.2	3.7	3.3	2.8	2.4
40 HW	7.4	6.8	6.2	5.6	5.0	4.4	3.8	3.2

With engine bleed for packs off, increase weight by 1300 lb.
With engine anti-ice on, decrease weight by 4200 lb.
With engine and wing anti-ice on, decrease weight by 6800 lb (optional system).

Brake Energy Limits VMBE**Maximum Brake Energy Speed**

OAT (°C)	REFERENCE VMBE (KIAS)						
	PRESSURE ALTITUDE (FT)						
	-2000	0	2000	4000	6000	8000	10000
54	187	180					
50	188	181	174				
46	188	181	175	169			
42	189	182	176	169	163		
38	190	183	176	170	164	158	
34	191	184	177	171	165	159	153
30	192	184	178	172	165	160	154
26	194	186	179	173	167	160	155
22	196	187	181	174	168	161	156
18	197	189	182	175	169	163	157
14	199	190	184	177	170	164	158
10	200	192	185	178	172	165	159
6	202	194	187	180	173	167	160
2	204	195	188	181	175	168	162
-2	206	197	190	183	176	169	163
-6	208	199	192	185	178	171	164
-10	210	201	193	186	179	172	166

Weight Adjusted VMBE

WEIGHT (1000 LB)	REFERENCE VMBE (KIAS)														
	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210
90	181	188	194	201	207	210	210	210	210	210	210	210	210	210	210
100	170	176	182	189	195	201	207	210	210	210	210	210	210	210	210
110	161	167	172	178	184	190	195	201	207	210	210	210	210	210	210
120	152	158	163	169	174	180	185	191	196	202	207	210	210	210	210
130	146	151	156	161	167	172	177	182	188	193	198	203	209	210	210
140	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210
150	135	140	144	149	154	159	164	168	173	178	183	187	192	197	202
160	130	135	140	144	149	153	158	162	167	171	176	181	185	190	194
170	126	131	135	140	144	148	153	157	161	166	170	174	179	183	188
180	123	127	132	136	140	144	148	152	157	161	165	169	173	177	181
190	121	125	129	133	137	141	144	148	152	156	160	164	168	172	176

Increase VMBE by 1 knot per 1% uphill runway slope. Decrease VMBE by 4 knots per 1% downhill runway slope.

Increase VMBE by 3 knots per 10 knots headwind. Decrease VMBE by 20 knots per 10 knots tailwind.

Decrease brake release weight by 1150 lbs for each knot V1 exceeds VMBE.

Determine normal V1, VR, V2 speeds for lower brake release weight.

Intentionally
Blank

Performance Dispatch

Enroute

Chapter PD

Section 61

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31500	-7	32500*	32500*	32500*	31300	29800
180	32700	-10	34000*	34000*	34000*	32500	31000
170	33900	-13	35400*	35400*	35300	33700	32200
160	35200	-15	36800*	36800*	36500	35000	33500
150	36500	-17	38000*	38000*	37900	36300	34900
140	38000	-17	39300*	39300*	39300	37800	36300
130	39500	-17	40700*	40700*	40700*	39300	37900
120	41000	-17	41000	41000	41000	41000	39500
110	41000	-17	41000	41000	41000	41000	41000
100	41000	-17	41000	41000	41000	41000	41000
90	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31500	-2	29300*	29300*	29300*	29300*	29300*
180	32700	-4	32300*	32300*	32300*	32300*	31000
170	33900	-7	34200*	34200*	34200*	33700	32200
160	35200	-10	35700*	35700*	35700*	35000	33500
150	36500	-12	37100*	37100*	37100*	36300	34900
140	38000	-12	38300*	38300*	38300*	37800	36300
130	39500	-12	39700*	39700*	39700*	39300	37900
120	41000	-12	41000	41000	41000	41000	39500
110	41000	-12	41000	41000	41000	41000	41000
100	41000	-12	41000	41000	41000	41000	41000
90	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31500	4	22900*	22900*	22900*	22900*	22900*
180	32700	1	23500*	23500*	23500*	23500*	23500*
170	33900	-1	24000*	24000*	24000*	24000*	24000*
160	35200	-4	33300*	33300*	33300*	33300*	33300*
150	36500	-6	35600*	35600*	35600*	35600*	34900
140	38000	-6	37000*	37000*	37000*	37000*	36300
130	39500	-6	38200*	38200*	38200*	38200*	37900
120	41000	-6	39600*	39600*	39600*	39600*	39500
110	41000	-6	41000	41000	41000	41000	41000
100	41000	-6	41000	41000	41000	41000	41000
90	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
273	255	239	224	211	200	191	182	174	167	160
528	497	468	443	421	400	383	367	352	338	326
783	739	698	662	630	600	574	551	529	509	491
1038	980	927	881	839	800	767	735	707	680	656
1293	1222	1157	1100	1048	1000	959	920	885	852	822
1548	1464	1387	1319	1257	1200	1151	1105	1062	1023	988
1803	1706	1617	1538	1466	1400	1343	1290	1240	1195	1153
2057	1948	1847	1757	1675	1600	1535	1474	1418	1366	1319
2312	2189	2076	1976	1884	1800	1727	1659	1596	1538	1484
2567	2431	2306	2194	2093	2000	1919	1844	1774	1709	1650
2822	2673	2536	2413	2302	2200	2111	2028	1952	1881	1816
3077	2915	2765	2632	2511	2400	2303	2213	2129	2052	1981
3332	3156	2995	2851	2721	2600	2495	2398	2307	2223	2147
3587	3398	3225	3070	2930	2800	2688	2583	2485	2395	2312
3842	3640	3455	3289	3139	3000	2880	2767	2663	2566	2477
4097	3882	3685	3508	3348	3200	3071	2951	2840	2737	2643
4352	4124	3915	3727	3557	3400	3263	3136	3017	2908	2808
4608	4366	4145	3946	3766	3600	3455	3320	3195	3080	2974
4863	4608	4375	4165	3975	3800	3647	3505	3373	3251	3139
5118	4850	4605	4384	4184	4000	3840	3690	3551	3423	3305
5373	5092	4834	4603	4393	4200	4032	3875	3729	3594	3471
5628	5333	5064	4822	4602	4400	4224	4059	3906	3766	3636
5883	5576	5294	5041	4812	4600	4416	4244	4084	3937	3802
6138	5818	5524	5260	5021	4800	4608	4429	4262	4108	3967
6393	6060	5754	5479	5230	5000	4800	4613	4440	4279	4132
6648	6302	5983	5698	5439	5200	4992	4798	4617	4451	4298
6903	6543	6213	5917	5648	5400	5184	4982	4795	4622	4463
7158	6785	6443	6136	5857	5600	5376	5167	4972	4793	4629
7413	7027	6673	6355	6066	5800	5568	5351	5150	4964	4794
7668	7269	6903	6574	6276	6000	5760	5536	5328	5136	4959

.80M Trip Fuel and Time**Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	27		29		31		33		35	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.8	0:36	3.8	0:36	3.7	0:36	3.7	0:36	3.7	0:36
400	6.7	1:01	6.5	1:01	6.4	1:02	6.2	1:02	6.1	1:02
600	9.7	1:26	9.3	1:27	9.0	1:27	8.7	1:28	8.5	1:28
800	12.6	1:51	12.1	1:52	11.6	1:53	11.2	1:54	10.9	1:55
1000	15.6	2:16	14.9	2:18	14.3	2:19	13.7	2:20	13.3	2:21
1200	18.6	2:42	17.8	2:43	17.0	2:44	16.3	2:46	15.8	2:47
1400	21.6	3:07	20.6	3:09	19.7	3:10	18.9	3:12	18.3	3:13
1600	24.6	3:32	23.5	3:34	22.4	3:36	21.5	3:37	20.8	3:39
1800	27.6	3:57	26.3	3:59	25.1	4:01	24.1	4:03	23.3	4:05
2000	30.7	4:23	29.2	4:25	27.8	4:27	26.6	4:29	25.8	4:31
2200	33.8	4:48	32.1	4:50	30.6	4:53	29.3	4:55	28.4	4:57
2400	36.8	5:13	35.0	5:16	33.4	5:18	32.0	5:21	31.1	5:24
2600	39.9	5:38	38.0	5:41	36.2	5:44	34.7	5:47	33.7	5:50
2800	43.0	6:04	40.9	6:07	39.0	6:10	37.4	6:13	36.4	6:16
3000	46.1	6:29	43.9	6:32	41.8	6:35	40.2	6:39	39.0	6:42
3200	49.3	6:54	46.9	6:58	44.8	7:01	43.0	7:05	41.9	7:08
3400	52.5	7:19	50.0	7:23	47.7	7:27	45.9	7:30	44.8	7:34
3600	55.7	7:45	53.0	7:49	50.7	7:53	48.8	7:56	47.7	8:00
3800	58.9	8:10	56.0	8:14	53.6	8:18	51.6	8:22	50.6	8:26
4000	62.1	8:35	59.1	8:40	56.5	8:44	54.5	8:48	53.5	8:53
4200	65.4	9:00	62.3	9:05	59.7	9:10				
4400	68.7	9:26	65.5	9:31	62.8	9:35				
4600	72.0	9:51	68.7	9:56	65.9	10:01				
4800	75.3	10:16	71.9	10:22	69.0	10:27				
5000	78.6	10:42	75.1	10:47	72.1	10:53				
5200	82.1	11:07	78.5	11:13						
5400	85.6	11:32	81.9	11:38						
5600	89.1	11:58	85.3	12:04						
5800	92.6	12:23	88.7	12:29						
6000	96.1	12:48	92.1	12:55						

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	LANDING WEIGHT (1000 LB)				
	90	110	130	150	170
10	-0.7	-0.4	0.0	0.6	1.4
20	-1.1	-0.7	0.0	1.1	2.7
30	-1.7	-1.0	0.0	1.8	4.4
40	-2.3	-1.3	0.0	2.6	6.2
50	-3.0	-1.7	0.0	3.6	8.4
60	-3.8	-2.2	0.0	4.7	10.8
70	-4.7	-2.7	0.0	6.0	13.5
80	-5.6	-3.2	0.0	7.4	16.5

Based on 280/.80M climb, .80M Cruise and .80/280/250 descent.

.80M Step Climb Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
1310	1233	1165	1104	1050	1000	955	914	876	841	809
1820	1717	1625	1542	1468	1400	1338	1282	1230	1182	1137
2331	2201	2085	1981	1886	1800	1722	1650	1584	1522	1466
2842	2685	2545	2419	2304	2200	2105	2018	1937	1863	1795
3353	3169	3005	2857	2722	2600	2488	2386	2291	2204	2123
3864	3653	3465	3295	3140	3000	2872	2754	2645	2545	2452
4374	4137	3925	3733	3559	3400	3255	3122	2999	2886	2781
4885	4621	4384	4171	3977	3800	3638	3490	3353	3227	3109
5396	5105	4844	4609	4395	4200	4022	3858	3707	3567	3438
5907	5589	5304	5047	4813	4600	4405	4226	4061	3908	3767
6418	6073	5764	5485	5231	5000	4788	4594	4415	4249	4095
6929	6557	6224	5923	5649	5400	5172	4962	4769	4590	4424
7440	7042	6684	6361	6067	5800	5555	5330	5123	4931	4753
7951	7526	7144	6799	6486	6200	5938	5698	5476	5271	5081
8462	8010	7604	7237	6904	6600	6322	6066	5830	5612	5410
8973	8494	8064	7675	7322	7000	6705	6434	6184	5953	5738

Trip Fuel and Time Required

AIR DIST (NM)	TRIP FUEL (1000 LB)								TIME (HRS:MIN)
	LANDING WEIGHT (1000 LB)								
	90	100	110	120	130	140	150	160	
1000	10.4	10.9	11.5	12.3	13.1	13.8	14.7	15.4	2:21
1400	14.0	14.7	15.7	16.9	17.9	19.0	20.1	21.1	3:13
1800	17.8	18.8	20.1	21.5	22.8	24.3	25.8	27.1	4:05
2200	21.7	22.9	24.5	26.3	28.0	29.7	31.6	33.2	4:57
2600	25.6	27.1	29.1	31.2	33.3	35.3	37.5	39.6	5:49
3000	29.6	31.5	33.9	36.3	38.7	41.1	43.7	46.1	6:41
3400	33.7	36.0	38.7	41.6	44.3	47.1	50.0		7:33
3800	38.0	40.7	43.7	47.0	50.0	53.2	56.6		8:25
4200	42.4	45.4	48.8	52.5	56.0	59.6			9:17
4600	47.0	50.3	54.2	58.2	62.1	66.1			10:09
5000	51.7	55.3	59.6	64.0	68.4				11:00
5400	56.4	60.6	65.2	70.1	74.8				11:52
5800	61.3	66.0	71.0	76.3					12:44
6200	66.4	71.5	77.0	82.8					13:36
6600	71.7	77.1	83.1						14:28
7000	77.1	83.0	89.4						15:21

Based on 280/.80 climb, .80M cruise and .80/280/250 descent.
Valid for all pressure altitudes with 4000 ft step climb to 2000 ft above optimum altitude.

Short Trip Fuel and Time

Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
95	81	70	62	55	50	46	42	39	36	34
161	144	130	118	108	100	93	87	81	77	72
227	206	188	174	161	150	140	132	125	118	112
292	267	246	229	213	200	188	178	168	160	152
355	328	304	284	266	250	236	224	212	202	193
418	387	361	338	318	300	284	270	257	245	234
481	447	418	393	370	350	332	316	301	287	275
544	508	476	447	422	400	380	362	345	330	316
608	568	533	502	475	450	428	408	389	372	357
674	630	592	558	527	500	475	453	433	414	397

Trip Fuel and Time Required

AIR DIST (NM)		LANDING WEIGHT (1000 LB)					TIME (HRS:MIN)
		90	110	130	150	170	
50	FUEL (1000 LB)	1.2	1.3	1.5	1.7	1.8	0:14
	ALT (FT)	11000	11000	9000	9000	7000	
100	FUEL (1000 LB)	1.9	2.1	2.3	2.5	2.7	0:23
	ALT (FT)	19000	17000	17000	17000	15000	
150	FUEL (1000 LB)	2.5	2.8	3.0	3.3	3.5	0:31
	ALT (FT)	25000	25000	23000	21000	21000	
200	FUEL (1000 LB)	3.0	3.3	3.7	4.0	4.3	0:38
	ALT (FT)	29000	27000	27000	25000	25000	
250	FUEL (1000 LB)	3.5	3.9	4.3	4.7	5.1	0:44
	ALT (FT)	39000	35000	31000	29000	27000	
300	FUEL (1000 LB)	3.9	4.4	4.9	5.3	5.8	0:51
	ALT (FT)	41000	39000	35000	33000	31000	
350	FUEL (1000 LB)	4.4	4.9	5.4	6.0	6.5	0:57
	ALT (FT)	41000	39000	37000	35000	31000	
400	FUEL (1000 LB)	4.8	5.4	6.0	6.6	7.2	1:03
	ALT (FT)	41000	41000	37000	35000	31000	
450	FUEL (1000 LB)	5.2	5.9	6.6	7.2	7.9	1:10
	ALT (FT)	41000	41000	37000	35000	31000	
500	FUEL (1000 LB)	5.7	6.4	7.1	7.9	8.7	1:17
	ALT (FT)	41000	41000	37000	35000	33000	

Based on 280/78 climb, Long Range Cruise, and .78/280/250 descent.

Holding Planning
Flaps Up

WEIGHT (1000 LB)	TOTAL FUEL FLOW (LB/HR)								
	PRESSURE ALTITUDE (FT)								
	1500	5000	10000	15000	20000	25000	30000	35000	41000
190	6700	6590	6540	6500	6440	6490	6700		
180	6390	6270	6210	6170	6070	6110	6290		
170	6070	5960	5880	5840	5730	5740	5890	6240	
160	5760	5640	5560	5500	5400	5380	5510	5730	
150	5450	5330	5240	5170	5080	5010	5130	5280	
140	5130	5020	4930	4840	4770	4660	4770	4870	
130	4820	4710	4610	4520	4440	4330	4400	4480	
120	4520	4400	4300	4210	4120	4020	4040	4110	4440
110	4220	4090	3990	3900	3810	3800	3750	3800	4030
100	3910	3780	3750	3650	3560	3490	3440	3440	3620
90	3700	3570	3440	3340	3250	3180	3140	3100	3240

This table includes 5% additional fuel for holding in a racetrack pattern.

Flight Crew Oxygen Requirements
Required Pressure (PSI) for 76 Cubic FT Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	735	1055	1360
45	113	725	1040	1340
40	104	715	1020	1320
35	95	700	1005	1300
30	86	690	990	1280
25	77	680	975	1255
20	68	670	960	1240
15	59	655	940	1215
10	50	645	925	1195
5	41	635	910	1175
0	32	620	890	1150
-5	23	610	875	1130
-10	14	600	860	1110

Required Pressure (PSI) for 114/115 Cubic FT Cylinder

BOTTLE TEMPERATURE		NUMBER OF CREW USING OXYGEN		
°C	°F	2	3	4
50	122	530	735	945
45	113	520	725	930
40	104	510	715	915
35	95	505	700	900
30	86	495	690	885
25	77	485	680	870
20	68	480	670	860
15	59	470	655	840
10	50	460	645	830
5	41	455	635	815
0	32	445	620	800
-5	23	440	610	785
-10	14	430	600	770

ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 LB)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	96.7	93.8	90.5
28	104.7	101.4	98.1
26	113.2	109.5	106.1
24	122.7	118.7	114.8
22	133.6	129.0	124.5
20	145.3	140.0	134.7
18	156.2	150.3	144.1
16	166.8	160.9	154.5
14	176.4	171.0	165.5
12	187.0	180.6	173.7

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 LB)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-4.2	-3.9	-3.9	-3.8	-3.4	-3.2	-2.9	-2.7	-2.4
ENGINE & WING	-16.7	-15.6	-14.7	-14.6	-14.1	-12.8	-11.6	-10.7	

ALL ENGINES

Decompression Critical Fuel Reserves - LRC Cruise
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
284	262	243	227	213	200	189	179	170	162	154
577	530	490	456	426	400	377	356	338	321	306
870	798	737	685	640	600	565	534	506	481	458
1163	1066	984	914	853	800	753	711	674	640	610
1455	1334	1231	1143	1067	1000	941	889	842	800	762
1748	1602	1478	1372	1280	1200	1129	1066	1010	959	913
2041	1870	1725	1601	1494	1400	1317	1244	1178	1119	1065
2334	2138	1972	1830	1707	1600	1505	1421	1346	1278	1217
2627	2406	2219	2059	1921	1800	1693	1599	1514	1438	1369

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)				
	100	120	140	160	180
200	3.7	3.9	4.2	4.4	4.7
300	5.3	5.6	6.0	6.3	6.7
400	6.9	7.3	7.8	8.2	8.7
500	8.5	9.0	9.6	10.1	10.8
600	10.1	10.7	11.4	12.0	12.7
700	11.7	12.4	13.1	13.9	14.7
800	13.3	14.1	14.9	15.7	16.7
900	14.8	15.7	16.6	17.6	18.6
1000	16.4	17.4	18.4	19.4	20.6
1100	17.9	19.0	20.1	21.3	22.5
1200	19.5	20.7	21.9	23.1	24.4
1300	21.0	22.3	23.6	24.9	26.3
1400	22.6	23.9	25.3	26.7	28.2
1500	24.1	25.5	27.0	28.5	30.1
1600	25.6	27.1	28.7	30.3	32.0
1700	27.1	28.8	30.4	32.1	33.9
1800	28.6	30.4	32.1	33.8	35.7

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included.

- Adjustments:
- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
 - Increase fuel required 0.7% per 10°C above ISA.
 - When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (17%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inop-erative driftdown and use the higher of the three.

ENGINE INOP**MAX CONTINUOUS THRUST****Decompression Critical Fuel Reserves - LRC Cruise****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
289	266	245	228	213	200	188	178	169	160	153
586	536	494	458	427	400	376	355	336	319	304
883	807	743	688	641	600	564	532	503	478	455
1179	1077	991	918	855	800	752	709	671	636	605
1476	1348	1240	1148	1069	1000	939	886	838	795	756
1773	1618	1488	1378	1283	1200	1127	1063	1005	954	907
2069	1889	1737	1608	1497	1400	1315	1240	1172	1112	1058
2366	2159	1986	1838	1711	1600	1503	1417	1340	1271	1209
2663	2430	2234	2068	1925	1800	1690	1594	1507	1430	1360

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)				
	100	120	140	160	180
200	3.2	3.5	3.8	4.1	4.3
300	4.7	5.1	5.4	5.8	6.2
400	6.1	6.6	7.1	7.6	8.1
500	7.5	8.1	8.8	9.4	10.0
600	9.0	9.7	10.4	11.2	11.9
700	10.4	11.2	12.1	12.9	13.7
800	11.8	12.7	13.7	14.6	15.6
900	13.2	14.2	15.3	16.3	17.4
1000	14.6	15.7	16.9	18.1	19.2
1100	15.9	17.2	18.5	19.8	21.0
1200	17.3	18.7	20.1	21.5	22.8
1300	18.7	20.2	21.7	23.2	24.6
1400	20.1	21.7	23.3	24.8	26.4
1500	21.4	23.1	24.8	26.5	28.2
1600	22.8	24.5	26.4	28.2	29.9
1700	24.1	26.0	27.9	29.8	31.7
1800	25.4	27.4	29.4	31.5	33.4

Based on: Emergency descent to 10000 ft, level cruise at 10000 ft, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

-Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.

-Increase fuel required 0.7% per 10°C above ISA.

-When icing conditions are forecast, use the greater of engine and wing anti-ice on (7%) for the total forecast time or engine and wing anti-ice on and ice drag (18%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inoperative driftdown and use the higher of the three.

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Critical Fuel Reserves - LRC Driftdown/Cruise
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
268	251	236	222	210	200	190	181	173	165	159
541	505	474	446	422	400	380	362	345	330	317
815	761	713	671	633	600	569	542	517	495	474
1092	1018	953	896	845	800	759	722	689	658	630
1371	1276	1193	1121	1057	1000	948	902	860	822	786
1650	1535	1434	1347	1269	1200	1137	1081	1031	984	942
1930	1794	1676	1572	1481	1400	1327	1261	1201	1147	1098
2209	2053	1917	1798	1693	1600	1516	1440	1372	1310	1254
2488	2311	2158	2023	1905	1800	1705	1620	1543	1473	1410

Critical Fuel (1000 LB)

AIR DIST (NM)	WEIGHT AT CRITICAL POINT (1000 LB)				
	100	120	140	160	180
200	3.3	3.5	3.7	4.0	4.2
300	4.3	4.7	5.1	5.5	5.9
400	5.4	5.9	6.5	7.1	7.6
500	6.4	7.1	7.8	8.6	9.3
600	7.4	8.3	9.2	10.1	11.0
700	8.4	9.4	10.5	11.6	12.7
800	9.4	10.6	11.8	13.1	14.3
900	10.3	11.7	13.1	14.6	16.0
1000	11.3	12.9	14.4	16.0	17.6
1100	12.3	14.0	15.7	17.5	19.2
1200	13.2	15.1	17.0	18.9	20.8
1300	14.1	16.2	18.2	20.3	22.4
1400	15.1	17.3	19.5	21.7	24.0
1500	16.0	18.4	20.7	23.1	25.5
1600	16.9	19.4	22.0	24.5	27.1
1700	17.8	20.5	23.2	25.9	28.6
1800	18.7	21.5	24.4	27.3	30.1

Based on: Driftdown to and cruise at level off altitude, 250 KIAS descent to 1500 ft, 15 minutes hold at 1500 ft, approach and land. Allowance for performance deterioration not included. Includes APU fuel burn.

Adjustments:

- Increase forecast headwind or decrease forecast tailwind by 5% if an acceptable wind forecasting model is used; otherwise, increase diversion fuel by 5% to account for wind errors.
- Increase fuel required 0.7% per 10°C above ISA.
- When icing conditions are forecast, use the greater of the engine and wing anti-ice on (10%) for the total forecast time or engine and wing anti-ice on and ice drag (30%) for 10% of the forecast time.

Compare the critical fuel reserves required for all engines cruise, engine inoperative cruise, and engine inop-erative driftdown and use the higher of the three.

Performance Dispatch Landing

Chapter PD Section 62

Landing Field Limit Weight - Dry Runway

Based on anti-skid operative and automatic speedbrakes

Flaps 40

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000			2720	3000	3220	3440	3660	3880
3400		2770	3100	3400	3630	3860	4080	4310
3800	2780	3130	3470	3800	4040	4270	4510	4740
4200	3120	3480	3850	4200	4440	4690	4930	5180
4600	3460	3840	4220	4600	4850	5100	5360	5610
5000	3800	4200	4600	5000	5260	5520	5780	6040
5400	4140	4560	4980	5400	5670	5940	6200	6470
5800	4480	4920	5350	5800	6080	6350	6630	6900
6200	4820	5270	5730	6200	6480	6770	7050	7340
6600	5160	5630	6100	6600	6890	7180	7480	7770
7000	5500	5990	6480	7000	7300	7600	7900	8200
7400	5840	6350	6850	7400	7710	8020	8320	8630
7800	6180	6700	7230	7800	8120	8430	8750	9060
8200	6520	7060	7610	8200	8520	8850	9170	9500
8600	6760	7300	7850	8600	8930	9260	9600	9930
9000	6970	7500	8050	9000	9340	9680	10020	10360
9400	7190	7700	8250	9400	9750	10100	10440	10790
9800	7400	7900	8450	9800	10160	10510	10870	
10200	7610	8100	8650	10200	10560	10930		
10600	7830	8300	8850	10600	10970			

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
3800	102.3	96.3	90.3			
4200	119.6	113.9	107.0	100.3	94.0	87.9
4600	133.7	127.4	121.4	115.5	108.4	101.4
5000	147.8	140.5	133.6	127.1	120.9	114.7
5400	162.0	153.8	145.8	138.4	131.5	124.8
5800	174.0	166.1	157.5	149.0	141.0	133.6
6200	182.7	176.8	168.4	159.5	150.8	142.4
6600	190.1	184.3	178.5	169.7	160.5	151.6
7000		191.3	185.2	179.1	170.2	160.8
7400			192.0	185.7	179.2	169.8
7800				192.4	185.7	178.5
8200					192.2	184.0
8600						187.3
9000						190.5
9400						193.8

Decrease field limit weight by 12800 lb when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway
Based on anti-skid inoperative and manual speedbrakes
Flaps 40

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
6000				6000	6500	7000	7500	8000
6400				6400	6910	7420	7930	8440
6800			5970	6800	7320	7840	8360	8880
7200			6360	7200	7730	8260	8790	9320
7600		5880	6740	7600	8140	8680	9220	9760
8000		6250	7130	8000	8550	9100	9650	10200
8400	5730	6620	7510	8400	8960	9520	10080	10640
8800	6090	6990	7900	8800	9370	9940	10510	11080
9200	6440	7360	8280	9200	9780	10360	10940	11520
9600	6800	7730	8670	9600	10190	10780	11370	11960
10000	7150	8100	9050	10000	10600	11200	11800	12400
10400	7510	8470	9440	10400	11010	11620	12230	12840
10800	7860	8840	9820	10800	11420	12040	12660	13280
11200	8220	9210	10210	11200	11830	12460	13090	13720
11600	8570	9580	10590	11600	12240	12880	13520	14160
12000	8930	9950	10980	12000	12650	13300	13950	14600
12400	9280	10320	11360	12400	13060	13720	14380	15040
12800	9640	10690	11750	12800	13470	14140	14810	15480
13200	9990	11060	12130	13200	13880	14560	15240	15920
13600	10350	11430	12520	13600	14290	14980	15670	16360

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
6800	89.9					
7200	97.8	91.3				
7600	105.8	98.8	90.8			
8000	113.7	106.3	97.9	91.2		
8400	121.6	113.8	105.0	97.9	91.1	
8800	129.5	121.1	112.1	104.5	97.4	90.4
9200	137.3	128.4	119.0	111.1	103.6	96.3
9600	145.3	135.7	125.8	117.5	109.6	102.0
10000	153.4	143.1	132.6	124.0	115.7	107.7
10400	161.5	150.7	139.4	130.3	121.7	113.4
10800	168.7	158.3	146.4	136.7	127.7	119.0
11200	175.3	165.4	153.5	143.0	133.6	124.6
11600	181.5	171.9	160.1	149.3	139.1	129.8
12000	187.7	178.1	166.7	155.6	144.9	135.0
12400	193.8	184.0	173.2	161.8	150.8	140.2
12800		189.8	179.1	168.0	156.7	145.7
13200			184.7	174.2	162.5	151.2
13600			190.3	179.9	168.4	156.7
14000				185.5	174.2	162.2
14400				191.1	179.9	167.6
14800					185.5	173.1
15200					191.1	178.5
15600						183.9
16000						189.3
16400						194.8

Landing Field Limit Weight - Dry Runway - High Altitudes**Flaps 40****Based on anti-skid operative and automatic speedbrakes****Wind Corrected Field Length (FT)**

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4000		3600	3740	4000	4190	4400	4640	4890
4400	3650	3890	4080	4400	4600	4820	5070	5330
4800	3900	4180	4420	4800	5010	5240	5500	5760
5200	4150	4470	4760	5200	5420	5670	5920	6200
5600	4400	4760	5100	5600	5830	6090	6350	6640
6000	4650	5050	5440	6000	6250	6510	6780	7080
6400	4900	5340	5780	6400	6660	6930	7210	7520
6800	5150	5630	6120	6800	7070	7350	7640	7950
7200	5400	5920	6460	7200	7480	7770	8070	8390
7600	5650	6210	6790	7600	7860	8190	8600	9080
8000	5900	6500	7130	8000	8260	8660	9190	9850
8400	6150	6790	7470	8400	8700	9170	9810	10620
8800	6400	7080	7810	8800	9130	9680	10430	11390
9200	6650	7370	8150	9200	9570	10190	11050	12170
9600	6900	7660	8490	9600	10010	10700	11680	12940
10000	7150	7950	8830	10000	10450	11210	12300	13710
10400	7400	8240	9170	10400	10880	11720	12920	14480
10800	7650	8530	9510	10800	11320	12240	13550	
11200	7900	8820	9840	11200	11760	12750	14170	
11600	8150	9110	10180	11600	12190	13260	14790	

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
4400	94.6	91.5	88.5	85.5		
4800	108.1	104.5	101.1	97.7	94.4	92.7
5200	119.8	116.8	113.5	109.7	106.0	104.1
5600	129.2	125.9	122.5	119.3	116.1	114.3
6000	138.0	134.4	130.8	127.3	123.9	122.2
6400	147.0	142.9	139.0	135.3	131.6	129.8
6800	156.2	151.8	147.5	143.3	139.3	137.3
7200	165.3	160.6	156.1	151.6	147.2	145.0
7600	174.3	169.4	164.6	159.9	155.2	152.9
8000	181.7	178.0	173.0	168.0	163.1	160.7
8400	185.7	182.1	178.6	175.1	171.0	168.4
8800	188.9	185.3	181.7	178.2	174.6	172.8
9200	192.2	188.3	184.7	181.1	177.4	175.6
9600		191.3	187.5	183.8	180.1	178.3
10000		194.2	190.3	186.5	182.8	180.9
10400			193.0	189.0	185.2	183.3
10800				191.5	187.5	185.6
11200				194.0	189.8	187.8
11600					192.1	190.0
12000					194.3	192.1
12400						194.2

Decrease field limit weight by 10100 lb when using manual speedbrakes.

Landing Field Limit Weight - Dry Runway High Altitude
Based on anti-skid inoperative and manual speedbrakes
Flaps 40

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
8000				8000	8580	9170	9760	10350
8400				8400	8990	9590	10190	10790
8800			7910	8800	9400	10000	10620	11230
9200			8290	9200	9810	10420	11040	11670
9600		7770	8680	9600	10220	10840	11470	12110
10000		8140	9070	10000	10630	11260	11900	12550
10400		8520	9450	10400	11040	11680	12330	12990
10800	7960	8890	9840	10800	11450	12100	12760	13440
11200	8320	9270	10230	11200	11860	12520	13190	13880
11600	8680	9640	10610	11600	12260	12940	13620	14320
12000	9050	10020	11000	12000	12670	13360	14050	14760
12400	9410	10390	11390	12400	13080	13780	14480	15200
12800	9770	10770	11770	12800	13490	14200	14910	15640
13200	10140	11140	12160	13200	13900	14610	15340	16080
13600	10500	11520	12550	13600	14310	15030	15770	16520
14000	10860	11890	12940	14000	14720	15450	16200	16960
14400	11230	12270	13320	14400	15130	15870	16630	17400
14800	11590	12640	13710	14800	15540	16290	17060	17840
15200	11950	13020	14100	15200	15950	16710	17490	18280
15600	12320	13390	14480	15600	16360	17130	17920	18720

Landing Field Limit Weight - Dry Runway High Altitude

Based on anti-skid inoperative and manual speedbrakes

Flaps 40

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
8800	90.4	87.6				
9200	96.3	93.2	90.3	87.4		
9600	102.0	98.8	95.6	92.5	89.5	87.9
10000	107.7	104.3	101.0	97.7	94.5	92.8
10400	113.4	109.8	106.3	102.9	99.4	97.7
10800	119.0	115.2	111.6	107.9	104.4	102.5
11200	124.6	120.7	116.8	113.0	109.3	107.4
11600	129.8	125.7	121.7	117.8	113.9	111.9
12000	135.0	130.7	126.6	122.5	118.4	116.4
12400	140.2	135.8	131.4	127.2	123.0	120.8
12800	145.7	140.8	136.3	131.9	127.5	125.3
13200	151.2	146.1	141.1	136.6	132.1	129.8
13600	156.7	151.4	146.3	141.2	136.6	134.2
14000	162.2	156.8	151.5	146.2	141.1	138.7
14400	167.6	162.0	156.6	151.2	145.9	143.2
14800	173.1	167.3	161.7	156.2	150.7	148.0
15200	178.5	172.6	166.8	161.1	155.5	152.7
15600	183.9	177.8	171.9	166.0	160.3	157.4
16000	189.3	183.1	177.0	170.9	165.0	162.1
16400	194.8	188.3	182.0	175.8	169.8	166.7
16800		193.5	187.1	180.8	174.5	171.4
17200			192.2	185.7	179.3	176.0
17600				190.6	184.0	180.7
18000					188.8	185.4
18400					193.5	190.0
18800						194.7

Landing Field Limit Weight - Wet Runway
Based on anti-skid operative and automatic speedbrakes
Flaps 40

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
3000				3000	3240	3490	3730	3980
3400			3080	3400	3650	3900	4160	4410
3800		3090	3460	3800	4060	4320	4580	4840
4200	3050	3440	3830	4200	4470	4740	5000	5270
4600	3390	3800	4210	4600	4880	5150	5430	5700
5000	3730	4160	4590	5000	5280	5570	5850	6140
5400	4070	4520	4960	5400	5690	5980	6280	6570
5800	4410	4870	5340	5800	6100	6400	6700	7000
6200	4750	5230	5710	6200	6510	6820	7120	7430
6600	5090	5590	6090	6600	6920	7230	7550	7860
7000	5430	5950	6460	7000	7320	7650	7970	8300
7400	5770	6310	6840	7400	7730	8060	8400	8730
7800	6110	6660	7220	7800	8140	8480	8820	9160
8200	6450	7020	7590	8200	8550	8900	9240	9590
8600	6790	7380	7970	8600	8960	9310	9670	10020
9000	7130	7740	8340	9000	9360	9730	10090	10460
9400	7470	8090	8720	9400	9770	10140	10520	10890
9800	7730	8350	8980	9800	10180	10560	10940	11320
10200	7940	8550	9180	10200	10590	10980	11360	11750
10600	8150	8750	9380	10600	11000	11390	11790	12180

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
4200	95.5	89.7				
4600	111.7	105.2	98.7	92.5	86.7	
5000	124.9	119.1	113.1	106.0	99.4	92.9
5400	137.0	130.6	124.3	118.3	111.8	104.6
5800	149.4	141.9	134.9	128.3	122.0	115.8
6200	161.7	153.5	145.5	138.1	131.3	124.6
6600	172.2	164.4	155.8	147.4	139.5	132.3
7000	180.6	173.9	165.3	156.5	148.0	139.9
7400	187.0	181.4	174.6	165.5	156.5	147.8
7800	193.5	187.5	181.6	174.3	165.0	155.8
8200		193.5	187.4	181.3	173.3	163.7
8600			193.3	187.0	180.5	171.6
9000				192.8	186.2	178.9
9400					191.8	183.7
9800						186.7
10200						189.5
10600						192.3

Decrease field limit weight by 12800 lb when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway
Based on anti-skid inoperative and manual speedbrakes
Flaps 40
Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
6000					6550	7100	7660	8210
6400					6960	7520	8090	8650
6800				6800	7370	7950	8520	9090
7200				7200	7780	8370	8950	9530
7600			6650	7600	8190	8780	9380	9970
8000			7040	8000	8600	9200	9810	10410
8400		6450	7420	8400	9010	9630	10240	10850
8800		6820	7810	8800	9420	10040	10670	11290
9200		7190	8190	9200	9830	10470	11100	11730
9600	6540	7560	8580	9600	10240	10890	11530	12170
10000	6890	7930	8960	10000	10650	11310	11960	12610
10400	7250	8300	9350	10400	11060	11730	12390	13050
10800	7600	8670	9730	10800	11470	12150	12820	13490
11200	7960	9040	10120	11200	11880	12560	13250	13930
11600	8310	9410	10500	11600	12290	12980	13680	14370
12000	8670	9780	10890	12000	12700	13400	14110	14810
12400	9020	10150	11270	12400	13110	13830	14540	15250
12800	9380	10520	11660	12800	13520	14240	14970	15690
13200	9730	10890	12040	13200	13930	14660	15400	16130
13600	10090	11260	12430	13600	14340	15090	15830	16570

Field Limit Weight (1000 LB)

WIND CORR'D FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
7600	86.2					
8000	93.0	86.7				
8400	99.9	93.2	85.5			
8800	106.8	99.8	91.7	85.4		
9200	113.7	106.3	97.9	91.2		
9600	120.6	112.8	104.1	97.0	90.3	
10000	127.5	119.2	110.2	102.8	95.8	88.9
10400	134.3	125.6	116.3	108.5	101.2	94.0
10800	141.0	131.9	122.2	114.2	106.5	99.0
11200	148.1	138.3	128.2	119.8	111.7	104.0
11600	155.2	144.7	134.1	125.4	117.0	109.0
12000	162.1	151.4	140.0	130.9	122.2	113.9
12400	168.4	158.0	146.1	136.4	127.4	118.7
12800	174.2	164.2	152.3	141.9	132.6	123.6
13200	179.7	169.9	158.1	147.4	137.4	128.2
13600	185.0	175.6	163.9	152.9	142.3	132.7
14000	190.3	180.7	169.5	158.3	147.5	137.3
14400		185.7	175.0	163.7	152.6	141.8
14800		190.8	180.0	169.1	157.7	146.6
15200			184.9	174.4	162.8	151.4
15600			189.8	179.4	167.9	156.2
16000			194.6	184.3	172.9	161.0
16400				189.2	177.9	165.7
16800				194.0	182.8	170.5
17200					187.7	175.2
17600					192.6	179.9

Landing Field Limit Weight - Wet Runway High Altitude
Based on anti-skid operative and automatic speedbrakes
Flaps 40

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
4000					4200	4430	4690	4970
4400				4400	4610	4850	5120	5400
4800		4280	4480	4800	5030	5270	5550	5840
5200	4290	4580	4810	5200	5440	5690	5980	6280
5600	4540	4870	5150	5600	5850	6120	6410	6720
6000	4780	5150	5490	6000	6260	6540	6840	7150
6400	5030	5450	5830	6400	6670	6960	7260	7590
6800	5280	5740	6170	6800	7080	7380	7690	8030
7200	5530	6020	6510	7200	7490	7800	8120	8470
7600	5790	6320	6850	7600	7900	8220	8550	8910
8000	6040	6610	7190	8000	8310	8640	8980	9340
8400	6280	6900	7530	8400	8720	9060	9410	9780
8800	6540	7190	7860	8800	9090	9480	9970	10560
9200	6780	7470	8200	9200	9500	9950	10560	11330
9600	7040	7760	8540	9600	9940	10470	11190	12100
10000	7290	8060	8880	10000	10370	10980	11810	12870
10400	7540	8350	9220	10400	10810	11490	12430	13640
10800	7790	8640	9560	10800	11250	12000	13060	14410
11200	8040	8930	9900	11200	11690	12510	13680	15190
11600	8280	9210	10240	11600	12120	13020	14300	15960

Field Limit Weight (1000 LB)

WIND CORRD FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
4800	87.0					
5200	98.8	95.5	92.3	89.2	86.3	
5600	110.4	106.8	103.3	99.8	96.4	94.7
6000	120.3	117.2	113.9	110.2	106.4	104.6
6400	128.5	125.1	121.8	118.6	115.3	113.5
6800	136.1	132.5	129.0	125.6	122.2	120.5
7200	143.8	139.9	136.2	132.5	128.9	127.1
7600	151.8	147.5	143.4	139.4	135.6	133.7
8000	159.8	155.3	150.9	146.6	142.3	140.2
8400	167.6	162.9	158.3	153.8	149.3	147.1
8800	175.4	170.5	165.7	160.9	156.3	153.9
9200	181.7	178.0	173.0	168.0	163.1	160.7
9600	185.2	181.7	178.1	174.3	170.0	167.4
10000	188.1	184.5	180.9	177.4	173.8	172.0
10400	190.9	187.2	183.6	179.9	176.3	174.5
10800	193.7	189.7	186.1	182.4	178.8	176.9
11200		192.3	188.5	184.8	181.1	179.2
11600		194.8	190.9	187.0	183.3	181.4
12000			193.3	189.2	185.4	183.5
12400				191.4	187.4	185.5
12800				193.6	189.4	187.5
13200					191.4	189.3
13600					193.3	191.2
14000						193.0
14400						194.9

Decrease field limit weight by 10100 lb when using manual speedbrakes.

Landing Field Limit Weight - Wet Runway High Altitude

Based on anti-skid inoperative and manual speedbrakes

Flaps 40

Wind Corrected Field Length (FT)

FIELD LENGTH AVAILABLE (FT)	WIND COMPONENT (KTS)							
	-15	-10	-5	0	10	20	30	40
8000						9280	9930	10580
8400					9050	9700	10360	11020
8800				8800	9460	10120	10790	11460
9200				9200	9870	10540	11220	11900
9600				9600	10280	10960	11650	12340
10000			8980	10000	10690	11380	12080	12780
10400			9360	10400	11100	11800	12510	13220
10800			9750	10800	11510	12220	12940	13670
11200		9090	10140	11200	11910	12640	13370	14110
11600		9460	10520	11600	12320	13060	13800	14550
12000	8770	9830	10910	12000	12730	13480	14230	14990
12400	9130	10210	11300	12400	13140	13890	14660	15430
12800	9500	10580	11680	12800	13550	14310	15090	15870
13200	9860	10960	12070	13200	13960	14730	15520	16310
13600	10220	11330	12460	13600	14370	15150	15950	16750
14000	10590	11710	12840	14000	14780	15570	16370	17190
14400	10950	12080	13230	14400	15190	15990	16800	17630
14800	11310	12460	13620	14800	15600	16410	17230	18070
15200	11680	12830	14010	15200	16010	16830	17660	18510
15600	12040	13210	14390	15600	16420	17250	18090	18950

Field Limit Weight (1000 LB)

WIND CORRID FIELD LENGTH (FT)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
10000	88.9	86.1				
10400	94.0	91.0	88.2	85.4		
10800	99.0	95.9	92.8	89.9	86.9	85.3
11200	104.0	100.7	97.5	94.3	91.2	89.6
11600	109.0	105.5	102.2	98.8	95.5	93.8
12000	113.9	110.3	106.8	103.3	99.9	98.1
12400	118.7	115.0	111.3	107.7	104.1	102.3
12800	123.6	119.7	115.9	112.1	108.4	106.5
13200	128.2	124.2	120.2	116.3	112.5	110.5
13600	132.8	128.6	124.5	120.4	116.4	114.4
14000	137.3	132.9	128.7	124.5	120.4	118.3
14400	141.8	137.3	132.9	128.6	124.4	122.2
14800	146.6	141.7	137.1	132.7	128.3	126.1
15200	151.4	146.3	141.4	136.8	132.3	130.0
15600	156.2	151.0	145.8	140.8	136.2	133.9
16000	161.0	155.6	150.3	145.1	140.1	137.7
16400	165.7	160.2	154.8	149.5	144.2	141.6
16800	170.5	164.8	159.3	153.8	148.4	145.7
17200	175.2	169.4	163.7	158.1	152.6	149.8
17600	179.9	174.0	168.1	162.4	156.8	153.9
18000	184.6	178.5	172.5	166.7	160.9	158.0
18400	189.3	183.1	177.0	170.9	165.0	162.1
18800	194.1	187.6	181.4	175.2	169.2	166.1
19200		192.2	185.8	179.5	173.3	170.2
19600			190.2	183.8	177.4	174.2

Landing Climb Limit Weight

Valid for approach with flaps 15 and landing with flaps 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)						
		AIRPORT PRESSURE ALTITUDE (FT)						
(°C)	(°F)	-2000	0	2000	4000	6000	8000	10000
54	129	148.9	140.3					
52	126	151.6	144.0					
50	122	154.4	147.7	136.2				
48	118	157.3	150.5	139.8				
46	115	160.3	153.3	143.3	132.0			
44	111	163.2	155.9	145.8	135.2			
42	108	166.1	158.7	148.4	138.5	127.0		
40	104	169.1	161.5	151.0	140.9	129.9		
38	100	172.0	164.5	153.7	143.3	132.8	121.0	
36	97	174.8	167.3	156.3	146.0	135.3	123.1	
34	93	177.6	170.3	159.3	148.7	137.6	125.1	115.0
32	90	177.8	173.5	162.0	151.1	139.7	127.5	117.4
30	86	178.0	176.5	164.4	152.9	141.7	129.7	119.6
28	82	178.2	176.7	166.4	154.6	143.6	131.7	121.5
26	79	178.4	176.9	168.4	156.1	144.8	133.6	123.4
24	75	178.5	177.0	168.5	157.3	145.8	135.2	124.7
22	72	178.7	177.2	168.6	158.5	146.9	136.2	125.8
20	68	178.8	177.3	168.7	158.6	147.9	137.1	126.8
18	64	179.0	177.4	168.8	158.6	148.8	137.9	127.6
16	61	179.2	177.6	168.9	158.7	148.9	138.7	128.3
14	57	179.3	177.7	169.0	158.8	149.0	139.5	129.1
12	54	179.5	177.8	169.1	158.9	149.0	139.6	129.9
10	50	179.6	178.0	169.2	158.9	149.1	139.6	130.7
-40	-40	181.2	179.2	170.3	160.1	150.0	140.5	131.9

With engine bleed for packs off, increase weight by 2700 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 3100 lb.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 24700 lb.

Landing Climb Limit Weight - High Altitudes**Valid for approach with flaps 15 and landing with flaps 40****Based on engine bleed for packs on and anti-ice off**

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
(°C)	(°F)	10000	11000	12000	13000	14000	14500
34	93	115.0					
32	90	117.4	112.3				
30	86	119.6	114.5	109.7			
28	82	121.5	116.5	111.7	107.0		
26	79	123.4	118.1	113.5	108.7	105.2	
24	75	124.7	119.6	114.9	110.3	106.0	103.9
22	72	125.8	120.8	116.1	111.3	106.8	104.7
20	68	126.8	121.8	117.1	112.3	107.6	105.5
18	64	127.6	122.6	117.8	113.1	108.5	106.2
16	61	128.3	123.4	118.6	113.8	109.2	106.9
14	57	129.1	124.1	119.3	114.6	109.8	107.6
12	54	129.9	124.9	120.1	115.3	110.5	108.2
10	50	130.7	125.7	120.9	116.1	111.3	108.9
-40	-40	131.9	128.7	125.4	121.2	116.9	114.8

With engine bleed for packs off, increase weight by 2800 lb.**With engine anti-ice on, decrease weight by 3600 lb.****With engine and wing anti-ice on, decrease weight by 5700 lb.****When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 16000 lb.**

ENGINE INOP

ADVISORY INFORMATION

Go-Around Climb Gradient

Flaps 15

Based on engine bleed for packs on and anti-ice off

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	0	2000	4000	6000	8000	10000
54	3.29					
50	3.98	2.90				
46	4.50	3.57	2.51			
42	5.02	4.05	3.12	2.05		
38	5.55	4.54	3.58	2.59	1.50	
34	6.09	5.05	4.05	3.04	1.89	0.96
30	6.65	5.53	4.45	3.42	2.31	1.38
26	6.69	5.89	4.74	3.70	2.66	1.73
22	6.71	5.91	4.97	3.89	2.90	1.95
18	6.74	5.93	4.98	4.07	3.07	2.12
14	6.76	5.95	4.99	4.08	3.22	2.27
10	6.78	5.96	5.01	4.09	3.23	2.40

Gradient Adjustment for Weight (%)

WEIGHT (1000 LB)	REFERENCE GO-AROUND GRADIENT (%)							
	0	1	2	3	4	5	6	7
190	-2.81	-3.19	-3.55	-3.89	-4.23	-4.56	-4.90	-5.25
180	-2.49	-2.82	-3.15	-3.46	-3.76	-4.05	-4.34	-4.64
170	-2.12	-2.42	-2.70	-2.97	-3.22	-3.48	-3.72	-3.97
160	-1.70	-1.93	-2.16	-2.39	-2.61	-2.82	-3.02	-3.20
150	-1.22	-1.39	-1.55	-1.71	-1.87	-2.02	-2.16	-2.29
140	-0.67	-0.75	-0.84	-0.93	-1.02	-1.10	-1.18	-1.24
130	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
120	0.74	0.85	0.95	1.05	1.14	1.25	1.35	1.46
110	1.63	1.86	2.09	2.31	2.52	2.74	2.97	3.21
100	2.73	3.11	3.48	3.84	4.21	4.58	4.96	5.35

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)												
	0	1	2	3	4	5	6	7	8	9	10	11	12
VREF	-0.25	-0.26	-0.27	-0.28	-0.28	-0.28	-0.29	-0.29	-0.29	-0.28	-0.28	-0.27	-0.26
VREF+5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VREF+10	0.13	0.14	0.14	0.14	0.14	0.14	0.13	0.13	0.12	0.11	0.10	0.09	0.07
VREF+15	0.21	0.21	0.21	0.21	0.21	0.20	0.19	0.18	0.17	0.16	0.14	0.12	0.10
VREF+20	0.23	0.22	0.21	0.20	0.19	0.18	0.17	0.16	0.14	0.13	0.11	0.09	0.07
VREF+25	0.18	0.16	0.14	0.12	0.10	0.08	0.07	0.05	0.04	0.03	0.01	0.00	0.00
VREF+30	0.08	0.03	-0.01	-0.04	-0.07	-0.10	-0.12	-0.13	-0.14	-0.15	-0.15	-0.15	-0.14

- With engine bleed for packs off, increase gradient by 0.2%.
- With engine anti-ice on, decrease gradient by 0.3%.
- With engine and wing anti-ice on, decrease gradient by 0.5%.
- With operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease gradient by 1.4%.

ENGINE INOP**ADVISORY INFORMATION****Go-Around Climb Gradient - High Altitude****Flaps 15****Based on engine bleed for packs on and anti-ice off**

OAT (°C)	REFERENCE GO-AROUND GRADIENT (%)					
	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	15000
34	0.96					
30	1.38	0.91	0.48			
26	1.73	1.25	0.83	0.40		
22	1.95	1.50	1.08	0.65	0.25	
18	2.12	1.67	1.24	0.82	0.41	0.02
14	2.27	1.81	1.38	0.96	0.54	0.14
10	2.40	1.96	1.52	1.09	0.67	0.26
6	2.42	2.07	1.67	1.24	0.81	0.40
2	2.43	2.12	1.81	1.38	0.95	0.53
-2	2.44	2.14	1.84	1.47	1.07	0.66

Gradient Adjustment for Weight (%)

WEIGHT (1000 LB)	REFERENCE GO-AROUND GRADIENT (%)			
	0	1	2	3
180	-2.49	-2.82	-3.15	-3.46
170	-2.12	-2.42	-2.70	-2.97
160	-1.70	-1.93	-2.16	-2.39
150	-1.22	-1.39	-1.55	-1.71
140	-0.67	-0.75	-0.84	-0.93
130	0.00	0.00	0.00	0.00
120	0.74	0.85	0.95	1.05
110	1.63	1.86	2.09	2.31
100	2.73	3.11	3.48	3.84

Gradient Adjustment for Speed (%)

SPEED (KIAS)	WEIGHT ADJUSTED GO-AROUND GRADIENT (%)							
	0	1	2	3	4	5	6	7
VREF	-0.25	-0.26	-0.27	-0.28	-0.28	-0.28	-0.29	-0.29
VREF+5	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
VREF+10	0.13	0.14	0.14	0.14	0.14	0.14	0.13	0.13
VREF+15	0.21	0.21	0.21	0.21	0.21	0.20	0.19	0.18
VREF+20	0.23	0.22	0.21	0.20	0.19	0.18	0.17	0.16
VREF+25	0.18	0.16	0.14	0.12	0.10	0.08	0.07	0.05
VREF+30	0.08	0.03	-0.01	-0.04	-0.07	-0.10	-0.12	-0.13

With engine bleed for packs off, increase gradient by 0.2%.**With engine anti-ice on, decrease gradient by 0.6%.****With engine and wing anti-ice on, decrease gradient by 0.8%.****With operating in icing conditions during any part of the flight with the forecast landing temperature below 10°C, decrease gradient by 1.4%.**

Quick Turnaround Limit Weight - Category H Steel Brakes
Flaps 40

OAT		QUICK TURNAROUND LIMIT WEIGHT (1000 LB)						
		AIRPORT PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
54	129	185.3	179.2					
50	122	186.4	180.3	174.2				
45	113	187.8	181.6	175.5	169.0			
40	104	189.4	183.1	176.8	170.4	163.5		
35	95	189.9	184.5	178.2	171.8	164.9	158.1	
30	86	189.9	186.0	179.6	173.2	166.3	159.4	152.7
25	77	189.9	187.5	181.1	174.6	167.7	160.8	154.0
20	68	189.9	189.1	182.6	176.0	169.1	162.2	155.3
15	59	189.9	189.9	184.1	177.4	170.6	163.6	156.7
10	50	189.9	189.9	185.6	178.9	172.2	165.1	158.1
5	41	189.9	189.9	187.2	180.5	173.7	166.6	159.6
0	32	189.9	189.9	188.9	182.1	175.3	168.2	161.1
-5	23	189.9	189.9	189.9	183.7	176.8	169.8	162.6
-10	14	189.9	189.9	189.9	185.4	178.4	171.4	164.2
-15	5	189.9	189.9	189.9	187.1	180.2	173.1	165.8
-20	-4	189.9	189.9	189.9	189.0	182.0	174.8	167.5
-30	-22	189.9	189.9	189.9	189.9	185.7	178.3	170.9
-40	-40	189.9	189.9	189.9	189.9	189.7	182.3	174.6
-50	-58	189.9	189.9	189.9	189.9	189.9	186.5	178.5
-54	-65	189.9	189.9	189.9	189.9	189.9	188.2	180.2

Increase weight by 1700 lb per 1% uphill slope. Decrease weight by 2600 lb per 1% downhill slope.
Increase weight by 4100 lb per 10 knots headwind. Decrease weight by 17000 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate temperature, without artificial cooling, is less than 218°C as follows:

No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category P Carbon Brakes Flaps 40

OAT		LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	166.9					
50	122	167.9	161.8				
45	113	169.2	163.1	156.5			
40	104	170.5	164.4	157.8	151.4		
35	95	171.8	165.7	159.1	152.7	146.3	
30	86	173.2	167.1	160.5	154.0	147.6	141.3
25	77	174.6	168.4	161.8	155.3	148.9	142.5
20	68	176.0	169.8	163.2	156.6	150.2	143.8
15	59	177.4	171.3	164.7	158.0	151.5	145.1
10	50	178.8	172.8	166.2	159.5	152.9	146.4
5	41	180.3	174.3	167.7	160.9	154.3	147.8
0	32	181.9	175.8	169.2	162.4	155.7	149.2
-5	23	183.5	177.3	170.8	163.9	157.2	150.6
-10	14	185.1	178.8	172.4	165.5	158.7	152.0
-15	5	186.7	180.4	174.1	167.1	160.3	153.5
-20	-4	188.5	182.1	175.8	168.8	161.9	155.1
-30	-22	190.0	185.5	179.1	172.3	165.3	158.3
-40	-40	190.0	189.4	182.7	176.0	168.8	161.7
-50	-58	190.0	190.0	186.5	179.7	172.7	165.4
-54	-65	190.0	190.0	188.0	181.3	174.2	166.9

Increase weight by 1400 lb per 1% uphill slope. Decrease weight by 2700 lb per 1% downhill slope.

Increase weight by 3700 lb per 10 knots headwind. Decrease weight by 18400 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category H Steel Brakes - High Altitudes Flaps 40

AIRPORT OAT	QUICK TURN AROUND LIMIT WEIGHT (1000 LB)						
	AIRPORT PRESSURE ALTITUDE (FT)						
°C	°F	10000	11000	12000	13000	14000	14500
30	86	152.7	149.4	146.1			
25	77	154.0	150.7	147.4	144.2		
20	68	155.3	152.0	148.7	145.4	142.2	140.6
15	59	156.7	153.4	150.0	146.7	143.5	141.8
10	50	158.1	154.8	151.4	148.1	144.8	143.1
5	41	159.6	156.2	152.8	149.5	146.1	144.4
0	32	161.1	157.6	154.2	150.9	147.5	145.8
-5	23	162.6	159.1	155.7	152.3	148.9	147.2
-10	14	164.2	160.7	157.2	153.8	150.4	148.7
-15	5	165.8	162.3	158.8	155.3	151.9	150.1
-20	-4	167.5	163.9	160.4	156.9	153.4	151.6
-25	-13	169.2	165.6	162.0	158.5	155.0	153.2
-30	-22	170.9	167.3	163.7	160.1	156.6	154.8
-35	-31	172.7	169.1	165.4	161.8	158.2	156.4
-40	-40	174.6	170.9	167.2	163.6	159.9	158.1
-45	-49	176.5	172.8	169.1	165.4	161.7	159.9
-50	-58	178.5	174.7	171.0	167.2	163.5	161.7
-54	-65	180.2	176.3	172.5	168.8	165.0	163.2

Increase weight by 1500 lb per 1% uphill slope. Decrease weight by 2300 lb per 1% downhill slope.

Increase weight by 3500 lb per 10 knots headwind. Decrease weight by 14800 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 67 minutes and check that wheel thermal plugs have not melted before executing a subsequent takeoff.

As an alternate procedure, ensure that each brake pressure plate surface temperature, without artificial cooling, is less than 218°C as follows: No sooner than 10 and no later than 15 minutes after parking, measure each brake pressure plate surface temperature at a minimum of two points per brake by an accurate method (using a Doric Microtemp 450 hand held thermometer or equivalent, hold temperature probe in place for 20 seconds or until reading stabilizes). If each measured temperature is less than 218°C, immediate dispatch is allowed; otherwise the required minimum ground wait period of 67 minutes applies.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 67 minutes after landing, or until all the BTMS readings on the systems Display are below 3.5 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Quick Turnaround Limit Weight - Category P Carbon Brakes - High Altitudes**Flaps 40**

OAT (°C)	LIMIT WEIGHT (1000 LB)					
	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
30	141.3	138.4	135.5			
25	142.5	139.5	136.6	133.7		
20	143.8	140.7	137.8	134.9	132.0	130.5
15	145.1	142.0	139.0	136.0	133.1	131.6
10	146.4	143.3	140.2	137.2	134.3	132.8
5	147.8	144.6	141.5	138.5	135.5	134.0
0	149.2	146.0	142.8	139.7	136.7	135.2
-5	150.6	147.4	144.2	141.0	138.0	136.5
-10	152.0	148.8	145.6	142.4	139.3	137.8
-15	153.5	150.3	147.0	143.8	140.6	139.1
-20	155.1	151.8	148.5	145.2	142.0	140.4
-25	156.7	153.3	150.0	146.7	143.5	141.8
-30	158.3	154.9	151.6	148.3	145.0	143.3
-35	160.0	156.6	153.2	149.9	146.5	144.9
-40	161.7	158.3	154.9	151.5	148.1	146.4
-45	163.5	160.0	156.6	153.2	149.8	148.1
-50	165.4	161.8	158.4	154.9	151.5	149.8
-54	166.9	163.3	159.8	156.4	152.9	151.1

Increase weight by 1300 lb per 1% uphill slope. Decrease weight by 2000 lb per 1% downhill slope.

Increase weight by 3300 lb per 10 knots headwind. Decrease weight by 14100 lb per 10 knots tailwind.

After landing at weights exceeding those shown above, adjusted for slope and wind, wait at least 48 minutes and check that wheel thermal plugs have not melted before executing a takeoff.

If a Brake Temperature Monitoring System (BTMS) is installed:

No sooner than 10 and no later than 15 minutes after parking, check the BRAKE TEMP light. If the BRAKE TEMP light is not on, no ground waiting period is required. If the BRAKE TEMP light is on, do not dispatch until at least 48 minutes after landing, or until all the BTMS readings on the systems Display are below 3.0 and the BRAKE TEMP light is off. Check that wheel thermal plugs have not melted before making a subsequent takeoff.

Note: If any brake temperature display digit is blank or indicates 0.0 or 0.1, then this method cannot be used.

Intentionally
Blank

Performance Dispatch

Gear Down

Chapter PD

Section 63

GEAR DOWN

Takeoff Climb Limit Weight

Flaps 5

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		TAKEOFF CLIMB WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0	2000	4000	6000	8000	10000
54	129	137.5	129.6	122.3	114.1	102.5	
52	126	140.4	129.6	122.3	114.8	104.7	
50	122	143.5	130.2	122.3	114.8	106.7	95.4
48	118	146.8	133.3	122.1	114.8	106.9	97.4
46	115	149.9	136.2	123.0	114.8	106.9	99.2
44	111	153.0	139.1	125.8	114.6	106.9	100.5
42	108	155.8	142.1	128.7	115.5	106.9	100.5
40	104	158.7	145.0	131.6	118.3	106.7	100.3
38	100	161.8	147.9	134.4	121.0	107.5	100.3
36	97	164.4	150.5	137.1	123.8	110.4	100.3
34	93	167.3	153.4	139.7	126.5	113.0	101.1
32	90	170.6	156.0	142.4	129.1	115.7	103.8
30	86	173.7	159.3	145.2	131.8	118.3	106.4
28	82	176.5	162.7	148.1	134.4	121.0	109.1
26	79	176.8	166.0	151.2	137.3	123.6	111.7
24	75	176.8	166.8	154.3	139.9	126.5	114.6
22	72	177.0	167.1	156.0	142.8	129.1	117.2
20	68	177.0	167.1	156.3	145.2	131.8	119.9
18	64	177.2	167.1	156.3	145.9	134.4	122.3
16	61	177.2	167.3	156.5	146.1	135.8	123.2
14	57	177.4	167.3	156.5	146.1	136.4	123.8
12	54	177.4	167.5	156.5	146.1	136.4	124.7
10	50	177.6	167.5	156.7	146.3	136.6	125.4
-40	-40	178.7	168.4	157.6	147.7	138.0	126.5

With engine bleeds for packs off, increase weight by 600 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 11700 lb (optional system).

GEAR DOWN

Landing Climb Limit Weight

Valid for approach with Flaps 15 and landing with Flaps 40

Based on engine bleed for packs on and anti-ice off

AIRPORT OAT		LANDING CLIMB LIMIT WEIGHT (1000 LB)					
		AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	0.0	2000.0	4000.0	6000.0	8000.0	10000.0
54	129	129.7					
52	126	133.1					
50	122	136.4	125.9				
48	118	139.0	129.2				
46	115	141.5	132.4	121.9			
44	111	144.0	134.7	124.9			
42	108	146.6	137.1	127.9	117.3		
40	104	149.3	139.4	130.2	120.0		
38	100	151.9	141.9	132.4	122.7	111.7	
36	97	154.5	144.3	134.8	124.9	113.6	
34	93	157.3	147.1	137.2	127.1	115.6	106.2
32	90	160.1	149.6	139.4	129.0	117.8	108.4
30	86	162.8	151.8	141.0	130.8	119.8	110.5
28	82	163.0	153.7	142.6	132.6	121.6	112.2
26	79	163.1	155.4	144.0	133.6	123.3	113.9
24	75	163.3	155.5	145.1	134.6	124.8	115.1
22	72	163.4	155.6	146.2	135.5	125.6	116.0
20	68	163.5	155.7	146.3	136.4	126.5	117.0
18	64	163.6	155.8	146.4	137.3	127.2	117.7
16	61	163.8	155.9	146.4	137.3	128.0	118.4
14	57	163.9	156.0	146.5	137.4	128.7	119.1
12	54	164.0	156.1	146.6	137.4	128.8	119.9
10	50	164.1	156.2	146.6	137.5	128.8	120.5
-40	-40	165.2	157.2	147.8	138.3	129.6	121.7

With engine bleed for packs off, increase weight by 2700 lb.

With engine anti-ice on, decrease weight by 500 lb.

With engine and wing anti-ice on, decrease weight by 2800 lb.

When operating in icing conditions during any part of the flight with forecast landing temperature below 10°C, decrease weight by 24200 lb.

GEAR DOWN**Takeoff Obstacle Limit Weight****Flaps 5****Sea Level, 30°C & Below, Zero Wind****Based on engine bleed for packs on and anti-ice off****Reference Obstacle Limit Weight (1000 LB)**

OBSTACLE HEIGHT (FT)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)								
	DISTANCE FROM BRAKE RELEASE (1000 FT)								
	8	10	12	14	16	18	20	22	24
10	162.7								
50	151.2	166.0	175.8						
100	141.2	155.3	165.5	173.0					
150	133.7	147.2	157.5	165.3	171.2	175.5			
200	127.5	140.5	150.8	158.8	165.0	170.0	173.8	176.8	
250	122.1	134.9	145.1	153.2	159.7	164.9	169.1	172.5	175.2
300	117.3	130.0	140.0	148.2	154.9	160.3	164.7	168.4	171.4
350	112.9	125.6	135.6	143.7	150.5	156.1	160.7	164.5	167.8
400	109.0	121.5	131.5	139.7	146.5	152.2	156.9	161.0	164.4
450	105.4	117.8	127.8	136.0	142.7	148.5	153.4	157.6	161.2
500	102.1	114.4	124.3	132.5	139.3	145.2	150.2	154.4	158.1
550	99.0	111.2	121.1	129.3	136.2	142.0	147.1	151.4	155.2
600	96.1	108.2	118.1	126.3	133.2	139.1	144.1	148.6	152.5
650	93.3	105.4	115.2	123.4	130.3	136.3	141.4	145.9	149.8
700	90.8	102.8	112.5	120.7	127.7	133.6	138.8	143.3	147.3
750		100.3	110.0	118.2	125.1	131.1	136.3	140.8	144.9
800		97.9	107.6	115.7	122.7	128.7	133.9	138.5	142.6
850		95.6	105.3	113.4	120.4	126.4	131.7	136.3	140.4
900		93.5	103.1	111.2	118.2	124.2	129.5	134.2	138.3
950		91.4	101.0	109.1	116.1	122.1	127.4	132.1	136.3
1000			99.0	107.1	114.0	120.1	125.4	130.1	134.3

Obstacle height must be calculated from lowest point of the runway to conservatively account for runway slope.

OAT Adjustments

OAT (°C)	REFERENCE OBSTACLE LIMIT WEIGHT (1000 LB)									
	90	100	110	120	130	140	150	160	170	180
30 & BELOW	0	0	0	0	0	0	0	0	0	0
32	-1.3	-1.5	-1.7	-1.9	-2.1	-2.3	-2.5	-2.7	-2.8	-3.0
34	-2.7	-3.0	-3.4	-3.8	-4.2	-4.6	-4.9	-5.3	-5.7	-6.1
36	-4.0	-4.6	-5.1	-5.7	-6.3	-6.8	-7.4	-8.0	-8.5	-9.1
38	-5.3	-6.1	-6.8	-7.6	-8.4	-9.1	-9.9	-10.6	-11.4	-12.1
40	-6.7	-7.6	-8.5	-9.5	-10.4	-11.4	-12.3	-13.3	-14.2	-15.2
42	-8.0	-9.1	-10.2	-11.4	-12.5	-13.6	-14.7	-15.8	-17.0	-18.1
44	-9.4	-10.6	-11.9	-13.2	-14.5	-15.8	-17.1	-18.4	-19.7	-21.0
46	-10.7	-12.2	-13.6	-15.1	-16.5	-18.0	-19.5	-20.9	-22.4	-23.8
48	-12.1	-13.7	-15.3	-16.9	-18.6	-20.2	-21.8	-23.5	-25.1	-26.7
50	-13.4	-15.2	-17.0	-18.8	-20.6	-22.4	-24.2	-26.0	-27.8	-29.6

GEAR DOWN

Takeoff Obstacle Limit Weight

Flaps 5

Sea Level, 30°C & Below, Zero Wind

Based on engine bleed for packs on and anti-ice off

Pressure Altitude Adjustments

ALT (FT)	OAT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)									
	90	100	110	120	130	140	150	160	170	180
S.L. & BELOW	0	0	0	0	0	0	0	0	0	0
1000	-3.6	-4.0	-4.4	-4.8	-5.2	-5.6	-6.0	-6.4	-6.8	-7.2
2000	-7.3	-8.1	-8.9	-9.7	-10.5	-11.3	-12.1	-12.9	-13.7	-14.5
3000	-9.9	-11.0	-12.2	-13.3	-14.5	-15.6	-16.8	-17.9	-19.1	-20.2
4000	-12.5	-14.0	-15.5	-17.0	-18.5	-20.0	-21.5	-23.0	-24.5	-26.0
5000	-15.6	-17.4	-19.2	-21.0	-22.8	-24.6	-26.4	-28.2	-30.1	-31.9
6000	-18.6	-20.8	-22.9	-25.0	-27.1	-29.2	-31.4	-33.5	-35.6	-37.8
7000	-21.6	-24.1	-26.6	-29.1	-31.6	-34.0	-36.5	-39.0	-41.5	-44.0
8000	-24.7	-27.5	-30.3	-33.2	-36.0	-38.8	-41.7	-44.5	-47.3	-50.2
9000	-27.7	-30.9	-34.2	-37.4	-40.6	-43.8	-47.0	-50.2	-53.5	-56.7
10000	-30.8	-34.4	-38.0	-41.6	-45.2	-48.8	-52.4	-56.0	-59.6	-63.2

Wind Adjustments

WIND (KTS)	OAT & ALT ADJUSTED OBSTACLE LIMIT WEIGHT (1000 LB)									
	90	100	110	120	130	140	150	160	170	180
15 TW	-10.4	-11.4	-12.5	-13.6	-14.6	-15.7	-16.7	-17.8	-18.9	-19.9
10 TW	-6.9	-7.6	-8.3	-9.0	-9.7	-10.5	-11.2	-11.9	-12.6	-13.3
5 TW	-3.5	-3.8	-4.2	-4.5	-4.9	-5.2	-5.6	-5.9	-6.3	-6.6
0	0	0	0	0	0	0	0	0	0	0
10 HW	2.4	2.2	2.1	2.0	1.9	1.8	1.6	1.5	1.4	1.2
20 HW	4.8	4.5	4.2	4.0	3.8	3.5	3.2	3.0	2.8	2.5
30 HW	7.1	6.8	6.4	6.0	5.6	5.2	4.9	4.5	4.1	3.8
40 HW	9.5	9.0	8.5	8.0	7.5	7.0	6.5	6.0	5.5	5.0

With engine bleed for packs off, increase weight by 500 lb.

With engine anti-ice on, decrease weight by 4300 lb.

With engine and wing anti-ice on, decrease weight by 16300 lb (optional system).

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	14400	11200	8200
180	16900	14100	11000
170	19600	16800	14000
160	22000	19400	16700
150	24300	22200	19300
140	26500	25000	22400
130	28800	27300	25500
120	30800	29700	28100
110	32700	31700	30500
100	34700	33700	32600
90	36900	35900	34800

GEAR DOWN

Long Range Cruise Trip Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT(KTS)				
100	80	60	40	20		20	40	60	80	100
323	288	259	236	217	200	187	175	165	156	148
483	432	389	354	325	300	280	263	247	234	222
642	575	518	471	433	400	374	351	330	312	296
800	718	646	589	542	500	468	438	412	390	370
957	859	774	706	650	600	561	526	495	468	444
1113	1000	902	823	758	700	655	615	578	546	519
1268	1140	1029	940	865	800	749	703	661	625	593
1422	1280	1156	1056	973	900	843	791	745	704	668
1576	1419	1283	1173	1081	1000	937	879	828	783	743
1729	1558	1410	1289	1189	1100	1031	968	911	862	818
1881	1697	1536	1405	1296	1200	1125	1056	995	941	894
2033	1835	1662	1521	1404	1300	1218	1145	1079	1020	969
2184	1972	1788	1637	1511	1400	1313	1233	1162	1100	1045
2334	2109	1913	1753	1619	1500	1407	1322	1246	1179	1121
2483	2245	2038	1868	1726	1600	1501	1411	1330	1259	1197
2632	2381	2163	1984	1833	1700	1595	1500	1414	1339	1273
2780	2517	2287	2099	1940	1800	1689	1589	1499	1419	1349
2927	2652	2411	2214	2047	1900	1784	1678	1583	1499	1426
3074	2786	2535	2328	2154	2000	1878	1767	1668	1579	1502

GEAR DOWN**Long Range Cruise Trip Fuel and Time****Reference Fuel and Time Required**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	10		14		20		24	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	6.3	0:50	6.0	0:49	5.7	0:47	5.6	0:46
300	9.3	1:13	8.8	1:10	8.2	1:07	7.9	1:05
400	12.2	1:36	11.6	1:32	10.7	1:26	10.3	1:23
500	15.3	1:58	14.4	1:53	13.3	1:45	12.7	1:41
600	18.3	2:20	17.3	2:13	15.9	2:05	15.1	2:00
700	21.4	2:41	20.2	2:34	18.5	2:24	17.6	2:18
800	24.6	3:03	23.1	2:55	21.1	2:42	20.1	2:36
900	27.7	3:24	26.1	3:15	23.8	3:01	22.6	2:54
1000	30.9	3:46	29.1	3:35	26.5	3:20	25.2	3:11
1100	34.2	4:07	32.1	3:55	29.3	3:38	27.8	3:29
1200	37.4	4:27	35.2	4:15	32.0	3:56	30.4	3:47
1300	40.8	4:48	38.3	4:34	34.8	4:15		
1400	44.1	5:09	41.4	4:54	37.6	4:33		
1500	47.5	5:29	44.6	5:13	40.5	4:51		
1600	50.9	5:49	47.8	5:32	43.4	5:08		
1700	54.4	6:09	51.0	5:51	46.3	5:26		
1800	57.9	6:28	54.3	6:10	49.3	5:44		
1900	61.5	6:48	57.6	6:28				
2000	65.0	7:07	61.0	6:47				

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	LANDING WEIGHT (1000 LB)				
	90	110	130	150	170
5	-0.9	-0.5	0.0	0.5	1.0
10	-1.6	-0.8	0.0	0.9	1.8
15	-2.4	-1.2	0.0	1.3	2.6
20	-3.2	-1.6	0.0	1.7	3.5
25	-4.0	-2.0	0.0	2.2	4.3
30	-4.7	-2.4	0.0	2.6	5.1
35	-5.5	-2.7	0.0	3.0	5.9
40	-6.3	-3.1	0.0	3.4	6.7
45	-7.0	-3.5	0.0	3.8	7.5
50	-7.8	-3.9	0.0	4.2	8.3
55	-8.6	-4.3	0.0	4.6	9.1
60	-9.4	-4.7	0.0	5.0	9.9
65	-10.1	-5.1	0.0	5.4	10.7
70	-10.9	-5.5	0.0	5.8	11.5

Based on VREF40 + 70 climb, Long Range Cruise and VREF40 + 70 descent.

GEAR DOWN

Holding Planning
Flaps Up

WEIGHT (1000 LB)	TOTAL FUEL FLOW (LB/HR)							
	PRESSURE ALTITUDE (FT)							
	1500	5000	10000	15000	20000	25000	30000	35000
190	10100	10040	10020	10100				
180	9580	9520	9470	9520	9600			
170	9070	9000	8940	8960	9000			
160	8580	8500	8430	8420	8430			
150	8100	8000	7930	7890	7870	8000		
140	7630	7520	7440	7370	7330	7400		
130	7170	7040	6950	6870	6810	6830	7170	
120	6700	6580	6470	6390	6300	6300	6480	
110	6230	6130	6000	5920	5810	5790	5890	
100	5770	5670	5560	5450	5330	5280	5360	5600
90	5330	5230	5130	5020	4900	4810	4870	4950

This table includes 5% additional fuel for holding in a racetrack pattern.

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Net Level Off Weight

PRESSURE ALTITUDE (1000 FT)	LEVEL OFF WEIGHT (1000 LB)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
30	96.7	93.8	90.5
28	104.7	101.4	98.1
26	113.2	109.5	106.1
24	122.7	118.7	114.8
22	133.6	129.0	124.5
20	145.3	140.0	134.7
18	156.2	150.3	144.1
16	166.8	160.9	154.5
14	176.4	171.0	165.5
12	187.0	180.6	173.7

Anti-Ice Adjustments

ANTI-ICE CONFIGURATION	LEVEL OFF WEIGHT ADJUSTMENT (1000 LB)								
	PRESSURE ALTITUDE (1000 FT)								
	12	14	16	18	20	22	24	26	28
ENGINE ONLY	-4.2	-3.9	-3.9	-3.8	-3.4	-3.2	-2.9	-2.7	-2.4
ENGINE & WING	-16.7	-15.6	-14.7	-14.6	-14.1	-12.8	-11.6	-10.7	

Intentionally
Blank

Performance Dispatch**Text****Chapter PD****Section 64**

Introduction

This chapter contains self dispatch performance data intended primarily for use by flight crews in the event that information cannot be obtained from the airline dispatch office. The takeoff data provided is for a single takeoff flap at max takeoff thrust. The range of conditions covered is limited to those normally encountered in airline operation. In the event of conflict between the data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

Takeoff

The maximum allowable takeoff weight will be the least of the Field, Climb and Obstacle Limit Weights as determined from the tables shown. Tire and Brake Energy Limits are not shown as they are not limiting for the range of conditions shown in this chapter.

The maximum allowable takeoff weight will be the least of the Field, Climb, Obstacle, and Brake Energy Limit Weights as determined from the tables shown. Tire Speed Limits are not shown as they are not limiting for the range of conditions shown in this chapter.

Field Limit Weight - Slope and Wind Corrections

These tables for dry and wet runways provide corrections to the field length available for the effects of runway slope and wind component along the runway. Enter the appropriate table with the available field length and runway slope to determine the slope corrected field length. Next enter the appropriate table with slope corrected field length and wind component to determine the slope and wind corrected field length.

Field and Climb Limit Weight

Tables are presented for selected airport pressure altitudes and runway conditions and show both Field and Climb Limit Weights. Enter the appropriate table for pressure altitude and runway condition with "Slope and Wind Corrected Field Length" determined above and airport OAT to obtain Field Limit Weight. Also read Climb Limit Weight for the same OAT. Intermediate altitudes may be interpolated or use next higher

altitude. When finding a maximum weight for a wet runway, the dry runway limit weight must also be determined and the lower of the two weights used.

Obstacle Limit Weight

The Reference Obstacle Limit Weight table provides obstacle limit weights for reference airport conditions based on obstacle height above the runway surface and distance from brake release. Enter the adjustment tables to adjust the reference Obstacle Limit Weight for the effects of OAT, pressure altitude and wind as indicated. In the case of multiple obstacles, enter the tables successively with each obstacle and determine the most limiting weight.

Brake Energy Limit VMBE

The Maximum Brake Energy Speed table provides the Reference VMBE for a variety of airport pressure altitudes and temperatures. Enter the Weight Adjusted VMBE table to adjust the Reference VMBE for the actual brake release gross weight. Correct VMBE for slope and wind. If V1 exceeds VMBE, decrease brake release weight as indicated for each knot that V1 exceeds VMBE and determine V1, VR, and V2 for the lower brake release weight.

Enroute

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. Note that this table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Trip Fuel and Time

.80M Trip Fuel and Time tables are provided to determine trip time and fuel required to destination.

To determine trip fuel and time for a constant altitude cruise, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with

air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the planned landing weight to obtain the adjustment to the fuel required at the planned landing weight.

.80M Step Climb Trip Fuel and Time

.80M Step Climb Trip Fuel and Time tables are provided to determine trip time and fuel required to destination when flying a step climb profile. Step climb profiles are based on 4000 ft step climbs to keep the flight within 2000 ft of the optimum altitude for the current cruise weight. To determine trip fuel and time, enter the Ground to Air Miles Conversion table and determine air distance as discussed above. Then enter the Trip Fuel and Time Required table with air distance and planned landing weight to read trip fuel. Continue across the table to read trip time.

Short Trip Fuel and Time

These tables are provided to determine trip fuel and time for short distances or alternates. Obtain air distance from the table using the ground distance and wind component to the alternate. Enter the Trip Fuel and Time Required table with air distance and read trip fuel required for the expected landing weight, together with time to alternate at right. For distances greater than shown or other altitudes, use the .80M Trip Fuel and Time tables.

Holding Planning

This table provides total fuel flow information necessary for planning flaps up holding and reserve fuel requirements. Data is based on the FMC holding speed schedule which is the higher of the maximum endurance and flaps up maneuver speeds. As noted, the fuel flow is based on flight in a racetrack holding pattern. For holding in straight and level flight, reduce table values by 5%.

Flight Crew Oxygen Requirements

Regulations require that sufficient oxygen be provided to the flight crew to account for the greater of supplemental breathing oxygen in the event of a cabin depressurization or protective breathing in the event of smoke or harmful fumes in the flight deck. The oxygen quantity associated with the above requirements is achieved with the minimum dispatch oxygen cylinder pressure.

To determine the minimum dispatch oxygen cylinder pressure enter the appropriate flight crew oxygen table with the number of crew plus observers using oxygen and read the minimum cylinder pressure required for the appropriate cylinder temperature.

Net Level Off Weight

The Net Level Off Weight table is provided to determine terrain clearance capability in straight and level flight following an engine failure.

Regulations require terrain clearance planning based on net performance which is the gross (or actual) gradient performance degraded by 1.1%. In addition, the net level off pressure altitude must clear the terrain by 1000 ft.

To determine the maximum weight for terrain clearance, enter the table with required net level off pressure altitude and expected ISA deviation to obtain weight. Adjust weight for anti-ice operation as noted below the table.

| Extended Range Operations

ETOPS regulations require that flights conducted over a route that contains a point further than one hour's time at "normal one-engine-inoperative speed" from an adequate airport comply with rules specific to extended operations for airplanes with two or more engines. This section provides reserve fuel planning information for the "Critical Fuel Diversion Scenario".

ETOPS regulations require reserve planning to include a "Critical Fuel Diversion Scenario" calculation. The information shown is the fuel required to satisfy the flight profile as described below the charts. This information is shown for all engines operating and one engine inoperative at Long Range Cruise (LRC). There are two engine-inoperative scenarios, a decompression scenario and a driftdown scenario. The decompression scenario assumes an engine failure, loss of pressurization, emergency descent, and subsequent cruise at 10000 ft. The driftdown scenario assumes an engine failure without loss of pressurization, where the airplane "drifts down" to the thrust limited level-off altitude for the remainder of the diversion.

The ETOPS critical fuel required is the greater of the all-engine fuel or the engine-inoperative fuel. The ETOPS critical fuel required is compared to the amount of fuel that is predicted to be onboard the airplane at the critical point. If the fuel required by the ETOPS critical fuel reserves of the route exceeds the amount of fuel predicted, the fuel load must be adjusted accordingly. The data does not include an allowance for performance

deterioration. However, regulations require a 5% allowance for performance deterioration, unless a value has been established by the operator for in-service deterioration.

To determine the ETOPS critical fuel required, enter the Ground to Air Mile Conversion table with the forecast wind (factored if applicable) and ground distance to the diversion airport from the critical point to obtain the air distance. Then enter the Critical Fuel table with air distance and expected weight at the critical point and read the required fuel. Apply the noted fuel adjustments for non-standard conditions, as necessary. When using a wind forecasting model acceptable to the FAA (such as the World Area Forecast System, WAFS), regulations allow the wind factor applied in this step to be 5% of the forecast wind (increase headwinds, decrease tailwinds), as indicated in the note below the chart. However, if a FAA-acceptable wind forecasting model is not used, the ETOPS critical fuel must be increased by 5%, instead of factoring the forecast winds.

Critical Fuel Reserves

Enter the Ground to Air Miles Conversion table with forecast wind and ground distance to diversion airport from critical point to obtain air distance. Now enter the Critical Fuel table with air distance and expected weight at the critical point and read required fuel. Apply the noted fuel adjustments as necessary. Regulations require a 5% allowance for performance deterioration unless a value has been established by the operator for inservice deterioration.

As noted below each table, the fuel required is the greater of the two engine fuel and the single engine fuel. This fuel is compared to the amount of fuel normally onboard the airplane at that point in the route. If the fuel required by the critical fuel reserves exceeds the amount of fuel normally expected, the fuel load must be adjusted accordingly.

Landing

Tables are provided for determining the maximum landing weight as limited by field length or climb requirements for a single landing flap.

Maximum landing weight is the lowest of the field length limit weight, climb limit weight, or maximum certified landing weight.

Landing Field Limit Weight

For the expected runway condition and anti-skid system configuration, obtain wind corrected field length by entering the Wind Corrected Field Length table with field length available and wind component along the runway. Now enter the Field Limit Weight table with wind corrected field length and pressure altitude to read field limit weight.

Landing Climb Limit Weight

Enter the table with airport OAT and pressure altitude to read landing climb limit weight. Apply the noted adjustments as required.

Go-Around Climb Gradient

Enter the Reference Go-Around Gradient table with airport OAT and pressure altitude to determine the reference go-around gradient. Then adjust the reference gradient for airplane weight and speed using the tables provided to determine the weight and speed adjusted go-around gradient. Apply the necessary corrections for engine bleed configuration and icing conditions as noted.

Quick Turnaround Limit Weight

Enter the appropriate table (Steel or Carbon Brakes) with airport pressure altitude and OAT to read maximum quick turnaround weight. Apply the noted adjustments as required.

If the landing weight exceeds the maximum quick turnaround weight, wait the specified time and then check that the wheel thermal plugs have not melted before executing a subsequent takeoff. For Steel Brakes, the alternate procedures on the charts can be used to ensure the brake temperature is within limits. These procedures cannot be used for carbon brakes.

Gear Down

This section provides flight planning data for revenue operation with gear down. Unless otherwise noted, the gear down tables in this section are identical in format and usage to the corresponding gear up tables previously described.

To eliminate erroneous displays the flight crew should enter only gross weight data on the PERF INIT page of the Control Display Unit (CDU). Omission of the cost index and cruise altitude entries on the PERF INIT page will render the VNAV function unavailable during flight. As a result, the following information will not be provided: VNAV guidance and speed

schedules, trip fuel and ETA predictions, optimum and maximum altitude data, step climb and top of descent predictions, and the VNAV descent guidance path.

The gross weight entry allows the FMCS takeoff and approach speed schedules to be generated. In addition, the flap maneuver speed and VREF speed bugs will be available for display on the primary flight display speed tape. Except for VNAV, normal autopilot and autothrottle modes will remain available for use during the flight, as will the LNAV mode.

Takeoff/Landing Climb Limit Weight

Enter the appropriate table with airport OAT and pressure altitude to determine Takeoff/Landing Climb Limit Weight with gear down. Correct the weight obtained for engine bleed configuration as required.

Intentionally
Blank

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Performance Inflight

Chapter PI

Table of Contents

737-700BBJW CFM56-7B27B3 KG FAA CATF/M - - PI.10.1
737-700BBJW CFM56-7B27B3 LB FAA CATF/M - - PI.20.1
737-800BBJW CFM56-7B27B3 KG FAA CATC/N - - PI.30.1
737-800BBJW CFM56-7B27B3 LB FAA CATC/N - - PI.40.1
737-900ERBBJ CFM56-7B27B3 KG FAA CATH/P - PI.50.1
737-900ERBBJ CFM56-7B27B3 LB FAA CATH/P - PI.60.1

Intentionally
Blank

Performance Inflight**Chapter PI****Table of Contents****Section 10****737-700BBJW CFM56-7B27B3 KG FAA CATF/M**

General	PI.10.1
Takeoff Speeds - Dry Runway	PI.10.1
Takeoff Speeds - Dry Runway - High Altitudes	PI.10.4
Takeoff Speeds - Wet Runway	PI.10.5
Takeoff Speeds - Wet Runway - High Altitudes	PI.10.7
Maximum Allowable Clearway	PI.10.8
Maximum Allowable Clearway - High Altitudes	PI.10.8
Clearway and Stopway V1 Adjustments	PI.10.8
Clearway and Stopway V1 Adjustments - High Altitudes	PI.10.8
Stab Trim Setting	PI.10.9
VREF	PI.10.10
Flap Maneuver Speeds	PI.10.11
Slush/Standing Water Takeoff	PI.10.12
Slippery Runway Takeoff	PI.10.20
Takeoff %N1	PI.10.28
Takeoff %N1 - High Altitudes	PI.10.28
Assumed Temperature Reduced Thrust	PI.10.29
Assumed Temperature Reduced Thrust - High Altitudes	PI.10.30
Takeoff Speeds - Dry Runway (26K Derate)	PI.10.32
Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)	PI.10.34
Takeoff Speeds - Wet Runway (26K Derate)	PI.10.35
Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)	PI.10.37
Maximum Allowable Clearway (26K Derate)	PI.10.38
Clearway and Stopway V1 Adjustments (26K Derate) ...	PI.10.38
Stab Trim Setting (26K Derate)	PI.10.38
Slush/Standing Water Takeoff (26K Derate)	PI.10.40

Slippery Runway Takeoff (26K Derate)	PI.10.48
Takeoff %N1 - (26K Derate)	PI.10.56
Assumed Temperature Reduced Thrust - (26K Derate) ...	PI.10.57
Takeoff Speeds - Dry Runway (24K Derate)	PI.10.60
Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)	PI.10.62
Takeoff Speeds - Wet Runway (24K Derate)	PI.10.63
Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)	PI.10.65
Maximum Allowable Clearway (24K Derate)	PI.10.66
Clearway and Stopway V1 Adjustments (24K Derate) ...	PI.10.66
Stab Trim Setting (24K Derate)	PI.10.66
Slush/Standing Water Takeoff (24K Derate)	PI.10.68
Slippery Runway Takeoff (24K Derate)	PI.10.76
Takeoff %N1 (24K Derate)	PI.10.84
Assumed Temperature Reduced Thrust (24K Derate) ...	PI.10.85
Max Climb %N1	PI.10.88
Go-around %N1	PI.10.89
Flight With Unreliable Airspeed/ Turbulent Air Penetration	PI.10.91
All Engine	PI.11.1
.80M Maximum Operating Altitude	PI.11.1
.80M Cruise Control	PI.11.2
.80M Enroute Fuel and Time - Low Altitudes	PI.11.3
.80M Enroute Fuel and Time - High Altitudes	PI.11.5
.80M Wind-Altitude Trade	PI.11.7
Descent	PI.11.7
Holding	PI.11.8
Advisory Information	PI.12.1
Normal Configuration Landing Distances	PI.12.1
Non-Normal Configuration Landing Distance	PI.12.4
Recommended Brake Cooling Schedule	PI.12.12

Engine Inoperative	PI.13.1
Initial Max Continuous %N1	PI.13.1
Max Continuous %N1	PI.13.2
Driftdown Speed/Level Off Altitude	PI.13.6
Driftdown/LRC Cruise Range Capability	PI.13.7
Long Range Cruise Altitude Capability	PI.13.8
Long Range Cruise Control	PI.13.9
Long Range Cruise Diversion Fuel and Time	PI.13.10
Holding	PI.13.11
Alternate Mode EEC	PI.14.1
Alternate Mode EEC Limit Weight	PI.14.1
Alternate Mode EEC Max Takeoff %N1	PI.14.1
Alternate Mode EEC Max Takeoff %N1 (26K Derate)	PI.14.3
Gear Down	PI.15.1
Long Range Cruise Altitude Capability	PI.15.1
Long Range Cruise Control	PI.15.2
Long Range Cruise Enroute Fuel and Time	PI.15.3
Descent	PI.15.4
Holding	PI.15.5
Gear Down, Engine Inoperative	PI.16.1
Driftdown Speed/Level Off Altitude	PI.16.1
Long Range Cruise Altitude Capability	PI.16.1
Long Range Cruise Control	PI.16.2
Long Range Cruise Diversion Fuel and Time	PI.16.3
Holding	PI.16.4
Text	PI.17.1
Introduction	PI.17.1
General	PI.17.1
All Engines	PI.17.7
Advisory Information	PI.17.8
Engine Inoperative	PI.17.10
Alternate Mode EEC	PI.17.12
Gear Down	PI.17.13

Intentionally
Blank

Performance Inflight

General

Chapter PI

Section 10

Takeoff Speeds - Dry Runway

Flaps 1 and 5

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
80	148	152	159	144	148	155
76	144	147	155	140	144	151
72	139	142	151	136	139	148
68	135	137	147	131	134	144
64	129	133	143	126	130	140
60	124	127	138	121	124	135
56	118	121	134	115	119	131
52	112	116	129	109	113	126
48	106	109	124	104	107	121
44	100	103	118	98	101	115
40	94	97	113	91	94	110

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 58967 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10		-2	0	2	4	6	8	10		-2	0	2	4	6	8	10	
70	158	8	9							6	7							-1	-1						
60	140	6	7	9	10					4	6	7	8					-1	0	0	0				
50	122	3	4	6	7	9	12	14		3	4	5	7	8	10	12		-1	0	0	0	0	0		-1
40	104	1	2	4	6	7	10	12		1	2	4	5	7	9	11		0	0	0	0	0	0	0	
30	86	0	0	2	4	6	8	10		0	0	2	4	6	7	9		0	0	0	0	0	0	0	
20	68	0	0	2	3	5	7	9		0	0	2	3	5	6	8		0	0	0	0	0	1	1	
-60	-76	0	0	2	3	5	7	9		0	0	2	3	5	6	8		0	0	0	0	0	1	1	

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
80	-3	-1	0	2	3		-2	-1	0	0	0	1	1	1
72	-3	-1	0	1	2		-2	-1	0	0	0	1	1	1
64	-2	-1	0	1	2		-2	-1	0	0	0	1	1	2
56	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	2
48	-1	-1	0	1	1		-2	-1	-1	0	0	1	1	2
40	-1	0	0	1	1		-3	-2	-1	0	1	1	2	2

*V1 not to exceed VR

Takeoff Speeds - Dry Runway
Flaps 1 and 5
V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Flaps 10, 15 and 25
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
88	146	149	155	145	146	152			
84	142	145	152	141	142	148	139	140	146
80	138	141	148	137	138	145	135	136	143
76	134	137	144	133	134	142	131	132	140
72	130	133	141	129	130	139	127	128	137
68	126	129	138	125	126	136	123	125	134
64	122	125	135	120	122	132	119	121	131
60	117	120	131	115	118	129	114	116	127
56	112	115	127	111	113	125	109	111	123
52	107	110	123	106	108	121	104	107	119
48	102	105	119	101	103	117	99	102	115
44	96	99	114	95	98	112	94	96	111
40	90	94	109	89	92	108	88	91	107

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 58967 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	6	7						4	5						-3	-3					
60	140	5	5	6	7				3	4	5	6				-2	-2	-3	-3			
50	122	3	3	5	6	7	9	10	2	3	4	4	5	6	8	-1	-1	-2	-2	-3	-4	-5
40	104	1	2	3	4	5	7	9	1	1	3	3	4	6	7	-1	-1	-1	-2	-2	-3	-4
30	86	0	0	2	3	4	6	7	0	0	2	3	4	5	6	0	0	-1	-1	-2	-2	-3
20	68	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-3
-60	-76	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2

Takeoff Speeds - Dry Runway**Flaps 10, 15 and 25****Slope and Wind V1 Adjustments***

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)								
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40	
88	-3	-1	0	1	3	-2	-1	-1	0	0	1	1	1	
80	-3	-1	0	1	2	-2	-1	-1	0	0	1	1	1	
72	-2	-1	0	1	2	-2	-1	-1	0	0	1	1	1	
64	-2	-1	0	1	2	-2	-1	-1	0	0	1	1	1	
56	-2	-1	0	1	1	-2	-1	-1	0	0	1	1	1	
48	-1	-1	0	1	1	-2	-1	-1	0	0	1	1	2	
40	-1	-1	0	0	1	-2	-2	-1	0	0	1	1	2	

*V1 not to exceed VR

V1(MCG)**Max Takeoff Thrust**

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Dry Runway - High Altitudes**V1, VR, V2 for Max Takeoff Thrust**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	154	154	156												
70	148	149	152	145	145	148									
65	142	143	146	138	139	142	132	133	136						
60	134	136	140	131	132	136	125	126	130	121	122	127	121	121	126
55	126	128	133	123	125	130	118	119	124	116	116	121	115	115	120
50	118	120	126	116	118	123	111	112	118	110	110	116	108	108	114
45	110	112	119	108	110	116	103	104	111	101	103	109	101	101	108
40	102	104	112	99	101	109	94	96	105	91	94	103	93	93	102

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 46085 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5			
50	122	6						5						0								
40	104	4	5	6	7	8	8	3	4	5	6	7	7	0	0	1	1	1	1			
30	86	2	3	4	5	6	7	2	3	4	4	5	6	0	0	1	1	1	1			
20	68	0	2	3	4	5	5	1	2	2	3	4	5	0	0	1	1	1	1			
10	50	0	1	2	3	4	5	0	1	2	3	4	4	0	0	1	1	1	1			
0	32	0	1	2	3	4	4	0	1	1	2	3	3	0	0	1	1	1	1			
-60	-76	0	1	2	3	4	4	0	1	1	2	3	3	0	0	1	1	1	1			

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-3	-2	0	0	0		-1	-1	0	0	0	0	0	0
70	-3	-2	0	0	0		-1	-1	0	0	0	0	0	0
65	-2	-1	0	1	1		-1	-1	0	0	0	0	0	1
60	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
55	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
50	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
45	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
40	-1	-1	0	0	1		-1	-1	0	0	0	1	1	1

*V1 not to exceed VR

V1(MCG)**Max Takeoff Thrust**

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	99					
40	104	99	98	96	95	95	94
30	86	100	98	96	95	95	94
20	68	103	101	99	97	95	94
10	50	104	102	100	99	97	96
0	32	104	103	102	100	98	97
-60	-76	105	104	103	101	99	98

Takeoff Speeds - Wet Runway

Flaps 1 and 5

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
88	152	161	167	148	157	163
84	147	156	163	143	153	159
80	142	152	159	138	148	155
76	136	147	155	133	144	151
72	132	142	151	128	139	148
68	126	137	147	123	134	144
64	121	133	143	118	130	140
60	115	127	138	112	124	135
56	109	121	134	106	119	131
52	103	116	129	100	113	126
48	97	109	124	94	107	121
44	90	103	118	88	101	115
40	83	97	113	81	94	110

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 58967 kg may be limited.

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	10	12						6	7						-1	-1								
60	140	7	9	11	12				4	6	7	8				-1	0	0	0						
50	122	4	6	7	9	11	14	17	3	4	5	7	8	10	12	-1	0	0	0	0	0	-1			
40	104	1	3	5	7	9	12	14	1	2	4	5	7	9	11	0	0	0	0	0	0	0			
30	86	0	0	3	5	7	10	12	0	0	2	4	6	7	9	0	0	0	0	0	0	0			
20	68	0	0	2	4	6	8	11	0	0	2	3	5	6	8	0	0	0	0	0	1	1			
-60	-76	0	0	2	4	6	8	11	0	0	2	3	5	6	8	0	0	0	0	0	1	1			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
88	-5	-3	0	3	5		-4	-2	-1	0	1	1	2	2
80	-5	-2	0	2	5		-4	-2	-1	0	1	1	2	3
72	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
64	-4	-2	0	2	4		-4	-2	-1	0	1	2	2	3
56	-3	-1	0	2	3		-4	-3	-1	0	1	2	3	3
48	-2	-1	0	1	3		-5	-3	-1	0	1	2	3	4
40	-2	-1	0	1	2		-5	-3	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Wet Runway
Flaps 10, 15 and 25
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
88	141	149	155	141	146	152			
84	137	145	152	136	142	148	134	140	146
80	132	141	148	131	138	145	129	136	143
76	127	137	144	126	134	142	125	132	140
72	123	133	141	122	130	139	121	128	137
68	118	129	138	118	126	136	116	125	134
64	114	125	135	113	122	132	111	121	131
60	109	120	131	107	118	129	106	116	127
56	103	115	127	102	113	125	101	111	123
52	98	110	123	97	108	121	96	107	119
48	92	105	119	91	103	117	90	102	115
44	86	99	114	86	98	112	85	96	111
40	80	94	109	80	92	108	78	91	107

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 58967 kg may be limited.

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	9	10						4	5						-3	-3								
60	140	6	7	9	10				3	4	5	6				-2	-2	-3	-3						
50	122	4	5	6	7	9	12	14	2	3	4	4	5	6	8	-1	-1	-2	-2	-3	-4	-5			
40	104	1	2	4	5	7	9	11	1	1	3	3	4	6	7	-1	-1	-1	-2	-2	-3	-4			
30	86	0	0	2	4	6	7	10	0	0	2	3	4	5	6	0	0	-1	-1	-2	-2	-3			
20	68	0	0	2	3	5	7	9	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-3			
-60	-76	0	0	2	3	5	7	9	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
88	-5	-2	0	2	4		-4	-3	-1	0	0	1	2	2
80	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	2
72	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
64	-3	-2	0	2	3		-4	-2	-1	0	1	2	2	3
56	-3	-1	0	1	3		-4	-3	-1	0	1	2	2	3
48	-3	-1	0	1	2		-4	-3	-1	0	1	2	3	3
40	-2	-1	0	1	2		-5	-3	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Wet Runway - High Altitudes

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	148	154	156												
70	142	149	152	138	145	148									
65	135	143	146	131	139	142	126	133	136						
60	127	136	140	123	132	136	118	126	130	118	122	127	117	121	126
55	119	128	133	116	125	130	111	119	124	110	116	121	109	115	120
50	110	120	126	108	118	123	103	112	118	103	110	116	101	108	114
45	102	112	119	99	110	116	95	104	111	94	103	109	93	101	108
40	92	104	112	90	101	109	86	96	105	86	94	103	85	93	102

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 46085 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	9						5						0					
40	104	5	6	8	9	10	10	3	4	5	6	7	7	0	0	1	1	1	1
30	86	2	4	5	6	8	8	2	3	4	4	5	6	0	0	1	1	1	1
20	68	1	2	3	5	6	7	1	2	2	3	4	5	0	0	1	1	1	1
10	50	0	1	2	3	5	6	0	1	2	3	4	4	0	0	1	1	1	1
0	32	0	1	2	3	4	5	0	1	1	2	3	3	0	0	1	1	1	1
-60	-76	0	1	2	3	4	5	0	1	1	2	3	3	0	0	1	1	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40		
75	-6	-3	0	3	5		-1	-1	-1	0	0	1	1	2		
70	-5	-3	0	3	5		-2	-1	-1	0	0	1	1	2		
65	-5	-3	0	2	5		-2	-2	-1	0	0	1	1	2		
60	-4	-2	0	2	4		-3	-2	-1	0	0	1	2	2		
55	-4	-2	0	2	4		-3	-2	-1	0	0	1	2	2		
50	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2		
45	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	2		
40	-3	-1	0	2	3		-3	-2	-1	0	1	1	2	3		

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	99					
40	104	99	98	96	95	95	94
30	86	100	98	96	95	95	94
20	68	103	101	99	97	95	94
10	50	104	102	100	99	97	96
0	32	104	103	102	100	98	97
-60	-76	105	104	103	101	99	98

Maximum Allowable Clearway
Max Takeoff Thrust

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	140
1800	200
2400	250
3000	310
3600	430
4200	470

Maximum Allowable Clearway - High Altitudes

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1500	180
2000	230
2500	270
3000	320
3500	400
4000	440

Clearway and Stopway V1 Adjustments

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-4	-4	-4	-4				
200	-3	-3	-3	-3				
100	-2	-2	-2	-2				
0	0	0	0	0	0	0	0	0
-100	2	2	2	2	2	2	1	1
-200	2	2	2	2	4	3	3	2
-300	2	2	2	2	5	4	3	3

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-4	-3	-3	-3				
200	-4	-2	-2	-2				
100	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-100	2	0	0	0	2	1	1	1
-200	2	0	0	0	4	2	2	2
-300	2	0	0	0	5	3	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting
Max Takeoff Thrust
Flaps 1 and 5

WEIGHT (1000 KG)	C.G. (%MAC)									
	9	10	11	14	16	20	23	26	30	33
80	9 1/2	9 1/2	9 1/2	8 1/4	7 1/2	6 3/4	6 1/4	5 3/4	5	4 1/4
70	9	9	9	8	7 1/4	6 1/2	5 3/4	5 1/4	4 1/2	4
60	8 1/2	8 1/2	8 1/4	7 1/4	6 1/2	5 3/4	5 1/4	4 1/2	4	4
50	7 1/2	7 1/4	7	6	5 1/2	5	4 1/4	4	4	4
45	6 1/4	6	6	5 1/2	5	4 1/2	4	4	4	4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)									
	9	10	11	12	15	18	21	25	28	33
80	9 1/2	9 1/2	9 1/2	9 1/4	8	7	6 1/2	5 1/2	4 3/4	4
70	9	9	9	8 1/2	7	6 1/4	5 1/2	4 1/2	4	4
60	8 1/2	8 1/2	7 3/4	7 1/4	6	5 1/2	4 3/4	4	4	4
50	7	6 1/2	6	5 1/2	5	4 1/2	4	4	4	4
45	5 1/4	5 1/4	5	4 3/4	4 1/4	4	4	4	4	4

VREF

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	159	161	167
80	154	156	162
75	149	151	157
70	144	146	152
65	139	141	147
60	133	135	140
55	127	129	134
50	120	123	127
45	114	117	121

Flap Maneuver Speeds

FLAP POSITION	MANEUVER SPEED
UP	VREF40 + 70
1	VREF40 + 50
5	VREF40 + 30
10	VREF40 + 30
15	VREF40 + 20
25	VREF40 + 10
30	VREF30
40	VREF40

ADVISORY INFORMATION

Slush/Standing Water Takeoff

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-12.3	-15.0	-17.7	-14.8	-17.5	-20.2	-20.1	-22.8	-25.5
90	-11.1	-13.8	-16.6	-13.3	-16.0	-18.7	-17.8	-20.5	-23.2
85	-10.0	-12.7	-15.4	-11.8	-14.5	-17.2	-15.5	-18.3	-21.0
80	-8.9	-11.6	-14.3	-10.3	-13.0	-15.8	-13.4	-16.1	-18.9
75	-7.8	-10.6	-13.3	-9.0	-11.7	-14.4	-11.5	-14.2	-17.0
70	-6.9	-9.6	-12.3	-7.8	-10.5	-13.2	-9.8	-12.6	-15.3
65	-6.0	-8.7	-11.4	-6.7	-9.5	-12.2	-8.4	-11.1	-13.8
60	-5.2	-7.9	-10.6	-5.8	-8.5	-11.2	-7.1	-9.8	-12.6
55	-4.5	-7.2	-9.9	-5.0	-7.7	-10.4	-6.1	-8.8	-11.5
50	-3.8	-6.5	-9.3	-4.3	-7.0	-9.7	-5.2	-7.9	-10.7
45	-3.2	-5.9	-8.6	-3.5	-6.3	-9.0	-4.4	-7.1	-9.8
40	-2.5	-5.2	-8.0	-2.8	-5.5	-8.3	-3.5	-6.3	-9.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1600							34.0		
1800	31.1			35.7			43.7		
2000	43.2			47.4			53.9	38.6	
2200	55.1	36.8		59.0	41.3		64.7	48.5	33.5
2400	66.8	48.9	30.5	70.5	52.9	35.1	76.1	59.0	43.2
2600	78.4	60.7	42.6	82.0	64.5	46.8	88.3	70.0	53.4
2800	89.9	72.4	54.5	93.3	76.0	58.4		81.8	64.1
3000		83.9	66.3		87.4	70.0		94.2	75.5
3200		95.3	77.9		98.7	81.4			87.6
3400			89.3			92.8			

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-16	-11	-6	-9	-4	0	0	0	0
85	-17	-12	-7	-11	-6	-1	0	0	0
80	-18	-13	-8	-13	-8	-3	-2	0	0
75	-20	-15	-10	-15	-10	-5	-5	0	0
70	-21	-16	-11	-17	-12	-7	-8	-3	0
65	-21	-16	-11	-18	-13	-8	-10	-5	0
60	-22	-17	-12	-19	-14	-9	-13	-8	-3
55	-22	-17	-12	-20	-15	-10	-16	-11	-6
50	-23	-18	-13	-21	-16	-11	-18	-13	-8
45	-24	-19	-14	-22	-17	-12	-20	-15	-10
40	-25	-20	-15	-24	-19	-14	-22	-17	-12

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff

No Reverse Thrust

Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-13.5	-16.7	-19.9	-15.7	-18.8	-22.0	-20.1	-23.3	-26.4
85	-12.6	-15.7	-18.9	-14.4	-17.5	-20.7	-18.1	-21.3	-24.5
80	-11.6	-14.8	-18.0	-13.1	-16.3	-19.4	-16.2	-19.4	-22.6
75	-10.7	-13.8	-17.0	-11.9	-15.0	-18.2	-14.4	-17.6	-20.8
70	-9.7	-12.9	-16.1	-10.7	-13.9	-17.0	-12.7	-15.9	-19.1
65	-8.8	-12.0	-15.1	-9.6	-12.7	-15.9	-11.2	-14.4	-17.6
60	-7.9	-11.0	-14.2	-8.5	-11.6	-14.8	-9.8	-13.0	-16.1
55	-6.9	-10.1	-13.3	-7.4	-10.6	-13.8	-8.5	-11.7	-14.8
50	-6.0	-9.2	-12.4	-6.5	-9.6	-12.8	-7.3	-10.5	-13.6
45	-5.1	-8.3	-11.4	-5.5	-8.7	-11.9	-6.2	-9.4	-12.6
40	-4.2	-7.3	-10.5	-4.7	-7.8	-11.0	-5.3	-8.5	-11.6

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
2200							30.7		
2400							41.9		
2600				36.4			53.1	35.2	
2800	37.3			47.5			64.4	46.3	
3000	47.9	30.9		59.1	40.8		75.9	57.6	39.6
3200	59.3	41.5		71.4	52.1	34.2	87.6	69.0	50.8
3400	71.7	52.4	35.1	84.3	63.9	45.3	99.3	80.5	62.1
3600	85.4	64.1	45.8	97.9	76.4	56.7		92.2	73.6
3800		77.0	56.9		89.8	68.8			85.2
4000		91.3	69.1			81.7			96.9
4200			82.6			95.2			
4400			97.2						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -65 m/+65 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-26	-16	-6	-16	-6	0	0	0	0
85	-28	-18	-8	-19	-9	0	0	0	0
80	-30	-20	-10	-22	-12	-2	-3	0	0
75	-31	-21	-11	-25	-15	-5	-9	0	0
70	-33	-23	-13	-28	-18	-8	-14	-4	0
65	-34	-24	-14	-30	-20	-10	-19	-9	0
60	-36	-26	-16	-32	-22	-12	-23	-13	-3
55	-37	-27	-17	-35	-25	-15	-27	-17	-7
50	-39	-29	-19	-37	-27	-17	-31	-21	-11
45	-40	-30	-20	-38	-28	-18	-34	-24	-14
40	-41	-31	-21	-40	-30	-20	-37	-27	-17

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-21.9	-22.9	-23.9	-24.4	-25.4	-26.4	-32.8	-34.6	-36.4
90	-19.9	-20.9	-21.9	-22.1	-23.1	-24.1	-30.0	-31.8	-33.6
85	-17.9	-18.9	-19.9	-19.7	-20.7	-21.7	-27.2	-29.0	-30.8
80	-15.9	-16.9	-17.9	-17.4	-18.4	-19.4	-24.4	-26.2	-28.1
75	-14.3	-15.3	-16.3	-15.4	-16.4	-17.4	-22.1	-23.9	-25.7
70	-13.1	-14.1	-15.1	-14.0	-15.0	-16.0	-20.3	-22.1	-24.0
65	-12.3	-13.3	-14.3	-13.1	-14.1	-15.1	-19.1	-21.0	-22.8
60	-12.0	-13.0	-14.0	-12.7	-13.7	-14.7	-18.5	-20.4	-22.2
55	-12.2	-13.2	-14.2	-12.9	-13.9	-14.9	-18.5	-20.3	-22.1
50	-12.8	-13.8	-14.8	-13.6	-14.6	-15.6	-19.1	-20.9	-22.7
45	-13.8	-14.8	-15.8	-14.7	-15.7	-16.7	-20.2	-22.0	-23.8
40	-15.0	-16.0	-17.0	-16.1	-17.1	-18.1	-21.5	-23.4	-25.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2200				30.2			35.3		
2400	37.2	31.5		40.2	34.4		45.3	39.5	33.8
2600	47.2	41.4	35.6	50.3	44.4	38.6	55.5	49.5	43.7
2800	57.5	51.5	45.6	60.9	54.7	48.7	66.1	59.9	53.8
3000	68.3	62.0	55.8	71.8	65.4	59.2	77.1	70.6	64.4
3200	79.6	73.0	66.5	83.2	76.5	70.0	88.5	81.9	75.3
3400	91.2	84.5	77.7	94.7	88.0	81.3	99.9	93.3	86.7
3600	102.9	96.1	89.4		99.6	92.9		104.8	98.1
3800			101.0			104.5			

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-6	-4	-2	0	0	0	0	0	0
85	-7	-5	-3	-1	0	0	0	0	0
80	-8	-6	-4	-3	-1	0	0	0	0
75	-9	-7	-5	-5	-3	-1	0	0	0
70	-10	-8	-6	-7	-5	-3	0	0	0
65	-11	-9	-7	-8	-6	-4	-1	0	0
60	-12	-10	-8	-9	-7	-5	-3	-1	0
55	-13	-11	-9	-11	-9	-7	-5	-3	-1
50	-13	-11	-9	-11	-9	-7	-7	-5	-3
45	-14	-12	-10	-12	-10	-8	-8	-6	-4
40	-15	-13	-11	-13	-11	-9	-8	-6	-4

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes

No Reverse Thrust

Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-19.9	-21.1	-22.4	-22.0	-23.3	-24.6	-26.4	-27.7	-29.0
85	-18.9	-20.2	-21.5	-20.7	-22.0	-23.3	-24.5	-25.7	-27.0
80	-18.0	-19.2	-20.5	-19.4	-20.7	-22.0	-22.6	-23.8	-25.1
75	-17.0	-18.3	-19.6	-18.2	-19.5	-20.7	-20.8	-22.0	-23.3
70	-16.1	-17.4	-18.6	-17.0	-18.3	-19.6	-19.1	-20.4	-21.6
65	-15.1	-16.4	-17.7	-15.9	-17.2	-18.4	-17.6	-18.8	-20.1
60	-14.2	-15.5	-16.8	-14.8	-16.1	-17.4	-16.1	-17.4	-18.7
55	-13.3	-14.6	-15.8	-13.8	-15.1	-16.3	-14.8	-16.1	-17.4
50	-12.4	-13.6	-14.9	-12.8	-14.1	-15.4	-13.6	-14.9	-16.2
45	-11.4	-12.7	-14.0	-11.9	-13.2	-14.4	-12.6	-13.9	-15.1
40	-10.5	-11.8	-13.1	-11.0	-12.3	-13.5	-11.6	-12.9	-14.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
3000							39.6	32.5	
3200				34.2			50.8	43.7	36.5
3400	35.1			45.3	38.2	31.1	62.1	54.9	47.7
3600	45.8	39.0	32.2	56.7	49.3	42.2	73.6	66.2	58.9
3800	56.9	49.7	42.8	68.8	61.0	53.5	85.2	77.8	70.4
4000	69.1	61.2	53.7	81.7	73.4	65.4	96.9	89.4	81.9
4200	82.6	73.8	65.6	95.2	86.5	78.0			93.6
4400	97.2	87.8	78.6			91.4			
4600			93.1						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -65 m/+65 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-6	-2	0	0	0	0	0	0	0
85	-8	-4	0	0	0	0	0	0	0
80	-10	-6	-2	-2	0	0	0	0	0
75	-11	-7	-3	-5	-1	0	0	0	0
70	-13	-9	-5	-8	-4	0	0	0	0
65	-14	-10	-6	-10	-6	-2	0	0	0
60	-16	-12	-8	-12	-8	-4	-3	0	0
55	-17	-13	-9	-15	-11	-7	-7	-3	0
50	-19	-15	-11	-17	-13	-9	-11	-7	-3
45	-20	-16	-12	-18	-14	-10	-14	-10	-6
40	-21	-17	-13	-20	-16	-12	-17	-13	-9

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION

Slippery Runway Takeoff Maximum Reverse Thrust Weight Adjustment (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-1.0	-1.0	-1.0	-7.1	-7.1	-7.1	-12.3	-12.3	-12.3
90	-1.1	-1.1	-1.1	-6.7	-6.7	-6.7	-11.5	-11.5	-11.5
85	-1.3	-1.3	-1.3	-6.4	-6.4	-6.4	-10.7	-10.7	-10.7
80	-1.4	-1.4	-1.4	-6.0	-6.0	-6.0	-9.9	-9.9	-9.9
75	-1.4	-1.4	-1.4	-5.7	-5.7	-5.7	-9.1	-9.1	-9.1
70	-1.4	-1.4	-1.4	-5.3	-5.3	-5.3	-8.5	-8.5	-8.5
65	-1.4	-1.4	-1.4	-5.0	-5.0	-5.0	-7.8	-7.8	-7.8
60	-1.4	-1.4	-1.4	-4.6	-4.6	-4.6	-7.2	-7.2	-7.2
55	-1.3	-1.3	-1.3	-4.3	-4.3	-4.3	-6.6	-6.6	-6.6
50	-1.2	-1.2	-1.2	-3.9	-3.9	-3.9	-6.0	-6.0	-6.0
45	-1.1	-1.1	-1.1	-3.5	-3.5	-3.5	-5.5	-5.5	-5.5
40	-1.0	-1.0	-1.0	-3.2	-3.2	-3.2	-4.9	-4.9	-4.9

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	34.8								
1400	49.5	35.0							
1600	65.5	49.7	35.1	32.1					
1800	83.6	65.7	49.8	44.4					
2000		83.8	65.8	57.2	40.8				
2200			84.0	70.9	53.3	37.2	34.4		
2400				85.9	66.8	49.5	44.6		
2600					81.3	62.7	54.9	36.9	
2800					97.1	76.9	65.3	47.2	
3000						92.4	75.8	57.5	39.5
3200							86.4	67.9	49.7
3400							97.1	78.4	60.1
3600								89.1	70.5
3800								99.7	81.1
4000									91.7

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -35 m/+30 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -35 m/+30 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

**Slippery Runway Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)**

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-5	-3	0	-14	-12	-9	-26	-24	-21
85	-6	-3	-1	-16	-13	-11	-28	-26	-23
80	-7	-4	-2	-17	-15	-12	-30	-27	-25
75	-8	-5	-3	-19	-16	-14	-32	-29	-27
70	-9	-6	-4	-20	-17	-15	-33	-31	-28
65	-10	-7	-5	-21	-19	-16	-35	-32	-30
60	-10	-8	-5	-22	-20	-17	-36	-34	-31
55	-11	-9	-6	-24	-21	-19	-38	-35	-33
50	-12	-10	-7	-25	-22	-20	-39	-36	-34
45	-13	-11	-8	-26	-23	-21	-40	-37	-35
40	-14	-12	-9	-27	-24	-22	-41	-38	-36

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-2.4	-2.8	-3.2	-8.7	-9.1	-9.5	-13.7	-14.1	-14.5
85	-2.6	-3.1	-3.5	-8.6	-9.1	-9.5	-13.4	-13.8	-14.2
80	-2.8	-3.3	-3.7	-8.5	-9.0	-9.4	-13.0	-13.4	-13.9
75	-2.9	-3.3	-3.8	-8.3	-8.7	-9.2	-12.5	-12.9	-13.3
70	-2.9	-3.3	-3.7	-7.9	-8.3	-8.7	-11.7	-12.1	-12.5
65	-2.7	-3.1	-3.6	-7.3	-7.8	-8.2	-10.7	-11.1	-11.6
60	-2.5	-2.9	-3.3	-6.6	-7.0	-7.5	-9.5	-10.0	-10.4
55	-2.1	-2.5	-2.9	-5.7	-6.2	-6.6	-8.2	-8.6	-9.0
50	-1.6	-2.0	-2.4	-4.7	-5.1	-5.5	-6.6	-7.0	-7.5
45	-1.0	-1.4	-1.8	-3.5	-3.9	-4.4	-4.8	-5.3	-5.7
40	-0.3	-0.7	-1.1	-2.2	-2.6	-3.0	-2.9	-3.3	-3.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1600	39.0								
1800	64.0	37.0							
2000	87.3	62.2	35.1						
2200		85.5	60.3						
2400			83.8	38.3					
2600				58.6	35.3				
2800				79.3	55.5	32.3			
3000					76.2	52.5			
3200					97.1	71.2			
3400						93.9			
3800							42.3		
4000							57.3	34.6	
4200							72.8	49.4	
4400							88.7	64.6	41.6
4600								80.3	56.6
4800								96.4	72.0
5000									87.9

- 1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
- 2. Adjust “Good” field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -70 m/+70 m for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-9	-1	0	-23	-15	-8	-44	-36	-29
85	-9	-2	0	-24	-16	-9	-46	-38	-31
80	-10	-2	0	-25	-17	-10	-48	-40	-33
75	-11	-3	0	-27	-20	-12	-51	-43	-36
70	-13	-5	0	-30	-22	-15	-54	-47	-39
65	-15	-8	0	-33	-26	-18	-58	-51	-43
60	-19	-11	-4	-38	-30	-23	-63	-56	-48
55	-23	-15	-8	-43	-36	-28	-69	-61	-54
50	-27	-20	-12	-49	-41	-34	-75	-68	-60
45	-33	-25	-18	-56	-48	-41	-82	-75	-67
40	-39	-31	-24	-63	-55	-48	-89	-82	-74

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
Maximum Reverse Thrust
Weight Adjustment (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-1.8	-1.8	-1.8	-9.1	-9.1	-9.1	-13.7	-13.7	-13.7
90	-1.7	-1.7	-1.7	-8.2	-8.2	-8.2	-12.4	-12.4	-12.4
85	-1.5	-1.5	-1.5	-7.3	-7.3	-7.3	-11.2	-11.2	-11.2
80	-1.4	-1.4	-1.4	-6.4	-6.4	-6.4	-10.0	-10.0	-10.0
75	-1.3	-1.3	-1.3	-5.5	-5.5	-5.5	-8.9	-8.9	-8.9
70	-1.2	-1.2	-1.2	-5.0	-5.0	-5.0	-8.1	-8.1	-8.1
65	-1.2	-1.2	-1.2	-4.7	-4.7	-4.7	-7.6	-7.6	-7.6
60	-1.2	-1.2	-1.2	-4.7	-4.7	-4.7	-7.5	-7.5	-7.5
55	-1.3	-1.3	-1.3	-5.0	-5.0	-5.0	-7.7	-7.7	-7.7
50	-1.4	-1.4	-1.4	-5.5	-5.5	-5.5	-8.2	-8.2	-8.2
45	-1.6	-1.6	-1.6	-6.3	-6.3	-6.3	-9.1	-9.1	-9.1
40	-1.7	-1.7	-1.7	-7.2	-7.2	-7.2	-10.0	-10.0	-10.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1800	47.3	40.3	33.3						
2000	65.4	58.1	51.0						
2200	84.0	76.6	69.2						
2400	103.1	95.5	88.0	36.5	30.1				
2600				49.1	42.5	36.1			
2800				62.5	55.5	48.7			
				76.9	69.3	62.0	34.5		
3000				92.4	84.3	76.4	42.9	37.0	31.1
3200					100.0	91.8	51.6	45.5	39.5
3400							60.8	54.3	48.1
3600							70.6	63.7	57.1
3800							81.0	73.6	66.6
4000							92.1	84.2	76.7
4200							103.3	95.4	87.6
4400									98.8

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-4	-2	0	-16	-14	-12
85	0	0	0	-6	-4	-2	-18	-16	-14
80	0	0	0	-7	-5	-3	-20	-18	-16
75	0	0	0	-8	-6	-4	-22	-20	-18
70	0	0	0	-10	-8	-6	-23	-21	-19
65	0	0	0	-11	-9	-7	-25	-23	-21
60	0	0	0	-12	-10	-8	-26	-24	-22
55	-1	0	0	-14	-12	-10	-28	-26	-24
50	-2	0	0	-15	-13	-11	-29	-27	-25
45	-3	-1	0	-16	-14	-12	-30	-28	-26
40	-4	-2	0	-17	-15	-13	-31	-29	-27

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

No Reverse Thrust

Weight Adjustment (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-3.2	-3.4	-3.6	-9.5	-9.7	-9.9	-14.5	-14.7	-14.9
85	-3.5	-3.7	-3.8	-9.5	-9.7	-9.8	-14.2	-14.4	-14.6
80	-3.7	-3.9	-4.0	-9.4	-9.6	-9.8	-13.9	-14.0	-14.2
75	-3.8	-3.9	-4.1	-9.2	-9.3	-9.5	-13.3	-13.5	-13.7
70	-3.7	-3.9	-4.1	-8.7	-8.9	-9.1	-12.5	-12.7	-12.9
65	-3.6	-3.7	-3.9	-8.2	-8.4	-8.5	-11.6	-11.7	-11.9
60	-3.3	-3.5	-3.7	-7.5	-7.6	-7.8	-10.4	-10.6	-10.7
55	-2.9	-3.1	-3.3	-6.6	-6.8	-6.9	-9.0	-9.2	-9.4
50	-2.4	-2.6	-2.8	-5.5	-5.7	-5.9	-7.5	-7.6	-7.8
45	-1.8	-2.0	-2.2	-4.4	-4.5	-4.7	-5.7	-5.9	-6.0
40	-1.1	-1.3	-1.5	-3.0	-3.2	-3.4	-3.8	-3.9	-4.1

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2000	35.1								
2200	60.3	49.7	38.7						
2400	83.8	73.9	63.7						
2600		96.9	87.0						
2800				32.3					
3000				52.5	43.1	33.9			
3200				71.2	63.5	54.1			
3400				93.9	84.3	74.5			
3600						95.6			
4400							41.6	32.6	
4600							56.6	47.4	38.3
4800							72.0	62.5	53.2
5000							87.9	78.1	68.5
5200								94.2	84.3

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -70 m/+70 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-8	-5	-2	-29	-26	-23
85	0	0	0	-9	-6	-3	-31	-28	-25
80	0	0	0	-10	-7	-4	-33	-30	-27
75	0	0	0	-12	-9	-6	-36	-33	-30
70	0	0	0	-15	-12	-9	-39	-36	-33
65	0	0	0	-18	-15	-12	-43	-40	-37
60	-4	-1	0	-23	-20	-17	-48	-45	-42
55	-8	-5	-2	-28	-25	-22	-54	-51	-48
50	-12	-9	-6	-34	-31	-28	-60	-57	-54
45	-18	-15	-12	-41	-38	-35	-67	-64	-61
40	-24	-21	-18	-48	-45	-42	-74	-71	-68

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	95.7	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	96.8	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	97.6	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.3	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.0	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	99.7	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	99.3	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	98.5	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	97.8	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	97.0	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	96.2	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
5	95.4	97.0	99.0	99.3	99.6	99.8	100.1	100.3	100.6	100.9	101.2	101.0	100.9
0	94.6	96.2	98.2	98.6	98.8	99.1	99.3	99.6	99.8	100.1	100.4	100.3	100.1
-5	93.8	95.4	97.5	97.8	98.1	98.3	98.6	98.8	99.1	99.4	99.6	99.5	99.4
-10	93.0	94.6	96.7	97.0	97.3	97.5	97.8	98.0	98.3	98.6	98.8	98.7	98.6
-15	92.2	93.8	95.9	96.3	96.5	96.8	97.0	97.3	97.5	97.8	98.1	97.9	97.8
-20	91.4	93.0	95.2	95.5	95.7	96.0	96.2	96.5	96.7	97.0	97.3	97.1	97.0
-25	90.5	92.2	94.4	94.7	94.9	95.2	95.4	95.7	95.9	96.2	96.5	96.3	96.2
-30	89.7	91.3	93.6	93.9	94.1	94.4	94.6	94.9	95.1	95.4	95.6	95.5	95.4
-35	88.8	90.5	92.8	93.1	93.3	93.6	93.8	94.0	94.3	94.6	94.8	94.7	94.6
-40	88.0	89.6	91.9	92.3	92.5	92.7	93.0	93.2	93.5	93.7	94.0	93.9	93.7
-45	87.1	88.8	91.1	91.4	91.7	91.9	92.1	92.4	92.6	92.9	93.1	93.0	92.9
-50	86.2	87.9	90.3	90.6	90.8	91.1	91.3	91.5	91.8	92.0	92.3	92.2	92.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Takeoff %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.2					
35	99.1	99.0	98.8			
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5	100.9	101.8	102.0	101.9	101.8	101.8
0	100.1	101.0	101.9	102.1	102.0	102.0
-5	99.4	100.3	101.1	101.5	101.8	101.9
-10	98.6	99.5	100.3	100.7	101.0	101.1
-15	97.8	98.7	99.5	99.9	100.2	100.3
-20	97.0	97.9	98.7	99.1	99.3	99.5
-25	96.2	97.1	97.9	98.2	98.5	98.6
-30	95.4	96.3	97.1	97.4	97.7	97.8
-35	94.6	95.4	96.3	96.6	96.8	97.0
-40	93.7	94.6	95.4	95.7	96.0	96.1
-45	92.9	93.7	94.5	94.9	95.1	95.3
-50	92.0	92.9	93.7	94.0	94.2	94.4

Takeoff %N1 - High Altitudes**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	70	69	69	67	65	63	61	59	57	55	53	
30	67	65	66	65	65	63	61	59	57	55	53	51
25	67	65	65	63	64	63	61	59	57	55	53	51
20	67	65	65	63	64	63	61	59	57	55	53	51
15	67	65	65	63	64	63	61	59	57	55	53	51
10 & BELOW	67	65	65	63	64	63	61	59	57	55	53	51

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	94.1	94.4	95.2	95.4	96.3	97.2	97.7	97.9	98.0	98.0	98.0	98.0
70	94.8	95.2	95.4	95.0	95.6	96.5	97.1	97.3	97.3	97.3	97.3	97.3
65	95.6	96.0	96.1	95.9	96.2	96.4	96.4	96.6	96.6	96.6	96.6	96.6
60	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

Assumed Temperature Reduced Thrust
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.7													
100	15.0	10.3												
90	14.0	11.5												
80	12.8	11.7	7.2											
70	10.7	10.7	8.3	7.2	5.6									
60	9.2	9.4	8.6	8.4	6.8	5.7	4.1							
50	7.8	7.5	7.5	7.2	7.0	6.9	5.3	4.2	2.7					
40		6.0	6.1	6.1	5.9	5.8	5.8	5.4	4.2	4.0	4.6			
30		4.6	4.4	4.5	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	4.0	
20			2.9	2.9	2.9	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.7
10			1.5	1.5	1.5	1.4	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	54	54	52	50	48	47
5	54	52	50	50	48	47
0 & BELOW	54	52	49	50	48	47

Assumed Temperature Reduced Thrust - High Altitudes**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.9					
55	95.3	95.5	95.6	97.5		
50	96.3	96.0	95.4	96.8	98.5	99.4
45	97.3	97.0	96.6	97.4	98.4	99.0
40	98.2	98.0	97.7	98.3	99.0	99.4
35	99.1	99.0	98.8	99.1	99.5	99.8
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5		101.8	102.0	101.9	101.8	101.8
0				102.1	102.0	102.0
-5				101.5	101.8	101.9
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.5										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.7								
70	11.3	11.2	10.7								
60	10.0	9.2	9.4	7.5							
50		7.9	7.8	7.5	6.0	5.9	5.8				
40		6.5	6.0	6.2	6.0	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (26K Derate)
Flaps 1 and 5
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
88	159	162	167	154	158	163
84	154	157	163	150	153	159
80	149	152	159	146	149	155
76	145	147	155	141	144	151
72	141	143	151	137	140	148
68	136	138	147	133	135	144
64	131	133	143	127	130	140
60	125	128	138	122	125	135
56	119	122	134	116	119	130
52	113	116	128	111	114	126
48	108	110	123	105	108	120
44	101	104	118	99	102	115
40	95	98	113	92	95	110

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 56699 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10		-2	0	2	4	6	8	10		-2	0	2	4	6	8	10	
70	158	7	8							6	7							0	0						
60	140	5	6	8	9					4	5	7	8					0	0	0	0				
50	122	3	4	6	7	9	11	13		3	4	5	6	8	10	11		0	0	0	0	0	0	0	
40	104	1	2	4	5	7	9	11		1	2	3	5	6	8	10		0	0	0	0	0	0	0	
30	86	0	0	2	4	6	7	9		0	0	2	4	5	7	9		0	0	0	0	0	1	1	
20	68	0	0	1	3	5	7	8		0	0	1	3	4	6	8		0	0	0	0	1	1	1	
-60	-76	0	0	1	3	5	6	8		0	0	1	3	4	6	7		0	0	0	0	1	1	1	

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
88	-3	-2	0	2	3		-2	-1	-1	0	0	1	1	1
80	-3	-1	0	2	3		-2	-1	-1	0	0	1	1	1
72	-3	-1	0	1	2		-2	-1	0	0	0	1	1	1
64	-2	-1	0	1	2		-2	-1	0	0	0	1	1	1
56	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	2
48	-1	-1	0	1	1		-2	-1	-1	0	0	1	1	2
40	-1	0	0	1	1		-3	-2	-1	0	1	1	2	2

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Dry Runway (26K Derate)

Flaps 10, 15 and 25

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
88	148	150	155						
84	143	146	151	142	142	148			
80	139	142	148	138	138	144	136	136	142
76	135	137	144	134	134	141	132	132	140
72	131	134	141	130	131	138	128	129	137
68	127	130	138	126	127	135	124	125	134
64	123	126	135	121	123	132	120	121	130
60	118	121	131	116	118	128	115	117	127
56	113	116	127	112	113	124	110	112	123
52	108	111	122	107	108	120	105	107	119
48	103	105	118	102	103	116	100	102	115
44	97	100	114	96	98	112	95	97	111
40	91	94	109	90	93	107	89	92	106

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 56699 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	6	6						4	5						-2	-3					
60	140	4	5	6	7				3	4	5	5				-2	-2	-2	-3			
50	122	2	3	4	5	6	8	10	2	3	3	4	5	6	7	-1	-1	-2	-2	-3	-3	-4
40	104	1	2	3	4	5	6	8	1	1	2	3	4	5	6	0	-1	-1	-1	-2	-3	-3
30	86	0	0	1	2	3	4	5	6	0	0	1	2	4	5	0	0	0	-1	-1	-2	-3
20	68	0	0	1	2	3	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2
-60	-76	0	0	1	2	3	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
88	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1
80	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1
72	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
64	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
56	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
48	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	2
40	-1	-1	0	0	1		-2	-2	-1	0	0	1	1	2

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	154	154	156												
70	148	149	152	145	146	148									
65	142	143	146	138	139	142	132	132	136						
60	134	136	140	131	132	136	125	126	130	122	122	127	120	121	126
55	126	128	133	123	125	130	118	119	124	116	116	121	115	115	120
50	118	120	126	116	118	123	111	112	118	110	110	116	108	108	114
45	110	112	119	108	110	117	103	105	112	102	103	109	100	101	108
40	102	103	112	99	101	109	94	97	105	94	94	103	90	93	102

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 45400 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	6						5						0					
40	104	4	5	6	7	7	8	3	4	5	6	6	7	0	0	1	1	1	1
30	86	2	3	4	5	6	7	2	3	4	4	5	6	0	0	1	1	1	1
20	68	0	2	3	4	5	5	1	2	2	3	4	5	0	0	1	1	1	1
10	50	0	1	2	3	4	5	0	1	2	3	4	4	0	0	1	1	1	1
0	32	0	1	2	3	4	4	0	1	1	2	3	3	0	0	1	1	1	1
-60	-76	0	1	2	3	4	4	0	1	1	2	3	3	0	0	1	1	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-3	-2	0	0	0		-1	-1	-1	0	0	0	0	0
70	-3	-2	0	0	0		-1	-1	0	0	0	0	0	0
65	-2	-1	0	1	1		-1	-1	0	0	0	0	0	1
60	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
55	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
50	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
45	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
40	-2	-1	0	0	1		-1	-1	0	0	0	0	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	99					
40	104	99	98	97	95		94
30	86	100	98	97	95	95	94
20	68	103	101	99	97	95	94
10	50	104	102	101	99	97	96
0	32	105	103	102	100	98	97
-60	-76	105	104	103	101	99	98

Takeoff Speeds - Wet Runway (26K Derate)

Flaps 1 and 5

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
88	154	162	167	149	158	163
84	148	157	163	144	153	159
80	143	152	159	139	149	155
76	138	147	155	134	144	151
72	133	143	151	130	140	148
68	128	138	147	125	135	144
64	122	133	143	119	130	140
60	116	128	138	114	125	135
56	110	122	134	108	119	130
52	104	116	128	101	114	126
48	98	110	123	95	108	120
44	91	104	118	89	102	115
40	85	98	113	82	95	110

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K Derate takeoff thrust at weights less than 56699 kg may be limited.

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	9	11						6	7						0	0								
60	140	7	8	10	12				4	5	7	8				0	0	0	0						
50	122	4	5	7	9	11	13	16	3	4	5	6	8	10	11	0	0	0	0	0	0	0			
40	104	1	3	4	6	8	11	13	1	2	3	5	6	8	10	0	0	0	0	0	0	0			
30	86	0	0	2	4	7	9	11	0	0	2	4	5	7	9	0	0	0	0	0	1	1			
20	68	0	0	1	3	6	8	10	0	0	1	3	4	6	8	0	0	0	0	1	1	1			
-60	-76	0	0	1	3	5	8	10	0	0	1	3	4	6	7	0	0	0	0	1	1	1			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
88	-5	-2	0	3	5		-4	-2	-1	0	1	1	2	3
80	-5	-2	0	2	5		-4	-2	-1	0	1	1	2	3
72	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
64	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
56	-3	-2	0	2	3		-4	-3	-1	0	1	2	2	3
48	-2	-1	0	1	3		-4	-3	-1	0	1	2	3	4
40	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Wet Runway (26K Derate)
Flaps 10, 15 and 25
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
88	143	150	155						
84	138	146	151	138	142	148			
80	133	142	148	133	138	144	130	136	142
76	129	137	144	128	134	141	126	132	140
72	124	134	141	124	131	138	122	129	137
68	120	130	138	119	127	135	118	125	134
64	115	126	135	114	123	132	113	121	130
60	110	121	131	109	118	128	108	117	127
56	105	116	127	104	113	124	102	112	123
52	99	111	122	98	108	120	97	107	119
48	94	105	118	93	103	116	91	102	115
44	88	100	114	87	98	112	86	97	111
40	82	94	109	81	93	107	80	92	106

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 56699 kg may be limited.

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	8	9						4	5						-2	-3								
60	140	6	6	8	9				3	4	5	5				-2	-2	-2	-3						
50	122	3	4	6	7	9	11	13	2	3	3	4	5	6	7	-1	-1	-2	-2	-3	-3	-4			
40	104	1	2	4	5	6	8	10	1	1	2	3	4	5	6	0	-1	-1	-1	-2	-3	-3			
30	86	0	0	2	3	5	7	8	0	0	1	2	4	5	6	0	0	0	-1	-1	-2	-3			
20	68	0	0	1	3	4	6	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2			
-60	-76	0	0	1	3	4	6	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
88	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
80	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
72	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
64	-3	-2	0	2	3		-4	-3	-1	0	1	1	2	3
56	-3	-2	0	1	3		-4	-3	-1	0	1	2	2	3
48	-2	-1	0	1	2		-4	-3	-1	0	1	2	3	3
40	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	147	154	156												
70	142	149	152	138	146	148									
65	135	143	146	131	139	142	126	132	136						
60	127	136	140	123	132	136	118	126	130	118	122	127	117	121	126
55	119	128	133	116	125	130	111	119	124	110	116	121	109	115	120
50	110	120	126	108	118	123	103	112	118	103	110	116	101	108	114
45	102	112	119	99	110	117	95	105	112	94	103	109	93	101	108
40	92	103	112	90	101	109	86	97	105	86	94	103	85	93	102

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 45400 kg may be limited.

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	10	11	12	13	14	14.5		10	11	12	13	14	14.5		10	11	12	13	14	14.5	
50	122	9						5							0							
40	104	5	6	8	9	10	10	3	4	5	6	6	7	7	0	0	1	1	1	1	1	
30	86	2	4	5	6	8	8	2	3	4	4	5	6	6	0	0	1	1	1	1	1	
20	68	1	2	3	5	6	7	1	2	2	3	4	5	5	0	0	1	1	1	1	1	
10	50	0	1	2	3	5	6	0	1	2	3	4	4	4	0	0	1	1	1	1	1	
0	32	0	1	2	3	4	5	0	1	1	2	3	3	3	0	0	1	1	1	1	1	
-60	-76	0	1	2	3	4	5	0	1	1	2	3	3	3	0	0	1	1	1	1	1	

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-6	-3	0	3	5		-1	-1	-1	0	0	1	1	1
70	-5	-3	0	2	5		-2	-1	-1	0	0	1	1	2
65	-5	-3	0	2	5		-3	-2	-1	0	0	1	1	2
60	-4	-2	0	2	4		-3	-2	-1	0	0	1	1	2
55	-4	-2	0	2	4		-3	-2	-1	0	0	1	2	2
50	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
45	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	2
40	-3	-1	0	2	3		-3	-2	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	99					
40	104	99	98	97	95	95	94
30	86	100	98	97	95	95	94
20	68	103	101	99	97	95	94
10	50	104	102	101	99	97	96
0	32	105	103	102	100	98	97
-60	-76	105	104	103	101	99	98

Maximum Allowable Clearway (26K Derate)

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	140
1800	200
2400	250
3000	310
3600	430
4200	470

Maximum Allowable Clearway - High Altitudes (26K Derate)

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
2000	220
2500	270
3000	320
3500	390
4000	460
4500	480

Clearway and Stopway V1 Adjustments (26K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-3	-4	-4	-5				
200	-3	-4	-4	-4				
100	-2	-2	-2	-2				
0	0	0	0	0	0	0	0	0
-100	1	1	2	1	2	2	1	1
-200	1	1	2	2	4	3	2	2
-300	1	1	2	2	5	4	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes (26K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)					
	DRY RUNWAY			WET RUNWAY		
	100	120	140	100	120	140
300	-4	-3	-3			
200	-4	-2	-2			
100	-3	-1	-1			
0	0	0	0	0	0	0
-100	2	0	0	2	1	1
-200	2	0	0	4	2	2
-300	2	0	0	4	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (26K Derate)
Flaps 1 and 5

WEIGHT (1000 KG)	C.G. (%MAC)									
	9	10	11	14	16	20	23	26	30	33
80	9 1/2	9 1/2	9 1/2	8 1/4	7 1/2	6 3/4	6 1/4	5 3/4	5	4 1/4
70	9	9	9	8	7 1/4	6 1/2	5 3/4	5 1/4	4 1/2	4
60	8 1/2	8 1/2	8 1/4	7 1/4	6 1/2	5 3/4	5 1/4	4 1/2	4	4
50	7 1/2	7 1/4	7	6	5 1/2	5	4 1/4	4	4	4
45	6 1/4	6	6	5 1/2	5	4 1/2	4	4	4	4

Stab Trim Setting (26K Derate)
Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)									
	9	10	11	12	15	18	21	25	28	33
80	9 1/2	9 1/2	9 1/2	9 1/4	8	7	6 1/2	5 1/2	4 3/4	4
70	9	9	9	8 1/2	7	6 1/4	5 1/2	4 1/2	4	4
60	8 1/2	8 1/2	7 3/4	7 1/4	6	5 1/2	4 3/4	4	4	4
50	7	6 1/2	6	5 1/2	5	4 1/2	4	4	4	4
45	5 1/4	5 1/4	5	4 3/4	4 1/4	4	4	4	4	4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-10.5	-13.4	-16.4	-12.6	-15.5	-18.5	-17.1	-20.1	-23.0
85	-9.6	-12.6	-15.5	-11.4	-14.4	-17.3	-15.3	-18.2	-21.2
80	-8.8	-11.7	-14.7	-10.3	-13.2	-16.2	-13.5	-16.4	-19.4
75	-7.9	-10.9	-13.8	-9.2	-12.1	-15.1	-11.8	-14.7	-17.7
70	-7.1	-10.0	-13.0	-8.1	-11.0	-14.0	-10.2	-13.1	-16.1
65	-6.2	-9.1	-12.1	-7.0	-9.9	-12.9	-8.7	-11.6	-14.6
60	-5.3	-8.2	-11.2	-5.9	-8.8	-11.8	-7.2	-10.2	-13.1
55	-4.3	-7.3	-10.2	-4.8	-7.8	-10.7	-5.9	-8.9	-11.8
50	-3.4	-6.4	-9.3	-3.8	-6.7	-9.7	-4.7	-7.6	-10.6
45	-2.5	-5.4	-8.4	-2.7	-5.7	-8.6	-3.4	-6.4	-9.3
40	-1.5	-4.5	-7.4	-1.7	-4.6	-7.6	-2.2	-5.1	-8.1

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1600							32.8		
1800	35.8			39.6			44.6		
2000	47.3			50.9	33.6		56.2	38.4	
2200	58.9	41.3		62.3	44.9		67.5	50.1	32.2
2400	70.5	52.8	35.3	73.9	56.3	39.0	78.5	61.6	44.0
2600	82.3	64.4	46.7	85.5	67.8	50.3	89.3	72.7	55.6
2800	94.1	76.1	58.3	97.2	79.4	61.8	100.0	83.6	66.9
3000		87.9	69.9		91.1	73.3		94.4	77.9
3200		99.7	81.7			84.9			88.7
3400			93.5			96.7			99.4

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -50 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-14	-9	-4	-7	-2	0	0	0	0
85	-16	-11	-6	-10	-5	0	0	0	0
80	-17	-12	-7	-12	-7	-2	0	0	0
75	-19	-14	-9	-14	-9	-4	-3	0	0
70	-20	-15	-10	-16	-11	-6	-6	-1	0
65	-21	-16	-11	-17	-12	-7	-9	-4	0
60	-21	-16	-11	-19	-14	-9	-12	-7	-2
55	-22	-17	-12	-20	-15	-10	-15	-10	-5
50	-24	-19	-14	-22	-17	-12	-17	-12	-7
45	-31	-26	-21	-28	-23	-18	-21	-16	-11
40	-42	-37	-32	-38	-33	-28	-25	-20	-15

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-13.9	-16.4	-18.9	-16.2	-18.7	-21.2	-21.0	-23.5	-26.0
85	-12.9	-15.4	-17.9	-14.8	-17.3	-19.8	-18.8	-21.3	-23.8
80	-11.8	-14.3	-16.8	-13.4	-15.9	-18.4	-16.7	-19.2	-21.7
75	-10.8	-13.3	-15.8	-12.1	-14.5	-17.0	-14.7	-17.2	-19.7
70	-9.8	-12.3	-14.8	-10.8	-13.3	-15.8	-13.0	-15.5	-18.0
65	-8.8	-11.3	-13.8	-9.6	-12.1	-14.6	-11.4	-13.9	-16.3
60	-7.9	-10.4	-12.9	-8.5	-11.0	-13.5	-9.9	-12.4	-14.9
55	-7.0	-9.5	-12.0	-7.5	-10.0	-12.5	-8.6	-11.1	-13.6
50	-6.2	-8.7	-11.1	-6.6	-9.1	-11.6	-7.5	-10.0	-12.5
45	-5.3	-7.8	-10.3	-5.8	-8.2	-10.7	-6.6	-9.0	-11.5
40	-4.5	-7.0	-9.5	-5.0	-7.5	-10.0	-5.8	-8.2	-10.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
2200							34.2		
2400							45.5		
2600	30.8			41.1			56.9	38.8	
2800	41.9			52.5	34.4		68.6	50.1	32.0
3000	53.4	35.2		64.7	45.6		80.5	61.6	43.3
3200	65.9	46.4		77.8	57.3	38.8	92.7	73.3	54.6
3400	79.5	58.3	39.7	91.8	69.8	50.2		85.4	66.2
3600	94.6	71.2	51.0		83.3	62.2		97.6	78.1
3800		85.5	63.3		97.5	75.1			90.3
4000			76.7			89.0			
4200			91.5						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -65 m/+65 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-25	-15	-5	-14	-4	0	0	0	0
85	-26	-16	-6	-17	-7	0	0	0	0
80	-28	-18	-8	-20	-10	0	0	0	0
75	-30	-20	-10	-23	-13	-3	-5	0	0
70	-31	-21	-11	-26	-16	-6	-11	-1	0
65	-33	-23	-13	-29	-19	-9	-17	-7	0
60	-35	-25	-15	-31	-21	-11	-21	-11	-1
55	-36	-26	-16	-33	-23	-13	-26	-16	-6
50	-38	-28	-18	-35	-25	-15	-30	-20	-10
45	-39	-29	-19	-37	-27	-17	-33	-23	-13
40	-41	-31	-21	-39	-29	-19	-36	-26	-16

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-18.8	-19.8	-20.8	-21.3	-22.3	-23.3	-29.1	-30.5	-31.9
90	-17.2	-18.2	-19.2	-19.4	-20.4	-21.4	-26.3	-27.7	-29.0
85	-15.6	-16.6	-17.6	-17.5	-18.5	-19.5	-23.5	-24.8	-26.2
80	-14.0	-15.0	-16.0	-15.5	-16.5	-17.5	-20.7	-22.0	-23.4
75	-12.7	-13.7	-14.7	-13.9	-14.9	-15.9	-18.3	-19.6	-21.0
70	-11.7	-12.7	-13.7	-12.6	-13.6	-14.6	-16.5	-17.8	-19.2
65	-10.9	-11.9	-12.9	-11.7	-12.7	-13.7	-15.2	-16.6	-18.0
60	-10.5	-11.5	-12.5	-11.2	-12.2	-13.2	-14.6	-15.9	-17.3
55	-10.4	-11.4	-12.4	-11.1	-12.1	-13.1	-14.5	-15.9	-17.2
50	-10.7	-11.7	-12.7	-11.3	-12.3	-13.3	-15.0	-16.4	-17.8
45	-11.2	-12.2	-13.2	-11.9	-12.9	-13.9	-16.1	-17.5	-18.9
40	-11.8	-12.8	-13.8	-12.7	-13.7	-14.7	-17.5	-18.8	-20.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2200				31.9			37.2	31.5	
2400	39.4	33.5		42.1	36.2	30.3	47.2	41.4	35.6
2600	49.9	43.8	37.8	52.5	46.4	40.5	57.7	51.6	45.6
2800	60.7	54.4	48.2	63.4	57.0	50.8	68.8	62.3	56.1
3000	71.9	65.4	59.0	74.8	68.1	61.6	80.6	73.7	67.0
3200	83.6	76.8	70.1	86.6	79.7	72.9	92.8	85.8	78.7
3400	95.5	88.6	81.7	98.6	91.7	84.7		98.0	90.9
3600		100.5	93.6		103.6	96.7			103.1

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-5	-3	-1	0	0	0	0	0	0
85	-6	-4	-2	0	0	0	0	0	0
80	-7	-5	-3	-2	0	0	0	0	0
75	-9	-7	-5	-4	-2	0	0	0	0
70	-10	-8	-6	-6	-4	-2	0	0	0
65	-11	-9	-7	-7	-5	-3	0	0	0
60	-11	-9	-7	-9	-7	-5	-2	0	0
55	-12	-10	-8	-10	-8	-6	-4	-2	0
50	-13	-11	-9	-11	-9	-7	-6	-4	-2
45	-13	-11	-9	-12	-10	-8	-7	-5	-3
40	-14	-12	-10	-12	-10	-8	-8	-6	-4

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-18.9	-19.9	-20.9	-21.2	-22.2	-23.2	-26.0	-27.0	-28.0
85	-17.9	-18.9	-19.9	-19.8	-20.8	-21.8	-23.8	-24.8	-25.8
80	-16.8	-17.8	-18.8	-18.4	-19.4	-20.4	-21.7	-22.7	-23.7
75	-15.8	-16.8	-17.8	-17.0	-18.0	-19.0	-19.7	-20.7	-21.7
70	-14.8	-15.8	-16.8	-15.8	-16.8	-17.8	-18.0	-19.0	-20.0
65	-13.8	-14.8	-15.8	-14.6	-15.6	-16.6	-16.3	-17.3	-18.3
60	-12.9	-13.9	-14.9	-13.5	-14.5	-15.5	-14.9	-15.9	-16.9
55	-12.0	-13.0	-14.0	-12.5	-13.5	-14.5	-13.6	-14.6	-15.6
50	-11.1	-12.1	-13.1	-11.6	-12.6	-13.6	-12.5	-13.5	-14.5
45	-10.3	-11.3	-12.3	-10.7	-11.7	-12.7	-11.5	-12.5	-13.5
40	-9.5	-10.5	-11.5	-10.0	-11.0	-12.0	-10.7	-11.7	-12.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2800							32.0		
3000							43.3	36.0	
3200				38.8	31.7		54.6	47.3	40.1
3400	39.7	32.6		50.2	42.9	35.7	66.2	58.8	51.4
3600	51.0	43.7	36.5	62.2	54.4	47.0	78.1	70.5	63.0
3800	63.3	55.3	47.8	75.1	66.7	58.8	90.3	82.5	74.8
4000	76.7	68.0	59.7	89.0	80.0	71.4		94.7	86.8
4200	91.5	81.9	72.8		94.1	85.0			99.0
4400		97.0	87.3			99.2			

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -65 m/+65 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-5	-1	0	0	0	0	0	0	0
85	-6	-2	0	0	0	0	0	0	0
80	-8	-4	0	0	0	0	0	0	0
75	-10	-6	-2	-3	0	0	0	0	0
70	-11	-7	-3	-6	-2	0	0	0	0
65	-13	-9	-5	-9	-5	-1	0	0	0
60	-15	-11	-7	-11	-7	-3	-1	0	0
55	-16	-12	-8	-13	-9	-5	-6	-2	0
50	-18	-14	-10	-15	-11	-7	-10	-6	-2
45	-19	-15	-11	-17	-13	-9	-13	-9	-5
40	-21	-17	-13	-19	-15	-11	-16	-12	-8

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-1.3	-1.3	-1.3	-6.7	-6.7	-6.7	-11.4	-11.4	-11.4
85	-1.3	-1.3	-1.3	-6.4	-6.4	-6.4	-10.6	-10.6	-10.6
80	-1.4	-1.4	-1.4	-6.0	-6.0	-6.0	-9.9	-9.9	-9.9
75	-1.4	-1.4	-1.4	-5.7	-5.7	-5.7	-9.2	-9.2	-9.2
70	-1.4	-1.4	-1.4	-5.3	-5.3	-5.3	-8.5	-8.5	-8.5
65	-1.4	-1.4	-1.4	-5.0	-5.0	-5.0	-7.8	-7.8	-7.8
60	-1.4	-1.4	-1.4	-4.6	-4.6	-4.6	-7.2	-7.2	-7.2
55	-1.3	-1.3	-1.3	-4.2	-4.2	-4.2	-6.6	-6.6	-6.6
50	-1.2	-1.2	-1.2	-3.9	-3.9	-3.9	-6.0	-6.0	-6.0
45	-1.1	-1.1	-1.1	-3.5	-3.5	-3.5	-5.4	-5.4	-5.4
40	-1.0	-1.0	-1.0	-3.2	-3.2	-3.2	-4.8	-4.8	-4.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	34.6								
1400	50.7	34.7							
1600	67.8	50.8	34.9	33.4					
1800	86.5	68.0	51.0	46.3					
2000		86.7	68.1	59.7	42.4				
2200			86.8	74.0	55.6	38.7	38.1		
2400				89.4	69.7	51.7	48.0	30.0	
2600					84.7	65.4	58.0	39.8	
2800						80.2	68.3	49.7	31.7
3000						96.0	78.9	59.7	41.5
3200							89.7	70.1	51.4
3400								80.7	61.5
3600								91.6	71.9
3800									82.6
4000									93.5

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -35 m/+30 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -35 m/+30 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -50 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-5	-2	0	-14	-11	-9	-25	-22	-20
85	-6	-3	-1	-15	-12	-10	-27	-24	-22
80	-6	-4	-1	-16	-14	-11	-29	-26	-24
75	-7	-5	-2	-18	-15	-13	-30	-28	-25
70	-8	-6	-3	-19	-17	-14	-32	-30	-27
65	-9	-7	-4	-20	-18	-15	-34	-31	-29
60	-10	-8	-5	-22	-19	-17	-35	-33	-30
55	-11	-9	-6	-23	-20	-18	-37	-34	-32
50	-12	-9	-7	-24	-22	-19	-38	-36	-33
45	-13	-10	-8	-25	-23	-20	-40	-37	-35
40	-14	-11	-9	-27	-24	-22	-41	-39	-36

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-1.6	-2.0	-2.4	-8.0	-8.4	-8.8	-13.7	-14.1	-14.5
85	-2.3	-2.7	-3.1	-8.4	-8.8	-9.2	-13.4	-13.8	-14.3
80	-2.8	-3.2	-3.6	-8.6	-9.0	-9.4	-13.0	-13.5	-13.9
75	-3.1	-3.5	-3.9	-8.5	-8.9	-9.3	-12.4	-12.8	-13.2
70	-3.1	-3.5	-3.9	-8.1	-8.5	-8.9	-11.5	-11.9	-12.3
65	-2.8	-3.2	-3.6	-7.4	-7.8	-8.2	-10.3	-10.7	-11.1
60	-2.2	-2.6	-3.0	-6.4	-6.8	-7.3	-8.8	-9.2	-9.6
55	-1.4	-1.8	-2.2	-5.2	-5.6	-6.0	-7.1	-7.5	-7.9
50	-0.2	-0.6	-1.1	-3.6	-4.0	-4.4	-5.1	-5.5	-5.9
45	0.0	0.0	0.0	-1.7	-2.1	-2.5	-2.8	-3.2	-3.6
40	0.0	0.0	0.0	0.0	0.0	-0.4	-0.3	-0.8	-1.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1600	43.9								
1800	68.6	40.0							
2000	91.5	65.0	36.1						
2200		88.1	61.4						
2400			84.7	44.4					
2600				65.2	38.2				
2800				86.1	58.9	32.0			
3000					79.8	52.7			
3200						73.5			
3400						94.5			
3600							34.8		
3800							49.9		
4000							65.3	38.6	
4200							81.1	53.7	
4400							97.3	69.2	42.3
4600								85.1	57.6
4800									73.2
5000									89.2

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -65 m/+65 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-9	-1	0	-22	-14	-7	-40	-33	-25
85	-9	-1	0	-23	-15	-8	-43	-35	-28
80	-9	-2	0	-24	-16	-9	-46	-38	-31
75	-10	-3	0	-26	-18	-11	-49	-42	-34
70	-12	-4	0	-28	-21	-13	-52	-45	-37
65	-14	-7	0	-32	-24	-17	-56	-48	-41
60	-17	-10	-2	-36	-28	-21	-59	-52	-44
55	-21	-13	-6	-41	-33	-26	-63	-56	-48
50	-25	-18	-10	-46	-39	-31	-67	-59	-52
45	-30	-23	-15	-52	-45	-37	-71	-63	-56
40	-36	-29	-21	-59	-52	-44	-75	-67	-60

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)

Maximum Reverse Thrust

Weight Adjustment (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-1.5	-1.5	-1.5	-8.5	-8.5	-8.5	-14.0	-14.0	-14.0
90	-1.4	-1.4	-1.4	-7.7	-7.7	-7.7	-12.6	-12.6	-12.6
85	-1.4	-1.4	-1.4	-6.9	-6.9	-6.9	-11.2	-11.2	-11.2
80	-1.3	-1.3	-1.3	-6.1	-6.1	-6.1	-9.9	-9.9	-9.9
75	-1.3	-1.3	-1.3	-5.5	-5.5	-5.5	-8.8	-8.8	-8.8
70	-1.3	-1.3	-1.3	-5.0	-5.0	-5.0	-8.0	-8.0	-8.0
65	-1.2	-1.2	-1.2	-4.8	-4.8	-4.8	-7.5	-7.5	-7.5
60	-1.2	-1.2	-1.2	-4.7	-4.7	-4.7	-7.4	-7.4	-7.4
55	-1.2	-1.2	-1.2	-4.8	-4.8	-4.8	-7.5	-7.5	-7.5
50	-1.3	-1.3	-1.3	-5.2	-5.2	-5.2	-8.1	-8.1	-8.1
45	-1.3	-1.3	-1.3	-5.7	-5.7	-5.7	-8.9	-8.9	-8.9
40	-1.3	-1.3	-1.3	-6.3	-6.3	-6.3	-9.8	-9.8	-9.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1600	32.0								
1800	49.7	42.7	35.7						
2000	68.0	60.7	53.5						
2200	87.0	79.4	71.9	36.7					
2400		98.6	91.0	49.5	42.4	35.5			
2600				63.1	55.5	48.2			
2800				77.8	69.6	61.7	34.8		
3000				93.5	84.9	76.3	43.4	37.1	30.8
3200					100.6	92.0	52.3	45.7	39.4
3400							61.8	54.8	48.1
3600							71.8	64.4	57.3
3800							82.5	74.6	67.1
4000							93.6	85.5	77.4
4200							104.6	96.5	88.4
4400									99.5

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-9	-8	-7	-20	-19	-18
85	-1	0	0	-10	-9	-8	-22	-21	-20
80	-2	-1	0	-11	-10	-9	-24	-23	-22
75	-2	-1	0	-13	-12	-11	-25	-24	-23
70	-3	-2	-1	-14	-13	-12	-27	-26	-25
65	-4	-3	-2	-15	-14	-13	-29	-28	-27
60	-5	-4	-3	-17	-16	-15	-30	-29	-28
55	-6	-5	-4	-18	-17	-16	-32	-31	-30
50	-7	-6	-5	-19	-18	-17	-33	-32	-31
45	-8	-7	-6	-20	-19	-18	-34	-33	-32
40	-8	-7	-6	-21	-20	-19	-35	-34	-33

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).
v V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
Weight Adjustment (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-2.4	-2.5	-2.7	-8.8	-9.0	-9.1	-14.5	-14.7	-14.8
85	-3.1	-3.3	-3.4	-9.2	-9.3	-9.5	-14.3	-14.4	-14.6
80	-3.6	-3.8	-4.0	-9.4	-9.5	-9.7	-13.9	-14.0	-14.2
75	-3.9	-4.1	-4.3	-9.3	-9.5	-9.6	-13.2	-13.4	-13.5
70	-3.9	-4.1	-4.2	-8.9	-9.1	-9.2	-12.3	-12.5	-12.6
65	-3.6	-3.8	-4.0	-8.2	-8.4	-8.6	-11.1	-11.3	-11.4
60	-3.0	-3.2	-3.4	-7.3	-7.4	-7.6	-9.6	-9.8	-10.0
55	-2.2	-2.4	-2.5	-6.0	-6.1	-6.3	-7.9	-8.1	-8.2
50	-1.1	-1.2	-1.4	-4.4	-4.6	-4.7	-5.9	-6.1	-6.3
45	0.0	0.0	0.0	-2.5	-2.7	-2.9	-3.6	-3.8	-3.9
40	0.0	0.0	0.0	-0.4	-0.6	-0.7	-1.2	-1.3	-1.5

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2000	36.1								
2200	61.4	50.0	38.2						
2400	84.7	74.2	63.4						
2600		96.9	86.5						
2800				32.0					
3000				52.7	41.9	31.2			
3200				73.5	62.7	51.9			
3400				94.5	83.6	72.7			
3600						93.6			
4400							42.3	31.8	
4600							57.6	46.9	36.3
4800							73.2	62.2	51.4
5000							89.2	77.9	66.9
5200								94.0	82.7
5400									98.9

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -45 m/+45 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -65 m/+65 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-7	-4	-1	-25	-22	-19
85	0	0	0	-8	-5	-2	-28	-25	-22
80	0	0	0	-9	-6	-3	-31	-28	-25
75	0	0	0	-11	-8	-5	-34	-31	-28
70	0	0	0	-13	-10	-7	-37	-34	-31
65	0	0	0	-17	-14	-11	-41	-38	-35
60	-2	0	0	-21	-18	-15	-44	-41	-38
55	-6	-3	0	-26	-23	-20	-48	-45	-42
50	-10	-7	-4	-31	-28	-25	-52	-49	-46
45	-15	-12	-9	-37	-34	-31	-56	-53	-50
40	-21	-18	-15	-44	-41	-38	-60	-57	-54

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 - (26K Derate)
Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	94.8	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	95.4	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.0	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	96.8	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	97.4	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.0	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	97.6	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	96.8	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	96.0	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	95.2	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	94.5	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
5	93.7	95.0	96.4	97.0	97.6	98.0	98.3	98.6	99.0	99.4	99.8	100.3	100.7
0	92.9	94.2	95.6	96.3	96.9	97.2	97.5	97.9	98.2	98.6	99.0	99.5	100.0
-5	92.0	93.4	94.8	95.5	96.1	96.4	96.7	97.1	97.5	97.9	98.3	98.7	99.2
-10	91.2	92.6	94.0	94.7	95.3	95.6	96.0	96.3	96.7	97.1	97.5	98.0	98.4
-15	90.4	91.7	93.2	93.9	94.5	94.8	95.2	95.6	95.9	96.3	96.7	97.2	97.6
-20	89.6	90.9	92.4	93.0	93.7	94.0	94.4	94.8	95.2	95.6	95.9	96.4	96.8
-25	88.7	90.1	91.6	92.2	92.9	93.2	93.6	94.0	94.4	94.8	95.2	95.6	96.0
-30	87.9	89.2	90.7	91.4	92.0	92.4	92.8	93.2	93.6	94.0	94.3	94.8	95.2
-35	87.0	88.4	89.9	90.5	91.2	91.6	91.9	92.4	92.8	93.1	93.5	94.0	94.4
-40	86.1	87.5	89.0	89.7	90.3	90.7	91.1	91.5	91.9	92.3	92.7	93.1	93.6
-45	85.3	86.6	88.2	88.8	89.5	89.9	90.3	90.7	91.1	91.5	91.9	92.3	92.7
-50	84.4	85.7	87.3	87.9	88.6	89.0	89.4	89.9	90.3	90.6	91.0	91.5	91.9

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (26K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.1					
35	99.0	98.8	98.9			
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5	100.7	101.6	101.7	101.7	101.6	101.6
0	100.0	100.8	101.7	101.9	101.8	101.8
-5	99.2	100.0	100.9	101.2	101.5	101.6
-10	98.4	99.3	100.1	100.4	100.7	100.8
-15	97.6	98.5	99.3	99.6	99.9	100.0
-20	96.8	97.7	98.5	98.8	99.1	99.2
-25	96.0	96.9	97.7	98.0	98.3	98.4
-30	95.2	96.0	96.9	97.2	97.4	97.6
-35	94.4	95.2	96.0	96.4	96.6	96.7
-40	93.6	94.4	95.2	95.5	95.8	95.9
-45	92.7	93.5	94.3	94.6	94.9	95.0
-50	91.9	92.7	93.5	93.8	94.0	94.1

Takeoff %N1 - High Altitudes (26K Derate)**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - (26K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67	65	63						
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	71	71	69	67	65	63	61	59	57	55	53	
30	69	67	67	67	65	63	61	59	57	55	53	51
25	69	67	66	64	65	63	61	59	57	55	53	51
20	69	67	66	64	64	63	61	59	57	55	53	51
15	69	67	66	64	64	63	61	59	57	55	53	51
10 & BELOW	69	67	66	64	64	63	61	59	57	55	53	51

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	93.4	93.7	94.2	94.7	95.4	96.1	96.9	97.3	97.6	97.8	97.8	97.7
70	94.1	94.4	94.4	94.4	94.7	95.4	96.2	96.6	96.9	97.1	97.1	97.1
65	94.8	95.1	95.2	95.2	95.3	95.4	95.5	96.0	96.2	96.5	96.4	96.4
60	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

Assumed Temperature Reduced Thrust - (26K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.9													
100	14.9	10.9												
90	14.0	11.7												
80	12.9	11.6	7.8											
70	11.2	10.7	8.6	7.8	6.3									
60	9.2	9.5	8.5	8.4	7.1	6.3	4.9							
50	7.8	7.8	7.5	7.1	6.9	7.0	5.6	4.9	3.4					
40		6.0	6.2	6.1	5.9	5.8	5.7	5.6	4.7	4.4	5.3			
30		4.6	4.6	4.6	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	3.9	
20			2.9	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.6
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	53	52	52	50	48	47
5	53	51	52	50	48	47
0 & BELOW	53	51	52	50	48	47

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.7					
55	95.0	95.3	96.4	97.9		
50	96.1	95.7	96.1	97.2	98.6	99.3
45	97.1	96.8	97.1	97.7	98.4	98.9
40	98.1	97.8	98.0	98.5	99.0	99.3
35	99.0	98.8	98.9	99.1	99.4	99.6
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5		101.6	101.7	101.7	101.6	101.6
0				101.9	101.8	101.8
-5				101.2	101.5	101.6
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.4										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.6								
70	11.3	11.2	10.6								
60	10.0	9.2	9.4	7.5							
50		7.9	7.9	7.5	6.1	5.9	5.8				
40		6.5	6.0	6.2	6.1	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (24K Derate)
Flaps 1 and 5
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
72	143	145	151	140	142	147
68	138	140	147	135	137	143
64	133	135	143	130	132	139
60	128	130	138	125	127	135
56	122	124	133	119	122	130
52	116	118	129	113	116	126
48	110	112	123	108	110	121
44	104	106	118	101	104	115
40	97	100	113	94	97	110

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	7	8						5	6						-1	-1					
60	140	5	6	7	9				4	5	6	7				-1	-1	-1	-2			
50	122	3	4	5	7	8	10	11	2	3	5	6	7	8	10	-1	-1	-1	-1	-1	-1	-2
40	104	1	2	4	5	7	8	10	1	2	3	5	6	7	9	0	0	0	0	-1	-1	-1
30	86	0	0	2	3	5	7	8	0	0	2	3	5	6	8	0	0	0	0	0	0	0
20	68	0	0	1	2	3	5	7	0	0	1	2	3	5	6	0	0	0	0	1	0	0
-60	-76	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	0	0	1	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
84	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1
76	-2	-1	0	1	1		-2	-1	0	0	0	1	1	1
68	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
60	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
52	-1	0	0	1	1		-1	-1	0	0	0	1	1	1
44	-1	0	0	1	1		-2	-1	0	0	1	1	1	2
40	-1	0	0	1	2		-2	-1	0	0	1	1	2	2

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Dry Runway (24K Derate)

Flaps 10, 15 and 25

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
76	138	138	144	135	135	140			
72	134	135	140	132	132	138	130	130	136
68	129	131	137	128	128	134	126	126	133
64	125	126	134	124	124	131	122	122	130
60	120	122	130	119	119	127	117	118	126
56	115	117	126	114	115	123	112	113	122
52	110	112	122	109	110	119	107	108	118
48	105	106	117	104	105	115	102	103	114
44	99	101	113	98	99	111	97	98	110
40	93	95	108	92	94	106	91	93	105

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	6	6						4	5						-2	-2					
60	140	4	5	6	7				3	4	5	6				-2	-2		-3			
50	122	3	3	4	6	7	8	10	2	3	4	5	5	6	8	-1	-1	-2	-2	-3	-3	-4
40	104	1	2	3	4	5	6	8	1	1	3	3	4	5	6	0	-1	-1	-2	-2	-3	-3
30	86	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2
20	68	0	0	1	1	2	4	5	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
76	-3	-1	0	1	1		-2	-1	-1	0	0	1	1	1
68	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
60	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
52	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
44	-1	-1	0	1	1		-2	-2	-1	0	0	1	1	1
40	-1	-1	0	0	1		-2	-2	-1	0	0	1	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	154	154	156												
70	148	149	152	145	146	148									
65	142	143	146	138	139	142	132	133	136						
60	134	136	140	131	133	136	125	126	130	123	123	127	121	121	125
55	127	128	133	124	125	130	118	119	124	116	117	121	115	115	120
50	119	121	126	116	118	123	111	112	118	110	110	116	108	109	114
45	111	112	119	108	110	117	103	105	112	103	103	110	101	102	108
40	103	104	112	99	101	109	95	98	106	95	96	104	92	94	102

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	8						6						0					
40	104	6	7	7	8	9	10	4	5	6	7	8	8	0	0	1	1	1	1
30	86	4	5	5	6	7	8	3	4	5	5	6	7	0	0	0	1	1	1
20	68	2	3	4	5	6	6	1	2	3	4	5	5	0	0	1	1	1	1
10	50	0	1	2	3	4	5	0	1	2	3	4	4	0	0	1	1	1	1
0	32	0	1	2	3	4	4	0	1	2	2	3	4	0	0	1	1	1	1
-60	-76	0	1	2	3	4	4	0	1	2	2	3	4	0	0	1	1	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-3	-2	0	0	0		-1	0	0	0	0	0	0	0
70	-3	-2	0	0	0		-1	0	0	0	0	0	0	0
65	-2	-1	0	1	1		-1	-1	0	0	0	0	0	1
60	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
55	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
50	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
45	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
40	-2	-1	0	0	1		-1	-1	-1	0	0	0	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	90					
40	104	90	89	88	87	88	87
30	86	92	90	88	87	88	87
20	68	95	94	92	90	88	87
10	50	99	97	95	93	91	90
0	32	99	98	96	94	93	92
-60	-76	100	98	97	95	94	93

Takeoff Speeds - Wet Runway (24K Derate)**Flaps 1 and 5****V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
80	146	154	158	142	150	155
76	141	149	154	137	146	151
72	136	145	151	133	142	147
68	131	140	147	128	137	144
64	126	135	143	123	132	140
60	120	130	138	117	127	135
56	114	124	133	111	122	131
52	108	118	129	105	116	126
48	101	112	123	99	110	121
44	94	106	118	92	104	115
40	88	100	113	85	97	110

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	9	11						5	6						-1	-1								
60	140	7	8	10	11				4	5	6	7				-1	-1	-1	-2						
50	122	4	5	7	9	11	13	15	2	3	5	6	7	8	10	-1	-1	-1	-1	-1	-1	-2			
40	104	1	3	5	7	9	10	13	1	2	3	5	6	7	9	0	0	0	-1	-1	-1	-1			
30	86	0	0	2	4	6	8	10	0	0	2	3	5	6	8	0	0	0	0	0	0	0			
20	68	0	0	1	2	4	6	8	0	0	1	2	3	5	6	0	0	0	0	1	0	0			
-60	-76	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	0	0	1	1	1			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40		
80	-4	-2	0	3	5		-3	-2	-1	0	1	1	2	3		
72	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2		
64	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3		
56	-3	-2	0	2	3		-4	-2	-1	0	1	2	2	3		
48	-2	-1	0	2	3		-4	-2	-1	0	1	2	3	4		
40	-1	0	0	2	3		-4	-2	-1	0	1	3	4	5		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Wet Runway (24K Derate)

Flaps 10, 15 and 25

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
76	132	138	144	132	135	140			
72	127	135	140	127	132	138	125	130	136
68	123	131	137	122	128	134	121	126	133
64	118	126	134	118	124	131	116	122	130
60	113	122	130	112	119	127	111	118	126
56	107	117	126	107	115	123	105	113	122
52	102	112	122	101	110	119	100	108	118
48	96	106	117	95	105	115	94	103	114
44	91	101	113	90	99	111	89	98	110
40	85	95	108	84	94	106	83	93	105

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	8	9						4	5						-2	-2					
60	140	6	7	8	10				3	4	5	6				-2	-2	-2	-3			
50	122	4	4	6	8	9	11	14	2	3	4	5	5	6	8	-1	-1	-2	-2	-3	-3	-4
40	104	1	2	4	5	7	9	11	1	1	3	3	4	5	6	0	-1	-1	-2	-2	-3	-3
30	86	0	0	2	3	5	6	8	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2
20	68	0	0	1	2	3	5	6	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2
-60	-76	0	0	1	2	3	4	5	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
76	-4	-2	0	2	4	-4	-2	-1	0	1	1	2	2
72	-4	-2	0	2	4	-4	-2	-1	0	1	1	2	2
64	-3	-2	0	2	3	-4	-2	-1	0	1	1	2	3
56	-3	-2	0	1	3	-4	-3	-1	0	1	1	2	3
48	-2	-1	0	1	2	-4	-3	-1	0	1	2	3	3
40	-2	-1	0	1	2	-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	148	154	156												
70	142	149	152	139	146	148									
65	135	143	146	132	139	142	126	133	136						
60	127	136	140	124	133	136	119	126	130	118	123	127	117	121	125
55	119	128	133	116	125	130	111	119	124	111	117	121	110	115	120
50	111	121	126	108	118	123	103	112	118	103	110	116	102	109	114
45	102	112	119	99	110	117	96	105	112	95	103	110	94	102	108
40	93	104	112	91	101	109	88	98	106	86	96	104	86	94	102

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	11						6						0					
40	104	8	9	10	12	13	14	4	5	6	7	8	8	0	0	1	1	1	1
30	86	5	6	7	9	10	11	3	4	5	5	6	7	0	0	0	1	1	1
20	68	2	3	5	6	7	8	1	2	3	4	5	5	0	0	1	1	1	1
10	50	0	1	3	4	5	6	0	1	2	3	4	4	0	0	1	1	1	1
0	32	0	1	2	3	4	5	0	1	2	2	3	4	0	0	1	1	1	1
-60	-76	0	1	2	3	4	5	0	1	2	2	3	4	0	0	1	1	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-6	-3	0	3	5		-2	-1	-1	0	0	1	1	2
70	-5	-3	0	3	5		-2	-1	-1	0	0	1	1	2
65	-5	-2	0	2	5		-2	-2	-1	0	0	1	1	2
60	-4	-2	0	2	4		-3	-2	-1	0	0	1	1	2
55	-4	-2	0	2	4		-3	-2	-1	0	0	1	2	2
50	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
45	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	2
40	-3	-1	0	1	3		-3	-2	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	90					
40	104	90	89	88	87	88	87
30	86	92	90	88	87	88	87
20	68	95	94	92	90	88	87
10	50	99	97	95	93	91	90
0	32	99	98	96	94	93	92
-60	-76	100	98	97	95	94	93

Maximum Allowable Clearway (24K Derate)

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	140
1800	200
2400	250
3000	310
3600	430
4200	470

Maximum Allowable Clearway - High Altitudes (24K Derate)

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
2000	230
2500	270
3000	320
3500	410
4000	450
4500	490

Clearway and Stopway V1 Adjustments (24K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-3	-4	-4	-5				
200	-3	-3	-4	-4				
100	-2	-2	-2	-2				
0	0	0	0	0	0	0	0	0
-100	1	1	1	1	2	2	1	1
-200	1	1	1	1	3	3	2	2
-300	1	1	1	1	4	4	3	3

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitude (24K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-4	-3	-3	-3				
200	-4	-3	-2	-2				
100	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-100	2	0	0	0	2	1	1	1
-200	2	0	0	0	3	2	2	2
-300	2	0	0	0	4	3	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (24K Derate)
Flaps 1 and 5

WEIGHT (1000 KG)	C.G. (%MAC)									
	9	12	16	20	24	26	28	30	32	33
80	9 1/2	8 3/4	7 3/4	6 3/4	6	5 1/2	5 1/4	4 3/4	4 1/2	4 1/4
70	9 1/2	8 1/2	7 1/2	6 3/4	6	5 1/2	5	4 3/4	4 1/4	4
60	8 3/4	8	7	6 1/4	5 1/2	5	4 1/2	4 1/4	4	4
50	7 3/4	7	6	5 1/4	4 1/2	4 1/4	4	4	4	4
45	6 3/4	6 1/4	5 1/2	5	4 1/4	4	4	4	4	4

Stab Trim Setting (24K Derate)
Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)									
	9	12	16	20	23	25	27	29	31	33
80	9 3/4	8 3/4	7 1/4	6 1/2	5 3/4	5 1/4	5	4 1/2	4	4
70	9 1/2	8 1/2	7 1/4	6 1/4	5 1/2	5 1/4	4 3/4	4 1/4	4	4
60	9	8	6 1/2	5 3/4	5	4 3/4	4 1/4	4	4	4
50	7 1/2	6 3/4	5 1/2	4 3/4	4 1/4	4	4	4	4	4
45	6 1/4	5 3/4	5	4 1/2	4	4	4	4	4	4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-12.1	-14.8	-17.5	-14.7	-17.4	-20.1	-20.2	-22.9	-25.6
85	-10.7	-13.4	-16.1	-12.8	-15.6	-18.3	-17.4	-20.2	-22.9
80	-9.4	-12.1	-14.8	-11.2	-13.9	-16.6	-14.9	-17.6	-20.3
75	-8.2	-10.9	-13.7	-9.6	-12.4	-15.1	-12.6	-15.4	-18.1
70	-7.2	-9.9	-12.6	-8.3	-11.0	-13.7	-10.7	-13.4	-16.1
65	-6.2	-9.0	-11.7	-7.1	-9.8	-12.6	-9.0	-11.7	-14.5
60	-5.4	-8.2	-10.9	-6.1	-8.8	-11.6	-7.6	-10.4	-13.1
55	-4.8	-7.5	-10.2	-5.3	-8.0	-10.7	-6.5	-9.3	-12.0
50	-4.2	-6.9	-9.6	-4.6	-7.3	-10.0	-5.7	-8.4	-11.1
45	-3.6	-6.3	-9.0	-3.9	-6.7	-9.4	-4.9	-7.6	-10.3
40	-3.0	-5.8	-8.5	-3.3	-6.0	-8.7	-4.0	-6.7	-9.5

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1400							34.9		
1600	39.5			42.7			47.8		
1800	53.3	32.4		56.4	35.6		61.2	40.9	
2000	67.6	46.0		70.5	49.1		75.2	54.1	34.2
2200	82.4	60.0	38.8	85.2	63.0	42.0	89.9	67.7	47.1
2400	97.6	74.5	52.6		77.4	55.7		82.1	60.5
2600		89.6	66.8		92.3	69.8		97.0	74.5
2800			81.6			84.4			89.1
3000			96.8			99.4			

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-12	-7	-2	-4	0	0	0	0	0
85	-13	-8	-3	-6	-1	0	0	0	0
80	-15	-10	-5	-9	-4	0	0	0	0
75	-16	-11	-6	-11	-6	-1	-2	0	0
70	-17	-12	-7	-13	-8	-3	-4	0	0
65	-19	-14	-9	-15	-10	-5	-6	-1	0
60	-20	-15	-10	-16	-11	-6	-9	-4	0
55	-20	-15	-10	-18	-13	-8	-12	-7	-2
50	-21	-16	-11	-19	-14	-9	-15	-10	-5
45	-23	-18	-13	-21	-16	-11	-17	-12	-7
40	-25	-20	-15	-23	-18	-13	-19	-14	-9

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-15.1	-18.3	-21.5	-17.8	-21.0	-24.1	-23.3	-26.5	-29.6
85	-13.7	-16.9	-20.0	-15.9	-19.1	-22.3	-20.6	-23.7	-26.9
80	-12.3	-15.5	-18.7	-14.2	-17.3	-20.5	-18.0	-21.1	-24.3
75	-11.1	-14.3	-17.4	-12.5	-15.7	-18.9	-15.6	-18.8	-22.0
70	-9.9	-13.1	-16.3	-11.1	-14.3	-17.4	-13.5	-16.7	-19.9
65	-8.9	-12.1	-15.3	-9.8	-13.0	-16.1	-11.7	-14.9	-18.1
60	-8.0	-11.1	-14.3	-8.7	-11.8	-15.0	-10.2	-13.4	-16.5
55	-7.1	-10.3	-13.5	-7.7	-10.8	-14.0	-8.9	-12.1	-15.2
50	-6.4	-9.6	-12.7	-6.8	-10.0	-13.2	-7.9	-11.0	-14.2
45	-5.8	-8.9	-12.1	-6.2	-9.3	-12.5	-7.1	-10.3	-13.5
40	-5.2	-8.4	-11.6	-5.7	-8.8	-12.0	-6.6	-9.8	-12.9

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
2000							38.5		
2200				35.3			53.2		
2400	39.7			51.9			68.6	44.3	
2600	57.1			69.3	41.9		85.1	59.3	35.6
2800	76.4	46.5		87.7	58.7	32.0		75.1	50.2
3000	97.7	64.6	36.3		76.5	48.5		92.0	65.5
3200		84.7	53.5		95.2	65.7			81.7
3400			72.4			83.9			98.8
3600			93.4						

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION**Slush/Standing Water Takeoff (24K Derate)****No Reverse Thrust****V1 Adjustment (KIAS)**

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-20	-13	-5	-8	0	0	0	0	0
85	-22	-15	-7	-11	-4	0	0	0	0
80	-24	-17	-9	-15	-8	0	0	0	0
75	-26	-19	-11	-19	-11	-4	0	0	0
70	-28	-21	-13	-22	-14	-7	-3	0	0
65	-30	-22	-15	-25	-17	-10	-10	-3	0
60	-32	-24	-17	-27	-20	-12	-16	-9	-1
55	-33	-26	-18	-30	-22	-15	-22	-14	-7
50	-35	-27	-20	-32	-25	-17	-26	-18	-11
45	-36	-29	-21	-34	-27	-19	-29	-22	-14
40	-38	-30	-23	-36	-29	-21	-32	-25	-17

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
Maximum Reverse Thrust
Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-17.5	-18.6	-19.7	-20.1	-21.2	-22.3	-25.6	-26.7	-27.8
85	-16.1	-17.2	-18.3	-18.3	-19.4	-20.5	-22.9	-24.0	-25.1
80	-14.8	-15.9	-17.0	-16.6	-17.7	-18.8	-20.3	-21.4	-22.5
75	-13.7	-14.8	-15.8	-15.1	-16.2	-17.3	-18.1	-19.2	-20.3
70	-12.6	-13.7	-14.8	-13.7	-14.8	-15.9	-16.1	-17.2	-18.3
65	-11.7	-12.8	-13.9	-12.6	-13.6	-14.7	-14.5	-15.5	-16.6
60	-10.9	-12.0	-13.1	-11.6	-12.6	-13.7	-13.1	-14.2	-15.3
55	-10.2	-11.3	-12.4	-10.7	-11.8	-12.9	-12.0	-13.1	-14.2
50	-9.6	-10.7	-11.8	-10.0	-11.1	-12.2	-11.1	-12.2	-13.3
45	-9.1	-10.1	-11.2	-9.4	-10.5	-11.6	-10.3	-11.4	-12.5
40	-8.5	-9.6	-10.7	-8.7	-9.8	-10.9	-9.5	-10.6	-11.6

VI(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2000							34.2		
2200	38.8	30.6		42.0	33.9		47.1	39.2	31.4
2400	52.6	44.1	35.9	55.7	47.3	39.0	60.5	52.3	44.2
2600	66.8	58.1	49.5	69.8	61.1	52.6	74.5	65.9	57.5
2800	81.6	72.5	63.6	84.4	75.4	66.7	89.1	80.1	71.3
3000	96.8	87.5	78.3	99.4	90.3	81.2		94.9	85.9
3200			93.5			96.1			

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find VI(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-6	-4	-2	0	0	0	0	0	0
85	-7	-5	-3	0	0	0	0	0	0
80	-9	-7	-5	-3	-1	0	0	0	0
75	-10	-8	-6	-5	-3	-1	0	0	0
70	-11	-9	-7	-7	-5	-3	0	0	0
65	-13	-11	-9	-9	-7	-5	0	0	0
60	-14	-12	-10	-10	-8	-6	-3	-1	0
55	-14	-12	-10	-12	-10	-8	-6	-4	-2
50	-15	-13	-11	-13	-11	-9	-9	-7	-5
45	-17	-15	-13	-15	-13	-11	-11	-9	-7
40	-19	-17	-15	-17	-15	-13	-13	-11	-9

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-21.5	-22.7	-24.0	-24.1	-25.4	-26.7	-29.6	-30.9	-32.2
85	-20.0	-21.3	-22.6	-22.3	-23.6	-24.8	-26.9	-28.2	-29.4
80	-18.7	-20.0	-21.2	-20.5	-21.8	-23.1	-24.3	-25.6	-26.8
75	-17.4	-18.7	-20.0	-18.9	-20.2	-21.4	-22.0	-23.2	-24.5
70	-16.3	-17.6	-18.8	-17.4	-18.7	-20.0	-19.9	-21.2	-22.4
65	-15.3	-16.5	-17.8	-16.1	-17.4	-18.7	-18.1	-19.4	-20.6
60	-14.3	-15.6	-16.9	-15.0	-16.3	-17.5	-16.5	-17.8	-19.1
55	-13.5	-14.7	-16.0	-14.0	-15.3	-16.6	-15.2	-16.5	-17.8
50	-12.7	-14.0	-15.3	-13.2	-14.5	-15.7	-14.2	-15.5	-16.8
45	-12.1	-13.4	-14.7	-12.5	-13.8	-15.1	-13.5	-14.7	-16.0
40	-11.6	-12.9	-14.1	-12.0	-13.3	-14.5	-12.9	-14.2	-15.5

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2600							35.6		
2800				32.0			50.2	40.8	31.6
3000	36.3			48.5	37.9		65.5	55.6	46.1
3200	53.5	42.4	31.6	65.7	54.6	43.9	81.7	71.2	61.1
3400	72.4	60.1	48.6	83.9	72.1	60.8	98.8	87.9	77.1
3600	93.4	79.7	66.9		90.7	78.7			94.0

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -55m/+55m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-5	-2	0	0	0	0	0	0	0
85	-7	-4	-1	0	0	0	0	0	0
80	-9	-6	-3	0	0	0	0	0	0
75	-11	-8	-5	-4	-1	0	0	0	0
70	-13	-10	-7	-7	-4	-1	0	0	0
65	-15	-12	-9	-10	-7	-4	0	0	0
60	-17	-14	-11	-12	-9	-6	-1	0	0
55	-18	-15	-12	-15	-12	-9	-7	-4	-1
50	-20	-17	-14	-17	-14	-11	-11	-8	-5
45	-21	-18	-15	-19	-16	-13	-14	-11	-8
40	-23	-20	-17	-21	-18	-15	-17	-14	-11

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-1.3	-1.3	-1.3	-6.8	-6.8	-6.8	-11.6	-11.6	-11.6
85	-1.4	-1.4	-1.4	-6.4	-6.4	-6.4	-10.7	-10.7	-10.7
80	-1.4	-1.4	-1.4	-6.0	-6.0	-6.0	-9.9	-9.9	-9.9
75	-1.4	-1.4	-1.4	-5.6	-5.6	-5.6	-9.2	-9.2	-9.2
70	-1.4	-1.4	-1.4	-5.3	-5.3	-5.3	-8.4	-8.4	-8.4
65	-1.4	-1.4	-1.4	-4.9	-4.9	-4.9	-7.8	-7.8	-7.8
60	-1.3	-1.3	-1.3	-4.6	-4.6	-4.6	-7.2	-7.2	-7.2
55	-1.3	-1.3	-1.3	-4.2	-4.2	-4.2	-6.6	-6.6	-6.6
50	-1.2	-1.2	-1.2	-3.9	-3.9	-3.9	-6.0	-6.0	-6.0
45	-1.1	-1.1	-1.1	-3.6	-3.6	-3.6	-5.5	-5.5	-5.5
40	-1.1	-1.1	-1.1	-3.2	-3.2	-3.2	-4.9	-4.9	-4.9

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	46.0								
1400	67.8	49.5	31.6	30.8					
1600	90.2	71.4	53.1	46.6					
1800		93.9	75.0	63.1	43.1		30.1		
2000			97.5	80.8	59.4	39.6	40.9		
2200				99.5	76.8	55.7	52.0	32.8	
2400					95.3	72.8	63.6	43.6	
2600						91.2	75.9	54.8	35.4
2800							88.9	66.6	46.3
3000								79.0	57.7
3200								92.3	69.6
3400									82.2
3600									95.6

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -30 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -30 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -45 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-4	-1	0	-12	-9	-7	-22	-19	-17
85	-5	-2	0	-13	-10	-8	-24	-21	-19
80	-5	-3	0	-14	-12	-9	-25	-23	-20
75	-6	-4	-1	-16	-13	-11	-27	-25	-22
70	-7	-5	-2	-17	-14	-12	-29	-27	-24
65	-8	-6	-3	-18	-16	-13	-31	-28	-26
60	-9	-7	-4	-20	-17	-15	-33	-30	-28
55	-10	-8	-5	-21	-19	-16	-34	-32	-29
50	-11	-9	-6	-23	-20	-18	-36	-34	-31
45	-12	-10	-7	-24	-22	-19	-38	-35	-33
40	-13	-11	-8	-26	-23	-21	-39	-37	-34

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
No Reverse Thrust
Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-2.0	-2.4	-2.8	-8.6	-8.9	-9.3	-14.4	-14.8	-15.2
85	-2.3	-2.7	-3.1	-8.4	-8.8	-9.2	-13.8	-14.1	-14.5
80	-2.6	-3.0	-3.3	-8.3	-8.7	-9.1	-13.1	-13.4	-13.8
75	-2.8	-3.1	-3.5	-8.1	-8.5	-8.9	-12.3	-12.7	-13.1
70	-2.8	-3.2	-3.6	-7.8	-8.2	-8.6	-11.5	-11.9	-12.2
65	-2.9	-3.2	-3.6	-7.5	-7.8	-8.2	-10.6	-11.0	-11.4
60	-2.8	-3.2	-3.5	-7.0	-7.4	-7.8	-9.6	-10.0	-10.4
55	-2.6	-3.0	-3.4	-6.4	-6.8	-7.2	-8.6	-9.0	-9.4
50	-2.4	-2.7	-3.1	-5.8	-6.2	-6.6	-7.6	-7.9	-8.3
45	-2.0	-2.4	-2.8	-5.1	-5.5	-5.9	-6.4	-6.8	-7.2
40	-1.6	-2.0	-2.4	-4.3	-4.7	-5.1	-5.2	-5.6	-6.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1400	43.0								
1600	73.6	37.9							
1800		69.3	32.7						
2000		96.2	65.0						
2200			92.3	55.0					
2400				81.8	44.2				
2600					72.0	33.3			
2800					97.9	61.9			
3000						88.3			
3200							30.0		
3400							50.8		
3600							71.9	30.6	
3800							93.5	51.3	
4000								72.4	31.1
4200								94.0	51.8
4400									73.0
4600									94.5

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -60 m/+60 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-8	-3	0	-19	-14	-9	-35	-30	-25
85	-8	-3	0	-20	-15	-10	-38	-33	-28
80	-8	-3	0	-21	-16	-11	-41	-36	-31
75	-9	-4	0	-23	-18	-13	-44	-39	-34
70	-10	-5	0	-25	-20	-15	-47	-42	-37
65	-12	-7	-2	-28	-23	-18	-51	-46	-41
60	-14	-9	-4	-31	-26	-21	-55	-50	-45
55	-16	-11	-6	-34	-29	-24	-59	-54	-49
50	-19	-14	-9	-38	-33	-28	-63	-58	-53
45	-23	-18	-13	-43	-38	-33	-67	-62	-57
40	-27	-22	-17	-47	-42	-37	-72	-67	-62

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-1.3	-1.3	-1.3	-6.8	-6.8	-6.8	-11.6	-11.6	-11.6
85	-1.4	-1.4	-1.4	-6.4	-6.4	-6.4	-10.7	-10.7	-10.7
80	-1.4	-1.4	-1.4	-6.0	-6.0	-6.0	-9.9	-9.9	-9.9
75	-1.4	-1.4	-1.4	-5.6	-5.6	-5.6	-9.2	-9.2	-9.2
70	-1.4	-1.4	-1.4	-5.3	-5.3	-5.3	-8.4	-8.4	-8.4
65	-1.4	-1.4	-1.4	-4.9	-4.9	-4.9	-7.8	-7.8	-7.8
60	-1.3	-1.3	-1.3	-4.6	-4.6	-4.6	-7.2	-7.2	-7.2
55	-1.3	-1.3	-1.3	-4.2	-4.2	-4.2	-6.6	-6.6	-6.6
50	-1.2	-1.2	-1.2	-3.9	-3.9	-3.9	-6.0	-6.0	-6.0
45	-1.1	-1.1	-1.1	-3.6	-3.6	-3.6	-5.5	-5.5	-5.5
40	-1.1	-1.1	-1.1	-3.2	-3.2	-3.2	-4.9	-4.9	-4.9

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1400	31.6								
1600	53.1	45.8	38.6						
1800	75.0	67.6	60.2						
2000	97.5	90.0	82.4	39.6	31.9				
2200				55.7	47.8	40.0			
2400				72.8	64.4	56.1			
2600				91.2	82.1	73.3	35.4		
2800						91.6	46.3	38.7	31.1
3000							57.7	49.7	41.9
3200							69.6	61.2	53.0
3400							82.2	73.3	64.7
3600							95.6	86.2	77.1
3800								99.7	90.2

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -30 m/+30 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -30 m/+30 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-6	-4	-2	-16	-14	-12
85	0	0	0	-7	-5	-3	-18	-16	-14
80	0	0	0	-8	-6	-4	-19	-17	-15
75	0	0	0	-10	-8	-6	-21	-19	-17
70	-1	0	0	-11	-9	-7	-23	-21	-19
65	-2	0	0	-12	-10	-8	-25	-23	-21
60	-3	-1	0	-14	-12	-10	-27	-25	-23
55	-4	-2	0	-15	-13	-11	-28	-26	-24
50	-5	-3	-1	-17	-15	-13	-30	-28	-26
45	-6	-4	-2	-18	-16	-14	-32	-30	-28
40	-7	-5	-3	-20	-18	-16	-33	-31	-29

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
No Reverse Thrust
Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-2.8	-2.9	-3.1	-9.3	-9.5	-9.6	-15.2	-15.3	-15.5
85	-3.1	-3.2	-3.4	-9.2	-9.3	-9.5	-14.5	-14.7	-14.8
80	-3.3	-3.5	-3.7	-9.1	-9.2	-9.4	-13.8	-14.0	-14.1
75	-3.5	-3.7	-3.8	-8.9	-9.0	-9.2	-13.1	-13.2	-13.4
70	-3.6	-3.8	-3.9	-8.6	-8.8	-8.9	-12.2	-12.4	-12.5
65	-3.6	-3.8	-3.9	-8.2	-8.4	-8.5	-11.4	-11.5	-11.7
60	-3.5	-3.7	-3.8	-7.8	-7.9	-8.1	-10.4	-10.6	-10.7
55	-3.4	-3.5	-3.7	-7.2	-7.4	-7.5	-9.4	-9.6	-9.7
50	-3.1	-3.3	-3.4	-6.6	-6.7	-6.9	-8.3	-8.5	-8.6
45	-2.8	-2.9	-3.1	-5.9	-6.0	-6.2	-7.2	-7.4	-7.5
40	-2.4	-2.5	-2.7	-5.1	-5.2	-5.4	-6.0	-6.2	-6.3

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1800	32.7								
2000	65.0	50.9	35.4						
2200	92.3	80.2	67.3						
2400			94.3						
2600				33.3					
2800				61.9	46.4	30.4			
3000				88.3	74.0	59.2			
3200					99.8	85.7			
4000							31.1		
4200							51.8	35.4	
4400							73.0	56.2	39.8
4600							94.5	77.5	60.6
4800								99.1	82.0

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -35 m/+35 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -60 m/+60 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-9	-7	-5	-25	-23	-21
85	0	0	0	-10	-8	-6	-28	-26	-24
80	0	0	0	-11	-9	-7	-31	-29	-27
75	0	0	0	-13	-11	-9	-34	-32	-30
70	0	0	0	-15	-13	-11	-37	-35	-33
65	-2	0	0	-18	-16	-14	-41	-39	-37
60	-4	-2	0	-21	-19	-17	-45	-43	-41
55	-6	-4	-2	-24	-22	-20	-49	-47	-45
50	-9	-7	-5	-28	-26	-24	-53	-51	-49
45	-13	-11	-9	-33	-31	-29	-57	-55	-53
40	-17	-15	-13	-37	-35	-33	-62	-60	-58

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

Takeoff %N1 (24K Derate)
Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	90.3	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.0	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	91.8	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	92.6	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	93.4	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.2	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	93.8	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	93.1	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	92.3	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	91.6	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	90.8	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
5	90.0	91.2	92.2	92.8	93.3	93.9	94.5	95.2	95.9	96.7	97.4	98.4	99.3
0	89.2	90.4	91.4	92.0	92.5	93.1	93.7	94.4	95.1	95.9	96.7	97.6	98.5
-5	88.4	89.6	90.6	91.2	91.7	92.3	92.9	93.6	94.3	95.1	95.9	96.8	97.7
-10	87.6	88.8	89.8	90.4	90.9	91.5	92.1	92.8	93.5	94.3	95.1	96.1	97.0
-15	86.8	88.0	89.0	89.5	90.0	90.6	91.3	92.0	92.7	93.5	94.3	95.3	96.2
-20	86.0	87.1	88.2	88.7	89.2	89.8	90.5	91.2	91.9	92.6	93.5	94.5	95.4
-25	85.2	86.3	87.3	87.9	88.4	89.0	89.6	90.3	91.0	91.8	92.6	93.7	94.6
-30	84.4	85.5	86.5	87.0	87.5	88.1	88.8	89.5	90.2	91.0	91.8	92.9	93.8
-35	83.5	84.6	85.6	86.2	86.6	87.3	87.9	88.6	89.3	90.1	91.0	92.1	93.0
-40	82.7	83.8	84.8	85.3	85.8	86.4	87.0	87.8	88.5	89.3	90.1	91.2	92.2
-45	81.8	82.9	83.9	84.4	84.9	85.5	86.2	86.9	87.6	88.4	89.3	90.4	91.4
-50	81.0	82.0	83.0	83.5	84.0	84.6	85.3	86.0	86.7	87.5	88.4	89.5	90.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (24K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	93.8					
35	94.7	94.7	94.7			
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3		99.1
5	99.3	99.7	100.2	100.3	100.1	99.8
0	98.5	99.0	99.4	99.8	100.1	100.3
-5	97.7	98.2	98.7	99.1	99.4	99.5
-10	97.0	97.4	97.9	98.3	98.6	98.7
-15	96.2	96.7	97.1	97.5	97.8	98.0
-20	95.4	95.9	96.3	96.7	97.0	97.2
-25	94.6	95.1	95.5	95.9	96.2	96.4
-30	93.8	94.3	94.7	95.1	95.4	95.5
-35	93.0	93.5	93.9	94.3	94.6	94.7
-40	92.2	92.6	93.1	93.5	93.7	93.9
-45	91.4	91.8	92.2	92.6	92.9	93.0
-50	90.5	91.0	91.4	91.8	92.0	92.2

Takeoff %N1 - High Altitudes (24K Derate)**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust (24K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	67	67	67	67	65	63	61	59	57	55	53	
30	64	61	62	61	61	61	61	59	57	55	53	51
25	64	61	59	57	56	56	57	57	57	55	53	51
20	64	61	59	57	56	54	53	53	53	53	52	51
15	64	61	59	57	56	54	53	52	50	49	48	47
10 & BELOW	64	61	59	57	56	54	53	52	50	48	45	43

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	88.3	88.6	89.1	89.6	90.2	90.8	91.5	92.2	92.7	93.1	93.3	93.4
70	89.1	89.5	89.4	89.3	89.6	90.1	90.8	91.6	92.0	92.5	92.6	92.7
65	90.0	90.4	90.3	90.2	90.2	90.1	90.2	90.9	91.4	91.8	91.9	92.1
60	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0

Assumed Temperature Reduced Thrust (24K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	12.1													
100	11.3	8.5												
90	11.7	8.9												
80	12.5	8.0	5.5											
70	11.3	8.4	5.9	5.6	4.0									
60	9.7	9.2	4.8	4.7	4.4	4.2	2.6							
50	7.8	7.9	5.3	3.5	3.3	3.6	3.0	2.7	1.2					
40		6.4	6.0	5.5	3.7	3.2	3.7	3.0	2.8	3.0	3.7			
30		4.6	4.6	4.6	4.5	4.3	4.2	4.0	4.1	4.0	3.9	3.8	3.7	
20			3.1	3.1	3.1	3.0	2.9	2.9	2.8	2.7	2.7	2.6	2.6	2.5
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.3	1.3
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	54	54	52	50	48	47
20	51	51	52	50	48	47
15	47	47	48	49	48	47
10	43	44	44	45	46	46
5	43	42	42	42	43	43
0 & BELOW	43	42	42	42	41	41

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	91.4					
55	90.8					
50	91.8	91.5	92.3	93.2		
		91.9	92.0	92.5	93.2	93.5
45	92.8	92.8	92.9	93.1	93.2	93.2
40	93.8	93.8	93.8	93.9	93.9	94.0
35	94.7	94.7	94.7	94.7	94.7	94.7
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5		99.7	100.2	100.3	100.0	99.8
0				99.8	100.1	100.3
MINIMUM ASSUMED TEMP (°C)	10	8	6	4	2	1

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	15.9										
100	15.9										
90	14.8	12.5									
80	13.4	12.5									
70	11.2	11.3	9.2								
60		9.8	9.2								
50		7.8	7.9	6.0							
40			6.4	6.0	4.6	4.5	4.4	4.3			
30			4.6	4.7	4.6	4.5	4.4	4.3	2.9	2.9	2.8
20				3.1	3.1	3.1	3.0	3.0	2.9	2.9	2.8
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4
0					0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS OR MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.80	.80	.80
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	94.8	95.0	93.7
55	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.1	94.3	93.0
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.4	93.6	92.4
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	92.7	92.9	91.7
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.4	92.2	91.0
35	94.0	94.3	94.5	94.3	94.0	94.0	93.0	93.3	92.7	91.6
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	94.1	93.5	92.5
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.9	94.4	93.4
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.6	95.1	94.3
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.3	95.9	95.1
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	97.1	96.7	96.0
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.9	97.4	96.8
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.7	98.3	97.8
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.4	99.0	98.6
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.3	99.9	99.6
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.5
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.3	100.9	100.5
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	99.5	100.0	99.7
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	98.6	99.2	98.8
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	97.8	98.3	98.0
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	96.9	97.5	97.1

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

*Dual bleed sources

Go-around %N1**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

Go-around %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

AIRPORT OAT		TAT	AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	(°C)	10000	11000	12000	13000	14000	14500
37	99	40	99.1	99.7				
32	90	35	99.5	99.3	99.5	100.1	100.7	
27	81	30	100.3	100.2	100.2	100.0	100.0	100.2
22	72	25	100.8	100.7	100.7	100.6	100.6	100.5
17	63	20	101.0	101.0	101.0	100.9	100.8	100.8
12	54	15	101.2	101.2	101.2	101.2	101.1	101.0
7	45	10	100.9	101.4	101.5	101.4	101.3	101.2
2	36	5	100.2	100.9	101.6	101.6	101.5	101.5
-3	27	0	99.4	100.2	101.0	101.4	101.6	101.6
-8	18	-5	98.6	99.4	100.2	100.6	100.9	101.0
-13	9	-10	97.9	98.6	99.5	99.8	100.1	100.2
-17	1	-15	97.1	97.8	98.7	99.0	99.3	99.4
-22	-8	-20	96.3	97.0	97.9	98.2	98.5	98.6
-27	-17	-25	95.5	96.2	97.1	97.4	97.7	97.8
-32	-26	-30	94.7	95.4	96.2	96.6	96.8	97.0
-37	-35	-35	93.9	94.6	95.4	95.7	96.0	96.1
-42	-44	-40	93.0	93.8	94.6	94.9	95.1	95.3
-47	-53	-45	92.2	92.9	93.7	94.0	94.3	94.4
-52	-62	-50	91.4	92.1	92.9	93.2	93.4	93.5

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	0.9	0.9	0.9	1.0	1.0	1.0
ENGINE ANTI-ICE	0.0	-0.8	-1.5	-1.5	-1.5	-1.4

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Climb (280/.76)**Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	4.0	4.0	4.0		
	V/S (FT/MIN)	1800	1200	600		
30000	PITCH ATT	4.0	4.0	4.0	4.0	4.0
	V/S (FT/MIN)	2600	2000	1500	1200	900
20000	PITCH ATT	7.5	6.5	6.5	6.0	6.0
	V/S (FT/MIN)	4300	3300	2700	2200	1800
10000	PITCH ATT	11.0	9.5	9.0	8.5	8.0
	V/S (FT/MIN)	5700	4500	3700	3100	2600
SEA LEVEL	PITCH ATT	15.0	13.0	11.5	10.5	10.0
	V/S (FT/MIN)	6900	5400	4400	3700	3200

Cruise (.76/280)**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	2.0	3.0	3.5		
	%N1	82.2	84.9	89.3		
35000	PITCH ATT	1.0	2.0	2.5	3.0	3.5
	%N1	80.5	81.9	83.9	86.6	91.1
30000	PITCH ATT	1.0	1.5	2.0	2.5	3.0
	%N1	80.1	80.8	82.1	83.6	85.6
25000	PITCH ATT	1.0	1.5	2.0	2.5	3.5
	%N1	76.5	77.2	78.4	79.9	81.8
20000	PITCH ATT	1.0	1.5	2.0	3.0	3.5
	%N1	72.9	73.6	74.7	76.0	77.8
15000	PITCH ATT	1.0	1.5	2.5	3.0	3.5
	%N1	69.0	69.9	71.0	72.2	73.9

Descent (.76/280)**Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	-1.5	-0.5	0.5	1.0	1.5
	V/S (FT/MIN)	-2700	-2500	-2400	-2600	-2800
30000	PITCH ATT	-3.0	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-3000	-2500	-2200	-2000	-1900
20000	PITCH ATT	-3.0	-2.0	-1.0	0.0	1.0
	V/S (FT/MIN)	-2700	-2200	-2000	-1800	-1700
10000	PITCH ATT	-3.0	-2.0	-0.5	0.0	1.0
	V/S (FT/MIN)	-2400	-2000	-1800	-1600	-1500
SEA LEVEL	PITCH ATT	-3.0	-2.0	-1.0	0.0	1.0
	V/S (FT/MIN)	-2200	-1800	-1600	-1400	-1400

Flight With Unreliable Airspeed/ Turbulent Air Penetration
Altitude and/or vertical speed indications may also be unreliable.
Holding (VREF40 + 70)
Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)				
		40	50	60	70	80
10000	PITCH ATT	5.0	5.5	5.0	5.0	5.0
	%N1	51.8	56.8	61.4	65.4	68.6
5000	PITCH ATT	5.5	5.5	5.5	5.0	5.0
	%N1	48.2	53.1	57.4	61.3	65.0

Terminal Area (5000 FT)
%N1 for Level Flight

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 1 (GEAR UP) (VREF40 + 50)	PITCH ATT	5.0	5.5	6.0	6.0	6.5
	%N1	50.3	55.6	59.8	63.9	67.3
FLAPS 5 (GEAR UP) (VREF40 + 30)	PITCH ATT	5.5	6.0	6.5	6.5	7.0
	%N1	50.4	55.8	60.5	64.8	68.3
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	PITCH ATT	6.0	6.0	6.5	6.5	6.5
	%N1	59.1	64.9	70.0	74.3	78.1

Final Approach (1500 FT)
Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	PITCH ATT	3.5	3.5	3.5	4.0	4.0
	%N1	41.5	45.4	49.3	53.1	56.2
FLAPS 30 (VREF30 + 10)	PITCH ATT	1.5	2.0	2.0	2.0	2.5
	%N1	45.4	50.4	54.6	58.2	61.7
FLAPS 40 (VREF40 + 10)	PITCH ATT	0.0	0.0	0.5	0.5	1.0
	%N1	52.4	57.5	62.3	66.0	69.7

Performance Inflight

All Engine

Chapter PI

Section 11

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
80	32100	-9	34600*	34600*	34600*	33200	31700
75	33500	-12	36100*	36100*	36100	34500	33100
70	35000	-15	37500*	37500*	37500	36000	34500
65	36500	-17	38900*	38900*	38900*	37500	36100
60	38200	-17	40400*	40400*	40400*	39200	37800
55	40000	-17	41000	41000	41000	41000	39600
50	41000	-17	41000	41000	41000	41000	41000
45	41000	-17	41000	41000	41000	41000	41000
40	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
80	32100	-3	33400*	33400*	33400*	33200	31700
75	33500	-6	35200*	35200*	35200*	34500	33100
70	35000	-9	36700*	36700*	36700*	36000	34500
65	36500	-12	38100*	38100*	38100*	37500	36100
60	38200	-12	39600*	39600*	39600*	39200	37800
55	40000	-12	41000	41000	41000	41000	39600
50	41000	-12	41000	41000	41000	41000	41000
45	41000	-12	41000	41000	41000	41000	41000
40	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
80	32100	3	29300*	29300*	29300*	29300*	29300*
75	33500	0	33200*	33200*	33200*	33200*	33100
70	35000	-4	35400*	35400*	35400*	35400*	34500
65	36500	-6	36900*	36900*	36900*	36900*	36100
60	38200	-6	38400*	38400*	38400*	38400*	37800
55	40000	-6	39900*	39900*	39900*	39900*	39600
50	41000	-6	41000	41000	41000	41000	41000
45	41000	-6	41000	41000	41000	41000	41000
40	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		23	25	27	29	31	33	35	37	39	41
80	%N1	85.7	87.1	87.2	87.7	88.5	89.8	93.5			
	MACH	.775	.800	.800	.800	.800	.800	.800			
	KIAS	340	338	324	311	297	284	272			
	FF/ENG	1695	1711	1618	1550	1499	1478	1535			
75	%N1	85.3	86.7	86.7	86.9	87.5	88.4	90.2			
	MACH	.775	.800	.800	.800	.800	.800	.800			
	KIAS	340	338	324	311	297	284	272			
	FF/ENG	1668	1682	1581	1500	1439	1395	1391			
70	%N1	85.0	86.3	86.2	86.2	86.6	87.2	88.3	91.1		
	MACH	.775	.800	.800	.800	.800	.800	.800	.800		
	KIAS	340	338	324	311	297	284	272	260		
	FF/ENG	1648	1657	1551	1459	1386	1330	1296	1319		
65	%N1	84.7	86.0	85.8	85.7	85.8	86.2	87.0	88.6	92.8	
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	
	KIAS	340	338	324	311	297	284	272	260	248	
	FF/ENG	1631	1635	1525	1428	1342	1276	1226	1208	1257	
60	%N1	84.5	85.7	85.4	85.3	85.2	85.4	85.8	87.0	89.2	93.9
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	1617	1619	1503	1401	1310	1230	1170	1133	1130	1193
55	%N1	84.3	85.6	85.2	84.9	84.7	84.7	84.9	85.7	87.4	89.8
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	1607	1609	1487	1379	1283	1198	1124	1075	1050	1050
50	%N1	84.3	85.5	85.0	84.6	84.3	84.2	84.2	84.7	85.9	87.6
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	1602	1603	1477	1363	1261	1170	1091	1029	991	967
45	%N1	84.2	85.5	84.9	84.4	84.0	83.7	83.6	83.9	84.8	86.0
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	1601	1601	1471	1353	1246	1149	1064	996	945	909
40	%N1	84.3	85.5	84.9	84.4	83.9	83.5	83.1	83.3	84.0	84.9
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	1603	1603	1471	1349	1237	1135	1044	971	913	873

Shaded area approximates optimum altitude.

.80M Enroute Fuel and Time - Low Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
273	254	238	223	211	200	191	183	175	168	161
407	380	356	335	317	300	287	275	264	254	244
541	506	475	447	422	400	383	367	353	339	327
676	632	593	558	528	500	479	460	442	425	410
810	758	711	670	633	600	575	552	530	510	492
945	884	829	781	738	700	671	644	619	596	574
1079	1009	947	892	844	800	767	737	708	681	657
1214	1136	1065	1004	950	900	863	829	797	767	740
1348	1262	1184	1116	1055	1000	959	921	886	853	823
1482	1387	1302	1227	1160	1100	1055	1013	974	938	906
1616	1513	1420	1338	1266	1200	1151	1106	1063	1024	988
1751	1639	1538	1450	1371	1300	1247	1198	1152	1109	1070
1885	1765	1656	1561	1477	1400	1343	1290	1241	1195	1153
2020	1891	1775	1673	1582	1500	1439	1382	1330	1281	1236
2154	2017	1893	1784	1688	1600	1535	1475	1418	1367	1319
2289	2143	2011	1896	1793	1700	1631	1567	1507	1452	1402
2423	2269	2129	2007	1899	1800	1727	1659	1596	1538	1484
2557	2394	2247	2118	2004	1900	1823	1751	1685	1623	1567
2691	2520	2365	2230	2110	2000	1919	1844	1774	1709	1649

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.6	0:35	1.4	0:35	1.2	0:33	1.0	0:33	0.9	0:33
300	2.4	0:51	2.2	0:49	1.9	0:47	1.7	0:45	1.5	0:46
400	3.3	1:06	3.0	1:04	2.6	1:00	2.4	0:58	2.1	0:58
500	4.1	1:21	3.8	1:18	3.3	1:13	3.1	1:10	2.7	1:11
600	5.0	1:37	4.6	1:33	4.0	1:27	3.8	1:23	3.3	1:24
700	5.8	1:52	5.4	1:47	4.8	1:40	4.4	1:36	3.9	1:36
800	6.7	2:07	6.1	2:02	5.5	1:53	5.1	1:48	4.5	1:49
900	7.5	2:23	6.9	2:16	6.2	2:07	5.8	2:01	5.1	2:01
1000	8.3	2:38	7.7	2:31	6.9	2:20	6.5	2:13	5.7	2:14
1100	9.2	2:54	8.5	2:45	7.6	2:33	7.2	2:26	6.3	2:26
1200	10.0	3:09	9.3	3:00	8.4	2:46	7.8	2:38	7.0	2:39
1300	10.9	3:24	10.1	3:14	9.1	3:00	8.5	2:51	7.6	2:52
1400	11.7	3:40	10.9	3:29	9.8	3:13	9.2	3:03	8.2	3:04
1500	12.6	3:55	11.7	3:43	10.5	3:26	9.9	3:16	8.8	3:17
1600	13.4	4:10	12.5	3:58	11.2	3:39	10.5	3:28	9.4	3:29
1700	14.2	4:26	13.3	4:12	11.9	3:53	11.2	3:41	10.0	3:42
1800	15.1	4:41	14.0	4:27	12.6	4:06	11.9	3:53	10.6	3:55
1900	15.9	4:56	14.8	4:41	13.4	4:19	12.6	4:06	11.2	4:07
2000	16.7	5:12	15.6	4:56	14.1	4:33	13.3	4:18	11.8	4:20

.80M Enroute Fuel and Time - Low Altitudes
Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	0.0	0.0	0.0	0.0	0.1
4	0.0	0.0	0.0	0.1	0.3
6	0.0	-0.1	0.0	0.2	0.4
8	0.0	-0.1	0.0	0.2	0.5
10	-0.1	-0.1	0.0	0.3	0.7
12	-0.1	-0.1	0.0	0.3	0.8
14	0.0	-0.1	0.0	0.3	0.8
16	0.0	-0.1	0.0	0.4	0.9
18	0.0	-0.1	0.0	0.4	1.0

.80M Enroute Fuel and Time - High Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
523	493	465	441	420	400	383	367	352	339	326
779	735	696	660	629	600	575	551	530	510	492
1034	978	926	880	838	800	767	736	707	681	657
1290	1220	1156	1099	1047	1000	959	920	885	852	822
1546	1462	1386	1318	1256	1200	1151	1105	1062	1023	987
1801	1704	1616	1537	1466	1400	1343	1290	1240	1194	1152
2057	1947	1846	1756	1675	1600	1535	1474	1418	1366	1318
2312	2189	2076	1975	1884	1800	1727	1659	1595	1537	1483
2568	2431	2306	2194	2093	2000	1919	1843	1772	1708	1648
2824	2674	2536	2414	2303	2200	2111	2027	1950	1878	1813
3079	2916	2766	2633	2512	2400	2302	2212	2127	2049	1978
3335	3158	2996	2852	2721	2600	2495	2396	2305	2221	2144
3590	3400	3227	3071	2930	2800	2687	2581	2483	2392	2309
3845	3642	3457	3290	3139	3000	2879	2766	2660	2563	2474
4101	3885	3687	3509	3348	3200	3071	2950	2838	2734	2639
4356	4127	3917	3728	3558	3400	3263	3134	3015	2905	2804
4612	4369	4147	3948	3767	3600	3454	3319	3192	3076	2970
4867	4612	4377	4167	3976	3800	3646	3503	3370	3247	3135
5123	4854	4607	4386	4185	4000	3838	3687	3547	3418	3300
5379	5096	4837	4605	4394	4200	4030	3872	3725	3590	3465
5634	5339	5067	4824	4604	4400	4223	4057	3903	3761	3630
5890	5581	5297	5043	4813	4600	4415	4241	4080	3932	3796
6145	5823	5527	5262	5022	4800	4606	4426	4258	4103	3961
6401	6065	5758	5482	5231	5000	4798	4610	4435	4274	4126
6657	6308	5988	5701	5440	5200	4990	4795	4613	4446	4292
6912	6550	6218	5920	5649	5400	5183	4980	4791	4617	4457
7168	6792	6448	6139	5859	5600	5375	5164	4969	4788	4623
7423	7035	6678	6358	6068	5800	5566	5348	5146	4959	4788
7679	7277	6908	6577	6277	6000	5758	5533	5323	5130	4953

.80M Enroute Fuel and Time - High Altitudes
Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
400	2.0	0:59	1.9	0:59	1.8	0:59	1.7	1:00	1.7	1:00
600	3.2	1:24	3.0	1:25	2.8	1:25	2.7	1:26	2.6	1:26
800	4.4	1:49	4.1	1:50	3.9	1:51	3.7	1:52	3.6	1:52
1000	5.6	2:14	5.2	2:16	4.9	2:17	4.7	2:18	4.5	2:18
1200	6.7	2:40	6.3	2:41	5.9	2:42	5.7	2:44	5.5	2:44
1400	7.9	3:05	7.4	3:07	7.0	3:08	6.6	3:10	6.4	3:10
1600	9.0	3:30	8.5	3:32	8.0	3:34	7.6	3:36	7.3	3:37
1800	10.2	3:56	9.6	3:57	9.0	3:59	8.6	4:02	8.2	4:03
2000	11.4	4:21	10.7	4:23	10.0	4:25	9.5	4:27	9.2	4:29
2200	12.5	4:46	11.7	4:48	11.0	4:51	10.5	4:53	10.1	4:55
2400	13.7	5:11	12.8	5:14	12.0	5:17	11.4	5:19	11.0	5:21
2600	14.8	5:37	13.9	5:40	13.0	5:42	12.4	5:45	11.9	5:47
2800	16.0	6:02	14.9	6:05	14.0	6:08	13.3	6:11	12.7	6:13
3000	17.1	6:27	16.0	6:30	15.0	6:34	14.2	6:37	13.6	6:39
3200	18.3	6:52	17.1	6:56	16.0	7:00	15.2	7:03	14.5	7:05
3400	19.4	7:18	18.1	7:21	17.0	7:25	16.1	7:29	15.4	7:31
3600	20.5	7:43	19.2	7:47	18.0	7:51	17.0	7:55	16.2	7:58
3800	21.7	8:08	20.2	8:12	19.0	8:17	17.9	8:21	17.1	8:24
4000	22.8	8:33	21.3	8:38	20.0	8:42	18.8	8:47	18.0	8:50
4200	24.0	8:59	22.4	9:03	20.9	9:08	19.8	9:13	18.8	9:16
4400	25.1	9:24	23.4	9:29	21.9	9:34	20.7	9:39	19.7	9:42
4600	26.3	9:49	24.5	9:54	22.9	10:00	21.6	10:05	20.5	10:08
4800	27.4	10:14	25.5	10:20	23.9	10:25	22.5	10:31	21.4	10:34
5000	28.6	10:40	26.6	10:45	24.9	10:51	23.4	10:57	22.2	11:00
5200	29.7	11:05	27.7	11:11	25.8	11:17	24.3	11:23	23.1	11:26
5400	30.9	11:30	28.7	11:36	26.8	11:42	25.2	11:49	23.9	11:52
5600	32.0	11:55	29.8	12:02	27.8	12:08	26.1	12:15	24.7	12:18
5800	33.2	12:21	30.8	12:27	28.7	12:34	27.0	12:41	25.6	12:44
6000	34.3	12:46	31.9	12:53	29.7	13:00	27.9	13:07	26.4	13:11

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	0.0	0.0	0.0	0.3	1.0
4	0.0	-0.1	0.0	0.5	1.7
6	-0.1	-0.1	0.0	0.7	2.2
8	-0.1	-0.1	0.0	0.9	2.8
10	-0.1	-0.1	0.0	1.1	3.2
12	-0.1	-0.2	0.0	1.3	3.7
14	-0.1	-0.2	0.0	1.4	4.0
16	-0.1	-0.2	0.0	1.6	4.4
18	-0.1	-0.2	0.0	1.7	4.7
20	-0.1	-0.2	0.0	1.8	4.9
22	-0.1	-0.2	0.0	1.9	5.1
24	0.0	-0.2	0.0	1.9	5.2
26	0.0	-0.1	0.0	2.0	5.3
28	0.1	-0.1	0.0	2.0	5.3
30	0.2	-0.1	0.0	2.1	5.3
32	0.2	-0.1	0.0	2.1	5.3
34	0.3	0.0	0.0	2.0	5.2

.80M Wind-Altitude Trade

PRESSURE ALTITUDE (1000 FT)	CRUISE WEIGHT (1000 KG)								
	80	75	70	65	60	55	50	45	40
41				55	22	3	1	13	42
39			44	17	2	1	12	36	74
37		32	12	1	1	12	33	66	110
35	21	6	0	2	13	34	63	101	149
33	3	0	4	16	36	62	97	139	189
31	1	7	20	39	64	96	134	179	
29	12	25	44	68	97	132	172		
27	32	50	74	101	133	170			
25	58	80	107	137	170				

The above wind factor tables are for calculation of wind required to maintain present range capability at new pressure altitude, i.e., break-even wind.

Method:

1. Read wind factors for present and new altitudes from table.
2. Determine difference (new altitude wind factor minus present altitude wind factor); This difference may be negative or positive.
3. Break-even wind at new altitude is present altitude wind plus difference from step 2.

Descent**.80/280/250**

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)			
			LANDING WEIGHT (1000 KG)			
			40	50	60	70
41000	27	320	105	123	136	144
39000	26	320	100	117	131	139
37000	26	310	95	112	125	134
35000	25	310	91	107	120	129
33000	24	310	87	103	115	123
31000	23	300	83	97	108	116
29000	22	290	78	91	101	109
27000	21	290	73	85	95	102
25000	20	280	68	79	88	94
23000	19	270	64	74	82	87
21000	18	260	59	68	76	80
19000	17	260	54	63	69	74
17000	16	250	50	57	63	67
15000	15	230	45	52	57	60
10000	11	200	31	35	38	40
5000	7	150	18	20	21	22
1500	4	110	9	9	9	9

Allowances for a straight-in approach are included.

Holding
Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)								
		1500	5000	10000	15000	20000	25000	30000	35000	41000
80	%N1	61.9	65.0	68.6	72.8	76.9	81.3	85.4	91.3	
	KIAS	244	245	246	247	249	251	254	250	
	FF/ENG	1380	1360	1350	1350	1320	1320	1350	1450	
75	%N1	60.2	63.2	67.0	71.1	75.2	79.6	83.8	88.6	
	KIAS	236	237	238	239	241	243	245	249	
	FF/ENG	1310	1280	1270	1260	1240	1230	1260	1320	
70	%N1	58.5	61.3	65.4	69.3	73.5	77.9	82.0	86.5	
	KIAS	228	229	230	231	232	234	237	240	
	FF/ENG	1230	1210	1190	1180	1160	1140	1170	1200	
65	%N1	56.8	59.3	63.7	67.3	71.7	76.0	80.2	84.6	
	KIAS	220	220	222	223	224	225	227	230	
	FF/ENG	1150	1130	1110	1100	1080	1060	1080	1100	
60	%N1	54.9	57.4	61.4	65.4	69.6	73.9	78.2	82.5	91.9
	KIAS	211	212	213	213	215	216	218	220	217
	FF/ENG	1070	1050	1030	1020	1000	980	990	1010	1120
55	%N1	52.8	55.4	59.1	63.5	67.3	71.7	76.1	80.4	88.1
	KIAS	202	203	203	204	205	206	208	210	214
	FF/ENG	1000	970	960	940	920	900	900	920	990
50	%N1	50.6	53.1	56.8	61.0	65.0	69.4	73.6	78.1	85.3
	KIAS	192	193	194	195	195	197	198	200	203
	FF/ENG	920	900	880	860	840	840	830	840	890
45	%N1	48.3	50.7	54.4	58.2	62.6	66.7	71.0	75.5	82.6
	KIAS	184	184	184	184	185	186	187	189	191
	FF/ENG	870	840	810	800	780	770	760	750	790
40	%N1	45.8	48.2	51.8	55.5	59.7	63.8	68.2	72.6	79.8
	KIAS	177	177	177	177	177	177	177	177	180
	FF/ENG	790	770	740	720	700	690	680	670	700

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight

Advisory Information

Chapter PI

Section 12

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 15

Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF15	ONE REV	NO REV
MAX MANUAL	905	75/-45	20/30	-30	120	10	-5	20	-15	70	20	40
MAX AUTO	1130	65/-60	25/40	-40	145	0	0	25	-20	110	0	5
AUTOBRAKE 3	1575	105/-100	45/60	-70	235	0	0	45	-40	180	0	0
AUTOBRAKE 2	2035	150/-145	65/85	-90	325	25	-25	60	-55	190	40	40
AUTOBRAKE 1	2275	180/-170	75/105	-110	385	65	-65	65	-60	180	200	230

Good Reported Braking Action

MAX MANUAL	1220	75/-70	35/45	-50	195	30	-20	30	-15	95	65	150
MAX AUTO	1345	85/-80	35/50	-50	200	25	-20	35	-20	110	75	165
AUTOBRAKE 3	1580	105/-100	45/60	-70	240	10	0	45	-40	180	5	20
AUTOBRAKE 2	2035	150/-145	65/85	-90	325	25	-25	60	-55	190	40	40

Medium Reported Braking Action

MAX MANUAL	1680	120/-110	50/75	-85	325	75	-55	45	-40	125	185	455
MAX AUTO	1750	125/-115	55/75	-85	320	65	-45	45	-40	145	185	450
AUTOBRAKE 3	1785	125/-115	55/75	-85	330	55	-30	50	-45	180	145	425
AUTOBRAKE 2	2090	155/-150	65/85	-100	370	50	-45	60	-55	190	80	210

Poor Reported Braking Action

MAX MANUAL	2210	175/-160	75/105	-130	510	185	-115	60	-60	150	410	1120
MAX AUTO	2305	175/-160	75/105	-130	505	185	-115	60	-60	150	410	1130
AUTOBRAKE 3	2305	175/-160	75/105	-130	510	185	-105	60	-60	170	410	1125
AUTOBRAKE 2	2360	185/-170	80/105	-135	525	160	-105	65	-60	190	315	1015

Reference distance is for sea level, standard day, no wind or slope, VREF15 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances
Flaps 30
Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF30	ONE REV	NO REV
MAX MANUAL	880	65/-40	20/25	-30	115	10	-5	20	-15	65	20	40
MAX AUTO	1075	60/-55	25/35	-35	140	0	0	25	-20	105	0	5
AUTOBRAKE 3	1490	100/-90	40/55	-65	230	0	0	40	-35	170	0	0
AUTOBRAKE 2	1915	135/-130	55/80	-90	315	25	-30	55	-50	170	40	40
AUTOBRAKE 1	2135	165/-160	70/95	-105	370	60	-60	65	-55	165	175	220

Good Reported Braking Action

MAX MANUAL	1185	75/-70	35/40	-50	190	30	-20	30	-25	95	65	135
MAX AUTO	1295	80/-70	35/50	-50	200	25	-15	30	-30	110	70	150
AUTOBRAKE 3	1495	100/-90	40/55	-65	230	10	0	40	-35	170	5	20
AUTOBRAKE 2	1915	135/-130	55/80	-90	315	25	-30	55	-50	170	40	40

Medium Reported Braking Action

MAX MANUAL	1610	115/-105	50/70	-85	315	75	-55	40	-40	125	165	405
MAX AUTO	1670	115/-110	50/65	-85	315	65	-45	40	-40	145	165	400
AUTOBRAKE 3	1705	115/-110	50/65	-85	325	55	-35	45	-40	170	135	385
AUTOBRAKE 2	1965	140/-135	60/80	-100	360	50	-50	55	-50	170	80	195

Poor Reported Braking Action

MAX MANUAL	2095	160/-150	70/95	-125	500	175	-110	55	-55	145	360	960
MAX AUTO	2180	160/-150	70/95	-125	495	180	-110	55	-50	150	360	970
AUTOBRAKE 3	2180	165/-150	70/95	-125	495	175	-105	55	-55	160	360	965
AUTOBRAKE 2	2230	165/-160	75/100	-130	510	155	-105	60	-60	170	290	870

Reference distance is for sea level, standard day, no wind or slope, VREF30 approach speed and two engine detent reverse thrust.
Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.
For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above threshold (305 m of air distance).
*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 40

Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF40	ONE REV	NO REV
MAX MANUAL	875	60/-40	20/25	-30	115	15	-5	20	-15	70	20	40
MAX AUTO	1050	60/-50	25/35	-35	135	5	0	25	-20	105	0	10
AUTOBRAKE 3	1440	95/-90	40/55	-60	220	0	0	40	-35	165	0	0
AUTOBRAKE 2	1850	130/-125	55/75	-85	310	25	-30	55	-50	165	35	35
AUTOBRAKE 1	2070	155/-150	65/95	-100	365	55	-55	60	-55	160	155	200

Good Reported Braking Action

MAX MANUAL	1170	75/-65	35/40	-50	190	30	-20	30	-25	95	60	130
MAX AUTO	1275	80/-70	35/50	-50	200	25	-15	30	-25	110	65	145
AUTOBRAKE 3	1445	95/-90	40/55	-60	230	10	0	40	-35	165	5	20
AUTOBRAKE 2	1850	130/-125	55/90	-85	310	25	-30	55	-50	165	35	35

Medium Reported Braking Action

MAX MANUAL	1580	115/-100	50/70	-85	315	75	-55	40	-35	125	160	375
MAX AUTO	1640	115/-105	50/70	-85	315	65	-45	40	-35	145	155	370
AUTOBRAKE 3	1665	115/-105	50/65	-85	315	55	-35	45	-40	165	140	370
AUTOBRAKE 2	1900	135/-130	55/80	-95	355	50	-45	55	-50	165	75	185

Poor Reported Braking Action

MAX MANUAL	2045	155/-145	65/95	-125	495	175	-110	55	-50	145	335	875
MAX AUTO	2130	155/-145	65/95	-120	490	175	-105	55	-50	145	340	885
AUTOBRAKE 3	2130	160/-145	70/95	-125	495	175	-105	55	-50	160	335	880
AUTOBRAKE 2	2165	165/-150	70/100	-130	505	160	-100	60	-55	165	270	800

Reference distance is for sea level, standard day, no wind or slope, VREF40 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Dry Runway

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	1125	120/-70	25/35	-40	175	15	-10	75
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1395	90/-90	35/50	-70	260	40	-35	110
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	895	60/-50	20/25	-35	115	10	-10	80
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	880	55/-45	20/25	-35	115	10	-10	80
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	875	50/-45	20/25	-35	115	10	-10	85
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	940	50/-50	20/30	-40	130	15	-10	70
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	1225	70/-70	30/40	-50	170	25	-25	130
LEADING EDGE FLAPS TRANSIT	VREF15+15	930	60/-50	20/25	-35	115	10	-10	65
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	835	55/-45	15/25	-30	110	10	-10	60
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	815	55/-45	15/20	-30	105	10	-10	65

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Dry Runway**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	825	55/-40	15/25	-30	110	10	-10	60
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	825	55/-40	15/25	-30	110	10	-10	60
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	840	65/-40	20/25	-30	115	10	-5	65
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	825	55/-40	15/25	-30	110	10	-10	60
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	965	70/-55	20/30	-35	120	10	-10	65
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	840	65/-40	20/25	-30	115	10	-5	65
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	825	55/-40	15/25	-30	110	10	-10	60
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	965	70/-55	20/30	-35	120	10	-10	65
TRAILING EDGE FLAPS UP	VREF40+40	1020	85/-65	25/30	-35	125	10	-10	65

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABV/BLW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	1555	90/-90	45/60	-60	215	30	-30	85
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1545	105/-105	45/60	-80	315	60	-50	120
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	1280	85/-85	35/45	-55	205	35	-30	115
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	1240	80/-80	35/45	-55	205	35	-30	120
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	1225	80/-80	30/45	-55	205	35	-30	125
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1180	75/-75	30/40	-55	190	25	-25	95
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	1510	95/-95	40/50	-65	230	45	-40	160
LEADING EDGE FLAPS TRANSIT	VREF15+15	1300	80/-80	35/45	-55	200	30	-25	90
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	1180	75/-75	30/40	-55	195	30	-25	95
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	1140	70/-70	25/40	-55	195	25	-25	95

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/ BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	1140	70/-70	30/35	-50	185	25	-20	85
JAMMED OR RESTRICTED FLIGHT CONROLS	VREF15	1140	70/-70	30/35	-50	185	25	-20	85
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1115	75/-70	35/40	-50	190	30	-20	95
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1140	70/-70	30/35	-50	185	25	-20	85
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1330	75/-80	35/50	-55	200	30	-25	85
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1115	75/-70	35/40	-50	190	30	-20	95
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1140	70/-70	30/35	-50	185	25	-20	85
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1330	75/-80	35/50	-55	200	30	-25	85
TRAILING EDGE FLAPS UP	VREF40+40	1405	80/-85	40/50	-60	205	30	-25	80

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Medium Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	2180	150/-150	70/95	-100	360	80	-70	115
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1940	150/-145	60/80	-120	490	135	-100	140
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	1740	135/-135	55/70	-90	340	80	-65	150
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	1660	130/-125	50/70	-90	330	80	-65	150
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	1625	125/-120	50/75	-90	330	80	-65	150
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1595	120/-120	45/65	-85	320	65	-55	125
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	2080	150/-145	60/80	-105	370	105	-90	195
LEADING EDGE FLAPS TRANSIT	VREF15+15	1765	130/-130	55/75	-90	330	70	-60	120
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	1670	125/-125	50/65	-90	340	80	-65	130
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	1590	115/-115	45/60	-85	330	75	-60	130

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Medium Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	1540	115/-110	45/65	-80	310	60	-50	115
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	1540	115/-110	45/65	-80	310	60	-50	115
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1505	115/-105	50/70	-85	315	75	-55	125
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1540	115/-110	45/60	-80	310	60	-50	115
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1825	125/-125	55/80	-90	335	70	-60	115
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1505	115/-105	50/70	-85	315	75	-55	125
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1540	115/-110	45/60	-80	310	60	-50	115
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1825	125/-125	55/80	-90	335	70	-60	115
TRAILING EDGE FLAPS UP	VREF40+40	1945	135/-135	60/80	-95	345	75	-60	115

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Poor Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	2880	220/-220	100/145	-150	570	185	-140	150
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	2555	215/-205	80/120	-200	915	465	-220	155
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	2240	195/-185	80/100	-135	535	175	-130	180
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	2125	180/-175	70/105	-130	525	170	-125	170
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	2065	175/-165	70/115	-130	515	165	-120	170
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	2065	175/-165	70/100	-125	510	150	-110	150
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	2675	215/-205	85/120	-150	565	210	-160	220
LEADING EDGE FLAPS TRANSIT	VREF15+15	2285	185/-180	75/110	-135	525	160	-115	145
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	2280	190/-185	75/100	-140	560	200	-145	165
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	2140	175/-170	65/95	-135	545	185	-135	155

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 55000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 55000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	1990	165/-155	65/90	-125	495	140	-105	135
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	1990	165/-155	65/90	-125	495	140	-105	135
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1945	160/-150	70/95	-125	500	175	-110	145
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1990	165/-155	65/90	-125	495	140	-105	135
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	2370	185/-180	80/115	-135	530	160	-120	140
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1945	160/-150	70/95	-125	500	175	-110	145
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1990	165/-155	65/90	-125	495	140	-105	135
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	2370	185/-180	80/115	-135	530	160	-120	140
TRAILING EDGE FLAPS UP	VREF40+40	2545	195/-195	85/120	-140	545	170	-125	140

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Reference Brake Energy Per Brake (Millions of Foot Pounds)**

		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
		80			100			120			140			160			180		
WEIGHT (1000 KG)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10
80	0	15.3	17.2	19.4	22.9	25.8	29.3	31.7	35.8	40.9	41.5	47.1	54.2	52.2	59.6	69.0	62.4	71.4	83.3
	10	15.8	17.7	20.0	23.6	26.6	30.2	32.7	37.0	42.2	42.8	48.7	55.9	53.9	61.5	71.2	64.4	73.7	86.0
	15	16.0	18.0	20.3	24.0	27.1	30.7	33.2	37.6	42.9	43.5	49.4	56.8	54.7	62.4	72.3	65.3	74.8	87.3
	20	16.3	18.3	20.6	24.4	27.5	31.1	33.7	38.1	43.5	44.1	50.1	57.6	55.6	63.4	73.4	66.3	75.9	88.6
	30	16.7	18.8	21.2	25.0	28.2	32.0	34.6	39.2	44.7	45.4	51.5	59.3	57.1	65.1	75.4	68.2	78.0	91.0
	40	16.8	18.9	21.3	25.2	28.5	32.3	35.0	39.6	45.3	46.0	52.3	60.2	58.0	66.3	77.0	69.5	79.7	93.3
50	16.8	19.0	21.4	25.3	28.6	32.5	35.2	40.0	45.8	46.4	52.9	61.1	58.8	67.4	78.5	70.7	81.3	95.6	
70	0	13.9	15.6	17.6	20.6	23.3	26.3	28.4	32.1	36.5	37.1	42.1	48.2	46.6	53.0	61.2	56.4	64.4	74.8
	10	14.4	16.2	18.2	21.3	24.0	27.2	29.3	33.1	37.7	38.3	43.4	49.7	48.1	54.7	63.1	58.2	66.5	77.2
	15	14.6	16.4	18.5	21.6	24.4	27.6	29.8	33.6	38.3	38.9	44.1	50.5	48.8	55.6	64.1	59.1	67.5	78.4
	20	14.8	16.7	18.8	22.0	24.8	28.0	30.2	34.2	38.9	39.5	44.7	51.3	49.5	56.4	65.1	60.0	68.5	79.6
	30	15.2	17.1	19.3	22.6	25.5	28.8	31.1	35.1	40.0	40.6	46.0	52.7	50.9	58.0	66.9	61.6	70.4	81.8
	40	15.3	17.2	19.4	22.7	25.6	29.1	31.3	35.5	40.4	41.0	46.6	53.5	51.7	58.9	68.1	62.7	71.8	83.6
50	15.3	17.2	19.4	22.8	25.8	29.2	31.5	35.7	40.8	41.4	47.1	54.2	52.3	59.7	69.3	63.7	73.1	85.4	
60	0	12.6	14.1	15.9	18.4	20.7	23.4	25.1	28.3	32.2	32.5	36.9	42.1	40.7	46.3	53.1	49.6	56.5	65.3
	10	13.0	14.6	16.4	19.0	21.4	24.2	25.9	29.2	33.2	33.6	38.0	43.4	42.0	47.7	54.9	51.2	58.3	67.4
	15	13.2	14.8	16.6	19.3	21.7	24.6	26.3	29.7	33.7	34.1	38.6	44.1	42.7	48.5	55.7	51.9	59.2	68.4
	20	13.4	15.0	16.9	19.6	22.1	24.9	26.7	30.1	34.2	34.6	39.2	44.8	43.3	49.2	56.5	52.7	60.1	69.5
	30	13.7	15.4	17.4	20.1	22.7	25.6	27.4	31.0	35.2	35.6	40.3	46.0	44.5	50.6	58.1	54.2	61.7	71.4
	40	13.8	15.5	17.5	20.3	22.8	25.8	27.7	31.3	35.6	36.0	40.8	46.6	45.1	51.3	59.0	55.0	62.8	72.8
50	13.8	15.5	17.5	20.3	22.9	25.9	27.8	31.5	35.8	36.2	41.1	47.1	45.6	51.9	59.9	55.7	63.8	74.2	
50	0	11.2	12.6	14.1	16.2	18.2	20.5	21.8	24.6	27.9	28.0	31.7	36.1	34.8	39.5	45.1	42.1	47.9	55.1
	10	11.6	13.0	14.6	16.7	18.8	21.2	22.5	25.4	28.8	28.9	32.7	37.2	35.9	40.7	46.6	43.5	49.4	56.8
	15	11.7	13.2	14.8	16.9	19.1	21.5	22.8	25.8	29.2	29.4	33.2	37.8	36.5	41.4	47.3	44.2	50.2	57.7
	20	11.9	13.4	15.1	17.2	19.4	21.9	23.2	26.2	29.6	29.8	33.7	38.4	37.0	42.0	48.0	44.8	50.9	58.6
	30	12.3	13.8	15.5	17.7	19.9	22.5	23.8	26.9	30.5	30.7	34.7	39.4	38.1	43.2	49.4	46.1	52.4	60.2
	40	12.3	13.8	15.6	17.8	20.0	22.6	24.0	27.1	30.7	30.9	35.0	39.9	38.5	43.7	50.0	46.7	53.1	61.2
50	12.3	13.8	15.6	17.8	20.1	22.7	24.1	27.2	30.9	31.1	35.2	40.2	38.8	44.1	50.6	47.2	53.8	62.1	
40	0	9.9	11.1	12.5	14.0	15.7	17.7	18.5	20.8	23.5	23.5	26.5	30.1	28.9	32.7	37.3	34.8	39.4	45.1
	10	10.2	11.5	12.9	14.4	16.2	18.2	19.1	21.5	24.3	24.3	27.4	31.1	29.9	33.8	38.5	35.9	40.7	46.5
	15	10.4	11.7	13.1	14.6	16.5	18.5	19.4	21.8	24.7	24.6	27.8	31.5	30.3	34.3	39.1	36.4	41.3	47.2
	20	10.6	11.9	13.3	14.9	16.7	18.8	19.7	22.2	25.1	25.0	28.2	32.0	30.8	34.8	39.7	37.0	41.9	47.9
	30	10.9	12.2	13.7	15.3	17.2	19.3	20.2	22.8	25.8	25.7	29.0	32.9	31.7	35.8	40.8	38.0	43.1	49.3
	40	10.9	12.2	13.7	15.3	17.3	19.5	20.4	22.9	26.0	25.9	29.3	33.2	31.9	36.2	41.2	38.4	43.6	50.0
50	10.9	12.2	13.8	15.4	17.3	19.5	20.4	23.0	26.1	26.0	29.4	33.4	32.1	36.4	41.6	38.7	44.0	50.5	

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

Adjusted Brake Energy Per Brake (Millions of Foot Pounds)**No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.5	15.8	24.6	33.8	43.5	53.5	63.6	73.9	84.2
	MAX AUTO	7.3	15.0	23.2	31.9	41.2	51.0	61.3	72.2	83.7
	AUTOBRAKE 3	7.0	14.2	21.8	29.7	38.1	47.1	56.7	67.1	78.3
	AUTOBRAKE 2	6.6	13.3	20.2	27.3	34.7	42.6	51.0	59.9	69.6
	AUTOBRAKE 1	6.3	12.4	18.6	24.9	31.6	38.6	46.2	54.4	63.5

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****Two Engine Detent Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	6.9	14.5	22.7	31.4	40.4	49.7	59.3	68.9	78.5
	MAX AUTO	6.0	12.6	19.8	27.6	36.0	45.1	54.8	65.3	76.5
	AUTOBRAKE 3	4.5	9.5	15.1	21.3	28.1	35.6	43.7	52.5	62.0
	AUTOBRAKE 2	2.6	5.9	9.7	14.1	19.1	24.7	31.0	37.9	45.4
	AUTOBRAKE 1	1.8	3.8	6.3	9.1	12.5	16.4	21.0	26.3	32.5

Cooling Time (Minutes) - Category F Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category M Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE	
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE	
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION			FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	34.2	45.9				
GROUND										

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule - High Altitudes
Reference Brake Energy Per Brake (Millions of Foot Pounds)

		WIND CORRECTED BRAKES ON SPEED (KIAS)*															
		60				100				140				180			
WEIGHT (1000 KG)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)															
		10	12	14	14.5	10	12	14	14.5	10	12	14	14.5	10	12	14	14.5
80	0	11.4	11.9	12.5	12.7	29.3	30.9	32.7	33.2	54.2	57.7	61.6	62.7	83.3	89.5		
	10	11.7	12.3	12.9	13.1	30.2	31.9	33.8	34.3	55.9	59.5	63.6	64.8	86.0	92.3		
	15	11.9	12.5	13.1	13.3	30.7	32.4	34.3	34.8	56.8	60.4	64.6	65.8	87.3	93.7		
	20	12.1	12.7	13.3	13.5	31.1	32.9	34.8	35.3	57.6	61.3	65.5	66.7	88.6	95.0		
	30	12.4	13.0	13.7	13.9	32.0	33.8	35.8	36.3	59.3	63.0	67.4	68.6	91.0	97.7		
	40	12.5	13.1	13.8	14.0	32.3	34.1	36.1	36.7	60.2	64.2	68.6	69.9	93.3	100.3		
50	12.5	13.1	13.8	14.0	32.5	34.4	36.4	37.0	61.1	65.2	69.8	71.1	95.6	103.0			
70	0	10.5	11.0	11.5	11.7	26.3	27.8	29.4	29.8	48.2	51.2	54.6	55.6	74.8	80.1	86.3	88.0
	10	10.8	11.3	11.9	12.1	27.2	28.7	30.3	30.8	49.7	52.8	56.3	57.3	77.2	82.7	89.0	90.8
	15	11.0	11.5	12.1	12.3	27.6	29.1	30.8	31.3	50.5	53.6	57.2	58.2	78.4	83.9	90.4	92.2
	20	11.2	11.7	12.3	12.5	28.0	29.6	31.3	31.8	51.3	54.4	58.1	59.1	79.6	85.2	91.7	93.5
	30	11.5	12.0	12.6	12.8	28.8	30.4	32.1	32.6	52.7	56.0	59.7	60.7	81.8	87.5	94.2	96.1
	40	11.5	12.1	12.7	12.9	29.1	30.7	32.4	32.9	53.5	56.9	60.7	61.8	83.6	89.7	96.7	98.7
50	11.5	12.1	12.7	12.9	29.2	30.8	32.6	33.1	54.2	57.6	61.6	62.7	85.4	91.8	99.1	101.2	
60	0	9.6	10.1	10.6	10.7	23.4	24.7	26.1	26.5	42.1	44.6	47.5	48.3	65.3	69.8	74.8	76.3
	10	9.9	10.4	10.9	11.1	24.2	25.5	26.9	27.3	43.4	46.1	49.0	49.8	67.4	72.0	77.2	78.7
	15	10.1	10.6	11.1	11.3	24.6	25.9	27.3	27.7	44.1	46.8	49.7	50.6	68.4	73.1	78.4	79.9
	20	10.2	10.7	11.3	11.4	24.9	26.3	27.7	28.1	44.8	47.5	50.5	51.4	69.5	74.2	79.6	81.1
	30	10.5	11.0	11.6	11.8	25.6	27.0	28.5	28.9	46.0	48.8	51.9	52.8	71.4	76.2	81.8	83.4
	40	10.5	11.1	11.6	11.8	25.8	27.2	28.7	29.2	46.6	49.5	52.7	53.6	72.8	77.8	83.6	85.3
50	10.5	11.1	11.6	11.8	25.9	27.3	28.9	29.3	47.1	50.0	53.3	54.2	74.2	79.4	85.4	87.1	
50	0	8.8	9.2	9.7	9.8	20.5	21.6	22.8	23.1	36.1	38.1	40.5	41.2	55.1	58.6	62.7	63.8
	10	9.1	9.5	10.0	10.1	21.2	22.3	23.5	23.9	37.2	39.4	41.8	42.5	56.8	60.5	64.7	65.9
	15	9.2	9.6	10.1	10.3	21.5	22.7	23.9	24.3	37.8	40.0	42.4	43.1	57.7	61.4	65.7	66.9
	20	9.3	9.8	10.3	10.4	21.9	23.0	24.3	24.6	38.4	40.6	43.1	43.8	58.6	62.3	66.6	67.8
	30	9.6	10.1	10.6	10.7	22.5	23.6	24.9	25.3	39.4	41.7	44.3	45.0	60.2	64.1	68.5	69.7
	40	9.6	10.1	10.6	10.8	22.6	23.8	25.1	25.5	39.9	42.2	44.8	45.6	61.2	65.2	69.8	71.1
50	9.6	10.1	10.6	10.8	22.7	23.9	25.2	25.6	40.2	42.6	45.3	46.1	62.1	66.3	71.0	72.4	
40	0	8.1	8.4	8.9	9.0	17.7	18.6	19.6	19.9	30.1	31.8	33.6	34.2	45.1	47.8	50.9	51.8
	10	8.3	8.7	9.2	9.3	18.2	19.2	20.2	20.5	31.1	32.8	34.7	35.3	46.5	49.3	52.6	53.5
	15	8.5	8.9	9.3	9.4	18.5	19.5	20.5	20.8	31.5	33.3	35.3	35.8	47.2	50.1	53.4	54.3
	20	8.6	9.0	9.4	9.6	18.8	19.8	20.8	21.1	32.0	33.8	35.8	36.4	47.9	50.9	54.2	55.1
	30	8.8	9.2	9.7	9.8	19.3	20.3	21.4	21.7	32.9	34.8	36.8	37.4	49.3	52.3	55.7	56.6
	40	8.9	9.3	9.7	9.9	19.5	20.5	21.6	21.9	33.2	35.1	37.2	37.8	50.0	53.0	56.5	57.5
50	8.8	9.3	9.7	9.9	19.5	20.5	21.6	21.9	33.4	35.4	37.5	38.1	50.5	53.7	57.3	58.3	

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

Adjusted Brake Energy Per Brake (Millions of Foot Pounds)
No Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
	AUTOBRAKE 1	6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****Two Engine Detent Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
	AUTOBRAKE 1	1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

Cooling Time (Minutes) - Category F Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category M Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)							
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS							
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE REQUIRED	1	4	5	6	7	CAUTION		FUSE PLUG MELT ZONE
		6.7	16.0	24.1	34.2	45.9			
GROUND									

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Intentionally
Blank

Performance Inflight
Engine Inoperative
Chapter PI
Section 13
ENGINE INOP
Initial Max Continuous %N1
Based on .80M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.9	96.6	96.4	96.2	96.0	95.5	95.1	94.8	94.2
15	97.5	97.2	97.0	96.8	96.7	96.3	95.8	95.6	95.0
10	98.1	97.9	97.5	97.4	97.4	97.0	96.6	96.4	95.9
5	98.1	98.6	98.4	98.1	98.1	97.8	97.4	97.2	96.7
0	97.3	98.5	99.2	99.0	98.9	98.6	98.2	98.0	97.7
-5	96.5	97.8	98.9	99.8	99.7	99.3	99.0	98.8	98.5
-10	95.8	97.0	98.2	99.4	100.5	100.2	99.9	99.7	99.5
-15	95.0	96.2	97.4	98.6	99.2	101.0	100.8	100.6	100.4
-20	94.2	95.4	96.6	97.8	99.1	100.2	100.8	100.6	100.4
-25	93.4	94.6	95.8	97.0	98.3	99.4	100.0	99.8	99.6
-30	92.6	93.8	95.0	96.2	97.5	98.6	99.1	98.9	98.7
-35	91.7	93.0	94.1	95.3	96.6	97.7	98.3	98.1	97.9
-40	90.9	92.2	93.3	94.5	95.8	96.9	97.4	97.2	97.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

ENGINE INOP

**Max Continuous %N1
37000 FT to 29000 FT Pressure Altitudes**

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.6	97.6	98.5	99.4	100.2	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.1	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.5	97.4	98.3	99.2	100.1	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.3	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.4	98.3	99.2	100.0	100.8	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.3	98.2	99.1	100.0	100.9	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.1	98.0	98.9	99.7	100.6	101.5	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	98.1	99.0	99.9	100.8	101.6	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.1	99.9	100.1	99.1	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

ENGINE INOP**Max Continuous %N1****27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1	
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4	
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5	
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6	
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8	
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4	
25000 FT PRESS ALT													TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2	
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2	
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7	
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9	
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2	
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2	
24000 FT PRESS ALT													TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8	
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7	
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3	
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5	
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8	
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6	
22000 FT PRESS ALT													TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20	
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8	
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8	
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5	
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1	
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6	
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1	
20000 FT PRESS ALT													TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20	
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8	
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8	
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6	
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3	
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9	
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

ENGINE INOP

**Max Continuous %N1
18000 FT to 12000 FT Pressure Altitudes**

18000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.34	98.5	99.3	100.2	101.0	101.8	102.6	101.6	100.3	99.2	98.1	97.0	95.9	
200	.42	98.7	99.6	100.4	101.2	102.0	102.8	103.1	101.7	100.4	99.3	98.3	97.3	
240	.51	97.8	98.7	99.5	100.3	101.1	101.9	102.7	102.5	101.1	99.9	99.0	98.1	
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8	
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2	
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6	
16000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.33	97.1	98.0	98.8	99.6	100.4	101.2	101.6	100.3	99.1	98.1	97.1	96.1	
200	.41	98.0	98.8	99.6	100.4	101.2	102.0	102.8	102.5	101.3	100.2	99.3	98.3	
240	.49	97.1	97.9	98.7	99.5	100.3	101.1	101.9	102.7	101.8	100.5	99.6	98.7	
280	.57	95.6	96.4	97.2	98.0	98.8	99.6	100.3	101.1	101.8	100.9	99.8	99.0	
320	.64	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.2	99.4	
360	.72	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.9	99.6	
14000 FT PRESS ALT					TAT (°C)									
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30	
160	.31	96.6	97.4	98.2	99.0	99.8	100.6	100.4	99.1	98.0	97.1	96.2	95.3	
200	.39	97.1	97.9	98.7	99.5	100.3	101.1	101.8	101.5	101.0	100.1	99.3	98.4	
240	.47	96.6	97.4	98.2	99.0	99.8	100.6	101.3	101.8	101.1	100.3	99.5	98.7	
280	.54	95.5	96.3	97.1	97.8	98.6	99.4	100.1	100.9	101.0	100.1	99.2	98.5	
320	.62	94.1	94.9	95.7	96.5	97.2	98.0	98.7	99.5	100.2	100.3	99.5	98.8	
360	.69	92.2	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.6	99.0	
12000 FT PRESS ALT					TAT (°C)									
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35	
160	.30	96.3	97.0	97.8	98.6	99.4	100.1	99.3	98.1	97.1	96.3	95.4	94.5	
200	.38	97.1	97.9	98.7	99.5	100.3	101.0	101.5	100.8	99.8	99.0	98.2	97.3	
240	.45	96.5	97.3	98.0	98.8	99.6	100.3	101.1	101.0	100.1	99.4	98.6	97.9	
280	.52	95.5	96.3	97.0	97.8	98.6	99.3	100.0	100.8	100.3	99.4	98.6	98.0	
320	.60	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	99.7	98.9	98.2	
360	.67	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.4	99.1	98.5	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

ENGINE INOP**Max Continuous %N1****10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT		TAT (°C)											
CIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT		TAT (°C)											
CIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT		TAT (°C)											
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT		TAT (°C)											
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	77	263	20400	19300	18000
75	72	255	21800	20900	19700
70	67	247	23300	22400	21400
65	62	238	25000	24100	23100
60	57	229	27100	26100	25000
55	53	219	29300	28400	27300
50	48	209	31400	30700	29700
45	43	199	33600	32900	32000
40	38	187	35900	35200	34300

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown/LRC Cruise Range Capability****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
138	128	120	112	106	100	95	90	86	82	79
275	256	239	225	212	200	190	180	172	164	157
413	384	359	337	317	300	284	270	258	246	236
551	512	479	449	423	400	379	361	344	328	314
688	640	598	561	529	500	474	451	429	410	393
826	768	718	674	635	600	569	541	515	492	471
964	896	838	786	741	700	664	631	601	574	549
1102	1025	958	899	846	800	758	721	687	656	628
1240	1153	1077	1011	952	900	853	811	773	738	706
1378	1281	1197	1123	1058	1000	948	901	859	820	785
1517	1410	1317	1236	1164	1100	1043	991	944	902	863
1655	1539	1437	1348	1270	1200	1137	1081	1030	984	941
1794	1667	1557	1461	1376	1300	1232	1171	1116	1065	1019
1933	1796	1677	1573	1482	1400	1327	1261	1201	1147	1098
2071	1925	1798	1686	1588	1500	1422	1351	1287	1229	1176
2211	2054	1918	1799	1694	1600	1516	1441	1373	1310	1254
2350	2183	2038	1911	1800	1700	1611	1531	1458	1392	1332
2489	2312	2159	2024	1906	1800	1706	1621	1544	1474	1410

Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 KG)									TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)									
	40	45	50	55	60	65	70	75	80	
100	0.3	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0:16
200	0.8	0.8	0.8	0.9	1.0	1.0	1.1	1.2	1.2	0:33
300	1.2	1.3	1.4	1.4	1.5	1.7	1.8	1.9	2.0	0:49
400	1.6	1.7	1.9	2.0	2.2	2.3	2.5	2.6	2.7	1:06
500	2.0	2.2	2.4	2.5	2.7	2.9	3.1	3.3	3.5	1:22
600	2.4	2.6	2.8	3.0	3.3	3.5	3.7	4.0	4.2	1:39
700	2.8	3.0	3.3	3.5	3.8	4.1	4.4	4.6	4.9	1:55
800	3.1	3.5	3.8	4.0	4.4	4.7	5.0	5.3	5.6	2:12
900	3.5	3.9	4.2	4.5	4.9	5.2	5.6	5.9	6.3	2:28
1000	3.9	4.3	4.7	5.0	5.4	5.8	6.2	6.6	7.0	2:45
1100	4.3	4.7	5.1	5.5	6.0	6.4	6.8	7.2	7.6	3:02
1200	4.6	5.1	5.6	6.0	6.5	6.9	7.4	7.9	8.3	3:18
1300	5.0	5.5	6.0	6.5	7.0	7.5	8.0	8.5	9.0	3:35
1400	5.4	5.9	6.4	7.0	7.5	8.0	8.6	9.1	9.7	3:52
1500	5.7	6.3	6.9	7.4	8.0	8.6	9.2	9.8	10.3	4:09
1600	6.1	6.7	7.3	7.9	8.5	9.1	9.7	10.4	11.0	4:26
1700	6.4	7.1	7.7	8.4	9.0	9.7	10.3	11.0	11.6	4:43
1800	6.8	7.5	8.1	8.8	9.5	10.2	10.9	11.6	12.3	4:60

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at Long Range Cruise speed.

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	18300	16800	15000
75	20200	18800	17000
70	21700	20600	19100
65	23200	22200	21000
60	24900	23900	22800
55	27400	26100	24700
50	29900	28900	27400
45	32200	31400	30300
40	34600	33800	32800

With engine anti-ice on, decrease altitude capability by 1100 ft.
With engine and wing anti-ice on, decrease altitude capability by 4400 ft .

ENGINE INOP**MAX CONTINUOUS THRUST****Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
80	%N1	88.8	92.5	94.4	97.0						
	MACH	.535	.576	.595	.615						
	KIAS	297	291	290	288						
	FF/ENG	2736	2705	2712	2756						
75	%N1	87.3	90.9	92.4	94.6	97.6					
	MACH	.522	.562	.580	.599	.621					
	KIAS	289	284	282	281	279					
	FF/ENG	2576	2536	2525	2538	2600					
70	%N1	85.6	89.2	90.7	92.4	94.9	98.0				
	MACH	.507	.548	.565	.583	.603	.625				
	KIAS	281	276	274	273	271	270				
	FF/ENG	2411	2372	2356	2346	2369	2448				
65	%N1	83.7	87.4	88.9	90.4	92.3	94.8				
	MACH	.490	.533	.549	.567	.585	.606				
	KIAS	271	269	267	265	263	262				
	FF/ENG	2244	2216	2192	2176	2171	2204				
60	%N1	81.7	85.5	87.0	88.5	90.1	92.1	94.7			
	MACH	.473	.516	.533	.550	.567	.586	.607			
	KIAS	262	260	259	257	255	253	252			
	FF/ENG	2073	2055	2036	2012	1999	1999	2039			
55	%N1	79.4	83.4	84.9	86.4	88.0	89.5	91.6	94.5	98.2	
	MACH	.454	.497	.515	.533	.549	.567	.586	.608	.631	
	KIAS	251	250	250	248	246	244	242	241	240	
	FF/ENG	1900	1890	1876	1857	1836	1824	1830	1872	1957	
50	%N1	76.9	81.0	82.6	84.2	85.7	87.2	88.8	90.9	94.0	97.6
	MACH	.433	.476	.494	.512	.530	.547	.565	.585	.606	.630
	KIAS	239	239	239	238	237	235	233	232	230	230
	FF/ENG	1730	1721	1711	1697	1683	1663	1655	1665	1702	1781
45	%N1	74.3	78.3	79.9	81.6	83.2	84.8	86.3	87.8	89.9	93.1
	MACH	.411	.453	.471	.489	.508	.526	.543	.561	.581	.602
	KIAS	227	228	228	227	227	226	224	222	220	219
	FF/ENG	1562	1549	1543	1533	1522	1510	1496	1492	1499	1528
40	%N1	71.2	75.2	76.9	78.6	80.3	81.9	83.5	85.0	86.6	88.6
	MACH	.388	.428	.445	.463	.482	.500	.519	.537	.555	.575
	KIAS	214	215	215	215	215	214	214	212	210	208
	FF/ENG	1396	1382	1373	1365	1358	1350	1343	1335	1330	1332

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
299	272	249	230	214	200	190	180	172	164	157
601	548	501	462	429	400	380	361	344	328	314
906	824	753	694	644	600	569	541	515	492	471
1212	1102	1006	927	860	800	759	721	686	655	627
1520	1381	1260	1160	1075	1000	948	901	858	819	784
1831	1662	1515	1393	1291	1200	1138	1081	1029	982	940
2144	1945	1771	1627	1507	1400	1327	1260	1199	1144	1095
2459	2229	2028	1862	1723	1600	1516	1440	1370	1307	1251
2776	2514	2285	2097	1940	1800	1705	1618	1540	1469	1406

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.3	0:43	1.2	0:41	1.0	0:39	0.9	0:38	0.8	0:37
400	2.7	1:23	2.5	1:19	2.3	1:16	2.1	1:13	2.0	1:10
600	4.1	2:04	3.8	1:57	3.5	1:52	3.2	1:47	3.1	1:42
800	5.5	2:45	5.1	2:36	4.7	2:29	4.4	2:22	4.2	2:16
1000	6.9	3:27	6.4	3:15	5.9	3:06	5.5	2:57	5.3	2:49
1200	8.2	4:09	7.7	3:55	7.1	3:43	6.6	3:33	6.3	3:23
1400	9.6	4:52	8.9	4:35	8.3	4:21	7.7	4:09	7.4	3:57
1600	10.9	5:36	10.2	5:16	9.4	4:59	8.8	4:45	8.4	4:31
1800	12.2	6:20	11.4	5:57	10.6	5:37	9.8	5:21	9.4	5:05

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.1	-0.1	0.0	0.1	0.2
2	-0.3	-0.1	0.0	0.3	0.6
3	-0.4	-0.2	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.6	1.4
5	-0.8	-0.4	0.0	0.8	1.7
6	-0.9	-0.5	0.0	1.0	2.0
7	-1.1	-0.5	0.0	1.1	2.4
8	-1.2	-0.6	0.0	1.2	2.7
9	-1.4	-0.7	0.0	1.4	3.0
10	-1.5	-0.8	0.0	1.5	3.3
11	-1.7	-0.9	0.0	1.6	3.6
12	-1.9	-0.9	0.0	1.8	3.9
13	-2.0	-1.0	0.0	1.9	4.2
14	-2.2	-1.1	0.0	2.0	4.4

Includes APU fuel burn

ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)						
		1500	5000	10000	15000	20000	25000	30000
80	%N1	78.8	81.7	86.0	90.5	97.3		
	KIAS	244	245	246	247	249		
	FF/ENG	2510	2510	2520	2560	2680		
75	%N1	77.1	79.8	84.1	88.6	94.2		
	KIAS	236	237	238	239	241		
	FF/ENG	2360	2350	2350	2380	2440		
70	%N1	75.2	77.9	82.2	86.5	91.5		
	KIAS	228	229	230	231	232		
	FF/ENG	2200	2190	2180	2200	2230		
65	%N1	73.1	76.0	80.1	84.5	89.1	96.8	
	KIAS	220	220	222	223	224	225	
	FF/ENG	2040	2030	2020	2030	2050	2180	
60	%N1	70.8	73.8	77.8	82.2	86.8	92.8	
	KIAS	211	212	213	213	215	216	
	FF/ENG	1890	1870	1860	1860	1870	1930	
55	%N1	68.5	71.3	75.5	79.8	84.3	89.3	99.0
	KIAS	202	203	203	204	205	206	208
	FF/ENG	1740	1720	1710	1700	1700	1720	1910
50	%N1	66.0	68.7	73.0	77.1	81.7	86.4	93.9
	KIAS	192	193	194	195	195	197	198
	FF/ENG	1600	1570	1550	1540	1530	1540	1640
45	%N1	63.3	66.0	70.1	74.4	78.8	83.4	88.8
	KIAS	184	184	184	184	185	186	187
	FF/ENG	1450	1430	1400	1390	1370	1380	1420
40	%N1	60.1	63.1	67.0	71.4	75.6	80.2	85.0
	KIAS	177	177	177	177	177	177	177
	FF/ENG	1310	1290	1260	1240	1220	1220	1240

This table includes 5% additional fuel for holding in a racetrack pattern.

October 23, 2009

Performance Inflight Alternate Mode EEC

Chapter PI Section 14

ALTERNATE MODE EEC

Alternate Mode EEC Limit Weight

PERFORMANCE LIMIT WEIGHT (1000 KG)	NORMAL MODE PERFORMANCE LIMIT WEIGHT (1000 KG)										
	40	44	48	52	56	60	64	68	72	76	80
FIELD	38.0	41.8	45.6	49.4	53.1	56.8	60.6	64.2	68.0	71.8	75.8
CLIMB	37.1	40.8	44.4	48.1	51.9	55.6	59.4	63.1	67.1	70.6	74.4
OBSTACLE	37.1	40.9	44.7	48.5	52.2	55.9	59.7	63.4	67.0	70.9	74.6

Alternate Mode EEC Limit weights are valid for both 27B3 fullrate and 26K derate thrust. No performance adjustments are necessary for 24K derate.

Alternate Mode EEC Takeoff Speed Adjustment

TAKEOFF SPEEDS	TAKEOFF SPEED ADJUSTMENT (KTS)
V1	+2
VR	+1
V2	0

Alternate Mode EEC Takeoff Speed Adjustments are valid for both 27B3 fullrate and 26K derate thrust. No performance adjustments are necessary for 24K derate.

Alternate Mode EEC Max Takeoff %N1

Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	10000
60	93.5	94.0	94.5	94.7	94.5	94.8	95.0	95.1	94.7	94.1	93.8	93.7
55	94.6	95.0	95.2	95.4	95.3	95.5	95.8	95.9	95.6	95.0	94.5	93.8
50	95.4	96.0	96.5	96.4	96.1	96.3	96.5	96.8	96.5	96.0	95.4	94.8
45	96.1	96.7	97.2	97.4	97.4	97.4	97.4	97.6	97.3	96.8	96.3	95.7
40	96.8	97.5	98.0	98.2	98.1	98.2	98.3	98.3	98.1	97.7	97.2	96.6
35	97.5	98.3	99.0	99.2	99.1	99.2	99.3	99.3	99.0	98.5	98.0	97.5
30	97.1	98.6	100.4	100.1	100.1	100.0	100.1	100.2	99.9	99.6	99.2	98.4
25	96.3	97.9	99.7	100.0	100.3	100.4	100.4	100.4	100.3	100.3	100.2	99.2
20	95.6	97.1	99.0	99.3	99.6	99.8	100.1	100.4	100.4	100.4	100.3	99.6
15	94.8	96.3	98.3	98.6	98.9	99.1	99.4	99.6	99.9	100.2	100.3	99.8
10	94.0	95.6	97.5	97.9	98.1	98.4	98.6	98.9	99.2	99.4	99.7	99.6
5	93.2	94.8	96.8	97.1	97.4	97.6	97.9	98.1	98.4	98.7	99.0	98.8
0	92.4	94.0	96.0	96.4	96.6	96.9	97.1	97.4	97.6	97.9	98.2	98.1
-5	91.6	93.2	95.3	95.6	95.9	96.1	96.4	96.6	96.9	97.2	97.4	97.3
-10	90.8	92.4	94.5	94.8	95.1	95.3	95.6	95.8	96.1	96.4	96.6	96.5
-15	90.0	91.6	93.7	94.1	94.3	94.6	94.8	95.1	95.3	95.6	95.9	95.7
-20	89.2	90.8	93.0	93.3	93.5	93.8	94.0	94.3	94.5	94.8	95.1	94.9
-25	88.3	90.0	92.2	92.5	92.7	93.0	93.2	93.5	93.7	94.0	94.3	94.1
-30	87.5	89.1	91.4	91.7	91.9	92.2	92.4	92.7	92.9	93.2	93.4	93.3
-35	86.6	88.3	90.6	90.9	91.1	91.4	91.6	91.8	92.1	92.4	92.6	92.5
-40	85.8	87.4	89.7	90.1	90.3	90.5	90.8	91.0	91.3	91.5	91.8	91.7
-45	84.9	86.6	88.9	89.2	89.5	89.7	89.9	90.2	90.4	90.7	90.9	90.8
-50	84.0	85.7	88.1	88.4	88.6	88.9	89.1	89.3	89.6	89.8	90.1	89.8

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

ALTERNATE MODE EEC

Alternate Mode EEC Max Takeoff %N1 - High Altitudes
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
60	93.7	94.0	94.1	96.0	96.9
55	93.1	93.3	93.4	95.3	96.2
50	94.1	93.8	93.2	94.6	95.4
45	95.1	94.8	94.4	95.2	95.7
40	96.0	95.8	95.5	96.1	96.4
35	96.9	96.8	96.6	96.9	97.1
30	97.8	97.7	97.7	97.7	97.7
25	98.7	98.5	98.5	98.5	98.4
20	98.8	98.8	98.8	98.7	98.7
15	99.1	99.1	99.1	99.1	99.0
10	99.5	99.5	99.5	99.5	99.4
5	98.7	99.6	99.8	99.7	99.7
0	97.9	98.8	99.7	99.9	99.9
-5	97.2	98.1	98.9	99.3	99.4
-10	96.4	97.3	98.1	98.5	98.6
-15	95.6	96.5	97.3	97.7	97.8
-20	94.8	95.7	96.5	96.9	97.0
-25	94.0	94.9	95.7	96.0	96.2
-30	93.2	94.1	94.9	95.2	95.3
-35	92.4	93.2	94.1	94.4	94.5
-40	91.5	92.4	93.2	93.5	93.7
-45	90.7	91.5	92.3	92.7	92.8
-50	89.8	90.7	91.5	91.8	91.9

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
PACKS OFF	1.0	1.1	1.1	1.1	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4

ALTERNATE MODE EEC**Alternate Mode EEC Max Takeoff %N1 (26K Derate)****Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	92.6	93.2	93.6	93.7	93.8	93.9	94.0	94.1	94.0	93.7	93.6	93.5	93.5
55	93.2	93.8	94.3	94.4	94.5	94.6	94.7	94.9	94.7	94.4	94.1	93.5	92.8
50	93.8	94.4	94.9	95.1	95.2	95.4	95.5	95.6	95.5	95.2	94.9	94.4	93.9
45	94.6	95.2	95.6	95.8	95.9	96.1	96.2	96.3	96.2	95.9	95.6	95.3	94.9
40	95.2	95.9	96.4	96.5	96.6	96.7	96.8	97.0	96.9	96.6	96.3	96.2	95.9
35	95.8	96.5	97.2	97.3	97.4	97.5	97.6	97.7	97.6	97.3	97.0	96.9	96.8
30	95.4	96.6	98.1	98.1	98.2	98.2	98.3	98.3	98.2	98.1	97.8	97.7	97.7
25	94.6	95.9	97.3	97.9	98.5	98.6	98.5	98.5	98.5	98.5	98.4	98.4	98.5
20	93.8	95.1	96.6	97.1	97.7	98.0	98.3	98.6	98.6	98.7	98.6	98.6	98.6
15	93.0	94.3	95.8	96.4	97.0	97.3	97.6	97.9	98.3	98.7	98.9	98.9	98.9
10	92.3	93.6	95.0	95.6	96.2	96.5	96.8	97.2	97.5	97.9	98.3	98.8	99.3
5	91.5	92.8	94.2	94.8	95.4	95.8	96.1	96.4	96.8	97.2	97.6	98.1	98.5
0	90.7	92.0	93.4	94.1	94.7	95.0	95.3	95.7	96.0	96.4	96.8	97.3	97.8
-5	89.8	91.2	92.6	93.3	93.9	94.2	94.5	94.9	95.3	95.7	96.1	96.5	97.0
-10	89.0	90.4	91.8	92.5	93.1	93.4	93.8	94.1	94.5	94.9	95.3	95.8	96.2
-15	88.2	89.5	91.0	91.7	92.3	92.6	93.0	93.4	93.7	94.1	94.5	95.0	95.4
-20	87.4	88.7	90.2	90.8	91.5	91.8	92.2	92.6	93.0	93.4	93.7	94.2	94.6
-25	86.5	87.9	89.4	90.0	90.7	91.0	91.4	91.8	92.2	92.6	93.0	93.4	93.8
-30	85.7	87.0	88.5	89.2	89.8	90.2	90.6	91.0	91.4	91.8	92.1	92.6	93.0
-35	84.8	86.2	87.7	88.3	89.0	89.4	89.7	90.2	90.6	90.9	91.3	91.8	92.2
-40	83.9	85.3	86.8	87.5	88.1	88.5	88.9	89.3	89.7	90.1	90.5	90.9	91.4
-45	83.1	84.4	86.0	86.6	87.3	87.7	88.1	88.5	88.9	89.3	89.7	90.1	90.5
-50	82.2	83.5	85.1	85.7	86.4	86.8	87.2	87.7	88.1	88.4	88.8	89.3	89.7

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.9	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0

ALTERNATE MODE EEC

Alternate Mode EEC Max Takeoff %N1 - High Altitudes

Alternate Mode EEC Max Takeoff %N1 - High Altitudes (26K Derate)

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
60	93.5	93.8	94.9	96.4	97.1
55	92.8	93.1	94.2	95.7	96.4
50	93.9	93.5	93.9	95.0	95.7
45	94.9	94.6	94.9	95.5	95.9
40	95.9	95.6	95.8	96.3	96.5
35	96.8	96.6	96.7	96.9	97.1
30	97.7	97.6	97.6	97.6	97.6
25	98.5	98.3	98.3	98.3	98.2
20	98.6	98.6	98.5	98.5	98.5
15	98.9	98.9	98.9	98.8	98.8
10	99.3	99.2	99.2	99.2	99.1
5	98.5	99.4	99.5	99.5	99.5
0	97.8	98.6	99.5	99.7	99.6
-5	97.0	97.8	98.7	99.0	99.2
-10	96.2	97.1	97.9	98.2	98.4
-155	95.4	96.3	97.1	97.4	97.6
-20	94.6	95.5	96.3	96.6	96.8
-25	93.8	94.7	95.5	95.8	95.9
-30	93.0	93.8	94.7	95.0	95.1
-35	92.2	93.0	93.8	94.2	94.3
-40	91.4	92.2	93.0	93.3	93.4
-45	90.5	91.3	92.1	92.4	92.6
-50	89.7	90.5	91.3	91.6	91.7

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
PACKS OFF	1.0	1.1	1.1	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4

Performance Inflight
Gear Down

Chapter PI
Section 15

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	18700	15800	12900
75	21400	18700	15900
70	23900	21700	18800
65	26300	24700	22100
60	28800	27300	25500
55	31000	29800	28400
50	33000	32100	30900
45	35300	34300	33100
40	37700	36700	35600

GEAR DOWN

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
80	%N1	84.0									
	MACH	.468									
	KIAS	259									
	FF/ENG	2251									
75	%N1	82.3	91.5								
	MACH	.454	.554								
	KIAS	251	248								
	FF/ENG	2102	2082								
70	%N1	80.4	89.6	91.5	94.1						
	MACH	.440	.541	.557	.575						
	KIAS	243	242	240	238						
	FF/ENG	1956	1944	1931	1950						
65	%N1	78.3	87.7	89.3	91.3	94.2					
	MACH	.425	.524	.543	.560	.578					
	KIAS	235	234	233	231	229					
	FF/ENG	1814	1797	1790	1786	1812					
60	%N1	76.2	85.4	87.3	88.9	91.0	94.1				
	MACH	.409	.504	.525	.544	.562	.580				
	KIAS	226	225	225	224	222	220				
	FF/ENG	1674	1646	1646	1643	1646	1674				
55	%N1	74.0	83.1	84.8	86.6	88.3	90.5	93.8			
	MACH	.393	.484	.504	.525	.545	.562	.581			
	KIAS	217	216	216	216	215	213	211			
	FF/ENG	1537	1500	1498	1501	1502	1506	1533			
50	%N1	71.5	80.5	82.3	84.0	85.8	87.5	89.8	93.1		
	MACH	.376	.463	.482	.502	.523	.544	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	1402	1356	1352	1354	1361	1363	1365	1391		
45	%N1	68.7	77.7	79.4	81.2	82.9	84.8	86.5	88.7	92.1	
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578	
	KIAS	197	196	196	196	196	196	195	193	191	
	FF/ENG	1272	1215	1209	1211	1217	1222	1224	1223	1245	
40	%N1	65.8	74.6	76.3	78.1	79.8	81.6	83.4	85.2	87.3	91.0
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554	.573
	KIAS	187	185	185	185	185	185	185	185	183	181
	FF/ENG	1148	1082	1070	1069	1076	1080	1082	1084	1083	1104

GEAR DOWN

**Long Range Cruise Enroute Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1673	1484	1322	1194	1090	1000	943	891	844	803	766
2023	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2379	2102	1865	1680	1530	1400	1320	1247	1181	1122	1070
2741	2416	2140	1924	1751	1600	1508	1424	1348	1280	1221
3110	2735	2417	2170	1972	1800	1695	1600	1514	1438	1371

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.1	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.8	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.4	1:17
600	7.3	2:25	6.8	2:17	6.0	2:06	5.6	1:59	5.3	1:54
800	9.7	3:14	9.0	3:03	8.1	2:48	7.5	2:38	7.1	2:31
1000	12.0	4:04	11.2	3:50	10.0	3:31	9.4	3:18	8.9	3:08
1200	14.2	4:56	13.3	4:39	12.0	4:14	11.2	3:58	10.6	3:46
1400	16.5	5:49	15.4	5:28	13.8	4:58	13.0	4:40	12.3	4:24
1600	18.6	6:42	17.4	6:18	15.7	5:43	14.7	5:22	13.9	5:03
1800	20.8	7:38	19.4	7:10	17.5	6:30	16.4	6:04	15.6	5:43

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.4
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.4	-0.7	0.0	1.1	2.6
10	-1.7	-0.9	0.0	1.4	3.2
12	-2.1	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.8	-1.4	0.0	2.0	4.6
18	-3.1	-1.6	0.0	2.2	5.0
20	-3.5	-1.7	0.0	2.3	5.3
22	-3.9	-1.9	0.0	2.5	5.6

GEAR DOWN

Descent
VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	22	260	91
39000	21	250	87
37000	20	250	82
35000	20	250	78
33000	19	240	73
31000	18	240	69
29000	17	230	65
27000	16	230	61
25000	16	220	57
23000	15	220	52
21000	14	210	48
19000	13	200	44
17000	12	190	40
15000	11	180	36
10000	9	160	26
5000	6	130	16
1500	4	100	9

Allowances for a straight-in approach are included.

GEAR DOWN

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
80	%N1	73.5	76.3	80.4	84.8	89.4			
	KIAS	224	224	224	224	224			
	FF/ENG	2060	2050	2040	2050	2060			
75	%N1	71.8	74.8	78.7	83.1	87.7	93.9		
	KIAS	219	219	219	219	219	219		
	FF/ENG	1950	1930	1920	1920	1930	1990		
70	%N1	70.1	73.0	77.1	81.4	85.8	91.1		
	KIAS	214	214	214	214	214	214		
	FF/ENG	1840	1820	1810	1800	1800	1830		
65	%N1	68.3	71.1	75.3	79.5	83.9	88.7		
	KIAS	209	209	209	209	209	209		
	FF/ENG	1730	1700	1690	1680	1670	1690		
60	%N1	66.4	69.1	73.4	77.4	81.9	86.6	93.5	
	KIAS	203	203	203	203	203	203	203	
	FF/ENG	1610	1590	1570	1560	1550	1550	1630	
55	%N1	64.4	67.1	71.2	75.3	79.7	84.3	89.7	
	KIAS	197	197	197	197	197	197	197	
	FF/ENG	1500	1480	1460	1440	1420	1430	1460	
50	%N1	62.0	64.9	68.9	73.2	77.4	81.9	86.6	
	KIAS	190	190	190	190	190	190	190	
	FF/ENG	1390	1370	1340	1330	1300	1300	1320	
45	%N1	59.6	62.5	66.5	70.8	74.9	79.4	84.0	90.7
	KIAS	184	184	184	184	184	184	184	184
	FF/ENG	1280	1260	1240	1220	1190	1180	1200	1240
40	%N1	57.3	59.9	64.1	68.1	72.5	76.8	81.3	86.3
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1170	1150	1130	1110	1090	1070	1080	1090

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight
Gear Down, Engine Inop
Chapter PI
Section 16
GEAR DOWN
ENGINE INOP
MAX CONTINUOUS THRUST
Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	76	224	4900	3300	1200
75	71	219	7100	5800	3700
70	66	214	9400	8100	6200
65	62	209	11600	10500	8900
60	57	203	13900	13000	11700
55	52	197	16200	15400	14700
50	47	190	18700	17900	17100
45	43	184	21100	20300	19400
40	38	177	23500	22700	21900

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	2000		
70	5000	3100	500
65	8000	6400	4000
60	11000	9700	7500
55	13700	12700	11200
50	16600	15800	15100
45	19700	18700	17800
40	22600	21700	20800

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		5	7	9	11	13	15	17	19	21
70	%N1	94.4								
	MACH	.389								
	KIAS	235								
	FF/ENG	3725								
65	%N1	92.2	93.9	96.3						
	MACH	.376	.389	.402						
	KIAS	228	227	226						
	FF/ENG	3432	3440	3472						
60	%N1	89.8	91.5	93.3	95.7					
	MACH	.364	.375	.388	.402					
	KIAS	220	219	218	218					
	FF/ENG	3148	3149	3155	3189					
55	%N1	87.3	88.9	90.6	92.4	94.8	98.6			
	MACH	.351	.362	.374	.387	.400	.414			
	KIAS	212	211	210	209	209	208			
	FF/ENG	2882	2869	2867	2874	2904	2995			
50	%N1	84.8	86.3	87.8	89.5	91.3	93.7	97.4		
	MACH	.338	.348	.359	.371	.384	.398	.412		
	KIAS	204	203	202	201	200	199	198		
	FF/ENG	2628	2607	2593	2590	2597	2616	2685		
45	%N1	82.1	83.5	85.0	86.5	88.2	90.0	92.2	95.8	
	MACH	.325	.334	.344	.355	.367	.380	.393	.408	
	KIAS	196	195	193	192	191	190	189	189	
	FF/ENG	2387	2358	2337	2322	2318	2319	2324	2371	
40	%N1	79.2	80.6	82.0	83.4	84.9	86.6	88.4	90.4	93.3
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402
	KIAS	188	186	184	183	182	181	180	179	179
	FF/ENG	2161	2123	2093	2071	2056	2046	2040	2036	2063

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
172	151	134	120	109	100	94	88	82	78	74
352	308	270	242	219	200	187	174	164	155	147
533	465	408	364	330	300	280	261	245	231	219
716	623	545	486	440	400	373	348	326	307	291
900	783	684	609	551	500	465	434	407	383	363
1086	943	823	733	661	600	558	521	488	459	435
1273	1104	963	856	772	700	651	607	568	535	506
1461	1266	1103	980	883	800	744	693	648	610	577
1652	1430	1244	1103	994	900	836	779	729	685	648
1844	1595	1385	1228	1105	1000	929	865	809	760	719

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	2		6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.4	0:28	1.2	0:27	1.1	0:26	1.0	0:26
200	2.8	0:55	2.6	0:53	2.4	0:50	2.3	0:48
300	4.2	1:22	3.9	1:18	3.6	1:15	3.5	1:11
400	5.6	1:49	5.2	1:44	4.8	1:39	4.7	1:35
500	6.9	2:16	6.5	2:10	6.1	2:04	5.9	1:58
600	8.3	2:44	7.7	2:37	7.3	2:29	7.0	2:22
700	9.6	3:12	9.0	3:03	8.4	2:55	8.2	2:46
800	10.9	3:40	10.2	3:30	9.6	3:20	9.3	3:10
900	12.2	4:09	11.4	3:58	10.8	3:46	10.4	3:34
1000	13.5	4:37	12.6	4:25	11.9	4:12	11.4	3:59

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.7
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.7	-0.3	0.0	0.7	1.4
5	-0.8	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.1	2.1
7	-1.2	-0.6	0.0	1.2	2.4
8	-1.3	-0.7	0.0	1.4	2.8
9	-1.5	-0.8	0.0	1.6	3.1
10	-1.7	-0.8	0.0	1.7	3.5
11	-1.8	-0.9	0.0	1.9	3.8
12	-2.0	-1.0	0.0	2.0	4.1
13	-2.2	-1.1	0.0	2.2	4.4
14	-2.3	-1.2	0.0	2.3	4.8

Includes APU fuel burn.

Holding
Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
70	%N1	88.6	91.8		
	KIAS	214	214		
	FF/ENG	3510	3540		
65	%N1	86.6	89.7	94.9	
	KIAS	209	209	209	
	FF/ENG	3260	3280	3350	
60	%N1	84.4	87.4	92.1	
	KIAS	203	203	203	
	FF/ENG	3020	3030	3070	
55	%N1	82.1	85.1	89.6	95.9
	KIAS	197	197	197	197
	FF/ENG	2780	2780	2800	2910
50	%N1	79.6	82.6	87.0	91.9
	KIAS	190	190	190	190
	FF/ENG	2550	2540	2550	2600
45	%N1	77.1	79.9	84.3	89.0
	KIAS	184	184	184	184
	FF/ENG	2340	2320	2310	2340
40	%N1	74.4	77.2	81.5	85.9
	KIAS	177	177	177	177
	FF/ENG	2130	2110	2090	2100

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight**Text****Chapter PI****Section 17**

Introduction

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

General**Takeoff Speeds**

The speeds presented in the Takeoff Speeds table as well as FMC computed takeoff speeds can be used for all performance conditions provided that adjustments are made to V1 for clearway, stopway, anti-skid inoperative, thrust reversers inoperative, improved climb, contaminated runway situations or brake energy limits. These speeds may be used for weights less than or equal to the performance limited weight.

The FMC will protect for minimum control speeds by increasing V1, VR and V2 as required. However, the FMC will not compute takeoff speeds for weights where the required speed increase exceeds the maximum certified speed increase. This typically occurs at full rated thrust and light weights. In this case, the message "V SPEEDS UNAVAILABLE" will appear on the FMC scratchpad and the takeoff speed entries will be blank. Takeoff is not permitted in this condition as certified limits have been exceeded. The options are to select a smaller flap setting, select derate thrust and/or add weight (fuel). Selecting derate thrust is the preferred method as this will reduce the minimum control speeds. Note that the assumed temperature method will not help this condition as the minimum control speeds are determined at the actual temperature and therefore are not reduced.

Takeoff at the -7B27/B3 and -7B26/B1 thrust ratings requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the

assumed temperature method of reducing thrust may not be used as a means to comply with this restriction. Conservative minimum takeoff weights are shown in the table below:

TAKEOFF THRUST RATING	MINIMUM TAKEOFF WEIGHT
CFM56-7B27/B3	58967 KG
CFM56-7B26/B1	56699 KG

Alternatively, lower minimum takeoff weights may be obtained, for the actual pressure altitude and outside temperature, by using the Minimum Takeoff Weight tables presented in the Takeoff section of the Performance Dispatch chapter.

Normal takeoff speeds, V1, VR, and V2 are read from either the dry or wet table by entering with takeoff flap setting and brake release weight. Use the tables provided to adjust takeoff speeds for altitude and actual temperature or assumed temperature for reduced thrust takeoffs. Slope and wind adjustments to V1 are obtained by entering the Slope and Wind V1 Adjustment table.

V1(MCG)

Regulations prohibit scheduling takeoff with a V1 less than minimum V1 for control on the ground, V1(MCG). It is therefore necessary to compare the adjusted V1 to V1(MCG). The V1(MCG) presented in this manual is conservative for all weight and bleed configurations.

To find V1(MCG) enter the V1(MCG) table with the airport pressure altitude and actual OAT. If the adjusted V1 is less than V1(MCG), set V1 equal to V1(MCG). If the adjusted VR is less than V1(MCG), set VR equal to V1(MCG), and determine a new V2 by adding the difference between the normal VR and V1(MCG) to the normal V2. No takeoff weight adjustment is necessary provided that the actual field length exceeds the minimum field length shown in the Field and Climb Limit Weight table.

Clearway and Stopway V1 Adjustments

Maximum allowable clearway limits are provided for guidance when more precise data is not available. Use of clearway is not allowed on wet runways.

Takeoff speed adjustments are to be applied to V1 speed when using takeoff weights based on the use of clearway and stopway.

Adjust V1 speed by the amount shown in the table. The adjusted V1 speed must not exceed VR. If the adjusted V1 speed is greater than VR, reduce V1 to equal VR.

Stab Trim

To find takeoff stabilizer trim setting, enter Stab Trim Setting table with anticipated brake release weight and center of gravity (C.G. % MAC) and read required stabilizer trim units.

VREF

This table contains flaps 40, 30 and 15 reference speeds for a given weight. With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

Flap Maneuver Speeds

This table provides the flap speed schedule for recommended maneuver speeds. Using VREF as the basis for the schedule makes it variable as a function of weight and will provide adequate maneuver margin above stall at all weights.

During flap retraction/extension, movement of the flap to the next position should be initiated when within 20 knots of the recommended speed for that position.

Slush/Standing Water Takeoff

Experience has shown that aircraft performance may deteriorate significantly on runways covered with snow, slush, standing water or ice. Therefore, reductions in field/obstacle limited takeoff weight and revised takeoff speeds are necessary. The tables are intended for guidance in accordance with advisory material and assume an engine failure at the critical point during the takeoff.

The entire runway is assumed to be completely covered by a contaminant of uniform thickness and density. Therefore this information is conservative when operating under typical cold weather conditions where patches of slush exist and some degree of sanding is common. Takeoffs in slush depths greater than 13 mm (0.5 inches) are not recommended because of possible airplane damage as a result of slush impingement on the airplane structure. The use of assumed temperature for reduced thrust is not allowed on contaminated runways. Interpolation for slush/standing water depths between the values shown is permitted.

Takeoff weight determination:

1. Enter the Weight Adjustment table with the dry field/obstacle limit weight to obtain the weight reduction for the slush/standing water depth and airport pressure altitude.
2. Adjust field length available for temperature by amount shown beneath V1(MCG) limit weight table.
3. Enter the V1(MCG) Limit Weight table with the adjusted field length and pressure altitude to obtain the slush/standing water limit weight with respect to minimum field length required for V1(MCG) speed.
4. The maximum allowable takeoff weight in slush/standing water is the lesser of the limit weights found in steps 1 and 3.

Takeoff speed determination:

1. Determine takeoff speeds V1, VR and V2 for actual brake release weight using the Dry Runway Takeoff Speeds table for the appropriate flap setting and thrust rating.
2. If V1(MCG) limited, set $V1=V1(MCG)$. If not limited by V1(MCG) considerations, enter the V1 Adjustment table with actual brake release weight to determine the V1 reduction to apply to V1 speed. If the adjusted V1 is less than V1(MCG), set $V1=V1(MCG)$.

Slippery Runway Takeoff

Airplane braking action is reported as good, medium or poor, depending on existing runway conditions. If braking action is reported as good, conditions should not be expected to be as good as on clean, dry runways. The value “good” is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when stopping. The performance level used to calculate the “good” data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate the “poor” data reflects a runway covered with wet ice. Performance is based on a 15 ft screen height at the end of the runway. The tables provided are used in the same manner as the Slush/Standing Water tables.

Anti-Skid Inoperative

When operating with anti-skid inoperative, the field limit weight and V1 must be reduced to account for the effect on accelerate-stop performance. Anti-skid inoperative is only allowed on a dry runway. A simplified method which conservatively accounts for the effects of anti-skid

inoperative is to reduce the normal dry field/obstacle limited weight by 8250 kg and the V1 associated with the reduced weight by the amount shown in the table below.

ANTI-SKID INOPERATIVE V1 ADJUSTMENTS	
FIELD LENGTH (M)	V1 ADJUSTMENT (KIAS)
2000	-18
2500	-15
3000	-13
3500	-11
4000	-10

If the resulting V1 is less than V1(MCG), takeoff is permitted with V1 set equal to V1(MCG) provided the dry accelerate-stop distance adjusted for wind and slope exceeds approximately 2550 m.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Thrust Reverser Inoperative

When dispatching on a wet runway with both thrust reversers operative, an operative anti-skid system, and all brakes operating, regulations allow deceleration credit for one thrust reverser in the engine failure case and two thrust reversers in the all engine stop case.

When dispatching on a wet runway with one thrust reverser inoperative, the field/obstacle limited weight and V1 speed must be reduced to account for the effect on accelerate-stop performance. A simplified method, which conservatively accounts for this, is to reduce the normal wet runway/field/obstacle limited weight by 1000 kg and the V1 associated with the reduced weight by 2 knots.

If the resulting V1 is less than minimum V1, takeoff is permitted with V1 set equal to V1(MCG) provided the accelerate-stop distance available adjusted for wind and slope exceeds approximately 1900 m.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Takeoff %N1

To find Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off operation, apply the %N1 adjustment shown below the table. No takeoff %N1 adjustment is required for engine and wing anti-ice.

Assumed Temperature Reduced Thrust

Regulations permit the use of up to 25% takeoff thrust reduction for operation with assumed temperature reduced thrust. Use of assumed temperature reduced thrust is not allowed with anti-skid inoperative or on runways contaminated with standing water, ice, slush, or snow. Use of assumed temperature reduced thrust is not recommended if potential windshear conditions exist.

To find the maximum allowable assumed temperature enter the Maximum Assumed Temperature table with airport pressure altitude and OAT. Compare this temperature to that at which the airplane is performance limited as determined from available takeoff performance data. Next, enter the Maximum Takeoff %N1 table with airport pressure altitude and the lower of the two temperatures previously determined, to obtain a maximum takeoff %N1. Do not use an assumed temperature less than the minimum assumed temperature shown. Enter the %N1 Adjustment table with OAT and the difference between the assumed and actual OAT to obtain a %N1 adjustment. Subtract the %N1 adjustment from the maximum takeoff %N1 found previously to determine the assumed temperature reduced thrust %N1.

Max Climb %N1

This table shows Max Climb %N1 for a 280/.80 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

Go-around %N1

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

Flight with Unreliable Airspeed / Turbulent Air Penetration

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

All Engines

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. This table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Cruise Control

These tables provide target %N1, Cruise Mach number, IAS and standard day fuel flow per engine for the airplane weight and pressure altitude.

.80M Enroute Fuel and Time

.80M Enroute Fuel and Time tables are provided to determine remaining time and fuel required to destination. The data is based on .80M Cruise and .80/280/250 descent. Tables are presented for low altitudes and high altitudes.

To determine remaining fuel and time required, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the actual weight at checkpoint to obtain fuel required to destination.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the table in the Engine Inoperative text section.

.80M Wind-Altitude Trade

Wind is a factor which may justify operations considerably below optimum altitude. For example, a favorable wind component may have an effect on ground speed which more than compensates for the loss in air range.

Using this table, it is possible to determine the break-even wind (advantage necessary or disadvantage that can be tolerated) to maintain the same range at another altitude and long range cruise speed. The tables make no allowance for climb or descent time, fuel or distance, and are based on comparing ground fuel mileage.

Descent

Time, fuel, and distance for descent are shown for a .80/280/250 descent speed schedule. Enter the table with top of descent pressure altitude and read distance, time and fuel. Data is based on flight idle thrust descent in zero wind. Allowances are included for a straight-in approach with gear down and landing flaps at the outer marker.

Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

Advisory Information

Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. Use of autobrake setting 1 is not recommended for landings on slippery runways, and is

therefore not provided for these conditions. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of max manual braking and reverse thrust.

Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

Engine Inoperative

Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .80M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .80/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles

Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

Holding

Single engine holding data is provided in the same format as the all engine holding data and is based on the same assumptions.

Alternate Mode EEC

Introduction

This section contains performance data for airplane operation with the Electronic Engine Control (EEC) in the alternate mode (ALTN EEC switch illuminated) for applicable thrust ratings. The data includes engine bleed effects for normal air conditioning operation i.e., two packs on at normal flow all engines operating.

Operation with assumed temperature reduced thrust is not permitted with the EEC in the alternate mode. No takeoff speed adjustments or other performance adjustments are required for EEC in the alternate mode with 24K derate thrust.

Limit Weight

A simplified method which conservatively accounts for the effects of EEC in alternate mode is to reduce the normal mode (ON EEC switch illuminated) performance limited weights. The Limit Weight table provides takeoff field, climb, and obstacle limit weights. To determine limit weights for operations with the EEC in alternate mode, enter the table with the limit weights for normal mode EEC operation and read the associated limit weight for each performance condition. The most limiting of the takeoff weights must be used. Analysis from the Airplane Flight Manual - Digital Performance Information may yield less restrictive limit weights.

Takeoff Speed Adjustment

Takeoff speeds for the reduced weight should be increased by the amount shown in the Takeoff Speeds Adjustment table. The adjusted V1 should not exceed the adjusted VR.

NOTE: The FMC does not incorporate alternate mode EEC performance in its takeoff speeds calculations.

Max Takeoff %N1

The alternate mode EEC thrust schedule provides equal or greater thrust than the normal mode thrust for the same thrust lever position. Thrust limit protection is not provided in alternate mode EEC and maximum rated thrust may be reached at thrust lever position less than full forward. As a result, thrust overboost may occur if the target alternate mode EEC Max Takeoff %N1 settings are not observed.

To find alternate mode EEC Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter the Alternate Mode EEC Max Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off apply the %N1 adjustment provided below the table. No %N1 adjustment is required for engine or wing anti-ice.

Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

Note: The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.

Intentionally
Blank

Performance Inflight**Chapter PI****Table of Contents****Section 20****737-700BBJW CFM56-7B27B3 LB FAA CATF/M**

General	PI.20.1
Takeoff Speeds - Dry Runway	PI.20.1
Takeoff Speeds - Dry Runway - High Altitudes	PI.20.3
Takeoff Speeds - Wet Runway	PI.20.4
Takeoff Speeds - Wet Runway - High Altitudes	PI.20.6
Maximum Allowable Clearway	PI.20.7
Maximum Allowable Clearway - High Altitudes	PI.20.7
Clearway and Stopway V1 Adjustments	PI.20.7
Clearway and Stopway V1 Adjustments - High Altitudes	PI.20.7
Stab Trim Setting	PI.20.8
VREF	PI.20.9
Flap Maneuver Speeds	PI.20.10
Slush/Standing Water Takeoff	PI.20.11
Slippery Runway Takeoff	PI.20.19
Takeoff %N1	PI.20.28
Takeoff %N1 - High Altitudes	PI.20.28
Assumed Temperature Reduced Thrust	PI.20.29
Assumed Temperature Reduced Thrust - High Altitudes	PI.20.30
Takeoff Speeds - Dry Runway (26K Derate)	PI.20.32
Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)	PI.20.34
Takeoff Speeds - Wet Runway (26K Derate)	PI.20.35
Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)	PI.20.37
Maximum Allowable Clearway (26K Derate)	PI.20.38
Clearway and Stopway V1 Adjustments (26K Derate) ...	PI.20.38
Stab Trim Setting (26K Derate)	PI.20.39
Slush/Standing Water Takeoff (26K Derate)	PI.20.40

Slippery Runway Takeoff (26K Derate)	PI.20.48
Takeoff %N1 - (26K Derate)	PI.20.57
Assumed Temperature Reduced Thrust - (26K Derate) . . .	PI.20.58
Takeoff Speeds - Dry Runway (24K Derate)	PI.20.62
Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)	PI.20.64
Takeoff Speeds - Wet Runway (24K Derate)	PI.20.65
Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)	PI.20.67
Maximum Allowable Clearway (24K Derate)	PI.20.68
Clearway and Stopway V1 Adjustments (24K Derate) . . .	PI.20.68
Stab Trim Setting (24K Derate)	PI.20.69
Slush/Standing Water Takeoff (24K Derate)	PI.20.70
Slippery Runway Takeoff (24K Derate)	PI.20.78
Takeoff %N1 (24K Derate)	PI.20.87
Assumed Temperature Reduced Thrust (24K Derate)	PI.20.88
Max Climb %N1	PI.20.92
Go-around %N1	PI.20.93
General	PI.20.95
Flight With Unreliable Airspeed/ Turbulent Air Penetration	PI.20.95
All Engine	PI.21.1
.80M Maximum Operating Altitude	PI.21.1
.80M Cruise Control	PI.21.2
.80M Enroute Fuel and Time - Low Altitudes	PI.21.3
.80M Enroute Fuel and Time - High Altitudes	PI.21.5
.80M Wind-Altitude Trade	PI.21.7
Descent	PI.21.7
Holding	PI.21.8
Advisory Information	PI.22.1
Normal Configuration Landing Distances	PI.22.1
Non-Normal Configuration Landing Distance	PI.22.4
Recommended Brake Cooling Schedule	PI.22.12

Engine Inoperative	PI.23.1
Initial Max Continuous %N1	PI.23.1
Max Continuous %N1	PI.23.2
Driftdown Speed/Level Off Altitude	PI.23.6
Driftdown/LRC Cruise Range Capability	PI.23.7
Long Range Cruise Altitude Capability	PI.23.8
Long Range Cruise Control	PI.23.9
Long Range Cruise Diversion Fuel and Time	PI.23.10
Holding	PI.23.11
Alternate Mode EEC	PI.24.1
Alternate Mode EEC Limit Weight	PI.24.1
Alternate Mode EEC Max Takeoff %N1	PI.24.1
Alternate Mode EEC Max Takeoff %N1 (26K Derate)	PI.24.3
Gear Down	PI.25.1
Long Range Cruise Altitude Capability	PI.25.1
Long Range Cruise Control	PI.25.2
Long Range Cruise Enroute Fuel and Time	PI.25.3
Descent	PI.25.4
Holding	PI.25.5
Gear Down, Engine Inoperative	PI.26.1
Driftdown Speed/Level Off Altitude	PI.26.1
Long Range Cruise Altitude Capability	PI.26.1
Long Range Cruise Control	PI.26.2
Long Range Cruise Diversion Fuel and Time	PI.26.3
Holding	PI.26.4
Text	PI.27.1
Introduction	PI.27.1
General	PI.27.1
All Engines	PI.27.7
Advisory Information	PI.27.8
Engine Inoperative	PI.27.10
Alternate Mode EEC	PI.27.12
Gear Down	PI.27.13

Intentionally
Blank

Performance Inflight

General

Chapter PI

Section 20

Takeoff Speeds - Dry Runway

Flaps 1 and 5

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
190	155	159	165	151	155	161
180	150	153	161	146	150	157
170	145	148	156	141	145	152
160	140	143	152	137	140	148
150	135	137	147	131	135	144
140	129	132	142	125	129	139
130	122	126	137	119	123	134
120	116	119	132	113	116	129
110	109	112	126	107	110	123

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 130000 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10		-2	0	2	4	6	8	10		-2	0	2	4	6	8	10	
70	158	8	9						6	7							-1	-1							
60	140	6	7	9	10				4	6	7	8					-1	0	0	0					
50	122	3	4	6	7	9	12	14	3	4	5	7	8	10	12		-1	0	0	0	0	0	0		-1
40	104	1	2	4	6	7	10	12	1	2	4	5	7	9	11		0	0	0	0	0	0	0	0	
30	86	0	0	2	4	6	8	10	0	0	2	4	6	7	9		0	0	0	0	0	0	0	0	
20	68	0	0	2	3	5	7	9	0	0	2	3	5	6	8		0	0	0	0	0	0	1	1	
-60	-76	0	0	2	3	5	7	9	0	0	2	3	5	6	8		0	0	0	0	0	0	1	1	

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
190	-3	-2	0	2	3	-2	-1	-1	0	0	1	1	1		
170	-3	-1	0	2	3	-2	-1	0	0	0	1	1	1		
150	-2	-1	0	1	2	-2	-1	0	0	0	1	1	1		
130	-2	-1	0	1	2	-2	-1	-1	0	0	1	1	2		
110	-1	-1	0	1	2	-2	-1	-1	0	0	1	1	2		

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Dry Runway
Flaps 10, 15 and 25
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	144	147	153	144	144	150	142	142	149
180	140	143	149	139	139	146	137	137	144
170	135	138	145	134	135	142	132	133	141
160	131	134	142	130	131	139	128	129	137
150	126	129	138	125	126	136	123	125	134
140	121	124	134	120	122	132	118	120	130
130	116	119	130	114	116	128	113	115	126
120	110	113	125	109	111	123	107	110	122
110	104	108	121	103	105	119	102	104	117

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 130000 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	6	7						4	5						-3	-3					
60	140	5	5	6	7				3	4	5	6				-2	-2	-3	-3			
50	122	3	3	5	6	7	9	10	2	3	4	4	5	6	8	-1	-1	-2	-2	-3	-4	-5
40	104	1	2	3	4	5	7	9	1	1	3	3	4	6	7	-1	-1	-1	-2	-2	-3	-4
30	86	0	0	2	3	4	6	7	0	0	2	3	4	5	6	0	0	-1	-1	-2	-2	-3
20	68	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-3
-60	-76	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-3	-1	0	1	3		-2	-1	-1	0	0	1	1	1
170	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1
150	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
130	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
110	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	2

*V1 not to exceed VR

V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Dry Runway - High Altitudes**V1, VR, V2 for Max Takeoff Thrust**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	151	152	154	147	148	150									
150	146	146	150	142	143	146									
140	139	141	145	136	137	141	130	130	134	128	128	132			
130	133	134	139	129	131	135	123	125	129	122	122	126	120	120	124
120	126	127	133	123	125	129	117	118	123	116	116	121	114	114	119
110	118	120	126	116	118	123	111	112	118	109	110	116	108	108	114
100	111	113	120	108	111	117	104	105	112	103	104	110	101	102	109
90	103	105	114	101	103	111	97	99	107	95	97	105	94	96	104

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 101600 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (1000 FT)					PRESS ALT (1000 FT)					PRESS ALT (1000 FT)				
°C	°F	10	11	12	13	13.5	10	11	12	13	13.5	10	11	12	13	13.5
50	122	6					5					0				
40	104	4	5	6	7	7	3	4	5	5	6	0	0	0	0	1
30	86	2	3	4	5	5	2	3	3	4	5	0	0	0	1	1
20	68	0	1	2	3	4	1	2	2	3	4	0	0	0	1	1
10	50	0	1	2	3	3	0	1	2	2	3	0	0	0	1	1
0	32	0	1	1	2	3	0	1	1	2	2	0	0	0	1	1
-60	-76	0	1	1	2	3	0	1	1	2	2	0	0	0	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
160	-3	-2	0	1	1	-1	-1	-1	0	0	0	0	1		
150	-3	-1	0	1	1	-1	-1	0	0	0	0	0	1		
140	-2	-1	0	1	1	-1	-1	0	0	0	0	1	1		
130	-2	-1	0	1	1	-1	-1	0	0	0	0	1	1		
120	-2	-1	0	1	1	-1	-1	0	0	0	0	1	1		
110	-2	-1	0	1	2	-1	-1	0	0	0	1	1	1		
100	-2	-1	0	1	2	-1	-1	0	0	0	1	1	1		
90	-1	-1	0	1	1	-2	-1	-1	0	0	1	1	1		

*V1 not to exceed VR

V1(MCG)**Max Takeoff Thrust**

TEMP		PRESSURE ALTITUDE (FT)				
		10000	11000	12000	13000	13500
50	122	99				
40	104	99	98	96	95	95
30	86	101	99	97	95	95
20	68	103	101	99	97	96
10	50	105	103	101	99	98
0	32	105	104	102	100	99
-60	-76	106	104	103	101	100

Takeoff Speeds - Wet Runway
Flaps 1 and 5
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
190	150	159	165	145	155	161
180	144	153	161	140	150	157
170	138	148	156	134	145	152
160	132	143	152	129	140	148
150	126	137	147	123	135	144
140	120	132	142	117	129	139
130	113	126	137	111	123	134
120	106	119	132	104	116	129
110	100	112	126	97	110	123

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 130000 lb may be limited.

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10		-2	0	2	4	6	8	10		-2	0	2	4	6	8	10	
70	158	10	12							6	7							-1	-1						
60	140	7	9	11	12					4	6	7	8					-1	0	0	0				
50	122	4	6	7	9	11	14	17		3	4	5	7	8	10	12		-1	0	0	0	0	0	0	-1
40	104	1	3	5	7	9	12	14		1	2	4	5	7	9	11		0	0	0	0	0	0	0	0
30	86	0	0	3	5	7	10	12		0	0	2	4	6	7	9		0	0	0	0	0	0	0	0
20	68	0	0	2	4	6	8	11		0	0	2	3	5	6	8		0	0	0	0	0	1	1	
-60	-76	0	0	2	4	6	8	11		0	0	2	3	5	6	8		0	0	0	0	0	1	1	

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-5	-2	0	3	5		-4	-2	-1	0	1	1	2	3
180	-5	-2	0	2	5		-4	-2	-1	0	1	1	2	3
170	-4	-2	0	2	5		-4	-2	-1	0	1	1	2	3
160	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
150	-4	-2	0	2	4		-4	-2	-1	0	1	2	2	3
140	-4	-2	0	2	4		-4	-2	-1	0	1	2	2	3
130	-3	-2	0	2	3		-4	-3	-1	0	1	2	3	3
120	-3	-1	0	2	3		-4	-3	-1	0	1	2	3	3
110	-3	-1	0	1	3		-4	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Wet Runway

Flaps 10, 15 and 25

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	139	147	153	139	144	150	137	142	149
180	134	143	149	133	139	146	131	137	144
170	129	138	145	128	135	142	126	133	141
160	124	134	142	123	131	139	121	129	137
150	118	129	138	118	126	136	116	125	134
140	113	124	134	112	122	132	111	120	130
130	107	119	130	106	116	128	105	115	126
120	101	113	125	100	111	123	99	110	122
110	95	108	121	94	105	119	93	104	117

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 130000 lb may be limited.

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	9	10						4	5						-3	-3					
60	140	6	7	9	10				3	4	5	6				-2	-2	-3	-3			
50	122	4	5	6	7	9	12	14	2	3	4	4	5	6	8	-1	-1	-2	-2	-3	-4	-5
40	104	1	2	4	5	7	9	11	1	1	3	3	4	6	7	-1	-1	-1	-2	-2	-3	-4
30	86	0	0	2	4	6	7	10	0	0	2	3	4	5	6	0	0	-1	-1	-2	-2	-3
20	68	0	0	2	3	5	7	9	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-3
-60	-76	0	0	2	3	5	7	9	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
190	-4	-2	0	2	4	-4	-2	-1	0	0	1	2	2
180	-4	-2	0	2	4	-4	-2	-1	0	1	1	2	2
170	-4	-2	0	2	4	-4	-2	-1	0	1	1	2	3
160	-4	-2	0	2	4	-4	-2	-1	0	1	1	2	3
150	-4	-2	0	2	4	-4	-2	-1	0	1	1	2	3
140	-3	-2	0	2	3	-4	-2	-1	0	1	2	2	3
130	-3	-2	0	2	3	-4	-3	-1	0	1	2	2	3
120	-3	-1	0	1	3	-4	-3	-1	0	1	2	2	3
110	-3	-1	0	1	2	-4	-3	-1	0	1	2	3	3

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	114	111					
60	140	114	111	109	108			
50	122	117	114	110	108	106	102	99
40	104	122	119	115	111	107	103	99
30	86	125	124	120	115	111	106	101
20	68	125	125	121	117	113	108	103
-60	-76	127	126	122	118	114	110	106

Takeoff Speeds - Wet Runway - High Altitudes
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	145	152	154	141	148	150									
150	139	146	150	135	143	146									
140	133	141	145	129	137	141	124	130	134	124	128	132			
130	125	134	139	122	131	135	117	125	129	117	122	126	115	120	124
120	118	127	133	115	125	129	110	118	123	110	116	121	108	114	119
110	111	120	126	108	118	123	103	112	118	103	110	116	101	108	114
100	103	113	120	100	111	117	96	105	112	96	104	110	94	102	109
90	95	105	114	92	103	111	89	99	107	88	97	105	87	96	104

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using -7B27/B3 takeoff thrust at weights less than 101600 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (1000 FT)					PRESS ALT (1000 FT)					PRESS ALT (1000 FT)				
°C	°F	10	11	12	13	13.5	10	11	12	13	13.5	10	11	12	13	13.5
50	122	8					5					0				
40	104	5	6	7	8	9	3	4	5	5	6	0	0	0	0	1
30	86	2	3	5	6	6	2	3	3	4	5	0	0	0	1	1
20	68	0	2	3	4	5	1	2	2	3	4	0	0	0	1	1
10	50	0	1	2	3	4	0	1	2	2	3	0	0	0	1	1
0	32	0	1	2	3	3	0	1	1	2	2	0	0	0	1	1
-60	-76	0	1	2	3	3	0	1	1	2	2	0	0	0	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40		
160	-5	-3	0	2	5		-3	-2	-1	0	0	1	1	2		
150	-5	-3	0	2	5		-3	-2	-1	0	0	1	1	2		
140	-5	-2	0	2	5		-3	-2	-1	0	0	1	2	2		
130	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2		
120	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2		
110	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	3		
100	-3	-1	0	2	3		-4	-2	-1	0	1	1	2	3		
90	-3	-1	0	1	3		-4	-3	-1	0	1	2	2	3		

*V1 not to exceed VR

V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)				
		10000	11000	12000	13000	13500
50	122	99				
40	104	99	98	96	95	95
30	86	101	99	97	95	95
20	68	103	101	99	97	96
10	50	105	103	101	99	98
0	32	105	104	102	100	99
-60	-76	106	104	103	101	100

Maximum Allowable Clearway**Max Takeoff Thrust**

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	450
6000	650
8000	850
10000	1000
12000	1450
14000	1550

Maximum Allowable Clearway - High Altitudes

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	450
6000	650
8000	850
10000	1000
12000	1450
14000	1550

Clearway and Stopway V1 Adjustments

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-3	-3	-3	-3				
600	-3	-3	-3	-3				
400	-2	-2	-2	-2				
200	-1	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	1	1	1	1	1	1	1	0
-400	2	2	2	2	3	2	2	1
-600	2	2	2	2	4	3	2	2
-800	2	2	2	2	4	4	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-4	-3	-3	-3				
600	-4	-3	-2	-2				
400	-3	-2	-1	-1				
200	-1	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	2	0	0	0	1	1	1	1
-400	2	0	0	0	2	1	1	1
-600	2	0	0	0	3	2	2	2
-800	2	0	0	0	3	2	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting
Max Takeoff Thrust
Flaps 1 and 5

WEIGHT (1000 LB)	C.G. (%MAC)									
	9	11	13	14	16	20	24	28	30	33
180	9 1/2	9 1/2	8 3/4	8 1/2	7 3/4	7	6 1/4	5 1/2	5	4 1/4
160	9 1/4	9 1/4	8 1/2	8	7 1/4	6 1/2	5 3/4	5	4 1/2	4
140	8 1/2	8 1/2	7 3/4	7 1/2	6 3/4	6	5 1/4	4 1/2	4	4
120	8 1/2	7 3/4	7 1/4	6 3/4	6 1/4	5 1/2	4 1/2	4	4	4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)									
	9	11	13	14	16	20	23	26	29	33
180	9 1/2	9 1/2	8 3/4	8 1/2	7 3/4	6 3/4	6	5 1/4	4 1/2	4
160	9 1/4	9 1/4	8 1/4	8	7	6	5 1/4	4 1/2	4	4
140	8 1/2	8 1/2	7 1/4	6 1/2	6 1/4	5 1/4	4 1/2	4	4	4
120	8 1/2	7	6	5 3/4	5 1/4	4 1/2	4	4	4	4

VREF

WEIGHT (1000 LB)	FLAPS		
	40	30	15
180	156	158	164
170	151	153	159
160	147	149	155
150	142	144	150
140	137	140	145
130	132	134	139
120	126	129	133
110	120	123	127
100	114	117	121
90	108	111	115

Flap Maneuver Speeds

FLAP POSITION	MANEUVER SPEED
UP	VREF40 + 70
1	VREF40 + 50
5	VREF40 + 30
10	VREF40 + 30
15	VREF40 + 20
25	VREF40 + 10
30	VREF30
40	VREF40

ADVISORY INFORMATION**Slush/Standing Water Takeoff****Maximum Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-22.6	-28.6	-34.6	-26.7	-32.7	-38.7	-35.4	-41.4	-47.4
180	-20.3	-26.3	-32.3	-23.7	-29.7	-35.7	-31.1	-37.1	-43.1
170	-18.2	-24.2	-30.2	-21.0	-27.0	-33.0	-27.1	-33.1	-39.1
160	-16.2	-22.2	-28.2	-18.5	-24.5	-30.5	-23.5	-29.5	-35.5
150	-14.4	-20.4	-26.4	-16.3	-22.3	-28.3	-20.3	-26.3	-32.3
140	-12.7	-18.7	-24.7	-14.2	-20.2	-26.2	-17.6	-23.6	-29.6
130	-11.1	-17.1	-23.1	-12.4	-18.4	-24.4	-15.2	-21.2	-27.2
120	-9.7	-15.7	-21.7	-10.8	-16.8	-22.8	-13.2	-19.2	-25.2
110	-8.4	-14.4	-20.4	-9.3	-15.3	-21.3	-11.5	-17.5	-23.5
100	-7.1	-13.1	-19.1	-7.9	-13.9	-19.9	-9.8	-15.8	-21.8
90	-5.8	-11.8	-17.8	-6.5	-12.5	-18.5	-8.1	-14.1	-20.1

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5400							79.8		
5800				74.5			92.9		
6200	80.5			90.3			106.4	73.4	
6600	96.7			106.0			120.3	86.3	
7000	112.8	72.4		121.6	82.4		134.6	99.6	
7400	128.7	88.6		137.2	98.2		149.4	113.3	79.8
7800	144.5	104.8		152.7	113.8	74.5	164.8	127.4	92.9
8200	160.1	120.7	80.5	168.1	129.4	90.3	180.8	141.9	106.4
8600	175.6	136.6	96.7	183.4	144.9	106.0	197.5	157.1	120.3
9000	191.0	152.3	112.8	198.7	160.4	121.6		172.8	134.6
9400	206.3	167.9	128.7		175.7	137.2		189.1	149.4
9800		183.3	144.5		191.0	152.7		205.9	164.8
10200		198.7	160.1		206.3	168.1			180.8
10600			175.6			183.4			197.5
11000			191.0			198.7			
11400			206.3						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -170 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-17	-12	-7	-11	-6	-1	0	0	0
180	-18	-13	-8	-13	-8	-3	-2	0	0
170	-19	-14	-9	-14	-9	-4	-4	0	0
160	-20	-15	-10	-16	-11	-6	-6	-1	0
150	-21	-16	-11	-17	-12	-7	-9	-4	0
140	-22	-17	-12	-19	-14	-9	-11	-6	-1
130	-22	-17	-12	-20	-15	-10	-13	-8	-3
120	-22	-17	-12	-20	-15	-10	-16	-11	-6
110	-23	-18	-13	-21	-16	-11	-18	-13	-8
100	-24	-19	-14	-22	-17	-12	-20	-15	-10
90	-25	-20	-15	-24	-19	-14	-22	-17	-12

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff****No Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-28.2	-35.2	-42.2	-32.3	-39.3	-46.3	-41.0	-48.0	-55.0
180	-26.3	-33.3	-40.3	-29.8	-36.8	-43.8	-37.1	-44.1	-51.1
170	-24.4	-31.4	-38.4	-27.3	-34.3	-41.3	-33.4	-40.4	-47.4
160	-22.5	-29.5	-36.5	-24.9	-31.9	-38.9	-30.0	-37.0	-44.0
150	-20.6	-27.6	-34.6	-22.6	-29.6	-36.6	-26.7	-33.7	-40.7
140	-18.8	-25.8	-32.8	-20.3	-27.3	-34.3	-23.7	-30.7	-37.7
130	-16.9	-23.9	-30.9	-18.2	-25.2	-32.2	-20.9	-27.9	-34.9
120	-15.1	-22.1	-29.1	-16.2	-23.2	-30.2	-18.4	-25.4	-32.4
110	-13.2	-20.2	-27.2	-14.2	-21.2	-28.2	-16.0	-23.0	-30.0
100	-11.4	-18.4	-25.4	-12.4	-19.4	-26.4	-13.9	-20.9	-27.9
90	-9.5	-16.5	-23.5	-10.6	-17.6	-24.6	-12.0	-19.0	-26.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
7400							74.5		
7800							89.5		
8200							104.5		
8600				82.9			119.6	80.1	
9000	75.5			97.7			134.8	95.1	
9400	89.8			112.9	73.6		150.2	110.2	70.7
9800	104.1			128.6	88.4		165.7	125.3	85.8
10200	119.0	80.9		144.8	103.4		181.3	140.6	100.8
10600	134.7	95.1		161.6	118.8	79.2	197.0	156.0	115.8
11000	151.3	109.6	71.9	179.0	134.6	94.0		171.5	131.0
11400	168.9	124.8	86.2	197.1	151.1	109.1		187.2	146.3
11800	187.8	140.8	100.5		168.1	124.6		202.9	161.8
12200	207.6	157.8	115.2		185.7	140.7			177.4
12600		175.8	130.7		203.9	157.4			193.1
13000		195.2	147.1			174.6			208.8
13400			164.4			192.5			
13800			183.0						
14200			202.7						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -220 ft/+220 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-27	-17	-7	-18	-8	0	0	0	0
180	-29	-19	-9	-21	-11	-1	-1	0	0
170	-31	-21	-11	-24	-14	-4	-6	0	0
160	-32	-22	-12	-26	-16	-6	-11	-1	0
150	-33	-23	-13	-29	-19	-9	-16	-6	0
140	-35	-25	-15	-31	-21	-11	-20	-10	0
130	-36	-26	-16	-33	-23	-13	-24	-14	-4
120	-37	-27	-17	-35	-25	-15	-28	-18	-8
110	-39	-29	-19	-37	-27	-17	-31	-21	-11
100	-40	-30	-20	-38	-28	-18	-34	-24	-14
90	-41	-31	-21	-40	-30	-20	-37	-27	-17

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes****Maximum Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-34.6	-37.0	-39.4	-38.7	-41.1	-43.5	-47.4	-49.8	-52.2
180	-32.3	-34.7	-37.1	-35.7	-38.1	-40.5	-43.1	-45.5	-47.9
170	-30.2	-32.6	-35.0	-33.0	-35.4	-37.8	-39.1	-41.5	-43.9
160	-28.2	-30.6	-33.0	-30.5	-32.9	-35.3	-35.5	-37.9	-40.3
150	-26.4	-28.8	-31.2	-28.3	-30.7	-33.1	-32.3	-34.7	-37.1
140	-24.7	-27.1	-29.5	-26.2	-28.6	-31.0	-29.6	-32.0	-34.4
130	-23.1	-25.5	-27.9	-24.4	-26.8	-29.2	-27.2	-29.6	-32.0
120	-21.7	-24.1	-26.5	-22.8	-25.2	-27.6	-25.2	-27.6	-30.0
110	-20.4	-22.8	-25.2	-21.3	-23.7	-26.1	-23.5	-25.9	-28.3
100	-19.1	-21.5	-23.9	-19.9	-22.3	-24.7	-21.8	-24.2	-26.6
90	-17.8	-20.2	-22.6	-18.5	-20.9	-23.3	-20.1	-22.5	-24.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
7400							79.8		
7800				74.5			92.9	79.8	
8200	80.5			90.3	74.5		106.4	92.9	79.8
8600	96.7	80.5		106.0	90.3	74.5	120.3	106.4	92.9
9000	112.8	96.7	80.5	121.6	106.0	90.3	134.6	120.3	106.4
9400	128.7	112.8	96.7	137.2	121.6	106.0	149.4	134.6	120.3
9800	144.5	128.7	112.8	152.7	137.2	121.6	164.8	149.4	134.6
10200	160.1	144.5	128.7	168.1	152.7	137.2	180.8	164.8	149.4
10600	175.6	160.1	144.5	183.4	168.1	152.7	197.5	180.8	164.8
11000	191.0	175.6	160.1	198.7	183.4	168.1		197.5	180.8
11400	206.3	191.0	175.6		198.7	183.4			197.5
11800		206.3	191.0			198.7			
12200			206.3						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7	-5	-3	-1	0	0	0	0	0
180	-8	-6	-4	-3	-1	0	0	0	0
170	-9	-7	-5	-4	-2	0	0	0	0
160	-10	-8	-6	-6	-4	-2	0	0	0
150	-11	-9	-7	-7	-5	-3	0	0	0
140	-12	-10	-8	-9	-7	-5	-1	0	0
130	-12	-10	-8	-10	-8	-6	-3	-1	0
120	-12	-10	-8	-10	-8	-6	-6	-4	-2
110	-15	-13	-11	-13	-11	-9	-8	-6	-4
100	-22	-20	-18	-19	-17	-15	-10	-8	-6
90	-34	-32	-30	-30	-28	-26	-12	-10	-8

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes****No Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-42.2	-45.0	-47.8	-46.3	-49.1	-51.9	-55.0	-57.8	-60.6
180	-40.3	-43.1	-45.9	-43.8	-46.6	-49.4	-51.1	-53.9	-56.7
170	-38.4	-41.2	-44.0	-41.3	-44.1	-46.9	-47.4	-50.2	-53.0
160	-36.5	-39.3	-42.1	-38.9	-41.7	-44.5	-44.0	-46.8	-49.6
150	-34.6	-37.4	-40.2	-36.6	-39.4	-42.2	-40.7	-43.5	-46.3
140	-32.8	-35.6	-38.4	-34.3	-37.1	-39.9	-37.7	-40.5	-43.3
130	-30.9	-33.7	-36.5	-32.2	-35.0	-37.8	-34.9	-37.7	-40.5
120	-29.1	-31.9	-34.7	-30.2	-33.0	-35.8	-32.4	-35.2	-38.0
110	-27.2	-30.0	-32.8	-28.2	-31.0	-33.8	-30.0	-32.8	-35.6
100	-25.4	-28.2	-31.0	-26.4	-29.2	-32.0	-27.9	-30.7	-33.5
90	-23.5	-26.3	-29.1	-24.6	-27.4	-30.2	-26.0	-28.8	-31.6

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
9400							70.7		
9800							85.8		
10200							100.8	85.0	
10600				79.2			115.8	100.0	84.2
11000	71.9			94.0	78.4		131.0	115.1	99.3
11400	86.2	71.2		109.1	93.3	77.7	146.3	130.3	114.3
11800	100.5	85.5	70.5	124.6	108.3	92.5	161.8	145.6	129.5
12200	115.2	99.8	84.8	140.7	123.9	107.6	177.4	161.0	144.8
12600	130.7	114.5	99.1	157.4	139.9	123.1	193.1	176.6	160.2
13000	147.1	129.9	113.7	174.6	156.5	139.1	208.8	192.3	175.8
13400	164.4	146.2	129.1	192.5	173.7	155.7		208.0	191.5
13800	183.0	163.5	145.4		191.6	172.9			207.2
14200	202.7	182.0	162.6		209.8	190.7			
14600		201.7	181.0			208.9			
15000			200.7						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -220 ft/+220 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7	-3	0	0	0	0	0	0	0
180	-9	-5	-1	-1	0	0	0	0	0
170	-11	-7	-3	-4	0	0	0	0	0
160	-12	-8	-4	-6	-2	0	0	0	0
150	-13	-9	-5	-9	-5	-1	0	0	0
140	-15	-11	-7	-11	-7	-3	0	0	0
130	-16	-12	-8	-13	-9	-5	-4	0	0
120	-17	-13	-9	-15	-11	-7	-8	-4	0
110	-19	-15	-11	-17	-13	-9	-11	-7	-3
100	-20	-16	-12	-18	-14	-10	-14	-10	-6
90	-21	-17	-13	-20	-16	-12	-17	-13	-9

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION**Slippery Runway Takeoff****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-2.8	-2.8	-2.8	-14.3	-14.3	-14.3	-23.9	-23.9	-23.9
180	-3.0	-3.0	-3.0	-13.6	-13.6	-13.6	-22.3	-22.3	-22.3
170	-3.1	-3.1	-3.1	-12.9	-12.9	-12.9	-20.8	-20.8	-20.8
160	-3.2	-3.2	-3.2	-12.2	-12.2	-12.2	-19.4	-19.4	-19.4
150	-3.2	-3.2	-3.2	-11.4	-11.4	-11.4	-18.1	-18.1	-18.1
140	-3.1	-3.1	-3.1	-10.7	-10.7	-10.7	-16.8	-16.8	-16.8
130	-3.0	-3.0	-3.0	-10.0	-10.0	-10.0	-15.5	-15.5	-15.5
120	-2.8	-2.8	-2.8	-9.3	-9.3	-9.3	-14.4	-14.4	-14.4
110	-2.6	-2.6	-2.6	-8.6	-8.6	-8.6	-13.3	-13.3	-13.3
100	-2.4	-2.4	-2.4	-7.9	-7.9	-7.9	-12.1	-12.1	-12.1
90	-2.3	-2.3	-2.3	-7.1	-7.1	-7.1	-11.0	-11.0	-11.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800	70.2								
4200	89.6								
4600	109.5	77.5							
5000	130.6	96.9							
5400	153.1	117.2	84.8	77.0					
5800	177.5	138.8	104.4	93.5					
6200	204.1	162.0	125.2	110.3	75.0				
6600		187.2	147.3	127.8	91.4				
7000			171.2	146.1	108.2	72.9			
7400			197.3	165.3	125.6	89.4	82.1		
7800				185.5	143.8	106.0	95.9		
8200				206.8	162.8	123.4	109.7	70.1	
8600					182.9	141.4	123.6	83.8	
9000					204.1	160.4	137.5	97.6	
9400						180.3	151.6	111.4	71.8
9800						201.4	165.7	125.3	85.6
10200							179.9	139.3	99.3
10600							194.2	153.3	113.1
11000							208.5	167.4	127.0
11400								181.7	141.0
11800								196.0	155.1
12200									169.2
12600									183.4
13000									197.7

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -110 ft/+100 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -110 ft/+100 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -170 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-6	-3	-1	-15	-13	-10	-28	-25	-23
180	-7	-4	-2	-17	-14	-12	-29	-27	-24
170	-7	-5	-2	-18	-15	-13	-31	-28	-26
160	-8	-6	-3	-19	-17	-14	-32	-30	-27
150	-9	-6	-4	-20	-18	-15	-34	-31	-29
140	-10	-7	-5	-21	-19	-16	-35	-33	-30
130	-11	-8	-6	-23	-20	-18	-37	-34	-32
120	-11	-9	-6	-24	-21	-19	-38	-35	-33
110	-12	-10	-7	-25	-22	-20	-39	-36	-34
100	-13	-11	-8	-26	-23	-21	-40	-37	-35
90	-14	-11	-9	-27	-24	-22	-41	-38	-36

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
Weight Adjustments (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-5.7	-6.6	-7.6	-19.1	-20.0	-21.0	-29.6	-30.6	-31.5
180	-6.1	-7.1	-8.0	-19.0	-19.9	-20.9	-29.0	-30.0	-30.9
170	-6.4	-7.3	-8.3	-18.6	-19.5	-20.5	-28.0	-29.0	-29.9
160	-6.4	-7.3	-8.3	-17.9	-18.9	-19.8	-26.7	-27.6	-28.6
150	-6.2	-7.2	-8.1	-16.9	-17.9	-18.8	-25.0	-25.9	-26.9
140	-5.8	-6.8	-7.7	-15.7	-16.7	-17.6	-22.9	-23.8	-24.8
130	-5.3	-6.2	-7.2	-14.2	-15.1	-16.1	-20.5	-21.4	-22.4
120	-4.5	-5.4	-6.4	-12.4	-13.3	-14.3	-17.7	-18.6	-19.6
110	-3.5	-4.4	-5.4	-10.3	-11.2	-12.2	-14.5	-15.5	-16.4
100	-2.3	-3.2	-4.2	-7.9	-8.9	-9.8	-11.0	-11.9	-12.9
90	-0.8	-1.8	-2.7	-5.3	-6.2	-7.2	-7.1	-8.0	-9.0

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5400	99.0								
5800	132.5	72.8							
6200	164.5	107.5							
6600	195.3	140.6	81.6						
7000		172.3	115.9						
7400		203.0	148.6						
7800			180.0	79.5					
8200				106.6					
8600				134.0	82.8				
9000				158.5	110.0				
9400				189.8	137.5	86.2			
9800					165.2	113.4			
10200					193.3	140.9			
10600						168.7			
11000						196.8			
12200							80.0		
12600							99.9		
13000							120.1	70.1	
13400							140.6	90.0	
13800							161.5	109.9	
14200							182.7	130.3	80.0
14600							204.5	150.9	99.9
15000								172.1	120.1
15400								193.6	140.6
15800									161.5
16200									182.7
16600									204.5

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -150 ft/ +150 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -150 ft/ +150 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -230 ft/ +230 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-9	-2	0	-23	-16	-8	-45	-38	-30
180	-9	-2	0	-24	-17	-9	-47	-39	-32
170	-10	-3	0	-26	-19	-11	-49	-42	-34
160	-12	-4	0	-28	-21	-13	-52	-45	-37
150	-14	-6	0	-31	-24	-16	-56	-48	-41
140	-16	-9	-1	-35	-27	-20	-60	-52	-45
130	-19	-12	-4	-39	-31	-24	-64	-57	-49
120	-23	-16	-8	-44	-36	-29	-69	-62	-54
110	-27	-20	-12	-49	-42	-34	-75	-68	-60
100	-32	-25	-17	-55	-48	-40	-81	-74	-66
90	-38	-30	-23	-62	-54	-47	-88	-81	-73

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-2.8	-2.8	-2.8	-14.3	-14.3	-14.3	-23.9	-23.9	-23.9
180	-3.0	-3.0	-3.0	-13.6	-13.6	-13.6	-22.3	-22.3	-22.3
170	-3.1	-3.1	-3.1	-12.9	-12.9	-12.9	-20.8	-20.8	-20.8
160	-3.2	-3.2	-3.2	-12.2	-12.2	-12.2	-19.4	-19.4	-19.4
150	-3.2	-3.2	-3.2	-11.4	-11.4	-11.4	-18.1	-18.1	-18.1
140	-3.1	-3.1	-3.1	-10.7	-10.7	-10.7	-16.8	-16.8	-16.8
130	-3.0	-3.0	-3.0	-10.0	-10.0	-10.0	-15.5	-15.5	-15.5
120	-2.8	-2.8	-2.8	-9.3	-9.3	-9.3	-14.4	-14.4	-14.4
110	-2.6	-2.6	-2.6	-8.6	-8.6	-8.6	-13.3	-13.3	-13.3
100	-2.4	-2.4	-2.4	-7.9	-7.9	-7.9	-12.1	-12.1	-12.1
90	-2.3	-2.3	-2.3	-7.1	-7.1	-7.1	-11.0	-11.0	-11.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5400	84.8	72.1							
5800	104.4	91.6	78.9						
6200	125.2	111.5	98.4						
6600	147.3	132.7	118.8						
7000	171.2	155.4	140.5	72.9					
7400	197.3	180.0	163.8	89.4	75.4				
7800		206.9	189.2	106.0	91.9	77.9			
8200				123.4	108.6	94.3			
8600				141.4	126.0	111.2			
9000				160.4	144.2	128.7			
9400				180.3	163.3	147.0	71.8		
9800				201.4	183.4	166.3	85.6		
10200					204.7	186.5	99.3	83.5	
10600						207.9	113.1	97.3	81.4
11000							127.0	111.1	95.2
11400							141.0	125.0	109.0
11800							155.1	138.9	122.9
12200							169.2	153.0	136.8
12600							183.4	167.1	150.9
13000							197.7	181.3	165.0
13400								195.6	179.2
13800								209.9	193.4
14200									207.8

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-9	-7	-5	-22	-20	-18
180	-1	0	0	-11	-9	-7	-23	-21	-19
170	-1	0	0	-12	-10	-8	-25	-23	-21
160	-2	0	0	-13	-11	-9	-26	-24	-22
150	-3	-1	0	-14	-12	-10	-28	-26	-24
140	-4	-2	0	-15	-13	-11	-29	-27	-25
130	-5	-3	-1	-17	-15	-13	-31	-29	-27
120	-5	-3	-1	-18	-16	-14	-32	-30	-28
110	-6	-4	-2	-19	-17	-15	-33	-31	-29
100	-7	-5	-3	-20	-18	-16	-34	-32	-30
90	-8	-6	-4	-21	-19	-17	-35	-33	-31

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

No Reverse Thrust

Weight Adjustment (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7.6	-8.0	-8.3	-21.0	-21.3	-21.7	-31.5	-31.9	-32.3
180	-8.0	-8.4	-8.8	-20.9	-21.2	-21.6	-30.9	-31.3	-31.7
170	-8.3	-8.6	-9.0	-20.5	-20.9	-21.2	-29.9	-30.3	-30.7
160	-8.3	-8.7	-9.1	-19.8	-20.2	-20.6	-28.6	-29.0	-29.3
150	-8.1	-8.5	-8.9	-18.8	-19.2	-19.6	-26.9	-27.3	-27.6
140	-7.7	-8.1	-8.5	-17.6	-18.0	-18.4	-24.8	-25.2	-25.6
130	-7.2	-7.5	-7.9	-16.1	-16.5	-16.8	-22.4	-22.7	-23.1
120	-6.4	-6.7	-7.1	-14.3	-14.7	-15.0	-19.6	-19.9	-20.3
110	-5.4	-5.7	-6.1	-12.2	-12.6	-12.9	-16.4	-16.8	-17.2
100	-4.2	-4.5	-4.9	-9.8	-10.2	-10.6	-12.9	-13.3	-13.6
90	-2.7	-3.1	-3.5	-7.2	-7.5	-7.9	-9.0	-9.4	-9.8

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6600	81.6								
7000	115.9	92.1							
7400	148.6	125.9	102.4						
7800	180.0	158.2	135.7						
8200		189.2	167.6						
8600			198.4						
9400				86.2					
9800				113.4	93.0	72.7			
10200				140.9	120.3	99.8			
10600				168.7	147.8	127.1			
11000				196.8	175.7	152.4			
11400					203.9	182.7			
14200							80.0		
14600							99.9	80.0	
15000							120.1	99.9	80.0
15400							140.6	120.1	99.9
15800							161.5	140.6	120.1
16200							182.7	161.5	140.6
16600							204.5	182.7	161.5
17000								204.5	182.7
17400									204.5

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -150 ft/ +150 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -150 ft/ +150 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -230 ft/ +230 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-8	-5	-2	-30	-27	-24
180	0	0	0	-9	-6	-3	-32	-29	-26
170	0	0	0	-11	-8	-5	-34	-31	-28
160	0	0	0	-13	-10	-7	-37	-34	-31
150	0	0	0	-16	-13	-10	-41	-38	-35
140	-1	0	0	-20	-17	-14	-45	-42	-39
130	-4	-1	0	-24	-21	-18	-49	-46	-43
120	-8	-5	-2	-29	-26	-23	-54	-51	-48
110	-12	-9	-6	-34	-31	-28	-60	-57	-54
100	-17	-14	-11	-40	-37	-34	-66	-63	-60
90	-23	-20	-17	-47	-44	-41	-73	-70	-67

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	95.7	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	96.8	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	97.6	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.3	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.0	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	99.7	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	99.3	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	98.5	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	97.8	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	97.0	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	96.2	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
5	95.4	97.0	99.0	99.3	99.6	99.8	100.1	100.3	100.6	100.9	101.2	101.0	100.9
0	94.6	96.2	98.2	98.6	98.8	99.1	99.3	99.6	99.8	100.1	100.4	100.3	100.1
-5	93.8	95.4	97.5	97.8	98.1	98.3	98.6	98.8	99.1	99.4	99.6	99.5	99.4
-10	93.0	94.6	96.7	97.0	97.3	97.5	97.8	98.0	98.3	98.6	98.8	98.7	98.6
-15	92.2	93.8	95.9	96.3	96.5	96.8	97.0	97.3	97.5	97.8	98.1	97.9	97.8
-20	91.4	93.0	95.2	95.5	95.7	96.0	96.2	96.5	96.7	97.0	97.3	97.1	97.0
-25	90.5	92.2	94.4	94.7	94.9	95.2	95.4	95.7	95.9	96.2	96.5	96.3	96.2
-30	89.7	91.3	93.6	93.9	94.1	94.4	94.6	94.9	95.1	95.4	95.6	95.5	95.4
-35	88.8	90.5	92.8	93.1	93.3	93.6	93.8	94.0	94.3	94.6	94.8	94.7	94.6
-40	88.0	89.6	91.9	92.3	92.5	92.7	93.0	93.2	93.5	93.7	94.0	93.9	93.7
-45	87.1	88.8	91.1	91.4	91.7	91.9	92.1	92.4	92.6	92.9	93.1	93.0	92.9
-50	86.2	87.9	90.3	90.6	90.8	91.1	91.3	91.5	91.8	92.0	92.3	92.2	92.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Takeoff %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.2					
35	99.1	99.0	98.8			
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5	100.9	101.8	102.0	101.9	101.8	101.8
0	100.1	101.0	101.9	102.1	102.0	102.0
-5	99.4	100.3	101.1	101.5	101.8	101.9
-10	98.6	99.5	100.3	100.7	101.0	101.1
-15	97.8	98.7	99.5	99.9	100.2	100.3
-20	97.0	97.9	98.7	99.1	99.3	99.5
-25	96.2	97.1	97.9	98.2	98.5	98.6
-30	95.4	96.3	97.1	97.4	97.7	97.8
-35	94.6	95.4	96.3	96.6	96.8	97.0
-40	93.7	94.6	95.4	95.7	96.0	96.1
-45	92.9	93.7	94.5	94.9	95.1	95.3
-50	92.0	92.9	93.7	94.0	94.2	94.4

Takeoff %N1 - High Altitudes**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	70	69	69	67	65	63	61	59	57	55	53	
30	67	65	66	65	65	63	61	59	57	55	53	51
25	67	65	65	63	64	63	61	59	57	55	53	51
20	67	65	65	63	64	63	61	59	57	55	53	51
15	67	65	65	63	64	63	61	59	57	55	53	51
10 & BELOW	67	65	65	63	64	63	61	59	57	55	53	51

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	94.1	94.4	95.2	95.4	96.3	97.2	97.7	97.9	98.0	98.0	98.0	98.0
70	94.8	95.2	95.4	95.0	95.6	96.5	97.1	97.3	97.3	97.3	97.3	97.3
65	95.6	96.0	96.1	95.9	96.2	96.4	96.4	96.6	96.6	96.6	96.6	96.6
60	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

Assumed Temperature Reduced Thrust
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.7													
100	15.0	10.3												
90	14.0	11.5												
80	12.8	11.7	7.2											
70	10.7	10.7	8.3	7.2	5.6									
60	9.2	9.4	8.6	8.4	6.8	5.7	4.1							
50	7.8	7.5	7.5	7.2	7.0	6.9	5.3	4.2	2.7					
40		6.0	6.1	6.1	5.9	5.8	5.8	5.4	4.2	4.0	4.6			
30		4.6	4.4	4.5	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	4.0	
20			2.9	2.9	2.9	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.7
10			1.5	1.5	1.5	1.4	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	54	54	52	50	48	47
5	54	52	50	50	48	47
0 & BELOW	54	52	49	50	48	47

Assumed Temperature Reduced Thrust - High Altitudes**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.9					
55	95.3	95.5	95.6	97.5		
50	96.3	96.0	95.4	96.8	98.5	99.4
45	97.3	97.0	96.6	97.4	98.4	99.0
40	98.2	98.0	97.7	98.3	99.0	99.4
35	99.1	99.0	98.8	99.1	99.5	99.8
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5		101.8	102.0	101.9	101.8	101.8
0				102.1	102.0	102.0
-5				101.5	101.8	101.9
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.5										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.7								
70	11.3	11.2	10.7								
60	10.0	9.2	9.4	7.5							
50		7.9	7.8	7.5	6.0	5.9	5.8				
40		6.5	6.0	6.2	6.0	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (26K Derate)
Flaps 1 and 5
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
190	157	160	165	152	156	161
180	151	154	161	148	151	157
170	146	149	156	142	145	152
160	141	144	152	138	141	148
150	136	138	147	133	135	144
140	130	133	142	127	130	139
130	124	126	137	121	124	134
120	117	120	132	114	117	129
110	111	113	126	108	111	123

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 125000 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						6	7						0	0								
60	140	5	6	8	9				4	5	7	8				0	0	0	0						
50	122	3	4	6	7	9	11	13	3	4	5	6	8	10	11	0	0	0	0	0	0	0			
40	104	1	2	4	5	7	9	11	1	2	3	5	6	8	10	0	0	0	0	0	0	0			
30	86	0	0	2	4	6	7	9	0	0	2	4	5	7	9	0	0	0	0	0	1	1			
20	68	0	0	1	3	5	7	8	0	0	1	3	4	6	8	0	0	0	0	1	1	1			
-60	-76	0	0	1	3	5	6	8	0	0	1	3	4	6	7	0	0	0	0	1	1	1			

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-3	-2	0	2	3		-2	-1	-1	0	0	1	1	1
180	-3	-1	0	2	3		-2	-1	-1	0	0	1	1	1
170	-3	-1	0	2	3		-2	-1	0	0	0	1	1	1
160	-3	-1	0	1	2		-2	-1	0	0	0	1	1	1
150	-2	-1	0	1	2		-2	-1	0	0	0	1	1	1
140	-2	-1	0	1	2		-2	-1	0	0	0	1	1	1
130	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	2
120	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	2
110	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	2

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Dry Runway (26K Derate)

Flaps 10, 15 and 25

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	146	148	153	145	145	151			
180	141	143	149	140	140	146	137	137	143
170	136	138	145	135	135	142	133	133	140
160	132	134	142	131	131	139	129	129	137
150	127	130	138	126	127	135	124	125	134
140	122	125	134	121	122	132	119	121	130
130	117	119	130	115	117	127	114	115	126
120	111	114	125	110	111	123	108	110	121
110	105	108	120	104	106	118	103	105	117

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 125000 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	6	6						4	5						-2	-3					
60	140	4	5	6	7				3	4	5	5				-2	-2	-2	-3			
50	122	2	3	4	5	6	8	10	2	3	3	4	5	6	7	-1	-1	-2	-2	-3	-3	-4
40	104	1	2	3	4	5	6	8	1	1	2	3	4	5	6	0	-1	-1	-1	-2	-3	-3
30	86	0	0	1	3	4	5	6	0	0	1	2	4	5	6	0	0	0	-1	-1	-2	-3
20	68	0	0	1	2	3	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2
-60	-76	0	0	1	2	3	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1
180	-3	-1	0	1	2		-1	-1	-1	0	0	1	1	1
170	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1
160	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
150	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
140	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1
130	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
120	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
110	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	151	152	154	147	148	150									
150	146	146	150	142	143	146									
140	139	141	145	136	137	141	130	130	134	128	128	132			
130	133	134	139	129	131	135	123	125	129	122	122	126	120	120	124
120	126	127	133	123	125	129	117	118	123	116	116	121	114	114	119
110	119	120	126	116	118	123	111	112	118	109	110	116	108	108	114
100	111	113	120	108	111	117	104	106	112	103	104	110	101	102	109
90	103	105	114	101	103	111	97	99	107	96	97	105	94	96	104

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 100000 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (1000 FT)					PRESS ALT (1000 FT)					PRESS ALT (1000 FT)				
°C	°F	10	11	12	13	13.5	10	11	12	13	13.5	10	11	12	13	13.5
50	122	6					5					0				
40	104	4	5	6	6	7	3	4	5	5	6	0	0	0	0	1
30	86	2	3	4	5	5	2	3	3	4	5	0	0	0	1	1
20	68	0	1	2	3	4	1	2	2	3	4	0	0	0	1	1
10	50	0	1	2	3	3	0	1	2	2	3	0	0	0	1	1
0	32	0	1	1	2	3	0	1	1	2	2	0	0	0	1	1
-60	-76	0	1	1	2	3	0	1	1	2	2	0	0	0	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)								
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40	
160	-3	-2	0	1	1		-1	-1	-1	0	0	0	0	1	
150	-3	-1	0	1	1		-1	-1	0	0	0	0	0	1	
140	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1	
130	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1	
120	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1	
110	-2	-1	0	1	2		-1	-1	0	0	0	1	1	1	
100	-2	-1	0	1	1		-1	-1	-1	0	0	1	1	1	
90	-1	-1	0	1	1		-2	-1	-1	0	0	1	1	1	

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)				
		10000	11000	12000	13000	13500
50	122	99				
40	104	99	98	97	95	95
30	86	101	99	97	95	95
20	68	103	101	99	97	96
10	50	105	103	101	99	98
0	32	105	104	102	100	99
-60	-76	106	104	103	101	100

Takeoff Speeds - Wet Runway (26K Derate)

Flaps 1 and 5

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
190	151	160	165	147	156	161
180	145	154	161	141	151	157
170	139	149	156	136	145	152
160	134	144	152	130	141	148
150	128	138	147	125	135	144
140	122	133	142	119	130	139
130	115	126	137	112	124	134
120	108	120	132	105	117	129

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K Derate takeoff thrust at weights less than 125000 lb may be limited.

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	9	11						6	7						0	0					
60	140	7	8	10	12				4	5	7	8				0	0	0	0			
50	122	4	5	7	9	11	13	16	3	4	5	6	8	10	11	0	0	0	0	0	0	0
40	104	1	3	4	6	8	11	13	1	2	3	5	6	8	10	0	0	0	0	0	0	0
30	86	0	0	2	4	7	9	11	0	0	2	4	5	7	9	0	0	0	0	0	1	1
20	68	0	0	1	3	6	8	10	0	0	1	3	4	6	8	0	0	0	0	1	1	1
-60	-76	0	0	1	3	5	8	10	0	0	1	3	4	6	7	0	0	0	0	1	1	1

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-5	-2	0	3	5		-4	-2	-1	0	1	1	2	3
180	-5	-2	0	2	5		-4	-2	-1	0	1	1	2	3
170	-5	-2	0	2	5		-4	-2	-1	0	1	1	2	3
160	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
150	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
140	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
130	-3	-2	0	2	3		-4	-3	-1	0	1	2	2	3
120	-3	-2	0	1	3		-4	-3	-1	0	1	2	3	3
110	-3	-1	0	1	3		-4	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Wet Runway (26K Derate)
Flaps 10, 15 and 25
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	141	148	153	141	145	151			
180	135	143	149	135	140	146	132	137	143
170	130	138	145	129	135	142	128	133	140
160	125	134	142	124	131	139	123	129	137
150	120	130	138	119	127	135	118	125	134
140	115	125	134	114	122	132	112	121	130
130	109	119	130	108	117	127	106	115	126
120	103	114	125	101	111	123	100	110	121
110	96	108	120	95	106	118	94	105	117

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 125000 lb may be limited.

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	8	9						4	5						-2	-3					
60	140	6	6	8	9				3	4	5	5				-2	-2	-2	-3			
50	122	3	4	6	7	9	11	13	2	3	3	4	5	6	7	-1	-1	-2	-2	-3	-3	-4
40	104	1	2	4	5	6	8	10	1	1	2	3	4	5	6	0	-1	-1	-1	-2	-3	-3
30	86	0	0	2	3	5	7	8	0	0	1	2	4	5	6	0	0	0	-1	-1	-2	-3
20	68	0	0	1	3	4	6	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2
-60	-76	0	0	1	3	4	6	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
180	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
170	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	2
160	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
150	-4	-2	0	2	3		-4	-2	-1	0	1	1	2	3
140	-3	-2	0	2	3		-4	-3	-1	0	1	1	2	3
130	-3	-2	0	1	3		-4	-3	-1	0	1	1	2	3
120	-3	-1	0	1	3		-4	-3	-1	0	1	2	2	3
110	-3	-1	0	1	2		-4	-3	-1	0	1	2	3	3

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	112	110					
60	140	112	110	108	107			
50	122	115	112	109	107	104	101	99
40	104	120	117	113	110	106	102	99
30	86	122	122	118	114	109	105	101
20	68	123	122	119	115	111	107	103
-60	-76	125	124	120	116	113	109	106

Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	145	152	154	140	148	150									
150	139	146	150	135	143	146									
140	133	141	145	129	137	141	124	130	134	124	128	132			
130	125	134	139	122	131	135	117	125	129	117	122	126	115	120	124
120	118	127	133	115	125	129	110	118	123	110	116	121	108	114	119
110	111	120	126	108	118	123	103	112	118	103	110	116	101	108	114
100	103	113	120	100	111	117	96	106	112	96	104	110	94	102	109
90	95	105	114	92	103	111	89	99	107	88	97	105	87	96	104

Check V1(MCG) and Minimum Takeoff Weight. Takeoff using 26K derate takeoff thrust at weights less than 100000 lb may be limited.

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (1000 FT)					PRESS ALT (1000 FT)					PRESS ALT (1000 FT)				
°C	°F	10	11	12	13	13.5	10	11	12	13	13.5	10	11	12	13	13.5
50	122	8					5					0				
40	104	5	6	7	8	8	3	4	5	5	6	0	0	0	0	1
30	86	2	3	5	6	6	2	3	3	4	5	0	0	0	1	1
20	68	0	2	3	4	5	1	2	2	3	4	0	0	0	1	1
10	50	0	1	2	3	4	0	1	2	2	3	0	0	0	1	1
0	32	0	1	2	3	3	0	1	1	2	2	0	0	0	1	1
-60	-76	0	1	2	3	3	0	1	1	2	2	0	0	0	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
160	-5	-3	0	2	5	-3	-2	-1	0	0	1	1	2		
150	-5	-3	0	2	5	-3	-2	-1	0	0	1	1	2		
140	-5	-2	0	2	5	-3	-2	-1	0	0	1	2	2		
130	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2		
120	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2		
110	-3	-2	0	2	3	-3	-2	-1	0	1	1	2	3		
100	-3	-2	0	1	3	-4	-2	-1	0	1	1	2	3		
90	-3	-1	0	1	3	-4	-3	-1	0	1	2	2	3		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)				
		10000	11000	12000	13000	13500
50	122	99				
40	104	99	98	97	95	95
30	86	101	99	97	95	95
20	68	103	101	99	97	96
10	50	105	103	101	99	98
0	32	105	104	102	100	99
-60	-76	106	104	103	101	100

Maximum Allowable Clearway (26K Derate)

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	450
6000	650
8000	850
10000	1000
12000	1450
14000	1550

Maximum Allowable Clearway - High Altitudes (26K Derate)

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	450
6000	650
8000	850
10000	1000
12000	1450
14000	1550

Clearway and Stopway V1 Adjustments (26K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-4	-4	-4	-4				
600	-3	-3	-3	-3				
400	-2	-2	-2	-2				
200	-1	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	1	1	1	1	1	1	1	0
-400	2	2	2	2	3	2	2	1
-600	2	2	2	2	4	3	2	1
-800	2	2	2	2	4	3	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes (26K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-4	-3	-3	-3				
600	-4	-3	-2	-2				
400	-3	-2	-2	-2				
200	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	2	0	0	0	1	1	1	1
-400	2	0	0	0	2	1	1	1
-600	2	0	0	0	3	2	2	2
-800	2	0	0	0	3	2	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (26K Derate)
Flaps 1 and 5

WEIGHT (1000 LB)	C.G. (%MAC)									
	9	11	13	14	16	20	24	28	30	33
180	9 1/2	9 1/2	8 3/4	8 1/2	7 3/4	7	6 1/4	5 1/2	5	4 1/2
160	9 1/4	9 1/4	8 1/2	8	7 1/4	6 1/2	5 3/4	5	4 1/2	4
140	8 1/2	8 1/2	7 3/4	7 1/2	6 3/4	6	5 1/4	4 1/2	4	4
120	8 1/2	7 3/4	7 1/4	6 3/4	6 1/4	5 1/2	4 1/2	4	4	4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)									
	9	11	13	14	16	20	23	26	29	33
180	9 1/2	9 1/2	8 3/4	8 1/2	7 3/4	6 3/4	6	5 1/4	4 1/2	4
160	9 1/4	9 1/4	8 1/4	8	7	6	5 1/4	4 1/2	4	4
140	8 1/2	8 1/2	7 1/4	6 1/2	6 1/4	5 1/4	4 1/2	4	4	4
120	8 1/2	7	6	5 3/4	5 1/4	4 1/2	4	4	4	4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-21.7	-28.2	-34.7	-25.8	-32.3	-38.8	-34.7	-41.2	-47.7
180	-20.0	-26.5	-33.0	-23.5	-30.0	-36.5	-31.0	-37.5	-44.0
170	-18.3	-24.8	-31.3	-21.2	-27.7	-34.2	-27.5	-34.0	-40.5
160	-16.6	-23.1	-29.6	-19.0	-25.5	-32.0	-24.2	-30.7	-37.2
150	-14.8	-21.3	-27.8	-16.8	-23.3	-29.8	-21.1	-27.6	-34.1
140	-13.0	-19.5	-26.0	-14.6	-21.1	-27.6	-18.1	-24.6	-31.1
130	-11.2	-17.7	-24.2	-12.5	-19.0	-25.5	-15.3	-21.8	-28.3
120	-9.4	-15.9	-22.4	-10.4	-16.9	-23.4	-12.7	-19.2	-25.7
110	-7.5	-14.0	-20.5	-8.3	-14.8	-21.3	-10.2	-16.7	-23.2
100	-5.6	-12.1	-18.6	-6.2	-12.7	-19.2	-7.7	-14.2	-20.7
90	-3.8	-10.3	-16.8	-4.1	-10.6	-17.1	-5.2	-11.7	-18.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5400							78.3		
5800	74.9			83.2			94.2		
6200	90.3			98.4			109.9	70.3	
6600	105.8			113.7	75.7		125.3	86.3	
7000	121.3	82.6		129.0	90.8		140.5	102.1	
7400	136.9	98.0		144.5	106.0		155.5	117.6	78.3
7800	152.5	113.5	74.9	160.0	121.3	83.2	170.3	132.9	94.2
8200	168.3	129.1	90.3	175.6	136.7	98.4	184.9	148.0	109.9
8600	184.1	144.7	105.8	191.3	152.2	113.7	199.3	162.9	125.3
9000	200.0	160.4	121.3	207.1	167.8	129.0		177.6	140.5
9400		176.2	136.9		183.4	144.5		192.1	155.5
9800		192.1	152.5		199.2	160.0		206.5	170.3
10200		207.9	168.3			175.6			184.9
10600			184.1			191.3			199.3
11000			200.0			207.1			

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -160 ft/+150 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-16	-11	-6	-9	-4	0	0	0	0
180	-17	-12	-7	-11	-6	-1	0	0	0
170	-18	-13	-8	-13	-8	-3	-2	0	0
160	-19	-14	-9	-15	-10	-5	-4	0	0
150	-20	-15	-10	-16	-11	-6	-7	-2	0
140	-21	-16	-11	-18	-13	-8	-10	-5	0
130	-21	-16	-11	-19	-14	-9	-12	-7	-2
120	-22	-17	-12	-20	-15	-10	-15	-10	-5
110	-24	-19	-14	-22	-17	-12	-17	-12	-7
100	-30	-25	-20	-28	-23	-18	-20	-15	-10
90	-40	-35	-30	-36	-31	-26	-24	-19	-14

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-28.9	-34.4	-39.9	-33.3	-38.8	-44.3	-42.6	-48.1	-53.6
180	-26.8	-32.3	-37.8	-30.5	-36.0	-41.5	-38.3	-43.8	-49.3
170	-24.7	-30.2	-35.7	-27.8	-33.3	-38.8	-34.3	-39.8	-45.3
160	-22.7	-28.2	-33.7	-25.2	-30.7	-36.2	-30.6	-36.1	-41.6
150	-20.8	-26.3	-31.8	-22.8	-28.3	-33.8	-27.1	-32.6	-38.1
140	-18.9	-24.4	-29.9	-20.5	-26.0	-31.5	-24.0	-29.5	-35.0
130	-17.0	-22.5	-28.0	-18.4	-23.9	-29.4	-21.2	-26.7	-32.2
120	-15.3	-20.8	-26.3	-16.4	-21.9	-27.4	-18.7	-24.2	-29.7
110	-13.5	-19.0	-24.5	-14.5	-20.0	-25.5	-16.5	-22.0	-27.5
100	-11.9	-17.4	-22.9	-12.8	-18.3	-23.8	-14.6	-20.1	-25.6
90	-10.3	-15.8	-21.3	-11.2	-16.7	-22.2	-13.0	-18.5	-24.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
7400							82.4		
7800							97.5		
8200				78.2			112.8	72.9	
8600	70.4			93.2			128.2	88.1	
9000	85.4			108.5			143.9	103.2	
9400	100.4			124.4	83.8		159.7	118.5	78.6
9800	116.0	76.0		140.8	98.9		175.8	134.1	93.8
10200	132.4	91.0		158.1	114.4	74.4	192.1	149.8	109.0
10600	149.6	106.2		176.1	130.5	89.4	208.5	165.7	124.3
11000	168.0	122.1	81.6	195.0	147.2	104.6		181.9	140.0
11400	187.5	138.8	96.6		164.7	120.3		198.3	155.8
11800	207.9	156.4	112.1		183.1	136.7			171.8
12200		175.1	128.2		202.1	153.7			188.0
12600		195.2	145.3			171.5			204.4
13000			163.3			190.2			
13400			182.5			209.3			
13800			202.8						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -210 ft/+210 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-26	-16	-6	-16	-6	0	0	0	0
180	-28	-18	-8	-19	-9	0	0	0	0
170	-29	-19	-9	-22	-12	-2	-3	0	0
160	-31	-21	-11	-24	-14	-4	-8	0	0
150	-32	-22	-12	-27	-17	-7	-13	-3	0
140	-33	-23	-13	-29	-19	-9	-18	-8	0
130	-35	-25	-15	-31	-21	-11	-22	-12	-2
120	-36	-26	-16	-34	-24	-14	-26	-16	-6
110	-38	-28	-18	-35	-25	-15	-30	-20	-10
100	-39	-29	-19	-37	-27	-17	-33	-23	-13
90	-40	-30	-20	-39	-29	-19	-35	-25	-15

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-34.7	-37.3	-39.9	-38.8	-41.4	-44.0	-47.7	-50.3	-52.9
180	-33.0	-35.6	-38.2	-36.5	-39.1	-41.7	-44.0	-46.6	-49.2
170	-31.3	-33.9	-36.5	-34.2	-36.8	-39.4	-40.5	-43.1	-45.7
160	-29.6	-32.2	-34.8	-32.0	-34.6	-37.2	-37.2	-39.8	-42.4
150	-27.8	-30.4	-33.0	-29.8	-32.4	-35.0	-34.1	-36.7	-39.3
140	-26.0	-28.6	-31.2	-27.6	-30.2	-32.8	-31.1	-33.7	-36.3
130	-24.2	-26.8	-29.4	-25.5	-28.1	-30.7	-28.3	-30.9	-33.5
120	-22.4	-25.0	-27.6	-23.4	-26.0	-28.6	-25.7	-28.3	-30.9
110	-20.5	-23.1	-25.7	-21.3	-23.9	-26.5	-23.2	-25.8	-28.4
100	-18.6	-21.2	-23.8	-19.2	-21.8	-24.4	-20.7	-23.3	-25.9
90	-16.8	-19.4	-22.0	-17.1	-19.7	-22.3	-18.2	-20.8	-23.4

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
7400							78.3		
7800	74.9			83.2			94.2	78.3	
8200	90.3	74.9		98.4	83.2		109.9	94.2	78.3
8600	105.8	90.3	74.9	113.7	98.4	83.2	125.3	109.9	94.2
9000	121.3	105.8	90.3	129.0	113.7	98.4	140.5	125.3	109.9
9400	136.9	121.3	105.8	144.5	129.0	113.7	155.5	140.5	125.3
9800	152.5	136.9	121.3	160.0	144.5	129.0	170.3	155.5	140.5
10200	168.3	152.5	136.9	175.6	160.0	144.5	184.9	170.3	155.5
10600	184.1	168.3	152.5	191.3	175.6	160.0	199.3	184.9	170.3
11000	200.0	184.1	168.3	207.1	191.3	175.6		199.3	184.9
11400		200.0	184.1		207.1	191.3			199.3
11800			200.0			207.1			

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6	-4	-2	0	0	0	0	0	0
180	-7	-5	-3	-1	0	0	0	0	0
170	-8	-6	-4	-3	-1	0	0	0	0
160	-9	-7	-5	-5	-3	-1	0	0	0
150	-10	-8	-6	-6	-4	-2	0	0	0
140	-11	-9	-7	-8	-6	-4	0	0	0
130	-11	-9	-7	-9	-7	-5	-2	0	0
120	-12	-10	-8	-10	-8	-6	-5	-3	-1
110	-14	-12	-10	-12	-10	-8	-7	-5	-3
100	-20	-18	-16	-18	-16	-14	-10	-8	-6
90	-30	-28	-26	-26	-24	-22	-14	-12	-10

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-39.9	-42.1	-44.3	-44.3	-46.5	-48.7	-53.6	-55.8	-58.0
180	-37.8	-40.0	-42.2	-41.5	-43.7	-45.9	-49.3	-51.5	-53.7
170	-35.7	-37.9	-40.1	-38.8	-41.0	-43.2	-45.3	-47.5	-49.7
160	-33.7	-35.9	-38.1	-36.2	-38.4	-40.6	-41.6	-43.8	-46.0
150	-31.8	-34.0	-36.2	-33.8	-36.0	-38.2	-38.1	-40.3	-42.5
140	-29.9	-32.1	-34.3	-31.5	-33.7	-35.9	-35.0	-37.2	-39.4
130	-28.0	-30.2	-32.4	-29.4	-31.6	-33.8	-32.2	-34.4	-36.6
120	-26.3	-28.5	-30.7	-27.4	-29.6	-31.8	-29.7	-31.9	-34.1
110	-24.5	-26.7	-28.9	-25.5	-27.7	-29.9	-27.5	-29.7	-31.9
100	-22.9	-25.1	-27.3	-23.8	-26.0	-28.2	-25.6	-27.8	-30.0
90	-21.3	-23.5	-25.7	-22.2	-24.4	-26.6	-24.0	-26.2	-28.4

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
9400							78.6		
9800							93.8	77.8	
10200				74.4			109.0	93.0	77.1
10600				89.4	73.6		124.3	108.2	92.2
11000	81.6			104.6	88.7	72.9	140.0	123.6	107.4
11400	96.6	80.9		120.3	103.8	87.9	155.8	139.2	122.8
11800	112.1	95.8	80.1	136.7	119.5	103.1	171.8	155.0	138.4
12200	128.2	111.3	95.1	153.7	135.8	118.7	188.0	171.0	154.2
12600	145.3	127.4	110.5	171.5	152.8	135.0	204.4	187.2	170.2
13000	163.3	144.4	126.6	190.2	170.6	152.0		203.6	186.4
13400	182.5	162.4	143.5	209.3	189.3	169.7			202.8
13800	202.8	181.5	161.4		208.3	188.3			
14200		201.8	180.5			207.4			
14600			200.8						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -210 ft /+210 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6	-2	0	0	0	0	0	0	0
180	-8	-4	0	0	0	0	0	0	0
170	-9	-5	-1	-2	0	0	0	0	0
160	-11	-7	-3	-4	0	0	0	0	0
150	-12	-8	-4	-7	-3	0	0	0	0
140	-13	-9	-5	-9	-5	-1	0	0	0
130	-15	-11	-7	-11	-7	-3	-2	0	0
120	-16	-12	-8	-14	-10	-6	-6	-2	0
110	-18	-14	-10	-15	-11	-7	-10	-6	-2
100	-19	-15	-11	-17	-13	-9	-13	-9	-5
90	-20	-16	-12	-19	-15	-11	-15	-11	-7

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-2.9	-2.9	-2.9	-14.2	-14.2	-14.2	-23.9	-23.9	-23.9
180	-3.1	-3.1	-3.1	-13.5	-13.5	-13.5	-22.3	-22.3	-22.3
170	-3.2	-3.2	-3.2	-12.8	-12.8	-12.8	-20.8	-20.8	-20.8
160	-3.2	-3.2	-3.2	-12.1	-12.1	-12.1	-19.4	-19.4	-19.4
150	-3.2	-3.2	-3.2	-11.4	-11.4	-11.4	-18.1	-18.1	-18.1
140	-3.1	-3.1	-3.1	-10.7	-10.7	-10.7	-16.8	-16.8	-16.8
130	-3.0	-3.0	-3.0	-10.0	-10.0	-10.0	-15.6	-15.6	-15.6
120	-2.8	-2.8	-2.8	-9.3	-9.3	-9.3	-14.4	-14.4	-14.4
110	-2.6	-2.6	-2.6	-8.5	-8.5	-8.5	-13.2	-13.2	-13.2
100	-2.5	-2.5	-2.5	-7.8	-7.8	-7.8	-12.1	-12.1	-12.1
90	-2.3	-2.3	-2.3	-7.1	-7.1	-7.1	-10.9	-10.9	-10.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4200	90.3								
4600	112.0	77.0							
5000	134.7	98.4							
5400	158.6	120.4	85.0	80.1					
5800	183.7	143.6	106.5	97.4					
6200		167.9	129.0	115.0	78.0				
6600		193.6	152.5	133.4	95.2				
7000			177.3	152.4	112.8	75.8	76.9		
7400			203.6	172.3	131.0	93.1	90.0		
7800				193.1	150.0	110.6	103.2		
8200					169.8	128.7	116.6	76.9	
8600					190.4	147.6	130.2	90.0	
9000						167.3	144.0	103.2	
9400						187.8	158.1	116.6	76.9
9800						209.2	172.3	130.2	90.0
10200							186.8	144.0	103.2
10600							201.6	158.1	116.6
11000								172.3	130.2
11400								186.8	144.0
11800								201.6	158.1
12200									172.3
12600									186.8
13000									201.6

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -110 ft/+100 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -110 ft/+100 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -170 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser(737-700W or 737-700CW) r of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-5	-3	0	-15	-12	-10	-26	-24	-21
180	-6	-4	-1	-16	-13	-11	-28	-26	-23
170	-7	-4	-2	-17	-15	-12	-30	-27	-25
160	-8	-5	-3	-18	-16	-13	-31	-29	-26
150	-9	-6	-4	-20	-17	-15	-33	-30	-28
140	-9	-7	-4	-21	-18	-16	-34	-32	-29
130	-10	-8	-5	-22	-19	-17	-36	-33	-31
120	-11	-9	-6	-23	-21	-18	-37	-34	-32
110	-12	-10	-7	-24	-22	-19	-38	-36	-33
100	-13	-10	-8	-25	-23	-20	-40	-37	-35
90	-14	-11	-9	-26	-24	-21	-41	-38	-36

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-4.6	-5.5	-6.4	-18.2	-19.1	-20.0	-29.8	-30.7	-31.6
180	-5.9	-6.8	-7.7	-18.8	-19.7	-20.6	-29.1	-30.0	-30.9
170	-6.7	-7.6	-8.5	-18.9	-19.8	-20.7	-28.0	-28.9	-29.8
160	-6.9	-7.8	-8.7	-18.4	-19.3	-20.2	-26.4	-27.3	-28.2
150	-6.7	-7.6	-8.5	-17.3	-18.2	-19.1	-24.3	-25.2	-26.1
140	-5.9	-6.8	-7.7	-15.8	-16.7	-17.6	-21.8	-22.7	-23.6
130	-4.6	-5.5	-6.4	-13.7	-14.6	-15.5	-18.7	-19.6	-20.5
120	-2.8	-3.7	-4.6	-11.0	-11.9	-12.8	-15.2	-16.1	-17.0
110	-0.5	-1.4	-2.3	-7.9	-8.8	-9.7	-11.2	-12.1	-13.0
100	0.0	0.0	0.0	-4.1	-5.0	-5.9	-6.5	-7.4	-8.3
90	0.0	0.0	0.0	0.0	-0.8	-1.7	-1.6	-2.5	-3.4

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****No Reverse Thrust****V1(MCG) Limit Weight (1000 LB)**

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5000	75.0								
5400	109.7								
5800	142.8	79.4							
6200	174.2	114.0							
6600	204.5	146.8	83.8						
7000		178.0	118.2						
7400		208.3	150.8						
7800			181.8	92.8					
8200				120.6					
8600				148.6	89.3				
9000				176.6	117.2				
9400				204.8	145.1	85.8			
9800					173.1	113.7			
10200					201.3	141.6			
10600						169.6			
11000						197.7			
11800							76.2		
12200							96.4		
12600							116.8		
13000							137.6	78.7	
13400							158.6	98.9	
13800							179.9	119.4	
14200							201.6	140.2	81.3
14600								161.2	101.5
15000								182.6	122.0
15400								204.3	142.8
15800									163.9
16200									185.3
16600									207.1

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -220 ft/+220 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-9	-1	0	-22	-15	-7	-42	-35	-27
180	-9	-1	0	-23	-16	-8	-45	-37	-30
170	-10	-2	0	-25	-17	-10	-48	-40	-33
160	-11	-3	0	-27	-19	-12	-51	-43	-36
150	-13	-5	0	-29	-22	-14	-54	-46	-39
140	-15	-8	0	-33	-25	-18	-57	-49	-42
130	-18	-10	-3	-37	-29	-22	-60	-53	-45
120	-21	-14	-6	-41	-34	-26	-63	-56	-48
110	-25	-18	-10	-46	-39	-31	-67	-59	-52
100	-30	-22	-15	-52	-44	-37	-71	-63	-56
90	-35	-28	-20	-58	-51	-43	-74	-67	-59

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-2.9	-2.9	-2.9	-14.2	-14.2	-14.2	-23.9	-23.9	-23.9
180	-3.1	-3.1	-3.1	-13.5	-13.5	-13.5	-22.3	-22.3	-22.3
170	-3.2	-3.2	-3.2	-12.8	-12.8	-12.8	-20.8	-20.8	-20.8
160	-3.2	-3.2	-3.2	-12.1	-12.1	-12.1	-19.4	-19.4	-19.4
150	-3.2	-3.2	-3.2	-11.4	-11.4	-11.4	-18.1	-18.1	-18.1
140	-3.1	-3.1	-3.1	-10.7	-10.7	-10.7	-16.8	-16.8	-16.8
130	-3.0	-3.0	-3.0	-10.0	-10.0	-10.0	-15.6	-15.6	-15.6
120	-2.8	-2.8	-2.8	-9.3	-9.3	-9.3	-14.4	-14.4	-14.4
110	-2.6	-2.6	-2.6	-8.5	-8.5	-8.5	-13.2	-13.2	-13.2
100	-2.5	-2.5	-2.5	-7.8	-7.8	-7.8	-12.1	-12.1	-12.1
90	-2.3	-2.3	-2.3	-7.1	-7.1	-7.1	-10.9	-10.9	-10.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5400	85.0	71.1							
5800	106.5	92.5	78.6						
6200	129.0	114.3	100.0						
6600	152.5	137.1	122.1						
7000	177.3	161.0	145.3	75.8					
7400	203.6	186.3	169.7	93.1	78.4				
7800			195.6	110.6	95.6	81.0			
8200				128.7	113.3	98.2			
8600				147.6	131.5	116.0			
9000				167.3	150.5	134.3			
9400				187.8	170.3	153.4	76.9		
9800				209.2	191.0	173.3	90.0	74.3	
10200						194.2	103.2	87.4	71.6
10600							116.6	100.6	84.8
11000							130.2	113.9	97.9
11400							144.0	127.5	111.3
11800							158.1	141.3	124.8
12200							172.3	155.2	138.5
12600							186.8	169.5	152.4
13000							201.6	183.9	166.6
13400								198.6	181.0
13800									195.7

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-9	-7	-5	-20	-18	-16
180	0	0	0	-10	-8	-6	-22	-20	-18
170	-1	0	0	-11	-9	-7	-24	-22	-20
160	-2	0	0	-12	-10	-8	-25	-23	-21
150	-3	-1	0	-14	-12	-10	-27	-25	-23
140	-3	-1	0	-15	-13	-11	-28	-26	-24
130	-4	-2	0	-16	-14	-12	-30	-28	-26
120	-5	-3	-1	-17	-15	-13	-31	-29	-27
110	-6	-4	-2	-18	-16	-14	-32	-30	-28
100	-7	-5	-3	-19	-17	-15	-34	-32	-30
90	-8	-6	-4	-20	-18	-16	-35	-33	-31

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). v V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes (26K Derate)****No Reverse Thrust****Weight Adjustment (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6.4	-6.8	-7.2	-20.0	-20.4	-20.8	-31.6	-31.9	-32.3
180	-7.7	-8.1	-8.4	-20.6	-21.0	-21.3	-30.9	-31.3	-31.6
170	-8.5	-8.8	-9.2	-20.7	-21.0	-21.4	-29.8	-30.2	-30.5
160	-8.7	-9.1	-9.4	-20.2	-20.5	-20.9	-28.2	-28.6	-28.9
150	-8.5	-8.8	-9.2	-19.1	-19.5	-19.9	-26.1	-26.5	-26.9
140	-7.7	-8.0	-8.4	-17.6	-17.9	-18.3	-23.6	-23.9	-24.3
130	-6.4	-6.7	-7.1	-15.5	-15.8	-16.2	-20.5	-20.9	-21.2
120	-4.6	-4.9	-5.3	-12.8	-13.2	-13.6	-17.0	-17.3	-17.7
110	-2.3	-2.6	-3.0	-9.7	-10.0	-10.4	-13.0	-13.3	-13.7
100	0.0	0.0	-0.1	-5.9	-6.3	-6.7	-8.3	-8.7	-9.0
90	0.0	0.0	0.0	-1.7	-2.0	-2.4	-3.4	-3.8	-4.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6600	83.8								
7000	118.2	92.5							
7400	150.8	126.6	101.2						
7800	181.8	158.7	134.8						
8200		189.4	166.5						
8600			197.0						
9400				85.8					
9800				113.7	90.0				
10200				141.6	117.8	94.2			
10600				169.6	145.8	122.0			
11000				197.7	173.8	150.0			
11400					202.0	178.0			
11800						206.2			
14200							81.3		
14600							101.5	78.2	
15000							122.0	98.4	75.2
15400							142.8	118.9	95.4
15800							163.9	139.6	115.8
16200							185.3	160.7	136.5
16600							207.1	182.1	157.5
17000								203.8	178.9
17400									200.5

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -220 ft/+220 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-7	-4	-1	-27	-24	-21
180	0	0	0	-8	-5	-2	-30	-27	-24
170	0	0	0	-10	-7	-4	-33	-30	-27
160	0	0	0	-12	-9	-6	-36	-33	-30
150	0	0	0	-14	-11	-8	-39	-36	-33
140	0	0	0	-18	-15	-12	-42	-39	-36
130	-3	0	0	-22	-19	-16	-45	-42	-39
120	-6	-3	0	-26	-23	-20	-48	-45	-42
110	-10	-7	-4	-31	-28	-25	-52	-49	-46
100	-15	-12	-9	-37	-34	-31	-56	-53	-50
90	-20	-17	-14	-43	-40	-37	-59	-56	-53

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 - (26K Derate)**Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	94.8	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	95.4	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.0	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	96.8	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	97.4	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.0	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	97.6	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	96.8	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	96.0	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	95.2	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	94.5	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
5	93.7	95.0	96.4	97.0	97.6	98.0	98.3	98.6	99.0	99.4	99.8	100.3	100.7
0	92.9	94.2	95.6	96.3	96.9	97.2	97.5	97.9	98.2	98.6	99.0	99.5	100.0
-5	92.0	93.4	94.8	95.5	96.1	96.4	96.7	97.1	97.5	97.9	98.3	98.7	99.2
-10	91.2	92.6	94.0	94.7	95.3	95.6	96.0	96.3	96.7	97.1	97.5	98.0	98.4
-15	90.4	91.7	93.2	93.9	94.5	94.8	95.2	95.6	95.9	96.3	96.7	97.2	97.6
-20	89.6	90.9	92.4	93.0	93.7	94.0	94.4	94.8	95.2	95.6	95.9	96.4	96.8
-25	88.7	90.1	91.6	92.2	92.9	93.2	93.6	94.0	94.4	94.8	95.2	95.6	96.0
-30	87.9	89.2	90.7	91.4	92.0	92.4	92.8	93.2	93.6	94.0	94.3	94.8	95.2
-35	87.0	88.4	89.9	90.5	91.2	91.6	91.9	92.4	92.8	93.1	93.5	94.0	94.4
-40	86.1	87.5	89.0	89.7	90.3	90.7	91.1	91.5	91.9	92.3	92.7	93.1	93.6
-45	85.3	86.6	88.2	88.8	89.5	89.9	90.3	90.7	91.1	91.5	91.9	92.3	92.7
-50	84.4	85.7	87.3	87.9	88.6	89.0	89.4	89.9	90.3	90.6	91.0	91.5	91.9

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (26K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.1					
35	99.0	98.8	98.9			
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5	100.7	101.6	101.7	101.7	101.6	101.6
0	100.0	100.8	101.7	101.9	101.8	101.8
-5	99.2	100.0	100.9	101.2	101.5	101.6
-10	98.4	99.3	100.1	100.4	100.7	100.8
-15	97.6	98.5	99.3	99.6	99.9	100.0
-20	96.8	97.7	98.5	98.8	99.1	99.2
-25	96.0	96.9	97.7	98.0	98.3	98.4
-30	95.2	96.0	96.9	97.2	97.4	97.6
-35	94.4	95.2	96.0	96.4	96.6	96.7
-40	93.6	94.4	95.2	95.5	95.8	95.9
-45	92.7	93.5	94.3	94.6	94.9	95.0
-50	91.9	92.7	93.5	93.8	94.0	94.1

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	71	71	69	67	65	63	61	59	57	55	53	
30	69	67	67	67	65	63	61	59	57	55	53	51
25	69	67	66	64	65	63	61	59	57	55	53	51
20	69	67	66	64	64	63	61	59	57	55	53	51
15	69	67	66	64	64	63	61	59	57	55	53	51
10 & BELOW	69	67	66	64	64	63	61	59	57	55	53	51

Assumed Temperature Reduced Thrust - (26K Derate)**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	93.4	93.7	94.2	94.7	95.4	96.1	96.9	97.3	97.6	97.8	97.8	97.7
70	94.1	94.4	94.4	94.4	94.7	95.4	96.2	96.6	96.9	97.1	97.1	97.1
65	94.8	95.1	95.2	95.2	95.3	95.4	95.5	96.0	96.2	96.5	96.4	96.4
60	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.9													
100	14.9	10.9												
90	14.0	11.7												
80	12.9	11.6	7.8											
70	11.2	10.7	8.6	7.8	6.3									
60	9.2	9.5	8.5	8.4	7.1	6.3	4.9							
50	7.8	7.8	7.5	7.1	6.9	7.0	5.6	4.9	3.4					
40		6.0	6.2	6.1	5.9	5.8	5.7	5.6	4.7	4.4	5.3			
30		4.6	4.6	4.6	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	3.9	
20			2.9	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.6
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	53	52	52	50	48	47
5	53	51	52	50	48	47
0 & BELOW	53	51	52	50	48	47

Maximum Takeoff %N1 (Table 2 of 3)
Based on engine bleed for packs on and engine anti-ice off

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.7					
55	95.0	95.3	96.4	97.9		
50	96.1	95.7	96.1	97.2	98.6	99.3
45	97.1	96.8	97.1	97.7	98.4	98.9
40	98.1	97.8	98.0	98.5	99.0	99.3
35	99.0	98.8	98.9	99.1	99.4	99.6
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5		101.6	101.7	101.7	101.6	101.6
0				101.9	101.8	101.8
-5				101.2	101.5	101.6
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.4										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.6								
70	11.3	11.2	10.6								
60	10.0	9.2	9.4	7.5							
50		7.9	7.9	7.5	6.1	5.9	5.8				
40		6.5	6.0	6.2	6.1	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (24K Derate)
Flaps 1 and 5
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
180	154	156	160	150	152	156
170	149	150	156	145	147	152
160	144	146	152	140	142	148
150	139	140	147	135	137	144
140	132	134	142	129	132	139
130	126	128	137	123	125	134
120	120	122	131	117	119	128
110	113	115	126	110	113	123
100	106	108	120	103	106	117
90	99	101	114	96	98	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (1000 FT)					PRESS ALT (1000 FT)					PRESS ALT (1000 FT)				
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	
70	158	8	9						6	7						0
60	140	5	6	8	9				4	5	7	8				0
50	122	3	4	6	7	9	11	12	3	4	5	7	8	9	11	0
40	104	1	2	4	5	7	9	10	1	2	3	5	7	8	9	0
30	86	0	0	2	3	5	7	9	0	0	2	3	5	7	8	0
20	68	0	0	1	2	3	5	7	0	0	1	2	3	5	7	0
-60	-76	0	0	1	2	3	4	6	0	0	1	2	3	4	5	0

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
190	-3	-2	0	2	2	-1	-1	0	0	0	1	1	1
180	-3	-1	0	2	2	-1	-1	0	0	0	1	1	1
160	-3	-1	0	1	2	-1	-1	0	0	0	1	1	1
140	-2	-1	0	1	2	-1	-1	0	0	0	1	1	1
120	-2	-1	0	1	2	-2	-1	0	0	0	1	1	1
100	-1	-1	0	1	1	-2	-1	-1	0	0	1	1	2
90	-1	0	0	1	1	-2	-1	-1	0	1	1	1	2

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Dry Runway (24K Derate)

Flaps 10, 15 and 25

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
180	143	144	148						
170	139	140	145	136	136	141	134	134	140
160	134	135	141	132	132	138	130	130	136
150	130	131	137	128	128	135	126	126	133
140	124	126	133	123	123	131	121	122	129
130	119	121	129	118	118	126	116	117	125
120	113	115	124	112	113	122	111	111	121
110	107	109	119	106	107	117	105	106	116
100	101	103	114	100	101	112	99	100	111
90	94	97	109	93	95	107	92	94	106

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	6	6						4	5						-2	-3					
60	140	4	5	6	7				3	4	5	6				-2	-2	-2	-3			
50	122	3	3	4	6	7	8	9	2	3	4	5	5	6	8	-1	-1	-2	-2	-3	-3	-3
40	104	1	2	3	4	5	6	8	1	1	3	4	5	5	6	0	-1	-1	-2	-2	-2	-3
30	86	0	0	1	3	4	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2
20	68	0	0	1	1	2	4	5	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
180	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
160	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
140	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
120	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
100	-1	-1	0	1	1		-2	-1	-1	0	0	1	1	1
90	-1	-1	0	0	1		-2	-2	-1	0	0	1	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	151	151	154	147	148	150									
150	146	146	150	142	143	146									
140	140	141	144	136	137	141	130	131	134						
130	133	134	139	130	131	135	124	125	129	122	122	126	120	120	124
120	126	128	133	123	125	129	117	119	123	116	116	121	114	114	119
110	119	120	126	116	118	123	111	112	118	110	110	116	108	109	114
100	111	113	120	109	111	117	104	106	112	103	104	110	102	103	109
90	103	105	114	101	103	111	97	99	107	96	97	105	95	96	104

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (1000 FT)					PRESS ALT (1000 FT)					PRESS ALT (1000 FT)				
°C	°F	10	11	12	13	13.5	10	11	12	13	13.5	10	11	12	13	13.5
50	122	8					6					0				
40	104	6	7	8	9	9	4	5	6	7	7	0	0	0	0	0
30	86	4	5	5	6	7	3	4	4	5	6	0	0	0	1	1
20	68	2	3	4	5	5	1	2	3	4	4	0	0	0	1	1
10	50	0	1	2	3	4	0	1	2	3	3	0	0	0	1	1
0	32	0	1	2	2	3	0	1	1	2	3	0	0	0	1	1
-60	-76	0	1	2	2	3	0	1	1	2	3	0	0	0	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
160	-3	-2	0	1	1		-1	-1	0	0	0	0	1	1
150	-3	-1	0	1	1		-1	-1	0	0	0	0	1	1
140	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
130	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
120	-2	-1	0	1	1		-1	-1	0	0	0	0	1	1
110	-2	-1	0	1	1		-1	-1	-1	0	0	0	1	1
100	-2	-1	0	1	1		-2	-1	-1	0	0	0	1	1
90	-2	-1	0	0	1		-2	-1	-1	0	0	1	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)				
		10000	11000	12000	13000	13500
50	122	90				
40	104	90	89	88	87	86
30	86	92	90	88	87	86
20	68	95	94	92	90	89
10	50	99	97	95	93	92
0	32	99	98	96	94	94
-60	-76	100	98	97	95	94

Takeoff Speeds - Wet Runway (24K Derate)

Flaps 1 and 5

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5		
	V1	VR	V2	V1	VR	V2
190	154	161	165	150	157	161
180	149	156	160	145	152	156
170	143	150	156	139	147	152
160	137	146	152	134	142	148
150	131	140	147	128	137	144
140	125	134	142	122	132	139
130	118	128	137	115	125	134
120	112	122	131	109	119	128
110	104	115	126	102	113	123
100	97	108	120	94	106	117
90	89	101	114	87	98	111

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	10	11						6	7						0	0					
60	140	7	8	10	12				4	5	7	8				0	0	0	0			
50	122	4	5	7	9	11	13	16	3	4	5	7	8	9	11	0	0	0	0	0	0	0
40	104	2	3	5	7	9	11	13	1	2	3	5	7	8	9	0	0	0	0	0	0	0
30	86	0	0	2	4	6	8	10	0	0	2	3	5	7	8	0	0	0	0	0	0	0
20	68	0	0	1	2	4	6	8	0	0	1	2	3	5	7	0	0	0	0	1	1	1
-60	-76	0	0	1	2	3	5	7	0	0	1	2	3	4	5	0	0	0	0	1	1	1

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
180	-5	-2	0	3	5	-3	-2	-1	0	1	1	2	3
170	-4	-2	0	2	5	-3	-2	-1	0	1	1	2	3
150	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	3
130	-3	-2	0	2	3	-4	-2	-1	0	1	1	2	3
110	-3	-1	0	1	3	-4	-3	-1	0	1	2	3	3
90	-2	-1	0	1	2	-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		-2000	0	2000	4000	6000	10000
70	158	102	99				
60	140	102	99	97	96		
50	122	104	101	98	96	94	
40	104	109	106	102	99	95	92
30	86	112	111	107	103	99	95
20	68	112	112	109	107	103	99
-60	-76	114	113	110	108	105	102

Takeoff Speeds - Wet Runway (24K Derate)
Flaps 10, 15 and 25
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2
180	138	144	148						
170	133	140	145	133	136	141	133	134	140
160	128	135	141	128	132	138	126	130	136
150	123	131	137	123	128	135	121	126	133
140	118	126	133	117	123	131	115	122	129
130	111	121	129	111	118	126	109	117	125
120	105	115	124	105	113	122	103	111	121
110	99	109	119	98	107	117	97	106	116
100	92	103	114	92	101	112	90	100	111
90	86	97	109	85	95	107	84	94	106

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	8	9						4	5						-2	-3					
60	140	6	7	8	10				3	4	5	6				-2	-2	-2	-3			
50	122	4	5	6	8	9	11	13	2	3	4	5	5	6	8	-1	-1	-2	-2	-3	-3	-3
40	104	1	2	4	5	7	9	10	1	1	3	4	5	5	6	0	-1	-1	-2	-2	-2	-3
30	86	0	0	2	3	5	7	8	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2
20	68	0	0	1	2	3	5	6	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2
-60	-76	0	0	1	2	3	4	5	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
180	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2
170	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2
150	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2
130	-3	-2	0	1	3	-4	-2	-1	0	1	1	2	3
110	-3	-1	0	1	2	-4	-3	-1	0	1	2	2	3
90	-2	-1	0	1	2	-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	102	99					
60	140	102	99	97	96			
50	122	104	101	98	96	94	92	90
40	104	109	106	102	99	95	92	90
30	86	112	111	107	103	99	95	92
20	68	112	112	109	107	103	99	96
-60	-76	114	113	110	108	105	102	100

Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	145	151	154	141	148	150									
150	140	146	150	136	143	146									
140	133	141	144	129	137	141	124	131	134						
130	126	134	139	122	131	135	117	125	129	117	122	126	115	120	124
120	119	128	133	115	125	129	111	119	123	110	116	121	109	114	119
110	111	120	126	108	118	123	104	112	118	103	110	116	102	109	114
100	103	113	120	100	111	117	97	106	112	96	104	110	95	103	109
90	95	105	114	92	103	111	89	99	107	89	97	105	88	96	104

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1					VR					V2				
		PRESS ALT (FT)					PRESS ALT (FT)					PRESS ALT (FT)				
°C	°F	10	11	12	13	13.5	10	11	12	13	13.5	10	11	12	13	13.5
50	122	11					6					0				
40	104	7	9	10	11	12	4	5	6	7	7	0	0	0	0	0
30	86	5	6	7	8	9	3	4	4	5	6	0	0	0	1	1
20	68	2	3	4	6	6	1	2	3	4	4	0	0	0	1	1
10	50	0	1	3	4	4	0	1	2	3	3	0	0	0	1	1
0	32	0	1	2	3	4	0	1	1	2	3	0	0	0	1	1
-60	-76	0	1	2	3	4	0	1	1	2	3	0	0	0	1	1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)								
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40	
160	-5	-3	0	3	5	-2	-2	-1	0	0	1	2	2	
150	-5	-2	0	2	5	-2	-2	-1	0	0	1	2	2	
140	-5	-2	0	2	5	-3	-2	-1	0	0	1	2	2	
130	-4	-2	0	2	4	-3	-2	-1	0	0	1	2	2	
120	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2	
110	-4	-2	0	2	3	-3	-2	-1	0	1	1	2	2	
100	-3	-2	0	1	3	-3	-2	-1	0	1	1	2	3	
90	-3	-1	0	1	3	-4	-2	-1	0	1	1	2	3	

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)				
		10000	11000	12000	13000	13500
50	122	90				
40	104	90	89	88	87	86
30	86	92	90	88	87	86
20	68	95	94	92	90	89
10	50	99	97	95	93	92
0	32	99	98	96	94	94
-60	-76	100	98	97	95	94

Maximum Allowable Clearway (24K Derate)

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	450
6000	650
8000	850
10000	1000
12000	1450
14000	1550

Maximum Allowable Clearway - High Altitudes (24K Derate)

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	450
6000	650
8000	850
10000	1000
12000	1450
14000	1550

Clearway and Stopway V1 Adjustments (24K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-4	-4	-4	-4				
600	-4	-4	-4	-4				
400	-3	-3	-3	-3				
200	-1	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	1	1	1	1	1	1	1	0
-400	1	1	1	1	3	2	1	1
-600	1	1	1	1	4	3	2	1
-800	1	1	1	1	4	3	2	1

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitude (24K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-4	-3	-3	-3				
600	-4	-3	-2	-2				
400	-3	-2	-1	-1				
200	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	2	0	0	0	1	0	0	0
-400	2	0	0	0	2	1	1	1
-600	2	0	0	0	3	2	2	2
-800	2	0	0	0	3	2	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (24K Derate)**Flaps 1 and 5**

WEIGHT (1000 LB)	C.G. (%MAC)									
	9	11	13	16	20	24	26	28	30	33
180	9 1/2	9	8 1/2	7 3/4	6 3/4	6	5 1/2	5 1/4	4 3/4	4 1/4
160	9 1/2	9	8 1/2	7 3/4	6 3/4	6	5 1/2	5 1/4	4 3/4	4 1/4
140	9	8 1/2	8	7 1/4	6 1/4	5 1/2	5 1/4	4 3/4	4 1/2	4
120	8 1/2	8	7 1/2	6 1/2	5 3/4	5	4 3/4	4 1/4	4	4
100	6 3/4	6 1/2	6	5 1/2	5	4 1/4	4	4	4	4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)									
	9	11	13	16	20	23	27	30	32	33
180	9 1/2	9	8 1/4	7 1/4	6 1/2	5 3/4	5	4 1/4	4	4
160	9 1/2	9	8 1/4	7 1/4	6 1/2	5 3/4	5	4 1/4	4	4
140	9 1/4	8 1/2	7 3/4	6 3/4	6	5 1/4	4 1/2	4	4	4
120	8 1/2	7 3/4	7	6	5 1/4	4 3/4	4	4	4	4
100	6 1/4	6	5 1/2	5	4 1/2	4	4	4	4	4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-24.3	-30.3	-36.3	-29.2	-35.2	-41.2	-39.9	-45.9	-51.9
180	-21.6	-27.6	-33.6	-25.8	-31.8	-37.8	-34.6	-40.6	-46.6
170	-19.2	-25.2	-31.2	-22.6	-28.6	-34.6	-29.9	-35.9	-41.9
160	-17.0	-23.0	-29.0	-19.7	-25.7	-31.7	-25.7	-31.7	-37.7
150	-15.0	-21.0	-27.0	-17.2	-23.2	-29.2	-22.0	-28.0	-34.0
140	-13.2	-19.2	-25.2	-15.0	-21.0	-27.0	-18.9	-24.9	-30.9
130	-11.7	-17.7	-23.7	-13.1	-19.1	-25.1	-16.3	-22.3	-28.3
120	-10.3	-16.3	-22.3	-11.5	-17.5	-23.5	-14.2	-20.2	-26.2
110	-9.2	-15.2	-21.2	-10.1	-16.1	-22.1	-12.5	-18.5	-24.5
100	-8.0	-14.0	-20.0	-8.8	-14.8	-20.8	-10.8	-16.8	-22.8
90	-6.9	-12.9	-18.9	-7.4	-13.4	-19.4	-9.2	-15.2	-21.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4600							77.2		
5000	75.8			82.8			94.4		
5400	94.0			100.9			112.0		
5800	112.5			119.3	73.9		130.0	85.7	
6200	131.5	84.9		138.1	91.8		148.5	103.1	
6600	150.8	103.2		157.3	110.1		167.6	120.9	77.2
7000	170.6	121.9	75.8	176.9	128.7	82.8	187.3	139.2	94.4
7400	190.8	141.1	94.0	196.9	147.7	100.9	207.3	158.0	112.0
7800		160.6	112.5		167.1	119.3		177.4	130.0
8200		180.6	131.5		186.9	138.1		197.3	148.5
8600		201.1	150.8		207.0	157.3			167.6
9000			170.6			176.9			187.3
9400			190.8			196.9			207.3

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -130 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
180	-14	-9	-4	-8	-3	0	0	0	0
170	-16	-11	-6	-10	-5	0	-1	0	0
160	-17	-12	-7	-12	-7	-2	-3	0	0
150	-18	-13	-8	-14	-9	-4	-5	0	0
140	-19	-14	-9	-15	-10	-5	-7	-2	0
130	-20	-15	-10	-17	-12	-7	-10	-5	0
120	-20	-15	-10	-18	-13	-8	-12	-7	-2
110	-21	-16	-11	-19	-14	-9	-15	-10	-5
100	-23	-18	-13	-21	-16	-11	-17	-12	-7
90	-24	-19	-14	-23	-18	-13	-19	-14	-9

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-30.9	-37.9	-44.9	-36.1	-43.1	-50.1	-46.8	-53.8	-60.8
180	-28.2	-35.2	-42.2	-32.5	-39.5	-46.5	-41.4	-48.4	-55.4
170	-25.6	-32.6	-39.6	-29.1	-36.1	-43.1	-36.5	-43.5	-50.5
160	-23.2	-30.2	-37.2	-26.1	-33.1	-40.1	-32.1	-39.1	-46.1
150	-21.0	-28.0	-35.0	-23.3	-30.3	-37.3	-28.2	-35.2	-42.2
140	-19.0	-26.0	-33.0	-20.8	-27.8	-34.8	-24.8	-31.8	-38.8
130	-17.2	-24.2	-31.2	-18.6	-25.6	-32.6	-21.8	-28.8	-35.8
120	-15.5	-22.5	-29.5	-16.7	-23.7	-30.7	-19.3	-26.3	-33.3
110	-14.1	-21.1	-28.1	-15.0	-22.0	-29.0	-17.3	-24.3	-31.3
100	-12.8	-19.8	-26.8	-13.7	-20.7	-27.7	-15.8	-22.8	-29.8
90	-11.7	-18.7	-25.7	-12.6	-19.6	-26.6	-14.7	-21.7	-28.7

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
6600							86.8		
7000							106.3		
7400				87.9			126.5	74.7	
7800	83.3			110.2			147.4	94.1	
8200	106.2			133.1	74.0		169.1	113.8	
8600	130.2			156.9	96.2		191.7	134.3	81.9
9000	155.9	91.8		181.5	118.7			155.4	101.4
9400	183.3	115.1		206.8	142.0	82.3		177.4	121.4
9800		139.7	77.6		166.0	104.6		200.3	142.1
10200		165.9	100.4		191.0	127.3			163.6
10600		194.1	124.1			150.9			185.9
11000			149.3			175.2			208.9
11400			176.3			200.5			
11800			205.0						

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -180 ft/+180 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-22	-14	-7	-11	-3	0	0	0	0
180	-24	-16	-9	-14	-6	0	0	0	0
170	-25	-18	-10	-17	-10	-2	0	0	0
160	-27	-20	-12	-20	-13	-5	0	0	0
150	-29	-21	-14	-23	-15	-8	-6	0	0
140	-30	-23	-15	-26	-18	-11	-12	-5	0
130	-32	-25	-17	-28	-21	-13	-17	-10	-2
120	-33	-26	-18	-30	-23	-15	-22	-15	-7
110	-35	-27	-20	-32	-25	-17	-26	-18	-11
100	-36	-29	-21	-34	-27	-19	-29	-22	-14
90	-37	-30	-22	-36	-28	-21	-32	-24	-17

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
Maximum Reverse Thrust
Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-36.3	-38.7	-41.1	-41.2	-43.6	-46.1	-51.9	-54.3	-56.7
180	-33.6	-36.0	-38.4	-37.8	-40.2	-42.6	-46.6	-49.0	-51.4
170	-31.2	-33.6	-36.0	-34.6	-37.0	-39.4	-41.9	-44.3	-46.7
160	-29.0	-31.4	-33.8	-31.7	-34.1	-36.5	-37.7	-40.1	-42.5
150	-27.0	-29.4	-31.8	-29.2	-31.6	-34.0	-34.0	-36.4	-38.8
140	-25.2	-27.6	-30.0	-27.0	-29.4	-31.8	-30.9	-33.3	-35.7
130	-23.7	-26.1	-28.5	-25.1	-27.5	-29.9	-28.3	-30.7	-33.1
120	-22.3	-24.7	-27.1	-23.5	-25.9	-28.3	-26.2	-28.6	-31.0
110	-21.2	-23.6	-26.0	-22.1	-24.5	-26.9	-24.5	-26.9	-29.3
100	-20.0	-22.4	-24.8	-20.8	-23.2	-25.6	-22.8	-25.2	-27.6
90	-18.9	-21.3	-23.7	-19.4	-21.8	-24.2	-21.2	-23.6	-26.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6600							77.2		
7000	75.8			82.8			94.4	77.2	
7400	94.0	75.8		100.9	82.8		112.0	94.4	77.2
7800	112.5	94.0	75.8	119.3	100.9	82.8	130.0	112.0	94.4
8200	131.5	112.5	94.0	138.1	119.3	100.9	148.5	130.0	112.0
8600	150.8	131.5	112.5	157.3	138.1	119.3	167.6	148.5	130.0
9000	170.6	150.8	131.5	176.9	157.3	138.1	187.3	167.6	148.5
9400	190.8	170.6	150.8	196.9	176.9	157.3	207.3	187.3	167.6
9800		190.8	170.6		196.9	176.9		207.3	187.3
10200			190.8			196.9			207.3

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -130 ft/+130 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-3	-1	0	0	0	0	0	0	0
180	-4	-2	0	0	0	0	0	0	0
170	-6	-4	-2	0	0	0	0	0	0
160	-7	-5	-3	-2	0	0	0	0	0
150	-8	-6	-4	-4	-2	0	0	0	0
140	-9	-7	-5	-5	-3	-1	0	0	0
130	-10	-8	-6	-7	-5	-3	0	0	0
120	-10	-8	-6	-8	-6	-4	-2	0	0
110	-11	-9	-7	-9	-7	-5	-5	-3	-1
100	-13	-11	-9	-11	-9	-7	-7	-5	-3
90	-14	-12	-10	-13	-11	-9	-9	-7	-5

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-44.9	-47.7	-50.5	-50.1	-52.9	-55.7	-60.8	-63.6	-66.4
180	-42.2	-45.0	-47.8	-46.5	-49.3	-52.1	-55.4	-58.2	-61.0
170	-39.6	-42.4	-45.2	-43.1	-45.9	-48.7	-50.5	-53.3	-56.1
160	-37.2	-40.0	-42.8	-40.1	-42.9	-45.7	-46.1	-48.9	-51.7
150	-35.0	-37.8	-40.6	-37.3	-40.1	-42.9	-42.2	-45.0	-47.8
140	-33.0	-35.8	-38.6	-34.8	-37.6	-40.4	-38.8	-41.6	-44.4
130	-31.2	-34.0	-36.8	-32.6	-35.4	-38.2	-35.8	-38.6	-41.4
120	-29.5	-32.3	-35.1	-30.7	-33.5	-36.3	-33.3	-36.1	-38.9
110	-28.1	-30.9	-33.7	-29.0	-31.8	-34.6	-31.3	-34.1	-36.9
100	-26.8	-29.6	-32.4	-27.7	-30.5	-33.3	-29.8	-32.6	-35.4
90	-25.7	-28.5	-31.3	-26.6	-29.4	-32.2	-28.7	-31.5	-34.3

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
8600							81.9		
9000							101.4	81.0	
9400				82.3			121.4	100.4	80.0
9800	77.6			104.6	81.2		142.1	120.4	99.5
10200	100.4	76.5		127.3	103.4	80.1	163.6	141.1	119.4
10600	124.1	99.3	75.3	150.9	126.2	102.3	185.9	162.5	140.0
11000	149.3	122.9	98.1	175.2	149.7	125.0	208.9	184.8	161.4
11400	176.3	148.0	121.7	200.5	174.0	148.5		207.8	183.6
11800	205.0	174.9	146.7		199.2	172.8			206.6
12200		203.6	173.5			198.0			
12600			202.1						

- 1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
- 2. Adjust field length available by -190 ft/+190 ft for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7	-4	-1	0	0	0	0	0	0
180	-9	-6	-3	0	0	0	0	0	0
170	-10	-7	-4	-2	0	0	0	0	0
160	-12	-9	-6	-5	-2	0	0	0	0
150	-14	-11	-8	-8	-5	-2	0	0	0
140	-15	-12	-9	-11	-8	-5	0	0	0
130	-17	-14	-11	-13	-10	-7	-2	0	0
120	-18	-15	-12	-15	-12	-9	-7	-4	-1
110	-20	-17	-14	-17	-14	-11	-11	-8	-5
100	-21	-18	-15	-19	-16	-13	-14	-11	-8
90	-22	-19	-16	-21	-18	-15	-17	-14	-11

- 1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-3.0	-3.0	-3.0	-14.3	-14.3	-14.3	-24.1	-24.1	-24.1
180	-3.0	-3.0	-3.0	-13.5	-13.5	-13.5	-22.4	-22.4	-22.4
170	-3.1	-3.1	-3.1	-12.8	-12.8	-12.8	-20.9	-20.9	-20.9
160	-3.1	-3.1	-3.1	-12.0	-12.0	-12.0	-19.4	-19.4	-19.4
150	-3.1	-3.1	-3.1	-11.3	-11.3	-11.3	-18.0	-18.0	-18.0
140	-3.0	-3.0	-3.0	-10.6	-10.6	-10.6	-16.7	-16.7	-16.7
130	-2.9	-2.9	-2.9	-9.9	-9.9	-9.9	-15.5	-15.5	-15.5
120	-2.8	-2.8	-2.8	-9.2	-9.2	-9.2	-14.4	-14.4	-14.4
110	-2.6	-2.6	-2.6	-8.6	-8.6	-8.6	-13.3	-13.3	-13.3
100	-2.5	-2.5	-2.5	-7.9	-7.9	-7.9	-12.2	-12.2	-12.2
90	-2.4	-2.4	-2.4	-7.2	-7.2	-7.2	-11.1	-11.1	-11.1

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800	91.6								
4200	120.6	80.8							
4600	150.0	109.7	70.0						
5000	179.9	138.9	98.8	89.4					
5400		168.7	127.9	110.9					
5800		198.9	157.5	133.2	89.4				
6200			187.5	156.3	110.9		77.0		
6600				180.4	133.2	89.4	91.6		
7000				205.5	156.3	110.9	106.4		
7400					180.4	133.2	121.6	78.8	
7800					205.5	156.3	137.3	93.4	
8200						180.4	153.5	108.3	
8600						205.5	170.3	123.5	80.7
9000							187.7	139.3	95.3
9400							205.8	155.5	110.1
9800								172.4	125.5
10200								189.9	141.3
10600								208.1	157.6
11000									174.6

- 1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
- 2. Adjust “Good” field length available by -90 ft/+90 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -90 ft/+90 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -140 ft/+130 ft for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
180	-5	-3	0	-14	-11	-9	-25	-22	-20
170	-6	-3	-1	-15	-13	-10	-26	-24	-21
160	-7	-4	-2	-16	-14	-11	-28	-26	-23
150	-8	-5	-3	-18	-15	-13	-30	-27	-25
140	-8	-6	-3	-19	-16	-14	-31	-29	-26
130	-9	-7	-4	-20	-18	-15	-33	-30	-28
120	-10	-8	-5	-21	-19	-16	-35	-32	-30
110	-11	-9	-6	-23	-20	-18	-36	-34	-31
100	-12	-10	-7	-24	-22	-19	-38	-35	-33
90	-13	-11	-8	-26	-23	-21	-39	-37	-34

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
No Reverse Thrust
Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-4.9	-5.8	-6.6	-18.6	-19.5	-20.3	-30.7	-31.5	-32.4
180	-5.5	-6.4	-7.2	-18.4	-19.2	-20.1	-29.3	-30.2	-31.0
170	-5.9	-6.8	-7.6	-18.1	-19.0	-19.8	-27.8	-28.7	-29.5
160	-6.2	-7.0	-7.9	-17.6	-18.5	-19.3	-26.2	-27.1	-27.9
150	-6.3	-7.2	-8.0	-17.0	-17.8	-18.7	-24.5	-25.4	-26.2
140	-6.3	-7.1	-8.0	-16.1	-17.0	-17.8	-22.7	-23.6	-24.4
130	-6.1	-6.9	-7.8	-15.2	-16.0	-16.9	-20.8	-21.6	-22.5
120	-5.7	-6.5	-7.4	-14.1	-14.9	-15.8	-18.8	-19.6	-20.5
110	-5.2	-6.0	-6.9	-12.8	-13.6	-14.5	-16.6	-17.5	-18.3
100	-4.5	-5.4	-6.2	-11.4	-12.2	-13.1	-14.4	-15.2	-16.1
90	-3.7	-4.5	-5.4	-9.8	-10.6	-11.5	-12.0	-12.8	-13.7

ADVISORY INFORMATION**Slippery Runway Takeoff (24K Derate)****No Reverse Thrust****V1(MCG) Limit Weight (1000 LB)**

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4600	95.7								
5000	138.1								
5400	176.2	101.2							
5800		143.1							
6200		180.6	106.7						
6600			148.0						
7000			185.1	100.3					
7400				138.2					
7800				174.0	90.5				
8200				208.5	128.9				
8600					165.3	80.7			
9000					199.9	119.5			
9400						156.3			
9800						191.3			
10600							73.3		
11000							101.1		
11400							129.2		
11800							157.7		
12200							186.7	94.1	
12600								122.1	
13000								150.5	
13400								179.3	87.2
13800								208.4	115.1
14200									143.4
14600									172.1
15000									201.2

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -190 ft/+190 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-8	-3	0	-19	-14	-9	-37	-32	-27
180	-8	-3	0	-21	-16	-11	-40	-35	-30
170	-9	-4	0	-22	-17	-12	-43	-38	-33
160	-9	-4	0	-24	-19	-14	-46	-41	-36
150	-11	-6	-1	-26	-21	-16	-49	-44	-39
140	-12	-7	-2	-29	-24	-19	-52	-47	-42
130	-14	-9	-4	-31	-26	-21	-55	-50	-45
120	-17	-12	-7	-35	-30	-25	-59	-54	-49
110	-20	-15	-10	-38	-33	-28	-63	-58	-53
100	-23	-18	-13	-42	-37	-32	-67	-62	-57
90	-26	-21	-16	-47	-42	-37	-71	-66	-61

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff- High Altitudes (24K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-3.0	-3.0	-3.0	-14.3	-14.3	-14.3	-24.1	-24.1	-24.1
180	-3.0	-3.0	-3.0	-13.5	-13.5	-13.5	-22.4	-22.4	-22.4
170	-3.1	-3.1	-3.1	-12.8	-12.8	-12.8	-20.9	-20.9	-20.9
160	-3.1	-3.1	-3.1	-12.0	-12.0	-12.0	-19.4	-19.4	-19.4
150	-3.1	-3.1	-3.1	-11.3	-11.3	-11.3	-18.0	-18.0	-18.0
140	-3.0	-3.0	-3.0	-10.6	-10.6	-10.6	-16.7	-16.7	-16.7
130	-2.9	-2.9	-2.9	-9.9	-9.9	-9.9	-15.5	-15.5	-15.5
120	-2.8	-2.8	-2.8	-9.2	-9.2	-9.2	-14.4	-14.4	-14.4
110	-2.6	-2.6	-2.6	-8.6	-8.6	-8.6	-13.3	-13.3	-13.3
100	-2.5	-2.5	-2.5	-7.9	-7.9	-7.9	-12.2	-12.2	-12.2
90	-2.4	-2.4	-2.4	-7.2	-7.2	-7.2	-11.1	-11.1	-11.1

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
4600	70.0								
5000	98.8	83.0							
5400	127.9	111.9	95.9						
5800	157.5	141.1	125.0						
6200	187.5	170.9	154.5						
6600		201.1	184.4	89.4	72.5				
7000				110.9	93.7	76.7			
7400				133.2	115.3	97.9			
7800				156.3	137.7	119.7			
8200				180.4	161.0	142.3			
8600				205.5	185.3	165.8	80.7		
9000						190.3	95.3	78.5	
9400							110.1	93.1	76.3
9800							125.5	107.9	90.9
10200							141.3	123.1	105.6
10600							157.6	138.9	120.8
11000							174.6	155.1	136.5
11400							192.2	172.0	152.7
11800								189.5	169.4
12200								207.6	186.8
12600									204.9

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -90 ft/+90 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -90 ft/+90 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -135 ft/+135 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-7	-5	-3	-17	-15	-13
180	0	0	0	-8	-6	-4	-19	-17	-15
170	0	0	0	-9	-7	-5	-20	-18	-16
160	-1	0	0	-10	-8	-6	-22	-20	-18
150	-2	0	0	-12	-10	-8	-24	-22	-20
140	-2	0	0	-13	-11	-9	-25	-23	-21
130	-3	-1	0	-14	-12	-10	-27	-25	-23
120	-4	-2	0	-15	-13	-11	-29	-27	-25
110	-5	-3	-1	-17	-15	-13	-30	-28	-26
100	-6	-4	-2	-18	-16	-14	-32	-30	-28
90	-7	-5	-3	-20	-18	-16	-33	-31	-29

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION**Slippery Runway Takeoff- High Altitudes (24K Derate)****No Reverse Thrust****Weight Adjustment (1000 LB)**

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6.6	-7.0	-7.3	-20.3	-20.7	-21.0	-32.4	-32.7	-33.1
180	-7.2	-7.6	-7.9	-20.1	-20.4	-20.8	-31.0	-31.3	-31.7
170	-7.6	-8.0	-8.3	-19.8	-20.2	-20.5	-29.5	-29.9	-30.2
160	-7.9	-8.2	-8.6	-19.3	-19.7	-20.0	-27.9	-28.3	-28.6
150	-8.0	-8.3	-8.7	-18.7	-19.0	-19.3	-26.2	-26.6	-26.9
140	-8.0	-8.3	-8.6	-17.8	-18.2	-18.5	-24.4	-24.8	-25.1
130	-7.8	-8.1	-8.4	-16.9	-17.2	-17.6	-22.5	-22.8	-23.2
120	-7.4	-7.7	-8.1	-15.8	-16.1	-16.4	-20.5	-20.8	-21.1
110	-6.9	-7.2	-7.6	-14.5	-14.8	-15.2	-18.3	-18.7	-19.0
100	-6.2	-6.5	-6.9	-13.1	-13.4	-13.7	-16.1	-16.4	-16.7
90	-5.4	-5.7	-6.1	-11.5	-11.8	-12.1	-13.7	-14.0	-14.4

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6200	106.7	72.4							
6600	148.0	117.6	84.1						
7000	185.1	157.6	128.0						
7400		193.9	166.9						
7800			202.6						
8600				80.7					
9000				119.5	84.6				
9400				156.3	123.3	88.5			
9800				191.3	159.9	127.0			
10200					194.7	163.5			
10600						198.2			
13400							87.2		
13800							115.1	78.8	
14200							143.4	106.7	70.5
14600							172.1	134.9	98.3
15000							201.2	163.5	126.3
15400								192.5	154.9
15800									183.8

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -190 ft/+190 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-9	-7	-5	-27	-25	-23
180	0	0	0	-11	-9	-7	-30	-28	-26
170	0	0	0	-12	-10	-8	-33	-31	-29
160	0	0	0	-14	-12	-10	-36	-34	-32
150	-1	0	0	-16	-14	-12	-39	-37	-35
140	-2	0	0	-19	-17	-15	-42	-40	-38
130	-4	-2	0	-21	-19	-17	-45	-43	-41
120	-7	-5	-3	-25	-23	-21	-49	-47	-45
110	-10	-8	-6	-28	-26	-24	-53	-51	-49
100	-13	-11	-9	-32	-30	-28	-57	-55	-53
90	-16	-14	-12	-37	-35	-33	-61	-59	-57

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

Takeoff %N1 (24K Derate)**Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	90.3	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.0	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	91.8	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	92.6	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	93.4	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.2	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	93.8	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	93.1	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	92.3	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	91.6	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	90.8	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
5	90.0	91.2	92.2	92.8	93.3	93.9	94.5	95.2	95.9	96.7	97.4	98.4	99.3
0	89.2	90.4	91.4	92.0	92.5	93.1	93.7	94.4	95.1	95.9	96.7	97.6	98.5
-5	88.4	89.6	90.6	91.2	91.7	92.3	92.9	93.6	94.3	95.1	95.9	96.8	97.7
-10	87.6	88.8	89.8	90.4	90.9	91.5	92.1	92.8	93.5	94.3	95.1	96.1	97.0
-15	86.8	88.0	89.0	89.5	90.0	90.6	91.3	92.0	92.7	93.5	94.3	95.3	96.2
-20	86.0	87.1	88.2	88.7	89.2	89.8	90.5	91.2	91.9	92.6	93.5	94.5	95.4
-25	85.2	86.3	87.3	87.9	88.4	89.0	89.6	90.3	91.0	91.8	92.6	93.7	94.6
-30	84.4	85.5	86.5	87.0	87.5	88.1	88.8	89.5	90.2	91.0	91.8	92.9	93.8
-35	83.5	84.6	85.6	86.2	86.6	87.3	87.9	88.6	89.3	90.1	91.0	92.1	93.0
-40	82.7	83.8	84.8	85.3	85.8	86.4	87.0	87.8	88.5	89.3	90.1	91.2	92.2
-45	81.8	82.9	83.9	84.4	84.9	85.5	86.2	86.9	87.6	88.4	89.3	90.4	91.4
-50	81.0	82.0	83.0	83.5	84.0	84.6	85.3	86.0	86.7	87.5	88.4	89.5	90.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)													
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0	

Takeoff %N1 - High Altitudes (24K Derate)

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	93.8					
35	94.7	94.7	94.7			
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5	99.3	99.7	100.2	100.3	100.0	99.8
0	98.5	99.0	99.4	99.8	100.1	100.3
-5	97.7	98.2	98.7	99.1	99.4	99.5
-10	97.0	97.4	97.9	98.3	98.6	98.7
-15	96.2	96.7	97.1	97.5	97.8	98.0
-20	95.4	95.9	96.3	96.7	97.0	97.2
-25	94.6	95.1	95.5	95.9	96.2	96.4
-30	93.8	94.3	94.7	95.1	95.4	95.5
-35	93.0	93.5	93.9	94.3	94.6	94.7
-40	92.2	92.6	93.1	93.5	93.7	93.9
-45	91.4	91.8	92.2	92.6	92.9	93.0
-50	90.5	91.0	91.4	91.8	92.0	92.2

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust (24K Derate)

Maximum Assumed Temperature (Table 1 of 3)

Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	67	67	67	67	65	63	61	59	57	55	53	
30	64	61	62	61	61	61	61	59	57	55	53	51
25	64	61	59	57	56	56	57	57	57	55	53	51
20	64	61	59	57	56	54	53	53	53	53	52	51
15	64	61	59	57	56	54	53	52	50	49	48	47
10 & BELOW	64	61	59	57	56	54	53	52	50	48	45	43

Assumed Temperature Reduced Thrust (24K Derate)**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	88.3	88.6	89.1	89.6	90.2	90.8	91.5	92.2	92.7	93.1	93.3	93.4
70	89.1	89.5	89.4	89.3	89.6	90.1	90.8	91.6	92.0	92.5	92.6	92.7
65	90.0	90.4	90.3	90.2	90.2	90.1	90.2	90.9	91.4	91.8	91.9	92.1
60	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	12.1													
100	11.3	8.5												
90	11.7	8.9												
80	12.5	8.0	5.5											
70	11.3	8.4	5.9	5.6	4.0									
60	9.7	9.2	4.8	4.7	4.4	4.2	2.6							
50	7.8	7.9	5.3	3.5	3.3	3.6	3.0	2.7	1.2					
40		6.4	6.0	5.5	3.7	3.2	3.7	3.0	2.8	3.0	3.7			
30		4.6	4.6	4.6	4.5	4.3	4.2	4.0	4.1	4.0	3.9	3.8	3.7	
20			3.1	3.1	3.1	3.0	2.9	2.9	2.8	2.7	2.7	2.6	2.6	2.5
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.3	1.3
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)

Maximum Assumed Temperature (Table 1 of 3)

Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	54	54	52	50	48	47
20	51	51	52	50	48	47
15	47	47	48	49	48	47
10	43	44	44	45	46	46
5	43	42	42	42	43	43
0 & BELOW	43	42	42	42	41	41

Maximum Takeoff %N1 (Table 2 of 3)

Based on engine bleed for packs on and engine anti-ice off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	91.4					
55	90.8	91.5	92.3	93.2		
50	91.8	91.9	92.0	92.5	93.2	93.5
45	92.8	92.8	92.9	93.1	93.2	93.2
40	93.8	93.8	93.8	93.9	93.9	94.0
35	94.7	94.7	94.7	94.7	94.7	94.7
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5		99.7	100.2	100.3	100.0	99.8
0				99.8	100.1	100.3
MINIMUM ASSUMED TEMP (°C)	10	8	6	4	2	1

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	15.9										
100	15.9										
90	14.8	12.5									
80	13.4	12.5									
70	11.2	11.3	9.2								
60		9.8	9.2								
50		7.8	7.9	6.0							
40			6.4	6.0	4.6	4.5	4.4	4.3			
30			4.6	4.7	4.6	4.5	4.4	4.3	2.9	2.9	2.8
20				3.1	3.1	3.1	3.0	3.0	2.9	2.9	2.8
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4
0					0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS OR MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.80	.80	.80
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	94.8	95.0	93.7
55	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.1	94.3	93.0
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.4	93.6	92.4
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	92.7	92.9	91.7
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.4	92.2	91.0
35	94.0	94.3	94.5	94.3	94.0	94.0	93.0	93.3	92.7	91.6
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	94.1	93.5	92.5
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.9	94.4	93.4
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.6	95.1	94.3
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.3	95.9	95.1
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	97.1	96.7	96.0
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.9	97.4	96.8
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.7	98.3	97.8
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.4	99.0	98.6
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.3	99.9	99.6
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.5
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.3	100.9	100.5
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	99.5	100.0	99.7
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	98.6	99.2	98.8
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	97.8	98.3	98.0
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	96.9	97.5	97.1

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

*Dual bleed sources

Go-around %N1**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

Go-around %N1 - High Altitudes
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

AIRPORT OAT		TAT	AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	(°C)	10000	11000	12000	13000	14000	14500
37	99	40	99.1	99.7				
32	90	35	99.5	99.3	99.5	100.1	100.7	
27	81	30	100.3	100.2	100.2	100.0	100.0	100.2
22	72	25	100.8	100.7	100.7	100.6	100.6	100.5
17	63	20	101.0	101.0	101.0	100.9	100.8	100.8
12	54	15	101.2	101.2	101.2	101.2	101.1	101.0
7	45	10	100.9	101.4	101.5	101.4	101.3	101.2
2	36	5	100.2	100.9	101.6	101.6	101.5	101.5
-3	27	0	99.4	100.2	101.0	101.4	101.6	101.6
-8	18	-5	98.6	99.4	100.2	100.6	100.9	101.0
-13	9	-10	97.9	98.6	99.5	99.8	100.1	100.2
-17	1	-15	97.1	97.8	98.7	99.0	99.3	99.4
-22	-8	-20	96.3	97.0	97.9	98.2	98.5	98.6
-27	-17	-25	95.5	96.2	97.1	97.4	97.7	97.8
-32	-26	-30	94.7	95.4	96.2	96.6	96.8	97.0
-37	-35	-35	93.9	94.6	95.4	95.7	96.0	96.1
-42	-44	-40	93.0	93.8	94.6	94.9	95.1	95.3
-47	-53	-45	92.2	92.9	93.7	94.0	94.3	94.4
-52	-62	-50	91.4	92.1	92.9	93.2	93.4	93.5

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	0.9	0.9	0.9	1.0	1.0	1.0
ENGINE ANTI-ICE	0.0	-0.8	-1.5	-1.5	-1.5	-1.4

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Climb (280/.76)**Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)				
		90	110	130	150	170
40000	PITCH ATT	4.0	4.0	4.0		
	V/S (FT/MIN)	1800	1200	640		
30000	PITCH ATT	4.0	4.0	4.0	4.0	4.0
	V/S (FT/MIN)	2500	2000	1600	1300	970
20000	PITCH ATT	7.5	6.5	6.5	6.0	6.0
	V/S (FT/MIN)	4200	3300	2700	2300	1900
10000	PITCH ATT	11.0	9.5	9.0	8.5	8.0
	V/S (FT/MIN)	5600	4500	3700	3200	2700
SEA LEVEL	PITCH ATT	15.0	13.0	11.5	10.5	10.0
	V/S (FT/MIN)	6700	5400	4500	3900	3300

Cruise (.76/280)**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)				
		90	110	130	150	170
40000	PITCH ATT	2.0	3.0	3.5		
	%N1	82	85	89		
35000	PITCH ATT	1.5	2.0	2.5	3.0	3.5
	%N1	81	82	84	86	90
30000	PITCH ATT	1.0	1.5	2.0	2.5	3.0
	%N1	80	81	82	83	85
25000	PITCH ATT	1.0	1.5	2.0	2.5	3.0
	%N1	77	77	78	80	81
20000	PITCH ATT	1.0	1.5	2.0	2.5	3.5
	%N1	73	74	75	76	77
15000	PITCH ATT	1.0	1.5	2.0	3.0	3.5
	%N1	69	70	71	72	73

Descent (.76/280)**Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)				
		90	110	130	150	170
40000	PITCH ATT	-1.5	-0.5	0.0	0.5	1.0
	V/S (FT/MIN)	-2700	-2500	-2400	-2600	-2700
30000	PITCH ATT	-3.0	-2.0	-1.0	-0.5	0.5
	V/S (FT/MIN)	-3000	-2500	-2200	-2100	-1900
20000	PITCH ATT	-3.0	-2.0	-1.0	-0.5	0.5
	V/S (FT/MIN)	-2700	-2300	-2000	-1800	-1700
10000	PITCH ATT	-3.0	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2400	-2000	-1800	-1600	-1500
SEA LEVEL	PITCH ATT	-3.0	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2100	-1800	-1600	-1500	-1400

Flight With Unreliable Airspeed/ Turbulent Air Penetration
Altitude and/or vertical speed indications may also be unreliable.
Holding (VREF40 + 70)
Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)				
		90	110	130	150	170
10000	PITCH ATT	5.0	5.5	5.0	5.0	5.0
	%N1	52	57	61	65	68
5000	PITCH ATT	5.5	5.5	5.5	5.0	5.0
	%N1	49	53	57	61	64

Terminal Area (5000 FT)
%N1 for Level Flight

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 LB)				
		90	110	130	150	170
FLAPS 1 (GEAR UP) (VREF 40 + 50)	PITCH ATT	5.0	5.5	6.0	6.0	6.5
	%N1	51	56	60	63	67
FLAPS 5 (GEAR UP) (VREF 40 + 30)	PITCH ATT	5.5	6.0	6.5	6.5	7.0
	%N1	52	56	61	65	68
FLAPS 15 (GEAR DOWN) (VREF 40 + 20)	PITCH ATT	5.5	6.0	6.0	6.5	6.5
	%N1	59	65	69	73	76

Final Approach (1500 FT)
Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 LB)				
		90	110	130	150	170
FLAPS 15 (VREF15 + 10)	PITCH ATT	3.5	3.5	3.5	4.0	4.0
	%N1	43	47	50	53	56
FLAPS 30 (VREF30 + 10)	PITCH ATT	1.5	2.0	2.0	2.0	2.5
	%N1	46	50	54	57	60
FLAPS 40 (VREF40 + 10)	PITCH ATT	0.0	0.0	0.5	0.5	1.0
	%N1	52	56	61	64	67

Performance Inflight

All Engine

Chapter PI

Section 21

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
180	31700	-8	34100*	34100*	34100*	32700	31300
170	32900	-10	35500*	35500*	35500	34000	32500
160	34200	-13	36800*	36800*	36800	35200	33800
150	35600	-16	38000*	38000*	38000*	36600	35100
140	37000	-17	39400*	39400*	39400*	38000	36600
130	38500	-17	40700*	40700*	40700*	39600	38100
120	40200	-17	41000	41000	41000	41000	39800
110	41000	-17	41000	41000	41000	41000	41000
100	41000	-17	41000	41000	41000	41000	41000
90	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
180	31700	-2	32800*	32800*	32800*	32700	31300
170	32900	-5	34500*	34500*	34500*	34000	32500
160	34200	-8	35900*	35900*	35900*	35200	33800
150	35600	-11	37300*	37300*	37300*	36600	35100
140	37000	-12	38500*	38500*	38500*	38000	36600
130	38500	-12	39900*	39900*	39900*	39600	38100
120	40200	-12	41000	41000	41000	41000	39800
110	41000	-12	41000	41000	41000	41000	41000
100	41000	-12	41000	41000	41000	41000	41000
90	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
180	31700	4	28100*	28100*	28100*	28100*	28100*
170	32900	1	31700*	31700*	31700*	31700*	31700*
160	34200	-2	34400*	34400*	34400*	34400*	33800
150	35600	-5	36000*	36000*	36000*	36000*	35100
140	37000	-6	37400*	37400*	37400*	37400*	36600
130	38500	-6	38700*	38700*	38700*	38700*	38100
120	40200	-6	40100*	40100*	40100*	40100*	39800
110	41000	-6	41000	41000	41000	41000	41000
100	41000	-6	41000	41000	41000	41000	41000
90	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)									
		23	25	27	29	31	33	35	37	39	41
180	%N1	85.6	87.2	87.4	88.0	88.9	90.4				
	MACH	.775	.800	.800	.800	.800	.800				
	KIAS	340	338	324	311	297	284				
	FF/ENG	3758	3795	3599	3456	3355	3332				
170	%N1	85.2	86.8	86.9	87.2	87.9	88.9	91.3			
	MACH	.775	.800	.800	.800	.800	.800	.800			
	KIAS	340	338	324	311	297	284	272			
	FF/ENG	3700	3735	3516	3351	3226	3147	3185			
160	%N1	84.9	86.5	86.4	86.6	87.0	87.8	89.1	93.2		
	MACH	.775	.800	.800	.800	.800	.800	.800	.800		
	KIAS	340	338	324	311	297	284	272	260		
	FF/ENG	3656	3680	3453	3259	3114	3003	2955	3087		
150	%N1	84.6	86.2	86.0	86.0	86.3	86.8	87.8	90.0		
	MACH	.775	.800	.800	.800	.800	.800	.800	.800		
	KIAS	340	338	324	311	297	284	272	260		
	FF/ENG	3618	3632	3396	3189	3015	2884	2792	2796		
140	%N1	84.4	85.9	85.7	85.6	85.6	86.0	86.6	88.0	91.3	
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	
	KIAS	340	338	324	311	297	284	272	260	248	
	FF/ENG	3585	3593	3346	3130	2936	2781	2664	2607	2670	
130	%N1	84.2	85.7	85.4	85.2	85.1	85.2	85.6	86.7	88.8	93.0
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3560	3565	3305	3078	2875	2695	2557	2470	2449	2548
120	%N1	84.0	85.6	85.2	84.9	84.7	84.7	84.8	85.6	87.2	89.5
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3542	3545	3275	3035	2822	2633	2467	2358	2298	2291
110	%N1	84.0	85.5	85.0	84.6	84.3	84.2	84.2	84.7	85.9	87.6
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3533	3534	3255	3004	2778	2579	2403	2266	2182	2129
100	%N1	84.0	85.5	84.9	84.5	84.1	83.8	83.6	84.0	84.9	86.1
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3530	3531	3244	2985	2748	2535	2350	2201	2089	2011
90	%N1	84.0	85.5	84.9	84.4	83.9	83.5	83.2	83.4	84.1	85.0
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3532	3533	3242	2975	2729	2506	2308	2148	2024	1919

Shaded area approximates optimum altitude.

.80M Enroute Fuel and Time - Low Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
273	254	238	223	211	200	191	183	175	168	161
407	380	356	335	317	300	287	275	264	254	244
541	506	475	447	422	400	383	367	353	339	327
676	632	593	558	528	500	479	460	442	425	410
810	758	711	670	633	600	575	552	530	510	492
945	884	829	781	738	700	671	644	619	596	574
1079	1009	947	892	844	800	767	737	708	681	657
1214	1136	1065	1004	950	900	863	829	797	767	740
1348	1262	1184	1116	1055	1000	959	921	886	853	823
1482	1387	1302	1227	1160	1100	1055	1013	974	938	906
1616	1513	1420	1338	1266	1200	1151	1106	1063	1024	988
1751	1639	1538	1450	1371	1300	1247	1198	1152	1109	1070
1885	1765	1656	1561	1477	1400	1343	1290	1241	1195	1153
2020	1891	1775	1673	1582	1500	1439	1382	1330	1281	1236
2154	2017	1893	1784	1688	1600	1535	1475	1418	1367	1319
2289	2143	2011	1896	1793	1700	1631	1567	1507	1452	1402
2423	2269	2129	2007	1899	1800	1727	1659	1596	1538	1484
2557	2394	2247	2118	2004	1900	1823	1751	1685	1623	1567
2691	2520	2365	2230	2110	2000	1919	1844	1774	1709	1649

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.4	0:35	3.0	0:35	2.6	0:33	2.3	0:33	2.0	0:33
300	5.3	0:51	4.8	0:49	4.2	0:47	3.8	0:45	3.3	0:46
400	7.2	1:06	6.5	1:04	5.7	1:00	5.3	0:58	4.6	0:58
500	9.1	1:21	8.3	1:18	7.3	1:13	6.8	1:10	6.0	1:11
600	10.9	1:37	10.0	1:33	8.9	1:27	8.3	1:23	7.3	1:24
700	12.8	1:52	11.8	1:47	10.5	1:40	9.8	1:35	8.7	1:36
800	14.7	2:07	13.5	2:02	12.1	1:53	11.3	1:48	10.0	1:49
900	16.5	2:23	15.3	2:16	13.7	2:06	12.8	2:01	11.3	2:01
1000	18.4	2:38	17.0	2:31	15.2	2:20	14.3	2:13	12.6	2:14
1100	20.2	2:53	18.8	2:45	16.8	2:33	15.8	2:26	14.0	2:26
1200	22.1	3:09	20.5	3:00	18.4	2:46	17.3	2:38	15.3	2:39
1300	23.9	3:24	22.2	3:14	20.0	3:00	18.8	2:51	16.6	2:52
1400	25.8	3:40	24.0	3:29	21.6	3:13	20.3	3:03	17.9	3:04
1500	27.6	3:55	25.7	3:43	23.1	3:26	21.8	3:16	19.3	3:17
1600	29.5	4:10	27.5	3:58	24.7	3:39	23.2	3:28	20.6	3:29
1700	31.3	4:26	29.2	4:12	26.3	3:53	24.7	3:41	21.9	3:42
1800	33.2	4:41	30.9	4:27	27.9	4:06	26.2	3:53	23.2	3:54
1900	35.0	4:56	32.6	4:41	29.4	4:19	27.7	4:06	24.5	4:07
2000	36.9	5:12	34.4	4:56	31.0	4:33	29.2	4:18	25.9	4:20

.80M Enroute Fuel and Time - Low Altitudes
Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	0.1	0.0	0.0	0.1	0.2
10	0.0	-0.1	0.0	0.2	0.5
15	-0.1	-0.1	0.0	0.3	0.8
20	-0.1	-0.2	0.0	0.4	1.1
25	-0.1	-0.2	0.0	0.5	1.3
30	-0.1	-0.2	0.0	0.6	1.5
35	0.0	-0.2	0.0	0.6	1.7
40	0.0	-0.2	0.0	0.7	1.8

.80M Enroute Fuel and Time - High Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
523	493	465	441	420	400	383	367	352	339	326
779	735	696	660	629	600	575	551	530	510	492
1034	978	926	880	838	800	767	736	707	681	657
1290	1220	1156	1099	1047	1000	959	920	885	852	822
1546	1462	1386	1318	1256	1200	1151	1105	1062	1023	987
1801	1704	1616	1537	1466	1400	1343	1290	1240	1194	1152
2057	1947	1846	1756	1675	1600	1535	1474	1418	1366	1318
2312	2189	2076	1975	1884	1800	1727	1659	1595	1537	1483
2568	2431	2306	2194	2093	2000	1919	1843	1772	1708	1648
2824	2674	2536	2414	2303	2200	2111	2027	1950	1878	1813
3079	2916	2766	2633	2512	2400	2302	2212	2127	2049	1978
3335	3158	2996	2852	2721	2600	2495	2396	2305	2221	2144
3590	3400	3227	3071	2930	2800	2687	2581	2483	2392	2309
3845	3642	3457	3290	3139	3000	2879	2766	2660	2563	2474
4101	3885	3687	3509	3348	3200	3071	2950	2838	2734	2639
4356	4127	3917	3728	3558	3400	3263	3134	3015	2905	2804
4612	4369	4147	3948	3767	3600	3454	3319	3192	3076	2970
4867	4612	4377	4167	3976	3800	3646	3503	3370	3247	3135
5123	4854	4607	4386	4185	4000	3838	3687	3547	3418	3300
5379	5096	4837	4605	4394	4200	4030	3872	3725	3590	3465
5634	5339	5067	4824	4604	4400	4223	4057	3903	3761	3630
5890	5581	5297	5043	4813	4600	4415	4241	4080	3932	3796
6145	5823	5527	5262	5022	4800	4606	4426	4258	4103	3961
6401	6065	5758	5482	5231	5000	4798	4610	4435	4274	4126
6657	6308	5988	5701	5440	5200	4990	4795	4613	4446	4292
6912	6550	6218	5920	5649	5400	5183	4980	4791	4617	4457
7168	6792	6448	6139	5859	5600	5375	5164	4969	4788	4623
7423	7035	6678	6358	6068	5800	5566	5348	5146	4959	4788
7679	7277	6908	6577	6277	6000	5758	5533	5323	5130	4953

.80M Enroute Fuel and Time - High Altitudes
Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
400	4.5	0:59	4.2	0:59	3.9	0:59	3.7	1:00	3.6	1:00
600	7.1	1:24	6.6	1:24	6.2	1:25	5.9	1:26	5.7	1:26
800	9.7	1:49	9.0	1:50	8.5	1:51	8.1	1:52	7.8	1:52
1000	12.2	2:14	11.5	2:15	10.8	2:17	10.3	2:18	9.9	2:18
1200	14.8	2:40	13.9	2:41	13.1	2:42	12.4	2:44	11.9	2:44
1400	17.3	3:05	16.3	3:06	15.3	3:08	14.5	3:10	14.0	3:10
1600	19.9	3:30	18.7	3:32	17.6	3:34	16.6	3:35	16.0	3:36
1800	22.4	3:55	21.0	3:57	19.8	3:59	18.7	4:01	18.0	4:03
2000	25.0	4:21	23.4	4:23	22.0	4:25	20.9	4:27	20.0	4:29
2200	27.5	4:46	25.8	4:48	24.2	4:51	22.9	4:53	22.0	4:55
2400	30.1	5:11	28.1	5:14	26.4	5:17	25.0	5:19	24.0	5:21
2600	32.6	5:37	30.5	5:39	28.6	5:42	27.1	5:45	25.9	5:47
2800	35.1	6:02	32.8	6:05	30.8	6:08	29.1	6:11	27.9	6:13
3000	37.7	6:27	35.2	6:30	33.0	6:34	31.2	6:37	29.8	6:39
3200	40.2	6:52	37.5	6:56	35.2	6:59	33.2	7:03	31.7	7:05
3400	42.7	7:18	39.9	7:21	37.4	7:25	35.3	7:29	33.6	7:31
3600	45.2	7:43	42.2	7:47	39.5	7:51	37.3	7:55	35.5	7:57
3800	47.8	8:08	44.5	8:12	41.7	8:17	39.3	8:21	37.4	8:24
4000	50.3	8:33	46.9	8:38	43.9	8:42	41.3	8:47	39.3	8:50
4200	52.8	8:59	49.2	9:03	46.0	9:08	43.3	9:13	41.2	9:16
4400	55.3	9:24	51.5	9:29	48.2	9:34	45.3	9:39	43.1	9:42
4600	57.9	9:49	53.9	9:54	50.3	10:00	47.3	10:05	44.9	10:08
4800	60.4	10:14	56.2	10:20	52.5	10:25	49.3	10:31	46.8	10:34
5000	62.9	10:40	58.5	10:45	54.6	10:51	51.3	10:57	48.7	11:00
5200	65.4	11:05	60.8	11:11	56.8	11:17	53.3	11:23	50.5	11:26
5400	68.0	11:30	63.2	11:36	58.9	11:42	55.3	11:49	52.4	11:52
5600	70.5	11:55	65.5	12:02	61.1	12:08	57.2	12:15	54.2	12:18
5800	73.1	12:20	67.8	12:27	63.2	12:34	59.2	12:41	56.0	12:44
6000	75.6	12:46	70.2	12:53	65.3	12:59	61.2	13:07	57.9	13:11

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	0.0	0.0	0.0	0.5	1.8
10	-0.1	-0.1	0.0	1.0	3.0
15	-0.2	-0.2	0.0	1.5	4.2
20	-0.2	-0.2	0.0	1.9	5.2
25	-0.2	-0.3	0.0	2.3	6.1
30	-0.2	-0.3	0.0	2.6	7.0
35	-0.2	-0.3	0.0	2.9	7.7
40	-0.2	-0.3	0.0	3.2	8.3
45	-0.1	-0.3	0.0	3.4	8.8
50	-0.1	-0.3	0.0	3.5	9.2
55	0.0	-0.3	0.0	3.7	9.4
60	0.2	-0.2	0.0	3.8	9.6
65	0.3	-0.2	0.0	3.8	9.7
70	0.4	-0.1	0.0	3.8	9.6
75	0.6	0.0	0.0	3.8	9.4
80	0.8	0.1	0.0	3.7	9.2

.80M Wind-Altitude Trade

PRESSURE ALTITUDE (1000 FT)	CRUISE WEIGHT (1000 LB)								
	170	160	150	140	130	120	110	100	90
41				39	15	2	1	12	36
39			29	10	1	1	12	34	66
37	40	19	5	0	3	14	34	63	102
35	11	2	0	5	17	36	63	98	141
33	0	1	8	21	40	66	98	136	181
31	4	13	27	46	70	100	135	176	
29	19	34	53	76	104	137	174		
27	42	61	84	110	140	175			
25	70	92	118	146	178				

The above wind factor tables are for calculation of wind required to maintain present range capability at new pressure altitude, i.e., break-even wind.

Method:

1. Read wind factors for present and new altitudes from table.
2. Determine difference (new altitude wind factor minus present altitude wind factor); This difference may be negative or positive.
3. Break-even wind at new altitude is present altitude wind plus difference from step 2.

Descent**.80/280/250**

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (LB)	DISTANCE (NM)			
			LANDING WEIGHT (1000 LB)			
			80	100	120	140
41000	26	670	97	115	129	140
39000	25	670	93	110	124	134
37000	25	660	88	105	118	129
35000	24	650	85	100	114	124
33000	23	640	81	96	109	118
31000	22	630	77	91	102	111
29000	21	620	72	85	96	104
27000	20	600	68	80	90	98
25000	19	590	64	75	84	91
23000	18	570	59	69	78	84
21000	17	550	55	64	72	78
19000	16	540	51	59	66	71
17000	15	520	47	54	60	65
15000	14	490	42	49	54	58
10000	11	410	30	34	37	39
5000	7	320	18	19	20	21
1500	4	240	9	9	9	9

Allowances for a straight-in approach are included.

Holding
Flaps Up

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)								
		1500	5000	10000	15000	20000	25000	30000	35000	41000
170	%N1	60.9	64.0	67.7	71.9	76.0	80.4	84.5	89.6	
	KIAS	240	241	242	243	244	246	249	250	
	FF/ENG	2950	2900	2880	2860	2810	2800	2870	3030	
160	%N1	59.4	62.3	66.3	70.2	74.4	78.8	82.9	87.6	
	KIAS	232	233	234	235	237	239	241	244	
	FF/ENG	2800	2750	2720	2690	2650	2620	2680	2780	
150	%N1	57.9	60.5	64.8	68.5	72.8	77.2	81.4	85.7	
	KIAS	225	226	227	228	229	231	233	236	
	FF/ENG	2640	2590	2560	2530	2490	2440	2500	2560	
140	%N1	56.2	58.8	63.0	66.8	71.1	75.4	79.7	84.0	
	KIAS	218	218	219	220	221	223	225	227	
	FF/ENG	2490	2440	2400	2370	2340	2280	2320	2370	
130	%N1	54.5	57.0	61.0	65.0	69.2	73.5	77.8	82.1	90.8
	KIAS	209	210	211	212	213	214	216	218	217
	FF/ENG	2330	2280	2240	2210	2180	2120	2150	2180	2410
120	%N1	52.6	55.1	58.9	63.2	67.1	71.5	75.8	80.2	87.8
	KIAS	201	202	202	203	204	205	207	209	212
	FF/ENG	2180	2130	2090	2050	2020	1970	1970	2000	2150
110	%N1	50.6	53.1	56.8	61.0	64.9	69.4	73.6	78.1	85.3
	KIAS	192	193	194	194	195	196	198	200	203
	FF/ENG	2030	1970	1930	1900	1860	1860	1830	1850	1950
100	%N1	48.5	50.9	54.6	58.4	62.8	66.9	71.2	75.7	82.8
	KIAS	184	184	185	185	186	187	188	190	192
	FF/ENG	1890	1860	1810	1770	1730	1700	1680	1680	1750
90	%N1	46.2	48.6	52.2	55.9	60.3	64.2	68.7	73.1	80.3
	KIAS	178	178	178	178	178	178	178	179	182
	FF/ENG	1780	1720	1660	1610	1580	1550	1530	1510	1570

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight Advisory Information

Chapter PI Section 22

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 15

Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF15	ONE REV	NO REV
MAX MANUAL	2910	210/-140	60/90	-110	380	30	-30	60	-60	220	60	130
MAX AUTO	3650	190/-180	80/120	-140	460	0	0	80	-80	350	0	10
AUTOBRAKE 3	5090	310/-300	140/190	-230	760	0	0	140	-140	580	0	0
AUTOBRAKE 2	6570	440/-440	200/270	-310	1060	70	-90	190	-190	620	130	130
AUTOBRAKE 1	7340	530/-520	240/330	-370	1260	200	-220	210	-210	580	650	750

Good Reported Braking Action

MAX MANUAL	3950	220/-220	100/140	-180	630	90	-80	90	-60	300	210	480
MAX AUTO	4340	240/-240	110/150	-180	650	80	-70	100	-80	350	240	540
AUTOBRAKE 3	5100	310/-300	140/190	-230	780	20	-10	140	-140	580	10	50
AUTOBRAKE 2	6570	440/-440	200/270	-310	1060	70	-90	190	-190	620	130	130

Medium Reported Braking Action

MAX MANUAL	5430	350/-340	160/230	-290	1050	240	-190	140	-140	400	600	1490
MAX AUTO	5650	360/-350	170/230	-290	1040	210	-160	140	-140	460	600	1470
AUTOBRAKE 3	5760	370/-350	170/230	-290	1070	170	-110	150	-150	580	460	1380
AUTOBRAKE 2	6740	450/-450	210/270	-340	1210	150	-150	190	-190	620	260	680

Poor Reported Braking Action

MAX MANUAL	7130	510/-490	240/330	-440	1670	600	-390	190	-200	490	1330	3670
MAX AUTO	7440	510/-490	240/330	-430	1650	600	-390	190	-200	490	1340	3700
AUTOBRAKE 3	7440	510/-490	240/340	-430	1660	600	-360	190	-200	550	1330	3680
AUTOBRAKE 2	7610	540/-520	250/340	-450	1710	520	-350	210	-210	610	1030	3320

Reference distance is for sea level, standard day, no wind or slope, VREF15 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 170 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances
Flaps 30
Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF30	ONE REV	NO REV
MAX MANUAL	2840	190/-130	60/80	-100	370	30	-30	60	-60	210	60	120
MAX AUTO	3480	170/-170	80/100	-130	450	0	0	80	-80	340	0	10
AUTOBRAKE 3	4820	290/-280	130/170	-220	740	0	-10	130	-130	550	0	0
AUTOBRAKE 2	6190	400/-400	180/250	-300	1030	80	-110	170	-170	550	130	130
AUTOBRAKE 1	6890	480/-480	220/300	-350	1210	190	-200	200	-190	540	570	710

Good Reported Braking Action

MAX MANUAL	3830	210/-210	100/130	-180	620	90	-80	90	-90	300	200	440
MAX AUTO	4190	230/-220	100/150	-180	640	70	-60	90	-100	350	220	490
AUTOBRAKE 3	4830	290/-280	130/170	-220	750	20	-10	130	-130	550	10	50
AUTOBRAKE 2	6190	400/-400	180/250	-300	1030	80	-110	170	-170	550	130	130

Medium Reported Braking Action

MAX MANUAL	5200	330/-320	150/220	-280	1030	240	-190	130	-140	400	540	1320
MAX AUTO	5400	340/-330	160/210	-280	1020	210	-160	130	-140	460	540	1300
AUTOBRAKE 3	5500	340/-330	160/210	-290	1050	170	-120	140	-140	550	440	1250
AUTOBRAKE 2	6350	410/-410	190/250	-330	1170	150	-170	170	-180	550	260	630

Poor Reported Braking Action

MAX MANUAL	6750	470/-460	220/310	-420	1630	570	-370	180	-190	470	1170	3140
MAX AUTO	7040	470/-450	220/310	-420	1620	580	-370	180	-180	480	1180	3170
AUTOBRAKE 3	7040	480/-460	220/310	-420	1620	560	-350	180	-190	520	1170	3150
AUTOBRAKE 2	7190	490/-480	230/320	-440	1670	500	-350	190	-200	550	940	2850

Reference distance is for sea level, standard day, no wind or slope, VREF30 approach speed and two engine detent reverse thrust.
Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.
For max manual braking and manual speedbrakes, increase reference landing distance by 170 ft.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above threshold (1000 ft of air distance).
*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Normal Configuration Landing Distances****Flaps 40****Dry Runway**

	LANDING DISTANCE AND ADJUSTMENT (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF40	ONE REV	NO REV
MAX MANUAL	2820	170/-130	60/80	-100	370	40	-30	60	-60	220	60	120
MAX AUTO	3390	170/-160	80/100	-130	440	10	0	70	-70	340	0	20
AUTOBRAKE 3	4660	280/-270	130/170	-210	720	0	-10	120	-120	540	0	0
AUTOBRAKE 2	5980	380/-380	180/240	-290	1010	80	-100	170	-170	540	110	110
AUTOBRAKE 1	6670	460/-450	210/300	-340	1190	180	-190	190	-190	520	500	640

Good Reported Braking Action

MAX MANUAL	3780	210/-200	100/130	-170	620	90	-80	90	-90	310	190	420
MAX AUTO	4120	230/-220	100/150	-180	640	80	-60	90	-90	360	210	460
AUTOBRAKE 3	4670	280/-270	130/170	-210	740	20	-10	120	-120	540	10	50
AUTOBRAKE 2	5980	380/-380	180/280	-290	1010	80	-100	170	-170	540	110	110

Medium Reported Braking Action

MAX MANUAL	5100	330/-310	150/220	-280	1020	240	-190	130	-130	400	510	1230
MAX AUTO	5290	330/-320	150/220	-280	1020	210	-160	130	-130	460	500	1210
AUTOBRAKE 3	5370	340/-320	160/210	-280	1030	180	-120	140	-140	540	450	1200
AUTOBRAKE 2	6140	400/-390	180/260	-320	1150	160	-160	170	-170	540	240	600

Poor Reported Braking Action

MAX MANUAL	6590	460/-440	210/310	-420	1620	570	-370	170	-180	470	1090	2870
MAX AUTO	6870	460/-440	210/310	-410	1600	570	-360	170	-180	470	1100	2900
AUTOBRAKE 3	6870	470/-440	220/300	-420	1610	560	-350	170	-180	510	1090	2880
AUTOBRAKE 2	6990	480/-460	220/320	-430	1650	510	-340	190	-190	530	880	2620

Reference distance is for sea level, standard day, no wind or slope, VREF40 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 170 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Dry Runway

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	3650	360/-210	85/115	-130	570	45	-40	245
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	4540	265/-270	120/165	-235	850	130	-115	365
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	2920	180/-145	65/85	-110	380	40	-35	260
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	2860	165/-140	60/85	-110	375	40	-35	270
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	2850	155/-140	60/90	-110	375	40	-35	285
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	3060	150/-155	70/95	-125	430	45	-40	235
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	3990	205/-210	95/130	-165	560	90	-85	430
LEADING EDGE FLAPS TRANSIT	VREF15+15	3030	185/-145	65/90	-110	385	35	-30	210
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	2710	170/-130	55/75	-105	360	30	-30	205
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	2650	160/-130	55/70	-100	345	30	-25	215

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance Dry Runway

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	2690	165/-125	55/75	-100	355	30	-25	195
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	2690	165/-125	55/75	-100	355	30	-25	195
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	2710	190/-130	60/80	-100	370	30	-30	210
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	2690	165/-125	55/75	-100	355	30	-25	195
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	3140	210/-165	70/95	-115	390	35	-30	210
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	2710	190/-130	60/80	-100	370	30	-30	210
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	2690	165/-125	55/75	-100	355	30	-25	195
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	3140	210/-165	70/95	-115	390	35	-30	210
TRAILING EDGE FLAPS UP	VREF40+40	3310	255/-190	80/105	-120	410	35	-35	220

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABV/BLW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	5070	265/-275	140/190	-200	710	105	-95	275
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	5030	315/-315	140/190	-270	1035	195	-160	395
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	4170	255/-255	115/150	-185	675	110	-100	385
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	4040	240/-240	110/140	-185	665	110	-95	390
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	3990	240/-240	105/150	-185	665	110	-95	405
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	3840	225/-225	100/130	-175	630	90	-80	310
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	4915	280/-280	125/180	-220	750	155	-135	520
LEADING EDGE FLAPS TRANSIT	VREF15+15	4240	240/-245	115/150	-185	660	95	-85	300
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	3850	225/-225	95/130	-175	645	95	-85	305
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	3720	215/-215	90/125	-175	635	90	-80	310

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/ BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	3710	215/-215	95/120	-170	615	80	-70	280
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	3710	215/-215	95/120	-170	615	80	-70	280
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	3620	210/-210	100/130	-180	620	90	-80	300
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	3710	215/-215	95/120	-170	615	80	-70	280
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	4340	230/-240	115/160	-185	660	90	-85	280
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	3620	210/-210	100/130	-180	620	90	-80	300
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	3710	215/-215	95/120	-170	615	85	-70	280
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	4340	230/-240	115/160	-185	660	90	-85	280
TRAILING EDGE FLAPS UP	VREF40+40	4580	240/-250	125/170	-190	675	95	-85	270

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance
Medium Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	7100	440/-450	230/310	-320	1185	265	-225	385
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	6310	445/-430	190/270	-400	1615	435	-320	455
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	5650	405/-395	180/230	-295	1110	265	-220	500
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	5400	380/-370	170/230	-290	1090	255	-210	490
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	5290	370/-360	165/250	-290	1080	255	-210	490
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	5190	355/-350	155/220	-275	1050	220	-185	405
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	6770	445/-435	200/285	-340	1210	340	-290	645
LEADING EDGE FLAPS TRANSIT	VREF15+15	5750	385/-380	180/240	-290	1090	235	-195	400
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	5440	370/-370	160/220	-295	1110	260	-215	430
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	5180	345/-345	150/205	-285	1085	250	-205	420

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Medium Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/ BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	5010	340/-330	145/210	-270	1025	205	-170	375
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	5010	340/-330	145/210	-270	1025	205	-170	375
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	4880	330/-320	100/130	-180	620	90	-80	400
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	5010	340/-330	145/210	-270	1025	205	-170	375
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	5940	375/-375	185/260	-295	1100	230	-195	375
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	4880	330/-320	100/130	-180	620	90	-80	400
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	5010	340/-330	145/210	-270	1025	205	-170	375
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	5940	375/-375	185/260	-295	1100	230	-195	375
TRAILING EDGE FLAPS UP	VREF40+40	6330	395/-400	200/270	-305	1125	240	-205	370

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Poor Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	9360	660/-655	335/470	-485	1875	610	-460	485
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	8300	640/-615	260/400	-655	3000	1530	-725	505
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	7280	580/-550	255/330	-445	1750	580	-425	585
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	6910	540/-515	235/340	-430	1715	555	-405	560
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	6710	520/-495	225/370	-425	1695	545	-395	550
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	6710	515/-490	225/320	-415	1670	500	-365	490
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	8700	640/-610	280/415	-500	1855	690	-525	725
LEADING EDGE FLAPS TRANSIT	VREF15+15	7420	555/-535	250/360	-435	1725	520	-385	475
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	7410	560/-550	240/330	-465	1835	655	-470	540
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	6960	515/-505	220/310	-450	1780	615	-435	510

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

** ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 120000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 120000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	6470	485/-465	210/300	-405	1630	465	-345	450
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	6470	485/-465	210/300	-405	1630	465	-345	450
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	6290	470/-460	220/310	-420	1,630	570	-370	470
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	6470	485/-465	210/300	-405	1630	465	-345	450
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	7710	550/-540	265/370	-440	1740	520	-390	455
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	6290	470/-460	220/310	-420	1630	570	-370	470
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	6470	485/-465	210/300	-405	1630	465	-345	450
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	7710	550/-540	265/370	-440	1740	520	-390	455
TRAILING EDGE FLAPS UP	VREF40+40	8280	585/-575	285/400	-455	1785	550	-410	455

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule

Reference Brake Energy Per Brake (Millions of Foot Pounds)

		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
		80			100			120			140			160			180		
WEIGHT (1000 LB)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10
180	0	15.5	17.5	19.7	23.3	26.2	29.8	32.2	36.5	41.6	42.2	48.0	55.2	53.2	60.7	70.3	63.3	72.5	84.7
	10	16.0	18.0	20.3	24.0	27.1	30.7	33.2	37.6	43.0	43.6	49.5	57.0	54.9	62.6	72.6	65.3	74.8	87.4
	15	16.3	18.3	20.6	24.4	27.5	31.2	33.7	38.2	43.6	44.2	50.3	57.8	55.7	63.6	73.7	66.3	76.0	88.7
	20	16.5	18.6	21.0	24.7	27.9	31.7	34.3	38.8	44.3	44.9	51.0	58.7	56.5	64.5	74.8	67.3	77.1	90.0
	30	17.0	19.1	21.5	25.4	28.7	32.6	35.2	39.9	45.5	46.2	52.5	60.3	58.1	66.3	76.9	69.2	79.2	92.5
	40	17.1	19.2	21.7	25.6	28.9	32.9	35.6	40.3	46.1	46.8	53.2	61.3	59.1	67.5	78.5	70.5	81.0	94.9
160	0	17.1	19.3	21.7	25.7	29.1	33.1	35.8	40.7	46.6	47.3	53.9	62.3	59.9	68.7	80.1	71.8	82.7	97.2
	10	14.3	16.0	18.1	21.2	23.9	27.1	29.2	33.1	37.7	38.2	43.4	49.8	48.0	54.7	63.2	58.0	66.3	77.1
	15	14.7	16.6	18.7	21.9	24.7	28.0	30.2	34.1	38.9	39.5	44.8	51.3	49.6	56.5	65.2	59.8	68.4	79.5
	20	15.0	16.8	18.9	22.2	25.1	28.4	30.6	34.7	39.5	40.1	45.5	52.1	50.3	57.3	66.2	60.7	69.4	80.7
	30	15.2	17.1	19.2	22.6	25.5	28.8	31.1	35.2	40.1	40.7	46.1	52.9	51.1	58.2	67.2	61.6	70.4	81.9
	40	15.6	17.6	19.8	23.2	26.2	29.6	32.0	36.2	41.2	41.8	47.4	54.4	52.5	59.8	69.1	63.4	72.4	84.2
140	0	15.7	17.7	19.9	23.4	26.4	29.9	32.3	36.5	41.7	42.3	48.1	55.2	53.3	60.8	70.4	64.5	73.9	86.2
	10	15.7	17.7	19.9	23.5	26.5	30.1	32.5	36.8	42.1	42.7	48.6	56.0	54.0	61.7	71.6	65.5	75.2	88.1
	15	13.0	14.6	16.5	19.2	21.6	24.4	26.2	29.6	33.7	34.1	38.7	44.2	42.8	48.6	56.0	52.1	59.5	68.9
	20	13.5	15.1	17.0	19.8	22.3	25.2	27.1	30.6	34.8	35.2	39.9	45.6	44.2	50.2	57.8	53.8	61.4	71.1
	30	13.7	15.4	17.3	20.1	22.7	25.6	27.5	31.1	35.3	35.8	40.5	46.3	44.9	51.0	58.7	54.6	62.3	72.2
	40	13.9	15.6	17.6	20.4	23.0	26.0	27.9	31.6	35.9	36.3	41.1	47.0	45.5	51.7	59.5	55.5	63.2	73.2
120	0	14.3	16.0	18.0	21.0	23.6	26.7	28.7	32.4	36.9	37.3	42.3	48.4	46.8	53.2	61.2	57.0	65.0	75.3
	10	14.3	16.1	18.1	21.1	23.8	26.9	29.0	32.7	37.3	37.7	42.8	49.0	47.4	54.0	62.2	57.9	66.2	76.9
	15	14.3	16.1	18.2	21.2	23.9	27.1	29.1	32.9	37.5	38.0	43.2	49.6	47.9	54.7	63.2	58.7	67.3	78.4
	20	11.8	13.3	14.9	17.2	19.3	21.8	23.3	26.2	29.8	30.0	34.0	38.7	37.4	42.5	48.7	45.4	51.7	59.6
	30	12.2	13.7	15.4	17.7	19.9	22.5	24.0	27.1	30.7	31.0	35.1	40.0	38.6	43.8	50.2	46.9	53.3	61.5
	40	12.4	13.9	15.6	18.0	20.2	22.9	24.4	27.5	31.2	31.5	35.6	40.6	39.2	44.5	51.0	47.6	54.2	62.4
100	0	12.6	14.1	15.9	18.3	20.6	23.2	24.7	27.9	31.7	32.0	36.1	41.2	39.8	45.2	51.8	48.3	55.0	63.4
	10	12.9	14.5	16.3	18.8	21.1	23.9	25.4	28.7	32.6	32.8	37.2	42.4	40.9	46.4	53.2	49.7	56.5	65.1
	15	13.0	14.6	16.4	18.9	21.3	24.0	25.6	28.9	32.9	33.2	37.6	42.9	41.4	47.0	54.0	50.4	57.4	66.3
	20	13.0	14.6	16.4	18.9	21.3	24.1	25.7	29.1	33.1	33.4	37.8	43.3	41.8	47.5	54.7	51.0	58.2	67.4
	30	10.6	11.9	13.4	15.1	17.0	19.2	20.3	22.8	25.9	25.9	29.3	33.3	32.1	36.3	41.5	38.7	43.9	50.4
	40	10.9	12.3	13.8	15.6	17.6	19.8	20.9	23.6	26.7	26.8	30.2	34.4	33.1	37.5	42.8	40.0	45.3	52.0
90	0	11.1	12.5	14.0	15.9	17.9	20.1	21.2	23.9	27.1	27.2	30.7	34.9	33.6	38.1	43.5	40.6	46.0	52.8
	10	11.3	12.7	14.2	16.1	18.1	20.4	21.6	24.3	27.5	27.6	31.2	35.4	34.1	38.6	44.1	41.2	46.7	53.6
	15	11.6	13.0	14.6	16.6	18.6	21.0	22.2	25.0	28.3	28.4	32.0	36.4	35.1	39.7	45.4	42.3	48.0	55.1
	20	11.6	13.1	14.7	16.6	18.7	21.1	22.3	25.2	28.5	28.6	32.3	36.8	35.4	40.2	45.9	42.8	48.7	56.0
	30	11.6	13.1	14.7	16.7	18.8	21.2	22.4	25.3	28.7	28.7	32.5	37.1	35.7	40.5	46.4	43.2	49.2	56.7
	40	10.0	11.3	12.6	14.1	15.9	17.9	18.8	21.1	23.9	23.9	27.0	30.6	29.4	33.3	37.9	35.4	40.1	45.9
80	0	10.3	11.6	13.0	14.6	16.4	18.5	19.4	21.8	24.7	24.7	27.8	31.6	30.4	34.3	39.1	36.5	41.4	47.4
	10	10.5	11.8	13.3	14.8	16.7	18.8	19.7	22.2	25.0	25.0	28.3	32.1	30.8	34.9	39.7	37.1	42.0	48.1
	15	10.7	12.0	13.5	15.0	16.9	19.1	20.0	22.5	25.4	25.4	28.7	32.5	31.3	35.4	40.3	37.6	42.6	48.8
	20	11.0	12.3	13.8	15.5	17.4	19.6	20.5	23.1	26.1	26.1	29.5	33.5	32.2	36.4	41.5	38.7	43.8	50.2
	30	11.0	12.4	13.9	15.5	17.5	19.7	20.7	23.3	26.3	26.3	29.7	33.8	32.5	36.8	42.0	39.1	44.4	50.9
	40	11.0	12.4	13.9	15.6	17.5	19.8	20.7	23.4	26.5	26.4	29.9	34.0	32.7	37.1	42.3	39.4	44.8	51.5

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule

Adjusted Brake Energy Per Brake (Millions of Foot Pounds)

No Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.5	15.8	24.6	33.8	43.5	53.5	63.6	73.9	84.2
	MAX AUTO	7.3	15.0	23.2	31.9	41.2	51.0	61.3	72.2	83.7
	AUTOBRAKE 3	7.0	14.2	21.8	29.7	38.1	47.1	56.7	67.1	78.3
	AUTOBRAKE 2	6.6	13.3	20.2	27.3	34.7	42.6	51.0	59.9	69.6
	AUTOBRAKE 1	6.3	12.4	18.6	24.9	31.6	38.6	46.2	54.4	63.5

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	6.9	14.5	22.7	31.4	40.4	49.7	59.3	68.9	78.5
	MAX AUTO	6.0	12.6	19.8	27.6	36.0	45.1	54.8	65.3	76.5
	AUTOBRAKE 3	4.5	9.5	15.1	21.3	28.1	35.6	43.7	52.5	62.0
	AUTOBRAKE 2	2.6	5.9	9.7	14.1	19.1	24.7	31.0	37.9	45.4
	AUTOBRAKE 1	1.8	3.8	6.3	9.1	12.5	16.4	21.0	26.3	32.5

Cooling Time (Minutes) - Category F Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category M Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE	
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE	
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION			FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	34.2	45.9				
GROUND										

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule - High Altitudes
Reference Brake Energy Per Brake (Millions of Foot Pounds)

		WIND CORRECTED BRAKES ON SPEED (KIAS)*															
		60				100				140				180			
WEIGHT (1000 LB)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)															
		10	12	14	14.5	10	12	14	14.5	10	12	14	14.5	10	12	14	14.5
180	0	11.5	12.1	12.7	12.9	29.8	31.4	33.3	33.8	55.2	58.7	62.8	63.9	84.7			
	10	11.9	12.5	13.1	13.3	30.7	32.4	34.3	34.9	57.0	60.6	64.8	66.0	87.4			
	15	12.1	12.6	13.3	13.5	31.2	32.9	34.9	35.4	57.8	61.6	65.8	67.0	88.7			
	20	12.2	12.8	13.5	13.7	31.7	33.4	35.4	36.0	58.7	62.5	66.8	68.0	90.0			
	30	12.6	13.2	13.9	14.1	32.6	34.4	36.4	37.0	60.3	64.2	68.6	69.9	92.5			
	40	12.6	13.3	13.9	14.1	32.9	34.7	36.8	37.4	61.3	65.4	70.0	71.3	94.9			
	50	12.6	13.3	13.9	14.1	33.1	34.9	37.0	37.6	62.3	66.4	71.2	72.5	97.2			
160	0	10.7	11.2	11.8	12.0	27.1	28.6	30.2	30.7	49.8	52.9	56.4	57.4	77.1	82.6	89.0	
	10	11.0	11.6	12.2	12.4	28.0	29.5	31.2	31.7	51.3	54.6	58.2	59.2	79.5	85.2	91.8	
	15	11.2	11.8	12.4	12.6	28.4	30.0	31.7	32.2	52.1	55.4	59.1	60.1	80.7	86.5	93.2	
	20	11.4	11.9	12.6	12.8	28.8	30.4	32.2	32.7	52.9	56.2	60.0	61.0	81.9	87.8	94.5	
	30	11.7	12.3	12.9	13.1	29.6	31.3	33.1	33.6	54.4	57.8	61.7	62.8	84.2	90.2	97.2	
	40	11.8	12.3	13.0	13.2	29.9	31.5	33.4	33.9	55.2	58.7	62.7	63.8	86.2	92.5	99.8	
	50	11.8	12.3	13.0	13.2	30.1	31.7	33.6	34.1	56.0	59.6	63.7	64.9	88.1	94.7	102.4	
140	0	9.9	10.4	10.9	11.1	24.4	25.8	27.2	27.6	44.2	46.9	49.9	50.8	68.9	73.6	79.1	80.6
	10	10.2	10.7	11.3	11.4	25.2	26.6	28.1	28.5	45.6	48.4	51.6	52.5	71.1	76.0	81.6	83.2
	15	10.4	10.9	11.4	11.6	25.6	27.0	28.5	28.9	46.3	49.2	52.3	53.2	72.2	77.1	82.9	84.5
	20	10.5	11.1	11.6	11.8	26.0	27.4	29.0	29.4	47.0	49.9	53.1	54.0	73.2	78.3	84.1	85.7
	30	10.8	11.4	11.9	12.1	26.7	28.2	29.8	30.2	48.4	51.3	54.6	55.5	75.3	80.5	86.4	88.1
	40	10.9	11.4	12.0	12.2	26.9	28.4	30.0	30.5	49.0	52.0	55.4	56.4	76.9	82.3	88.5	90.3
	50	10.9	11.4	12.0	12.2	27.1	28.5	30.2	30.7	49.6	52.7	56.2	57.2	78.4	84.0	90.5	92.4
120	0	9.1	9.6	10.0	10.2	21.8	23.0	24.2	24.6	38.7	41.0	43.6	44.3	59.6	63.5	68.0	69.3
	10	9.4	9.9	10.4	10.5	22.5	23.7	25.0	25.4	40.0	42.3	45.0	45.7	61.5	65.6	70.2	71.5
	15	9.6	10.0	10.5	10.7	22.9	24.1	25.4	25.8	40.6	43.0	45.7	46.4	62.4	66.6	71.3	72.6
	20	9.7	10.2	10.7	10.9	23.2	24.4	25.8	26.2	41.2	43.6	46.4	47.1	63.4	67.5	72.3	73.7
	30	10.0	10.5	11.0	11.2	23.9	25.1	26.5	26.9	42.4	44.8	47.6	48.4	65.1	69.4	74.3	75.7
	40	10.0	10.5	11.0	11.2	24.0	25.3	26.7	27.1	42.9	45.4	48.3	49.1	66.3	70.8	75.9	77.3
	50	10.0	10.5	11.0	11.2	24.1	25.4	26.8	27.2	43.3	45.9	48.8	49.6	67.4	72.0	77.3	78.8
100	0	8.4	8.8	9.3	9.4	19.2	20.2	21.3	21.6	33.3	35.2	37.3	37.9	50.4	53.6	57.2	58.2
	10	8.7	9.1	9.6	9.7	19.8	20.8	22.0	22.3	34.4	36.3	38.5	39.1	52.0	55.3	59.0	60.0
	15	8.8	9.3	9.7	9.9	20.1	21.2	22.3	22.6	34.9	36.9	39.1	39.7	52.8	56.1	59.9	61.0
	20	9.0	9.4	9.9	10.0	20.4	21.5	22.7	23.0	35.4	37.4	39.7	40.3	53.6	57.0	60.8	61.9
	30	9.2	9.7	10.2	10.3	21.0	22.1	23.3	23.6	36.4	38.5	40.8	41.5	55.1	58.6	62.5	63.6
	40	9.3	9.7	10.2	10.3	21.1	22.2	23.5	23.8	36.8	38.9	41.3	42.0	56.0	59.5	63.6	64.7
	50	9.3	9.7	10.2	10.3	21.2	22.3	23.5	23.9	37.1	39.2	41.6	42.3	56.7	60.4	64.6	65.8
90	0	8.1	8.5	8.9	9.1	17.9	18.8	19.8	20.1	30.6	32.3	34.2	34.7	45.9	48.7	51.9	52.8
	10	8.4	8.8	9.2	9.4	18.5	19.4	20.5	20.8	31.6	33.3	35.3	35.9	47.4	50.3	53.5	54.4
	15	8.5	8.9	9.4	9.5	18.8	19.7	20.8	21.1	32.1	33.8	35.8	36.4	48.1	51.0	54.4	55.3
	20	8.6	9.1	9.5	9.6	19.1	20.0	21.1	21.4	32.5	34.4	36.4	37.0	48.8	51.8	55.2	56.1
	30	8.9	9.3	9.8	9.9	19.6	20.6	21.7	22.0	33.5	35.3	37.4	38.0	50.2	53.2	56.7	57.7
	40	8.9	9.3	9.8	10.0	19.7	20.7	21.8	22.1	33.8	35.7	37.8	38.4	50.9	54.0	57.6	58.6
	50	8.9	9.3	9.8	9.9	19.8	20.8	21.9	22.2	34.0	35.9	38.1	38.7	51.5	54.7	58.4	59.5

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
AUTOBRAKE 1		6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
AUTOBRAKE 1		1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

Cooling Time (Minutes) - Category F Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category M Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE	
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE	
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION			FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	34.2	45.9				
GROUND										

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Intentionally
Blank

Performance Inflight

Engine Inoperative

Chapter PI

Section 23

ENGINE INOP

Initial Max Continuous %N1

Based on .80M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.9	96.6	96.4	96.2	96.0	95.5	95.1	94.8	94.2
15	97.5	97.2	97.0	96.8	96.7	96.3	95.8	95.6	95.0
10	98.1	97.9	97.5	97.4	97.4	97.0	96.6	96.4	95.9
5	98.1	98.6	98.4	98.1	98.1	97.8	97.4	97.2	96.7
0	97.3	98.5	99.2	99.0	98.9	98.6	98.2	98.0	97.7
-5	96.5	97.8	98.9	99.8	99.7	99.3	99.0	98.8	98.5
-10	95.8	97.0	98.2	99.4	100.5	100.2	99.9	99.7	99.5
-15	95.0	96.2	97.4	98.6	99.2	101.0	100.8	100.6	100.4
-20	94.2	95.4	96.6	97.8	99.1	100.2	100.8	100.6	100.4
-25	93.4	94.6	95.8	97.0	98.3	99.4	100.0	99.8	99.6
-30	92.6	93.8	95.0	96.2	97.5	98.6	99.1	98.9	98.7
-35	91.7	93.0	94.1	95.3	96.6	97.7	98.3	98.1	97.9
-40	90.9	92.2	93.3	94.5	95.8	96.9	97.4	97.2	97.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

ENGINE INOP

**Max Continuous %N1
37000 FT to 29000 FT Pressure Altitudes**

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.6	97.6	98.5	99.4	100.2	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.1	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.5	97.4	98.3	99.2	100.1	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.3	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.4	98.3	99.2	100.0	100.8	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.3	98.2	99.1	100.0	100.9	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.1	98.0	98.9	99.7	100.6	101.5	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	98.1	99.0	99.9	100.8	101.6	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.1	99.9	100.1	99.1	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

ENGINE INOP**Max Continuous %N1****27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1	
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4	
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5	
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6	
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8	
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4	
25000 FT PRESS ALT													TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2	
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2	
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7	
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9	
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2	
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2	
24000 FT PRESS ALT													TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8	
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7	
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3	
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5	
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8	
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6	
22000 FT PRESS ALT													TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20	
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8	
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8	
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5	
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1	
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6	
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1	
20000 FT PRESS ALT													TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20	
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8	
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8	
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6	
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3	
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9	
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

ENGINE INOP

**Max Continuous %N1
18000 FT to 12000 FT Pressure Altitudes**

18000 FT PRESS ALT				TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25
160	.34	98.5	99.3	100.2	101.0	101.8	102.6	101.6	100.3	99.2	98.1	97.0	95.9
200	.42	98.7	99.6	100.4	101.2	102.0	102.8	103.1	101.7	100.4	99.3	98.3	97.3
240	.51	97.8	98.7	99.5	100.3	101.1	101.9	102.7	102.5	101.1	99.9	99.0	98.1
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6
16000 FT PRESS ALT				TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25
160	.33	97.1	98.0	98.8	99.6	100.4	101.2	101.6	100.3	99.1	98.1	97.1	96.1
200	.41	98.0	98.8	99.6	100.4	101.2	102.0	102.8	102.5	101.3	100.2	99.3	98.3
240	.49	97.1	97.9	98.7	99.5	100.3	101.1	101.9	102.7	101.8	100.5	99.6	98.7
280	.57	95.6	96.4	97.2	98.0	98.8	99.6	100.3	101.1	101.8	100.9	99.8	99.0
320	.64	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.2	99.4
360	.72	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.9	99.6
14000 FT PRESS ALT				TAT (°C)									
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30
160	.31	96.6	97.4	98.2	99.0	99.8	100.6	100.4	99.1	98.0	97.1	96.2	95.3
200	.39	97.1	97.9	98.7	99.5	100.3	101.1	101.8	101.5	101.0	100.1	99.3	98.4
240	.47	96.6	97.4	98.2	99.0	99.8	100.6	101.3	101.8	101.1	100.3	99.5	98.7
280	.54	95.5	96.3	97.1	97.8	98.6	99.4	100.1	100.9	101.0	100.1	99.2	98.5
320	.62	94.1	94.9	95.7	96.5	97.2	98.0	98.7	99.5	100.2	100.3	99.5	98.8
360	.69	92.2	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.6	99.0
12000 FT PRESS ALT				TAT (°C)									
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.30	96.3	97.0	97.8	98.6	99.4	100.1	99.3	98.1	97.1	96.3	95.4	94.5
200	.38	97.1	97.9	98.7	99.5	100.3	101.0	101.5	100.8	99.8	99.0	98.2	97.3
240	.45	96.5	97.3	98.0	98.8	99.6	100.3	101.1	101.0	100.1	99.4	98.6	97.9
280	.52	95.5	96.3	97.0	97.8	98.6	99.3	100.0	100.8	100.3	99.4	98.6	98.0
320	.60	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	99.7	98.9	98.2
360	.67	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.4	99.1	98.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

ENGINE INOP

Max Continuous %N1

10000 FT to 1000 FT Pressure Altitudes

10000 FT PRESS ALT		TAT (°C)											
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT		TAT (°C)											
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 LB)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
180	174	266	19900	18700	17400
170	164	258	21200	20200	19000
160	154	251	22500	21600	20500
150	145	243	23900	23100	22000
140	134	235	25600	24600	23600
130	125	227	27600	26600	25400
120	115	218	29600	28700	27600
110	106	209	31500	30700	29700
100	96	199	33400	32700	31800
90	87	189	35500	34800	33900
80	77	178	37800	37100	36300

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown/LRC Cruise Range Capability****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
138	128	120	112	106	100	95	90	86	82	79
275	256	239	225	212	200	190	180	172	164	157
413	384	359	337	317	300	284	270	258	246	236
551	512	479	449	423	400	379	361	344	328	314
688	640	598	561	529	500	474	451	429	410	393
826	768	718	674	635	600	569	541	515	492	471
964	896	838	786	741	700	664	631	601	574	549
1102	1025	958	899	846	800	758	721	687	656	628
1240	1153	1077	1011	952	900	853	811	773	738	706
1378	1281	1197	1123	1058	1000	948	901	859	820	785
1517	1410	1317	1236	1164	1100	1043	991	944	902	863
1655	1539	1437	1348	1270	1200	1137	1081	1030	984	941
1794	1667	1557	1461	1376	1300	1232	1171	1116	1065	1019
1933	1796	1677	1573	1482	1400	1327	1261	1201	1147	1098
2071	1925	1798	1686	1588	1500	1422	1351	1287	1229	1176
2211	2054	1918	1799	1694	1600	1516	1441	1373	1310	1254
2350	2183	2038	1911	1800	1700	1611	1531	1458	1392	1332
2489	2312	2159	2024	1906	1800	1706	1621	1544	1474	1410

Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 LB)										TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 LB)										
	90	100	110	120	130	140	150	160	170	180	
100	0.8	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.2	0:16
200	1.7	1.8	1.9	2.0	2.1	2.2	2.4	2.5	2.6	2.7	0:33
300	2.7	2.8	3.0	3.2	3.4	3.6	3.8	4.1	4.2	4.5	0:49
400	3.6	3.9	4.1	4.5	4.7	5.0	5.3	5.6	5.9	6.2	1:06
500	4.5	4.8	5.2	5.6	5.9	6.3	6.7	7.1	7.4	7.8	1:22
600	5.3	5.8	6.2	6.7	7.1	7.6	8.0	8.5	8.9	9.4	1:39
700	6.2	6.7	7.2	7.8	8.3	8.9	9.4	9.9	10.4	11.0	1:55
800	7.0	7.7	8.3	8.9	9.5	10.1	10.7	11.4	11.9	12.6	2:12
900	7.9	8.6	9.3	10.0	10.7	11.4	12.0	12.8	13.4	14.1	2:28
1000	8.7	9.5	10.3	11.1	11.8	12.6	13.3	14.1	14.9	15.7	2:45
1100	9.6	10.4	11.2	12.1	13.0	13.8	14.6	15.5	16.3	17.2	3:01
1200	10.4	11.3	12.2	13.2	14.1	15.0	15.9	16.9	17.8	18.7	3:18
1300	11.2	12.2	13.2	14.2	15.2	16.2	17.2	18.2	19.2	20.2	3:35
1400	12.0	13.1	14.2	15.3	16.3	17.4	18.5	19.6	20.6	21.7	3:51
1500	12.8	14.0	15.1	16.3	17.4	18.6	19.7	20.9	22.0	23.2	4:08
1600	13.6	14.8	16.1	17.3	18.5	19.8	21.0	22.2	23.4	24.7	4:25
1700	14.4	15.7	17.0	18.3	19.6	20.9	22.2	23.5	24.8	26.2	4:42
1800	15.2	16.5	17.9	19.3	20.7	22.1	23.4	24.9	26.2	27.6	4:59

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at Long Range Cruise speed.

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
180	17700	16100	14200
170	19400	17900	16100
160	20900	19800	18000
150	22300	21200	20000
140	23700	22700	21500
130	25400	24300	23200
120	27700	26400	24900
110	29900	29000	27500
100	32000	31200	30100
90	34200	33400	32400

With engine anti-ice on, decrease altitude capability by 1100 ft.
With engine and wing anti-ice on, decrease altitude capability by 4400 ft .

ENGINE INOP**MAX CONTINUOUS THRUST****Long Range Cruise Control**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
180	%N1	89.3	93.0	95.1	97.9						
	MACH	.539	.581	.600	.621						
	KIAS	299	294	292	291						
	FF/ENG	6145	6090	6123	6250						
170	%N1	88.0	91.6	93.3	95.7						
	MACH	.528	.568	.586	.606						
	KIAS	293	287	285	284						
	FF/ENG	5832	5748	5736	5789						
160	%N1	86.5	90.1	91.6	93.6	96.1					
	MACH	.515	.555	.573	.591	.612					
	KIAS	285	280	278	277	275					
	FF/ENG	5504	5414	5384	5384	5476					
150	%N1	84.9	88.5	90.0	91.6	93.8	96.7				
	MACH	.501	.542	.559	.577	.596	.617				
	KIAS	277	274	271	269	268	267				
	FF/ENG	5173	5093	5050	5020	5045	5175				
140	%N1	83.1	86.9	88.3	89.9	91.6	94.0	97.2			
	MACH	.485	.529	.545	.562	.580	.600	.622			
	KIAS	269	267	264	262	260	259	258			
	FF/ENG	4836	4783	4728	4687	4668	4714	4877			
130	%N1	81.2	85.1	86.6	88.1	89.6	91.5	94.1	97.6		
	MACH	.469	.513	.530	.546	.564	.582	.603	.626		
	KIAS	259	258	257	255	253	251	250	249		
	FF/ENG	4491	4456	4419	4363	4332	4323	4392	4569		
120	%N1	79.1	83.1	84.7	86.2	87.7	89.3	91.3	94.1	97.7	
	MACH	.451	.495	.513	.531	.547	.565	.584	.605	.628	
	KIAS	250	249	248	247	245	243	241	240	239	
	FF/ENG	4145	4124	4094	4056	4008	3980	3988	4070	4247	
110	%N1	76.8	80.9	82.5	84.1	85.7	87.2	88.7	90.8	93.9	97.5
	MACH	.433	.476	.494	.512	.530	.547	.565	.584	.606	.629
	KIAS	239	239	239	238	237	235	233	231	230	229
	FF/ENG	3806	3786	3765	3733	3703	3658	3641	3663	3741	3914
100	%N1	74.5	78.5	80.1	81.8	83.4	85.0	86.5	88.0	90.1	93.4
	MACH	.413	.455	.473	.491	.509	.528	.545	.563	.583	.604
	KIAS	228	228	228	228	228	227	225	223	221	220
	FF/ENG	3470	3443	3428	3406	3381	3355	3321	3315	3334	3404
90	%N1	71.7	75.7	77.4	79.1	80.8	82.4	84.0	85.5	87.1	89.2
	MACH	.392	.432	.450	.468	.486	.505	.524	.541	.560	.580
	KIAS	216	217	217	217	217	216	215	214	212	210
	FF/ENG	3137	3106	3088	3071	3054	3034	3018	2999	2990	3001

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
299	272	249	230	214	200	190	180	172	164	157
601	548	501	462	429	400	380	361	344	328	314
906	824	753	694	644	600	569	541	515	492	471
1212	1102	1006	927	860	800	759	721	686	655	627
1520	1381	1260	1160	1075	1000	948	901	858	819	784
1831	1662	1515	1393	1291	1200	1138	1081	1029	982	940
2144	1945	1771	1627	1507	1400	1327	1260	1199	1144	1095
2459	2229	2028	1862	1723	1600	1516	1440	1370	1307	1251
2776	2514	2285	2097	1940	1800	1705	1618	1540	1469	1406

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	2.9	0:43	2.6	0:41	2.3	0:40	2.0	0:38	1.8	0:37
400	6.0	1:24	5.5	1:19	5.0	1:16	4.6	1:13	4.3	1:10
600	9.0	2:05	8.3	1:58	7.7	1:53	7.1	1:48	6.7	1:43
800	12.1	2:47	11.2	2:37	10.3	2:29	9.5	2:23	9.1	2:16
1000	15.0	3:29	14.0	3:17	12.9	3:07	12.0	2:58	11.4	2:50
1200	18.0	4:11	16.7	3:57	15.5	3:44	14.4	3:34	13.7	3:24
1400	20.9	4:55	19.5	4:38	18.1	4:22	16.8	4:10	16.0	3:58
1600	23.8	5:39	22.2	5:18	20.6	5:01	19.2	4:47	18.3	4:33
1800	26.7	6:23	24.9	6:00	23.1	5:40	21.5	5:23	20.5	5:07

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	-0.7	-0.3	0.0	0.7	1.4
10	-1.4	-0.7	0.0	1.4	3.1
15	-2.1	-1.0	0.0	2.1	4.6
20	-2.8	-1.4	0.0	2.7	6.0
25	-3.5	-1.8	0.0	3.3	7.2
30	-4.2	-2.1	0.0	3.8	8.4

Includes APU fuel burn

ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)						
		1500	5000	10000	15000	20000	25000	30000
170	%N1	77.8	80.6	84.9	89.4	95.5		
	KIAS	240	241	242	243	244		
	FF/ENG	5340	5330	5340	5410	5580		
160	%N1	76.2	78.9	83.2	87.6	92.8		
	KIAS	232	233	234	235	237		
	FF/ENG	5030	5000	5000	5060	5150		
150	%N1	74.4	77.2	81.4	85.7	90.5		
	KIAS	225	226	227	228	229		
	FF/ENG	4710	4690	4670	4710	4750		
140	%N1	72.4	75.4	79.4	83.8	88.5	95.6	
	KIAS	218	218	219	220	221	223	
	FF/ENG	4400	4370	4350	4370	4390	4640	
130	%N1	70.3	73.3	77.4	81.7	86.3	92.0	
	KIAS	209	210	211	212	213	214	
	FF/ENG	4100	4060	4040	4030	4040	4160	
120	%N1	68.2	71.1	75.3	79.5	84.0	88.9	98.3
	KIAS	201	202	202	203	204	205	207
	FF/ENG	3800	3750	3730	3710	3700	3760	4150
110	%N1	65.9	68.7	73.0	77.1	81.6	86.4	93.8
	KIAS	192	193	194	194	195	196	198
	FF/ENG	3510	3460	3420	3390	3370	3400	3600
100	%N1	63.5	66.2	70.3	74.6	79.0	83.6	89.1
	KIAS	184	184	185	185	186	187	188
	FF/ENG	3220	3170	3120	3090	3050	3060	3160
90	%N1	60.7	63.6	67.5	71.9	76.1	80.7	85.5
	KIAS	178	178	178	178	178	178	178
	FF/ENG	2940	2890	2830	2800	2740	2740	2790

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight Alternate Mode EEC

Chapter PI Section 24

ALTERNATE MODE EEC

Alternate Mode EEC Limit Weight

PERFORMANCE LIMIT WEIGHT (1000 LB)	NORMAL MODE PERFORMANCE LIMIT WEIGHT (1000 LB)										
	90	100	110	120	130	140	150	160	170	180	190
FIELD	85.5	95.0	104.5	114.0	123.0	132.5	141.7	151.2	160.6	170.7	180.2
CLIMB	83.5	92.6	101.7	111.1	120.5	130.0	139.2	149.1	157.9	167.5	176.1
OBSTACLE	83.6	93.0	102.5	111.8	121.1	130.5	139.8	149.0	158.6	167.9	177.5

Alternate Mode EEC Limit weights are valid for both 27B3 fullrate and 26K derate thrust. No performance adjustments are necessary for 24K derate.

Alternate Mode EEC Takeoff Speed Adjustment

TAKEOFF SPEEDS	TAKEOFF SPEED ADJUSTMENT (KTS)
V1	+2
VR	+1
V2	0

Alternate Mode EEC Takeoff Speed Adjustments are valid for both 27B3 fullrate and 26K derate thrust. No performance adjustments are necessary for 24K derate.

Alternate Mode EEC Max Takeoff %N1

Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	10000
60	93.5	94.0	94.5	94.7	94.5	94.8	95.0	95.1	94.7	94.1	93.8	93.7
55	94.6	95.0	95.2	95.4	95.3	95.5	95.8	95.9	95.6	95.0	94.5	93.8
50	95.4	96.0	96.5	96.4	96.1	96.3	96.5	96.8	96.5	96.0	95.4	94.8
45	96.1	96.7	97.2	97.4	97.4	97.4	97.4	97.6	97.3	96.8	96.3	95.7
40	96.8	97.5	98.0	98.2	98.1	98.2	98.3	98.3	98.1	97.7	97.2	96.6
35	97.5	98.3	99.0	99.2	99.1	99.2	99.3	99.3	99.0	98.5	98.0	97.5
30	97.1	98.6	100.4	100.1	100.1	100.0	100.1	100.2	99.9	99.6	99.2	98.4
25	96.3	97.9	99.7	100.0	100.3	100.4	100.4	100.4	100.3	100.3	100.2	99.2
20	95.6	97.1	99.0	99.3	99.6	99.8	100.1	100.4	100.4	100.4	100.3	99.6
15	94.8	96.3	98.3	98.6	98.9	99.1	99.4	99.6	99.9	100.2	100.3	99.8
10	94.0	95.6	97.5	97.9	98.1	98.4	98.6	98.9	99.2	99.4	99.7	99.6
5	93.2	94.8	96.8	97.1	97.4	97.6	97.9	98.1	98.4	98.7	99.0	98.8
0	92.4	94.0	96.0	96.4	96.6	96.9	97.1	97.4	97.6	97.9	98.2	98.1
-5	91.6	93.2	95.3	95.6	95.9	96.1	96.4	96.6	96.9	97.2	97.4	97.3
-10	90.8	92.4	94.5	94.8	95.1	95.3	95.6	95.8	96.1	96.4	96.6	96.5
-15	90.0	91.6	93.7	94.1	94.3	94.6	94.8	95.1	95.3	95.6	95.9	95.7
-20	89.2	90.8	93.0	93.3	93.5	93.8	94.0	94.3	94.5	94.8	95.1	94.9
-25	88.3	90.0	92.2	92.5	92.7	93.0	93.2	93.5	93.7	94.0	94.3	94.1
-30	87.5	89.1	91.4	91.7	91.9	92.2	92.4	92.7	92.9	93.2	93.4	93.3
-35	86.6	88.3	90.6	90.9	91.1	91.4	91.6	91.8	92.1	92.4	92.6	92.5
-40	85.8	87.4	89.7	90.1	90.3	90.5	90.8	91.0	91.3	91.5	91.8	91.7
-45	84.9	86.6	88.9	89.2	89.5	89.7	89.9	90.2	90.4	90.7	90.9	90.8
-50	84.0	85.7	88.1	88.4	88.6	88.9	89.1	89.3	89.6	89.8	90.1	89.8

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

ALTERNATE MODE EEC

Alternate Mode EEC Max Takeoff %N1 - High Altitudes
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
60	93.7	94.0	94.1	96.0	96.9
55	93.1	93.3	93.4	95.3	96.2
50	94.1	93.8	93.2	94.6	95.4
45	95.1	94.8	94.4	95.2	95.7
40	96.0	95.8	95.5	96.1	96.4
35	96.9	96.8	96.6	96.9	97.1
30	97.8	97.7	97.7	97.7	97.7
25	98.7	98.5	98.5	98.5	98.4
20	98.8	98.8	98.8	98.7	98.7
15	99.1	99.1	99.1	99.1	99.0
10	99.5	99.5	99.5	99.5	99.4
5	98.7	99.6	99.8	99.7	99.7
0	97.9	98.8	99.7	99.9	99.9
-5	97.2	98.1	98.9	99.3	99.4
-10	96.4	97.3	98.1	98.5	98.6
-15	95.6	96.5	97.3	97.7	97.8
-20	94.8	95.7	96.5	96.9	97.0
-25	94.0	94.9	95.7	96.0	96.2
-30	93.2	94.1	94.9	95.2	95.3
-35	92.4	93.2	94.1	94.4	94.5
-40	91.5	92.4	93.2	93.5	93.7
-45	90.7	91.5	92.3	92.7	92.8
-50	89.8	90.7	91.5	91.8	91.9

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
PACKS OFF	1.0	1.1	1.1	1.1	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4

ALTERNATE MODE EEC**Alternate Mode EEC Max Takeoff %N1 (26K Derate)****Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	92.6	93.2	93.6	93.7	93.8	93.9	94.0	94.1	94.0	93.7	93.6	93.5	93.5
55	93.2	93.8	94.3	94.4	94.5	94.6	94.7	94.9	94.7	94.4	94.1	93.5	92.8
50	93.8	94.4	94.9	95.1	95.2	95.4	95.5	95.6	95.5	95.2	94.9	94.4	93.9
45	94.6	95.2	95.6	95.8	95.9	96.1	96.2	96.3	96.2	95.9	95.6	95.3	94.9
40	95.2	95.9	96.4	96.5	96.6	96.7	96.8	97.0	96.9	96.6	96.3	96.2	95.9
35	95.8	96.5	97.2	97.3	97.4	97.5	97.6	97.7	97.6	97.3	97.0	96.9	96.8
30	95.4	96.6	98.1	98.1	98.2	98.2	98.3	98.3	98.2	98.1	97.8	97.7	97.7
25	94.6	95.9	97.3	97.9	98.5	98.6	98.5	98.5	98.5	98.5	98.4	98.4	98.5
20	93.8	95.1	96.6	97.1	97.7	98.0	98.3	98.6	98.6	98.7	98.6	98.6	98.6
15	93.0	94.3	95.8	96.4	97.0	97.3	97.6	97.9	98.3	98.7	98.9	98.9	98.9
10	92.3	93.6	95.0	95.6	96.2	96.5	96.8	97.2	97.5	97.9	98.3	98.8	99.3
5	91.5	92.8	94.2	94.8	95.4	95.8	96.1	96.4	96.8	97.2	97.6	98.1	98.5
0	90.7	92.0	93.4	94.1	94.7	95.0	95.3	95.7	96.0	96.4	96.8	97.3	97.8
-5	89.8	91.2	92.6	93.3	93.9	94.2	94.5	94.9	95.3	95.7	96.1	96.5	97.0
-10	89.0	90.4	91.8	92.5	93.1	93.4	93.8	94.1	94.5	94.9	95.3	95.8	96.2
-15	88.2	89.5	91.0	91.7	92.3	92.6	93.0	93.4	93.7	94.1	94.5	95.0	95.4
-20	87.4	88.7	90.2	90.8	91.5	91.8	92.2	92.6	93.0	93.4	93.7	94.2	94.6
-25	86.5	87.9	89.4	90.0	90.7	91.0	91.4	91.8	92.2	92.6	93.0	93.4	93.8
-30	85.7	87.0	88.5	89.2	89.8	90.2	90.6	91.0	91.4	91.8	92.1	92.6	93.0
-35	84.8	86.2	87.7	88.3	89.0	89.4	89.7	90.2	90.6	90.9	91.3	91.8	92.2
-40	83.9	85.3	86.8	87.5	88.1	88.5	88.9	89.3	89.7	90.1	90.5	90.9	91.4
-45	83.1	84.4	86.0	86.6	87.3	87.7	88.1	88.5	88.9	89.3	89.7	90.1	90.5
-50	82.2	83.5	85.1	85.7	86.4	86.8	87.2	87.7	88.1	88.4	88.8	89.3	89.7

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.9	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0

ALTERNATE MODE EEC

Alternate Mode EEC Max Takeoff %N1 - High Altitudes
Alternate Mode EEC Max Takeoff %N1 - High Altitudes (26K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
60	93.5	93.8	94.9	96.4	97.1
55	92.8	93.1	94.2	95.7	96.4
50	93.9	93.5	93.9	95.0	95.7
45	94.9	94.6	94.9	95.5	95.9
40	95.9	95.6	95.8	96.3	96.5
35	96.8	96.6	96.7	96.9	97.1
30	97.7	97.6	97.6	97.6	97.6
25	98.5	98.3	98.3	98.3	98.2
20	98.6	98.6	98.5	98.5	98.5
15	98.9	98.9	98.9	98.8	98.8
10	99.3	99.2	99.2	99.2	99.1
5	98.5	99.4	99.5	99.5	99.5
0	97.8	98.6	99.5	99.7	99.6
-5	97.0	97.8	98.7	99.0	99.2
-10	96.2	97.1	97.9	98.2	98.4
-155	95.4	96.3	97.1	97.4	97.6
-20	94.6	95.5	96.3	96.6	96.8
-25	93.8	94.7	95.5	95.8	95.9
-30	93.0	93.8	94.7	95.0	95.1
-35	92.2	93.0	93.8	94.2	94.3
-40	91.4	92.2	93.0	93.3	93.4
-45	90.5	91.3	92.1	92.4	92.6
-50	89.7	90.5	91.3	91.6	91.7

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)				
	10000	11000	12000	13000	13500
PACKS OFF	1.0	1.1	1.1	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4

Performance Inflight

Gear Down

Chapter PI

Section 25

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
170	20300	17500	14700
160	22600	20100	17300
150	24900	22900	19900
140	27000	25500	23100
130	29300	27800	26100
120	31200	30100	28700
110	33100	32100	31000
100	35100	34100	33000
90	37300	36300	35200

GEAR DOWN

Long Range Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
180	%N1	84.6									
	MACH	.473									
	KIAS	262									
	FF/ENG	5072									
170	%N1	83.0	92.4								
	MACH	.460	.560								
	KIAS	254	251								
	FF/ENG	4773	4728								
160	%N1	81.4	90.5	92.7							
	MACH	.447	.548	.565							
	KIAS	247	245	243							
	FF/ENG	4477	4438	4431							
150	%N1	79.6	88.9	90.6	93.0						
	MACH	.434	.535	.552	.569						
	KIAS	240	239	237	235						
	FF/ENG	4187	4160	4131	4149						
140	%N1	77.7	87.0	88.8	90.6	93.2					
	MACH	.420	.518	.538	.555	.573					
	KIAS	232	232	231	229	227					
	FF/ENG	3906	3862	3855	3838	3876					
130	%N1	75.8	85.0	86.8	88.5	90.4	93.4				
	MACH	.406	.500	.521	.541	.558	.576				
	KIAS	224	223	224	223	221	218				
	FF/ENG	3628	3563	3562	3561	3559	3605				
120	%N1	73.8	82.8	84.6	86.4	88.0	90.1	93.4			
	MACH	.391	.482	.501	.523	.543	.560	.579			
	KIAS	216	215	215	215	214	212	210			
	FF/ENG	3354	3270	3266	3272	3278	3282	3333			
110	%N1	71.4	80.4	82.2	84.0	85.8	87.5	89.7	93.0		
	MACH	.375	.462	.481	.501	.523	.543	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	3084	2982	2975	2979	2994	2999	3002	3057		
100	%N1	68.9	77.9	79.6	81.4	83.1	85.0	86.7	89.0	92.4	
	MACH	.359	.442	.460	.479	.499	.521	.542	.560	.580	
	KIAS	198	197	197	197	196	197	196	194	192	
	FF/ENG	2825	2701	2688	2692	2705	2717	2720	2721	2776	
90	%N1	66.3	75.1	76.9	78.6	80.3	82.1	84.0	85.8	88.0	91.8
	MACH	.343	.421	.438	.456	.475	.496	.518	.540	.558	.578
	KIAS	189	187	187	187	187	187	187	186	184	182
	FF/ENG	2575	2433	2408	2408	2422	2431	2438	2440	2441	2502

GEAR DOWN

**Long Range Cruise Enroute Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
326	291	260	236	217	200	188	178	168	160	153
658	586	524	475	435	400	377	357	338	321	307
994	884	789	714	653	600	566	534	506	482	460
1336	1185	1056	955	872	800	755	713	676	642	613
1683	1490	1326	1196	1091	1000	943	891	844	802	765
2035	1799	1597	1439	1311	1200	1131	1068	1011	961	917
2394	2111	1871	1683	1531	1400	1319	1245	1179	1120	1068
2758	2427	2146	1927	1752	1600	1507	1422	1346	1278	1219
3130	2749	2425	2174	1973	1800	1695	1599	1513	1436	1369

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	5.2	0:49	4.7	0:47	4.1	0:44	3.7	0:43	3.4	0:42
400	10.6	1:37	9.8	1:32	8.7	1:25	8.0	1:21	7.5	1:18
600	15.9	2:26	14.8	2:18	13.2	2:07	12.2	2:00	11.5	1:54
800	21.1	3:16	19.6	3:05	17.6	2:49	16.4	2:39	15.5	2:32
1000	26.2	4:06	24.4	3:52	21.9	3:32	20.4	3:20	19.3	3:09
1200	31.1	4:58	29.0	4:41	26.1	4:16	24.4	4:00	23.1	3:47
1400	36.0	5:52	33.6	5:31	30.2	5:01	28.3	4:42	26.8	4:26
1600	40.7	6:46	38.1	6:21	34.2	5:46	32.1	5:24	30.4	5:05
1800	45.4	7:42	42.4	7:13	38.2	6:33	35.8	6:08	33.9	5:45

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	-0.8	-0.4	0.0	0.7	1.5
10	-1.6	-0.8	0.0	1.3	3.0
15	-2.3	-1.2	0.0	1.9	4.3
20	-3.2	-1.6	0.0	2.4	5.6
25	-4.0	-2.0	0.0	3.0	6.8
30	-4.8	-2.4	0.0	3.5	7.8
35	-5.6	-2.8	0.0	3.9	8.8
40	-6.4	-3.2	0.0	4.3	9.6
45	-7.2	-3.6	0.0	4.7	10.3
50	-8.1	-4.0	0.0	5.0	10.9

GEAR DOWN

Descent
VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (LB)	DISTANCE (NM)
41000	22	560	91
39000	21	560	87
37000	20	550	82
35000	20	540	78
33000	19	530	73
31000	18	520	69
29000	17	510	65
27000	16	500	61
25000	16	490	57
23000	15	480	52
21000	14	460	48
19000	13	440	44
17000	12	430	40
15000	11	410	36
10000	9	350	26
5000	6	280	16
1500	4	230	9

Allowances for a straight-in approach are included.

GEAR DOWN

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
170	%N1	72.5	75.4	79.4	83.8	88.4			
	KIAS	221	221	221	221	221			
	FF/ENG	4400	4370	4350	4350	4370			
160	%N1	70.9	74.0	77.9	82.3	86.8	92.5		
	KIAS	217	217	217	217	217	217		
	FF/ENG	4180	4140	4110	4110	4110	4210		
150	%N1	69.4	72.3	76.4	80.7	85.1	90.1		
	KIAS	212	212	212	212	212	212		
	FF/ENG	3950	3910	3880	3860	3860	3910		
140	%N1	67.7	70.6	74.8	78.9	83.4	88.0		
	KIAS	207	207	207	207	207	207		
	FF/ENG	3730	3680	3650	3620	3600	3630		
130	%N1	66.0	68.7	73.0	77.0	81.5	86.1	92.7	
	KIAS	202	202	202	202	202	202	202	
	FF/ENG	3500	3450	3410	3380	3350	3370	3510	
120	%N1	64.1	66.8	71.0	75.1	79.5	84.0	89.3	
	KIAS	196	196	196	196	196	196	196	
	FF/ENG	3280	3230	3180	3150	3110	3110	3190	
110	%N1	62.0	64.9	68.8	73.1	77.4	81.9	86.5	
	KIAS	190	190	190	190	190	190	190	
	FF/ENG	3050	3010	2950	2920	2870	2860	2910	
100	%N1	59.8	62.7	66.7	71.0	75.1	79.6	84.2	91.1
	KIAS	184	184	184	184	184	184	184	184
	FF/ENG	2840	2790	2740	2700	2640	2620	2660	2770
90	%N1	57.7	60.3	64.5	68.6	72.9	77.3	81.7	86.9
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	2620	2570	2530	2480	2430	2390	2420	2460

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight
Gear Down, Engine Inop
Chapter PI
Section 26
GEAR DOWN
ENGINE INOP
MAX CONTINUOUS THRUST
Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 LB)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
170	162	221	6200	4800	2700
160	152	217	8200	6900	4900
150	143	213	10300	9100	7200
140	133	207	12300	11300	9700
130	124	201	14300	13500	12300
120	115	196	16500	15700	15000
110	105	190	18800	17900	17100
100	96	184	20900	20100	19200
90	86	178	23100	22300	21500

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
170	700		
160	3500	1300	
150	6200	4500	1800
140	9000	7400	5000
130	11500	10400	8200
120	14000	13100	11600
110	16600	15800	15100
100	19400	18500	17600
90	22100	21200	20300

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)								
		5	7	9	11	13	15	17	19	21
160	%N1	95.7								
	MACH	.395								
	KIAS	239								
	FF/ENG	8557								
150	%N1	93.6	95.6							
	MACH	.384	.397							
	KIAS	232	232							
	FF/ENG	7957	7995							
140	%N1	91.5	93.2	95.4						
	MACH	.372	.385	.398						
	KIAS	225	225	224						
	FF/ENG	7375	7390	7433						
130	%N1	89.3	91.0	92.7	95.0	98.4				
	MACH	.361	.373	.385	.399	.413				
	KIAS	218	217	217	216	215				
	FF/ENG	6817	6812	6823	6875	7064				
120	%N1	87.1	88.6	90.3	92.1	94.4	98.0			
	MACH	.349	.360	.372	.385	.399	.413			
	KIAS	211	210	209	208	208	207			
	FF/ENG	6288	6258	6250	6264	6319	6496			
110	%N1	84.7	86.2	87.8	89.5	91.3	93.6	97.3		
	MACH	.337	.348	.359	.371	.383	.397	.412		
	KIAS	204	203	201	200	200	199	198		
	FF/ENG	5782	5736	5705	5697	5713	5753	5899		
100	%N1	82.3	83.7	85.2	86.7	88.4	90.2	92.5	96.3	
	MACH	.325	.335	.345	.356	.368	.381	.395	.409	
	KIAS	197	195	194	193	192	191	190	189	
	FF/ENG	5299	5237	5191	5160	5153	5158	5173	5290	
90	%N1	79.7	81.1	82.5	83.9	85.5	87.2	89.0	91.1	94.5
	MACH	.313	.322	.331	.341	.352	.364	.377	.391	.406
	KIAS	189	188	186	184	183	182	181	181	180
	FF/ENG	4843	4764	4701	4655	4625	4608	4596	4594	4682

GEAR DOWN**ENGINE INOP****MAX CONTINUOUS THRUST****Long Range Cruise Diversion Fuel and Time****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
173	152	134	120	109	100	94	88	82	78	74
354	309	271	242	220	200	187	175	164	154	146
536	467	409	365	330	300	280	261	245	231	218
720	626	547	487	440	400	372	347	325	306	290
905	786	686	610	551	500	465	434	407	383	362
1092	948	826	734	662	600	558	520	487	458	434
1280	1109	965	857	772	700	650	606	567	533	505
1470	1272	1106	981	884	800	744	693	648	609	576
1661	1436	1248	1106	995	900	836	779	729	684	647
1855	1602	1390	1230	1106	1000	928	864	808	759	718

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	2		6		10		14	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
100	3.0	0:28	2.7	0:27	2.4	0:27	2.2	0:26
200	6.1	0:55	5.6	0:53	5.1	0:51	4.9	0:49
300	9.2	1:22	8.5	1:19	7.9	1:15	7.6	1:12
400	12.2	1:50	11.3	1:45	10.6	1:40	10.2	1:35
500	15.1	2:17	14.1	2:11	13.2	2:05	12.7	1:59
600	18.0	2:45	16.8	2:38	15.8	2:30	15.2	2:23
700	20.9	3:13	19.6	3:05	18.4	2:56	17.7	2:47
800	23.8	3:42	22.3	3:32	20.9	3:22	20.1	3:11
900	26.6	4:10	24.9	3:59	23.4	3:48	22.5	3:36
1000	29.4	4:39	27.5	4:27	25.9	4:14	24.9	4:01

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

**Long Range Cruise Diversion Fuel and Time
Fuel Required Adjustments (1000 LB)**

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
2	-0.3	-0.2	0.0	0.3	0.5
4	-0.6	-0.3	0.0	0.6	1.2
6	-0.9	-0.5	0.0	1.0	1.9
8	-1.2	-0.6	0.0	1.3	2.6
10	-1.5	-0.8	0.0	1.7	3.2
12	-1.8	-0.9	0.0	2.0	3.9
14	-2.1	-1.1	0.0	2.3	4.5
16	-2.4	-1.2	0.0	2.6	5.2
18	-2.8	-1.4	0.0	2.9	5.8
20	-3.1	-1.6	0.0	3.2	6.4
22	-3.4	-1.7	0.0	3.4	7.0
24	-3.7	-1.9	0.0	3.7	7.6
26	-4.0	-2.0	0.0	3.9	8.2
28	-4.3	-2.1	0.0	4.2	8.7
30	-4.6	-2.3	0.0	4.4	9.3

Includes APU fuel burn.

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
150	%N1	87.9	91.0	96.8	
	KIAS	212	212	212	
	FF/ENG	7520	7580	7820	
140	%N1	86.0	89.0	94.0	
	KIAS	207	207	207	
	FF/ENG	7030	7070	7190	
130	%N1	84.0	87.0	91.6	
	KIAS	202	202	202	
	FF/ENG	6540	6560	6640	
120	%N1	81.8	84.8	89.3	95.3
	KIAS	196	196	196	196
	FF/ENG	6070	6070	6120	6320
110	%N1	79.5	82.5	86.9	91.8
	KIAS	190	190	190	190
	FF/ENG	5620	5600	5610	5710
100	%N1	77.3	80.1	84.5	89.2
	KIAS	184	184	184	184
	FF/ENG	5190	5150	5140	5200
90	%N1	74.9	77.6	82.0	86.4
	KIAS	178	178	178	178
	FF/ENG	4760	4720	4690	4710

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight**Text****Chapter PI****Section 27**

Introduction

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

General**Takeoff Speeds**

The speeds presented in the Takeoff Speeds table as well as FMC computed takeoff speeds can be used for all performance conditions provided that adjustments are made to V1 for clearway, stopway, anti-skid inoperative, thrust reversers inoperative, improved climb, contaminated runway situations or brake energy limits. These speeds may be used for weights less than or equal to the performance limited weight.

The FMC will protect for minimum control speeds by increasing V1, VR and V2 as required. However, the FMC will not compute takeoff speeds for weights where the required speed increase exceeds the maximum certified speed increase. This typically occurs at full rated thrust and light weights. In this case, the message "V SPEEDS UNAVAILABLE" will appear on the FMC scratchpad and the takeoff speed entries will be blank. Takeoff is not permitted in this condition as certified limits have been exceeded. The options are to select a smaller flap setting, select derate thrust and/or add weight (fuel). Selecting derate thrust is the preferred method as this will reduce the minimum control speeds. Note that the assumed temperature method will not help this condition as the minimum control speeds are determined at the actual temperature and therefore are not reduced.

Takeoff at the -7B27/B3 and -7B26/B1 thrust ratings requires observance of a minimum takeoff weight in order to maintain airplane controllability during takeoff. For takeoff at weights below the minimum takeoff weight, use of a lower thrust rating (certified derate) is required. Note that the

assumed temperature method of reducing thrust may not be used as a means to comply with this restriction. Conservative minimum takeoff weights are shown in the table below:

TAKEOFF THRUST RATING	MINIMUM TAKEOFF WEIGHT
CFM56-7B27/B3	130000 LB
CFM56-7B26/B1	125000 LB

Alternatively, lower minimum takeoff weights may be obtained, for the actual pressure altitude and outside temperature, by using the Minimum Takeoff Weight tables presented in the Takeoff section of the Performance Dispatch chapter.

Normal takeoff speeds, V1, VR, and V2 are read from either the dry or wet table by entering with takeoff flap setting and brake release weight. Use the tables provided to adjust takeoff speeds for altitude and actual temperature or assumed temperature for reduced thrust takeoffs. Slope and wind adjustments to V1 are obtained by entering the Slope and Wind V1 Adjustment table.

V1(MCG)

Regulations prohibit scheduling takeoff with a V1 less than minimum V1 for control on the ground, V1(MCG). It is therefore necessary to compare the adjusted V1 to V1(MCG). The V1(MCG) presented in this manual is conservative for all weight and bleed configurations.

To find V1(MCG) enter the V1(MCG) table with the airport pressure altitude and actual OAT. If the adjusted V1 is less than V1(MCG), set V1 equal to V1(MCG). If the adjusted VR is less than V1(MCG), set VR equal to V1(MCG), and determine a new V2 by adding the difference between the normal VR and V1(MCG) to the normal V2. No takeoff weight adjustment is necessary provided that the actual field length exceeds the minimum field length shown in the Field and Climb Limit Weight table.

Clearway and Stopway V1 Adjustments

Maximum allowable clearway limits are provided for guidance when more precise data is not available. Use of clearway is not allowed on wet runways.

Takeoff speed adjustments are to be applied to V1 speed when using takeoff weights based on the use of clearway and stopway.

Adjust V1 speed by the amount shown in the table. The adjusted V1 speed must not exceed VR. If the adjusted V1 speed is greater than VR, reduce V1 to equal VR.

Stab Trim

To find takeoff stabilizer trim setting, enter Stab Trim Setting table with anticipated brake release weight and center of gravity (C.G. % MAC) and read required stabilizer trim units.

VREF

This table contains flaps 40, 30 and 15 reference speeds for a given weight. With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

Flap Maneuver Speeds

This table provides the flap speed schedule for recommended maneuver speeds. Using VREF as the basis for the schedule makes it variable as a function of weight and will provide adequate maneuver margin above stall at all weights.

During flap retraction/extension, movement of the flap to the next position should be initiated when within 20 knots of the recommended speed for that position.

Slush/Standing Water Takeoff

Experience has shown that aircraft performance may deteriorate significantly on runways covered with snow, slush, standing water or ice. Therefore, reductions in field/obstacle limited takeoff weight and revised takeoff speeds are necessary. The tables are intended for guidance in accordance with advisory material and assume an engine failure at the critical point during the takeoff.

The entire runway is assumed to be completely covered by a contaminant of uniform thickness and density. Therefore this information is conservative when operating under typical cold weather conditions where patches of slush exist and some degree of sanding is common. Takeoffs in slush depths greater than 0.5 inches (13 mm) are not recommended because of possible airplane damage as a result of slush impingement on the airplane structure. The use of assumed temperature for reduced thrust is not allowed on contaminated runways. Interpolation for slush/standing water depths between the values shown is permitted.

Takeoff weight determination:

1. Enter the Weight Adjustment table with the dry field/obstacle limit weight to obtain the weight reduction for the slush/standing water depth and airport pressure altitude.
2. Adjust field length available for temperature by amount shown beneath V1(MCG) limit weight table.
3. Enter the V1(MCG) Limit Weight table with the adjusted field length and pressure altitude to obtain the slush/standing water limit weight with respect to minimum field length required for V1(MCG) speed.
4. The maximum allowable takeoff weight in slush/standing water is the lesser of the limit weights found in steps 1 and 3.

Takeoff speed determination:

1. Determine takeoff speeds V1, VR and V2 for actual brake release weight using the Dry Runway Takeoff Speeds table for the appropriate flap setting and thrust rating.
2. If V1(MCG) limited, set $V1=V1(MCG)$. If not limited by V1(MCG) considerations, enter the V1 Adjustment table with actual brake release weight to determine the V1 reduction to apply to V1 speed. If the adjusted V1 is less than V1(MCG), set $V1=V1(MCG)$.

Slippery Runway Takeoff

Airplane braking action is reported as good, medium or poor, depending on existing runway conditions. If braking action is reported as good, conditions should not be expected to be as good as on clean, dry runways. The value “good” is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when stopping. The performance level used to calculate the “good” data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate the “poor” data reflects a runway covered with wet ice. Performance is based on a 15 ft screen height at the end of the runway. The tables provided are used in the same manner as the Slush/Standing Water tables.

Anti-Skid Inoperative

When operating with anti-skid inoperative, the field limit weight and V1 must be reduced to account for the effect on accelerate-stop performance. Anti-skid inoperative is only allowed on a dry runway. A simplified method which conservatively accounts for the effects of anti-skid

inoperative is to reduce the normal dry field/obstacle limited weight by 18200 lb and the V1 associated with the reduced weight by the amount shown in the table below.

ANTI-SKID INOPERATIVE V1 ADJUSTMENTS	
FIELD LENGTH (FT)	V1 ADJUSTMENT (KIAS)
6000	-19
8000	-16
10000	-13
12000	-11
14000	-10

If the resulting V1 is less than V1(MCG), takeoff is permitted with V1 set equal to V1(MCG) provided the dry accelerate-stop distance adjusted for wind and slope exceeds approximately 8400 ft.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Thrust Reverser Inoperative

When dispatching on a wet runway with both thrust reversers operative, an operative anti-skid system, and all brakes operating, regulations allow deceleration credit for one thrust reverser in the engine failure case and two thrust reversers in the all engine stop case.

When dispatching on a wet runway with one thrust reverser inoperative, the field/obstacle limited weight and V1 speed must be reduced to account for the effect on accelerate-stop performance. A simplified method, which conservatively accounts for this, is to reduce the normal wet runway/field/obstacle limited weight by 2200 lb and the V1 associated with the reduced weight by 2 knots.

If the resulting V1 is less than minimum V1, takeoff is permitted with V1 set equal to V1(MCG) provided the accelerate-stop distance available adjusted for wind and slope exceeds approximately 6200 ft.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Takeoff %N1

To find Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off operation, apply the %N1 adjustment shown below the table. No takeoff %N1 adjustment is required for engine and wing anti-ice.

Assumed Temperature Reduced Thrust

Regulations permit the use of up to 25% takeoff thrust reduction for operation with assumed temperature reduced thrust. Use of assumed temperature reduced thrust is not allowed with anti-skid inoperative or on runways contaminated with standing water, ice, slush, or snow. Use of assumed temperature reduced thrust is not recommended if potential windshear conditions exist.

To find the maximum allowable assumed temperature enter the Maximum Assumed Temperature table with airport pressure altitude and OAT. Compare this temperature to that at which the airplane is performance limited as determined from available takeoff performance data. Next, enter the Maximum Takeoff %N1 table with airport pressure altitude and the lower of the two temperatures previously determined, to obtain a maximum takeoff %N1. Do not use an assumed temperature less than the minimum assumed temperature shown. Enter the %N1 Adjustment table with OAT and the difference between the assumed and actual OAT to obtain a %N1 adjustment. Subtract the %N1 adjustment from the maximum takeoff %N1 found previously to determine the assumed temperature reduced thrust %N1.

Max Climb %N1

This table shows Max Climb %N1 for a 280/.80 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

Go-around %N1

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

Flight with Unreliable Airspeed / Turbulent Air Penetration

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

All Engines

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. This table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Cruise Control

These tables provide target %N1, Cruise Mach number, IAS and standard day fuel flow per engine for the airplane weight and pressure altitude.

.80M Enroute Fuel and Time

.80M Enroute Fuel and Time tables are provided to determine remaining time and fuel required to destination. The data is based on .80M Cruise and .80/280/250 descent. Tables are presented for low altitudes and high altitudes.

To determine remaining fuel and time required, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the actual weight at checkpoint to obtain fuel required to destination.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the table in the Engine Inoperative text section.

.80M Wind-Altitude Trade

Wind is a factor which may justify operations considerably below optimum altitude. For example, a favorable wind component may have an effect on ground speed which more than compensates for the loss in air range.

Using this table, it is possible to determine the break-even wind (advantage necessary or disadvantage that can be tolerated) to maintain the same range at another altitude and long range cruise speed. The tables make no allowance for climb or descent time, fuel or distance, and are based on comparing ground fuel mileage.

Descent

Time, fuel, and distance for descent are shown for a .80/280/250 descent speed schedule. Enter the table with top of descent pressure altitude and read distance, time and fuel. Data is based on flight idle thrust descent in zero wind. Allowances are included for a straight-in approach with gear down and landing flaps at the outer marker.

Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

Advisory Information

Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. Use of autobrake setting 1 is not recommended for landings on slippery runways, and is

therefore not provided for these conditions. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of max manual braking and reverse thrust.

Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

Engine Inoperative

Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .80M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (LB/HR)
39	100
35	100
31	110
25	130
20	150
15	160
10	180
5	200

Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .80/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles

Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

Holding

Single engine holding data is provided in the same format as the all engine holding data and is based on the same assumptions.

Alternate Mode EEC

Introduction

This section contains performance data for airplane operation with the Electronic Engine Control (EEC) in the alternate mode (ALTN EEC switch illuminated) for applicable thrust ratings. The data includes engine bleed effects for normal air conditioning operation i.e., two packs on at normal flow all engines operating.

Operation with assumed temperature reduced thrust is not permitted with the EEC in the alternate mode. No takeoff speed adjustments or other performance adjustments are required for EEC in the alternate mode with 24K derate thrust.

Limit Weight

A simplified method which conservatively accounts for the effects of EEC in alternate mode is to reduce the normal mode (ON EEC switch illuminated) performance limited weights. The Limit Weight table provides takeoff field, climb, and obstacle limit weights. To determine limit weights for operations with the EEC in alternate mode, enter the table with the limit weights for normal mode EEC operation and read the associated limit weight for each performance condition. The most limiting of the takeoff weights must be used. Analysis from the Airplane Flight Manual - Digital Performance Information may yield less restrictive limit weights.

Takeoff Speed Adjustment

Takeoff speeds for the reduced weight should be increased by the amount shown in the Takeoff Speeds Adjustment table. The adjusted V1 should not exceed the adjusted VR.

NOTE: The FMC does not incorporate alternate mode EEC performance in its takeoff speeds calculations.

Max Takeoff %N1

The alternate mode EEC thrust schedule provides equal or greater thrust than the normal mode thrust for the same thrust lever position. Thrust limit protection is not provided in alternate mode EEC and maximum rated thrust may be reached at thrust lever position less than full forward. As a result, thrust overboost may occur if the target alternate mode EEC Max Takeoff %N1 settings are not observed.

To find alternate mode EEC Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter the Alternate Mode EEC Max Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off apply the %N1 adjustment provided below the table. No %N1 adjustment is required for engine or wing anti-ice.

Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

Note: The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.

Intentionally
Blank

Performance Inflight**Chapter PI****Table of Contents****Section 30****737-800BBJW CFM56-7B27B3 KG FAA CATC/N**

General	PI.30.1
Takeoff Speeds - Dry Runway	PI.30.1
Takeoff Speeds - Dry Runway - High Altitudes	PI.30.2
Takeoff Speeds - Wet Runway	PI.30.3
Takeoff Speeds - Wet Runway - High Altitudes	PI.30.4
Maximum Allowable Clearway	PI.30.5
Maximum Allowable Clearway - High Altitudes	PI.30.5
Clearway and Stopway V1 Adjustments	PI.30.5
Clearway and Stopway V1 Adjustments - High Altitudes	PI.30.5
Stab Trim Setting	PI.30.6
Flap Maneuver Speeds	PI.30.7
VREF	PI.30.8
Slush/Standing Water Takeoff	PI.30.9
Slippery Runway Takeoff	PI.30.15
Takeoff %N1	PI.30.23
Takeoff %N1 - High Altitudes	PI.30.24
Assumed Temperature Reduced Thrust	PI.30.24
Assumed Temperature Reduced Thrust - High Altitudes	PI.30.26
Takeoff Speeds - Dry Runway (26K Derate)	PI.30.28
Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)	PI.30.29
Takeoff Speeds - Wet Runway (26K Derate)	PI.30.30
Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)	PI.30.31
Maximum Allowable Clearway (26K Derate)	PI.30.32
Clearway and Stopway V1 Adjustments (26K Derate)	PI.30.32
Stab Trim Setting (26K Derate)	PI.30.33
Slush/Standing Water Takeoff (26K Derate)	PI.30.34

Slippery Runway Takeoff (26K Derate)	PI.30.41
Takeoff %N1 - (26K Derate)	PI.30.49
Assumed Temperature Reduced Thrust - (26K Derate) ...	PI.30.50
Takeoff Speeds - Dry Runway (24K Derate)	PI.30.54
Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)	PI.30.55
Takeoff Speeds - Wet Runway (24K Derate)	PI.30.56
Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)	PI.30.57
Maximum Allowable Clearway (24K Derate)	PI.30.58
Clearway and Stopway V1 Adjustments (24K Derate) ...	PI.30.58
Stab Trim Setting (24K Derate)	PI.30.59
Slush/Standing Water Takeoff (24K Derate)	PI.30.60
Slippery Runway Takeoff (24K Derate)	PI.30.68
Takeoff %N1 (24K Derate)	PI.30.76
Assumed Temperature Reduced Thrust (24K Derate) ...	PI.30.77
Max Climb %N1	PI.30.80
Go-around %N1	PI.30.81
Flight With Unreliable Airspeed/ Turbulent Air Penetration	PI.30.83
All Engine	PI.31.1
.80M Maximum Operating Altitude	PI.31.1
.80M Cruise Control	PI.31.2
.80M Enroute Fuel and Time - Low Altitudes	PI.31.3
.80M Enroute Fuel and Time - High Altitudes	PI.31.5
.80M Wind-Altitude Trade	PI.31.8
Descent	PI.31.8
Holding	PI.31.9
Advisory Information	PI.32.1
Normal Configuration Landing Distances	PI.32.1
Non-Normal Configuration Landing Distance	PI.32.4
Recommended Brake Cooling Schedule	PI.32.12

Engine Inoperative	PI.33.1
Initial Max Continuous %N1	PI.33.1
Max Continuous %N1	PI.33.2
Driftdown Speed/Level Off Altitude	PI.33.6
Driftdown/LRC Cruise Range Capability	PI.33.7
Long Range Cruise Altitude Capability	PI.33.8
Long Range Cruise Control	PI.33.9
Long Range Cruise Diversion Fuel and Time	PI.33.10
Holding	PI.33.11
Alternate Mode EEC	PI.34.1
Alternate Mode EEC Limit Weight	PI.34.1
Alternate Mode EEC Max Takeoff %N1	PI.34.1
Gear Down	PI.35.1
Long Range Cruise Altitude Capability	PI.35.1
Long Range Cruise Control	PI.35.2
Long Range Cruise Enroute Fuel and Time	PI.35.3
Descent	PI.35.4
Holding	PI.35.5
Gear Down, Engine Inoperative	PI.36.1
Driftdown Speed/Level Off Altitude	PI.36.1
Long Range Cruise Altitude Capability	PI.36.1
Long Range Cruise Control	PI.36.2
Long Range Cruise Diversion Fuel and Time	PI.36.3
Holding	PI.36.5
Text	PI.37.1
Introduction	PI.37.1
General	PI.37.1
All Engines	PI.37.6
Advisory Information	PI.37.7
Engine Inoperative	PI.37.9
Alternate Mode EEC	PI.37.11
Gear Down	PI.37.12

Intentionally
Blank

DO NOT USE FOR FLIGHT

Performance Inflight

General

Chapter PI

Section 30

Takeoff Speeds - Dry Runway

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	167	169	176	160	163	167	160	161	166						
85	162	165	171	156	159	164	155	157	162	151	153	159	149	145	157
80	157	160	167	151	154	160	150	152	158	147	148	155	144	140	153
75	152	155	162	146	148	156	145	147	154	142	144	151	139	141	149
70	146	149	158	140	143	152	139	141	150	136	138	147	134	136	145
65	140	143	153	135	137	148	133	136	146	130	133	143	128	130	141
60	134	136	148	128	131	143	127	129	141	124	126	138	122	124	136
55	127	129	143	122	124	137	121	123	136	118	120	133	116	118	131
50	120	122	137	115	117	132	114	116	131	112	113	128	110	111	126
45	113	114	131	109	110	126	107	108	125	105	106	123	103	104	121
40	106	106	125	101	102	121	100	101	119	98	99	117	96	97	115

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	6						4	5						-3	-4								
60	140	4	5	6	7				4	4	5	6				-3	-3	-4	-4						
50	122	2	3	4	5	6	8	9	2	3	4	5	6	8	9	-1	-2	-3	-3	-4	-5	-6			
40	104	0	1	3	4	5	6	8	0	1	3	4	5	6	8	0	-1	-2	-2	-3	-4	-5			
30	86	0	0	1	3	4	5	7	0	0	1	3	4	5	7	0	0	-1	-2	-2	-3	-4			
20	68	0	0	1	2	3	4	6	0	0	1	2	3	4	6	0	0	-1	-1	-2	-3	-4			
-60	-76	0	0	1	2	3	4	6	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40		
90	-4	-3	0	0	1		-4	-3	-2	0	0	-1	0	0		
80	-3	-2	0	0	1		-3	-2	-1	0	0	0	1	1		
70	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1		
60	-1	-1	0	1	1		-2	-1	0	0	0	1	1	1		
50	-1	-1	0	0	0		-2	-1	-1	0	0	0	0	1		
40	-1	-1	0	-1	-1		-3	-2	-1	0	0	-1	-1	-1		

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	97	94					
60	140	97	94	92	91			
50	122	99	97	93	91	89	86	83
40	104	103	101	98	94	90	86	83
30	86	106	105	101	97	94	89	85
20	68	106	106	102	99	95	91	87
-60	-76	108	107	104	100	97	93	89

Takeoff Speeds - Dry Runway - High Altitudes

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	159	159	161												
70	154	154	156	148	148	150									
65	147	148	151	141	142	145	140	140	143						
60	140	141	145	135	135	140	134	134	138	130	131	135	128	128	133
55	133	134	140	128	129	134	127	127	133	124	125	130	122	122	128
50	126	127	134	121	122	129	120	121	127	117	118	125	115	116	123
45	118	119	128	114	115	123	112	113	122	110	111	119	108	109	117
40	110	111	121	106	107	117	105	105	116	102	103	113	100	101	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	4						4						-2					
40	104	3	3	4	4	5	5	2	3	4	4	4	4	-1	-2	-2	-2	-2	-3
30	86	1	2	3	3	4	4	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
20	68	0	1	2	2	3	3	1	1	2	2	3	3	0	-1	-1	-1	-1	-2
10	50	0	0	1	2	2	3	0	1	1	2	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-3	-1	0	0	0	0	0	0	0	0	0	0	0	0
70	-2	-1	0	0	0	0	-1	0	0	0	0	0	0	0
65	-2	-1	0	0	0	0	-1	-1	0	0	0	0	0	0
60	-2	-1	0	0	0	0	-1	-1	0	0	0	0	0	0
55	-2	-1	0	0	0	0	-1	-1	0	0	0	0	0	0
50	-1	-1	0	0	0	0	-1	-1	0	0	0	0	0	0
45	-1	-1	0	0	0	0	-1	-1	-1	0	0	0	0	0
40	-1	0	0	0	0	0	-2	-1	-1	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	83					
40	104	83	82	81	80	80	79
30	86	85	83	81	80	80	79
20	68	87	85	83	82	80	79
10	50	88	87	85	83	81	81
0	32	88	87	86	84	83	82
-60	-76	89	88	87	85	84	83

Takeoff Speeds - Wet Runway**V1, VR, V2 for Max Takeoff Thrust**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	162	170	175	154	164	168	156	161	166						
85	156	165	171	149	159	164	149	157	162	146	153	159	145	150	157
80	150	160	167	143	154	160	143	152	158	140	148	155	138	145	153
75	144	155	162	138	148	156	137	147	154	134	144	151	132	141	149
70	138	149	158	132	143	152	131	141	150	129	138	147	126	136	145
65	132	143	153	126	137	148	125	136	146	123	133	143	121	130	141
60	125	136	148	120	131	143	119	129	141	116	126	138	114	124	136
55	118	129	143	113	124	137	112	123	136	110	120	133	108	118	131
50	111	122	137	106	117	132	105	116	131	103	113	128	101	111	126
45	103	114	131	98	110	126	98	108	125	95	106	123	94	104	121
40	95	106	125	91	102	121	90	101	119	88	99	117	86	97	115

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						4	5						-3	-4								
60	140	6	7	8	9				4	4	5	6				-3	-3	-4	-4						
50	122	3	4	5	7	8	10	13	2	3	4	5	6	8	9	-1	-2	-3	-3	-4	-5	-6			
40	104	0	1	3	4	6	8	10	0	1	3	4	5	6	8	0	-1	-2	-2	-3	-4	-5			
30	86	0	0	1	3	5	6	9	0	0	1	3	4	5	7	0	0	-1	-2	-2	-3	-4			
20	68	0	0	1	3	4	5	7	0	0	1	2	3	4	6	0	0	-1	-1	-2	-3	-4			
-60	-76	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	0	10	20	30	40	
90	-5	-2	0	4	6		-3	-2	0	0	2	3	4	5		
80	-4	-2	0	3	5		-4	-2	-1	0	1	2	3	4		
70	-4	-2	0	2	4		-4	-2	-1	0	1	2	3	3		
60	-3	-1	0	2	3		-4	-3	-1	0	1	2	3	3		
50	-2	-1	0	1	3		-5	-3	-1	0	1	2	3	4		
40	-1	0	0	1	2		-5	-3	-2	0	1	3	4	5		

*V1 not to exceed VR

V1(MCG)**Max Takeoff Thrust**

TEMP		PRESSURE ALTITUDE (FT)							
		-2000	0	2000	4000	6000	8000	10000	
70	158	97	94						
60	140	97	94	92	91				
50	122	99	97	93	91	89	86	83	
40	104	103	101	98	94	90	86	83	
30	86	106	105	101	97	94	89	85	
20	68	106	106	102	99	95	91	87	
-60	-76	108	107	104	100	97	93	89	

Takeoff Speeds - Wet Runway - High Altitudes

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	156	159	161												
70	148	154	156	141	148	150									
65	140	148	151	134	142	145									
60	133	141	145	127	135	140	128	134	138	125	131	135	123	128	133
55	125	134	140	120	129	134	120	127	133	117	125	130	116	122	128
50	118	127	134	113	122	129	112	121	127	110	118	125	108	116	123
45	110	119	128	105	115	123	104	113	122	102	111	119	100	109	117
40	101	111	121	97	107	117	97	105	116	95	103	113	93	101	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	7					4							-2					
40	104	4	5	6	6	7	7	2	3	4	4	4	4	-1	-2	-2	-2	-2	-3
30	86	2	3	4	5	5	6	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
20	68	0	1	2	3	4	4	1	1	2	2	3	3	0	-1	-1	-1	-1	-2
10	50	0	0	1	2	3	4	0	1	1	2	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	2	3	3	0	0	1	1	2	2	0	0	0	-1	-1	-1
-60	-76	0	0	1	2	3	3	0	0	1	1	2	2	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-6	-3	0	3	5		-1	-1	-1	0	1	1	2	2
70	-5	-3	0	3	5		-2	-1	-1	0	1	1	2	2
65	-5	-2	0	3	5		-2	-2	-1	0	0	1	2	2
60	-4	-2	0	2	5		-3	-2	-1	0	0	1	2	2
55	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
50	-3	-2	0	2	3		-4	-2	-1	0	1	1	2	2
45	-3	-2	0	1	3		-4	-2	-1	0	1	1	2	3
40	-2	-1	0	1	2		-4	-3	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	83					
40	104	83	82	81	80	80	79
30	86	85	83	81	80	80	79
20	68	87	85	83	82	80	79
10	50	88	87	85	83	81	81
0	32	88	87	86	84	83	82
-60	-76	89	88	87	85	84	83

Maximum Allowable Clearway**Max Takeoff Thrust**

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	150
1600	180
2000	210
2400	240
2800	270
3200	290

Maximum Allowable Clearway - High Altitudes

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
2000	200
2500	230
3000	260
3500	280
4000	310
4500	340

Clearway and Stopway V1 Adjustments

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-5	-4	-3	-4				
200	-5	-4	-3	-3				
100	-4	-3	-2	-2				
0	0	0	0	0	0	0	0	0
-100	0	0	1	0	1	2	2	1
-200	0	0	1	0	3	3	3	2
-300	0	0	1	0	5	5	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-3	-3	-3	-3				
200	-3	-3	-2	-2				
100	-2	-2	-1	-1				
0	0	0	0	0	0	0	0	0
-100	1	0	0	0	2	1	1	1
-200	1	0	0	0	5	2	2	2
-300	1	0	0	0	4	3	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting
Max Takeoff Thrust
Flaps 1 and 5

WEIGHT (1000 KG)	C.G. (%MAC)									
	6	8	14	20	26	30	31	32	34	36
80	8 1/2	8 1/2	7 1/4	6 1/4	5 1/4	4 1/2	4 1/4	4 1/4	3 3/4	3 1/2
70	8	7 3/4	6 3/4	5 3/4	4 3/4	4	4	3 3/4	3 1/2	3
60	7 1/4	7	6	5	4 1/4	3 1/2	3 1/2	3 1/4	3	2 3/4
50	6 1/4	6	5 1/4	4 1/2	3 1/2	3	3	2 3/4	2 3/4	2 3/4
45	5 3/4	5 1/2	4 3/4	4	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
35	5 3/4	5 1/2	4 3/4	4	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)									
	6	9	10	11	16	23	27	30	33	36
80	8 1/2	8 1/2	8 1/2	8 1/4	6 1/4	5	4 1/4	3 1/2	3	2 3/4
70	8 1/2	8 1/4	7 3/4	7 1/2	5 1/2	4 1/4	3 1/2	3	2 3/4	2 3/4
60	7 3/4	6 3/4	6 1/2	6 1/4	5	3 3/4	3	2 3/4	2 3/4	2 3/4
50	6	5 1/2	5 1/4	5	4	3	2 3/4	2 3/4	2 3/4	2 3/4
45	5	4 3/4	4 1/2	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
35	5	4 3/4	4 1/2	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

Flap Maneuver Speeds

FLAP POSITION	MANEUVER SPEED
UP	VREF40 + 70
1	VREF40 + 50
5	VREF40 + 30
10	VREF40 + 30
15	VREF40 + 20
25	VREF40 + 10
30	VREF30
40	VREF40

VREF

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	160	168	177
80	155	163	172
75	151	158	167
70	146	153	161
65	141	148	156
60	135	142	149
55	128	136	143
50	122	129	136
45	115	122	128
40	108	115	121

ADVISORY INFORMATION**Slush/Standing Water Takeoff****Maximum Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (.12 INCHES)			6 mm (.25 INCHES)			13 mm (.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-12.9	-15.2	-17.5	-15.7	-18.0	-20.2	-21.4	-23.7	-26.0
90	-11.8	-14.1	-16.4	-14.2	-16.5	-18.7	-19.2	-21.5	-23.7
85	-10.7	-13.0	-15.3	-12.7	-15.0	-17.3	-16.9	-19.2	-21.5
80	-9.7	-11.9	-14.2	-11.3	-13.6	-15.9	-14.8	-17.1	-19.4
75	-8.7	-10.9	-13.2	-10.0	-12.3	-14.5	-12.8	-15.1	-17.4
70	-7.7	-9.9	-12.2	-8.7	-11.0	-13.3	-11.0	-13.3	-15.6
65	-6.8	-9.0	-11.3	-7.6	-9.9	-12.1	-9.4	-11.6	-13.9
60	-5.9	-8.1	-10.4	-6.5	-8.8	-11.0	-7.9	-10.2	-12.4
55	-5.1	-7.3	-9.6	-5.5	-7.8	-10.1	-6.5	-8.8	-11.1
50	-4.3	-6.5	-8.8	-4.6	-6.9	-9.1	-5.3	-7.6	-9.9
45	-3.5	-5.8	-8.0	-3.7	-5.9	-8.2	-4.2	-6.4	-8.7
40	-2.7	-5.0	-7.2	-2.8	-5.0	-7.3	-3.0	-5.2	-7.5

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (.12 INCHES)			6 mm (.25 INCHES)			13 mm (.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200							30.1		
1400	37.6			41.6			48.3	33.0	
1600	56.9	40.7		60.8	44.6		67.1	51.2	35.9
1800	77.6	60.2	43.7	81.4	64.0	47.7	86.9	70.3	54.3
2000	99.8	81.2	63.4	103.2	84.9	67.3		90.2	73.4
2200		103.4	84.7			88.4			93.4

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -35m/+35m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (.12 INCHES)			6 mm (.25 INCHES)			13 mm (.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-15	-13	-9	-9	-7	-3	0	0	0
85	-17	-15	-11	-11	-9	-5	-1	0	0
80	-19	-16	-13	-13	-10	-7	-2	0	0
75	-20	-18	-14	-15	-12	-9	-4	-1	0
70	-21	-19	-15	-17	-14	-11	-6	-3	0
65	-22	-20	-16	-18	-16	-12	-9	-6	-3
60	-23	-21	-17	-20	-17	-14	-12	-9	-6
55	-24	-21	-18	-21	-19	-15	-15	-13	-9
50	-25	-22	-19	-23	-20	-17	-18	-16	-12
45	-25	-23	-19	-24	-21	-18	-20	-18	-14
40	-27	-24	-21	-25	-22	-19	-21	-19	-15

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff****No Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-15.4	-17.9	-20.4	-18.2	-20.7	-23.2	-24.1	-26.6	-29.1
90	-14.1	-16.6	-19.1	-16.6	-19.1	-21.5	-21.6	-24.1	-26.6
85	-12.8	-15.3	-17.8	-14.9	-17.4	-19.9	-19.2	-21.7	-24.2
80	-11.6	-14.1	-16.6	-13.3	-15.8	-18.3	-16.8	-19.3	-21.8
75	-10.4	-12.9	-15.4	-11.8	-14.3	-16.8	-14.6	-17.1	-19.6
70	-9.3	-11.8	-14.3	-10.4	-12.9	-15.4	-12.6	-15.1	-17.6
65	-8.2	-10.7	-13.2	-9.1	-11.6	-14.1	-10.9	-13.4	-15.9
60	-7.2	-9.7	-12.2	-7.9	-10.4	-12.9	-9.3	-11.8	-14.3
55	-6.3	-8.8	-11.3	-6.8	-9.3	-11.8	-7.9	-10.4	-12.9
50	-5.4	-7.9	-10.4	-5.7	-8.2	-10.7	-6.6	-9.1	-11.6
45	-4.5	-7.0	-9.5	-4.7	-7.2	-9.7	-5.4	-7.9	-10.4
40	-3.6	-6.1	-8.6	-3.7	-6.2	-8.6	-4.1	-6.6	-9.1

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1600							42.1		
1800	37.8			48.7	32.3		63.5	48.8	33.9
2000	63.9	45.9		73.2	56.2	39.7	84.9	70.2	55.5
2200	90.8	72.3	54.1	98.6	81.0	63.9		91.5	76.9
2400		99.2	80.6			89.0			98.1

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -50 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-19	-12	-4	-10	-3	0	0	0	0
90	-21	-14	-6	-13	-5	0	0	0	0
85	-23	-16	-8	-15	-8	0	-1	0	0
80	-25	-18	-10	-18	-10	-3	-3	0	0
75	-27	-19	-12	-20	-13	-5	-6	0	0
70	-28	-21	-13	-22	-15	-7	-9	-1	0
65	-29	-22	-14	-24	-17	-9	-12	-5	0
60	-30	-23	-15	-26	-19	-11	-16	-9	-1
55	-31	-23	-16	-28	-21	-13	-20	-13	-5
50	-32	-24	-17	-30	-22	-15	-24	-17	-9
45	-33	-25	-18	-31	-23	-16	-27	-19	-12
40	-34	-26	-19	-32	-24	-17	-27	-20	-12

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-17.5	-18.4	-19.3	-20.2	-21.1	-22.0	-26.0	-26.9	-27.8
90	-16.4	-17.3	-18.2	-18.7	-19.7	-20.6	-23.7	-24.6	-25.5
85	-15.3	-16.2	-17.1	-17.3	-18.2	-19.1	-21.5	-22.4	-23.3
80	-14.2	-15.1	-16.0	-15.9	-16.8	-17.7	-19.4	-20.3	-21.2
75	-13.2	-14.1	-15.0	-14.5	-15.4	-16.3	-17.4	-18.3	-19.2
70	-12.2	-13.1	-14.0	-13.3	-14.2	-15.1	-15.6	-16.5	-17.4
65	-11.3	-12.2	-13.1	-12.1	-13.0	-13.9	-13.9	-14.8	-15.7
60	-10.4	-11.3	-12.2	-11.0	-12.0	-12.9	-12.4	-13.3	-14.2
55	-9.6	-10.5	-11.4	-10.1	-11.0	-11.9	-11.1	-12.0	-12.9
50	-8.8	-9.7	-10.6	-9.1	-10.0	-10.9	-9.9	-10.8	-11.7
45	-8.0	-8.9	-9.8	-8.2	-9.1	-10.0	-8.7	-9.6	-10.5
40	-7.2	-8.1	-9.0	-7.3	-8.2	-9.1	-7.5	-8.4	-9.3

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1600							35.9		
1800	43.7	37.4	31.2	47.7	41.3	35.2	54.3	48.0	41.9
2000	63.4	56.7	50.1	67.3	60.6	54.0	73.4	66.9	60.5
2200	84.7	77.4	70.3	88.4	81.2	74.1	93.4	86.7	79.9
2400		99.5	92.1		102.9	95.6			100.1

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-9	-7	-5	-3	-1	0	0	0	0
85	-11	-9	-7	-5	-3	-1	0	0	0
80	-13	-11	-9	-7	-5	-3	0	0	0
75	-14	-12	-10	-9	-7	-5	0	0	0
70	-15	-13	-11	-11	-9	-7	0	0	0
65	-16	-14	-12	-12	-10	-8	-3	0	0
60	-17	-15	-13	-14	-12	-10	-6	-4	-2
55	-18	-16	-14	-15	-13	-11	-9	-7	-5
50	-19	-17	-15	-17	-15	-13	-12	-10	-8
45	-19	-17	-16	-18	-16	-14	-14	-12	-10
40	-21	-19	-17	-19	-17	-15	-15	-13	-11

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes

No Reverse Thrust

Weight Adjustments (1000 KG)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-20.4	-21.4	-22.4	-23.3	-24.3	-25.3	-29.3	-30.3	-31.3
90	-19.1	-20.1	-21.1	-21.6	-22.6	-23.6	-26.7	-27.7	-28.7
85	-17.8	-18.8	-19.8	-19.9	-20.9	-21.9	-24.2	-25.1	-26.1
80	-16.6	-17.6	-18.6	-18.3	-19.3	-20.3	-21.8	-22.8	-23.8
75	-15.4	-16.4	-17.4	-16.8	-17.8	-18.8	-19.6	-20.6	-21.6
70	-14.3	-15.3	-16.3	-15.4	-16.4	-17.4	-17.6	-18.6	-19.6
65	-13.2	-14.2	-15.2	-14.1	-15.1	-16.0	-15.9	-16.9	-17.8
60	-12.2	-13.2	-14.2	-12.9	-13.8	-14.8	-14.3	-15.3	-16.3
55	-11.3	-12.3	-13.3	-11.8	-12.8	-13.7	-12.9	-13.9	-14.9
50	-10.4	-11.4	-12.4	-10.7	-11.7	-12.7	-11.6	-12.6	-13.6
45	-9.5	-10.5	-11.5	-9.7	-10.7	-11.7	-10.4	-11.4	-12.4
40	-8.6	-9.6	-10.6	-8.6	-9.6	-10.6	-9.1	-10.1	-11.1

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1800							34.0		
2000				39.8	33.4		55.6	49.7	43.8
2200	54.2	47.0	39.9	64.0	57.3	50.6	77.0	71.2	65.3
2400	80.8	73.4	66.1	89.1	82.2	75.2	98.2	92.4	86.6
2600		100.4	93.0			100.7			

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-6	-4	-2	0	0	0	0	0	0
85	-8	-6	-4	0	0	0	0	0	0
80	-10	-8	-6	-3	-1	0	0	0	0
75	-12	-10	-8	-5	-3	-1	0	0	0
70	-13	-11	-9	-7	-5	-3	0	0	0
65	-14	-12	-10	-9	-7	-5	0	0	0
60	-15	-13	-11	-11	-9	-7	-1	0	0
55	-16	-14	-12	-13	-11	-9	-5	-3	-1
50	-17	-15	-13	-15	-12	-10	-9	-7	-5
45	-18	-16	-14	-16	-14	-12	-12	-10	-8
40	-19	-17	-15	-17	-15	-13	-12	-10	-8

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION**Slippery Runway Takeoff****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-0.7	-0.7	-0.7	-6.5	-6.5	-6.5	-11.7	-11.7	-11.7
90	-1.0	-1.0	-1.0	-6.3	-6.3	-6.3	-11.2	-11.2	-11.2
85	-1.2	-1.2	-1.2	-6.2	-6.2	-6.2	-10.7	-10.7	-10.7
80	-1.4	-1.4	-1.4	-6.1	-6.1	-6.1	-10.1	-10.1	-10.1
75	-1.5	-1.5	-1.5	-5.9	-5.9	-5.9	-9.6	-9.6	-9.6
70	-1.6	-1.6	-1.6	-5.7	-5.7	-5.7	-9.0	-9.0	-9.0
65	-1.6	-1.6	-1.6	-5.4	-5.4	-5.4	-8.4	-8.4	-8.4
60	-1.6	-1.6	-1.6	-5.1	-5.1	-5.1	-7.8	-7.8	-7.8
55	-1.5	-1.5	-1.5	-4.7	-4.7	-4.7	-7.2	-7.2	-7.2
50	-1.4	-1.4	-1.4	-4.3	-4.3	-4.3	-6.5	-6.5	-6.5
45	-1.3	-1.3	-1.3	-3.9	-3.9	-3.9	-5.9	-5.9	-5.9
40	-1.2	-1.2	-1.2	-3.6	-3.6	-3.6	-5.2	-5.2	-5.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1000	35.6								
1200	68.5	53.6	38.4						
1400	100.1	85.8	71.2	42.6					
1600			102.8	65.7	49.6	34.3			
1800				90.7	73.3	56.9	38.6		
2000					99.0	81.2	52.6	36.7	
2200							67.7	50.6	34.7
2400							84.3	65.5	48.5
2600							102.3	81.8	63.3
2800								99.7	79.4
3000									97.1

1. Enter Weight Adjustment table with reported braking action 27K Bump and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25m/+25m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25m/+25m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -40m/+40m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-5	0	0	-13	-8	-3	-25	-20	-15
85	-6	-1	0	-16	-11	-6	-28	-23	-18
80	-7	-2	0	-17	-12	-7	-30	-25	-20
75	-8	-3	0	-19	-14	-9	-32	-27	-22
70	-9	-4	0	-21	-16	-11	-34	-29	-24
65	-10	-5	0	-22	-17	-12	-36	-31	-26
60	-11	-6	-1	-23	-18	-13	-38	-33	-28
55	-11	-6	-1	-24	-19	-14	-39	-34	-29
50	-12	-7	-2	-26	-21	-16	-41	-36	-31
45	-13	-8	-3	-27	-22	-17	-42	-37	-32
40	-14	-9	-4	-29	-24	-19	-44	-39	-34

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff****No Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-1.9	-1.9	-1.9	-8.8	-8.8	-8.8	-15.3	-15.3	-15.3
90	-2.1	-2.1	-2.1	-8.6	-8.6	-8.6	-14.4	-14.4	-14.4
85	-2.3	-2.3	-2.3	-8.4	-8.4	-8.4	-13.5	-13.5	-13.5
80	-2.4	-2.4	-2.4	-8.1	-8.1	-8.1	-12.6	-12.6	-12.6
75	-2.4	-2.4	-2.4	-7.7	-7.7	-7.7	-11.8	-11.8	-11.8
70	-2.4	-2.4	-2.4	-7.3	-7.3	-7.3	-10.9	-10.9	-10.9
65	-2.4	-2.4	-2.4	-6.8	-6.8	-6.8	-10.0	-10.0	-10.0
60	-2.2	-2.2	-2.2	-6.3	-6.3	-6.3	-9.2	-9.2	-9.2
55	-2.0	-2.0	-2.0	-5.7	-5.7	-5.7	-8.3	-8.3	-8.3
50	-1.8	-1.8	-1.8	-5.1	-5.1	-5.1	-7.4	-7.4	-7.4
45	-1.6	-1.6	-1.6	-4.5	-4.5	-4.5	-6.6	-6.6	-6.6
40	-1.4	-1.4	-1.4	-3.9	-3.9	-3.9	-5.7	-5.7	-5.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	56.7	39.5							
1400	92.5	76.4	59.8						
1600			95.4						
1800				60.7	41.0				
2000				93.2	73.3	53.6			
2200						86.0			
2600							43.9		
2800							65.2	44.0	
3000							88.2	65.3	44.2
3200								88.4	65.5
3400									88.6

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -30 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -30 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -55 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-5	0	0	-16	-11	-6	-32	-27	-22
90	-7	-2	0	-18	-13	-8	-35	-30	-25
85	-8	-3	0	-20	-15	-10	-38	-33	-28
80	-9	-4	0	-22	-17	-12	-41	-36	-31
75	-10	-5	0	-24	-19	-14	-44	-39	-34
70	-11	-6	-1	-26	-21	-16	-46	-41	-36
65	-12	-7	-2	-28	-23	-18	-49	-44	-39
60	-13	-8	-3	-30	-25	-20	-51	-46	-41
55	-14	-9	-4	-32	-27	-22	-53	-48	-43
50	-15	-10	-5	-33	-28	-23	-55	-50	-45
45	-17	-12	-7	-35	-30	-25	-56	-51	-46
40	-18	-13	-8	-37	-32	-27	-58	-53	-48

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-0.7	-0.7	-0.7	-6.5	-6.5	-6.5	-11.7	-11.7	-11.7
90	-1.0	-1.0	-1.0	-6.3	-6.3	-6.3	-11.2	-11.2	-11.2
85	-1.2	-1.2	-1.2	-6.2	-6.2	-6.2	-10.7	-10.7	-10.7
80	-1.4	-1.4	-1.4	-6.1	-6.1	-6.1	-10.1	-10.1	-10.1
75	-1.5	-1.5	-1.5	-5.9	-5.9	-5.9	-9.6	-9.6	-9.6
70	-1.6	-1.6	-1.6	-5.7	-5.7	-5.7	-9.0	-9.0	-9.0
65	-1.6	-1.6	-1.6	-5.4	-5.4	-5.4	-8.4	-8.4	-8.4
60	-1.6	-1.6	-1.6	-5.1	-5.1	-5.1	-7.8	-7.8	-7.8
55	-1.5	-1.5	-1.5	-4.7	-4.7	-4.7	-7.2	-7.2	-7.2
50	-1.4	-1.4	-1.4	-4.3	-4.3	-4.3	-6.5	-6.5	-6.5
45	-1.3	-1.3	-1.3	-3.9	-3.9	-3.9	-5.9	-5.9	-5.9
40	-1.2	-1.2	-1.2	-3.6	-3.6	-3.6	-5.2	-5.2	-5.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1200	38.4	32.4							
1400	71.2	65.3	59.4						
1600	102.8	97.1	91.3	34.3					
1800				56.9	50.5	44.3			
2000				81.2	74.3	67.6			
2200					100.0	92.8	34.7		
2400							48.5	42.2	35.9
2600							63.3	56.4	49.7
2800							79.4	71.8	64.6
3000							97.1	88.9	80.9
3200									98.7

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-3	-1	0	-15	-13	-11
85	0	0	0	-6	-4	-2	-18	-16	-14
80	0	0	0	-7	-5	-3	-20	-18	-16
75	0	0	0	-9	-7	-5	-22	-20	-18
70	0	0	0	-11	-9	-7	-24	-22	-20
65	0	0	0	-12	-10	-8	-26	-24	-22
60	-1	0	0	-13	-11	-9	-28	-26	-24
55	-1	0	0	-14	-12	-10	-29	-27	-25
50	-2	0	0	-16	-14	-12	-31	-29	-27
45	-3	-1	0	-17	-15	-13	-32	-30	-28
40	-4	-2	0	-19	-17	-15	-34	-32	-30

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes****No Reverse Thrust****Weight Adjustment (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-1.9	-1.9	-1.9	-8.9	-8.9	-8.9	-15.3	-15.3	-15.3
90	-2.1	-2.1	-2.1	-8.6	-8.6	-8.6	-14.4	-14.4	-14.4
85	-2.3	-2.3	-2.3	-8.4	-8.4	-8.4	-13.5	-13.5	-13.5
80	-2.4	-2.4	-2.4	-8.1	-8.1	-8.1	-12.6	-12.6	-12.6
75	-2.4	-2.4	-2.4	-7.7	-7.7	-7.7	-11.8	-11.8	-11.8
70	-2.4	-2.4	-2.4	-7.3	-7.3	-7.3	-10.9	-10.9	-10.9
65	-2.4	-2.4	-2.4	-6.8	-6.8	-6.8	-10.0	-10.0	-10.0
60	-2.2	-2.2	-2.2	-6.3	-6.3	-6.3	-9.2	-9.2	-9.2
55	-2.0	-2.0	-2.0	-5.7	-5.7	-5.7	-8.3	-8.3	-8.3
50	-1.8	-1.8	-1.8	-5.1	-5.1	-5.1	-7.4	-7.4	-7.4
45	-1.6	-1.6	-1.6	-4.5	-4.5	-4.5	-6.6	-6.6	-6.6
40	-1.4	-1.4	-1.4	-3.9	-3.9	-3.9	-5.7	-5.7	-5.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1400	59.9	53.1	46.2						
1600	95.5	89.1	82.7						
2000				53.6	45.7	37.9			
2200				86.0	78.1	70.2			
2400						102.8			
3000							44.2	36.1	
3200							65.6	57.0	48.6
3400							88.7	79.3	70.2
3600								103.2	93.7

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-8	-6	-4	-25	-23	-21
85	0	0	0	-10	-8	-6	-28	-26	-24
80	0	0	0	-12	-10	-8	-31	-29	-27
75	0	0	0	-14	-12	-10	-34	-32	-30
70	-1	0	0	-16	-14	-12	-36	-34	-32
65	-2	0	0	-18	-16	-14	-39	-37	-35
60	-3	-1	0	-20	-18	-16	-41	-39	-37
55	-4	-2	0	-22	-20	-18	-43	-41	-39
50	-5	-3	-1	-23	-21	-19	-45	-43	-41
45	-7	-5	-3	-25	-23	-21	-46	-44	-42
40	-8	-6	-4	-27	-25	-23	-48	-46	-44

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	95.7	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	96.8	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	97.6	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.3	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.0	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	99.7	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	99.3	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	98.5	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	97.8	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	97.0	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	96.2	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
5	95.4	97.0	99.0	99.3	99.6	99.8	100.1	100.3	100.6	100.9	101.2	101.0	100.9
0	94.6	96.2	98.2	98.6	98.8	99.1	99.3	99.6	99.8	100.1	100.4	100.3	100.1
-5	93.8	95.4	97.5	97.8	98.1	98.3	98.6	98.8	99.1	99.4	99.6	99.5	99.4
-10	93.0	94.6	96.7	97.0	97.3	97.5	97.8	98.0	98.3	98.6	98.8	98.7	98.6
-15	92.2	93.8	95.9	96.3	96.5	96.8	97.0	97.3	97.5	97.8	98.1	97.9	97.8
-20	91.4	93.0	95.2	95.5	95.7	96.0	96.2	96.5	96.7	97.0	97.3	97.1	97.0
-25	90.5	92.2	94.4	94.7	94.9	95.2	95.4	95.7	95.9	96.2	96.5	96.3	96.2
-30	89.7	91.3	93.6	93.9	94.1	94.4	94.6	94.9	95.1	95.4	95.6	95.5	95.4
-35	88.8	90.5	92.8	93.1	93.3	93.6	93.8	94.0	94.3	94.6	94.8	94.7	94.6
-40	88.0	89.6	91.9	92.3	92.5	92.7	93.0	93.2	93.5	93.7	94.0	93.9	93.7
-45	87.1	88.8	91.1	91.4	91.7	91.9	92.1	92.4	92.6	92.9	93.1	93.0	92.9
-50	86.2	87.9	90.3	90.6	90.8	91.1	91.3	91.5	91.8	92.0	92.3	92.2	92.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Takeoff %N1 - High Altitudes
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.2					
35	99.1	99.0	98.8			
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5	100.9	101.8	102.0	101.9	101.8	101.8
0	100.1	101.0	101.9	102.1	102.0	102.0
-5	99.4	100.3	101.1	101.5	101.8	101.9
-10	98.6	99.5	100.3	100.7	101.0	101.1
-15	97.8	98.7	99.5	99.9	100.2	100.3
-20	97.0	97.9	98.7	99.1	99.3	99.5
-25	96.2	97.1	97.9	98.2	98.5	98.6
-30	95.4	96.3	97.1	97.4	97.7	97.8
-35	94.6	95.4	96.3	96.6	96.8	97.0
-40	93.7	94.6	95.4	95.7	96.0	96.1
-45	92.9	93.7	94.5	94.9	95.1	95.3
-50	92.0	92.9	93.7	94.0	94.2	94.4

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	70	69	69	67	65	63	61	59	57	55	53	
30	67	65	66	65	65	63	61	59	57	55	53	51
25	67	65	65	63	64	63	61	59	57	55	53	51
20	67	65	65	63	64	63	61	59	57	55	53	51
15	67	65	65	63	64	63	61	59	57	55	53	51
10 & BELOW	67	65	65	63	64	63	61	59	57	55	53	51

Assumed Temperature Reduced Thrust**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	94.1	94.4	95.2	95.4	96.3	97.2	97.7	97.9	98.0	98.0	98.0	98.0
70	94.8	95.2	95.4	95.0	95.6	96.5	97.1	97.3	97.3	97.3	97.3	97.3
65	95.6	96.0	96.1	95.9	96.2	96.4	96.4	96.6	96.6	96.6	96.6	96.6
60	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.7													
100	15.0	10.3												
90	14.0	11.5												
80	12.8	11.7	7.2											
70	10.7	10.7	8.3	7.2	5.6									
60	9.2	9.4	8.6	8.4	6.8	5.7	4.1							
50	7.8	7.5	7.5	7.2	7.0	6.9	5.3	4.2	2.7					
40		6.0	6.1	6.1	5.9	5.8	5.8	5.4	4.2	4.0	4.6			
30		4.6	4.4	4.5	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	4.0	
20			2.9	2.9	2.9	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.7
10			1.5	1.5	1.5	1.4	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes

Maximum Assumed Temperature (Table 1 of 3)

Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	54	54	52	50	48	47
5	54	52	50	50	48	47
0 & BELOW	54	52	49	50	48	47

Maximum Takeoff %N1 (Table 2 of 3)

Based on engine bleed for packs on and engine anti-ice off

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.9					
55	95.3	95.5	95.6	97.5		
50	96.3	96.0	95.4	96.8	98.5	99.4
45	97.3	97.0	96.6	97.4	98.4	99.0
40	98.2	98.0	97.7	98.3	99.0	99.4
35	99.1	99.0	98.8	99.1	99.5	99.8
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5		101.8	102.0	101.9	101.8	101.8
0				102.1	102.0	102.0
-5				101.5	101.8	101.9
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - High Altitudes
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.5										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.7								
70	11.3	11.2	10.7								
60	10.0	9.2	9.4	7.5							
50		7.9	7.8	7.5	6.0	5.9	5.8				
40		6.5	6.0	6.2	6.0	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

- 1. Determine Maximum Assumed Temperature allowed from Table 1.
- 2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
- 3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
- 4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (26K Derate)
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	169	171	175	161	163	168									
85	163	166	171	157	159	164	156	157	162						
80	158	160	167	152	154	160	151	152	158	148	149	155	145	146	153
75	153	155	162	147	148	156	146	147	154	142	144	151	140	141	149
70	147	149	158	141	143	152	140	141	150	137	138	147	135	136	145
65	141	143	153	135	137	147	134	136	146	131	133	143	129	130	140
60	135	136	148	129	131	143	128	129	141	125	126	138	123	124	136
55	128	129	143	123	124	137	122	123	136	119	120	133	117	118	131
50	121	122	137	116	117	132	115	116	130	112	113	128	110	111	126
45	113	114	131	109	110	126	108	108	125	105	106	122	103	104	120
40	105	106	125	101	102	120	100	101	119	98	99	117	96	97	115

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	5	6						4	5						-3	-3					
60	140	4	5	6	7				3	4	5	6				-2	-3	-3	-4			
50	122	2	3	4	5	6	7	9	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-5	-6
40	104	1	1	3	4	5	6	7	1	1	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-5
30	86	0	0	1	2	4	5	6	0	0	1	3	4	5	6	0	0	-1	-2	-2	-3	-4
20	68	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	-1	-1	-2	-3	-3
-60	-76	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
90	-4	-2	0	1	1		-2	-2	-1	0	0	0	0	1
80	-3	-2	0	1	1		-2	-1	-1	0	0	0	1	1
70	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
60	-2	-1	0	1	1		-2	-1	-1	0	0	1	1	1
50	-1	0	0	0	1		-2	-1	0	0	0	1	1	1
40	0	0	0	0	0		-2	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	95	93					
60	140	95	93	92	90			
50	122	97	95	92	90	88	86	83
40	104	101	99	96	93	89	86	83
30	86	104	103	100	96	92	88	85
20	68	104	104	101	98	94	90	87
-60	-76	106	105	102	99	95	92	89

Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	159	159	161												
70	154	154	156	148	148	150									
65	147	148	151	141	142	145	140	140	143						
60	140	141	145	135	135	140	134	134	138	130	131	136	128	128	133
55	133	134	140	128	129	134	127	127	133	124	125	130	122	122	128
50	126	127	134	121	122	129	120	121	127	117	118	125	115	116	123
45	118	119	128	114	115	123	113	113	122	110	111	119	108	109	117
40	110	111	121	106	107	117	105	106	116	102	103	113	100	101	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	4					4	2	3	3	4	4	4	-2	-1	-2	-2	-2	-3
40	104	3	3	4	4	5	5	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
30	86	1	2	3	3	4	4	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
20	68	0	1	2	2	3	3	1	1	2	2	3	3	0	-1	-1	-1	-1	-2
10	50	0	0	1	2	2	3	0	1	1	2	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-3	-1	0	0	0		0	0	0	0	0	0	0	0
70	-2	-1	0	0	0		-1	0	0	0	0	0	0	0
65	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
60	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
55	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
50	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
45	-1	-1	0	0	0		-1	-1	-1	0	0	0	0	0
40	-1	0	0	0	0		-2	-1	-1	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	83					
40	104	83	82	81	80	80	79
30	86	85	83	81	80	80	79
20	68	87	85	83	82	80	79
10	50	88	87	85	83	81	81
0	32	88	87	86	84	83	82
-60	-76	89	88	87	85	84	83

Takeoff Speeds - Wet Runway (26K Derate)
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	164	171	175	156	164	168									
85	157	166	171	150	159	164	151	157	162						
80	151	160	167	145	154	160	145	152	158	141	149	155	140	146	153
75	145	155	162	139	148	156	139	147	154	136	144	151	134	141	149
70	139	149	158	133	143	152	133	141	150	130	138	147	128	136	145
65	133	143	153	127	137	148	127	136	146	124	133	143	122	130	140
60	126	136	148	121	131	143	120	129	141	117	126	138	115	124	136
55	119	129	143	114	124	137	113	123	136	111	120	133	109	118	131
50	111	122	137	107	117	132	106	116	130	104	113	128	102	111	126
45	104	114	131	99	110	126	99	108	125	96	106	122	95	104	120
40	96	106	125	92	102	120	91	101	119	89	99	117	87	97	115

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						4	5						-3	-4								
60	140	5	6	7	9				3	4	5	6				-2	-3	-3	-4						
50	122	3	4	5	6	8	9	12	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-5	-6			
40	104	1	2	3	4	6	7	9	1	1	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-5			
30	86	0	0	1	3	4	6	7	0	0	1	3	4	5	6	0	0	-1	-2	-2	-3	-4			
20	68	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			
-60	-76	0	0	1	2	4	5	7	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
90	-5	-3	0	3	6		-3	-2	-1	0	1	2	2	3
80	-5	-2	0	3	5		-4	-2	-1	0	1	2	2	3
70	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
60	-3	-1	0	2	3		-4	-3	-1	0	1	2	2	3
50	-2	-1	0	1	3		-4	-3	-1	0	1	2	3	4
40	-1	0	0	1	2		-5	-3	-1	0	1	3	4	5

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	95	93					
60	140	95	93	92	90			
50	122	97	95	92	90	88	86	83
40	104	101	99	96	93	89	86	83
30	86	104	103	100	96	92	88	85
20	68	104	104	101	98	94	90	87
-60	-76	106	105	102	99	95	92	89

Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
75	156	159	161												
70	148	154	156	141	148	150									
65	140	148	151	134	142	145									
60	133	141	145	127	135	140	128	134	138	125	131	136	123	128	133
55	125	134	140	120	129	134	120	127	133	117	125	130	116	122	128
50	118	127	134	113	122	129	112	121	127	110	118	125	108	116	123
45	110	119	128	105	115	123	104	113	122	102	111	119	100	109	117
40	101	111	121	97	107	117	97	106	116	95	103	113	93	101	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	7					4							-2					
40	104	4	5	6	6	7	7	2	3	3	4	4	4	-1	-2	-2	-2	-2	-3
30	86	2	3	4	4	5	6	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
20	68	0	1	2	3	4	4	1	1	2	2	3	3	0	-1	-1	-1	-1	-2
10	50	0	0	1	2	3	4	0	1	1	2	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	2	3	3	0	0	1	1	2	2	0	0	0	-1	-1	-1
-60	-76	0	0	1	2	3	3	0	0	1	1	2	2	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
75	-6	-3	0	3	5		-1	-1	-1	0	1	1	2	2
70	-5	-3	0	3	5		-2	-1	-1	0	0	1	2	2
65	-5	-2	0	3	5		-2	-2	-1	0	0	1	2	2
60	-4	-2	0	2	5		-3	-2	-1	0	0	1	2	2
55	-4	-2	0	2	4		-3	-2	-1	0	0	1	2	2
50	-3	-2	0	2	3		-4	-2	-1	0	1	1	2	2
45	-3	-2	0	1	3		-4	-2	-1	0	1	1	2	3
40	-2	-1	0	1	2		-4	-3	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	83					
40	104	83	82	81	80	80	79
30	86	85	83	81	80	80	79
20	68	87	85	83	82	80	79
10	50	88	87	85	83	81	81
0	32	88	87	86	84	83	82
-60	-76	89	88	87	85	84	83

Maximum Allowable Clearway (26K Derate)

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	150
1600	180
2000	210
2400	240
2800	270
3200	290

Maximum Allowable Clearway - High Altitudes (26K Derate)

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
2000	200
2500	230
3000	250
3500	280
4000	310
4500	340

Clearway and Stopway V1 Adjustments (26K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
200	-5	-4	-3	-3				
100	-3	-2	-2	-2				
0	0	0	0	0	0	0	0	0
-100	1	1	1	1	2	2	2	1
-200	1	1	1	1	4	3	2	2
-300	1	1	1	1	6	5	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes (26K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)					
	DRY RUNWAY			WET RUNWAY		
	100	120	140	100	120	140
300	-3	-3	-3			
200	-3	-3	-2			
100	-2	-2	-1			
0	0	0	0	0	0	0
-100	0	0	0	2	1	1
-200	0	0	0	4	2	2
-300	0	0	0	4	3	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (26K Derate)**Flaps 1 and 5**

WEIGHT (1000 KG)	C.G. (%MAC)									
	6	9	14	18	22	26	30	32	33	36
80	8 1/2	8 1/2	7 1/2	7	6 1/4	5 1/2	4 3/4	4 1/2	4 1/4	3 3/4
70	8 1/4	7 3/4	7	6 1/4	5 3/4	5	4 1/4	4	3 3/4	3 1/2
60	7 1/4	7	6 1/4	5 3/4	5	4 1/2	3 3/4	3 1/2	3 1/4	3
50	6 1/2	6 1/4	5 1/2	5	4 1/4	3 3/4	3 1/4	3	2 3/4	2 3/4
45	6 1/4	5 3/4	5	4 1/2	4	3 1/2	3	2 3/4	2 3/4	2 3/4
35	6 1/4	5 3/4	5	4 1/2	4	3 1/2	3	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)									
	6	9	11	16	24	28	29	31	33	36
80	8 1/2	8 1/2	8 1/4	6 1/2	5	4 1/4	4	3 1/2	3 1/4	2 3/4
70	8 1/2	8 1/4	7 1/2	6	4 1/2	3 1/2	3 1/2	3	2 3/4	2 3/4
60	7 3/4	7	6 1/2	5 1/4	3 3/4	3	3	2 3/4	2 3/4	2 3/4
50	6 1/4	5 3/4	5 1/4	4 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
45	5 1/4	4 3/4	4 1/2	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
35	5 1/4	4 3/4	4 1/2	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-12.8	-15.3	-17.8	-15.8	-18.2	-20.7	-21.9	-24.4	-26.9
90	-11.8	-14.3	-16.8	-14.3	-16.8	-19.3	-19.7	-22.1	-24.6
85	-10.7	-13.2	-15.7	-12.9	-15.4	-17.9	-17.4	-19.9	-22.4
80	-9.7	-12.2	-14.7	-11.5	-14.0	-16.5	-15.2	-17.7	-20.2
75	-8.8	-11.2	-13.7	-10.2	-12.7	-15.2	-13.2	-15.7	-18.2
70	-7.8	-10.3	-12.8	-8.9	-11.4	-13.9	-11.4	-13.9	-16.4
65	-6.9	-9.4	-11.9	-7.8	-10.3	-12.8	-9.7	-12.2	-14.7
60	-6.0	-8.5	-11.0	-6.7	-9.2	-11.7	-8.1	-10.6	-13.1
55	-5.2	-7.7	-10.2	-5.7	-8.2	-10.6	-6.7	-9.2	-11.7
50	-4.3	-6.8	-9.3	-4.7	-7.2	-9.7	-5.5	-8.0	-10.5
45	-3.5	-6.0	-8.5	-3.7	-6.2	-8.7	-4.2	-6.7	-9.2
40	-2.7	-5.2	-7.7	-2.8	-5.3	-7.8	-3.0	-5.5	-8.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200							33.1		
1400	41.6			45.3	30.9		51.5	37.4	
1600	61.6	46.2		65.2	49.9	32.5	71.0	56.1	39.0
1800	83.3	66.6	47.9	86.7	70.2	51.6	91.8	75.8	57.7
2000		88.7	68.4		92.0	72.0		96.8	77.6
2200			90.8			93.9			98.7

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-14	-9	-4	-8	-3	0	0	0	0
85	-16	-11	-6	-10	-5	0	0	0	0
80	-17	-12	-7	-12	-7	-2	0	0	0
75	-19	-14	-9	-14	-9	-4	-1	0	0
70	-20	-15	-10	-15	-10	-5	-4	0	0
65	-21	-16	-11	-17	-12	-7	-7	-2	0
60	-22	-17	-12	-19	-14	-9	-11	-6	-1
55	-23	-18	-13	-20	-15	-10	-14	-9	-4
50	-24	-19	-14	-22	-17	-12	-17	-12	-7
45	-25	-20	-15	-23	-18	-13	-19	-14	-9
40	-25	-20	-15	-24	-19	-14	-20	-15	-10

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-15.1	-17.5	-20.0	-17.6	-20.1	-22.6	-23.0	-25.5	-28.0
85	-13.9	-16.4	-18.9	-16.1	-18.6	-21.1	-20.6	-23.1	-25.6
80	-12.8	-15.3	-17.8	-14.5	-17.0	-19.5	-18.3	-20.8	-23.3
75	-11.7	-14.2	-16.7	-13.1	-15.6	-18.1	-16.1	-18.6	-21.1
70	-10.6	-13.1	-15.6	-11.7	-14.2	-16.7	-14.2	-16.7	-19.2
65	-9.6	-12.1	-14.5	-10.4	-12.9	-15.4	-12.3	-14.8	-17.3
60	-8.5	-11.0	-13.5	-9.2	-11.7	-14.2	-10.7	-13.2	-15.7
55	-7.6	-10.1	-12.6	-8.1	-10.6	-13.1	-9.2	-11.7	-14.2
50	-6.6	-9.1	-11.6	-7.0	-9.5	-12.0	-7.9	-10.4	-12.9
45	-5.7	-8.2	-10.7	-6.0	-8.5	-11.0	-6.7	-9.2	-11.7
40	-4.8	-7.3	-9.8	-5.1	-7.6	-10.1	-5.7	-8.2	-10.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1800							43.4		
2000				43.2			69.3	41.4	
2200	58.6			77.0	40.7		95.7	67.4	39.5
2400	98.8	55.6			74.5	38.2		93.7	65.4
2600		95.7	52.7			71.9			91.7
2800			92.7						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-23	-16	-8	-12	-5	0	0	0	0
85	-25	-18	-10	-16	-8	-1	0	0	0
80	-27	-20	-12	-19	-11	-4	0	0	0
75	-29	-22	-14	-22	-14	-7	-2	0	0
70	-31	-24	-16	-25	-17	-10	-8	0	0
65	-33	-26	-18	-28	-20	-13	-13	-6	0
60	-35	-28	-20	-30	-23	-15	-18	-11	-3
55	-37	-29	-22	-33	-26	-18	-23	-16	-8
50	-39	-31	-24	-36	-28	-21	-28	-20	-13
45	-41	-33	-26	-38	-31	-23	-32	-25	-17
40	-42	-35	-27	-41	-33	-26	-37	-29	-22

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-17.8	-18.8	-19.8	-20.7	-21.7	-22.7	-26.9	-27.9	-28.9
90	-16.8	-17.8	-18.8	-19.3	-20.3	-21.3	-24.6	-25.6	-26.6
85	-15.7	-16.7	-17.7	-17.9	-18.9	-19.9	-22.4	-23.4	-24.4
80	-14.7	-15.7	-16.7	-16.5	-17.5	-18.5	-20.2	-21.2	-22.2
75	-13.7	-14.7	-15.7	-15.2	-16.2	-17.2	-18.2	-19.2	-20.2
70	-12.8	-13.8	-14.8	-13.9	-14.9	-15.9	-16.4	-17.4	-18.3
65	-11.9	-12.9	-13.9	-12.8	-13.8	-14.8	-14.7	-15.7	-16.7
60	-11.0	-12.0	-13.0	-11.7	-12.7	-13.7	-13.1	-14.1	-15.1
55	-10.2	-11.2	-12.2	-10.6	-11.6	-12.6	-11.7	-12.7	-13.7
50	-9.3	-10.3	-11.3	-9.7	-10.7	-11.7	-10.5	-11.5	-12.5
45	-8.5	-9.5	-10.5	-8.7	-9.7	-10.7	-9.2	-10.2	-11.2
40	-7.7	-8.7	-9.7	-7.8	-8.8	-9.8	-8.0	-9.0	-10.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1600				32.5			39.0	32.9	
1800	47.9	41.4	35.0	51.6	45.1	38.7	57.7	51.3	45.1
2000	68.4	61.4	54.5	72.0	65.0	58.2	77.6	70.8	64.2
2200	90.8	83.1	75.6	93.9	86.4	79.1	98.7	91.6	84.5
2400			98.3			101.3			

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-4	-2	0	0	0	0	0	0	0
85	-6	-4	-2	0	0	0	0	0	0
80	-7	-5	-3	-2	0	0	0	0	0
75	-9	-7	-5	-4	-2	0	0	0	0
70	-10	-8	-6	-5	-3	-1	0	0	0
65	-11	-9	-7	-7	-5	-3	0	0	0
60	-12	-10	-8	-9	-7	-5	-1	0	0
55	-13	-11	-9	-10	-8	-6	-4	-2	0
50	-14	-12	-10	-12	-10	-8	-7	-5	-3
45	-15	-13	-11	-13	-11	-9	-9	-7	-5
40	-15	-13	-11	-14	-12	-10	-10	-8	-6

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-20.1	-21.1	-22.1	-22.6	-23.6	-24.6	-28.0	-29.0	-30.0
85	-18.9	-19.9	-20.9	-21.1	-22.1	-23.1	-25.6	-26.6	-27.6
80	-17.8	-18.8	-19.8	-19.5	-20.5	-21.5	-23.3	-24.3	-25.3
75	-16.7	-17.7	-18.7	-18.1	-19.1	-20.1	-21.1	-22.1	-23.1
70	-15.6	-16.6	-17.6	-16.7	-17.7	-18.7	-19.2	-20.2	-21.2
65	-14.6	-15.6	-16.6	-15.4	-16.4	-17.4	-17.3	-18.3	-19.3
60	-13.5	-14.5	-15.5	-14.2	-15.2	-16.2	-15.7	-16.7	-17.7
55	-12.6	-13.6	-14.6	-13.1	-14.1	-15.1	-14.2	-15.2	-16.2
50	-11.6	-12.6	-13.6	-12.0	-13.0	-14.0	-12.9	-13.9	-14.9
45	-10.7	-11.7	-12.7	-11.0	-12.0	-13.0	-11.7	-12.7	-13.7
40	-9.8	-10.8	-11.8	-10.1	-11.1	-12.1	-10.7	-11.7	-12.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2200							36.9		
2400				34.8			62.8	51.1	39.5
2600	48.7	31.4		68.5	53.2	38.2	89.1	77.2	65.4
2800	88.7	70.5	52.7		87.3	71.9			91.7
3000			92.7						

- 1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
- 2. Adjust field length available by -50 m/+50 m for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-8	-5	-2	0	0	0	0	0	0
85	-10	-7	-4	-1	0	0	0	0	0
80	-12	-9	-6	-4	-1	0	0	0	0
75	-14	-11	-8	-7	-4	-1	0	0	0
70	-16	-13	-10	-10	-7	-4	0	0	0
65	-18	-15	-12	-13	-10	-7	0	0	0
60	-20	-17	-14	-15	-12	-9	-3	0	0
55	-22	-19	-16	-18	-15	-12	-8	-5	-2
50	-24	-21	-18	-21	-18	-15	-13	-10	-7
45	-26	-23	-20	-23	-20	-17	-17	-14	-11
40	-27	-24	-21	-26	-23	-20	-22	-19	-16

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-0.8	-0.8	-0.8	-6.5	-6.5	-6.5	-11.6	-11.6	-11.6
90	-1.0	-1.0	-1.0	-6.3	-6.3	-6.3	-11.1	-11.1	-11.1
85	-1.2	-1.2	-1.2	-6.2	-6.2	-6.2	-10.6	-10.6	-10.6
80	-1.3	-1.3	-1.3	-6.0	-6.0	-6.0	-10.1	-10.1	-10.1
75	-1.5	-1.5	-1.5	-5.8	-5.8	-5.8	-9.5	-9.5	-9.5
70	-1.6	-1.6	-1.6	-5.6	-5.6	-5.6	-9.0	-9.0	-9.0
65	-1.6	-1.6	-1.6	-5.3	-5.3	-5.3	-8.4	-8.4	-8.4
60	-1.6	-1.6	-1.6	-5.0	-5.0	-5.0	-7.8	-7.8	-7.8
55	-1.5	-1.5	-1.5	-4.7	-4.7	-4.7	-7.2	-7.2	-7.2
50	-1.4	-1.4	-1.4	-4.3	-4.3	-4.3	-6.5	-6.5	-6.5
45	-1.3	-1.3	-1.3	-4.0	-4.0	-4.0	-5.9	-5.9	-5.9
40	-1.2	-1.2	-1.2	-3.6	-3.6	-3.6	-5.2	-5.2	-5.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1000	39.0								
1200	72.3	57.4	41.9						
1400	103.3	89.3	75.0	46.0	30.2				
1600				69.9	53.4	37.4			
1800				95.2	77.7	60.9	41.3		
2000					103.3	85.7	55.8	40.3	
2200							71.5	54.8	39.3
2400							88.7	70.4	53.8
2600								87.5	69.3
2800									86.3
3000									104.5

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-4	-2	0	-13	-10	-8	-24	-21	-19
85	-6	-3	-1	-15	-12	-10	-26	-24	-21
80	-7	-4	-2	-17	-14	-12	-29	-26	-24
75	-8	-5	-3	-18	-16	-13	-31	-28	-26
70	-9	-6	-4	-20	-17	-15	-33	-30	-28
65	-9	-7	-4	-21	-19	-16	-35	-32	-30
60	-10	-8	-5	-22	-20	-17	-37	-34	-32
55	-11	-9	-6	-24	-21	-19	-38	-36	-33
50	-12	-9	-7	-25	-22	-20	-40	-37	-35
45	-13	-10	-8	-26	-24	-21	-41	-39	-36
40	-14	-11	-9	-27	-25	-22	-42	-40	-37

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.

2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****No Reverse Thrust****Weight Adjustments (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-2.6	-2.6	-2.6	-9.3	-9.3	-9.3	-15.0	-15.0	-15.0
85	-2.8	-2.8	-2.8	-9.1	-9.1	-9.1	-14.4	-14.4	-14.4
80	-2.9	-2.9	-2.9	-9.0	-9.0	-9.0	-13.7	-13.7	-13.7
75	-3.1	-3.1	-3.1	-8.7	-8.7	-8.7	-13.1	-13.1	-13.1
70	-3.1	-3.1	-3.1	-8.4	-8.4	-8.4	-12.3	-12.3	-12.3
65	-3.2	-3.2	-3.2	-8.0	-8.0	-8.0	-11.4	-11.4	-11.4
60	-3.1	-3.1	-3.1	-7.5	-7.5	-7.5	-10.5	-10.5	-10.5
55	-3.0	-3.0	-3.0	-7.0	-7.0	-7.0	-9.5	-9.5	-9.5
50	-2.8	-2.8	-2.8	-6.4	-6.4	-6.4	-8.4	-8.4	-8.4
45	-2.6	-2.6	-2.6	-5.7	-5.7	-5.7	-7.3	-7.3	-7.3
40	-2.3	-2.3	-2.3	-5.0	-5.0	-5.0	-6.0	-6.0	-6.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	34.7								
1300	65.5								
1400	84.9	52.6							
1500		75.9	34.7						
1600		93.4	65.5						
1700			84.9						
1900				45.2					
2000				72.7					
2100				94.6	52.9				
2200					78.5				
2300					99.9	60.0			
2400						84.0			
3100							53.6		
3200							74.6		
3300							93.5	35.6	
3400								59.1	
3500								79.5	
3600								98.2	41.8
3700									64.5
3800									84.2

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -30 m/+30 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -30 m/+30 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-7	0	0	-19	-11	-4	-38	-30	-23
85	-8	-1	0	-21	-14	-6	-41	-34	-26
80	-9	-2	0	-23	-16	-8	-45	-38	-30
75	-11	-3	0	-26	-18	-11	-49	-41	-34
70	-12	-5	0	-28	-21	-13	-52	-45	-37
65	-14	-6	0	-31	-24	-16	-56	-48	-41
60	-15	-8	0	-34	-26	-19	-59	-52	-44
55	-17	-9	-2	-37	-29	-22	-63	-55	-48
50	-19	-11	-4	-40	-32	-25	-66	-59	-51
45	-21	-13	-6	-43	-36	-28	-69	-62	-54
40	-23	-15	-8	-47	-39	-32	-73	-65	-58

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.

2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-0.8	-0.8	-0.8	-6.5	-6.5	-6.5	-11.6	-11.6	-11.6
90	-1.0	-1.0	-1.0	-6.3	-6.3	-6.3	-11.1	-11.1	-11.1
85	-1.2	-1.2	-1.2	-6.2	-6.2	-6.2	-10.6	-10.6	-10.6
80	-1.3	-1.3	-1.3	-6.0	-6.0	-6.0	-10.1	-10.1	-10.1
75	-1.5	-1.5	-1.5	-5.8	-5.8	-5.8	-9.5	-9.5	-9.5
70	-1.6	-1.6	-1.6	-5.6	-5.6	-5.6	-9.0	-9.0	-9.0
65	-1.6	-1.6	-1.6	-5.3	-5.3	-5.3	-8.4	-8.4	-8.4
60	-1.6	-1.6	-1.6	-5.0	-5.0	-5.0	-7.8	-7.8	-7.8
55	-1.5	-1.5	-1.5	-4.7	-4.7	-4.7	-7.2	-7.2	-7.2
50	-1.4	-1.4	-1.4	-4.3	-4.3	-4.3	-6.5	-6.5	-6.5
45	-1.3	-1.3	-1.3	-4.0	-4.0	-4.0	-5.9	-5.9	-5.9
40	-1.2	-1.2	-1.2	-3.6	-3.6	-3.6	-5.2	-5.2	-5.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1200	41.9	35.6							
1400	75.0	69.2	63.2						
1600		100.3	94.7	37.4	31.1				
1800				60.9	54.4	47.9			
2000				85.7	78.8	71.9			
2200					104.4	97.3	39.3	33.3	
2400							53.8	47.5	41.4
2600							69.3	62.5	56.0
2800							86.3	78.9	71.7
3000							104.5	96.7	88.9

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-8	-7	-6	-19	-18	-17
85	-1	0	0	-10	-9	-8	-21	-20	-19
80	-2	-1	0	-12	-11	-10	-24	-23	-22
75	-3	-2	-1	-13	-12	-11	-26	-25	-24
70	-4	-3	-2	-15	-14	-13	-28	-27	-26
65	-4	-3	-2	-16	-15	-14	-30	-29	-28
60	-5	-4	-3	-17	-16	-15	-32	-31	-30
55	-6	-5	-4	-19	-18	-17	-33	-32	-31
50	-7	-6	-5	-20	-19	-18	-35	-34	-33
45	-8	-7	-6	-21	-20	-19	-36	-35	-34
40	-9	-8	-7	-22	-21	-20	-37	-36	-35

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). v V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes (26K Derate)****No Reverse Thrust****Weight Adjustment (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-1.6	-1.6	-1.6	-8.3	-8.3	-8.3	-14.7	-14.7	-14.7
90	-1.9	-1.9	-1.9	-8.2	-8.2	-8.2	-14.0	-14.0	-14.0
85	-2.1	-2.1	-2.1	-8.1	-8.1	-8.1	-13.3	-13.3	-13.3
80	-2.3	-2.3	-2.3	-7.9	-7.9	-7.9	-12.6	-12.6	-12.6
75	-2.4	-2.4	-2.4	-7.7	-7.7	-7.7	-11.8	-11.8	-11.8
70	-2.4	-2.4	-2.4	-7.3	-7.3	-7.3	-11.0	-11.0	-11.0
65	-2.4	-2.4	-2.4	-6.9	-6.9	-6.9	-10.2	-10.2	-10.2
60	-2.3	-2.3	-2.3	-6.3	-6.3	-6.3	-9.3	-9.3	-9.3
55	-2.1	-2.1	-2.1	-5.7	-5.7	-5.7	-8.3	-8.3	-8.3
50	-1.8	-1.8	-1.8	-5.1	-5.1	-5.1	-7.4	-7.4	-7.4
45	-1.6	-1.6	-1.6	-4.4	-4.4	-4.4	-6.5	-6.5	-6.5
40	-1.4	-1.4	-1.4	-3.8	-3.8	-3.8	-5.5	-5.5	-5.5

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-1.6	-1.6	-1.6	-8.3	-8.3	-8.3	-14.7	-14.7	-14.7
90	-1.9	-1.9	-1.9	-8.2	-8.2	-8.2	-14.0	-14.0	-14.0
85	-2.1	-2.1	-2.1	-8.1	-8.1	-8.1	-13.3	-13.3	-13.3
80	-2.3	-2.3	-2.3	-7.9	-7.9	-7.9	-12.6	-12.6	-12.6
75	-2.4	-2.4	-2.4	-7.7	-7.7	-7.7	-11.8	-11.8	-11.8
70	-2.4	-2.4	-2.4	-7.3	-7.3	-7.3	-11.0	-11.0	-11.0
65	-2.4	-2.4	-2.4	-6.9	-6.9	-6.9	-10.2	-10.2	-10.2
60	-2.3	-2.3	-2.3	-6.3	-6.3	-6.3	-9.3	-9.3	-9.3
55	-2.1	-2.1	-2.1	-5.7	-5.7	-5.7	-8.3	-8.3	-8.3
50	-1.8	-1.8	-1.8	-5.1	-5.1	-5.1	-7.4	-7.4	-7.4
45	-1.6	-1.6	-1.6	-4.4	-4.4	-4.4	-6.5	-6.5	-6.5
40	-1.4	-1.4	-1.4	-3.8	-3.8	-3.8	-5.5	-5.5	-5.5

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500	34.7								
1600	65.5	49.5							
1700	84.9	73.9	60.7						
1800		91.7	81.5						
1900			98.4						
2300				60.0	38.6				
2400				84.0	67.8	48.4			
2500					90.3	75.0			
2600						96.7			
3600							41.8		
3700							64.5	39.4	
3800							84.2	62.3	36.9
3900								82.4	60.2
4000									80.5
4100									99.1

- 1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
- 2. Adjust “Good” field length available by -30 m/+30 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -30 m/+30 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -50 m/+50 m for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-4	-1	0	-23	-20	-17
85	0	0	0	-6	-3	0	-26	-23	-20
80	0	0	0	-8	-5	-2	-30	-27	-24
75	0	0	0	-11	-8	-5	-34	-31	-28
70	0	0	0	-13	-10	-7	-37	-34	-31
65	0	0	0	-16	-13	-10	-41	-38	-35
60	0	0	0	-19	-16	-13	-44	-41	-38
55	-2	0	0	-22	-19	-16	-48	-45	-42
50	-4	-1	0	-25	-22	-19	-51	-48	-45
45	-6	-3	0	-28	-25	-22	-54	-51	-48
40	-8	-5	-2	-32	-29	-26	-58	-55	-52

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 - (26K Derate)**Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	94.8	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	95.4	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.0	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	96.8	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	97.4	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.0	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	97.6	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	96.8	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	96.0	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	95.2	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	94.5	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
5	93.7	95.0	96.4	97.0	97.6	98.0	98.3	98.6	99.0	99.4	99.8	100.3	100.7
0	92.9	94.2	95.6	96.3	96.9	97.2	97.5	97.9	98.2	98.6	99.0	99.5	100.0
-5	92.0	93.4	94.8	95.5	96.1	96.4	96.7	97.1	97.5	97.9	98.3	98.7	99.2
-10	91.2	92.6	94.0	94.7	95.3	95.6	96.0	96.3	96.7	97.1	97.5	98.0	98.4
-15	90.4	91.7	93.2	93.9	94.5	94.8	95.2	95.6	95.9	96.3	96.7	97.2	97.6
-20	89.6	90.9	92.4	93.0	93.7	94.0	94.4	94.8	95.2	95.6	95.9	96.4	96.8
-25	88.7	90.1	91.6	92.2	92.9	93.2	93.6	94.0	94.4	94.8	95.2	95.6	96.0
-30	87.9	89.2	90.7	91.4	92.0	92.4	92.8	93.2	93.6	94.0	94.3	94.8	95.2
-35	87.0	88.4	89.9	90.5	91.2	91.6	91.9	92.4	92.8	93.1	93.5	94.0	94.4
-40	86.1	87.5	89.0	89.7	90.3	90.7	91.1	91.5	91.9	92.3	92.7	93.1	93.6
-45	85.3	86.6	88.2	88.8	89.5	89.9	90.3	90.7	91.1	91.5	91.9	92.3	92.7
-50	84.4	85.7	87.3	87.9	88.6	89.0	89.4	89.9	90.3	90.6	91.0	91.5	91.9

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (26K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.1					
35	99.0	98.8	98.9			
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5	100.7	101.6	101.7	101.7	101.6	101.6
0	100.0	100.8	101.7	101.9	101.8	101.8
-5	99.2	100.0	100.9	101.2	101.5	101.6
-10	98.4	99.3	100.1	100.4	100.7	100.8
-15	97.6	98.5	99.3	99.6	99.9	100.0
-20	96.8	97.7	98.5	98.8	99.1	99.2
-25	96.0	96.9	97.7	98.0	98.3	98.4
-30	95.2	96.0	96.9	97.2	97.4	97.6
-35	94.4	95.2	96.0	96.4	96.6	96.7
-40	93.6	94.4	95.2	95.5	95.8	95.9
-45	92.7	93.5	94.3	94.6	94.9	95.0
-50	91.9	92.7	93.5	93.8	94.0	94.1

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	71	71	69	67	65	63	61	59	57	55	53	
30	69	67	67	67	65	63	61	59	57	55	53	51
25	69	67	66	64	65	63	61	59	57	55	53	51
20	69	67	66	64	64	63	61	59	57	55	53	51
15	69	67	66	64	64	63	61	59	57	55	53	51
10 & BELOW	69	67	66	64	64	63	61	59	57	55	53	51

Assumed Temperature Reduced Thrust - (26K Derate)**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	93.4	93.7	94.2	94.7	95.4	96.1	96.9	97.3	97.6	97.8	97.8	97.7
70	94.1	94.4	94.4	94.4	94.7	95.4	96.2	96.6	96.9	97.1	97.1	97.1
65	94.8	95.1	95.2	95.2	95.3	95.4	95.5	96.0	96.2	96.5	96.4	96.4
60	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.9													
100	14.9	10.9												
90	14.0	11.7												
80	12.9	11.6	7.8											
70	11.2	10.7	8.6	7.8	6.3									
60	9.2	9.5	8.5	8.4	7.1	6.3	4.9							
50	7.8	7.8	7.5	7.1	6.9	7.0	5.6	4.9	3.4					
40		6.0	6.2	6.1	5.9	5.8	5.7	5.6	4.7	4.4	5.3			
30		4.6	4.6	4.6	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	3.9	
20			2.9	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.6
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	53	52	52	50	48	47
5	53	51	52	50	48	47
0 & BELOW	53	51	52	50	48	47

Maximum Takeoff %N1 (Table 2 of 3)
Based on engine bleed for packs on and engine anti-ice off

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.7					
55	95.0	95.3	96.4	97.9		
50	96.1	95.7	96.1	97.2	98.6	99.3
45	97.1	96.8	97.1	97.7	98.4	98.9
40	98.1	97.8	98.0	98.5	99.0	99.3
35	99.0	98.8	98.9	99.1	99.4	99.6
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5		101.6	101.7	101.7	101.6	101.6
0				101.9	101.8	101.8
-5				101.2	101.5	101.6
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.4										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.6								
70	11.3	11.2	10.6								
60	10.0	9.2	9.4	7.5							
50		7.9	7.9	7.5	6.1	5.9	5.8				
40		6.5	6.0	6.2	6.1	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (24K Derate)
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	172	172	174												
85	166	167	170	159	160	163									
80	160	162	166	154	155	159									
75	155	156	161	149	150	155	148	148	153	145	145	150	142	142	148
70	149	150	157	143	144	151	142	143	149	139	140	146	137	137	144
65	143	144	152	137	138	147	136	137	145	133	134	142	131	131	139
60	137	138	147	131	132	142	130	131	140	127	128	137	125	125	135
55	130	131	142	124	125	136	123	124	135	121	121	132	118	119	130
50	122	123	136	118	118	131	116	117	129	114	115	127	112	112	125
45	115	116	130	110	111	125	109	110	124	107	107	121	105	105	119
40	107	108	124	103	103	119	102	102	118	99	100	116	97	98	114

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	5	6						5	5						-3	-4					
60	140	4	5	5	6				3	4	5	6				-2	-3	-3	-4			
50	122	2	3	4	5	6	7	8	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-4	-5
40	104	1	2	3	4	5	6	7	1	2	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-4
30	86	0	0	1	3	4	5	6	0	0	1	2	4	5	6	0	0	-1	-1	-2	-3	-4
20	68	0	0	1	1	2	4	5	0	0	1	1	2	4	5	0	0	0	-1	-1	-2	-3
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	4	0	0	0	-1	-1	-1	-2

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
90	-4	-2	0	0	0	-2	-1	-1	0	0	0	0	0
80	-3	-2	0	1	1	-2	-1	-1	0	0	0	1	1
70	-2	-1	0	1	1	-1	-1	0	0	0	1	1	1
60	-1	-1	0	1	1	-1	-1	0	0	0	1	1	1
50	-1	0	0	0	0	-2	-1	0	0	0	0	0	0
40	0	0	0	0	0	-2	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	90	88					
60	140	90	88	87	85			
50	122	92	90	87	85	83	81	79
40	104	97	95	91	88	84	81	79
30	86	100	99	95	92	88	85	81
20	68	100	99	97	95	92	88	85
-60	-76	101	101	98	96	94	91	89

Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	154	154	156	148	148	150									
65	147	148	151	141	142	145									
60	140	141	145	135	136	140	134	134	138	131	131	135	128	129	133
55	133	134	140	128	129	134	127	128	133	124	125	130	122	122	128
50	126	127	134	121	122	129	120	121	127	117	118	125	115	116	123
45	118	119	128	114	115	123	113	113	122	110	111	119	108	109	117
40	111	111	121	106	107	117	105	106	115	103	103	113	100	102	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	5						5						-3					
40	104	4	4	5	5	6	6	3	4	4	5	6	6	-2	-2	-3	-3	-3	-3
30	86	3	3	4	4	5	5	2	3	3	4	4	5	-1	-2	-2	-2	-2	-3
20	68	1	2	2	3	4	4	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
10	50	0	1	1	2	3	3	0	1	1	2	2	3	0	0	-1	-1	-1	-1
0	32	0	0	1	2	2	2	0	1	1	1	2	2	0	0	0	-1	-1	-1
-60	-76	0	0	1	2	2	2	0	1	1	1	2	2	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
70	-2	-1	0	0	0	0	0	0	0	0	0	0	0
65	-2	-1	0	0	0	-1	0	0	0	0	0	0	0
60	-2	-1	0	0	0	-1	-1	0	0	0	0	0	0
55	-2	-1	0	0	0	-1	-1	0	0	0	0	0	0
50	-1	-1	0	0	0	-1	-1	0	0	0	0	0	0
45	-1	0	0	0	0	-1	-1	0	0	0	0	0	0
40	-1	0	0	0	0	-1	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	79					
40	104	79	79	78	77	78	77
30	86	81	80	78	77	78	77
20	68	85	83	81	80	78	77
10	50	88	86	84	82	81	80
0	32	88	86	85	84	82	81
-60	-76	89	87	86	84	83	82

Takeoff Speeds - Wet Runway (24K Derate)
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	167	172	174												
85	161	167	170	154	160	163									
80	155	162	166	148	155	159									
75	149	156	161	142	150	155	142	148	153	139	145	150	137	142	148
70	142	150	157	136	144	151	136	143	149	133	140	146	131	137	144
65	136	144	152	130	138	147	129	137	145	127	134	142	125	131	139
60	129	138	147	123	132	142	123	131	140	120	128	137	118	125	135
55	122	131	142	116	125	136	116	124	135	113	121	132	111	119	130
50	114	123	136	109	118	131	109	117	129	106	115	127	104	112	125
45	107	116	130	102	111	125	101	110	124	99	107	121	97	105	119
40	98	108	124	94	103	119	93	102	118	92	100	115	90	98	114

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10		-2	0	2	4	6	8	10		-2	0	2	4	6	8	10	
70	158	8	8							5	5							-3	-4						
60	140	5	6	8	9					3	4	5	6					-2	-3	-3	-4				
50	122	3	4	5	7	8	10	11		2	3	4	5	6	7	8		-2	-2	-3	-3	-4	-4	-5	
40	104	1	2	3	5	6	7	9		1	2	3	4	5	6	7		-1	-1	-2	-2	-3	-4	-4	
30	86	0	0	1	3	4	6	7		0	0	1	3	4	5	6		0	0	-1	-1	-2	-3	-4	
20	68	0	0	1	1	2	4	5		0	0	1	1	2	4	5		0	0	0	-1	-1	-2	-3	
-60	-76	0	0	1	1	2	3	4		0	0	1	1	2	3	4		0	0	0	-1	-1	-1	-2	

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
90	-6	-3	0	3	6		-3	-2	-1	0	1	1	2	2
80	-5	-3	0	3	5		-3	-2	-1	0	1	1	2	2
70	-4	-2	0	2	4		-3	-2	-1	0	1	1	2	2
60	-3	-2	0	2	3		-4	-2	-1	0	1	1	2	3
50	-2	-1	0	1	3		-4	-3	-1	0	1	2	3	3
40	-1	0	0	1	2		-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	90	88					
60	140	90	88	87	85			
50	122	92	90	87	85	83	81	79
40	104	97	95	91	88	84	81	79
30	86	100	99	95	92	88	85	81
20	68	100	99	97	95	92	88	85
-60	-76	101	101	98	96	94	91	89

Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	149	154	156	142	148	150									
65	141	148	151	135	142	145									
60	133	141	145	127	136	140	128	134	138	125	131	135	124	129	133
55	126	134	140	120	129	134	120	128	133	118	125	130	116	122	128
50	118	127	134	113	122	129	112	121	127	110	118	125	108	116	123
45	110	119	128	105	115	123	105	113	122	102	111	119	101	109	117
40	102	111	121	98	107	117	97	106	115	95	103	113	93	102	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
50	122	9					5							-3					
40	104	6	7	8	9	10	11	3	4	4	5	6	6	-2	-2	-3	-3	-3	-3
30	86	4	5	5	6	7	8	2	3	3	4	4	5	-1	-2	-2	-2	-2	-3
20	68	2	3	3	4	5	6	1	2	2	3	3	4	-1	-1	-1	-2	-2	-2
10	50	0	1	2	3	4	4	0	1	1	2	2	3	0	0	-1	-1	-1	-1
0	32	0	1	1	2	3	3	0	1	1	1	2	2	0	0	0	-1	-1	-1
-60	-76	0	1	1	2	3	3	0	1	1	1	2	2	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
70	-5	-3	0	3	5	-2	-2	-1	0	0	1	1	2		
65	-5	-3	0	2	5	-2	-2	-1	0	0	1	1	2		
60	-4	-2	0	2	5	-3	-2	-1	0	0	1	2	2		
55	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	2		
50	-3	-2	0	2	4	-3	-2	-1	0	1	1	2	2		
45	-3	-1	0	1	3	-3	-2	-1	0	1	1	2	3		
40	-2	-1	0	1	2	-4	-3	-1	0	1	1	2	3		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
50	122	79					
40	104	79	79	78	77	78	77
30	86	81	80	78	77	78	77
20	68	85	83	81	80	78	77
10	50	88	86	84	82	81	80
0	32	88	86	85	84	82	81
-60	-76	89	87	86	84	83	82

Maximum Allowable Clearway (24K Derate)

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	150
1600	180
2000	210
2400	240
2800	270
3200	290

Maximum Allowable Clearway - High Altitudes (24K Derate)

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
2000	200
2500	230
3000	260
3500	290
4000	310
4500	340

Clearway and Stopway V1 Adjustments (24K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-5	-4	-3	-3				
200	-5	-4	-3	-3				
100	-3	-2	-2	-2				
0	0	0	0	0	0	0	0	0
-100	1	1	1	1	3	2	1	1
-200	1	1	1	1	6	4	2	1
-300	1	1	1	1	7	6	3	1

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitude (24K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)					
	DRY RUNWAY			WET RUNWAY		
	100	120	140	100	120	140
300	-3	-3	-3			
200	-3	-3	-2			
100	-1	-1	-1			
0	0	0	0	0	0	0
-100	0	0	0	2	1	1
-200	0	0	0	3	2	1
-300	0	0	0	2	2	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (24K Derate)**Flaps 1 and 5**

WEIGHT (1000 KG)	C.G. (%MAC)									
	6	8	10	14	18	22	26	33	34	36
80	8 1/2	8 1/2	8 1/2	7 3/4	7	6 1/4	5 3/4	4 1/2	4 1/4	4
70	8 1/2	8 1/4	8	7 1/4	6 1/2	6	5 1/4	4	4	3 1/2
60	7 3/4	7 1/2	7	6 1/2	6	5 1/4	4 3/4	3 1/2	3 1/2	3 1/4
50	7	6 1/2	6 1/4	5 3/4	5 1/4	4 1/2	4	3	2 3/4	2 3/4
45	6 1/2	6 1/4	6	5 1/4	4 3/4	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4
35	6 1/2	6 1/4	6	5 1/4	4 3/4	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)									
	6	8	9	10	16	26	29	32	34	36
80	8 1/2	8 1/2	8 1/2	8 1/2	7	4 3/4	4 1/4	3 1/2	3 1/4	2 3/4
70	8 1/2	8 1/4	8	7 3/4	6 1/4	4 1/4	3 1/2	3	2 3/4	2 3/4
60	7 3/4	7 1/4	7	6 3/4	5 1/2	3 1/2	3	2 3/4	2 3/4	2 3/4
50	6 1/4	6	5 3/4	5 3/4	4 3/4	3	2 3/4	2 3/4	2 3/4	2 3/4
45	5 3/4	5 1/2	5 1/4	5	4 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
35	5 3/4	5 1/2	5 1/4	5	4 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-13.2	-15.4	-17.7	-16.5	-18.7	-21.0	-25.2	-27.5	-29.8
90	-12.1	-14.4	-16.6	-15.0	-17.2	-19.5	-22.3	-24.6	-26.9
85	-11.0	-13.3	-15.6	-13.5	-15.7	-18.0	-19.5	-21.8	-24.0
80	-10.0	-12.3	-14.5	-12.0	-14.3	-16.5	-16.8	-19.1	-21.3
75	-9.0	-11.3	-13.5	-10.6	-12.9	-15.2	-14.4	-16.6	-18.9
70	-8.0	-10.3	-12.6	-9.3	-11.6	-13.9	-12.2	-14.4	-16.7
65	-7.1	-9.4	-11.6	-8.1	-10.4	-12.7	-10.2	-12.5	-14.8
60	-6.2	-8.5	-10.7	-7.0	-9.2	-11.5	-8.6	-10.8	-13.1
55	-5.3	-7.6	-9.9	-5.9	-8.2	-10.5	-7.1	-9.4	-11.7
50	-4.5	-6.8	-9.1	-4.9	-7.2	-9.5	-5.9	-8.2	-10.5
45	-3.7	-6.0	-8.2	-3.9	-6.2	-8.5	-4.7	-7.0	-9.3
40	-2.9	-5.1	-7.4	-3.0	-5.2	-7.5	-3.5	-5.8	-8.1

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200				32.5			39.1		
1400	50.5	33.8		53.8	37.5		58.9	43.8	
1600	72.4	55.7		75.1	58.8	32.9	78.6	63.6	39.5
1800	94.4	77.6	50.9	96.4	80.2	54.2	98.4	83.3	59.3
2000		99.6	72.9		101.5	75.5		103.1	79.0
2200			94.8			96.8			98.8

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -30 m/+30 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-13	-8	-3	-7	-2	0	0	0	0
85	-14	-9	-4	-8	-3	0	0	0	0
80	-15	-10	-5	-9	-4	0	0	0	0
75	-16	-11	-6	-11	-6	-1	0	0	0
70	-18	-13	-8	-12	-7	-2	0	0	0
65	-19	-14	-9	-14	-9	-4	-4	0	0
60	-20	-15	-10	-16	-11	-6	-7	-2	0
55	-21	-16	-11	-18	-13	-8	-11	-6	-1
50	-22	-17	-12	-20	-15	-10	-15	-10	-5
45	-23	-18	-13	-21	-16	-11	-17	-12	-7
40	-23	-18	-13	-21	-16	-11	-18	-13	-8

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-15.8	-18.1	-20.4	-19.3	-21.6	-23.9	-26.4	-28.7	-31.0
90	-14.6	-16.8	-19.1	-17.6	-19.9	-22.1	-23.7	-26.0	-28.3
85	-13.3	-15.6	-17.8	-15.8	-18.1	-20.4	-21.0	-23.3	-25.6
80	-12.0	-14.3	-16.6	-14.1	-16.4	-18.7	-18.4	-20.7	-23.0
75	-10.9	-13.1	-15.4	-12.5	-14.8	-17.1	-16.0	-18.3	-20.6
70	-9.7	-12.0	-14.2	-11.0	-13.3	-15.6	-13.8	-16.1	-18.4
65	-8.6	-10.9	-13.2	-9.6	-11.9	-14.2	-11.9	-14.1	-16.4
60	-7.6	-9.9	-12.1	-8.4	-10.6	-12.9	-10.1	-12.4	-14.6
55	-6.6	-8.9	-11.1	-7.2	-9.5	-11.7	-8.5	-10.8	-13.1
50	-5.7	-7.9	-10.2	-6.1	-8.4	-10.6	-7.1	-9.3	-11.6
45	-4.7	-7.0	-9.2	-5.0	-7.3	-9.5	-5.6	-7.9	-10.2
40	-3.7	-6.0	-8.3	-3.9	-6.2	-8.4	-4.2	-6.5	-8.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1400							36.3		
1600	37.1			46.1			58.7	36.4	
1800	65.2	37.3		72.5	46.3		84.7	58.8	36.6
2000	94.2	65.4	37.6	100.4	72.7	46.5		84.9	59.0
2200		94.5	65.6		100.6	72.9			85.1
2400			94.7			100.8			

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION**Slush/Standing Water Takeoff (24K Derate)****No Reverse Thrust****V1 Adjustment (KIAS)**

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-17	-9	-2	-8	0	0	0	0	0
90	-18	-11	-3	-9	-2	0	0	0	0
85	-20	-12	-5	-11	-3	0	0	0	0
80	-21	-13	-6	-13	-5	0	0	0	0
75	-22	-15	-7	-15	-7	0	0	0	0
70	-24	-16	-9	-17	-9	-2	-1	0	0
65	-25	-18	-10	-19	-12	-4	-5	0	0
60	-27	-19	-12	-22	-14	-7	-10	-3	0
55	-28	-21	-13	-24	-17	-9	-15	-8	0
50	-29	-22	-14	-27	-19	-12	-20	-12	-5
45	-30	-22	-15	-28	-20	-13	-22	-15	-7
40	-29	-22	-14	-27	-20	-12	-23	-16	-8

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-17.7	-18.6	-19.5	-21.0	-21.9	-22.8	-29.7	-30.6	-31.5
90	-16.6	-17.5	-18.4	-19.5	-20.4	-21.3	-26.9	-27.8	-28.7
85	-15.6	-16.5	-17.4	-18.0	-18.9	-19.8	-24.0	-24.9	-25.8
80	-14.5	-15.4	-16.3	-16.5	-17.4	-18.4	-21.3	-22.2	-23.1
75	-13.5	-14.4	-15.3	-15.2	-16.1	-17.0	-18.9	-19.8	-20.7
70	-12.6	-13.5	-14.4	-13.9	-14.8	-15.7	-16.7	-17.6	-18.5
65	-11.6	-12.5	-13.4	-12.6	-13.5	-14.4	-14.8	-15.7	-16.6
60	-10.7	-11.6	-12.6	-11.5	-12.4	-13.3	-13.1	-14.0	-14.9
55	-9.9	-10.8	-11.7	-10.5	-11.4	-12.3	-11.7	-12.6	-13.5
50	-9.1	-10.0	-10.9	-9.5	-10.4	-11.3	-10.5	-11.4	-12.3
45	-8.2	-9.1	-10.0	-8.5	-9.4	-10.3	-9.3	-10.2	-11.1
40	-7.4	-8.3	-9.2	-7.5	-8.4	-9.3	-8.1	-9.0	-9.9

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1600	30.6			34.0			39.7	32.5	
1800	50.8	42.6	34.7	54.0	45.9	38.0	59.3	51.3	43.6
2000	72.7	63.8	55.2	75.7	66.9	58.3	81.5	72.3	63.7
2200	96.6	87.0	77.5	99.4	89.9	80.5		96.3	86.6
2400			101.7			104.4			

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-3	-1	0	0	0	0	0	0	0
85	-4	-2	0	0	0	0	0	0	0
80	-5	-3	-1	0	0	0	0	0	0
75	-6	-4	-2	-1	0	0	0	0	0
70	-8	-6	-4	-2	0	0	0	0	0
65	-9	-7	-5	-4	-2	0	0	0	0
60	-10	-8	-6	-6	-4	-2	0	0	0
55	-11	-9	-7	-8	-6	-4	-1	0	0
50	-12	-10	-8	-10	-8	-6	-5	-3	-1
45	-13	-11	-9	-11	-9	-7	-7	-5	-3
40	-13	-11	-9	-11	-9	-7	-8	-6	-4

- 1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

No Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-20.4	-21.3	-22.2	-23.9	-24.8	-25.7	-31.0	-31.9	-32.8
90	-19.1	-20.0	-20.9	-22.1	-23.0	-23.9	-28.3	-29.2	-30.1
85	-17.8	-18.7	-19.6	-20.4	-21.3	-22.2	-25.6	-26.5	-27.4
80	-16.6	-17.5	-18.4	-18.7	-19.6	-20.5	-23.0	-23.9	-24.8
75	-15.4	-16.3	-17.2	-17.1	-18.0	-18.9	-20.6	-21.5	-22.4
70	-14.2	-15.2	-16.1	-15.6	-16.5	-17.4	-18.4	-19.3	-20.2
65	-13.2	-14.1	-15.0	-14.2	-15.1	-16.0	-16.4	-17.3	-18.2
60	-12.1	-13.0	-13.9	-12.9	-13.8	-14.7	-14.6	-15.5	-16.4
55	-11.1	-12.0	-13.0	-11.7	-12.6	-13.6	-13.1	-14.0	-14.9
50	-10.2	-11.1	-12.0	-10.6	-11.5	-12.4	-11.6	-12.5	-13.4
45	-9.2	-10.1	-11.1	-9.5	-10.4	-11.3	-10.2	-11.1	-12.0
40	-8.3	-9.2	-10.1	-8.4	-9.3	-10.2	-8.7	-9.6	-10.5

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1800							36.6		
2000	37.6			46.5	42.8		59.0	56.1	53.5
2200	65.6	60.7	55.8	72.9	68.6	64.4	85.1	80.6	76.6
2400	94.7	89.4	84.1	100.8	96.0	91.1		108.7	103.6
2600			113.3						

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for available field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-3	-1	0	0	0	0	0	0	0
85	-5	-3	-1	0	0	0	0	0	0
80	-6	-4	-2	0	0	0	0	0	0
75	-7	-5	-3	0	0	0	0	0	0
70	-9	-7	-5	-2	0	0	0	0	0
65	-10	-8	-6	-4	-2	0	0	0	0
60	-12	-10	-8	-7	-5	-3	0	0	0
55	-13	-11	-9	-9	-7	-5	0	0	0
50	-14	-12	-10	-12	-10	-8	-5	-3	-1
45	-15	-13	-11	-13	-11	-9	-7	-5	-3
40	-14	-12	-10	-12	-10	-8	-8	-6	-4

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-0.4	-0.4	-0.4	-5.8	-5.8	-5.8	-11.0	-11.0	-11.0
90	-0.6	-0.6	-0.6	-5.8	-5.8	-5.8	-10.6	-10.6	-10.6
85	-0.9	-0.9	-0.9	-5.7	-5.7	-5.7	-10.2	-10.2	-10.2
80	-1.1	-1.1	-1.1	-5.7	-5.7	-5.7	-9.8	-9.8	-9.8
75	-1.3	-1.3	-1.3	-5.6	-5.6	-5.6	-9.3	-9.3	-9.3
70	-1.5	-1.5	-1.5	-5.4	-5.4	-5.4	-8.9	-8.9	-8.9
65	-1.5	-1.5	-1.5	-5.2	-5.2	-5.2	-8.3	-8.3	-8.3
60	-1.5	-1.5	-1.5	-5.0	-5.0	-5.0	-7.8	-7.8	-7.8
55	-1.5	-1.5	-1.5	-4.7	-4.7	-4.7	-7.2	-7.2	-7.2
50	-1.4	-1.4	-1.4	-4.3	-4.3	-4.3	-6.5	-6.5	-6.5
45	-1.3	-1.3	-1.3	-4.0	-4.0	-4.0	-5.9	-5.9	-5.9
40	-1.3	-1.3	-1.3	-3.6	-3.6	-3.6	-5.3	-5.3	-5.3

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1000	47.2								
1200	80.2	62.9	45.0	30.7					
1400		95.1	78.2	54.0	34.5				
1600				79.3	57.9	38.2	33.5		
1800					83.7	61.9	47.5	30.4	
2000						88.2	62.9	44.4	
2200							80.6	59.4	41.3
2400							101.0	76.4	55.9
2600								96.4	72.5
2800									91.8

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-4	-2	0	-13	-10	-8	-23	-21	-18
85	-5	-3	0	-14	-11	-9	-24	-22	-19
80	-6	-3	-1	-15	-12	-10	-26	-23	-21
75	-7	-4	-2	-16	-13	-11	-27	-25	-22
70	-8	-5	-3	-17	-15	-12	-29	-27	-24
65	-9	-6	-4	-19	-17	-14	-32	-29	-27
60	-9	-7	-4	-21	-18	-16	-34	-31	-29
55	-10	-8	-5	-22	-20	-17	-36	-33	-31
50	-11	-9	-6	-23	-21	-18	-37	-35	-32
45	-12	-9	-7	-24	-22	-19	-39	-36	-34
40	-12	-10	-7	-25	-22	-20	-39	-37	-34

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-1.6	-1.6	-1.6	-8.0	-8.0	-8.0	-14.3	-14.3	-14.3
90	-1.9	-1.9	-1.9	-8.0	-8.0	-8.0	-13.7	-13.7	-13.7
85	-2.1	-2.1	-2.1	-7.9	-7.9	-7.9	-13.1	-13.1	-13.1
80	-2.2	-2.2	-2.2	-7.7	-7.7	-7.7	-12.5	-12.5	-12.5
75	-2.3	-2.3	-2.3	-7.5	-7.5	-7.5	-11.8	-11.8	-11.8
70	-2.4	-2.4	-2.4	-7.2	-7.2	-7.2	-11.1	-11.1	-11.1
65	-2.4	-2.4	-2.4	-6.8	-6.8	-6.8	-10.3	-10.3	-10.3
60	-2.3	-2.3	-2.3	-6.4	-6.4	-6.4	-9.4	-9.4	-9.4
55	-2.1	-2.1	-2.1	-5.8	-5.8	-5.8	-8.5	-8.5	-8.5
50	-1.9	-1.9	-1.9	-5.3	-5.3	-5.3	-7.6	-7.6	-7.6
45	-1.8	-1.8	-1.8	-4.7	-4.7	-4.7	-6.7	-6.7	-6.7
40	-1.6	-1.6	-1.6	-4.2	-4.2	-4.2	-5.8	-5.8	-5.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1000	33.0								
1200	71.9	52.0	30.1						
1400	104.9	87.6	69.4						
1600			102.6	50.2					
1800				83.2	55.6				
2000					88.3	60.9			
2200						93.4			
2400							45.3		
2600							67.2	36.2	
2800							92.9	57.0	
3000								80.8	47.4
3200									69.6
3400									95.7

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -30 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -30 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
95	-4	-1	0	-12	-9	-7	-26	-23	-21
90	-5	-2	0	-14	-12	-9	-29	-26	-24
85	-6	-4	-1	-16	-14	-11	-32	-30	-27
80	-7	-5	-2	-18	-16	-13	-35	-33	-30
75	-8	-6	-3	-20	-18	-15	-38	-35	-33
70	-9	-7	-4	-22	-20	-17	-41	-38	-36
65	-11	-8	-6	-24	-22	-19	-43	-41	-38
60	-12	-9	-7	-26	-24	-21	-46	-43	-41
55	-13	-10	-8	-28	-26	-23	-48	-45	-43
50	-14	-11	-9	-30	-27	-25	-50	-47	-45
45	-15	-12	-10	-31	-29	-26	-52	-49	-47
40	-15	-13	-10	-33	-31	-28	-53	-51	-48

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

Maximum Reverse Thrust

Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-0.4	-0.4	-0.4	-5.8	-5.8	-5.8	-11.0	-11.0	-11.0
90	-0.6	-0.6	-0.6	-5.8	-5.8	-5.8	-10.6	-10.6	-10.6
85	-0.9	-0.9	-0.9	-5.7	-5.7	-5.7	-10.2	-10.2	-10.2
80	-1.1	-1.1	-1.1	-5.7	-5.7	-5.7	-9.8	-9.8	-9.8
75	-1.3	-1.3	-1.3	-5.6	-5.6	-5.6	-9.3	-9.3	-9.3
70	-1.5	-1.5	-1.5	-5.4	-5.4	-5.4	-8.9	-8.9	-8.9
65	-1.5	-1.5	-1.5	-5.2	-5.2	-5.2	-8.3	-8.3	-8.3
60	-1.5	-1.5	-1.5	-5.0	-5.0	-5.0	-7.8	-7.8	-7.8
55	-1.5	-1.5	-1.5	-4.7	-4.7	-4.7	-7.2	-7.2	-7.2
50	-1.4	-1.4	-1.4	-4.3	-4.3	-4.3	-6.5	-6.5	-6.5
45	-1.3	-1.3	-1.3	-4.0	-4.0	-4.0	-5.9	-5.9	-5.9
40	-1.3	-1.3	-1.3	-3.6	-3.6	-3.6	-5.3	-5.3	-5.3

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1200	45.0	37.7	30.4						
1400	78.2	71.3	64.3						
1600		103.1	96.4	38.2	30.5				
1800				61.9	53.7	45.8			
2000				88.2	79.1	70.3			
2200						97.4	41.3	34.5	
2400							55.9	48.6	41.6
2600							72.5	64.1	56.3
2800							91.8	81.9	72.9
3000								102.5	92.3

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-8	-7	-6	-18	-17	-16
85	0	0	0	-9	-8	-7	-19	-18	-17
80	-1	0	0	-10	-9	-8	-21	-20	-19
75	-2	-1	0	-11	-10	-9	-22	-21	-20
70	-3	-2	-1	-12	-11	-10	-24	-23	-22
65	-4	-3	-2	-14	-13	-12	-27	-26	-25
60	-4	-3	-2	-16	-15	-14	-29	-28	-27
55	-5	-4	-3	-17	-16	-15	-31	-30	-29
50	-6	-5	-4	-18	-17	-16	-32	-31	-30
45	-7	-6	-5	-19	-18	-17	-34	-33	-32
40	-7	-6	-5	-20	-19	-18	-34	-33	-32

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

No Reverse Thrust

Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
95	-1.6	-1.6	-1.6	-8.0	-8.0	-8.0	-14.3	-14.3	-14.3
90	-1.9	-1.9	-1.9	-8.0	-8.0	-8.0	-13.7	-13.7	-13.7
85	-2.1	-2.1	-2.1	-7.9	-7.9	-7.9	-13.1	-13.1	-13.1
80	-2.2	-2.2	-2.2	-7.7	-7.7	-7.7	-12.5	-12.5	-12.5
75	-2.3	-2.3	-2.3	-7.5	-7.5	-7.5	-11.8	-11.8	-11.8
70	-2.4	-2.4	-2.4	-7.2	-7.2	-7.2	-11.1	-11.1	-11.1
65	-2.4	-2.4	-2.4	-6.8	-6.8	-6.8	-10.3	-10.3	-10.3
60	-2.3	-2.3	-2.3	-6.4	-6.4	-6.4	-9.4	-9.4	-9.4
55	-2.1	-2.1	-2.1	-5.8	-5.8	-5.8	-8.5	-8.5	-8.5
50	-1.9	-1.9	-1.9	-5.3	-5.3	-5.3	-7.6	-7.6	-7.6
45	-1.8	-1.8	-1.8	-4.7	-4.7	-4.7	-6.7	-6.7	-6.7
40	-1.6	-1.6	-1.6	-4.2	-4.2	-4.2	-5.8	-5.8	-5.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1200	30.3								
1400	69.6	61.8	53.7						
1600	102.8	95.9	89.0						
2000				61.1	49.8	38.3			
2200				93.6	82.9	72.0			
2400						104.1			
3000							47.5	35.7	
3200							69.7	56.4	44.2
3400							95.8	80.1	65.9
3600									91.4

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-9	-7	-5	-24	-22	-20
85	-1	0	0	-11	-9	-7	-27	-25	-23
80	-2	0	0	-13	-11	-9	-30	-28	-26
75	-3	-1	0	-15	-13	-11	-33	-31	-29
70	-4	-2	0	-17	-15	-13	-36	-34	-32
65	-6	-4	-2	-19	-17	-15	-38	-36	-34
60	-7	-5	-3	-21	-19	-17	-41	-39	-37
55	-8	-6	-4	-23	-21	-19	-43	-41	-39
50	-9	-7	-5	-25	-23	-21	-45	-43	-41
45	-10	-8	-6	-26	-24	-22	-47	-45	-43
40	-10	-8	-6	-28	-26	-24	-48	-46	-44

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

Takeoff %N1 (24K Derate)

Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	90.3	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.0	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	91.8	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	92.6	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	93.4	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.2	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	93.8	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	93.1	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	92.3	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	91.6	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	90.8	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
5	90.0	91.2	92.2	92.8	93.3	93.9	94.5	95.2	95.9	96.7	97.4	98.4	99.3
0	89.2	90.4	91.4	92.0	92.5	93.1	93.7	94.4	95.1	95.9	96.7	97.6	98.5
-5	88.4	89.6	90.6	91.2	91.7	92.3	92.9	93.6	94.3	95.1	95.9	96.8	97.7
-10	87.6	88.8	89.8	90.4	90.9	91.5	92.1	92.8	93.5	94.3	95.1	96.1	97.0
-15	86.8	88.0	89.0	89.5	90.0	90.6	91.3	92.0	92.7	93.5	94.3	95.3	96.2
-20	86.0	87.1	88.2	88.7	89.2	89.8	90.5	91.2	91.9	92.6	93.5	94.5	95.4
-25	85.2	86.3	87.3	87.9	88.4	89.0	89.6	90.3	91.0	91.8	92.6	93.7	94.6
-30	84.4	85.5	86.5	87.0	87.5	88.1	88.8	89.5	90.2	91.0	91.8	92.9	93.8
-35	83.5	84.6	85.6	86.2	86.6	87.3	87.9	88.6	89.3	90.1	91.0	92.1	93.0
-40	82.7	83.8	84.8	85.3	85.8	86.4	87.0	87.8	88.5	89.3	90.1	91.2	92.2
-45	81.8	82.9	83.9	84.4	84.9	85.5	86.2	86.9	87.6	88.4	89.3	90.4	91.4
-50	81.0	82.0	83.0	83.5	84.0	84.6	85.3	86.0	86.7	87.5	88.4	89.5	90.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (24K Derate)

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	93.8					
35	94.7	94.7	94.7			
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5	99.3	99.7	100.2	100.3	100.0	99.8
0	98.5	99.0	99.4	99.8	100.1	100.3
-5	97.7	98.2	98.7	99.1	99.4	99.5
-10	97.0	97.4	97.9	98.3	98.6	98.7
-15	96.2	96.7	97.1	97.5	97.8	98.0
-20	95.4	95.9	96.3	96.7	97.0	97.2
-25	94.6	95.1	95.5	95.9	96.2	96.4
-30	93.8	94.3	94.7	95.1	95.4	95.5
-35	93.0	93.5	93.9	94.3	94.6	94.7
-40	92.2	92.6	93.1	93.5	93.7	93.9
-45	91.4	91.8	92.2	92.6	92.9	93.0
-50	90.5	91.0	91.4	91.8	92.0	92.2

Takeoff %N1 - High Altitudes (24K Derate)**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust (24K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67	65	63						
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	67	67	67	67	65	63	61	59	57	55	53	
30	64	61	62	61	61	61	61	59	57	55	53	51
25	64	61	59	57	56	56	57	57	57	55	53	51
20	64	61	59	57	56	54	53	53	53	53	52	51
15	64	61	59	57	56	54	53	52	50	49	48	47
10 & BELOW	64	61	59	57	56	54	53	52	50	48	45	43

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	88.3	88.6	89.1	89.6	90.2	90.8	91.5	92.2	92.7	93.1	93.3	93.4
70	89.1	89.5	89.4	89.3	89.6	90.1	90.8	91.6	92.0	92.5	92.6	92.7
65	90.0	90.4	90.3	90.2	90.2	90.1	90.2	90.9	91.4	91.8	91.9	92.1
60	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0

Assumed Temperature Reduced Thrust (24K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	12.1													
100	11.3	8.5												
90	11.7	8.9												
80	12.5	8.0	5.5											
70	11.3	8.4	5.9	5.6	4.0									
60	9.7	9.2	4.8	4.7	4.4	4.2	2.6							
50	7.8	7.9	5.3	3.5	3.3	3.6	3.0	2.7	1.2					
40		6.4	6.0	5.5	3.7	3.2	3.7	3.0	2.8	3.0	3.7			
30		4.6	4.6	4.6	4.5	4.3	4.2	4.0	4.1	4.0	3.9	3.8	3.7	
20			3.1	3.1	3.1	3.0	2.9	2.9	2.8	2.7	2.7	2.6	2.6	2.5
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.3	1.3
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	54	54	52	50	48	47
20	51	51	52	50	48	47
15	47	47	48	49	48	47
10	43	44	44	45	46	46
5	43	42	42	42	43	43
0 & BELOW	43	42	42	42	41	41

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	91.4					
55	90.8					
50	91.8	91.5	92.3	93.2		
		91.9	92.0	92.5	93.2	93.5
45	92.8	92.8	92.9	93.1	93.2	93.2
40	93.8	93.8	93.8	93.9	93.9	94.0
35	94.7	94.7	94.7	94.7	94.7	94.7
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5		99.7	100.2	100.3	100.0	99.8
0				99.8	100.1	100.3
MINIMUM ASSUMED TEMP (°C)	10	8	6	4	2	1

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	15.9										
100	15.9										
90	14.8	12.5									
80	13.4	12.5									
70	11.2	11.3	9.2								
60		9.8	9.2								
50		7.8	7.9	6.0							
40			6.4	6.0	4.6	4.5	4.4	4.3			
30			4.6	4.7	4.6	4.5	4.4	4.3	2.9	2.9	2.8
20				3.1	3.1	3.1	3.0	3.0	2.9	2.9	2.8
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4
0					0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS OR MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.80	.80	.80
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	94.8	95.0	93.7
55	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.1	94.3	93.0
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.4	93.6	92.4
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	92.7	92.9	91.7
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.4	92.2	91.0
35	94.0	94.3	94.5	94.3	94.0	94.0	93.0	93.3	92.7	91.6
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	94.1	93.5	92.5
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.9	94.4	93.4
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.6	95.1	94.3
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.3	95.9	95.1
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	97.1	96.7	96.0
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.9	97.4	96.8
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.7	98.3	97.8
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.4	99.0	98.6
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.3	99.9	99.6
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.5
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.3	100.9	100.5
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	99.5	100.0	99.7
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	98.6	99.2	98.8
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	97.8	98.3	98.0
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	96.9	97.5	97.1

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

*Dual bleed sources

Go-around %N1**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

Go-around %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

AIRPORT OAT		TAT	AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	(°C)	10000	11000	12000	13000	14000	14500
37	99	40	99.1	99.7				
32	90	35	99.5	99.3	99.5	100.1	100.7	
27	81	30	100.3	100.2	100.2	100.0	100.0	100.2
22	72	25	100.8	100.7	100.7	100.6	100.6	100.5
17	63	20	101.0	101.0	101.0	100.9	100.8	100.8
12	54	15	101.2	101.2	101.2	101.2	101.1	101.0
7	45	10	100.9	101.4	101.5	101.4	101.3	101.2
2	36	5	100.2	100.9	101.6	101.6	101.5	101.5
-3	27	0	99.4	100.2	101.0	101.4	101.6	101.6
-8	18	-5	98.6	99.4	100.2	100.6	100.9	101.0
-13	9	-10	97.9	98.6	99.5	99.8	100.1	100.2
-17	1	-15	97.1	97.8	98.7	99.0	99.3	99.4
-22	-8	-20	96.3	97.0	97.9	98.2	98.5	98.6
-27	-17	-25	95.5	96.2	97.1	97.4	97.7	97.8
-32	-26	-30	94.7	95.4	96.2	96.6	96.8	97.0
-37	-35	-35	93.9	94.6	95.4	95.7	96.0	96.1
-42	-44	-40	93.0	93.8	94.6	94.9	95.1	95.3
-47	-53	-45	92.2	92.9	93.7	94.0	94.3	94.4
-52	-62	-50	91.4	92.1	92.9	93.2	93.4	93.5

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	0.9	0.9	0.9	1.0	1.0	1.0
ENGINE ANTI-ICE	0.0	-0.8	-1.5	-1.5	-1.5	-1.4

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Climb (280/.76)**Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	4.0	4.0	4.0		
	V/S (FT/MIN)	1700	1100	600		
30000	PITCH ATT	4.0	4.0	3.5	4.0	4.0
	V/S (FT/MIN)	2500	1900	1500	1100	800
20000	PITCH ATT	7.0	6.5	6.0	6.0	6.0
	V/S (FT/MIN)	4200	3300	2600	2100	1700
10000	PITCH ATT	11.0	9.5	8.5	8.0	8.0
	V/S (FT/MIN)	5600	4400	3600	3000	2500
SEA LEVEL	PITCH ATT	14.5	12.5	11.0	10.0	9.5
	V/S (FT/MIN)	6700	5300	4400	3700	3100

Cruise (.76/280)**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	2.0	2.5	3.5		
	%N1	83	85	90		
35000	PITCH ATT	1.0	2.0	2.5	3.0	3.5
	%N1	81	83	84	87	90
30000	PITCH ATT	1.0	1.5	2.0	2.5	3.0
	%N1	81	82	83	84	86
25000	PITCH ATT	1.0	1.5	2.0	2.5	3.0
	%N1	77	78	79	81	82
20000	PITCH ATT	1.0	1.5	2.0	2.5	3.5
	%N1	74	74	75	77	78
15000	PITCH ATT	1.0	1.5	2.0	3.0	3.5
	%N1	70	71	72	73	74

Descent (.76/280)**Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	-1.5	-0.5	0.5	1.0	1.5
	V/S (FT/MIN)	-2700	-2400	-2300	-2500	-2700
30000	PITCH ATT	-3.5	-2.0	-1.0	0.5	0.5
	V/S (FT/MIN)	-3100	-2600	-2300	-2100	-2000
20000	PITCH ATT	-3.5	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2800	-2300	-2000	-1900	-1700
10000	PITCH ATT	-3.5	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2500	-2100	-1800	-1700	-1500
SEA LEVEL	PITCH ATT	-3.5	-2.5	-1.0	0.5	0.5
	V/S (FT/MIN)	-2300	-1900	-1700	-1500	-1400

Flight With Unreliable Airspeed/ Turbulent Air Penetration
Altitude and/or vertical speed indications may also be unreliable.
Holding (VREF40 + 70)
Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	PITCH ATT	5.0	5.0	5.0	5.0	5.0
	%N1	53	58	62	66	69
5000	PITCH ATT	5.0	5.5	5.0	5.0	5.0
	%N1	49	54	58	62	66

Terminal Area (5000 FT)
%N1 for Level Flight

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 1 (GEAR UP) (VREF40 + 50)	PITCH ATT	5.0	5.0	5.5	6.0	6.0
	%N1	51	56	60	65	68
FLAPS 5 (GEAR UP) (VREF40 + 30)	PITCH ATT	5.5	6.0	6.0	6.5	6.5
	%N1	51	56	61	65	69
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	PITCH ATT	5.5	6.0	6.0	6.0	6.5
	%N1	60	66	71	75	79

Final Approach (1500 FT)
Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	PITCH ATT	2.0	2.5	2.5	2.5	2.5
	%N1	43	47	51	55	58
FLAPS 30 (VREF30 + 10)	PITCH ATT	0.5	1.0	1.0	1.0	1.0
	%N1	47	52	57	60	64
FLAPS 40 (VREF40 + 10)	PITCH ATT	-0.5	0.0	0.0	0.0	0.0
	%N1	53	58	63	67	70

Performance Inflight

All Engine

Chapter PI

Section 31

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	32000	-8	33600*	33600*	33500	31900	30400
80	33300	-11	35100*	35100*	34800	33200	31800
75	34700	-14	36500*	36500*	36200	34600	33100
70	36100	-17	37900*	37900*	37600	36100	34600
65	37700	-17	39300*	39300*	39100	37600	36200
60	39300	-17	40800*	40800*	40800	39300	37800
55	41000	-17	41000	41000	41000	41000	39600
50	41000	-17	41000	41000	41000	41000	41000
45	41000	-17	41000	41000	41000	41000	41000
40	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	32000	-3	32100*	32100*	32100*	31900	30400
80	33300	-6	34100*	34100*	34100*	33200	31800
75	34700	-9	35700*	35700*	35700*	34600	33100
70	36100	-12	37200*	37200*	37200*	36100	34600
65	37700	-12	38500*	38500*	38500*	37600	36200
60	39300	-12	40000*	40000*	40000*	39300	37800
55	41000	-12	41000	41000	41000	41000	39600
50	41000	-12	41000	41000	41000	41000	41000
45	41000	-12	41000	41000	41000	41000	41000
40	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 KG)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	32000	3	24500*	24500*	24500*	24500*	24500*
80	33300	0	25000*	25000*	25000*	25000*	25000*
75	34700	-3	33300*	33300*	33300*	33300*	33100
70	36100	-6	35700*	35700*	35700*	35700*	34600
65	37700	-6	37200*	37200*	37200*	37200*	36200
60	39300	-6	38500*	38500*	38500*	38500*	37800
55	41000	-6	40000*	40000*	40000*	40000*	39600
50	41000	-6	41000	41000	41000	41000	41000
45	41000	-6	41000	41000	41000	41000	41000
40	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		25	27	29	31	33	35	37	39	41
85	%N1	87.7	88.2	88.8	89.5	91.0				
	MACH	.794	.800	.800	.800	.800				
	KIAS	335	324	311	297	284				
	FF/ENG	1752	1692	1625	1566	1546				
80	%N1	87.3	87.7	88.0	88.6	89.4	92.1			
	MACH	.794	.800	.800	.800	.800	.800			
	KIAS	335	324	311	297	284	272			
	FF/ENG	1725	1653	1573	1512	1458	1484			
75	%N1	87.0	87.2	87.3	87.7	88.5	89.5	94.3		
	MACH	.794	.800	.800	.800	.800	.800	.800		
	KIAS	335	324	311	297	284	272	260		
	FF/ENG	1698	1623	1530	1458	1402	1361	1451		
70	%N1	86.6	86.9	86.8	87.0	87.5	88.2	90.2		
	MACH	.794	.800	.800	.800	.800	.800	.800		
	KIAS	335	324	311	297	284	272	260		
	FF/ENG	1670	1597	1497	1412	1347	1294	1280		
65	%N1	86.2	86.4	86.4	86.4	86.6	87.2	88.3	91.4	
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	
	KIAS	335	324	311	297	284	272	260	248	
	FF/ENG	1644	1569	1470	1377	1299	1241	1200	1217	
60	%N1	85.9	86.0	85.9	85.9	85.9	86.2	87.2	88.9	92.9
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	1625	1543	1443	1350	1261	1190	1146	1118	1155
55	%N1	85.7	85.7	85.5	85.4	85.4	85.4	86.1	87.6	89.3
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	1615	1525	1416	1323	1234	1152	1094	1061	1038
50	%N1	85.6	85.6	85.2	84.9	84.8	84.8	85.2	86.3	87.8
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	1608	1515	1399	1296	1207	1124	1055	1009	979
45	%N1	85.6	85.5	85.0	84.6	84.3	84.2	84.6	85.4	86.4
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	1606	1509	1389	1279	1181	1097	1028	970	927
40	%N1	85.6	85.5	84.9	84.4	84.0	83.7	83.9	84.7	85.5
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	1608	1509	1385	1271	1166	1074	1001	944	901

Shaded area approximates optimum altitude.

.80M Enroute Fuel and Time - Low Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
274	255	239	224	211	200	191	183	175	168	162
409	381	357	335	317	300	287	275	264	254	245
544	508	475	447	422	400	383	367	353	339	327
679	634	593	559	528	500	479	460	442	425	409
814	760	712	670	633	600	575	552	530	510	492
949	887	831	782	739	700	671	644	619	596	575
1084	1013	949	894	845	800	767	736	708	682	658
1219	1140	1068	1005	950	900	863	829	797	767	741
1354	1266	1186	1117	1056	1000	959	921	886	853	823
1489	1392	1305	1229	1161	1100	1055	1013	974	938	905
1624	1519	1424	1341	1267	1200	1151	1106	1063	1024	988
1759	1645	1542	1452	1373	1300	1247	1198	1152	1110	1071
1894	1772	1661	1564	1478	1400	1343	1290	1241	1196	1154
2029	1898	1779	1675	1584	1500	1439	1382	1330	1281	1237
2164	2024	1897	1787	1689	1600	1535	1475	1418	1367	1319
2299	2150	2016	1899	1795	1700	1631	1567	1507	1452	1401
2434	2276	2134	2010	1900	1800	1727	1659	1596	1538	1484
2569	2403	2253	2122	2006	1900	1823	1751	1685	1623	1567
2705	2530	2372	2234	2111	2000	1919	1844	1774	1709	1650

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.6	0:36	1.4	0:35	1.2	0:34	1.1	0:33	0.9	0:33
300	2.5	0:51	2.2	0:50	1.9	0:47	1.8	0:46	1.6	0:46
400	3.3	1:07	3.0	1:04	2.7	1:01	2.4	0:58	2.2	0:58
500	4.2	1:22	3.8	1:19	3.4	1:14	3.1	1:11	2.8	1:11
600	5.1	1:38	4.7	1:34	4.1	1:27	3.8	1:24	3.4	1:24
700	5.9	1:53	5.5	1:48	4.8	1:41	4.5	1:36	4.1	1:36
800	6.8	2:09	6.3	2:03	5.6	1:54	5.2	1:49	4.7	1:49
900	7.7	2:25	7.1	2:18	6.3	2:08	5.8	2:02	5.3	2:02
1000	8.5	2:40	7.9	2:32	7.0	2:21	6.5	2:15	5.9	2:15
1100	9.4	2:56	8.7	2:47	7.8	2:35	7.2	2:27	6.5	2:27
1200	10.2	3:11	9.5	3:02	8.5	2:48	7.9	2:40	7.2	2:40
1300	11.1	3:27	10.3	3:17	9.2	3:02	8.6	2:53	7.8	2:53
1400	12.0	3:43	11.1	3:31	9.9	3:15	9.3	3:05	8.4	3:05
1500	12.8	3:58	11.9	3:46	10.7	3:29	9.9	3:18	9.0	3:18
1600	13.7	4:14	12.7	4:01	11.4	3:42	10.6	3:31	9.6	3:31
1700	14.5	4:29	13.5	4:15	12.1	3:56	11.3	3:43	10.2	3:43
1800	15.4	4:45	14.3	4:30	12.8	4:09	12.0	3:56	10.9	3:56
1900	16.3	5:00	15.1	4:45	13.6	4:23	12.6	4:09	11.5	4:09
2000	17.1	5:16	15.9	5:00	14.3	4:36	13.3	4:21	12.1	4:21

.80M Enroute Fuel and Time - Low Altitudes
Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	0.0	0.0	0.0	0.0	0.1
3	0.0	0.0	0.0	0.1	0.2
4	0.0	0.0	0.0	0.1	0.2
5	0.0	0.0	0.0	0.1	0.3
6	0.0	0.0	0.0	0.2	0.4
7	0.0	0.0	0.0	0.2	0.4
8	0.0	0.0	0.0	0.2	0.5
9	0.0	0.0	0.0	0.3	0.6
10	0.0	0.0	0.0	0.3	0.6
11	0.0	0.0	0.0	0.3	0.7
12	0.0	0.0	0.0	0.3	0.7
13	0.0	0.0	0.0	0.4	0.8
14	0.1	0.0	0.0	0.4	0.8
15	0.1	0.0	0.0	0.4	0.9
16	0.1	0.0	0.0	0.4	0.9
17	0.1	0.0	0.0	0.4	1.0
18	0.1	0.0	0.0	0.4	1.0

.80M Enroute Fuel and Time - High Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
267	250	235	222	211	200	191	183	175	168	161
522	492	465	441	420	400	383	367	352	339	326
778	735	695	660	629	600	575	551	530	510	492
1033	977	926	880	838	800	767	736	707	681	657
1289	1219	1156	1099	1047	1000	959	920	885	852	822
1545	1462	1386	1318	1256	1200	1151	1105	1062	1023	987
1800	1704	1616	1537	1466	1400	1343	1290	1240	1194	1152
2056	1946	1846	1756	1675	1600	1535	1474	1418	1366	1318
2311	2189	2076	1975	1884	1800	1727	1659	1595	1537	1483
2567	2431	2306	2194	2093	2000	1919	1843	1772	1708	1648
2823	2673	2536	2414	2302	2200	2111	2027	1950	1878	1813
3078	2915	2766	2633	2512	2400	2302	2212	2127	2049	1978
3334	3158	2996	2852	2721	2600	2495	2396	2305	2221	2144
3589	3400	3227	3071	2930	2800	2687	2581	2483	2392	2309
3845	3642	3457	3290	3139	3000	2879	2766	2660	2563	2474
4101	3885	3687	3509	3348	3200	3071	2950	2838	2734	2639
4356	4127	3917	3728	3558	3400	3263	3134	3015	2905	2804
4612	4369	4147	3948	3767	3600	3455	3319	3193	3076	2970
4867	4612	4377	4167	3976	3800	3647	3504	3371	3248	3135
5123	4854	4607	4386	4185	4000	3839	3688	3548	3419	3300
5379	5096	4837	4605	4394	4200	4031	3873	3726	3590	3466
5634	5339	5067	4824	4604	4400	4223	4057	3903	3761	3631
5890	5581	5297	5043	4813	4600	4414	4241	4081	3932	3797
6145	5823	5527	5262	5022	4800	4606	4426	4258	4103	3962
6401	6065	5758	5482	5231	5000	4798	4610	4435	4274	4127
6657	6308	5988	5701	5440	5200	4990	4795	4613	4446	4292
6912	6550	6218	5920	5649	5400	5183	4980	4791	4617	4457
7168	6792	6448	6139	5859	5600	5375	5164	4969	4788	4623
7423	7034	6678	6358	6068	5800	5566	5348	5146	4959	4788
7678	7276	6908	6577	6277	6000	5758	5533	5323	5130	4953

.80M Enroute Fuel and Time - High Altitudes

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	0.9	0:33	0.9	0:33	0.8	0:33	0.8	0:33	0.7	0:34
400	2.1	0:58	2.0	0:59	1.9	0:59	1.8	0:59	1.7	1:00
600	3.3	1:24	3.1	1:24	2.9	1:25	2.8	1:25	2.7	1:26
800	4.5	1:49	4.3	1:50	4.0	1:51	3.8	1:51	3.6	1:52
1000	5.7	2:14	5.4	2:15	5.1	2:16	4.8	2:17	4.6	2:18
1200	6.9	2:39	6.5	2:41	6.1	2:42	5.8	2:43	5.6	2:44
1400	8.1	3:05	7.7	3:06	7.2	3:08	6.8	3:09	6.5	3:10
1600	9.3	3:30	8.8	3:32	8.3	3:34	7.8	3:35	7.5	3:36
1800	10.5	3:55	9.9	3:57	9.3	3:59	8.8	4:01	8.4	4:02
2000	11.7	4:21	11.0	4:23	10.3	4:25	9.8	4:27	9.3	4:28
2200	12.9	4:46	12.1	4:48	11.4	4:51	10.7	4:53	10.3	4:55
2400	14.1	5:11	13.2	5:14	12.4	5:16	11.7	5:19	11.2	5:21
2600	15.2	5:36	14.3	5:39	13.4	5:42	12.7	5:45	12.1	5:47
2800	16.4	6:02	15.4	6:05	14.5	6:08	13.7	6:11	13.0	6:13
3000	17.6	6:27	16.5	6:30	15.5	6:34	14.6	6:37	13.9	6:39
3200	18.8	6:52	17.6	6:56	16.5	6:59	15.6	7:03	14.8	7:05
3400	19.9	7:17	18.7	7:21	17.5	7:25	16.5	7:29	15.7	7:31
3600	21.1	7:43	19.8	7:47	18.5	7:51	17.5	7:55	16.6	7:57
3800	22.3	8:08	20.8	8:12	19.5	8:17	18.4	8:21	17.5	8:23
4000	23.5	8:33	21.9	8:38	20.6	8:42	19.4	8:47	18.4	8:49
4200	24.6	8:58	23.0	9:03	21.6	9:08	20.3	9:13	19.3	9:16
4400	25.8	9:24	24.1	9:29	22.6	9:34	21.2	9:39	20.2	9:42
4600	27.0	9:49	25.2	9:54	23.6	9:59	22.2	10:05	21.0	10:08
4800	28.2	10:14	26.3	10:20	24.6	10:25	23.1	10:31	21.9	10:34
5000	29.4	10:39	27.4	10:45	25.6	10:51	24.0	10:57	22.8	11:00
5200	30.5	11:05	28.5	11:11	26.6	11:17	24.9	11:23	23.6	11:26
5400	31.7	11:30	29.5	11:36	27.6	11:42	25.9	11:49	24.5	11:52
5600	32.9	11:55	30.6	12:01	28.6	12:08	26.8	12:14	25.3	12:18
5800	34.1	12:20	31.7	12:27	29.6	12:34	27.7	12:40	26.2	12:44
6000	35.3	12:46	32.8	12:52	30.6	12:59	28.6	13:06	27.1	13:10

.80M Enroute Fuel and Time - High Altitudes
Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	0.0	0.0	0.0	0.2	0.9
4	0.0	-0.1	0.0	0.4	1.4
6	-0.1	-0.1	0.0	0.5	1.9
8	-0.1	-0.1	0.0	0.7	2.3
10	-0.1	-0.1	0.0	0.9	2.7
12	-0.1	-0.2	0.0	1.0	3.1
14	-0.1	-0.2	0.0	1.1	3.4
16	-0.1	-0.2	0.0	1.3	3.7
18	-0.1	-0.2	0.0	1.4	3.9
20	-0.1	-0.2	0.0	1.5	4.1
22	0.0	-0.2	0.0	1.6	4.3
24	0.1	-0.2	0.0	1.6	4.5
26	0.1	-0.1	0.0	1.7	4.6
28	0.2	-0.1	0.0	1.7	4.6
30	0.3	-0.1	0.0	1.8	4.7
32	0.4	0.0	0.0	1.8	4.7
34	0.5	0.0	0.0	1.8	4.7
36	0.7	0.0	0.0	1.8	4.6

.80M Wind-Altitude Trade

PRESSURE ALTITUDE (1000 FT)	CRUISE WEIGHT (1000 KG)									
	85	80	75	70	65	60	55	50	45	40
41					43	11	0	6	27	62
39				32	8	0	6	25	55	95
37		51	21	4	0	7	25	52	88	130
35	33	11	1	1	10	27	52	84	122	165
33	5	0	3	14	31	55	84	118	156	198
31	0	6	19	36	59	86	117	152	189	229
29	12	25	43	64	90	118	150	184	221	259
27	32	50	71	95	122	151	182	215	250	286
25	59	79	102	127	154	183	213	244	277	311

The above wind factor tables are for calculation of wind required to maintain present range capability at new pressure altitude, i.e., break-even wind.

Method:

1. Read wind factors for present and new altitudes from table.
2. Determine difference (new altitude wind factor minus present altitude wind factor); This difference may be negative or positive.
3. Break-even wind at new altitude is present altitude wind plus difference from step 2.

Descent

.80/280/250

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)			
			LANDING WEIGHT (1000 KG)			
			40	50	60	70
41000	26	340	102	119	133	142
39000	26	340	97	114	127	137
37000	25	330	92	109	122	131
35000	24	330	88	104	117	126
33000	24	330	85	99	111	120
31000	23	320	80	94	105	113
29000	22	310	75	88	98	106
27000	21	300	70	82	92	99
25000	20	300	66	77	86	92
23000	19	290	61	71	79	85
21000	18	280	57	66	73	78
19000	17	270	52	61	67	72
17000	15	250	48	55	61	65
15000	14	240	44	50	55	58
10000	11	200	30	34	37	39
5000	7	150	18	19	20	21
1500	4	110	9	9	9	9

Allowances for a straight-in approach are included.

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)								
		1500	5000	10000	15000	20000	25000	30000	35000	41000
85	%N1	64.3	67.0	70.7	74.7	78.9	83.0	87.0		
	KIAS	250	251	252	253	255	257	260		
	FF/ENG	1500	1470	1460	1450	1430	1430	1460		
80	%N1	62.6	65.5	69.1	73.2	77.3	81.6	85.5		
	KIAS	242	243	244	245	247	249	252		
	FF/ENG	1420	1390	1380	1370	1340	1340	1360		
75	%N1	60.9	63.9	67.5	71.6	75.6	80.0	83.9	88.2	
	KIAS	235	236	236	238	239	241	243	247	
	FF/ENG	1340	1310	1300	1290	1260	1250	1270	1300	
70	%N1	59.2	62.0	65.9	69.8	73.9	78.3	82.3	86.5	
	KIAS	227	227	228	229	231	232	235	238	
	FF/ENG	1260	1240	1220	1200	1180	1160	1180	1200	
65	%N1	57.4	60.0	64.2	67.8	72.1	76.4	80.5	84.7	
	KIAS	219	219	220	221	222	224	226	228	
	FF/ENG	1180	1160	1140	1120	1100	1080	1090	1110	
60	%N1	55.6	58.1	62.1	65.9	70.1	74.3	78.6	82.7	
	KIAS	210	210	211	212	213	214	216	219	
	FF/ENG	1110	1080	1060	1040	1020	990	1010	1020	
55	%N1	53.6	56.1	59.8	64.0	67.9	72.2	76.5	80.7	87.9
	KIAS	200	201	202	203	204	205	207	209	212
	FF/ENG	1030	1000	980	960	940	920	920	930	980
50	%N1	51.4	53.9	57.5	61.7	65.5	69.9	74.0	78.4	85.5
	KIAS	192	192	192	193	194	195	196	198	201
	FF/ENG	950	920	900	880	860	860	850	850	890
45	%N1	49.1	51.5	55.1	58.9	63.1	67.2	71.4	75.9	82.9
	KIAS	185	185	185	185	185	185	186	187	190
	FF/ENG	880	850	840	820	800	780	770	770	800
40	%N1	46.6	48.9	52.5	56.1	60.4	64.2	68.6	73.0	80.1
	KIAS	178	178	178	178	178	178	178	178	178
	FF/ENG	820	790	760	740	720	710	700	690	710

This table includes 5% additional fuel for holding in a racetrack pattern.

PI.31.10

Performance Inflight Advisory Information

Chapter PI Section 32

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 15

Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF15	ONE REV	NO REV
MAX MANUAL	945	70/-55	20/25	-35	115	10	-10	20	-20	65	20	40
MAX AUTO	1225	70/-70	25/35	-45	145	5	-5	30	-30	105	0	0
AUTOBRAKE 3	1745	120/-115	45/60	-75	250	5	-5	45	-45	175	0	0
AUTOBRAKE 2	2240	170/-170	65/85	-100	340	35	-40	65	-65	185	75	75
AUTOBRAKE 1	2465	200/-195	80/105	-115	400	65	-70	70	-70	175	240	325

Good Reported Braking Action

MAX MANUAL	1310	85/-80	35/45	-55	200	30	-25	30	-30	90	70	165
MAX AUTO	1445	90/-85	35/45	-60	205	30	-25	35	-35	100	75	175
AUTOBRAKE 3	1750	120/-115	45/60	-75	250	10	-10	45	-45	175	5	15
AUTOBRAKE 2	2240	170/-170	65/85	-100	340	35	-40	65	-65	185	75	75

Medium Reported Braking Action

MAX MANUAL	1800	135/-130	55/70	-90	330	75	-60	45	-45	120	200	490
MAX AUTO	1885	135/-130	55/75	-90	330	80	-60	45	-50	125	205	500
AUTOBRAKE 3	1935	140/-135	55/75	-95	340	60	-40	50	-50	175	135	425
AUTOBRAKE 2	2290	175/-170	70/90	-110	385	60	-55	65	-65	185	115	245

Poor Reported Braking Action

MAX MANUAL	2360	220/-180	75/105	-135	520	190	-125	65	-65	150	430	1185
MAX AUTO	2450	190/-180	75/105	-135	520	190	-125	65	-65	150	430	1185
AUTOBRAKE 3	2450	190/-180	75/105	-135	520	185	-120	65	-65	160	430	1185
AUTOBRAKE 2	2545	200/-195	80/110	-145	540	170	-110	70	-70	185	350	1040

Reference distance is for sea level, standard day, no wind or slope, VREF15 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances
Flaps 30
Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF30	ONE REV	NO REV
MAX MANUAL	900	60/-50	20/25	-35	110	10	-10	20	-20	65	15	35
MAX AUTO	1145	65/-60	25/30	-40	140	5	-5	25	-25	100	0	0
AUTOBRAKE 3	1610	105/-105	40/55	-70	235	5	-5	45	-45	165	0	0
AUTOBRAKE 2	2065	150/-150	60/80	-95	325	30	-35	55	-55	170	65	65
AUTOBRAKE 1	2270	175/-175	70/95	-110	385	60	-65	65	-65	160	200	280

Good Reported Braking Action

MAX MANUAL	1250	80/-75	30/40	-55	195	30	-25	30	-30	95	65	145
MAX AUTO	1370	80/-80	35/45	-55	200	30	-25	30	-30	100	70	160
AUTOBRAKE 3	1615	105/-105	40/55	-70	240	10	-10	45	-45	165	5	15
AUTOBRAKE 2	2065	150/-150	60/80	-95	325	30	-35	55	-55	170	65	65

Medium Reported Braking Action

MAX MANUAL	1695	120/-120	50/65	-90	320	75	-60	45	-45	120	175	425
MAX AUTO	1770	125/-120	50/65	-90	320	75	-60	45	-45	120	180	435
AUTOBRAKE 3	1810	125/-120	50/70	-90	330	60	-40	45	-50	165	130	385
AUTOBRAKE 2	2115	155/-155	60/80	-105	370	55	-55	55	-60	170	100	215

Poor Reported Braking Action

MAX MANUAL	2195	175/-165	70/95	-130	505	180	-115	60	-60	140	370	995
MAX AUTO	2280	175/-165	70/95	-130	505	180	-115	60	-60	140	370	1000
AUTOBRAKE 3	2280	175/-165	70/95	-130	505	180	-115	60	-60	150	375	1000
AUTOBRAKE 2	2360	185/-175	75/100	-135	520	160	-105	65	-65	170	305	880

Reference distance is for sea level, standard day, no wind or slope, VREF30 approach speed and two engine detent reverse thrust.
Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.
For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above threshold (305 m of air distance).
*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 40

Dry Runway

BRAKING CONFIGURATION	LANDING DISTANCE AND ADJUSTMENT (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF40	ONE REV	NO REV
MAX MANUAL	860	55/-45	15/25	-30	110	10	-10	15	-15	65	15	30
MAX AUTO	1070	60/-55	20/30	-40	135	5	-5	25	-25	95	0	0
AUTOBRAKE 3	1485	100/-95	35/50	-65	225	5	-5	40	-40	160	0	0
AUTOBRAKE 2	1910	140/-135	55/70	-90	315	25	-30	50	-50	175	35	35
AUTOBRAKE 1	2115	165/-160	65/85	-105	370	50	-60	60	-60	160	155	205

Good Reported Braking Action

MAX MANUAL	1195	75/-75	30/40	-55	190	30	-25	30	-30	95	60	135
MAX AUTO	1300	80/-75	30/40	-55	195	30	-25	30	-30	100	65	140
AUTOBRAKE 3	1490	100/-95	35/50	-65	230	10	-10	40	-40	160	5	15
AUTOBRAKE 2	1910	140/-135	55/70	-90	315	25	-30	50	-50	175	35	35

Medium Reported Braking Action

MAX MANUAL	1610	115/-110	45/60	-85	315	75	-55	40	-40	120	160	385
MAX AUTO	1675	115/-115	45/65	-85	315	75	-55	40	-40	120	160	385
AUTOBRAKE 3	1700	120/-115	45/65	-90	320	60	-40	45	-45	160	135	365
AUTOBRAKE 2	1960	145/-140	55/75	-100	355	50	-45	50	-55	175	75	185

Poor Reported Braking Action

MAX MANUAL	2080	165/-155	65/90	-130	495	175	-115	55	-55	140	335	885
MAX AUTO	2165	165/-155	65/90	-130	495	175	-115	55	-55	140	335	885
AUTOBRAKE 3	2165	165/-155	65/90	-130	495	175	-115	55	-55	145	335	890
AUTOBRAKE 2	2215	170/-165	65/90	-135	510	155	-100	60	-60	170	270	795

Reference distance is for sea level, standard day, no wind or slope, VREF40 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance
Dry Runway**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	1225	170/-70	45/45	-45	205	20	-20	105
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1515	90/-95	40/55	-75	270	45	-40	115
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	1025	70/-55	25/30	-35	125	15	-15	85
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	990	65/-55	20/30	-35	125	15	-10	90
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	950	60/-50	20/25	-35	120	15	-10	90
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1065	55/-60	25/30	-40	140	15	-15	75
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	1425	80/-85	35/45	-55	185	35	-30	145
LEADING EDGE FLAPS TRANSIT	VREF15+15	1060	75/-60	25/30	-35	125	10	-10	70
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	955	70/-55	20/25	-35	120	10	-10	65
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	910	60/-50	20/25	-35	115	10	-10	65

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Dry Runway**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	945	70/-55	20/25	-35	120	10	-10	65
JAMMED OR RESTRICTIVE FLIGHT CONTROLS	VREF15	945	70/-55	20/25	-35	120	10	-10	65
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	900	60/-50	20/25	-35	110	10	-10	65
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	945	70/-55	20/25	-35	120	10	-10	65
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1050	85/-60	25/30	-35	130	10	-10	70
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	900	60/-50	20/25	-35	110	10	-10	65
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	945	70/-55	20/25	-35	120	10	-10	65
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1050	85/-60	25/30	-35	130	10	-10	70
TRAILING EDGE FLAPS UP	VREF40+40	1110	110/-65	30/30	-40	165	15	-10	70

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Good Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	1660	90/-95	45/60	-65	225	35	-30	85
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1685	110/-110	45/60	-85	330	65	-55	125
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	1485	95/-100	40/55	-60	225	40	-35	130
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	1410	90/-90	40/50	-60	220	40	-35	130
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	1340	85/-85	35/50	-60	215	40	-35	130
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1350	85/-85	35/45	-60	205	30	-25	100
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	1760	105/-110	45/60	-75	250	55	-50	170
LEADING EDGE FLAPS TRANSIT	VREF15+15	1475	90/-90	40/55	-60	215	35	-30	95
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	1350	80/-85	35/45	-60	210	35	-30	100
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	1285	75/-80	30/45	-55	205	30	-30	100

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	1295	80/-80	35/45	-55	200	30	-25	90
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	1295	80/-80	35/45	-55	200	30	-25	90
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1250	80/-75	30/40	-55	195	30	-25	95
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1295	80/-80	35/45	-55	200	30	-25	90
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1435	80/-85	40/50	-60	210	30	-25	90
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1250	80/-75	30/40	-55	195	30	-25	95
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1295	80/-80	35/45	-55	200	30	-25	90
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1435	80/-85	40/50	-60	210	30	-25	90
TRAILING EDGE FLAPS UP	VREF40+40	1510	80/-85	40/55	-60	215	30	-30	85

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Medium Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	2340	150/-155	75/100	-100	375	85	-75	120
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	2130	155/-155	65/90	-130	515	150	-105	145
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	2030	155/-150	65/90	-100	365	95	-80	165
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	1905	140/-140	60/80	-95	355	90	-75	160
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	1795	130/-130	55/75	-95	345	85	-70	160
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1845	135/-130	55/75	-90	340	80	-65	130
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	2425	170/-170	70/100	-115	395	120	-105	210
LEADING EDGE FLAPS TRANSIT	VREF15+15	2020	140/-140	60/85	-95	355	80	-70	125
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	1930	135/-140	55/75	-100	360	90	-75	135
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	1805	125/-130	50/70	-95	350	85	-70	135

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Medium Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/ BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	1770	125/-125	50/75	-90	330	70	-60	120
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	1770	125/-125	50/75	-90	330	70	-60	120
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1695	120/-120	50/65	-90	320	75	-60	120
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1770	125/-125	50/75	-90	330	70	-60	120
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1985	130/-135	60/80	-95	350	80	-65	120
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1695	120/-120	50/65	-90	320	75	-60	120
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1770	125/-125	50/75	-90	330	70	-60	120
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1985	130/-135	60/80	-95	350	80	-65	120
TRAILING EDGE FLAPS UP	VREF40+40	2110	135/-140	65/85	-100	360	80	-70	115

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	3090	220/-225	110/150	-155	590	200	-150	150
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	2815	225/-215	85/130	-210	955	515	-245	160
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	2620	220/-210	90/130	-145	570	205	-150	190
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	2435	195/-190	80/115	-140	555	190	-140	180
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	2285	180/-175	75/105	-135	540	185	-135	175
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	2390	190/-185	80/115	-135	540	170	-130	155
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	3115	240/-235	105/145	-165	605	240	-185	235
LEADING EDGE FLAPS TRANSIT	VREF15+15	2615	200/-200	90/125	-140	555	180	-135	150
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	2635	205/-205	85/115	-155	595	225	-160	170
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	2430	185/-185	75/105	-145	575	210	-150	160

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (M)							
		REFERENCE DISTANCE FOR 60000 KG LANDING WEIGHT	WT ADJ PER 5000 KG ABOVE/ BELOW 60000 KG	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	2295	180/-175	75/105	-135	525	160	-120	140
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	2295	180/-175	75/105	-135	525	160	-120	140
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	2195	175/-165	70/95	-130	505	180	-115	140
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	2295	180/-175	75/105	-135	525	160	-120	140
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	2595	190/-190	85/120	-140	555	175	-130	145
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	2195	175/-165	70/95	-130	505	180	-115	140
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	2295	180/-175	75/105	-135	525	160	-120	140
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	2595	190/-190	85/120	-140	555	175	-130	145
TRAILING EDGE FLAPS UP	VREF40+40	2780	200/-200	95/130	-145	565	185	-140	145

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule
Reference Brake Energy Per Brake (Millions of Foot Pounds)

		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
		80			100			120			140			160			180		
WEIGHT (1000 KG)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10
80	0	15.1	17.0	19.3	22.4	25.3	28.9	30.9	35.0	40.2	40.4	45.9	53.0	50.8	57.9	67.3	60.8	69.6	81.2
	10	15.6	17.6	20.0	23.1	26.1	29.8	31.9	36.2	41.5	41.8	47.5	54.8	52.5	59.9	69.5	62.8	71.9	83.9
	15	15.8	17.8	20.2	23.5	26.5	30.3	32.4	36.7	42.1	42.4	48.2	55.6	53.3	60.7	70.5	63.7	72.9	85.1
	20	16.0	18.1	20.5	23.8	26.9	30.7	32.8	37.2	42.7	42.9	48.8	56.3	54.0	61.5	71.4	64.6	73.9	86.2
	30	16.4	18.5	21.1	24.4	27.6	31.5	33.7	38.2	43.8	44.0	50.0	57.7	55.3	63.1	73.2	66.2	75.7	88.4
	40	16.6	18.7	21.3	24.7	27.9	31.9	34.1	38.7	44.4	44.7	50.9	58.8	56.3	64.3	74.8	67.5	77.4	90.5
50	16.6	18.7	21.3	24.8	28.0	32.1	34.3	39.0	44.9	45.2	51.5	59.7	57.1	65.4	76.3	68.7	79.0	92.9	
70	0	13.7	15.4	17.5	20.2	22.8	26.0	27.7	31.3	35.9	36.1	41.0	47.2	45.3	51.6	59.7	54.9	62.7	72.9
	10	14.2	15.9	18.1	20.8	23.5	26.8	28.6	32.4	37.1	37.3	42.3	48.7	46.8	53.3	61.6	56.7	64.8	75.4
	15	14.4	16.2	18.4	21.1	23.9	27.2	29.0	32.8	37.6	37.8	43.0	49.4	47.5	54.0	62.5	57.5	65.7	76.4
	20	14.6	16.4	18.6	21.4	24.2	27.6	29.4	33.3	38.1	38.4	43.5	50.1	48.1	54.8	63.4	58.3	66.5	77.4
	30	14.9	16.8	19.1	22.0	24.8	28.3	30.2	34.1	39.1	39.3	44.6	51.4	49.3	56.1	64.9	59.8	68.2	79.4
	40	15.1	17.0	19.3	22.2	25.1	28.6	30.5	34.6	39.6	39.9	45.3	52.2	50.1	57.1	66.2	60.9	69.6	81.2
50	15.1	17.0	19.3	22.3	25.2	28.8	30.7	34.8	40.0	40.2	45.8	52.9	50.7	57.8	67.0	61.8	70.9	83.0	
60	0	12.3	13.9	15.7	18.0	20.3	23.1	24.4	27.6	31.6	31.7	35.9	41.2	39.6	45.0	51.8	48.1	54.8	63.5
	10	12.7	14.3	16.3	18.5	20.9	23.8	25.2	28.5	32.6	32.7	37.1	42.6	40.9	46.5	53.6	49.7	56.6	65.6
	15	12.9	14.6	16.5	18.8	21.2	24.2	25.6	29.0	33.1	33.2	37.6	43.2	41.5	47.1	54.4	50.4	57.4	66.5
	20	13.1	14.8	16.7	19.1	21.5	24.5	26.0	29.4	33.5	33.6	38.1	43.8	42.0	47.8	55.1	51.1	58.2	67.4
	30	13.4	15.1	17.2	19.6	22.1	25.1	26.6	30.1	34.4	34.5	39.1	44.9	43.1	49.0	56.5	52.3	59.6	69.1
	40	13.6	15.3	17.3	19.8	22.3	25.4	26.9	30.5	34.9	35.0	39.7	45.6	43.8	49.8	57.5	53.2	60.7	70.5
50	13.5	15.3	17.3	19.8	22.4	25.5	27.0	30.6	35.1	35.2	40.0	46.0	44.2	50.4	58.3	53.9	61.7	71.9	
50	0	11.0	12.3	14.0	15.7	17.7	20.2	21.2	23.9	27.3	27.2	30.8	35.3	33.8	38.3	44.1	40.9	46.4	53.6
	10	11.3	12.7	14.4	16.3	18.3	20.8	21.9	24.7	28.2	28.1	31.8	36.5	34.9	39.6	45.5	42.2	48.0	55.4
	15	11.5	12.9	14.7	16.5	18.6	21.1	22.2	25.1	28.6	28.6	32.3	37.0	35.4	40.2	46.2	42.8	48.7	56.2
	20	11.6	13.1	14.9	16.7	18.9	21.4	22.5	25.4	29.0	28.9	32.8	37.5	35.9	40.7	46.8	43.4	49.3	56.9
	30	11.9	13.4	15.2	17.2	19.3	22.0	23.1	26.1	29.7	29.7	33.6	38.4	36.8	41.8	48.0	44.5	50.6	58.4
	40	12.1	13.6	15.4	17.3	19.5	22.2	23.4	26.4	30.1	30.1	34.0	39.0	37.4	42.4	48.8	45.2	51.4	59.4
50	12.0	13.6	15.4	17.3	19.6	22.3	23.4	26.5	30.3	30.2	34.2	39.3	37.6	42.8	49.3	45.7	52.1	60.3	
40	0	9.6	10.8	12.3	13.5	15.2	17.3	17.9	20.2	23.0	22.8	25.8	29.4	28.1	31.8	36.4	33.7	38.2	43.9
	10	10.0	11.2	12.7	14.0	15.8	17.9	18.5	20.9	23.8	23.6	26.6	30.4	29.0	32.8	37.6	34.8	39.5	45.4
	15	10.1	11.4	12.9	14.2	16.0	18.1	18.8	21.2	24.1	23.9	27.0	30.8	29.4	33.3	38.2	35.3	40.0	46.0
	20	10.2	11.5	13.1	14.4	16.2	18.4	19.1	21.5	24.5	24.2	27.4	31.3	29.8	33.8	38.7	35.8	40.6	46.6
	30	10.5	11.8	13.4	14.8	16.6	18.9	19.6	22.1	25.1	24.9	28.1	32.1	30.6	34.6	39.7	36.7	41.6	47.8
	40	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.4	25.2	28.4	32.5	31.0	35.1	40.2	37.2	42.2	48.6
50	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.5	25.2	28.6	32.7	31.1	35.3	40.6	37.5	42.6	49.1	

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

Adjusted Brake Energy Per Brake (Millions of Foot Pounds)
No Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
	AUTOBRAKE 1	6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****Two Engine Detent Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
	AUTOBRAKE 1	1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

Cooling Time (Minutes) - Category C Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category N Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE	
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE	
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION			FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	34.2	45.9				
GROUND										

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes****Reference Brake Energy Per Brake (Millions of Foot Pounds)**

		WIND CORRECTED BRAKES ON SPEED (KIAS)*															
		60				100				140				180			
WEIGHT (1000 KG)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)															
		10	12	14	14.5	10	12	14	14.5	10	12	14	14.5	10	12	14	14.5
80	0	11.5	12.1	12.8	13.0	28.9	30.6	32.4	32.9	53.0	56.4	60.2	61.3	81.2	87.0		
	10	11.9	12.5	13.2	13.4	29.8	31.6	33.4	33.9	54.8	58.3	62.2	63.3	83.9	89.9		
	15	12.1	12.7	13.4	13.6	30.3	32.0	33.9	34.4	55.6	59.1	63.1	64.2	85.1	91.2		
	20	12.3	12.9	13.6	13.8	30.7	32.5	34.4	34.9	56.3	59.9	63.9	65.0	86.2	92.4		
	30	12.6	13.2	14.0	14.2	31.5	33.3	35.3	35.8	57.7	61.4	65.5	66.7	88.4	94.7		
	40	12.7	13.4	14.1	14.3	31.9	33.7	35.8	36.3	58.8	62.6	66.8	68.0	90.5	97.1		
70	0	10.6	11.2	11.8	12.0	26.0	27.4	29.0	29.5	47.2	50.1	53.4	54.3	72.9	78.0	83.7	85.3
	10	11.0	11.5	12.1	12.3	26.8	28.3	30.0	30.5	48.7	51.8	55.2	56.1	75.4	80.6	86.5	88.1
	15	11.1	11.7	12.3	12.5	27.2	28.8	30.4	30.9	49.4	52.5	56.0	56.9	76.4	81.7	87.7	89.4
	20	11.3	11.9	12.5	12.7	27.6	29.2	30.9	31.4	50.1	53.2	56.7	57.7	77.4	82.8	88.8	90.5
	30	11.6	12.2	12.8	13.0	28.3	29.9	31.6	32.1	51.4	54.6	58.1	59.1	79.4	84.8	91.0	92.7
	40	11.7	12.3	12.9	13.1	28.6	30.3	32.1	32.6	52.2	55.5	59.2	60.2	81.2	86.9	93.3	95.1
60	0	9.7	10.2	10.7	10.9	23.1	24.3	25.7	26.1	41.2	43.7	46.5	47.3	63.5	67.7	72.5	73.8
	10	10.0	10.5	11.1	11.3	23.8	25.2	26.6	27.0	42.6	45.2	48.0	48.8	65.6	70.0	74.9	76.3
	15	10.2	10.7	11.3	11.5	24.2	25.5	27.0	27.4	43.2	45.8	48.7	49.5	66.5	71.0	76.0	77.4
	20	10.3	10.8	11.4	11.6	24.5	25.9	27.4	27.8	43.8	46.4	49.4	50.2	67.4	71.9	76.9	78.3
	30	10.6	11.1	11.7	11.9	25.1	26.5	28.1	28.5	44.9	47.6	50.6	51.4	69.1	73.7	78.9	80.3
	40	10.7	11.2	11.8	12.0	25.4	26.9	28.4	28.8	45.6	48.4	51.5	52.3	70.5	75.3	80.6	82.1
50	0	8.8	9.3	9.7	9.9	20.2	21.3	22.5	22.8	35.3	37.4	39.7	40.3	53.6	57.0	60.9	62.0
	10	9.1	9.6	10.1	10.2	20.8	22.0	23.2	23.6	36.5	38.6	41.0	41.7	55.4	58.9	62.9	64.0
	15	9.2	9.7	10.2	10.4	21.1	22.3	23.6	23.9	37.0	39.2	41.6	42.3	56.2	59.8	63.8	64.9
	20	9.4	9.8	10.4	10.5	21.4	22.6	23.9	24.3	37.5	39.7	42.2	42.9	56.9	60.6	64.7	65.8
	30	9.6	10.1	10.6	10.8	22.0	23.2	24.5	24.9	38.4	40.7	43.2	43.9	58.4	62.1	66.3	67.4
	40	9.7	10.2	10.7	10.9	22.2	23.5	24.8	25.2	39.0	41.3	43.9	44.6	59.4	63.3	67.6	68.8
40	0	8.0	8.4	8.9	9.0	17.3	18.2	19.3	19.6	29.4	31.1	33.0	33.5	43.9	46.6	49.6	50.4
	10	8.3	8.7	9.2	9.3	17.9	18.8	19.9	20.2	30.4	32.2	34.1	34.6	45.4	48.1	51.2	52.1
	15	8.4	8.8	9.3	9.4	18.1	19.1	20.2	20.5	30.8	32.6	34.6	35.1	46.0	48.9	52.0	52.9
	20	8.5	9.0	9.4	9.6	18.4	19.4	20.5	20.8	31.3	33.1	35.0	35.6	46.6	49.5	52.7	53.6
	30	8.7	9.2	9.7	9.8	18.9	19.9	21.0	21.3	32.1	33.9	35.9	36.5	47.8	50.8	54.0	54.9
	40	8.8	9.3	9.8	9.9	19.1	20.1	21.2	21.5	32.5	34.4	36.4	37.0	48.6	51.6	55.0	55.9
	50	8.8	9.2	9.7	9.9	19.1	20.1	21.2	21.5	32.7	34.6	36.7	37.3	49.1	52.3	55.7	56.7

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

Adjusted Brake Energy Per Brake (Millions of Foot Pounds)**No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
	AUTOBRAKE 1	6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****Two Engine Detent Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
	AUTOBRAKE 1	1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

Cooling Time (Minutes) - Category C Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category N Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE	
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE	
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION			FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	34.2	45.9				
GROUND										

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Intentionally
Blank

Performance Inflight
Engine Inoperative
Chapter PI
Section 33
ENGINE INOP
Initial Max Continuous %N1
Based on .80M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.9	96.6	96.4	96.2	96.0	95.5	95.1	94.8	94.2
15	97.5	97.2	96.9	96.8	96.7	96.3	95.8	95.6	95.0
10	98.1	97.9	97.5	97.4	97.4	97.0	96.6	96.4	95.9
5	98.1	98.6	98.4	98.1	98.1	97.8	97.4	97.2	96.7
0	97.3	98.5	99.2	99.0	98.9	98.6	98.2	98.0	97.7
-5	96.5	97.8	98.9	99.8	99.7	99.3	99.0	98.8	98.5
-10	95.8	97.0	98.2	99.4	100.5	100.2	99.9	99.7	99.5
-15	95.0	96.2	97.4	98.6	99.9	101.0	100.8	100.6	100.4
-20	94.2	95.4	96.6	97.8	99.1	100.2	100.8	100.6	100.4
-25	93.4	94.6	95.8	97.0	98.3	99.4	100.0	99.8	99.6
-30	92.6	93.8	95.0	96.2	97.5	98.6	99.1	98.9	98.7
-35	91.7	93.0	94.1	95.3	96.6	97.7	98.3	98.1	97.9
-40	90.9	92.2	93.3	94.5	95.8	96.9	97.4	97.2	97.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

ENGINE INOP

**Max Continuous %N1
37000 FT to 29000 FT Pressure Altitudes**

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.6	97.6	98.5	99.4	100.2	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.1	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.5	97.4	98.3	99.2	100.1	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.3	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.4	98.3	99.2	100.0	100.8	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.3	98.2	99.1	100.0	100.9	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.1	98.0	98.9	99.7	100.6	101.5	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	98.1	99.0	99.9	100.8	101.6	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.1	99.9	100.1	99.1	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

ENGINE INOP**Max Continuous %N1****27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT												TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

ENGINE INOP

**Max Continuous %N1
18000 FT to 12000 FT Pressure Altitudes**

18000 FT PRESS ALT							TAT (°C)						
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25
160	.34	98.5	99.3	100.2	101.0	101.8	102.6	101.6	100.3	99.2	98.1	97.0	95.9
200	.42	98.7	99.6	100.4	101.2	102.0	102.8	103.1	101.7	100.4	99.3	98.3	97.3
240	.51	97.8	98.7	99.5	100.3	101.1	101.9	102.7	102.5	101.1	99.9	99.0	98.1
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6
16000 FT PRESS ALT							TAT (°C)						
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25
160	.33	97.1	98.0	98.8	99.6	100.4	101.2	101.6	100.3	99.1	98.1	97.1	96.1
200	.41	98.0	98.8	99.6	100.4	101.2	102.0	102.8	102.5	101.3	100.2	99.3	98.3
240	.49	97.1	97.9	98.7	99.5	100.3	101.1	101.9	102.7	101.8	100.5	99.6	98.7
280	.57	95.6	96.4	97.2	98.0	98.8	99.6	100.3	101.1	101.8	100.9	99.8	99.0
320	.64	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.2	99.4
360	.72	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.9	99.6
14000 FT PRESS ALT							TAT (°C)						
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30
160	.31	96.6	97.4	98.2	99.0	99.8	100.6	100.4	99.1	98.0	97.1	96.2	95.3
200	.39	97.1	97.9	98.7	99.5	100.3	101.1	101.8	101.5	101.0	100.1	99.3	98.4
240	.47	96.6	97.4	98.2	99.0	99.8	100.6	101.3	101.8	101.1	100.3	99.5	98.7
280	.54	95.5	96.3	97.1	97.8	98.6	99.4	100.1	100.9	101.0	100.1	99.2	98.5
320	.62	94.1	94.9	95.7	96.5	97.2	98.0	98.7	99.5	100.2	100.3	99.5	98.8
360	.69	92.2	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.6	99.0
12000 FT PRESS ALT							TAT (°C)						
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.30	96.3	97.0	97.8	98.6	99.4	100.1	99.3	98.1	97.1	96.3	95.4	94.5
200	.38	97.1	97.9	98.7	99.5	100.3	101.0	101.5	100.8	99.8	99.0	98.2	97.3
240	.45	96.5	97.3	98.0	98.8	99.6	100.3	101.1	101.0	100.1	99.4	98.6	97.9
280	.52	95.5	96.3	97.0	97.8	98.6	99.3	100.0	100.8	100.3	99.4	98.6	98.0
320	.60	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	99.7	98.9	98.2
360	.67	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.4	99.1	98.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

ENGINE INOP**Max Continuous %N1****10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT												TAT (°C)	
CIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT												TAT (°C)	
CIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT												TAT (°C)	
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT												TAT (°C)	
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-2.7	-3.2

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELLOW	ISA + 15°C	ISA + 20°C
85	82	271	18500	17300	15900
80	77	263	20200	19000	17700
75	72	255	21600	20600	19400
70	67	247	23100	22200	21100
65	62	238	24700	23800	22800
60	57	229	26800	25800	24700
55	53	219	29100	28100	27000
50	48	209	31200	30400	29400
45	43	199	33300	32600	31700
40	38	187	35600	34900	34000

Includes APU fuel burn.

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown/LRC Cruise Range Capability****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
138	128	120	112	106	100	95	90	86	82	78
275	256	239	225	212	200	190	180	172	164	157
413	384	359	337	317	300	284	270	258	246	235
551	512	479	449	423	400	379	360	344	328	314
689	640	598	562	529	500	474	451	429	410	392
826	768	718	674	635	600	569	541	515	492	471
964	896	838	786	741	700	664	631	601	574	549
1102	1025	957	898	846	800	758	721	687	656	628
1240	1153	1077	1011	952	900	853	811	773	738	706
1377	1281	1197	1123	1058	1000	948	901	859	820	785
1515	1409	1317	1235	1164	1100	1043	991	945	902	863
1653	1537	1436	1348	1270	1200	1138	1081	1030	984	942
1792	1666	1556	1460	1375	1300	1232	1171	1116	1066	1020
1930	1794	1676	1573	1481	1400	1327	1261	1202	1148	1098
2068	1922	1796	1685	1587	1500	1422	1351	1288	1230	1177
2207	2051	1916	1798	1693	1600	1517	1441	1373	1312	1255
2345	2180	2036	1910	1799	1700	1611	1531	1459	1393	1333
2484	2309	2156	2023	1905	1800	1706	1621	1545	1475	1411

Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 KG)										TIME (HR-MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)										
	40	45	50	55	60	65	70	75	80	85	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0.5	0:16
200	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.2	1.3	0:33
300	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0	2.1	0:49
400	1.6	1.8	1.9	2.0	2.2	2.3	2.5	2.6	2.8	2.9	1:06
500	2.0	2.2	2.4	2.6	2.8	3.0	3.2	3.3	3.5	3.7	1:22
600	2.4	2.7	2.9	3.1	3.3	3.6	3.8	4.0	4.3	4.5	1:39
700	2.8	3.1	3.4	3.6	3.9	4.2	4.5	4.7	5.0	5.3	1:55
800	3.2	3.6	3.9	4.2	4.5	4.8	5.1	5.4	5.7	6.1	2:11
900	3.6	4.0	4.3	4.7	5.0	5.4	5.7	6.1	6.4	6.8	2:28
1000	4.0	4.4	4.8	5.2	5.6	6.0	6.4	6.7	7.1	7.6	2:44
1100	4.4	4.8	5.3	5.7	6.1	6.6	7.0	7.4	7.9	8.3	3:01
1200	4.8	5.3	5.7	6.2	6.7	7.1	7.6	8.1	8.6	9.0	3:17
1300	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.8	3:34
1400	5.5	6.1	6.6	7.2	7.7	8.3	8.8	9.4	9.9	10.5	3:51
1500	5.9	6.5	7.1	7.7	8.3	8.9	9.4	10.0	10.6	11.2	4:07
1600	6.3	6.9	7.5	8.2	8.8	9.4	10.0	10.7	11.3	12.0	4:24
1700	6.6	7.3	8.0	8.6	9.3	10.0	10.6	11.3	12.0	12.7	4:41
1800	7.0	7.7	8.4	9.1	9.8	10.5	11.2	11.9	12.6	13.4	4:57

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at long range cruise speed.

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15200	12600	9900
80	17200	15300	12500
75	19200	17400	15000
70	20900	19700	17300
65	22500	21300	19800
60	24100	23000	21600
55	26300	24800	23500
50	29000	27700	25800
45	31400	30500	29200
40	33800	33000	31800

With engine anti-ice on, decrease altitude capability by 1200 ft.
With engine and wing anti-ice on, decrease altitude capability by 5500 ft .

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
85	%N1	91.8	95.5	97.9							
	MACH	.561	.600	.616							
	KIAS	311	303	300							
	FF/ENG	3067	3033	3052							
80	%N1	90.1	94.0	95.9	98.5						
	MACH	.545	.590	.603	.621						
	KIAS	302	299	294	291						
	FF/ENG	2875	2870	2846	2886						
75	%N1	88.4	92.5	94.0	96.1						
	MACH	.528	.579	.593	.607						
	KIAS	293	293	288	284						
	FF/ENG	2684	2709	2674	2662						
70	%N1	86.5	90.7	92.3	94.0	96.2					
	MACH	.510	.562	.582	.595	.610					
	KIAS	282	284	283	278	274					
	FF/ENG	2494	2518	2520	2481	2487					
65	%N1	84.5	88.7	90.4	92.2	93.9	96.4				
	MACH	.491	.542	.563	.584	.596	.612				
	KIAS	271	274	274	273	268	265				
	FF/ENG	2306	2327	2330	2330	2295	2317				
60	%N1	82.3	86.5	88.3	90.0	91.9	93.7	96.4			
	MACH	.471	.521	.543	.564	.585	.597	.614			
	KIAS	261	263	263	263	263	258	254			
	FF/ENG	2124	2137	2139	2140	2143	2114	2146			
55	%N1	80.2	84.2	85.9	87.7	89.5	91.4	93.3	96.2		
	MACH	.453	.498	.520	.541	.563	.585	.597	.614		
	KIAS	250	251	252	252	253	252	247	244		
	FF/ENG	1954	1948	1950	1950	1953	1958	1938	1971		
50	%N1	77.8	81.6	83.4	85.2	87.0	88.7	90.7	92.7	95.7	
	MACH	.434	.475	.495	.516	.538	.561	.583	.596	.613	
	KIAS	240	239	239	240	241	241	241	236	233	
	FF/ENG	1791	1764	1762	1762	1764	1767	1777	1765	1793	
45	%N1	75.5	79.1	80.6	82.3	84.1	85.9	87.7	89.7	91.8	94.8
	MACH	.415	.452	.469	.489	.511	.533	.556	.578	.593	.610
	KIAS	229	227	227	227	228	229	229	229	225	222
	FF/ENG	1636	1594	1582	1575	1577	1580	1586	1600	1593	1613
40	%N1	73.0	76.2	77.8	79.4	81.0	82.8	84.6	86.4	88.3	90.7
	MACH	.395	.429	.445	.462	.480	.502	.525	.548	.571	.589
	KIAS	218	215	215	214	214	215	216	216	216	214
	FF/ENG	1485	1434	1416	1402	1392	1394	1400	1410	1421	1424

ENGINE INOP

MAX CONTINUOUS THRUST

**Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
298	272	249	230	214	200	190	180	172	164	158
600	547	501	462	429	400	379	361	344	328	315
903	823	753	694	644	600	570	542	517	494	473
1209	1100	1005	926	859	800	759	721	687	657	630
1516	1379	1259	1159	1075	1000	949	902	859	820	786
1825	1659	1513	1393	1290	1200	1139	1082	1031	984	943
2137	1940	1768	1626	1506	1400	1328	1262	1202	1147	1099
2450	2222	2024	1860	1722	1600	1518	1442	1373	1311	1256
2766	2507	2281	2095	1938	1800	1707	1622	1544	1474	1412
3083	2792	2539	2331	2155	2000	1896	1801	1715	1637	1568

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.4	0:43	1.2	0:41	1.1	0:39	1.0	0:38	0.9	0:37
400	2.8	1:23	2.6	1:19	2.4	1:14	2.2	1:11	2.1	1:09
600	4.3	2:04	3.9	1:57	3.6	1:50	3.4	1:45	3.2	1:42
800	5.7	2:46	5.2	2:36	4.9	2:26	4.5	2:19	4.4	2:14
1000	7.1	3:28	6.6	3:15	6.1	3:03	5.7	2:53	5.5	2:47
1200	8.5	4:10	7.9	3:55	7.3	3:40	6.8	3:28	6.6	3:21
1400	9.8	4:53	9.1	4:36	8.5	4:18	8.0	4:02	7.7	3:54
1600	11.2	5:36	10.4	5:16	9.7	4:55	9.1	4:38	8.7	4:28
1800	12.5	6:20	11.7	5:58	10.9	5:34	10.2	5:13	9.8	5:02
2000	13.9	7:05	12.9	6:39	12.0	6:13	11.3	5:49	10.8	5:36

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)									
	40	45	50	55	60	65	70	75	80	
1	-0.1	-0.1	-0.1	0.0	0.0	0.1	0.1	0.2	0.3	
2	-0.3	-0.2	-0.1	-0.1	0.0	0.2	0.3	0.6	0.8	
3	-0.4	-0.3	-0.2	-0.1	0.0	0.3	0.5	0.9	1.2	
4	-0.6	-0.4	-0.3	-0.1	0.0	0.3	0.7	1.2	1.6	
5	-0.7	-0.5	-0.4	-0.2	0.0	0.4	0.9	1.4	2.0	
6	-0.8	-0.6	-0.4	-0.2	0.0	0.5	1.1	1.7	2.4	
7	-1.0	-0.8	-0.5	-0.3	0.0	0.6	1.2	2.0	2.8	
8	-1.1	-0.9	-0.6	-0.3	0.0	0.6	1.4	2.2	3.2	
9	-1.3	-1.0	-0.7	-0.3	0.0	0.7	1.5	2.4	3.5	
10	-1.4	-1.1	-0.7	-0.4	0.0	0.7	1.6	2.6	3.8	
11	-1.6	-1.2	-0.8	-0.4	0.0	0.8	1.7	2.8	4.1	
12	-1.7	-1.3	-0.9	-0.4	0.0	0.8	1.9	3.0	4.4	
13	-1.9	-1.4	-0.9	-0.5	0.0	0.9	2.0	3.2	4.7	
14	-2.0	-1.5	-1.0	-0.5	0.0	0.9	2.0	3.4	4.9	

Includes APU fuel burn.

ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	81.1	84.1	88.3	92.8				
	KIAS	250	251	252	253				
	FF/ENG	2740	2730	2750	2800				
80	%N1	79.5	82.4	86.5	91.0	98.3			
	KIAS	242	243	244	245	247			
	FF/ENG	2580	2570	2570	2610	2740			
75	%N1	77.8	80.5	84.7	89.1	95.0			
	KIAS	235	236	236	238	239			
	FF/ENG	2420	2400	2400	2420	2490			
70	%N1	76.0	78.6	82.8	87.1	92.1			
	KIAS	227	227	228	229	231			
	FF/ENG	2260	2240	2230	2250	2270			
65	%N1	74.0	76.7	80.8	85.0	89.7	97.7		
	KIAS	219	219	220	221	222	224		
	FF/ENG	2100	2090	2070	2070	2080	2230		
60	%N1	71.7	74.6	78.5	82.8	87.4	93.7		
	KIAS	210	210	211	212	213	214		
	FF/ENG	1950	1930	1910	1910	1910	1970		
55	%N1	69.4	72.3	76.3	80.5	84.9	90.0		
	KIAS	200	201	202	203	204	205		
	FF/ENG	1800	1770	1750	1740	1730	1760		
50	%N1	66.9	69.7	73.8	77.8	82.3	87.0	94.9	
	KIAS	192	192	192	193	194	195	196	
	FF/ENG	1650	1620	1600	1580	1570	1570	1680	
45	%N1	64.2	66.9	70.9	75.0	79.4	84.0	89.6	
	KIAS	185	185	185	185	185	185	186	
	FF/ENG	1500	1470	1440	1420	1400	1400	1450	
40	%N1	61.1	64.0	67.8	72.0	76.2	80.7	85.4	94.0
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	1350	1330	1300	1270	1250	1240	1260	1360

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

DO NOT USE FOR FLIGHT

Performance Inflight

Alternate Mode EEC

Chapter PI

Section 34

ALTERNATE MODE EEC

Alternate Mode EEC Limit Weight

PERFORMANCE LIMIT	NORMAL MODE PERFORMANCE LIMIT WEIGHT (1000 KG)										
	46	50	54	58	62	66	70	74	78	82	86
FIELD	43.5	47.3	50.8	54.4	58.1	61.8	65.5	69.3	73.0	76.8	80.5
CLIMB	42.2	45.9	49.5	53.1	56.8	60.5	64.1	67.7	71.4	75.0	78.6
OBSTACLE	42.5	46.1	49.8	53.4	57.0	60.6	64.2	67.8	71.4	75.3	79.2
TIRE						65.7	69.7	73.7	77.7	81.7	85.6

Alternate Mode EEC Takeoff Speed Adjustment

TAKEOFF SPEEDS	TAKEOFF SPEED ADJUSTMENT (KTS)
DRY V1	+2
WET V1	+3
VR	+1
V2	0

Alternate Mode EEC Max Takeoff %N1

Based on engine bleeds for packs on, engine and wing anti-ice on or off

AIRPORT OAT		AIRPORT PRESSURE ALTITUDE (FT)												
°C	°F	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	140	93.5	94.0	94.5	94.7	94.5	94.8	95.0	95.1	94.7	94.1	93.8	93.7	93.7
55	131	94.6	95.0	95.2	95.4	95.3	95.5	95.8	95.9	95.6	95.0	94.5	93.8	93.1
50	122	95.4	96.0	96.5	96.4	96.1	96.3	96.5	96.8	96.5	96.0	95.4	94.8	94.1
45	113	96.1	96.7	97.2	97.4	97.4	97.4	97.4	97.6	97.3	96.8	96.3	95.7	95.1
40	104	96.8	97.5	98.0	98.2	98.1	98.2	98.3	98.3	98.1	97.7	97.2	96.6	96.0
35	95	97.5	98.3	99.0	99.2	99.1	99.2	99.3	99.3	99.0	98.5	98.0	97.5	96.9
30	86	97.1	98.6	100.4	100.1	100.1	100.0	100.1	100.2	99.9	99.6	99.2	98.4	97.8
25	77	96.3	97.9	99.7	100.0	100.3	100.4	100.4	100.4	100.3	100.3	100.2	99.2	98.7
20	68	95.6	97.1	99.0	99.3	99.6	99.8	100.1	100.4	100.4	100.4	100.3	99.6	98.8
15	59	94.8	96.3	98.3	98.6	98.9	99.1	99.4	99.6	99.9	100.2	100.3	99.8	99.1
10	50	94.0	95.6	97.5	97.9	98.1	98.4	98.6	98.9	99.2	99.4	99.7	99.6	99.5
5	41	93.2	94.8	96.8	97.1	97.4	97.6	97.9	98.1	98.4	98.7	99.0	98.8	98.7
0	32	92.4	94.0	96.0	96.4	96.6	96.9	97.1	97.4	97.6	97.9	98.2	98.1	97.9
-5	23	91.6	93.2	95.3	95.6	95.9	96.1	96.4	96.6	96.9	97.2	97.4	97.3	97.2
-10	14	90.8	92.4	94.5	94.8	95.1	95.3	95.6	95.8	96.1	96.4	96.6	96.5	96.4
-15	5	90.0	91.6	93.7	94.1	94.3	94.6	94.8	95.1	95.3	95.6	95.9	95.7	95.6
-20	-4	89.2	90.8	93.0	93.3	93.5	93.8	94.0	94.3	94.5	94.8	95.1	94.9	94.8
-25	-13	88.3	90.0	92.2	92.5	92.7	93.0	93.2	93.5	93.7	94.0	94.3	94.1	94.0
-30	-22	87.5	89.1	91.4	91.7	91.9	92.2	92.4	92.7	92.9	93.2	93.4	93.3	93.2
-35	-31	86.6	88.3	90.6	90.9	91.1	91.4	91.6	91.8	92.1	92.4	92.6	92.5	92.4
-40	-40	85.8	87.4	89.7	90.1	90.3	90.5	90.8	91.0	91.3	91.5	91.8	91.7	91.5
-45	-49	84.9	86.6	88.9	89.2	89.5	89.7	89.9	90.2	90.4	90.7	90.9	90.8	90.7
-50	-58	84.0	85.7	88.1	88.4	88.6	88.9	89.1	89.3	89.6	89.8	90.1	90.0	89.8

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Intentionally
Blank

Performance Inflight
Gear Down

Chapter PI
Section 35

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15600	12500	9400
80	18400	15500	12600
75	21100	18500	15700
70	23600	21400	18600
65	26100	24400	21800
60	28600	27100	25300
55	30800	29600	28100
50	32900	31900	30700
45	35100	34100	33000
40	37500	36500	35400

GEAR DOWN

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		10	21	23	25	27	29	31	33	35
85	%N1	85.9								
	MACH	.482								
	KIAS	267								
	FF/ENG	2421								
80	%N1	84.2								
	MACH	.468								
	KIAS	259								
	FF/ENG	2271								
75	%N1	82.5	91.7							
	MACH	.454	.554							
	KIAS	251	248							
	FF/ENG	2123	2101							
70	%N1	80.6	89.8	91.7						
	MACH	.440	.541	.557						
	KIAS	243	242	240						
	FF/ENG	1977	1960	1950						
65	%N1	78.6	87.9	89.5	91.6	94.5				
	MACH	.425	.524	.543	.560	.578				
	KIAS	235	234	233	231	229				
	FF/ENG	1835	1812	1806	1805	1836				
60	%N1	76.5	85.6	87.4	89.1	91.3	94.5			
	MACH	.409	.504	.525	.544	.562	.580			
	KIAS	226	225	225	224	222	220			
	FF/ENG	1696	1661	1661	1658	1664	1696			
55	%N1	74.4	83.3	85.0	86.8	88.5	90.9	94.1		
	MACH	.393	.484	.504	.525	.545	.562	.581		
	KIAS	217	216	216	216	215	213	211		
	FF/ENG	1559	1515	1512	1515	1517	1523	1555		
50	%N1	71.9	80.7	82.5	84.2	86.0	87.8	90.2	93.5	
	MACH	.376	.463	.482	.502	.523	.544	.561	.580	
	KIAS	207	206	206	206	206	205	203	201	
	FF/ENG	1424	1371	1367	1368	1374	1377	1381	1411	
45	%N1	69.1	78.0	79.7	81.4	83.1	85.0	86.8	89.1	92.5
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578
	KIAS	197	196	196	196	196	196	195	193	191
	FF/ENG	1294	1231	1224	1224	1230	1235	1237	1239	1265
40	%N1	66.2	74.9	76.6	78.3	80.0	81.8	83.6	85.5	87.7
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554
	KIAS	187	185	185	185	185	185	185	185	183
	FF/ENG	1170	1098	1085	1083	1089	1092	1094	1096	1097

GEAR DOWN

**Long Range Cruise Enroute Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1674	1484	1322	1194	1090	1000	943	891	844	803	766
2024	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2381	2103	1865	1680	1530	1400	1320	1247	1181	1122	1070
2743	2417	2140	1924	1751	1600	1508	1424	1348	1280	1221
3113	2737	2418	2171	1972	1800	1695	1600	1514	1438	1371

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.9	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.5	1:17
600	7.4	2:25	6.8	2:17	6.1	2:06	5.7	1:59	5.4	1:54
800	9.8	3:14	9.1	3:03	8.1	2:48	7.6	2:38	7.2	2:31
1000	12.1	4:04	11.3	3:50	10.1	3:30	9.5	3:18	9.0	3:08
1200	14.4	4:56	13.5	4:39	12.1	4:14	11.3	3:58	10.7	3:46
1400	16.7	5:49	15.6	5:28	14.0	4:58	13.1	4:40	12.4	4:24
1600	18.9	6:43	17.7	6:18	15.9	5:44	14.9	5:22	14.1	5:03
1800	21.1	7:38	19.7	7:10	17.7	6:30	16.6	6:05	15.7	5:43

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.3
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.3	-0.7	0.0	1.2	2.6
10	-1.7	-0.8	0.0	1.4	3.2
12	-2.0	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.7	-1.3	0.0	2.0	4.6
18	-3.0	-1.5	0.0	2.2	5.0
20	-3.4	-1.7	0.0	2.4	5.3
22	-3.7	-1.8	0.0	2.5	5.6

GEAR DOWN

Descent
VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	280	91
39000	20	270	86
37000	19	270	81
35000	19	260	77
33000	18	260	72
31000	17	250	68
29000	17	250	64
27000	16	240	60
25000	15	230	56
23000	14	230	52
21000	13	220	48
19000	13	210	44
17000	12	200	40
15000	11	190	36
10000	8	170	26
5000	6	140	16
1500	4	110	9

Allowances for a straight-in approach are included.

GEAR DOWN

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	75.8	78.5	82.7	87.0	92.0			
	KIAS	230	230	230	230	230			
	FF/ENG	2240	2230	2220	2240	2260			
80	%N1	74.2	77.0	81.1	85.4	90.0			
	KIAS	225	225	225	225	225			
	FF/ENG	2120	2110	2100	2100	2110			
75	%N1	72.5	75.4	79.4	83.7	88.3	94.8		
	KIAS	220	220	220	220	220	220		
	FF/ENG	2000	1990	1970	1970	1970	2050		
70	%N1	70.8	73.7	77.6	81.9	86.4	91.8		
	KIAS	216	216	216	216	216	216		
	FF/ENG	1890	1870	1850	1840	1840	1870		
65	%N1	69.0	71.9	75.9	80.1	84.5	89.3		
	KIAS	211	211	211	211	211	211		
	FF/ENG	1770	1750	1730	1720	1710	1730		
60	%N1	67.1	69.8	74.0	78.0	82.5	87.1	94.3	
	KIAS	204	204	204	204	204	204	204	
	FF/ENG	1660	1630	1610	1600	1580	1590	1670	
55	%N1	65.1	67.8	71.9	75.9	80.3	84.8	90.4	
	KIAS	198	198	198	198	198	198	198	
	FF/ENG	1540	1520	1490	1480	1460	1460	1500	
50	%N1	62.8	65.6	69.6	73.7	78.0	82.4	87.1	
	KIAS	192	192	192	192	192	192	192	
	FF/ENG	1430	1400	1380	1360	1330	1330	1350	
45	%N1	60.3	63.3	67.1	71.4	75.5	79.9	84.5	91.5
	KIAS	185	185	185	185	185	185	185	185
	FF/ENG	1310	1290	1270	1250	1220	1210	1220	1270
40	%N1	57.9	60.6	64.6	68.7	72.9	77.3	81.7	86.8
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	1200	1180	1160	1130	1110	1090	1100	1110

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight
Gear Down, Engine Inop
Chapter PI
Section 36
GEAR DOWN
ENGINE INOP
MAX CONTINUOUS THRUST
Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	80	227	1700		
80	76	223	4000	2300	200
75	71	218	6300	4900	2800
70	66	213	8600	7300	5300
65	62	208	10900	9800	8000
60	57	202	13200	12300	10900
55	52	196	15600	14800	13900
50	47	190	18100	17300	16500
45	43	183	20600	19800	18900
40	38	176	23100	22300	21400

Includes APU fuel burn.
Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	1500		
70	4500	2500	
65	7500	5900	3400
60	10600	9200	6900
55	13300	12300	10600
50	16200	15400	14500
45	19300	18300	17500
40	22200	21400	20500

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
70	%N1	94.8									
	MACH	.389									
	KIAS	235									
	FF/ENG	3774									
65	%N1	92.6	94.3	96.9							
	MACH	.376	.389	.402							
	KIAS	228	227	226							
	FF/ENG	3477	3485	3527							
60	%N1	90.2	91.9	93.7	96.3						
	MACH	.364	.375	.388	.402						
	KIAS	220	219	218	218						
	FF/ENG	3192	3191	3198	3240						
55	%N1	87.8	89.3	91.0	92.8	95.4					
	MACH	.351	.362	.374	.387	.400					
	KIAS	212	211	210	209	209					
	FF/ENG	2924	2909	2906	2913	2951					
50	%N1	85.3	86.7	88.2	89.9	91.7	94.2	98.2			
	MACH	.338	.348	.359	.371	.384	.398	.412			
	KIAS	204	203	202	201	200	199	198			
	FF/ENG	2672	2647	2630	2626	2633	2657	2737			
45	%N1	82.7	84.0	85.4	86.9	88.6	90.4	92.7	96.6		
	MACH	.325	.334	.344	.355	.367	.380	.393	.408		
	KIAS	196	195	193	192	191	190	189	189		
	FF/ENG	2432	2400	2374	2356	2351	2352	2359	2417		
40	%N1	79.8	81.1	82.5	83.9	85.4	87.0	88.8	90.8	94.1	98.4
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	.418
	KIAS	188	186	184	183	182	181	180	179	179	178
	FF/ENG	2206	2166	2133	2107	2088	2076	2069	2065	2101	2201

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
172	151	134	120	109	100	93	88	83	78	75
352	308	270	242	219	200	187	175	165	156	148
533	465	408	364	330	300	280	262	246	232	220
716	623	545	486	440	400	373	349	328	309	293
900	783	684	609	551	500	466	436	409	385	365
1086	943	823	733	661	600	559	523	490	462	438
1273	1105	964	856	772	700	652	610	572	538	510
1462	1267	1103	980	883	800	745	696	652	614	581
1653	1431	1245	1104	994	900	838	782	733	690	653
1845	1595	1386	1228	1105	1000	931	868	813	765	724

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.3	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	3.9	1:18	3.7	1:15	3.6	1:11
400	5.2	1:44	4.9	1:39	4.8	1:35
500	6.5	2:10	6.1	2:04	6.0	1:58
600	7.8	2:37	7.3	2:29	7.1	2:22
700	9.1	3:03	8.5	2:55	8.3	2:46
800	10.3	3:30	9.7	3:20	9.4	3:10
900	11.6	3:58	10.9	3:46	10.5	3:35
1000	12.8	4:25	12.0	4:12	11.6	3:59

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

**Long Range Cruise Diversion Fuel and Time
Fuel Required Adjustments (1000 KG)**

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.7	1.3
5	-0.8	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.0	2.0
7	-1.1	-0.6	0.0	1.2	2.4
8	-1.3	-0.7	0.0	1.4	2.7
9	-1.5	-0.7	0.0	1.6	3.1
10	-1.6	-0.8	0.0	1.8	3.5
11	-1.8	-0.9	0.0	1.9	3.8
12	-1.9	-1.0	0.0	2.1	4.2
13	-2.1	-1.1	0.0	2.3	4.5
14	-2.3	-1.1	0.0	2.5	4.9

Includes APU fuel burn.

GEAR DOWN
ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
80	%N1	93.4			
	KIAS	225			
	FF/ENG	4140			
75	%N1	91.4	94.7		
	KIAS	220	220		
	FF/ENG	3870	3910		
70	%N1	89.4	92.6		
	KIAS	216	216		
	FF/ENG	3610	3640		
65	%N1	87.4	90.5	95.9	
	KIAS	211	211	211	
	FF/ENG	3360	3380	3460	
60	%N1	85.2	88.2	92.9	
	KIAS	204	204	204	
	FF/ENG	3110	3110	3150	
55	%N1	82.9	85.9	90.4	97.2
	KIAS	198	198	198	198
	FF/ENG	2860	2860	2880	3010
50	%N1	80.4	83.4	87.7	92.8
	KIAS	192	192	192	192
	FF/ENG	2630	2620	2620	2670
45	%N1	77.8	80.7	85.0	89.6
	KIAS	185	185	185	185
	FF/ENG	2400	2380	2380	2400
40	%N1	75.1	77.8	82.1	86.5
	KIAS	178	178	178	178
	FF/ENG	2180	2160	2140	2140

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight
Text**Chapter PI**
Section 37

Introduction

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

General**Takeoff Speeds**

The speeds presented in the Takeoff Speeds table as well as FMC computed takeoff speeds can be used for all performance conditions provided that adjustments are made to V1 for clearway, stopway, anti-skid inoperative, thrust reversers inoperative, improved climb, contaminated runway situations or brake energy limits. These speeds may be used for weights less than or equal to the performance limited weight.

The FMC will protect for minimum control speeds by increasing V1, VR and V2 as required. However, the FMC will not compute takeoff speeds for weights where the required speed increase exceeds the maximum certified speed increase. This typically occurs at full rated thrust and light weights. In this case, the message "V SPEEDS UNAVAILABLE" will appear on the FMC scratchpad and the takeoff speed entries will be blank. Takeoff is not permitted in this condition as certified limits have been exceeded. The options are to select a smaller flap setting, select derate thrust and/or add weight (fuel). Selecting derate thrust is the preferred method as this will reduce the minimum control speeds. Note that the assumed temperature method will not help this condition as the minimum control speeds are determined at the actual temperature and therefore are not reduced.

Normal takeoff speeds, V1, VR, and V2 are read from either the dry or wet table by entering with takeoff flap setting and brake release weight. Use the tables provided to adjust takeoff speeds for altitude and actual temperature or assumed temperature for reduced thrust takeoffs. Slope and wind adjustments to V1 are obtained by entering the Slope and Wind V1 Adjustment table.

V1(MCG)

Regulations prohibit scheduling takeoff with a V1 less than minimum V1 for control on the ground, V1(MCG). It is therefore necessary to compare the adjusted V1 to V1(MCG). The V1(MCG) presented in this manual is conservative for all weight and bleed configurations.

To find V1(MCG) enter the V1(MCG) table with the airport pressure altitude and actual OAT. If the adjusted V1 is less than V1(MCG), set V1 equal to V1(MCG). If the adjusted VR is less than V1(MCG), set VR equal to V1(MCG), and determine a new V2 by adding the difference between the normal VR and V1(MCG) to the normal V2. No takeoff weight adjustment is necessary provided that the actual field length exceeds the minimum field length shown in the Field and Climb Limit Weight table.

Clearway and Stopway V1 Adjustments

Maximum allowable clearway limits are provided for guidance when more precise data is not available. Use of clearway is not allowed on wet runways.

Takeoff speed adjustments are to be applied to V1 speed when using takeoff weights based on the use of clearway and stopway.

Adjust V1 speed by the amount shown in the table. The adjusted V1 speed must not exceed VR. If the adjusted V1 speed is greater than VR, reduce V1 to equal VR.

Stab Trim

To find takeoff stabilizer trim setting, enter Stab Trim Setting table with anticipated brake release weight and center of gravity (C.G. % MAC) and read required stabilizer trim units.

VREF

This table contains flaps 40, 30 and 15 reference speeds for a given weight. With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

Flap Maneuver Speeds

This table provides the flap speed schedule for recommended maneuver speeds. Using VREF as the basis for the schedule makes it variable as a function of weight and will provide adequate maneuver margin above stall at all weights.

During flap retraction/extension, movement of the flap to the next position should be initiated when within 20 knots of the recommended speed for that position.

Slush/Standing Water Takeoff

Experience has shown that aircraft performance may deteriorate significantly on runways covered with snow, slush, standing water or ice. Therefore, reductions in field/obstacle limited takeoff weight and revised takeoff speeds are necessary. The tables are intended for guidance in accordance with advisory material and assume an engine failure at the critical point during the takeoff.

The entire runway is assumed to be completely covered by a contaminant of uniform thickness and density. Therefore this information is conservative when operating under typical cold weather conditions where patches of slush exist and some degree of sanding is common. Takeoffs in slush depths greater than 13 mm (0.5 inches) are not recommended because of possible airplane damage as a result of slush impingement on the airplane structure. The use of assumed temperature for reduced thrust is not allowed on contaminated runways. Interpolation for slush/standing water depths between the values shown is permitted.

Takeoff weight determination:

1. Enter the Weight Adjustment table with the dry field/obstacle limit weight to obtain the weight reduction for the slush/standing water depth and airport pressure altitude.
2. Adjust field length available for temperature by amount shown beneath V1(MCG) limit weight table.
3. Enter the V1(MCG) Limit Weight table with the adjusted field length and pressure altitude to obtain the slush/standing water limit weight with respect to minimum field length required for V1(MCG) speed.
4. The maximum allowable takeoff weight in slush/standing water is the lesser of the limit weights found in steps 1 and 3.

Takeoff speed determination:

1. Determine takeoff speeds V1, VR and V2 for actual brake release weight using the Dry Runway Takeoff Speeds table for the appropriate flap setting and thrust rating.
2. If V1(MCG) limited, set $V1 = V1(MCG)$. If not limited by V1(MCG) considerations, enter the V1 Adjustment table with actual brake release weight to determine the V1 reduction to apply to V1 speed. If the adjusted V1 is less than V1(MCG), set $V1 = V1(MCG)$.

Slippery Runway Takeoff

Airplane braking action is reported as good, medium or poor, depending on existing runway conditions. If braking action is reported as good, conditions should not be expected to be as good as on clean, dry runways. The value “good” is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when stopping. The performance level used to calculate the “good” data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate the “poor” data reflects a runway covered with wet ice. Performance is based on a 15 ft screen height at the end of the runway. The tables provided are used in the same manner as the Slush/Standing Water tables.

Anti-Skid Inoperative

When operating with anti-skid inoperative, the field limit weight and V1 must be reduced to account for the effect on accelerate-stop performance. Anti-skid inoperative is only allowed on a dry runway. A simplified method which conservatively accounts for the effects of anti-skid inoperative is to reduce the normal dry field/obstacle limited weight by 8600 kg and the V1 associated with the reduced weight by the amount shown in the table below.

ANTI-SKID INOPERATIVE V1 ADJUSTMENTS	
FIELD LENGTH (M)	V1 ADJUSTMENT (KIAS)
2000	-20
2500	-17
3000	-14
3500	-12
4000	-11

If the resulting V1 is less than V1(MCG), takeoff is permitted with V1 set equal to V1(MCG) provided the dry accelerate-stop distance adjusted for wind and slope exceeds approximately 1800 m.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Thrust Reverser Inoperative

When dispatching on a wet runway with both thrust reversers operative, an operative anti-skid system, and all brakes operating, regulations allow deceleration credit for one thrust reverser in the engine failure case and two thrust reversers in the all engine stop case.

When dispatching on a wet runway with one thrust reverser inoperative, the field/obstacle limited weight and V1 must be reduced to account for the effect on accelerate-stop performance. A simplified method, which

conservatively accounts for this, is to reduce the normal wet runway/field/obstacle limited weight by 1050 kg and the V1 associated with the reduced weight by 2 knots.

If the resulting V1 is less than minimum V1, takeoff is permitted with V1 set equal to V1(MCG) provided the accelerate-stop distance available adjusted for wind and slope exceeds approximately 1200 m.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Takeoff %N1

To find Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off operation, apply the %N1 adjustment shown below the table. No takeoff %N1 adjustment is required for engine and wing anti-ice.

Assumed Temperature Reduced Thrust

Regulations permit the use of up to 25% takeoff thrust reduction for operation with assumed temperature reduced thrust. Use of assumed temperature reduced thrust is not allowed with anti-skid inoperative or on runways contaminated with standing water, ice, slush, or snow. Use of assumed temperature reduced thrust is not recommended if potential windshear conditions exist.

To find the maximum allowable assumed temperature enter the Maximum Assumed Temperature table with airport pressure altitude and OAT. Compare this temperature to that at which the airplane is performance limited as determined from available takeoff performance data. Next, enter the Maximum Takeoff %N1 table with airport pressure altitude and the lower of the two temperatures previously determined, to obtain a maximum takeoff %N1. Do not use an assumed temperature less than the minimum assumed temperature shown. Enter the %N1 Adjustment table with OAT and the difference between the assumed and actual OAT to obtain a %N1 adjustment. Subtract the %N1 adjustment from the maximum takeoff %N1 found previously to determine the assumed temperature reduced thrust %N1.

Max Climb %N1

This table shows Max Climb %N1 for a 280/.80 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

Go-around %N1

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

Flight with Unreliable Airspeed / Turbulent Air Penetration

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

All Engines

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. This table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Cruise Control

These tables provide target %N1, Cruise Mach number, IAS and standard day fuel flow per engine for the airplane weight and pressure altitude.

.80M Enroute Fuel and Time

.80M Enroute Fuel and Time tables are provided to determine remaining time and fuel required to destination. The data is based on .80M Cruise and .80/280/250 descent. Tables are presented for low altitudes and high altitudes.

To determine remaining fuel and time required, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and

read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the actual weight at checkpoint to obtain fuel required to destination.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the table in the Engine Inoperative text section.

.80M Wind-Altitude Trade

Wind is a factor which may justify operations considerably below optimum altitude. For example, a favorable wind component may have an effect on ground speed which more than compensates for the loss in air range.

Using this table, it is possible to determine the break-even wind (advantage necessary or disadvantage that can be tolerated) to maintain the same range at another altitude and long range cruise speed. The tables make no allowance for climb or descent time, fuel or distance, and are based on comparing ground fuel mileage.

Descent

Time, fuel, and distance for descent are shown for a .80/280/250 descent speed schedule. Enter the table with top of descent pressure altitude and read distance, time and fuel. Data is based on flight idle thrust descent in zero wind. Allowances are included for a straight-in approach with gear down and landing flaps at the outer marker.

Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

Advisory Information

Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. Use of autobrake setting 1 is not recommended for landings on slippery runways, and is therefore not provided for these conditions. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of max manual braking and reverse thrust.

Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

Engine Inoperative

Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .80M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .80/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

Holding

Single engine holding data is provided in the same format as the all engine holding data and is based on the same assumptions.

Alternate Mode EEC

Introduction

This section contains performance data for airplane operation with the Electronic Engine Control (EEC) in the alternate mode (ALTN EEC switch illuminated) for applicable thrust ratings. The data includes engine bleed effects for normal air conditioning operation i.e., two packs on at normal flow all engines operating.

Operation with derate and/or assumed temperature reduced thrust is not permitted with the EEC in alternate mode.

Limit Weight

A simplified method which conservatively accounts for the effects of EEC in alternate mode is to reduce the normal mode (ON EEC switch illuminated) performance limited weights. The Limit Weight table

provides takeoff field, climb, obstacle and tire speed limit weights. To determine limit weights for operations with the EEC in the alternate mode, enter the table with the limit weights for normal mode EEC operation and read the associated limit weight for each performance condition. The most limiting of the takeoff weights must be used. Analysis from the Airplane Flight Manual - Digital Performance Information may yield less restrictive limit weights.

Takeoff Speed Adjustment

Takeoff speeds for the reduced weight should be increased by the amount shown in the Takeoff Speeds Adjustment table. The adjusted V1 should not exceed the adjusted VR.

NOTE: The FMC does not incorporate alternate mode EEC performance in its takeoff speeds calculations.

Max Takeoff %N1

The alternate mode EEC thrust schedule provides equal or greater thrust than the normal mode thrust for the same thrust lever position. Thrust limit protection is not provided in alternate mode EEC and maximum rated thrust may be reached at thrust lever position less than full forward. As a result, thrust overboost may occur if the target alternate mode EEC Max Takeoff %N1 settings are not observed.

To find alternate mode EEC Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter the Alternate Mode EEC Max Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off apply the %N1 adjustment provided below the table. No %N1 adjustment is required for engine or wing anti-ice.

Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

Note: The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.

PI.37.14

Performance Inflight**Chapter PI****Table of Contents****Section 40****737-800BBJW CFM56-7B27B3 LB FAA CATC/N**

General	PI.40.1
Takeoff Speeds - Dry Runway	PI.40.1
Takeoff Speeds - Wet Runway	PI.40.2
Maximum Allowable Clearway	PI.40.3
Clearway and Stopway V1 Adjustments	PI.40.3
Stab Trim Setting	PI.40.3
VREF	PI.40.4
Flap Maneuver Speeds	PI.40.5
Slush/Standing Water Takeoff	PI.40.6
Slippery Runway Takeoff	PI.40.10
Takeoff %N1	PI.40.14
Assumed Temperature Reduced Thrust	PI.40.14
Takeoff Speeds - Dry Runway (26K Derate)	PI.40.16
Takeoff Speeds - Wet Runway (26K Derate)	PI.40.17
Maximum Allowable Clearway (26K Derate)	PI.40.18
Clearway and Stopway V1 Adjustments (26K Derate) ...	PI.40.18
Stab Trim Setting (26K Derate)	PI.40.18
Slush/Standing Water Takeoff (26K Derate)	PI.40.19
Slippery Runway Takeoff (26K Derate)	PI.40.23
Takeoff %N1 - (26K Derate)	PI.40.27
Assumed Temperature Reduced Thrust - (26K Derate) ...	PI.40.27
Takeoff Speeds - Dry Runway (24K Derate)	PI.40.29
Takeoff Speeds - Wet Runway (24K Derate)	PI.40.30
Maximum Allowable Clearway (24K Derate)	PI.40.31
Clearway and Stopway V1 Adjustments (24K Derate) ...	PI.40.31
Stab Trim Setting (24K Derate)	PI.40.31
Slush/Standing Water Takeoff (24K Derate)	PI.40.32
Slippery Runway Takeoff (24K Derate)	PI.40.36
Takeoff %N1 (24K Derate)	PI.40.40
Assumed Temperature Reduced Thrust (24K Derate)	PI.40.40

Max Climb %N1	PI.40.42
Go-around %N1	PI.40.43
Flight With Unreliable Airspeed/ Turbulent Air Penetration	PI.40.44
All Engine	PI.41.1
.80M Maximum Operating Altitude	PI.41.1
.80M Cruise Control	PI.41.2
.80M Enroute Fuel and Time - Low Altitudes	PI.41.3
.80M Enroute Fuel and Time - High Altitudes	PI.41.5
.80M Wind-Altitude Trade	PI.41.7
Descent	PI.41.7
Holding	PI.41.8
Advisory Information	PI.42.1
Normal Configuration Landing Distances	PI.42.1
Non-Normal Configuration Landing Distance	PI.42.4
Recommended Brake Cooling Schedule	PI.42.12
Engine Inoperative	PI.43.1
Initial Max Continuous %N1	PI.43.1
Max Continuous %N1	PI.43.2
Driftdown Speed/Level Off Altitude	PI.43.6
Driftdown/LRC Cruise Range Capability	PI.43.7
Long Range Cruise Altitude Capability	PI.43.8
Long Range Cruise Control	PI.43.9
Long Range Cruise Diversion Fuel and Time	PI.43.10
Holding	PI.43.11
Alternate Mode EEC	PI.44.1
Alternate Mode EEC Limit Weight	PI.44.1
Alternate Mode EEC Max Takeoff %N1	PI.44.1
Gear Down	PI.45.1
Long Range Cruise Altitude Capability	PI.45.1
Long Range Cruise Control	PI.45.2
Long Range Cruise Enroute Fuel and Time	PI.45.3
Descent	PI.45.4
Holding	PI.45.5

BBJ Flight Crew Operations Manual

Gear Down, Engine Inoperative	PI.46.1
Driftdown Speed/Level Off Altitude	PI.46.1
Long Range Cruise Altitude Capability	PI.46.1
Long Range Cruise Control	PI.46.2
Long Range Cruise Diversion Fuel and Time	PI.46.3
Holding	PI.46.5
Text	PI.47.1
Introduction	PI.47.1
General	PI.47.1
All Engines	PI.47.6
Advisory Information	PI.47.7
Engine Inoperative	PI.47.9
Alternate Mode EEC	PI.47.11
Gear Down	PI.47.12

Intentionally
Blank

DO NOT USE FOR FLIGHT

Performance Inflight

General

Chapter PI

Section 40

Takeoff Speeds - Dry Runway

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	163	166	172	156	160	165	156	157	163	153	154	160			
180	158	161	168	152	155	162	151	153	160	148	150	157	146	147	154
170	154	156	164	148	150	158	147	149	156	144	145	153	141	142	151
160	149	151	160	143	145	154	142	144	153	139	141	150	136	138	147
150	144	146	156	138	140	151	137	139	149	134	136	146	131	133	143
140	138	140	152	133	135	146	132	133	145	129	130	142	126	128	140
130	132	134	147	127	129	142	126	127	140	123	125	138	121	122	135
120	126	128	143	121	123	137	120	121	136	117	119	133	115	116	131
110	120	121	137	115	116	132	114	115	131	111	112	128	109	110	126
100	113	114	132	109	110	127	107	108	126	105	106	123	103	104	121
90	106	107	126	102	103	122	101	102	121	98	99	118	96	97	116

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	6						4	5						-3	-4								
60	140	4	5	6	7				4	4	5	6				-3	-3	-4	-4						
50	122	2	3	4	5	6	8	9	2	3	4	5	6	8	9	-1	-2	-3	-3	-4	-5	-6			
40	104	0	1	3	4	5	6	8	0	1	3	4	5	6	8	0	-1	-2	-2	-3	-4	-5			
30	86	0	0	1	3	4	5	7	0	0	1	3	4	5	7	0	0	-1	-2	-2	-3	-4			
20	68	0	0	1	2	3	4	6	0	0	1	2	3	4	6	0	0	-1	-1	-2	-3	-4			
-60	-76	0	0	1	2	3	4	6	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40		
190	-3	-2	0	1	2		-3	-2	-1	0	0	0	1	1		
170	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1		
150	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1		
130	-1	-1	0	1	1	-2	-2	-1	-1	0	0	1	1	1		
110	-1	0	0	0	1	-2	-2	-1	-1	0	0	0	1	1		
90	0	0	0	0	0	-3	-2	-1	-1	0	0	0	0	0		

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	97	94					
60	140	97	94	92	91			
50	122	99	97	93	91	89	86	83
40	104	103	101	98	94	90	86	83
30	86	106	105	101	97	94	89	85
20	68	106	106	102	99	95	91	87
-60	-76	108	107	104	100	97	93	89

Takeoff Speeds - Wet Runway
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	157	166	172	150	160	165	151	157	163	148	154	160	140	147	154
180	152	161	168	145	155	162	145	153	160	142	150	157	135	142	151
170	146	156	164	140	150	158	140	149	156	137	145	153	135	142	151
160	141	151	160	135	145	154	134	144	153	131	141	150	129	138	147
150	135	146	156	130	140	151	129	139	149	126	136	146	124	133	143
140	130	140	152	124	135	146	123	133	145	121	130	142	118	128	140
130	123	134	147	118	129	142	117	127	140	115	125	138	113	122	135
120	117	128	143	112	123	137	111	121	136	109	119	133	107	116	131
110	111	121	137	106	116	132	105	115	131	103	112	128	101	110	126
100	104	114	132	99	110	127	98	108	126	96	106	123	94	104	121
90	96	107	126	92	103	122	92	102	121	89	99	118	88	97	116

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						4	5						-3	-4								
60	140	6	7	8	9				4	4	5	6				-3	-3	-4	-4						
50	122	3	4	5	7	8	10	13	2	3	4	5	6	8	9	-1	-2	-3	-3	-4	-5	-6			
40	104	0	1	3	4	6	8	10	0	1	3	4	5	6	8	0	-1	-2	-2	-3	-4	-5			
30	86	0	0	1	3	5	6	9	0	0	1	3	4	5	7	0	0	-1	-2	-2	-3	-4			
20	68	0	0	1	3	4	5	7	0	0	1	2	3	4	6	0	0	-1	-1	-2	-3	-4			
-60	-76	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-5	-2	0	3	6		-4	-2	-1	0	1	2	2	3
170	-4	-2	0	2	5		-4	-2	-1	0	1	1	2	3
150	-4	-2	0	2	4		-4	-2	-1	0	1	2	2	3
130	-3	-1	0	2	3		-4	-3	-1	0	1	2	2	3
110	-2	-1	0	1	2		-5	-3	-2	0	1	2	3	4
90	-2	-1	0	1	2		-6	-4	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		-2000	0	2000	4000	6000	10000
70	158	97	94				
60	140	97	94	92	91		
50	122	99	97	93	91	89	
40	104	103	101	98	94	90	86
30	86	106	105	101	97	94	89
20	68	106	106	102	99	95	91
-60	-76	108	107	104	100	97	93

Maximum Allowable Clearway

Max Takeoff Thrust

FIELD LENGTH (FT)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	500
5000	550
6000	650
7000	700
8000	800
9000	850
10000	900

Clearway and Stopway V1 Adjustments

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-6	-4	-3	-4				
600	-6	-4	-3	-3				
400	-5	-3	-2	-3				
200	-3	-2	-1	-2				
0	0	0	0	0	0	0	0	0
-200	0	0	0	0	1	1	1	1
-400	0	0	0	0	3	2	2	1
-600	0	0	0	0	5	4	3	2
-800	0	0	0	0	6	5	3	2

Use of clearway not allowed on wet runways.

Stab Trim Setting

Max Takeoff Thrust

Flaps 1 and 5

WEIGHT (1000 LB)	C.G. (%MAC)									
	6	8	14	20	26	30	31	32	34	36
180	8 1/2	8 1/2	7 1/2	6 1/2	5 1/4	4 1/2	4 1/2	4 1/4	3 3/4	3 1/2
160	8 1/4	8	7	6	5	4 1/4	4	3 3/4	3 1/2	3 1/4
140	7 1/2	7 1/4	6 1/4	5 1/4	4 1/2	3 3/4	3 1/2	3 1/2	3 1/4	2 3/4
120	6 3/4	6 1/2	5 1/2	4 3/4	3 3/4	3 1/4	3 1/4	3	2 3/4	2 3/4
100	5 3/4	5 1/2	4 3/4	4	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
80	5 3/4	5 1/2	4 3/4	4	3 1/4	2 1/4	2 3/4	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)									
	6	9	10	11	16	23	27	30	33	36
180	8 1/2	8 1/2	8 1/2	8 1/4	6 1/2	5	4 1/4	3 3/4	3	2 3/4
160	8 1/2	8 1/2	8	7 3/4	5 3/4	4 1/2	3 3/4	3 1/4	2 3/4	2 3/4
140	8	7 1/4	7	6 3/4	5 1/4	4	3 1/4	2 3/4	2 3/4	2 3/4
120	7	6 1/4	6	5 3/4	4 1/2	3 1/2	2 3/4	2 3/4	2 3/4	2 3/4
100	5	4 3/4	4 1/2	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
80	5	4 3/4	4 1/2	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

VREF

WEIGHT (1000 LB)	FLAPS		
	40	30	15
180	157	165	174
170	153	160	169
160	148	156	164
150	144	151	159
140	139	146	154
130	133	141	148
120	128	135	142
110	122	129	135
100	116	123	129
90	109	116	122

Flap Maneuver Speeds

FLAP POSITION	MANEUVER SPEED
UP	VREF40 + 70
1	VREF40 + 50
5	VREF40 + 30
10	VREF40 + 30
15	VREF40 + 20
25	VREF40 + 10
30	VREF30
40	VREF40

ADVISORY INFORMATION

Slush/Standing Water Takeoff

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-24.3	-29.3	-34.3	-28.8	-33.8	-38.8	-38.5	-43.5	-48.5
180	-22.1	-27.1	-32.1	-26.0	-31.0	-36.0	-34.2	-39.2	-44.2
170	-20.0	-25.0	-30.0	-23.2	-28.2	-33.2	-30.1	-35.1	-40.1
160	-18.0	-23.0	-28.0	-20.7	-25.7	-30.7	-26.3	-31.3	-36.3
150	-16.1	-21.1	-26.1	-18.3	-23.3	-28.3	-22.8	-27.8	-32.8
140	-14.3	-19.3	-24.3	-16.0	-21.0	-26.0	-19.6	-24.6	-29.6
130	-12.6	-17.6	-22.6	-13.9	-18.9	-23.9	-16.7	-21.7	-26.7
120	-10.9	-15.9	-20.9	-11.9	-16.9	-21.9	-14.1	-19.1	-24.1
110	-9.4	-14.4	-19.4	-10.1	-15.1	-20.1	-11.7	-16.7	-21.7
100	-7.8	-12.8	-17.8	-8.2	-13.2	-18.2	-9.3	-14.3	-19.3
90	-6.2	-11.2	-16.2	-6.4	-11.4	-16.4	-7.0	-12.0	-17.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4200							82.3		
4600	83.4			92.1			106.8	73.2	
5000	109.0	74.0		117.6	82.7		132.0	97.5	
5400	135.7	99.3		144.2	107.9	73.5	157.8	122.4	88.4
5800	163.6	125.5	89.7	172.0	134.1	98.4	184.4	148.0	113.0
6200	192.9	153.0	115.5	201.0	161.4	124.1		174.3	138.4
6600		181.8	142.5		190.0	151.0		201.4	164.4
7000			170.8			179.1			191.2
7400			200.4			208.3			

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-17	-14	-11	-11	-8	-5	-1	0	0
180	-18	-16	-12	-12	-10	-6	-2	0	0
170	-20	-17	-10	-14	-12	-8	-3	-1	0
160	-21	-18	-15	-16	-13	-10	-5	-2	0
150	-22	-19	-16	-17	-15	-11	-7	-4	-1
140	-23	-20	-17	-19	-16	-13	-9	-7	-3
130	-23	-21	-17	-20	-18	-14	-12	-10	-6
120	-24	-21	-18	-21	-19	-15	-15	-13	-9
110	-25	-22	-19	-23	-20	-17	-18	-16	-12
100	-25	-23	-19	-24	-21	-18	-20	-18	-14
90	-26	-24	-20	-25	-22	-19	-21	-18	-15

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff

No Reverse Thrust

Weight Adjustments (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-29.0	-34.5	-40.0	-33.7	-39.2	-44.7	-43.5	-49.0	-54.5
180	-26.4	-31.9	-37.4	-30.4	-35.9	-41.4	-38.7	-44.2	-49.7
170	-24.0	-29.5	-35.0	-27.3	-32.8	-38.3	-34.2	-39.7	-45.2
160	-21.7	-27.2	-32.7	-24.4	-29.9	-35.4	-30.1	-35.6	-41.1
150	-19.5	-25.0	-30.5	-21.7	-27.2	-32.7	-26.3	-31.8	-37.3
140	-17.4	-22.9	-28.4	-19.2	-24.7	-30.2	-22.9	-28.4	-33.9
130	-15.5	-21.0	-26.5	-16.8	-22.3	-27.8	-19.8	-25.3	-30.8
120	-13.6	-19.1	-24.6	-14.7	-20.2	-25.7	-17.1	-22.6	-28.1
110	-11.8	-17.3	-22.8	-12.6	-18.1	-23.6	-14.6	-20.1	-25.6
100	-10.0	-15.5	-21.0	-10.5	-16.0	-21.5	-12.1	-17.6	-23.1
90	-8.2	-13.7	-19.2	-8.4	-13.9	-19.4	-9.5	-15.0	-20.5

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5000							74.6		
5400							103.6	71.0	
5800	74.2			98.8			132.5	100.0	
6200	109.0			131.3	94.8		161.2	128.9	96.4
6600	144.4	104.6		164.6	127.2	90.8	189.8	157.7	125.3
7000	180.3	139.9	100.3	198.6	160.4	123.1		186.3	154.1
7400		175.8	135.5		194.3	156.2			182.7
7800			171.3			190.1			
8200			207.6						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -140 ft/+140 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-23	-15	-8	-15	-7	0	0	0	0
180	-25	-17	-10	-17	-10	-2	-2	0	0
170	-26	-19	-11	-19	-12	-4	-5	0	0
160	-27	-20	-12	-21	-14	-6	-7	0	0
150	-29	-21	-14	-23	-16	-8	-10	-3	0
140	-30	-22	-15	-25	-18	-10	-13	-6	0
130	-30	-23	-15	-27	-19	-12	-17	-9	-2
120	-31	-24	-16	-28	-21	-13	-21	-13	-6
110	-32	-24	-17	-30	-22	-15	-24	-17	-9
100	-33	-25	-18	-31	-23	-16	-27	-19	-12
90	-34	-26	-19	-32	-24	-17	-27	-20	-12

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff
Maximum Reverse Thrust
Weight Adjustment (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-2.5	-2.5	-2.5	-13.8	-13.8	-13.8	-23.8	-23.8	-23.8
180	-2.9	-2.9	-2.9	-13.5	-13.5	-13.5	-22.7	-22.7	-22.7
170	-3.2	-3.2	-3.2	-13.2	-13.2	-13.2	-21.6	-21.6	-21.6
160	-3.4	-3.4	-3.4	-12.7	-12.7	-12.7	-20.5	-20.5	-20.5
150	-3.6	-3.6	-3.6	-12.2	-12.2	-12.2	-19.4	-19.4	-19.4
140	-3.6	-3.6	-3.6	-11.6	-11.6	-11.6	-18.2	-18.2	-18.2
130	-3.5	-3.5	-3.5	-11.0	-11.0	-11.0	-16.9	-16.9	-16.9
120	-3.3	-3.3	-3.3	-10.2	-10.2	-10.2	-15.6	-15.6	-15.6
110	-3.1	-3.1	-3.1	-9.5	-9.5	-9.5	-14.3	-14.3	-14.3
100	-2.9	-2.9	-2.9	-8.7	-8.7	-8.7	-13.0	-13.0	-13.0
90	-2.7	-2.7	-2.7	-8.0	-8.0	-8.0	-11.7	-11.7	-11.7

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3400	91.8								
3800	136.0	103.0							
4200	179.2	146.9	114.1						
4600		189.8	157.7	94.3					
5000			200.4	124.9	90.6				
5400				157.0	121.0	86.9			
5800				190.8	152.9	117.2	80.4		
6200					186.5	148.9	98.8		
6600						182.2	117.9	82.7	
7000							138.0	101.1	
7400							159.1	120.3	85.0
7800							181.6	140.5	103.5
8200							205.5	161.8	122.8
8600								184.5	143.1
9000								208.5	164.6
9400									187.4

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -80ft/+80ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -80ft/+80ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -130ft/+130ft for every 5°C above/below 4°C.
3. Max allowable slippery runway limited weight is lesser of weights from 1 and 2.

ADVISORY INFORMATION

Slippery Runway Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESSURE ALTITUDE (FT)			PRESSURE ALTITUDE (FT)			PRESSURE ALTITUDE (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-6	-1	0	-15	-10	-5	-27	-22	-17
180	-7	-2	0	-17	-12	-7	-29	-24	-19
170	-8	-3	0	-18	-13	-8	-32	-27	-22
160	-8	-3	0	-20	-15	-10	-33	-28	-23
150	-9	-4	0	-21	-16	-11	-35	-30	-25
140	-10	-5	0	-22	-17	-12	-37	-32	-27
130	-11	-6	-1	-23	-18	-13	-38	-33	-28
120	-11	-6	-1	-25	-20	-15	-39	-34	-29
110	-12	-7	-2	-26	-21	-16	-41	-36	-31
100	-13	-8	-3	-27	-22	-17	-42	-37	-32
90	-14	-9	-4	-28	-23	-18	-44	-39	-34

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
Weight Adjustments (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-4.9	-4.9	-4.9	-18.6	-18.6	-18.6	-30.3	-30.3	-30.3
180	-5.2	-5.2	-5.2	-18.0	-18.0	-18.0	-28.5	-28.5	-28.5
170	-5.3	-5.3	-5.3	-17.3	-17.3	-17.3	-26.8	-26.8	-26.8
160	-5.4	-5.4	-5.4	-16.5	-16.5	-16.5	-25.0	-25.0	-25.0
150	-5.3	-5.3	-5.3	-15.6	-15.6	-15.6	-23.3	-23.3	-23.3
140	-5.1	-5.1	-5.1	-14.7	-14.7	-14.7	-21.5	-21.5	-21.5
130	-4.8	-4.8	-4.8	-13.6	-13.6	-13.6	-19.8	-19.8	-19.8
120	-4.4	-4.4	-4.4	-12.4	-12.4	-12.4	-18.1	-18.1	-18.1
110	-4.0	-4.0	-4.0	-11.2	-11.2	-11.2	-16.4	-16.4	-16.4
100	-3.6	-3.6	-3.6	-10.0	-10.0	-10.0	-14.6	-14.6	-14.6
90	-3.2	-3.2	-3.2	-8.8	-8.8	-8.8	-12.9	-12.9	-12.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800	107.8								
4200	157.3	120.4	82.3						
4600	204.7	169.3	132.8						
5000			181.2						
5400				79.1					
5800				122.3	79.1				
6200				165.8	122.3	79.1			
6600				209.7	165.8	122.3			
7000					209.7	165.8			
7400						209.7			
8200							74.0		
8600							101.5		
9000							130.0	84.3	
9400							159.7	112.0	
9800							191.1	141.0	94.6
10200								171.3	122.7
10600								203.2	152.2
11000									183.1

- 1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
- 2. Adjust “Good” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-7	-2	0	-19	-14	-9	-37	-32	-27
180	-8	-3	0	-21	-16	-11	-40	-35	-30
170	-9	-4	0	-23	-18	-13	-43	-38	-33
160	-10	-5	0	-25	-20	-15	-45	-40	-35
150	-11	-6	-1	-27	-22	-17	-47	-42	-37
140	-12	-7	-2	-28	-23	-18	-49	-44	-39
130	-13	-8	-3	-30	-25	-20	-51	-46	-41
120	-14	-9	-4	-32	-27	-22	-53	-48	-43
110	-16	-11	-6	-33	-28	-23	-55	-50	-45
100	-17	-12	-7	-35	-30	-25	-56	-51	-46
90	-18	-13	-8	-36	-31	-26	-57	-52	-47

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR

Takeoff %N1

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	95.7	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	96.8	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	97.6	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.3	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.0	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	99.7	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	99.3	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	98.5	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	97.8	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	97.0	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	96.2	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
5	95.4	97.0	99.0	99.3	99.6	99.8	100.1	100.3	100.6	100.9	101.2	101.0	100.9
0	94.6	96.2	98.2	98.6	98.8	99.1	99.3	99.6	99.8	100.1	100.4	100.3	100.1
-5	93.8	95.4	97.5	97.8	98.1	98.3	98.6	98.8	99.1	99.4	99.6	99.5	99.4
-10	93.0	94.6	96.7	97.0	97.3	97.5	97.8	98.0	98.3	98.6	98.8	98.7	98.6
-15	92.2	93.8	95.9	96.3	96.5	96.8	97.0	97.3	97.5	97.8	98.1	97.9	97.8
-20	91.4	93.0	95.2	95.5	95.7	96.0	96.2	96.5	96.7	97.0	97.3	97.1	97.0
-25	90.5	92.2	94.4	94.7	94.9	95.2	95.4	95.7	95.9	96.2	96.5	96.3	96.2
-30	89.7	91.3	93.6	93.9	94.1	94.4	94.6	94.9	95.1	95.4	95.6	95.5	95.4
-35	88.8	90.5	92.8	93.1	93.3	93.6	93.8	94.0	94.3	94.6	94.8	94.7	94.6
-40	88.0	89.6	91.9	92.3	92.5	92.7	93.0	93.2	93.5	93.7	94.0	93.9	93.7
-45	87.1	88.8	91.1	91.4	91.7	91.9	92.1	92.4	92.6	92.9	93.1	93.0	92.9
-50	86.2	87.9	90.3	90.6	90.8	91.1	91.3	91.5	91.8	92.0	92.3	92.2	92.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Assumed Temperature Reduced Thrust
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
55	73	71	69	67									
50	73	71	69	67	65	63							
45	73	71	69	67	65	63	61	59	57				
40	73	71	69	67	65	63	61	59	57	55			
35	70	69	69	67	65	63	61	59	57	55	53		
30	67	65	66	65	65	63	61	59	57	55	53	51	
25	67	65	65	63	64	63	61	59	57	55	53	51	
20	67	65	65	63	64	63	61	59	57	55	53	51	
15	67	65	65	63	64	63	61	59	57	55	53	51	
10 & BELOW	67	65	65	63	64	63	61	59	57	55	53	51	

Assumed Temperature Reduced Thrust**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	94.1	94.4	95.2	95.4	96.3	97.2	97.7	97.9	98.0	98.0	98.0	98.0
70	94.8	95.2	95.4	95.0	95.6	96.5	97.1	97.3	97.3	97.3	97.3	97.3
65	95.6	96.0	96.1	95.9	96.2	96.4	96.4	96.6	96.6	96.6	96.6	96.6
60	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.7													
100	15.0	10.3												
90	14.0	11.5												
80	12.8	11.7	7.2											
70	10.7	10.7	8.3	7.2	5.6									
60	9.2	9.4	8.6	8.4	6.8	5.7	4.1							
50	7.8	7.5	7.5	7.2	7.0	6.9	5.3	4.2	2.7					
40		6.0	6.1	6.1	5.9	5.8	5.8	5.4	4.2	4.0	4.6			
30		4.6	4.4	4.5	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	4.0	
20			2.9	2.9	2.9	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.7
10			1.5	1.5	1.5	1.4	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (26K Derate)
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
180	160	162	167	153	156	161	153	154	159	150	150	156	142	143	150
170	155	157	164	149	151	158	148	149	156	145	146	153	137	138	147
160	150	152	160	144	146	154	143	144	152	140	141	149	132	133	143
150	145	147	156	139	141	150	138	139	148	135	136	145	127	128	139
140	139	141	151	134	135	146	133	134	144	130	131	141	122	123	135
130	133	135	147	128	129	141	127	128	140	124	125	137	116	117	130
120	127	128	142	122	123	137	121	122	135	118	119	133	110	111	126
110	121	122	137	116	117	132	115	116	130	112	113	128	104	105	121
100	114	115	131	109	110	127	108	109	125	106	107	123	97	98	116
90	107	108	126	103	103	121	102	102	120	99	100	118			

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	6						4	5						-3	-3								
60	140	4	5	6	7				3	4	5	6				-2	-3	-3	-4						
50	122	2	3	4	5	6	7	9	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-5	-6			
40	104	1	1	3	4	5	6	7	1	1	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-5			
30	86	0	0	1	2	4	5	6	0	0	1	3	4	5	6	0	0	-1	-2	-2	-3	-4			
20	68	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	-1	-1	-2	-3	-3			
-60	-76	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3			

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)									
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40		
190	-3	-2	0	1	1		-2	-1	0	0	0	1	1	1		
170	-3	-1	0	1	1		-2	-1	0	0	0	1	1	1		
150	-2	-1	0	1	1		-2	-1	0	0	0	1	1	1		
130	-1	-1	0	1	1		-2	-1	0	0	0	1	1	1		
110	-1	0	0	0	1		-2	-1	0	0	0	0	1	1		
90	0	0	0	0	1		-2	-1	0	0	0	0	1	1		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	95	93					
60	140	95	93	92	90			
50	122	97	95	92	90	88	86	83
40	104	101	99	96	93	89	86	83
30	86	104	103	100	96	92	88	85
20	68	104	104	101	98	94	90	87
-60	-76	106	105	102	99	95	92	89

Takeoff Speeds - Wet Runway (26K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
180	153	162	168	146	156	161	146	154	159	143	150	156			
170	148	157	164	141	151	158	141	149	156	138	146	153	136	143	150
160	142	152	160	136	146	154	136	144	152	133	141	149	131	138	147
150	137	147	156	131	141	150	130	139	148	127	136	145	125	134	143
140	131	141	151	125	135	146	125	134	144	122	131	141	120	128	139
130	125	135	147	119	129	141	119	128	140	116	125	137	114	123	135
120	118	128	142	113	123	137	113	122	135	110	119	133	108	117	130
110	112	122	137	107	117	132	106	116	130	104	113	128	102	111	126
100	105	115	131	100	110	127	100	109	125	97	107	123	96	105	121
90	98	108	126	93	103	121	93	102	120	91	100	118	89	98	116

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	7	8						4	5						-3	-4					
60	140	5	6	7	9				3	4	5	6				-2	-3	-3	-4			
50	122	3	4	5	6	8	9	12	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-5	-6
40	104	1	2	3	4	6	7	9	1	1	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-5
30	86	0	0	1	3	4	6	7	0	0	1	3	4	5	6	0	0	-1	-2	-2	-3	-4
20	68	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3
-60	-76	0	0	1	2	4	5	7	0	0	1	2	3	4	5	0	0	-1	-1	-2	-2	-3

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-5	-2	0	3	6		-3	-2	-1	0	1	1	2	3
170	-4	-2	0	2	5		-3	-2	-1	0	1	1	2	3
150	-4	-2	0	2	4		-4	-2	-1	0	1	1	2	3
130	-3	-1	0	2	3		-4	-3	-1	0	1	2	2	3
110	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4
90	-2	-1	0	1	2		-5	-3	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	95	93					
60	140	95	93	92	90			
50	122	97	95	92	90	88	86	83
40	104	101	99	96	93	89	86	83
30	86	104	103	100	96	92	88	85
20	68	104	104	101	98	94	90	87
-60	-76	106	105	102	99	95	92	89

Maximum Allowable Clearway (26K Derate)

FIELD LENGTH (FT)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	500
5000	550
6000	650
7000	700
8000	800
9000	850
10000	900

Clearway and Stopway V1 Adjustments (26K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
1000	-6	-4	-4	-4				
800	-6	-4	-3	-4				
600	-4	-4	-3	-3				
400	-3	-3	-2	-2				
200	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	1	1	1	1	2	1	1	1
-400	1	1	1	1	3	2	2	1
-600	1	1	1	1	4	3	2	1
-800	1	1	1	1	5	5	3	2
-1000	1	1	1	1	8	6	4	2

Use of clearway not allowed on wet runways.

Stab Trim Setting (26K Derate)

Flaps 1 and 5

WEIGHT (1000 LB)	C.G. (%MAC)									
	6	9	14	18	22	26	30	32	33	36
180	8 1/2	8 1/2	7 3/4	7	6 1/4	5 1/2	5	4 1/2	4 1/2	4
160	8 1/2	8	7 1/4	6 1/2	5 3/4	5 1/4	4 1/2	4 1/4	4	3 1/2
140	7 3/4	7 1/4	6 1/2	6	5 1/4	4 3/4	4	3 3/4	3 1/2	3
120	7	6 1/2	5 3/4	5 1/4	4 3/4	4	3 1/2	3 1/4	3	2 3/4
100	6 1/4	5 3/4	5 1/4	4 1/2	4	3 1/2	3	2 3/4	2 3/4	2 3/4
80	6 1/4	5 3/4	5 1/4	4 1/2	4	3 1/2	3	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)									
	6	9	11	16	24	28	29	31	33	36
180	8 1/2	8 1/2	8 1/2	6 3/4	5	4 1/4	4	3 1/2	3 1/4	2 3/4
160	8 1/2	8 1/2	7 3/4	6	4 1/2	3 3/4	3 1/2	3	2 3/4	2 3/4
140	8	7 1/4	6 3/4	5 1/2	4	3 1/4	3	2 3/4	2 3/4	2 3/4
120	7	6 1/4	6	5	3 1/2	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
100	5 1/4	4 3/4	4 1/2	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
80	5 1/4	4 3/4	4 1/2	3 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION**Slush/Standing Water Takeoff (26K Derate)****Maximum Reverse Thrust****Weight Adjustments (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-24.2	-29.7	-35.2	-29.1	-34.6	-40.1	-39.5	-45.0	-50.5
180	-22.2	-27.7	-33.2	-26.3	-31.8	-37.3	-35.1	-40.6	-46.1
170	-20.2	-25.7	-31.2	-23.7	-29.2	-34.7	-31.0	-36.5	-42.0
160	-18.3	-23.8	-29.3	-21.1	-26.6	-32.1	-27.1	-32.6	-38.1
150	-16.4	-21.9	-27.4	-18.7	-24.2	-29.7	-23.5	-29.0	-34.5
140	-14.6	-20.1	-25.6	-16.4	-21.9	-27.4	-20.3	-25.8	-31.3
130	-12.9	-18.4	-23.9	-14.2	-19.7	-25.2	-17.3	-22.8	-28.3
120	-11.2	-16.7	-22.2	-12.2	-17.7	-23.2	-14.5	-20.0	-25.5
110	-9.5	-15.0	-20.5	-10.3	-15.8	-21.3	-12.0	-17.5	-23.0
100	-7.9	-13.4	-18.9	-8.4	-13.9	-19.4	-9.5	-15.0	-20.5
90	-6.3	-11.8	-17.3	-6.5	-12.0	-17.5	-7.0	-12.5	-18.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4200				74.8			89.0		
4600	92.1			100.3			114.0	82.9	
5000	118.6	85.7		126.7	93.8		139.9	107.7	70.7
5400	146.4	111.9	73.0	154.3	120.0	81.1	166.9	133.4	95.2
5800	175.6	139.3	98.6	183.2	147.3	106.8	194.9	160.0	120.4
6200	206.4	168.2	125.4		175.8	133.5		187.8	146.6
6600		198.6	153.5		205.6	161.4			173.8
7000			183.2			190.7			202.0

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -130 ft /+130 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-15	-10	-5	-9	-4	0	0	0	0
180	-17	-12	-7	-11	-6	-1	0	0	0
170	-18	-13	-8	-13	-8	-3	0	0	0
160	-20	-15	-10	-14	-9	-4	-2	0	0
150	-21	-16	-11	-16	-11	-6	-5	0	0
140	-22	-17	-12	-18	-13	-8	-8	-3	0
130	-23	-18	-13	-19	-14	-9	-11	-6	-1
120	-23	-18	-13	-21	-16	-11	-14	-9	-4
110	-24	-19	-14	-22	-17	-12	-17	-12	-7
100	-25	-20	-15	-23	-18	-13	-19	-14	-9
90	-25	-20	-15	-23	-18	-13	-20	-15	-10

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff (26K Derate)****No Reverse Thrust****Weight Adjustments (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-31.2	-36.7	-42.2	-36.2	-41.7	-47.2	-46.7	-52.2	-57.7
180	-29.0	-34.5	-40.0	-33.1	-38.6	-44.1	-42.0	-47.5	-53.0
170	-26.7	-32.2	-37.7	-30.2	-35.7	-41.2	-37.5	-43.0	-48.5
160	-24.6	-30.1	-35.6	-27.4	-32.9	-38.4	-33.4	-38.9	-44.4
150	-22.4	-27.9	-33.4	-24.7	-30.2	-35.7	-29.6	-35.1	-40.6
140	-20.4	-25.9	-31.4	-22.2	-27.7	-33.2	-26.1	-31.6	-37.1
130	-18.4	-23.9	-29.4	-19.8	-25.3	-30.8	-22.9	-28.4	-33.9
120	-16.5	-22.0	-27.5	-17.5	-23.0	-28.5	-19.9	-25.4	-30.9
110	-14.6	-20.1	-25.6	-15.4	-20.9	-26.4	-17.3	-22.8	-28.3
100	-12.8	-18.3	-23.8	-13.4	-18.9	-24.4	-15.0	-20.5	-26.0
90	-11.0	-16.5	-22.0	-11.6	-17.1	-22.6	-13.0	-18.5	-24.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5800							86.5		
6200							121.2		
6600				99.6			156.2	95.1	
7000	100.3			144.8			191.5	129.9	
7400	153.5			190.8	110.8			165.0	103.8
7800	207.7	113.6			156.2	76.9		200.4	138.7
8200		167.0	74.5		202.4	122.0			173.8
8600			126.8			167.7			209.4
9000			180.6						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -140 ft/+140 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-25	-17	-10	-15	-7	0	0	0	0
180	-27	-19	-12	-18	-10	-3	0	0	0
170	-29	-21	-14	-20	-13	-5	0	0	0
160	-30	-23	-15	-23	-16	-8	-5	0	0
150	-32	-25	-17	-26	-18	-11	-10	-2	0
140	-34	-26	-19	-28	-21	-13	-15	-7	0
130	-36	-28	-21	-31	-23	-16	-19	-12	-4
120	-37	-30	-22	-33	-26	-18	-24	-16	-9
110	-39	-31	-24	-36	-28	-21	-28	-21	-13
100	-40	-33	-25	-38	-30	-23	-32	-25	-17
90	-42	-34	-27	-40	-33	-25	-36	-28	-21

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	4000	8000	S.L.	4000	8000	S.L.	4000	8000
190	-2.5	-2.5	-2.5	-13.7	-13.7	-13.7	-23.6	-23.6	-23.6
180	-2.8	-2.8	-2.8	-13.4	-13.4	-13.4	-22.6	-22.6	-22.6
170	-3.2	-3.2	-3.2	-13.0	-13.0	-13.0	-21.5	-21.5	-21.5
160	-3.4	-3.4	-3.4	-12.6	-12.6	-12.6	-20.4	-20.4	-20.4
150	-3.5	-3.5	-3.5	-12.1	-12.1	-12.1	-19.3	-19.3	-19.3
140	-3.5	-3.5	-3.5	-11.6	-11.6	-11.6	-18.1	-18.1	-18.1
130	-3.5	-3.5	-3.5	-10.9	-10.9	-10.9	-16.9	-16.9	-16.9
120	-3.3	-3.3	-3.3	-10.2	-10.2	-10.2	-15.6	-15.6	-15.6
110	-3.1	-3.1	-3.1	-9.5	-9.5	-9.5	-14.3	-14.3	-14.3
100	-2.9	-2.9	-2.9	-8.8	-8.8	-8.8	-13.1	-13.1	-13.1
90	-2.8	-2.8	-2.8	-8.1	-8.1	-8.1	-11.8	-11.8	-11.8

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3400	99.8								
3800	144.6	111.2	76.6						
4200	187.2	155.4	122.5	70.9					
4600		197.5	166.2	101.9					
5000			207.8	133.7	98.0				
5400				166.7	129.7	94.1			
5800				200.8	162.5	125.7	85.9		
6200					196.5	158.3	105.1	71.7	
6600						192.1	125.0	90.7	
7000							145.9	110.0	76.5
7400							167.9	130.1	95.4
7800							191.2	151.3	114.9
8200								173.6	135.3
8600								197.2	156.7
9000									179.3
9400									203.3

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -130 ft/+130 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

**Slippery Runway Takeoff (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)**

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-5	-3	0	-14	-12	-9	-26	-23	-21
180	-6	-4	-1	-16	-13	-11	-28	-25	-23
170	-7	-5	-2	-17	-15	-12	-30	-27	-25
160	-8	-6	-3	-19	-16	-14	-32	-29	-27
150	-9	-6	-4	-20	-18	-15	-34	-31	-29
140	-10	-7	-5	-22	-19	-17	-35	-33	-30
130	-10	-8	-5	-23	-20	-18	-37	-34	-32
120	-11	-9	-6	-24	-21	-19	-38	-36	-33
110	-12	-9	-7	-25	-22	-20	-40	-37	-35
100	-13	-10	-8	-26	-24	-21	-41	-39	-36
90	-13	-11	-8	-27	-25	-22	-42	-40	-37

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****No Reverse Thrust****Weight Adjustments (1000 LB)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-6.0	-6.0	-6.0	-20.2	-20.2	-20.2	-32.0	-32.0	-32.0
180	-6.4	-6.4	-6.4	-19.9	-19.9	-19.9	-30.8	-30.8	-30.8
170	-6.7	-6.7	-6.7	-19.4	-19.4	-19.4	-29.4	-29.4	-29.4
160	-6.9	-6.9	-6.9	-18.9	-18.9	-18.9	-28.0	-28.0	-28.0
150	-7.0	-7.0	-7.0	-18.2	-18.2	-18.2	-26.4	-26.4	-26.4
140	-6.9	-6.9	-6.9	-17.3	-17.3	-17.3	-24.6	-24.6	-24.6
130	-6.8	-6.8	-6.8	-16.4	-16.4	-16.4	-22.7	-22.7	-22.7
120	-6.5	-6.5	-6.5	-15.3	-15.3	-15.3	-20.7	-20.7	-20.7
110	-6.2	-6.2	-6.2	-14.1	-14.1	-14.1	-18.5	-18.5	-18.5
100	-5.7	-5.7	-5.7	-12.7	-12.7	-12.7	-16.2	-16.2	-16.2
90	-5.1	-5.1	-5.1	-11.2	-11.2	-11.2	-13.7	-13.7	-13.7

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4200	134.0								
4600	188.0	117.8							
5000		177.4	98.2						
5400			166.2						
6200				92.3					
6600				166.2					
7000					137.3				
7400					199.3	103.3			
7800						173.9			
10200							122.6		
10600							177.8		
11000								107.2	
11400								164.7	
11800									91.2
12200									151.2
12600									202.9

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -100 ft/+100 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -100 ft/+100 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-8	0	0	-21	-13	-6	-40	-33	-25
180	-9	-1	0	-23	-15	-8	-44	-36	-29
170	-10	-3	0	-25	-17	-10	-47	-40	-32
160	-11	-4	0	-27	-20	-12	-50	-43	-35
150	-13	-5	0	-29	-22	-14	-54	-46	-39
140	-14	-7	0	-32	-24	-17	-57	-49	-42
130	-16	-8	-1	-35	-27	-20	-60	-53	-45
120	-17	-10	-2	-37	-30	-22	-63	-56	-48
110	-19	-11	-4	-40	-33	-25	-66	-59	-51
100	-21	-13	-6	-43	-35	-28	-69	-62	-54
90	-23	-15	-8	-46	-39	-31	-72	-65	-57

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 - (26K Derate)**Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	94.8	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	95.4	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.0	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	96.8	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	97.4	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.0	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	97.6	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	96.8	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	96.0	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	95.2	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	94.5	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
5	93.7	95.0	96.4	97.0	97.6	98.0	98.3	98.6	99.0	99.4	99.8	100.3	100.7
0	92.9	94.2	95.6	96.3	96.9	97.2	97.5	97.9	98.2	98.6	99.0	99.5	100.0
-5	92.0	93.4	94.8	95.5	96.1	96.4	96.7	97.1	97.5	97.9	98.3	98.7	99.2
-10	91.2	92.6	94.0	94.7	95.3	95.6	96.0	96.3	96.7	97.1	97.5	98.0	98.4
-15	90.4	91.7	93.2	93.9	94.5	94.8	95.2	95.6	95.9	96.3	96.7	97.2	97.6
-20	89.6	90.9	92.4	93.0	93.7	94.0	94.4	94.8	95.2	95.6	95.9	96.4	96.8
-25	88.7	90.1	91.6	92.2	92.9	93.2	93.6	94.0	94.4	94.8	95.2	95.6	96.0
-30	87.9	89.2	90.7	91.4	92.0	92.4	92.8	93.2	93.6	94.0	94.3	94.8	95.2
-35	87.0	88.4	89.9	90.5	91.2	91.6	91.9	92.4	92.8	93.1	93.5	94.0	94.4
-40	86.1	87.5	89.0	89.7	90.3	90.7	91.1	91.5	91.9	92.3	92.7	93.1	93.6
-45	85.3	86.6	88.2	88.8	89.5	89.9	90.3	90.7	91.1	91.5	91.9	92.3	92.7
-50	84.4	85.7	87.3	87.9	88.6	89.0	89.4	89.9	90.3	90.6	91.0	91.5	91.9

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Assumed Temperature Reduced Thrust - (26K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
55	73	71	69	67									
50	73	71	69	67	65	63							
45	73	71	69	67	65	63	61	59	57				
40	73	71	69	67	65	63	61	59	57	55			
35	71	71	69	67	65	63	61	59	57	55	53		
30	69	67	67	67	65	63	61	59	57	55	53	51	
25	69	67	66	64	65	63	61	59	57	55	53	51	
20	69	67	66	64	64	63	61	59	57	55	53	51	
15	69	67	66	64	64	63	61	59	57	55	53	51	
10 & BELOW	69	67	66	64	64	63	61	59	57	55	53	51	

Assumed Temperature Reduced Thrust - (26K Derate)

Takeoff %N1 (Table 2 of 3)

Based on engine bleed for packs on and engine anti-ice on or off

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	93.4	93.7	94.2	94.7	95.4	96.1	96.9	97.3	97.6	97.8	97.8	97.7
70	94.1	94.4	94.4	94.4	94.7	95.4	96.2	96.6	96.9	97.1	97.1	97.1
65	94.8	95.1	95.2	95.2	95.3	95.4	95.5	96.0	96.2	96.5	96.4	96.4
60	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.9													
100	14.9	10.9												
90	14.0	11.7												
80	12.9	11.6	7.8											
70	11.2	10.7	8.6	7.8	6.3									
60	9.2	9.5	8.5	8.4	7.1	6.3	4.9							
50	7.8	7.8	7.5	7.1	6.9	7.0	5.6	4.9	3.4					
40		6.0	6.2	6.1	5.9	5.8	5.7	5.6	4.7	4.4	5.3			
30		4.6	4.6	4.6	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	3.9	
20			2.9	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.6
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (24K Derate)

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
180	162	163	167	155	157	161									
170	157	158	163	151	152	157	150	150	155						
160	152	153	159	146	147	153	145	146	151	142	142	148	139	139	146
150	147	148	155	141	142	149	140	141	147	137	138	145	134	135	142
140	141	142	151	136	137	145	135	135	143	132	132	140	129	130	138
130	135	136	146	130	131	140	129	130	139	126	127	136	123	124	134
120	129	130	141	124	125	136	123	123	134	120	121	132	118	118	129
110	122	123	136	117	118	131	116	117	129	114	115	127	112	112	125
100	116	116	130	111	112	126	110	110	124	107	108	122	105	106	120
90	109	109	125	104	105	120	103	104	119	101	101	117	99	99	115

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	5	6						5	5						-3	-4					
60	140	4	5	5	6				3	4	5	6				-2	-3	-3	-4			
50	122	2	3	4	5	6	7	8	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-4	-5
40	104	1	2	3	4	5	6	7	1	2	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-4
30	86	0	0	1	3	4	5	6	0	0	1	2	4	5	6	0	0	-1	-1	-2	-3	-4
20	68	0	0	1	1	2	4	5	0	0	1	1	2	4	5	0	0	0	-1	-1	-2	-3
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	4	0	0	0	-1	-1	-1	-2

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
180	-3	-2	0	1	1	-1	-1	0	0	0	1	1	1
160	-2	-1	0	1	1	-1	-1	0	0	0	1	1	1
140	-2	-1	0	1	1	-1	-1	0	0	0	1	1	1
120	-1	0	0	1	1	-1	-1	0	0	0	1	1	1
100	-1	0	0	0	1	-2	-1	0	0	0	0	1	1
90	0	0	0	0	1	-2	-1	0	0	0	0	1	1

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	90	88					
60	140	90	88	87	85			
50	122	92	90	87	85	83	81	79
40	104	97	95	91	88	84	81	79
30	86	100	99	95	92	88	85	81
20	68	100	99	97	95	92	88	85
-60	-76	101	101	98	96	94	91	89

Takeoff Speeds - Wet Runway (24K Derate)

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
180	157	163	167	150	157	161									
170	151	158	163	144	152	157	145	150	155						
160	145	153	159	139	147	153	139	146	151	136	142	148	134	139	146
150	140	148	155	134	142	149	133	141	147	130	138	145	128	135	142
140	134	142	151	128	137	145	127	135	143	125	132	140	123	130	138
130	127	136	146	122	131	140	121	130	139	119	127	136	117	124	134
120	121	130	141	116	125	136	115	123	134	113	121	132	111	118	129
110	114	123	136	109	118	131	109	117	129	106	115	127	104	112	125
100	107	116	130	103	112	126	102	110	124	100	108	122	98	106	120
90	100	109	125	96	105	120	95	104	119	93	101	117	91	99	115

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	8	8						5	5						-3	-4					
60	140	5	6	8	9				3	4	5	6				-2	-3	-3	-4			
50	122	3	4	5	7	8	10	11	2	3	4	5	6	7	8	-2	-2	-3	-3	-4	-4	-5
40	104	1	2	3	5	6	7	9	1	2	3	4	5	6	7	-1	-1	-2	-2	-3	-4	-4
30	86	0	0	1	3	4	6	7	0	0	1	3	4	5	6	0	0	-1	-1	-2	-3	-4
20	68	0	0	1	1	2	4	5	0	0	1	1	2	4	5	0	0	0	-1	-1	-2	-3
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	4	0	0	0	-1	-1	-1	-2

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
180	-5	-2	0	3	5		-3	-2	-1	0	1	1	2	2
160	-4	-2	0	2	5		-3	-2	-1	0	1	1	2	3
140	-3	-2	0	2	4		-3	-2	-1	0	1	1	2	3
120	-3	-1	0	1	3		-4	-2	-1	0	1	1	2	3
100	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4
90	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	90	88					
60	140	90	88	87	85			
50	122	92	90	87	85	83	81	79
40	104	97	95	91	88	84	81	79
30	86	100	99	95	92	88	85	81
20	68	100	99	97	95	92	88	85
-60	-76	101	101	98	96	94	91	89

Maximum Allowable Clearway (24K Derate)

FIELD LENGTH (FT)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	500
5000	550
6000	650
7000	700
8000	800
9000	850
10000	900

Clearway and Stopway V1 Adjustments (24K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
1000	-5	-4	-4	-4				
800	-5	-4	-3	-3				
600	-5	-4	-3	-3				
400	-4	-3	-2	-2				
200	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	1	1	1	1	2	1	1	1
-400	1	1	1	1	3	3	1	1
-600	1	1	1	1	5	4	2	1
-800	1	1	1	1	7	5	2	1
-1000	1	1	1	1	7	5	2	1

Use of clearway not allowed on wet runways.

Stab Trim Setting (24K Derate)**Flaps 1 and 5**

WEIGHT (1000 LB)	C.G. (%MAC)									
	6	8	10	14	18	22	26	33	34	36
180	8 1/2	8 1/2	8 1/2	7 3/4	7 1/4	6 1/2	5 3/4	4 1/2	4 1/4	4
160	8 1/2	8 1/2	8 1/4	7 1/2	6 3/4	6	5 1/2	4 1/4	4	3 3/4
140	8	7 3/4	7 1/4	6 3/4	6 1/4	5 1/2	4 3/4	3 3/4	3 1/2	3 1/4
120	7 1/4	7	6 3/4	6 1/4	5 1/2	5	4 1/4	3 1/4	3 1/4	3
100	6 1/2	6 1/4	6	5 1/4	4 3/4	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4
80	6 1/2	6 1/4	6	5 1/4	4 3/4	4 1/4	3 3/4	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)									
	6	8	9	10	16	26	29	32	34	36
180	8 1/2	8 1/2	8 1/2	8 1/2	7	5	4 1/4	3 3/4	3 1/4	2 3/4
160	8 1/2	8 1/2	8 1/4	8	6 1/2	4 1/2	3 3/4	3 1/4	2 3/4	2 3/4
140	8	7 3/4	7 1/2	7 1/4	5 3/4	3 3/4	3 1/4	2 3/4	2 3/4	2 3/4
120	7	6 3/4	6 1/2	6 1/4	5 1/4	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4
100	5 3/4	5 1/2	5 1/4	5	4 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
80	5 3/4	5 1/2	5 1/4	5	4 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-24.9	-29.9	-34.9	-30.5	-35.5	-40.5	-44.4	-49.4	-54.4
180	-22.8	-27.8	-32.8	-27.5	-32.5	-37.5	-38.9	-43.9	-48.9
170	-20.7	-25.7	-30.7	-24.7	-29.7	-34.7	-33.8	-38.8	-43.8
160	-18.8	-23.8	-28.8	-22.0	-27.0	-32.0	-29.2	-34.2	-39.2
150	-16.9	-21.9	-26.9	-19.5	-24.5	-29.5	-25.1	-30.1	-35.1
140	-15.0	-20.0	-25.0	-17.1	-22.1	-27.1	-21.4	-26.4	-31.4
130	-13.3	-18.3	-23.3	-14.9	-19.9	-24.9	-18.2	-23.2	-28.2
120	-11.6	-16.6	-21.6	-12.8	-17.8	-22.8	-15.4	-20.4	-25.4
110	-9.9	-14.9	-19.9	-10.8	-15.8	-20.8	-13.0	-18.0	-23.0
100	-8.3	-13.3	-18.3	-8.9	-13.9	-18.9	-10.6	-15.6	-20.6
90	-6.6	-11.6	-16.6	-6.9	-11.9	-16.9	-8.2	-13.2	-18.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800							78.3		
4200	84.1			91.3			103.5	72.2	
4600	111.6	77.4		118.5	84.7		130.3	97.0	
5000	140.4	104.6		147.2	111.6		159.2	123.4	72.2
5400	171.0	133.1	77.4	177.6	139.9	84.7	190.9	151.8	97.0
5800	203.3	163.2	104.6	209.7	169.9	111.6		182.7	123.4
6200		195.2	133.1		201.6	139.9			151.8
6600			163.2			169.9			182.7
7000			195.2			201.6			

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
180	-15	-10	-5	-9	-4	0	0	0	0
170	-16	-11	-6	-10	-5	0	0	0	0
160	-17	-12	-7	-11	-6	-1	0	0	0
150	-18	-13	-8	-13	-8	-3	-2	0	0
140	-19	-14	-9	-15	-10	-5	-5	0	0
130	-20	-15	-10	-17	-12	-7	-8	-3	0
120	-22	-17	-12	-19	-14	-9	-12	-7	-2
110	-22	-17	-12	-20	-15	-10	-15	-10	-5
100	-23	-18	-13	-21	-16	-11	-17	-12	-7
90	-23	-18	-13	-21	-16	-11	-18	-13	-8

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)
No Reverse Thrust
Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-30.0	-35.0	-40.0	-35.8	-40.8	-45.8	-47.8	-52.8	-57.8
180	-27.4	-32.4	-37.4	-32.3	-37.3	-42.3	-42.4	-47.4	-52.4
170	-25.0	-30.0	-35.0	-29.1	-34.1	-39.1	-37.5	-42.5	-47.5
160	-22.7	-27.7	-32.7	-26.0	-31.0	-36.0	-32.9	-37.9	-42.9
150	-20.5	-25.5	-30.5	-23.1	-28.1	-33.1	-28.7	-33.7	-38.7
140	-18.3	-23.3	-28.3	-20.4	-25.4	-30.4	-24.9	-29.9	-34.9
130	-16.3	-21.3	-26.3	-17.9	-22.9	-27.9	-21.5	-26.5	-31.5
120	-14.3	-19.3	-24.3	-15.6	-20.6	-25.6	-18.4	-23.4	-28.4
110	-12.4	-17.4	-22.4	-13.4	-18.4	-23.4	-15.5	-20.5	-25.5
100	-10.5	-15.5	-20.5	-11.2	-16.2	-21.2	-12.6	-17.6	-22.6
90	-8.6	-13.6	-18.6	-9.0	-14.0	-19.0	-9.8	-14.8	-19.8

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4600				80.5			80.4		
5000							109.8		
5400	95.9			114.7			141.7	91.2	
5800	133.6	72.7		150.1	93.2		176.8	121.4	73.3
6200	172.2	109.9		187.1	127.8	72.1		154.4	102.3
6600		148.0	86.6		163.8	106.0		191.0	133.4
7000		186.9	124.1		201.3	141.2			167.6
7400			162.5			177.7			205.4
7800			201.7						

- 1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
- 2. Adjust field length available by -130 ft/+130 ft for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-19	-12	-4	-11	-3	0	0	0	0
180	-20	-13	-5	-12	-5	0	0	0	0
170	-22	-14	-7	-14	-6	0	0	0	0
160	-23	-15	-8	-16	-8	-1	0	0	0
150	-24	-17	-9	-18	-10	-3	-2	0	0
140	-26	-18	-11	-20	-12	-5	-7	0	0
130	-27	-19	-12	-22	-15	-7	-11	-4	0
120	-28	-21	-13	-25	-17	-10	-16	-8	-1
110	-29	-22	-14	-27	-19	-12	-20	-12	-5
100	-30	-22	-15	-28	-20	-13	-22	-15	-7
90	-29	-22	-14	-27	-20	-12	-23	-16	-8

- 1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-1.8	-1.8	-1.8	-12.6	-12.6	-12.6	-22.6	-22.6	-22.6
180	-2.3	-2.3	-2.3	-12.6	-12.6	-12.6	-21.8	-21.8	-21.8
170	-2.7	-2.7	-2.7	-12.4	-12.4	-12.4	-21.0	-21.0	-21.0
160	-3.1	-3.1	-3.1	-12.2	-12.2	-12.2	-20.1	-20.1	-20.1
150	-3.3	-3.3	-3.3	-11.8	-11.8	-11.8	-19.1	-19.1	-19.1
140	-3.4	-3.4	-3.4	-11.4	-11.4	-11.4	-18.0	-18.0	-18.0
130	-3.4	-3.4	-3.4	-10.8	-10.8	-10.8	-16.9	-16.9	-16.9
120	-3.2	-3.2	-3.2	-10.2	-10.2	-10.2	-15.6	-15.6	-15.6
110	-3.1	-3.1	-3.1	-9.5	-9.5	-9.5	-14.4	-14.4	-14.4
100	-3.0	-3.0	-3.0	-8.8	-8.8	-8.8	-13.2	-13.2	-13.2
90	-2.8	-2.8	-2.8	-8.2	-8.2	-8.2	-11.9	-11.9	-11.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3000	71.8								
3400	117.7	77.6							
3800	162.0	123.3	83.3						
4200	204.9	167.5	128.9	88.0					
4600			172.9	119.6	76.5				
5000				153.0	107.5				
5400				188.6	140.2	95.8	80.8		
5800					174.9	127.7	99.7		
6200						161.6	119.6	80.8	
6600						197.9	140.9	99.7	
7000							164.0	119.6	80.8
7400							189.6	140.9	99.7
7800								164.0	119.6
8200								189.6	140.9
8600									164.0
9000									189.6

- 1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
- 2. Adjust “Good” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
180	-6	-3	-1	-14	-12	-9	-25	-23	-20
170	-6	-4	-1	-15	-13	-10	-27	-24	-22
160	-7	-5	-2	-17	-14	-12	-28	-26	-23
150	-8	-6	-3	-18	-16	-13	-30	-28	-25
140	-9	-6	-4	-20	-17	-15	-32	-30	-27
130	-10	-7	-5	-21	-19	-16	-34	-32	-29
120	-10	-8	-5	-22	-20	-17	-36	-34	-31
110	-11	-9	-6	-23	-21	-18	-38	-35	-33
100	-12	-9	-7	-24	-22	-19	-39	-36	-34
90	-12	-9	-7	-25	-22	-20	-39	-37	-34

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
No Reverse Thrust
Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-4.5	-4.5	-4.5	-17.5	-17.5	-17.5	-29.3	-29.3	-29.3
180	-4.9	-4.9	-4.9	-17.2	-17.2	-17.2	-28.0	-28.0	-28.0
170	-5.1	-5.1	-5.1	-16.8	-16.8	-16.8	-26.7	-26.7	-26.7
160	-5.2	-5.2	-5.2	-16.2	-16.2	-16.2	-25.2	-25.2	-25.2
150	-5.2	-5.2	-5.2	-15.6	-15.6	-15.6	-23.7	-23.7	-23.7
140	-5.1	-5.1	-5.1	-14.7	-14.7	-14.7	-22.1	-22.1	-22.1
130	-4.9	-4.9	-4.9	-13.8	-13.8	-13.8	-20.3	-20.3	-20.3
120	-4.6	-4.6	-4.6	-12.7	-12.7	-12.7	-18.5	-18.5	-18.5
110	-4.3	-4.3	-4.3	-11.6	-11.6	-11.6	-16.7	-16.7	-16.7
100	-3.9	-3.9	-3.9	-10.5	-10.5	-10.5	-14.9	-14.9	-14.9
90	-3.6	-3.6	-3.6	-9.4	-9.4	-9.4	-13.1	-13.1	-13.1

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3400	89.3								
3800	141.9	96.3							
4200	188.5	148.0	103.2						
4600		194.0	154.0						
5000			199.4	81.8					
5400				127.7					
5800				172.0	110.7				
6200					155.6	93.4			
6600					199.0	138.9			
7000						182.9			
7800							94.8		
8200							123.0		
8600							153.7	84.7	
9000							187.7	112.2	
9400								141.9	74.5
9800								174.5	101.7
10200									130.4
10600									161.8
11000									196.8

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -90 ft/+90 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -90 ft/+90 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -150 ft/+150 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-6	-3	-1	-16	-13	-11	-31	-29	-26
180	-7	-4	-2	-18	-15	-13	-34	-32	-29
170	-8	-5	-3	-20	-17	-15	-37	-34	-32
160	-9	-6	-4	-21	-19	-16	-39	-37	-34
150	-10	-7	-5	-23	-21	-18	-42	-39	-37
140	-11	-8	-6	-25	-22	-20	-44	-41	-39
130	-12	-9	-7	-27	-24	-22	-46	-44	-41
120	-13	-10	-8	-28	-26	-23	-48	-46	-43
110	-14	-11	-9	-30	-27	-25	-50	-47	-45
100	-14	-12	-9	-31	-29	-26	-52	-49	-47
90	-15	-13	-10	-33	-30	-28	-53	-51	-48

- 1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 (24K Derate)

Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	90.3	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.0	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	91.8	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	92.6	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	93.4	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.2	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	93.8	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	93.1	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	92.3	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	91.6	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	90.8	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
5	90.0	91.2	92.2	92.8	93.3	93.9	94.5	95.2	95.9	96.7	97.4	98.4	99.3
0	89.2	90.4	91.4	92.0	92.5	93.1	93.7	94.4	95.1	95.9	96.7	97.6	98.5
-5	88.4	89.6	90.6	91.2	91.7	92.3	92.9	93.6	94.3	95.1	95.9	96.8	97.7
-10	87.6	88.8	89.8	90.4	90.9	91.5	92.1	92.8	93.5	94.3	95.1	96.1	97.0
-15	86.8	88.0	89.0	89.5	90.0	90.6	91.3	92.0	92.7	93.5	94.3	95.3	96.2
-20	86.0	87.1	88.2	88.7	89.2	89.8	90.5	91.2	91.9	92.6	93.5	94.5	95.4
-25	85.2	86.3	87.3	87.9	88.4	89.0	89.6	90.3	91.0	91.8	92.6	93.7	94.6
-30	84.4	85.5	86.5	87.0	87.5	88.1	88.8	89.5	90.2	91.0	91.8	92.9	93.8
-35	83.5	84.6	85.6	86.2	86.6	87.3	87.9	88.6	89.3	90.1	91.0	92.1	93.0
-40	82.7	83.8	84.8	85.3	85.8	86.4	87.0	87.8	88.5	89.3	90.1	91.2	92.2
-45	81.8	82.9	83.9	84.4	84.9	85.5	86.2	86.9	87.6	88.4	89.3	90.4	91.4
-50	81.0	82.0	83.0	83.5	84.0	84.6	85.3	86.0	86.7	87.5	88.4	89.5	90.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Assumed Temperature Reduced Thrust (24K Derate)

Maximum Assumed Temperature (Table 1 of 3)

Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
55	73	71	69	67									
50	73	71	69	67	65	63							
45	73	71	69	67	65	63	61	59	57				
40	73	71	69	67	65	63	61	59	57	55			
35	67	67	67	67	65	63	61	59	57	55	53		
30	64	61	62	61	61	61	61	59	57	55	53	51	
25	64	61	59	57	56	56	57	57	57	55	53	51	
20	64	61	59	57	56	54	53	53	53	53	52	51	
15	64	61	59	57	56	54	53	52	50	49	48	47	
10 & BELOW	64	61	59	57	56	54	53	52	50	48	45	43	

Assumed Temperature Reduced Thrust (24K Derate)**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	88.3	88.6	89.1	89.6	90.2	90.8	91.5	92.2	92.7	93.1	93.3	93.4
70	89.1	89.5	89.4	89.3	89.6	90.1	90.8	91.6	92.0	92.5	92.6	92.7
65	90.0	90.4	90.3	90.2	90.2	90.1	90.2	90.9	91.4	91.8	91.9	92.1
60	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	12.1													
100	11.3	8.5												
90	11.7	8.9												
80	12.5	8.0	5.5											
70	11.3	8.4	5.9	5.6	4.0									
60	9.7	9.2	4.8	4.7	4.4	4.2	2.6							
50	7.8	7.9	5.3	3.5	3.3	3.6	3.0	2.7	1.2					
40		6.4	6.0	5.5	3.7	3.2	3.7	3.0	2.8	3.0	3.7			
30		4.6	4.6	4.6	4.5	4.3	4.2	4.0	4.1	4.0	3.9	3.8	3.7	
20			3.1	3.1	3.1	3.0	2.9	2.9	2.8	2.7	2.7	2.6	2.6	2.5
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.3	1.3
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS OR MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.80	.80	.80
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	94.8	95.0	93.7
55	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.1	94.3	93.0
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.4	93.6	92.4
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	92.7	92.9	91.7
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.4	92.2	91.0
35	94.0	94.3	94.5	94.3	94.0	94.0	93.0	93.3	92.7	91.6
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	94.1	93.5	92.5
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.9	94.4	93.4
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.6	95.1	94.3
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.3	95.9	95.1
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	97.1	96.7	96.0
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.9	97.4	96.8
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.7	98.3	97.8
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.4	99.0	98.6
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.3	99.9	99.6
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.5
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.3	100.9	100.5
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	99.5	100.0	99.7
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	98.6	99.2	98.8
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	97.8	98.3	98.0
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	96.9	97.5	97.1

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

*Dual bleed sources

Go-around %N1**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

Flight With Unreliable Airspeed/ Turbulent Air Penetration
Altitude and/or vertical speed indications may also be unreliable.

Climb (280/.76)
Flaps Up, Set Max Climb Thrust

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
40000	PITCH ATT	4.0	4.0	4.0	4.0		
	V/S (FT/MIN)	2000	1400	900	400		
30000	PITCH ATT	4.0	4.0	3.5	4.0	4.0	4.0
	V/S (FT/MIN)	2800	2200	1700	1600	1100	800
20000	PITCH ATT	7.5	6.5	6.0	6.0	6.0	6.0
	V/S (FT/MIN)	4600	3600	2900	2400	2000	1700
10000	PITCH ATT	11.5	10.0	9.0	8.5	8.0	8.0
	V/S (FT/MIN)	6200	4900	4000	3400	2900	2500
SEA LEVEL	PITCH ATT	16.0	13.0	11.5	10.5	10.0	9.5
	V/S (FT/MIN)	7500	5900	4900	4100	3500	3000

Cruise (.76/280)
Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
40000	PITCH ATT	1.5	2.0	3.0	3.5		
	%N1	82	84	87	91		
35000	PITCH ATT	1.0	1.5	2.0	2.5	3.0	3.5
	%N1	81	82	83	85	88	91
30000	PITCH ATT	0.5	1.0	1.5	2.0	2.5	3.0
	%N1	81	81	82	83	85	87
25000	PITCH ATT	0.5	1.0	1.5	2.0	2.5	3.0
	%N1	77	78	78	80	81	83
20000	PITCH ATT	0.5	1.0	2.0	2.5	3.0	3.5
	%N1	73	74	75	76	77	79
15000	PITCH ATT	0.5	1.5	2.0	2.5	3.0	3.5
	%N1	70	70	71	72	73	75

Descent (.76/280)
Flaps Up, Set Idle Thrust

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
40000	PITCH ATT	-2.0	-1.0	0.0	0.5	1.0	1.5
	V/S (FT/MIN)	-2900	-2500	-2300	-2400	-2600	-2800
30000	PITCH ATT	-4.0	-2.5	-1.5	-1.0	0.0	0.5
	V/S (FT/MIN)	-3400	-2800	-2400	-2200	-2000	-2000
20000	PITCH ATT	-4.0	-2.5	-1.5	-0.5	0.0	1.0
	V/S (FT/MIN)	-3100	-2500	-2200	-2000	-1800	-1700
10000	PITCH ATT	-4.0	-2.5	-1.5	-0.5	0.0	1.0
	V/S (FT/MIN)	-2800	-2300	-2000	-1800	-1600	-1500
SEA LEVEL	PITCH ATT	-4.5	-3.0	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2500	-2100	-1800	-1600	-1500	-1400

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Holding (VREF40 + 70)**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
10000	PITCH ATT	4.5	5.0	5.0	5.0	5.0	5.0
	%N1	51	55	60	64	67	70
5000	PITCH ATT	4.5	5.0	5.5	5.0	5.0	5.0
	%N1	47	52	56	59	63	66

Terminal Area (5000 FT)**%N1 for Level Flight**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
FLAPS 1 (GEAR UP) (VREF40 + 50)	PITCH ATT	4.5	5.0	5.5	5.5	6.0	6.0
	%N1	49	54	58	62	65	68
FLAPS 5 (GEAR UP) (VREF40 + 30)	PITCH ATT	5.5	5.5	6.0	6.0	6.5	6.5
	%N1	49	54	59	63	66	69
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	PITCH ATT	5.5	5.5	6.0	6.0	6.5	6.5
	%N1	57	63	68	72	76	79

Final Approach (1500 FT)**Gear Down, %N1 for 3° Glideslope**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
FLAPS 15 (VREF15 + 10)	PITCH ATT	2.0	2.5	2.5	2.5	2.5	2.5
	%N1	41	45	49	53	56	58
FLAPS 30 (VREF30 + 10)	PITCH ATT	0.5	1.0	1.0	1.0	1.0	1.0
	%N1	45	50	54	58	61	64
FLAPS 40 (VREF40 + 10)	PITCH ATT	-0.5	-0.5	0.0	0.0	0.0	0.0
	%N1	50	56	60	64	68	71

Intentionally
Blank

Performance Inflight

All Engine

Chapter PI

Section 41

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31700	-8	33300*	33300*	33200	31600	30100
180	32900	-10	34600*	34600*	34400	32800	31300
170	34100	-13	35900*	35900*	35600	34000	32600
160	35400	-16	37200*	37200*	36800	35300	33800
150	36700	-17	38400*	38400*	38200	36700	35200
140	38100	-17	39700*	39700*	39600	38100	36700
130	39700	-17	41000	41000	41000	39600	38200
120	41000	-17	41000	41000	41000	41000	39900
110	41000	-17	41000	41000	41000	41000	41000
100	41000	-17	41000	41000	41000	41000	41000
90	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31700	-2	31500*	31500*	31500*	31500*	30100
180	32900	-5	33500*	33500*	33500*	32800	31300
170	34100	-7	35100*	35100*	35100*	34000	32600
160	35400	-10	36400*	36400*	36400*	35300	33800
150	36700	-12	37700*	37700*	37700*	36700	35200
140	38100	-12	39000*	39000*	39000*	38100	36700
130	39700	-12	40300*	40300*	40300*	39600	38200
120	41000	-12	41000	41000	41000	41000	39900
110	41000	-12	41000	41000	41000	41000	41000
100	41000	-12	41000	41000	41000	41000	41000
90	41000	-12	41000	41000	41000	41000	4100

ISA + 20°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31700	4	24300*	24300*	24300*	24300*	24300*
180	32900	1	24800*	24800*	24800*	24800*	24800*
170	34100	-2	30700*	30700*	30700*	30700*	30700*
160	35400	-5	34800*	34800*	34800*	34800*	33800
150	36700	-6	36300*	36300*	36300*	36300*	35200
140	38100	-6	37600*	37600*	37600*	37600*	36700
130	39700	-6	38800*	38800*	38800*	38800*	38200
120	41000	-6	40100*	40100*	40100*	40100*	39900
110	41000	-6	41000	41000	41000	41000	41000
100	41000	-6	41000	41000	41000	41000	41000
90	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

80M Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)								
		25	27	29	31	33	35	37	39	41
190	%N1	87.8	88.4	89.0	89.7	91.5				
	MACH	.794	.800	.800	.800	.800				
	KIAS	335	324	311	297	284				
	FF/ENG	3879	3754	3612	3483	3475				
180	%N1	87.5	87.9	88.2	88.9	89.8	93.6			
	MACH	.794	.800	.800	.800	.800	.800			
	KIAS	335	324	311	297	284	272			
	FF/ENG	3821	3671	3504	3374	3267	3408			
170	%N1	87.1	87.4	87.6	88.1	88.8	90.3			
	MACH	.794	.800	.800	.800	.800	.800			
	KIAS	335	324	311	297	284	272			
	FF/ENG	3768	3605	3409	3265	3139	3090			
160	%N1	86.8	87.1	87.1	87.4	88.0	88.7	91.9		
	MACH	.794	.800	.800	.800	.800	.800	.800		
	KIAS	335	324	311	297	284	272	260		
	FF/ENG	3713	3551	3335	3163	3032	2920	2985		
150	%N1	86.4	86.7	86.6	86.7	87.1	87.9	89.3		
	MACH	.794	.800	.800	.800	.800	.800	.800		
	KIAS	335	324	311	297	284	272	260		
	FF/ENG	3659	3498	3277	3080	2925	2809	2740		
140	%N1	86.1	86.3	86.3	86.2	86.4	86.9	88.0	90.4	
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	
	KIAS	335	324	311	297	284	272	260	248	
	FF/ENG	3609	3440	3225	3016	2835	2700	2608	2597	
130	%N1	85.8	85.9	85.8	85.8	85.8	86.0	87.0	88.5	91.6
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	3577	3391	3168	2964	2767	2604	2501	2436	2470
120	%N1	85.7	85.7	85.4	85.3	85.3	85.3	85.9	87.4	89.1
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	3558	3358	3116	2909	2714	2531	2400	2326	2271
110	%N1	85.6	85.6	85.2	84.9	84.8	84.8	85.2	86.3	87.8
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	3546	3340	3083	2856	2660	2477	2324	2222	2156
100	%N1	85.6	85.5	85.0	84.6	84.4	84.3	84.6	85.4	86.5
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	3541	3328	3064	2822	2608	2424	2270	2144	2050
90	%N1	85.6	85.5	84.9	84.5	84.1	83.8	84.0	84.8	85.6
	MACH	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	324	311	297	284	272	260	248	237
	FF/ENG	3544	3326	3054	2805	2575	2374	2216	2090	1973

Shaded area approximates optimum altitude.

.80M Enroute Fuel and Time - Low Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
273	255	239	224	211	200	191	183	175	168	162
409	381	357	335	317	300	287	275	264	254	245
544	508	475	447	422	400	383	367	353	339	327
679	634	593	559	528	500	479	460	442	425	409
814	760	712	670	633	600	575	552	530	510	492
949	887	831	782	739	700	671	644	619	596	575
1084	1013	949	894	845	800	767	736	708	682	658
1219	1140	1068	1005	950	900	863	829	797	767	741
1354	1266	1186	1117	1056	1000	959	921	886	853	823
1489	1392	1305	1229	1161	1100	1055	1013	974	938	905
1624	1519	1424	1341	1267	1200	1151	1106	1063	1024	988
1759	1645	1542	1452	1373	1300	1247	1198	1152	1110	1071
1894	1772	1661	1564	1478	1400	1343	1290	1241	1196	1154
2029	1898	1779	1675	1584	1500	1439	1382	1330	1281	1237
2164	2024	1897	1787	1689	1600	1535	1475	1418	1367	1319
2299	2150	2016	1899	1795	1700	1631	1567	1507	1452	1401
2434	2276	2134	2010	1900	1800	1727	1659	1596	1538	1484
2569	2403	2253	2122	2006	1900	1823	1751	1685	1623	1567
2704	2529	2372	2234	2111	2000	1919	1844	1774	1709	1650

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.5	0:36	3.1	0:35	2.6	0:34	2.4	0:33	2.1	0:33
300	5.4	0:51	4.9	0:49	4.3	0:47	3.9	0:46	3.5	0:46
400	7.4	1:07	6.7	1:04	5.9	1:00	5.4	0:58	4.8	0:58
500	9.3	1:22	8.5	1:19	7.5	1:14	6.9	1:11	6.2	1:11
600	11.2	1:38	10.3	1:34	9.1	1:27	8.4	1:24	7.6	1:23
700	13.1	1:53	12.0	1:48	10.7	1:41	9.9	1:36	8.9	1:36
800	15.0	2:09	13.8	2:03	12.3	1:54	11.4	1:49	10.3	1:48
900	16.9	2:25	15.6	2:18	13.9	2:08	12.9	2:02	11.7	2:01
1000	18.8	2:40	17.4	2:32	15.5	2:21	14.4	2:14	13.0	2:14
1100	20.7	2:56	19.1	2:47	17.1	2:35	15.9	2:27	14.4	2:26
1200	22.6	3:11	20.9	3:02	18.7	2:48	17.4	2:40	15.8	2:39
1300	24.5	3:27	22.7	3:17	20.3	3:02	18.9	2:53	17.1	2:51
1400	26.4	3:42	24.4	3:31	21.9	3:15	20.4	3:05	18.5	3:04
1500	28.3	3:58	26.2	3:46	23.5	3:29	21.9	3:18	19.8	3:17
1600	30.2	4:14	28.0	4:01	25.1	3:42	23.4	3:31	21.2	3:29
1700	32.0	4:29	29.8	4:15	26.7	3:56	24.9	3:43	22.5	3:42
1800	33.9	4:45	31.5	4:30	28.3	4:09	26.4	3:56	23.9	3:54
1900	35.8	5:00	33.3	4:45	29.9	4:23	27.9	4:09	25.2	4:07
2000	37.7	5:16	35.1	4:59	31.5	4:36	29.4	4:21	26.6	4:19

.80M Enroute Fuel and Time - Low Altitudes
Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	0.1	0.0	0.0	0.1	0.2
10	0.0	0.0	0.0	0.3	0.5
15	0.0	-0.1	0.0	0.4	0.8
20	0.0	-0.1	0.0	0.5	1.1
25	0.1	-0.1	0.0	0.6	1.3
30	0.1	0.0	0.0	0.7	1.6
35	0.2	0.0	0.0	0.7	1.8
40	0.3	0.0	0.0	0.7	2.0

.80M Enroute Fuel and Time - High Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
522	492	465	441	420	400	383	367	352	339	326
778	735	695	660	629	600	575	551	530	510	492
1033	977	926	880	838	800	767	736	707	681	657
1289	1219	1156	1099	1047	1000	959	920	885	852	822
1545	1462	1386	1318	1256	1200	1151	1105	1062	1023	987
1800	1704	1616	1537	1466	1400	1343	1290	1240	1194	1152
2056	1946	1846	1756	1675	1600	1535	1474	1418	1366	1318
2311	2189	2076	1975	1884	1800	1727	1659	1595	1537	1483
2567	2431	2306	2194	2093	2000	1919	1843	1772	1708	1648
2823	2673	2536	2414	2302	2200	2111	2027	1950	1878	1813
3078	2915	2766	2633	2512	2400	2302	2212	2127	2049	1978
3334	3158	2996	2852	2721	2600	2495	2396	2305	2221	2144
3589	3400	3227	3071	2930	2800	2687	2581	2483	2392	2309
3845	3642	3457	3290	3139	3000	2879	2766	2660	2563	2474
4101	3885	3687	3509	3348	3200	3071	2950	2838	2734	2639
4356	4127	3917	3728	3558	3400	3263	3134	3015	2905	2804
4612	4369	4147	3948	3767	3600	3455	3319	3193	3077	2970
4867	4612	4377	4167	3976	3800	3647	3504	3371	3248	3136
5123	4854	4607	4386	4185	4000	3839	3688	3548	3419	3301
5379	5096	4837	4605	4394	4200	4031	3873	3726	3590	3466
5634	5339	5067	4824	4604	4400	4223	4057	3903	3761	3631
5890	5581	5297	5043	4813	4600	4414	4241	4081	3932	3797
6145	5823	5527	5262	5022	4800	4606	4426	4258	4103	3962
6400	6065	5757	5482	5231	5000	4798	4610	4435	4274	4127
6656	6307	5988	5701	5440	5200	4990	4795	4613	4446	4292
6911	6550	6218	5920	5649	5400	5183	4980	4791	4617	4457
7167	6792	6448	6139	5859	5600	5375	5164	4969	4788	4623
7422	7034	6678	6358	6068	5800	5566	5348	5146	4959	4788
7678	7276	6908	6577	6277	6000	5758	5533	5323	5130	4953

.80M Enroute Fuel and Time - High Altitudes
Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
400	4.7	0:58	4.4	0:59	4.1	0:59	3.9	0:59	3.7	1:00
600	7.3	1:24	6.9	1:24	6.5	1:25	6.1	1:25	5.8	1:26
800	10.0	1:49	9.4	1:50	8.8	1:51	8.3	1:51	8.0	1:52
1000	12.6	2:14	11.9	2:15	11.2	2:16	10.5	2:17	10.1	2:18
1200	15.2	2:39	14.3	2:41	13.5	2:42	12.7	2:43	12.2	2:44
1400	17.9	3:05	16.8	3:06	15.8	3:08	14.9	3:09	14.3	3:10
1600	20.5	3:30	19.3	3:32	18.1	3:34	17.1	3:35	16.3	3:36
1800	23.1	3:55	21.7	3:57	20.4	3:59	19.3	4:01	18.4	4:02
2000	25.7	4:21	24.1	4:23	22.7	4:25	21.4	4:27	20.4	4:28
2200	28.3	4:46	26.6	4:48	25.0	4:51	23.6	4:53	22.5	4:55
2400	30.9	5:11	29.0	5:14	27.3	5:16	25.7	5:19	24.5	5:21
2600	33.5	5:36	31.4	5:39	29.5	5:42	27.8	5:45	26.5	5:47
2800	36.1	6:02	33.8	6:05	31.8	6:08	30.0	6:11	28.5	6:13
3000	38.7	6:27	36.2	6:30	34.0	6:34	32.1	6:37	30.5	6:39
3200	41.3	6:52	38.6	6:56	36.3	6:59	34.2	7:03	32.5	7:05
3400	43.9	7:17	41.0	7:21	38.5	7:25	36.3	7:29	34.4	7:31
3600	46.5	7:43	43.4	7:47	40.7	7:51	38.3	7:55	36.4	7:57
3800	49.1	8:08	45.8	8:12	42.9	8:16	40.4	8:21	38.3	8:23
4000	51.7	8:33	48.2	8:38	45.2	8:42	42.5	8:47	40.3	8:49
4200	54.3	8:58	50.6	9:03	47.4	9:08	44.5	9:13	42.2	9:16
4400	56.8	9:24	53.0	9:29	49.6	9:34	46.6	9:39	44.2	9:42
4600	59.4	9:49	55.4	9:54	51.8	9:59	48.6	10:05	46.1	10:08
4800	62.0	10:14	57.8	10:19	54.0	10:25	50.7	10:31	48.0	10:34
5000	64.6	10:39	60.2	10:45	56.2	10:51	52.7	10:57	49.9	11:00
5200	67.3	11:05	62.6	11:10	58.4	11:16	54.8	11:23	51.8	11:26
5400	69.9	11:30	65.0	11:36	60.6	11:42	56.8	11:48	53.7	11:52
5600	72.5	11:55	67.4	12:01	62.8	12:08	58.8	12:14	55.6	12:18
5800	75.1	12:20	69.8	12:27	65.0	12:34	60.9	12:40	57.5	12:44
6000	77.7	12:45	72.2	12:52	67.2	12:59	62.9	13:06	59.3	13:10

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	0.0	-0.1	0.0	0.4	1.5
10	-0.1	-0.1	0.0	0.8	2.4
15	-0.2	-0.2	0.0	1.1	3.4
20	-0.2	-0.3	0.0	1.5	4.2
25	-0.3	-0.3	0.0	1.8	5.0
30	-0.3	-0.3	0.0	2.1	5.7
35	-0.2	-0.3	0.0	2.4	6.3
40	-0.2	-0.3	0.0	2.6	6.8
45	-0.1	-0.3	0.0	2.8	7.3
50	0.0	-0.3	0.0	3.0	7.7
55	0.2	-0.2	0.0	3.2	8.0
60	0.4	-0.2	0.0	3.3	8.2
65	0.6	-0.1	0.0	3.4	8.4
70	0.8	0.0	0.0	3.5	8.5
75	1.1	0.1	0.0	3.5	8.5
80	1.4	0.2	0.0	3.5	8.4

.80M Wind-Altitude Trade

PRESSURE ALTITUDE (1000 FT)	CRUISE WEIGHT (1000 LB)									
	180	170	160	150	140	130	120	110	100	90
41					24	5	0	7	26	55
39				16	3	0	8	26	52	87
37		25	8	1	2	11	28	53	84	122
35	13	3	0	4	15	32	55	84	119	158
33	0	1	8	20	38	60	87	118	154	193
31	5	13	27	44	66	91	120	153	189	
29	20	35	52	73	97	124	154	187		
27	44	61	82	105	130	158	188			
25	72	91	113	137	163	191				

The above wind factor tables are for calculation of wind required to maintain present range capability at new pressure altitude, i.e., break-even wind.

Method:

1. Read wind factors for present and new altitudes from table.
2. Determine difference (new altitude wind factor minus present altitude wind factor); This difference may be negative or positive.
3. Break-even wind at new altitude is present altitude wind plus difference from step 2.

Descent

.80/280/250

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (LB)	DISTANCE (NM)			
			LANDING WEIGHT (1000 LB)			
			90	110	130	150
41000	26	750	103	119	132	141
39000	26	740	98	114	126	135
37000	25	730	94	109	121	130
35000	24	720	90	104	116	124
33000	23	710	86	99	110	119
31000	22	690	81	94	104	112
29000	21	680	76	88	97	105
27000	20	660	72	82	91	98
25000	19	640	67	77	85	91
23000	18	620	62	71	79	84
21000	17	600	58	66	73	78
19000	16	580	53	61	67	71
17000	15	550	49	55	61	64
15000	14	530	44	50	55	58
10000	11	440	31	34	37	38
5000	7	330	18	19	20	21
1500	4	250	9	9	9	9

Allowances for a straight-in approach are included.

Holding Flaps Up

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)								
		1500	5000	10000	15000	20000	25000	30000	35000	41000
190	%N1	64.7	67.3	71.1	75.1	79.3	83.4	87.4		
	KIAS	252	252	254	255	257	259	262		
	FF/ENG	3340	3290	3270	3240	3190	3190	3260		
180	%N1	63.2	66.0	69.6	73.7	77.9	82.1	86.0		
	KIAS	245	246	247	248	250	252	255		
	FF/ENG	3190	3130	3100	3080	3020	3020	3070		
170	%N1	61.6	64.6	68.2	72.3	76.3	80.7	84.6	89.1	
	KIAS	238	239	240	241	242	244	247	250	
	FF/ENG	3030	2970	2940	2910	2850	2840	2890	2970	
160	%N1	60.1	63.0	66.7	70.7	74.8	79.1	83.1	87.4	
	KIAS	231	232	232	233	235	237	239	242	
	FF/ENG	2870	2820	2780	2750	2690	2660	2710	2760	
150	%N1	58.5	61.2	65.3	69.0	73.2	77.5	81.6	85.8	
	KIAS	224	224	225	226	227	229	231	234	
	FF/ENG	2710	2660	2620	2580	2540	2490	2530	2570	
140	%N1	56.9	59.4	63.7	67.3	71.6	75.8	80.0	84.1	
	KIAS	216	216	217	218	219	221	223	225	
	FF/ENG	2560	2500	2460	2420	2380	2320	2360	2380	
130	%N1	55.2	57.7	61.7	65.5	69.7	73.9	78.2	82.3	
	KIAS	208	209	209	210	211	213	214	217	
	FF/ENG	2400	2350	2300	2260	2220	2160	2180	2200	
120	%N1	53.4	55.8	59.5	63.7	67.6	71.9	76.2	80.4	87.6
	KIAS	199	200	201	202	203	204	205	207	211
	FF/ENG	2250	2190	2140	2100	2060	2000	2010	2030	2140
110	%N1	51.4	53.8	57.4	61.6	65.4	69.8	74.0	78.4	85.4
	KIAS	192	192	192	193	194	195	196	198	201
	FF/ENG	2100	2040	1990	1940	1900	1890	1870	1880	1970
100	%N1	49.2	51.7	55.2	59.1	63.3	67.4	71.6	76.1	83.1
	KIAS	186	186	186	186	186	186	187	188	191
	FF/ENG	1950	1880	1870	1820	1780	1740	1710	1710	1780
90	%N1	47.0	49.3	52.9	56.5	60.9	64.7	69.1	73.5	80.6
	KIAS	179	179	179	179	179	179	179	179	180
	FF/ENG	1840	1770	1710	1660	1620	1590	1570	1540	1600

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight Advisory Information

Chapter PI Section 42

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 15

Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF15	ONE REV	NO REV
MAX MANUAL	3050	215/-165	65/85	-110	380	35	-30	65	-65	215	65	135
MAX AUTO	3980	210/-205	90/115	-145	480	20	-15	90	-90	340	0	0
AUTOBRAKE 3	5650	355/-345	150/200	-240	815	20	-20	155	-155	580	0	0
AUTOBRAKE 2	7240	505/-500	220/285	-330	1120	110	-130	205	-205	605	255	255
AUTOBRAKE 1	7950	595/-585	265/345	-385	1315	220	-235	230	-230	575	780	1060

Good Reported Braking Action

MAX MANUAL	4240	250/-245	110/145	-185	650	100	-85	105	-105	300	235	535
MAX AUTO	4690	265/-255	115/155	-190	670	95	-85	110	-110	330	255	575
AUTOBRAKE 3	5660	355/-350	150/200	-245	830	35	-25	155	-155	580	10	45
AUTOBRAKE 2	7240	505/-500	220/285	-330	1120	110	-125	205	-205	605	255	255

Medium Reported Braking Action

MAX MANUAL	5810	395/-380	175/235	-295	1080	255	-205	155	-155	400	655	1615
MAX AUTO	6100	400/-385	175/240	-300	1085	255	-205	155	-155	405	665	1640
AUTOBRAKE 3	6260	415/-395	180/245	-310	1120	190	-130	170	-170	580	445	1390
AUTOBRAKE 2	7400	520/-510	225/295	-360	1265	195	-185	210	-210	605	380	795

Poor Reported Braking Action

MAX MANUAL	7590	565/-540	250/350	-450	1705	620	-410	205	-215	485	1415	3880
MAX AUTO	7900	565/-540	255/350	-450	1705	620	-410	205	-215	485	1415	3885
AUTOBRAKE 3	7900	565/-535	255/350	-450	1710	615	-385	205	-215	535	1415	3890
AUTOBRAKE 2	8220	600/-575	265/365	-470	1765	560	-370	225	-230	605	1145	3405

Reference distance is for sea level, standard day, no wind or slope, VREF15 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 180 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances
Flaps 30
Dry Runway

	LANDING DISTANCE AND ADJUSTMENT (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF30	ONE REV	NO REV
MAX MANUAL	2920	180/-150	60/80	-105	370	35	-30	60	-60	215	55	120
MAX AUTO	3720	190/-185	80/105	-135	460	15	-15	85	-85	320	0	0
AUTOBRAKE 3	5220	320/-310	135/180	-230	775	20	-20	140	-140	545	0	0
AUTOBRAKE 2	6670	450/-445	195/255	-315	1070	95	-115	185	-185	565	210	210
AUTOBRAKE 1	7320	525/-520	235/305	-365	1255	195	-220	210	-210	525	635	915

Good Reported Braking Action

MAX MANUAL	4040	235/-230	105/135	-180	635	95	-85	95	-100	305	215	485
MAX AUTO	4450	245/-240	105/145	-185	655	95	-80	100	-100	320	230	520
AUTOBRAKE 3	5230	320/-315	135/180	-230	790	35	-25	140	-140	545	10	45
AUTOBRAKE 2	6670	450/-445	195/255	-315	1070	95	-115	185	-185	565	210	210

Medium Reported Braking Action

MAX MANUAL	5480	365/-350	160/220	-290	1050	245	-195	145	-145	395	575	1400
MAX AUTO	5730	365/-355	165/220	-290	1055	245	-195	145	-145	400	585	1420
AUTOBRAKE 3	5850	375/-360	165/225	-300	1080	190	-130	155	-155	545	425	1260
AUTOBRAKE 2	6830	465/-460	200/265	-340	1210	180	-175	190	-190	565	335	705

Poor Reported Braking Action

MAX MANUAL	7080	515/-490	230/315	-430	1655	585	-385	190	-195	465	1220	3270
MAX AUTO	7370	515/-490	230/315	-430	1660	585	-385	190	-195	465	1220	3275
AUTOBRAKE 3	7370	515/-490	230/320	-435	1660	585	-370	190	-195	495	1225	3280
AUTOBRAKE 2	7620	545/-520	240/330	-450	1710	535	-350	205	-210	565	1010	2890

Reference distance is for sea level, standard day, no wind or slope, VREF30 approach speed and two engine detent reverse thrust.
Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.
For max manual braking and manual speedbrakes, increase reference landing distance by 180 ft.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above threshold (1000 ft of air distance).
*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Normal Configuration Landing Distances****Flaps 40****Dry Runway**

	LANDING DISTANCE AND ADJUSTMENT (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF40	ONE REV	NO REV
MAX MANUAL	2780	170/-135	55/75	-105	355	30	-30	55	-55	215	50	105
MAX AUTO	3470	175/-170	75/95	-130	440	15	-15	75	-75	305	0	0
AUTOBRAKE 3	4810	295/-285	120/160	-215	740	20	-20	125	-125	520	0	0
AUTOBRAKE 2	6170	420/-410	175/230	-300	1025	75	-90	170	-170	565	110	110
AUTOBRAKE 1	6840	490/-480	210/275	-350	1215	170	-195	190	-190	525	510	680

Good Reported Braking Action

MAX MANUAL	3860	225/-220	95/130	-175	625	95	-80	90	-90	310	195	440
MAX AUTO	4220	235/-225	100/135	-180	640	95	-80	95	-95	320	210	465
AUTOBRAKE 3	4820	295/-285	120/160	-220	755	35	-25	125	-125	520	15	50
AUTOBRAKE 2	6170	420/-410	175/230	-300	1025	75	-90	170	-170	565	110	110

Medium Reported Braking Action

MAX MANUAL	5210	345/-330	150/205	-280	1030	240	-190	135	-135	400	520	1255
MAX AUTO	5420	350/-335	150/205	-280	1035	240	-190	135	-135	400	525	1270
AUTOBRAKE 3	5500	355/-335	150/205	-290	1050	200	-135	140	-145	520	450	1200
AUTOBRAKE 2	6330	430/-420	180/240	-330	1170	160	-150	170	-175	565	240	600

Poor Reported Braking Action

MAX MANUAL	6720	485/-465	215/295	-420	1625	570	-375	180	-185	465	1100	2910
MAX AUTO	6990	490/-465	215/295	-420	1625	570	-375	180	-185	465	1105	2910
AUTOBRAKE 3	6990	490/-465	215/295	-420	1625	570	-370	180	-185	470	1105	2915
AUTOBRAKE 2	7150	510/-485	220/305	-435	1665	515	-330	190	-195	565	885	2610

Reference distance is for sea level, standard day, no wind or slope, VREF40 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 180 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Dry Runway**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	3910	500/-210	150/150	-140	670	70	-60	350
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	4910	280/-280	130/180	-240	890	150	-130	380
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	3320	220/-170	80/100	-120	420	50	-40	290
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	3200	200/-160	70/100	-120	410	50	-40	300
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	3070	180/-150	70/90	-110	400	50	-40	300
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	3450	170/-180	80/110	-130	470	50	-40	250
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	4620	240/-250	110/150	-180	610	110	-100	480
LEADING EDGE FLAPS TRANSIT	VREF15+15	3430	230/-180	80/100	-120	420	40	-40	230
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	3080	220/-160	70/90	-110	400	40	-30	220
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	2940	180/-140	60/90	-110	390	40	-30	220

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Dry Runway**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	3050	210/-160	70/90	-110	390	40	-30	210
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	3050	210/-160	70/90	-110	390	40	-30	210
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	2920	180/-150	60/80	-100	370	40	-30	220
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	3050	210/-160	70/90	-110	390	40	-30	210
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	3380	250/-180	80/100	-120	430	40	-30	230
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	2920	180/-150	60/80	-100	370	40	-30	220
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	3050	210/-160	70/90	-110	390	40	-30	210
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	3380	250/-180	80/100	-120	430	40	-30	230
TRAILING EDGE FLAPS UP	VREF40+40	3560	330/-200	110/110	-120	550	50	-40	240

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	5390	270/-280	150/200	-210	740	110	-100	290
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	5460	330/-330	150/210	-280	1080	220	-180	420
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	4810	290/-290	140/180	-200	730	130	-110	420
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	4570	270/-270	130/170	-200	720	130	-110	420
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	4340	250/-260	120/160	-190	700	130	-110	430
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	4370	250/-250	120/160	-190	680	110	-90	330
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	5710	320/-330	150/210	-240	820	190	-160	570
LEADING EDGE FLAPS TRANSIT	VREF15+15	4780	270/-270	130/180	-200	710	110	-100	320
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	4380	250/-250	120/150	-190	690	110	-90	320
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	4160	230/-240	110/140	-180	680	110	-90	330

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/ BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	4200	240/-240	110/150	-180	660	100	-80	300
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	4200	240/-240	110/150	-180	660	100	-80	300
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	4040	240/-230	110/140	-180	640	100	-80	310
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	4200	240/-240	110/150	-180	660	100	-80	300
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	4660	240/-250	130/170	-190	690	100	-90	290
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	4040	240/-230	110/140	-180	640	100	-80	310
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	4200	240/-240	110/150	-180	660	100	-80	300
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	4660	240/-250	130/170	-190	690	100	-90	290
TRAILING EDGE FLAPS UP	VREF40+40	4900	250/-260	130/180	-190	710	110	-90	280

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Medium Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	7570	440/-460	250/330	-330	1230	290	-240	400
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	6880	460/-450	210/290	-420	1690	490	-350	480
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	6550	460/-450	210/300	-320	1200	310	-250	540
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	6150	420/-410	200/270	-310	1160	300	-240	520
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	5800	390/-380	180/250	-300	1140	290	-230	520
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	5960	400/-390	190/250	-300	1120	260	-210	430
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	7850	500/-500	240/330	-370	1300	400	-340	690
LEADING EDGE FLAPS TRANSIT	VREF15+15	6530	420/-420	210/280	-310	1160	270	-220	420
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	6240	410/-410	190/250	-320	1190	300	-240	450
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	5840	370/-380	170/230	-310	1150	280	-230	440

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Medium Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	5720	370/-370	170/240	-290	1090	230	-190	390
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	5720	370/-370	170/240	-290	1090	230	-190	390
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	5480	370/-350	160/220	-290	1050	250	-190	400
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	5720	370/-370	170/240	-290	1090	230	-190	390
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	6420	390/-390	200/270	-310	1150	260	-210	400
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	5480	370/-350	160/220	-290	1050	250	-190	400
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	5720	370/-370	170/240	-290	1090	230	-190	390
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	6420	390/-390	200/270	-310	1150	260	-210	400
TRAILING EDGE FLAPS UP	VREF40+40	6830	400/-410	220/285	-320	1180	270	-220	390

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Poor Reported Braking Action

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
ALL FLAPS UP	VREF40+55	9990	660/-660	360/490	-500	1940	650	-490	500
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	9080	670/-640	290/430	-690	3140	1690	-800	530
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	8450	650/-620	300/425	-480	1870	670	-490	630
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	7860	590/-560	270/385	-460	1820	630	-460	600
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	7380	540/-520	250/350	-450	1780	610	-440	580
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	7710	570/-540	260/370	-450	1780	570	-420	510
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	10050	720/-690	340/480	-540	1980	800	-600	770
LEADING EDGE FLAPS TRANSIT	VREF15+15	8440	600/-590	290/410	-460	1830	590	-440	500
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	8500	610/-600	280/380	-500	1950	740	-530	560
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	7850	550/-540	250/350	-480	1880	690	-490	530

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

LANDING CONFIGURATION	VREF	LANDING DISTANCE AND ADJUSTMENT (FT)							
		REFERENCE DISTANCE FOR 130000 LB LANDING WEIGHT	WT ADJ PER 10000 LB ABOVE/BELOW 130000 LB	ALT ADJ PER 1000 FT STD/HIGH*	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		APP SPD ADJ PER 10 KTS ABOVE VREF
					HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	
STABILIZER TRIM INOPERATIVE	VREF15	7400	540/-510	250/350	-430	1730	530	-390	470
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	7400	540/-510	250/350	-430	1730	530	-390	470
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	7080	520/-490	230/320	-430	1660	590	-380	470
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	7400	540/-510	250/350	-430	1730	530	-390	470
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	8380	570/-560	290/400	-460	1820	580	-430	480
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	7080	520/-490	230/320	-430	1660	590	-380	470
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	7400	540/-510	250/350	-430	1730	530	-390	470
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	8380	570/-560	290/400	-460	1820	580	-430	480
TRAILING EDGE FLAPS UP	VREF40+40	8980	600/-600	310/430	-480	1860	610	-450	480

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Reference Brake Energy Per Brake (Millions of Foot Pounds)**

		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
		80			100			120			140			160			180		
WEIGHT (1000 LB)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10
180	0	15.3	17.3	19.6	22.8	25.7	29.4	31.4	35.6	40.9	41.1	46.8	54.0	51.7	59.0	68.5	61.7	70.6	82.6
	10	15.8	17.8	20.3	23.5	26.6	30.3	32.5	36.8	42.2	42.5	48.3	55.8	53.4	60.9	70.8	63.8	73.0	85.3
	15	16.1	18.1	20.6	23.9	27.0	30.8	32.9	37.3	42.8	43.1	49.0	56.6	54.2	61.8	71.8	64.7	74.1	86.5
	20	16.3	18.4	20.9	24.2	27.3	31.2	33.4	37.8	43.4	43.7	49.7	57.3	54.9	62.6	72.7	65.6	75.0	87.6
	30	16.7	18.8	21.4	24.8	28.0	32.0	34.2	38.8	44.5	44.8	50.9	58.8	56.3	64.2	74.6	67.2	76.9	89.8
	40	16.9	19.0	21.6	25.1	28.4	32.4	34.7	39.4	45.2	45.5	51.8	59.9	57.3	65.5	76.2	68.6	78.6	92.0
160	50	16.9	19.0	21.7	25.2	28.5	32.6	34.9	39.7	45.7	46.0	52.4	60.8	58.2	66.6	77.8	69.8	80.3	94.5
	0	14.1	15.8	18.0	20.7	23.4	26.7	28.5	32.3	37.0	37.2	42.3	48.7	46.7	53.2	61.6	56.4	64.5	75.1
	10	14.5	16.4	18.6	21.4	24.2	27.6	29.5	33.4	38.2	38.5	43.7	50.3	48.3	55.0	63.7	58.3	66.6	77.6
	15	14.7	16.6	18.9	21.7	24.6	28.0	29.9	33.8	38.8	39.0	44.3	51.0	49.0	55.8	64.6	59.2	67.6	78.7
	20	14.9	16.8	19.1	22.0	24.9	28.4	30.3	34.3	39.3	39.6	44.9	51.7	49.6	56.5	65.4	59.9	68.5	79.7
	30	15.3	17.3	19.6	22.6	25.5	29.1	31.1	35.2	40.3	40.6	46.0	53.0	50.9	57.9	67.1	61.5	70.2	81.7
140	40	15.5	17.4	19.8	22.9	25.8	29.5	31.5	35.7	40.9	41.2	46.8	53.9	51.7	59.0	68.4	62.6	71.6	83.6
	50	15.5	17.4	19.8	22.9	25.9	29.6	31.6	35.9	41.2	41.5	47.3	54.7	52.4	59.9	69.7	63.6	73.1	85.6
	0	12.8	14.4	16.4	18.7	21.1	24.1	25.6	28.9	33.1	33.2	37.7	43.3	41.6	47.3	54.6	50.6	57.7	67.0
	10	13.2	14.9	16.9	19.3	21.8	24.9	26.4	29.9	34.2	34.3	38.9	44.7	43.0	48.9	56.4	52.3	59.6	69.2
	15	13.4	15.1	17.2	19.6	22.2	25.2	26.8	30.3	34.7	34.8	39.5	45.4	43.6	49.6	57.2	53.0	60.5	70.2
	20	13.6	15.3	17.4	19.9	22.5	25.6	27.2	30.7	35.1	35.3	40.0	46.0	44.2	50.2	58.0	53.7	61.3	71.1
120	30	14.0	15.7	17.8	20.4	23.0	26.2	27.9	31.5	36.0	36.2	41.0	47.1	45.3	51.5	59.5	55.1	62.8	72.9
	40	14.1	15.9	18.0	20.6	23.3	26.5	28.2	31.9	36.5	36.7	41.6	47.9	46.0	52.4	60.6	56.1	64.0	74.4
	50	14.1	15.9	18.0	20.7	23.4	26.6	28.3	32.1	36.8	37.0	42.0	48.4	46.5	53.0	61.5	56.9	65.1	76.0
	0	11.6	13.0	14.8	16.7	18.9	21.4	22.6	25.6	29.2	29.2	33.1	37.9	36.4	41.3	47.5	44.0	50.1	58.0
	10	11.9	13.4	15.2	17.3	19.5	22.2	23.4	26.4	30.1	30.2	34.2	39.1	37.6	42.6	49.1	45.5	51.8	59.9
	15	12.1	13.6	15.5	17.5	19.8	22.5	23.7	26.8	30.6	30.6	34.7	39.7	38.1	43.3	49.8	46.2	52.5	60.7
100	20	12.3	13.8	15.7	17.8	20.0	22.8	24.0	27.2	31.0	31.0	35.1	40.3	38.6	43.8	50.5	46.8	53.2	61.5
	30	12.6	14.2	16.1	18.2	20.6	23.4	24.7	27.9	31.8	31.8	36.0	41.3	39.6	45.0	51.7	48.0	54.6	63.1
	40	12.7	14.3	16.3	18.4	20.8	23.6	24.9	28.2	32.2	32.2	36.5	41.9	40.2	45.7	52.6	48.8	55.5	64.3
	50	12.7	14.3	16.2	18.4	20.8	23.7	25.0	28.3	32.4	32.4	36.8	42.3	40.5	46.1	53.3	49.3	56.3	65.4
	0	10.3	11.6	13.2	14.7	16.6	18.8	19.7	22.2	25.3	25.2	28.5	32.6	31.1	35.3	40.5	37.5	42.6	49.1
	10	10.7	12.0	13.6	15.2	17.1	19.5	20.3	23.0	26.2	26.0	29.4	33.6	32.2	36.5	41.8	38.8	44.0	50.7
90	15	10.8	12.2	13.8	15.4	17.4	19.7	20.6	23.3	26.5	26.4	29.9	34.1	32.7	37.0	42.5	39.3	44.7	51.4
	20	11.0	12.4	14.0	15.6	17.6	20.0	20.9	23.6	26.9	26.8	30.3	34.6	33.1	37.5	43.0	39.9	45.3	52.1
	30	11.3	12.7	14.4	16.0	18.1	20.5	21.5	24.2	27.6	27.5	31.0	35.5	33.9	38.5	44.1	40.9	46.4	53.4
	40	11.4	12.8	14.5	16.2	18.3	20.8	21.7	24.5	27.9	27.8	31.4	36.0	34.4	39.0	44.8	41.5	47.1	54.4
	50	11.4	12.8	14.5	16.2	18.3	20.8	21.7	24.6	28.0	27.9	31.6	36.2	34.6	39.3	45.3	41.8	47.7	55.1
	0	9.7	11.0	12.4	13.7	15.5	17.5	18.2	20.5	23.4	23.2	26.2	29.9	28.6	32.3	37.0	34.3	38.9	44.7
90	10	10.1	11.3	12.8	14.2	16.0	18.1	18.8	21.2	24.2	23.9	27.1	30.9	29.5	33.4	38.3	35.4	40.2	46.2
	15	10.2	11.5	13.0	14.4	16.2	18.4	19.1	21.5	24.5	24.3	27.5	31.4	29.9	33.9	38.8	35.9	40.8	46.8
	20	10.4	11.7	13.2	14.6	16.4	18.6	19.3	21.8	24.8	24.6	27.8	31.8	30.3	34.3	39.3	36.4	41.3	47.5
	30	10.6	12.0	13.5	15.0	16.8	19.1	19.8	22.4	25.5	25.3	28.6	32.6	31.1	35.2	40.3	37.3	42.4	48.7
	40	10.7	12.1	13.7	15.1	17.0	19.3	20.1	22.6	25.8	25.6	28.9	33.0	31.5	35.7	40.9	37.9	43.0	49.5
	50	10.7	12.0	13.7	15.1	17.0	19.3	20.1	22.7	25.9	25.6	29.0	33.2	31.7	35.9	41.3	38.2	43.4	50.1

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
	AUTOBRAKE 1	6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
	AUTOBRAKE 1	1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

Cooling Time (Minutes) - Category C Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category N Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE	
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE	
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION			FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	34.2	45.9				
GROUND										

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Intentionally
Blank

Performance Inflight
Engine Inoperative
Chapter PI
Section 43
ENGINE INOP
Initial Max Continuous %N1
Based on .80M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.9	96.6	96.4	96.2	96.0	95.5	95.1	94.8	94.2
15	97.5	97.2	96.9	96.8	96.7	96.3	95.8	95.6	95.0
10	98.1	97.9	97.5	97.4	97.4	97.0	96.6	96.4	95.9
5	98.1	98.6	98.4	98.1	98.1	97.8	97.4	97.2	96.7
0	97.3	98.5	99.2	99.0	98.9	98.6	98.2	98.0	97.7
-5	96.5	97.8	98.9	99.8	99.7	99.3	99.0	98.8	98.5
-10	95.8	97.0	98.2	99.4	100.5	100.2	99.9	99.7	99.5
-15	95.0	96.2	97.4	98.6	99.9	101.0	100.8	100.6	100.4
-20	94.2	95.4	96.6	97.8	99.1	100.2	100.8	100.6	100.4
-25	93.4	94.6	95.8	97.0	98.3	99.4	100.0	99.8	99.6
-30	92.6	93.8	95.0	96.2	97.5	98.6	99.1	98.9	98.7
-35	91.7	93.0	94.1	95.3	96.6	97.7	98.3	98.1	97.9
-40	90.9	92.2	93.3	94.5	95.8	96.9	97.4	97.2	97.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

ENGINE INOP

**Max Continuous %N1
37000 FT to 29000 FT Pressure Altitudes**

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.6	97.6	98.5	99.4	100.2	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.1	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.5	97.4	98.3	99.2	100.1	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.3	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.4	98.3	99.2	100.0	100.8	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.3	98.2	99.1	100.0	100.9	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.1	98.0	98.9	99.7	100.6	101.5	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	98.1	99.0	99.9	100.8	101.6	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.1	99.9	100.1	99.1	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

ENGINE INOP**Max Continuous %N1****27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT												TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

ENGINE INOP

**Max Continuous %N1
18000 FT to 12000 FT Pressure Altitudes**

18000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.34	98.5	99.3	100.2	101.0	101.8	102.6	101.6	100.3	99.2	98.1	97.0	95.9	
200	.42	98.7	99.6	100.4	101.2	102.0	102.8	103.1	101.7	100.4	99.3	98.3	97.3	
240	.51	97.8	98.7	99.5	100.3	101.1	101.9	102.7	102.5	101.1	99.9	99.0	98.1	
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8	
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2	
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6	
16000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.33	97.1	98.0	98.8	99.6	100.4	101.2	101.6	100.3	99.1	98.1	97.1	96.1	
200	.41	98.0	98.8	99.6	100.4	101.2	102.0	102.8	102.5	101.3	100.2	99.3	98.3	
240	.49	97.1	97.9	98.7	99.5	100.3	101.1	101.9	102.7	101.8	100.5	99.6	98.7	
280	.57	95.6	96.4	97.2	98.0	98.8	99.6	100.3	101.1	101.8	100.9	99.8	99.0	
320	.64	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.2	99.4	
360	.72	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.9	99.6	
14000 FT PRESS ALT					TAT (°C)									
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30	
160	.31	96.6	97.4	98.2	99.0	99.8	100.6	100.4	99.1	98.0	97.1	96.2	95.3	
200	.39	97.1	97.9	98.7	99.5	100.3	101.1	101.8	101.5	101.0	100.1	99.3	98.4	
240	.47	96.6	97.4	98.2	99.0	99.8	100.6	101.3	101.8	101.1	100.3	99.5	98.7	
280	.54	95.5	96.3	97.1	97.8	98.6	99.4	100.1	100.9	101.0	100.1	99.2	98.5	
320	.62	94.1	94.9	95.7	96.5	97.2	98.0	98.7	99.5	100.2	100.3	99.5	98.8	
360	.69	92.2	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.6	99.0	
12000 FT PRESS ALT					TAT (°C)									
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35	
160	.30	96.3	97.0	97.8	98.6	99.4	100.1	99.3	98.1	97.1	96.3	95.4	94.5	
200	.38	97.1	97.9	98.7	99.5	100.3	101.0	101.5	100.8	99.8	99.0	98.2	97.3	
240	.45	96.5	97.3	98.0	98.8	99.6	100.3	101.1	101.0	100.1	99.4	98.6	97.9	
280	.52	95.5	96.3	97.0	97.8	98.6	99.3	100.0	100.8	100.3	99.4	98.6	98.0	
320	.60	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	99.7	98.9	98.2	
360	.67	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.4	99.1	98.5	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

ENGINE INOP**Max Continuous %N1****10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT												TAT (°C)	
CIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT												TAT (°C)	
CIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT												TAT (°C)	
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT												TAT (°C)	
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-2.7	-3.2

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 LB)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	183	272	18100	16900	15500
180	173	265	19700	18400	17100
170	164	258	21000	20000	18700
160	154	251	22300	21400	20300
150	145	243	23700	22800	21800
140	134	235	25300	24300	23400
130	125	227	27300	26300	25100
120	115	218	29300	28400	27200
110	106	209	31200	30400	29400
100	96	199	33100	32400	31500
90	87	189	35200	34500	33600

Includes APU fuel burn.

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown/LRC Cruise Range Capability****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
137	128	120	112	106	100	95	90	86	82	79
275	256	239	224	212	200	190	180	172	164	157
413	384	359	337	317	300	284	270	258	246	236
550	512	478	449	423	400	379	361	344	328	314
688	640	598	561	529	500	474	451	430	410	393
825	768	718	674	635	600	569	541	516	492	471
963	896	837	786	740	700	664	631	601	574	550
1101	1024	957	898	846	800	759	721	687	657	628
1238	1152	1077	1010	952	900	853	811	773	739	707
1376	1280	1196	1123	1058	1000	948	901	859	821	785
1514	1408	1316	1235	1164	1100	1043	992	945	903	864
1652	1536	1436	1348	1269	1200	1138	1082	1031	984	942
1790	1665	1556	1460	1375	1300	1233	1172	1117	1066	1021
1928	1793	1675	1572	1481	1400	1327	1262	1202	1148	1099
2067	1921	1795	1685	1587	1500	1422	1352	1288	1230	1177
2205	2050	1915	1797	1693	1600	1517	1442	1374	1312	1256
2343	2178	2035	1910	1799	1700	1612	1532	1460	1394	1334
2482	2307	2155	2022	1905	1800	1706	1622	1545	1476	1412

Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 LB)											TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 LB)											
	90	100	110	120	130	140	150	160	170	180	190	
100	0.8	0.8	0.8	0.8	0.9	0.9	1.0	1.1	1.1	1.1	1.2	0:16
200	1.7	1.8	1.9	2.0	2.1	2.2	2.3	2.5	2.5	2.7	2.8	0:33
300	2.7	2.9	3.0	3.2	3.4	3.6	3.8	4.0	4.2	4.4	4.6	0:49
400	3.6	3.9	4.2	4.5	4.7	5.0	5.3	5.6	5.9	6.2	6.4	1:05
500	4.6	4.9	5.3	5.6	6.0	6.3	6.7	7.1	7.5	7.9	8.2	1:22
600	5.5	5.9	6.4	6.8	7.2	7.7	8.1	8.6	9.0	9.6	10.0	1:38
700	6.4	6.9	7.4	7.9	8.5	9.0	9.5	10.1	10.6	11.2	11.7	1:55
800	7.3	7.9	8.5	9.1	9.7	10.3	10.9	11.6	12.1	12.8	13.4	2:11
900	8.1	8.8	9.5	10.2	10.9	11.6	12.3	13.0	13.7	14.4	15.1	2:28
1000	9.0	9.8	10.6	11.3	12.1	12.9	13.6	14.5	15.2	16.0	16.8	2:44
1100	9.9	10.7	11.6	12.4	13.3	14.1	15.0	15.9	16.7	17.6	18.4	3:01
1200	10.7	11.7	12.6	13.5	14.4	15.4	16.3	17.3	18.2	19.2	20.1	3:17
1300	11.6	12.6	13.6	14.6	15.6	16.6	17.6	18.7	19.7	20.7	21.7	3:34
1400	12.4	13.5	14.6	15.7	16.8	17.8	19.0	20.1	21.1	22.3	23.4	3:50
1500	13.2	14.4	15.6	16.8	17.9	19.1	20.3	21.5	22.6	23.8	25.0	4:07
1600	14.1	15.3	16.6	17.8	19.0	20.3	21.6	22.8	24.0	25.4	26.6	4:23
1700	14.9	16.2	17.6	18.9	20.2	21.5	22.8	24.2	25.5	26.9	28.2	4:40
1800	15.7	17.1	18.5	19.9	21.3	22.7	24.1	25.5	26.9	28.4	29.8	4:57

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at Long Range Cruise speed.

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	14700	11800	9400
180	16500	14500	11600
170	18300	16500	13900
160	20200	18500	16000
150	21500	20400	18300
140	23000	21800	20400
130	24500	23400	22000
120	26600	25100	23700
110	29100	27800	25900
100	31300	30300	29000
90	33400	32600	31400

With engine anti-ice on, decrease altitude capability by 1200 ft.
With engine and wing anti-ice on, decrease altitude capability by 5500 ft .

ENGINE INOP
MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)								
		10	15	17	19	21	25	27	29	31
190	%N1	92.2	95.9							
	MACH	.564	.602							
	KIAS	313	305							
	FF/ENG	6863	6780							
180	%N1	90.7	94.5	96.5						
	MACH	.550	.593	.607						
	KIAS	305	300	296						
	FF/ENG	6478	6439	6415						
170	%N1	89.1	93.2	94.7	97.0					
	MACH	.535	.585	.597	.613					
	KIAS	297	296	291	287					
	FF/ENG	6095	6144	6047	6065					
160	%N1	87.5	91.6	93.2	95.1	97.7				
	MACH	.519	.571	.588	.601	.618				
	KIAS	288	288	286	281	278				
	FF/ENG	5714	5769	5733	5665	5742				
150	%N1	85.7	89.9	91.6	93.3	95.3				
	MACH	.502	.554	.575	.590	.604				
	KIAS	278	280	280	276	272				
	FF/ENG	5336	5385	5391	5333	5305				
140	%N1	83.8	88.1	89.8	91.5	93.3				
	MACH	.485	.536	.557	.578	.593				
	KIAS	268	270	271	270	266				
	FF/ENG	4959	5005	5010	5009	4952				
130	%N1	81.9	86.1	87.8	89.6	91.3	95.7			
	MACH	.468	.517	.538	.559	.581	.610			
	KIAS	259	260	261	261	261	253			
	FF/ENG	4605	4625	4630	4631	4636	4626			
120	%N1	79.9	83.9	85.7	87.4	89.2	93.0	95.7		
	MACH	.451	.496	.517	.539	.560	.595	.612		
	KIAS	249	250	250	251	251	246	243		
	FF/ENG	4267	4247	4252	4252	4258	4229	4287		
110	%N1	77.8	81.6	83.3	85.1	86.9	90.6	92.7	95.6	
	MACH	.434	.474	.494	.516	.538	.582	.595	.612	
	KIAS	240	238	239	240	241	241	236	233	
	FF/ENG	3942	3880	3875	3876	3881	3909	3884	3943	
100	%N1	75.7	79.3	80.8	82.5	84.3	87.9	89.9	92.1	95.1
	MACH	.416	.454	.471	.491	.513	.558	.580	.594	.611
	KIAS	230	228	228	228	229	230	230	226	222
	FF/ENG	3631	3541	3515	3502	3507	3526	3558	3539	3593
90	%N1	73.4	76.7	78.3	79.8	81.5	85.2	87.0	89.0	91.2
	MACH	.399	.433	.449	.466	.485	.530	.553	.576	.592
	KIAS	220	217	217	216	217	218	219	218	215
	FF/ENG	3329	3218	3181	3151	3136	3153	3176	3205	3196

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
299	272	249	230	214	200	190	180	172	164	158
602	548	501	462	429	400	379	361	344	328	315
907	825	754	695	644	600	569	541	516	492	472
1214	1104	1007	927	860	800	759	722	687	656	629
1522	1383	1261	1161	1075	1000	949	902	859	820	785
1833	1664	1516	1394	1291	1200	1138	1081	1030	983	942
2146	1946	1772	1628	1507	1400	1328	1262	1202	1147	1098
2461	2230	2029	1863	1723	1600	1517	1441	1372	1310	1254
2778	2515	2286	2098	1940	1800	1707	1621	1543	1473	1410
3097	2802	2544	2334	2156	2000	1896	1800	1714	1636	1566

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.0	0:43	2.6	0:41	2.4	0:39	2.1	0:38	1.9	0:37
400	6.2	1:24	5.6	1:19	5.2	1:15	4.7	1:11	4.5	1:09
600	9.3	2:05	8.6	1:58	7.9	1:51	7.3	1:45	7.0	1:42
800	12.4	2:47	11.5	2:37	10.6	2:27	9.9	2:19	9.5	2:15
1000	15.5	3:29	14.4	3:17	13.3	3:04	12.4	2:54	11.9	2:48
1200	18.5	4:12	17.2	3:57	16.0	3:42	14.9	3:29	14.3	3:22
1400	21.5	4:55	20.0	4:38	18.6	4:20	17.4	4:04	16.6	3:55
1600	24.5	5:39	22.8	5:19	21.2	4:58	19.8	4:40	19.0	4:29
1800	27.4	6:23	25.5	6:01	23.8	5:37	22.2	5:16	21.3	5:03
2000	30.3	7:08	28.2	6:43	26.3	6:16	24.6	5:52	23.5	5:37

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
2	-0.2	-0.1	0.0	0.2	0.5
4	-0.5	-0.2	0.0	0.6	1.3
6	-0.7	-0.4	0.0	0.9	2.1
8	-1.0	-0.5	0.0	1.2	2.9
10	-1.3	-0.6	0.0	1.5	3.6
12	-1.5	-0.8	0.0	1.8	4.3
14	-1.8	-0.9	0.0	2.1	5.0
16	-2.1	-1.1	0.0	2.4	5.6
18	-2.3	-1.2	0.0	2.6	6.2
20	-2.6	-1.3	0.0	2.8	6.7
22	-2.9	-1.5	0.0	3.1	7.3
24	-3.1	-1.6	0.0	3.3	7.8
26	-3.4	-1.7	0.0	3.5	8.2
28	-3.7	-1.8	0.0	3.7	8.7
30	-3.9	-2.0	0.0	3.8	9.1
32	-4.2	-2.1	0.0	4.0	9.5

Includes APU fuel burn.

ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
190	%N1	81.5	84.4	88.7	93.3				
	KIAS	252	252	254	255				
	FF/ENG	6120	6120	6150	6270				
180	%N1	80.0	83.0	87.1	91.6	99.3			
	KIAS	245	246	247	248	250			
	FF/ENG	5800	5780	5800	5880	6240			
170	%N1	78.5	81.3	85.5	89.9	96.3			
	KIAS	238	239	240	241	242			
	FF/ENG	5480	5450	5450	5510	5710			
160	%N1	76.9	79.6	83.8	88.2	93.6			
	KIAS	231	232	232	233	235			
	FF/ENG	5160	5130	5110	5150	5250			
150	%N1	75.2	77.9	82.0	86.3	91.1			
	KIAS	224	224	225	226	227			
	FF/ENG	4850	4810	4780	4800	4840			
140	%N1	73.3	76.1	80.1	84.4	89.0	96.6		
	KIAS	216	216	217	218	219	221		
	FF/ENG	4540	4490	4450	4460	4480	4750		
130	%N1	71.2	74.2	78.1	82.4	86.9	92.8		
	KIAS	208	209	209	210	211	213		
	FF/ENG	4230	4180	4140	4120	4120	4240		
120	%N1	69.1	72.0	76.0	80.2	84.6	89.6		
	KIAS	199	200	201	202	203	204		
	FF/ENG	3930	3870	3830	3790	3780	3830		
110	%N1	66.9	69.6	73.8	77.8	82.2	86.9	94.8	
	KIAS	192	192	192	193	194	195	196	
	FF/ENG	3630	3570	3520	3480	3440	3460	3690	
100	%N1	64.4	67.1	71.2	75.2	79.6	84.2	89.9	
	KIAS	186	186	186	186	186	186	187	
	FF/ENG	3330	3270	3210	3170	3120	3120	3230	
90	%N1	61.6	64.5	68.3	72.6	76.7	81.3	86.0	95.0
	KIAS	179	179	179	179	179	179	179	179
	FF/ENG	3030	2980	2910	2860	2810	2790	2840	3090

This table includes 5% additional fuel for holding in a racetrack pattern.

PI.43.12

Performance Inflight Alternate Mode EEC

Chapter PI Section 44

ALTERNATE MODE EEC

Alternate Mode EEC Limit Weight

PERFORMANCE LIMIT	NORMAL MODE PERFORMANCE LIMIT WEIGHT (1000 LB)									
	100	110	120	130	140	150	160	170	180	190
FIELD	95.0	104.0	112.8	131.9	131.0	140.3	149.7	159.0	168.5	177.8
CLIMB	91.5	101.0	110.0	119.0	128.1	137.3	146.4	155.8	164.6	173.8
OBSTACLE	92.1	101.5	110.7	119.7	128.5	137.5	146.6	155.8	165.0	174.8
TIRE					139.5	149.4	159.4	169.3	179.3	189.3

Alternate Mode EEC Takeoff Speed Adjustment

TAKEOFF SPEEDS	TAKEOFF SPEED ADJUSTMENT (KTS)
DRY V1	+2
WET V1	+3
VR	+1
V2	0

Alternate Mode EEC Max Takeoff %N1

Based on engine bleeds for packs on, engine and wing anti-ice on or off

AIRPORT OAT		AIRPORT PRESSURE ALTITUDE (FT)												
°C	°F	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	140	93.5	94.0	94.5	94.7	94.5	94.8	95.0	95.1	94.7	94.1	93.8	93.7	93.7
55	131	94.6	95.0	95.2	95.4	95.3	95.5	95.8	95.9	95.6	95.0	94.5	93.8	93.1
50	122	95.4	96.0	96.5	96.4	96.1	96.3	96.5	96.8	96.5	96.0	95.4	94.8	94.1
45	113	96.1	96.7	97.2	97.4	97.4	97.4	97.4	97.6	97.3	96.8	96.3	95.7	95.1
40	104	96.8	97.5	98.0	98.2	98.1	98.2	98.3	98.3	98.1	97.7	97.2	96.6	96.0
35	95	97.5	98.3	99.0	99.2	99.1	99.2	99.3	99.3	99.0	98.5	98.0	97.5	96.9
30	86	97.1	98.6	100.4	100.1	100.1	100.0	100.1	100.2	99.9	99.6	99.2	98.4	97.8
25	77	96.3	97.9	99.7	100.0	100.3	100.4	100.4	100.4	100.3	100.3	100.2	99.2	98.7
20	68	95.6	97.1	99.0	99.3	99.6	99.8	100.1	100.4	100.4	100.4	100.3	99.6	98.8
15	59	94.8	96.3	98.3	98.6	98.9	99.1	99.4	99.6	99.9	100.2	100.3	99.8	99.1
10	50	94.0	95.6	97.5	97.9	98.1	98.4	98.6	98.9	99.2	99.4	99.7	99.6	99.5
5	41	93.2	94.8	96.8	97.1	97.4	97.6	97.9	98.1	98.4	98.7	99.0	98.8	98.7
0	32	92.4	94.0	96.0	96.4	96.6	96.9	97.1	97.4	97.6	97.9	98.2	98.1	97.9
-5	23	91.6	93.2	95.3	95.6	95.9	96.1	96.4	96.6	96.9	97.2	97.4	97.3	97.2
-10	14	90.8	92.4	94.5	94.8	95.1	95.3	95.6	95.8	96.1	96.4	96.6	96.5	96.4
-15	5	90.0	91.6	93.7	94.1	94.3	94.6	94.8	95.1	95.3	95.6	95.9	95.7	95.6
-20	-4	89.2	90.8	93.0	93.3	93.5	93.8	94.0	94.3	94.5	94.8	95.1	94.9	94.8
-25	-13	88.3	90.0	92.2	92.5	92.7	93.0	93.2	93.5	93.7	94.0	94.3	94.1	94.0
-30	-22	87.5	89.1	91.4	91.7	91.9	92.2	92.4	92.7	92.9	93.2	93.4	93.3	93.2
-35	-31	86.6	88.3	90.6	90.9	91.1	91.4	91.6	91.8	92.1	92.4	92.6	92.5	92.4
-40	-40	85.8	87.4	89.7	90.1	90.3	90.5	90.8	91.0	91.3	91.5	91.8	91.7	91.5
-45	-49	84.9	86.6	88.9	89.2	89.5	89.7	89.9	90.2	90.4	90.7	90.9	90.8	90.7
-50	-58	84.0	85.7	88.1	88.4	88.6	88.9	89.1	89.3	89.6	89.8	90.1	90.0	89.8

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

October 23, 2009

Performance Inflight
Gear Down

Chapter PI
Section 45

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	14900	11800	8700
180	17500	14600	11500
170	20100	17200	14400
160	22300	19900	17100
150	24700	22600	19700
140	26800	25300	22900
130	29100	27600	25900
120	31100	29900	28400
110	32900	31900	30700
100	34900	33900	32800
90	37100	36100	35000

GEAR DOWN

Long Range Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
190	%N1	86.3									
	MACH	.485									
	KIAS	268									
	FF/ENG	5417									
180	%N1	84.8									
	MACH	.473									
	KIAS	262									
	FF/ENG	5115									
170	%N1	83.2	92.6								
	MACH	.460	.560								
	KIAS	254	251								
	FF/ENG	4818	4773								
160	%N1	81.6	90.7	93.0							
	MACH	.447	.548	.565							
	KIAS	247	245	243							
	FF/ENG	4523	4477	4478							
150	%N1	79.8	89.1	90.8	93.3						
	MACH	.434	.535	.552	.569						
	KIAS	240	239	237	235						
	FF/ENG	4234	4195	4170	4196						
140	%N1	78.0	87.2	88.9	90.8	93.6					
	MACH	.420	.518	.538	.555	.573					
	KIAS	232	232	231	229	227					
	FF/ENG	3954	3897	3890	3878	3924					
130	%N1	76.1	85.2	87.0	88.7	90.7	93.8				
	MACH	.406	.500	.521	.541	.558	.576				
	KIAS	224	223	224	223	221	218				
	FF/ENG	3676	3597	3595	3595	3599	3652				
120	%N1	74.1	83.0	84.8	86.6	88.3	90.5	93.7			
	MACH	.391	.482	.501	.523	.543	.560	.579			
	KIAS	216	215	215	215	214	212	210			
	FF/ENG	3402	3303	3297	3303	3311	3320	3379			
110	%N1	71.8	80.7	82.4	84.2	86.0	87.7	90.1	93.4		
	MACH	.375	.462	.481	.501	.523	.543	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	3133	3015	3006	3009	3023	3030	3038	3102		
100	%N1	69.3	78.2	79.9	81.6	83.4	85.2	87.0	89.4	92.8	
	MACH	.359	.442	.460	.479	.499	.521	.542	.560	.580	
	KIAS	198	197	197	197	196	197	196	194	192	
	FF/ENG	2873	2735	2720	2722	2734	2745	2749	2755	2819	
90	%N1	66.7	75.4	77.1	78.8	80.6	82.3	84.2	86.0	88.4	92.2
	MACH	.343	.421	.438	.456	.475	.496	.518	.540	.558	.578
	KIAS	189	187	187	187	187	187	187	186	184	182
	FF/ENG	2623	2467	2441	2439	2451	2458	2464	2468	2474	2544

GEAR DOWN

**Long Range Cruise Enroute Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
325	290	260	236	217	200	188	178	168	160	153
658	586	524	475	435	400	377	357	338	321	307
994	884	789	714	653	600	566	535	507	482	460
1336	1185	1056	955	872	800	755	713	676	642	613
1683	1490	1326	1196	1091	1000	943	891	844	802	765
2036	1799	1597	1439	1311	1200	1131	1068	1011	961	917
2395	2112	1871	1683	1531	1400	1319	1245	1179	1120	1068
2761	2429	2147	1928	1752	1600	1507	1422	1346	1278	1219
3133	2751	2427	2175	1974	1800	1695	1599	1513	1436	1368

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	5.3	0:49	4.8	0:47	4.1	0:44	3.8	0:43	3.5	0:41
400	10.8	1:37	9.9	1:32	8.8	1:25	8.1	1:21	7.6	1:18
600	16.1	2:26	15.0	2:18	13.3	2:07	12.4	2:00	11.7	1:54
800	21.4	3:16	19.9	3:05	17.8	2:49	16.6	2:39	15.7	2:31
1000	26.5	4:07	24.7	3:52	22.1	3:32	20.7	3:20	19.6	3:09
1200	31.6	4:59	29.4	4:41	26.4	4:16	24.7	4:00	23.4	3:47
1400	36.5	5:52	34.0	5:31	30.6	5:01	28.6	4:42	27.1	4:26
1600	41.3	6:47	38.6	6:22	34.6	5:47	32.4	5:25	30.7	5:05
1800	46.1	7:42	43.0	7:14	38.6	6:33	36.2	6:08	34.3	5:45

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	-0.7	-0.4	0.0	0.7	1.5
10	-1.5	-0.8	0.0	1.3	3.0
15	-2.3	-1.1	0.0	1.9	4.4
20	-3.0	-1.5	0.0	2.5	5.6
25	-3.8	-1.9	0.0	3.0	6.8
30	-4.6	-2.3	0.0	3.5	7.9
35	-5.4	-2.7	0.0	3.9	8.8
40	-6.2	-3.1	0.0	4.4	9.7
45	-7.0	-3.5	0.0	4.7	10.4
50	-7.7	-3.8	0.0	5.1	11.1

GEAR DOWN

Descent
VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (LB)	DISTANCE (NM)
41000	21	610	91
39000	20	600	86
37000	19	590	81
35000	19	580	77
33000	18	560	72
31000	17	550	68
29000	17	540	64
27000	16	530	60
25000	15	510	56
23000	14	500	52
21000	13	480	48
19000	13	460	44
17000	12	450	40
15000	11	430	36
10000	8	370	26
5000	6	300	16
1500	4	240	9

Allowances for a straight-in approach are included.

GEAR DOWN**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
190	%N1	76.2	78.8	83.1	87.4	92.5			
	KIAS	231	231	231	231	231			
	FF/ENG	5010	4980	4970	5000	5060			
180	%N1	74.8	77.5	81.7	85.9	90.6			
	KIAS	227	227	227	227	227			
	FF/ENG	4770	4730	4710	4730	4760			
170	%N1	73.2	76.1	80.1	84.4	89.0			
	KIAS	222	222	222	222	222			
	FF/ENG	4520	4490	4460	4470	4480			
160	%N1	71.7	74.6	78.5	82.9	87.4	93.3		
	KIAS	218	218	218	218	218	218		
	FF/ENG	4290	4250	4210	4210	4210	4320		
150	%N1	70.1	73.0	77.0	81.2	85.7	90.8		
	KIAS	214	214	214	214	214	214		
	FF/ENG	4060	4010	3980	3960	3950	4000		
140	%N1	68.4	71.3	75.4	79.5	83.9	88.6		
	KIAS	209	209	209	209	209	209		
	FF/ENG	3830	3780	3740	3710	3690	3710		
130	%N1	66.7	69.4	73.6	77.6	82.0	86.6	93.5	
	KIAS	203	203	203	203	203	203	203	
	FF/ENG	3600	3540	3500	3460	3430	3440	3600	
120	%N1	64.9	67.5	71.6	75.7	80.0	84.6	90.0	
	KIAS	198	198	198	198	198	198	198	
	FF/ENG	3370	3320	3260	3220	3180	3180	3270	
110	%N1	62.8	65.6	69.5	73.7	77.9	82.4	87.1	
	KIAS	192	192	192	192	192	192	192	
	FF/ENG	3140	3090	3030	2990	2940	2930	2980	
100	%N1	60.5	63.5	67.3	71.6	75.7	80.1	84.7	91.8
	KIAS	186	186	186	186	186	186	186	186
	FF/ENG	2920	2870	2810	2760	2710	2680	2720	2840
90	%N1	58.3	61.0	65.1	69.1	73.4	77.7	82.1	87.4
	KIAS	179	179	179	179	179	179	179	179
	FF/ENG	2690	2640	2590	2540	2480	2440	2470	2510

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

DO NOT USE FOR FLIGHT

Performance Inflight
Gear Down, Engine Inop

Chapter PI
Section 46

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 LB)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	180	228	1100		
180	170	224	3200	1500	
170	161	220	5400	3800	1600
160	152	216	7400	6000	4000
150	143	212	9600	8200	6300
140	133	207	11600	10500	8800
130	124	201	13700	12800	11500
120	114	196	15900	15100	14200
110	105	190	18200	17300	16500
100	96	184	20500	19600	18700
90	86	178	22700	21900	21000

Includes APU fuel burn.

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
170	200		
160	2900	600	
150	5700	3900	1200
140	8500	6900	4500
130	11100	9900	7700
120	13600	12600	11000
110	16300	15400	14600
100	19100	18100	17300
90	21800	20900	20000

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)								
		5	7	9	11	13	15	17	19	21
150	%N1	93.9	96.1							
	MACH	.384	.397							
	KIAS	232	232							
	FF/ENG	8062	8105							
140	%N1	91.9	93.6	95.9						
	MACH	.372	.385	.398						
	KIAS	225	225	224						
	FF/ENG	7475	7487	7541						
130	%N1	89.7	91.4	93.1	95.5					
	MACH	.361	.373	.385	.399					
	KIAS	218	217	217	216					
	FF/ENG	6911	6904	6914	6979					
120	%N1	87.5	89.0	90.7	92.5	94.9	98.7			
	MACH	.349	.360	.372	.385	.399	.413			
	KIAS	211	210	209	208	208	207			
	FF/ENG	6382	6346	6336	6349	6416	6622			
110	%N1	85.2	86.7	88.2	89.9	91.6	94.1	98.0		
	MACH	.337	.348	.359	.371	.383	.397	.412		
	KIAS	204	203	201	200	200	199	198		
	FF/ENG	5880	5824	5786	5777	5791	5841	6015		
100	%N1	82.9	84.2	85.6	87.1	88.8	90.6	93.0	97.0	
	MACH	.325	.335	.345	.356	.368	.381	.395	.409	
	KIAS	197	195	194	193	192	191	190	189	
	FF/ENG	5399	5329	5273	5235	5226	5230	5251	5393	
90	%N1	80.3	81.6	83.0	84.4	85.9	87.6	89.4	91.6	95.1
	MACH	.313	.322	.331	.341	.352	.364	.377	.391	.406
	KIAS	189	188	186	184	183	182	181	181	180
	FF/ENG	4943	4857	4787	4732	4695	4674	4661	4663	4774

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
173	152	134	120	109	100	93	88	83	78	75
354	309	271	242	220	200	187	174	164	155	147
536	467	409	365	330	300	280	262	246	232	220
720	626	547	487	440	400	373	349	328	308	292
905	786	686	610	551	500	466	435	408	385	365
1092	948	826	734	662	600	559	522	489	461	437
1281	1109	966	857	772	700	652	609	571	537	509
1471	1273	1107	982	884	800	744	695	651	612	580
1662	1437	1248	1106	995	900	838	782	732	689	652
1856	1602	1390	1230	1106	1000	930	868	812	764	723

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
100	2.7	0:27	2.4	0:26	2.2	0:26
200	5.7	0:53	5.2	0:51	5.0	0:49
300	8.6	1:19	8.0	1:15	7.7	1:12
400	11.4	1:45	10.7	1:40	10.4	1:35
500	14.3	2:11	13.4	2:05	12.9	1:59
600	17.1	2:38	16.0	2:30	15.5	2:23
700	19.8	3:05	18.6	2:56	18.0	2:47
800	22.6	3:32	21.2	3:22	20.4	3:12
900	25.2	3:59	23.7	3:48	22.9	3:36
1000	27.9	4:27	26.3	4:14	25.2	4:01

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

**Long Range Cruise Diversion Fuel and Time
Fuel Required Adjustments (1000 LB)**

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
2	-0.3	-0.2	0.0	0.3	0.5
4	-0.6	-0.3	0.0	0.6	1.2
6	-0.9	-0.5	0.0	0.9	1.8
8	-1.2	-0.6	0.0	1.3	2.5
10	-1.5	-0.8	0.0	1.6	3.1
12	-1.8	-0.9	0.0	1.9	3.8
14	-2.1	-1.1	0.0	2.3	4.4
16	-2.4	-1.2	0.0	2.6	5.1
18	-2.7	-1.4	0.0	2.9	5.7
20	-2.9	-1.5	0.0	3.3	6.4
22	-3.2	-1.6	0.0	3.6	7.1
24	-3.5	-1.8	0.0	3.9	7.7
26	-3.8	-1.9	0.0	4.3	8.4
28	-4.1	-2.1	0.0	4.6	9.1
30	-4.4	-2.2	0.0	4.9	9.7

Includes APU fuel burn.

GEAR DOWN
ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
180	%N1	94.0			
	KIAS	227			
	FF/ENG	9330			
170	%N1	92.2	95.7		
	KIAS	222	222		
	FF/ENG	8780	8900		
160	%N1	90.4	93.7		
	KIAS	218	218		
	FF/ENG	8240	8330		
150	%N1	88.7	91.8		
	KIAS	214	214		
	FF/ENG	7730	7800		
140	%N1	86.8	89.8	94.9	
	KIAS	209	209	209	
	FF/ENG	7230	7270	7400	
130	%N1	84.8	87.7	92.4	
	KIAS	203	203	203	
	FF/ENG	6730	6740	6820	
120	%N1	82.7	85.6	90.1	96.7
	KIAS	198	198	198	198
	FF/ENG	6250	6250	6290	6530
110	%N1	80.3	83.3	87.7	92.7
	KIAS	192	192	192	192
	FF/ENG	5780	5760	5760	5870
100	%N1	78.0	80.9	85.2	89.9
	KIAS	186	186	186	186
	FF/ENG	5340	5290	5280	5330
90	%N1	75.6	78.3	82.6	87.1
	KIAS	179	179	179	179
	FF/ENG	4890	4840	4800	4810

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight**Text****Chapter PI****Section 47**

Introduction

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

General**Takeoff Speeds**

The speeds presented in the Takeoff Speeds table as well as FMC computed takeoff speeds can be used for all performance conditions provided that adjustments are made to V1 for clearway, stopway, anti-skid inoperative, thrust reversers inoperative, improved climb, contaminated runway situations or brake energy limits. These speeds may be used for weights less than or equal to the performance limited weight.

The FMC will protect for minimum control speeds by increasing V1, VR and V2 as required. However, the FMC will not compute takeoff speeds for weights where the required speed increase exceeds the maximum certified speed increase. This typically occurs at full rated thrust and light weights. In this case, the message "V SPEEDS UNAVAILABLE" will appear on the FMC scratchpad and the takeoff speed entries will be blank. Takeoff is not permitted in this condition as certified limits have been exceeded. The options are to select a smaller flap setting, select derate thrust and/or add weight (fuel). Selecting derate thrust is the preferred method as this will reduce the minimum control speeds. Note that the assumed temperature method will not help this condition as the minimum control speeds are determined at the actual temperature and therefore are not reduced.

Normal takeoff speeds, V1, VR, and V2 are read from either the dry or wet table by entering with takeoff flap setting and brake release weight. Use the tables provided to adjust takeoff speeds for altitude and actual temperature or assumed temperature for reduced thrust takeoffs. Slope and wind adjustments to V1 are obtained by entering the Slope and Wind V1 Adjustment table.

V1(MCG)

Regulations prohibit scheduling takeoff with a V1 less than minimum V1 for control on the ground, V1(MCG). It is therefore necessary to compare the adjusted V1 to V1(MCG). The V1(MCG) presented in this manual is conservative for all weight and bleed configurations.

To find V1(MCG) enter the V1(MCG) table with the airport pressure altitude and actual OAT. If the adjusted V1 is less than V1(MCG), set V1 equal to V1(MCG). If the adjusted VR is less than V1(MCG), set VR equal to V1(MCG), and determine a new V2 by adding the difference between the normal VR and V1(MCG) to the normal V2. No takeoff weight adjustment is necessary provided that the actual field length exceeds the minimum field length shown in the Field and Climb Limit Weight table.

Clearway and Stopway V1 Adjustments

Maximum allowable clearway limits are provided for guidance when more precise data is not available. Use of clearway is not allowed on wet runways.

Takeoff speed adjustments are to be applied to V1 speed when using takeoff weights based on the use of clearway and stopway.

Adjust V1 speed by the amount shown in the table. The adjusted V1 speed must not exceed VR. If the adjusted V1 speed is greater than VR, reduce V1 to equal VR.

Stab Trim

To find takeoff stabilizer trim setting, enter Stab Trim Setting table with anticipated brake release weight and center of gravity (C.G. % MAC) and read required stabilizer trim units.

VREF

This table contains flaps 40, 30 and 15 reference speeds for a given weight. With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

Flap Maneuver Speeds

This table provides the flap speed schedule for recommended maneuver speeds. Using VREF as the basis for the schedule makes it variable as a function of weight and will provide adequate maneuver margin above stall at all weights.

During flap retraction/extension, movement of the flap to the next position should be initiated when within 20 knots of the recommended speed for that position.

Slush/Standing Water Takeoff

Experience has shown that aircraft performance may deteriorate significantly on runways covered with snow, slush, standing water or ice. Therefore, reductions in field/obstacle limited takeoff weight and revised takeoff speeds are necessary. The tables are intended for guidance in accordance with advisory material and assume an engine failure at the critical point during the takeoff.

The entire runway is assumed to be completely covered by a contaminant of uniform thickness and density. Therefore this information is conservative when operating under typical cold weather conditions where patches of slush exist and some degree of sanding is common. Takeoffs in slush depths greater than 0.5 inches (13 mm) are not recommended because of possible airplane damage as a result of slush impingement on the airplane structure. The use of assumed temperature for reduced thrust is not allowed on contaminated runways. Interpolation for slush/standing water depths between the values shown is permitted.

Takeoff weight determination:

1. Enter the Weight Adjustment table with the dry field/obstacle limit weight to obtain the weight reduction for the slush/standing water depth and airport pressure altitude.
2. Adjust field length available for temperature by amount shown beneath V1(MCG) limit weight table.
3. Enter the V1(MCG) Limit Weight table with the adjusted field length and pressure altitude to obtain the slush/standing water limit weight with respect to minimum field length required for V1(MCG) speed.
4. The maximum allowable takeoff weight in slush/standing water is the lesser of the limit weights found in steps 1 and 3.

Takeoff speed determination:

1. Determine takeoff speeds V1, VR and V2 for actual brake release weight using the Dry Runway Takeoff Speeds table for the appropriate flap setting and thrust rating.
2. If V1(MCG) limited, set $V1 = V1(MCG)$. If not limited by V1(MCG) considerations, enter the V1 Adjustment table with actual brake release weight to determine the V1 reduction to apply to V1 speed. If the adjusted V1 is less than V1(MCG), set $V1 = V1(MCG)$.

Slippery Runway Takeoff

Airplane braking action is reported as good, medium or poor, depending on existing runway conditions. If braking action is reported as good, conditions should not be expected to be as good as on clean, dry runways. The value “good” is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when stopping. The performance level used to calculate the “good” data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate the “poor” data reflects a runway covered with wet ice. Performance is based on a 15 ft screen height at the end of the runway. The tables provided are used in the same manner as the Slush/Standing Water tables.

Anti-Skid Inoperative

When operating with anti-skid inoperative, the field limit weight and V1 must be reduced to account for the effect on accelerate-stop performance. Anti-skid inoperative is only allowed on a dry runway. A simplified method which conservatively accounts for the effects of anti-skid inoperative is to reduce the normal dry field/obstacle limited weight by 19000 lb and the V1 associated with the reduced weight by the amount shown in the table below.

ANTI-SKID INOPERATIVE V1 ADJUSTMENTS	
FIELD LENGTH (FT)	V1 ADJUSTMENT (KIAS)
6000	-22
8000	-17
10000	-14
12000	-12
14000	-10

If the resulting V1 is less than V1(MCG), takeoff is permitted with V1 set equal to V1(MCG) provided the dry accelerate-stop distance adjusted for wind and slope exceeds approximately 5900 ft.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Thrust Reverser Inoperative

When dispatching on a wet runway with both thrust reversers operative, an operative anti-skid system, and all brakes operating, regulations allow deceleration credit for one thrust reverser in the engine failure case and two thrust reversers in the all engine stop case.

When dispatching on a wet runway with one thrust reverser inoperative, the field/obstacle limited weight and V1 must be reduced to account for the effect on accelerate-stop performance. A simplified method, which

conservatively accounts for this, is to reduce the normal wet runway/field/obstacle limited weight by 2300 lb and the V1 associated with the reduced weight by 2 knots.

If the resulting V1 is less than minimum V1, takeoff is permitted with V1 set equal to V1(MCG) provided the accelerate-stop distance available adjusted for wind and slope exceeds approximately 4000 ft.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Takeoff %N1

To find Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off operation, apply the %N1 adjustment shown below the table. No takeoff %N1 adjustment is required for engine and wing anti-ice.

Assumed Temperature Reduced Thrust

Regulations permit the use of up to 25% takeoff thrust reduction for operation with assumed temperature reduced thrust. Use of assumed temperature reduced thrust is not allowed with anti-skid inoperative or on runways contaminated with standing water, ice, slush, or snow. Use of assumed temperature reduced thrust is not recommended if potential windshear conditions exist.

To find the maximum allowable assumed temperature enter the Maximum Assumed Temperature table with airport pressure altitude and OAT. Compare this temperature to that at which the airplane is performance limited as determined from available takeoff performance data. Next, enter the Maximum Takeoff %N1 table with airport pressure altitude and the lower of the two temperatures previously determined, to obtain a maximum takeoff %N1. Do not use an assumed temperature less than the minimum assumed temperature shown. Enter the %N1 Adjustment table with OAT and the difference between the assumed and actual OAT to obtain a %N1 adjustment. Subtract the %N1 adjustment from the maximum takeoff %N1 found previously to determine the assumed temperature reduced thrust %N1.

Max Climb %N1

This table shows Max Climb %N1 for a 280/.80 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

Go-around %N1

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

Flight with Unreliable Airspeed / Turbulent Air Penetration

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

All Engines

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. This table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Cruise Control

These tables provide target %N1, Cruise Mach number, IAS and standard day fuel flow per engine for the airplane weight and pressure altitude.

.80M Enroute Fuel and Time

.80M Enroute Fuel and Time tables are provided to determine remaining time and fuel required to destination. The data is based on .80M Cruise and .80/280/250 descent. Tables are presented for low altitudes and high altitudes.

To determine remaining fuel and time required, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and

read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the actual weight at checkpoint to obtain fuel required to destination.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the table in the Engine Inoperative text section.

.80M Wind-Altitude Trade

Wind is a factor which may justify operations considerably below optimum altitude. For example, a favorable wind component may have an effect on ground speed which more than compensates for the loss in air range.

Using this table, it is possible to determine the break-even wind (advantage necessary or disadvantage that can be tolerated) to maintain the same range at another altitude and long range cruise speed. The tables make no allowance for climb or descent time, fuel or distance, and are based on comparing ground fuel mileage.

Descent

Time, fuel, and distance for descent are shown for a .80/280/250 descent speed schedule. Enter the table with top of descent pressure altitude and read distance, time and fuel. Data is based on flight idle thrust descent in zero wind. Allowances are included for a straight-in approach with gear down and landing flaps at the outer marker.

Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

Advisory Information

Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. Use of autobrake setting 1 is not recommended for landings on slippery runways, and is therefore not provided for these conditions. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of max manual braking and reverse thrust.

Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

Engine Inoperative

Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .80M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (LB/HR)
39	100
35	100
31	110
25	130
20	150
15	160
10	180
5	200

Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .80/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

Holding

Single engine holding data is provided in the same format as the all engine holding data and is based on the same assumptions.

Alternate Mode EEC

Introduction

This section contains performance data for airplane operation with the Electronic Engine Control (EEC) in the alternate mode (ALTN EEC switch illuminated) for applicable thrust ratings. The data includes engine bleed effects for normal air conditioning operation i.e., two packs on at normal flow all engines operating.

Operation with derate and/or assumed temperature reduced thrust is not permitted with the EEC in alternate mode.

Limit Weight

A simplified method which conservatively accounts for the effects of EEC in alternate mode is to reduce the normal mode (ON EEC switch illuminated) performance limited weights. The Limit Weight table

provides takeoff field, climb, obstacle and tire speed limit weights. To determine limit weights for operations with the EEC in the alternate mode, enter the table with the limit weights for normal mode EEC operation and read the associated limit weight for each performance condition. The most limiting of the takeoff weights must be used. Analysis from the Airplane Flight Manual - Digital Performance Information may yield less restrictive limit weights.

Takeoff Speed Adjustment

Takeoff speeds for the reduced weight should be increased by the amount shown in the Takeoff Speeds Adjustment table. The adjusted V1 should not exceed the adjusted VR.

NOTE: The FMC does not incorporate alternate mode EEC performance in its takeoff speeds calculations.

Max Takeoff %N1

The alternate mode EEC thrust schedule provides equal or greater thrust than the normal mode thrust for the same thrust lever position. Thrust limit protection is not provided in alternate mode EEC and maximum rated thrust may be reached at thrust lever position less than full forward. As a result, thrust overboost may occur if the target alternate mode EEC Max Takeoff %N1 settings are not observed.

To find alternate mode EEC Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter the Alternate Mode EEC Max Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off apply the %N1 adjustment provided below the table. No %N1 adjustment is required for engine or wing anti-ice.

Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

Note: The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.

PI.47.14

Performance Inflight**Chapter PI****Table of Contents****Section 50****737-900ERBBJ CFM56-7B27B3 KG FAA CATH/P**

General	PI.50.1
Takeoff Speeds - Dry Runway	PI.50.1
Takeoff Speeds - Dry Runway - High Altitudes	PI.50.2
Takeoff Speeds - Wet Runway	PI.50.3
Takeoff Speeds - Wet Runway - High Altitudes	PI.50.4
Maximum Allowable Clearway	PI.50.5
Maximum Allowable Clearway - High Altitudes	PI.50.5
Clearway and Stopway V1 Adjustments	PI.50.5
Clearway and Stopway V1 Adjustments - High Altitudes	PI.50.5
Stab Trim Setting	PI.50.6
VREF	PI.50.7
Flap Maneuver Speeds	PI.50.8
Slush/Standing Water Takeoff	PI.50.9
Slippery Runway Takeoff	PI.50.17
Takeoff %N1	PI.50.25
Takeoff %N1 - High Altitudes	PI.50.26
Assumed Temperature Reduced Thrust	PI.50.26
Assumed Temperature Reduced Thrust - High Altitudes	PI.50.28
Takeoff Speeds - Dry Runway (26K Derate)	PI.50.30
Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)	PI.50.31
Takeoff Speeds - Wet Runway (26K Derate)	PI.50.32
Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)	PI.50.33
Maximum Allowable Clearway (26K Derate)	PI.50.34
Clearway and Stopway V1 Adjustments (26K Derate)	PI.50.34
Stab Trim Setting (26K Derate)	PI.50.35
Slush/Standing Water Takeoff (26K Derate)	PI.50.36

Slippery Runway Takeoff (26K Derate)	PI.50.43
Takeoff %N1 - (26K Derate)	PI.50.51
Assumed Temperature Reduced Thrust - (26K Derate) ...	PI.50.52
Takeoff Speeds - Dry Runway (24K Derate)	PI.50.56
Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)	PI.50.57
Takeoff Speeds - Wet Runway (24K Derate)	PI.50.58
Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)	PI.50.59
Maximum Allowable Clearway (24K Derate)	PI.50.60
Clearway and Stopway V1 Adjustments (24K Derate) ...	PI.50.60
Stab Trim Setting (24K Derate)	PI.50.61
Slush/Standing Water Takeoff (24K Derate)	PI.50.62
Slippery Runway Takeoff (24K Derate)	PI.50.68
Takeoff %N1 (24K Derate)	PI.50.76
Assumed Temperature Reduced Thrust (24K Derate) ...	PI.50.77
Max Climb %N1	PI.50.80
Go-around %N1	PI.50.81
Flight With Unreliable Airspeed/ Turbulent Air Penetration	PI.50.83
All Engine	PI.51.1
.80M Maximum Operating Altitude	PI.51.1
.80M Cruise Control	PI.51.2
.80M Enroute Fuel and Time - Low Altitudes	PI.51.3
.80M Enroute Fuel and Time - High Altitudes	PI.51.5
.80M Wind-Altitude Trade	PI.51.7
Descent	PI.51.7
Holding	PI.51.8
Advisory Information	PI.52.1
Normal Configuration Landing Distances	PI.52.1
Non-Normal Configuration Landing Distance	PI.52.4
Recommended Brake Cooling Schedule	PI.52.12

Engine Inoperative	PI.53.1
Initial Max Continuous %N1	PI.53.1
Max Continuous %N1	PI.53.2
Driftdown Speed/Level Off Altitude	PI.53.6
Driftdown/LRC Cruise Range Capability	PI.53.7
Long Range Cruise Altitude Capability	PI.53.8
Long Range Cruise Control	PI.53.9
Long Range Cruise Diversion Fuel and Time	PI.53.10
Holding	PI.53.11
Alternate Mode EEC	PI.54.1
Alternate Mode EEC Limit Weight	PI.54.1
Alternate Mode EEC Max Takeoff %N1	PI.54.1
Gear Down	PI.55.1
Long Range Cruise Altitude Capability	PI.55.1
Long Range Cruise Control	PI.55.2
Long Range Cruise Enroute Fuel and Time	PI.55.3
Descent	PI.55.4
Holding	PI.55.5
Gear Down, Engine Inoperative	PI.56.1
Driftdown Speed/Level Off Altitude	PI.56.1
Long Range Cruise Altitude Capability	PI.56.1
Long Range Cruise Control	PI.56.2
Long Range Cruise Diversion Fuel and Time	PI.56.3
Holding	PI.56.4
Text	PI.57.1
Introduction	PI.57.1
General	PI.57.1
All Engines	PI.57.6
Advisory Information	PI.57.7
Engine Inoperative	PI.57.9
Alternate Mode EEC	PI.57.11
Gear Down	PI.57.12

Intentionally
Blank

Performance Inflight General

Chapter PI Section 50

Takeoff Speeds - Dry Runway

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	173	175	181	164	167	173	155	158	164						
85	167	170	177	159	162	169	150	153	160	148	151	158			
80	161	164	172	154	157	165	146	148	156	144	146	154	141	142	149
75	156	158	168	149	151	160	141	143	152	139	141	150	136	137	145
70	150	152	163	143	145	156	135	137	147	133	135	145	130	132	141
65	144	146	157	137	139	151	130	131	143	128	130	141	125	126	137
60	138	139	152	131	132	145	124	125	138	122	123	136	119	120	132
55	131	132	146	124	125	140	117	118	132	116	117	131	113	114	127
50	123	124	140	117	118	134	111	111	127	109	110	125	106	107	122
45	116	116	133	110	110	128	104	104	121	102	103	119	99	100	116
40	107	107	127	102	102	122	96	97	115	95	95	113	92	93	110

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	6						5	6						-3	-3								
60	140	4	5	6	7				3	4	5	6				-2	-2	-3	-3						
50	122	2	3	4	5	6	7	9	2	3	4	5	6	7	9	-1	-2	-2	-2	-3	-4	-4			
40	104	1	1	2	3	5	6	7	1	2	3	4	5	6	8	-1	-1	-1	-2	-2	-3	-4			
30	86	0	0	1	2	4	5	6	0	0	1	3	4	5	7	0	0	-1	-1	-2	-2	-3			
20	68	0	0	1	2	3	4	6	0	0	1	2	3	4	6	0	0	0	-1	-1	-2	-3			
-60	-76	0	0	1	2	3	4	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)											
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40				
90	-4	-2	0	2	3		-2	-1	-1	0	0	0	1	1				
80	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1				
70	-2	-1	0	1	2		-2	-1	-1	0	0	1	1	1				
60	-1	-1	0	1	1		-2	-1	0	0	0	1	1	1				
50	-1	0	0	0	0		-2	-1	0	0	0	0	0	0				
40	0	0	0	0	0		-1	-1	0	0	0	0	0	0				

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	95	92					
60	140	95	92	90	89			
50	122	97	95	90	89	87	84	81
40	104	101	99	95	92	88	84	81
30	86	104	103	99	95	91	87	82
20	68	104	104	100	96	93	89	85
-60	-76	106	105	101	98	94	91	87

Takeoff Speeds - Dry Runway - High Altitudes
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	157	157	161												
65	151	151	156	144	144	149									
60	144	144	150	137	138	143	129	130	136	128	128	134			
55	136	137	144	130	131	138	123	124	130	121	122	128	118	119	125
50	129	129	138	123	123	132	116	117	124	115	115	123	112	112	119
45	121	122	131	115	116	125	109	109	118	107	108	117	105	105	114
40	113	113	124	107	108	118	102	102	112	100	101	111	97	98	108

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	2	3	3	4	4	4	2	3	3	4	4	4	-1	-1	-1	-2	-2	-2
30	86	1	2	2	3	3	3	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	1	2	2	3	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
70	-3	-2	0	0	0		-1	-1	0	0	0	0	0	0
65	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
60	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
55	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
50	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
45	-1	0	0	0	0		-1	-1	0	0	0	0	0	0
40	-1	0	0	0	0		-1	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)
Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	82	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Takeoff Speeds - Wet Runway**V1, VR, V2 for Max Takeoff Thrust**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	168	175	181	159	167	173	150	158	164						
85	161	170	177	153	162	169	145	153	160	143	151	158			
80	155	164	172	147	157	165	139	148	156	137	146	154	133	142	149
75	149	158	168	141	151	160	133	143	152	131	141	150	128	137	145
70	142	152	163	135	145	156	128	137	147	126	135	145	122	132	141
65	136	146	157	129	139	151	122	131	143	120	130	141	117	126	137
60	129	139	152	122	132	145	116	125	138	114	123	136	111	120	132
55	121	132	146	115	125	140	109	118	132	107	117	131	104	114	127
50	114	124	140	108	118	134	102	111	127	100	110	125	97	107	122
45	106	116	133	101	110	128	95	104	121	93	103	119	90	100	116
40	97	107	127	92	102	122	87	97	115	86	95	113	83	93	110

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	8	9						5	6						-3	-3								
60	140	5	6	7	9				3	4	5	6				-2	-2	-3	-3						
50	122	3	4	5	6	8	10	12	2	3	4	5	6	7	9	-1	-2	-2	-2	-3	-4	-4			
40	104	1	2	3	4	5	7	10	1	2	3	4	5	6	8	-1	-1	-1	-2	-2	-3	-4			
30	86	0	0	1	3	4	6	8	0	0	1	3	4	5	7	0	0	-1	-1	-2	-2	-3			
20	68	0	0	1	3	4	5	7	0	0	1	2	3	4	6	0	0	0	-1	-1	-2	-3			
-60	-76	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
90	-5	-2	0	3	6	-4	-2	-1	0	1	2	2	3		
80	-4	-2	0	3	5	-4	-2	-1	0	1	2	2	3		
70	-4	-2	0	2	4	-4	-2	-1	0	1	2	2	3		
60	-3	-1	0	2	3	-4	-3	-1	0	1	2	2	3		
50	-2	-1	0	1	2	-5	-3	-1	0	1	2	3	4		
40	-2	-1	0	1	2	-5	-4	-2	0	1	2	3	4		

*V1 not to exceed VR

V1(MCG)**Max Takeoff Thrust**

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	95	92					
60	140	95	92	90	89			
50	122	97	95	90	89	87	84	81
40	104	101	99	95	92	88	84	81
30	86	104	103	99	95	91	87	82
20	68	104	104	100	96	93	89	85
-60	-76	106	105	101	98	94	91	87

Takeoff Speeds - Wet Runway - High Altitudes
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	152	157	161												
65	145	151	156	137	144	149									
60	137	144	150	130	138	143	123	130	136	121	128	134			
55	129	137	144	122	131	138	116	124	130	114	122	128	111	119	125
50	121	129	138	115	123	132	109	117	124	107	115	123	104	112	119
45	113	122	131	107	116	125	101	109	118	100	108	117	97	105	114
40	104	113	124	99	108	118	93	102	112	92	101	111	89	98	108

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	3	4	5	5	6	6	2	3	3	4	4	4	-1	-1	-1	-2	-2	-2
30	86	1	2	3	4	4	5	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	2	2	3	4	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	2	2	3	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	2	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	2	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
70	-5	-3	0	3	6		-2	-2	-1	0	0	1	2	2
65	-5	-2	0	3	5		-3	-2	-1	0	1	1	2	2
60	-4	-2	0	2	5		-3	-2	-1	0	1	1	2	2
55	-3	-2	0	2	4		-3	-2	-1	0	1	1	2	2
50	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	2
45	-3	-1	0	1	3		-4	-2	-1	0	1	1	2	3
40	-2	-1	0	1	2		-4	-3	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	82	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Maximum Allowable Clearway**Max Takeoff Thrust**

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	190
1600	220
2000	250
2400	280
2800	310
3200	350

Maximum Allowable Clearway - High Altitudes**Max Takeoff Thrust**

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1600	220
2000	250
2400	290
2800	320
3200	360
3600	390
4000	420
4400	440

Clearway and Stopway V1 Adjustments**Max Takeoff Thrust**

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
300	-5	-5	-4	-3				
200	-5	-4	-3	-2				
100	-3	-2	-2	-1				
0	0	0	0	0	0	0	0	0
-100	0	0	1	2	2	2	2	2
-200	0	0	1	2	4	4	3	3
-300	0	0	1	2	6	5	4	3

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes**Max Takeoff Thrust**

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
300	-5	-3	-3	-3	-3					
200	-5	-3	-2	-2	-2					
100	-3	-1	-1	-1	-1					
0	0	0	0	0	0	0	0	0	0	0
-100	0	0	0	0	0	2	1	1	1	1
-200	0	0	0	0	0	4	3	2	2	2
-300	0	0	0	0	0	7	4	3	3	3

Stab Trim Setting
Max Takeoff Thrust
Flaps 1 and 5

WEIGHT (1000 KG)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
85	8 1/2	8	8	6 1/4	5 1/2	5 1/4	5	4 3/4	4 1/4	4	3 3/4
80	8 1/4	8	7 3/4	6	5 1/4	5	4 3/4	4 1/2	4 1/4	3 3/4	3 1/2
70	7 3/4	7 1/4	7 1/4	5 1/2	4 3/4	4 3/4	4 1/2	4	3 3/4	3 1/2	3 1/4
60	7	6 3/4	6 1/2	5	4 1/4	4 1/4	4	3 3/4	3 1/4	3	2 3/4
50	6 1/4	6	5 3/4	4 1/2	3 3/4	3 3/4	3 1/2	3	3	2 3/4	2 3/4
40	5 3/4	5 1/2	5 1/2	4	3 1/2	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
85	8 1/2	8	7 3/4	5 1/2	4 1/2	4 1/4	4	3 1/2	3 1/4	3	2 3/4
80	8 1/4	7 3/4	7 1/2	5 1/4	4 1/4	4 1/4	3 3/4	3 1/2	3	2 3/4	2 3/4
70	7 3/4	7 1/4	7	4 3/4	4	3 3/4	3 1/2	3	2 3/4	2 3/4	2 3/4
60	7	6 1/2	6 1/2	4 1/4	3 1/2	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4
50	6 1/4	5 3/4	5 3/4	3 3/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
40	6	5 1/2	5 1/4	3 1/2	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

VREF

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	158	161	171
80	153	157	166
75	148	152	160
70	143	147	155
65	137	142	149
60	131	136	143
55	125	130	137
50	119	124	130
45	112	118	123
40	105	111	116

Flap Maneuver Speeds

FLAP POSITION	MANEUVER SPEED
UP	VREF40 + 70
1	VREF40 + 50
5	VREF40 + 30
10	VREF40 + 30
15	VREF40 + 20
25	VREF40 + 10
30	VREF30
40	VREF40

ADVISORY INFORMATION**Slush/Standing Water Takeoff****Maximum Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-10.3	-12.3	-14.3	-12.7	-14.7	-16.7	-17.8	-20.8	-23.8
85	-9.6	-11.6	-13.6	-11.6	-13.6	-15.6	-15.9	-18.9	-21.9
80	-8.9	-10.9	-12.9	-10.6	-12.6	-14.6	-14.1	-17.1	-20.1
75	-8.1	-10.1	-12.1	-9.5	-11.5	-13.5	-12.4	-15.4	-18.4
70	-7.3	-9.3	-11.3	-8.4	-10.4	-12.4	-10.7	-13.7	-16.7
65	-6.4	-8.4	-10.4	-7.3	-9.3	-11.3	-9.1	-12.1	-15.1
60	-5.5	-7.5	-9.5	-6.1	-8.1	-10.1	-7.5	-10.5	-13.5
55	-4.5	-6.5	-8.5	-5.0	-7.0	-9.0	-6.0	-9.0	-12.0
50	-3.5	-5.5	-7.5	-3.8	-5.8	-7.8	-4.6	-7.6	-10.6
45	-2.4	-4.4	-6.4	-2.6	-4.6	-6.6	-3.3	-6.3	-9.3
40	-1.3	-3.3	-5.3	-1.4	-3.4	-5.4	-2.0	-5.0	-8.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1400	42.2			45.4			51.1		
1500	51.4			54.7	40.9		60.3	46.5	
1600	61.1	46.8		64.4	50.0		70.0	55.7	42.1
1700	71.3	56.2	42.2	74.6	59.5	45.4	80.0	65.1	51.1
1800	82.0	66.1	51.4	85.3	69.4	54.7	90.4	74.9	60.3
1900	93.2	76.5	61.1	96.3	79.9	64.4		85.1	70.0
2000		87.6	71.3		90.8	74.6		95.6	80.0
2100			82.0			85.3			90.4
2200			93.2			96.3			

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -25 m/+25 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-16	-11	-6	-8	-3	0	0	0	0
85	-18	-13	-8	-11	-6	-1	0	0	0
80	-19	-14	-9	-13	-8	-3	0	0	0
75	-20	-15	-10	-15	-10	-5	-2	0	0
70	-22	-17	-12	-17	-12	-7	-6	-1	0
65	-23	-18	-13	-19	-14	-9	-10	-5	0
60	-24	-19	-14	-21	-16	-11	-13	-8	-3
55	-25	-20	-15	-23	-18	-13	-16	-11	-6
50	-26	-21	-16	-24	-19	-14	-19	-14	-9
45	-27	-22	-17	-25	-20	-15	-22	-17	-12
40	-28	-23	-18	-27	-22	-17	-24	-19	-14

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff****No Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-13.7	-16.2	-18.7	-16.2	-18.7	-21.2	-21.2	-25.2	-29.2
85	-12.9	-15.4	-17.9	-14.9	-17.4	-19.9	-19.2	-23.2	-27.2
80	-12.0	-14.5	-17.0	-13.6	-16.1	-18.6	-17.2	-21.2	-25.2
75	-11.0	-13.5	-16.0	-12.4	-14.9	-17.4	-15.3	-19.3	-23.3
70	-10.0	-12.5	-15.0	-11.1	-13.6	-16.1	-13.4	-17.4	-21.4
65	-9.0	-11.5	-14.0	-9.8	-12.3	-14.8	-11.7	-15.7	-19.7
60	-7.9	-10.4	-12.9	-8.6	-11.1	-13.6	-10.0	-14.0	-18.0
55	-6.8	-9.3	-11.8	-7.3	-9.8	-12.3	-8.4	-12.4	-16.4
50	-5.7	-8.2	-10.7	-6.0	-8.5	-11.0	-6.8	-10.8	-14.8
45	-4.5	-7.0	-9.5	-4.7	-7.2	-9.7	-5.4	-9.4	-13.4
40	-3.2	-5.7	-8.2	-3.5	-6.0	-8.5	-4.0	-8.0	-12.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1800							45.3		
1900				34.7			56.9	39.7	
2000	33.5			48.4			69.0	51.1	
2100	47.5			62.5	41.5		81.8	62.9	45.3
2200	62.7	40.5		77.1	55.4	34.7	95.2	75.4	56.9
2300	79.7	54.9	33.5	92.2	69.7	48.4		88.5	69.0
2400	98.6	71.0	47.5		84.6	62.5			81.8
2500		89.1	62.7		99.8	77.1			95.2
2600			79.7			92.2			
2700			98.6						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-25	-15	-5	-14	-4	0	0	0	0
85	-27	-17	-7	-17	-7	0	0	0	0
80	-29	-19	-9	-20	-10	0	0	0	0
75	-31	-21	-11	-24	-14	-4	-4	0	0
70	-33	-23	-13	-27	-17	-7	-11	-1	0
65	-35	-25	-15	-30	-20	-10	-16	-6	0
60	-37	-27	-17	-33	-23	-13	-22	-12	-2
55	-39	-29	-19	-35	-25	-15	-27	-17	-7
50	-41	-31	-21	-38	-28	-18	-31	-21	-11
45	-43	-33	-23	-41	-31	-21	-35	-25	-15
40	-45	-35	-25	-43	-33	-23	-39	-29	-19

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes****Maximum Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-14.3	-15.1	-15.9	-16.7	-17.5	-18.3	-23.8	-25.0	-26.2
85	-13.6	-14.4	-15.2	-15.6	-16.4	-17.2	-21.9	-23.1	-24.3
80	-12.9	-13.7	-14.5	-14.6	-15.4	-16.2	-20.1	-21.3	-22.5
75	-12.1	-12.9	-13.7	-13.5	-14.3	-15.1	-18.4	-19.6	-20.8
70	-11.3	-12.1	-12.9	-12.4	-13.2	-14.0	-16.7	-17.9	-19.1
65	-10.4	-11.2	-12.0	-11.3	-12.1	-12.9	-15.1	-16.3	-17.5
60	-9.5	-10.3	-11.1	-10.1	-10.9	-11.7	-13.5	-14.7	-15.9
55	-8.5	-9.3	-10.1	-9.0	-9.8	-10.6	-12.0	-13.2	-14.4
50	-7.5	-8.3	-9.1	-7.8	-8.6	-9.4	-10.6	-11.8	-13.0
45	-6.4	-7.2	-8.0	-6.6	-7.4	-8.2	-9.3	-10.5	-11.7
40	-5.3	-6.1	-6.9	-5.4	-6.2	-7.0	-8.0	-9.2	-10.4

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500							33.3		
1600	33.2			36.4	31.1		42.1	36.8	31.6
1700	42.2	36.8	31.4	45.4	40.0	34.7	51.1	45.7	40.4
1800	51.4	45.9	40.4	54.7	49.1	43.6	60.3	54.7	49.2
1900	61.1	55.3	49.6	64.4	58.5	52.8	70.0	64.1	58.5
2000	71.3	65.1	59.1	74.6	68.4	62.4	80.0	73.9	68.0
2100	82.0	75.5	69.2	85.3	78.8	72.5	90.4	84.1	77.9
2200	93.2	86.5	79.8	96.3	89.7	83.1		94.6	88.3
2300		97.8	91.0			94.1			98.7

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -25 m/+25 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (.12 INCHES)			6 mm (.25 INCHES)			13 mm (.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-6	-4	-2	0	0	0	0	0	0
85	-8	-6	-4	-1	0	0	0	0	0
80	-9	-7	-5	-3	-1	0	0	0	0
75	-10	-8	-6	-5	-3	-1	0	0	0
70	-12	-10	-8	-7	-5	-3	0	0	0
65	-13	-11	-9	-9	-7	-5	0	0	0
60	-14	-12	-10	-11	-9	-7	-3	-1	0
55	-15	-13	-11	-13	-11	-9	-6	-4	-2
50	-16	-14	-12	-14	-12	-10	-9	-7	-5
45	-17	-15	-13	-15	-13	-11	-12	-10	-8
40	-18	-16	-14	-17	-15	-13	-14	-12	-10

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes****No Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-18.7	-19.7	-20.7	-21.2	-22.2	-23.2	-29.2	-30.8	-32.4
85	-17.9	-18.9	-19.9	-19.9	-20.9	-21.9	-27.2	-28.8	-30.4
80	-17.0	-18.0	-19.0	-18.6	-19.6	-20.6	-25.2	-26.8	-28.4
75	-16.0	-17.0	-18.0	-17.4	-18.4	-19.4	-23.3	-24.9	-26.5
70	-15.0	-16.0	-17.0	-16.1	-17.1	-18.1	-21.4	-23.0	-24.6
65	-14.0	-15.0	-16.0	-14.8	-15.8	-16.8	-19.7	-21.3	-22.9
60	-12.9	-13.9	-14.9	-13.6	-14.6	-15.6	-18.0	-19.6	-21.2
55	-11.8	-12.8	-13.8	-12.3	-13.3	-14.3	-16.4	-18.0	-19.6
50	-10.7	-11.7	-12.7	-11.0	-12.0	-13.0	-14.8	-16.4	-18.0
45	-9.5	-10.5	-11.5	-9.7	-10.7	-11.7	-13.4	-15.0	-16.6
40	-8.2	-9.2	-10.2	-8.5	-9.5	-10.5	-12.0	-13.6	-15.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (.12 INCHES)			6 mm (.25 INCHES)			13 mm (.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2000							34.2		
2100							45.3	38.6	31.9
2200				34.7			56.9	49.9	43.1
2300	33.5			48.4	40.2	32.0	69.0	61.7	54.5
2400	47.5	39.1	30.7	62.5	54.0	45.6	81.8	74.1	66.6
2500	62.7	53.4	44.7	77.1	68.2	59.6	95.2	87.2	79.2
2600	79.7	69.3	59.6	92.2	83.1	74.1			92.5
2700	98.6	87.2	76.1		98.3	89.2			
2800			94.8						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-5	-1	0	0	0	0	0	0	0
85	-7	-3	0	0	0	0	0	0	0
80	-9	-5	-1	0	0	0	0	0	0
75	-11	-7	-3	-4	0	0	0	0	0
70	-13	-9	-5	-7	-3	0	0	0	0
65	-15	-11	-7	-10	-6	-2	0	0	0
60	-17	-13	-9	-13	-9	-5	-2	0	0
55	-19	-15	-11	-15	-11	-7	-7	-3	0
50	-21	-17	-13	-18	-14	-10	-11	-7	-3
45	-23	-19	-15	-21	-17	-13	-15	-11	-7
40	-25	-21	-17	-23	-19	-15	-19	-15	-11

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION**Slippery Runway Takeoff****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-0.3	-1.0	-1.7	-5.5	-6.2	-6.9	-10.2	-10.9	-11.6
85	-0.6	-1.3	-2.0	-5.6	-6.3	-7.0	-10.0	-10.7	-11.4
80	-0.9	-1.6	-2.3	-5.6	-6.3	-7.0	-9.6	-10.3	-11.0
75	-1.1	-1.8	-2.5	-5.5	-6.2	-6.9	-9.2	-9.9	-10.6
70	-1.2	-1.9	-2.6	-5.3	-6.0	-6.7	-8.6	-9.3	-10.0
65	-1.1	-1.8	-2.5	-4.9	-5.6	-6.3	-7.9	-8.6	-9.3
60	-1.0	-1.7	-2.4	-4.5	-5.2	-5.9	-7.1	-7.8	-8.5
55	-0.7	-1.4	-2.1	-3.9	-4.6	-5.3	-6.2	-6.9	-7.6
50	-0.3	-1.0	-1.7	-3.2	-3.9	-4.6	-5.2	-5.9	-6.6
45	0.0	-0.6	-1.3	-2.3	-3.0	-3.7	-4.1	-4.8	-5.5
40	0.0	0.0	-0.7	-1.4	-2.1	-2.8	-2.9	-3.6	-4.3

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	69.9	46.2							
1300	85.6	62.1	38.2						
1400		77.8	54.1	46.2					
1500		93.3	69.9	57.0					
1600			85.6	68.5	46.2				
1700				80.6	57.0				
1800				93.5	68.5	46.2	42.8		
1900					80.6	57.0	49.4		
2000					93.5	68.5	56.2		
2100						80.6	63.5	46.1	
2200						93.5	71.2	52.8	
2300							79.4	59.8	42.8
2400							88.3	67.2	49.4
2500								75.2	56.2
2600								83.8	63.5
2700								92.8	71.2
2800									79.4
2900									88.3

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-6	-1	0	-15	-10	-5	-27	-22	-17
85	-7	-2	0	-17	-12	-7	-29	-24	-19
80	-7	-2	0	-18	-13	-8	-31	-26	-21
75	-8	-3	0	-20	-15	-10	-33	-28	-23
70	-9	-4	0	-21	-16	-11	-35	-30	-25
65	-10	-5	0	-23	-18	-13	-37	-32	-27
60	-11	-6	-1	-24	-19	-14	-39	-34	-29
55	-12	-7	-2	-26	-21	-16	-41	-36	-31
50	-14	-9	-4	-27	-22	-17	-42	-37	-32
45	-15	-10	-5	-29	-24	-19	-44	-39	-34
40	-16	-11	-6	-31	-26	-21	-46	-41	-36

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff****No Reverse Thrust****Weight Adjustments (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-2.6	-3.1	-3.6	-9.2	-9.7	-10.2	-14.5	-15.0	-15.5
85	-2.5	-3.0	-3.5	-8.8	-9.3	-9.8	-13.9	-14.4	-14.9
80	-2.5	-3.0	-3.5	-8.4	-8.9	-9.4	-13.2	-13.7	-14.2
75	-2.4	-2.9	-3.4	-8.0	-8.5	-9.0	-12.6	-13.1	-13.6
70	-2.4	-2.9	-3.4	-7.6	-8.1	-8.6	-12.0	-12.5	-13.0
65	-2.4	-2.9	-3.4	-7.2	-7.7	-8.2	-11.3	-11.8	-12.3
60	-2.3	-2.8	-3.3	-6.8	-7.3	-7.8	-10.7	-11.2	-11.7
55	-2.3	-2.8	-3.3	-6.4	-6.9	-7.4	-10.1	-10.6	-11.1
50	-2.3	-2.8	-3.3	-6.0	-6.5	-7.0	-9.5	-10.0	-10.5
45	-2.2	-2.7	-3.2	-5.6	-6.1	-6.6	-8.8	-9.3	-9.8
40	-2.2	-2.7	-3.2	-5.2	-5.7	-6.2	-8.2	-8.7	-9.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	36.8								
1300	63.0								
1400	83.4	50.9							
1500		73.7	36.8						
1600		92.6	63.0						
1700			83.4						
1900				50.5					
2000				72.0	39.0				
2100				91.8	61.5				
2200					82.0	50.5			
2300						72.0			
2400						91.8			
2900							34.2		
3000							49.5		
3100							65.1	30.4	
3200							81.3	45.6	
3300							97.7	61.2	
3400								77.2	41.8
3500								93.6	57.3
3600									73.1
3700									89.5

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-8	0	0	-21	-11	-1	-41	-31	-21
85	-9	0	0	-23	-13	-3	-44	-34	-24
80	-10	0	0	-25	-15	-5	-48	-38	-28
75	-12	-2	0	-28	-18	-8	-51	-41	-31
70	-13	-3	0	-30	-20	-10	-55	-45	-35
65	-15	-5	0	-33	-23	-13	-59	-49	-39
60	-16	-6	0	-36	-26	-16	-62	-52	-42
55	-18	-8	0	-39	-29	-19	-66	-56	-46
50	-21	-11	-1	-43	-33	-23	-71	-61	-51
45	-23	-13	-3	-46	-36	-26	-75	-65	-55
40	-25	-15	-5	-50	-40	-30	-79	-69	-59

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-1.7	-2.0	-2.2	-6.9	-7.2	-7.5	-11.6	-11.9	-12.2
85	-2.0	-2.3	-2.6	-7.0	-7.3	-7.6	-11.4	-11.6	-11.9
80	-2.3	-2.6	-2.9	-7.0	-7.3	-7.6	-11.0	-11.3	-11.6
75	-2.5	-2.8	-3.1	-6.9	-7.2	-7.5	-10.6	-10.8	-11.1
70	-2.6	-2.9	-3.1	-6.7	-7.0	-7.2	-10.0	-10.3	-10.5
65	-2.5	-2.8	-3.1	-6.3	-6.6	-6.9	-9.3	-9.6	-9.9
60	-2.4	-2.7	-2.9	-5.9	-6.1	-6.4	-8.5	-8.8	-9.1
55	-2.1	-2.4	-2.7	-5.3	-5.6	-5.8	-7.6	-7.9	-8.2
50	-1.7	-2.0	-2.3	-4.6	-4.8	-5.1	-6.6	-6.9	-7.2
45	-1.3	-1.5	-1.8	-3.7	-4.0	-4.3	-5.5	-5.8	-6.1
40	-0.7	-0.9	-1.2	-2.8	-3.1	-3.4	-4.3	-4.6	-4.9

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1400	54.1	44.6	35.0						
1600	85.6	76.2	66.8						
1800			98.0						
2000				46.2	37.8				
2200				68.5	59.3	50.4			
2400				93.5	83.1	73.2	36.5	30.2	
2600						98.6	49.4	42.8	36.5
2800							63.5	56.2	49.4
3000							79.4	71.2	63.5
3200							97.4	88.3	79.4

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-5	-3	-1	-17	-15	-13
85	0	0	0	-7	-5	-3	-19	-17	-15
80	0	0	0	-8	-6	-4	-21	-19	-17
75	0	0	0	-10	-8	-6	-23	-21	-19
70	0	0	0	-11	-9	-7	-25	-23	-21
65	0	0	0	-13	-11	-9	-27	-25	-23
60	-1	0	0	-14	-12	-10	-29	-27	-25
55	-2	0	0	-16	-14	-12	-31	-29	-27
50	-4	-2	0	-17	-15	-13	-32	-30	-28
45	-5	-3	-1	-19	-17	-15	-34	-32	-30
40	-6	-4	-2	-21	-19	-17	-36	-34	-32

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes****No Reverse Thrust****Weight Adjustment (1000 KG)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-3.6	-3.8	-4.0	-10.2	-10.4	-10.6	-15.5	-15.7	-15.9
85	-3.5	-3.7	-3.9	-9.8	-10.0	-10.2	-14.9	-15.1	-15.3
80	-3.5	-3.7	-3.9	-9.4	-9.6	-9.8	-14.2	-14.4	-14.6
75	-3.4	-3.6	-3.8	-9.0	-9.2	-9.4	-13.6	-13.8	-14.0
70	-3.4	-3.6	-3.8	-8.6	-8.8	-9.0	-13.0	-13.2	-13.4
65	-3.4	-3.6	-3.8	-8.2	-8.4	-8.6	-12.3	-12.5	-12.7
60	-3.3	-3.5	-3.7	-7.8	-8.0	-8.2	-11.7	-11.9	-12.1
55	-3.3	-3.5	-3.7	-7.4	-7.6	-7.8	-11.1	-11.3	-11.5
50	-3.3	-3.5	-3.7	-7.0	-7.2	-7.4	-10.5	-10.7	-10.9
45	-3.2	-3.4	-3.6	-6.6	-6.8	-7.0	-9.8	-10.0	-10.2
40	-3.2	-3.4	-3.6	-6.2	-6.4	-6.6	-9.2	-9.4	-9.6

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500	36.8								
1600	63.0	48.3	30.9						
1700	83.4	71.7	58.3						
1800		90.8	79.6						
1900			98.1						
2200				50.5	36.7				
2300				72.0	59.3	46.0			
2400				91.8	80.1	67.8			
2500					99.6	87.9			
3400							41.8		
3500							57.3	43.4	
3600							73.1	58.8	44.9
3700							89.5	74.8	60.4
3800								91.1	76.4
3900									92.8

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-1	0	0	-21	-17	-13
85	0	0	0	-3	0	0	-24	-20	-16
80	0	0	0	-5	-1	0	-28	-24	-20
75	0	0	0	-8	-4	0	-31	-27	-23
70	0	0	0	-10	-6	-2	-35	-31	-27
65	0	0	0	-13	-9	-5	-39	-35	-31
60	0	0	0	-16	-12	-8	-42	-38	-34
55	0	0	0	-19	-15	-11	-46	-42	-38
50	-1	0	0	-23	-19	-15	-51	-47	-43
45	-3	0	0	-26	-22	-18	-55	-51	-47
40	-5	-1	0	-30	-26	-22	-59	-55	-51

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	95.7	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	96.8	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	97.6	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.3	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.0	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	99.7	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	99.3	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	98.5	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	97.8	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	97.0	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	96.2	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
5	95.4	97.0	99.0	99.3	99.6	99.8	100.1	100.3	100.6	100.9	101.2	101.0	100.9
0	94.6	96.2	98.2	98.6	98.8	99.1	99.3	99.6	99.8	100.1	100.4	100.3	100.1
-5	93.8	95.4	97.5	97.8	98.1	98.3	98.6	98.8	99.1	99.4	99.6	99.5	99.4
-10	93.0	94.6	96.7	97.0	97.3	97.5	97.8	98.0	98.3	98.6	98.8	98.7	98.6
-15	92.2	93.8	95.9	96.3	96.5	96.8	97.0	97.3	97.5	97.8	98.1	97.9	97.8
-20	91.4	93.0	95.2	95.5	95.7	96.0	96.2	96.5	96.7	97.0	97.3	97.1	97.0
-25	90.5	92.2	94.4	94.7	94.9	95.2	95.4	95.7	95.9	96.2	96.5	96.3	96.2
-30	89.7	91.3	93.6	93.9	94.1	94.4	94.6	94.9	95.1	95.4	95.6	95.5	95.4
-35	88.8	90.5	92.8	93.1	93.3	93.6	93.8	94.0	94.3	94.6	94.8	94.7	94.6
-40	88.0	89.6	91.9	92.3	92.5	92.7	93.0	93.2	93.5	93.7	94.0	93.9	93.7
-45	87.1	88.8	91.1	91.4	91.7	91.9	92.1	92.4	92.6	92.9	93.1	93.0	92.9
-50	86.2	87.9	90.3	90.6	90.8	91.1	91.3	91.5	91.8	92.0	92.3	92.2	92.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Takeoff %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.2					
35	99.1	99.0	98.8			
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5	100.9	101.8	102.0	101.9	101.8	101.8
0	100.1	101.0	101.9	102.1	102.0	102.0
-5	99.4	100.3	101.1	101.5	101.8	101.9
-10	98.6	99.5	100.3	100.7	101.0	101.1
-15	97.8	98.7	99.5	99.9	100.2	100.3
-20	97.0	97.9	98.7	99.1	99.3	99.5
-25	96.2	97.1	97.9	98.2	98.5	98.6
-30	95.4	96.3	97.1	97.4	97.7	97.8
-35	94.6	95.4	96.3	96.6	96.8	97.0
-40	93.7	94.6	95.4	95.7	96.0	96.1
-45	92.9	93.7	94.5	94.9	95.1	95.3
-50	92.0	92.9	93.7	94.0	94.2	94.4

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust

Maximum Assumed Temperature (Table 1 of 3)

Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	70	69	69	67	65	63	61	59	57	55	53	
30	67	65	66	65	65	63	61	59	57	55	53	51
25	67	65	65	63	64	63	61	59	57	55	53	51
20	67	65	65	63	64	63	61	59	57	55	53	51
15	67	65	65	63	64	63	61	59	57	55	53	51
10 & BELOW	67	65	65	63	64	63	61	59	57	55	53	51

Assumed Temperature Reduced Thrust**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	94.1	94.4	95.2	95.4	96.3	97.2	97.7	97.9	98.0	98.0	98.0	98.0
70	94.8	95.2	95.4	95.0	95.6	96.5	97.1	97.3	97.3	97.3	97.3	97.3
65	95.6	96.0	96.1	95.9	96.2	96.4	96.4	96.6	96.6	96.6	96.6	96.6
60	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.7													
100	15.0	10.3												
90	14.0	11.5												
80	12.8	11.7	7.2											
70	10.7	10.7	8.3	7.2	5.6									
60	9.2	9.4	8.6	8.4	6.8	5.7	4.1							
50	7.8	7.5	7.5	7.2	7.0	6.9	5.3	4.2	2.7					
40		6.0	6.1	6.1	5.9	5.8	5.8	5.4	4.2	4.0	4.6			
30		4.6	4.4	4.5	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	4.0	
20			2.9	2.9	2.9	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.7
10			1.5	1.5	1.5	1.4	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes

Maximum Assumed Temperature (Table 1 of 3)

Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	54	54	52	50	48	47
5	54	52	50	50	48	47
0 & BELOW	54	52	49	50	48	47

Maximum Takeoff %N1 (Table 2 of 3)

Based on engine bleed for packs on and engine anti-ice off

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.9					
55	95.3	95.5	95.6	97.5		
50	96.3	96.0	95.4	96.8	98.5	99.4
45	97.3	97.0	96.6	97.4	98.4	99.0
40	98.2	98.0	97.7	98.3	99.0	99.4
35	99.1	99.0	98.8	99.1	99.5	99.8
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5		101.8	102.0	101.9	101.8	101.8
0				102.1	102.0	102.0
-5				101.5	101.8	101.9
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - High Altitudes
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.5										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.7								
70	11.3	11.2	10.7								
60	10.0	9.2	9.4	7.5							
50		7.9	7.8	7.5	6.0	5.9	5.8				
40		6.5	6.0	6.2	6.0	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (26K Derate)

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	174	175	181	165	168	173									
85	168	170	177	160	163	169									
80	163	165	172	155	157	165	147	149	156	145	147	154	142	142	149
75	157	159	167	150	152	160	142	143	151	140	141	149	137	137	145
70	151	153	162	144	146	155	136	138	147	134	136	145	131	132	141
65	145	147	157	138	140	150	131	132	142	129	130	140	126	127	136
60	139	140	152	132	133	145	124	126	137	123	124	135	120	121	132
55	131	132	146	125	126	139	118	119	132	116	118	130	114	114	127
50	124	125	139	118	119	133	111	112	126	110	111	125	107	108	121
45	116	117	133	111	111	127	105	105	120	103	103	119	100	101	116
40	108	108	126	103	103	121	97	97	114	96	96	113	92	93	110

Check V1(MCG) .

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	5						4	5						-2	-2								
60	140	4	4	5	6				3	4	5	6				-2	-2	-2	-3						
50	122	2	3	4	5	6	7	8	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-4			
40	104	1	1	2	3	4	5	7	1	1	2	3	4	6	7	0	-1	-1	-1	-2	-2	-3			
30	86	0	0	1	2	3	5	6	0	0	1	2	4	5	6	0	0	-1	-1	-1	-2	-2			
20	68	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			
-60	-76	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2			

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)								
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40	
90	-4	-2	0	2	2		-2	-1	-1	0	0	0	1	1	
80	-3	-2	0	1	2		-2	-1	-1	0	0	1	1	1	
70	-2	-1	0	1	1		-2	-1	0	0	0	1	1	1	
60	-1	0	0	1	1		-2	-1	0	0	0	1	1	1	
50	-1	0	0	0	0		-1	-1	0	0	0	0	0	0	
40	0	0	0	0	0		-1	-1	0	0	0	0	0	0	

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)							
		-2000	0	2000	4000	6000	8000	10000	
70	158	93	91						
60	140	93	91	89	88				
50	122	95	93	90	88	86	83	81	
40	104	99	97	94	90	87	83	81	
30	86	102	101	98	94	90	86	83	
20	68	102	102	99	95	92	88	85	
-60	-76	104	103	100	96	93	90	87	

Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	157	157	161												
65	151	151	156	144	144	149									
60	144	144	150	137	138	143	129	130	136	128	128	134			
55	136	137	144	130	131	138	123	123	130	121	122	128	118	119	125
50	129	129	138	123	123	132	116	117	124	115	115	123	112	112	119
45	121	122	131	115	116	125	109	109	118	107	108	117	105	105	114
40	113	113	124	107	108	118	101	102	112	100	101	111	97	98	107

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	2	3	3	4	4	4	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
30	86	1	2	2	3	3	3	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	1	2	2	3	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
70	-3	-1	0	0	0		-1	-1	0	0	0	0	0	0
65	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
60	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
55	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
50	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
45	-1	0	0	0	0		-1	-1	0	0	0	0	0	0
40	-1	0	0	0	0		-1	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	83	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Takeoff Speeds - Wet Runway (26K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS1			FLAPS5			FLAPS10			FLAPS15			FLAPS25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
90	169	175	181	160	168	173									
85	163	170	177	155	163	169									
80	157	165	172	149	157	165	140	149	156	138	147	154	134	142	149
75	150	159	167	143	152	160	135	143	151	133	141	149	129	137	145
70	144	153	162	136	146	155	129	138	147	127	136	145	123	132	141
65	137	147	157	130	140	150	123	132	142	121	130	140	118	127	136
60	130	140	152	123	133	145	117	126	137	115	124	135	112	121	132
55	122	132	146	116	126	139	110	119	132	108	118	130	105	114	127
50	115	125	139	109	119	133	103	112	126	101	111	125	98	108	121
45	107	117	133	101	111	127	95	105	120	94	103	119	91	101	116
40	98	108	126	93	103	121	88	97	114	86	96	113	83	93	110

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						4	5						-2	-2								
60	140	5	6	7	9				3	4	5	6				-2	-2	-2	-3						
50	122	3	4	5	6	7	9	12	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-4			
40	104	1	2	3	4	5	7	9	1	1	2	3	5	6	7	0	-1	-1	-1	-2	-2	-3			
30	86	0	0	1	3	4	5	7	0	0	1	2	4	5	6	0	0	-1	-1	-1	-2	-2			
20	68	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			
-60	-76	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2			

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE(%)						WIND(KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
90	-5	-3	0	3	6		-4	-2	-1	0	1	1	2	3
80	-4	-2	0	3	5		-4	-2	-1	0	1	1	2	3
70	-4	-2	0	2	4		-4	-2	-1	0	1	2	2	3
60	-3	-1	0	2	3		-4	-3	-1	0	1	2	2	3
50	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4
40	-2	-1	0	1	1		-5	-4	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	93	91					
60	140	93	91	89	88			
50	122	95	93	90	88	86	83	81
40	104	99	97	94	90	87	83	81
30	86	102	101	98	94	90	86	83
20	68	102	102	99	95	92	88	85
-60	-76	104	103	100	96	93	90	87

Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	152	157	161												
65	145	151	156	137	144	149									
60	137	144	150	130	138	143	123	130	136	121	128	134			
55	129	137	144	122	131	138	116	123	130	114	122	128	111	119	125
50	121	129	138	115	123	132	109	117	124	107	115	123	104	112	119
45	113	122	131	107	116	125	101	109	118	100	108	117	97	105	114
40	104	113	124	99	108	118	93	102	112	92	101	111	89	98	107

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	3	4	5	5	6	6	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
30	86	1	2	3	3	4	5	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	2	2	3	3	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	2	2	3	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
70	-5	-3	0	3	6		-2	-2	-1	0	0	1	2	2
65	-5	-2	0	3	5		-3	-2	-1	0	1	1	2	2
60	-4	-2	0	2	5		-3	-2	-1	0	1	1	2	2
55	-3	-2	0	2	4		-3	-2	-1	0	1	1	2	2
50	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	2
45	-3	-1	0	1	3		-4	-2	-1	0	1	1	2	3
40	-2	-1	0	1	2		-4	-3	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	83	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Maximum Allowable Clearway (26K Derate)

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	200
1600	220
2000	250
2400	290
2800	310
3200	350

Maximum Allowable Clearway - High Altitudes (26K Derate)

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1600	220
2000	250
2400	290
2800	320
3200	360
3600	390
4000	420
4400	440

Clearway and Stopway V1 Adjustments (26K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
300	-6	-5	-4	-4	-3					
200	-5	-4	-3	-3	-2					
100	-3	-2	-2	-2	-1					
0	0	0	0	0	0	0	0	0	0	0
-100	0	1	1	2	2	2	2	2	2	1
-200	0	1	1	2	2	6	4	3	2	1
-300	0	1	1	2	2	8	5	4	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes (26K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
300	-5	-3	-3	-3	-3					
200	-5	-3	-2	-2	-2					
100	-3	-1	-1	-1	-1					
0	0	0	0	0	0	0	0	0	0	0
-100	0	0	0	0	0	2	1	1	1	1
-200	0	0	0	0	0	4	3	2	2	2
-300	0	0	0	0	0	7	4	3	3	3

Stab Trim Setting (26K Derate)**Flaps 1 and 5**

WEIGHT (1000 KG)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
85	8 1/2	8 1/4	8 1/4	6 1/2	5 3/4	5 1/2	5 1/4	5	4 3/4	4 1/2	4
80	8 1/2	8	8	6 1/4	5 1/2	5 1/2	5	4 3/4	4 1/2	4 1/4	4
70	7 3/4	7 1/2	7 1/2	5 3/4	5	5	4 3/4	4 1/4	4	3 3/4	3 1/2
60	7 1/4	7	6 3/4	5 1/4	4 1/2	4 1/2	4 1/4	4	3 1/2	3 1/4	3
50	6 1/2	6 1/4	6	4 3/4	4	4	3 3/4	3 1/4	3	3	2 3/4
40	6	5 3/4	5 3/4	4 1/4	3 3/4	3 1/2	3 1/4	3	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
85	8 1/2	8 1/4	8	5 3/4	4 3/4	4 1/2	4 1/4	3 3/4	3 1/2	3	2 3/4
80	8 1/2	8 1/4	8	5 1/2	4 1/2	4 1/2	4	3 3/4	3 1/4	3	2 3/4
70	8	7 1/2	7 1/4	5	4	4	3 1/2	3 1/4	3	2 3/4	2 3/4
60	7 1/4	6 3/4	6 3/4	4 1/2	3 3/4	3 1/2	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4
50	6 1/2	6 1/4	6	4	3	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
40	6 1/4	5 3/4	5 1/2	3 3/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-10.3	-12.3	-14.3	-12.8	-14.8	-16.8	-18.3	-21.3	-24.3
85	-9.7	-11.7	-13.7	-11.9	-13.9	-15.9	-16.4	-19.4	-22.4
80	-9.1	-11.1	-13.1	-10.8	-12.8	-14.8	-14.6	-17.6	-20.6
75	-8.3	-10.3	-12.3	-9.7	-11.7	-13.7	-12.8	-15.8	-18.8
70	-7.4	-9.4	-11.4	-8.6	-10.6	-12.6	-11.0	-14.0	-17.0
65	-6.5	-8.5	-10.5	-7.4	-9.4	-11.4	-9.3	-12.3	-15.3
60	-5.5	-7.5	-9.5	-6.2	-8.2	-10.2	-7.7	-10.7	-13.7
55	-4.5	-6.5	-8.5	-5.0	-7.0	-9.0	-6.2	-9.2	-12.2
50	-3.6	-5.6	-7.6	-4.0	-6.0	-8.0	-4.8	-7.8	-10.8
45	-2.7	-4.7	-6.7	-3.0	-5.0	-7.0	-3.5	-6.5	-9.5
40	-1.9	-3.9	-5.9	-2.1	-4.1	-6.1	-2.4	-5.4	-8.4

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200				30.7			36.4		
1400	46.0	30.6		49.1	33.7		54.4	39.2	
1600	65.9	49.1	33.6	69.1	52.2	36.6	73.8	57.5	42.0
1800	88.1	69.4	52.2	90.9	72.5	55.3	91.2	76.8	60.7
2000		91.8	72.9		94.5	76.0		93.9	79.8
2200			95.5			98.2			96.6

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -25 m/+25 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-15	-10	-5	-6	-1	0	0	0	0
85	-16	-11	-6	-9	-4	0	0	0	0
80	-18	-13	-8	-11	-6	-1	0	0	0
75	-19	-14	-9	-14	-9	-4	-1	0	0
70	-21	-16	-11	-16	-11	-6	-5	0	0
65	-22	-17	-12	-18	-13	-8	-8	-3	0
60	-23	-18	-13	-20	-15	-10	-12	-7	-2
55	-24	-19	-14	-22	-17	-12	-15	-10	-5
50	-25	-20	-15	-23	-18	-13	-18	-13	-8
45	-26	-21	-16	-25	-20	-15	-21	-16	-11
40	-27	-22	-17	-26	-21	-16	-23	-18	-13

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-13.7	-16.2	-18.7	-16.3	-18.8	-21.3	-21.9	-25.9	-29.9
85	-13.0	-15.5	-18.0	-15.2	-17.7	-20.2	-19.7	-23.7	-27.7
80	-12.1	-14.6	-17.1	-13.9	-16.4	-18.9	-17.6	-21.6	-25.6
75	-11.2	-13.7	-16.2	-12.6	-15.1	-17.6	-15.6	-19.6	-23.6
70	-10.2	-12.7	-15.2	-11.3	-13.8	-16.3	-13.7	-17.7	-21.7
65	-9.1	-11.6	-14.1	-10.0	-12.5	-15.0	-11.9	-15.9	-19.9
60	-7.9	-10.4	-12.9	-8.6	-11.1	-13.6	-10.2	-14.2	-18.2
55	-6.8	-9.3	-11.8	-7.4	-9.9	-12.4	-8.5	-12.5	-16.5
50	-5.8	-8.3	-10.8	-6.2	-8.7	-11.2	-7.0	-11.0	-15.0
45	-4.8	-7.3	-9.8	-5.0	-7.5	-10.0	-5.5	-9.5	-13.5
40	-3.9	-6.4	-8.9	-4.1	-6.6	-9.1	-4.0	-8.0	-12.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1800				30.5			52.0	32.9	
2000	44.1			58.7	34.9		76.7	56.0	36.4
2200	78.0	49.0		88.2	63.7	39.3	97.8	80.4	60.1
2400		83.9	54.2		92.7	68.7			83.9
2600			89.7			97.1			

1. Enter Weight Adjustment table with slush/standing water depth and dry 26K Derate field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-23	-13	-3	-11	-1	0	0	0	0
85	-25	-15	-5	-15	-5	0	0	0	0
80	-27	-17	-7	-18	-8	0	0	0	0
75	-29	-19	-9	-22	-12	-2	-3	0	0
70	-31	-21	-11	-25	-15	-5	-8	0	0
65	-34	-24	-14	-28	-18	-8	-14	-4	0
60	-36	-26	-16	-31	-21	-11	-19	-9	0
55	-38	-28	-18	-34	-24	-14	-24	-14	-4
50	-39	-29	-19	-37	-27	-17	-29	-19	-9
45	-41	-31	-21	-39	-29	-19	-34	-24	-14
40	-43	-33	-23	-42	-32	-22	-38	-28	-18

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes (26K Derate)****Maximum Reverse Thrust****Weight Adjustments (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-14.3	-15.1	-15.9	-16.8	-17.6	-18.4	-24.3	-25.5	-26.7
85	-13.7	-14.5	-15.3	-15.9	-16.7	-17.5	-22.4	-23.6	-24.8
80	-13.1	-13.9	-14.7	-14.8	-15.6	-16.4	-20.6	-21.8	-23.0
75	-12.3	-13.1	-13.9	-13.7	-14.5	-15.3	-18.8	-20.0	-21.2
70	-11.4	-12.2	-13.0	-12.6	-13.4	-14.2	-17.0	-18.2	-19.4
65	-10.5	-11.3	-12.1	-11.4	-12.2	-13.0	-15.3	-16.5	-17.7
60	-9.5	-10.3	-11.1	-10.2	-11.0	-11.8	-13.7	-14.9	-16.1
55	-8.5	-9.3	-10.1	-9.0	-9.8	-10.6	-12.2	-13.4	-14.6
50	-7.6	-8.4	-9.2	-8.0	-8.8	-9.6	-10.8	-12.0	-13.2
45	-6.7	-7.5	-8.3	-7.0	-7.8	-8.6	-9.5	-10.7	-11.9
40	-5.9	-6.7	-7.5	-6.1	-6.9	-7.7	-8.4	-9.6	-10.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500							33.4		
1600	33.6			36.6	30.5		42.0	36.2	30.5
1700	42.7	36.6	30.5	45.8	39.6	33.5	51.1	44.9	39.1
1800	52.2	45.8	39.6	55.3	48.9	42.6	60.7	54.2	47.9
1900	62.3	55.5	48.9	65.4	58.6	52.0	70.5	64.0	57.4
2000	72.9	65.7	58.8	76.0	68.9	61.9	79.8	73.6	67.2
2100	84.1	76.5	69.2	87.0	79.6	72.3	88.3	82.7	76.7
2200	95.5	87.8	80.2	98.2	90.7	83.2	96.6	91.0	85.5
2300		99.3	91.6			94.4		99.4	93.8

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -25 m/+25 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm(0.25 INCHES)			13 mm(0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-5	-3	-1	0	0	0	0	0	0
85	-6	-4	-2	0	0	0	0	0	0
80	-8	-6	-4	-1	0	0	0	0	0
75	-9	-7	-5	-4	-2	0	0	0	0
70	-11	-9	-7	-6	-4	-2	0	0	0
65	-12	-10	-8	-8	-6	-4	0	0	0
60	-13	-11	-9	-10	-8	-6	-2	0	0
55	-14	-12	-10	-12	-10	-8	-5	-3	-1
50	-15	-13	-11	-13	-11	-9	-8	-6	-4
45	-16	-14	-12	-15	-13	-11	-11	-9	-7
40	-17	-15	-13	-16	-14	-12	-13	-11	-9

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes (26K Derate)****No Reverse Thrust****Weight Adjustments (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-18.7	-19.7	-20.7	-21.3	-22.3	-23.3	-29.9	-31.5	-33.1
85	-18.0	-19.0	-20.0	-20.2	-21.2	-22.2	-27.7	-29.3	-30.9
80	-17.1	-18.1	-19.1	-18.9	-19.9	-20.9	-25.6	-27.2	-28.8
75	-16.2	-17.2	-18.2	-17.6	-18.6	-19.6	-23.6	-25.2	-26.8
70	-15.2	-16.2	-17.2	-16.3	-17.3	-18.3	-21.7	-23.3	-24.9
65	-14.1	-15.1	-16.1	-15.0	-16.0	-17.0	-19.9	-21.5	-23.1
60	-12.9	-13.9	-14.9	-13.6	-14.6	-15.6	-18.2	-19.8	-21.4
55	-11.8	-12.8	-13.8	-12.4	-13.4	-14.4	-16.5	-18.1	-19.7
50	-10.8	-11.8	-12.8	-11.2	-12.2	-13.2	-15.0	-16.6	-18.2
45	-9.8	-10.8	-11.8	-10.0	-11.0	-12.0	-13.5	-15.1	-16.7
40	-8.9	-9.9	-10.9	-9.1	-10.1	-11.1	-12.0	-13.6	-15.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2000							36.4		
2100							47.7	40.1	32.7
2200				39.3	30.2		60.1	51.7	43.8
2300	39.0			53.4	43.8	34.7	72.6	64.3	55.8
2400	54.2	43.8	34.1	68.7	58.4	48.4	83.9	76.5	68.4
2500	71.7	59.8	48.8	83.4	73.7	63.5	94.2	87.4	80.3
2600	89.7	77.7	65.5	97.1	87.9	78.5		97.6	90.8
2700		95.6	83.7		92.4				

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-3	0	0	0	0	0	0	0	0
85	-5	-1	0	0	0	0	0	0	0
80	-7	-3	0	0	0	0	0	0	0
75	-9	-5	-1	-2	0	0	0	0	0
70	-11	-7	-3	-5	-1	0	0	0	0
65	-14	-10	-6	-8	-4	0	0	0	0
60	-16	-12	-8	-11	-7	-3	0	0	0
55	-18	-14	-10	-14	-10	-6	-4	0	0
50	-19	-15	-11	-17	-13	-9	-9	-5	-1
45	-21	-17	-13	-19	-15	-11	-14	-10	-6
40	-23	-19	-15	-22	-18	-14	-18	-14	-10

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-0.2	-0.9	-1.6	-5.4	-6.1	-6.8	-10.4	-11.1	-11.8
85	-0.6	-1.3	-2.0	-5.5	-6.2	-6.9	-10.1	-10.8	-11.5
80	-0.9	-1.6	-2.3	-5.6	-6.3	-7.0	-9.7	-10.4	-11.1
75	-1.1	-1.8	-2.5	-5.5	-6.2	-6.9	-9.3	-10.0	-10.7
70	-1.2	-1.9	-2.6	-5.3	-6.0	-6.7	-8.7	-9.4	-10.1
65	-1.2	-1.9	-2.6	-5.0	-5.7	-6.4	-8.0	-8.7	-9.4
60	-1.1	-1.8	-2.5	-4.5	-5.2	-5.9	-7.2	-7.9	-8.6
55	-0.8	-1.5	-2.2	-3.9	-4.6	-5.3	-6.4	-7.1	-7.8
50	-0.4	-1.1	-1.8	-3.3	-4.0	-4.7	-5.4	-6.1	-6.8
45	0.0	-0.6	-1.3	-2.4	-3.1	-3.8	-4.3	-5.0	-5.7
40	0.0	0.0	-0.7	-1.5	-2.2	-2.9	-3.0	-3.7	-4.4

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1000	41.6								
1200	73.5	49.4							
1400		80.7	57.0	49.4					
1600			87.8	72.4	51.2	31.6	32.2		
1800				97.9	74.5	53.1	45.2		
2000						76.6	59.1	41.3	
2200							74.9	54.9	37.5
2400							92.9	70.0	50.7
2600								87.4	65.3
2800									82.0

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-5	0	0	-14	-9	-4	-25	-20	-15
85	-6	-1	0	-16	-11	-6	-27	-22	-17
80	-7	-2	0	-17	-12	-7	-29	-24	-19
75	-8	-3	0	-19	-14	-9	-32	-27	-22
70	-9	-4	0	-20	-15	-10	-34	-29	-24
65	-10	-5	0	-22	-17	-12	-36	-31	-26
60	-11	-6	-1	-23	-18	-13	-38	-33	-28
55	-12	-7	-2	-25	-20	-15	-39	-34	-29
50	-13	-8	-3	-26	-21	-16	-41	-36	-31
45	-15	-10	-5	-28	-23	-18	-43	-38	-33
40	-16	-11	-6	-30	-25	-20	-45	-40	-35

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (26K Derate)****No Reverse Thrust****Weight Adjustments (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-1.5	-2.3	-3.1	-8.2	-8.9	-9.7	-13.9	-14.7	-15.4
85	-2.0	-2.7	-3.5	-8.3	-9.0	-9.8	-13.6	-14.4	-15.2
80	-2.3	-3.1	-3.9	-8.3	-9.1	-9.8	-13.3	-14.1	-14.8
75	-2.6	-3.4	-4.1	-8.2	-8.9	-9.7	-12.8	-13.5	-14.3
70	-2.7	-3.5	-4.3	-7.9	-8.7	-9.5	-12.0	-12.8	-13.6
65	-2.7	-3.5	-4.3	-7.5	-8.3	-9.1	-11.2	-11.9	-12.7
60	-2.6	-3.4	-4.2	-7.0	-7.8	-8.5	-10.1	-10.9	-11.6
55	-2.4	-3.1	-3.9	-6.3	-7.1	-7.9	-8.8	-9.6	-10.4
50	-2.0	-2.8	-3.5	-5.5	-6.3	-7.1	-7.4	-8.2	-9.0
45	-1.5	-2.3	-3.0	-4.6	-5.4	-6.1	-5.8	-6.6	-7.4
40	-0.9	-1.7	-2.4	-3.5	-4.3	-5.1	-4.1	-4.8	-5.6

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	45.9								
1400	87.2	58.2							
1600		94.9	68.4						
1800				38.7					
2000				82.2	42.8				
2200					85.5	46.9			
2400						88.7			
2800							31.2		
3000							62.6		
3200							95.5	50.7	
3400								83.2	39.1
3600									70.8

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-7	-2	0	-20	-15	-10	-39	-34	-29
85	-8	-3	0	-22	-17	-12	-42	-37	-32
80	-10	-5	0	-24	-19	-14	-45	-40	-35
75	-11	-6	-1	-26	-21	-16	-49	-44	-39
70	-12	-7	-2	-29	-24	-19	-52	-47	-42
65	-14	-9	-4	-32	-27	-22	-56	-51	-46
60	-16	-11	-6	-35	-30	-25	-60	-55	-50
55	-18	-13	-8	-38	-33	-28	-64	-59	-54
50	-20	-15	-10	-41	-36	-31	-68	-63	-58
45	-22	-17	-12	-44	-39	-34	-73	-68	-63
40	-24	-19	-14	-48	-43	-38	-77	-72	-67

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes (26K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-1.6	-1.9	-2.2	-6.8	-7.1	-7.4	-11.8	-12.0	-12.3
85	-2.0	-2.3	-2.6	-6.9	-7.2	-7.5	-11.5	-11.7	-12.0
80	-2.3	-2.6	-2.9	-7.0	-7.2	-7.5	-11.1	-11.4	-11.7
75	-2.5	-2.8	-3.1	-6.9	-7.2	-7.5	-10.7	-10.9	-11.2
70	-2.6	-2.9	-3.2	-6.7	-7.0	-7.3	-10.1	-10.4	-10.7
65	-2.6	-2.9	-3.2	-6.4	-6.6	-6.9	-9.4	-9.7	-10.0
60	-2.5	-2.7	-3.0	-5.9	-6.2	-6.5	-8.6	-8.9	-9.2
55	-2.2	-2.5	-2.8	-5.3	-5.6	-5.9	-7.8	-8.0	-8.3
50	-1.8	-2.1	-2.4	-4.7	-4.9	-5.2	-6.8	-7.0	-7.3
45	-1.3	-1.6	-1.9	-3.8	-4.1	-4.4	-5.7	-5.9	-6.2
40	-0.7	-1.0	-1.3	-2.9	-3.2	-3.5	-4.4	-4.7	-5.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1400	57.0	47.2	37.2						
1600	87.8	78.7	69.3	31.6					
1800			99.5	53.1	45.1	37.3			
2000				76.6	67.7	59.2			
2200					92.8	83.4	37.5	30.8	
2400							50.7	43.8	37.1
2600							65.3	57.6	50.2
2800							82.0	73.1	64.8
3000								90.9	81.3
3200									99.9

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-4	-2	0	-15	-13	-11
85	0	0	0	-6	-4	-2	-17	-15	-13
80	0	0	0	-7	-5	-3	-19	-17	-15
75	0	0	0	-9	-7	-5	-22	-20	-18
70	0	0	0	-10	-8	-6	-24	-22	-20
65	0	0	0	-12	-10	-8	-26	-24	-22
60	-1	0	0	-13	-11	-9	-28	-26	-24
55	-2	0	0	-15	-13	-11	-29	-27	-25
50	-3	-1	0	-16	-14	-12	-31	-29	-27
45	-5	-3	-1	-18	-16	-14	-33	-31	-29
40	-6	-4	-2	-20	-18	-16	-35	-33	-31

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).
v V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff - High Altitudes (26K Derate)****No Reverse Thrust****Weight Adjustment (1000 KG)**

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-3.1	-3.4	-3.7	-9.7	-10.0	-10.3	-15.4	-15.8	-16.1
85	-3.5	-3.8	-4.1	-9.8	-10.1	-10.4	-15.2	-15.5	-15.8
80	-3.9	-4.2	-4.5	-9.8	-10.1	-10.5	-14.8	-15.1	-15.5
75	-4.1	-4.5	-4.8	-9.7	-10.0	-10.3	-14.3	-14.6	-14.9
70	-4.3	-4.6	-4.9	-9.5	-9.8	-10.1	-13.6	-13.9	-14.2
65	-4.3	-4.6	-4.9	-9.1	-9.4	-9.7	-12.7	-13.0	-13.3
60	-4.2	-4.5	-4.8	-8.5	-8.9	-9.2	-11.6	-11.9	-12.3
55	-3.9	-4.2	-4.5	-7.9	-8.2	-8.5	-10.4	-10.7	-11.0
50	-3.5	-3.9	-4.2	-7.1	-7.4	-7.7	-9.0	-9.3	-9.6
45	-3.0	-3.4	-3.7	-6.1	-6.5	-6.8	-7.4	-7.7	-8.0
40	-2.4	-2.7	-3.0	-5.1	-5.4	-5.7	-5.6	-5.9	-6.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500	44.4								
1600	68.4	54.9	37.6						
1700	86.4	75.9	63.9						
1800		92.7	82.8						
1900			99.0						
2200				46.9					
2300				68.9	53.0	35.8			
2400				88.7	74.4	59.0			
2500					93.8	79.7			
2600						98.9			
3400							39.1		
3500							54.8	37.6	
3600							70.8	53.2	36.1
3700							87.4	69.2	51.7
3800								85.8	67.6
3900									84.1

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -50 m/+50 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-10	-8	-6	-29	-27	-25
85	0	0	0	-12	-10	-8	-32	-30	-28
80	0	0	0	-14	-12	-10	-35	-33	-31
75	-1	0	0	-16	-14	-12	-39	-37	-35
70	-2	0	0	-19	-17	-15	-42	-40	-38
65	-4	-2	0	-22	-20	-18	-46	-44	-42
60	-6	-4	-2	-25	-23	-21	-50	-48	-46
55	-8	-6	-4	-28	-26	-24	-54	-52	-50
50	-10	-8	-6	-31	-29	-27	-58	-56	-54
45	-12	-10	-8	-34	-32	-30	-63	-61	-59
40	-14	-12	-10	-38	-36	-34	-67	-65	-63

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 - (26K Derate)**Based on engine bleeds for packs on, engine and wing anti-ice on or off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	94.8	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	95.4	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.0	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	96.8	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	97.4	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.0	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	97.6	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	96.8	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	96.0	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	95.2	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	94.5	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
5	93.7	95.0	96.4	97.0	97.6	98.0	98.3	98.6	99.0	99.4	99.8	100.3	100.7
0	92.9	94.2	95.6	96.3	96.9	97.2	97.5	97.9	98.2	98.6	99.0	99.5	100.0
-5	92.0	93.4	94.8	95.5	96.1	96.4	96.7	97.1	97.5	97.9	98.3	98.7	99.2
-10	91.2	92.6	94.0	94.7	95.3	95.6	96.0	96.3	96.7	97.1	97.5	98.0	98.4
-15	90.4	91.7	93.2	93.9	94.5	94.8	95.2	95.6	95.9	96.3	96.7	97.2	97.6
-20	89.6	90.9	92.4	93.0	93.7	94.0	94.4	94.8	95.2	95.6	95.9	96.4	96.8
-25	88.7	90.1	91.6	92.2	92.9	93.2	93.6	94.0	94.4	94.8	95.2	95.6	96.0
-30	87.9	89.2	90.7	91.4	92.0	92.4	92.8	93.2	93.6	94.0	94.3	94.8	95.2
-35	87.0	88.4	89.9	90.5	91.2	91.6	91.9	92.4	92.8	93.1	93.5	94.0	94.4
-40	86.1	87.5	89.0	89.7	90.3	90.7	91.1	91.5	91.9	92.3	92.7	93.1	93.6
-45	85.3	86.6	88.2	88.8	89.5	89.9	90.3	90.7	91.1	91.5	91.9	92.3	92.7
-50	84.4	85.7	87.3	87.9	88.6	89.0	89.4	89.9	90.3	90.6	91.0	91.5	91.9

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (26K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.1					
35	99.0	98.8	98.9			
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5	100.7	101.6	101.7	101.7	101.6	101.6
0	100.0	100.8	101.7	101.9	101.8	101.8
-5	99.2	100.0	100.9	101.2	101.5	101.6
-10	98.4	99.3	100.1	100.4	100.7	100.8
-15	97.6	98.5	99.3	99.6	99.9	100.0
-20	96.8	97.7	98.5	98.8	99.1	99.2
-25	96.0	96.9	97.7	98.0	98.3	98.4
-30	95.2	96.0	96.9	97.2	97.4	97.6
-35	94.4	95.2	96.0	96.4	96.6	96.7
-40	93.6	94.4	95.2	95.5	95.8	95.9
-45	92.7	93.5	94.3	94.6	94.9	95.0
-50	91.9	92.7	93.5	93.8	94.0	94.1

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	71	71	69	67	65	63	61	59	57	55	53	
30	69	67	67	67	65	63	61	59	57	55	53	51
25	69	67	66	64	65	63	61	59	57	55	53	51
20	69	67	66	64	64	63	61	59	57	55	53	51
15	69	67	66	64	64	63	61	59	57	55	53	51
10 & BELOW	69	67	66	64	64	63	61	59	57	55	53	51

Assumed Temperature Reduced Thrust - (26K Derate)**Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	93.4	93.7	94.2	94.7	95.4	96.1	96.9	97.3	97.6	97.8	97.8	97.7
70	94.1	94.4	94.4	94.4	94.7	95.4	96.2	96.6	96.9	97.1	97.1	97.1
65	94.8	95.1	95.2	95.2	95.3	95.4	95.5	96.0	96.2	96.5	96.4	96.4
60	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.9													
100	14.9	10.9												
90	14.0	11.7												
80	12.9	11.6	7.8											
70	11.2	10.7	8.6	7.8	6.3									
60	9.2	9.5	8.5	8.4	7.1	6.3	4.9							
50	7.8	7.8	7.5	7.1	6.9	7.0	5.6	4.9	3.4					
40		6.0	6.2	6.1	5.9	5.8	5.7	5.6	4.7	4.4	5.3			
30		4.6	4.6	4.6	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	3.9	
20			2.9	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.6
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	53	52	52	50	48	47
5	53	51	52	50	48	47
0 & BELOW	53	51	52	50	48	47

Maximum Takeoff %N1 (Table 2 of 3)
Based on engine bleed for packs on and engine anti-ice off

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.7					
55	95.0	95.3	96.4	97.9		
50	96.1	95.7	96.1	97.2	98.6	99.3
45	97.1	96.8	97.1	97.7	98.4	98.9
40	98.1	97.8	98.0	98.5	99.0	99.3
35	99.0	98.8	98.9	99.1	99.4	99.6
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5		101.6	101.7	101.7	101.6	101.6
0				101.9	101.8	101.8
-5				101.2	101.5	101.6
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.4										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.6								
70	11.3	11.2	10.6								
60	10.0	9.2	9.4	7.5							
50		7.9	7.9	7.5	6.1	5.9	5.8				
40		6.5	6.0	6.2	6.1	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (24K Derate)
V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
85	171	172	176												
80	165	166	171	157	158	164	149	150	155	147	147	153			
75	159	160	167	152	153	159	144	145	151	142	142	149	138	138	144
70	153	154	162	146	147	155	138	139	146	136	137	144	133	133	140
65	147	148	157	140	141	150	132	133	142	131	132	140	128	128	136
60	140	141	151	133	134	144	126	127	137	124	125	135	122	122	131
55	133	134	145	126	127	139	120	121	131	118	119	129	115	116	126
50	126	126	139	120	120	133	113	114	126	111	112	124	109	109	120
45	118	118	132	112	112	127	106	106	120	104	105	118	102	102	115
40	110	110	125	104	104	120	98	99	113	97	97	112	94	95	109

Check V1(MCG) .

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4
70	158	4	5						4	5						-2	-2		
60	140	3	4	5	6				3	4	5	6				-2	-2	-2	-3
50	122	2	3	4	5	6	6	8	2	3	4	5	6	7	8	-1	-1	-2	-2
40	104	1	1	2	3	4	5	6	1	1	3	4	5	6	7	0	-1	-1	-2
30	86	0	0	1	2	3	4	5	0	0	1	2	3	5	6	0	0	-1	-1
20	68	0	0	0	1	2	3	4	0	0	1	1	2	3	4	0	0	0	0
-60	-76	0	0	0	1	2	2	3	0	0	1	1	2	3	3	0	0	0	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
85	-4	-2	0	1	1		-1	-1	-1	0	0	0	0	1
80	-3	-2	0	1	1		-1	-1	-1	0	0	0	1	1
70	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
60	-1	0	0	1	1		-1	-1	0	0	0	1	1	1
50	0	0	0	0	0		-1	-1	0	0	0	0	0	0
40	0	0	0	0	0		-1	0	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	88	86					
60	140	88	86	84	83			
50	122	90	88	84	83	81	79	77
40	104	94	92	89	85	82	79	77
30	86	97	97	93	89	86	82	79
20	68	98	97	95	93	90	86	82
-60	-76	99	99	96	94	91	89	86

Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	156	158	161												
65	151	151	156	144	144	149									
60	144	145	150	137	138	143	130	130	136	128	129	134			
55	137	137	144	130	131	138	123	124	130	121	122	128	119	119	125
50	129	130	137	123	123	132	116	117	124	115	115	123	112	112	119
45	121	122	131	115	116	125	109	110	118	108	108	117	105	105	114
40	113	113	124	108	108	118	102	102	112	100	101	111	98	98	107

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESSURE ALT (FT)						PRESSURE ALT (FT)						PRESSURE ALT (FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	3	4	4	4	5	5	3	4	4	5	5	5	-1	-2	-2	-2	-2	-2
30	86	2	3	3	3	4	4	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
20	68	1	2	2	3	3	3	1	2	2	3	3	3	0	-1	-1	-1	-1	-1
10	50	0	1	1	2	2	2	0	1	1	2	2	3	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
70	-3	-2	0	0	0	-1	-1	0	0	0	0	0	0		
65	-2	-1	0	0	0	-1	-1	0	0	0	0	0	0		
60	-2	-1	0	0	0	-1	-1	0	0	0	0	0	0		
55	-1	-1	0	0	0	-1	-1	0	0	0	0	0	0		
50	-1	0	0	0	0	-1	-1	0	0	0	0	0	0		
45	-1	0	0	0	0	-1	-1	0	0	0	0	0	0		
40	-1	0	0	0	0	-1	-1	0	0	0	0	0	0		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	77	76	75	74	75	75
30	86	79	77	76	74	75	75
20	68	82	81	79	77	76	75
10	50	85	84	82	80	78	77
0	32	86	84	83	81	80	79
-60	-76	86	85	83	82	80	80

Takeoff Speeds - Wet Runway (24K Derate)

V1, VR, V2

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
85	166	172	176												
80	160	166	171	152	158	164	144	150	155	143	147	153			
75	153	160	167	146	153	159	137	145	151	136	142	149	131	138	144
70	147	154	162	139	147	155	131	139	146	130	137	144	126	133	140
65	140	148	157	133	141	150	125	133	142	124	132	140	120	128	136
60	133	141	151	126	134	144	119	127	137	117	125	135	114	122	131
55	125	134	145	119	127	139	112	121	131	111	119	129	108	116	126
50	117	126	139	111	120	133	105	114	126	104	112	124	101	109	120
45	109	118	132	104	112	127	98	106	120	97	105	118	94	102	115
40	101	110	125	96	104	120	90	99	113	89	97	112	86	95	109

Check V1(MCG) .

V1, VR, V2 Adjustment*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	7	8						4	5						-2	-2					
60	140	5	6	7	9				3	4	5	6				-2	-2	-2	-3			
50	122	3	4	5	6	8	9	12	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-3
40	104	1	2	3	4	6	7	9	1	1	3	4	5	6	7	0	-1	-1	-2	-2	-2	-3
30	86	0	0	1	3	4	5	7	0	0	1	2	3	5	6	0	0	-1	-1	-1	-2	-2
20	68	0	0	1	1	2	4	5	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	3	0	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustment*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)							
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40
85	-5	-3	0	3	6	-3	-2	-1	0	1	1	2	2
80	-5	-2	0	3	6	-3	-2	-1	0	1	1	2	2
70	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	3
60	-3	-2	0	2	3	-4	-2	-1	0	1	2	2	3
50	-2	-1	0	1	3	-4	-3	-1	0	1	2	3	3
40	-2	-1	0	1	2	-5	-3	-1	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	88	86					
60	140	88	86	84	83			
50	122	90	88	84	83	81	79	77
40	104	94	92	89	85	82	79	77
30	86	97	97	93	89	86	82	79
20	68	98	97	95	93	90	86	82
-60	-76	99	99	96	94	91	89	86

Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 KG)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
70	152	158	161												
65	145	151	156	138	144	149									
60	137	145	150	130	138	143	123	130	136	121	129	134			
55	129	137	144	123	131	138	116	124	130	114	122	128	111	119	125
50	121	130	137	115	123	132	109	117	124	107	115	123	104	112	119
45	113	122	131	107	116	125	101	110	118	100	108	117	97	105	114
40	104	113	124	99	108	118	94	102	112	92	101	111	90	98	107

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	5	6	7	8	8	9	3	4	4	5	5	5	-1	-2	-2	-2	-2	-2
30	86	3	4	5	5	6	6	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
20	68	1	2	3	4	4	5	1	2	2	3	3	3	0	-1	-1	-1	-1	-1
10	50	0	1	2	2	3	3	0	1	1	2	2	3	0	0	0	-1	-1	-1
0	32	0	1	1	2	2	3	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	1	1	2	2	3	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 KG)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
70	-5	-3	0	3	6	-2	-2	-1	0	0	1	2	2		
65	-5	-2	0	3	5	-2	-2	-1	0	1	1	2	2		
60	-4	-2	0	2	5	-3	-2	-1	0	1	1	2	2		
55	-3	-2	0	2	4	-3	-2	-1	0	1	1	2	2		
50	-3	-1	0	2	4	-3	-2	-1	0	1	1	2	2		
45	-3	-1	0	1	3	-3	-2	-1	0	1	1	2	3		
40	-2	-1	0	1	2	-4	-3	-1	0	1	1	2	3		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	77	76	75	74	75	75
30	86	79	77	76	74	75	75
20	68	82	81	79	77	76	75
10	50	85	84	82	80	78	77
0	32	86	84	83	81	80	79
-60	-76	86	85	83	82	80	80

Maximum Allowable Clearway (24K Derate)

FIELD LENGTH (M)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (M)
1200	180
1600	220
2000	250
2400	290
2800	330
3200	370

Maximum Allowable Clearway - High Altitudes (24K Derate)

FIELD LENGTH (M)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION(M)
1600	220
2000	250
2400	290
2800	320
3200	360
3600	390
4000	420
4400	440

Clearway and Stopway V1 Adjustments (24K Derate)

CLEARWAY MINUS STOPWAY (M)	NORMAL V1 (KIAS)								
	DRY RUNWAY					WET RUNWAY			
	100	120	140	160	180	100	120	140	160
300	-5	-4	-4	-3	-2				
200	-5	-4	-3	-2	-1				
100	-2	-2	-2	-2	-2				
0	0	0	0	0	0	0	0	0	0
-100	0	0	1	1	1	3	3	2	1
-200	0	0	1	1	1	6	4	2	1
-300	0	0	1	1	1	9	4	2	1

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitude (24K Derate)

CLEARWAY MINUES STOPWAY (M)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
300	-5	-3	-3	-3	-3					
200	-5	-2	-2	-2	-2					
100	-3	-1	-1	-1	-1					
0	0	0	0	0	0	0	0	0	0	0
-100	0	0	0	0	0	2	1	1	1	1
-200	0	0	0	0	0	5	3	2	2	2
-300	0	0	0	0	0	8	3	3	3	3

Stab Trim Setting (24K Derate)
Flaps 1 and 5

WEIGHT (1000 KG)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
85	8 1/2	8 1/2	8 1/4	6 1/2	5 3/4	5 1/2	5 1/4	5	4 3/4	4 1/4	4
80	8 1/2	8 1/4	8 1/4	6 1/2	5 1/2	5 1/2	5 1/4	4 3/4	4 1/2	4 1/4	3 3/4
70	8	7 3/4	7 1/2	6	5 1/4	5	4 3/4	4 1/2	4 1/4	4	3 1/2
60	7 1/2	7 1/4	7	5 1/2	4 3/4	4 3/4	4 1/2	4	3 3/4	3 1/2	3 1/4
50	6 3/4	6 1/2	6 1/4	5	4 1/4	4 1/4	4	3 3/4	3 1/4	3	3
40	6 1/2	6 1/4	6	4 3/4	4	3 3/4	3 1/2	3 1/4	3	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 KG)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
85	8 1/2	8 1/4	8	6	5	4 3/4	4 1/2	4 1/4	3 3/4	3 1/2	3
80	8 1/2	8	8	5 3/4	4 3/4	4 3/4	4 1/4	4	3 1/2	3 1/4	3
70	8	7 1/2	7 1/4	5 1/4	4 1/2	4 1/4	4	3 1/2	3 1/4	3	2 3/4
60	7 1/4	7	6 3/4	4 3/4	4	3 3/4	3 1/2	3	2 3/4	2 3/4	2 3/4
50	6 1/2	6 1/4	6	4 1/4	3 1/2	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4
40	6 1/4	6	5 3/4	4	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-11.3	-12.8	-14.3	-14.5	-16.0	-17.5	-18.0	-20.3	-22.5
85	-10.3	-11.8	-13.3	-12.9	-14.4	-15.9	-16.5	-18.8	-21.0
80	-9.4	-10.9	-12.4	-11.5	-13.0	-14.5	-14.9	-17.2	-19.4
75	-8.5	-10.0	-11.5	-10.1	-11.6	-13.1	-13.3	-15.6	-17.8
70	-7.6	-9.1	-10.6	-8.9	-10.4	-11.9	-11.7	-13.9	-16.2
65	-6.7	-8.2	-9.7	-7.7	-9.2	-10.7	-10.0	-12.2	-14.5
60	-5.8	-7.3	-8.8	-6.6	-8.1	-9.6	-8.3	-10.6	-12.8
55	-4.9	-6.4	-7.9	-5.5	-7.0	-8.5	-6.7	-9.0	-11.2
50	-3.9	-5.4	-6.9	-4.3	-5.8	-7.3	-5.2	-7.5	-9.7
45	-2.8	-4.3	-5.8	-3.1	-4.6	-6.1	-3.8	-6.0	-8.3
40	-1.7	-3.2	-4.7	-1.8	-3.3	-4.8	-2.5	-4.7	-7.0

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	34.3			37.1			41.9		
1400	54.3	34.5		57.1	37.2		61.5	42.1	
1600	76.6	54.5	34.7	79.1	57.3	37.4	81.5	61.7	42.3
1800		76.8	54.7		79.4	57.5		81.7	61.9
2000			77.1			79.6			81.9

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -25 m/+25 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-11	-6	-1	-3	0	0	0	0	0
85	-13	-8	-3	-5	0	0	0	0	0
80	-15	-10	-5	-8	-3	0	0	0	0
75	-17	-12	-7	-11	-6	-1	0	0	0
70	-18	-13	-8	-13	-8	-3	-3	0	0
65	-20	-15	-10	-15	-10	-5	-6	-1	0
60	-21	-16	-11	-17	-12	-7	-9	-4	0
55	-22	-17	-12	-19	-14	-9	-12	-7	-2
50	-23	-18	-13	-21	-16	-11	-15	-10	-5
45	-24	-19	-14	-23	-18	-13	-18	-13	-8
40	-25	-20	-15	-24	-19	-14	-21	-16	-11

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff (24K Derate)****No Reverse Thrust****Weight Adjustments (1000 KG)**

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-15.0	-17.2	-19.5	-18.3	-20.6	-22.8	-23.6	-26.6	-29.6
85	-13.7	-15.9	-18.2	-16.3	-18.6	-20.8	-20.9	-23.9	-26.9
80	-12.4	-14.7	-16.9	-14.6	-16.8	-19.1	-18.5	-21.5	-24.5
75	-11.3	-13.6	-15.8	-13.0	-15.2	-17.5	-16.3	-19.3	-22.3
70	-10.3	-12.5	-14.8	-11.6	-13.8	-16.1	-14.3	-17.3	-20.3
65	-9.3	-11.5	-13.8	-10.3	-12.5	-14.8	-12.5	-15.5	-18.5
60	-8.2	-10.5	-12.7	-9.0	-11.3	-13.5	-10.8	-13.8	-16.8
55	-7.1	-9.4	-11.6	-7.8	-10.0	-12.3	-9.1	-12.1	-15.1
50	-6.0	-8.2	-10.5	-6.4	-8.7	-10.9	-7.4	-10.4	-13.4
45	-4.7	-6.9	-9.2	-5.0	-7.3	-9.5	-5.6	-8.6	-11.6
40	-3.2	-5.5	-7.7	-3.4	-5.7	-7.9	-3.8	-6.8	-9.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (.12 INCHES)			6 mm (.25 INCHES)			13 mm (.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1600							41.5		
1800	35.6			50.3			67.3	38.0	
2000	72.3	30.4		82.4	45.8		88.8	63.6	34.6
2200		67.1			77.6	41.2		86.1	59.9
2400			61.9			72.9			83.3
2600			97.1						

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -40 m/+40 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-18	-8	0	-5	0	0	0	0	0
85	-20	-10	0	-9	0	0	0	0	0
80	-23	-13	-3	-13	-3	0	0	0	0
75	-25	-15	-5	-16	-6	0	0	0	0
70	-28	-18	-8	-20	-10	0	-4	0	0
65	-30	-20	-10	-24	-14	-4	-9	0	0
60	-32	-22	-12	-27	-17	-7	-14	-4	0
55	-34	-24	-14	-30	-20	-10	-19	-9	0
50	-36	-26	-16	-33	-23	-13	-25	-15	-5
45	-38	-28	-18	-36	-26	-16	-29	-19	-9
40	-40	-30	-20	-38	-28	-18	-34	-24	-14

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

Maximum Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-14.3	-14.9	-15.5	-17.5	-18.1	-18.7	-22.5	-23.4	-24.3
85	-13.3	-13.9	-14.5	-15.9	-16.5	-17.1	-21.0	-21.9	-22.8
80	-12.4	-13.0	-13.6	-14.5	-15.1	-15.7	-19.4	-20.3	-21.2
75	-11.5	-12.1	-12.7	-13.1	-13.7	-14.3	-17.8	-18.7	-19.6
70	-10.6	-11.2	-11.8	-11.9	-12.5	-13.1	-16.2	-17.1	-18.0
65	-9.7	-10.3	-10.9	-10.7	-11.3	-11.9	-14.5	-15.4	-16.3
60	-8.8	-9.4	-10.0	-9.6	-10.2	-10.8	-12.8	-13.7	-14.6
55	-7.9	-8.5	-9.1	-8.5	-9.1	-9.7	-11.2	-12.1	-13.0
50	-6.9	-7.5	-8.1	-7.3	-7.9	-8.5	-9.7	-10.6	-11.5
45	-5.8	-6.4	-7.0	-6.1	-6.7	-7.3	-8.3	-9.2	-10.1
40	-4.7	-5.3	-5.9	-4.8	-5.4	-6.0	-7.0	-7.9	-8.8

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500							32.6		
1600	34.7			37.4			42.3	34.6	
1700	44.5	36.7		47.2	39.5	31.8	52.0	44.3	36.6
1800	54.7	46.6	38.7	57.5	49.3	41.5	61.9	54.1	46.3
1900	65.5	56.9	48.7	68.2	59.7	51.4	71.8	64.0	56.1
2000	77.1	67.9	59.2	79.6	70.5	61.9	81.9	73.9	66.0
2100	89.4	79.5	70.2	91.7	82.0	72.9	92.1	84.0	76.0
2200		92.1	82.1		94.2	84.5		94.2	86.1
2300			94.7			96.8			96.3

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -25 m/+25 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-1	0	0	0	0	0	0	0	0
85	-3	-1	0	0	0	0	0	0	0
80	-5	-3	-1	0	0	0	0	0	0
75	-7	-5	-3	-1	0	0	0	0	0
70	-8	-6	-4	-3	-1	0	0	0	0
65	-10	-8	-6	-5	-3	-1	0	0	0
60	-11	-9	-7	-7	-5	-3	0	0	0
55	-12	-10	-8	-9	-7	-5	-2	0	0
50	-13	-11	-9	-11	-9	-7	-5	-3	-1
45	-14	-12	-10	-13	-11	-9	-8	-6	-4
40	-15	-13	-11	-14	-12	-10	-11	-9	-7

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

No Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-19.5	-20.4	-21.3	-22.8	-23.7	-24.6	-29.6	-30.8	-32.0
85	-18.2	-19.1	-20.0	-20.8	-21.7	-22.6	-26.9	-28.1	-29.3
80	-16.9	-17.8	-18.7	-19.1	-20.0	-20.9	-24.5	-25.7	-26.9
75	-15.8	-16.7	-17.6	-17.5	-18.4	-19.3	-22.3	-23.5	-24.7
70	-14.8	-15.7	-16.6	-16.1	-17.0	-17.9	-20.3	-21.5	-22.7
65	-13.8	-14.7	-15.6	-14.8	-15.7	-16.6	-18.5	-19.7	-20.9
60	-12.7	-13.6	-14.5	-13.5	-14.4	-15.3	-16.8	-18.0	-19.2
55	-11.6	-12.5	-13.4	-12.3	-13.2	-14.1	-15.1	-16.3	-17.5
50	-10.5	-11.4	-12.3	-10.9	-11.8	-12.7	-13.4	-14.6	-15.8
45	-9.2	-10.1	-11.0	-9.5	-10.4	-11.3	-11.6	-12.8	-14.0
40	-7.7	-8.6	-9.5	-7.9	-8.8	-9.7	-9.8	-11.0	-12.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
2000							34.6		
2100							46.8	35.6	
2200				41.2			59.9	47.9	36.6
2300	43.5			57.0	42.6		72.5	61.1	49.1
2400	61.9	45.0		72.9	58.4	44.0	83.3	73.5	62.2
2500	79.9	63.5	46.6	89.9	74.3	59.7	92.9	84.2	74.5
2600	97.1	81.4	65.1		91.4	75.7		93.7	85.0
2700		98.6	82.9			92.9			94.5

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 KG)	SLUSH/STANDING WATER DEPTH								
	3 mm (0.12 INCHES)			6 mm (0.25 INCHES)			13 mm (0.50 INCHES)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	0	0	0	0	0	0
85	0	0	0	0	0	0	0	0	0
80	-3	0	0	0	0	0	0	0	0
75	-5	-1	0	0	0	0	0	0	0
70	-8	-4	0	0	0	0	0	0	0
65	-10	-6	-2	-4	0	0	0	0	0
60	-12	-8	-4	-7	-3	0	0	0	0
55	-14	-10	-6	-10	-6	-2	0	0	0
50	-16	-12	-8	-13	-9	-5	-5	-1	0
45	-18	-14	-10	-16	-12	-8	-9	-5	-1
40	-20	-16	-12	-18	-14	-10	-14	-10	-6

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-0.2	-0.9	-1.7	-5.1	-5.9	-6.6	-9.8	-10.5	-11.3
85	-0.5	-1.3	-2.0	-5.2	-6.0	-6.7	-9.6	-10.4	-11.1
80	-0.9	-1.6	-2.4	-5.3	-6.1	-6.8	-9.4	-10.2	-10.9
75	-1.1	-1.9	-2.6	-5.4	-6.1	-6.9	-9.1	-9.9	-10.6
70	-1.2	-2.0	-2.7	-5.2	-6.0	-6.7	-8.6	-9.4	-10.1
65	-1.2	-2.0	-2.7	-5.0	-5.7	-6.5	-8.1	-8.8	-9.6
60	-1.1	-1.9	-2.6	-4.6	-5.3	-6.1	-7.3	-8.1	-8.8
55	-0.9	-1.6	-2.4	-4.0	-4.8	-5.5	-6.5	-7.3	-8.0
50	-0.6	-1.3	-2.1	-3.4	-4.1	-4.9	-5.5	-6.3	-7.0
45	-0.1	-0.9	-1.6	-2.6	-3.4	-4.1	-4.5	-5.2	-6.0
40	0.0	-0.3	-1.1	-1.7	-2.5	-3.2	-3.2	-4.0	-4.7

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1000	49.1								
1200	80.9	51.9		34.2					
1400		83.5	54.7	56.7	31.0				
1600			86.1	81.3	53.4		36.8		
1800					77.6	50.1	50.7		
2000						74.0	66.1	43.3	
2200							83.5	57.8	36.1
2400								74.0	50.0
2600								92.6	65.3
2800									82.6

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-4	0	0	-11	-6	-1	-21	-16	-11
85	-5	0	0	-13	-8	-3	-23	-18	-13
80	-6	-1	0	-15	-10	-5	-26	-21	-16
75	-7	-2	0	-16	-11	-6	-28	-23	-18
70	-8	-3	0	-18	-13	-8	-30	-25	-20
65	-9	-4	0	-20	-15	-10	-33	-28	-23
60	-10	-5	0	-21	-16	-11	-35	-30	-25
55	-11	-6	-1	-23	-18	-13	-37	-32	-27
50	-12	-7	-2	-25	-20	-15	-39	-34	-29
45	-13	-8	-3	-26	-21	-16	-40	-35	-30
40	-14	-9	-4	-28	-23	-18	-42	-37	-32

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-1.2	-1.9	-2.6	-7.6	-8.3	-9.0	-13.8	-14.5	-15.2
85	-1.7	-2.4	-3.1	-7.8	-8.5	-9.2	-13.5	-14.2	-14.9
80	-2.1	-2.8	-3.5	-7.9	-8.6	-9.3	-13.1	-13.8	-14.5
75	-2.4	-3.1	-3.8	-7.9	-8.6	-9.3	-12.6	-13.3	-14.0
70	-2.6	-3.3	-4.0	-7.8	-8.5	-9.2	-12.0	-12.7	-13.4
65	-2.6	-3.3	-4.0	-7.4	-8.1	-8.8	-11.2	-11.9	-12.6
60	-2.6	-3.3	-4.0	-7.0	-7.7	-8.4	-10.3	-11.0	-11.7
55	-2.4	-3.1	-3.8	-6.4	-7.1	-7.8	-9.2	-9.9	-10.6
50	-2.0	-2.7	-3.4	-5.6	-6.3	-7.0	-8.0	-8.7	-9.4
45	-1.6	-2.3	-3.0	-4.7	-5.4	-6.1	-6.7	-7.4	-8.1
40	-1.0	-1.7	-2.4	-3.6	-4.3	-5.0	-5.2	-5.9	-6.6

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
1200	61.8								
1400	97.3	68.6							
1600			74.8						
1800				63.1					
2000					56.8				
2200					96.3	50.2			
2400						91.0			
2800							59.0		
3000							91.0	33.8	
3200								67.1	
3400								98.8	
3600									42.2
									75.0

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Medium" field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust "Poor" field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
90	-6	-1	0	-16	-11	-6	-32	-27	-22
85	-7	-2	0	-18	-13	-8	-36	-31	-26
80	-8	-3	0	-20	-15	-10	-39	-34	-29
75	-9	-4	0	-23	-18	-13	-43	-38	-33
70	-11	-6	-1	-26	-21	-16	-47	-42	-37
65	-13	-8	-3	-28	-23	-18	-51	-46	-41
60	-14	-9	-4	-31	-26	-21	-55	-50	-45
55	-16	-11	-6	-34	-29	-24	-59	-54	-49
50	-18	-13	-8	-37	-32	-27	-63	-58	-53
45	-20	-15	-10	-41	-36	-31	-67	-62	-57
40	-22	-17	-12	-44	-39	-34	-71	-66	-61

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-1.7	-2.0	-2.3	-6.6	-6.9	-7.2	-11.3	-11.6	-11.9
85	-2.0	-2.3	-2.6	-6.7	-7.0	-7.3	-11.1	-11.4	-11.7
80	-2.4	-2.7	-3.0	-6.8	-7.1	-7.4	-10.9	-11.2	-11.5
75	-2.6	-2.9	-3.2	-6.9	-7.2	-7.5	-10.6	-10.9	-11.2
70	-2.7	-3.0	-3.3	-6.7	-7.0	-7.3	-10.1	-10.4	-10.7
65	-2.7	-3.0	-3.3	-6.5	-6.8	-7.1	-9.6	-9.9	-10.2
60	-2.6	-2.9	-3.2	-6.1	-6.4	-6.7	-8.8	-9.1	-9.4
55	-2.4	-2.7	-3.0	-5.5	-5.8	-6.1	-8.0	-8.3	-8.6
50	-2.1	-2.4	-2.7	-4.9	-5.2	-5.5	-7.0	-7.3	-7.6
45	-1.6	-1.9	-2.2	-4.1	-4.4	-4.7	-6.0	-6.3	-6.6
40	-1.1	-1.4	-1.7	-3.2	-3.5	-3.8	-4.7	-5.0	-5.3

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (M)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1400	54.7	42.6	30.5						
1600	86.1	74.8	63.3						
1800			94.2	50.1	39.9				
2000				74.0	62.8	52.1			
2200					88.0	76.2	36.1		
2400							50.0	41.4	33.1
2600							65.3	55.8	46.9
2800							82.6	71.7	61.8
3000								90.0	78.6
3200									97.4

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -20 m/+20 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -35 m/+35 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-1	0	0	-11	-9	-7
85	0	0	0	-3	-1	0	-13	-11	-9
80	0	0	0	-5	-3	-1	-16	-14	-12
75	0	0	0	-6	-4	-2	-18	-16	-14
70	0	0	0	-8	-6	-4	-20	-18	-16
65	0	0	0	-10	-8	-6	-23	-21	-19
60	0	0	0	-11	-9	-7	-25	-23	-21
55	-1	0	0	-13	-11	-9	-27	-25	-23
50	-2	0	0	-15	-13	-11	-29	-27	-25
45	-3	-1	0	-16	-14	-12	-30	-28	-26
40	-4	-2	0	-18	-16	-14	-32	-30	-28

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

No Reverse Thrust

Weight Adjustment (1000 KG)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 KG)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	-2.6	-2.8	-3.1	-9.0	-9.2	-9.5	-15.2	-15.4	-15.7
85	-3.1	-3.3	-3.6	-9.2	-9.5	-9.7	-14.9	-15.1	-15.4
80	-3.5	-3.8	-4.1	-9.3	-9.6	-9.9	-14.5	-14.8	-15.1
75	-3.8	-4.1	-4.4	-9.3	-9.6	-9.9	-14.0	-14.3	-14.6
70	-4.0	-4.3	-4.5	-9.2	-9.4	-9.7	-13.4	-13.6	-13.9
65	-4.0	-4.3	-4.6	-8.8	-9.1	-9.4	-12.6	-12.8	-13.1
60	-4.0	-4.2	-4.5	-8.4	-8.7	-8.9	-11.7	-11.9	-12.2
55	-3.8	-4.0	-4.3	-7.8	-8.0	-8.3	-10.6	-10.9	-11.2
50	-3.4	-3.7	-4.0	-7.0	-7.3	-7.6	-9.4	-9.7	-10.0
45	-3.0	-3.3	-3.5	-6.1	-6.4	-6.6	-8.1	-8.4	-8.6
40	-2.4	-2.7	-3.0	-5.0	-5.3	-5.6	-6.6	-6.9	-7.2

V1(MCG) Limit Weight (1000 KG)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
1500	53.6	34.3							
1600	74.8	61.3	44.5						
1700	91.7	80.7	68.3						
1800		97.0	86.2						
2200				50.2					
2300				72.0	52.3				
2400				91.0	73.8	54.3			
2500					92.6	75.4			
2600						94.2			
3400							42.2		
3500							58.9	35.4	
3600							75.0	52.2	
3700							90.8	68.6	45.5
3800								84.5	62.1
3900									78.1
4000									93.9

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust “Medium” field length available by -25 m/+25 m for every 5°C above/below 4°C.
Adjust “Poor” field length available by -45 m/+45 m for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
90	0	0	0	-6	-4	-2	-22	-20	-18
85	0	0	0	-8	-6	-4	-26	-24	-22
80	0	0	0	-10	-8	-6	-29	-27	-25
75	0	0	0	-13	-11	-9	-33	-31	-29
70	-1	0	0	-16	-14	-12	-37	-35	-33
65	-3	-1	0	-18	-16	-14	-41	-39	-37
60	-4	-2	0	-21	-19	-17	-45	-43	-41
55	-6	-4	-2	-24	-22	-20	-49	-47	-45
50	-8	-6	-4	-27	-25	-23	-53	-51	-49
45	-10	-8	-6	-31	-29	-27	-57	-55	-53
40	-12	-10	-8	-34	-32	-30	-61	-59	-57

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

Takeoff %N1 (24K Derate)

Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	90.3	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.0	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	91.8	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	92.6	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	93.4	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.2	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	93.8	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	93.1	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	92.3	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	91.6	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	90.8	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
5	90.0	91.2	92.2	92.8	93.3	93.9	94.5	95.2	95.9	96.7	97.4	98.4	99.3
0	89.2	90.4	91.4	92.0	92.5	93.1	93.7	94.4	95.1	95.9	96.7	97.6	98.5
-5	88.4	89.6	90.6	91.2	91.7	92.3	92.9	93.6	94.3	95.1	95.9	96.8	97.7
-10	87.6	88.8	89.8	90.4	90.9	91.5	92.1	92.8	93.5	94.3	95.1	96.1	97.0
-15	86.8	88.0	89.0	89.5	90.0	90.6	91.3	92.0	92.7	93.5	94.3	95.3	96.2
-20	86.0	87.1	88.2	88.7	89.2	89.8	90.5	91.2	91.9	92.6	93.5	94.5	95.4
-25	85.2	86.3	87.3	87.9	88.4	89.0	89.6	90.3	91.0	91.8	92.6	93.7	94.6
-30	84.4	85.5	86.5	87.0	87.5	88.1	88.8	89.5	90.2	91.0	91.8	92.9	93.8
-35	83.5	84.6	85.6	86.2	86.6	87.3	87.9	88.6	89.3	90.1	91.0	92.1	93.0
-40	82.7	83.8	84.8	85.3	85.8	86.4	87.0	87.8	88.5	89.3	90.1	91.2	92.2
-45	81.8	82.9	83.9	84.4	84.9	85.5	86.2	86.9	87.6	88.4	89.3	90.4	91.4
-50	81.0	82.0	83.0	83.5	84.0	84.6	85.3	86.0	86.7	87.5	88.4	89.5	90.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (24K Derate)

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	93.8					
35	94.7	94.7	94.7			
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5	99.3	99.7	100.2	100.3	100.0	99.8
0	98.5	99.0	99.4	99.8	100.1	100.3
-5	97.7	98.2	98.7	99.1	99.4	99.5
-10	97.0	97.4	97.9	98.3	98.6	98.7
-15	96.2	96.7	97.1	97.5	97.8	98.0
-20	95.4	95.9	96.3	96.7	97.0	97.2
-25	94.6	95.1	95.5	95.9	96.2	96.4
-30	93.8	94.3	94.7	95.1	95.4	95.5
-35	93.0	93.5	93.9	94.3	94.6	94.7
-40	92.2	92.6	93.1	93.5	93.7	93.9
-45	91.4	91.8	92.2	92.6	92.9	93.0
-50	90.5	91.0	91.4	91.8	92.0	92.2

Takeoff %N1 - High Altitudes (24K Derate)**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust (24K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	67	67	67	67	65	63	61	59	57	55	53	
30	64	61	62	61	61	61	61	59	57	55	53	51
25	64	61	59	57	56	56	57	57	57	55	53	51
20	64	61	59	57	56	54	53	53	53	53	52	51
15	64	61	59	57	56	54	53	52	50	49	48	47
10 & BELOW	64	61	59	57	56	54	53	52	50	48	45	43

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	88.3	88.6	89.1	89.6	90.2	90.8	91.5	92.2	92.7	93.1	93.3	93.4
70	89.1	89.5	89.4	89.3	89.6	90.1	90.8	91.6	92.0	92.5	92.6	92.7
65	90.0	90.4	90.3	90.2	90.2	90.1	90.2	90.9	91.4	91.8	91.9	92.1
60	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0

Assumed Temperature Reduced Thrust (24K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	12.1													
100	11.3	8.5												
90	11.7	8.9												
80	12.5	8.0	5.5											
70	11.3	8.4	5.9	5.6	4.0									
60	9.7	9.2	4.8	4.7	4.4	4.2	2.6							
50	7.8	7.9	5.3	3.5	3.3	3.6	3.0	2.7	1.2					
40		6.4	6.0	5.5	3.7	3.2	3.7	3.0	2.8	3.0	3.7			
30		4.6	4.6	4.6	4.5	4.3	4.2	4.0	4.1	4.0	3.9	3.8	3.7	
20			3.1	3.1	3.1	3.0	2.9	2.9	2.8	2.7	2.7	2.6	2.6	2.5
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.3	1.3
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	54	54	52	50	48	47
20	51	51	52	50	48	47
15	47	47	48	49	48	47
10	43	44	44	45	46	46
5	43	42	42	42	43	43
0 & BELOW	43	42	42	42	41	41

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	91.4					
55	90.8					
50	91.8	91.5	92.3	93.2		
		91.9	92.0	92.5	93.2	93.5
45	92.8	92.8	92.9	93.1	93.2	93.2
40	93.8	93.8	93.8	93.9	93.9	94.0
35	94.7	94.7	94.7	94.7	94.7	94.7
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5		99.7	100.2	100.3	100.0	99.8
0				99.8	100.1	100.3
MINIMUM ASSUMED TEMP (°C)	10	8	6	4	2	1

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	15.9										
100	15.9										
90	14.8	12.5									
80	13.4	12.5									
70	11.2	11.3	9.2								
60		9.8	9.2								
50		7.8	7.9	6.0							
40			6.4	6.0	4.6	4.5	4.4	4.3			
30			4.6	4.7	4.6	4.5	4.4	4.3	2.9	2.9	2.8
20				3.1	3.1	3.1	3.0	3.0	2.9	2.9	2.8
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4
0					0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS OR MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.80	.80	.80
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	94.8	95.0	93.7
55	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.1	94.3	93.0
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.4	93.6	92.4
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	92.7	92.9	91.7
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.4	92.2	91.0
35	94.0	94.3	94.5	94.3	94.0	94.0	93.0	93.3	92.7	91.6
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	94.1	93.5	92.5
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.9	94.4	93.4
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.6	95.1	94.3
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.3	95.9	95.1
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	97.1	96.7	96.0
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.9	97.4	96.8
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.7	98.3	97.8
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.4	99.0	98.6
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.3	99.9	99.6
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.5
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.3	100.9	100.5
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	99.5	100.0	99.7
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	98.6	99.2	98.8
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	97.8	98.3	98.0
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	96.9	97.5	97.1

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

*Dual bleed sources

Go-around %N1**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

Go-around %N1 - High Altitudes
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

AIRPORT OAT		TAT	AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	(°C)	10000	11000	12000	13000	14000	14500
37	99	40	99.1	99.7				
32	90	35	99.5	99.3	99.5	100.1	100.7	
27	81	30	100.3	100.2	100.2	100.0	100.0	100.2
22	72	25	100.8	100.7	100.7	100.6	100.6	100.5
17	63	20	101.0	101.0	101.0	100.9	100.8	100.8
12	54	15	101.2	101.2	101.2	101.2	101.1	101.0
7	45	10	100.9	101.4	101.5	101.4	101.3	101.2
2	36	5	100.2	100.9	101.6	101.6	101.5	101.5
-3	27	0	99.4	100.2	101.0	101.4	101.6	101.6
-8	18	-5	98.6	99.4	100.2	100.6	100.9	101.0
-13	9	-10	97.9	98.6	99.5	99.8	100.1	100.2
-17	1	-15	97.1	97.8	98.7	99.0	99.3	99.4
-22	-8	-20	96.3	97.0	97.9	98.2	98.5	98.6
-27	-17	-25	95.5	96.2	97.1	97.4	97.7	97.8
-32	-26	-30	94.7	95.4	96.2	96.6	96.8	97.0
-37	-35	-35	93.9	94.6	95.4	95.7	96.0	96.1
-42	-44	-40	93.0	93.8	94.6	94.9	95.1	95.3
-47	-53	-45	92.2	92.9	93.7	94.0	94.3	94.4
-52	-62	-50	91.4	92.1	92.9	93.2	93.4	93.5

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	0.9	0.9	0.9	1.0	1.0	1.0
ENGINE ANTI-ICE	0.0	-0.8	-1.5	-1.5	-1.5	-1.4

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Climb (280/.76)**Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	4.0	4.0	4.0		
	V/S (FT/MIN)	1700	1100	500		
30000	PITCH ATT	4.0	4.0	4.0	4.0	4.0
	V/S (FT/MIN)	2500	1900	1400	1100	800
20000	PITCH ATT	7.0	6.5	6.0	6.0	6.0
	V/S (FT/MIN)	4100	3200	2600	2100	1700
10000	PITCH ATT	11.0	9.5	8.5	8.0	8.0
	V/S (FT/MIN)	5600	4400	3600	3000	2500
SEA LEVEL	PITCH ATT	14.5	12.5	11.0	10.0	9.5
	V/S (FT/MIN)	6700	5300	4300	3600	3100

Cruise (.76/280)**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	2.0	2.5	3.5		
	%N1	83	86	90		
35000	PITCH ATT	1.0	2.0	2.5	3.0	4.0
	%N1	82	83	85	88	92
30000	PITCH ATT	1.0	1.5	2.0	2.5	3.0
	%N1	81	82	83	85	87
25000	PITCH ATT	1.0	1.5	2.0	2.5	3.5
	%N1	77	78	79	81	83
20000	PITCH ATT	1.0	1.5	2.0	3.0	3.5
	%N1	74	75	76	77	79
15000	PITCH ATT	1.0	1.5	2.5	3.0	3.5
	%N1	70	71	72	73	75

Descent (.76/280)**Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	PITCH ATT	-1.5	-0.5	0.5	1.0	1.5
	V/S (FT/MIN)	-2700	-2500	-2400	-2700	-3000
30000	PITCH ATT	-3.0	-2.0	-1.0	-0.5	0.5
	V/S (FT/MIN)	-3100	-2600	-2300	-2100	-2000
20000	PITCH ATT	-3.5	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2800	-2400	-2100	-1900	-1800
10000	PITCH ATT	-3.5	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2600	-2100	-1900	-1700	-1600
SEA LEVEL	PITCH ATT	-4.0	-2.5	-1.0	-0.5	0.5
	V/S (FT/MIN)	-2400	-1900	-1700	-1500	-1400

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Holding (VREF40 + 70)

Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	PITCH ATT	5.0	5.5	5.0	5.0	5.0
	%N1	53	58	62	66	69
	KIAS	175	192	211	228	244
5000	PITCH ATT	5.0	5.5	5.5	5.5	5.0
	%N1	49	54	58	62	66
	KIAS	175	191	210	227	243

Terminal Area (5000 FT)

%N1 for Level Flight

FLAP POSITION (VREF+INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 1 (GEAR UP) (VREF40+50)	PITCH ATT	5.0	5.5	5.5	6.0	6.0
	%N1	51	56	61	65	68
FLAPS 5 (GEAR UP) (VREF40+30)	PITCH ATT	5.5	6.0	6.5	6.5	7.0
	%N1	52	57	62	66	69
FLAPS 15 (GEAR DOWN) (VREF40+20)	PITCH ATT	4.5	5.0	5.5	5.5	5.5
	%N1	59	64	69	74	77

Final Approach (1500 FT)

Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF+INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15+10)	PITCH ATT	1.5	1.5	2.0	2.0	2.0
	%N1	41	46	49	53	56
FLAPS 30 (VREF30+10)	PITCH ATT	0.5	1.0	1.0	1.0	1.5
	%N1	47	52	56	60	63
FLAPS 40 (VREF40+10)	PITCH ATT	0.0	0.0	0.5	0.5	0.5
	%N	51	56	61	65	68

Performance Inflight

All Engine

Chapter PI

Section 51

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 KG)	OPTIMUM ALT (M)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	31800	-8	33000*	33000*	33000*	31600	30100
80	33100	-11	34600*	34600*	34500	32900	31400
75	34500	-14	36100*	36100*	35800	34300	32800
70	35900	-17	37500*	37500*	37300	35700	34300
65	37500	-17	38900*	38900*	38800	37300	35800
60	39100	-17	40300*	40300*	40300*	38900	37500
55	40900	-17	41000	41000	41000	40800	39300
50	41000	-17	41000	41000	41000	41000	41000
45	41000	-17	41000	41000	41000	41000	41000
40	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 KG)	OPTIMUM ALT (M)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	31800	-3	30200*	30200*	30200*	30200*	30100
80	33100	-6	33000*	33000*	33000*	32900	31400
75	34500	-9	35000*	35000*	35000*	34300	32800
70	35900	-12	36500*	36500*	36500*	35700	34300
65	37500	-12	37900*	37900*	37900*	37300	35800
60	39100	-12	39300*	39300*	39300*	38900	37500
55	40900	-12	40900*	40900*	40900*	40800	39300
50	41000	-12	41000	41000	41000	41000	41000
45	41000	-12	41000	41000	41000	41000	41000
40	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 KG)	OPTIMUM ALT (M)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
85	31800	3	23100*	23100*	23100*	23100*	23100*
80	33100	0	23700*	23700*	23700*	23700*	23700*
75	34500	-3	30500*	30500*	30500*	30500*	30500*
70	35900	-6	34900*	34900*	34900*	34900*	34300
65	37500	-6	36500*	36500*	36500*	36500*	35800
60	39100	-6	37900*	37900*	37900*	37900*	37500
55	40900	-6	39400*	39400*	39400*	39400*	39300
50	41000	-6	41000	41000	41000	41000	41000
45	41000	-6	41000	41000	41000	41000	41000
40	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

.80M Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		23	25	27	29	31	33	35	37	39	41
85	%N1	86.4	88.1	88.7	89.2	90.0	92.2				
	MACH	.765	.794	.800	.800	.800	.800				
	KIAS	335	335	324	311	297	284				
	FF/ENG	1759	1787	1722	1652	1605	1609				
80	%N1	85.9	87.6	88.1	88.4	89.1	90.2	93.6			
	MACH	.765	.794	.800	.800	.800	.800	.800			
	KIAS	335	335	324	311	297	284	272			
	FF/ENG	1725	1752	1683	1599	1540	1506	1545			
75	%N1	85.5	87.2	87.6	87.8	88.1	89.0	90.6			
	MACH	.765	.794	.800	.800	.800	.800	.800			
	KIAS	335	335	324	311	297	284	272			
	FF/ENG	1695	1721	1648	1558	1482	1432	1414			
70	%N1	85.0	86.8	87.2	87.2	87.4	87.9	88.8	91.3		
	MACH	.765	.794	.800	.800	.800	.800	.800	.800		
	KIAS	335	335	324	311	297	284	272	260		
	FF/ENG	1667	1692	1618	1521	1438	1368	1326	1333		
65	%N1	84.6	86.4	86.7	86.7	86.8	87.0	87.6	89.0	93.0	
	MACH	.765	.794	.800	.800	.800	.800	.800	.800	.800	
	KIAS	335	335	324	311	297	284	272	260	248	
	FF/ENG	1639	1663	1589	1490	1400	1321	1261	1234	1269	
60	%N1	84.2	86.0	86.3	86.2	86.2	86.3	86.6	87.6	89.8	
	MACH	.765	.794	.800	.800	.800	.800	.800	.800	.800	
	KIAS	335	335	324	311	297	284	272	260	248	
	FF/ENG	1615	1640	1561	1461	1368	1283	1210	1166	1154	
55	%N1	84.0	85.8	85.9	85.8	85.7	85.7	85.8	86.5	88.0	90.3
	MACH	.765	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	335	324	311	297	284	272	260	248	237
	FF/ENG	1599	1622	1538	1433	1340	1251	1172	1112	1081	1074
50	%N1	83.8	85.6	85.7	85.4	85.2	85.1	85.1	85.6	86.7	88.3
	MACH	.765	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	335	324	311	297	284	272	260	248	237
	FF/ENG	1589	1609	1521	1410	1311	1222	1139	1073	1025	998
45	%N1	83.7	85.5	85.5	85.1	84.8	84.6	84.5	84.9	85.8	86.9
	MACH	.765	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	335	324	311	297	284	272	260	248	237
	FF/ENG	1583	1601	1509	1394	1290	1195	1111	1041	987	942
40	%N1	83.7	85.4	85.4	84.9	84.5	84.2	84.0	84.2	85.0	85.8
	MACH	.765	.794	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	335	335	324	311	297	284	272	260	248	237
	FF/ENG	1583	1599	1503	1384	1274	1174	1085	1013	956	905

Shaded area approximates optimum altitude.

.80M Enroute Fuel and Time - Low Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
272	254	237	223	211	200	191	183	175	168	162
407	380	356	335	317	300	287	275	264	254	245
541	506	475	447	422	400	383	367	353	339	327
676	632	593	558	528	500	479	460	442	425	409
810	758	711	670	633	600	575	552	530	510	492
945	884	829	781	738	700	671	644	619	596	575
1079	1009	947	892	844	800	767	736	708	682	658
1213	1135	1065	1004	950	900	863	829	797	767	741
1347	1261	1184	1116	1055	1000	959	921	886	853	823
1482	1387	1302	1227	1160	1100	1055	1013	974	938	905
1616	1513	1420	1338	1266	1200	1151	1106	1063	1024	988
1751	1639	1538	1450	1371	1300	1247	1198	1152	1110	1071
1885	1765	1656	1561	1477	1400	1343	1290	1241	1196	1154
2020	1891	1775	1673	1582	1500	1439	1382	1330	1281	1237
2154	2017	1893	1784	1688	1600	1535	1475	1418	1367	1319
2288	2142	2011	1896	1793	1700	1631	1567	1507	1452	1401
2422	2268	2129	2007	1899	1800	1727	1659	1596	1538	1484
2556	2394	2247	2118	2004	1900	1823	1751	1685	1623	1567
2691	2520	2365	2230	2110	2000	1919	1844	1774	1709	1650

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.6	0:35	1.4	0:34	1.2	0:33	1.1	0:33	1.0	0:33
300	2.5	0:51	2.3	0:49	2.0	0:47	1.8	0:45	1.6	0:45
400	3.4	1:06	3.1	1:03	2.7	1:00	2.5	0:58	2.2	0:58
500	4.3	1:21	3.9	1:18	3.4	1:13	3.2	1:10	2.9	1:11
600	5.2	1:37	4.7	1:32	4.2	1:26	3.9	1:23	3.5	1:23
700	6.1	1:52	5.6	1:47	4.9	1:40	4.6	1:35	4.1	1:36
800	7.0	2:07	6.4	2:01	5.7	1:53	5.3	1:48	4.7	1:48
900	7.8	2:23	7.2	2:16	6.4	2:06	6.0	2:00	5.4	2:01
1000	8.7	2:38	8.0	2:30	7.1	2:20	6.7	2:13	6.0	2:14
1100	9.6	2:53	8.9	2:45	7.9	2:33	7.4	2:25	6.6	2:26
1200	10.5	3:09	9.7	2:59	8.6	2:46	8.1	2:38	7.2	2:39
1300	11.4	3:24	10.5	3:14	9.4	2:59	8.8	2:50	7.9	2:51
1400	12.3	3:39	11.3	3:28	10.1	3:13	9.5	3:03	8.5	3:04
1500	13.2	3:55	12.1	3:43	10.8	3:26	10.2	3:15	9.1	3:17
1600	14.0	4:10	13.0	3:57	11.6	3:39	10.9	3:28	9.7	3:29
1700	14.9	4:25	13.8	4:12	12.3	3:53	11.6	3:41	10.3	3:42
1800	15.8	4:41	14.6	4:26	13.0	4:06	12.3	3:53	11.0	3:54
1900	16.7	4:56	15.4	4:41	13.8	4:19	12.9	4:06	11.6	4:07
2000	17.6	5:12	16.3	4:55	14.5	4:32	13.6	4:18	12.2	4:19

.80M Enroute Fuel and Time - Low Altitudes
Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	0.0	0.0	0.0	0.0	0.0
2	0.0	0.0	0.0	0.0	0.1
3	0.0	0.0	0.0	0.1	0.2
4	0.1	0.0	0.0	0.1	0.3
5	0.1	0.0	0.0	0.2	0.3
6	0.1	0.0	0.0	0.2	0.4
7	0.1	0.0	0.0	0.2	0.5
8	0.1	0.0	0.0	0.3	0.6
9	0.1	0.0	0.0	0.3	0.6
10	0.2	0.0	0.0	0.3	0.7
11	0.2	0.0	0.0	0.3	0.8
12	0.2	0.0	0.0	0.4	0.8
13	0.3	0.1	0.0	0.4	0.9
14	0.3	0.1	0.0	0.4	0.9
15	0.3	0.1	0.0	0.5	1.0
16	0.4	0.1	0.0	0.5	1.1

.80M Enroute Fuel and Time - High Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAIL WIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
522	492	465	441	420	400	383	367	352	339	326
778	735	695	660	629	600	575	551	530	510	492
1033	977	926	880	838	800	767	736	707	681	657
1289	1219	1156	1099	1047	1000	959	920	885	852	822
1545	1462	1386	1318	1256	1200	1151	1105	1062	1023	987
1800	1704	1616	1537	1466	1400	1343	1290	1240	1194	1152
2056	1946	1846	1756	1675	1600	1535	1474	1418	1366	1318
2311	2189	2076	1975	1884	1800	1727	1659	1595	1537	1483
2567	2431	2306	2194	2093	2000	1919	1843	1772	1708	1648
2823	2673	2536	2414	2302	2200	2111	2027	1950	1878	1813
3078	2915	2766	2633	2512	2400	2302	2212	2127	2049	1978
3334	3158	2996	2852	2721	2600	2495	2396	2305	2221	2144
3589	3400	3227	3071	2930	2800	2687	2581	2483	2392	2309
3845	3642	3457	3290	3139	3000	2879	2766	2660	2563	2474
4101	3885	3687	3509	3348	3200	3071	2950	2838	2734	2639
4356	4127	3917	3728	3558	3400	3263	3134	3015	2905	2804
4612	4369	4147	3948	3767	3600	3455	3319	3193	3077	2970
4867	4612	4377	4167	3976	3800	3647	3504	3371	3248	3136
5123	4854	4607	4386	4185	4000	3839	3688	3548	3419	3301
5379	5096	4837	4605	4394	4200	4031	3873	3726	3590	3466
5634	5339	5067	4824	4604	4400	4223	4057	3903	3761	3631
5890	5581	5297	5043	4813	4600	4414	4241	4081	3932	3797
6145	5823	5527	5262	5022	4800	4606	4426	4258	4103	3962
6401	6065	5758	5482	5231	5000	4798	4610	4435	4274	4127
6657	6308	5988	5701	5440	5200	4990	4794	4613	4445	4292
6912	6550	6218	5920	5649	5400	5182	4979	4790	4616	4457
7168	6792	6448	6139	5859	5600	5374	5163	4968	4787	4623
7423	7035	6678	6358	6068	5800	5566	5347	5145	4958	4788
7679	7277	6908	6577	6277	6000	5758	5532	5322	5129	4953

.80M Enroute Fuel and Time - High Altitudes
Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	31		33		35		37		39	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
400	2.0	0:59	1.9	0:59	1.8	0:59	1.7	1:00	1.7	1:00
600	3.2	1:24	3.0	1:25	2.8	1:25	2.7	1:26	2.7	1:26
800	4.3	1:50	4.1	1:51	3.9	1:51	3.7	1:52	3.6	1:52
1000	5.5	2:15	5.2	2:16	4.9	2:17	4.7	2:18	4.6	2:18
1200	6.6	2:41	6.2	2:42	5.9	2:43	5.7	2:44	5.5	2:44
1400	7.8	3:06	7.3	3:08	6.9	3:09	6.6	3:10	6.5	3:10
1600	8.9	3:32	8.4	3:33	7.9	3:35	7.6	3:36	7.4	3:36
1800	10.0	3:57	9.4	3:59	8.9	4:01	8.5	4:02	8.3	4:02
2000	11.1	4:23	10.5	4:25	9.9	4:27	9.5	4:28	9.2	4:28
2200	12.2	4:48	11.5	4:51	10.9	4:53	10.4	4:55	10.1	4:55
2400	13.4	5:14	12.6	5:16	11.9	5:19	11.4	5:21	11.0	5:21
2600	14.5	5:39	13.6	5:42	12.9	5:45	12.3	5:47	11.9	5:47
2800	15.6	6:05	14.7	6:08	13.9	6:11	13.2	6:13	12.8	6:13
3000	16.7	6:30	15.7	6:34	14.8	6:37	14.1	6:39	13.7	6:39
3200	17.8	6:56	16.7	6:59	15.8	7:03	15.1	7:05	14.5	7:05
3400	18.9	7:21	17.7	7:25	16.8	7:29	16.0	7:31	15.4	7:31
3600	20.0	7:47	18.8	7:51	17.7	7:55	16.9	7:57	16.3	7:57
3800	21.0	8:12	19.8	8:16	18.7	8:21	17.8	8:23	17.1	8:23
4000	22.1	8:38	20.8	8:42	19.6	8:47	18.7	8:49	18.0	8:49
4200	23.2	9:03	21.8	9:08	20.6	9:13	19.6	9:15	18.8	9:16
4400	24.3	9:29	22.8	9:34	21.5	9:39	20.4	9:42	19.7	9:42
4600	25.4	9:54	23.8	9:59	22.5	10:05	21.3	10:08	20.5	10:08
4800	26.5	10:20	24.8	10:25	23.4	10:31	22.2	10:34	21.3	10:34
5000	27.6	10:45	25.8	10:51	24.3	10:57	23.1	11:00	22.2	11:00

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	0.0	0.0	0.0	1.2	3.5
4	-0.1	-0.1	0.0	1.7	5.1
6	-0.2	-0.1	0.0	2.2	6.4
8	-0.2	-0.2	0.0	2.6	7.5
10	-0.3	-0.2	0.0	3.0	8.5
12	-0.3	-0.3	0.0	3.3	9.2
14	-0.3	-0.3	0.0	3.5	9.8
16	-0.3	-0.3	0.0	3.7	10.1
18	-0.3	-0.3	0.0	3.8	10.3
20	-0.2	-0.3	0.0	3.8	10.2
22	-0.2	-0.3	0.0	3.8	10.0
24	-0.1	-0.3	0.0	3.7	9.5
26	0.0	-0.3	0.0	3.6	8.9
28	0.2	-0.2	0.0	3.4	8.0
30	0.3	-0.2	0.0	3.1	7.0
32	0.5	-0.2	0.0	2.8	5.8
34	0.7	-0.1	0.0	2.4	4.4
36	0.9	0.0	0.0	1.9	2.7

.80M Wind-Altitude Trade

PRESSURE ALTITUDE (1000 FT)	CRUISE WEIGHT (1000 KG)								
	85	80	75	70	65	60	55	50	45
41						9	0	3	19
39				23	6	0	3	17	42
37			15	4	0	4	17	39	70
35	23	9	1	0	6	19	39	67	101
33	4	0	1	9	22	41	66	97	135
31	0	4	12	26	45	68	96	130	169
29	7	17	31	49	71	98	129	164	
27	23	37	55	76	101	129	161	197	

Above wind factor tables are for calculation of wind required to maintain present range capability at new pressure altitude, i.e. break-even wind.

Method:

1. Read wind factors for present and new altitudes from table.
2. Determine difference (new altitude wind factor minus present altitude wind factor); this difference may be positive or negative.
3. Break-even wind at new altitude is present altitude wind plus difference from step 2.

Descent**.80/280/250**

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)				
			LANDING WEIGHT (1000 KG)				
			40	50	60	70	80
41000	26	360	100	117	130	138	142
39000	26	350	95	112	124	133	137
37000	25	350	91	106	119	127	132
35000	25	340	87	102	113	122	127
33000	24	340	83	97	109	117	122
31000	23	330	79	92	103	110	115
29000	22	330	74	87	96	103	108
27000	21	320	69	81	90	97	100
25000	20	310	65	76	84	90	93
23000	19	300	60	70	78	83	86
21000	18	290	56	65	72	76	79
19000	17	280	51	60	66	70	72
17000	15	270	47	54	60	63	65
15000	14	250	43	49	54	57	59
10000	11	210	30	34	36	38	38
5000	7	160	18	19	20	21	21
1500	4	130	9	9	9	9	9

Allowances for a straight-in approach are included.

Holding
Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)									
		1500	5000	10000	15000	20000	25000	30000	35000		
90	%N1	65.9	68.3	72.3	76.2	80.6	84.9	89.3			
	KIAS	257	258	259	261	263	265	268			
	FF/ENG	1580	1560	1550	1540	1530	1540	1600			
85	%N1	64.4	67.0	70.7	74.8	79.1	83.4	87.7			
	KIAS	250	251	252	253	255	257	260			
	FF/ENG	1500	1480	1460	1460	1440	1450	1490			
80	%N1	62.7	65.6	69.1	73.3	77.5	81.9	86.1			
	KIAS	242	243	244	245	247	249	252			
	FF/ENG	1420	1400	1380	1370	1350	1360	1390			
75	%N1	61.0	64.0	67.5	71.7	75.8	80.2	84.4	89.4		
	KIAS	234	236	236	238	239	241	243	247		
	FF/ENG	1340	1320	1300	1290	1260	1260	1300	1360		
70	%N1	59.3	62.0	66.0	69.8	74.0	78.5	82.7	87.3		
	KIAS	227	227	228	229	231	232	235	238		
	FF/ENG	1270	1240	1220	1200	1180	1170	1200	1240		
65	%N1	57.6	60.1	64.3	67.9	72.2	76.5	80.9	85.3		
	KIAS	219	219	220	221	222	224	226	228		
	FF/ENG	1190	1160	1140	1120	1100	1080	1110	1130		
60	%N1	55.7	58.2	62.2	66.0	70.2	74.4	78.8	83.2		
	KIAS	210	210	211	212	213	214	216	219		
	FF/ENG	1110	1080	1060	1040	1020	1000	1020	1040		
55	%N1	53.7	56.2	59.9	64.0	67.9	72.2	76.6	81.1	89.0	
	KIAS	200	201	202	203	204	205	207	209	212	
	FF/ENG	1030	1010	980	960	940	920	930	940	1020	
50	%N1	51.6	54.0	57.6	61.8	65.5	69.9	74.2	78.7	86.2	
	KIAS	191	191	192	193	194	195	196	198	201	
	FF/ENG	960	930	910	890	860	860	850	860	920	
45	%N1	49.2	51.7	55.2	59.0	63.2	67.2	71.5	76.1	83.4	
	KIAS	182	182	182	183	184	185	186	187	190	
	FF/ENG	880	850	840	820	800	790	770	770	820	
40	%N1	46.8	49.1	52.6	56.2	60.5	64.3	68.7	73.2	80.4	
	KIAS	175	175	175	175	175	175	175	176	178	
	FF/ENG	830	800	770	740	730	710	700	690	720	

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight Advisory Information

Chapter PI Section 52

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 15

Dry Runway

	LANDING DISTANCE AND ADJUSTMENTS (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF15	ONE REV	NO REV
MAX MANUAL	900	65/-50	20/25	-30	110	10	-10	20	-20	60	20	35
MAX AUTO	1165	65/-65	30/40	-45	145	0	0	25	-25	110	0	0
AUTOBRAKE 3	1640	100/-110	50/65	-70	240	0	-5	45	-45	175	0	0
AUTOBRAKE 2	2100	145/-150	70/90	-95	325	35	-45	60	-60	160	0	80
AUTOBRAKE 1	2310	170/-175	80/110	-110	380	65	-70	65	-65	155	100	315

Good Reported Braking Action

MAX MANUAL	1235	70/-75	35/45	-55	190	30	-25	30	-30	85	75	135
MAX AUTO	1365	80/-80	35/50	-55	200	25	-20	30	-30	105	90	160
AUTOBRAKE 3	1645	100/-110	50/65	-70	240	5	-5	45	-45	175	10	15
AUTOBRAKE 2	2100	145/-150	70/90	-95	325	35	-45	60	-60	160	0	80

Medium Reported Braking Action

MAX MANUAL	1695	115/-115	55/75	-85	315	70	-55	45	-45	115	250	420
MAX AUTO	1755	120/-120	55/75	-85	315	65	-50	45	-45	135	255	430
AUTOBRAKE 3	1795	120/-125	60/80	-90	330	50	-35	50	-50	175	240	360
AUTOBRAKE 2	2120	150/-155	70/95	-105	370	60	-60	60	-60	160	110	225

Poor Reported Braking Action

MAX MANUAL	2210	170/-165	80/115	-130	505	180	-115	60	-65	140	645	1025
MAX AUTO	2300	165/-165	80/115	-130	500	175	-115	60	-65	145	655	1030
AUTOBRAKE 3	2300	170/-165	80/115	-130	500	165	-105	60	-65	170	655	1035
AUTOBRAKE 2	2395	175/-175	85/120	-135	520	165	-110	65	-70	160	580	905

Reference distance is for sea level, standard day, no wind or slope, VREF15 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 75 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Normal Configuration Landing Distances****Flaps 30****Dry Runway**

	LANDING DISTANCE AND ADJUSTMENTS (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF30	ONE REV	NO REV
MAX MANUAL	855	55/-45	20/25	-30	110	10	-10	15	-15	60	15	30
MAX AUTO	1095	55/-60	25/35	-40	135	0	0	25	-25	105	0	0
AUTOBRAKE 3	1530	90/-100	45/55	-65	230	0	-10	40	-40	155	0	5
AUTOBRAKE 2	1945	130/-135	60/80	-90	310	35	-40	50	-50	150	0	75
AUTOBRAKE 1	2125	155/-155	70/95	-105	365	60	-60	60	-60	145	105	275

Good Reported Braking Action

MAX MANUAL	1170	65/-70	30/40	-50	185	25	-25	25	-30	85	65	120
MAX AUTO	1295	70/-75	35/45	-55	195	20	-20	30	-30	100	75	135
AUTOBRAKE 3	1530	90/-100	45/55	-70	230	5	-10	40	-40	155	10	15
AUTOBRAKE 2	1945	130/-135	60/80	-90	310	35	-40	50	-50	150	0	75

Medium Reported Braking Action

MAX MANUAL	1595	105/-105	50/70	-85	310	70	-55	40	-45	110	210	360
MAX AUTO	1645	110/-110	50/70	-85	310	60	-45	40	-45	130	215	365
AUTOBRAKE 3	1675	110/-115	55/70	-85	320	50	-40	45	-45	155	205	315
AUTOBRAKE 2	1965	135/-140	65/85	-100	355	60	-55	55	-55	150	95	205

Poor Reported Braking Action

MAX MANUAL	2060	150/-150	75/100	-125	485	165	-110	55	-60	130	530	850
MAX AUTO	2135	150/-150	75/100	-125	485	165	-100	55	-60	145	535	855
AUTOBRAKE 3	2135	155/-150	75/100	-125	485	160	-100	55	-60	150	540	870
AUTOBRAKE 2	2220	160/-160	75/105	-130	500	155	-105	60	-65	150	470	755

Reference distance is for sea level, standard day, no wind or slope, VREF30 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 70 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Normal Configuration Landing Distances****Flaps 40****Dry Runway**

	LANDING DISTANCE AND ADJUSTMENTS (M)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF40	ONE REV	NO REV
MAX MANUAL	820	55/-40	20/25	-30	105	10	-10	15	-15	60	15	25
MAX AUTO	1030	60/-55	25/35	-40	130	0	0	20	-20	100	0	0
AUTOBRAKE 3	1420	95/-90	45/60	-65	220	0	-5	35	-35	155	0	0
AUTOBRAKE 2	1815	130/-125	60/80	-85	300	25	-35	50	-50	150	0	40
AUTOBRAKE 1	2005	150/-145	70/95	-100	355	50	-60	55	-55	145	70	210

Good Reported Braking Action

MAX MANUAL	1125	70/-65	30/45	-50	180	25	-25	25	-25	85	60	110
MAX AUTO	1230	75/-70	35/45	-55	190	20	-20	25	-30	105	70	125
AUTOBRAKE 3	1420	95/-90	45/60	-65	220	5	-5	35	-35	155	10	15
AUTOBRAKE 2	1815	130/-125	60/80	-85	300	25	-35	50	-50	150	0	40

Medium Reported Braking Action

MAX MANUAL	1520	110/-100	50/70	-80	300	65	-55	40	-40	115	190	325
MAX AUTO	1560	110/-105	50/70	-80	300	60	-45	40	-40	130	190	330
AUTOBRAKE 3	1585	115/-105	55/75	-85	310	50	-35	40	-45	155	195	305
AUTOBRAKE 2	1830	135/-130	60/85	-95	340	50	-50	50	-50	150	90	170

Poor Reported Braking Action

MAX MANUAL	1965	155/-140	70/100	-125	480	165	-105	50	-55	135	480	775
MAX AUTO	2045	155/-140	70/100	-125	475	165	-105	50	-55	140	485	785
AUTOBRAKE 3	2045	155/-145	75/100	-125	475	155	-100	50	-60	145	485	790
AUTOBRAKE 2	2095	160/-150	75/105	-125	490	150	-100	55	-60	150	445	695

Reference distance is for sea level, standard day, no wind or slope, VREF40 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 65 m.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (305 m of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance
Dry Runway**

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	1190	160/-70	30/65	-40/135	15/-10	25/-25	80
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1430	90/-85	40/55	-70/255	40/-35	35/-35	110
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	990	65/-50	20/30	-35/120	10/-10	20/-20	90
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	940	60/-50	20/25	-35/115	10/-10	20/-20	85
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	900	60/-45	20/30	-35/115	10/-10	20/-20	85
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1010	50/-55	25/30	-40/135	15/-15	25/-25	75
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	1385	75/-80	35/45	-55/185	35/-30	35/-35	155
LEADING EDGE FLAPS TRANSIT	VREF15+15	1005	70/-55	20/30	-35/120	10/-10	20/-20	65
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	905	65/-55	20/25	-35/115	10/-10	20/-20	65
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	860	55/-45	15/25	-30/110	10/-10	15/-15	60

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.
**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Dry Runway**

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	895	65/-50	20/25	-30/115	10/-10	20/-20	60
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	895	65/-50	20/25	-30/115	10/-10	20/-20	60
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	855	55/-45	15/25	-30/110	10/-10	15/-15	60
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	895	65/-50	20/25	-30/115	10/-10	20/-20	60
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	995	90/-55	25/30	-35/120	10/-10	20/-20	60
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	855	55/-45	15/25	-30/110	10/-10	15/-15	60
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	895	65/-50	20/25	-30/115	10/-10	20/-20	60
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	995	90/-55	25/30	-35/120	10/-10	20/-20	60
TRAILING EDGE FLAPS UP	VREF40+40	1065	110/-60	25/35	-35/125	10/-10	25/-25	60

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Good Reported Braking Action

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	1590	90/-90	45/60	-60/215	30/-30	40/-40	85
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	1595	110/-100	45/60	-85/310	60/-50	40/-40	120
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	1430	90/-90	40/55	-60/215	40/-35	35/-35	130
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	1335	80/-85	35/45	-60/205	35/-30	35/-35	125
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	1265	85/-75	35/50	-60/200	35/-30	30/-30	125
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1280	75/-80	35/45	-55/195	30/-25	30/-30	95
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	1710	100/-105	45/60	-70/245	55/-50	45/-45	180
LEADING EDGE FLAPS TRANSIT	VREF15+15	1380	80/-80	35/50	-60/205	30/-25	35/-35	90
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	1270	75/-75	30/45	-55/200	30/-25	30/-30	95
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	1205	70/-70	30/40	-55/195	30/-25	30/-30	90

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.
**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	1225	70/-75	30/45	-55/190	25/-25	30/-30	85
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	1225	70/-75	30/45	-55/190	25/-25	30/-30	85
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1165	65/-65	30/40	-50/185	25/-25	25/-25	85
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1225	70/-75	30/45	-55/190	25/-25	30/-30	85
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1350	75/-75	35/50	-55/200	25/-25	35/-35	80
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1165	65/-65	30/40	-50/185	25/-25	25/-25	85
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1225	70/-75	30/45	-55/190	25/-25	30/-30	85
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1350	75/-75	35/50	-55/200	25/-25	35/-35	80
TRAILING EDGE FLAPS UP	VREF40+40	1440	80/-80	40/55	-60/205	30/-25	35/-35	80

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Medium Reported Braking Action

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	2245	150/-145	75/100	-100/360	80/-70	65/-65	115
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	2015	155/-140	65/90	-125/485	135/-100	50/-55	140
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	1945	145/-140	60/85	-100/350	90/-75	55/-55	165
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	1805	130/-130	55/75	-95/335	80/-70	50/-50	155
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	1705	130/-120	55/80	-90/330	80/-65	45/-45	150
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	1745	120/-120	55/75	-90/325	70/-60	45/-45	125
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	2350	160/-160	70/100	-110/395	120/-105	60/-65	220
LEADING EDGE FLAPS TRANSIT	VREF15+15	1870	125/-125	60/80	-90/330	70/-60	50/-50	115
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	1805	125/-125	55/70	-95/340	80/-70	50/-50	130
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	1680	115/-115	50/65	-90/330	75/-65	45/-45	125

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.
**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Medium Reported Braking Action**

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	1665	115/-115	50/70	-85/315	65/-55	45/-45	115
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	1665	115/-115	50/70	-85/315	65/-55	45/-45	115
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	1565	105/-105	45/60	-80/305	60/-50	40/-40	110
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	1665	115/-115	50/70	-85/315	65/-55	45/-45	115
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	1860	125/-120	60/80	-90/330	70/-60	50/-50	110
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	1565	105/-105	45/60	-80/305	60/-50	40/-40	110
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	1665	115/-115	50/70	-85/315	65/-55	45/-45	115
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	1860	125/-120	60/80	-90/330	70/-60	50/-50	110
TRAILING EDGE FLAPS UP	VREF40+40	2005	135/-130	65/90	-95/340	75/-65	55/-55	115

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Poor Reported Braking Action

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	2975	220/-210	110/150	-150/565	185/-145	90/-90	150
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	2675	220/-200	95/135	-205/895	480/-230	70/-80	155
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	2510	65/-65	90/130	-145/545	195/-145	70/-75	190
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	2315	180/-175	80/115	-140/525	180/-135	65/-70	175
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	2185	185/-165	80/110	-135/515	170/-130	60/-65	170
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	2260	175/-170	80/110	-135/510	160/-120	60/-65	150
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	3005	230/-220	105/145	-165/600	240/-185	80/-85	240
LEADING EDGE FLAPS TRANSIT	VREF15+15	2400	180/-175	80/115	-135/520	160/-120	65/-70	135
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	2460	185/-185	80/110	-150/560	205/-150	70/-75	160
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	2260	165/-165	70/95	-140/535	185/-135	65/-65	150

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (305 m of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.
**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

		LANDING DISTANCE AND ADJUSTMENTS (M)						
		REF DIST	WEIGHT ADJ	ALTITUDE ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	60000 KG LANDING WEIGHT	PER 5000 KG ABOVE/ BELOW 60000 KG	PER 1000 FT STD/HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	2160	165/-160	75/100	-130/495	150/-110	60/-60	135
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	2160	165/-160	75/100	-130/495	150/-110	60/-60	135
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	2010	150/-145	65/90	-125/480	140/-105	55/-60	130
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	2160	165/-160	75/100	-130/495	150/-110	60/-60	135
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	2425	185/-170	85/120	-135/520	155/-120	70/-70	135
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	2010	150/-145	65/90	-125/480	140/-105	55/-60	130
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	2160	165/-160	75/100	-130/495	150/-110	60/-60	135
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	2425	185/-170	85/120	-135/520	155/-120	70/-70	135
TRAILING EDGE FLAPS UP	VREF40+40	2645	195/-185	95/130	-145/540	170/-130	75/-80	140

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (305 m of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Reference Brake Energy Per Brake (Millions of Foot Pounds)**

		WIND CORRECTED BRAKES ON SPEED (KIAS)																	
		80			100			120			140			160			180		
WEIGHT (1000 KG)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10
80	0	15.8	17.9	20.5	23.1	26.2	30.0	31.4	35.7	41.1	40.6	46.2	53.3	50.4	57.4	66.5	59.8	68.3	79.4
	10	16.3	18.5	21.2	23.8	27.1	31.0	32.4	36.9	42.4	41.9	47.7	55.0	52.0	59.3	68.6	61.8	70.4	81.9
	15	16.6	18.8	21.5	24.2	27.5	31.5	32.9	37.4	43.0	42.5	48.4	55.8	52.8	60.1	69.6	62.7	71.4	83.0
	20	16.8	19.1	21.8	24.5	27.9	31.9	33.4	38.0	43.6	43.1	49.0	56.5	53.5	60.9	70.5	63.5	72.3	84.0
	30	17.3	19.6	22.4	25.2	28.6	32.8	34.3	38.9	44.7	44.2	50.3	57.9	54.8	62.4	72.2	65.0	74.0	85.9
	40	17.5	19.9	22.7	25.5	29.0	33.2	34.8	39.5	45.4	44.9	51.1	59.0	55.8	63.5	73.6	66.2	75.5	87.8
50	17.5	19.9	22.8	25.7	29.2	33.5	35.0	39.9	45.9	45.4	51.7	59.8	56.6	64.6	75.0	67.4	77.0	89.9	
70	0	14.3	16.2	18.5	20.7	23.6	27.0	28.1	32.0	36.7	36.2	41.2	47.5	44.9	51.1	59.1	54.1	61.6	71.5
	10	14.8	16.8	19.2	21.4	24.4	27.9	29.1	33.0	37.9	37.4	42.6	49.0	46.4	52.8	61.0	55.8	63.6	73.7
	15	15.0	17.1	19.5	21.8	24.7	28.3	29.5	33.5	38.5	38.0	43.2	49.7	47.0	53.6	61.9	56.6	64.5	74.8
	20	15.2	17.3	19.7	22.1	25.1	28.7	29.9	34.0	39.0	38.5	43.8	50.4	47.7	54.3	62.7	57.3	65.3	75.7
	30	15.7	17.8	20.3	22.7	25.8	29.5	30.7	34.9	40.0	39.5	44.9	51.7	48.9	55.6	64.2	58.8	66.9	77.5
	40	15.9	18.0	20.5	23.0	26.1	29.9	31.1	35.4	40.6	40.1	45.6	52.5	49.7	56.6	65.4	59.8	68.2	79.1
50	15.9	18.0	20.6	23.1	26.2	30.1	31.3	35.7	41.0	40.5	46.1	53.2	50.3	57.4	66.5	60.7	69.4	80.7	
60	0	12.8	14.6	16.6	18.4	20.9	23.9	24.8	28.2	32.3	31.7	36.1	41.5	39.3	44.7	51.6	47.4	53.9	62.4
	10	13.3	15.1	17.2	19.0	21.6	24.7	25.6	29.1	33.3	32.8	37.3	42.9	40.6	46.2	53.3	48.9	55.7	64.4
	15	13.5	15.3	17.5	19.3	22.0	25.1	26.0	29.5	33.8	33.3	37.9	43.5	41.2	46.9	54.0	49.6	56.5	65.3
	20	13.7	15.5	17.7	19.6	22.3	25.5	26.4	29.9	34.3	33.8	38.4	44.1	41.8	47.5	54.7	50.3	57.2	66.1
	30	14.1	16.0	18.2	20.1	22.9	26.1	27.1	30.7	35.2	34.6	39.4	45.2	42.8	48.7	56.1	51.5	58.6	67.8
	40	14.2	16.1	18.4	20.4	23.2	26.5	27.4	31.2	35.7	35.1	40.0	46.0	43.5	49.5	57.1	52.4	59.7	69.1
50	14.2	16.2	18.5	20.5	23.3	26.6	27.6	31.4	36.0	35.4	40.3	46.5	44.0	50.1	57.9	53.1	60.6	70.3	
50	0	11.4	12.9	14.7	16.1	18.3	20.9	21.4	24.3	27.9	27.3	31.0	35.6	33.5	38.1	43.9	40.3	45.8	52.9
	10	11.8	13.4	15.2	16.6	18.9	21.6	22.2	25.2	28.8	28.2	32.0	36.7	34.6	39.4	45.3	41.6	47.3	54.6
	15	11.9	13.6	15.5	16.9	19.2	21.9	22.5	25.6	29.2	28.6	32.5	37.3	35.2	40.0	46.0	42.2	48.0	55.4
	20	12.1	13.8	15.7	17.1	19.5	22.2	22.8	25.9	29.7	29.0	32.9	37.8	35.6	40.5	46.6	42.8	48.7	56.1
	30	12.5	14.1	16.1	17.6	20.0	22.8	23.4	26.6	30.4	29.8	33.8	38.8	36.6	41.6	47.8	43.9	49.9	57.5
	40	12.6	14.3	16.3	17.8	20.2	23.1	23.7	27.0	30.9	30.2	34.3	39.4	37.1	42.2	48.6	44.6	50.8	58.5
50	12.6	14.3	16.3	17.9	20.3	23.2	23.8	27.1	31.1	30.4	34.6	39.7	37.4	42.6	49.1	45.1	51.4	59.4	
40	0	10.0	11.3	12.9	13.8	15.6	17.8	18.1	20.6	23.5	22.8	25.9	29.6	27.8	31.6	36.3	33.2	37.7	43.4
	10	10.3	11.7	13.3	14.2	16.2	18.4	18.7	21.2	24.3	23.5	26.7	30.6	28.7	32.7	37.5	34.3	39.0	44.8
	15	10.5	11.9	13.5	14.4	16.4	18.7	19.0	21.6	24.7	23.9	27.1	31.1	29.2	33.1	38.0	34.8	39.5	45.5
	20	10.6	12.0	13.7	14.7	16.6	19.0	19.3	21.9	25.0	24.2	27.5	31.5	29.6	33.6	38.6	35.3	40.1	46.1
	30	10.9	12.4	14.1	15.1	17.1	19.5	19.8	22.5	25.7	24.9	28.3	32.4	30.4	34.5	39.6	36.2	41.1	47.3
	40	11.0	12.5	14.3	15.2	17.3	19.7	20.0	22.8	26.0	25.2	28.7	32.8	30.8	35.0	40.2	36.7	41.8	48.0
50	11.0	12.5	14.3	15.3	17.3	19.8	20.1	22.9	26.2	25.3	28.8	33.1	31.0	35.3	40.5	37.0	42.2	48.6	

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.6	15.9	24.8	34.3	44.3	54.6	65.2	76.0	86.9
	MAX AUTO	7.1	14.7	22.8	31.5	40.9	51.1	62.0	73.7	86.4
	AUTOBRAKE 3	6.6	13.5	20.8	28.5	36.9	45.9	55.7	66.5	78.4
	AUTOBRAKE 2	6.0	12.1	18.4	25.1	32.2	40.0	48.4	57.8	68.1
	AUTOBRAKE 1	5.6	11.0	16.4	22.1	28.0	34.4	41.5	49.4	58.3

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.2	15.0	23.4	32.2	41.5	51.2	61.2	71.5	82.1
	MAX AUTO	5.9	12.3	19.4	27.2	35.7	45.0	55.1	66.2	78.3
	AUTOBRAKE 3	4.1	8.8	14.0	20.0	26.6	34.0	42.1	51.1	60.9
	AUTOBRAKE 2	2.2	4.8	8.1	11.9	16.3	21.4	27.2	33.6	40.8
	AUTOBRAKE 1	1.7	3.5	5.5	7.9	10.7	14.1	18.3	23.3	29.2

Cooling Time (Minutes) - Category H Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category P Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)							
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS							
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE REQUIRED	1	4	5	6	7	CAUTION		FUSE PLUG MELT ZONE
		6.7	16.0	24.1	35.2	45.9			
GROUND									

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule - High Altitudes
Reference Brake Energy Per Brake (Millions of Foot Pounds)

		WIND CORRECTED BRAKES ON SPEED (KIAS)															
		60				100				140				180			
WEIGHT 1000 KG	OAT (°C)	PRESSURE ALTITUDE (1000 FT)															
		10	12	14	14.5	10	12	14	14.5	10	12	14	14.5	10	12	14	14.5
80	0	12.6	13.2	13.9	14.1	30.0	31.8	33.7	34.2	53.3	56.7	60.5	61.6	79.4	85.0		
	10	13.0	13.7	14.4	14.6	31.0	32.8	34.8	35.4	55.0	58.5	62.5	63.6	81.9	87.6		
	15	13.2	13.9	14.6	14.8	31.5	33.3	35.3	35.9	55.8	59.4	63.3	64.4	83.0	88.8		
	20	13.4	14.1	14.9	15.1	31.9	33.8	35.8	36.4	56.5	60.1	64.2	65.3	84.0	89.9		
	30	13.7	14.5	15.3	15.5	32.8	34.7	36.7	37.3	57.9	61.6	65.7	66.9	85.9	91.9		
	40	13.9	14.7	15.4	15.7	33.2	35.2	37.3	37.9	59.0	62.7	67.0	68.2	87.8	94.0		
	50	13.9	14.7	15.5	15.7	33.5	35.5	37.6	38.2	59.8	63.7	68.1	69.3	89.9	96.4		
70	0	11.5	12.1	12.8	13.0	27.0	28.5	30.2	30.7	47.5	50.4	53.8	54.7	71.5	76.4	82.0	83.6
	10	11.9	12.6	13.2	13.4	27.9	29.5	31.2	31.7	49.0	52.1	55.5	56.5	73.7	78.8	84.5	86.1
	15	12.1	12.7	13.4	13.6	28.3	29.9	31.7	32.2	49.7	52.8	56.3	57.3	74.8	79.9	85.7	87.3
	20	12.3	12.9	13.6	13.8	28.7	30.3	32.1	32.6	50.4	53.5	57.0	58.0	75.7	80.9	86.7	88.4
	30	12.6	13.3	14.0	14.2	29.5	31.1	33.0	33.5	51.7	54.9	58.5	59.5	77.5	82.7	88.7	90.4
	40	12.8	13.4	14.2	14.4	29.9	31.6	33.5	34.0	52.5	55.8	59.5	60.5	79.1	84.5	90.7	92.4
	50	12.8	13.5	14.2	14.4	30.1	31.8	33.7	34.2	53.2	56.6	60.4	61.4	80.7	86.4	92.9	94.7
60	0	10.5	11.0	11.6	11.8	23.9	25.3	26.7	27.1	41.5	44.1	46.9	47.7	62.4	66.6	71.2	72.5
	10	10.8	11.4	12.0	12.2	24.7	26.1	27.6	28.0	42.9	45.5	48.4	49.2	64.4	68.7	73.5	74.8
	15	11.0	11.6	12.2	12.4	25.1	26.5	28.1	28.5	43.5	46.2	49.1	49.9	65.3	69.6	74.5	75.9
	20	11.2	11.8	12.4	12.6	25.5	26.9	28.5	28.9	44.1	46.8	49.8	50.6	66.1	70.5	75.4	76.8
	30	11.5	12.1	12.7	12.9	26.1	27.6	29.2	29.7	45.2	48.0	51.0	51.8	67.8	72.2	77.2	78.6
	40	11.6	12.2	12.9	13.1	26.5	28.0	29.6	30.1	46.0	48.8	51.9	52.7	69.1	73.6	78.8	80.3
	50	11.6	12.2	12.9	13.1	26.6	28.2	29.8	30.3	46.5	49.3	52.5	53.4	70.3	75.1	80.5	82.0
50	0	9.5	10.0	10.5	10.7	20.9	22.1	23.3	23.7	35.6	37.7	40.0	40.7	52.9	56.3	60.1	61.1
	10	9.8	10.3	10.9	11.1	21.6	22.8	24.1	24.5	36.7	38.9	41.3	42.0	54.6	58.1	62.0	63.1
	15	10.0	10.5	11.0	11.2	21.9	23.2	24.5	24.9	37.3	39.5	41.9	42.6	55.4	58.9	62.9	64.0
	20	10.1	10.6	11.2	11.4	22.2	23.5	24.8	25.2	37.8	40.0	42.5	43.2	56.1	59.7	63.7	64.8
	30	10.4	10.9	11.5	11.7	22.8	24.1	25.5	25.9	38.8	41.1	43.6	44.3	57.5	61.2	65.3	66.4
	40	10.5	11.1	11.6	11.8	23.1	24.4	25.8	26.2	39.4	41.7	44.3	45.0	58.5	62.3	66.5	67.7
	50	10.5	11.1	11.7	11.9	23.2	24.5	25.9	26.3	39.7	42.1	44.8	45.5	59.4	63.3	67.6	68.8
40	0	8.5	9.0	9.5	9.6	17.8	18.8	19.9	20.2	29.6	31.4	33.2	33.7	43.4	46.1	49.0	49.8
	10	8.8	9.3	9.8	9.9	18.4	19.5	20.5	20.8	30.6	32.4	34.4	34.9	44.8	47.6	50.6	51.5
	15	9.0	9.4	9.9	10.1	18.7	19.8	20.9	21.2	31.1	32.9	34.9	35.4	45.5	48.3	51.4	52.2
	20	9.1	9.6	10.1	10.3	19.0	20.0	21.2	21.5	31.5	33.4	35.4	35.9	46.1	48.9	52.1	52.9
	30	9.4	9.9	10.4	10.5	19.5	20.6	21.7	22.0	32.4	34.2	36.3	36.9	47.3	50.2	53.4	54.3
	40	9.5	10.0	10.5	10.7	19.7	20.8	22.0	22.3	32.8	34.7	36.8	37.4	48.0	51.0	54.3	55.2
	50	9.5	10.0	10.5	10.7	19.8	20.9	22.1	22.4	33.1	35.0	37.1	37.7	48.6	51.6	55.0	55.9

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.6	15.9	24.8	34.3	44.3	54.6	65.2	76.0	86.9
	MAX AUTO	7.1	14.7	22.8	31.5	40.9	51.1	62.0	73.7	86.4
	AUTOBRAKE 3	6.6	13.5	20.8	28.5	36.9	45.9	55.7	66.5	78.4
	AUTOBRAKE 2	6.0	12.1	18.4	25.1	32.2	40.0	48.4	57.8	68.1
	AUTOBRAKE 1	5.6	11.0	16.4	22.1	28.0	34.4	41.5	49.4	58.3

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.2	15.0	23.4	32.2	41.5	51.2	61.2	71.5	82.1
	MAX AUTO	5.9	12.3	19.4	27.2	35.7	45.0	55.1	66.2	78.3
	AUTOBRAKE 3	4.1	8.8	14.0	20.0	26.6	34.0	42.1	51.1	60.9
	AUTOBRAKE 2	2.2	4.8	8.1	11.9	16.3	21.4	27.2	33.6	40.8
	AUTOBRAKE 1	1.7	3.5	5.5	7.9	10.7	14.1	18.3	23.3	29.2

Cooling Time (Minutes) - Category H Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category P Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)							
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS							
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	35.2	45.9			
GROUND									

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Intentionally
Blank

Performance Inflight
Engine Inoperative
Chapter PI
Section 53
ENGINE INOP
Initial Max Continuous %N1
Based on .80M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.9	96.6	96.4	96.2	96.0	95.5	95.1	94.8	94.2
15	97.5	97.2	96.9	96.8	96.7	96.3	95.8	95.6	95.0
10	98.1	97.9	97.5	97.4	97.4	97.0	96.6	96.4	95.9
5	98.1	98.6	98.4	98.1	98.1	97.8	97.4	97.2	96.7
0	97.3	98.5	99.2	99.0	98.9	98.6	98.2	98.0	97.7
-5	96.5	97.8	98.9	99.8	99.7	99.3	99.0	98.8	98.5
-10	95.8	97.0	98.2	99.4	100.5	100.2	99.9	99.7	99.5
-15	95.0	96.2	97.4	98.6	99.9	101.0	100.8	100.6	100.4
-20	94.2	95.4	96.6	97.8	99.1	100.2	100.8	100.6	100.4
-25	93.4	94.6	95.8	97.0	98.3	99.4	100.0	99.8	99.6
-30	92.6	93.8	95.0	96.2	97.5	98.6	99.1	98.9	98.7
-35	91.7	93.0	94.1	95.3	96.6	97.7	98.3	98.1	97.9
-40	90.9	92.2	93.3	94.5	95.8	96.9	97.4	97.2	97.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE ON	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

ENGINE INOP

**Max Continuous %N1
37000 FT to 29000 FT Pressure Altitudes**

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.6	97.6	98.5	99.4	100.2	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.1	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.5	97.4	98.3	99.2	100.1	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.3	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.4	98.3	99.2	100.0	100.8	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.3	98.2	99.1	100.0	100.9	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.1	98.0	98.9	99.7	100.6	101.5	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	98.1	99.0	99.9	100.8	101.6	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.1	99.9	100.1	99.1	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

ENGINE INOP**Max Continuous %N1****27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT												TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

ENGINE INOP

**Max Continuous %N1
18000 FT to 12000 FT Pressure Altitudes**

18000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.34	98.5	99.3	100.2	101.0	101.8	102.6	101.6	100.3	99.2	98.1	97.0	95.9	
200	.42	98.7	99.6	100.4	101.2	102.0	102.8	103.1	101.7	100.4	99.3	98.3	97.3	
240	.51	97.8	98.7	99.5	100.3	101.1	101.9	102.7	102.5	101.1	99.9	99.0	98.1	
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8	
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2	
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6	
16000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.33	97.1	98.0	98.8	99.6	100.4	101.2	101.6	100.3	99.1	98.1	97.1	96.1	
200	.41	98.0	98.8	99.6	100.4	101.2	102.0	102.8	102.5	101.3	100.2	99.3	98.3	
240	.49	97.1	97.9	98.7	99.5	100.3	101.1	101.9	102.7	101.8	100.5	99.6	98.7	
280	.57	95.6	96.4	97.2	98.0	98.8	99.6	100.3	101.1	101.8	100.9	99.8	99.0	
320	.64	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.2	99.4	
360	.72	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.9	99.6	
14000 FT PRESS ALT					TAT (°C)									
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30	
160	.31	96.6	97.4	98.2	99.0	99.8	100.6	100.4	99.1	98.0	97.1	96.2	95.3	
200	.39	97.1	97.9	98.7	99.5	100.3	101.1	101.8	101.5	101.0	100.1	99.3	98.4	
240	.47	96.6	97.4	98.2	99.0	99.8	100.6	101.3	101.8	101.1	100.3	99.5	98.7	
280	.54	95.5	96.3	97.1	97.8	98.6	99.4	100.1	100.9	101.0	100.1	99.2	98.5	
320	.62	94.1	94.9	95.7	96.5	97.2	98.0	98.7	99.5	100.2	100.3	99.5	98.8	
360	.69	92.2	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.6	99.0	
12000 FT PRESS ALT					TAT (°C)									
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35	
160	.30	96.3	97.0	97.8	98.6	99.4	100.1	99.3	98.1	97.1	96.3	95.4	94.5	
200	.38	97.1	97.9	98.7	99.5	100.3	101.0	101.5	100.8	99.8	99.0	98.2	97.3	
240	.45	96.5	97.3	98.0	98.8	99.6	100.3	101.1	101.0	100.1	99.4	98.6	97.9	
280	.52	95.5	96.3	97.0	97.8	98.6	99.3	100.0	100.8	100.3	99.4	98.6	98.0	
320	.60	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	99.7	98.9	98.2	
360	.67	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.4	99.1	98.5	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

ENGINE INOP**Max Continuous %N1****10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT		TAT (°C)											
CIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT		TAT (°C)											
CIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT		TAT (°C)											
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT		TAT (°C)											
CIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	82	256	18200	17000	15800
80	77	249	19800	18700	17400
75	72	241	21300	20400	19200
70	67	233	22800	21900	20900
65	62	225	24500	23600	22600
60	57	216	26500	25500	24500
55	53	207	28600	27700	26700
50	48	198	30700	30000	29000
45	43	188	32900	32200	31300
40	38	179	35300	34600	33700

Includes APU fuel burn.

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown/LRC Cruise Range Capability****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEAD WIND COMPONENT (KTS)						TAIL WIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
141	130	121	113	106	100	94	89	85	81	77
282	260	242	226	212	200	188	179	170	162	154
422	390	363	339	318	300	283	268	255	243	232
563	520	484	452	424	400	378	358	340	324	310
703	650	604	565	530	500	472	448	426	406	387
843	779	725	678	636	600	567	537	511	487	465
982	909	846	791	742	700	661	627	596	569	543
1122	1038	966	903	848	800	756	717	682	650	621
1262	1168	1087	1016	954	900	851	807	767	732	699
1401	1297	1207	1129	1060	1000	945	897	853	813	777
1541	1426	1328	1242	1166	1100	1040	986	938	895	855
1680	1556	1448	1355	1272	1200	1135	1076	1024	976	933
1820	1685	1569	1467	1378	1300	1229	1166	1109	1057	1010
1960	1815	1689	1580	1484	1400	1324	1256	1195	1139	1088
2100	1944	1810	1693	1590	1500	1418	1346	1280	1220	1166
2240	2074	1931	1806	1697	1600	1513	1435	1365	1302	1244
2381	2204	2052	1919	1803	1700	1607	1525	1450	1383	1321
2522	2334	2173	2032	1909	1800	1702	1615	1536	1464	1399

Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 KG)										TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)										
	40	45	50	55	60	65	70	75	80	85	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0.6	0:18
200	0.8	0.9	0.9	0.9	1.0	1.1	1.2	1.2	1.3	1.3	0:35
300	1.3	1.4	1.5	1.5	1.7	1.8	1.9	2.0	2.1	2.2	0:52
400	1.7	1.8	2.0	2.1	2.3	2.5	2.6	2.8	2.9	3.1	1:10
500	2.1	2.3	2.5	2.7	2.9	3.1	3.3	3.5	3.7	3.9	1:27
600	2.5	2.8	3.0	3.2	3.5	3.7	4.0	4.2	4.4	4.7	1:44
700	2.9	3.2	3.5	3.8	4.0	4.3	4.6	4.9	5.2	5.5	2:01
800	3.3	3.6	4.0	4.3	4.6	4.9	5.3	5.6	5.9	6.3	2:18
900	3.7	4.1	4.4	4.8	5.2	5.5	5.9	6.3	6.6	7.0	2:35
1000	4.1	4.5	4.9	5.3	5.7	6.1	6.6	7.0	7.4	7.8	2:52
1100	4.5	4.9	5.4	5.8	6.3	6.7	7.2	7.6	8.1	8.6	3:09
1200	4.9	5.4	5.9	6.3	6.8	7.3	7.8	8.3	8.8	9.3	3:26
1300	5.3	5.8	6.3	6.8	7.4	7.9	8.4	9.0	9.5	10.1	3:43
1400	5.6	6.2	6.8	7.3	7.9	8.5	9.1	9.6	10.2	10.8	4:00
1500	6.0	6.6	7.2	7.8	8.5	9.1	9.7	10.3	10.9	11.5	4:17
1600	6.4	7.0	7.7	8.3	9.0	9.6	10.3	10.9	11.6	12.3	4:35
1700	6.8	7.4	8.1	8.8	9.5	10.2	10.9	11.6	12.3	13.0	4:52
1800	7.1	7.9	8.6	9.3	10.0	10.8	11.5	12.2	12.9	13.7	5:09

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at LRC speed.

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15400	13200	10200
80	17300	15600	13000
75	19300	17700	15600
70	21000	19800	17800
65	22600	21500	20100
60	24200	23200	21900
55	26500	25000	23800
50	29200	27900	26200
45	31500	30600	29300
40	33900	33000	31900

With engine anti-ice on, decrease altitude capability by 1300 ft.
With engine and wing anti-ice on, decrease altitude capability by 5900 ft.

ENGINE INOP**MAX CONTINUOUS THRUST****Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)										
		10	15	17	19	21	23	25	27	29	31	33
85	%N1	91.7	95.4	97.8								
	MACH	.548	.582	.597								
	KIAS	304	294	291								
	FF/ENG	3048	2989	3006								
80	%N1	90.3	93.7	95.7	98.5							
	MACH	.536	.572	.586	.601							
	KIAS	297	289	285	281							
	FF/ENG	2883	2820	2805	2840							
75	%N1	88.7	92.2	93.8	96.0							
	MACH	.524	.562	.575	.589							
	KIAS	290	284	279	276							
	FF/ENG	2718	2662	2629	2625							
70	%N1	87.1	90.6	92.0	93.8	96.2						
	MACH	.510	.549	.564	.577	.592						
	KIAS	283	277	274	270	266						
	FF/ENG	2553	2499	2471	2440	2452						
65	%N1	85.4	88.9	90.3	91.8	93.7	96.4					
	MACH	.496	.534	.550	.565	.579	.594					
	KIAS	274	269	267	264	260	256					
	FF/ENG	2390	2336	2310	2281	2258	2283					
60	%N1	83.6	87.0	88.5	89.9	91.5	93.5	96.3				
	MACH	.480	.519	.535	.550	.566	.579	.595				
	KIAS	266	261	259	257	254	250	246				
	FF/ENG	2226	2172	2146	2120	2096	2080	2113				
55	%N1	81.5	85.0	86.4	87.9	89.4	91.0	93.1	96.0			
	MACH	.464	.502	.518	.534	.550	.566	.579	.595			
	KIAS	256	253	251	249	246	244	239	236			
	FF/ENG	2059	2008	1983	1958	1936	1916	1906	1941			
50	%N1	79.3	82.8	84.3	85.7	87.2	88.7	90.3	92.5	95.5		
	MACH	.446	.483	.499	.515	.531	.548	.564	.578	.594		
	KIAS	246	243	242	240	238	236	233	229	226		
	FF/ENG	1894	1845	1821	1796	1774	1754	1740	1735	1765		
45	%N1	76.9	80.4	81.8	83.3	84.7	86.2	87.7	89.3	91.6	94.6	
	MACH	.427	.463	.479	.495	.511	.528	.544	.561	.576	.592	
	KIAS	236	233	231	230	228	226	224	222	218	215	
	FF/ENG	1733	1680	1658	1635	1613	1593	1578	1570	1564	1589	
40	%N1	74.5	77.7	79.2	80.6	82.1	83.5	85.0	86.5	88.1	90.3	93.2
	MACH	.407	.441	.456	.472	.488	.505	.521	.539	.556	.571	.587
	KIAS	225	222	220	219	218	216	214	213	210	207	204
	FF/ENG	1575	1516	1494	1473	1453	1434	1419	1409	1401	1395	1409

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (KTS)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
295	270	248	230	214	200	190	180	172	164	158
594	543	498	461	429	400	379	361	344	328	315
895	817	749	692	643	600	569	541	516	492	472
1196	1091	999	923	858	800	759	722	687	656	629
1500	1368	1252	1155	1073	1000	949	902	859	820	785
1805	1645	1504	1387	1288	1200	1138	1081	1030	983	942
2113	1924	1758	1621	1504	1400	1327	1261	1201	1146	1098
2422	2204	2013	1854	1719	1600	1517	1442	1372	1309	1253
2733	2485	2267	2087	1935	1800	1707	1621	1543	1472	1409

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.4	0:42	1.2	0:41	1.1	0:39	1.0	0:38	0.9	0:37
400	2.9	1:22	2.6	1:18	2.4	1:15	2.2	1:13	2.1	1:11
600	4.4	2:02	4.0	1:57	3.7	1:52	3.4	1:48	3.3	1:44
800	5.8	2:42	5.4	2:35	5.0	2:28	4.6	2:23	4.4	2:18
1000	7.3	3:23	6.7	3:14	6.2	3:05	5.8	2:58	5.6	2:52
1200	8.7	4:05	8.0	3:53	7.4	3:43	6.9	3:33	6.7	3:26
1400	10.1	4:47	9.4	4:33	8.7	4:20	8.1	4:09	7.8	4:01
1600	11.5	5:29	10.7	5:13	9.9	4:58	9.2	4:45	8.8	4:36
1800	12.9	6:12	11.9	5:53	11.1	5:36	10.3	5:22	9.9	5:10

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.1	-0.1	0.0	0.1	0.2
2	-0.3	-0.1	0.0	0.3	0.6
3	-0.4	-0.2	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.7	1.4
5	-0.7	-0.4	0.0	0.9	1.8
6	-0.9	-0.4	0.0	1.1	2.2
7	-1.0	-0.5	0.0	1.3	2.6
8	-1.2	-0.6	0.0	1.5	2.9
9	-1.3	-0.7	0.0	1.6	3.3
10	-1.5	-0.7	0.0	1.8	3.7
11	-1.6	-0.8	0.0	2.0	4.1
12	-1.8	-0.9	0.0	2.1	4.4
13	-1.9	-1.0	0.0	2.3	4.8
14	-2.0	-1.0	0.0	2.4	5.2

Includes APU fuel burn.

ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
90	%N1	82.9	85.7	90.0	95.1				
	KIAS	257	258	259	261				
	FF/ENG	2910	2910	2930	3020				
85	%N1	81.2	84.1	88.3	92.9				
	KIAS	250	251	252	253				
	FF/ENG	2740	2740	2750	2810				
80	%N1	79.6	82.4	86.6	91.0	98.6			
	KIAS	242	243	244	245	247			
	FF/ENG	2590	2570	2570	2610	2770			
75	%N1	77.9	80.6	84.8	89.2	95.3			
	KIAS	234	236	236	238	239			
	FF/ENG	2430	2410	2400	2430	2500			
70	%N1	76.1	78.7	82.9	87.1	92.3			
	KIAS	227	227	228	229	231			
	FF/ENG	2270	2250	2240	2250	2280			
65	%N1	74.1	76.8	80.8	85.1	89.7	98.0		
	KIAS	219	219	220	221	222	224		
	FF/ENG	2110	2090	2070	2080	2090	2260		
60	%N1	71.9	74.8	78.6	82.9	87.4	94.0		
	KIAS	210	210	211	212	213	214		
	FF/ENG	1960	1940	1910	1910	1910	1980		
55	%N1	69.6	72.4	76.3	80.5	84.9	90.1		
	KIAS	200	201	202	203	204	205		
	FF/ENG	1810	1780	1760	1740	1740	1770		
50	%N1	67.1	69.8	73.9	77.9	82.3	87.0	95.2	
	KIAS	191	191	192	193	194	195	196	
	FF/ENG	1660	1630	1610	1580	1570	1580	1700	
45	%N1	64.5	67.1	71.2	75.2	79.5	84.0	89.8	
	KIAS	182	182	182	183	184	185	186	
	FF/ENG	1510	1480	1450	1430	1410	1410	1460	
40	%N1	61.4	64.3	68.1	72.3	76.3	80.8	85.6	94.5
	KIAS	175	175	175	175	175	175	175	176
	FF/ENG	1360	1340	1310	1280	1250	1240	1270	1370

This table includes 5% additional fuel for holding in a racetrack pattern.

PI.53.12

Performance Inflight Alternate Mode EEC

Chapter PI Section 54

ALTERNATE MODE EEC

Alternate Mode EEC Limit Weight

PERFORMANCE LIMIT	NORMAL MODE PERFORMANCE LIMIT WEIGHT (1000 KG)										
	46	50	54	58	62	66	70	74	78	82	86
FIELD	43.8	47.6	51.4	55.2	58.9	62.7	66.5	70.2	74.0	77.8	81.6
CLIMB	43.0	46.7	50.5	54.2	58.0	61.7	65.5	69.2	73.0	76.7	80.5
OBSTACLE	43.0	46.7	50.5	54.3	58.0	61.8	65.5	69.3	73.0	76.8	80.5
TIRE	45.8	49.8	53.8	57.8	61.8	65.8	69.8	73.8	77.8	81.8	85.8
BRAKE	45.3	49.3	53.3	57.3	61.3	65.3	69.3	73.3	77.3	81.3	85.3

Alternate Mode EEC Takeoff Speed Adjustment

TAKEOFF SPEEDS	TAKEOFF SPEED ADJUSTMENT (KTS)
DRY V1	+1
WET V1	+2
VR	+1
V2	0

Alternate Mode EEC Max Takeoff %N1

Based on engine bleeds for packs on, engine and wing anti-ice on or off

AIRPORT OAT		AIRPORT PRESSURE ALTITUDE (FT)												
°C	°F	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	140	93.5	94.0	94.5	94.7	94.5	94.8	95.0	95.1	94.7	94.1	93.8	93.7	93.7
55	131	94.6	95.0	95.2	95.4	95.3	95.5	95.8	95.9	95.6	95.0	94.5	93.8	93.1
50	122	95.4	96.0	96.5	96.4	96.1	96.3	96.5	96.8	96.5	96.0	95.4	94.8	94.1
45	113	96.1	96.7	97.2	97.4	97.4	97.4	97.4	97.6	97.3	96.8	96.3	95.7	95.1
40	104	96.8	97.5	98.0	98.2	98.1	98.2	98.3	98.3	98.1	97.7	97.2	96.6	96.0
35	95	97.5	98.3	99.0	99.2	99.1	99.2	99.3	99.3	99.0	98.5	98.0	97.5	96.9
30	86	97.1	98.6	100.4	100.1	100.1	100.0	100.1	100.2	99.9	99.6	99.2	98.4	97.8
25	77	96.3	97.9	99.7	100.0	100.3	100.4	100.4	100.4	100.3	100.3	100.2	99.2	98.7
20	68	95.6	97.1	99.0	99.3	99.6	99.8	100.1	100.4	100.4	100.4	100.3	99.6	98.8
15	59	94.8	96.3	98.3	98.6	98.9	99.1	99.4	99.6	99.9	100.2	100.3	99.8	99.1
10	50	94.0	95.6	97.5	97.9	98.1	98.4	98.6	98.9	99.2	99.4	99.7	99.6	99.5
5	41	93.2	94.8	96.8	97.1	97.4	97.6	97.9	98.1	98.4	98.7	99.0	98.8	98.7
0	32	92.4	94.0	96.0	96.4	96.6	96.9	97.1	97.4	97.6	97.9	98.2	98.1	97.9
-5	23	91.6	93.2	95.3	95.6	95.9	96.1	96.4	96.6	96.9	97.2	97.4	97.3	97.2
-10	14	90.8	92.4	94.5	94.8	95.1	95.3	95.6	95.8	96.1	96.4	96.6	96.5	96.4
-15	5	90.0	91.6	93.7	94.1	94.3	94.6	94.8	95.1	95.3	95.6	95.9	95.7	95.6
-20	-4	89.2	90.8	93.0	93.3	93.5	93.8	94.0	94.3	94.5	94.8	95.1	94.9	94.8
-25	-13	88.3	90.0	92.2	92.5	92.7	93.0	93.2	93.5	93.7	94.0	94.3	94.1	94.0
-30	-22	87.5	89.1	91.4	91.7	91.9	92.2	92.4	92.7	92.9	93.2	93.4	93.3	93.2
-35	-31	86.6	88.3	90.6	90.9	91.1	91.4	91.6	91.8	92.1	92.4	92.6	92.5	92.4
-40	-40	85.8	87.4	89.7	90.1	90.3	90.5	90.8	91.0	91.3	91.5	91.8	91.7	91.5
-45	-49	84.9	86.6	88.9	89.2	89.5	89.7	89.9	90.2	90.4	90.7	90.9	90.8	90.7
-50	-58	84.0	85.7	88.1	88.4	88.6	88.9	89.1	89.3	89.6	89.8	90.1	90.0	89.8

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Intentionally
Blank

Performance Inflight

Gear Down

Chapter PI

Section 55

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15100	12000	8900
80	17900	15100	12100
75	20800	18000	15300
70	23300	20900	18200
65	25800	24000	21300
60	28300	26800	24900
55	30600	29400	27800
50	32700	31700	30400
45	34900	33900	32700
40	37300	36300	35200

GEAR DOWN

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
85	%N1	86.2									
	MACH	.482									
	KIAS	267									
	FF/ENG	2446									
80	%N1	84.5									
	MACH	.468									
	KIAS	259									
	FF/ENG	2294									
75	%N1	82.8	92.1								
	MACH	.454	.554								
	KIAS	251	248								
	FF/ENG	2145	2123								
70	%N1	80.9	90.1	92.1							
	MACH	.440	.541	.557							
	KIAS	243	242	240							
	FF/ENG	1998	1981	1971							
65	%N1	78.9	88.2	89.8	92.0	95.0					
	MACH	.425	.524	.543	.560	.578					
	KIAS	235	234	233	231	229					
	FF/ENG	1855	1832	1825	1824	1858					
60	%N1	76.8	85.9	87.7	89.4	91.7	94.9				
	MACH	.409	.504	.525	.544	.562	.580				
	KIAS	226	225	225	224	222	220				
	FF/ENG	1716	1678	1679	1676	1681	1716				
55	%N1	74.7	83.6	85.3	87.1	88.9	91.3	94.6			
	MACH	.393	.484	.504	.525	.545	.562	.581			
	KIAS	217	216	216	216	215	213	211			
	FF/ENG	1577	1530	1527	1531	1534	1539	1573			
50	%N1	72.2	81.0	82.7	84.5	86.3	88.1	90.6	93.9		
	MACH	.376	.463	.482	.502	.523	.544	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	1442	1385	1381	1381	1389	1392	1395	1429		
45	%N1	69.5	78.3	80.0	81.7	83.4	85.2	87.1	89.5	92.9	
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578	
	KIAS	197	196	196	196	196	196	195	193	191	
	FF/ENG	1311	1244	1237	1237	1242	1247	1251	1252	1280	
40	%N1	66.6	75.2	76.9	78.6	80.3	82.0	83.9	85.8	88.0	91.8
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554	.573
	KIAS	187	185	185	185	185	185	185	185	183	181
	FF/ENG	1186	1109	1097	1095	1100	1103	1105	1108	1109	1136

GEAR DOWN**Long Range Cruise Enroute Fuel and Time
Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
324	290	260	236	217	200	188	178	168	160	153
655	584	523	474	435	400	377	357	338	321	307
990	881	787	713	653	600	566	535	507	482	460
1330	1181	1054	953	871	800	755	713	676	642	613
1675	1485	1323	1195	1091	1000	943	891	844	803	766
2026	1792	1593	1436	1310	1200	1131	1069	1013	962	918
2383	2104	1866	1680	1530	1400	1319	1246	1180	1121	1069
2746	2420	2142	1925	1751	1600	1507	1423	1347	1279	1220
3116	2740	2420	2171	1972	1800	1695	1600	1514	1437	1370

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	5.0	1:36	4.6	1:32	4.1	1:25	3.8	1:20	3.5	1:17
600	7.5	2:25	6.9	2:17	6.2	2:06	5.7	1:59	5.4	1:54
800	9.9	3:14	9.2	3:03	8.2	2:48	7.7	2:38	7.3	2:31
1000	12.3	4:05	11.4	3:51	10.2	3:31	9.6	3:18	9.1	3:08
1200	14.6	4:56	13.6	4:39	12.2	4:14	11.4	3:59	10.8	3:46
1400	16.9	5:49	15.7	5:28	14.1	4:59	13.2	4:40	12.6	4:25
1600	19.1	6:43	17.8	6:19	16.0	5:44	15.0	5:22	14.2	5:04
1800	21.3	7:39	19.9	7:11	17.9	6:30	16.7	6:05	15.9	5:43

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.6	-0.3	0.0	0.6	1.4
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.3	-0.7	0.0	1.2	2.6
10	-1.6	-0.8	0.0	1.4	3.2
12	-2.0	-1.0	0.0	1.6	3.7
14	-2.3	-1.2	0.0	1.9	4.2
16	-2.7	-1.3	0.0	2.1	4.6
18	-3.0	-1.5	0.0	2.2	5.0
20	-3.3	-1.7	0.0	2.4	5.4
22	-3.7	-1.8	0.0	2.5	5.7

GEAR DOWN

Descent
VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	280	90
39000	20	280	86
37000	19	270	81
35000	19	270	77
33000	18	260	72
31000	17	260	68
29000	16	250	64
27000	16	240	60
25000	15	240	56
23000	14	230	52
21000	13	220	48
19000	12	220	44
17000	12	210	40
15000	11	200	36
10000	8	170	26
5000	6	140	16
1500	4	120	9

Allowances for a straight-in approach are included.

GEAR DOWN**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
90	%N1	77.5	80.2	84.5	89.0				
	KIAS	233	233	233	233				
	FF/ENG	2390	2380	2380	2400				
85	%N1	76.0	78.7	82.9	87.3				
	KIAS	228	228	228	228				
	FF/ENG	2260	2250	2240	2260				
80	%N1	74.4	77.1	81.3	85.6	90.2			
	KIAS	223	223	223	223	223			
	FF/ENG	2130	2120	2100	2110	2130			
75	%N1	72.6	75.5	79.5	83.8	88.4			
	KIAS	218	218	218	218	218			
	FF/ENG	2010	1990	1970	1980	1980			
70	%N1	70.7	73.7	77.6	81.9	86.4	92.0		
	KIAS	213	213	213	213	213	213		
	FF/ENG	1880	1860	1850	1840	1840	1880		
65	%N1	68.9	71.7	75.8	80.0	84.4	89.2		
	KIAS	207	207	207	207	207	207		
	FF/ENG	1770	1740	1720	1710	1700	1720		
60	%N1	67.0	69.7	73.9	77.9	82.3	86.9	94.4	
	KIAS	201	201	201	201	201	201	201	
	FF/ENG	1650	1620	1600	1580	1570	1580	1670	
55	%N1	64.9	67.6	71.7	75.7	80.1	84.6	90.2	
	KIAS	195	195	195	195	195	195	195	
	FF/ENG	1530	1510	1480	1460	1440	1440	1490	
50	%N1	62.5	65.4	69.3	73.5	77.7	82.2	86.9	
	KIAS	189	189	189	189	189	189	189	
	FF/ENG	1420	1390	1360	1340	1320	1320	1340	
45	%N1	60.0	63.0	66.8	71.0	75.1	79.6	84.2	91.2
	KIAS	182	182	182	182	182	182	182	182
	FF/ENG	1300	1280	1250	1230	1200	1190	1210	1260
40	%N1	57.7	60.3	64.4	68.3	72.6	76.9	81.3	86.5
	KIAS	175	175	175	175	175	175	175	175
	FF/ENG	1190	1170	1150	1120	1090	1070	1090	1100

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight

Gear Down, Engine Inop

Chapter PI

Section 56

GEAR DOWN**ENGINE INOP****MAX CONTINUOUS THRUST****Driftdown Speed/Level Off Altitude****100 ft/min residual rate of climb**

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	76	222	3800	2100	
75	71	217	6200	4700	2600
70	66	212	8600	7300	5300
65	62	207	11000	9800	8000
60	57	201	13300	12400	11000
55	52	195	15800	15000	14000
50	47	189	18400	17500	16700
45	43	182	20900	20100	19200
40	38	176	23300	22500	21700

Includes APU fuel burn.

Long Range Cruise Altitude Capability**100 ft/min residual rate of climb**

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	1100		
70	4200	2000	
65	7300	5600	2900
60	10400	8900	6500
55	13100	12100	10300
50	16000	15200	14200
45	19100	18200	17300
40	22100	21300	20300

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		5	7	9	11	13	15	17	19	21
70	%N1	95.1								
	MACH	.389								
	KIAS	235								
	FF/ENG	3802								
65	%N1	92.8	94.6	97.2						
	MACH	.376	.389	.402						
	KIAS	228	227	226						
	FF/ENG	3509	3512	3554						
60	%N1	90.5	92.1	93.9	96.6					
	MACH	.364	.375	.388	.402					
	KIAS	220	219	218	218					
	FF/ENG	3226	3220	3222	3266					
55	%N1	88.1	89.6	91.3	93.1	95.7				
	MACH	.351	.362	.374	.387	.400				
	KIAS	212	211	210	209	209				
	FF/ENG	2960	2941	2933	2936	2974				
50	%N1	85.7	87.1	88.6	90.2	91.9	94.5	98.5		
	MACH	.338	.348	.359	.371	.384	.398	.412		
	KIAS	204	203	202	201	200	199	198		
	FF/ENG	2710	2680	2660	2651	2654	2677	2758		
45	%N1	83.1	84.4	85.8	87.3	88.9	90.6	93.0	96.8	
	MACH	.325	.334	.344	.355	.367	.380	.393	.408	
	KIAS	196	195	193	192	191	190	189	189	
	FF/ENG	2471	2435	2405	2384	2375	2372	2377	2436	
40	%N1	80.3	81.6	82.9	84.3	85.7	87.3	89.1	91.1	94.4
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402
	KIAS	188	186	184	183	182	181	180	179	179
	FF/ENG	2244	2201	2165	2136	2114	2099	2088	2082	2119

GEAR DOWN**ENGINE INOP****MAX CONTINUOUS THRUST****Long Range Cruise Diversion Fuel and Time****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
167	148	132	119	109	100	94	88	82	78	74
341	300	266	239	218	200	187	174	164	155	147
516	454	402	361	328	300	280	261	245	231	219
692	608	537	482	438	400	373	348	326	307	291
869	763	673	603	548	500	465	434	407	383	363
1048	919	809	725	658	600	558	521	488	459	434
1228	1076	947	847	768	700	651	607	568	535	506
1410	1234	1084	970	879	800	744	693	648	610	577
1593	1392	1222	1092	989	900	836	779	729	685	648
1778	1552	1361	1215	1100	1000	929	865	809	760	719

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.3	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	4.0	1:18	3.7	1:15	3.6	1:12
400	5.3	1:44	4.9	1:39	4.8	1:35
500	6.6	2:10	6.2	2:04	6.0	1:58
600	7.9	2:37	7.4	2:29	7.2	2:22
700	9.2	3:04	8.6	2:55	8.3	2:46
800	10.4	3:31	9.8	3:20	9.5	3:10
900	11.7	3:58	11.0	3:46	10.6	3:35
1000	12.9	4:25	12.1	4:12	11.7	3:59

Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.7	-0.4	0.0	0.7	1.3
5	-0.9	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.0	2.0
7	-1.2	-0.6	0.0	1.2	2.4
8	-1.4	-0.7	0.0	1.4	2.7
9	-1.5	-0.8	0.0	1.5	3.0
10	-1.7	-0.9	0.0	1.7	3.4
11	-1.9	-1.0	0.0	1.9	3.7
12	-2.1	-1.1	0.0	2.0	4.0
13	-2.2	-1.1	0.0	2.2	4.4

Includes APU fuel burn.

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)				
		1500	5000	10000	15000	20000
80	%N1	93.6				
	KIAS	223				
	FF/ENG	4160				
75	%N1	91.5	94.8			
	KIAS	218	218			
	FF/ENG	3880	3920			
70	%N1	89.4	92.6			
	KIAS	213	213			
	FF/ENG	3600	3640			
65	%N1	87.4	90.4	95.7		
	KIAS	207	207	207		
	FF/ENG	3340	3360	3430		
60	%N1	85.1	88.1	92.7		
	KIAS	201	201	201		
	FF/ENG	3090	3090	3130		
55	%N1	82.7	85.7	90.2	96.9	
	KIAS	195	195	195	195	
	FF/ENG	2840	2840	2850	2970	
50	%N1	80.1	83.1	87.4	92.4	
	KIAS	189	189	189	189	
	FF/ENG	2600	2590	2590	2630	
45	%N1	77.5	80.4	84.7	89.3	97.1
	KIAS	182	182	182	182	182
	FF/ENG	2380	2360	2340	2360	2470
40	%N1	74.9	77.6	81.9	86.2	91.6
	KIAS	175	175	175	175	175
	FF/ENG	2160	2140	2120	2120	2130

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight
Text**Chapter PI**
Section 57

Introduction

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

General**Takeoff Speeds**

The speeds presented in the Takeoff Speeds table as well as FMC computed takeoff speeds can be used for all performance conditions provided that adjustments are made to V1 for clearway, stopway, anti-skid inoperative, thrust reversers inoperative, improved climb, contaminated runway situations or brake energy limits. These speeds may be used for weights less than or equal to the performance limited weight.

The FMC will protect for minimum control speeds by increasing V1, VR and V2 as required. However, the FMC will not compute takeoff speeds for weights where the required speed increase exceeds the maximum certified speed increase. This typically occurs at full rated thrust and light weights. In this case, the message "V SPEEDS UNAVAILABLE" will appear on the FMC scratchpad and the takeoff speed entries will be blank. Takeoff is not permitted in this condition as certified limits have been exceeded. The options are to select a smaller flap setting, select derate thrust and/or add weight (fuel). Selecting derate thrust is the preferred method as this will reduce the minimum control speeds. Note that the assumed temperature method will not help this condition as the minimum control speeds are determined at the actual temperature and therefore are not reduced.

Normal takeoff speeds, V1, VR, and V2 are read from either the dry or wet table by entering with takeoff flap setting and brake release weight. Use the tables provided to adjust takeoff speeds for altitude and actual temperature or assumed temperature for reduced thrust takeoffs. Slope and wind adjustments to V1 are obtained by entering the Slope and Wind V1 Adjustment table.

V1(MCG)

Regulations prohibit scheduling takeoff with a V1 less than minimum V1 for control on the ground, V1(MCG). It is therefore necessary to compare the adjusted V1 to V1(MCG). The V1(MCG) presented in this manual is conservative for all weight and bleed configurations.

To find V1(MCG) enter the V1(MCG) table with the airport pressure altitude and actual OAT. If the adjusted V1 is less than V1(MCG), set V1 equal to V1(MCG). If the adjusted VR is less than V1(MCG), set VR equal to V1(MCG), and determine a new V2 by adding the difference between the normal VR and V1(MCG) to the normal V2. No takeoff weight adjustment is necessary provided that the actual field length exceeds the minimum field length shown in the Field and Climb Limit Weight table.

Clearway and Stopway V1 Adjustments

Maximum allowable clearway limits are provided for guidance when more precise data is not available. Use of clearway is not allowed on wet runways.

Takeoff speed adjustments are to be applied to V1 speed when using takeoff weights based on the use of clearway and stopway.

Adjust V1 speed by the amount shown in the table. The adjusted V1 speed must not exceed VR. If the adjusted V1 speed is greater than VR, reduce V1 to equal VR.

Stab Trim

To find takeoff stabilizer trim setting, enter Stab Trim Setting table with anticipated brake release weight and center of gravity (C.G. % MAC) and read required stabilizer trim units.

VREF

This table contains flaps 40, 30 and 15 reference speeds for a given weight. With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

Flap Maneuver Speeds

This table provides the flap speed schedule for recommended maneuver speeds. Using VREF as the basis for the schedule makes it variable as a function of weight and will provide adequate maneuver margin above stall at all weights.

During flap retraction/extension, movement of the flap to the next position should be initiated when within 20 knots of the recommended speed for that position.

Slush/Standing Water Takeoff

Experience has shown that aircraft performance may deteriorate significantly on runways covered with snow, slush, standing water or ice. Therefore, reductions in field/obstacle limited takeoff weight and revised takeoff speeds are necessary. The tables are intended for guidance in accordance with advisory material and assume an engine failure at the critical point during the takeoff.

The entire runway is assumed to be completely covered by a contaminant of uniform thickness and density. Therefore this information is conservative when operating under typical cold weather conditions where patches of slush exist and some degree of sanding is common. Takeoffs in slush depths greater than 13 mm (0.5 inches) are not recommended because of possible airplane damage as a result of slush impingement on the airplane structure. The use of assumed temperature for reduced thrust is not allowed on contaminated runways. Interpolation for slush/standing water depths between the values shown is permitted.

Takeoff weight determination:

1. Enter the Weight Adjustment table with the dry field/obstacle limit weight to obtain the weight reduction for the slush/standing water depth and airport pressure altitude.
2. Adjust field length available for temperature by amount shown beneath V1(MCG) limit weight table.
3. Enter the V1(MCG) Limit Weight table with the adjusted field length and pressure altitude to obtain the slush/standing water limit weight with respect to minimum field length required for V1(MCG) speed.
4. The maximum allowable takeoff weight in slush/standing water is the lesser of the limit weights found in steps 1 and 3.

Takeoff speed determination:

1. Determine takeoff speeds V1, VR and V2 for actual brake release weight using the Dry Runway Takeoff Speeds table for the appropriate flap setting and thrust rating.
2. If V1(MCG) limited, set V1=V1(MCG). If not limited by V1(MCG) considerations, enter the V1 Adjustment table with actual brake release weight to determine the V1 reduction to apply to V1 speed. If the adjusted V1 is less than V1(MCG), set V1=V1(MCG).

Slippery Runway Takeoff

Airplane braking action is reported as good, medium or poor, depending on existing runway conditions. If braking action is reported as good, conditions should not be expected to be as good as on clean, dry runways. The value “good” is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when stopping. The performance level used to calculate the “good” data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate the “poor” data reflects a runway covered with wet ice. Performance is based on a 15 ft screen height at the end of the runway. The tables provided are used in the same manner as the Slush/Standing Water tables.

Anti-Skid Inoperative

When operating with anti-skid inoperative, the field limit weight and V1 must be reduced to account for the effect on accelerate-stop performance. Anti-skid inoperative is only allowed on a dry runway. A simplified method which conservatively accounts for the effects of anti-skid inoperative is to reduce the normal dry field/obstacle limited weight by 8200 kg and the V1 associated with the reduced weight by the amount shown in the table below.

ANTI-SKID INOPERATIVE V1 ADJUSTMENTS	
FIELD LENGTH (M)	V1 ADJUSTMENT (KIAS)
2000	-20
2500	-17
3000	-14
3500	-12
4000	-10

If the resulting V1 is less than V1(MCG), takeoff is permitted with V1 set equal to V1(MCG) provided the dry accelerate-stop distance adjusted for wind and slope exceeds approximately 1800 m.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Thrust Reverser Inoperative

When dispatching on a wet runway with both thrust reversers operative, an operative anti-skid system, and all brakes operating, regulations allow deceleration credit for one thrust reverser in the engine failure case and two thrust reversers in the all engine stop case.

When dispatching on a wet runway with one thrust reverser inoperative, the field/obstacle limited weight and V1 must be reduced to account for the effect on accelerate-stop performance. A simplified method, which

conservatively accounts for this, is to reduce the normal wet runway/field/obstacle limited weight by 900 kg and the V1 associated with the reduced weight by 2 knots.

If the resulting V1 is less than minimum V1, takeoff is permitted with V1 set equal to V1(MCG) provided the accelerate-stop distance available adjusted for wind and slope exceeds approximately 1200 m.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Takeoff %N1

To find Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off operation, apply the %N1 adjustment shown below the table. No takeoff %N1 adjustment is required for engine and wing anti-ice.

Assumed Temperature Reduced Thrust

Regulations permit the use of up to 25% takeoff thrust reduction for operation with assumed temperature reduced thrust. Use of assumed temperature reduced thrust is not allowed with anti-skid inoperative or on runways contaminated with standing water, ice, slush, or snow. Use of assumed temperature reduced thrust is not recommended if potential windshear conditions exist.

To find the maximum allowable assumed temperature enter the Maximum Assumed Temperature table with airport pressure altitude and OAT. Compare this temperature to that at which the airplane is performance limited as determined from available takeoff performance data. Next, enter the Maximum Takeoff %N1 table with airport pressure altitude and the lower of the two temperatures previously determined, to obtain a maximum takeoff %N1. Do not use an assumed temperature less than the minimum assumed temperature shown. Enter the %N1 Adjustment table with OAT and the difference between the assumed and actual OAT to obtain a %N1 adjustment. Subtract the %N1 adjustment from the maximum takeoff %N1 found previously to determine the assumed temperature reduced thrust %N1.

Max Climb %N1

This table shows Max Climb %N1 for a 280/.80 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

Go-around %N1

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

Flight with Unreliable Airspeed / Turbulent Air Penetration

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

All Engines

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. This table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Cruise Control

These tables provide target %N1, Cruise Mach number, IAS and standard day fuel flow per engine for the airplane weight and pressure altitude.

.80M Enroute Fuel and Time

.80M Enroute Fuel and Time tables are provided to determine remaining time and fuel required to destination. The data is based on .80M Cruise and .80/280/250 descent. Tables are presented for low altitudes and high altitudes.

To determine remaining fuel and time required, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and

read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the actual weight at checkpoint to obtain fuel required to destination.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the table in the Engine Inoperative text section.

.80M Wind-Altitude Trade

Wind is a factor which may justify operations considerably below optimum altitude. For example, a favorable wind component may have an effect on ground speed which more than compensates for the loss in air range.

Using this table, it is possible to determine the break-even wind (advantage necessary or disadvantage that can be tolerated) to maintain the same range at another altitude and long range cruise speed. The tables make no allowance for climb or descent time, fuel or distance, and are based on comparing ground fuel mileage.

Descent

Time, fuel, and distance for descent are shown for a .80/280/250 descent speed schedule. Enter the table with top of descent pressure altitude and read distance, time and fuel. Data is based on flight idle thrust descent in zero wind. Allowances are included for a straight-in approach with gear down and landing flaps at the outer marker.

Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

Advisory Information

Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. Use of autobrake setting 1 is not recommended for landings on slippery runways, and is therefore not provided for these conditions. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of max manual braking and reverse thrust.

Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

Engine Inoperative

Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .80M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .80/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

Holding

Single engine holding data is provided in the same format as the all engine holding data and is based on the same assumptions.

Alternate Mode EEC

Introduction

This section contains performance data for airplane operation with the Electronic Engine Control (EEC) in the alternate mode (ALTN EEC switch illuminated) for applicable thrust ratings. The data includes engine bleed effects for normal air conditioning operation i.e., two packs on at normal flow all engines operating.

Operation with derate and/or assumed temperature reduced thrust is not permitted with the EEC in alternate mode.

Limit Weight

A simplified method which conservatively accounts for the effects of EEC in alternate mode is to reduce the normal mode (ON EEC switch illuminated) performance limited weights. The Limit Weight table

provides takeoff field, climb, obstacle, tire speed and brake energy limit weights. To determine limit weights for operations with the EEC in the alternate mode, enter the table with the limit weights for normal mode EEC operation and read the associated limit weight for each performance condition. The most limiting of the takeoff weights must be used. Analysis from the Airplane Flight Manual - Digital Performance Information may yield less restrictive limit weights.

Takeoff Speed Adjustment

Takeoff speeds for the reduced weight should be increased by the amount shown in the Takeoff Speeds Adjustment table. The adjusted V1 should not exceed the adjusted VR.

NOTE: The FMC does not incorporate alternate mode EEC performance in its takeoff speeds calculations.

Max Takeoff %N1

The alternate mode EEC thrust schedule provides equal or greater thrust than the normal mode thrust for the same thrust lever position. Thrust limit protection is not provided in alternate mode EEC and maximum rated thrust may be reached at thrust lever position less than full forward. As a result, thrust overboost may occur if the target alternate mode EEC Max Takeoff %N1 settings are not observed.

To find alternate mode EEC Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter the Alternate Mode EEC Max Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off apply the %N1 adjustment provided below the table. No %N1 adjustment is required for engine or wing anti-ice.

Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

Note: The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.

Intentionally
Blank

Performance Inflight**Chapter PI****Table of Contents****Section 60****737-900ERBBJ CFM56-7B27B3 LB FAA CATH/P**

General	PI.60.1
Takeoff Speeds - Dry Runway	PI.60.1
Takeoff Speeds - Dry Runway - High Altitudes	PI.60.2
Takeoff Speeds - Wet Runway	PI.60.3
Takeoff Speeds - Wet Runway - High Altitudes	PI.60.4
Maximum Allowable Clearway	PI.60.5
Maximum Allowable Clearway - High Altitudes	PI.60.5
Clearway and Stopway V1 Adjustments	PI.60.5
Clearway and Stopway V1 Adjustments - High Altitudes	PI.60.5
Stab Trim Setting	PI.60.6
VREF	PI.60.7
Flap Maneuver Speeds	PI.60.8
Slush/Standing Water Takeoff	PI.60.9
Slippery Runway Takeoff	PI.60.16
Takeoff %N1	PI.60.24
Takeoff %N1 - High Altitudes	PI.60.24
Assumed Temperature Reduced Thrust	PI.60.25
Assumed Temperature Reduced Thrust - High Altitudes	PI.60.26
Takeoff Speeds - Dry Runway (26K Derate)	PI.60.28
Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)	PI.60.29
Takeoff Speeds - Wet Runway (26K Derate)	PI.60.30
Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)	PI.60.31
Maximum Allowable Clearway (26K Derate)	PI.60.32
Clearway and Stopway V1 Adjustments (26K Derate) ...	PI.60.32
Stab Trim Setting (26K Derate)	PI.60.33
Slush/Standing Water Takeoff (26K Derate)	PI.60.34

Slippery Runway Takeoff (26K Derate)	PI.60.42
Takeoff %N1 - (26K Derate)	PI.60.50
Assumed Temperature Reduced Thrust - (26K Derate) . . .	PI.60.51
Takeoff Speeds - Dry Runway (24K Derate)	PI.60.54
Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)	PI.60.55
Takeoff Speeds - Wet Runway (24K Derate)	PI.60.56
Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)	PI.60.57
Maximum Allowable Clearway (24K Derate)	PI.60.58
Clearway and Stopway V1 Adjustments (24K Derate) . . .	PI.60.58
Stab Trim Setting (24K Derate)	PI.60.59
Slush/Standing Water Takeoff (24K Derate)	PI.60.60
Slippery Runway Takeoff (24K Derate)	PI.60.68
Takeoff %N1 (24K Derate)	PI.60.76
Assumed Temperature Reduced Thrust (24K Derate)	PI.60.77
Max Climb %N1	PI.60.80
Go-around %N1	PI.60.81
Flight With Unreliable Airspeed/ Turbulent Air Penetration	PI.60.83
All Engine	PI.61.1
.80M Maximum Operating Altitude	PI.61.1
.80M Cruise Control	PI.61.2
.80M Enroute Fuel and Time - Low Altitudes	PI.61.3
.80M Enroute Fuel and Time - High Altitudes	PI.61.5
.80M Wind-Altitude Trade	PI.61.7
Descent	PI.61.7
Holding	PI.61.8
Advisory Information	PI.62.1
Normal Configuration Landing Distances	PI.62.1
Non-Normal Configuration Landing Distance	PI.62.4
Recommended Brake Cooling Schedule	PI.62.12

BBJ Flight Crew Operations Manual

Engine Inoperative	PI.63.1
Initial Max Continuous %N1	PI.63.1
Max Continuous %N1	PI.63.2
Driftdown Speed/Level Off Altitude	PI.63.6
Driftdown/LRC Cruise Range Capability	PI.63.7
Long Range Cruise Altitude Capability	PI.63.8
Long Range Cruise Control	PI.63.9
Long Range Cruise Diversion Fuel and Time	PI.63.10
Holding	PI.63.11
Alternate Mode EEC	PI.64.1
Alternate Mode EEC Limit Weight	PI.64.1
Alternate Mode EEC Max Takeoff %N1	PI.64.1
Gear Down	PI.65.1
Long Range Cruise Altitude Capability	PI.65.1
Long Range Cruise Control	PI.65.2
Long Range Cruise Enroute Fuel and Time	PI.65.3
Descent	PI.65.4
Holding	PI.65.5
Gear Down, Engine Inoperative	PI.66.1
Driftdown Speed/Level Off Altitude	PI.66.1
Long Range Cruise Altitude Capability	PI.66.1
Long Range Cruise Control	PI.66.2
Long Range Cruise Diversion Fuel and Time	PI.66.3
Holding	PI.66.5
Text	PI.67.1
Introduction	PI.67.1
General	PI.67.1
All Engines	PI.67.6
Advisory Information	PI.67.7
Engine Inoperative	PI.67.9
Alternate Mode EEC	PI.67.11
Gear Down	PI.67.12

Intentionally
Blank

Performance Inflight General

Chapter PI Section 60

Takeoff Speeds - Dry Runway

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	168	171	178	160	163	170	152	154	161	150	152	159			
180	163	166	174	156	158	166	147	150	157	145	148	155	143	143	151
170	158	161	170	151	153	162	143	145	153	141	143	151	138	139	147
160	153	155	165	146	148	158	138	140	149	136	138	147	133	134	143
150	148	150	161	141	143	154	133	135	145	131	133	143	128	129	139
140	143	144	156	136	137	149	128	129	141	126	128	139	123	124	135
130	136	138	151	130	131	144	122	124	137	121	122	135	118	119	131
120	130	131	145	123	124	139	117	118	132	115	116	130	112	113	126
110	123	124	140	117	118	134	111	111	127	109	110	125	106	107	122
100	116	116	134	111	111	128	104	105	121	103	103	120	100	100	116
90	109	109	128	103	104	122	98	98	116	96	97	114	93	94	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	6						5	6						-3	-3								
60	140	4	5	6	7				3	4	5	6				-2	-2	-3	-3						
50	122	2	3	4	5	6	7	9	2	3	4	5	6	7	9	-1	-2	-2	-2	-3	-4	-4			
40	104	1	1	2	3	5	6	7	1	2	3	4	5	6	8	-1	-1	-1	-2	-2	-3	-4			
30	86	0	0	1	2	4	5	6	0	0	1	3	4	5	7	0	0	-1	-1	-2	-2	-3			
20	68	0	0	1	2	3	4	6	0	0	1	2	3	4	6	0	0	0	-1	-1	-2	-3			
-60	-76	0	0	1	2	3	4	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
190	-3	-2	0	2	2	-2	-1	-1	0	0	0	1	1		
170	-2	-1	0	1	2	-2	-1	-1	0	0	1	1	1		
150	-2	-1	0	1	1	-2	-1	-1	0	0	1	1	1		
130	-1	0	0	1	1	-2	-1	0	0	0	1	1	1		
110	-1	0	0	0	0	-2	-1	0	0	0	0	0	0		
90	0	0	0	0	0	-1	-1	0	0	0	0	0	0		

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	95	92					
60	140	95	92	90	89			
50	122	97	95	90	89	87	84	81
40	104	101	99	95	92	88	84	81
30	86	104	103	99	95	91	87	82
20	68	104	104	100	96	93	89	85
-60	-76	106	105	101	98	94	91	87

Takeoff Speeds - Dry Runway - High Altitudes

V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	160	160	163												
150	155	155	159	148	148	152									
140	149	149	154	142	142	147	134	134	139	132	132	138			
130	142	143	149	136	136	142	128	129	135	126	127	133	123	123	129
120	136	136	143	129	130	137	122	123	130	120	121	128	118	118	124
110	129	129	137	122	123	131	116	117	124	114	115	123	112	112	119
100	122	122	131	116	116	126	109	110	119	108	109	117	105	106	114
90	114	115	125	109	109	120	103	103	113	101	102	112	99	99	109

Check V1(MCG) .

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	2	3	3	4	4	4	2	3	3	4	4	4	-1	-1	-1	-2	-2	-2
30	86	1	2	2	3	3	3	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	1	2	2	3	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
160	-3	-2	0	0	0		-1	-1	0	0	0	0	0	0
150	-3	-1	0	0	0		-1	-1	0	0	0	0	0	0
140	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
130	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
120	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
110	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
100	-1	0	0	0	0		-1	-1	0	0	0	0	0	0
90	-1	0	0	0	0		-1	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
°C	°F	10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	82	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Takeoff Speeds - Wet Runway**V1, VR, V2 for Max Takeoff Thrust**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	163	171	178	154	163	170	146	154	161	144	152	159			
180	157	166	174	149	158	166	141	150	157	139	148	155	135	143	151
170	151	161	170	144	153	162	136	145	153	134	143	151	130	139	147
160	145	155	165	138	148	158	130	140	149	129	138	147	125	134	143
150	140	150	161	133	143	154	125	135	145	124	133	143	120	129	139
140	134	144	156	127	137	149	120	129	141	118	128	139	115	124	135
130	127	138	151	121	131	144	114	124	137	113	122	135	109	119	131
120	121	131	145	115	124	139	108	118	132	107	116	130	104	113	126
110	114	124	140	108	118	134	102	111	127	100	110	125	97	107	122
100	106	116	134	101	111	128	95	105	121	94	103	120	91	100	116
90	99	109	128	94	104	122	88	98	116	87	97	114	84	94	111

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	8	9						5	6						-3	-3								
60	140	5	6	7	9				3	4	5	6				-2	-2	-3	-3						
50	122	3	4	5	6	8	10	12	2	3	4	5	6	7	9	-1	-2	-2	-2	-3	-4	-4			
40	104	1	2	3	4	5	7	10	1	2	3	4	5	6	8	-1	-1	-1	-2	-2	-3	-4			
30	86	0	0	1	3	4	6	8	0	0	1	3	4	5	7	0	0	-1	-1	-2	-2	-3			
20	68	0	0	1	3	4	5	7	0	0	1	2	3	4	6	0	0	0	-1	-1	-2	-3			
-60	-76	0	0	1	3	4	5	7	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-4	-2	0	3	6		-4	-2	-1	0	1	2	2	3
170	-4	-2	0	2	5		-4	-2	-1	0	1	2	2	3
150	-3	-2	0	2	4		-4	-2	-1	0	1	2	2	3
130	-3	-1	0	2	3		-4	-3	-1	0	1	2	2	3
110	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4
90	-2	-1	0	1	2		-5	-3	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)**Max Takeoff Thrust**

TEMP		PRESSURE ALTITUDE (FT)							
°C	°F	-2000	0	2000	4000	6000	8000	10000	
70	158	95	92						
60	140	95	92	90	89				
50	122	97	95	90	89	87	84	81	
40	104	101	99	95	92	88	84	81	
30	86	104	103	99	95	91	87	82	
20	68	104	104	100	96	93	89	85	
-60	-76	106	105	101	98	94	91	87	

Takeoff Speeds - Wet Runway - High Altitudes
V1, VR, V2 for Max Takeoff Thrust

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	155	160	163												
150	149	155	159	142	148	152									
140	142	149	154	135	142	147	128	134	139	126	132	138			
130	135	143	149	128	136	142	121	129	135	120	127	133	116	123	129
120	128	136	143	121	130	137	115	123	130	113	121	128	110	118	124
110	121	129	137	115	123	131	108	117	124	107	115	123	104	112	119
100	113	122	131	108	116	126	102	110	119	100	109	117	97	106	114
90	106	115	125	100	109	120	95	103	113	93	102	112	90	99	109

Check V1(MCG) .

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	3	4	5	5	6	6	2	3	3	4	4	4	-1	-1	-1	-2	-2	-2
30	86	1	2	3	4	4	5	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	2	2	3	4	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	2	2	3	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	2	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	2	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
160	-5	-3	0	3	6		-2	-2	-1	0	0	1	2	2
150	-5	-3	0	3	6		-3	-2	-1	0	0	1	2	2
140	-4	-2	0	3	5		-3	-2	-1	0	1	1	2	2
130	-4	-2	0	2	5		-3	-2	-1	0	1	1	2	2
120	-3	-2	0	2	4		-3	-2	-1	0	1	1	2	2
110	-3	-2	0	2	3		-3	-2	-1	0	1	1	2	2
100	-3	-1	0	1	3		-4	-2	-1	0	1	1	2	3
90	-2	-1	0	1	2		-4	-3	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

Max Takeoff Thrust

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	82	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Maximum Allowable Clearway**Max Takeoff Thrust**

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	600
5000	700
6000	750
7000	850
8000	900
9000	1000
9000	1100

Maximum Allowable Clearway - High Altitudes**Max Takeoff Thrust**

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION(FT)
4000	600
6000	750
8000	950
10000	1100
12000	1300
14000	1400

Clearway and Stopway V1 Adjustments**Max Takeoff Thrust**

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)							
	DRY RUNWAY				WET RUNWAY			
	100	120	140	160	100	120	140	160
800	-5	-5	-4	-3				
600	-5	-4	-3	-2				
400	-3	-2	-2	-1				
200	-2	-1	-1	-1				
0	0	0	0	0	0	0	0	0
-200	0	0	1	2	1	1	1	1
-400	0	0	1	2	2	2	2	2
-600	0	0	1	2	4	4	3	3
-800	0	0	1	2	5	5	4	3

Clearway and Stopway V1 Adjustments - High Altitudes**Max Takeoff Thrust**

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
1000	-5	-3	-3	-3	-3					
800	-5	-3	-2	-2	-2					
600	-5	-2	-2	-2	-2					
400	-3	-2	-1	-1	-1					
200	-1	-1	0	0	0					
0	0	0	0	0	0	0	0	0	0	0
-200	0	0	0	0	0	1	1	1	0	0
-400	0	0	0	0	0	2	2	1	1	1
-600	0	0	0	0	0	4	2	2	2	1
-800	0	0	0	0	0	5	3	2	2	1
-1000	0	0	0	0	0	7	4	3	2	1

Use of clearway not allowed on wet runways.

Stab Trim Setting
Max Takeoff Thrust
Flaps 1 and 5

WEIGHT (1000 LB)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
190	8 1/2	8 1/4	8	6 1/4	5 1/2	5 1/4	5	4 3/4	4 1/2	4	3 3/4
180	8 1/4	8	7 3/4	6	5 1/4	5 1/4	4 3/4	4 1/2	4 1/4	4	3 1/2
160	7 3/4	7 1/2	7 1/4	5 3/4	5	4 3/4	4 1/2	4 1/4	4	3 1/2	3 1/4
140	7 1/4	7	6 3/4	5 1/4	4 1/2	4 1/4	4	3 3/4	3 1/2	3 1/4	3
120	6 1/2	6 1/4	6 1/4	4 3/4	4	4	3 3/4	3 1/2	3	2 3/4	2 3/4
90-100	5 3/4	5 1/2	5 1/2	4	3 1/2	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
190	8 1/2	8	7 3/4	5 1/2	4 1/2	4 1/2	4	3 3/4	3 1/4	3	2 3/4
180	8 1/4	7 3/4	7 3/4	5 1/4	4 1/2	4 1/4	3 3/4	3 1/2	3 1/4	2 3/4	2 3/4
160	7 3/4	7 1/4	7 1/4	5	4	3 3/4	3 1/2	3 1/4	2 3/4	2 3/4	2 3/4
140	7 1/4	7	6 3/4	4 1/2	3 3/4	3 1/2	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4
120	6 1/2	6 1/4	6	4	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
90-100	6	5 1/2	5 1/4	3 1/2	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

VREF

WEIGHT (1000 LB)	FLAPS		
	40	30	15
190	159	162	172
180	155	158	167
170	150	154	162
160	145	150	158
150	141	145	152
140	136	140	147
130	130	135	142
120	124	130	136
110	119	124	130
100	112	118	124
90	106	112	117

Flap Maneuver Speeds

FLAP POSITION	MANEUVER SPEED
UP	VREF40 + 70
1	VREF40 + 50
5	VREF40 + 30
10	VREF40 + 30
15	VREF40 + 20
25	VREF40 + 10
30	VREF30
40	VREF40

ADVISORY INFORMATION**Slush/Standing Water Takeoff****Maximum Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-21.6	-26.0	-30.4	-26.2	-30.6	-35.0	-36.1	-42.7	-49.4
180	-20.2	-24.6	-29.0	-24.1	-28.5	-32.9	-32.4	-39.1	-45.7
170	-18.6	-23.0	-27.5	-21.9	-26.3	-30.7	-28.9	-35.5	-42.2
160	-17.0	-21.4	-25.8	-19.7	-24.1	-28.5	-25.5	-32.1	-38.8
150	-15.3	-19.7	-24.1	-17.5	-21.9	-26.3	-22.2	-28.8	-35.5
140	-13.5	-17.9	-22.3	-15.3	-19.7	-24.1	-19.0	-25.6	-32.3
130	-11.6	-16.1	-20.5	-13.0	-17.4	-21.8	-15.9	-22.6	-29.2
120	-9.7	-14.1	-18.5	-10.7	-15.1	-19.5	-13.0	-19.6	-26.3
110	-7.6	-12.0	-16.4	-8.4	-12.8	-17.2	-10.1	-16.8	-23.5
100	-5.5	-9.9	-14.3	-6.0	-10.4	-14.8	-7.4	-14.1	-20.7
90	-3.3	-7.7	-12.1	-3.6	-8.0	-12.4	-4.8	-11.5	-18.1

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4000							77.2		
4400	81.4			88.5			100.9	71.8	
4800	105.8	75.8		113.0	82.9		125.4	95.4	
5200	131.4	100.1	70.3	138.7	107.2	77.4	151.0	119.6	89.9
5600	158.7	125.4	94.5	166.0	132.7	101.5	177.8	145.0	114.0
6000	187.8	152.3	119.5	195.0	159.6	126.7	205.9	171.5	139.1
6400		180.9	145.9		188.2	153.2		199.4	165.3
6800			174.2			181.4			192.9
7200			204.2						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-17	-12	-7	-10	-5	0	0	0	0
180	-19	-14	-9	-12	-7	-2	0	0	0
170	-20	-15	-10	-14	-9	-4	-1	0	0
160	-21	-16	-11	-16	-11	-6	-4	0	0
150	-22	-17	-12	-18	-13	-8	-8	-3	0
140	-23	-18	-13	-20	-15	-10	-11	-6	-1
130	-24	-19	-14	-21	-16	-11	-14	-9	-4
120	-25	-20	-15	-23	-18	-13	-17	-12	-7
110	-26	-21	-16	-24	-19	-14	-19	-14	-9
100	-27	-22	-17	-25	-20	-15	-22	-17	-12
90	-28	-23	-18	-27	-22	-17	-24	-19	-14

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff****No Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-28.8	-34.3	-39.8	-33.5	-39.0	-44.5	-43.3	-52.1	-61.0
180	-27.0	-32.5	-38.0	-31.0	-36.5	-42.0	-39.3	-48.1	-56.9
170	-25.2	-30.7	-36.2	-28.4	-34.0	-39.5	-35.4	-44.2	-53.0
160	-23.2	-28.7	-34.2	-25.9	-31.4	-36.9	-31.6	-40.5	-49.3
150	-21.2	-26.7	-32.2	-23.4	-28.9	-34.4	-28.0	-36.9	-45.7
140	-19.1	-24.6	-30.1	-20.8	-26.4	-31.9	-24.6	-33.4	-42.2
130	-17.0	-22.5	-28.0	-18.3	-23.8	-29.3	-21.2	-30.1	-38.9
120	-14.7	-20.2	-25.7	-15.8	-21.3	-26.8	-18.1	-26.9	-35.7
110	-12.4	-17.9	-23.4	-13.2	-18.7	-24.2	-15.0	-23.8	-32.6
100	-10.0	-15.5	-21.0	-10.7	-16.2	-21.7	-12.1	-20.9	-29.7
90	-7.6	-13.1	-18.6	-8.1	-13.6	-19.1	-9.4	-18.2	-27.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5600							77.0		
6000							107.2	70.1	
6400				91.8			138.9	100.1	
6800	96.2			129.1	83.4		172.6	131.4	93.2
7200	136.4	87.6		168.1	120.4	75.0	208.3	164.6	124.1
7600	182.4	126.7	79.0	208.9	159.0	111.7		200.0	156.8
8000		171.2	117.3		199.4	150.0			191.7
8400			160.3			190.0			
8800			209.9						

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -130 ft/+130 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-26	-16	-6	-16	-6	0	0	0	0
180	-28	-18	-8	-19	-9	0	0	0	0
170	-30	-20	-10	-22	-12	-2	-2	0	0
160	-32	-22	-12	-25	-15	-5	-7	0	0
150	-34	-24	-14	-28	-18	-8	-13	-3	0
140	-36	-26	-16	-31	-21	-11	-18	-8	0
130	-37	-27	-17	-33	-23	-13	-23	-13	-3
120	-39	-29	-19	-36	-26	-16	-27	-17	-7
110	-41	-31	-21	-38	-28	-18	-31	-21	-11
100	-43	-33	-23	-40	-30	-20	-35	-25	-15
90	-44	-34	-24	-43	-33	-23	-39	-29	-19

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes****Maximum Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-30.4	-32.2	-34.0	-35.0	-36.8	-38.6	-49.4	-52.0	-54.7
180	-29.0	-30.7	-32.5	-32.9	-34.7	-36.4	-45.7	-48.4	-51.1
170	-27.5	-29.2	-31.0	-30.7	-32.5	-34.3	-42.2	-44.9	-47.5
160	-25.8	-27.6	-29.4	-28.5	-30.3	-32.1	-38.8	-41.5	-44.1
150	-24.1	-25.9	-27.7	-26.3	-28.1	-29.9	-35.5	-38.2	-40.8
140	-22.3	-24.1	-25.9	-24.1	-25.9	-27.6	-32.3	-35.0	-37.6
130	-20.5	-22.2	-24.0	-21.8	-23.6	-25.3	-29.2	-31.9	-34.6
120	-18.5	-20.3	-22.0	-19.5	-21.3	-23.0	-26.3	-29.0	-31.6
110	-16.4	-18.2	-20.0	-17.2	-19.0	-20.7	-23.5	-26.1	-28.8
100	-14.3	-16.1	-17.8	-14.8	-16.6	-18.4	-20.7	-23.4	-26.1
90	-12.1	-13.8	-15.6	-12.4	-14.2	-16.0	-18.1	-20.8	-23.5

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5000							78.1		
5400	82.4	70.5		89.4	77.6		101.8	90.1	78.5
5800	106.8	94.7	82.7	114.0	101.7	89.8	126.4	114.2	102.2
6200	132.5	119.7	107.2	139.8	126.9	114.4	152.0	139.3	126.8
6600	159.8	146.2	132.9	167.1	153.5	140.2	178.9	165.5	152.4
7000	189.0	174.4	160.3	196.2	181.7	167.6	207.0	193.1	179.4
7400		204.5	189.5			196.7			207.4

1. Enter Weight Adjustment table with slush/standing water depth and dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7	-5	-3	0	0	0	0	0	0
180	-9	-7	-5	-2	0	0	0	0	0
170	-10	-8	-6	-4	-2	0	0	0	0
160	-11	-9	-7	-6	-4	-2	0	0	0
150	-12	-10	-8	-8	-6	-4	0	0	0
140	-13	-11	-9	-10	-8	-6	-1	0	0
130	-14	-12	-10	-11	-9	-7	-4	-2	0
120	-15	-13	-11	-13	-11	-9	-7	-5	-3
110	-16	-14	-12	-14	-12	-10	-9	-7	-5
100	-17	-15	-13	-15	-13	-11	-12	-10	-8
90	-18	-16	-14	-17	-15	-13	-14	-12	-10

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slush/Standing Water Takeoff - High Altitudes****No Reverse Thrust****Weight Adjustments (1000 LB)**

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-39.8	-42.0	-44.2	-44.5	-46.7	-48.9	-61.0	-64.5	-68.0
180	-38.0	-40.2	-42.4	-42.0	-44.2	-46.4	-56.9	-60.5	-64.0
170	-36.2	-38.4	-40.6	-39.5	-41.7	-43.9	-53.0	-56.6	-60.1
160	-34.2	-36.4	-38.6	-36.9	-39.1	-41.3	-49.3	-52.8	-56.3
150	-32.2	-34.4	-36.6	-34.4	-36.6	-38.8	-45.7	-49.2	-52.7
140	-30.1	-32.3	-34.5	-31.9	-34.1	-36.3	-42.2	-45.7	-49.3
130	-28.0	-30.2	-32.4	-29.3	-31.5	-33.7	-38.9	-42.4	-45.9
120	-25.7	-27.9	-30.1	-26.8	-29.0	-31.2	-35.7	-39.2	-42.7
110	-23.4	-25.6	-27.8	-24.2	-26.4	-28.6	-32.6	-36.2	-39.7
100	-21.0	-23.3	-25.5	-21.7	-23.9	-26.1	-29.7	-33.3	-36.8
90	-18.6	-20.8	-23.0	-19.1	-21.4	-23.6	-27.0	-30.5	-34.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6600							78.2		
7000							108.4	93.4	78.7
7400				93.2	75.2		140.2	124.3	108.9
7800	97.7	79.3		130.6	112.0	93.8	174.0	157.1	140.7
8200	138.1	117.6	98.3	169.7	150.3	131.2	209.7	192.0	174.5
8600	184.4	160.7	138.8		190.3	170.4			
9000			185.2						

1. Enter Weight Adjustment table with slush/standing water depth and 27KBI Bump dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -130 ft/+130 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6	-2	0	0	0	0	0	0	0
180	-8	-4	0	0	0	0	0	0	0
170	-10	-6	-2	-2	0	0	0	0	0
160	-12	-8	-4	-5	-1	0	0	0	0
150	-14	-10	-6	-8	-4	0	0	0	0
140	-16	-12	-8	-11	-7	-3	0	0	0
130	-17	-13	-9	-13	-9	-5	-3	0	0
120	-19	-15	-11	-16	-12	-8	-7	-3	0
110	-21	-17	-13	-18	-14	-10	-11	-7	-3
100	-23	-19	-15	-20	-16	-12	-15	-11	-7
90	-24	-20	-16	-23	-19	-15	-19	-15	-11

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION

Slippery Runway Takeoff Maximum Reverse Thrust Weight Adjustment (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-1.2	-2.8	-4.3	-12.3	-13.8	-15.4	-22.1	-23.6	-25.2
180	-1.9	-3.4	-5.0	-12.4	-13.9	-15.5	-21.5	-23.0	-24.6
170	-2.3	-3.9	-5.4	-12.3	-13.8	-15.3	-20.6	-22.2	-23.7
160	-2.6	-4.1	-5.7	-11.9	-13.5	-15.0	-19.6	-21.1	-22.7
150	-2.6	-4.2	-5.7	-11.4	-12.9	-14.4	-18.4	-19.9	-21.5
140	-2.4	-4.0	-5.5	-10.6	-12.1	-13.7	-17.0	-18.5	-20.0
130	-2.1	-3.6	-5.2	-9.6	-11.1	-12.7	-15.3	-16.9	-18.4
120	-1.5	-3.1	-4.6	-8.4	-9.9	-11.5	-13.5	-15.1	-16.6
110	-0.7	-2.3	-3.8	-6.9	-8.5	-10.0	-11.5	-13.1	-14.6
100	0.0	-1.3	-2.8	-5.3	-6.8	-8.4	-9.3	-10.8	-12.4
90	0.0	-0.1	-1.7	-3.4	-5.0	-6.5	-6.9	-8.4	-10.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3400	97.0								
3800	139.7	87.1							
4200	181.8	129.9	77.2	74.3					
4600		172.2	120.1	102.3					
5000			162.5	131.6	84.3				
5400			204.4	163.0	112.6		72.9		
5800				196.9	142.7	94.4	89.9		
6200					174.9	123.2	107.3	72.1	
6600					209.4	154.0	125.8	89.1	
7000						187.2	145.5	106.4	71.3
7400							166.8	124.8	88.2
7800							190.1	144.5	105.5
8200								165.7	123.9
8600								188.9	143.5
9000									164.6
9400									187.7

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-6	-1	0	-16	-11	-6	-29	-24	-19
180	-7	-2	0	-18	-13	-8	-30	-25	-20
170	-8	-3	0	-19	-14	-9	-32	-27	-22
160	-9	-4	0	-20	-15	-10	-34	-29	-24
150	-10	-5	0	-22	-17	-12	-36	-31	-26
140	-11	-6	-1	-23	-18	-13	-37	-32	-27
130	-12	-7	-2	-24	-19	-14	-39	-34	-29
120	-13	-8	-3	-26	-21	-16	-41	-36	-31
110	-14	-9	-4	-27	-22	-17	-42	-37	-32
100	-15	-10	-5	-29	-24	-19	-44	-39	-34
90	-16	-11	-6	-30	-25	-20	-46	-41	-36

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
Weight Adjustments (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-5.6	-6.7	-7.8	-19.7	-20.8	-21.9	-30.9	-32.0	-33.1
180	-5.5	-6.6	-7.7	-18.9	-20.0	-21.1	-29.7	-30.8	-31.9
170	-5.4	-6.5	-7.6	-18.1	-19.2	-20.3	-28.4	-29.5	-30.6
160	-5.4	-6.5	-7.6	-17.3	-18.4	-19.5	-27.1	-28.2	-29.3
150	-5.3	-6.4	-7.5	-16.5	-17.6	-18.7	-25.9	-27.0	-28.1
140	-5.2	-6.3	-7.4	-15.7	-16.8	-17.9	-24.6	-25.7	-26.8
130	-5.1	-6.2	-7.3	-14.9	-16.0	-17.1	-23.3	-24.4	-25.5
120	-5.1	-6.2	-7.3	-14.1	-15.2	-16.3	-22.1	-23.2	-24.3
110	-5.0	-6.1	-7.2	-13.3	-14.4	-15.5	-20.8	-21.9	-23.0
100	-4.9	-6.0	-7.1	-12.5	-13.6	-14.7	-19.6	-20.7	-21.8
90	-4.8	-5.9	-7.1	-11.7	-12.8	-13.9	-18.3	-19.4	-20.5

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
4000	93.6								
4400	158.5	75.5							
4800	209.4	145.3							
5200		198.1	131.3						
5600			186.8						
6000				75.1					
6400				135.9					
6800				190.6	122.5				
7200					178.5	108.7			
7600						166.1			
9600							84.2		
10000							125.6		
10400							168.4	90.5	
10800								132.1	
11200								175.1	96.9
11600									138.7
12000									181.9

1. Enter Weight Adjustment table with reported braking action and 27K Bump dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -170 ft/+170 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-9	0	0	-23	-13	-3	-44	-34	-24
180	-10	0	0	-25	-15	-5	-47	-37	-27
170	-11	-1	0	-27	-17	-7	-50	-40	-30
160	-12	-2	0	-29	-19	-9	-53	-43	-33
150	-14	-4	0	-31	-21	-11	-56	-46	-36
140	-15	-5	0	-34	-24	-14	-60	-50	-40
130	-17	-7	0	-37	-27	-17	-63	-53	-43
120	-19	-9	0	-40	-30	-20	-67	-57	-47
110	-21	-11	-1	-43	-33	-23	-71	-61	-51
100	-23	-13	-3	-46	-36	-26	-75	-65	-55
90	-25	-15	-5	-50	-40	-30	-79	-69	-59

- 1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

Maximum Reverse Thrust

Weight Adjustment (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-4.3	-4.9	-5.5	-15.4	-16.0	-16.6	-25.2	-25.8	-26.4
180	-5.0	-5.6	-6.2	-15.5	-16.1	-16.7	-24.6	-25.2	-25.8
170	-5.4	-6.0	-6.6	-15.3	-16.0	-16.6	-23.7	-24.3	-25.0
160	-5.7	-6.3	-6.9	-15.0	-15.6	-16.2	-22.7	-23.3	-23.9
150	-5.7	-6.3	-6.9	-14.4	-15.1	-15.7	-21.5	-22.1	-22.7
140	-5.5	-6.2	-6.8	-13.7	-14.3	-14.9	-20.0	-20.7	-21.3
130	-5.2	-5.8	-6.4	-12.7	-13.3	-13.9	-18.4	-19.0	-19.7
120	-4.6	-5.2	-5.8	-11.5	-12.1	-12.7	-16.6	-17.2	-17.8
110	-3.8	-4.4	-5.1	-10.0	-10.6	-11.3	-14.6	-15.2	-15.8
100	-2.8	-3.5	-4.1	-8.4	-9.0	-9.6	-12.4	-13.0	-13.6
90	-1.7	-2.3	-2.9	-6.5	-7.1	-7.8	-10.0	-10.6	-11.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
4200	77.2								
4600	120.1	99.0	77.9						
5000	162.5	141.7	120.8						
5400	204.4	183.8	163.2						
5800			205.0	94.4	76.1				
6200				123.2	104.1	85.7			
6600				154.0	133.6	114.0			
7000				187.2	165.1	144.2	71.3		
7400					199.1	176.5	88.2	74.3	
7800							105.5	91.3	77.4
8200							123.9	108.8	94.4
8600							143.5	127.3	112.0
9000							164.6	147.1	130.8
9400							187.7	168.6	150.9
9800								192.0	172.6
10200									196.4

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -65 ft/+65 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -65 ft/+65 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -115 ft/+115 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-6	-4	-2	-19	-17	-15
180	0	0	0	-8	-6	-4	-20	-18	-16
170	0	0	0	-9	-7	-5	-22	-20	-18
160	0	0	0	-10	-8	-6	-24	-22	-20
150	0	0	0	-12	-10	-8	-26	-24	-22
140	-1	0	0	-13	-11	-9	-27	-25	-23
130	-2	0	0	-14	-12	-10	-29	-27	-25
120	-3	-1	0	-16	-14	-12	-31	-29	-27
110	-4	-2	0	-17	-15	-13	-32	-30	-28
100	-5	-3	-1	-19	-17	-15	-34	-32	-30
90	-6	-4	-2	-20	-18	-16	-36	-34	-32

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes
No Reverse Thrust
Weight Adjustment (1000 LB)

DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7.8	-8.2	-8.7	-21.9	-22.3	-22.8	-33.1	-33.6	-34.0
180	-7.7	-8.1	-8.6	-21.1	-21.5	-22.0	-31.9	-32.3	-32.7
170	-7.6	-8.1	-8.5	-20.3	-20.7	-21.2	-30.6	-31.0	-31.5
160	-7.6	-8.0	-8.4	-19.5	-19.9	-20.4	-29.3	-29.8	-30.2
150	-7.5	-7.9	-8.4	-18.7	-19.1	-19.6	-28.1	-28.5	-29.0
140	-7.4	-7.9	-8.3	-17.9	-18.3	-18.8	-26.8	-27.2	-27.7
130	-7.3	-7.8	-8.2	-17.1	-17.5	-17.9	-25.5	-26.0	-26.4
120	-7.3	-7.7	-8.1	-16.3	-16.7	-17.1	-24.3	-24.7	-25.2
110	-7.2	-7.6	-8.1	-15.5	-15.9	-16.3	-23.0	-23.5	-23.9
100	-7.1	-7.6	-8.0	-14.7	-15.1	-15.5	-21.8	-22.2	-22.6
90	-7.1	-7.5	-7.9	-13.9	-14.3	-14.7	-20.5	-20.9	-21.4

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5000	96.7								
5400	160.7	131.8	97.9						
5800		187.2	161.6						
7000				77.6					
7400				138.2	109.2	78.7			
7800				192.7	166.6	139.1			
8200						193.6			
11000							76.4		
11400							117.6	87.1	
11800							160.1	128.6	97.9
12200							204.1	171.5	139.7
12600									183.0

1. Enter Weight Adjustment table with reported braking action and dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-3	0	0	-24	-20	-16
180	0	0	0	-5	-1	0	-27	-23	-19
170	0	0	0	-7	-3	0	-30	-26	-22
160	0	0	0	-9	-5	-1	-33	-29	-25
150	0	0	0	-11	-7	-3	-36	-32	-28
140	0	0	0	-14	-10	-6	-40	-36	-32
130	0	0	0	-17	-13	-9	-43	-39	-35
120	0	0	0	-20	-16	-12	-47	-43	-39
110	-1	0	0	-23	-19	-15	-51	-47	-43
100	-3	0	0	-26	-22	-18	-55	-51	-47
90	-5	-1	0	-30	-26	-22	-59	-55	-51

1. Obtain V1, VR and V2 for the actual weight using the Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	95.7	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	96.8	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	97.6	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.3	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.0	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	99.7	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	99.3	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	98.5	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	97.8	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	97.0	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	96.2	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
5	95.4	97.0	99.0	99.3	99.6	99.8	100.1	100.3	100.6	100.9	101.2	101.0	100.9
0	94.6	96.2	98.2	98.6	98.8	99.1	99.3	99.6	99.8	100.1	100.4	100.3	100.1
-5	93.8	95.4	97.5	97.8	98.1	98.3	98.6	98.8	99.1	99.4	99.6	99.5	99.4
-10	93.0	94.6	96.7	97.0	97.3	97.5	97.8	98.0	98.3	98.6	98.8	98.7	98.6
-15	92.2	93.8	95.9	96.3	96.5	96.8	97.0	97.3	97.5	97.8	98.1	97.9	97.8
-20	91.4	93.0	95.2	95.5	95.7	96.0	96.2	96.5	96.7	97.0	97.3	97.1	97.0
-25	90.5	92.2	94.4	94.7	94.9	95.2	95.4	95.7	95.9	96.2	96.5	96.3	96.2
-30	89.7	91.3	93.6	93.9	94.1	94.4	94.6	94.9	95.1	95.4	95.6	95.5	95.4
-35	88.8	90.5	92.8	93.1	93.3	93.6	93.8	94.0	94.3	94.6	94.8	94.7	94.6
-40	88.0	89.6	91.9	92.3	92.5	92.7	93.0	93.2	93.5	93.7	94.0	93.9	93.7
-45	87.1	88.8	91.1	91.4	91.7	91.9	92.1	92.4	92.6	92.9	93.1	93.0	92.9
-50	86.2	87.9	90.3	90.6	90.8	91.1	91.3	91.5	91.8	92.0	92.3	92.2	92.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Takeoff %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.2					
35	99.1	99.0	98.8			
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5	100.9	101.8	102.0	101.9	101.8	101.8
0	100.1	101.0	101.9	102.1	102.0	102.0
-5	99.4	100.3	101.1	101.5	101.8	101.9
-10	98.6	99.5	100.3	100.7	101.0	101.1
-15	97.8	98.7	99.5	99.9	100.2	100.3
-20	97.0	97.9	98.7	99.1	99.3	99.5
-25	96.2	97.1	97.9	98.2	98.5	98.6
-30	95.4	96.3	97.1	97.4	97.7	97.8
-35	94.6	95.4	96.3	96.6	96.8	97.0
-40	93.7	94.6	95.4	95.7	96.0	96.1
-45	92.9	93.7	94.5	94.9	95.1	95.3
-50	92.0	92.9	93.7	94.0	94.2	94.4

Takeoff %N1 - High Altitudes**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	70	69	69	67	65	63	61	59	57	55	53	
30	67	65	66	65	65	63	61	59	57	55	53	51
25	67	65	65	63	64	63	61	59	57	55	53	51
20	67	65	65	63	64	63	61	59	57	55	53	51
15	67	65	65	63	64	63	61	59	57	55	53	51
10 & BELOW	67	65	65	63	64	63	61	59	57	55	53	51

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	94.1	94.4	95.2	95.4	96.3	97.2	97.7	97.9	98.0	98.0	98.0	98.0
70	94.8	95.2	95.4	95.0	95.6	96.5	97.1	97.3	97.3	97.3	97.3	97.3
65	95.6	96.0	96.1	95.9	96.2	96.4	96.4	96.6	96.6	96.6	96.6	96.6
60	96.2	96.7	96.9	96.7	97.0	97.2	97.3	96.9	96.3	96.0	95.9	95.9
55	97.2	97.4	97.6	97.5	97.7	98.0	98.1	97.8	97.2	96.7	96.0	95.3
50	98.2	98.7	98.6	98.3	98.5	98.7	99.0	98.7	98.2	97.6	97.0	96.3
45	98.9	99.4	99.6	99.6	99.6	99.6	99.8	99.5	99.0	98.5	97.9	97.3
40	99.7	100.2	100.4	100.3	100.4	100.5	100.5	100.3	99.9	99.4	98.8	98.2
35	100.5	101.2	101.4	101.3	101.4	101.5	101.5	101.2	100.7	100.2	99.7	99.1
30	100.8	102.6	102.3	102.3	102.2	102.3	102.4	102.1	101.8	101.4	100.6	100.0
25	100.1	101.9	102.2	102.5	102.6	102.6	102.6	102.5	102.5	102.4	101.4	100.9
20	99.3	101.2	101.5	101.8	102.0	102.3	102.6	102.6	102.6	102.5	101.8	101.0
15	98.5	100.5	100.8	101.1	101.3	101.6	101.8	102.1	102.4	102.5	102.0	101.3
10	97.8	99.7	100.1	100.3	100.6	100.8	101.1	101.4	101.6	101.9	101.8	101.7
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

Assumed Temperature Reduced Thrust
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.7													
100	15.0	10.3												
90	14.0	11.5												
80	12.8	11.7	7.2											
70	10.7	10.7	8.3	7.2	5.6									
60	9.2	9.4	8.6	8.4	6.8	5.7	4.1							
50	7.8	7.5	7.5	7.2	7.0	6.9	5.3	4.2	2.7					
40		6.0	6.1	6.1	5.9	5.8	5.8	5.4	4.2	4.0	4.6			
30		4.6	4.4	4.5	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	4.0	
20			2.9	2.9	2.9	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.7
10			1.5	1.5	1.5	1.4	1.4	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	54	54	52	50	48	47
5	54	52	50	50	48	47
0 & BELOW	54	52	49	50	48	47

Assumed Temperature Reduced Thrust - High Altitudes**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.9					
55	95.3	95.5	95.6	97.5		
50	96.3	96.0	95.4	96.8	98.5	99.4
45	97.3	97.0	96.6	97.4	98.4	99.0
40	98.2	98.0	97.7	98.3	99.0	99.4
35	99.1	99.0	98.8	99.1	99.5	99.8
30	100.0	99.9	99.9	99.9	100.0	100.1
25	100.9	100.7	100.7	100.7	100.5	100.5
20	101.0	101.0	101.0	100.9	100.9	100.8
15	101.3	101.3	101.3	101.3	101.1	101.1
10	101.7	101.7	101.7	101.7	101.5	101.4
5		101.8	102.0	101.9	101.8	101.8
0				102.1	102.0	102.0
-5				101.5	101.8	101.9
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.5										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.7								
70	11.3	11.2	10.7								
60	10.0	9.2	9.4	7.5							
50		7.9	7.8	7.5	6.0	5.9	5.8				
40		6.5	6.0	6.2	6.0	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (26K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	169	172	178	161	164	170									
180	164	167	173	157	159	166	148	150	157	146	148	155			
170	159	162	169	152	154	162	144	146	153	142	144	151	139	140	147
160	154	156	165	147	149	158	139	141	149	137	139	147	134	135	143
150	149	150	160	142	143	153	134	135	145	132	134	143	129	130	139
140	143	145	155	136	138	149	129	130	141	127	128	139	124	125	135
130	137	138	150	130	131	144	123	124	136	121	123	134	119	119	131
120	131	131	145	124	125	139	117	118	131	116	117	129	113	113	126
110	124	124	139	118	118	133	111	112	126	110	110	124	107	107	121
100	117	117	133	111	111	128	105	105	121	104	104	119	101	101	116
90	109	109	127	104	104	122	99	99	115	97	97	114	94	94	111

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	5	5						4	5						-2	-2								
60	140	4	4	5	6				3	4	5	6				-2	-2	-2	-3						
50	122	2	3	4	5	6	7	8	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-4			
40	104	1	1	2	3	4	5	7	1	1	2	3	4	6	7	0	-1	-1	-1	-2	-2	-3			
30	86	0	0	1	2	3	5	6	0	0	1	2	4	5	6	0	0	-1	-1	-1	-2	-2			
20	68	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			
-60	-76	0	0	1	2	3	4	5	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2			

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)								
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40	
190	-4	-2	0	1	2		-2	-1	-1	0	0	0	1	1	
170	-3	-1	0	1	2		-2	-1	-1	0	0	1	1	1	
150	-2	-1	0	1	1		-2	-1	0	0	0	1	1	1	
130	-1	0	0	1	1		-2	-1	0	0	0	1	1	1	
110	-1	0	0	0	0		-1	-1	0	0	0	0	0	0	
90	0	0	0	0	0		-1	-1	0	0	0	0	0	0	

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)							
		-2000	0	2000	4000	6000	8000	10000	
70	158	93	91						
60	140	93	91	89	88				
50	122	95	93	90	88	86	83	81	
40	104	99	97	94	90	87	83	81	
30	86	102	101	98	94	90	86	83	
20	68	102	102	99	95	92	88	85	
-60	-76	104	103	100	96	93	90	87	

Takeoff Speeds - Dry Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	160	160	163												
150	155	155	159	148	148	152									
140	149	149	154	142	142	147	134	134	139	132	132	138			
130	142	143	149	136	136	142	128	129	135	126	127	133	123	123	129
120	136	136	143	129	130	137	122	123	130	120	121	128	118	118	124
110	129	129	137	123	123	131	116	117	124	114	115	123	112	112	119
100	122	122	131	116	116	126	109	110	119	108	109	117	105	106	114
90	114	115	125	109	109	120	103	103	113	101	102	112	99	99	109

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5			
40	104	2	3	3	4	4	4	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2			
30	86	1	2	2	3	3	3	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1			
20	68	0	1	1	2	2	3	1	1	2	2	3	3	0	0	-1	-1	-1	-1			
10	50	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	-1	-1	-1			
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1			
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1			

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
160	-3	-2	0	0	0		-1	-1	0	0	0	0	0	0
150	-3	-1	0	0	0		-1	-1	0	0	0	0	0	0
140	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
130	-2	-1	0	0	0		-1	-1	0	0	0	0	0	0
120	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
110	-1	-1	0	0	0		-1	-1	0	0	0	0	0	0
100	-1	0	0	0	0		-1	-1	0	0	0	0	0	0
90	-1	0	0	0	0		-1	-1	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	83	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Takeoff Speeds - Wet Runway (26K Derate)
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	165	172	178	156	164	170									
180	159	167	173	150	159	166	142	150	157	140	148	155			
170	153	162	169	145	154	162	137	146	153	135	144	151	131	140	147
160	147	156	165	139	149	158	132	141	149	130	139	147	126	135	143
150	141	150	160	134	143	153	126	135	145	125	134	143	121	130	139
140	135	145	155	128	138	149	121	130	141	119	128	139	116	125	135
130	128	138	150	122	131	144	115	124	136	114	123	134	110	119	131
120	122	131	145	115	125	139	109	118	131	108	117	129	104	113	126
110	115	124	139	109	118	133	103	112	126	101	110	124	98	107	121
100	107	117	133	102	111	128	96	105	121	95	104	119	92	101	116
90	100	109	127	95	104	122	89	99	115	88	97	114	85	94	111

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						4	5						-2	-2								
60	140	5	6	7	9				3	4	5	6				-2	-2	-2	-3						
50	122	3	4	5	6	7	9	12	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-4			
40	104	1	2	3	4	5	7	9	1	1	2	3	5	6	7	0	-1	-1	-1	-2	-2	-3			
30	86	0	0	1	3	4	5	7	0	0	1	2	4	5	6	0	0	-1	-1	-1	-2	-2			
20	68	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-2	-2			
-60	-76	0	0	1	2	4	5	6	0	0	1	2	3	4	5	0	0	0	-1	-1	-1	-2			

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-5	-2	0	3	6		-4	-2	-1	0	1	1	2	3
170	-4	-2	0	2	5		-4	-2	-1	0	1	1	2	3
150	-3	-2	0	2	4		-4	-2	-1	0	1	2	2	3
130	-3	-1	0	2	3		-4	-3	-1	0	1	2	2	3
110	-2	-1	0	1	2		-5	-3	-1	0	1	2	3	4
90	-2	-1	0	1	1		-5	-3	-2	0	1	2	3	4

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	93	91					
60	140	93	91	89	88			
50	122	95	93	90	88	86	83	81
40	104	99	97	94	90	87	83	81
30	86	102	101	98	94	90	86	83
20	68	102	102	99	95	92	88	85
-60	-76	104	103	100	96	93	90	87

Takeoff Speeds - Wet Runway - High Altitudes (26K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	155	160	163												
150	149	155	159	142	148	152									
140	142	149	154	135	142	147	127	134	139	126	132	138			
130	135	143	149	128	136	142	121	129	135	120	127	133	116	123	129
120	128	136	143	121	130	137	115	123	130	113	121	128	110	118	124
110	121	129	137	115	123	131	108	117	124	107	115	123	104	112	119
100	113	122	131	108	116	126	102	110	119	100	109	117	98	106	114
90	106	115	125	100	109	120	95	103	113	93	102	112	91	99	109

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	3	4	5	5	6	6	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
30	86	1	2	3	3	4	5	1	2	2	3	3	3	-1	-1	-1	-1	-1	-1
20	68	0	1	2	2	3	3	1	1	2	2	3	3	0	0	-1	-1	-1	-1
10	50	0	0	1	2	2	3	0	0	1	1	2	2	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
160	-5	-3	0	3	6		-2	-2	-1	0	0	1	2	2
150	-5	-2	0	3	6		-2	-2	-1	0	1	1	2	2
140	-4	-2	0	3	5		-3	-2	-1	0	1	1	2	2
130	-4	-2	0	2	5		-3	-2	-1	0	1	1	2	2
120	-3	-2	0	2	4		-3	-2	-1	0	1	1	2	2
110	-3	-1	0	2	3		-3	-2	-1	0	1	1	2	3
100	-3	-1	0	1	3		-4	-2	-1	0	1	1	2	3
90	-2	-1	0	1	2		-4	-3	-1	0	1	1	2	3

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	81	80	79	78	78	77
30	86	83	81	79	78	78	77
20	68	85	83	81	79	78	77
10	50	86	84	82	81	79	78
0	32	86	85	84	82	80	79
-60	-76	87	86	84	83	81	81

Maximum Allowable Clearway (26K Derate)

FIELD LENGTH (FT)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	650
5000	700
6000	750
7000	850
8000	950
9000	1000
10000	1100

Maximum Allowable Clearway - High Altitudes (26K Derate)

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION(FT)
4000	600
6000	750
8000	950
10000	1100
12000	1300
14000	1400

Clearway and Stopway V1 Adjustments (26K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
1000	-6	-5	-4	-4	-3					
800	-6	-5	-4	-3	-2					
600	-5	-4	-3	-3	-2					
400	-4	-3	-2	-2	-1					
200	-1	-1	-1	-1	-1					
0	0	0	0	0	0	0	0	0	0	0
-200	0	1	1	1	1	1	1	1	1	1
-400	0	1	1	2	2	3	3	2	2	1
-600	0	1	1	2	2	6	4	3	2	1
-800	0	1	1	2	2	7	5	3	2	1
-1000	0	1	1	2	2	8	5	4	3	2

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitudes (26K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
1000	-5	-3	-3	-3	-3					
800	-5	-3	-2	-2	-2					
600	-5	-2	-2	-2	-2					
400	-3	-2	-1	-1	-1					
200	-1	-1	0	0	0					
0	0	0	0	0	0	0	0	0	0	0
-200	0	0	0	0	0	1	1	1	1	1
-400	0	0	0	0	0	2	2	1	1	1
-600	0	0	0	0	0	4	2	2	2	2
-800	0	0	0	0	0	5	3	2	2	2
-1000	0	0	0	0	0	7	4	2	2	2

Stab Trim Setting (26K Derate)**Flaps 1 and 5**

WEIGHT (1000 LB)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
190	8 1/2	8 1/4	8 1/4	6 1/2	5 3/4	5 3/4	5 1/4	5	4 3/4	4 1/2	4 1/4
180	8 1/2	8 1/4	8	6 1/2	5 3/4	5 1/2	5 1/4	5	4 1/2	4 1/4	4
160	8	7 3/4	7 1/2	6	5 1/4	5	4 3/4	4 1/2	4 1/4	4	3 1/2
140	7 1/2	7	7	5 1/2	4 3/4	4 1/2	4 1/4	4	3 3/4	3 1/2	3 1/4
120	6 3/4	6 1/2	6 1/2	5	4 1/4	4 1/4	4	3 3/4	3 1/2	3	2 3/4
90-100	6	5 3/4	5 3/4	4 1/4	3 3/4	3 1/2	3 1/4	3	2 3/4	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
190	8 1/2	8 1/2	8 1/4	5 3/4	4 3/4	4 3/4	4 1/4	4	3 1/2	3 1/4	2 3/4
180	8 1/2	8 1/4	8	5 1/2	4 3/4	4 1/2	4	3 3/4	3 1/4	3	2 3/4
160	8	7 3/4	7 1/2	5 1/4	4 1/4	4	3 3/4	3 1/4	3	2 3/4	2 3/4
140	7 1/2	7	6 3/4	4 3/4	3 3/4	3 3/4	3 1/4	3	2 3/4	2 3/4	2 3/4
120	7	6 1/2	6 1/4	4 1/4	3 1/4	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4
90-100	6 1/4	5 3/4	5 1/2	3 3/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-21.8	-26.3	-30.8	-26.6	-31.1	-35.6	-37.2	-43.7	-50.2
180	-20.5	-25.0	-29.5	-24.7	-29.2	-33.7	-33.5	-40.0	-46.5
170	-19.1	-23.6	-28.1	-22.5	-27.0	-31.5	-29.8	-36.3	-42.8
160	-17.4	-21.9	-26.4	-20.2	-24.7	-29.2	-26.3	-32.8	-39.3
150	-15.6	-20.1	-24.6	-17.9	-22.4	-26.9	-22.8	-29.3	-35.8
140	-13.7	-18.2	-22.7	-15.5	-20.0	-24.5	-19.5	-26.0	-32.5
130	-11.7	-16.2	-20.7	-13.1	-17.6	-22.1	-16.3	-22.8	-29.3
120	-9.8	-14.3	-18.8	-10.8	-15.3	-19.8	-13.3	-19.8	-26.3
110	-7.9	-12.4	-16.9	-8.7	-13.2	-17.7	-10.5	-17.0	-23.5
100	-6.1	-10.6	-15.1	-6.7	-11.2	-15.7	-8.0	-14.5	-21.0
90	-4.4	-8.9	-13.4	-4.9	-9.4	-13.9	-5.7	-12.2	-18.7

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800							72.3		
4200	77.0			83.8			95.5		
4600	101.8			108.6	74.6		120.3	86.8	
5000	128.0	92.4		135.0	99.1		146.6	110.8	78.1
5400	156.2	118.0	83.2	163.0	124.9	89.9	172.1	136.7	101.5
5800	186.1	145.4	108.2	192.5	152.3	115.0	195.2	162.7	126.9
6200		174.7	134.9		181.3	141.8		186.8	153.1
6600		205.3	163.5			170.3		209.1	178.1
7000			193.8			200.0			200.8

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-16	-11	-6	-8	-3	0	0	0	0
180	-17	-12	-7	-11	-6	-1	0	0	0
170	-19	-14	-9	-13	-8	-3	0	0	0
160	-20	-15	-10	-15	-10	-5	-3	0	0
150	-21	-16	-11	-17	-12	-7	-6	-1	0
140	-22	-17	-12	-19	-14	-9	-9	-4	0
130	-23	-18	-13	-20	-15	-10	-12	-7	-2
120	-24	-19	-14	-22	-17	-12	-15	-10	-5
110	-25	-20	-15	-23	-18	-13	-18	-13	-8
100	-26	-21	-16	-24	-19	-14	-20	-15	-10
90	-27	-22	-17	-26	-21	-16	-23	-18	-13

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (26K Derate)

No Reverse Thrust

Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-28.9	-34.4	-39.9	-34.0	-39.5	-45.0	-44.6	-53.6	-62.6
180	-27.4	-32.9	-38.4	-31.6	-37.1	-42.6	-40.3	-49.3	-58.3
170	-25.6	-31.1	-36.6	-29.0	-34.5	-40.0	-36.3	-45.3	-54.3
160	-23.6	-29.1	-34.6	-26.4	-31.9	-37.4	-32.4	-41.4	-50.4
150	-21.4	-26.9	-32.4	-23.7	-29.2	-34.7	-28.7	-37.7	-46.7
140	-19.2	-24.7	-30.2	-21.1	-26.6	-32.1	-25.1	-34.1	-43.1
130	-17.0	-22.5	-28.0	-18.4	-23.9	-29.4	-21.7	-30.7	-39.7
120	-14.8	-20.3	-25.8	-15.9	-21.4	-26.9	-18.4	-27.4	-36.4
110	-12.7	-18.2	-23.7	-13.5	-19.0	-24.5	-15.3	-24.3	-33.3
100	-10.7	-16.2	-21.7	-11.3	-16.8	-22.3	-12.3	-21.3	-30.3
90	-9.0	-14.5	-20.0	-9.3	-14.8	-20.3	-9.4	-18.4	-27.4

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5400							75.7		
5800							106.0		
6200				94.0			139.5	94.3	
6600	101.0			133.4	80.3		172.1	126.7	83.1
7000	145.5	86.3		174.0	118.1		200.7	160.3	114.1
7400	194.1	128.0	71.8		159.0	103.4		190.3	147.9
7800		176.0	111.4		197.4	143.7			179.6
8200			157.6			183.6			207.6
8600			206.1						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -140 ft/+140 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION**Slush/Standing Water Takeoff (26K Derate)****No Reverse Thrust****V1 Adjustment (KIAS)**

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-24	-14	-4	-14	-4	0	0	0	0
180	-26	-16	-6	-17	-7	0	0	0	0
170	-28	-18	-8	-20	-10	0	0	0	0
160	-30	-20	-10	-23	-13	-3	-5	0	0
150	-32	-22	-12	-26	-16	-6	-11	-1	0
140	-34	-24	-14	-29	-19	-9	-15	-5	0
130	-36	-26	-16	-32	-22	-12	-20	-10	0
120	-38	-28	-18	-34	-24	-14	-25	-15	-5
110	-39	-29	-19	-37	-27	-17	-29	-19	-9
100	-41	-31	-21	-39	-29	-19	-33	-23	-13
90	-43	-33	-23	-41	-31	-21	-37	-27	-17

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-30.8	-32.6	-34.4	-35.6	-37.4	-39.2	-50.2	-52.8	-55.4
180	-29.5	-31.3	-33.1	-33.7	-35.5	-37.3	-46.5	-49.1	-51.7
170	-28.1	-29.9	-31.7	-31.5	-33.3	-35.1	-42.8	-45.4	-48.0
160	-26.4	-28.2	-30.0	-29.2	-31.0	-32.8	-39.3	-41.9	-44.5
150	-24.6	-26.4	-28.2	-26.9	-28.7	-30.5	-35.8	-38.4	-41.0
140	-22.7	-24.5	-26.3	-24.5	-26.3	-28.1	-32.5	-35.1	-37.7
130	-20.7	-22.5	-24.3	-22.1	-23.9	-25.7	-29.3	-31.9	-34.5
120	-18.8	-20.6	-22.4	-19.8	-21.6	-23.4	-26.3	-28.9	-31.5
110	-16.9	-18.7	-20.5	-17.7	-19.5	-21.3	-23.5	-26.1	-28.7
100	-15.1	-16.9	-18.7	-15.7	-17.5	-19.3	-21.0	-23.6	-26.2
90	-13.4	-15.2	-17.0	-13.9	-15.7	-17.5	-18.7	-21.3	-23.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5000							78.1		
5400	83.2			89.9	76.4		101.5	88.5	75.8
5800	108.2	94.3	80.7	115.0	101.0	87.4	126.9	112.7	99.0
6200	134.9	120.0	105.6	141.8	126.9	112.4	153.1	138.7	124.2
6600	163.5	147.5	132.1	170.3	154.4	139.1	178.1	164.6	150.5
7000	193.8	176.9	160.5	200.0	183.5	167.3	200.8	188.5	175.7
7400		207.6	190.7			197.0			198.5

1. Enter Weight Adjustment table with slush/standing water depth and 26k Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6	-4	-2	0	0	0	0	0	0
180	-7	-5	-3	-1	0	0	0	0	0
170	-9	-7	-5	-3	-1	0	0	0	0
160	-10	-8	-6	-5	-3	-1	0	0	0
150	-11	-9	-7	-7	-5	-3	0	0	0
140	-12	-10	-8	-9	-7	-5	0	0	0
130	-13	-11	-9	-10	-8	-6	-2	0	0
120	-14	-12	-10	-12	-10	-8	-5	-3	-1
110	-15	-13	-11	-13	-11	-9	-8	-6	-4
100	-16	-14	-12	-14	-12	-10	-10	-8	-6
90	-17	-15	-13	-16	-14	-12	-13	-11	-9

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-39.9	-42.1	-44.3	-45.0	-47.2	-49.4	-62.6	-66.2	-69.8
180	-38.4	-40.6	-42.8	-42.6	-44.8	-47.0	-58.3	-61.9	-65.5
170	-36.6	-38.8	-41.0	-40.0	-42.2	-44.4	-54.3	-57.9	-61.5
160	-34.6	-36.8	-39.0	-37.4	-39.6	-41.8	-50.4	-54.0	-57.6
150	-32.4	-34.6	-36.8	-34.7	-36.9	-39.1	-46.7	-50.3	-53.9
140	-30.2	-32.4	-34.6	-32.1	-34.3	-36.5	-43.1	-46.7	-50.3
130	-28.0	-30.2	-32.4	-29.4	-31.6	-33.8	-39.7	-43.3	-46.9
120	-25.8	-28.0	-30.2	-26.9	-29.1	-31.3	-36.4	-40.0	-43.6
110	-23.7	-25.9	-28.1	-24.5	-26.7	-28.9	-33.3	-36.9	-40.5
100	-21.7	-23.9	-26.1	-22.3	-24.5	-26.7	-30.3	-33.9	-37.5
90	-20.0	-22.2	-24.4	-20.3	-22.5	-24.7	-27.4	-31.0	-34.6

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6600							83.1		
7000							114.1	96.6	80.2
7400	71.8			103.4	83.0		147.9	129.3	110.9
7800	111.4	89.1		143.7	121.2	99.6	179.6	162.7	144.6
8200	157.6	131.4	107.2	183.6	162.1	139.6	207.6	192.4	176.7
8600	206.1	179.6	152.7		200.2	179.8			204.8
9000			201.3						

1. Enter Weight Adjustment table with slush/standing water depth and 26K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -140 ft/+140 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff - High Altitudes (26K Derate)
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-4	0	0	0	0	0	0	0	0
180	-6	-2	0	0	0	0	0	0	0
170	-8	-4	0	0	0	0	0	0	0
160	-10	-6	-2	-3	0	0	0	0	0
150	-12	-8	-4	-6	-2	0	0	0	0
140	-14	-10	-6	-9	-5	-1	0	0	0
130	-16	-12	-8	-12	-8	-4	0	0	0
120	-18	-14	-10	-14	-10	-6	-5	-1	0
110	-19	-15	-11	-17	-13	-9	-9	-5	-1
100	-21	-17	-13	-19	-15	-11	-13	-9	-5
90	-23	-19	-15	-21	-17	-13	-17	-13	-9

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-1.1	-2.7	-4.2	-12.1	-13.6	-15.2	-22.3	-23.9	-25.4
180	-1.8	-3.4	-4.9	-12.3	-13.8	-15.4	-21.7	-23.3	-24.8
170	-2.3	-3.9	-5.4	-12.2	-13.8	-15.3	-20.9	-22.4	-24.0
160	-2.6	-4.2	-5.7	-11.9	-13.5	-15.0	-19.8	-21.4	-22.9
150	-2.7	-4.3	-5.8	-11.4	-13.0	-14.5	-18.6	-20.2	-21.7
140	-2.6	-4.1	-5.7	-10.7	-12.2	-13.8	-17.2	-18.8	-20.3
130	-2.2	-3.8	-5.3	-9.7	-11.3	-12.8	-15.6	-17.1	-18.7
120	-1.7	-3.2	-4.8	-8.6	-10.1	-11.7	-13.8	-15.3	-16.9
110	-0.9	-2.5	-4.0	-7.1	-8.7	-10.2	-11.8	-13.3	-14.9
100	0.0	-1.5	-3.0	-5.5	-7.1	-8.6	-9.6	-11.1	-12.7
90	0.0	-0.3	-1.9	-3.7	-5.2	-6.8	-7.2	-8.7	-10.3

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3400	104.9								
3800	147.7	93.9							
4200	188.8	137.1	82.8	80.6					
4600		178.7	126.5	109.3					
5000			168.4	139.7	94.9				
5400			208.8	172.2	124.3	80.6	77.6		
5800				206.6	155.7	109.3	95.0		
6200					189.4	139.7	113.0	75.4	
6600						172.2	132.3	92.8	
7000						206.6	153.0	110.7	73.2
7400							175.5	129.8	90.6
7800							200.2	150.3	108.4
8200								172.6	127.4
8600								197.1	147.7
9000									169.7
9400									193.9

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-6	-1	0	-15	-10	-5	-27	-22	-17
180	-7	-2	0	-17	-12	-7	-29	-24	-19
170	-7	-2	0	-18	-13	-8	-31	-26	-21
160	-8	-3	0	-19	-14	-9	-33	-28	-23
150	-9	-4	0	-21	-16	-11	-34	-29	-24
140	-10	-5	0	-22	-17	-12	-36	-31	-26
130	-11	-6	-1	-24	-19	-14	-38	-33	-28
120	-12	-7	-2	-25	-20	-15	-40	-35	-30
110	-13	-8	-3	-27	-22	-17	-41	-36	-31
100	-14	-9	-4	-28	-23	-18	-43	-38	-33
90	-16	-11	-6	-29	-24	-19	-44	-39	-34

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)
No Reverse Thrust
Weight Adjustments (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-4.1	-5.8	-7.5	-18.2	-19.9	-21.6	-30.2	-31.9	-33.6
180	-4.9	-6.6	-8.3	-18.3	-20.0	-21.7	-29.6	-31.3	-33.0
170	-5.5	-7.2	-8.9	-18.2	-19.9	-21.6	-28.7	-30.4	-32.1
160	-5.9	-7.6	-9.3	-17.8	-19.5	-21.2	-27.4	-29.1	-30.8
150	-6.0	-7.7	-9.4	-17.2	-18.9	-20.6	-25.8	-27.5	-29.2
140	-6.0	-7.7	-9.4	-16.3	-18.0	-19.7	-23.9	-25.6	-27.3
130	-5.7	-7.4	-9.1	-15.2	-16.9	-18.6	-21.7	-23.4	-25.1
120	-5.1	-6.8	-8.5	-13.8	-15.5	-17.2	-19.2	-20.9	-22.6
110	-4.4	-6.1	-7.8	-12.2	-13.9	-15.6	-16.3	-18.0	-19.7
100	-3.4	-5.1	-6.8	-10.3	-12.0	-13.7	-13.1	-14.8	-16.5
90	-2.2	-3.9	-5.6	-8.2	-9.9	-11.6	-9.6	-11.3	-13.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800	72.7								
4200	144.3								
4600	192.9	129.4							
5000		181.9	112.9						
5400			170.2						
6200				131.0					
6600				186.2	100.6				
7000					159.4				
7400						131.0			
7800						186.2			
9400							91.0		
9800							133.4		
10200							177.2	80.6	
10600								122.7	
11000								166.1	70.2
11400									112.0
11800									155.1
12200									199.6

- 1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
- 2. Adjust “Good” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
- 3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
- 4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (26K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-8	-3	0	-21	-16	-11	-41	-36	-31
180	-9	-4	0	-23	-18	-13	-44	-39	-34
170	-10	-5	0	-25	-20	-15	-47	-42	-37
160	-12	-7	-2	-27	-22	-17	-51	-46	-41
150	-13	-8	-3	-30	-25	-20	-54	-49	-44
140	-15	-10	-5	-32	-27	-22	-57	-52	-47
130	-16	-11	-6	-35	-30	-25	-61	-56	-51
120	-18	-13	-8	-38	-33	-28	-65	-60	-55
110	-20	-15	-10	-41	-36	-31	-68	-63	-58
100	-22	-17	-12	-44	-39	-34	-72	-67	-62
90	-24	-19	-14	-48	-43	-38	-76	-71	-66

- 1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-4.2	-4.9	-5.5	-15.2	-15.8	-16.4	-25.4	-26.1	-26.7
180	-4.9	-5.6	-6.2	-15.4	-16.0	-16.6	-24.8	-25.4	-26.0
170	-5.4	-6.1	-6.7	-15.3	-15.9	-16.6	-24.0	-24.6	-25.2
160	-5.7	-6.3	-7.0	-15.0	-15.6	-16.3	-22.9	-23.6	-24.2
150	-5.8	-6.4	-7.0	-14.5	-15.1	-15.8	-21.7	-22.3	-23.0
140	-5.7	-6.3	-6.9	-13.8	-14.4	-15.0	-20.3	-20.9	-21.5
130	-5.3	-5.9	-6.6	-12.8	-13.5	-14.1	-18.7	-19.3	-19.9
120	-4.8	-5.4	-6.0	-11.7	-12.3	-12.9	-16.9	-17.5	-18.1
110	-4.0	-4.6	-5.3	-10.2	-10.9	-11.5	-14.9	-15.5	-16.1
100	-3.0	-3.7	-4.3	-8.6	-9.2	-9.8	-12.7	-13.3	-13.9
90	-1.9	-2.5	-3.1	-6.8	-7.4	-8.0	-10.3	-10.9	-11.5

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
4200	82.8								
4600	126.5	104.9	82.8						
5000	168.4	147.7	126.5						
5400	208.8	188.8	168.4	80.6					
5800			208.8	109.3	92.0	74.9			
6200				139.7	121.3	103.5			
6600				172.2	152.4	133.5			
7000				206.6	185.9	165.5	73.2		
7400						199.7	90.6	75.8	
7800							108.4	93.2	78.4
8200							127.4	111.2	95.8
8600							147.7	130.3	114.0
9000							169.7	150.9	133.3
9400							193.9	173.2	154.1
9800								197.7	176.7
10200									201.4

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-5	-3	-1	-17	-15	-13
180	0	0	0	-7	-5	-3	-19	-17	-15
170	0	0	0	-8	-6	-4	-21	-19	-17
160	0	0	0	-9	-7	-5	-23	-21	-19
150	0	0	0	-11	-9	-7	-24	-22	-20
140	0	0	0	-12	-10	-8	-26	-24	-22
130	-1	0	0	-14	-12	-10	-28	-26	-24
120	-2	0	0	-15	-13	-11	-30	-28	-26
110	-3	-1	0	-17	-15	-13	-31	-29	-27
100	-4	-2	0	-18	-16	-14	-33	-31	-29
90	-6	-4	-2	-19	-17	-15	-34	-32	-30

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).
v V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)

No Reverse Thrust

Weight Adjustment (1000 LB)

26K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-7.5	-8.1	-8.8	-21.6	-22.3	-22.9	-33.6	-34.3	-35.0
180	-8.3	-9.0	-9.7	-21.7	-22.4	-23.0	-33.0	-33.7	-34.4
170	-8.9	-9.6	-10.3	-21.6	-22.2	-22.9	-32.1	-32.7	-33.4
160	-9.3	-10.0	-10.6	-21.2	-21.9	-22.5	-30.8	-31.5	-32.2
150	-9.4	-10.1	-10.8	-20.6	-21.2	-21.9	-29.2	-29.9	-30.6
140	-9.4	-10.0	-10.7	-19.7	-20.4	-21.0	-27.3	-28.0	-28.7
130	-9.1	-9.7	-10.4	-18.6	-19.2	-19.9	-25.1	-25.8	-26.5
120	-8.5	-9.2	-9.9	-17.2	-17.9	-18.5	-22.6	-23.2	-23.9
110	-7.8	-8.4	-9.1	-15.6	-16.2	-16.9	-19.7	-20.4	-21.1
100	-6.8	-7.5	-8.1	-13.7	-14.4	-15.1	-16.5	-17.2	-17.9
90	-5.6	-6.2	-6.9	-11.6	-12.3	-12.9	-13.0	-13.7	-14.3

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5000	112.9	72.7							
5400	170.2	144.3	112.9						
5800		192.9	170.2						
7400				131.0	94.2				
7800				186.2	153.9	119.1			
8200					206.7	175.7			
11000							70.2		
11400							112.0	74.4	
11800							155.1	116.3	78.5
12200							199.6	159.5	120.5
12600								204.0	163.9
13000									208.4

1. Enter Weight Adjustment table with reported braking action and 26K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -160 ft/+160 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff - High Altitudes (26K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-11	-9	-7	-31	-29	-27
180	0	0	0	-13	-11	-9	-34	-32	-30
170	0	0	0	-15	-13	-11	-37	-35	-33
160	-2	0	0	-17	-15	-13	-41	-39	-37
150	-3	-1	0	-20	-18	-16	-44	-42	-40
140	-5	-3	-1	-22	-20	-18	-47	-45	-43
130	-6	-4	-2	-25	-23	-21	-51	-49	-47
120	-8	-6	-4	-28	-26	-24	-55	-53	-51
110	-10	-8	-6	-31	-29	-27	-58	-56	-54
100	-12	-10	-8	-34	-32	-30	-62	-60	-58
90	-14	-12	-10	-38	-36	-34	-66	-64	-62

1. Obtain V1, VR and V2 for the actual weight using the 26K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

Takeoff %N1 - (26K Derate)
Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	94.8	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	95.4	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.0	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	96.8	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	97.4	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.0	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	97.6	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	96.8	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	96.0	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	95.2	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	94.5	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
5	93.7	95.0	96.4	97.0	97.6	98.0	98.3	98.6	99.0	99.4	99.8	100.3	100.7
0	92.9	94.2	95.6	96.3	96.9	97.2	97.5	97.9	98.2	98.6	99.0	99.5	100.0
-5	92.0	93.4	94.8	95.5	96.1	96.4	96.7	97.1	97.5	97.9	98.3	98.7	99.2
-10	91.2	92.6	94.0	94.7	95.3	95.6	96.0	96.3	96.7	97.1	97.5	98.0	98.4
-15	90.4	91.7	93.2	93.9	94.5	94.8	95.2	95.6	95.9	96.3	96.7	97.2	97.6
-20	89.6	90.9	92.4	93.0	93.7	94.0	94.4	94.8	95.2	95.6	95.9	96.4	96.8
-25	88.7	90.1	91.6	92.2	92.9	93.2	93.6	94.0	94.4	94.8	95.2	95.6	96.0
-30	87.9	89.2	90.7	91.4	92.0	92.4	92.8	93.2	93.6	94.0	94.3	94.8	95.2
-35	87.0	88.4	89.9	90.5	91.2	91.6	91.9	92.4	92.8	93.1	93.5	94.0	94.4
-40	86.1	87.5	89.0	89.7	90.3	90.7	91.1	91.5	91.9	92.3	92.7	93.1	93.6
-45	85.3	86.6	88.2	88.8	89.5	89.9	90.3	90.7	91.1	91.5	91.9	92.3	92.7
-50	84.4	85.7	87.3	87.9	88.6	89.0	89.4	89.9	90.3	90.6	91.0	91.5	91.9

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (26K Derate)
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	98.1					
35	99.0	98.8	98.9			
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5	100.7	101.6	101.7	101.7	101.6	101.6
0	100.0	100.8	101.7	101.9	101.8	101.8
-5	99.2	100.0	100.9	101.2	101.5	101.6
-10	98.4	99.3	100.1	100.4	100.7	100.8
-15	97.6	98.5	99.3	99.6	99.9	100.0
-20	96.8	97.7	98.5	98.8	99.1	99.2
-25	96.0	96.9	97.7	98.0	98.3	98.4
-30	95.2	96.0	96.9	97.2	97.4	97.6
-35	94.4	95.2	96.0	96.4	96.6	96.7
-40	93.6	94.4	95.2	95.5	95.8	95.9
-45	92.7	93.5	94.3	94.6	94.9	95.0
-50	91.9	92.7	93.5	93.8	94.0	94.1

Takeoff %N1 - High Altitudes (26K Derate)**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust - (26K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	71	71	69	67	65	63	61	59	57	55	53	
30	69	67	67	67	65	63	61	59	57	55	53	51
25	69	67	66	64	65	63	61	59	57	55	53	51
20	69	67	66	64	64	63	61	59	57	55	53	51
15	69	67	66	64	64	63	61	59	57	55	53	51
10 & BELOW	69	67	66	64	64	63	61	59	57	55	53	51

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	93.4	93.7	94.2	94.7	95.4	96.1	96.9	97.3	97.6	97.8	97.8	97.7
70	94.1	94.4	94.4	94.4	94.7	95.4	96.2	96.6	96.9	97.1	97.1	97.1
65	94.8	95.1	95.2	95.2	95.3	95.4	95.5	96.0	96.2	96.5	96.4	96.4
60	95.4	95.8	95.9	96.0	96.1	96.2	96.3	96.2	95.9	95.8	95.7	95.7
55	96.0	96.5	96.6	96.7	96.8	96.9	97.1	96.9	96.6	96.3	95.7	95.0
50	96.6	97.1	97.3	97.4	97.6	97.7	97.8	97.7	97.4	97.1	96.6	96.1
45	97.4	97.8	98.0	98.1	98.3	98.4	98.5	98.4	98.1	97.8	97.5	97.1
40	98.1	98.6	98.7	98.8	98.9	99.0	99.2	99.1	98.8	98.5	98.4	98.1
35	98.7	99.4	99.5	99.6	99.7	99.8	99.9	99.8	99.5	99.2	99.1	99.0
30	98.8	100.3	100.3	100.4	100.4	100.5	100.5	100.4	100.3	100.0	99.9	99.9
25	98.1	99.5	100.1	100.7	100.8	100.7	100.7	100.7	100.7	100.6	100.6	100.7
20	97.3	98.8	99.3	99.9	100.2	100.5	100.8	100.8	100.9	100.8	100.8	100.8
15	96.5	98.0	98.6	99.2	99.5	99.8	100.1	100.5	100.9	101.1	101.1	101.1
10	95.8	97.2	97.8	98.4	98.7	99.0	99.4	99.7	100.1	100.5	101.0	101.5
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0.

Assumed Temperature Reduced Thrust - (26K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	14.9													
100	14.9	10.9												
90	14.0	11.7												
80	12.9	11.6	7.8											
70	11.2	10.7	8.6	7.8	6.3									
60	9.2	9.5	8.5	8.4	7.1	6.3	4.9							
50	7.8	7.8	7.5	7.1	6.9	7.0	5.6	4.9	3.4					
40		6.0	6.2	6.1	5.9	5.8	5.7	5.6	4.7	4.4	5.3			
30		4.6	4.6	4.6	4.6	4.5	4.4	4.3	4.3	4.2	4.1	4.0	3.9	
20			2.9	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.8	2.8	2.7	2.6
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.4
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	56	54	52	50	48	47
20	56	54	52	50	48	47
15	56	54	52	50	48	47
10	53	52	52	50	48	47
5	53	51	52	50	48	47
0 & BELOW	53	51	52	50	48	47

Assumed Temperature Reduced Thrust - High Altitudes (26K Derate)**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	95.7					
55	95.0	95.3	96.4	97.9		
50	96.1	95.7	96.1	97.2	98.6	99.3
45	97.1	96.8	97.1	97.7	98.4	98.9
40	98.1	97.8	98.0	98.5	99.0	99.3
35	99.0	98.8	98.9	99.1	99.4	99.6
30	99.9	99.8	99.8	99.8	99.9	100.0
25	100.7	100.5	100.5	100.5	100.3	100.3
20	100.8	100.8	100.7	100.7	100.6	100.6
15	101.1	101.1	101.1	101.0	100.9	100.8
10	101.5	101.4	101.4	101.4	101.3	101.2
5		101.6	101.7	101.7	101.6	101.6
0				101.9	101.8	101.8
-5				101.2	101.5	101.6
MINIMUM ASSUMED TEMP (°C)	10	6	1	-1	-3	-4

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	17.4										
100	16.4	14.0									
90	14.8	14.0									
80	12.6	12.8	10.6								
70	11.3	11.2	10.6								
60	10.0	9.2	9.4	7.5							
50		7.9	7.9	7.5	6.1	5.9	5.8				
40		6.5	6.0	6.2	6.1	5.9	5.8	4.4	4.3		
30			4.6	4.6	4.6	4.6	4.5	4.4	4.3	2.9	2.9
20			3.2	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
0				0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1). Adjust Maximum %N1 for engine bleed configuration.
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Takeoff Speeds - Dry Runway (24K Derate)
V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	172	173	177												
180	167	168	173	159	160	165									
170	162	163	168	154	155	161	146	147	153	144	145	151			
160	156	157	164	149	150	157	141	142	149	139	140	147	136	136	142
150	151	152	160	144	145	153	136	137	144	134	135	143	131	131	139
140	145	146	155	138	139	148	130	131	140	129	130	138	126	126	134
130	139	140	150	132	133	143	125	126	135	123	124	134	121	121	130
120	132	133	144	126	127	138	119	120	130	117	118	129	115	115	125
110	125	126	138	119	120	133	113	113	125	111	112	124	109	109	120
100	118	119	133	113	113	127	107	107	120	105	105	119	102	103	115
90	111	111	127	106	106	121	100	100	114	98	99	113	95	96	110

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1							VR							V2						
		PRESS ALT (1000 FT)							PRESS ALT (1000 FT)							PRESS ALT (1000 FT)						
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10
70	158	4	5						4	5						-2	-2					
60	140	3	4	5	6				3	4	5	6				-2	-2	-2	-3			
50	122	2	3	4	5	6	6	8	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-3
40	104	1	1	2	3	4	5	6	1	1	3	4	5	6	7	0	-1	-1	-2	-2	-2	-3
30	86	0	0	1	2	3	4	5	0	0	1	2	3	5	6	0	0	-1	-1	-1	-2	-2
20	68	0	0	0	1	2	3	4	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2
-60	-76	0	0	0	1	2	2	3	0	0	1	1	2	3	3	0	0	0	0	-1	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)						WIND (KTS)							
	-2	-1	0	1	2		-15	-10	-5	0	10	20	30	40
190	-4	-2	0	1	1		-1	-1	-1	0	0	0	0	1
170	-3	-2	0	1	1		-1	-1	-1	0	0	0	1	1
150	-2	-1	0	1	1		-1	-1	0	0	0	1	1	1
130	-1	0	0	1	1		-1	-1	0	0	0	1	1	1
110	0	0	0	0	0		-1	-1	0	0	0	0	0	0
90	0	0	0	0	0		-1	0	0	0	0	0	0	0

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
		-2000	0	2000	4000	6000	8000	10000
70	158	88	86					
60	140	88	86	84	83			
50	122	90	88	84	83	81	79	77
40	104	94	92	89	85	82	79	77
30	86	97	97	93	89	86	82	79
20	68	98	97	95	93	90	86	82
-60	-76	99	99	96	94	91	89	86

Takeoff Speeds - Dry Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	158	160	163												
150	154	155	159	148	148	152									
140	149	149	154	142	142	147	134	135	139	132	133	137			
130	143	143	149	136	136	142	128	129	135	126	127	133	124	124	129
120	136	136	143	129	130	137	122	123	130	121	121	128	118	118	124
110	129	130	137	123	123	131	116	117	124	114	115	123	112	112	119
100	122	122	131	116	116	126	110	110	119	108	109	117	105	106	114
90	115	115	125	109	109	120	103	103	113	101	102	112	99	99	109

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESSURE ALT (FT)						PRESSURE ALT (FT)						PRESSURE ALT (FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	3	4	4	4	5	5	3	4	4	5	5	5	-1	-2	-2	-2	-2	-2
30	86	2	3	3	3	4	4	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
20	68	1	2	2	3	3	3	1	2	2	3	3	3	0	-1	-1	-1	-1	-1
10	50	0	1	1	2	2	2	0	1	1	2	2	3	0	0	0	-1	-1	-1
0	32	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	0	1	1	2	2	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
160	-3	-2	0	0	0	-1	-1	0	0	0	0	0	0		
150	-3	-1	0	0	0	-1	-1	0	0	0	0	0	0		
140	-2	-1	0	0	0	-1	-1	0	0	0	0	0	0		
130	-2	-1	0	0	0	-1	-1	0	0	0	0	0	0		
120	-1	-1	0	0	0	-1	-1	0	0	0	0	0	0		
110	-1	0	0	0	0	-1	-1	0	0	0	0	0	0		
100	-1	0	0	0	0	-1	-1	0	0	0	0	0	0		
90	-1	0	0	0	0	-1	-1	0	0	0	0	0	0		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	77	76	75	74	75	75
30	86	79	77	76	74	75	75
20	68	82	81	79	77	76	75
10	50	85	84	82	80	78	77
0	32	86	84	83	81	80	79
-60	-76	86	85	83	82	80	80

Takeoff Speeds - Wet Runway (24K Derate)

V1, VR, V2

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
190	168	173	177												
180	162	168	173	154	160	165									
170	156	163	168	148	155	161									
160	150	157	164	142	150	157	140	147	153	139	145	151			
150	144	152	160	137	145	153	129	137	144	127	135	143	129	136	142
140	138	146	155	131	139	148	124	131	140	122	130	138	119	126	134
130	131	140	150	125	133	143	118	126	135	116	124	134	113	121	130
120	124	133	144	118	127	138	112	120	130	110	118	129	107	115	125
110	117	126	138	111	120	133	105	113	125	104	112	124	101	109	120
100	110	119	133	104	113	127	99	107	120	97	105	119	94	103	115
90	103	111	127	97	106	121	92	100	114	90	99	113	88	96	110

Check V1(MCG).

V1, VR, V2 Adjustment*

TEMP		V1								VR								V2							
		PRESS ALT (1000 FT)								PRESS ALT (1000 FT)								PRESS ALT (1000 FT)							
°C	°F	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10	-2	0	2	4	6	8	10			
70	158	7	8						4	5						-2	-2								
60	140	5	6	7	9				3	4	5	6				-2	-2	-2	-3						
50	122	3	4	5	6	8	9	12	2	3	4	5	6	7	8	-1	-1	-2	-2	-2	-3	-3			
40	104	1	2	3	4	6	7	9	1	1	3	4	5	6	7	0	-1	-1	-2	-2	-2	-3			
30	86	0	0	1	3	4	5	7	0	0	1	2	3	5	6	0	0	-1	-1	-1	-2	-2			
20	68	0	0	1	1	2	4	5	0	0	1	1	2	3	4	0	0	0	0	-1	-1	-2			
-60	-76	0	0	1	1	2	3	4	0	0	1	1	2	3	3	0	0	0	0	-1	-1	-1			

Slope and Wind V1 Adjustment*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
190	-5	-3	0	3	6	-3	-2	-1	0	1	1	2	2		
170	-4	-2	0	3	5	-3	-2	-1	0	1	1	2	3		
150	-4	-2	0	2	4	-3	-2	-1	0	1	1	2	3		
130	-3	-1	0	2	3	-4	-2	-1	0	1	2	2	3		
110	-2	-1	0	1	2	-4	-3	-1	0	1	2	3	3		
90	-2	-1	0	1	2	-5	-3	-1	0	1	2	3	4		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)						
°C	°F	-2000	0	2000	4000	6000	8000	10000
70	158	88	86					
60	140	88	86	84	83			
50	122	90	88	84	83	81	79	77
40	104	94	92	89	85	82	79	77
30	86	97	97	93	89	86	82	79
20	68	98	97	95	93	90	86	82
-60	-76	99	99	96	94	91	89	86

Takeoff Speeds - Wet Runway - High Altitudes (24K Derate)**V1, VR, V2**

WEIGHT (1000 LB)	FLAPS 1			FLAPS 5			FLAPS 10			FLAPS 15			FLAPS 25		
	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2	V1	VR	V2
160	156	160	163												
150	149	155	159	142	148	152									
140	143	149	154	135	142	147	128	135	139	126	133	137			
130	136	143	149	129	136	142	122	129	135	120	127	133	117	124	129
120	128	136	143	122	130	137	115	123	130	114	121	128	110	118	124
110	121	130	137	115	123	131	109	117	124	107	115	123	104	112	119
100	114	122	131	108	116	126	102	110	119	100	109	117	98	106	114
90	106	115	125	101	109	120	95	103	113	94	102	112	91	99	109

Check V1(MCG).

V1, VR, V2 Adjustments*

TEMP		V1						VR						V2					
		PRESS ALT (1000 FT)						PRESS ALT (1000 FT)						PRESS ALT (1000 FT)					
°C	°F	10	11	12	13	14	14.5	10	11	12	13	14	14.5	10	11	12	13	14	14.5
40	104	5	6	7	8	8	9	3	4	4	5	5	5	-1	-2	-2	-2	-2	-2
30	86	3	4	5	5	6	6	2	3	3	4	4	4	-1	-1	-1	-1	-2	-2
20	68	1	2	3	4	4	5	1	2	2	3	3	3	0	-1	-1	-1	-1	-1
10	50	0	1	2	2	3	3	0	1	1	2	2	3	0	0	0	-1	-1	-1
0	32	0	1	1	2	2	3	0	0	1	1	2	2	0	0	0	0	-1	-1
-60	-76	0	1	1	2	2	3	0	0	1	1	2	2	0	0	0	0	-1	-1

Slope and Wind V1 Adjustments*

WEIGHT (1000 LB)	SLOPE (%)					WIND (KTS)									
	-2	-1	0	1	2	-15	-10	-5	0	10	20	30	40		
160	-5	-3	0	3	6	-2	-2	-1	0	0	1	1	2		
150	-5	-3	0	3	6	-2	-2	-1	0	0	1	2	2		
140	-4	-2	0	3	5	-3	-2	-1	0	1	1	2	2		
130	-4	-2	0	2	5	-3	-2	-1	0	1	1	2	2		
120	-3	-2	0	2	4	-3	-2	-1	0	1	1	2	2		
110	-3	-1	0	2	4	-3	-2	-1	0	1	1	2	2		
100	-3	-1	0	1	3	-3	-2	-1	0	1	1	2	3		
90	-3	-1	0	1	2	-4	-3	-1	0	1	1	2	3		

*V1 not to exceed VR

V1(MCG)

TEMP		PRESSURE ALTITUDE (FT)					
		10000	11000	12000	13000	14000	14500
40	104	77	76	75	74	75	75
30	86	79	77	76	74	75	75
20	68	82	81	79	77	76	75
10	50	85	84	82	80	78	77
0	32	86	84	83	81	80	79
-60	-76	86	85	83	82	80	80

Maximum Allowable Clearway (24K Derate)

FIELD LENGTH (FT)	DRY RUNWAY MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION (FT)
4000	600
5000	700
6000	800
7000	850
8000	950
9000	1050
10000	1150

Maximum Allowable Clearway - High Altitudes (24K Derate)

FIELD LENGTH (FT)	MAX ALLOWABLE CLEARWAY FOR V1 REDUCTION(FT)
4000	600
6000	750
8000	950
10000	1100
12000	1300
14000	1400

Clearway and Stopway V1 Adjustments (24K Derate)

CLEARWAY MINUS STOPWAY (FT)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	
1000	-5	-4	-4	-3	-2					
800	-5	-4	-4	-3	-2					
600	-5	-4	-3	-2	-1					
400	-2	-2	-2	-2	-2					
200	-1	-1	-1	-1	-1					
0	0	0	0	0	0	0	0	0	0	
-200	0	0	1	1	1	1	1	2	2	
-400	0	0	1	1	1	1	2	3	4	
-600	0	0	1	1	1	1	2	4	5	
-800	0	0	1	1	1	1	2	4	7	

Use of clearway not allowed on wet runways.

Clearway and Stopway V1 Adjustments - High Altitude (24K Derate)

CLEARWAY MINUES STOPWAY (FT)	NORMAL V1 (KIAS)									
	DRY RUNWAY					WET RUNWAY				
	100	120	140	160	180	100	120	140	160	180
1000	-5	-3	-3	-3	-3					
800	-5	-3	-3	-3	-3					
600	-5	-2	-2	-2	-2					
400	-3	-1	-1	-1	-1					
200	-1	-1	0	0	0					
0	0	0	0	0	0	0	0	0	0	0
-200	0	0	0	0	0	1	1	1	1	1
-400	0	0	0	0	0	2	2	1	1	1
-600	0	0	0	0	0	4	2	2	2	2
-800	0	0	0	0	0	6	3	2	2	2
-1000	0	0	0	0	0	11	4	2	2	2

Stab Trim Setting (24K Derate)
Flaps 1 and 5

WEIGHT (1000 LB)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
190	8 1/2	8 1/2	8 1/4	6 1/2	5 3/4	5 3/4	5 1/4	5	4 3/4	4 1/4	4
180	8 1/2	8 1/2	8 1/4	6 1/2	5 3/4	5 1/2	5 1/4	4 3/4	4 1/2	4 1/4	4
160	8 1/4	8	7 3/4	6	5 1/4	5 1/4	5	4 1/2	4 1/4	4	3 3/4
140	7 3/4	7 1/2	7 1/4	5 3/4	5	4 3/4	4 1/2	4 1/4	4	3 3/4	3 1/2
120	7	6 3/4	6 3/4	5 1/4	4 1/2	4 1/2	4 1/4	4	3 3/4	3 1/4	3
90-100	6 1/2	6 1/4	6	4 3/4	4	3 3/4	3 1/2	3 1/4	3	2 3/4	2 3/4

Flaps 10, 15 and 25

WEIGHT (1000 LB)	C.G. (%MAC)										
	6	8	9	20	25	26	28	30	32	34	36
190	8 1/2	8 1/4	8	6	5	5	4 1/2	4 1/4	3 3/4	3 1/2	3 1/4
180	8 1/2	8 1/4	8	5 3/4	5	4 3/4	4 1/2	4	3 3/4	3 1/4	3
160	8	7 3/4	7 1/2	5 1/2	4 1/2	4 1/4	4	3 3/4	3 1/4	3	2 3/4
140	7 1/2	7	7	5	4	4	3 1/2	3 1/4	3	2 3/4	2 3/4
120	7	6 1/2	6 1/4	4 1/2	3 1/2	3 1/2	3 1/4	2 3/4	2 3/4	2 3/4	2 3/4
90-100	6 1/4	6	5 3/4	4	3 1/4	3	2 3/4	2 3/4	2 3/4	2 3/4	2 3/4

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-23.3	-26.8	-30.3	-29.3	-32.8	-36.3	-37.2	-42.2	-47.2
180	-21.4	-24.9	-28.4	-26.3	-29.8	-33.3	-34.1	-39.1	-44.1
170	-19.5	-23.0	-26.5	-23.5	-27.0	-30.5	-30.9	-35.9	-40.9
160	-17.7	-21.2	-24.7	-21.0	-24.5	-28.0	-27.6	-32.6	-37.6
150	-16.0	-19.5	-23.0	-18.6	-22.1	-25.6	-24.2	-29.2	-34.2
140	-14.2	-17.7	-21.2	-16.3	-19.8	-23.3	-20.9	-25.9	-30.9
130	-12.3	-15.8	-19.3	-14.0	-17.5	-21.0	-17.7	-22.7	-27.7
120	-10.5	-14.0	-17.5	-11.7	-15.2	-18.7	-14.5	-19.5	-24.5
110	-8.5	-12.0	-15.5	-9.4	-12.9	-16.4	-11.4	-16.4	-21.4
100	-6.4	-9.9	-13.4	-7.0	-10.5	-14.0	-8.5	-13.5	-18.5
90	-4.1	-7.6	-11.1	-4.5	-8.0	-11.5	-5.9	-10.9	-15.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800				72.8			83.5		
4200	92.8			98.9			109.6		
4600	120.2	76.4		126.3	82.5		136.0	93.2	
5000	149.5	102.9		155.3	109.0		162.8	119.5	77.0
5400	181.0	130.9	86.3	186.4	136.9	92.3	190.0	146.0	103.0
5800		161.0	113.2		166.7	119.3		173.0	129.4
6200		193.6	141.9		198.7	147.9		200.3	156.1
6600			172.9			178.4			183.2
7000			206.5						

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-12	-7	-2	-5	0	0	0	0	0
180	-14	-9	-4	-7	-2	0	0	0	0
170	-16	-11	-6	-10	-5	0	0	0	0
160	-17	-12	-7	-12	-7	-2	-1	0	0
150	-19	-14	-9	-14	-9	-4	-4	0	0
140	-20	-15	-10	-16	-11	-6	-7	-2	0
130	-21	-16	-11	-18	-13	-8	-10	-5	0
120	-22	-17	-12	-19	-14	-9	-13	-8	-3
110	-23	-18	-13	-21	-16	-11	-15	-10	-5
100	-24	-19	-14	-22	-17	-12	-18	-13	-8
90	-25	-20	-15	-24	-19	-14	-21	-16	-11

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-30.8	-35.8	-40.8	-37.1	-42.1	-47.1	-47.5	-54.0	-60.5
180	-28.3	-33.3	-38.3	-33.3	-38.3	-43.3	-42.5	-49.0	-55.5
170	-26.0	-31.0	-36.0	-30.0	-35.0	-40.0	-38.0	-44.5	-51.0
160	-23.8	-28.8	-33.8	-27.1	-32.1	-37.1	-33.8	-40.3	-46.8
150	-21.8	-26.8	-31.8	-24.4	-29.4	-34.4	-30.0	-36.5	-43.0
140	-19.7	-24.7	-29.7	-21.8	-26.8	-31.8	-26.4	-32.9	-39.4
130	-17.6	-22.6	-27.6	-19.3	-24.3	-29.3	-23.0	-29.5	-36.0
120	-15.5	-20.5	-25.5	-16.8	-21.8	-26.8	-19.6	-26.1	-32.6
110	-13.1	-18.1	-23.1	-14.1	-19.1	-24.1	-16.2	-22.7	-29.2
100	-10.5	-15.5	-20.5	-11.3	-16.3	-21.3	-12.7	-19.2	-25.7
90	-7.7	-12.7	-17.7	-8.1	-13.1	-18.1	-9.0	-15.5	-22.0

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
5000							71.1		
5400							104.1		
5800				99.6			139.3	75.2	
6200	114.8			141.9			171.5	108.4	
6600	164.0	71.7		186.1	104.9		198.3	143.6	79.3
7000		121.0			147.3			175.1	112.8
7400		170.0	77.8		192.0	110.2		201.4	147.8
7800			127.2			152.6			178.6
8200			175.9			197.9			204.6

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-20	-10	0	-8	0	0	0	0	0
180	-22	-12	-2	-11	-1	0	0	0	0
170	-24	-14	-4	-15	-5	0	0	0	0
160	-26	-16	-6	-18	-8	0	-1	0	0
150	-28	-18	-8	-21	-11	-1	-6	0	0
140	-30	-20	-10	-25	-15	-5	-11	-1	0
130	-32	-22	-12	-28	-18	-8	-15	-5	0
120	-34	-24	-14	-30	-20	-10	-20	-10	0
110	-36	-26	-16	-33	-23	-13	-25	-15	-5
100	-38	-28	-18	-36	-26	-16	-29	-19	-9
90	-40	-30	-20	-38	-28	-18	-34	-24	-14

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

Maximum Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-30.3	-31.7	-33.1	-36.3	-37.7	-39.1	-47.2	-49.2	-51.2
180	-28.4	-29.8	-31.2	-33.3	-34.7	-36.1	-44.1	-46.1	-48.1
170	-26.5	-27.9	-29.3	-30.5	-31.9	-33.3	-40.9	-42.9	-44.9
160	-24.7	-26.1	-27.5	-28.0	-29.4	-30.8	-37.6	-39.6	-41.6
150	-23.0	-24.4	-25.8	-25.6	-27.0	-28.4	-34.2	-36.2	-38.2
140	-21.2	-22.6	-24.0	-23.3	-24.7	-26.1	-30.9	-32.9	-34.9
130	-19.3	-20.7	-22.1	-21.0	-22.4	-23.8	-27.7	-29.7	-31.7
120	-17.5	-18.9	-20.3	-18.7	-20.1	-21.5	-24.5	-26.5	-28.5
110	-15.5	-16.9	-18.3	-16.4	-17.8	-19.2	-21.4	-23.4	-25.4
100	-13.4	-14.8	-16.2	-14.0	-15.4	-16.8	-18.5	-20.5	-22.5
90	-11.1	-12.5	-13.9	-11.5	-12.9	-14.3	-15.9	-17.9	-19.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5000							77.0		
5400	86.3			92.3	75.4		103.0	86.1	
5800	113.2	95.5	78.4	119.3	101.6	84.5	129.4	112.2	95.2
6200	141.9	123.0	104.9	147.9	129.1	111.0	156.1	138.7	121.4
6600	172.9	152.5	133.1	178.4	158.3	139.1	183.2	165.5	148.0
7000	206.5	184.3	163.3		189.7	169.0		192.7	175.0
7400			196.2			201.2			202.3

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -80 ft/+80 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-2	0	0	0	0	0	0	0	0
180	-4	-2	0	0	0	0	0	0	0
170	-6	-4	-2	0	0	0	0	0	0
160	-7	-5	-3	-2	0	0	0	0	0
150	-9	-7	-5	-4	-2	0	0	0	0
140	-10	-8	-6	-6	-4	-2	0	0	0
130	-11	-9	-7	-8	-6	-4	0	0	0
120	-12	-10	-8	-9	-7	-5	-3	-1	0
110	-13	-11	-9	-11	-9	-7	-5	-3	-1
100	-14	-12	-10	-12	-10	-8	-8	-6	-4
90	-15	-13	-11	-14	-12	-10	-11	-9	-7

- 1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes

No Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-40.8	-42.8	-44.8	-47.1	-49.1	-51.1	-60.5	-63.1	-65.7
180	-38.3	-40.3	-42.3	-43.3	-45.3	-47.3	-55.5	-58.1	-60.7
170	-36.0	-38.0	-40.0	-40.0	-42.0	-44.0	-51.0	-53.6	-56.2
160	-33.8	-35.8	-37.8	-37.1	-39.1	-41.1	-46.8	-49.4	-52.0
150	-31.8	-33.8	-35.8	-34.4	-36.4	-38.4	-43.0	-45.6	-48.2
140	-29.7	-31.7	-33.7	-31.8	-33.8	-35.8	-39.4	-42.0	-44.6
130	-27.6	-29.6	-31.6	-29.3	-31.3	-33.3	-36.0	-38.6	-41.2
120	-25.5	-27.5	-29.5	-26.8	-28.8	-30.8	-32.6	-35.2	-37.8
110	-23.1	-25.1	-27.1	-24.1	-26.1	-28.1	-29.2	-31.8	-34.4
100	-20.5	-22.5	-24.5	-21.3	-23.3	-25.3	-25.7	-28.3	-30.9
90	-17.7	-19.7	-21.7	-18.1	-20.1	-22.1	-22.0	-24.6	-27.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
6600							79.3		
7000							112.8	87.4	
7400	77.8			110.2	78.1		147.8	121.6	95.6
7800	127.2	90.1		152.6	120.8	88.9	178.6	156.0	130.5
8200	175.9	139.6	102.4	197.9	163.5	131.3	204.6	185.4	164.0
8600		187.6	151.9		209.7	174.7			191.9
9000			199.1						

1. Enter Weight Adjustment table with slush/standing water depth and 24K Derate dry field/obstacle limit weight to obtain slush/standing water weight adjustment.
2. Adjust field length available by -120 ft/+120 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slush/standing water limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slush/Standing Water Takeoff(24K Derate) - High Altitudes
No Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	SLUSH/STANDING WATER DEPTH								
	0.12 INCHES (3 mm)			0.25 INCHES (6 mm)			0.50 INCHES (13 mm)		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	0	0	0	0	0	0
180	-2	0	0	0	0	0	0	0	0
170	-4	0	0	0	0	0	0	0	0
160	-6	-2	0	0	0	0	0	0	0
150	-8	-4	0	-1	0	0	0	0	0
140	-10	-6	-2	-5	-1	0	0	0	0
130	-12	-8	-4	-8	-4	0	0	0	0
120	-14	-10	-6	-10	-6	-2	0	0	0
110	-16	-12	-8	-13	-9	-5	-5	-1	0
100	-18	-14	-10	-16	-12	-8	-9	-5	-1
90	-20	-16	-12	-18	-14	-10	-14	-10	-6

- 1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
- 2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION**Slippery Runway Takeoff (24K Derate)****Maximum Reverse Thrust****Weight Adjustment (1000 LB)**

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-1.0	-2.6	-4.3	-11.5	-13.2	-14.8	-21.3	-23.0	-24.6
180	-1.7	-3.4	-5.0	-11.7	-13.3	-15.0	-21.0	-22.6	-24.3
170	-2.3	-3.9	-5.6	-11.9	-13.5	-15.2	-20.4	-22.1	-23.7
160	-2.6	-4.3	-5.9	-11.7	-13.4	-15.0	-19.6	-21.3	-22.9
150	-2.7	-4.4	-6.0	-11.3	-13.0	-14.6	-18.6	-20.2	-21.9
140	-2.7	-4.3	-6.0	-10.7	-12.4	-14.0	-17.3	-19.0	-20.6
130	-2.4	-4.0	-5.7	-9.9	-11.5	-13.2	-15.8	-17.5	-19.1
120	-1.9	-3.5	-5.2	-8.8	-10.4	-12.1	-14.1	-15.8	-17.4
110	-1.2	-2.9	-4.5	-7.5	-9.1	-10.8	-12.2	-13.8	-15.5
100	-0.3	-2.0	-3.6	-5.9	-7.6	-9.2	-10.0	-11.7	-13.3
90	0.0	-0.9	-2.5	-4.1	-5.8	-7.4	-7.6	-9.2	-10.9

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3000	77.0								
3400	121.4								
3800	164.1	99.3							
4200	205.2	143.0	77.0	94.9					
4600		184.8	121.4	125.5					
5000			164.1	157.9	98.7				
5400			205.2	192.4	129.5	72.5	88.0		
5800					162.1	102.4	106.7		
6200					196.9	133.5	126.5	78.9	
6600						166.4	147.7	97.2	
7000						201.3	170.7	116.5	
7400							195.8	137.0	88.0
7800								159.0	106.7
8200								183.0	126.5
8600								208.6	147.7
9000									170.7
9400									195.8

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)
Maximum Reverse Thrust
V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-5	0	0	-13	-8	-3	-23	-18	-13
180	-6	-1	0	-14	-9	-4	-25	-20	-15
170	-7	-2	0	-16	-11	-6	-27	-22	-17
160	-8	-3	0	-17	-12	-7	-29	-24	-19
150	-8	-3	0	-19	-14	-9	-31	-26	-21
140	-9	-4	0	-20	-15	-10	-33	-28	-23
130	-10	-5	0	-22	-17	-12	-35	-30	-25
120	-11	-6	-1	-23	-18	-13	-37	-32	-27
110	-12	-7	-2	-25	-20	-15	-39	-34	-29
100	-13	-8	-3	-26	-21	-16	-40	-35	-30
90	-14	-9	-4	-27	-22	-17	-42	-37	-32

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

Weight Adjustments (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-3.4	-4.9	-6.4	-17.0	-18.5	-20.0	-29.8	-31.3	-32.8
180	-4.3	-5.8	-7.3	-17.4	-18.9	-20.4	-29.2	-30.7	-32.2
170	-5.0	-6.5	-8.0	-17.5	-19.0	-20.5	-28.3	-29.8	-31.3
160	-5.5	-7.0	-8.5	-17.3	-18.8	-20.3	-27.1	-28.6	-30.1
150	-5.8	-7.3	-8.8	-16.9	-18.4	-19.9	-25.7	-27.2	-28.7
140	-5.8	-7.3	-8.8	-16.1	-17.6	-19.1	-24.1	-25.6	-27.1
130	-5.6	-7.1	-8.6	-15.1	-16.6	-18.1	-22.2	-23.7	-25.2
120	-5.1	-6.6	-8.1	-13.8	-15.3	-16.8	-20.0	-21.5	-23.0
110	-4.5	-6.0	-7.5	-12.3	-13.8	-15.3	-17.6	-19.1	-20.6
100	-3.6	-5.1	-6.6	-10.5	-12.0	-13.5	-15.0	-16.5	-18.0
90	-2.4	-3.9	-5.4	-8.3	-9.8	-11.3	-12.1	-13.6	-15.1

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
3800	114.5								
4200	171.0	85.6							
4600		152.0							
5000		199.0	130.6						
5400			182.6						
5800				123.5					
6200				178.8	73.8				
6600					138.3				
7000					191.4	91.0			
7400						152.4			
7800						203.9			
9000							109.3		
9400							153.5		
9800							196.1		
10200								115.0	
10600								158.8	
11000								201.4	75.3
11400									120.6
11800									164.2
12200									206.7

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust "Good" field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust "Medium" field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust "Poor" field length available by -140 ft/+140 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	S.L.	5000	10000	S.L.	5000	10000	S.L.	5000	10000
190	-7	-2	0	-18	-13	-8	-35	-30	-25
180	-8	-3	0	-20	-15	-10	-38	-33	-28
170	-9	-4	0	-22	-17	-12	-42	-37	-32
160	-10	-5	0	-24	-19	-14	-45	-40	-35
150	-12	-7	-2	-27	-22	-17	-49	-44	-39
140	-13	-8	-3	-29	-24	-19	-52	-47	-42
130	-15	-10	-5	-32	-27	-22	-56	-51	-46
120	-16	-11	-6	-35	-30	-25	-60	-55	-50
110	-18	-13	-8	-37	-32	-27	-63	-58	-53
100	-20	-15	-10	-40	-35	-30	-67	-62	-57
90	-22	-17	-12	-44	-39	-34	-71	-66	-61

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG). V1 not to exceed VR.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
Maximum Reverse Thrust
Weight Adjustment (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-4.3	-5.0	-5.6	-14.8	-15.5	-16.1	-24.6	-25.3	-25.9
180	-5.0	-5.7	-6.4	-15.0	-15.7	-16.3	-24.3	-24.9	-25.6
170	-5.6	-6.2	-6.9	-15.2	-15.8	-16.5	-23.7	-24.4	-25.0
160	-5.9	-6.6	-7.2	-15.0	-15.7	-16.4	-22.9	-23.6	-24.2
150	-6.0	-6.7	-7.4	-14.6	-15.3	-16.0	-21.9	-22.5	-23.2
140	-6.0	-6.6	-7.3	-14.0	-14.7	-15.3	-20.6	-21.3	-22.0
130	-5.7	-6.3	-7.0	-13.2	-13.8	-14.5	-19.1	-19.8	-20.5
120	-5.2	-5.9	-6.5	-12.1	-12.7	-13.4	-17.4	-18.1	-18.7
110	-4.5	-5.2	-5.8	-10.8	-11.4	-12.1	-15.5	-16.1	-16.8
100	-3.6	-4.3	-4.9	-9.2	-9.9	-10.5	-13.3	-14.0	-14.6
90	-2.5	-3.2	-3.8	-7.4	-8.1	-8.7	-10.9	-11.6	-12.2

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
4200	77.0								
4600	121.4	94.8							
5000	164.1	138.7	112.6						
5400	205.2	180.7	155.7	72.5					
5800			197.0	102.4	80.0				
6200				133.5	110.0	87.5			
6600				166.4	141.5	117.7			
7000				201.3	174.8	149.7			
7400						183.5	88.0		
7800							106.7	88.0	
8200							126.5	106.7	88.0
8600							147.7	126.5	106.7
9000							170.7	147.7	126.5
9400							195.8	170.7	147.7
9800								195.8	170.7
10200									195.8

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -110 ft/+110 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

Maximum Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-3	-1	0	-13	-11	-9
180	0	0	0	-4	-2	0	-15	-13	-11
170	0	0	0	-6	-4	-2	-17	-15	-13
160	0	0	0	-7	-5	-3	-19	-17	-15
150	0	0	0	-9	-7	-5	-21	-19	-17
140	0	0	0	-10	-8	-6	-23	-21	-19
130	0	0	0	-12	-10	-8	-25	-23	-21
120	-1	0	0	-13	-11	-9	-27	-25	-23
110	-2	0	0	-15	-13	-11	-29	-27	-25
100	-3	-1	0	-16	-14	-12	-30	-28	-26
90	-4	-2	0	-17	-15	-13	-32	-30	-28

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)
No Reverse Thrust
Weight Adjustment (1000 LB)

24K DERATE DRY FIELD/OBSTACLE LIMIT WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	-6.4	-7.0	-7.6	-20.0	-20.6	-21.2	-32.8	-33.4	-34.0
180	-7.3	-7.9	-8.5	-20.4	-21.0	-21.6	-32.2	-32.8	-33.4
170	-8.0	-8.6	-9.2	-20.5	-21.1	-21.7	-31.3	-31.9	-32.5
160	-8.5	-9.1	-9.7	-20.3	-20.9	-21.5	-30.1	-30.7	-31.3
150	-8.8	-9.4	-10.0	-19.9	-20.5	-21.1	-28.7	-29.3	-29.9
140	-8.8	-9.4	-10.0	-19.1	-19.7	-20.3	-27.1	-27.7	-28.3
130	-8.6	-9.2	-9.8	-18.1	-18.7	-19.3	-25.2	-25.8	-26.4
120	-8.1	-8.7	-9.3	-16.8	-17.4	-18.0	-23.0	-23.6	-24.2
110	-7.5	-8.1	-8.7	-15.3	-15.9	-16.5	-20.6	-21.2	-21.8
100	-6.6	-7.2	-7.8	-13.5	-14.1	-14.7	-18.0	-18.6	-19.2
90	-5.4	-6.0	-6.6	-11.3	-11.9	-12.5	-15.1	-15.7	-16.3

V1(MCG) Limit Weight (1000 LB)

ADJUSTED FIELD LENGTH (FT)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
5000	130.6	91.9							
5400	182.6	156.0	124.4						
5800		202.3	178.0						
7000				91.0					
7400				152.4	111.0				
7800				203.9	168.6	129.5			
8200						183.9			
11000							75.3		
11400							120.6		
11800							164.2	113.9	
12200							206.7	157.8	107.1
12600								200.3	151.3
13000									193.9

1. Enter Weight Adjustment table with reported braking action and 24K Derate dry field/obstacle limit weight to obtain slippery runway weight adjustment.
2. Adjust “Good” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Medium” field length available by -70 ft/+70 ft for every 5°C above/below 4°C.
Adjust “Poor” field length available by -140 ft/+140 ft for every 5°C above/below 4°C.
3. Find V1(MCG) limit weight for adjusted field length and pressure altitude.
4. Max allowable slippery runway limited weight is lesser of weights from 1 and 3.

ADVISORY INFORMATION

Slippery Runway Takeoff- High Altitudes (24K Derate)

No Reverse Thrust

V1 Adjustment (KIAS)

WEIGHT (1000 LB)	REPORTED BRAKING ACTION								
	GOOD			MEDIUM			POOR		
	PRESS ALT (FT)			PRESS ALT (FT)			PRESS ALT (FT)		
	10000	12000	14000	10000	12000	14000	10000	12000	14000
190	0	0	0	-8	-6	-4	-25	-23	-21
180	0	0	0	-10	-8	-6	-28	-26	-24
170	0	0	0	-12	-10	-8	-32	-30	-28
160	0	0	0	-14	-12	-10	-35	-33	-31
150	-2	0	0	-17	-15	-13	-39	-37	-35
140	-3	-1	0	-19	-17	-15	-42	-40	-38
130	-5	-3	-1	-22	-20	-18	-46	-44	-42
120	-6	-4	-2	-25	-23	-21	-50	-48	-46
110	-8	-6	-4	-27	-25	-23	-53	-51	-49
100	-10	-8	-6	-30	-28	-26	-57	-55	-53
90	-12	-10	-8	-34	-32	-30	-61	-59	-57

1. Obtain V1, VR and V2 for the actual weight using the 24K Derate Dry Runway Takeoff Speeds table.
2. If V1(MCG) limited, set V1 = V1(MCG). If not V1(MCG) limited, enter V1 Adjustment table with the actual weight to obtain V1 speed adjustment. If adjusted V1 is less than V1(MCG), set V1 = V1(MCG).

Takeoff %N1 (24K Derate)

Based on engine bleeds for packs on, engine and wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
60	90.3	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.0	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	91.8	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	92.6	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	93.4	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.2	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	93.8	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	93.1	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	92.3	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	91.6	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	90.8	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
5	90.0	91.2	92.2	92.8	93.3	93.9	94.5	95.2	95.9	96.7	97.4	98.4	99.3
0	89.2	90.4	91.4	92.0	92.5	93.1	93.7	94.4	95.1	95.9	96.7	97.6	98.5
-5	88.4	89.6	90.6	91.2	91.7	92.3	92.9	93.6	94.3	95.1	95.9	96.8	97.7
-10	87.6	88.8	89.8	90.4	90.9	91.5	92.1	92.8	93.5	94.3	95.1	96.1	97.0
-15	86.8	88.0	89.0	89.5	90.0	90.6	91.3	92.0	92.7	93.5	94.3	95.3	96.2
-20	86.0	87.1	88.2	88.7	89.2	89.8	90.5	91.2	91.9	92.6	93.5	94.5	95.4
-25	85.2	86.3	87.3	87.9	88.4	89.0	89.6	90.3	91.0	91.8	92.6	93.7	94.6
-30	84.4	85.5	86.5	87.0	87.5	88.1	88.8	89.5	90.2	91.0	91.8	92.9	93.8
-35	83.5	84.6	85.6	86.2	86.6	87.3	87.9	88.6	89.3	90.1	91.0	92.1	93.0
-40	82.7	83.8	84.8	85.3	85.8	86.4	87.0	87.8	88.5	89.3	90.1	91.2	92.2
-45	81.8	82.9	83.9	84.4	84.9	85.5	86.2	86.9	87.6	88.4	89.3	90.4	91.4
-50	81.0	82.0	83.0	83.5	84.0	84.6	85.3	86.0	86.7	87.5	88.4	89.5	90.5

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.8	0.8	0.8	0.8	0.9	1.0

Takeoff %N1 - High Altitudes (24K Derate)

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	93.8					
35	94.7	94.7	94.7			
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5	99.3	99.7	100.2	100.3	100.0	99.8
0	98.5	99.0	99.4	99.8	100.1	100.3
-5	97.7	98.2	98.7	99.1	99.4	99.5
-10	97.0	97.4	97.9	98.3	98.6	98.7
-15	96.2	96.7	97.1	97.5	97.8	98.0
-20	95.4	95.9	96.3	96.7	97.0	97.2
-25	94.6	95.1	95.5	95.9	96.2	96.4
-30	93.8	94.3	94.7	95.1	95.4	95.5
-35	93.0	93.5	93.9	94.3	94.6	94.7
-40	92.2	92.6	93.1	93.5	93.7	93.9
-45	91.4	91.8	92.2	92.6	92.9	93.0
-50	90.5	91.0	91.4	91.8	92.0	92.2

Takeoff %N1 - High Altitudes (24K Derate)**Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off****%N1 Adjustments for Engine Bleed**

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

Assumed Temperature Reduced Thrust (24K Derate)**Maximum Assumed Temperature (Table 1 of 3)****Based on 25% Takeoff Thrust Reduction**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
55	73	71	69	67								
50	73	71	69	67	65	63						
45	73	71	69	67	65	63	61	59	57			
40	73	71	69	67	65	63	61	59	57	55		
35	67	67	67	67	65	63	61	59	57	55	53	
30	64	61	62	61	61	61	61	59	57	55	53	51
25	64	61	59	57	56	56	57	57	57	55	53	51
20	64	61	59	57	56	54	53	53	53	53	52	51
15	64	61	59	57	56	54	53	52	50	49	48	47
10 & BELOW	64	61	59	57	56	54	53	52	50	48	45	43

Takeoff %N1 (Table 2 of 3)**Based on engine bleed for packs on and engine anti-ice on or off**

ASSUMED TEMP (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
75	88.3	88.6	89.1	89.6	90.2	90.8	91.5	92.2	92.7	93.1	93.3	93.4
70	89.1	89.5	89.4	89.3	89.6	90.1	90.8	91.6	92.0	92.5	92.6	92.7
65	90.0	90.4	90.3	90.2	90.2	90.1	90.2	90.9	91.4	91.8	91.9	92.1
60	90.8	91.2	91.2	91.1	91.1	91.0	91.1	91.2	91.0	91.2	91.3	91.4
55	91.6	92.0	92.0	92.0	91.9	91.9	91.9	92.0	91.9	91.7	91.3	90.8
50	92.4	92.8	92.8	92.8	92.7	92.7	92.7	92.7	92.6	92.6	92.2	91.8
45	93.2	93.6	93.6	93.6	93.6	93.5	93.5	93.5	93.4	93.3	93.1	92.8
40	94.0	94.4	94.4	94.4	94.3	94.3	94.2	94.2	94.1	94.1	94.0	93.8
35	94.8	95.2	95.2	95.2	95.1	95.1	95.0	95.0	94.9	94.8	94.8	94.7
30	95.0	96.1	96.0	96.0	96.0	95.9	95.8	95.8	95.7	95.7	95.6	95.6
25	94.3	95.4	95.9	96.4	96.7	96.7	96.6	96.6	96.5	96.4	96.4	96.3
20	93.5	94.6	95.1	95.7	96.3	96.9	97.6	97.5	97.5	97.4	97.3	97.2
15	92.7	93.8	94.3	94.9	95.5	96.1	96.8	97.5	98.2	98.6	98.6	98.5
10	92.0	93.0	93.6	94.1	94.7	95.3	96.0	96.7	97.5	98.2	99.1	100.0
MINIMUM ASSUMED TEMP (°C)	32	30	28	26	24	22	20	18	16	15	12	10

With engine bleed for packs off, increase %N1 by 1.0

Assumed Temperature Reduced Thrust (24K Derate)
%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)													
	-40	-20	0	5	10	15	20	25	30	35	40	45	50	55
110	12.1													
100	11.3	8.5												
90	11.7	8.9												
80	12.5	8.0	5.5											
70	11.3	8.4	5.9	5.6	4.0									
60	9.7	9.2	4.8	4.7	4.4	4.2	2.6							
50	7.8	7.9	5.3	3.5	3.3	3.6	3.0	2.7	1.2					
40		6.4	6.0	5.5	3.7	3.2	3.7	3.0	2.8	3.0	3.7			
30		4.6	4.6	4.6	4.5	4.3	4.2	4.0	4.1	4.0	3.9	3.8	3.7	
20			3.1	3.1	3.1	3.0	2.9	2.9	2.8	2.7	2.7	2.6	2.6	2.5
10			1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.3	1.3
0			0	0	0	0	0	0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)
Maximum Assumed Temperature (Table 1 of 3)
Based on 25% Takeoff Thrust Reduction

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
40	56					
35	56	54	52			
30	56	54	52	50	48	47
25	54	54	52	50	48	47
20	51	51	52	50	48	47
15	47	47	48	49	48	47
10	43	44	44	45	46	46
5	43	42	42	42	43	43
0 & BELOW	43	42	42	42	41	41

Assumed Temperature Reduced Thrust - High Altitudes (24K Derate)**Maximum Takeoff %N1 (Table 2 of 3)****Based on engine bleed for packs on and engine anti-ice off**

OAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
60	91.4					
55	90.8					
50	91.8	91.5	92.3	93.2		
		91.9	92.0	92.5	93.2	93.5
45	92.8	92.8	92.9	93.1	93.2	93.2
40	93.8	93.8	93.8	93.9	93.9	94.0
35	94.7	94.7	94.7	94.7	94.7	94.7
30	95.6	95.5	95.5	95.5	95.4	95.4
25	96.3	96.3	96.3	96.2	96.1	96.1
20	97.2	97.2	97.1	97.0	97.0	96.9
15	98.5	98.4	98.3	98.2	98.1	98.0
10	100.0	99.7	99.5	99.3	99.1	99.1
5		99.7	100.2	100.3	100.0	99.8
0				99.8	100.1	100.3
MINIMUM ASSUMED TEMP (°C)	10	8	6	4	2	1

%N1 Adjustment for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	1.0	1.1	1.1	1.2	1.2	1.2
ENGINE ANTI-ICE	0.0	-0.7	-1.4	-1.4	-1.4	-1.4

%N1 Adjustment for Temperature Difference (Table 3 of 3)

ASSUMED TEMP MINUS OAT (°C)	OUTSIDE AIR TEMPERATURE (°C)										
	-60	-40	-20	0	5	10	15	20	25	30	35
110	15.9										
100	15.9										
90	14.8	12.5									
80	13.4	12.5									
70	11.2	11.3	9.2								
60		9.8	9.2								
50		7.8	7.9	6.0							
40			6.4	6.0	4.6	4.5	4.4	4.3			
30			4.6	4.7	4.6	4.5	4.4	4.3	2.9	2.9	2.8
20				3.1	3.1	3.1	3.0	3.0	2.9	2.9	2.8
10				1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4
0					0	0	0	0	0	0	0

1. Determine Maximum Assumed Temperature allowed from Table 1.
2. Find Maximum %N1 from Table 2 using the desired assumed temperature (no greater than temperature from Table 1).
3. Use the difference between assumed temperature and OAT to determine the %N1 adjustment from Table 3.
4. Subtract %N1 adjustment from Maximum %N1 in Table 2.

Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS OR MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.80	.80	.80
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	94.8	95.0	93.7
55	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.1	94.3	93.0
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.4	93.6	92.4
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	92.7	92.9	91.7
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.4	92.2	91.0
35	94.0	94.3	94.5	94.3	94.0	94.0	93.0	93.3	92.7	91.6
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	94.1	93.5	92.5
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.9	94.4	93.4
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.6	95.1	94.3
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.3	95.9	95.1
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	97.1	96.7	96.0
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.9	97.4	96.8
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.7	98.3	97.8
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.4	99.0	98.6
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.3	99.9	99.6
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.5
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.3	100.9	100.5
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	99.5	100.0	99.7
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	98.6	99.2	98.8
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	97.8	98.3	98.0
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	96.9	97.5	97.1

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

*Dual bleed sources

Go-around %N1**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)											
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

Go-around %N1 - High Altitudes
Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

AIRPORT OAT		TAT	AIRPORT PRESSURE ALTITUDE (FT)					
°C	°F	(°C)	10000	11000	12000	13000	14000	14500
37	99	40	99.1	99.7				
32	90	35	99.5	99.3	99.5	100.1	100.7	
27	81	30	100.3	100.2	100.2	100.0	100.0	100.2
22	72	25	100.8	100.7	100.7	100.6	100.6	100.5
17	63	20	101.0	101.0	101.0	100.9	100.8	100.8
12	54	15	101.2	101.2	101.2	101.2	101.1	101.0
7	45	10	100.9	101.4	101.5	101.4	101.3	101.2
2	36	5	100.2	100.9	101.6	101.6	101.5	101.5
-3	27	0	99.4	100.2	101.0	101.4	101.6	101.6
-8	18	-5	98.6	99.4	100.2	100.6	100.9	101.0
-13	9	-10	97.9	98.6	99.5	99.8	100.1	100.2
-17	1	-15	97.1	97.8	98.7	99.0	99.3	99.4
-22	-8	-20	96.3	97.0	97.9	98.2	98.5	98.6
-27	-17	-25	95.5	96.2	97.1	97.4	97.7	97.8
-32	-26	-30	94.7	95.4	96.2	96.6	96.8	97.0
-37	-35	-35	93.9	94.6	95.4	95.7	96.0	96.1
-42	-44	-40	93.0	93.8	94.6	94.9	95.1	95.3
-47	-53	-45	92.2	92.9	93.7	94.0	94.3	94.4
-52	-62	-50	91.4	92.1	92.9	93.2	93.4	93.5

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	0.9	0.9	0.9	1.0	1.0	1.0
ENGINE ANTI-ICE	0.0	-0.8	-1.5	-1.5	-1.5	-1.4

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Climb (280/.76)**Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
40000	PITCH ATT	4.0	4.0	4.0			
	V/S (FT/MIN)	2000	1300	800			
30000	PITCH ATT	4.5	4.0	4.0	4.0	4.0	4.0
	V/S (FT/MIN)	2800	2100	1700	1300	1000	700
20000	PITCH ATT	7.5	6.5	6.5	6.0	6.0	6.0
	V/S (FT/MIN)	4600	3600	2900	2400	2000	1600
10000	PITCH ATT	11.5	10.0	9.0	8.5	8.0	8.0
	V/S (FT/MIN)	6200	4900	4000	3300	2800	2400
SEA LEVEL	PITCH ATT	15.5	13.0	11.5	10.5	10.0	9.5
	V/S (FT/MIN)	7400	5900	4800	4100	3500	3000

Cruise (.76/280)**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
40000	PITCH ATT	1.5	2.5	3.0	4.0		
	%N1	83	85	88	93		
35000	PITCH ATT	1.0	1.5	2.0	2.5	3.5	4.0
	%N1	81	82	84	86	88	94
30000	PITCH ATT	0.5	1.0	1.5	2.0	2.5	3.0
	%N1	81	81	82	84	85	87
25000	PITCH ATT	0.5	1.5	2.0	2.5	3.0	3.5
	%N1	77	78	79	80	81	83
20000	PITCH ATT	1.0	1.5	2.0	2.5	3.0	3.5
	%N1	74	74	75	76	78	79
15000	PITCH ATT	1.0	1.5	2.0	2.5	3.0	3.5
	%N1	70	70	71	72	74	75

Descent (.76/280)**Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
40000	PITCH ATT	-2.0	-1.0	0.0	0.5	1.0	1.5
	V/S (FT/MIN)	-2900	-2600	-2400	-2500	-2700	-3000
30000	PITCH ATT	-4.0	-2.5	-1.5	-0.5	0.0	0.5
	V/S (FT/MIN)	-3400	-2800	-2500	-2200	-2100	-2000
20000	PITCH ATT	-4.0	-2.5	-1.5	-0.5	0.0	1.0
	V/S (FT/MIN)	-3100	-2500	-2200	-2000	-1900	-1800
10000	PITCH ATT	-4.0	-2.5	-1.5	-0.5	0.0	1.0
	V/S (FT/MIN)	-2800	-2300	-2000	-1800	-1700	-1600
SEA LEVEL	PITCH ATT	-4.5	-3.0	-2.0	-1.0	0.0	0.5
	V/S (FT/MIN)	-2600	-2100	-1800	-1600	-1500	-1400

Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Holding (VREF40 + 70)

Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 LB)					
		80	100	120	140	160	180
10000	PITCH ATT	5.0	5.5	5.5	5.0	5.0	5.0
	%N1	51	55	60	64	67	70
	KIAS	170	183	201	217	232	247
5000	PITCH ATT	5.0	5.5	5.5	5.0	5.0	5.0
	%N1	47	52	56	60	63	66
	KIAS	170	182	200	216	232	246

Terminal Area (5000 FT)

%N1 for Level Flight

FLAP POSITION (VREF+INCREMENT)		WEIGHT (1000 LB)									
		90	100	110	120	130	140	150	160	170	180
FLAPS 1 (GEAR UP) (VREF40+50)	PITCH ATT	5.0	5.0	5.5	5.5	5.5	6.0	6.0	6.0	6.0	6.5
	%N1	52	54	56	58	60	62	64	66	67	68
FLAPS 5 (GEAR UP) (VREF40+30)	PITCH ATT	6.0	6.0	6.0	6.5	6.5	6.5	6.5	6.5	7.0	7.0
	%N1	52	54	57	59	61	63	65	67	68	70
FLAPS 15 (GEAR DOWN) (VREF40+20)	PITCH ATT	4.5	5.0	5.0	5.0	5.0	5.5	5.5	5.5	5.5	5.5
	%N1	59	62	64	67	69	71	73	75	76	78

Final Approach (1500 FT)

Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF+INCREMENT)		WEIGHT (1000 LB)									
		90	100	110	120	130	140	150	160	170	180
FLAPS 15 (VREF15+10)	PITCH ATT	1.5	1.5	1.5	1.5	1.5	1.5	2.0	2.0	2.0	2.0
	%N1	42	44	46	47	49	51	52	54	55	56
FLAPS 30 (VREF30+10)	PITCH ATT	1.0	1.0	1.0	1.0	1.5	1.5	1.5	1.5	1.5	1.5
	%N1	47	50	52	54	55	57	59	60	62	63
FLAPS 40 (VREF40+10)	PITCH ATT	0.0	0.0	0.0	0.0	0.5	0.5	0.5	0.5	0.5	0.5
	%N	51	54	56	58	60	62	64	66	67	69

Performance Inflight

All Engine

Chapter PI

Section 61

.80M Maximum Operating Altitude

Max Cruise Thrust

ISA + 10°C and Below

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31500	-7	32500*	32500*	32500*	31300	29800
180	32700	-10	34000*	34000*	34000*	32500	31000
170	33900	-13	35400*	35400*	35300	33700	32200
160	35200	-15	36800*	36800*	36500	35000	33500
150	36500	-17	38000*	38000*	37900	36300	34900
140	38000	-17	39300*	39300*	39300	37800	36300
130	39500	-17	40700*	40700*	40700*	39300	37900
120	41000	-17	41000	41000	41000	41000	39500
110	41000	-17	41000	41000	41000	41000	41000
100	41000	-17	41000	41000	41000	41000	41000
90	41000	-17	41000	41000	41000	41000	41000

ISA + 15°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31500	-2	29300*	29300*	29300*	29300*	29300*
180	32700	-4	32300*	32300*	32300*	32300*	31000
170	33900	-7	34200*	34200*	34200*	33700	32200
160	35200	-10	35700*	35700*	35700*	35000	33500
150	36500	-12	37100*	37100*	37100*	36300	34900
140	38000	-12	38300*	38300*	38300*	37800	36300
130	39500	-12	39700*	39700*	39700*	39300	37900
120	41000	-12	41000	41000	41000	41000	39500
110	41000	-12	41000	41000	41000	41000	41000
100	41000	-12	41000	41000	41000	41000	41000
90	41000	-12	41000	41000	41000	41000	41000

ISA + 20°C

WEIGHT (1000 LB)	OPTIMUM ALT (FT)	TAT (°C)	MARGIN TO INITIAL BUFFET 'G' (BANK ANGLE)				
			1.20 (33°)	1.25 (36°)	1.30 (39°)	1.40 (44°)	1.50 (48°)
190	31500	4	22900*	22900*	22900*	22900*	22900*
180	32700	1	23500*	23500*	23500*	23500*	23500*
170	33900	-1	24000*	24000*	24000*	24000*	24000*
160	35200	-4	33300*	33300*	33300*	33300*	33300*
150	36500	-6	35600*	35600*	35600*	35600*	34900
140	38000	-6	37000*	37000*	37000*	37000*	36300
130	39500	-6	38200*	38200*	38200*	38200*	37900
120	41000	-6	39600*	39600*	39600*	39600*	39500
110	41000	-6	41000	41000	41000	41000	41000
100	41000	-6	41000	41000	41000	41000	41000
90	41000	-6	41000	41000	41000	41000	41000

*Denotes altitude thrust limited in level flight, 100 fpm residual rate of climb.

80M Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)									
		23	25	27	29	31	33	35	37	39	41
190	%N1	87.1	88.6	88.8	89.4	90.3	92.8				
	MACH	.775	.800	.800	.800	.800	.800				
	KIAS	340	338	324	311	297	284				
	FF/ENG	4000	4024	3820	3673	3579	3617				
180	%N1	86.6	88.1	88.3	88.6	89.4	90.8				
	MACH	.775	.800	.800	.800	.800	.800				
	KIAS	340	338	324	311	297	284				
	FF/ENG	3929	3954	3738	3561	3444	3389				
170	%N1	86.2	87.8	87.8	88.0	88.5	89.4	91.5			
	MACH	.775	.800	.800	.800	.800	.800	.800			
	KIAS	340	338	324	311	297	284	272			
	FF/ENG	3866	3893	3665	3472	3316	3216	3216			
160	%N1	85.8	87.4	87.4	87.5	87.7	88.4	89.6	93.3		
	MACH	.775	.800	.800	.800	.800	.800	.800	.800		
	KIAS	340	338	324	311	297	284	272	260		
	FF/ENG	3808	3836	3599	3394	3216	3086	3013	3110		
150	%N1	85.5	87.0	87.0	87.0	87.1	87.5	88.3	90.4		
	MACH	.775	.800	.800	.800	.800	.800	.800	.800		
	KIAS	340	338	324	311	297	284	272	260		
	FF/ENG	3751	3777	3542	3325	3136	2972	2868	2846		
140	%N1	85.1	86.7	86.6	86.6	86.6	86.8	87.2	88.6	91.6	
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	
	KIAS	340	338	324	311	297	284	272	260	248	
	FF/ENG	3699	3723	3484	3266	3064	2887	2743	2671	2704	
130	%N1	84.8	86.4	86.2	86.1	86.1	86.2	86.4	87.4	89.3	93.2
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3659	3682	3429	3208	3003	2813	2649	2542	2504	2576
120	%N1	84.7	86.2	85.9	85.7	85.6	85.6	85.7	86.3	87.8	90.0
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3635	3648	3386	3152	2946	2750	2575	2441	2367	2343
110	%N1	84.5	86.0	85.7	85.4	85.2	85.1	85.1	85.6	86.7	88.2
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3615	3624	3352	3109	2889	2694	2511	2365	2258	2196
100	%N1	84.5	85.9	85.5	85.1	84.8	84.6	84.6	84.9	85.8	86.9
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3606	3610	3329	3075	2846	2638	2455	2300	2181	2083
90	%N1	84.5	85.9	85.4	84.9	84.5	84.2	84.0	84.4	85.1	86.0
	MACH	.775	.800	.800	.800	.800	.800	.800	.800	.800	.800
	KIAS	340	338	324	311	297	284	272	260	248	237
	FF/ENG	3608	3606	3315	3053	2813	2595	2400	2244	2117	2007

Shaded area approximates optimum altitude.

.80M Enroute Fuel and Time - Low Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
272	254	237	223	211	200	191	183	175	168	162
407	380	356	335	317	300	287	275	264	254	245
541	506	475	447	422	400	383	367	353	339	327
676	632	593	558	528	500	479	460	442	425	409
810	758	711	670	633	600	575	552	530	510	492
945	884	829	781	738	700	671	644	619	596	575
1079	1009	947	892	844	800	767	736	708	682	658
1213	1135	1065	1004	950	900	863	829	797	767	741
1347	1261	1184	1116	1055	1000	959	921	886	853	823
1482	1387	1302	1227	1160	1100	1055	1013	974	938	905
1616	1513	1420	1338	1266	1200	1151	1106	1063	1024	988
1751	1639	1538	1450	1371	1300	1247	1198	1152	1110	1071
1885	1765	1656	1561	1477	1400	1343	1290	1241	1196	1154
2020	1891	1775	1673	1582	1500	1439	1382	1330	1281	1237
2154	2017	1893	1784	1688	1600	1535	1475	1418	1367	1319
2288	2142	2011	1896	1793	1700	1631	1567	1507	1452	1401
2422	2268	2129	2007	1899	1800	1727	1659	1596	1538	1484
2556	2394	2247	2118	2004	1900	1823	1751	1685	1623	1567
2691	2520	2365	2230	2110	2000	1919	1844	1774	1709	1650

Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.6	0:34	3.3	0:33	2.7	0:32	2.5	0:31	2.1	0:32
300	5.6	0:50	5.1	0:48	4.4	0:45	4.0	0:44	3.5	0:44
400	7.5	1:05	6.9	1:02	6.0	0:59	5.6	0:56	4.9	0:57
500	9.5	1:20	8.7	1:17	7.6	1:12	7.1	1:09	6.3	1:10
600	11.5	1:36	10.5	1:31	9.3	1:25	8.6	1:22	7.7	1:22
700	13.4	1:51	12.3	1:46	10.9	1:39	10.2	1:34	9.1	1:35
800	15.4	2:07	14.1	2:00	12.5	1:52	11.7	1:47	10.5	1:47
900	17.3	2:22	16.0	2:15	14.2	2:05	13.3	1:59	11.8	2:00
1000	19.3	2:37	17.8	2:29	15.8	2:18	14.8	2:12	13.2	2:12
1100	21.2	2:53	19.6	2:44	17.4	2:32	16.3	2:24	14.6	2:25
1200	23.2	3:08	21.4	2:58	19.0	2:45	17.9	2:37	16.0	2:38
1300	25.1	3:23	23.2	3:13	20.7	2:58	19.4	2:49	17.3	2:50
1400	27.1	3:39	25.0	3:27	22.3	3:12	20.9	3:02	18.7	3:03
1500	29.0	3:54	26.8	3:42	23.9	3:25	22.5	3:14	20.1	3:15
1600	31.0	4:09	28.6	3:56	25.5	3:38	24.0	3:27	21.4	3:28
1700	32.9	4:25	30.4	4:11	27.2	3:52	25.5	3:39	22.8	3:41
1800	34.9	4:40	32.3	4:25	28.8	4:05	27.0	3:52	24.1	3:53
1900	36.9	4:56	34.1	4:40	30.4	4:18	28.6	4:04	25.5	4:06
2000	38.8	5:11	35.9	4:54	32.0	4:31	30.1	4:17	26.8	4:18

.80M Enroute Fuel and Time - Low Altitudes
Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)					
	90	110	130	150	170	190
5	0.1	0.0	0.0	0.1	0.2	0.4
10	0.1	0.0	0.0	0.3	0.6	1.0
15	0.2	0.0	0.0	0.4	0.9	1.5
20	0.3	0.1	0.0	0.6	1.2	2.0
25	0.4	0.1	0.0	0.7	1.5	2.5
30	0.6	0.1	0.0	0.8	1.8	3.0
35	0.7	0.2	0.0	0.9	2.0	3.4
40	0.9	0.3	0.0	1.0	2.3	3.7

80M Enroute Fuel and Time - High Altitudes

Ground to Air Miles Conversions

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAIL WIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
522	492	465	441	420	400	383	367	352	339	326
778	735	695	660	629	600	575	551	530	510	492
1033	977	926	880	838	800	767	736	707	681	657
1289	1219	1156	1099	1047	1000	959	920	885	852	822
1545	1462	1386	1318	1256	1200	1151	1105	1062	1023	987
1800	1704	1616	1537	1466	1400	1343	1290	1240	1194	1152
2056	1946	1846	1756	1675	1600	1535	1474	1418	1366	1318
2311	2189	2076	1975	1884	1800	1727	1659	1595	1537	1483
2567	2431	2306	2194	2093	2000	1919	1843	1772	1708	1648
2823	2673	2536	2414	2302	2200	2111	2027	1950	1878	1813
3078	2915	2766	2633	2512	2400	2302	2212	2127	2049	1978
3334	3158	2996	2852	2721	2600	2495	2396	2305	2221	2144
3589	3400	3227	3071	2930	2800	2687	2581	2483	2392	2309
3845	3642	3457	3290	3139	3000	2879	2766	2660	2563	2474
4101	3885	3687	3509	3348	3200	3071	2950	2838	2734	2639
4356	4127	3917	3728	3558	3400	3263	3134	3015	2905	2804
4612	4369	4147	3948	3767	3600	3455	3319	3193	3077	2970
4867	4612	4377	4167	3976	3800	3647	3504	3371	3248	3136
5123	4854	4607	4386	4185	4000	3839	3688	3548	3419	3301
5379	5096	4837	4605	4394	4200	4031	3873	3726	3590	3466
5634	5339	5067	4824	4604	4400	4223	4057	3903	3761	3631
5890	5581	5297	5043	4813	4600	4414	4241	4081	3932	3797
6145	5823	5527	5262	5022	4800	4606	4426	4258	4103	3962
6401	6065	5758	5482	5231	5000	4798	4610	4435	4274	4127
6657	6308	5988	5701	5440	5200	4990	4794	4613	4445	4292
6912	6550	6218	5920	5649	5400	5182	4979	4790	4616	4457
7168	6792	6448	6139	5859	5600	5374	5163	4968	4787	4623
7423	7035	6678	6358	6068	5800	5566	5347	5145	4958	4788
7679	7277	6908	6577	6277	6000	5758	5532	5322	5129	4953

.80M Enroute Fuel and Time - High Altitudes
Reference Fuel And Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	29		31		33		35		37	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
400	4.8	0:57	4.5	0:58	4.2	0:58	4.0	0:58	3.8	0:58
600	7.5	1:22	7.0	1:23	6.6	1:24	6.2	1:24	6.0	1:25
800	10.1	1:48	9.5	1:49	9.0	1:49	8.5	1:50	8.1	1:51
1000	12.8	2:13	12.1	2:14	11.3	2:15	10.7	2:16	10.3	2:17
1200	15.5	2:38	14.6	2:40	13.7	2:41	13.0	2:42	12.4	2:43
1400	18.1	3:04	17.1	3:05	16.1	3:07	15.2	3:08	14.5	3:09
1600	20.8	3:29	19.5	3:31	18.4	3:32	17.4	3:34	16.6	3:35
1800	23.4	3:54	22.0	3:56	20.7	3:58	19.6	4:00	18.7	4:01
2000	26.0	4:19	24.5	4:22	23.0	4:24	21.8	4:26	20.8	4:27
2200	28.6	4:45	26.9	4:47	25.3	4:50	24.0	4:52	22.8	4:53
2400	31.2	5:10	29.4	5:13	27.6	5:15	26.1	5:18	24.9	5:20
2600	33.8	5:35	31.8	5:38	29.9	5:41	28.3	5:44	26.9	5:46
2800	36.4	6:01	34.2	6:04	32.2	6:07	30.4	6:10	28.9	6:12
3000	39.0	6:26	36.6	6:29	34.5	6:33	32.6	6:36	31.0	6:38
3200	41.6	6:51	39.1	6:55	36.7	6:58	34.7	7:02	33.0	7:04
3400	44.2	7:16	41.5	7:20	39.0	7:24	36.8	7:28	35.0	7:30
3600	46.8	7:42	43.9	7:46	41.2	7:50	38.9	7:54	36.9	7:56
3800	49.4	8:07	46.3	8:11	43.4	8:15	41.0	8:20	38.9	8:22
4000	52.0	8:32	48.7	8:37	45.7	8:41	43.1	8:46	40.9	8:48
4200	54.5	8:57	51.1	9:02	47.9	9:07	45.1	9:12	42.8	9:14
4400	57.1	9:23	53.4	9:28	50.1	9:33	47.2	9:38	44.8	9:41
4600	59.7	9:48	55.8	9:53	52.3	9:58	49.3	10:04	46.7	10:07
4800	62.3	10:13	58.2	10:19	54.5	10:24	51.3	10:30	48.7	10:33
5000	64.9	10:38	60.6	10:44	56.8	10:50	53.4	10:56	50.6	10:59
5200	67.5	11:04	63.0	11:10	59.0	11:16	55.4	11:22	52.5	11:25
5400	70.1	11:29	65.4	11:35	61.2	11:41	57.5	11:48	54.4	11:51
5600	72.7	11:54	67.8	12:01	63.4	12:07	59.5	12:14	56.3	12:17
5800	75.3	12:20	70.2	12:26	65.6	12:33	61.5	12:39	58.2	12:43
6000	77.9	12:45	72.6	12:52	67.8	12:58	63.6	13:05	60.1	13:09

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)					
	90	110	130	150	170	190
5	0.0	0.0	0.0	0.5	1.7	5.1
10	-0.2	-0.2	0.0	0.9	2.8	7.4
15	-0.4	-0.3	0.0	1.3	3.8	9.5
20	-0.6	-0.4	0.0	1.7	4.7	11.3
25	-0.7	-0.5	0.0	2.0	5.5	12.9
30	-0.7	-0.6	0.0	2.3	6.3	14.3
35	-0.7	-0.6	0.0	2.6	6.9	15.5
40	-0.6	-0.6	0.0	2.8	7.5	16.5
45	-0.5	-0.6	0.0	3.0	8.0	17.2
50	-0.3	-0.6	0.0	3.2	8.4	17.7
55	0.0	-0.5	0.0	3.4	8.7	18.0
60	0.3	-0.4	0.0	3.5	9.0	18.1
65	0.6	-0.3	0.0	3.7	9.1	17.9
70	1.1	-0.2	0.0	3.7	9.2	17.6
75	1.5	-0.1	0.0	3.8	9.1	17.0
80	2.1	0.1	0.0	3.8	9.0	16.2

.80M Wind-Altitude Trade

PRESSURE ALTITUDE (1000 FT)	CRUISE WEIGHT (1000 LB)								
	180	170	160	150	140	130	120	110	100
41					32	9	0	4	19
39				21	5	0	5	19	43
37		33	12	2	0	7	21	43	72
35	18	5	0	1	10	25	46	72	104
33	1	0	4	15	30	50	75	104	136
31	2	9	20	36	56	79	105	135	168
29	15	27	43	62	84	109	137	167	199
27	36	52	70	91	114	140	168	197	

The above wind factor tables are for calculation of wind required to maintain present range capability at new pressure altitude, i.e., break-even wind.

Method:

1. Read wind factors for present and new altitudes from table.
2. Determine difference (new altitude wind factor minus present altitude wind factor); This difference may be negative or positive.
3. Break-even wind at new altitude is present altitude wind plus difference from step 2.

Descent

.80/280/250

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (LB)	DISTANCE (NM)				
			LANDING WEIGHT (1000 LB)				
			90	110	130	150	170
41000	26	780	102	117	129	137	141
39000	26	770	97	112	123	132	136
37000	25	760	92	106	118	126	131
35000	24	750	88	101	112	120	126
33000	24	740	84	97	108	115	121
31000	23	720	80	92	102	109	114
29000	22	710	75	86	95	102	107
27000	21	690	70	81	89	96	100
25000	20	670	66	75	83	89	93
23000	19	650	61	70	77	82	86
21000	18	630	57	65	71	76	79
19000	17	600	52	59	65	69	72
17000	15	580	48	54	59	63	65
15000	14	550	43	49	53	56	58
10000	11	460	30	33	36	37	38
5000	7	350	18	19	20	21	21
1500	4	270	9	9	9	9	9

Allowances for a straight-in approach are included.

Holding
Flaps Up

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	41000
190	%N1	64.8	67.3	71.1	75.1	79.5	83.8	88.1	
	KIAS	252	252	254	255	257	259	262	
	FF/ENG	3350	3300	3270	3250	3220	3240	3350	
180	%N1	63.2	66.1	69.6	73.8	78.1	82.4	86.6	
	KIAS	245	246	247	248	250	252	255	
	FF/ENG	3190	3140	3100	3090	3040	3060	3140	
170	%N1	61.7	64.7	68.2	72.4	76.5	80.9	85.2	90.4
	KIAS	238	239	240	241	242	244	247	250
	FF/ENG	3040	2980	2940	2920	2860	2870	2950	3120
160	%N1	60.1	63.0	66.8	70.8	74.9	79.4	83.6	88.4
	KIAS	231	231	232	233	235	237	239	242
	FF/ENG	2880	2820	2780	2750	2700	2690	2750	2860
150	%N1	58.6	61.3	65.3	69.0	73.3	77.7	82.0	86.5
	KIAS	224	224	225	226	227	229	231	234
	FF/ENG	2720	2670	2620	2580	2540	2510	2570	2640
140	%N1	57.0	59.5	63.7	67.3	71.6	75.9	80.3	84.7
	KIAS	216	216	217	218	219	221	223	225
	FF/ENG	2570	2510	2460	2420	2380	2330	2380	2430
130	%N1	55.3	57.8	61.7	65.6	69.7	74.0	78.4	82.8
	KIAS	208	209	209	210	211	213	214	217
	FF/ENG	2410	2350	2310	2260	2220	2160	2200	2240
120	%N1	53.5	56.0	59.6	63.8	67.6	72.0	76.4	80.8
	KIAS	199	200	201	202	203	204	205	207
	FF/ENG	2260	2200	2150	2100	2060	2010	2020	2060
110	%N1	51.5	54.0	57.5	61.7	65.5	69.9	74.1	78.7
	KIAS	191	191	192	193	194	195	196	198
	FF/ENG	2110	2040	1990	1950	1900	1900	1880	1900
100	%N1	49.4	51.8	55.4	59.2	63.3	67.4	71.7	76.3
	KIAS	182	182	183	184	184	185	187	188
	FF/ENG	1960	1890	1870	1830	1780	1740	1720	1720
90	%N1	47.2	49.6	53.1	56.6	61.0	64.8	69.2	73.7
	KIAS	176	176	176	176	176	176	177	178
	FF/ENG	1850	1780	1720	1670	1630	1590	1570	1550

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight Advisory Information

Chapter PI Section 62

ADVISORY INFORMATION

Normal Configuration Landing Distances

Flaps 15

Dry Runway

	LANDING DISTANCE AND ADJUSTMENTS (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF15	ONE REV	NO REV
MAX MANUAL	2910	190/-155	60/80	-105	370	30	-30	60	-60	205	60	110
MAX AUTO	3780	185/-195	85/110	-140	470	5	0	85	-85	360	5	5
AUTOBRAKE 3	5320	300/-320	140/190	-230	780	5	-10	145	-145	575	0	10
AUTOBRAKE 2	6800	430/-450	205/270	-315	1070	110	-145	190	-190	530	0	270
AUTOBRAKE 1	7460	510/-525	240/320	-365	1250	210	-235	215	-210	515	335	1025

Good Reported Braking Action

MAX MANUAL	4000	215/-220	105/140	-180	625	90	-80	95	-100	285	250	450
MAX AUTO	4430	230/-240	110/145	-185	650	75	-65	100	-105	350	290	515
AUTOBRAKE 3	5330	300/-325	140/190	-235	795	20	-15	145	-145	575	30	45
AUTOBRAKE 2	6800	430/-450	205/270	-315	1070	110	-145	190	-190	530	0	270

Medium Reported Braking Action

MAX MANUAL	5470	345/-345	165/225	-285	1040	235	-190	145	-150	380	815	1380
MAX AUTO	5750	350/-355	170/230	-285	1040	210	-165	145	-155	440	830	1405
AUTOBRAKE 3	5890	360/-365	170/235	-300	1080	160	-115	160	-165	575	790	1185
AUTOBRAKE 2	6960	440/-460	210/280	-340	1210	200	-195	195	-200	530	355	740

Poor Reported Braking Action

MAX MANUAL	7140	500/-490	240/335	-435	1650	585	-385	200	-215	455	2120	3365
MAX AUTO	7430	495/-485	240/335	-430	1635	575	-370	195	-215	480	2140	3380
AUTOBRAKE 3	7430	505/-490	240/340	-430	1645	550	-340	200	-215	555	2150	3405
AUTOBRAKE 2	7730	525/-525	255/355	-450	1700	540	-365	215	-235	530	1900	2970

Reference distance is for sea level, standard day, no wind or slope, VREF15 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 245 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Normal Configuration Landing Distances
Flaps 30
Dry Runway

	LANDING DISTANCE AND ADJUSTMENTS (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF30	ONE REV	NO REV
MAX MANUAL	2770	165/-135	55/75	-100	355	30	-30	55	-55	200	50	90
MAX AUTO	3560	170/-180	75/100	-135	450	0	-0	80	-80	345	0	5
AUTOBRAKE 3	4960	275/-295	130/165	-220	745	10	-25	130	-130	510	0	15
AUTOBRAKE 2	6300	385/-405	180/240	-300	1020	110	-130	170	-170	490	5	250
AUTOBRAKE 1	6870	455/-465	215/280	-345	1195	195	-205	190	-190	480	340	905

Good Reported Braking Action

MAX MANUAL	3800	200/-205	95/125	-170	610	85	-75	90	-90	280	215	390
MAX AUTO	4200	215/-225	100/135	-180	630	70	-60	95	-95	330	250	450
AUTOBRAKE 3	4960	275/-295	130/170	-220	760	20	-30	130	-130	510	30	55
AUTOBRAKE 2	6300	385/-405	180/240	-300	1020	110	-130	170	-170	490	5	250

Medium Reported Braking Action

MAX MANUAL	5140	315/-315	150/205	-275	1010	225	-175	135	-140	365	685	1175
MAX AUTO	5390	320/-325	155/205	-275	1010	195	-155	135	-140	425	700	1195
AUTOBRAKE 3	5500	330/-335	155/210	-285	1040	160	-125	145	-155	510	670	1030
AUTOBRAKE 2	6450	395/-415	190/250	-325	1155	195	-180	175	-180	490	310	665

Poor Reported Braking Action

MAX MANUAL	6650	455/-445	220/300	-415	1600	545	-355	180	-200	435	1735	2795
MAX AUTO	6900	450/-440	215/300	-410	1585	535	-335	180	-200	475	1750	2800
AUTOBRAKE 3	6900	460/-450	220/300	-415	1595	520	-330	180	-200	490	1765	2845
AUTOBRAKE 2	7180	475/-475	230/315	-430	1640	515	-340	195	-215	490	1540	2485

Reference distance is for sea level, standard day, no wind or slope, VREF30 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 230 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION**Normal Configuration Landing Distances****Flaps 40****Dry Runway**

	LANDING DISTANCE AND ADJUSTMENTS (FT)											
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ PER 10 KTS		SLOPE ADJ PER 1%		TEMP ADJ PER 10°C		APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD WIND	TAIL WIND	DOWN HILL	UP HILL	ABV ISA	BLW ISA	PER 10 KTS ABOVE VREF40	ONE REV	NO REV
MAX MANUAL	2650	160/-125	55/75	-100	345	30	-25	50	-55	200	40	80
MAX AUTO	3340	175/-165	75/105	-130	430	0	0	70	-75	330	0	0
AUTOBRAKE 3	4590	285/-265	130/175	-210	715	5	-15	120	-120	510	0	5
AUTOBRAKE 2	5860	390/-370	180/240	-285	985	85	-115	160	-160	495	0	135
AUTOBRAKE 1	6480	455/-435	210/280	-335	1160	170	-190	180	-180	480	225	685

Good Reported Braking Action

MAX MANUAL	3640	205/-195	95/130	-170	600	85	-75	85	-85	285	195	355
MAX AUTO	3990	225/-210	105/140	-175	620	70	-60	90	-90	335	225	405
AUTOBRAKE 3	4600	285/-270	130/175	-210	725	20	-20	120	-120	510	30	45
AUTOBRAKE 2	5860	390/-370	180/240	-285	985	85	-115	160	-160	495	0	135

Medium Reported Braking Action

MAX MANUAL	4900	320/-300	150/205	-270	990	220	-175	125	-130	370	620	1070
MAX AUTO	5120	330/-310	155/210	-270	990	190	-145	130	-135	430	625	1075
AUTOBRAKE 3	5200	340/-315	155/215	-275	1015	160	-120	135	-140	510	650	1010
AUTOBRAKE 2	6010	400/-380	185/250	-315	1125	170	-165	160	-165	495	300	550

Poor Reported Braking Action

MAX MANUAL	6340	460/-420	215/300	-405	1575	535	-350	170	-190	435	1575	2550
MAX AUTO	6600	455/-420	215/300	-400	1560	535	-340	170	-190	455	1595	2575
AUTOBRAKE 3	6600	465/-430	220/305	-405	1565	510	-330	170	-190	475	1595	2590
AUTOBRAKE 2	6770	480/-445	225/315	-420	1605	500	-330	185	-200	495	1460	2285

Reference distance is for sea level, standard day, no wind or slope, VREF40 approach speed and two engine detent reverse thrust.

Max manual braking data valid for auto speedbrakes. Autobrake data valid for both auto and manual speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 220 ft.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above threshold (1000 ft of air distance).

*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Dry Runway

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	3800	470/-205	95/210	-130/445	45/-40	90/-90	265
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	4630	275/-260	130/175	-230/835	135/-115	110/-115	360
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	3210	200/-155	70/95	-115/395	40/-40	70/-70	290
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	3040	180/-145	65/85	-110/380	40/-35	65/-65	280
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	2910	180/-135	65/95	-110/370	40/-35	60/-60	285
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	3280	155/-165	75/100	-125/440	45/-45	75/-75	245
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	4500	225/-235	110/150	-180/600	110/-100	110/-110	505
LEADING EDGE FLAPS TRANSIT	VREF15+15	3250	210/-170	70/95	-115/395	35/-35	70/-70	215
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	2930	200/-160	60/80	-110/375	35/-30	60/-60	210
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	2790	170/-140	55/75	-105/360	30/-30	55/-55	205

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Dry Runway**

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	2900	190/-150	60/80	-105/370	30/-30	60/-60	205
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	2900	190/-150	60/80	-105/370	30/-30	60/-60	205
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	2760	165/-135	55/75	-100/355	30/-25	55/-55	200
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	2900	190/-150	60/80	-105/370	30/-30	60/-60	205
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	3210	265/-170	75/100	-115/395	35/-30	70/-70	200
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	2760	165/-135	55/75	-100/355	30/-25	55/-55	200
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	2900	190/-150	60/80	-105/370	30/-30	60/-60	205
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	3210	265/-170	75/100	-115/395	35/-30	70/-70	200
TRAILING EDGE FLAPS UP	VREF40+40	3420	320/-185	80/110	-120/410	35/-35	75/-80	205

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Good Reported Braking Action

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	5160	265/-265	150/200	-205/705	105/-95	135/-135	275
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	5160	325/-300	150/205	-275/1015	195/-165	130/-130	395
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	4630	265/-275	130/175	-205/705	125/-115	120/-120	425
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	4330	240/-250	115/155	-195/680	115/-105	110/-110	405
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	4100	255/-230	115/165	-190/660	110/-100	100/-100	405
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	4150	230/-235	110/150	-185/645	95/-85	100/-105	315
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	5550	300/-310	150/205	-235/805	185/-165	140/-145	595
LEADING EDGE FLAPS TRANSIT	VREF15+15	4480	235/-245	120/160	-190/665	95/-90	115/-115	295
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	4120	225/-230	105/140	-185/655	100/-90	100/-105	305
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	3900	205/-215	95/130	-180/635	95/-85	95/-95	300

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Good Reported Braking Action**

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	3970	215/-220	100/140	-175/625	85/-75	95/-95	280
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	3970	215/-220	100/140	-175/625	85/-75	95/-95	280
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	3770	195/-200	95/125	-170/605	80/-75	90/-90	280
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	3970	215/-220	100/140	-175/625	85/-75	95/-95	280
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	4370	230/-225	120/165	-185/650	90/-80	110/-110	265
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	3770	195/-200	95/125	-170/605	80/-75	90/-90	280
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	3970	215/-220	100/140	-175/625	85/-75	95/-95	280
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	4370	230/-225	120/165	-185/650	90/-80	110/-110	265
TRAILING EDGE FLAPS UP	VREF40+40	4670	245/-240	130/175	-190/670	95/-85	120/-120	270

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Medium Reported Braking Action

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	7260	440/-425	245/330	-330/1175	270/-230	210/-210	385
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	6510	455/-420	215/300	-410/1590	440/-330	170/-180	460
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	6290	425/-420	205/285	-320/1145	295/-250	175/-175	540
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	5830	380/-380	185/250	-305/1105	270/-230	160/-160	505
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	5500	390/-350	180/255	-295/1080	260/-220	145/-150	500
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	5640	360/-360	175/240	-290/1065	235/-200	150/-155	415
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	7600	475/-475	235/330	-365/1290	400/-340	205/-210	715
LEADING EDGE FLAPS TRANSIT	VREF15+15	6050	370/-375	190/260	-300/1085	235/-200	165/-170	385
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	5840	365/-375	175/235	-310/1120	270/-225	160/-165	425
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	5440	335/-340	160/210	-295/1080	250/-210	150/-150	405

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Medium Reported Braking Action**

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	5390	340/-340	165/225	-280/1030	215/-180	145/-145	375
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	5390	340/-340	165/225	-280/1030	215/-180	145/-145	375
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	5060	310/-310	150/200	-270/1000	200/-170	130/-135	360
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	5390	340/-340	165/225	-280/1030	215/-180	145/-145	375
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	6010	375/-355	195/265	-295/1075	225/-195	165/-165	365
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	5060	310/-310	150/200	-270/1000	200/-170	130/-135	360
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	5390	340/-340	165/225	-280/1030	215/-180	145/-145	375
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	6010	375/-355	195/265	-295/1075	225/-195	165/-165	365
TRAILING EDGE FLAPS UP	VREF40+40	6490	400/-385	215/290	-310/1115	245/-210	180/-185	370

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance
Poor Reported Braking Action

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMPADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
ALL FLAPS UP	VREF40+55	9610	655/-625	360/495	-500/1855	615/-475	290/-295	485
ANTI SKID INOPERATIVE (FLAPS 40)	VREF40	8630	655/-600	305/450	-675/2940	1570/-760	225/-270	515
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 15)	VREF15	8100	605/-585	300/420	-475/1790	635/-475	235/-245	625
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 30)	VREF30	7470	540/-525	265/370	-455/1725	585/-435	210/-225	580
HYDRAULICS - LOSS OF SYSTEM A (FLAPS 40)	VREF40	7040	545/-490	255/365	-440/1685	565/-420	195/-210	565
HYDRAULICS - LOSS OF SYSTEM B (FLAPS 15)	VREF15	7300	520/-505	255/355	-440/1680	525/-395	205/-215	495
HYDRAULICS - MANUAL REVERSION (LOSS OF BOTH SYSTEM A & B)	VREF15	9710	680/-660	340/480	-535/1965	790/-600	270/-280	790
LEADING EDGE FLAPS TRANSIT	VREF15+15	7760	530/-525	270/375	-445/1700	520/-390	220/-230	450
ONE ENGINE INOPERATIVE (FLAPS 15)	VREF15	7940	550/-550	265/355	-485/1830	670/-490	235/-240	530
ONE ENGINE INOPERATIVE (FLAPS 30)**	VREF30	7310	495/-495	235/315	-460/1760	610/-445	210/-215	495

Reference distance assumes sea level, standard day, with no wind or slope.
Actual (unfactored) distances are shown.
Includes distance from 50 ft above runway threshold (1000 ft of air distance).
Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).
Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.
Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

**ONE ENGINE INOPERATIVE (FLAPS 30) data are only applicable to Fail Operational airplanes.

ADVISORY INFORMATION**Non-Normal Configuration Landing Distance****Poor Reported Braking Action**

		LANDING DISTANCE AND ADJUSTMENTS (FT)						
		REF DIST	WEIGHT ADJ	ALT ADJ	WIND ADJ PER 10 KTS	SLOPE ADJ PER 1%	TEMP ADJ PER 10°C	APP SPD ADJ
LANDING CONFIGURATION	VREF	130000 LB LANDING WEIGHT	PER 10000 LB ABOVE/ BELOW 130000 LB	PER 1000 FT STD/ HIGH*	HEAD/ TAIL	DOWN HILL/ UP HILL	ABV ISA/ BLW ISA	PER 10 KTS ABV VREF
STABILIZER TRIM INOPERATIVE	VREF15	6980	490/-475	240/330	-425/1630	485/-365	195/-205	450
JAMMED OR RESTRICTED FLIGHT CONTROLS	VREF15	6980	490/-475	240/330	-425/1630	485/-365	195/-205	450
TRAILING EDGE FLAP ASYMMETRY (30 ≤ FLAPS < 40)	VREF30	6500	445/-435	215/295	-405/1580	455/-340	180/-190	425
TRAILING EDGE FLAP ASYMMETRY (15 ≤ FLAPS < 30)	VREF15	6980	490/-475	240/330	-425/1630	485/-365	195/-205	450
TRAILING EDGE FLAP ASYMMETRY (1 ≤ FLAPS < 15)	VREF40+30	7840	545/-510	285/395	-445/1700	515/-390	225/-235	445
TRAILING EDGE FLAP DISAGREE (30 ≤ FLAPS < 40)	VREF30	6500	445/-435	215/295	-405/1580	455/-340	180/-190	425
TRAILING EDGE FLAP DISAGREE (15 ≤ FLAPS < 30)	VREF15	6980	490/-475	240/330	-425/1630	485/-365	195/-205	450
TRAILING EDGE FLAP DISAGREE (1 ≤ FLAPS < 15)	VREF40+30	7840	545/-510	285/395	-445/1700	515/-390	225/-235	445
TRAILING EDGE FLAPS UP	VREF40+40	8540	585/-555	310/430	-470/1765	555/-425	250/-260	460

Reference distance assumes sea level, standard day, with no wind or slope.

Actual (unfactored) distances are shown.

Includes distance from 50 ft above runway threshold (1000 ft of air distance).

Assumes maximum manual braking and maximum reverse thrust when available on operating engine(s).

Altitude adjustment for STD altitudes valid up to 8000 ft pressure altitude.

Altitude adjustment for HIGH altitudes valid for altitudes above 8000 ft up to 14000 ft.

*For landing distance above 8000 ft pressure altitude, first apply the STD altitude adjustment to derive new reference landing distance for 8000 ft, then apply applicable HIGH altitude adjustment between 8000 ft and 14000 ft to this new reference distance.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule****Reference Brake Energy Per Brake (Millions of Foot Pounds)**

		WIND CORRECTED BRAKES ON SPEED (KIAS)																	
		80			100			120			140			160			180		
WEIGHT (1000 LB)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10
180	0	16.0	18.2	20.8	23.4	26.6	30.5	31.9	36.3	41.8	41.3	47.0	54.2	51.3	58.5	67.7	60.8	69.3	80.6
	10	16.6	18.8	21.5	24.2	27.5	31.5	33.0	37.5	43.1	42.6	48.5	56.0	53.0	60.3	69.9	62.7	71.5	83.1
	15	16.8	19.1	21.8	24.6	28.0	32.0	33.5	38.1	43.8	43.3	49.2	56.8	53.7	61.2	70.9	63.6	72.5	84.3
	20	17.1	19.4	22.1	25.0	28.3	32.5	34.0	38.6	44.4	43.8	49.9	57.5	54.4	62.0	71.8	64.4	73.4	85.3
	30	17.5	19.9	22.7	25.6	29.1	33.3	34.9	39.6	45.5	45.0	51.1	58.9	55.8	63.5	73.5	66.0	75.2	87.3
	40	17.8	20.2	23.0	26.0	29.5	33.8	35.4	40.2	46.2	45.7	52.0	60.0	56.8	64.7	75.0	67.2	76.7	89.2
	50	17.8	20.2	23.1	26.1	29.7	34.1	35.6	40.6	46.7	46.2	52.7	60.9	57.6	65.8	76.4	68.4	78.2	91.3
160	0	14.7	16.7	19.0	21.3	24.2	27.8	29.0	32.9	37.8	37.3	42.5	49.0	46.3	52.7	61.0	55.6	63.4	73.6
	10	15.2	17.2	19.7	22.1	25.1	28.7	29.9	34.0	39.1	38.6	43.9	50.6	47.8	54.5	63.0	57.4	65.4	75.9
	15	15.4	17.5	20.0	22.4	25.4	29.1	30.4	34.5	39.7	39.1	44.5	51.3	48.5	55.2	63.9	58.2	66.3	76.9
	20	15.6	17.8	20.3	22.7	25.8	29.5	30.8	35.0	40.2	39.7	45.1	52.0	49.2	56.0	64.7	59.0	67.2	77.9
	30	16.1	18.2	20.8	23.3	26.5	30.3	31.6	35.9	41.2	40.7	46.3	53.3	50.4	57.4	66.2	60.4	68.8	79.7
	40	16.3	18.5	21.1	23.6	26.9	30.7	32.1	36.5	41.9	41.3	47.0	54.2	51.3	58.4	67.5	61.5	70.1	81.4
	50	16.3	18.5	21.2	23.7	27.0	30.9	32.3	36.8	42.3	41.7	47.6	54.9	51.9	59.2	68.7	62.5	71.4	83.1
140	0	13.4	15.2	17.3	19.2	21.8	25.0	25.9	29.5	33.8	33.3	37.9	43.6	41.3	47.0	54.3	49.7	56.7	65.6
	10	13.8	15.7	17.9	19.9	22.6	25.8	26.8	30.5	34.9	34.4	39.2	45.0	42.7	48.6	56.0	51.3	58.5	67.7
	15	14.0	15.9	18.2	20.2	22.9	26.2	27.2	30.9	35.5	34.9	39.7	45.7	43.3	49.3	56.8	52.1	59.3	68.7
	20	14.2	16.2	18.4	20.5	23.3	26.6	27.6	31.4	36.0	35.4	40.3	46.3	43.9	49.9	57.6	52.8	60.1	69.5
	30	14.6	16.6	18.9	21.0	23.9	27.3	28.3	32.2	36.9	36.4	41.3	47.5	45.0	51.2	59.0	54.1	61.6	71.2
	40	14.8	16.8	19.2	21.3	24.2	27.7	28.7	32.6	37.4	36.9	42.0	48.3	45.7	52.1	60.1	55.0	62.7	72.6
	50	14.8	16.8	19.2	21.4	24.3	27.8	28.9	32.9	37.8	37.2	42.4	48.8	46.2	52.7	61.0	55.8	63.7	74.0
120	0	12.0	13.6	15.6	17.1	19.5	22.2	22.9	26.0	29.8	29.2	33.2	38.2	36.1	41.1	47.3	43.5	49.5	57.2
	10	12.4	14.1	16.1	17.7	20.1	23.0	23.7	26.9	30.8	30.2	34.4	39.4	37.3	42.4	48.8	44.9	51.1	59.0
	15	12.6	14.3	16.3	18.0	20.4	23.3	24.0	27.3	31.3	30.7	34.9	40.0	37.8	43.0	49.5	45.5	51.8	59.8
	20	12.8	14.5	16.6	18.2	20.7	23.7	24.4	27.7	31.7	31.1	35.3	40.6	38.4	43.6	50.2	46.2	52.5	60.6
	30	13.2	14.9	17.0	18.7	21.3	24.3	25.0	28.4	32.6	31.9	36.3	41.6	39.3	44.7	51.5	47.3	53.8	62.1
	40	13.3	15.1	17.2	19.0	21.5	24.6	25.4	28.8	33.0	32.4	36.8	42.3	39.9	45.4	52.3	48.1	54.8	63.3
	50	13.3	15.1	17.3	19.0	21.6	24.7	25.5	29.0	33.3	32.6	37.1	42.7	40.3	45.9	53.0	48.7	55.5	64.3
100	0	10.7	12.2	13.9	15.0	17.1	19.5	19.9	22.6	25.8	25.2	28.6	32.8	30.9	35.1	40.3	37.0	42.1	48.5
	10	11.1	12.6	14.3	15.5	17.6	20.1	20.6	23.3	26.7	26.0	29.6	33.9	31.9	36.3	41.7	38.2	43.4	50.0
	15	11.2	12.8	14.6	15.8	17.9	20.4	20.9	23.7	27.1	26.4	30.0	34.4	32.4	36.8	42.3	38.8	44.1	50.8
	20	11.4	13.0	14.8	16.0	18.2	20.7	21.2	24.0	27.5	26.8	30.4	34.9	32.8	37.3	42.8	39.3	44.7	51.4
	30	11.7	13.3	15.2	16.4	18.7	21.3	21.7	24.7	28.2	27.5	31.2	35.8	33.7	38.3	43.9	40.3	45.8	52.7
	40	11.9	13.5	15.3	16.6	18.9	21.6	22.0	25.0	28.6	27.9	31.7	36.3	34.2	38.9	44.6	40.9	46.6	53.6
	50	11.9	13.5	15.4	16.7	18.9	21.6	22.1	25.1	28.8	28.0	31.9	36.6	34.4	39.2	45.1	41.3	47.1	54.3

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION

Recommended Brake Cooling Schedule

Adjusted Brake Energy Per Brake (Millions of Foot Pounds)

No Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.6	15.9	24.8	34.3	44.3	54.6	65.2	76.0	86.9
	MAX AUTO	7.1	14.7	22.8	31.5	40.9	51.1	62.0	73.7	86.4
	AUTOBRAKE 3	6.6	13.5	20.8	28.5	36.9	45.9	55.7	66.5	78.4
	AUTOBRAKE 2	6.0	12.1	18.4	25.1	32.2	40.0	48.4	57.8	68.1
	AUTOBRAKE 1	5.6	11.0	16.4	22.1	28.0	34.4	41.5	49.4	58.3

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.2	15.0	23.4	32.2	41.5	51.2	61.2	71.5	82.1
	MAX AUTO	5.9	12.3	19.4	27.2	35.7	45.0	55.1	66.2	78.3
	AUTOBRAKE 3	4.1	8.8	14.0	20.0	26.6	34.0	42.1	51.1	60.9
	AUTOBRAKE 2	2.2	4.8	8.1	11.9	16.3	21.4	27.2	33.6	40.8
	AUTOBRAKE 1	1.7	3.5	5.5	7.9	10.7	14.1	18.3	23.3	29.2

Cooling Time (Minutes) - Category H Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category P Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)							
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS							
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	35.2	45.9			
GROUND									

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes**
Reference Brake Energy Per Brake (Millions of Foot Pounds)

		WIND CORRECTED BRAKES ON SPEED (KIAS)															
		60				100				140				180			
WEIGHT (1000 LB)	OAT (°C)	PRESSURE ALTITUDE (1000 FT)															
		10	12	14	14.5	10	12	14	14.5	10	12	14	14.5	10	12	14	14.5
180	0	12.7	13.4	14.1	14.3	30.5	32.3	34.3	34.8	54.2	57.7	61.6	62.7	80.6	86.3		
	10	13.2	13.9	14.6	14.8	31.5	33.4	35.4	36.0	56.0	59.6	63.6	64.7	83.1	89.0		
	15	13.4	14.1	14.9	15.1	32.0	33.9	35.9	36.5	56.8	60.4	64.5	65.6	84.3	90.2		
	20	13.6	14.3	15.1	15.3	32.5	34.4	36.4	37.0	57.5	61.2	65.3	66.5	85.3	91.3		
	30	13.9	14.7	15.5	15.7	33.3	35.3	37.4	38.0	58.9	62.7	66.9	68.1	87.3	93.4		
	40	14.1	14.9	15.7	15.9	33.8	35.8	37.9	38.5	60.0	63.9	68.2	69.4	89.2	95.5		
50	14.1	14.9	15.7	15.9	34.1	36.1	38.3	38.9	60.9	64.9	69.4	70.6	91.3	97.9			
160	0	11.8	12.4	13.1	13.3	27.8	29.4	31.1	31.6	49.0	52.0	55.5	56.5	73.6	78.6	84.5	86.1
	10	12.2	12.8	13.5	13.7	28.7	30.3	32.1	32.6	50.6	53.7	57.3	58.3	75.9	81.1	87.1	88.8
	15	12.4	13.0	13.7	13.9	29.1	30.8	32.6	33.1	51.3	54.5	58.1	59.1	76.9	82.2	88.3	90.0
	20	12.6	13.2	13.9	14.1	29.5	31.2	33.1	33.6	52.0	55.2	58.9	59.9	77.9	83.2	89.3	91.0
	30	12.9	13.6	14.3	14.5	30.3	32.1	33.9	34.5	53.3	56.6	60.3	61.3	79.7	85.2	91.4	93.1
	40	13.1	13.8	14.5	14.7	30.7	32.5	34.4	35.0	54.2	57.6	61.4	62.5	81.4	87.0	93.4	95.2
50	13.1	13.8	14.5	14.7	30.9	32.7	34.7	35.2	54.9	58.4	62.4	63.5	83.1	89.0	95.8	97.7	
140	0	10.8	11.4	12.0	12.2	25.0	26.4	28.0	28.4	43.6	46.3	49.3	50.1	65.6	70.0	75.0	76.4
	10	11.2	11.8	12.5	12.7	25.8	27.3	28.9	29.3	45.0	47.8	50.9	51.7	67.7	72.3	77.4	78.8
	15	11.4	12.0	12.6	12.8	26.2	27.7	29.3	29.8	45.7	48.5	51.6	52.5	68.7	73.3	78.5	79.9
	20	11.6	12.2	12.8	13.0	26.6	28.1	29.7	30.2	46.3	49.2	52.3	53.2	69.5	74.2	79.4	80.9
	30	11.9	12.5	13.2	13.4	27.3	28.9	30.5	31.0	47.5	50.4	53.6	54.5	71.2	75.9	81.3	82.8
	40	12.0	12.7	13.3	13.5	27.7	29.3	31.0	31.5	48.3	51.3	54.5	55.4	72.6	77.5	83.0	84.6
50	12.0	12.7	13.4	13.6	27.8	29.4	31.2	31.7	48.8	51.9	55.3	56.2	74.0	79.1	84.8	86.4	
120	0	9.9	10.4	11.0	11.2	22.2	23.5	24.8	25.2	38.2	40.5	43.0	43.7	57.2	60.9	65.1	66.3
	10	10.3	10.8	11.4	11.6	23.0	24.3	25.7	26.1	39.4	41.8	44.4	45.1	59.0	62.8	67.1	68.3
	15	10.4	11.0	11.6	11.8	23.3	24.6	26.1	26.5	40.0	42.4	45.1	45.8	59.8	63.7	68.1	69.3
	20	10.6	11.1	11.7	11.9	23.7	25.0	26.4	26.8	40.6	43.0	45.7	46.4	60.6	64.5	69.0	70.2
	30	10.9	11.4	12.0	12.2	24.3	25.7	27.1	27.5	41.6	44.1	46.9	47.6	62.1	66.1	70.6	71.9
	40	11.0	11.6	12.2	12.4	24.6	26.0	27.5	27.9	42.3	44.8	47.6	48.4	63.3	67.4	72.0	73.3
50	11.0	11.6	12.2	12.4	24.7	26.1	27.7	28.1	42.7	45.3	48.2	49.0	64.3	68.5	73.3	74.7	
100	0	9.0	9.5	10.0	10.2	19.5	20.6	21.7	22.0	32.8	34.7	36.9	37.5	48.5	51.5	54.9	55.9
	10	9.4	9.9	10.4	10.5	20.1	21.3	22.5	22.8	33.9	35.9	38.1	38.7	50.0	53.2	56.7	57.7
	15	9.5	10.0	10.5	10.7	20.4	21.6	22.8	23.1	34.4	36.4	38.6	39.2	50.8	54.0	57.5	58.5
	20	9.6	10.2	10.7	10.9	20.7	21.9	23.1	23.5	34.9	36.9	39.2	39.8	51.4	54.7	58.3	59.3
	30	9.9	10.4	11.0	11.2	21.3	22.5	23.7	24.1	35.8	37.9	40.2	40.8	52.7	56.0	59.7	60.7
	40	10.0	10.6	11.1	11.3	21.6	22.8	24.1	24.4	36.3	38.5	40.8	41.5	53.6	57.0	60.8	61.8
50	10.0	10.6	11.1	11.3	21.6	22.9	24.2	24.5	36.6	38.8	41.2	41.9	54.3	57.8	61.7	62.8	

*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

ADVISORY INFORMATION**Recommended Brake Cooling Schedule - High Altitudes****Adjusted Brake Energy Per Brake (Millions of Foot Pounds)****No Reverse Thrust**

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.6	15.9	24.8	34.3	44.3	54.6	65.2	76.0	86.9
	MAX AUTO	7.1	14.7	22.8	31.5	40.9	51.1	62.0	73.7	86.4
	AUTOBRAKE 3	6.6	13.5	20.8	28.5	36.9	45.9	55.7	66.5	78.4
	AUTOBRAKE 2	6.0	12.1	18.4	25.1	32.2	40.0	48.4	57.8	68.1
	AUTOBRAKE 1	5.6	11.0	16.4	22.1	28.0	34.4	41.5	49.4	58.3

Two Engine Detent Reverse Thrust

		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
EVENT		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.2	15.0	23.4	32.2	41.5	51.2	61.2	71.5	82.1
	MAX AUTO	5.9	12.3	19.4	27.2	35.7	45.0	55.1	66.2	78.3
	AUTOBRAKE 3	4.1	8.8	14.0	20.0	26.6	34.0	42.1	51.1	60.9
	AUTOBRAKE 2	2.2	4.8	8.1	11.9	16.3	21.4	27.2	33.6	40.8
	AUTOBRAKE 1	1.7	3.5	5.5	7.9	10.7	14.1	18.3	23.3	29.2

Cooling Time (Minutes) - Category H Steel Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	10	20	30	40	50	60			
GROUND										

Cooling Time (Minutes) - Category P Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)							
		16 & BELOW	17	19	20.9	23.5	26.9	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS							
		UP TO 2.5	2.6	3	3.3	3.8	4.5	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	CAUTION		FUSE PLUG MELT ZONE
	REQUIRED	6.7	16.0	24.1	35.2	45.9			
GROUND									

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Intentionally
Blank

Performance Inflight
Engine Inoperative
Chapter PI
Section 63
ENGINE INOP
Initial Max Continuous %N1
Based on .80M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.9	96.6	96.4	96.2	96.0	95.5	95.1	94.8	94.2
15	97.5	97.2	96.9	96.8	96.7	96.3	95.8	95.6	95.0
10	98.1	97.9	97.5	97.4	97.4	97.0	96.6	96.4	95.9
5	98.1	98.6	98.4	98.1	98.1	97.8	97.4	97.2	96.7
0	97.3	98.5	99.2	99.0	98.9	98.6	98.2	98.0	97.7
-5	96.5	97.8	98.9	99.8	99.7	99.3	99.0	98.8	98.5
-10	95.8	97.0	98.2	99.4	100.5	100.2	99.9	99.7	99.5
-15	95.0	96.2	97.4	98.6	99.9	101.0	100.8	100.6	100.4
-20	94.2	95.4	96.6	97.8	99.1	100.2	100.8	100.6	100.4
-25	93.4	94.6	95.8	97.0	98.3	99.4	100.0	99.8	99.6
-30	92.6	93.8	95.0	96.2	97.5	98.6	99.1	98.9	98.7
-35	91.7	93.0	94.1	95.3	96.6	97.7	98.3	98.1	97.9
-40	90.9	92.2	93.3	94.5	95.8	96.9	97.4	97.2	97.0

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE ON	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

ENGINE INOP

**Max Continuous %N1
37000 FT to 29000 FT Pressure Altitudes**

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.6	97.6	98.5	99.4	100.2	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.1	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.5	97.4	98.3	99.2	100.1	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.3	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.4	98.3	99.2	100.0	100.8	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.3	98.2	99.1	100.0	100.9	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.1	98.0	98.9	99.7	100.6	101.5	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	98.1	99.0	99.9	100.8	101.6	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.1	99.9	100.1	99.1	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

ENGINE INOP**Max Continuous %N1****27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT												TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT												TAT (°C)	
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT												TAT (°C)	
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

ENGINE INOP

Max Continuous %N1
18000 FT to 12000 FT Pressure Altitudes

18000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.34	98.5	99.3	100.2	101.0	101.8	102.6	101.6	100.3	99.2	98.1	97.0	95.9	
200	.42	98.7	99.6	100.4	101.2	102.0	102.8	103.1	101.7	100.4	99.3	98.3	97.3	
240	.51	97.8	98.7	99.5	100.3	101.1	101.9	102.7	102.5	101.1	99.9	99.0	98.1	
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8	
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2	
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6	
16000 FT PRESS ALT					TAT (°C)									
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.33	97.1	98.0	98.8	99.6	100.4	101.2	101.6	100.3	99.1	98.1	97.1	96.1	
200	.41	98.0	98.8	99.6	100.4	101.2	102.0	102.8	102.5	101.3	100.2	99.3	98.3	
240	.49	97.1	97.9	98.7	99.5	100.3	101.1	101.9	102.7	101.8	100.5	99.6	98.7	
280	.57	95.6	96.4	97.2	98.0	98.8	99.6	100.3	101.1	101.8	100.9	99.8	99.0	
320	.64	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.2	99.4	
360	.72	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.9	99.6	
14000 FT PRESS ALT					TAT (°C)									
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30	
160	.31	96.6	97.4	98.2	99.0	99.8	100.6	100.4	99.1	98.0	97.1	96.2	95.3	
200	.39	97.1	97.9	98.7	99.5	100.3	101.1	101.8	101.5	101.0	100.1	99.3	98.4	
240	.47	96.6	97.4	98.2	99.0	99.8	100.6	101.3	101.8	101.1	100.3	99.5	98.7	
280	.54	95.5	96.3	97.1	97.8	98.6	99.4	100.1	100.9	101.0	100.1	99.2	98.5	
320	.62	94.1	94.9	95.7	96.5	97.2	98.0	98.7	99.5	100.2	100.3	99.5	98.8	
360	.69	92.2	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.6	99.0	
12000 FT PRESS ALT					TAT (°C)									
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35	
160	.30	96.3	97.0	97.8	98.6	99.4	100.1	99.3	98.1	97.1	96.3	95.4	94.5	
200	.38	97.1	97.9	98.7	99.5	100.3	101.0	101.5	100.8	99.8	99.0	98.2	97.3	
240	.45	96.5	97.3	98.0	98.8	99.6	100.3	101.1	101.0	100.1	99.4	98.6	97.9	
280	.52	95.5	96.3	97.0	97.8	98.6	99.3	100.0	100.8	100.3	99.4	98.6	98.0	
320	.60	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.4	100.2	99.7	98.9	98.2	
360	.67	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.4	99.1	98.5	

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

ENGINE INOP**Max Continuous %N1****10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT		TAT (°C)											
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT		TAT (°C)											
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

%N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2

ENGINE INOP

MAX CONTINUOUS THRUST

Driftdown Speed/Level Off Altitude
100 ft/min residual rate of climb

WEIGHT (1000 LB)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	183	258	17800	16600	15400
180	173	251	19300	18100	16900
170	164	244	20700	19700	18400
160	154	237	22000	21100	20000
150	145	230	23500	22600	21600
140	135	222	25000	24200	23200
130	125	214	26900	26000	24900
120	115	206	28900	28000	26900
110	106	198	30800	30000	29100
100	96	189	32700	32000	31100
90	87	180	34900	34200	33300

Includes APU fuel burn.

ENGINE INOP**MAX CONTINUOUS THRUST****Driftdown/LRC Cruise Range Capability****Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEAD WIND COMPONENT (KTS)						TAIL WIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
141	130	121	113	106	100	94	89	85	81	77
282	260	242	226	212	200	188	179	170	162	154
422	390	363	339	318	300	283	268	255	243	232
563	520	484	452	424	400	378	358	340	324	310
703	650	604	565	530	500	472	448	426	406	387
843	779	725	678	636	600	567	537	511	487	465
982	909	846	791	742	700	661	627	596	569	543
1122	1038	966	903	848	800	756	717	682	650	621
1262	1168	1087	1016	954	900	851	807	767	732	699
1401	1297	1207	1129	1060	1000	945	897	853	813	777
1541	1426	1328	1242	1166	1100	1040	986	938	895	855
1680	1556	1448	1355	1272	1200	1135	1076	1024	976	933
1820	1685	1569	1467	1378	1300	1229	1166	1109	1057	1010
1960	1815	1689	1580	1484	1400	1324	1256	1195	1139	1088
2100	1944	1810	1693	1590	1500	1418	1346	1280	1220	1166
2240	2074	1931	1806	1697	1600	1513	1435	1365	1302	1244
2381	2204	2052	1919	1803	1700	1607	1525	1450	1383	1321
2522	2334	2173	2032	1909	1800	1702	1615	1536	1464	1399

Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 LB)											TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 LB)											
	90	100	110	120	130	140	150	160	170	180	190	
100	0.8	0.8	0.8	0.9	0.9	1.0	1.1	1.1	1.2	1.2	1.2	0:17
200	1.8	1.9	2.0	2.1	2.2	2.4	2.5	2.6	2.7	2.8	3.0	0:35
300	2.8	3.0	3.2	3.4	3.6	3.8	4.1	4.3	4.5	4.7	4.9	0:52
400	3.8	4.1	4.4	4.7	5.0	5.3	5.7	5.9	6.3	6.6	6.9	1:09
500	4.7	5.1	5.5	5.9	6.3	6.7	7.1	7.5	7.9	8.3	8.7	1:27
600	5.6	6.1	6.6	7.0	7.6	8.1	8.5	9.0	9.5	10.0	10.5	1:44
700	6.5	7.1	7.7	8.2	8.8	9.4	10.0	10.5	11.1	11.6	12.3	2:01
800	7.4	8.1	8.7	9.4	10.0	10.7	11.4	12.0	12.6	13.3	14.0	2:18
900	8.3	9.1	9.8	10.5	11.3	12.0	12.7	13.4	14.2	14.9	15.7	2:35
1000	9.2	10.0	10.8	11.6	12.5	13.3	14.1	14.9	15.7	16.5	17.4	2:52
1100	10.1	11.0	11.9	12.7	13.7	14.6	15.5	16.3	17.3	18.2	19.1	3:09
1200	10.9	11.9	12.9	13.8	14.9	15.8	16.8	17.8	18.8	19.7	20.8	3:26
1300	11.8	12.9	13.9	14.9	16.0	17.1	18.2	19.2	20.3	21.3	22.5	3:43
1400	12.6	13.8	14.9	16.0	17.2	18.4	19.5	20.6	21.8	22.9	24.1	3:60
1500	13.5	14.7	15.9	17.1	18.4	19.6	20.8	22.0	23.2	24.5	25.8	4:17
1600	14.3	15.6	16.9	18.2	19.5	20.8	22.1	23.4	24.7	26.0	27.4	4:34
1700	15.1	16.5	17.9	19.2	20.7	22.0	23.4	24.8	26.2	27.5	29.0	4:51
1800	16.0	17.4	18.9	20.3	21.8	23.3	24.7	26.1	27.6	29.1	30.6	5:09

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at LRC speed.

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Altitude Capability
100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA+10°C & BELOW	ISA+15°C	ISA+20°C
190	14900	12600	9600
180	16700	14900	12100
170	18500	16800	14600
160	20300	18700	16700
150	21600	20500	18700
140	23100	22000	20600
130	24600	23500	22200
120	26800	25300	24000
110	29200	27900	26300
100	31300	30400	29100
90	33500	32600	31500

With engine anti-ice on, decrease altitude capability by 1300 ft.
With engine and wing anti-ice on, decrease altitude capability by 5900 ft.

ENGINE INOP**MAX CONTINUOUS THRUST****Long Range Cruise Control**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)										
		10	15	17	19	21	23	25	27	29	31	33
180	%N1	90.8	94.3	96.4								
	MACH	.540	.575	.590								
	KIAS	300	291	287								
	FF/ENG	6475	6334	6327								
170	%N1	89.4	92.8	94.6	97.0							
	MACH	.529	.567	.579	.594							
	KIAS	293	286	282	278							
	FF/ENG	6145	6019	5954	5977							
160	%N1	88.0	91.5	92.9	94.9	97.7						
	MACH	.517	.556	.570	.583	.599						
	KIAS	287	280	277	273	269						
	FF/ENG	5815	5696	5624	5580	5652						
150	%N1	86.5	90.0	91.4	93.0	95.2	98.2					
	MACH	.505	.543	.559	.572	.587	.603					
	KIAS	279	274	271	267	264	260					
	FF/ENG	5487	5369	5309	5237	5227	5345					
140	%N1	84.9	88.3	89.8	91.2	93.0	95.4					
	MACH	.491	.530	.546	.561	.575	.590					
	KIAS	272	267	265	262	258	254					
	FF/ENG	5161	5041	4984	4922	4866	4890					
130	%N1	83.1	86.6	88.0	89.5	91.0	93.0	95.6				
	MACH	.477	.515	.531	.547	.563	.577	.592				
	KIAS	264	260	258	255	252	248	245				
	FF/ENG	4831	4714	4658	4601	4547	4506	4560				
120	%N1	81.3	84.8	86.2	87.7	89.1	90.7	92.8	95.6			
	MACH	.462	.500	.516	.532	.548	.564	.578	.593			
	KIAS	255	252	250	248	245	243	239	235			
	FF/ENG	4497	4387	4332	4276	4227	4181	4157	4223			
110	%N1	79.3	82.8	84.2	85.6	87.1	88.6	90.2	92.4	95.4		
	MACH	.446	.483	.499	.515	.531	.548	.564	.578	.594		
	KIAS	246	243	241	240	238	235	233	229	225		
	FF/ENG	4167	4061	4007	3952	3903	3859	3829	3817	3882		
100	%N1	77.1	80.6	82.0	83.5	84.9	86.4	87.9	89.6	91.8	94.9	
	MACH	.429	.465	.480	.496	.512	.529	.546	.562	.577	.593	
	KIAS	237	234	232	231	229	227	225	222	219	215	
	FF/ENG	3845	3730	3682	3629	3582	3538	3504	3488	3476	3537	
90	%N1	74.9	78.2	79.6	81.1	82.5	84.0	85.5	87.0	88.6	90.9	94.0
	MACH	.411	.445	.460	.476	.492	.509	.525	.543	.560	.575	.591
	KIAS	227	223	222	221	220	218	216	214	212	208	205
	FF/ENG	3529	3401	3353	3306	3261	3219	3185	3164	3148	3135	3187

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (KTS)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
295	270	248	230	214	200	190	180	172	164	158
594	543	498	461	429	400	379	361	344	328	315
895	817	749	692	643	600	569	541	516	492	472
1196	1091	999	923	858	800	759	722	687	656	629
1500	1368	1252	1155	1073	1000	949	902	859	820	785
1805	1645	1504	1387	1288	1200	1138	1081	1030	983	942
2113	1924	1758	1621	1504	1400	1327	1261	1201	1146	1098
2422	2204	2013	1854	1719	1600	1517	1442	1372	1309	1253
2733	2485	2267	2087	1935	1800	1707	1621	1543	1472	1409

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	3.1	0:42	2.7	0:41	2.4	0:39	2.2	0:38	2.0	0:37
400	6.3	1:22	5.7	1:19	5.2	1:16	4.8	1:13	4.6	1:11
600	9.5	2:03	8.8	1:57	8.1	1:52	7.4	1:48	7.1	1:45
800	12.7	2:44	11.7	2:36	10.8	2:29	10.0	2:23	9.6	2:19
1000	15.9	3:25	14.7	3:15	13.6	3:06	12.6	2:59	12.1	2:53
1200	19.0	4:07	17.6	3:55	16.3	3:44	15.1	3:35	14.5	3:27
1400	22.1	4:49	20.5	4:35	19.0	4:22	17.6	4:11	16.9	4:02
1600	25.1	5:32	23.3	5:15	21.6	5:00	20.1	4:47	19.2	4:37
1800	28.1	6:15	26.1	5:56	24.2	5:39	22.6	5:24	21.5	5:12

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)					
	90	110	130	150	170	190
2	-0.2	-0.1	0.0	0.2	0.4	0.8
4	-0.5	-0.2	0.0	0.5	1.2	2.0
6	-0.7	-0.4	0.0	0.9	1.9	3.1
8	-1.0	-0.5	0.0	1.2	2.6	4.2
10	-1.3	-0.7	0.0	1.5	3.2	5.3
12	-1.6	-0.8	0.0	1.8	3.9	6.3
14	-1.8	-0.9	0.0	2.0	4.5	7.3
16	-2.1	-1.1	0.0	2.3	5.1	8.3
18	-2.4	-1.2	0.0	2.6	5.7	9.2
20	-2.6	-1.3	0.0	2.8	6.3	10.1
22	-2.9	-1.5	0.0	3.1	6.8	11.0
24	-3.2	-1.6	0.0	3.3	7.3	11.8
26	-3.5	-1.7	0.0	3.5	7.8	12.6
28	-3.7	-1.9	0.0	3.7	8.3	13.4
30	-4.0	-2.0	0.0	3.9	8.8	14.1

Includes APU fuel burn.

ENGINE INOP
MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
190	%N1	81.6	84.5	88.7	93.4				
	KIAS	252	252	254	255				
	FF/ENG	6130	6130	6150	6290				
180	%N1	80.1	83.0	87.1	91.6	99.7			
	KIAS	245	246	247	248	250			
	FF/ENG	5810	5790	5800	5900	6310			
170	%N1	78.6	81.4	85.5	90.0	96.7			
	KIAS	238	239	240	241	242			
	FF/ENG	5500	5460	5460	5520	5750			
160	%N1	77.0	79.7	83.9	88.2	93.8			
	KIAS	231	231	232	233	235			
	FF/ENG	5180	5140	5120	5160	5270			
150	%N1	75.4	78.0	82.1	86.3	91.2			
	KIAS	224	224	225	226	227			
	FF/ENG	4870	4830	4790	4810	4860			
140	%N1	73.4	76.2	80.2	84.4	89.0	96.9		
	KIAS	216	216	217	218	219	221		
	FF/ENG	4560	4510	4460	4470	4490	4790		
130	%N1	71.4	74.3	78.1	82.4	86.9	93.0		
	KIAS	208	209	209	210	211	213		
	FF/ENG	4250	4200	4150	4130	4130	4270		
120	%N1	69.3	72.1	76.1	80.3	84.6	89.7		
	KIAS	199	200	201	202	203	204		
	FF/ENG	3950	3890	3840	3800	3780	3840		
110	%N1	67.1	69.8	73.9	77.9	82.3	87.0	95.1	
	KIAS	191	191	192	193	194	195	196	
	FF/ENG	3660	3590	3530	3490	3450	3470	3730	
100	%N1	64.7	67.3	71.4	75.4	79.7	84.2	90.1	
	KIAS	182	182	183	184	184	185	187	
	FF/ENG	3360	3290	3230	3180	3130	3130	3240	
90	%N1	61.9	64.7	68.6	72.7	76.9	81.4	86.2	95.7
	KIAS	176	176	176	176	176	176	177	178
	FF/ENG	3060	3000	2940	2880	2810	2800	2850	3130

This table includes 5% additional fuel for holding in a racetrack pattern.

Performance Inflight

Alternate Mode EEC

Chapter PI

Section 64

ALTERNATE MODE EEC

Alternate Mode EEC Limit Weight

PERFORMANCE LIMIT	NORMAL MODE PERFORMANCE LIMIT WEIGHT (1000 LB)									
	100	110	120	130	140	150	160	170	180	190
FIELD	95.2	104.7	114.2	123.7	133.0	142.5	151.9	161.3	170.8	180.3
CLIMB	93.5	102.7	112.2	121.5	130.9	140.3	149.7	159.1	168.4	177.9
OBSTACLE	93.5	102.7	112.2	121.7	131.0	140.4	149.8	159.1	168.6	177.8
TIRE	99.6	109.6	119.6	129.6	139.6	149.6	159.6	169.6	179.6	189.6
BRAKE	98.5	108.5	118.5	128.5	138.5	148.5	158.5	168.5	178.5	188.5

Alternate Mode EEC Takeoff Speed Adjustment

TAKEOFF SPEEDS	TAKEOFF SPEED ADJUSTMENT (KTS)
DRY V1	+1
WET V1	+2
VR	+1
V2	0

Alternate Mode EEC Max Takeoff %N1

Based on engine bleeds for packs on, engine and wing anti-ice on or off

AIRPORT OAT		AIRPORT PRESSURE ALTITUDE (FT)													
°C	°F	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
60	140	93.5	94.0	94.5	94.7	94.5	94.8	95.0	95.1	94.7	94.1	93.8	93.7	93.7	
55	131	94.6	95.0	95.2	95.4	95.3	95.5	95.8	95.9	95.6	95.0	94.5	93.8	93.1	
50	122	95.4	96.0	96.5	96.4	96.1	96.3	96.5	96.8	96.5	96.0	95.4	94.8	94.1	
45	113	96.1	96.7	97.2	97.4	97.4	97.4	97.4	97.6	97.3	96.8	96.3	95.7	95.1	
40	104	96.8	97.5	98.0	98.2	98.1	98.2	98.3	98.3	98.1	97.7	97.2	96.6	96.0	
35	95	97.5	98.3	99.0	99.2	99.1	99.2	99.3	99.3	99.0	98.5	98.0	97.5	96.9	
30	86	97.1	98.6	100.4	100.1	100.1	100.0	100.1	100.2	99.9	99.6	99.2	98.4	97.8	
25	77	96.3	97.9	99.7	100.0	100.3	100.4	100.4	100.4	100.3	100.3	100.2	99.2	98.7	
20	68	95.6	97.1	99.0	99.3	99.6	99.8	100.1	100.4	100.4	100.4	100.3	99.6	98.8	
15	59	94.8	96.3	98.3	98.6	98.9	99.1	99.4	99.6	99.9	100.2	100.3	99.8	99.1	
10	50	94.0	95.6	97.5	97.9	98.1	98.4	98.6	98.9	99.2	99.4	99.7	99.6	99.5	
5	41	93.2	94.8	96.8	97.1	97.4	97.6	97.9	98.1	98.4	98.7	99.0	98.8	98.7	
0	32	92.4	94.0	96.0	96.4	96.6	96.9	97.1	97.4	97.6	97.9	98.2	98.1	97.9	
-5	23	91.6	93.2	95.3	95.6	95.9	96.1	96.4	96.6	96.9	97.2	97.4	97.3	97.2	
-10	14	90.8	92.4	94.5	94.8	95.1	95.3	95.6	95.8	96.1	96.4	96.6	96.5	96.4	
-15	5	90.0	91.6	93.7	94.1	94.3	94.6	94.8	95.1	95.3	95.6	95.9	95.7	95.6	
-20	-4	89.2	90.8	93.0	93.3	93.5	93.8	94.0	94.3	94.5	94.8	95.1	94.9	94.8	
-25	-13	88.3	90.0	92.2	92.5	92.7	93.0	93.2	93.5	93.7	94.0	94.3	94.1	94.0	
-30	-22	87.5	89.1	91.4	91.7	91.9	92.2	92.4	92.7	92.9	93.2	93.4	93.3	93.2	
-35	-31	86.6	88.3	90.6	90.9	91.1	91.4	91.6	91.8	92.1	92.4	92.6	92.5	92.4	
-40	-40	85.8	87.4	89.7	90.1	90.3	90.5	90.8	91.0	91.3	91.5	91.8	91.7	91.5	
-45	-49	84.9	86.6	88.9	89.2	89.5	89.7	89.9	90.2	90.4	90.7	90.9	90.8	90.7	
-50	-58	84.0	85.7	88.1	88.4	88.6	88.9	89.1	89.3	89.6	89.8	90.1	90.0	89.8	

%N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)												
	-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
PACKS OFF	0.7	0.8	0.8	0.9	0.9	0.9	1.0	1.0	1.0	1.0	1.0	1.0	1.0

Intentionally
Blank

Performance Inflight

Gear Down

Chapter PI

Section 65

GEAR DOWN

Long Range Cruise Altitude Capability
Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
190	14400	11200	8200
180	16900	14100	11000
170	19600	16800	14000
160	22000	19400	16700
150	24300	22200	19300
140	26500	25000	22400
130	28800	27300	25500
120	30800	29700	28100
110	32700	31700	30500
100	34700	33700	32600
90	36900	35900	34800

GEAR DOWN

Long Range Cruise Control

WEIGHT (1000LB)		PRESSUREALTITUDE(1000FT)									
		10	21	23	25	27	29	31	33	35	37
180	%N1	85.1									
	MACH	.473									
	KIAS	262									
	FF/ENG	5168									
170	%N1	83.5	93.0								
	MACH	.460	.560								
	KIAS	254	251								
	FF/ENG	4868	4822								
160	%N1	81.9	91.1	93.3							
	MACH	.447	.548	.565							
	KIAS	247	245	243							
	FF/ENG	4571	4524	4525							
150	%N1	80.1	89.4	91.2	93.7						
	MACH	.434	.535	.552	.569						
	KIAS	240	239	237	235						
	FF/ENG	4280	4241	4214	4243						
140	%N1	78.3	87.5	89.2	91.2	94.0					
	MACH	.420	.518	.538	.555	.573					
	KIAS	232	232	231	229	227					
	FF/ENG	3998	3938	3932	3920	3970					
130	%N1	76.4	85.4	87.3	89.0	91.1	94.2				
	MACH	.406	.500	.521	.541	.558	.576				
	KIAS	224	223	224	223	221	218				
	FF/ENG	3719	3633	3633	3634	3637	3696				
120	%N1	74.4	83.3	85.0	86.8	88.6	90.9	94.1			
	MACH	.391	.482	.501	.523	.543	.560	.579			
	KIAS	216	215	215	215	214	212	210			
	FF/ENG	3443	3336	3330	3338	3347	3354	3420			
110	%N1	72.2	81.0	82.7	84.4	86.2	88.0	90.5	93.8		
	MACH	.375	.462	.481	.501	.523	.543	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	3172	3046	3037	3039	3055	3063	3069	3140		
100	%N1	69.7	78.5	80.2	81.9	83.6	85.5	87.3	89.8	93.2	
	MACH	.359	.442	.460	.479	.499	.521	.542	.560	.580	
	KIAS	198	197	197	197	196	197	196	194	192	
	FF/ENG	2910	2764	2749	2750	2761	2773	2779	2784	2854	
90	%N1	67.1	75.7	77.4	79.1	80.8	82.6	84.4	86.4	88.8	92.6
	MACH	.343	.421	.438	.456	.475	.496	.518	.540	.558	.578
	KIAS	189	187	187	187	187	187	187	186	184	182
	FF/ENG	2659	2493	2468	2464	2476	2482	2489	2495	2500	2575

GEAR DOWN

Long Range Cruise Enroute Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
324	290	260	236	217	200	188	178	168	160	153
655	584	523	474	435	400	377	357	338	321	307
990	881	787	713	653	600	566	535	507	482	460
1330	1181	1054	953	871	800	755	713	676	642	613
1675	1485	1323	1195	1091	1000	943	891	844	803	766
2026	1792	1593	1436	1310	1200	1131	1069	1013	962	918
2383	2104	1866	1680	1530	1400	1319	1246	1180	1121	1069
2746	2420	2142	1925	1751	1600	1507	1423	1347	1279	1220
3116	2740	2420	2171	1972	1800	1695	1600	1514	1437	1370

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
200	5.3	0:49	4.8	0:47	4.2	0:44	3.8	0:43	3.5	0:42
400	10.9	1:37	10.0	1:32	8.9	1:25	8.2	1:21	7.7	1:18
600	16.3	2:26	15.1	2:18	13.5	2:07	12.5	2:00	11.8	1:55
800	21.6	3:16	20.1	3:05	17.9	2:49	16.7	2:39	15.8	2:32
1000	26.8	4:07	25.0	3:53	22.3	3:33	20.9	3:20	19.7	3:09
1200	31.9	4:59	29.7	4:41	26.6	4:17	24.9	4:01	23.6	3:48
1400	36.9	5:52	34.4	5:31	30.8	5:01	28.9	4:42	27.3	4:26
1600	41.8	6:47	39.0	6:22	35.0	5:47	32.7	5:25	31.0	5:06
1800	46.6	7:43	43.4	7:14	39.0	6:34	36.5	6:08	34.6	5:46

Fuel Required Adjustments (1000 LB)

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
5	-0.7	-0.4	0.0	0.7	1.5
10	-1.5	-0.8	0.0	1.3	3.0
15	-2.2	-1.1	0.0	1.9	4.4
20	-3.0	-1.5	0.0	2.5	5.7
25	-3.8	-1.9	0.0	3.0	6.9
30	-4.5	-2.3	0.0	3.5	8.0
35	-5.3	-2.7	0.0	4.0	8.9
40	-6.1	-3.0	0.0	4.4	9.8
45	-6.9	-3.4	0.0	4.7	10.5
50	-7.7	-3.8	0.0	5.1	11.1

GEAR DOWN

Descent
VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (LB)	DISTANCE (NM)
41000	21	620	90
39000	20	610	86
37000	19	600	81
35000	19	590	77
33000	18	570	72
31000	17	560	68
29000	16	550	64
27000	16	540	60
25000	15	520	56
23000	14	510	52
21000	13	490	48
19000	12	480	44
17000	12	460	40
15000	11	440	36
10000	8	380	26
5000	6	310	16
1500	4	250	9

Allowances for a straight-in approach are included.

GEAR DOWN

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
190	%N1	76.4	79.0	83.3	87.7				
	KIAS	229	229	229	229				
	FF/ENG	5050	5020	5010	5050				
180	%N1	74.9	77.6	81.8	86.1	90.9			
	KIAS	225	225	225	225	225			
	FF/ENG	4790	4760	4740	4760	4800			
170	%N1	73.3	76.2	80.2	84.5	89.2			
	KIAS	220	220	220	220	220			
	FF/ENG	4540	4500	4470	4480	4500			
160	%N1	71.7	74.6	78.6	82.9	87.4			
	KIAS	215	215	215	215	215			
	FF/ENG	4290	4250	4210	4210	4210			
150	%N1	70.0	72.9	76.9	81.2	85.6	90.9		
	KIAS	211	211	211	211	211	211		
	FF/ENG	4050	4000	3960	3940	3930	4000		
140	%N1	68.3	71.1	75.2	79.4	83.8	88.5		
	KIAS	206	206	206	206	206	206		
	FF/ENG	3820	3760	3720	3690	3670	3700		
130	%N1	66.6	69.2	73.4	77.4	81.8	86.5	93.5	
	KIAS	200	200	200	200	200	200	200	
	FF/ENG	3580	3520	3470	3440	3400	3420	3580	
120	%N1	64.7	67.3	71.4	75.4	79.8	84.3	89.8	
	KIAS	194	194	194	194	194	194	194	
	FF/ENG	3350	3290	3230	3190	3150	3150	3240	
110	%N1	62.5	65.3	69.2	73.4	77.6	82.1	86.8	
	KIAS	189	189	189	189	189	189	189	
	FF/ENG	3120	3060	3000	2960	2900	2890	2950	
100	%N1	60.2	63.1	67.0	71.2	75.3	79.8	84.4	91.6
	KIAS	182	182	182	182	182	182	182	182
	FF/ENG	2880	2840	2780	2730	2670	2640	2680	2800
90	%N1	58.0	60.7	64.8	68.8	73.0	77.3	81.8	87.1
	KIAS	176	176	176	176	176	176	176	176
	FF/ENG	2670	2620	2570	2510	2450	2400	2440	2480

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight

Gear Down, Engine Inop

Chapter PI

Section 66

GEAR DOWN**ENGINE INOP****MAX CONTINUOUS THRUST****Driftdown Speed/Level Off Altitude****100 ft/min residual rate of climb**

WEIGHT (1000 LB)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
180	171	224	2800	1000	
170	162	219	5100	3500	1400
160	152	215	7300	5900	3900
150	143	210	9500	8200	6300
140	134	205	11600	10500	8800
130	124	200	13800	12900	11500
120	114	194	16100	15300	14400
110	105	189	18400	17600	16700
100	96	183	20700	19900	19000
90	86	177	22900	22100	21300

Includes APU fuel burn.

Long Range Cruise Altitude Capability**100 ft/min residual rate of climb**

WEIGHT (1000 LB)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
160	2600		
150	5400		
140	8200	3400	
130	10900	6500	4000
120	13400	9600	7300
110	16100	12400	10700
100	18900	15300	14300
90	21700	17900	17100
		20800	19800

GEAR DOWN

ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Control

WEIGHT (1000 LB)		PRESSURE ALTITUDE (1000 FT)								
		5	7	9	11	13	15	17	19	21
150	%N1	94.2	96.3							
	MACH	.384	.397							
	KIAS	232	232							
	FF/ENG	8126	8164							
140	%N1	92.1	93.8	96.1						
	MACH	.372	.385	.398						
	KIAS	225	225	224						
	FF/ENG	7546	7546	7597						
130	%N1	90.0	91.6	93.4	95.7					
	MACH	.361	.373	.385	.399					
	KIAS	218	217	217	216					
	FF/ENG	6988	6970	6969	7032					
120	%N1	87.8	89.3	91.0	92.7	95.2				
	MACH	.349	.360	.372	.385	.399				
	KIAS	211	210	209	208	208				
	FF/ENG	6461	6417	6397	6399	6465				
110	%N1	85.6	87.0	88.5	90.2	91.9	94.4	98.3		
	MACH	.337	.348	.359	.371	.383	.397	.412		
	KIAS	204	203	201	200	200	199	198		
	FF/ENG	5963	5897	5851	5833	5838	5886	6060		
100	%N1	83.3	84.6	86.0	87.5	89.1	90.9	93.3	97.3	
	MACH	.325	.335	.345	.356	.368	.381	.395	.409	
	KIAS	197	195	194	193	192	191	190	189	
	FF/ENG	5484	5406	5341	5296	5278	5273	5292	5435	
90	%N1	80.8	82.1	83.4	84.8	86.2	87.9	89.7	91.9	95.4
	MACH	.313	.322	.331	.341	.352	.364	.377	.391	.406
	KIAS	189	188	186	184	183	182	181	181	180
	FF/ENG	5027	4936	4859	4796	4752	4724	4702	4700	4813

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

Long Range Cruise Diversion Fuel and Time
Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
167	148	132	119	109	100	94	88	82	78	74
341	300	266	239	218	200	187	174	164	155	147
516	454	402	361	328	300	280	261	245	231	219
692	608	537	482	438	400	373	348	326	307	291
869	763	673	603	548	500	465	434	407	383	363
1048	919	809	725	658	600	558	521	488	459	434
1228	1076	947	847	768	700	651	607	568	535	506
1410	1234	1084	970	879	800	744	693	648	610	577
1593	1392	1222	1092	989	900	836	779	729	685	648
1778	1552	1361	1215	1100	1000	929	865	809	760	719

Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)	FUEL (1000 LB)	TIME (HR:MIN)
100	2.8	0:27	2.4	0:27	2.3	0:26
200	5.7	0:53	5.3	0:51	5.0	0:49
300	8.7	1:19	8.0	1:15	7.8	1:12
400	11.6	1:45	10.8	1:40	10.4	1:36
500	14.4	2:11	13.5	2:05	13.0	1:59
600	17.2	2:38	16.1	2:31	15.6	2:23
700	20.0	3:05	18.8	2:56	18.1	2:47
800	22.8	3:32	21.4	3:22	20.6	3:12
900	25.5	4:00	23.9	3:48	23.0	3:36
1000	28.2	4:27	26.5	4:14	25.4	4:01

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

**Long Range Cruise Diversion Fuel and Time
Fuel Required Adjustments (1000 LB)**

REFERENCE FUEL REQUIRED (1000 LB)	WEIGHT AT CHECK POINT (1000 LB)				
	90	110	130	150	170
2	-0.3	-0.2	0.0	0.3	0.5
4	-0.6	-0.3	0.0	0.6	1.2
6	-0.9	-0.5	0.0	1.0	1.8
8	-1.3	-0.6	0.0	1.3	2.5
10	-1.6	-0.8	0.0	1.6	3.1
12	-1.9	-1.0	0.0	1.9	3.8
14	-2.2	-1.1	0.0	2.2	4.4
16	-2.5	-1.3	0.0	2.5	5.0
18	-2.8	-1.5	0.0	2.8	5.6
20	-3.1	-1.6	0.0	3.1	6.2
22	-3.5	-1.8	0.0	3.4	6.8
24	-3.8	-1.9	0.0	3.7	7.4
26	-4.1	-2.1	0.0	3.9	8.0
28	-4.4	-2.2	0.0	4.2	8.6
30	-4.7	-2.4	0.0	4.4	9.2

Includes APU fuel burn.

GEAR DOWN
ENGINE INOP

MAX CONTINUOUS THRUST

**Holding
Flaps Up**

WEIGHT (1000 LB)		PRESSURE ALTITUDE (FT)				
		1500	5000	10000	15000	20000
180	%N1	94.2				
	KIAS	225				
	FF/ENG	9390				
170	%N1	92.4	95.9			
	KIAS	220	220			
	FF/ENG	8810	8930			
160	%N1	90.5	93.7			
	KIAS	215	215			
	FF/ENG	8250	8340			
150	%N1	88.6	91.8			
	KIAS	211	211			
	FF/ENG	7720	7780			
140	%N1	86.7	89.7	94.8		
	KIAS	206	206	206		
	FF/ENG	7210	7230	7360		
130	%N1	84.6	87.6	92.2		
	KIAS	200	200	200		
	FF/ENG	6700	6700	6770		
120	%N1	82.5	85.4	89.9	96.3	
	KIAS	194	194	194	194	
	FF/ENG	6210	6200	6230	6450	
110	%N1	80.1	83.1	87.4	92.4	
	KIAS	189	189	189	189	
	FF/ENG	5730	5700	5700	5790	
100	%N1	77.7	80.6	84.9	89.5	97.6
	KIAS	182	182	182	182	182
	FF/ENG	5280	5230	5200	5250	5510
90	%N1	75.3	78.1	82.3	86.7	92.3
	KIAS	176	176	176	176	176
	FF/ENG	4840	4790	4740	4750	4800

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally
Blank

Performance Inflight
Text**Chapter PI**
Section 67

Introduction

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

General**Takeoff Speeds**

The speeds presented in the Takeoff Speeds table as well as FMC computed takeoff speeds can be used for all performance conditions provided that adjustments are made to V1 for clearway, stopway, anti-skid inoperative, thrust reversers inoperative, improved climb, contaminated runway situations or brake energy limits. These speeds may be used for weights less than or equal to the performance limited weight.

The FMC will protect for minimum control speeds by increasing V1, VR and V2 as required. However, the FMC will not compute takeoff speeds for weights where the required speed increase exceeds the maximum certified speed increase. This typically occurs at full rated thrust and light weights. In this case, the message "V SPEEDS UNAVAILABLE" will appear on the FMC scratchpad and the takeoff speed entries will be blank. Takeoff is not permitted in this condition as certified limits have been exceeded. The options are to select a smaller flap setting, select derate thrust and/or add weight (fuel). Selecting derate thrust is the preferred method as this will reduce the minimum control speeds. Note that the assumed temperature method will not help this condition as the minimum control speeds are determined at the actual temperature and therefore are not reduced.

Normal takeoff speeds, V1, VR, and V2 are read from either the dry or wet table by entering with takeoff flap setting and brake release weight. Use the tables provided to adjust takeoff speeds for altitude and actual temperature or assumed temperature for reduced thrust takeoffs. Slope and wind adjustments to V1 are obtained by entering the Slope and Wind V1 Adjustment table.

V1(MCG)

Regulations prohibit scheduling takeoff with a V1 less than minimum V1 for control on the ground, V1(MCG). It is therefore necessary to compare the adjusted V1 to V1(MCG). The V1(MCG) presented in this manual is conservative for all weight and bleed configurations.

To find V1(MCG) enter the V1(MCG) table with the airport pressure altitude and actual OAT. If the adjusted V1 is less than V1(MCG), set V1 equal to V1(MCG). If the adjusted VR is less than V1(MCG), set VR equal to V1(MCG), and determine a new V2 by adding the difference between the normal VR and V1(MCG) to the normal V2. No takeoff weight adjustment is necessary provided that the actual field length exceeds the minimum field length shown in the Field and Climb Limit Weight table.

Clearway and Stopway V1 Adjustments

Maximum allowable clearway limits are provided for guidance when more precise data is not available. Use of clearway is not allowed on wet runways.

Takeoff speed adjustments are to be applied to V1 speed when using takeoff weights based on the use of clearway and stopway.

Adjust V1 speed by the amount shown in the table. The adjusted V1 speed must not exceed VR. If the adjusted V1 speed is greater than VR, reduce V1 to equal VR.

Stab Trim

To find takeoff stabilizer trim setting, enter Stab Trim Setting table with anticipated brake release weight and center of gravity (C.G. % MAC) and read required stabilizer trim units.

VREF

This table contains flaps 40, 30 and 15 reference speeds for a given weight. With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

Flap Maneuver Speeds

This table provides the flap speed schedule for recommended maneuver speeds. Using VREF as the basis for the schedule makes it variable as a function of weight and will provide adequate maneuver margin above stall at all weights.

During flap retraction/extension, movement of the flap to the next position should be initiated when within 20 knots of the recommended speed for that position.

Slush/Standing Water Takeoff

Experience has shown that aircraft performance may deteriorate significantly on runways covered with snow, slush, standing water or ice. Therefore, reductions in field/obstacle limited takeoff weight and revised takeoff speeds are necessary. The tables are intended for guidance in accordance with advisory material and assume an engine failure at the critical point during the takeoff.

The entire runway is assumed to be completely covered by a contaminant of uniform thickness and density. Therefore this information is conservative when operating under typical cold weather conditions where patches of slush exist and some degree of sanding is common. Takeoffs in slush depths greater than 0.5 inches (13 mm) are not recommended because of possible airplane damage as a result of slush impingement on the airplane structure. The use of assumed temperature for reduced thrust is not allowed on contaminated runways. Interpolation for slush/standing water depths between the values shown is permitted.

Takeoff weight determination:

1. Enter the Weight Adjustment table with the dry field/obstacle limit weight to obtain the weight reduction for the slush/standing water depth and airport pressure altitude.
2. Adjust field length available for temperature by amount shown beneath V1(MCG) limit weight table.
3. Enter the V1(MCG) Limit Weight table with the adjusted field length and pressure altitude to obtain the slush/standing water limit weight with respect to minimum field length required for V1(MCG) speed.
4. The maximum allowable takeoff weight in slush/standing water is the lesser of the limit weights found in steps 1 and 3.

Takeoff speed determination:

1. Determine takeoff speeds V1, VR and V2 for actual brake release weight using the Dry Runway Takeoff Speeds table for the appropriate flap setting and thrust rating.
2. If V1(MCG) limited, set V1=V1(MCG). If not limited by V1(MCG) considerations, enter the V1 Adjustment table with actual brake release weight to determine the V1 reduction to apply to V1 speed. If the adjusted V1 is less than V1(MCG), set V1=V1(MCG).

Slippery Runway Takeoff

Airplane braking action is reported as good, medium or poor, depending on existing runway conditions. If braking action is reported as good, conditions should not be expected to be as good as on clean, dry runways. The value “good” is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when stopping. The performance level used to calculate the “good” data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate the “poor” data reflects a runway covered with wet ice. Performance is based on a 15 ft screen height at the end of the runway. The tables provided are used in the same manner as the Slush/Standing Water tables.

Anti-Skid Inoperative

When operating with anti-skid inoperative, the field limit weight and V1 must be reduced to account for the effect on accelerate-stop performance. Anti-skid inoperative is only allowed on a dry runway. A simplified method which conservatively accounts for the effects of anti-skid inoperative is to reduce the normal dry field/obstacle limited weight by 18100 lb and the V1 associated with the reduced weight by the amount shown in the table below.

ANTI-SKID INOPERATIVE V1 ADJUSTMENTS	
FIELD LENGTH (FT)	V1 ADJUSTMENT (KIAS)
6000	-21
8000	-17
10000	-14
12000	-11
14000	-10

If the resulting V1 is less than V1(MCG), takeoff is permitted with V1 set equal to V1(MCG) provided the dry accelerate-stop distance adjusted for wind and slope exceeds approximately 5800 ft.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Thrust Reverser Inoperative

When dispatching on a wet runway with both thrust reversers operative, an operative anti-skid system, and all brakes operating, regulations allow deceleration credit for one thrust reverser in the engine failure case and two thrust reversers in the all engine stop case.

When dispatching on a wet runway with one thrust reverser inoperative, the field/obstacle limited weight and V1 must be reduced to account for the effect on accelerate-stop performance. A simplified method, which

conservatively accounts for this, is to reduce the normal wet runway/field/obstacle limited weight by 2000 lb and the V1 associated with the reduced weight by 2 knots.

If the resulting V1 is less than minimum V1, takeoff is permitted with V1 set equal to V1(MCG) provided the accelerate-stop distance available adjusted for wind and slope exceeds approximately 4000 ft.

Detailed analysis for the specific case from the Airplane Flight Manual may yield a less restrictive penalty.

Takeoff %N1

To find Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off operation, apply the %N1 adjustment shown below the table. No takeoff %N1 adjustment is required for engine and wing anti-ice.

Assumed Temperature Reduced Thrust

Regulations permit the use of up to 25% takeoff thrust reduction for operation with assumed temperature reduced thrust. Use of assumed temperature reduced thrust is not allowed with anti-skid inoperative or on runways contaminated with standing water, ice, slush, or snow. Use of assumed temperature reduced thrust is not recommended if potential windshear conditions exist.

To find the maximum allowable assumed temperature enter the Maximum Assumed Temperature table with airport pressure altitude and OAT. Compare this temperature to that at which the airplane is performance limited as determined from available takeoff performance data. Next, enter the Maximum Takeoff %N1 table with airport pressure altitude and the lower of the two temperatures previously determined, to obtain a maximum takeoff %N1. Do not use an assumed temperature less than the minimum assumed temperature shown. Enter the %N1 Adjustment table with OAT and the difference between the assumed and actual OAT to obtain a %N1 adjustment. Subtract the %N1 adjustment from the maximum takeoff %N1 found previously to determine the assumed temperature reduced thrust %N1.

Max Climb %N1

This table shows Max Climb %N1 for a 280/.80 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

Go-around %N1

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

Flight with Unreliable Airspeed / Turbulent Air Penetration

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

All Engines

.80M Maximum Operating Altitude

These tables provide the maximum operating altitude in the same manner as the FMC. Maximum altitudes are shown for a given cruise weight and maneuver capability. This table considers both thrust and buffet limits, providing the more limiting of the two. Any data that is thrust limited is denoted by an asterisk and represents only a thrust limited condition in level flight with 100 ft/min residual rate of climb. Flying above these altitudes with sustained banks in excess of approximately 15° may cause the airplane to lose speed and/or altitude. The altitudes shown in the table are limited to the maximum certified altitude of 41000 ft.

.80M Cruise Control

These tables provide target %N1, Cruise Mach number, IAS and standard day fuel flow per engine for the airplane weight and pressure altitude.

.80M Enroute Fuel and Time

.80M Enroute Fuel and Time tables are provided to determine remaining time and fuel required to destination. The data is based on .80M Cruise and .80/280/250 descent. Tables are presented for low altitudes and high altitudes.

To determine remaining fuel and time required, first enter the Ground to Air Miles Conversion table to convert ground distance and enroute wind to an equivalent still air distance for use with the Reference Fuel and Time tables. Next, enter the Reference Fuel and Time table with air distance from the Ground to Air Miles Conversion table and the desired altitude and

read Reference Fuel and Time Required. Lastly, enter the Fuel Required Adjustment table with the Reference Fuel and the actual weight at checkpoint to obtain fuel required to destination.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the table in the Engine Inoperative text section.

.80M Wind-Altitude Trade

Wind is a factor which may justify operations considerably below optimum altitude. For example, a favorable wind component may have an effect on ground speed which more than compensates for the loss in air range.

Using this table, it is possible to determine the break-even wind (advantage necessary or disadvantage that can be tolerated) to maintain the same range at another altitude and long range cruise speed. The tables make no allowance for climb or descent time, fuel or distance, and are based on comparing ground fuel mileage.

Descent

Time, fuel, and distance for descent are shown for a .80/280/250 descent speed schedule. Enter the table with top of descent pressure altitude and read distance, time and fuel. Data is based on flight idle thrust descent in zero wind. Allowances are included for a straight-in approach with gear down and landing flaps at the outer marker.

Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

Advisory Information

Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. Use of autobrake setting 1 is not recommended for landings on slippery runways, and is therefore not provided for these conditions. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of max manual braking and reverse thrust.

Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

Engine Inoperative

Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .80M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (LB/HR)
39	100
35	100
31	110
25	130
20	150
15	160
10	180
5	200

Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .80/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

Holding

Single engine holding data is provided in the same format as the all engine holding data and is based on the same assumptions.

Alternate Mode EEC

Introduction

This section contains performance data for airplane operation with the Electronic Engine Control (EEC) in the alternate mode (ALTN EEC switch illuminated) for applicable thrust ratings. The data includes engine bleed effects for normal air conditioning operation i.e., two packs on at normal flow all engines operating.

Operation with derate and/or assumed temperature reduced thrust is not permitted with the EEC in alternate mode.

Limit Weight

A simplified method which conservatively accounts for the effects of EEC in alternate mode is to reduce the normal mode (ON EEC switch illuminated) performance limited weights. The Limit Weight table

provides takeoff field, climb, obstacle, tire speed and brake energy limit weights. To determine limit weights for operations with the EEC in the alternate mode, enter the table with the limit weights for normal mode EEC operation and read the associated limit weight for each performance condition. The most limiting of the takeoff weights must be used. Analysis from the Airplane Flight Manual - Digital Performance Information may yield less restrictive limit weights.

Takeoff Speed Adjustment

Takeoff speeds for the reduced weight should be increased by the amount shown in the Takeoff Speeds Adjustment table. The adjusted V1 should not exceed the adjusted VR.

NOTE: The FMC does not incorporate alternate mode EEC performance in its takeoff speeds calculations.

Max Takeoff %N1

The alternate mode EEC thrust schedule provides equal or greater thrust than the normal mode thrust for the same thrust lever position. Thrust limit protection is not provided in alternate mode EEC and maximum rated thrust may be reached at thrust lever position less than full forward. As a result, thrust overboost may occur if the target alternate mode EEC Max Takeoff %N1 settings are not observed.

To find alternate mode EEC Max Takeoff %N1 based on normal engine bleed for air conditioning packs on, enter the Alternate Mode EEC Max Takeoff %N1 table with airport pressure altitude and airport OAT and read %N1. For packs off apply the %N1 adjustment provided below the table. No %N1 adjustment is required for engine or wing anti-ice.

Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

Note: The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.

Intentionally
Blank

Airplane General, Emergency Equipment, Doors, Windows Table of Contents

Chapter 1

Section 0

Dimensions	1.10
Principal Dimensions	1.10.1
Turning Radius	1.10.4
Instrument Panels	1.20
Panel Arrangement	1.20.1
Aft Flight Deck Overview	1.20.2
Left Forward Panel	1.20.3
Right Forward Panel	1.20.5
Glareshield Panel	1.20.7
Center Forward Panel	1.20.8
Forward Aisle Stand	1.20.9
Forward Overhead Panel	1.20.11
Aft Overhead Panel	1.20.14
Control Stand	1.20.15
Aft Electronic Panel	1.20.16
Auxiliary Panels	1.20.17
Attendant Panel	1.20.18
Attendant Handset	1.20.18
Controls and Indicators	1.30
Flight Deck Lighting	1.30.1
Map and Chart Light Controls	1.30.1
Main Panel Lighting	1.30.1
Background and AFDS Flood Light Control	1.30.2
Flood and Aft Electronics Lights Controls	1.30.2
Overhead/Circuit Breaker Panel Light Controls	1.30.3
Dome Light Control	1.30.3
Master Lights Test and Dim Switch	1.30.4

Exterior Lighting	1.30.5
Landing, Runway Turnoff and Taxi Lights	1.30.5
Miscellaneous Exterior Lights	1.30.6
Emergency Lighting and Passenger Signs	1.30.7
Emergency Locator Transmitter	1.30.8
Doors	1.30.9
Cabin Door	1.30.9
[Flight Deck Door]	1.30.10
Exterior Door Annunciator Lights	1.30.14
Passenger Entry/Galley Service Doors	1.30.16
Oxygen	1.30.16
Oxygen Panel	1.30.16
Oxygen Mask Panel	1.30.17
Oxygen Mask and Regulator	1.30.18
Forward Airstairs	1.30.19
Interior and Exterior Controls	1.30.19
Water System Controls	1.30.20
Lavatory Controls	1.30.21
Systems Description	1.40
Introduction	1.40.1
Lighting Systems	1.40.1
Exterior Lighting	1.40.1
Exterior Lighting Locations	1.40.3
Flight Deck Lighting	1.40.3
Passenger Cabin Lighting	1.40.4
Passenger Cabin Signs	1.40.4
Emergency Lighting	1.40.4
Emergency Exit Lighting	1.40.6
Oxygen Systems	1.40.7
Oxygen System Schematic	1.40.8
Flight Crew Oxygen System	1.40.9

Fire Extinguishers	1.40.10
Water Fire Extinguishers	1.40.10
Halon (BCF) Fire Extinguishers	1.40.11
Fire Extinguisher Usage	1.40.12
Emergency Equipment Symbols	1.40.15
Emergency Equipment Locations	1.40.17
Doors and Windows	1.40.21
Cabin Door	1.40.21
[Flight Deck Security Door]	1.40.22
Flight Deck Number Two Windows	1.40.24
Lower Cargo Compartments	1.40.24
Emergency Escape	1.40.25
Emergency Evacuation Routes	1.40.25
Flight Deck Window Emergency Egress	1.40.27
Escape Slide Detachment Handle	1.40.28
Escape Straps	1.40.29
Emergency Exit Doors	1.40.31
Pilot Seat Adjustment	1.40.35
Pilot Seat Adjustment	1.40.35
Galleys	1.40.35
Electrical Power	1.40.36
Water Service	1.40.36
Water System	1.40.36
Quantity Indication and System Operation	1.40.37
Hot Water	1.40.37
Servicing	1.40.37
Forward Airstair	1.40.37
Interior Control	1.40.38
Exterior Control	1.40.38
Airstairs	1.40.39

Intentionally
Blank

DO NOT USE FOR FLIGHT


BBJ Flight Crew Operations Manual


**Airplane General, Emergency
Equipment, Doors, Windows
Dimensions**


Chapter 1

Section 10

Principal Dimensions

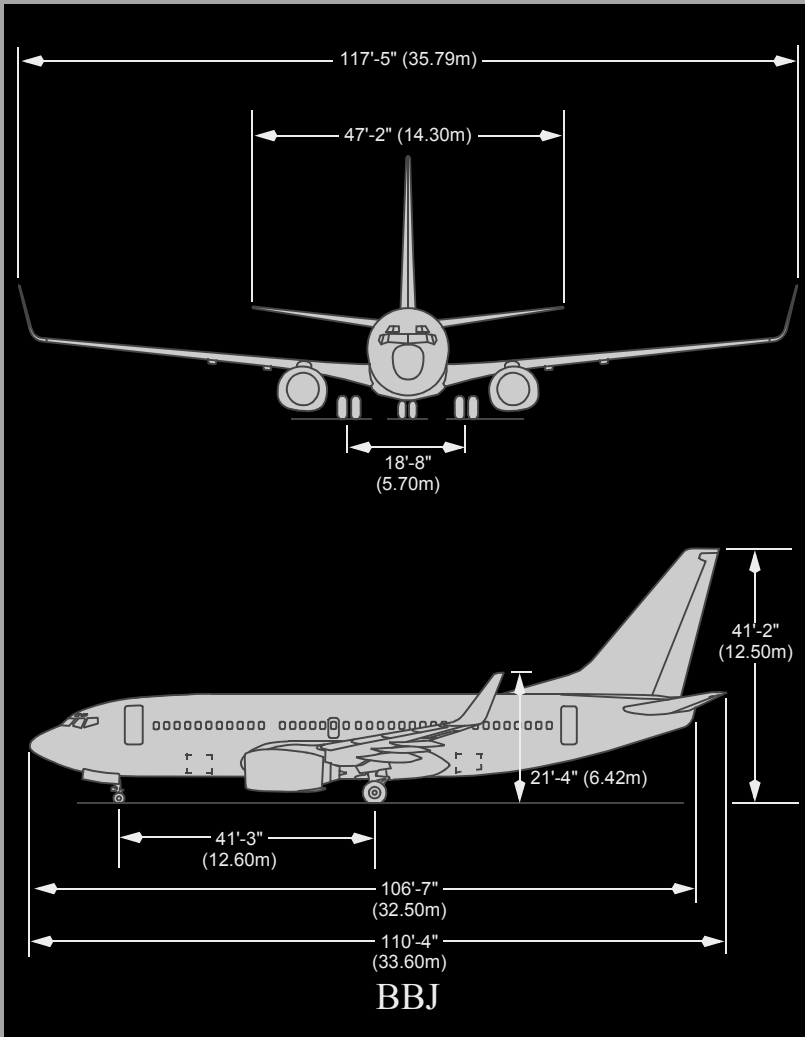

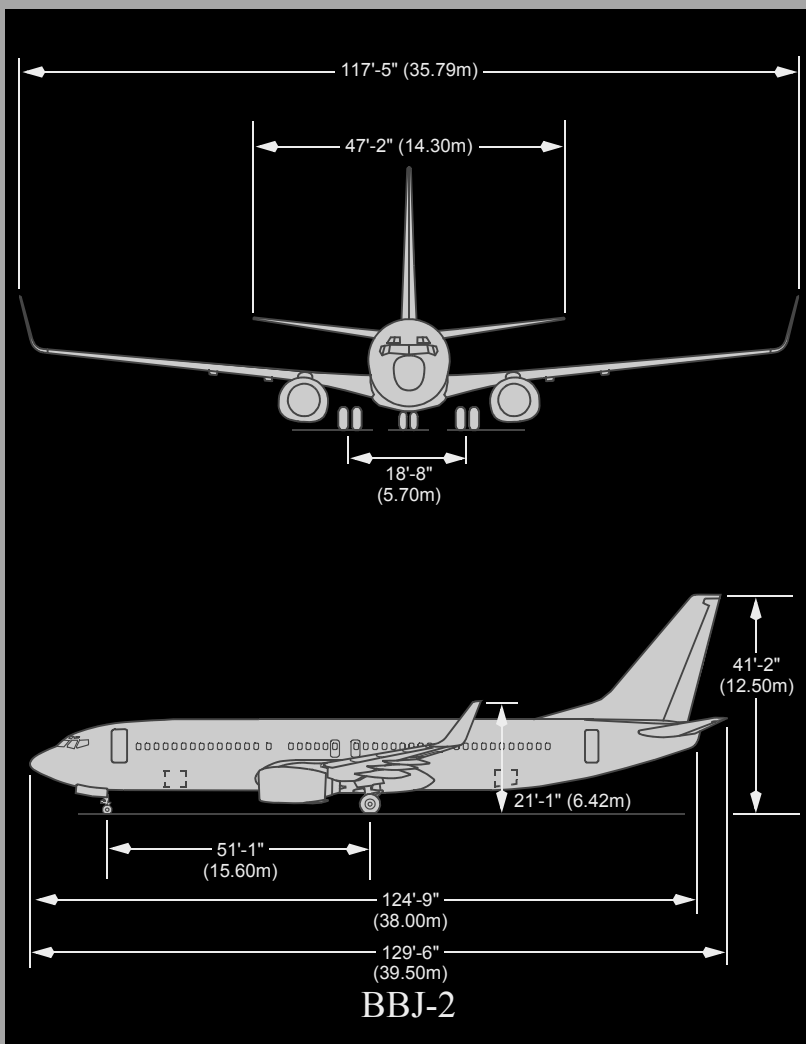

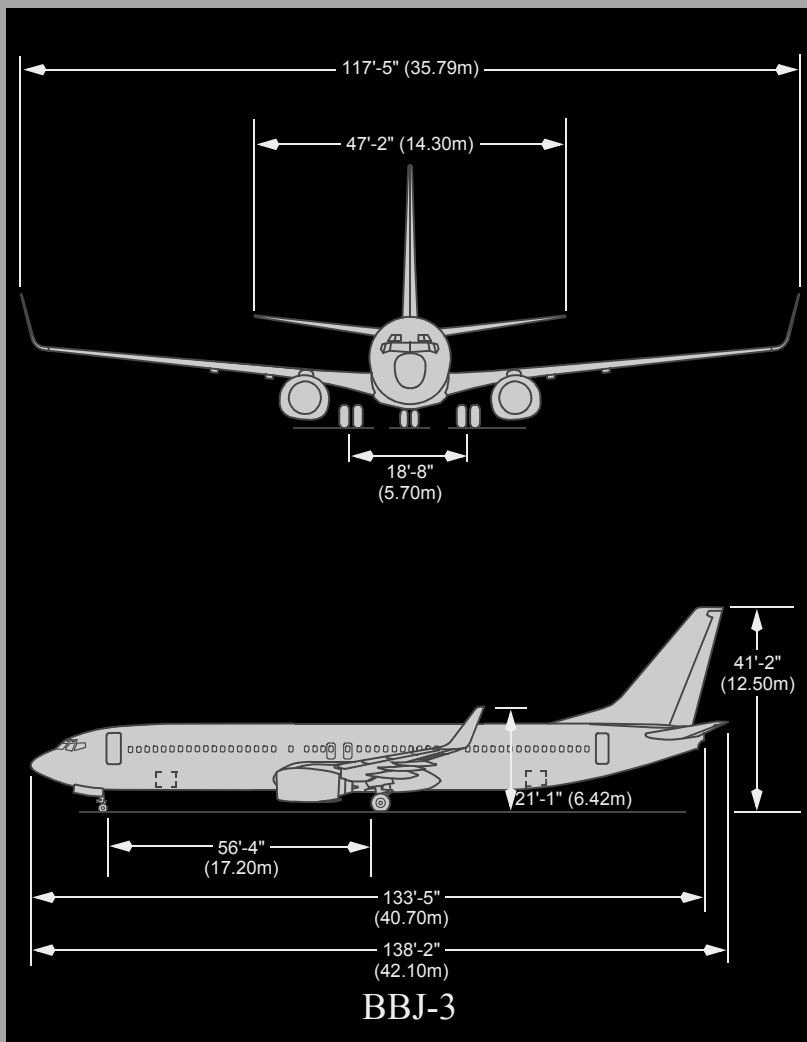


Turning Radius

[Option: BBJ/BBJ-2]

The wingtip of the BBJ swings the largest arc while turning and determines the minimum obstruction clearance path. All other portions of the airplane structure remain within this arc.

[Option: BBJ-3]

The tail swings the largest arc while turning and determines the minimum obstruction clearance path. All other portions of the airplane remain within this arc.

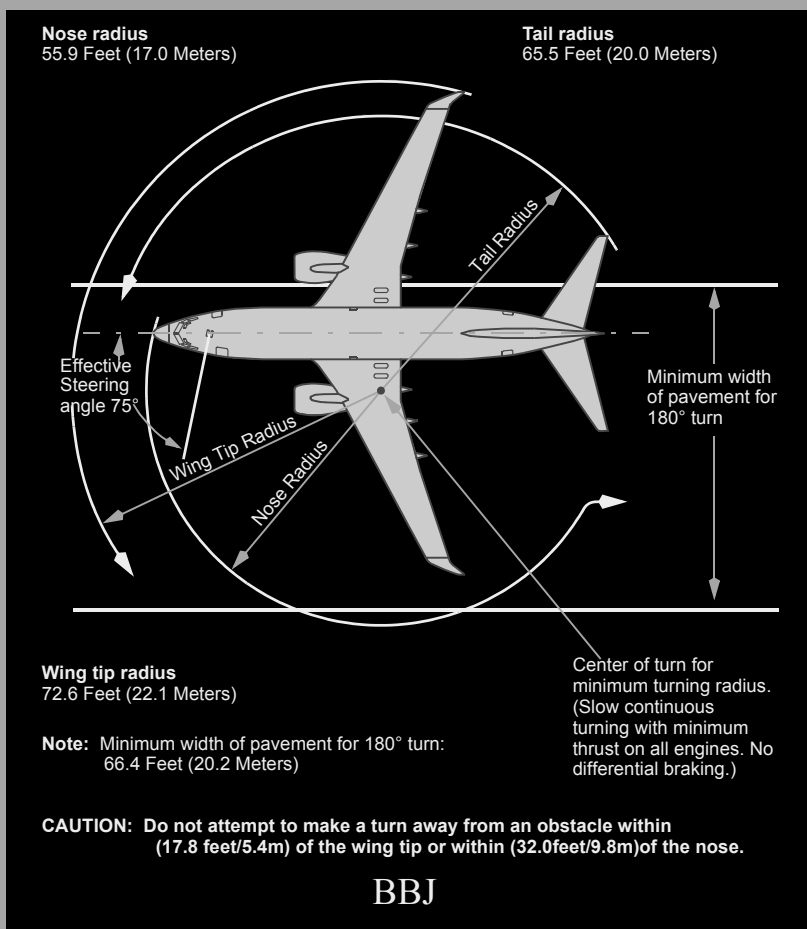


Nose radius

65.9 Feet (20.1 Meters)

Tail radius

71.3 Feet (21.7 Meters)

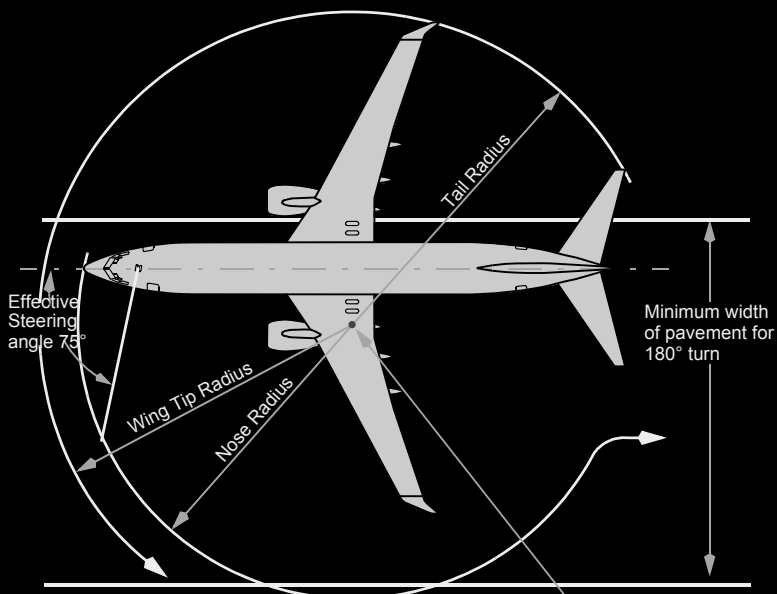

Wing tip radius


75.2 Feet (22.9 Meters)

Note: Minimum width of pavement for 180° turn:
79.1 Feet (24.1 Meters)


Center of turn for
minimum turning radius.
(Slow continuous
turning with minimum
thrust on all engines. No
differential braking.)

CAUTION: Do not attempt to make a turn away from an obstacle within
(17.8 feet/5.4m) of the wing tip or within (24.3feet/7.4m) of the nose.

BBJ-2

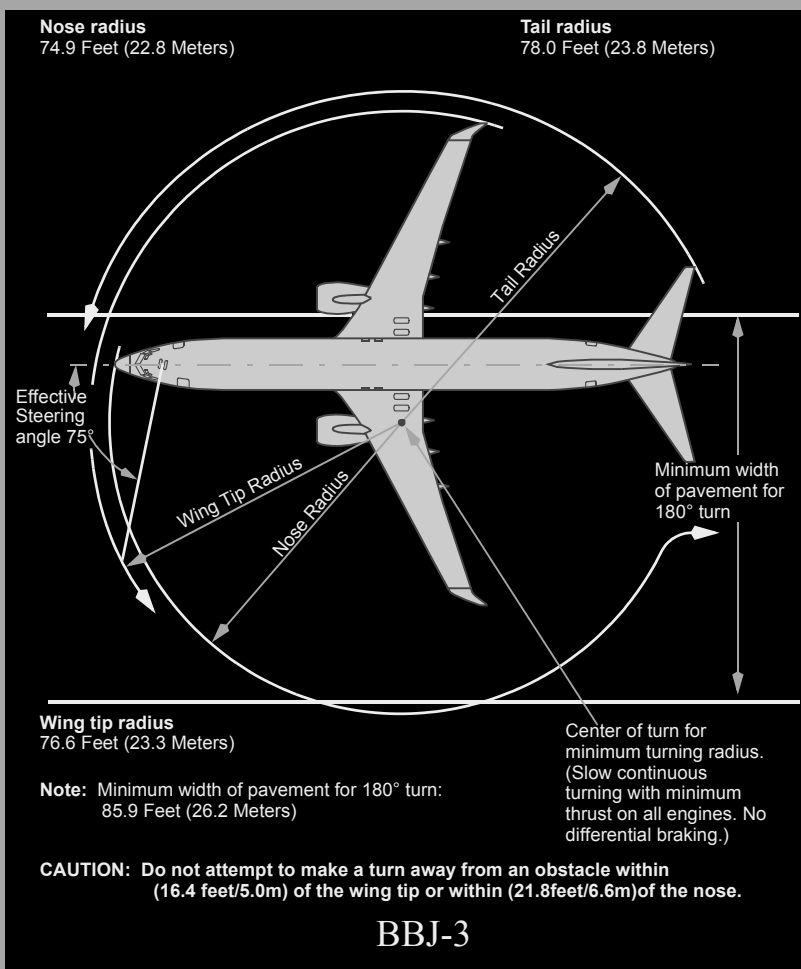


Intentionally
Blank

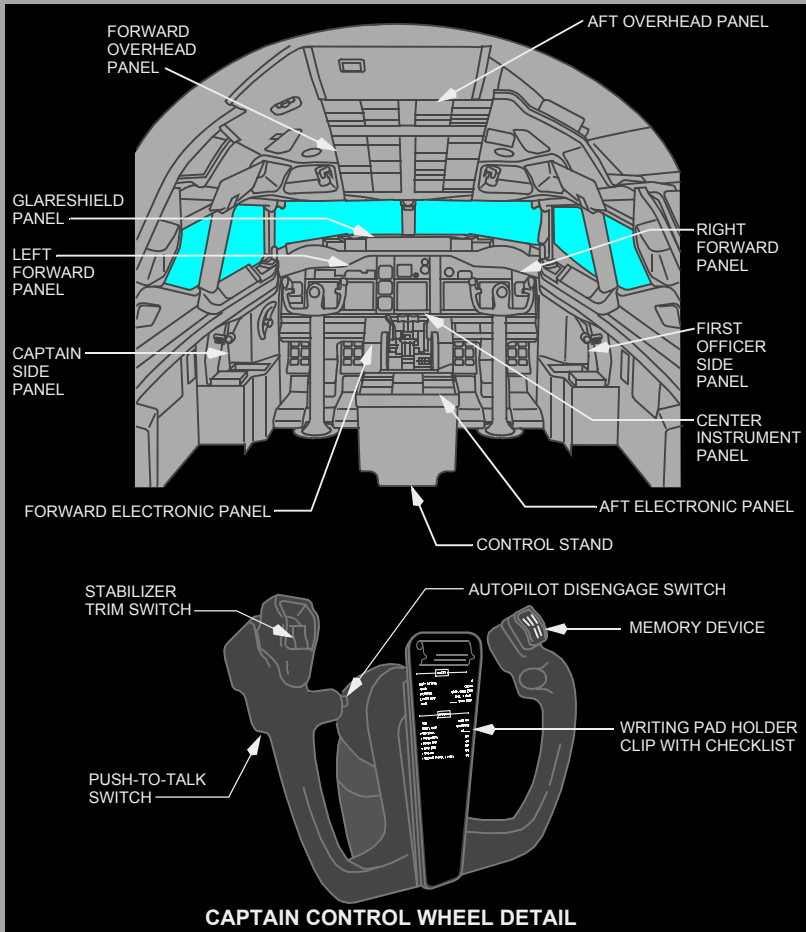**Airplane General, Emergency
Equipment, Doors, Windows
Instrument Panels****Chapter 1****Section 20****Panel Arrangement**

On the following pages, circled numbers refer to chapters where information on the item may be found.


The panels, controls, and indicators shown in this chapter are representative of installed units and may not exactly match the latest configuration. Refer to the appropriate chapter system descriptions for current information.

Aft Flight Deck Overview

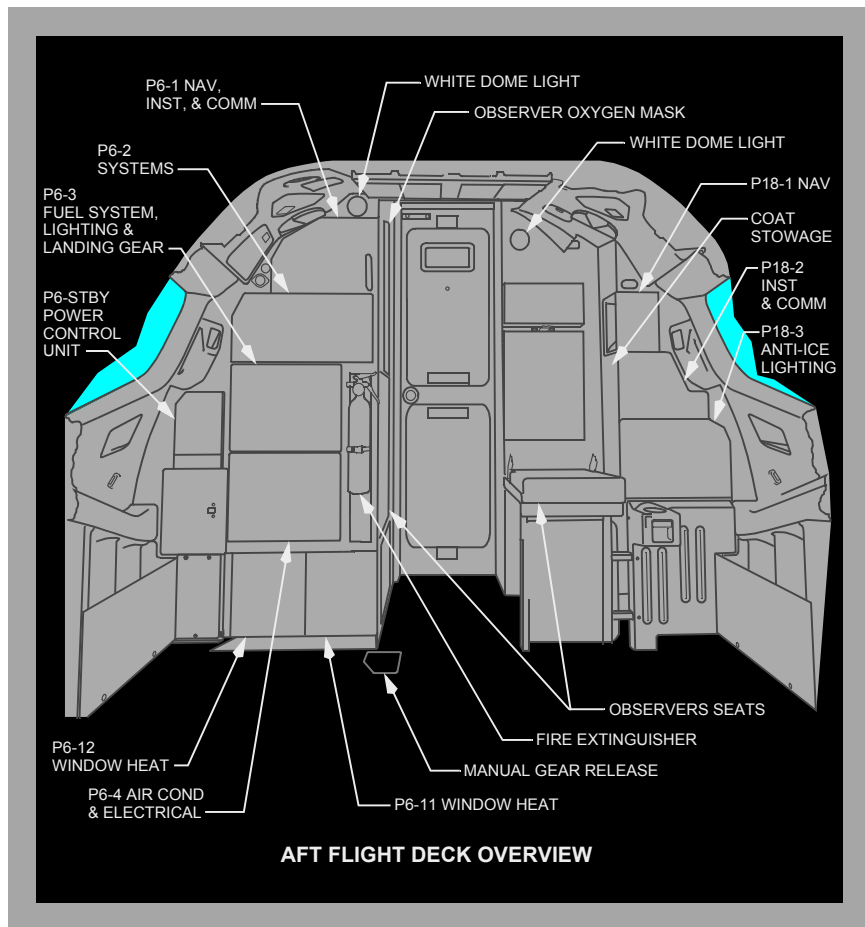


Left Forward Panel

[Option - CABIN ALTITUDE and TAKEOFF CONFIG lights not installed]

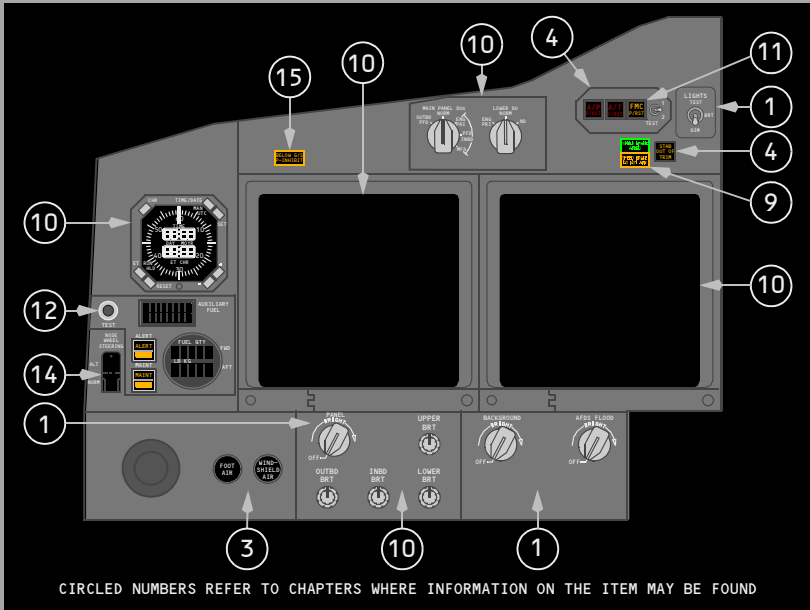


[Option - CABIN ALTITUDE and TAKEOFF CONFIG lights installed]

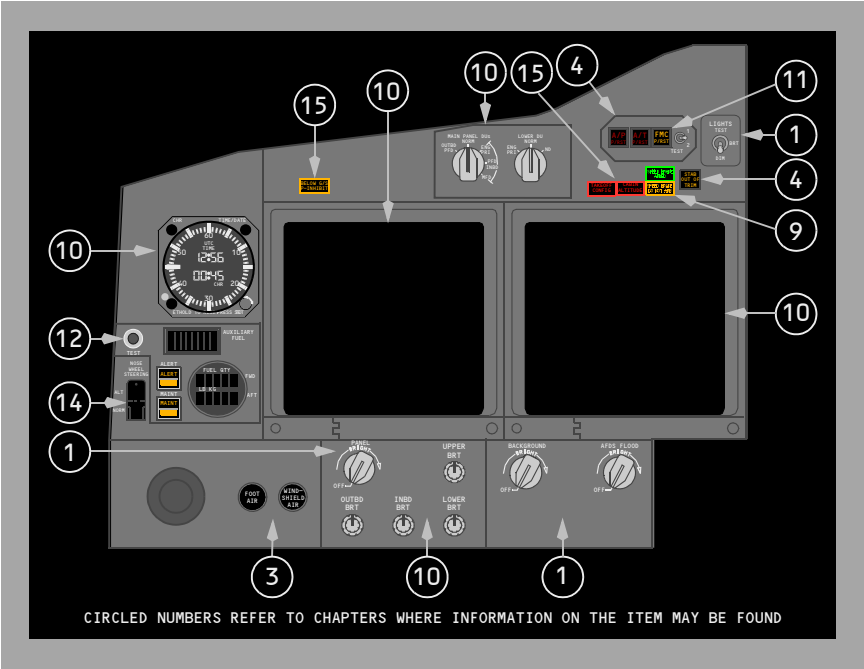


Right Forward Panel


[Option - CABIN ALTITUDE and TAKEOFF CONFIG lights not installed]

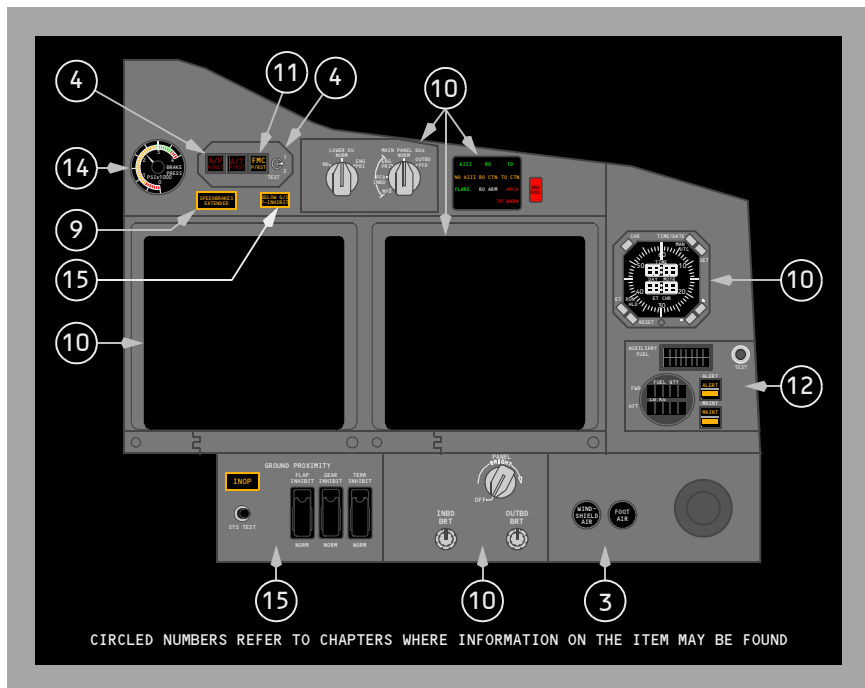

[Option - CABIN ALTITUDE and TAKEOFF CONFIG lights installed]

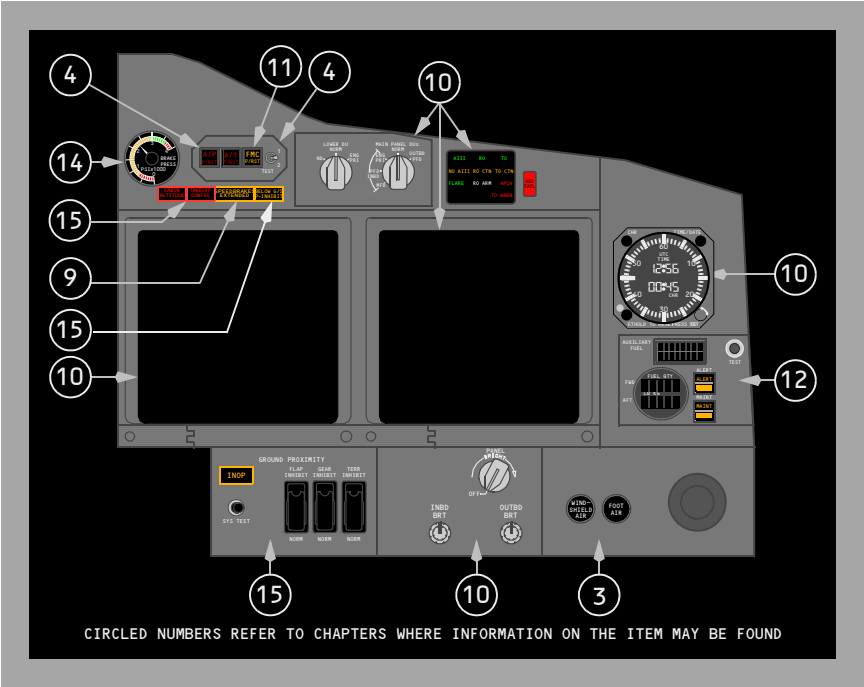

Glareshield Panel

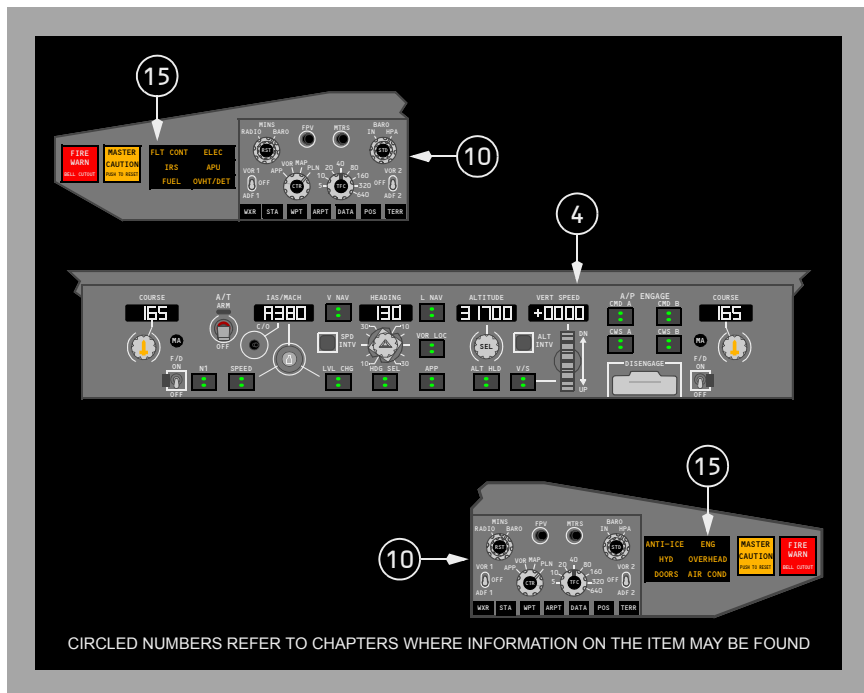


The diagram illustrates the cockpit instrument panel and control area, with circled numbers 7, 9, 10, 12, 13, and 14 pointing to specific components. The components are as follows:

- 7:** N1 SET and SPD REF controls.
- 9:** YAW DAMPER and FUEL FLOW RATE controls.
- 10:** STC/BWG RELATIVE TO TRUE NORTH indicator.
- 12:** ENG and SYS MFD displays.
- 13:** ANTISKID INOP display.
- 14:** AUTO BRAKE and FLAPS controls, including a landing gear indicator and a table of flap limits.

The table of flap limits is as follows:

LANDING GEAR LIMIT (IAS)	
OPERATING	
EXTEND	70 - 82M
RETRACT	235K
EXTENDING 320K - 82M	
FLAPS LIMIT (IAS)	
1-250K	15-200K
2-250K	25-190K
5-250K	30-175K
10-210K	35-162K
230K	ALT FLAP EXTEND


Forward Aisle Stand

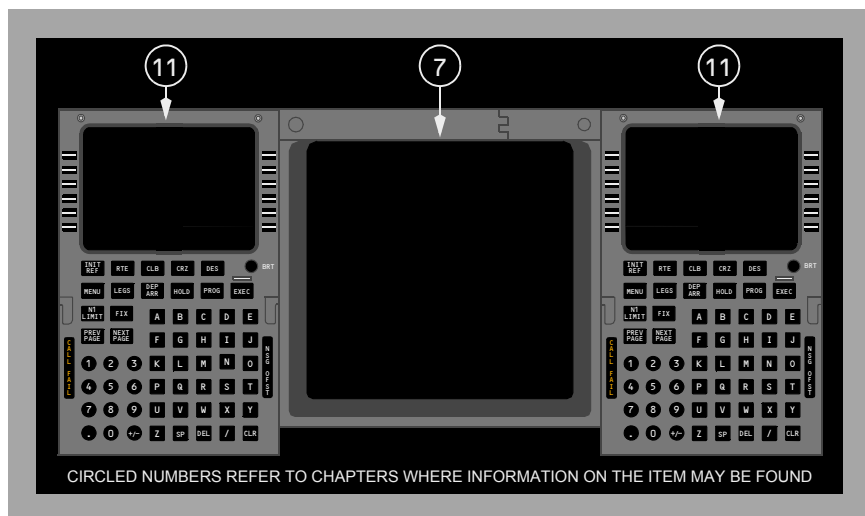


Intentionally
Blank

Forward Overhead Panel


[Option - Typical BBJ]

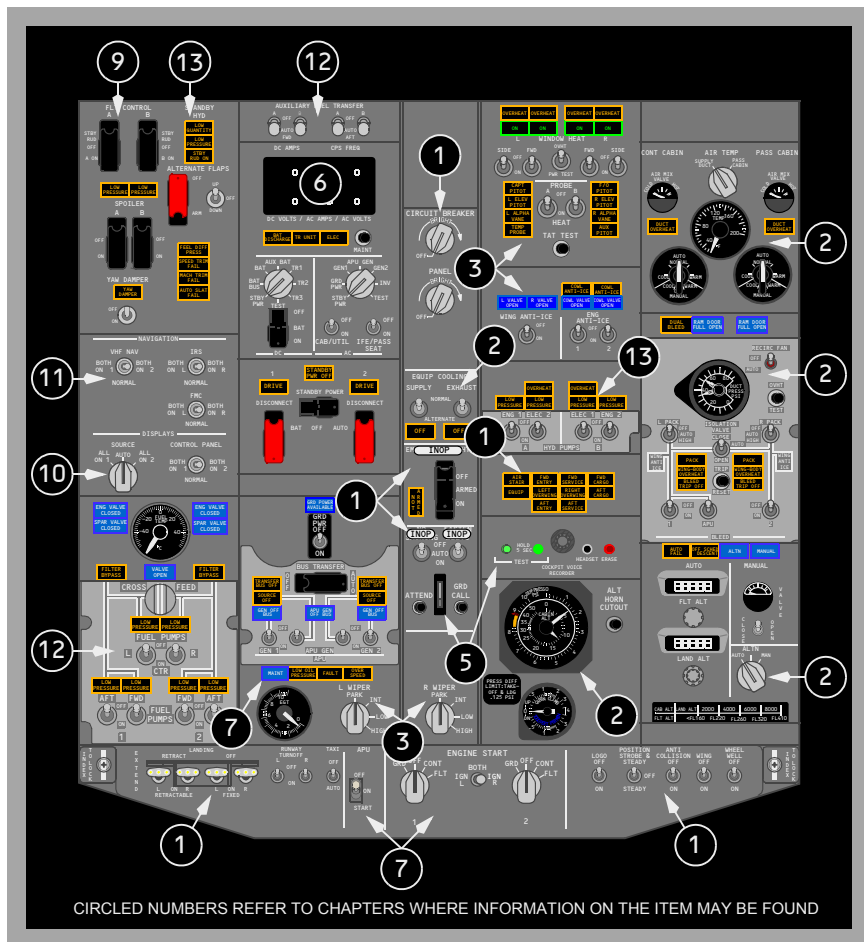

[Option - Typical BBJ2]

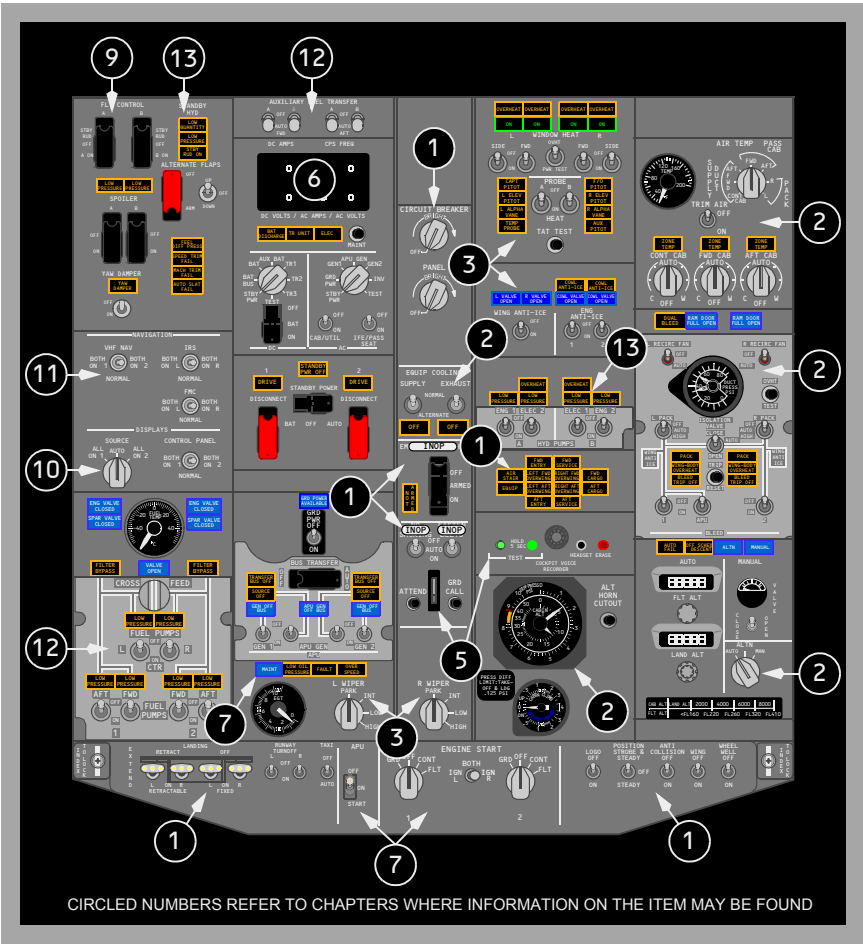


[Option - Typical BBJ3]

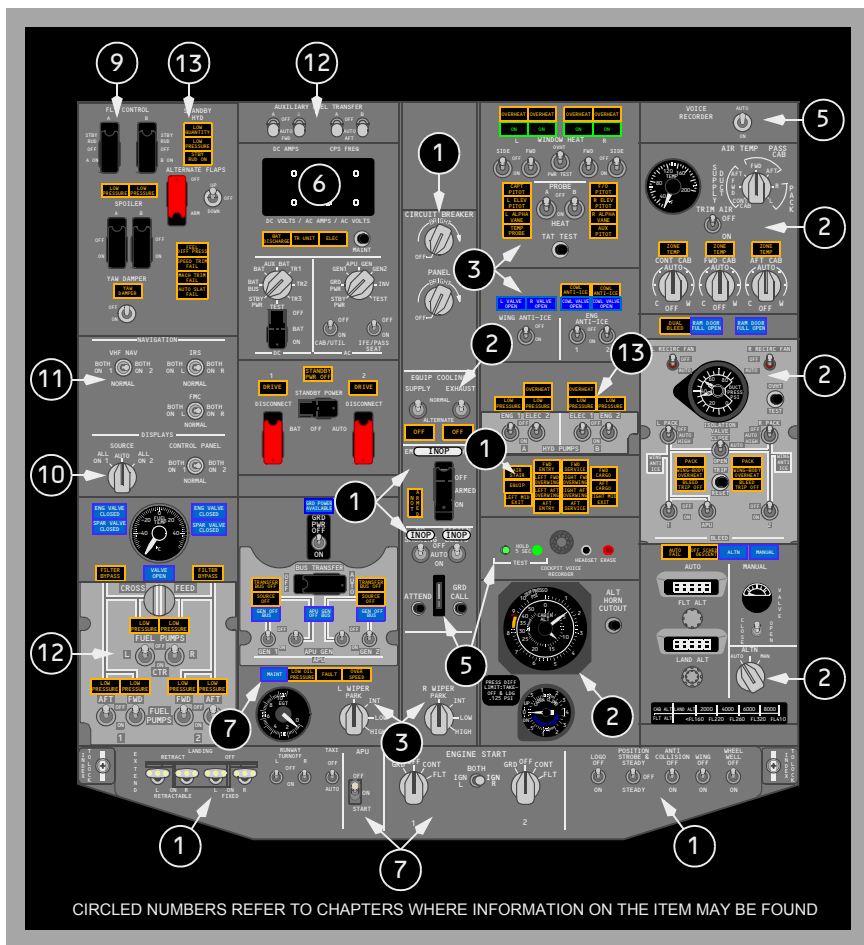


Aft Overhead Panel

[Option - Polar Navigations]

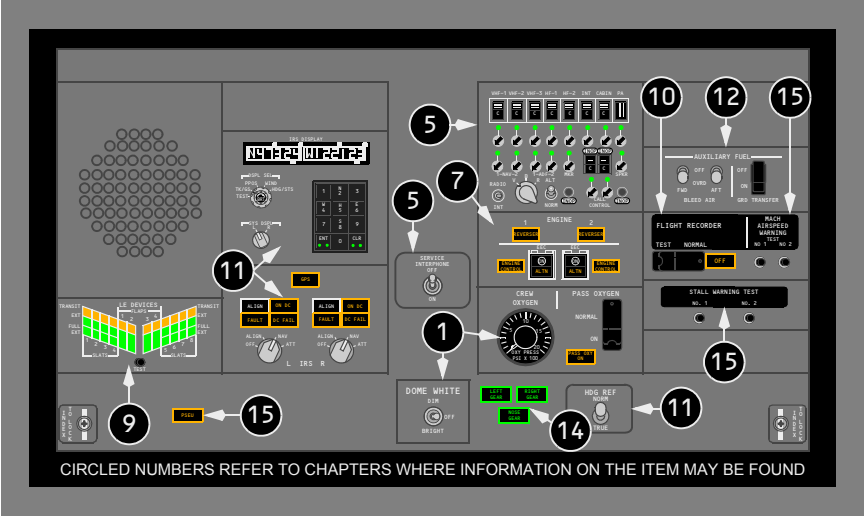


Control Stand

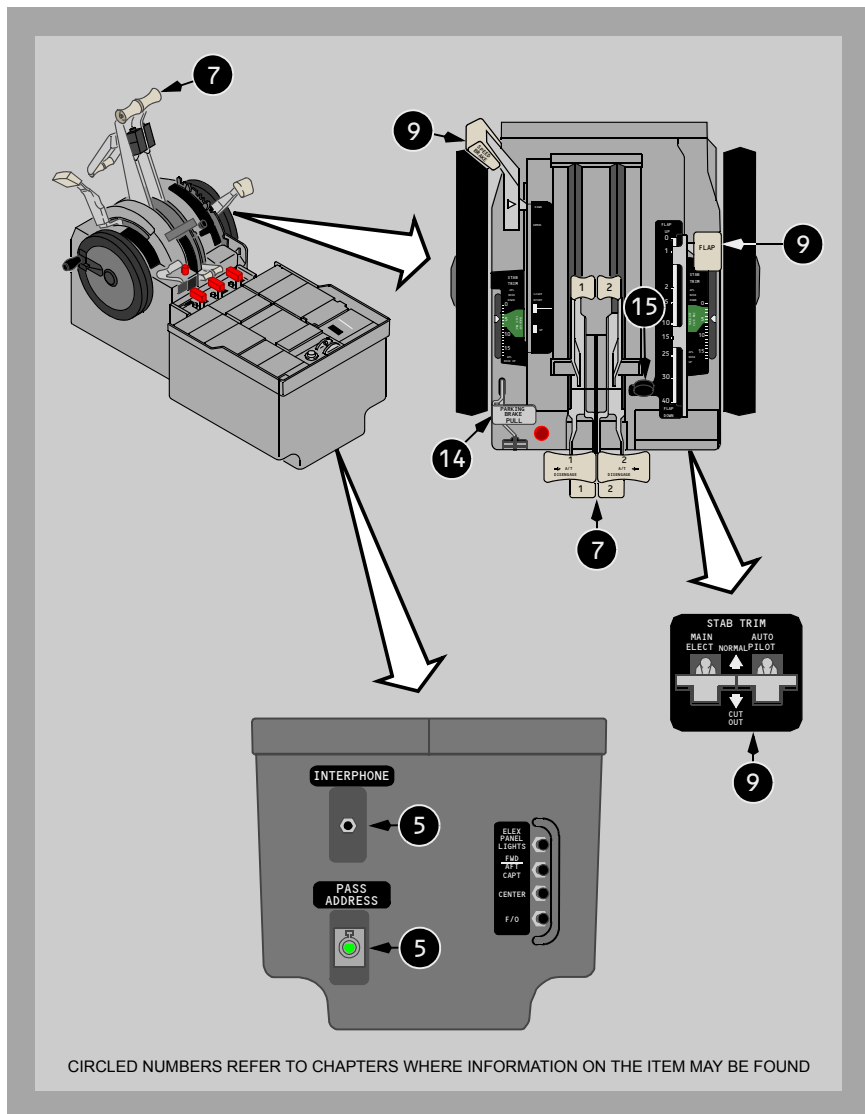


Aft Electronic Panel

[Option - Aft Electronic Panel with new security flight deck door controls]

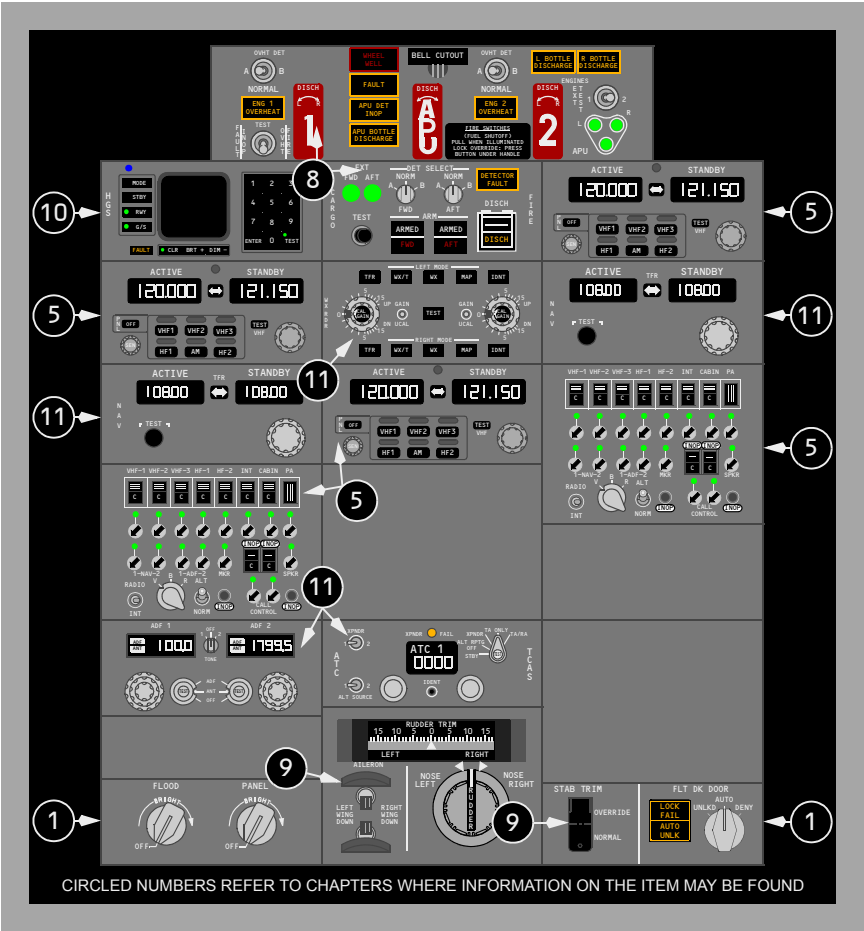


Auxiliary Panels

[Option - Typical with HUD and EFB installed]

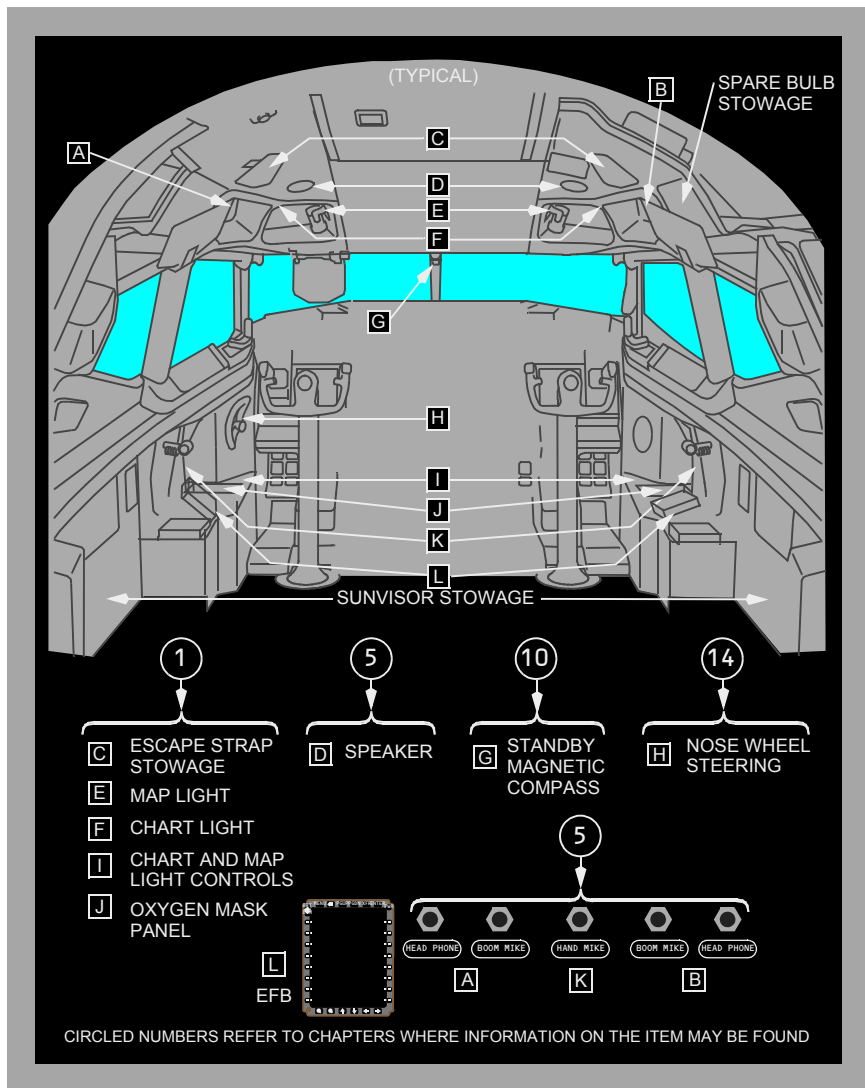

Attendant Panel

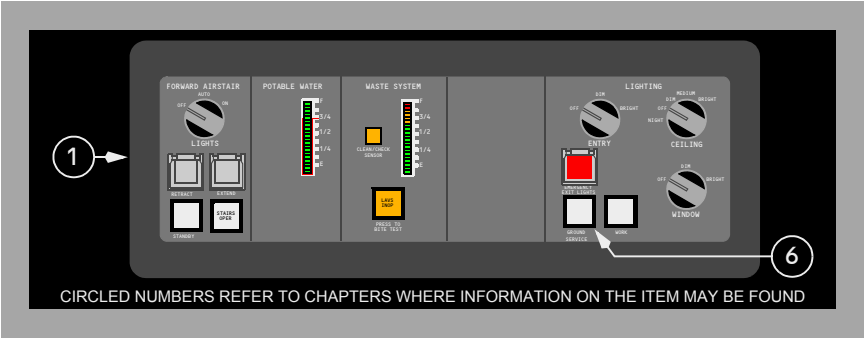


Attendant Handset

[Option - Typical]



Flight Deck Lighting

Map and Chart Light Controls

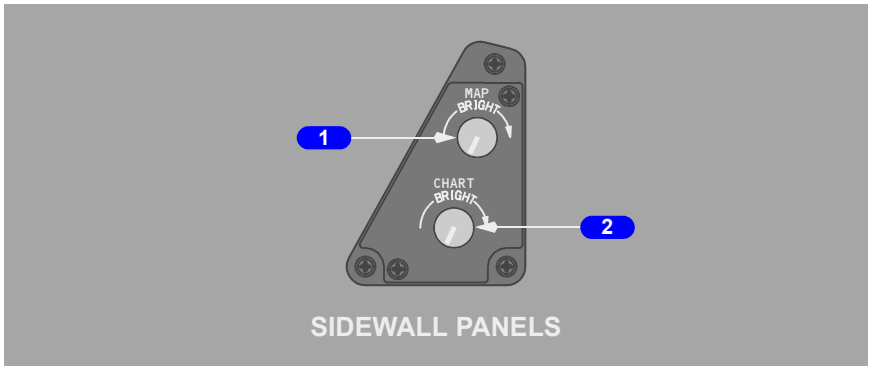


1 MAP Light Control

Rotate – adjusts brightness of Captain/First Officer map lights

2 CHART Light Control

Rotate – adjusts brightness of Captain/First Officer chart lights

Main Panel Lighting

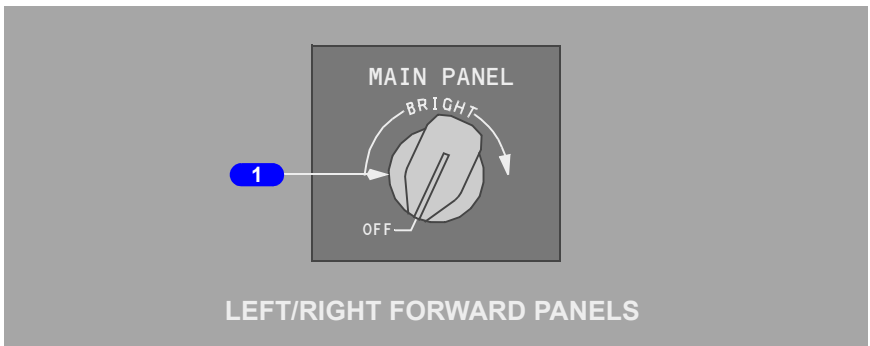


1 MAIN PANEL Light Control

Rotate –

- Captain – controls brightness of Captain's panel and instrument lighting, center instrument panel, and AFDS panel displays and edge lighting
- First Officer – controls brightness of First Officer's panel and instrument lighting.

Background and AFDS Flood Light Control

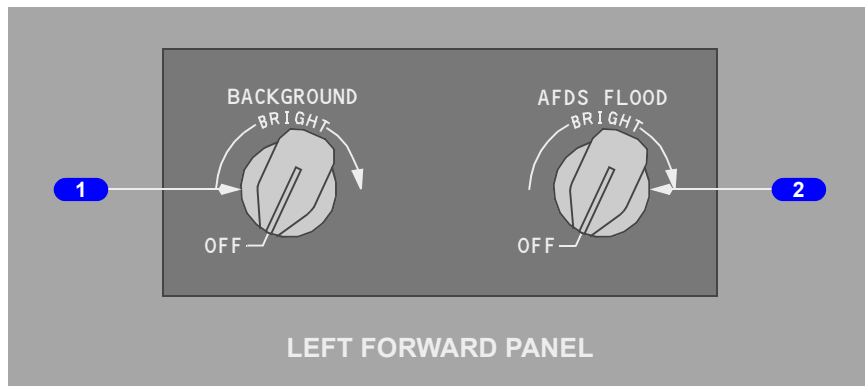


1 BACKGROUND Light Control

Rotate – controls incandescent lighting brightness for Captain's panel, First Officer's panel, and center panel.

2 AFDS FLOOD Light Control

Rotate – controls brightness of lighting directed at AFDS panel.

Flood and Aft Electronics Lights Controls

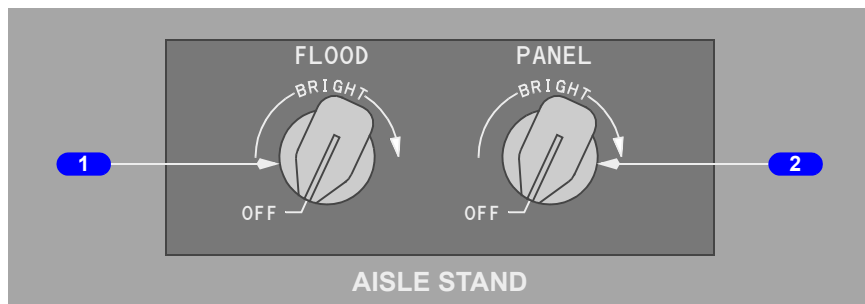


1 FLOOD Light Control

Rotate – controls overhead spotlight brightness directed at thrust lever quadrant.

2 PANEL Light Control

Rotate – controls forward and aft electronic control panel lights brightness.

Overhead/Circuit Breaker Panel Light Controls

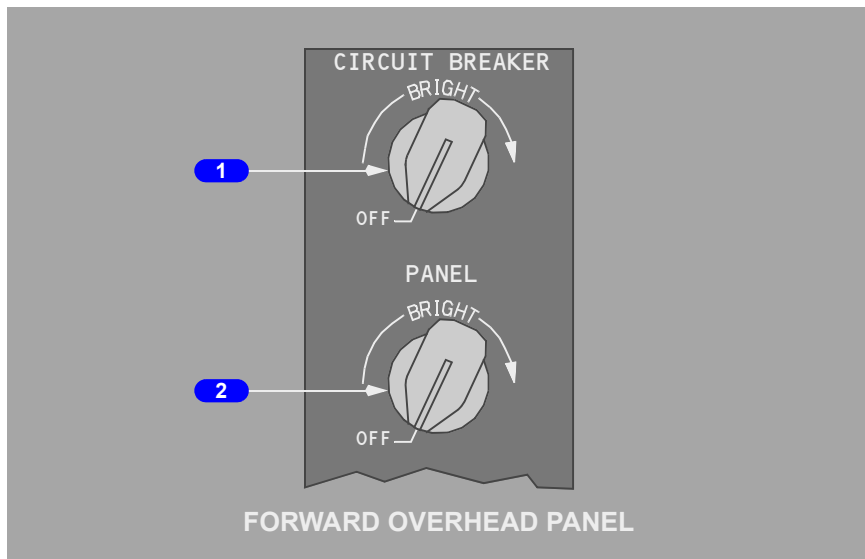


1 CIRCUIT BREAKER Light Control

Rotate – controls P-6 and P-18 circuit breaker panels light brightness.

2 PANEL Light Control

Rotate – controls forward and aft overhead panel lights brightness.

Dome Light Control

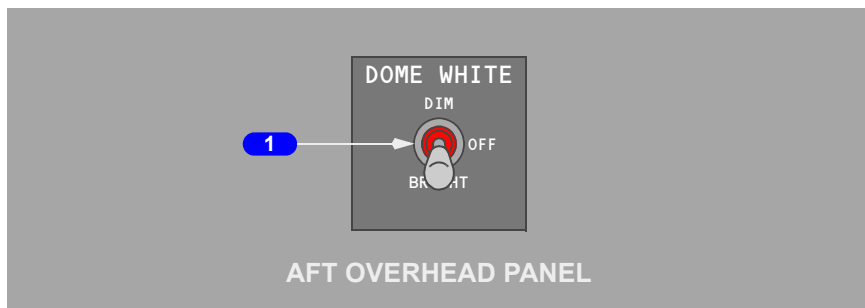


1 DOME Light Control

DIM – sets overhead dome lights to low brightness.

OFF – overhead dome lights are extinguished.

BRIGHT – sets overhead dome lights to full brightness.

Master Lights Test and Dim Switch

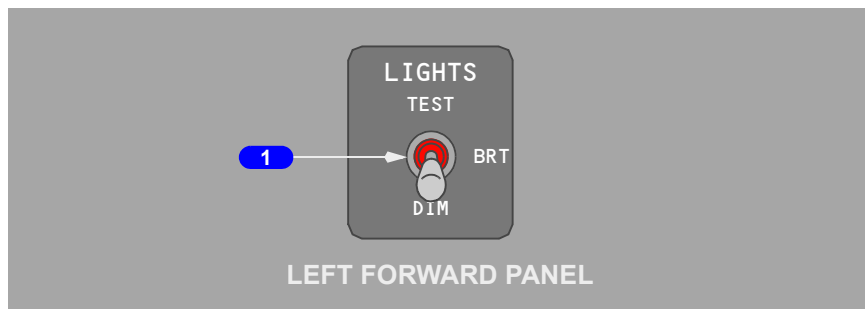

1 Master LIGHTS TEST and DIM SWITCH

TEST – illuminates all system lights on forward and aft overhead panels, and some lights on Captain and First Officer instrument panels to full brightness.


BRT (bright) – sets all system lights on forward and aft overhead panels, and some lights on Captain and First Officer panels to full brightness.

DIM – sets all system lights on forward and aft overhead panels, and some lights on Captain and First Officer panels to low brightness.

Note: Placing the Master Lights Test and Dim Switch in the TEST position will result in a master caution recall and any stored fault will cause the associated light to remain illuminated when the switch is released.

Exterior Lighting

Landing, Runway Turnoff and Taxi Lights

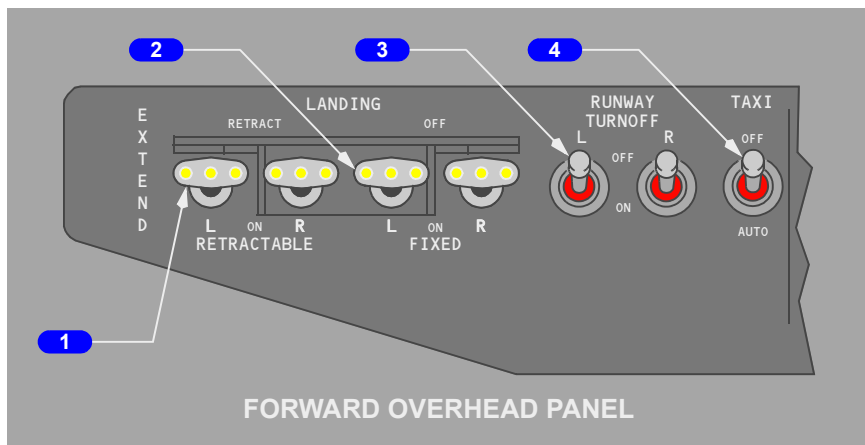

1 RETRACTABLE LANDING Light Switch

RETRACT – retractable landing lights are retracted and extinguished

EXTEND – retractable landing lights are extended and extinguished

ON – retractable landing lights are extended and illuminated.

2 FIXED LANDING Light Switch

OFF – fixed landing lights are extinguished.

ON – fixed landing lights are illuminated.

3 RUNWAY TURNOFF Light Switch

OFF – runway turnoff lights located in leading edge of wing root are extinguished.


ON – runway turnoff lights are illuminated.

4 TAXI Light Switch

OFF – nose wheel well taxi light extinguished.

AUTO – nose landing gear taxi light automatically extinguishes when the nose landing gear retracts.

Miscellaneous Exterior Lights

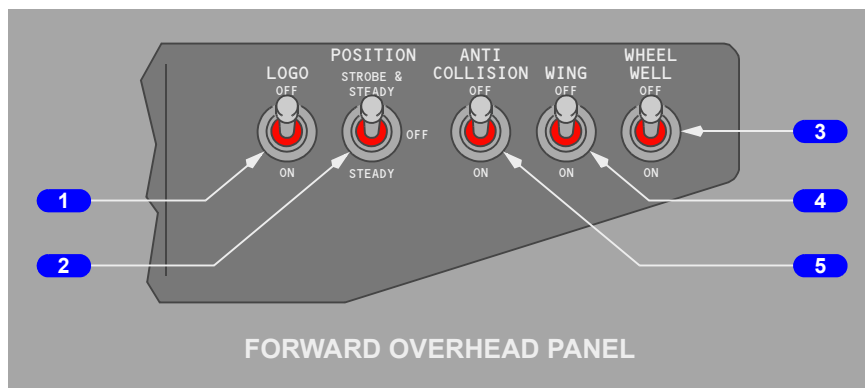

1 LOGO Light Switch

OFF – logo lights on each side of vertical fin extinguished.

ON – logo lights illuminated.

2 POSITION Light Switch

STROBE & STEADY – red and green wing-tip position lights, white trailing edge wing-tip lights and wing-tip and tail strobe lights illuminated.

OFF – red and green wing-tip position lights, white trailing edge wing-tip lights and wing-tip and tail strobe lights extinguished.

STEADY – red and green wing-tip position lights and white trailing edge wing-tip lights illuminated.

3 WHEEL WELL Light Switch

OFF – three wheel well lights extinguished.

ON – wheel well lights illuminated.

4 WING Illumination Switch

OFF – wing leading edge lights on fuselage forward of wing extinguished.

ON – wing leading edge lights illuminated.


5 ANTI-COLLISION Light Switch

OFF – red strobe/rotating beacon lights on upper and lower fuselage extinguished.

ON – red strobe/rotating beacon lights illuminated.

Emergency Lighting and Passenger Signs

Flight Deck

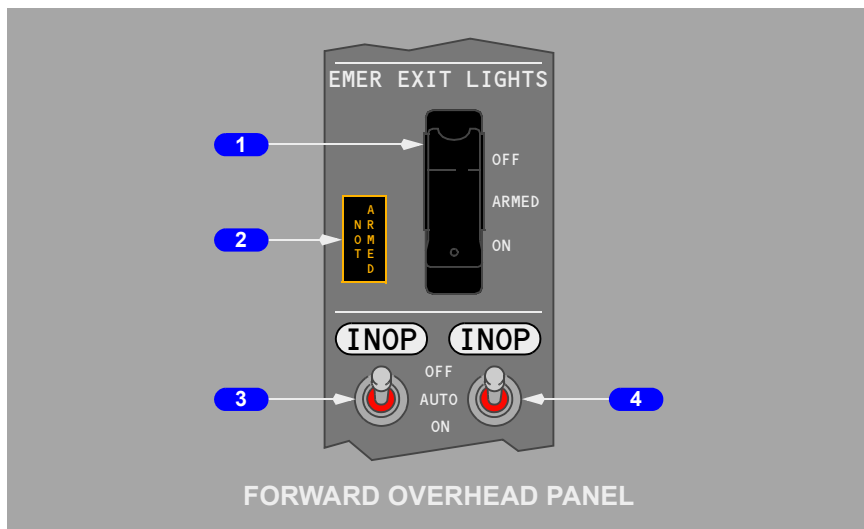

1 Emergency (EMER) EXIT LIGHTS Switch

OFF – prevents emergency lights system operation if airplane electrical power fails or is turned off.

ARMED – (guarded position) all emergency lights illuminate automatically if airplane electrical power to DC bus No. 1 fails or AC power is turned off.

ON – all emergency lights illuminate.

2 Emergency (EMER) EXIT LIGHTS NOT ARMED Light

Illuminated (amber) – EMER EXIT LIGHTS switch not in ARMED position.

3 NO SMOKING Switch

OFF – the NO SMOKING signs are not illuminated.

AUTO – the NO SMOKING signs are illuminated or extinguished automatically with reference to airplane configuration (refer to the Lighting System Description section).

ON – the NO SMOKING signs are illuminated.


4 FASTEN BELTS Switch

OFF – the FASTEN SEAT BELTS and RETURN TO SEAT signs are not illuminated.

AUTO – the FASTEN SEAT BELTS and RETURN TO SEAT signs are illuminated or extinguished automatically with reference to airplane configuration (refer to the Lighting System Description section).

ON – the FASTEN SEAT BELTS and RETURN TO SEAT signs are illuminated.


Passenger Cabin

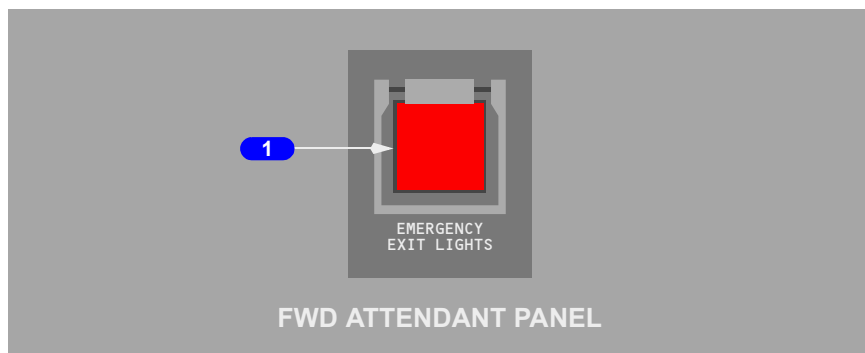

1 Passenger Cabin Emergency Lights Switch (guarded)

On – illuminates all emergency lights and bypasses flight deck control.

Emergency Locator Transmitter

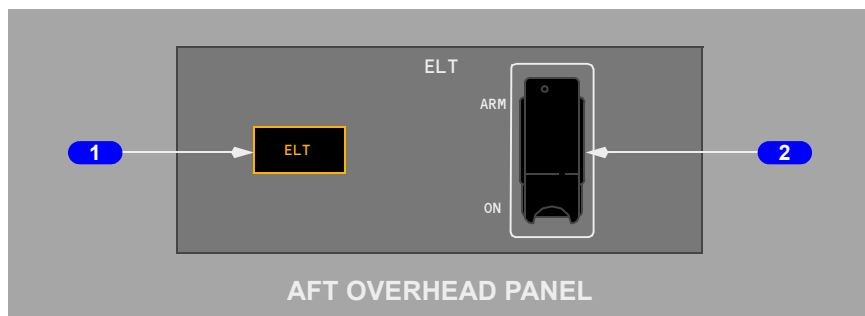

1 Emergency Locator Transmitter Light

Illuminated (amber) – ELT has been activated and is simultaneously transmitting on 121.5, 243.0 and 406.0 mhz.

2 Emergency Locator Transmitter Switch


ARM – (guarded position) ELT transmits automatically when it reaches its preset G-Load limit.

ON – manually activates the ELT.

Doors

Cabin Door

[Original Flight Deck Door]

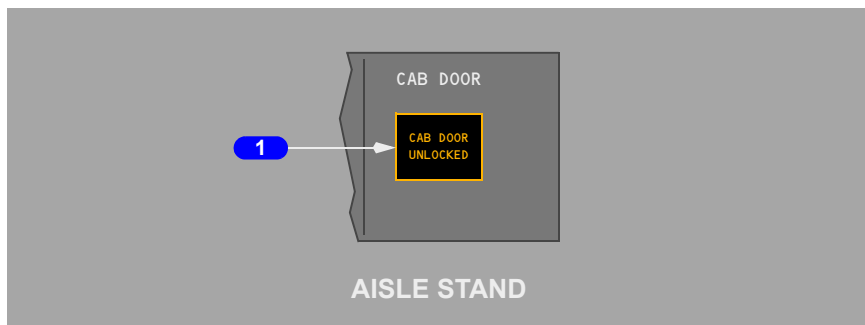


1 Cabin Door (CAB DOOR) Lock Switch

Illuminated (amber) – cabin door is unlocked.

Push – with DC power available, locks cabin door

[Flight Deck Door]

Flight Deck Door

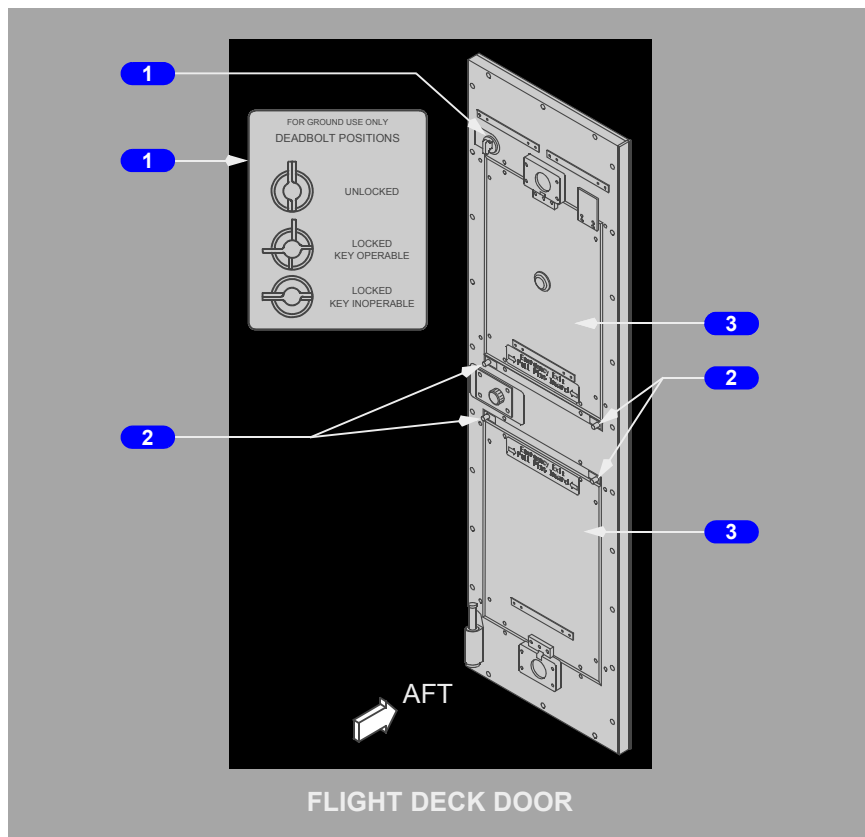

1 Deadbolt and Deadbolt Placard


2 Release Pins

Pull pins inward - manually separates decompression panel from a jammed door to allow panel opening and egress.

3 Decompression Panel

Provides emergency egress path and automatically opens during airplane decompression.

Flight Deck Emergency Access Panel

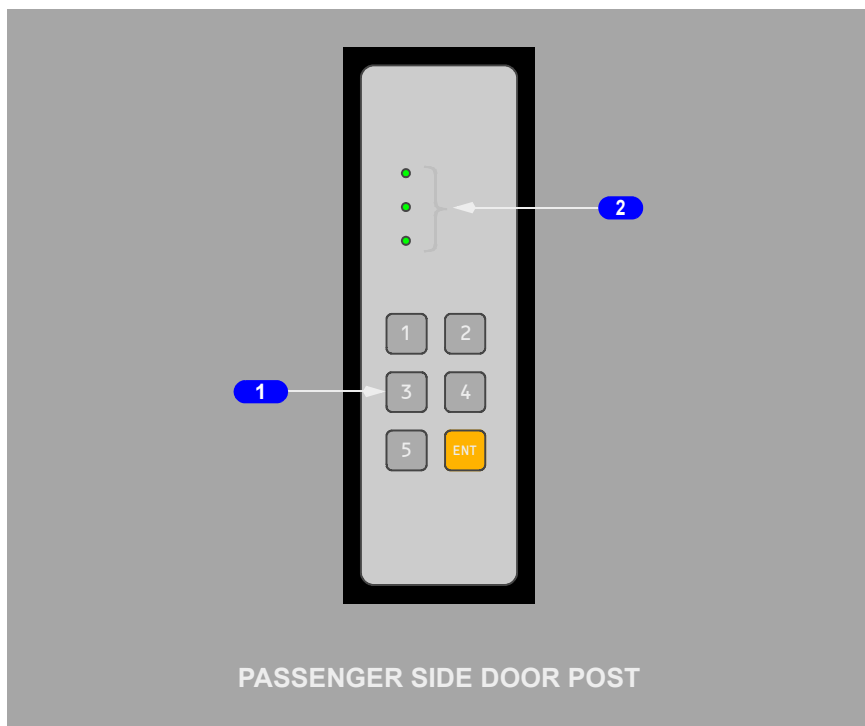

1 Keypad

Push - enters 3 to 8 digit emergency access code by pressing numeric then "ENT" keys. Entry of correct emergency access code sounds flight deck chime.


2 Access Lights

Illuminated (red) - door locked or Flight Deck Access System switch OFF.

Illuminated (amber) - correct emergency access code entered.

Illuminated (green) - door unlocked.

Flight Deck Access System Switch

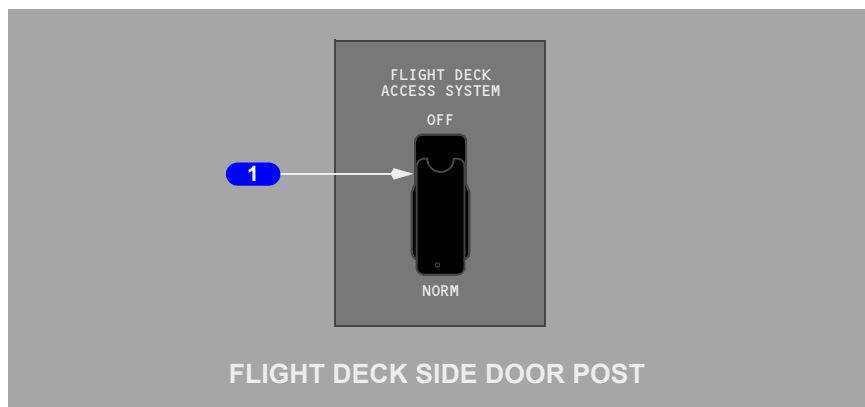


1 Flight Deck Access System Switch

OFF - removes electrical power from door lock.

NORM (Normal) - flight deck access system configured for flight.

Flight Deck Door Lock Panel

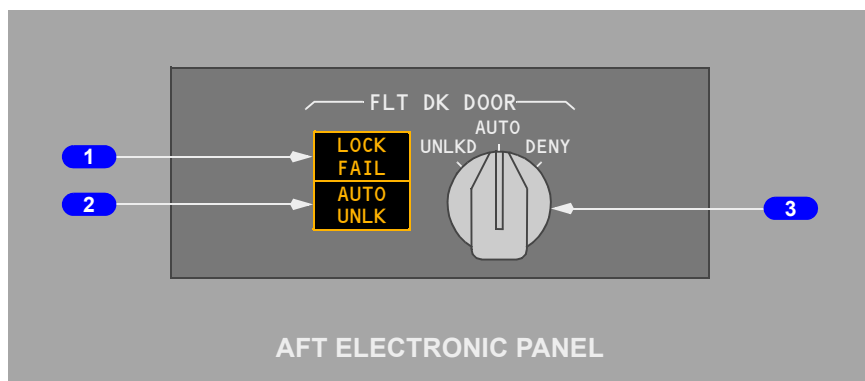

1 LOCK FAIL Light

Illuminated (amber) - Flight Deck Door Lock selector in AUTO and door lock has failed or Flight Deck Access System switch is OFF.

2 AUTO Unlock (UNLK) Light

Illuminated (amber) - correct emergency access code entered in keypad. AUTO UNLK light flashes and continuous chime sounds before timer expires and door unlocks.

3 Flight Deck (FLT DK) Door Lock Selector

Spring loaded to AUTO. Selector must be pushed in to rotate from AUTO to UNLKD. Selector must not be pushed in to rotate from AUTO to DENY.


UNLKD - door unlocked while selector in UNLKD.

AUTO - door locked. Allows door to unlock after entry of emergency access code and expiration of timer, unless crew takes action.


DENY - rejects keypad entry request and prevents further emergency access code entry for a time period.

Exterior Door Annunciator Lights

[Option - Typical BBJ with airstairs]

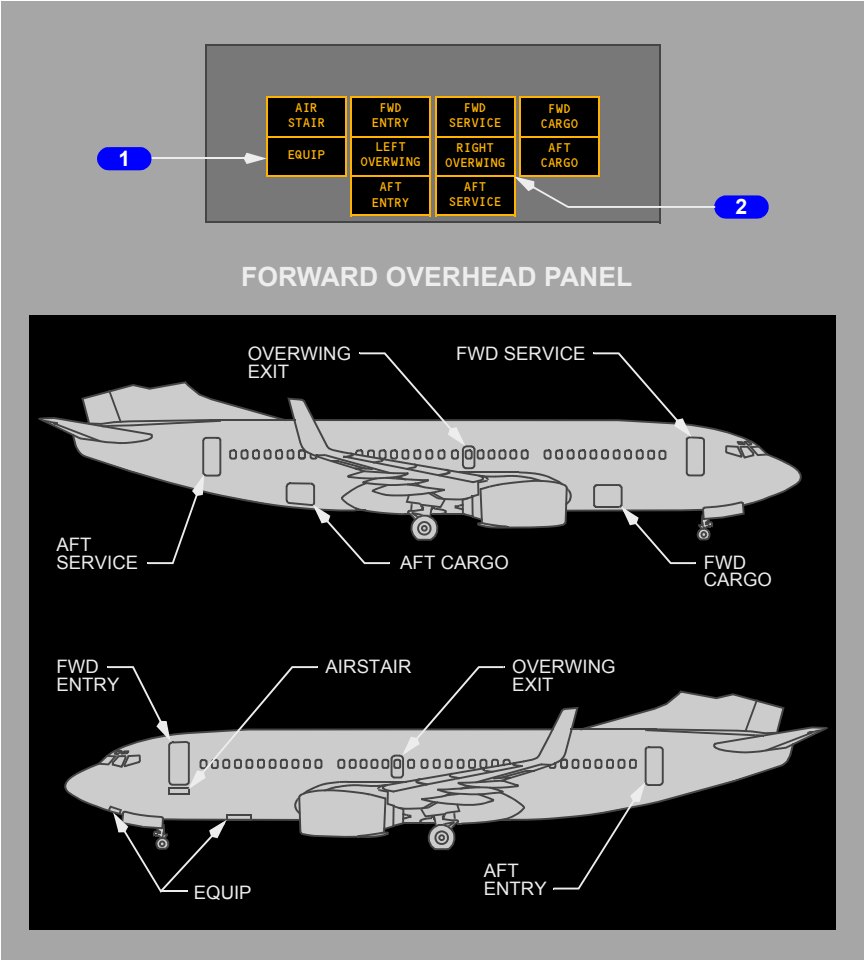

[Option - Typical BBJ-2/BBJ-3 with airstairs and winglets]

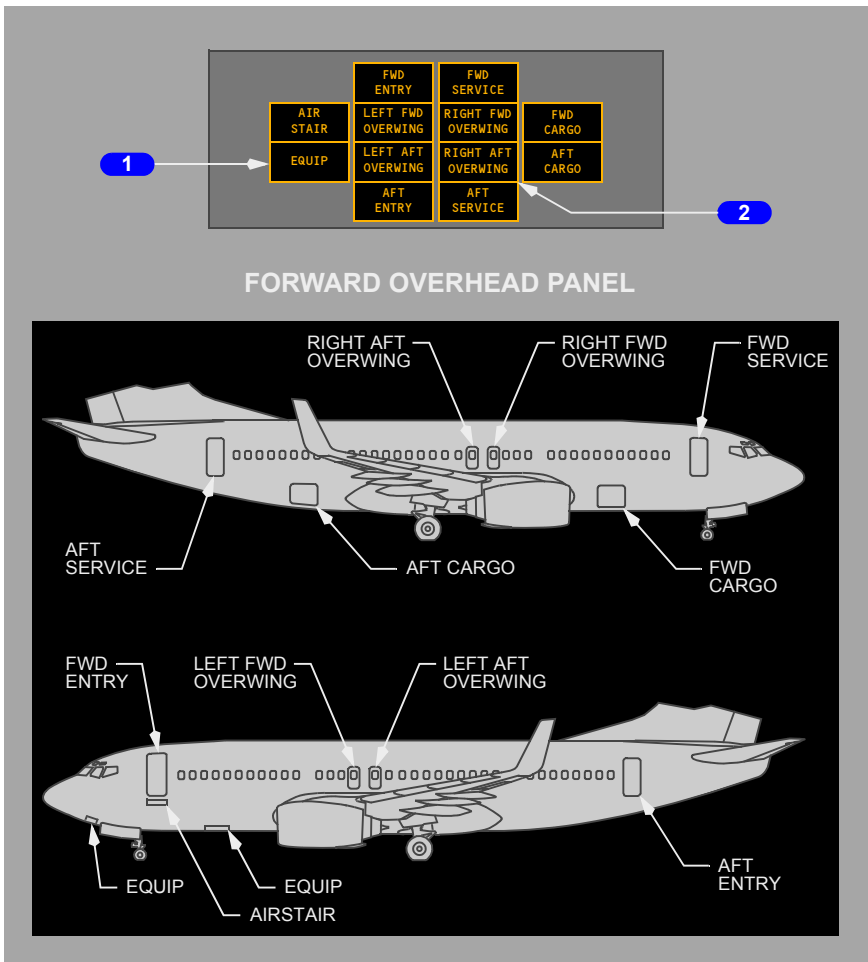

1 Exterior Door Annunciations


Illuminated (amber) – related door is not closed and locked.

2 Overwing Exit Annunciations

Illuminated (amber) –.

- related overwing exit is not closed and locked
- related flight lock failed to engage when commanded locked.

Passenger Entry/Galley Service Doors

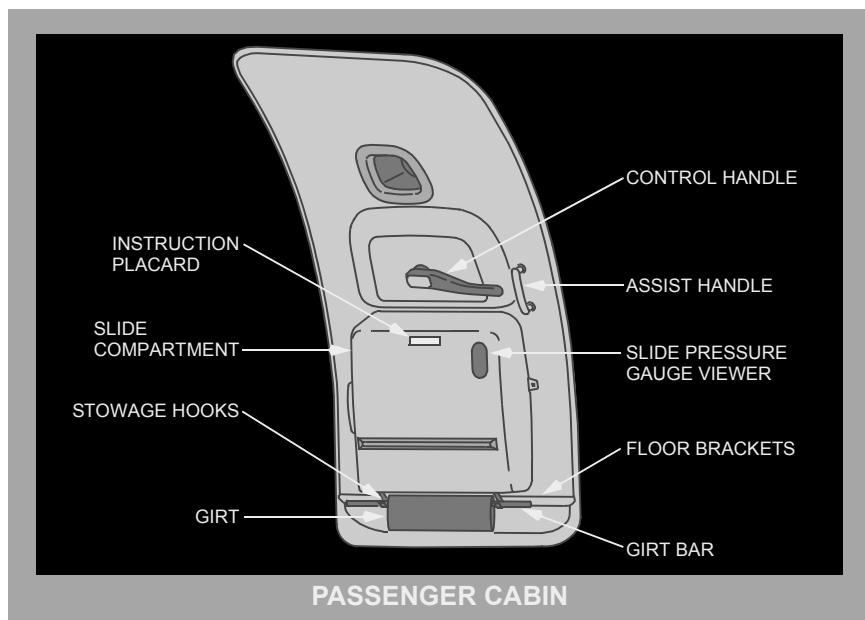

Oxygen

Oxygen Panel



1 Flight CREW OXYGEN Pressure Indicator

Indicates pressure at the crew oxygen cylinder.

2 Passenger Oxygen (PASS OXYGEN) Switch


NORMAL – (guarded position) passenger masks drop and passenger oxygen system activated automatically if cabin altitude climbs to 14,000 feet

ON – activates system and drops masks if automatic function fails.

3 Passenger Oxygen On Light

Illuminated (amber) – passenger oxygen system is operating and masks have dropped.

Oxygen Mask Panel

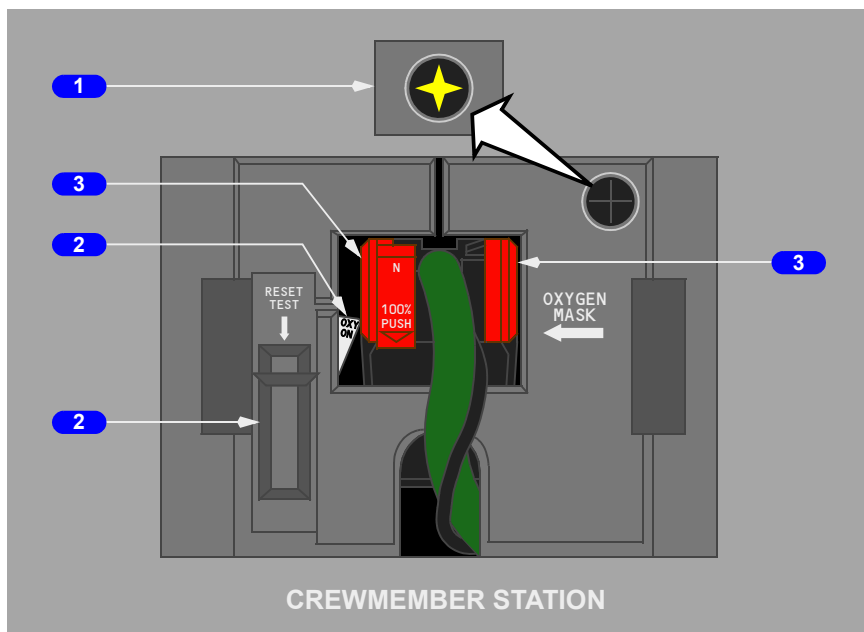

1 Oxygen Flow Indicator

Indicates a yellow cross when oxygen is flowing.

2 RESET/TEST Switch

Push –


- with the left oxygen mask panel door closed and the OXY ON flag not displayed, turns oxygen on momentarily to test the regulator
- with the left oxygen mask panel door closed and the OXY ON flag displayed will turn oxygen off and disable the mask microphone and enable the boom microphone.

3 Oxygen Mask Release Lever

Squeeze and pull up –

- releases mask from stowage box
- releases OXY ON flag when stowage box doors open
- activates oxygen and microphone
- inflates mask harness when inflation lever is squeezed
- flow indicator shows a yellow cross momentarily as harness inflates.

Oxygen Mask and Regulator

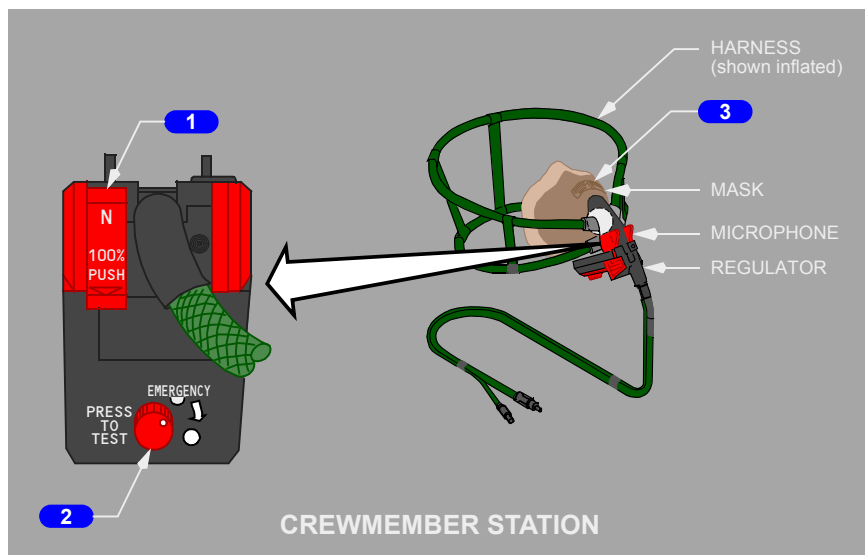

1 NORMAL/100% Switch

N (normal) – supplies air/oxygen mixture on demand (ratio depends on cabin altitude).

100% – supplies 100% oxygen on demand.

2 Oxygen Mask EMERGENCY/Test Selector (rotary)

Normal (non-emergency) position - supplies air/oxygen mixture or 100% oxygen on demand, depending upon the position of the Normal/100% switch.

Automatically supplies 100% oxygen under positive pressure when cabin altitude is above a preset value.

EMERGENCY position (rotate in the direction of the arrow) - supplies 100% oxygen under positive pressure at all cabin altitudes (protects against smoke and harmful vapors).

PRESS TO TEST – tests positive pressure supply to regulator.

3 Smoke Vent Valve Selector


Up - vent valve closed.

Down - vent valve open, allowing oxygen flow to smoke goggles.

Forward Airstairs

Interior and Exterior Controls

[Option - airstair]

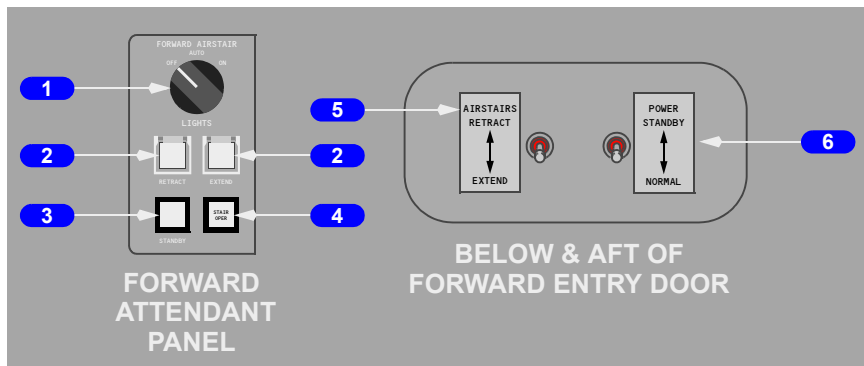

1 LIGHTS Switch

AUTO – the airstair tread lights illuminate automatically upon airstair extension and extinguish upon retraction.

ON – illuminates the airstair tread lights.

2 Normal Control Switches

Note: AC and DC electrical power must be available on airplane.

RETRACT – retracts the airstair. The handrail extensions must be stowed prior to retracting the airstair.

EXTEND – extends the airstair.

3 STANDBY Control Switch

Note: Switch must be held in while using EXTEND or RETRACT. Battery switch must be ON.

EXTEND – extends the airstair.

RETRACT – retracts the airstair.

CAUTION: Use of standby bypasses all safety circuits. Airstair handrail extensions must be stowed or substantial damage could result.

4 STAIRS Operating (OPER) Light

Illuminated (amber) – indicates the airstair is in transit.

5 AIRSTAIRS Control Switch

EXTEND – extends the airstair.

RETRACT – retracts the airstair.


6 POWER Switch

(spring-loaded to NORMAL)

NORMAL – requires both AC and DC power.

STANDBY – requires DC power.

Water System Controls

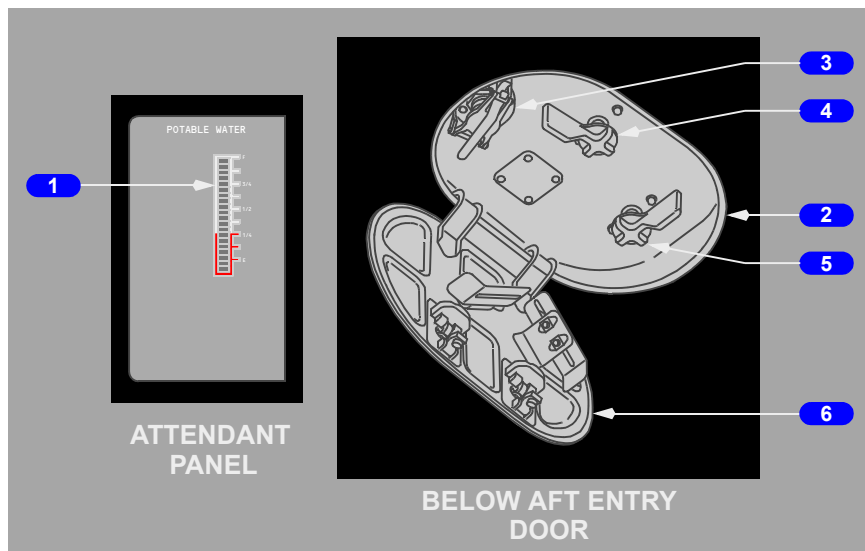

1 Water Quantity Indicator

Indicates quantity of water in reservoir.

2 Water System Service Panel

3 Fill Fitting

Used to fill tank.

4 Fill and Overflow Valve Handle

Open - enables filling or gravity draining water tank.

Closed - normal position.

5 Tank Drain Valve Handle

Open - drains water from tank.


Closed - normal position.

6 Access Panel

Cannot be closed unless the Fill and Overflow Valve and Tank Drain Valve Handles are in the closed position.

Lavatory Controls

[Option - Early Airplanes]

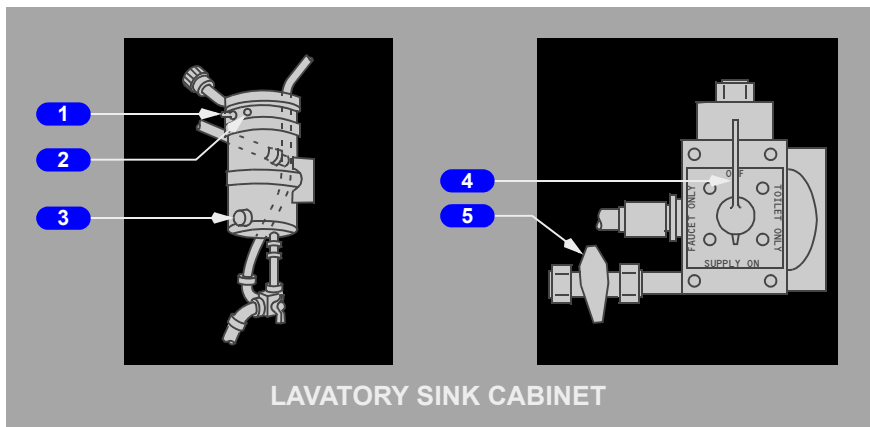

1 Water Heater Switch

On – activates the water heater.

2 Water Heater Light

Illuminated - heater operating.

3 Temperature Control Switch

4 Water Supply Selector Valve

SUPPLY ON – provides water to lavatory sink faucets and water heater (normal position).

FAUCET ONLY – water is supplied to faucet only.


OFF – shuts off water to lavatory sink faucets and water heater.

TOILET ONLY – water is supplied to toilet only.

5 Drain Valve

Located in the forward lavatory.

[Newer airplanes]

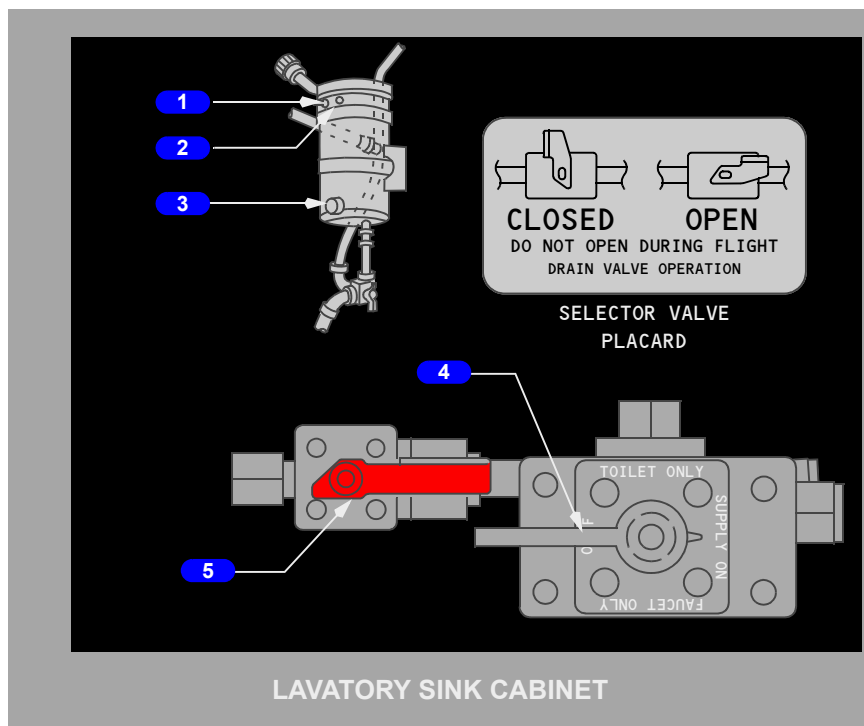

1 Water Heater Switch

On – activates the water heater.

2 Water Heater Light

Illuminated - heater operating.

3 Temperature Control Switch

4 Water Supply Selector Valve

Each lavatory has a Water Supply Selector Valve. The Water Supply Selector Valve has four positions, and is located in the cabinet below the sink.

SUPPLY ON – Normal operating position. When the water system is depressurized, all lavatories except “A” will drain. In this lavatory, the drain valve must be opened to drain the lavatory

FAUCET ONLY – In this position, water is supplied to the faucet, but not to the toilet

TOILET ONLY – In this position, water is supplied to the toilet, but not to the faucet

OFF – No water is supplied to the lavatory.

5 Drain Valve Handle (red)

Located in the forward lavatory only.

Intentionally
Blank

**Airplane General, Emergency
Equipment, Doors, Windows
Systems Description****Chapter 1****Section 40**

Introduction

[Option - airstairs installed]

This chapter describes miscellaneous airplane systems, including:

- lighting systems
- oxygen systems
- fire extinguishers
- emergency equipment
- doors and windows
- cargo compartments
- emergency egress
- flight deck seats
- galleys
- water systems
- lavatories
- airstairs.

Lighting Systems

Lighting systems described in this chapter include:

- exterior lighting
- flight deck lighting
- passenger cabin lighting
- emergency lighting.

Exterior Lighting

Exterior lighting consists of these lights:

- landing
- runway turnoff
- taxi
- logo
- position (navigation)
- strobe
- anti-collision
- wing illumination
- wheel well.

Retractable Landing Lights

Retractable landing lights are installed in the lower airplane fuselage. The lights are designed to extend and shine forward, parallel to the waterline of the airplane. The lights may be extended at any speed.

Fixed Landing Lights

Two fixed landing lights are in the wing leading edge. The lights shine forward and down in a fixed position.

Runway Turnoff Lights

Runway turnoff lights are in each wing root. The lights illuminate the area in front of the main gear.

Taxi Lights

The taxi light is mounted on the nose wheel strut and points in the same direction as the nose wheel. The light extinguishes automatically when the nose gear is retracted.

Logo Lights

Logo lights are located on the top of each horizontal stabilizer surface to point light on both sides of the vertical stabilizer.

Position Lights

[\[Option - winglets\]](#)

The navigation lights are the standard red (left forward, at the base of the winglet), green (right forward, at the base of the winglet), and white (trailing edge of both wings, just inboard of the winglet).

Strobe Lights

[\[Option - winglets\]](#)

Three high intensity white strobe lights are installed on the left forward winglet, right forward winglet, and tail cone.

Anti-collision Lights

Two red anti-collision strobe lights are located on the top and bottom of the fuselage.

Wing Illumination Lights


Wing lights are installed on the fuselage and illuminate the leading edge of the wing.

Wheel Well Lights

Lights are installed in the wheel well of the nose gear and each main gear.

Exterior Lighting Locations

[Option: winglets]

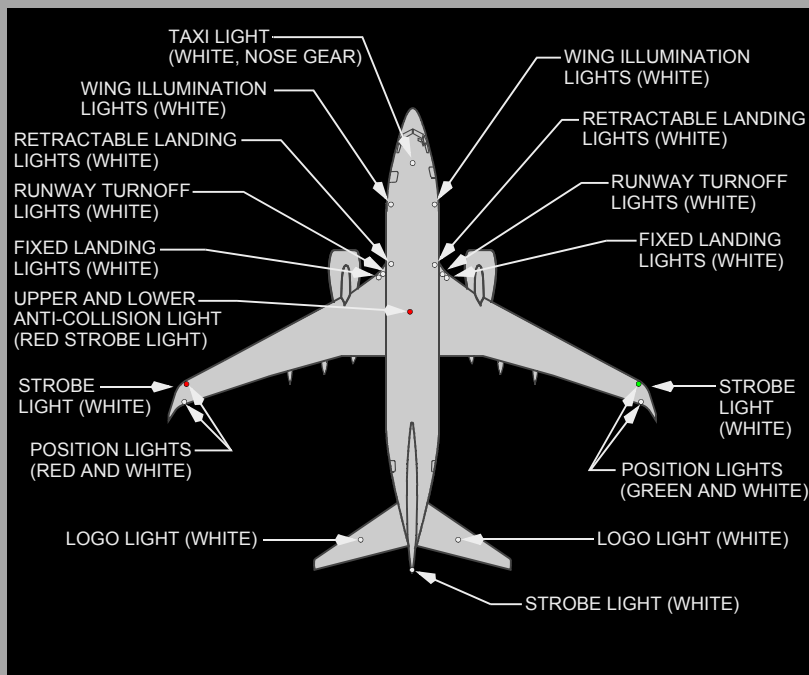

Flight Deck Lighting

Flight deck lighting is provided for panel illumination, area lighting and localized illumination. Dome lights supply general flight deck flood lighting. The glareshield supplies background light for the main instrument panels. Each instrument and instrument panel has its own integral lights. Floodlights are installed for the MCP, aisle stand, and aft circuit breaker panel.

Map lights, chart lights and utility lights are available at the pilot stations, each with individual controls.

If normal electrical power is lost, standby electrical power is automatically provided to the standby compass light, dome lights, instrument flood lights and selected system information and warning lights.

Passenger Cabin Lighting

Passenger cabin lighting is supplied by incandescent and fluorescent lights. General cabin lighting is provided by window lights, ceiling lights, and entry lights. Lights are also installed in the lavatories and galleys.

Passenger Cabin Signs

The passenger cabin signs are controlled by a switch on the forward overhead panel. With Auto selected, the signs are controlled automatically by reference to landing gear and flap positions:

FASTEN BELTS and RETURN TO SEAT signs:

- illuminate when flaps or gear are extended
- extinguish when flaps and gear are retracted.

NO SMOKING signs:

- illuminate when gear is extended
- extinguish when gear is retracted.

All passenger signs can be controlled manually by positioning the respective switch to ON or OFF.

When the passenger cabin signs illuminate or extinguish, a low tone sounds over the PA system.

Emergency Lighting

Exit lights are located throughout the passenger cabin to indicate the approved emergency exit routes. The system is controlled by a switch on the overhead panel. The switch has three positions, OFF, ARMED and ON and is guarded to the ARMED position. With the switch in the ARMED position, the emergency exit lights are normally extinguished. If electrical power to DC bus No. 1 fails or if AC power has been turned off, the emergency exit lights illuminate automatically.

The emergency exit lights may also be illuminated by a switch on the attendants panel. Lifting the guard and pushing the switch ON overrides the flight deck control and illuminates the emergency exit lights. Control from this panel is available in the event of failure of the automatic control.

The flight deck aft DOME light contains a separate bulb that is powered by the emergency lighting system to provide for flight deck evacuation.

Interior Emergency Lighting

Interior emergency exit lights are located:

- in the lower inboard corner of stowage bins to illuminate the aisle
- over the entry/service and overwing emergency doors to indicate the door exits
- in the ceiling to locate the exits and provide general illumination in the area of the exits.

Self-illuminating exit locator signs are installed at the forward, middle, and aft end of the passenger cabin.

Lighted EXIT indicators with arrows point to overwing exits. Lighted EXIT indicators without arrows are placed near each door. Escape path markings are provided for visual guidance for emergency cabin evacuation when other sources of cabin lighting are obscured.


Exterior Emergency Lighting

[Option - 737-600/700/800/900]


Exterior emergency lights illuminate the escape slides. The fuselage installed escape slide lights are adjacent to the forward and aft service and entry doors. Lights are also installed on the fuselage to illuminate the overwing escape routes and ground contact area.

Emergency Exit Lighting

[Option - BBJ]

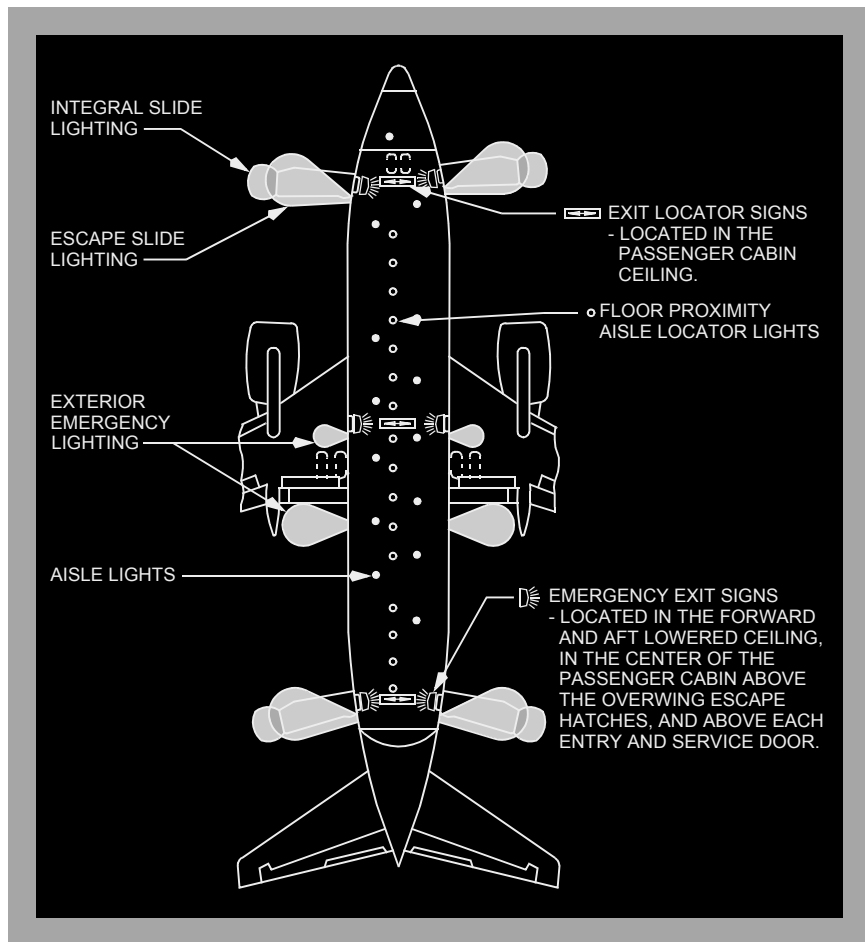


[Option - BBJ-2/BBJ-3]

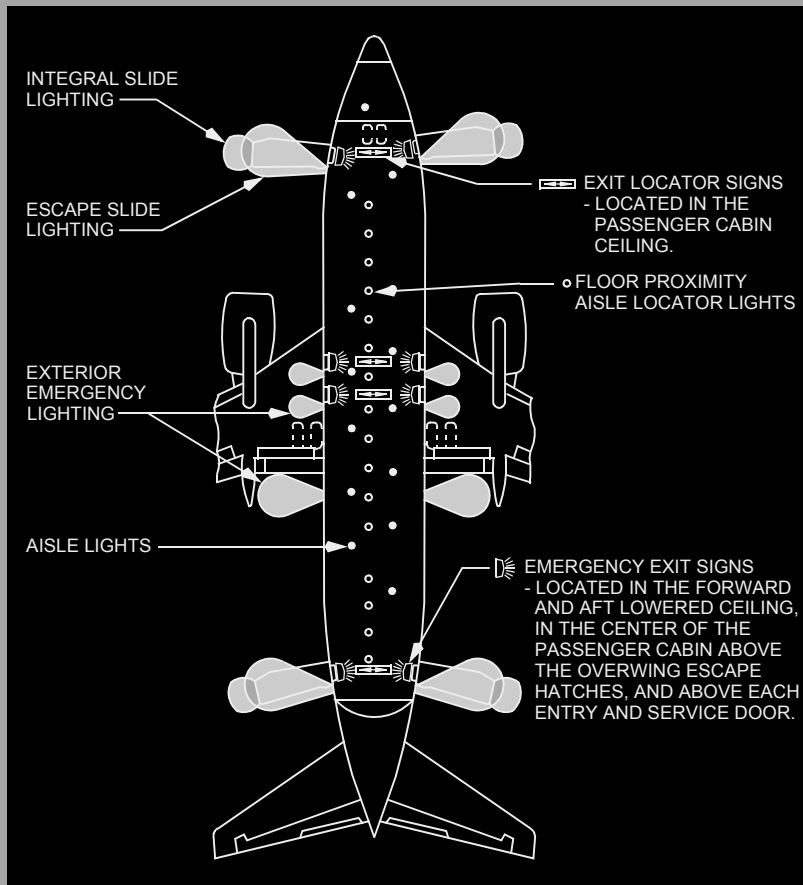

Oxygen Systems

Two independent oxygen systems are provided, one for the flight crew and one for the passengers. Portable oxygen cylinders can be located throughout the airplane for emergency use. These cylinders are normally found in the forward and aft areas of the passenger cabin.

Oxygen System Schematic

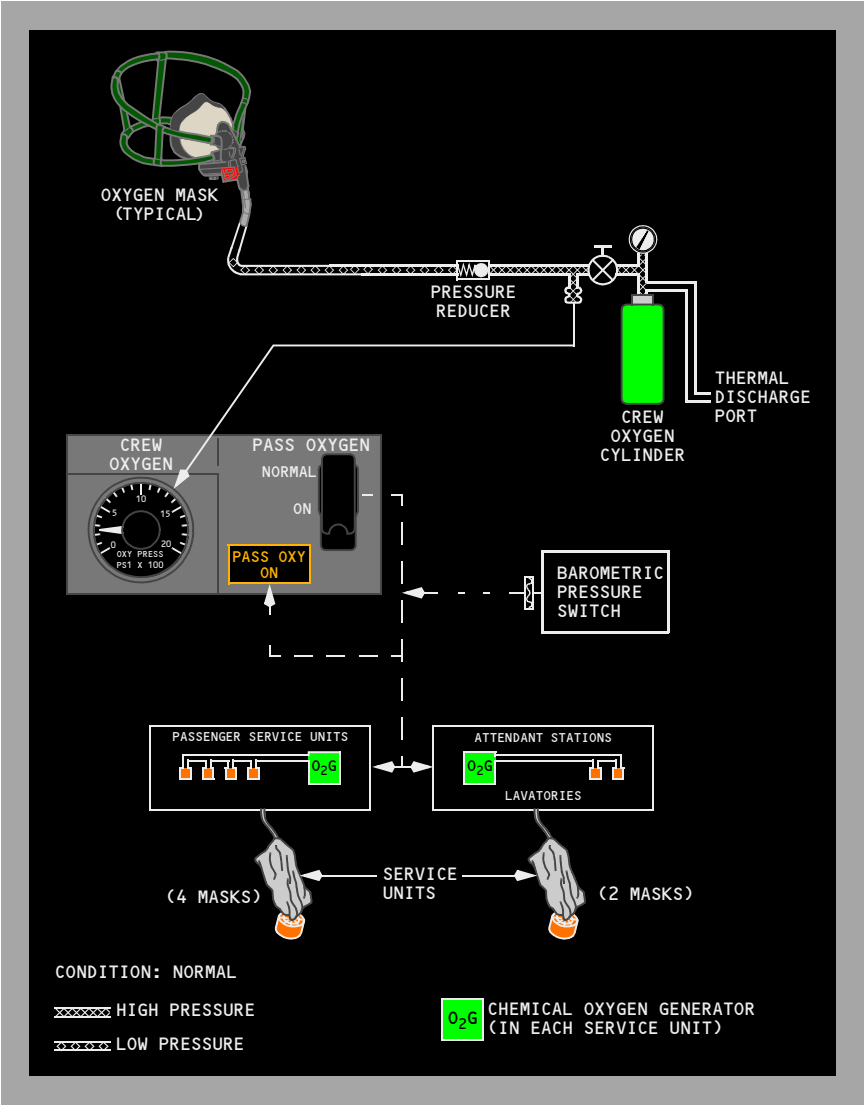

Flight Crew Oxygen System

The flight crew oxygen system uses automatic pressure-breathing masks/regulators located at each crew station. Pressure breathing occurs above 27,000 feet. Oxygen is supplied by a single cylinder. Oxygen pressure is displayed on the indicator located on the aft overhead panel. Oxygen flow is controlled through a pressure-reducing regulator to supply low-pressure oxygen. System pressure may be as high as 1850 psi.

Oxygen flow is controlled by a regulator mounted on the oxygen mask. By pushing the NORMAL/100% control lever, the regulator is adjusted from the air/oxygen mixture to 100% oxygen. By rotating the EMERGENCY/PUSH TO TEST selector, the regulator is adjusted to supply oxygen under pressure.





Flight Crew Oxygen Mask Usage

Donning Instructions

To don the mask, grasp the regulator with the thumb and forefinger and remove from stowage. Squeezing the inflation levers and removing from the box:

- inflates the mask harness
- momentarily displays a colored oxygen flow indicator.
- Place the mask over the head and release the levers. The harness contracts to fit the mask to head and face.

The observer's oxygen mask, regulator, and harness unit is the same as the pilots'.

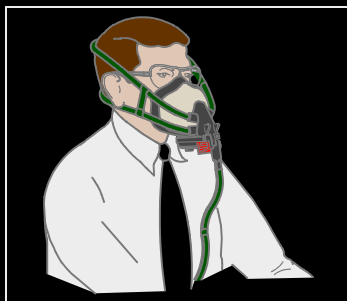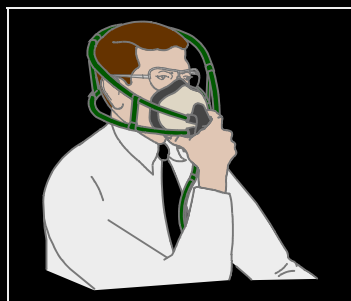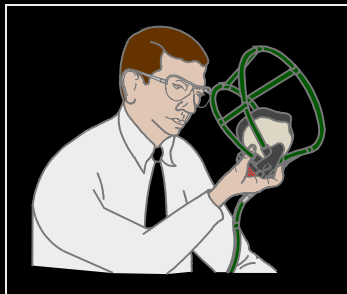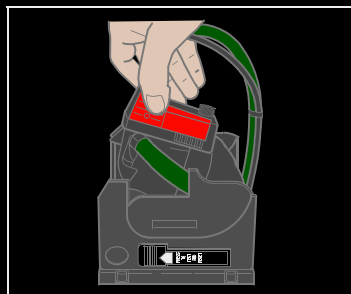

MASK DONNING

Fire Extinguishers

Fire extinguishers are located in the flight deck and passenger cabin.

Water Fire Extinguishers


Water fire extinguishers contain a solution of water mixed with antifreeze. The container is pressurized by a CO2 cartridge when the extinguisher handle is rotated fully clockwise. The extinguisher should be used on fabric, paper or wood fires only.

To use the water fire extinguisher:

- remove from stowage
- rotate handle fully clockwise
- aim at base of fire and press trigger.

CAUTION: Do not use on electrical or grease type fires.

Water Fire Extinguisher

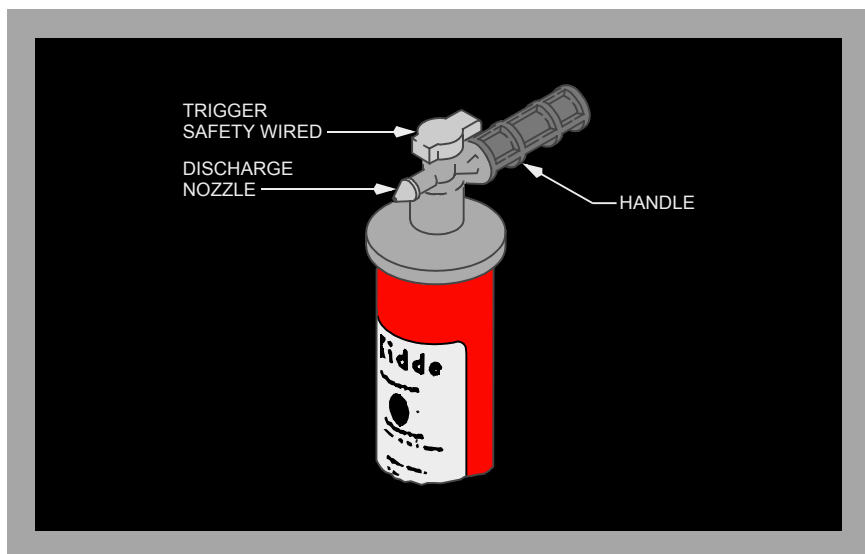


Halon (BCF) Fire Extinguishers

Halon (BCF) fire extinguishers contain a liquefied gas agent under pressure. The pressure indicator shows an acceptable pressure range, a recharge range, and an overcharged range. A safety pin with a pull ring prevents accidental trigger movement. When released the liquefied gas agent vaporizes and extinguishes the fire. The extinguisher is effective on all types of fires, but primarily on electrical, fuel and grease fires.

Direction for use of the fire extinguisher is printed on the extinguisher.

BCF Fire Extinguisher (Halon 1211)

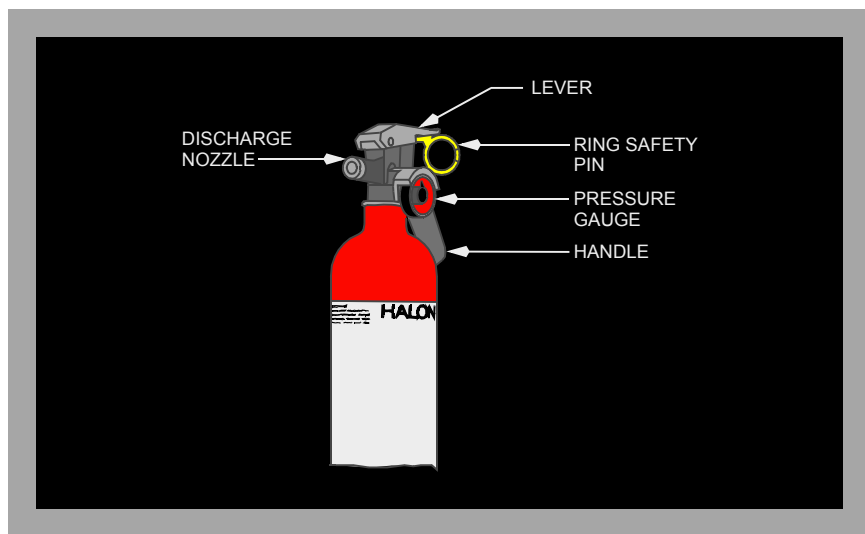

Fire Extinguisher Usage

Each class of fire calls for specialized action. Using the wrong extinguisher may do more harm than good. For your own protection, you should know these basic types, how to use them, and why. These are the fire classification codes:

UNITED STATES CLASS OF FIRES There are three common classes of fire:		EXTINGUISHER TYPE	
CLASS 	COMBUSTIBLE MATERIALS paper, wood, fabric, rubber, certain plastics, etc., where quenching by water is effective.	TYPE 	Water (H2O) saturates material and prevents rekindling
CLASS 	FLAMMABLE LIQUIDS gasoline, oils, greases, solvents, paints, burning liquids, cooking fats, etc., where smothering action is required.	TYPE 	BCF (Halon 1211)
CLASS 	LIVE ELECTRICAL fires started by short circuit or faulty wiring in electrical, electronic equipment or fires in motors, switches, galley equipment, etc., where a nonconducting extinguisher agent is required. NOTE: Whenever possible, electrical equipment should be de-energized before attacking a class C fire.	TYPE 	BCF (Halon 1211)

WARNING: THE WRONG EXTINGUISHER ON A FIRE COULD DO MORE HARM THAN GOOD. FOR EXAMPLE,
A  RATED EXTINGUISHER IS NOT AS EFFECTIVE AS H2O ON A CLASS  FIRE.
WATER ON FLAMMABLE LIQUID FIRES SPREAD THE FIRE. WATER ON A LIVE
ELECTRICAL FIRE COULD CAUSE SEVERE SHOCK OR DEATH.

EUROPEAN/AUSTRALIAN CLASS OF FIRES There are three common classes of fire:		EXTINGUISHER TYPE	
CLASS 	COMBUSTIBLE MATERIALS paper, wood, fabric, rubber, certain plastics, etc., where quenching by water is effective.	TYPE 	Water (H2O) saturates material and prevents rekindling
CLASS 	FLAMMABLE LIQUIDS gasoline, oils, greases, solvents, paints, burning liquids, cooking fats, etc., where smothering action is required.	TYPE 	BCF (Halon 1211)
CLASS 	LIVE ELECTRICAL fires started by short circuit or faulty wiring in electrical, electronic equipment or fires in motors, switches, galley equipment, etc., where a nonconducting extinguisher agent is required. NOTE: Whenever possible, electrical equipment should be de-energized before attacking a class C fire.	TYPE 	BCF (Halon 1211)

WARNING: THE WRONG EXTINGUISHER ON A FIRE COULD DO MORE HARM THAN GOOD. FOR EXAMPLE, A   RATED EXTINGUISHER IS NOT AS EFFECTIVE AS H2O ON A CLASS  FIRE. WATER ON FLAMMABLE LIQUID FIRES SPREAD THE FIRE. WATER ON A LIVE ELECTRICAL FIRE COULD CAUSE SEVERE SHOCK OR DEATH.

WARNING: The concentrated agent, or the by-products created by the heat of the fire, are toxic when inhaled.

WARNING: If a fire extinguisher is to be discharged in the flight deck, then all crewmembers are to wear oxygen masks and use 100% oxygen with emergency selected.


Emergency Equipment Symbols




Intentionally
Blank

Emergency Equipment Locations


[Option - BBJ]

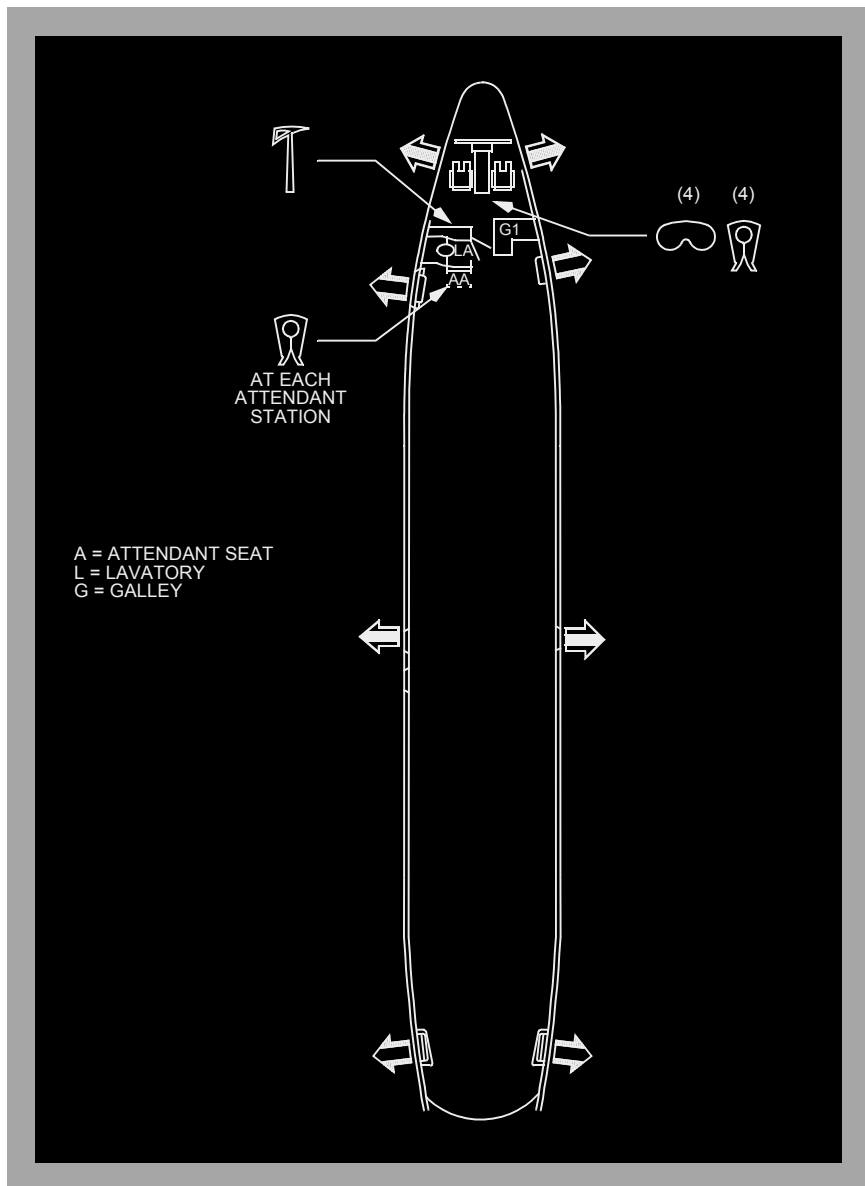

[Option - BBJ-2]

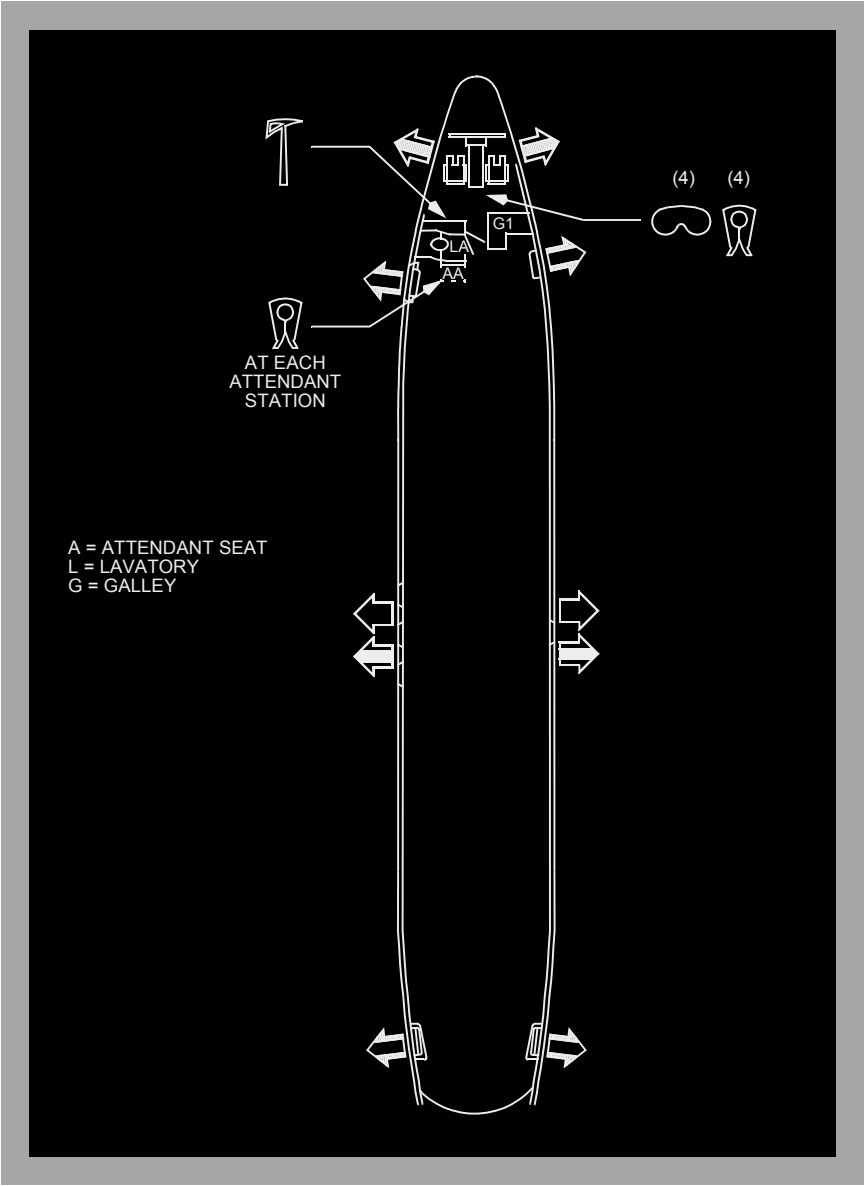

[Option - BBJ-3]

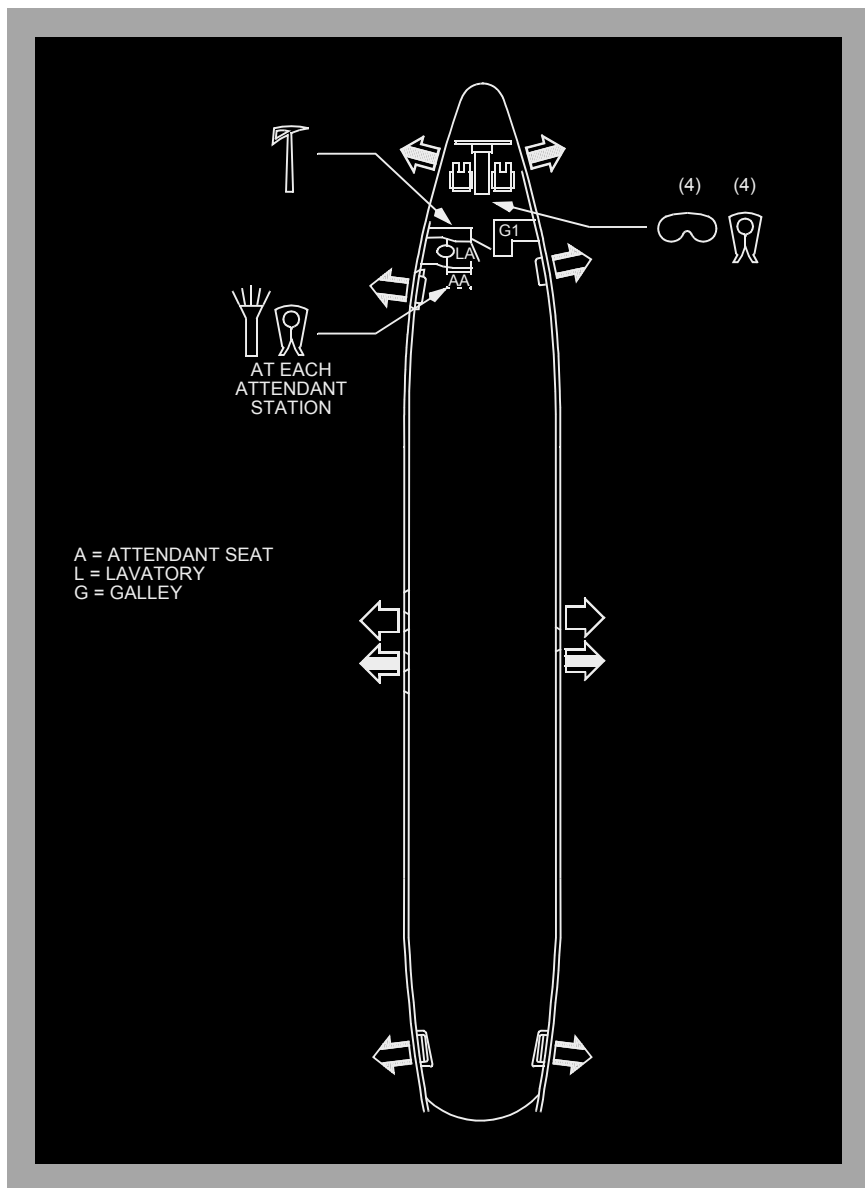

Intentionally
Blank

Doors and Windows

The airplane has two passenger entry doors, one cabin door (the flight deck/passenger cabin entry), two service doors and two cargo doors. There is also a center electrical and electronic (E/E) equipment access door and an equipment compartment access door on the bottom of the airplane.

The flight deck number two windows, one on the left and one on the right, can be opened by the flight crew.

CAUTION: Do not operate the entry or cargo doors with winds at the door of more than 40 knots. Do not keep doors open when wind gusts are more than 65 knots. Strong winds can cause damage to the structure of the airplane.


Cabin Door

[Original Flight Deck Door]

An electrical and keyed lock permits the door to be opened, closed and locked from either side. With 28 Volt DC power available, the door may be electrically locked or unlocked by pressing the door lock switch on the control stand; entrance from the passenger cabin requires a key when the door is electrically locked. The door cannot be locked without electrical power.

There are four blowout panels located in the cabin door. In the event of a sudden depressurization of the flight deck, the blowout panels hinge out from the door. This uncovers openings in the door and allows the air pressure in the flight deck and passenger cabin to equalize.

An emergency exit feature is also provided which permits the release and removal of the two upper blowout panels from the door. To operate, pull on the release handle while pressing on the panel below the release handle. Panel will not release unless both ends of handle have been pulled away from their locked position.

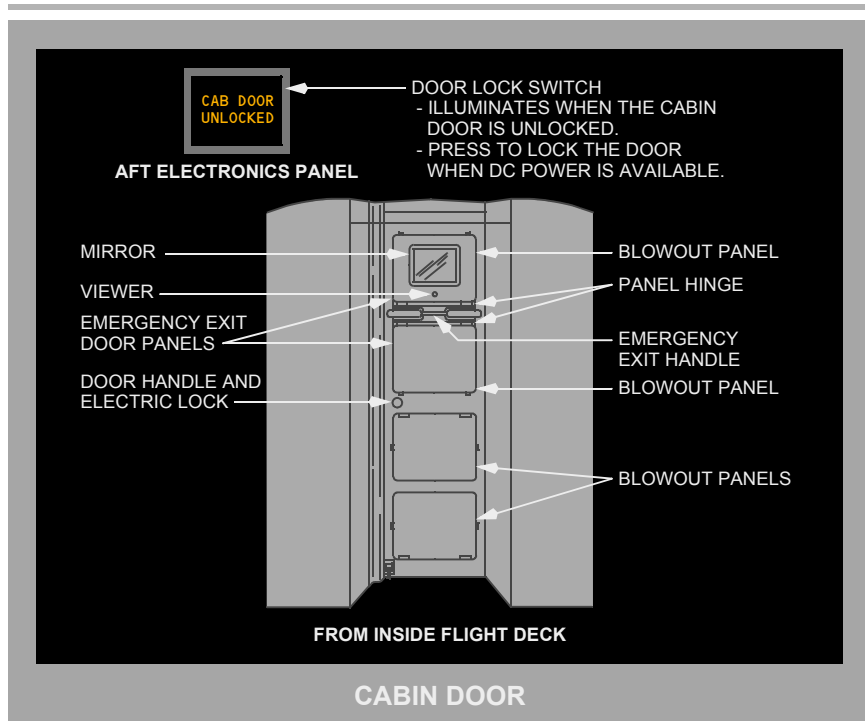

[Flight Deck Security Door]

Flight Deck Door

The flight deck door meets requirements for resistance to ballistic penetration and intruder entrance. The door opens into the passenger cabin. When closed, the door locks when electrical power is available and unlocks when electrical power is removed. A viewing lens in the door allows observation of the passenger cabin. The door can be manually opened from the flight deck by turning the door handle.

The door incorporates a deadbolt with a key lock on the passenger cabin side. Rotating both concentric deadbolt levers to the locked (horizontal) position prevents the passenger cabin key from unlocking the door. Rotating only the forward deadbolt lever to locked allows the key to unlock the door.

The flight deck access system consists of an emergency access panel, chime module, three position Door Lock selector, two indicator lights, and an Access System switch. The emergency access panel includes a six button keypad for entering the numeric emergency access code along with red, amber, and green lights. The red light illuminates to indicate the door is locked. When the correct emergency access code is entered, the amber light illuminates. The green light illuminates to indicate the door is unlocked.


Two indicator lights and a three position Door Lock selector are located on the aisle stand. Illumination of the amber LOCK FAIL light indicates the door lock has failed or the Access System switch is in the OFF position.

The emergency access code is used to gain access to the flight deck in case of pilot incapacitation. A flight deck chime and illumination of the amber AUTO UNLK light indicates the correct emergency access code has been entered and the door is programmed to unlock after a time delay. Selecting the DENY position on the Door Lock selector denies entry and prevents further keypad entry for several minutes. To allow entry, the selector is turned to the UNLKD position which unlocks the door while held in that position. If the emergency access code is entered and the pilot takes no action, the door unlocks after expiration of the time delay. Before the door unlocks, the chime sounds continuously and the AUTO UNLK light flashes.

By pressing "1" then "ENT" keys on the emergency access panel, the flight deck chime will sound (if programmed).

The door incorporates two pressure sensors that unlock the decompression panels in the event pressurization is lost. The decompression panels have manual release pins. Pulling the pins frees the panels allowing egress in the event the door is jammed.

Flight Deck Number Two Windows

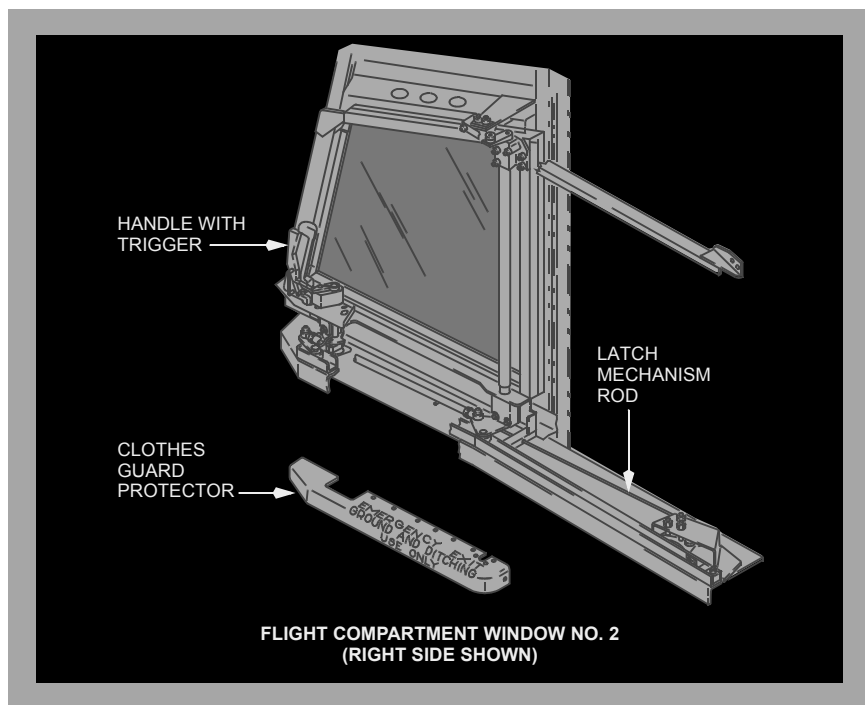

The flight deck number two windows can be opened on the ground or in flight and can be used for emergency evacuation. To open the window, depress the trigger and turn the handle back and inboard. After the window moves inboard, move it back until it locks in the open position.

To close the window, it must first be unlocked. Pull forward on the latch mechanism rod to unlock the window. Depress the trigger and move the window forward until the handle can be turned forward and outboard. When the trigger is released, the window latches.

Only the first officer's window number two window can be opened from outside the airplane.

Lower Cargo Compartments

The lower cargo compartments are designed and constructed to satisfy FAA category Class C compartment requirements. This means the compartments are designed to completely confine a fire without endangering the safety of the airplane or its occupants. The compartments are sealed and pressurized but do not have fresh air circulation and temperature control as do the upper passenger compartments.

There are two cargo compartment doors on the lower right side of the fuselage. Both are plug type, inward opening pressure doors, hinged at their upper edges and operated manually from either inside or outside the airplane. Except for slight difference in shape, both doors are similar in design and operation. The door is locked closed by two latches. Each door has a balance mechanism which creates door-open force slightly more than equal to the weight of the door. The door can therefore, with little effort, be swung open. The door can be closed easily by pulling a lanyard attached to the door, grasping the handle and closing the door.

A pressure equalization valve is in the aft bulkhead of each compartment. The valves let only enough air flow into or out of the cargo compartments to keep the pressures nearly the same as the cabin pressure.

Blowout panels in the lower cargo compartments provide pressure relief at a greater rate than the pressure equalization valve in case the airplane pressurization is lost.

Emergency Escape

Emergency escape information included in this chapter includes:

- emergency evacuation routes
- flight deck windows
- escape slides
- escape straps
- emergency exit doors

Emergency Evacuation Routes

[Option - BBJ]


Emergency evacuation may be accomplished through four entry/service doors and two overwing escape hatches. Flight deck crew members may evacuate the airplane through two sliding flight deck windows.

[Option - BBJ-2/BBJ-3]


Emergency evacuation may be accomplished through four entry/service doors and four overwing escape hatches. Flight deck crew members may evacuate the airplane through two sliding flight deck windows.

Emergency Evacuation Routes

[Option - BBJ]

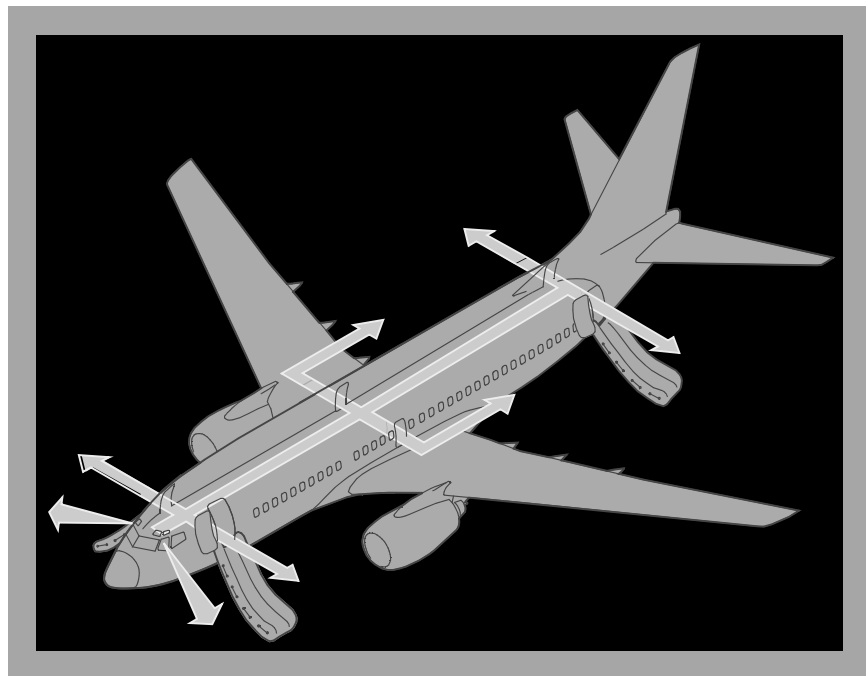

[Option - BBJ-2/BBJ-3]

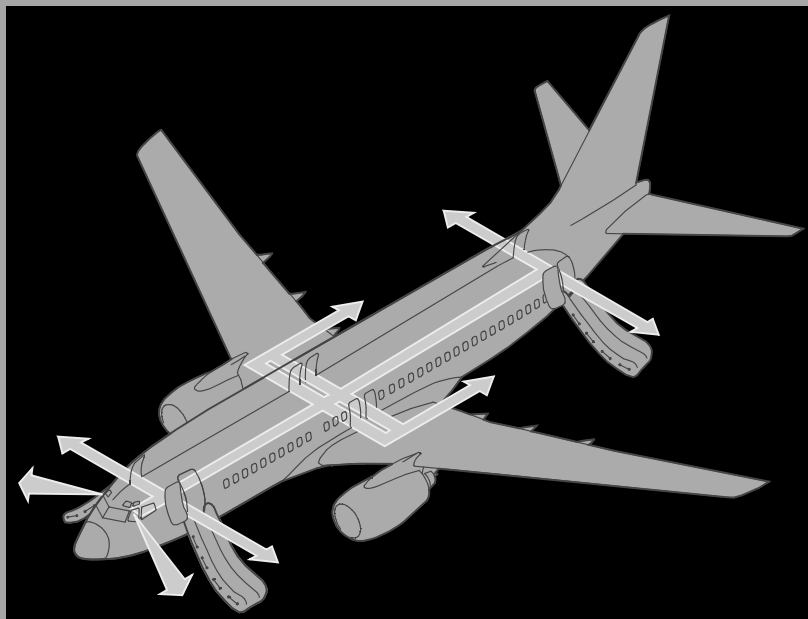


Flight Deck Window Emergency Egress

If the flight deck number two windows must be used for emergency egress, use the following procedure:

- open the window
- open the escape strap compartment (above and aft of window)
- pull on the escape strap to ensure it is securely attached
- throw the strap out the window
- sit on the window sill with upper body outside
- exit in accordance with the following illustration.

CAUTION: Ensure the escape strap is securely fastened to the airplane.

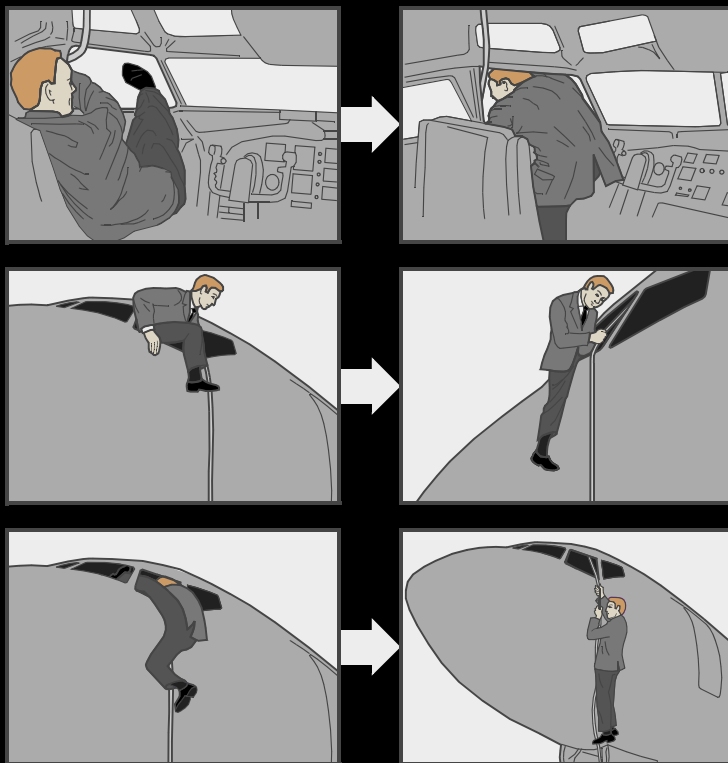


The above illustrated method of departure would probably be the easiest for most crewmembers. This technique is difficult and should be used only in extreme emergency.

Escape Slide Detachment Handle

The slide has not been certified to be part of the water landing emergency equipment. In a water environment, the slide may not properly inflate when deployed. If the deployed slide is recognized to be a potential obstruction to egress, a detachment handle is provided near the top of the slide. This handle is protected by a cover and is placarded. The escape slide is detached from the airplane by pulling the detachment handle. Once detached from the door sill, the slide is tethered to the door sill by a lanyard. A properly inflated slide could be buoyant, and useful as a flotation device for passengers in the water. Hand grips are positioned along the sides of the slide.

Escape Slide Detachment Handle

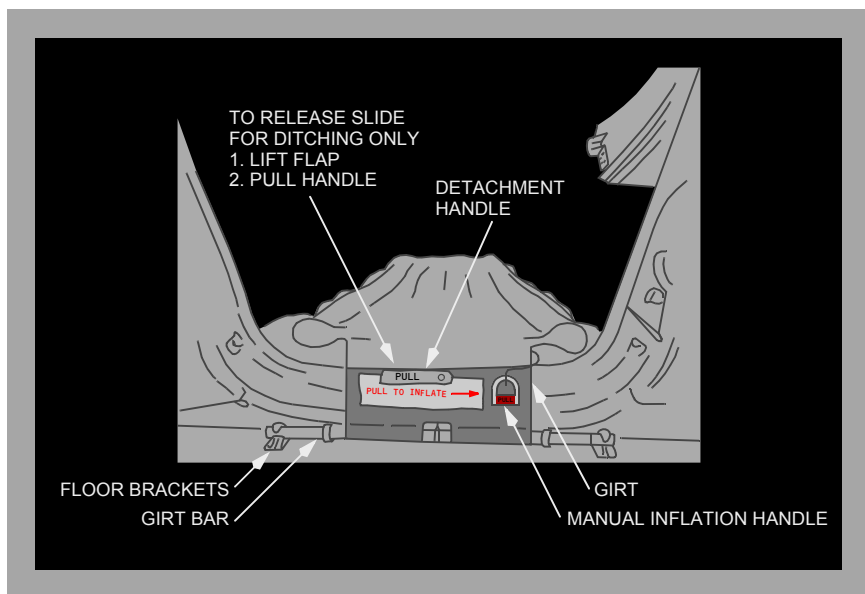

Escape Straps


[Option - BBJ]

Escape straps are installed above each emergency exit door frame. The escape doors must be opened to expose the straps. One end of the strap is attached to the door frame. The remainder of the strap is stowed in a tube extending into the cabin ceiling. To use, the strap is pulled free from its stowage and attached to a ring on the top surface of the wing. The escape strap can be used as a hand hold in a ditching emergency for passengers to walk out on the wing and step into a life raft.


[Option - BBJ-2/BBJ-3]

Escape straps are installed above each aft emergency exit door frame. The escape doors must be opened to expose the straps. One end of the strap is attached to the door frame. The remainder of the strap is stowed in a tube extending into the cabin ceiling. To use, the strap is pulled free from its stowage and attached to a ring on the top surface of the wing. The escape strap can be used as a hand hold in a ditching emergency for passengers to walk out on the wing and step into a life raft.

[Option - BBJ]

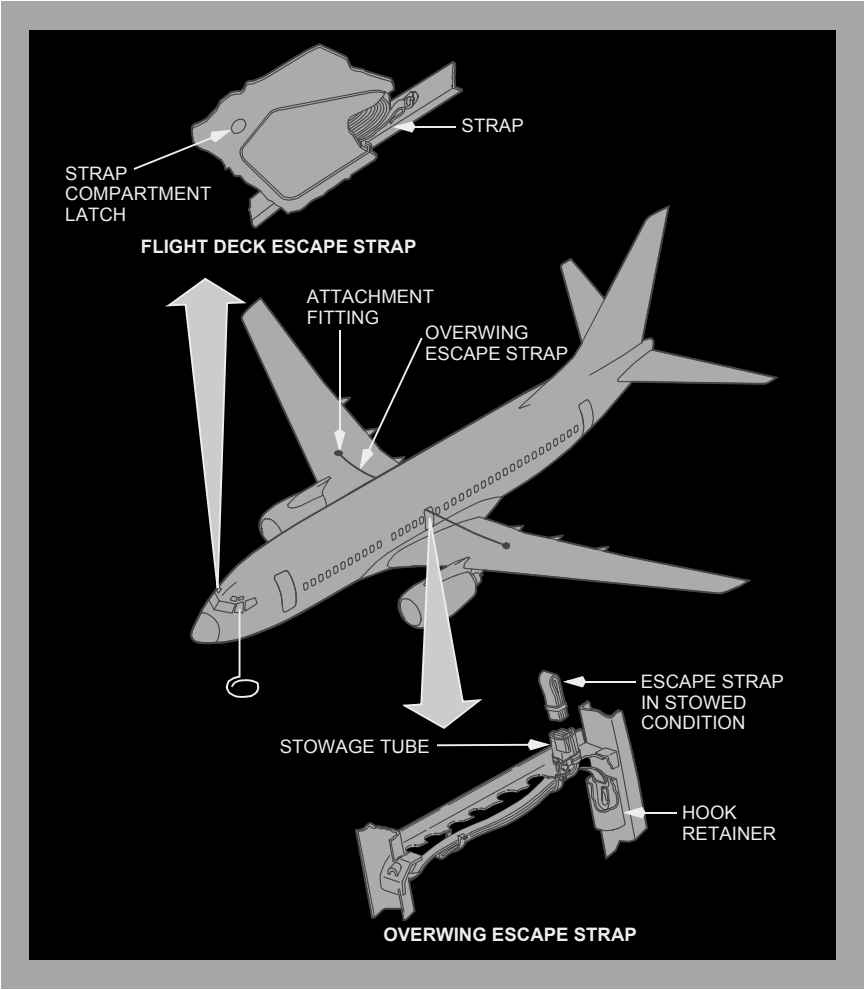

[Option - BBJ-2/BBJ-3]

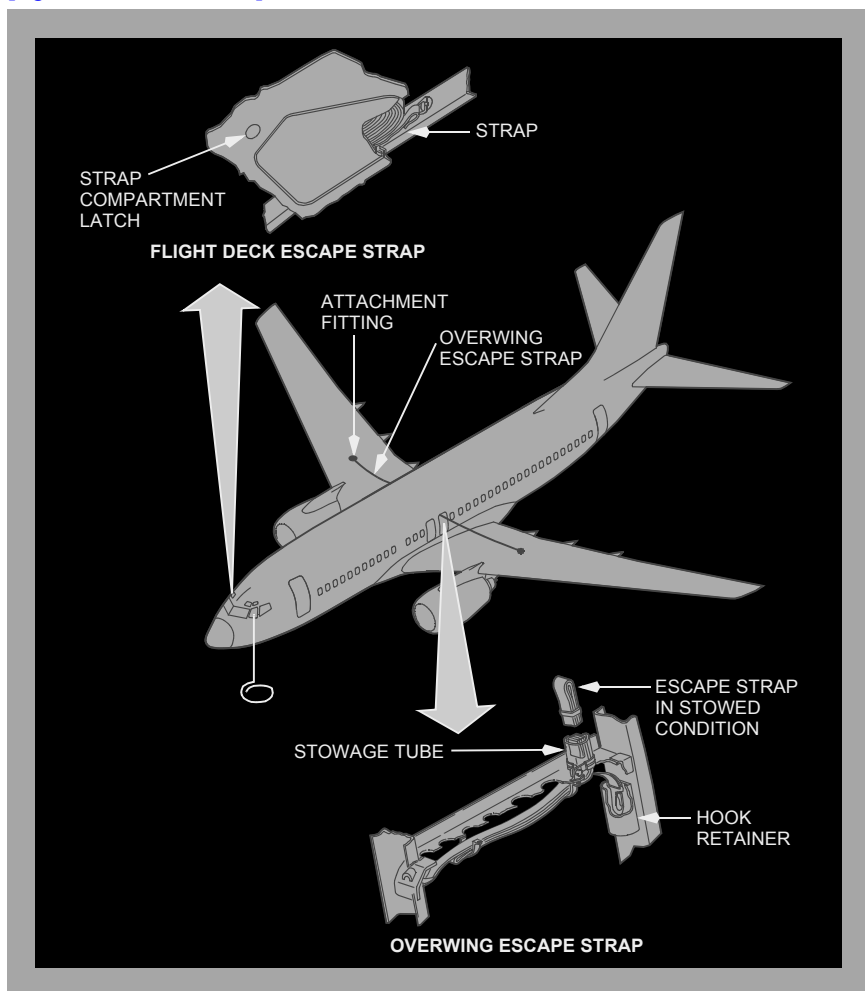

Emergency Exit Doors

[Option - BBJ]

Two Type III emergency exits are located in the passenger cabin over the wings. These are canopy-type doors and are held in place by mechanical locks and airplane cabin pressure.

[Option - BBJ-2/BBJ-3]

Four Type III emergency exits are located in the passenger cabin over the wings. These are canopy-type doors and are held in place by mechanical locks and airplane cabin pressure.

[Option - 737-600/700/800]

The overwing exit doors can be opened from inside or outside of the airplane by a spring-loaded handle at the top of the door. The 28 Volt DC flight lock system is designed to ensure that the flight lock will automatically lock during takeoff, in-flight, and landing and unlock on the ground to allow for opening of the door in emergency situations. Commands for the flight lock to lock and unlock are dependent upon engine speed, thrust lever position, air/ground mode status, and the open/closed status of the doors.

[Option - 737-600/700/800]

The overwing emergency exits lock when:

- three of the four Entry/Service doors are closed and
- either engine is running and
- the airplane air/ground logic indicates that the airplane is in the air or both thrust levers are advanced.

[Option - 737-600/700/800]

The overwing emergency exits unlock when any one of the above conditions is not met or DC power is lost.

The LEFT OVERWING and/or RIGHT OVERWING warning lights, DOORS annunciator, and MASTER CAUTION light illuminate when an emergency exit door is not fully closed and locked or when the flight lock is not engaged, either during the takeoff roll or in-flight.

[Option - 737-600/700/800]

If a flight lock has failed locked or a fault is detected the PSEU light, the OVERHEAD annunciator, and the MASTER CAUTION lights illuminate. These indications are inhibited from takeoff until 30 seconds after the airplane is in the ground mode. When the doors are latched and locked and the flight lock is operating properly none of these lights will illuminate.

[Option - BBJ]

**EMERGENCY EXIT
ONLY**

PUSH TO OPEN
DOOR OPENS OUT AND UP
AUTOMATICALLY




WARNING




DOOR SWINGS
OUT AND UP
HOLD YOUR
KNEE AGAINST
DOOR WHILE
OPENING OR
SERIOUS
INJURY CAN
OCCUR

EXTERIOR PLACARDS

EXTERIOR OVERWING
EMERGENCY EXIT
PUSH PANEL

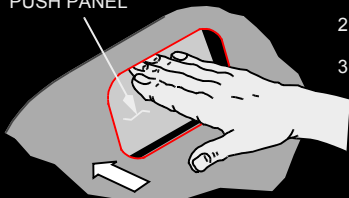

- TO OPEN DOOR FROM THE OUTSIDE:
1. HOLD KNEE AGAINST LOWER PORTION OF DOOR.
 2. PUSH IN EXTERIOR OVERWING EMERGENCY EXIT PUSH PANEL.
 3. DOOR OPENS OUT AND UP AUTOMATICALLY.

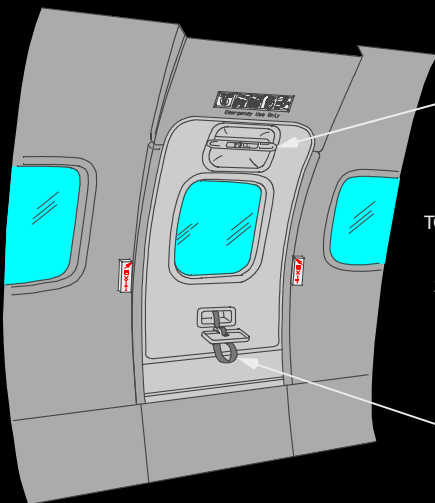

INTERIOR HANDLE

- TO OPEN DOOR FROM THE INSIDE:
1. PULL INTERIOR HANDLE DOWN AND INWARD.
 2. DOOR OPENS OUT AND UP AUTOMATICALLY.

CLOSING STRAP
PANEL SHOWN OPEN.

[Option - BBJ-2/BBJ-3]

**EMERGENCY EXIT
ONLY**

PUSH TO OPEN
DOOR OPENS OUT AND UP
AUTOMATICALLY


! WARNING



DOOR SWINGS
OUT AND UP
HOLD YOUR
KNEE AGAINST
DOOR WHILE
OPENING OR
SERIOUS
INJURY CAN
OCCUR


EXTERIOR PLACARDS

EXTERIOR OVERWING
EMERGENCY EXIT
PUSH PANEL

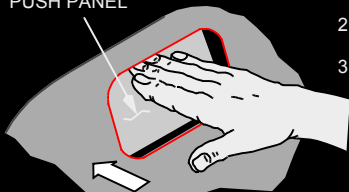

TO OPEN DOOR FROM THE OUTSIDE:

1. HOLD KNEE AGAINST LOWER PORTION OF DOOR.
2. PUSH IN EXTERIOR OVERWING EMERGENCY EXIT PUSH PANEL.
3. DOOR OPENS OUT AND UP AUTOMATICALLY.

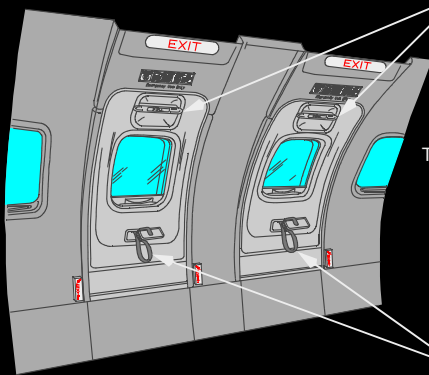

INTERIOR HANDLE

TO OPEN DOOR FROM THE INSIDE:

1. PULL INTERIOR HANDLE DOWN AND INWARD.
2. DOOR OPENS OUT AND UP AUTOMATICALLY.


CLOSING STRAP
PANEL SHOWN OPEN.

Pilot Seat Adjustment

Adjust the seat position with the appropriate controls to obtain the optimum eye reference position. Use the handhold above the forward window to assist. The following sight references are used:

- Sight along the upper surface of the glareshield with a small amount of the airplane nose structure visible (A)
- Sight over the control column (in the neutral position) until the bottom edge of the outboard display unit is visible (B).

Pilot Seat Adjustment

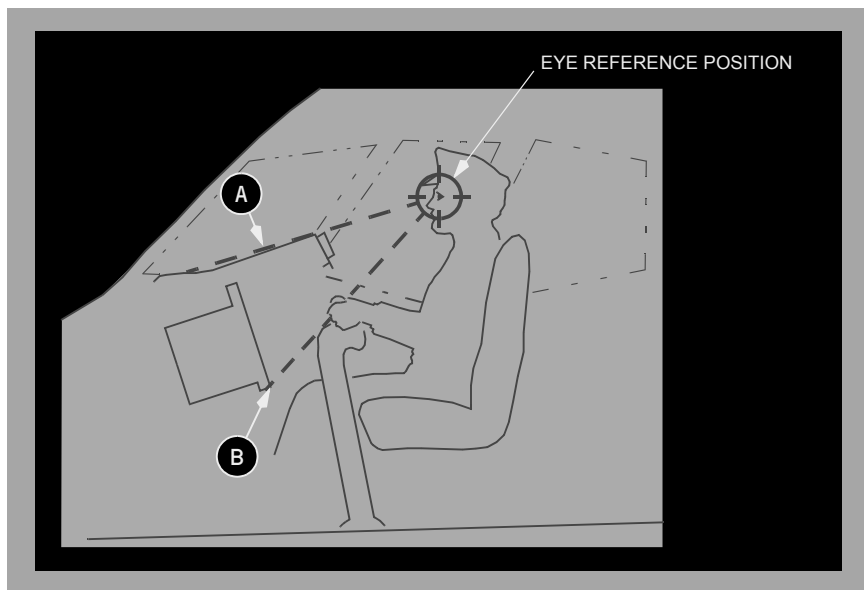

Galleys

Galleys are located in the passenger cabin to provide convenient and rapid service to the passengers. Generally, they are installed in the cabin adjacent to the forward and aft galley service doors.

In general the equipment of the galley unit consists of the following main items:

- high speed ovens
- hot beverage containers
- hot cup receptacles
- refrigeration and main storage compartments.

Electrical control panel switches and circuit breakers to operate the above equipment are conveniently located within the galley work area. Storage space, miscellaneous drawers and waste containers are also integrated in the galley units.

Electrical Power


Electricity for the galleys is 115V AC supplied from the airplane transfer buses and controlled by a switch on the overhead panel. Circuit breakers are located in the lower E/E bay as part of the power distribution panels.

Water Service

Water is supplied to the galleys from the airplane pressurized water system and, in an emergency, may be shut off at the galley.

Water System

The potable airplane water system is supplied from a single tank located behind the aft cargo compartment. Fresh water is supplied to the galleys and lavatory sinks.

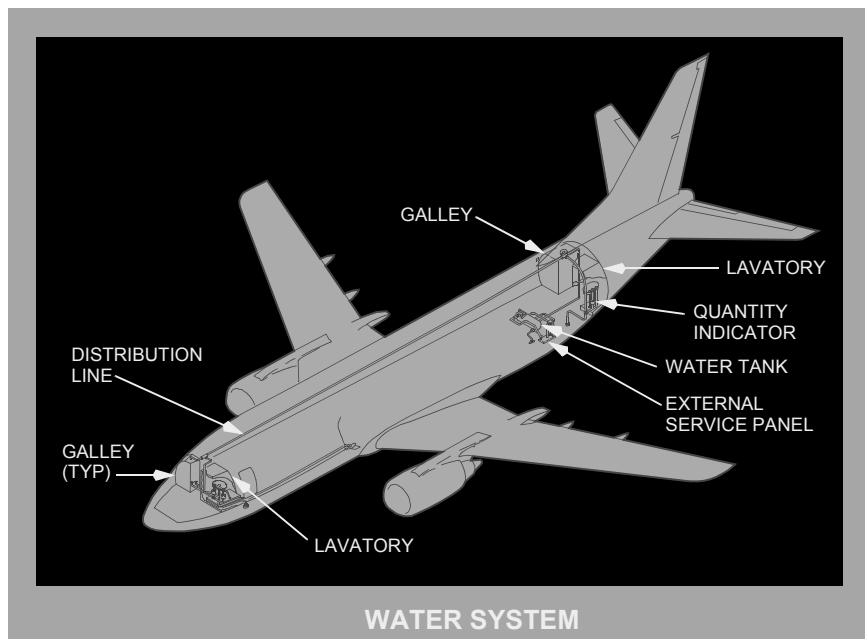

Quantity Indication and System Operation

A quantity indicator is located on the attendant panel. The system is pressurized by engine bleed air or by the water system air compressor. Shutoff valves are located on each galley and below the sink in each lavatory. The drain position of this valve is used to drain all water overboard. Normally, the drain shutoff valves are ON.

Hot Water

Hot and cold water is available in all lavatories. The water heater is located below the lavatory sink. When emptied, it heats a new water charge in four minutes. An amber light is ON when the heater is operating normally. The heater has an overheat switch which turns off the heating element if an excess temperature is reached. The heater may be turned off at any time by using a manual switch on the heater. Cold water is supplied at the galleys.

Servicing

The system is serviced from an exterior panel located on the bottom right side of the aft fuselage. Pressure filling is required. Waste water from the galleys and lavatory wash basins is drained overboard through two heated drain masts. The drain mast are on the bottom of the fuselage; one forward and one aft.

Forward Airstair

[Option - Airstairs]

The forward airstair provides the capability of boarding passengers without relying on the availability of airport ground equipment. The airstair is electrically operated and may be controlled from either inside or outside the airplane. The airstair is stowed inside a compartment just below the forward entry door. The compartment has a pressure door that automatically opens before the airstair can operate. For passenger safety, upper handrails are attached to support brackets inside the entry door after the airstair is fully extended.


Interior Control

The interior control panel is located on the attendant panel. A white STAIR OPER light on the panel illuminates when the airstair is in transit. The airstair tread lights on the airstair steps are controlled by a single three-position airstair Tread LIGHTS switch. With the switch in the AUTO position, the tread lights illuminate when the airstair makes contact with the ground and extinguish when the airstair retracts. The interior control panel has two modes of operation, normal and standby. The standby system provides an alternate means of electrical control in the event the normal mode of operation is not available. Normal operation requires 115V AC while standby operation requires the battery switch to be ON. Both operating modes require the forward entry door to be partially open. During normal operation the momentary extend or retract switches are depressed to operate the stairs. To operate in the standby mode, the momentary standby switch must be depressed while the retract or extend switches are also depressed.

Exterior Control

The exterior control is located to the right and below the airstair compartment. Operating instructions are located near the switches. When operating the airstair with the exterior control, the forward entry door need not be open. The exterior control switch by-passes the door-open requirement. A two-position switch, labeled NORMAL and STANDBY, is located in the exterior control recess. The switch is spring-loaded to NORMAL. Holding the NORMAL/STANDBY Switch to STANDBY provides DC power from the battery bus for airstair operation. The BAT switch on the flight deck does not need to be ON when operating the airstair on standby from the exterior control panel. The airstair control switch can be moved to extend or retract the airstair. The NORMAL and STANDBY systems are interlocked by the handrail switches to prevent the stair from being retracted with the handrail extended. Caution must be exercised when using the maintenance switch located under the airstair. If the upper handrail extensions are not properly stowed before retraction, damage to the airplane structure or damage to the airstair's handrail may result. An amber AIRSTAIR light, located on the overhead door caution annunciator panel, illuminates when the airstair pressure door is unlocked. Illumination of the AIRSTAIR light also activates the DOORS annunciator light and the MASTER CAUTION lights. The Airstair light is inoperative when DC bus 1 is not powered. The MASTER CAUTION and DOORS lights illuminate in normal or standby operation of the airstair.

Airstairs

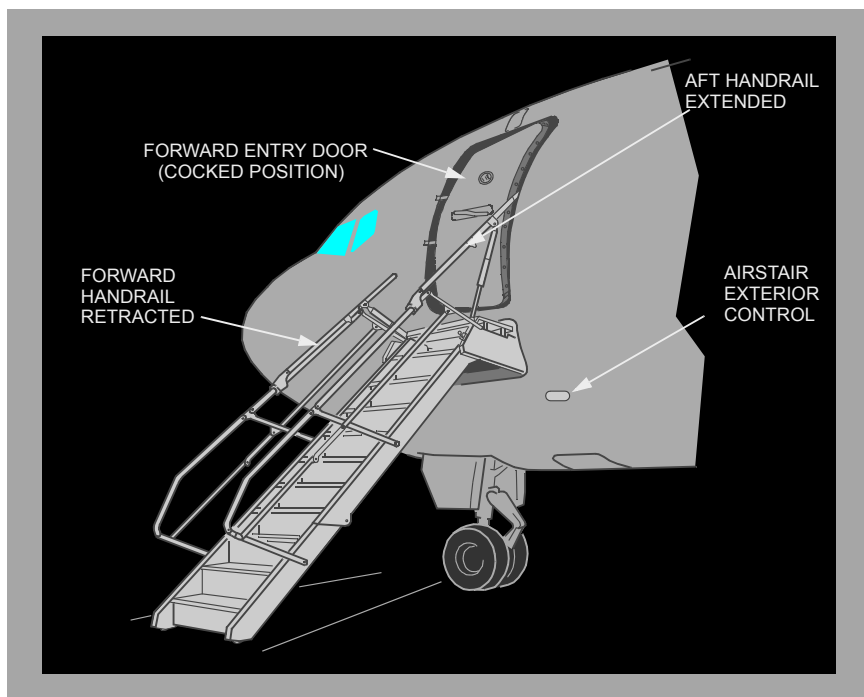

WARNING: Use care not to fall from the airstair platform when operating the forward entry door. The small platform area and bad weather can make the door difficult to operate.

Intentionally
Blank

Air Systems**Chapter 2****Table of Contents****Section 0**

Controls and Indicators	2.10
Bleed Air Controls and Indicators	2.10.1
Air Conditioning Controls and Indicators	2.10.5
Equipment Cooling Panel	2.10.11
Cabin Altitude Panel	2.10.12
Cabin Pressurization Panel	2.10.13
Bleed Air System Description	2.20
Introduction	2.20.1
Engine Bleed System Supply	2.20.1
Engine Bleed Air Valves	2.20.1
Bleed Trip Sensors	2.20.1
Duct Pressure Transmitters	2.20.2
Isolation Valve	2.20.2
External Air Connection	2.20.2
APU Bleed Air Valve	2.20.2
DUAL BLEED Light	2.20.2
Bleed Air System Schematic	2.20.3
Wing-Body Overheat	2.20.5
Wing-Body Overheat Ducts and Lights	2.20.6
Air Conditioning System Description	2.30
Introduction	2.30.1
Air Conditioning Pack	2.30.1
Airflow Control	2.30.1
Ram Air System	2.30.2
Cooling Cycle	2.30.2
Air Mix Valves	2.30.2
Air Conditioning Pack Schematic	2.30.3
Air Conditioning Distribution	2.30.3
Flight Deck	2.30.4
Passenger Cabin	2.30.4

Recirculation Fan	2.30.4
Equipment Cooling	2.30.4
Forward Cargo Compartment	2.30.5
Conditioned Air Source Connection	2.30.5
Air Conditioning Distribution Schematic	2.30.6
Air Conditioning System Description	2.31
Introduction	2.31.1
Air Conditioning Pack	2.31.1
Airflow Control	2.31.1
Ram Air System	2.31.2
Cooling Cycle	2.31.2
Pack Temperature Control	2.31.2
Air Conditioning Pack Schematic	2.31.3
Zone Temperature Control	2.31.4
Zone Temperature Control Modes	2.31.4
Unbalanced Pack Temperature Control Mode	2.31.4
Standby Pack Average Temperature	2.31.5
Fixed Cabin Temperature	2.31.5
Air Conditioning Distribution	2.31.5
Flight Deck	2.31.5
Passenger Cabin	2.31.5
Recirculation Fan	2.31.6
Equipment Cooling	2.31.6
Forward Cargo Compartment	2.31.6
Conditioned Air Source Connection	2.31.6
Air Conditioning Distribution Schematic	2.31.7
Pressurization System Description	2.40
Introduction	2.40.1
Pressure Relief Valves	2.40.1
Cabin Pressure Controller	2.40.1
Cabin Pressure Control System Schematic	2.40.3

BBJ Flight Crew Operations Manual

Pressurization Outflow	2.40.4
Outflow Valve	2.40.5
Overboard Exhaust Valve.....	2.40.5
Pressurization Outflow Schematic	2.40.5
Auto Mode Operation	2.40.6
Flight Path Events – Auto Mode	2.40.8
Manual Mode Operation	2.40.10

Intentionally
Blank

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Air Systems


Controls and Indicators

Chapter 2

Section 10


Bleed Air Controls and Indicators

[737 - 600/700]

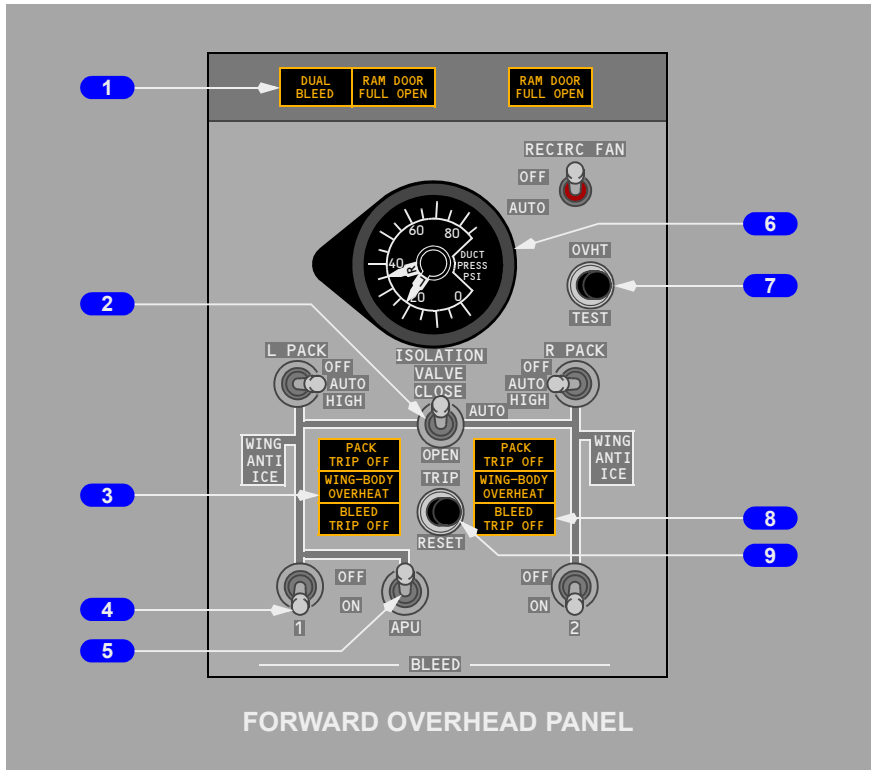

FORWARD OVERHEAD PANEL

[737 - 800/900]

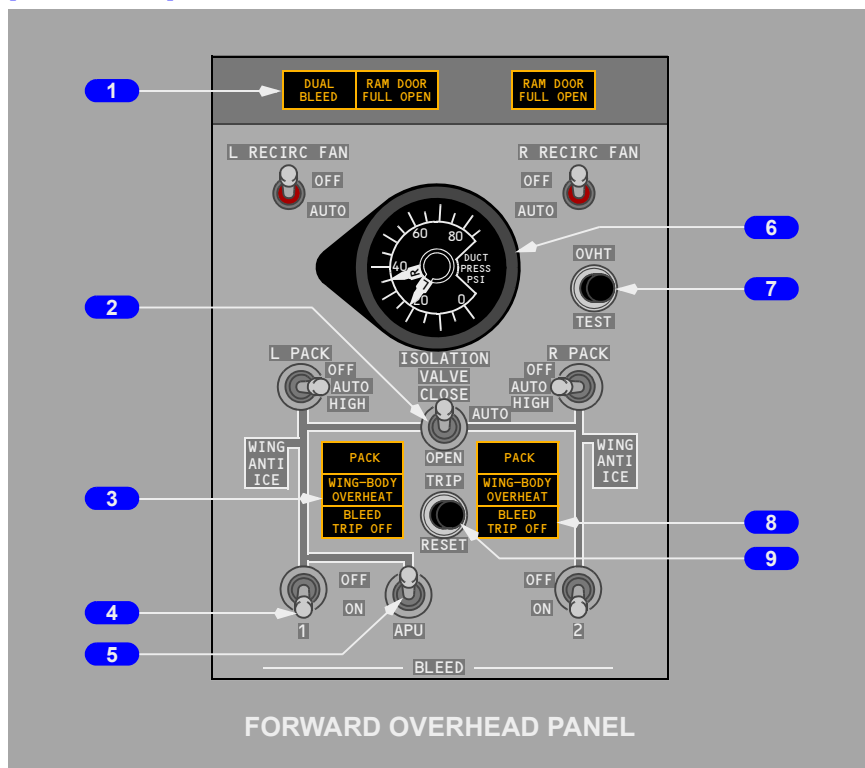

1 DUAL BLEED Light

Illuminated (amber) – APU bleed air valve open and engine No. 1 BLEED air switch ON, or engine No. 2 BLEED air switch ON, APU bleed air valve and isolation valve open.

2 ISOLATION VALVE Switch

CLOSE – closes isolation valve.

AUTO –

- closes isolation valve if both engine BLEED air switches are ON and both air conditioning PACK switches are AUTO or HIGH
- opens isolation valve automatically if either engine BLEED air or air conditioning PACK switch positioned OFF.

OPEN – opens isolation valve.

3 WING–BODY OVERHEAT Light

Illuminated (amber) –

- left light indicates overheat from bleed air duct leak in left engine strut, left inboard wing leading edge, left air conditioning bay, keel beam or APU bleed air duct
- right light indicates overheat from bleed air duct leak in right engine strut, right inboard wing leading edge or right air conditioning bay.

4 Engine BLEED Air Switches

OFF – closes engine bleed air valve.

ON – opens engine bleed air valve when engines are operating.

5 APU BLEED Air Switch

OFF – closes APU bleed air valve.

ON – opens APU bleed air valve when APU is operating.

6 Bleed Air DUCT PRESSURE Indicator

Indicates pressure in L and R (left and right) bleed air ducts.

7 Wing–Body Overheat (OVHT) TEST Switch

Push –

- tests wing–body overheat detector circuits
- illuminates both WING–BODY OVERHEAT lights.

8 BLEED TRIP OFF Light

Illuminated (amber) – excessive engine bleed air temperature or pressure

- related engine bleed air valve closes automatically
- requires reset.

9 TRIP RESET Switch

[737 - 600/700]

Push (if fault condition is corrected) –

- resets BLEED TRIP OFF, PACK TRIP OFF and DUCT OVERHEAT lights
- related engine bleed valve opens, or related pack valve opens, or related air mix valve opens
- lights remain illuminated until reset.

9 TRIP RESET Switch


[737 - 800/900]

Push (if fault condition is corrected) –

- resets BLEED TRIP OFF, PACK and ZONE TEMP lights
- related engine bleed valve opens, or related pack valve opens, or related air mix valve opens
- lights remain illuminated until reset.

Air Conditioning Controls and Indicators

[737 - 600/700 and Air Temperature Indicator in degrees F]

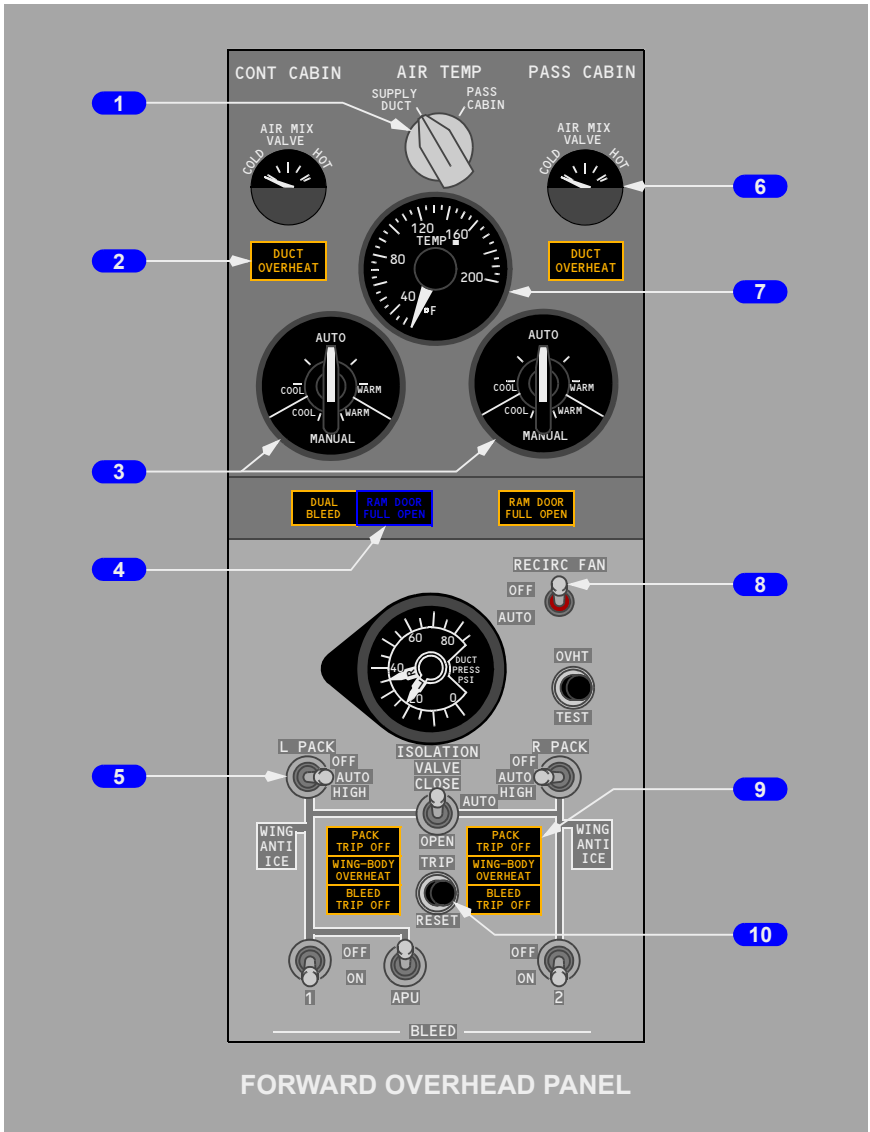

1 AIR Temperature (TEMP) Source Selector

SUPPLY DUCT – selects main distribution supply duct sensor for TEMP indicator.

PASS CABIN – selects passenger cabin sensor for TEMP indicator.

2 DUCT OVERHEAT Light

Illuminated (amber) –

- distribution air temperature in related duct exceeds limit
- air mix valves drive full cold
- requires reset.

3 Control (CONT) CABIN and Passenger (PASS) CABIN Temperature Selector

AUTO – automatic temperature controller controls passenger cabin or flight deck temperature as selected.

MANUAL – air mix valves controlled manually. Automatic temperature controller bypassed.

4 RAM DOOR FULL OPEN Light

Illuminated (blue) – indicates ram door in full open position.

5 Air Conditioning PACK Switch

OFF – pack signalled OFF.

AUTO –

- with both packs operating, each pack regulates to low flow
- with one pack operating, operating pack regulates to high flow in flight with flaps up
- when operating one pack from APU (both engine BLEED air switches OFF), regulates to high flow.

HIGH –

- pack regulates to high flow
- provides maximum flow rate on ground with APU BLEED air switch ON.

6 AIR MIX VALVE Indicator

Indicates position of air mix valves:

- controlled automatically with related temperature selector in AUTO
- controlled manually with related temperature selector in MANUAL.

7 Air Temperature (TEMP) Indicator

Indicates temperature at location selected with AIR TEMP source selector.

8 Recirculation (RECIRC) FAN Switch

OFF - fan signalled off.

AUTO – fan signalled on except when both packs operating with either PACK switch in HIGH.

9 PACK TRIP OFF Light

Illuminated (amber) –


- indicates pack temperature has exceeded limits
- related pack valve automatically closes and mix valves drive full cold
- requires reset.

10 TRIP RESET Switch

Push (if fault condition is corrected) –

- resets BLEED TRIP OFF, PACK TRIP OFF and DUCT OVERHEAT lights
- related engine bleed air valves open, or related pack valves open, or related air mix valves open
- lights remain illuminated until reset.

[737 - 800/900 and Air Temperature Indicator in degrees F]

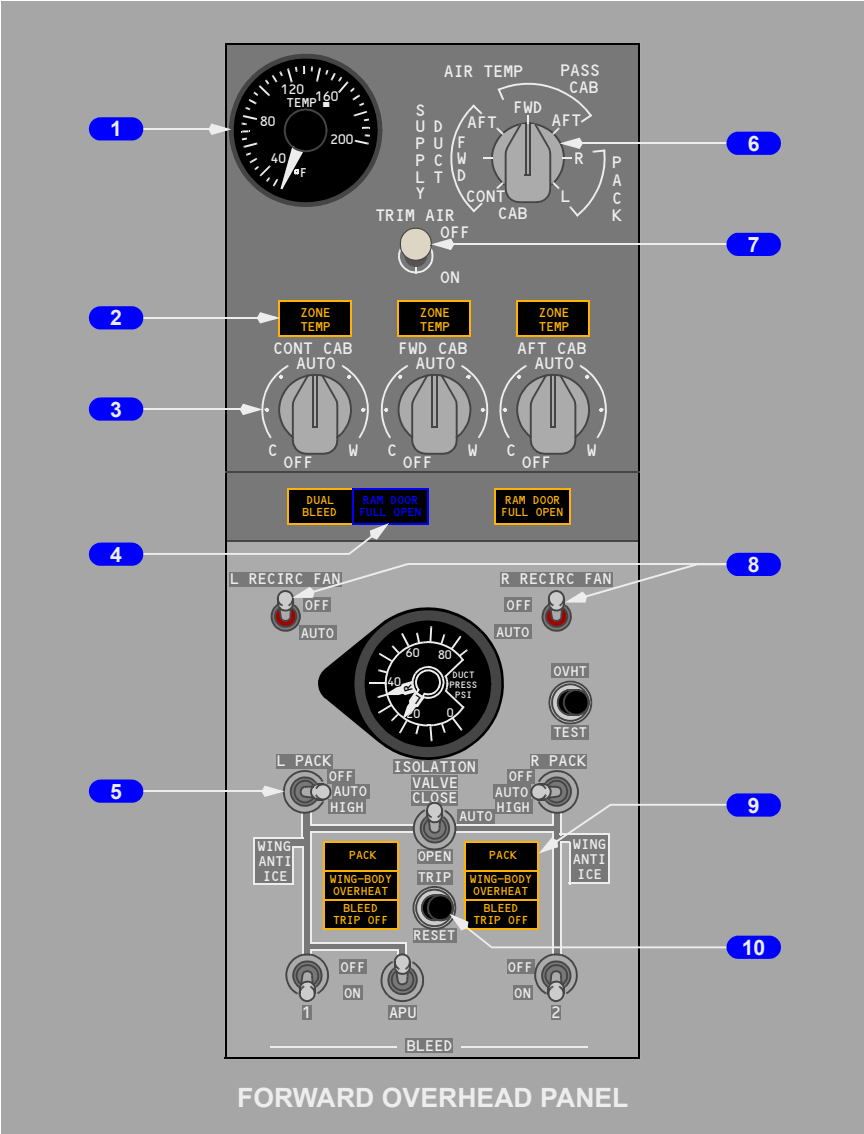

1 Air Temperature (TEMP) Indicator

Indicates temperature at location selected with AIR TEMP source selector.

2 ZONE TEMP Lights

Illuminated (amber) –

- CONT CAB indicates a duct temperature overheat or failure of the flight deck primary and standby temperature control
- FWD CAB or AFT CAB indicates duct temperature overheat.

During Master Caution light recall:

- CONT CAB indicates failure of the flight deck primary or standby temperature control
- either FWD CAB or AFT CAB indicates failure of the associated zone temperature control
- lights will extinguish when Master Caution is reset.

3 Temperature Selector

AUTO – provides automatic temperature control for the associated zones.

Rotating the control toward C (cool) or W (warm) manually sets the desired temperature.

OFF – closes the associated trim air modulating valve.

4 RAM DOOR FULL OPEN Light

Illuminated (blue) – indicates ram door in full open position.

5 Air Conditioning PACK Switch

OFF – pack signalled OFF.

AUTO –

- with both packs operating, each pack regulates to low flow
- with one pack operating, operating pack regulates to high flow in flight with flaps up
- when operating one pack from APU (both engine BLEED air switches OFF), regulates to high flow.

HIGH –

- pack regulates to high flow
- provides maximum flow rate on ground with APU BLEED air switch ON.

6 AIR Temperature (TEMP) Source Selector

SUPPLY DUCT – selects appropriate zone supply duct temperature

PASS CAB – selects forward or aft passenger cabin temperature

PACK - selects left or right pack temperatures.

7 TRIM AIR Switch

ON - trim air pressure regulating and shutoff valve signaled open.

OFF - trim air pressure regulating and shutoff valve signaled closed.

8 Recirculation (RECIRC) FAN Switches

OFF - fan signalled off.

AUTO –

- in-flight –
 - the left recirculation fan operates if both packs are operating unless either PACK switch is in HIGH
 - the right recirculation fan operates if both packs are operating unless both PACK switches are in HIGH.
- on the ground –
 - the left recirculation fan operates unless both PACK switches are in HIGH
 - the right recirculation fan operates even if both PACK switches are in HIGH.

9 PACK Light

Illuminated (amber) –


- indicates pack trip off or failure of both primary and standby pack controls
- during Master Caution recall, indicates failure of either primary or standby pack control. Extinguishes when Master Caution is reset

10 TRIP RESET Switch

Push (if fault condition is corrected) –

- resets BLEED TRIP OFF, PACK and ZONE TEMP lights
- related engine bleed air valves open, or related pack valves open, or related air mix valves open
- lights remain illuminated until reset.

Equipment Cooling Panel

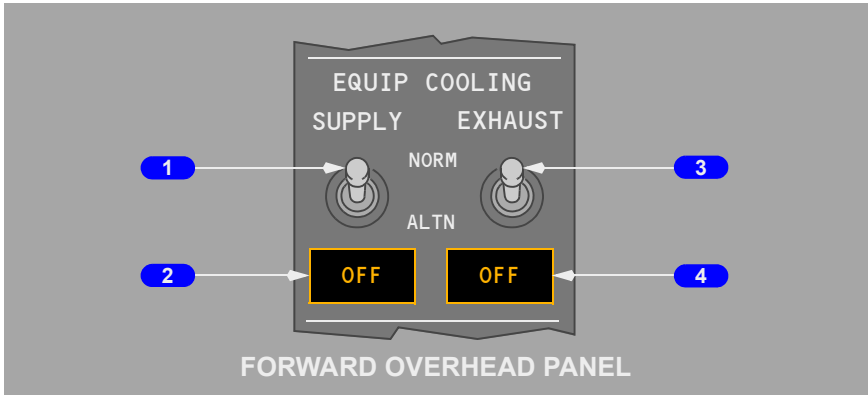

1 Equipment (EQUIP) COOLING SUPPLY Switch

NORM – normal cooling supply fan activated.

ALTN – alternate cooling supply fan activated.

2 Equipment Cooling Supply OFF Light

Illuminated (amber) – no airflow from selected cooling supply fan.

3 Equipment (EQUIP) COOLING EXHAUST Switch


NORM – normal cooling exhaust fan activated.

ALTN – alternate cooling exhaust fan activated.

4 Equipment Cooling Exhaust OFF Light

Illuminated (amber) – no airflow from selected cooling exhaust fan.

Cabin Altitude Panel

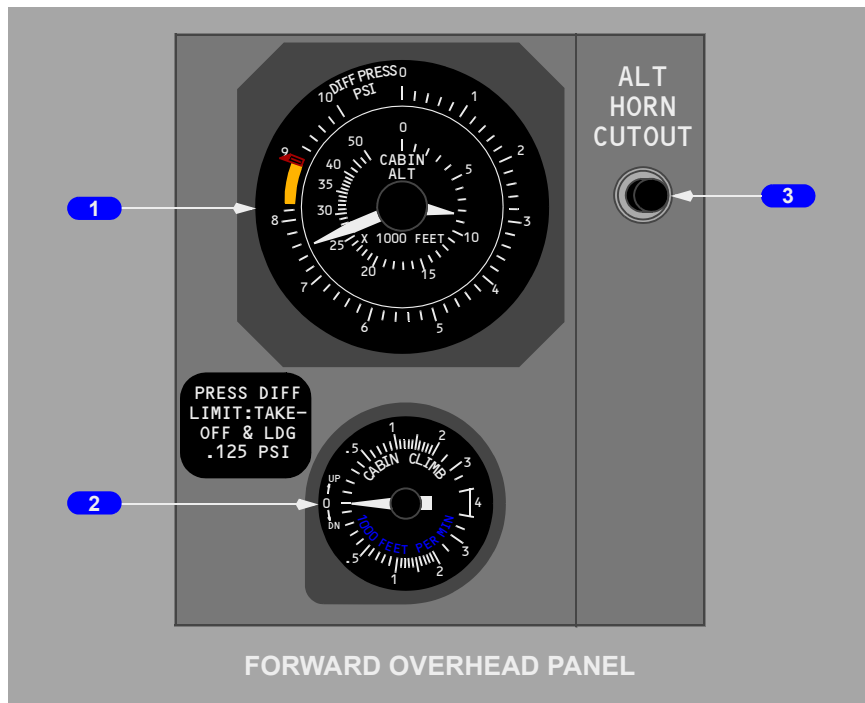

1 CABIN Altimeter (ALT)/Differential Pressure (DIFF PRESS) Indicator

Inner Scale – indicates cabin altitude in feet.

Outer Scale – indicates differential pressure between cabin and ambient in psi.

2 CABIN Rate of CLIMB Indicator


Indicates cabin rate of climb or descent in feet per minute.

3 Altitude (ALT) HORN CUTOUT Switch

Push –

- cuts out intermittent cabin altitude warning horn
- altitude warning horn sounds when cabin reaches 10,000 feet altitude.

Cabin Pressurization Panel

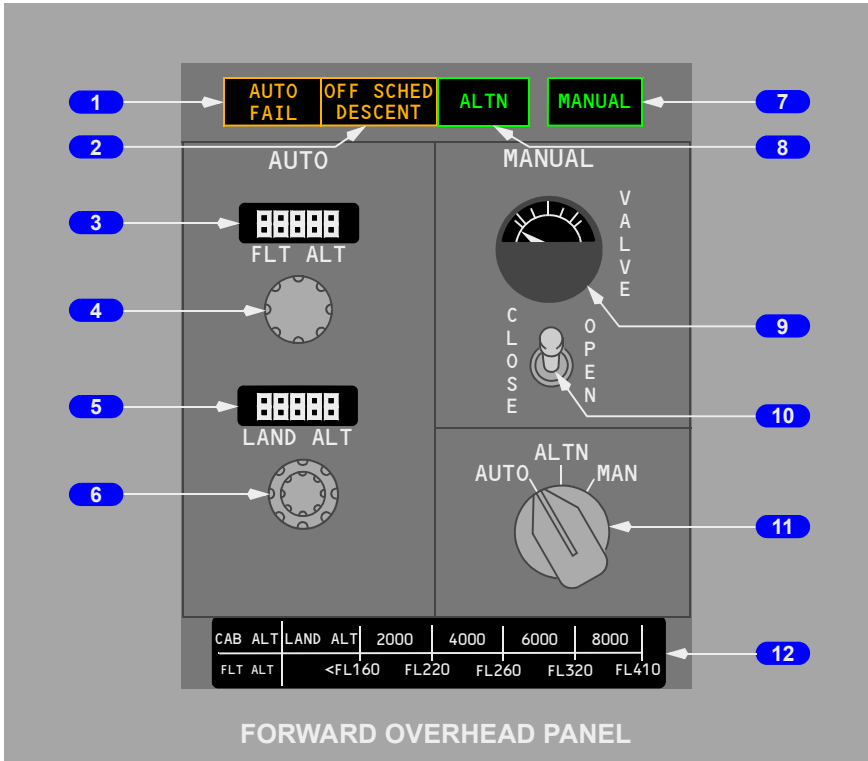

1 AUTO FAIL Light

Illuminated (amber) – automatic pressurization system failure detected:

- indicates a single controller failure when ALTN light is also illuminated
- indicates a dual controller failure when illuminated alone.

2 OFF Schedule (SCHD) DESCENT Light

Illuminated (amber) – airplane descended before reaching the planned cruise altitude set in the FLT ALT indicator.

3 Flight Altitude (FLT ALT) Indicator

- indicates selected cruise altitude
- set before takeoff.

Note: A panel failure detected after a DC power interruption will result in the display of “88888” or all dashes. If cabin altitude and cabin rate are normal, automatic control of cabin pressure is not affected by the failure.

Note: FLT ALT indicator failure may result in the display of non-numbers or a blank display. If the indicator cannot be changed by rotating the flight altitude selector, it may be necessary to monitor the pressurization system to ensure normal operation, especially during climb and descent.

4 Flight Altitude Selector

Rotate – set planned cruise altitude. (-1,000 ft. to 42,000 ft. in 500 ft. increments).

5 Landing Altitude (LAND ALT) Indicator

- indicates altitude of intended landing field
- set before takeoff.

Note: A panel failure detected after a DC power interruption will result in the display of “88888” or all dashes. If cabin altitude and cabin rate are normal, automatic control of cabin pressure is not affected by the failure.

Note: LAND ALT indicator failure may result in the display of non-numbers or a blank display. If the indicator cannot be changed by rotating the flight altitude selector, it may be necessary to monitor the pressurization system to ensure normal operation, especially during climb and descent.

6 Landing Altitude Selector

Rotate – select planned landing field altitude. (-1,000 ft. to 14,000 ft. in 50 ft. increments).

7 MANUAL Light

Illuminated (green) – pressurization system operating in the manual mode.

8 Alternate (ALTN) Light

Illuminated (green) – pressurization system operating in the alternate automatic mode:

- Illumination of both ALTN and AUTO FAIL lights indicates a single controller failure and automatic transfer to ALTN mode
- pressurization mode selector in ALTN position.

9 Outflow VALVE Position Indicator

- indicates position of outflow valve
- operates in all modes.

10 Outflow Valve Switch (spring-loaded to center)

CLOSE – closes outflow valve electrically with pressurization mode selector in MAN position.

OPEN – opens outflow valve electrically with pressurization mode selector in MAN position.

11 Pressurization Mode Selector

AUTO – pressurization system controlled automatically.

ALTN – pressurization system controlled automatically using ALTN controller.

MAN –

- pressurization system controlled manually by outflow valve switch
- both auto controllers bypassed.

12 Cabin /Flight Altitude (CAB ALT)(FLT ALT) Placard

Used to determine setting for cabin altitude when operating in manual mode.

Intentionally
Blank

Air Systems**Chapter 2****Bleed Air System Description****Section 20****Introduction**

Air for the bleed air system can be supplied by the engines, APU, or an external air cart/source. The APU or external cart supplies air to the bleed air duct prior to engine start. After engine start, air for the bleed air system is normally supplied by the engines.

The following systems rely on the bleed air system for operation:

- Air conditioning/pressurization
- Wing and engine thermal anti-icing
- Engine starting
- Hydraulic reservoirs pressurization
- Water tank pressurization

[Option - Aspirated TAT]

- Aspirated TAT probe
- Auxiliary fuel system

Switches on the air conditioning panel operate the APU and engine bleed air supply system.

Engine Bleed System Supply

Engine bleed air is obtained from the 5th and 9th stages of the compressor section. When 5th stage low pressure bleed air is insufficient for the bleed air system requirements, the high stage valve modulates open to maintain adequate bleed air pressure. During takeoff, climb, and most cruise conditions, low pressure bleed air from the 5th stage is adequate and the high stage valve remains closed.

Engine Bleed Air Valves

The engine bleed air valve acts as a pressure regulator and shutoff valve. With the engine bleed air switch ON, the valve is DC activated and pressure operated. The valve maintains proper system operating pressure and reduces bleed air outflow in response to high bleed air temperature.

Bleed Trip Sensors

Bleed trip sensors illuminate the respective BLEED TRIP OFF light when engine bleed air temperature or pressure exceeds a predetermined limit. The respective engine bleed air valve closes automatically.

Duct Pressure Transmitters

Duct pressure transmitters provide bleed air pressure indications to the respective (L and R) pointers on the bleed air duct pressure indicator. The indicator is AC operated. Differences between L and R duct pressure on the bleed air duct pressure indicator are considered normal as long as there is sufficient air for cabin pressurization.

Isolation Valve

The isolation valve isolates the left and right sides of the bleed air duct during normal operations. The isolation valve is AC operated.

With the isolation valve switch in AUTO, both engine bleed air switches ON, and both air conditioning pack switches AUTO or HIGH, the isolation valve is closed. The isolation valve opens if either engine bleed air switch or air conditioning pack switch is positioned OFF. Isolation valve position is not affected by the APU bleed air switch.

External Air Connection

An external air cart/source provides an alternate air source for engine start or air conditioning.

APU Bleed Air Valve

The APU bleed air valve permits APU bleed air to flow to the bleed air duct. The valve closes automatically when the APU is shut down. The APU bleed air valve is DC controlled and pressure operated.


With both the APU and engine bleed air valves open, and the engines operating at idle thrust, there is a possibility of APU bleed air backpressuring the 9th stage modulating and shutoff valve. This would cause the 9th stage valve to close.

DUAL BLEED Light


The DUAL BLEED light illuminates whenever the APU bleed air valve is open and the position of the engine bleed air switches and isolation valve would permit possible backpressure of the APU. Therefore, thrust must be limited to idle with the DUAL BLEED light illuminated.

Bleed Air System Schematic

[BBJ with Aspirated TAT and with Aux Fuel Tanks]

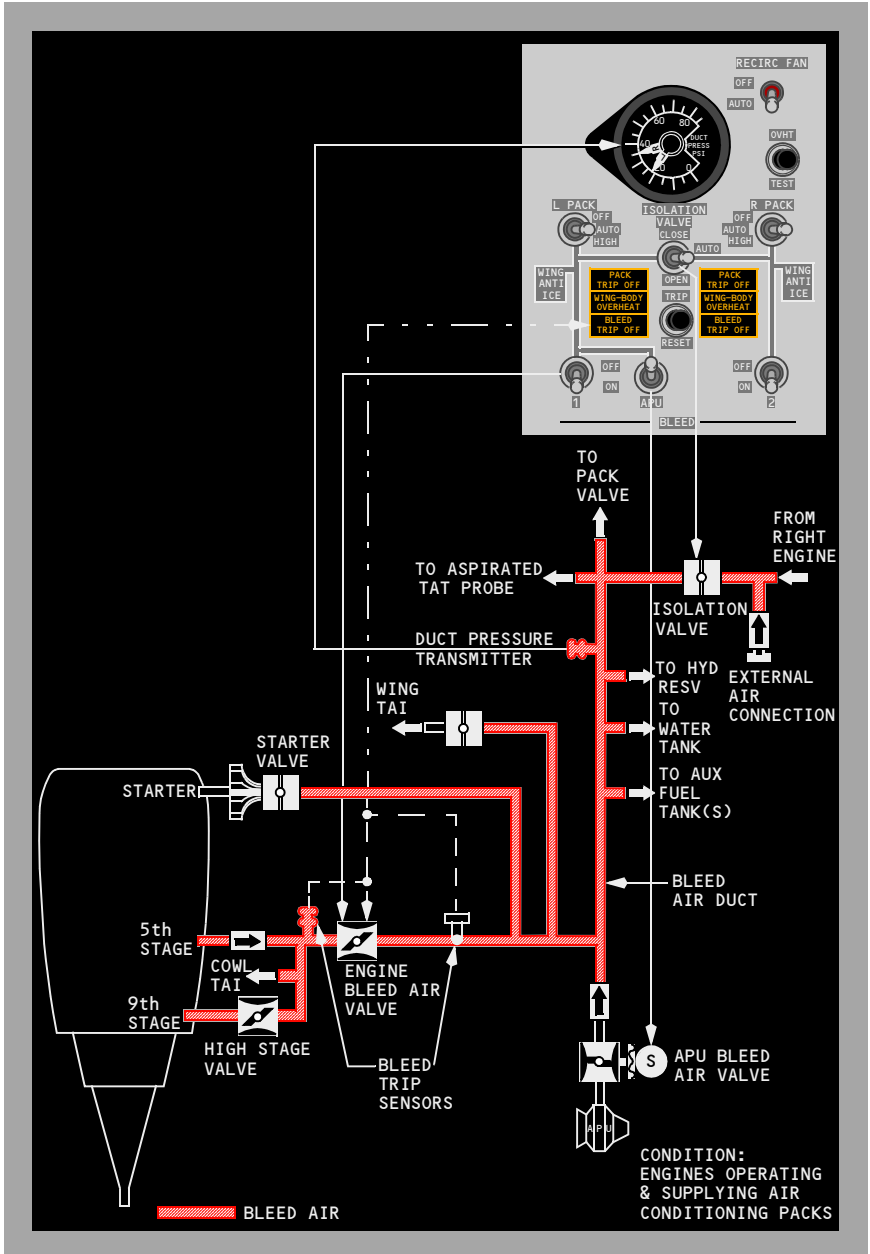

[737 - 800/900 with Aspirated TAT]

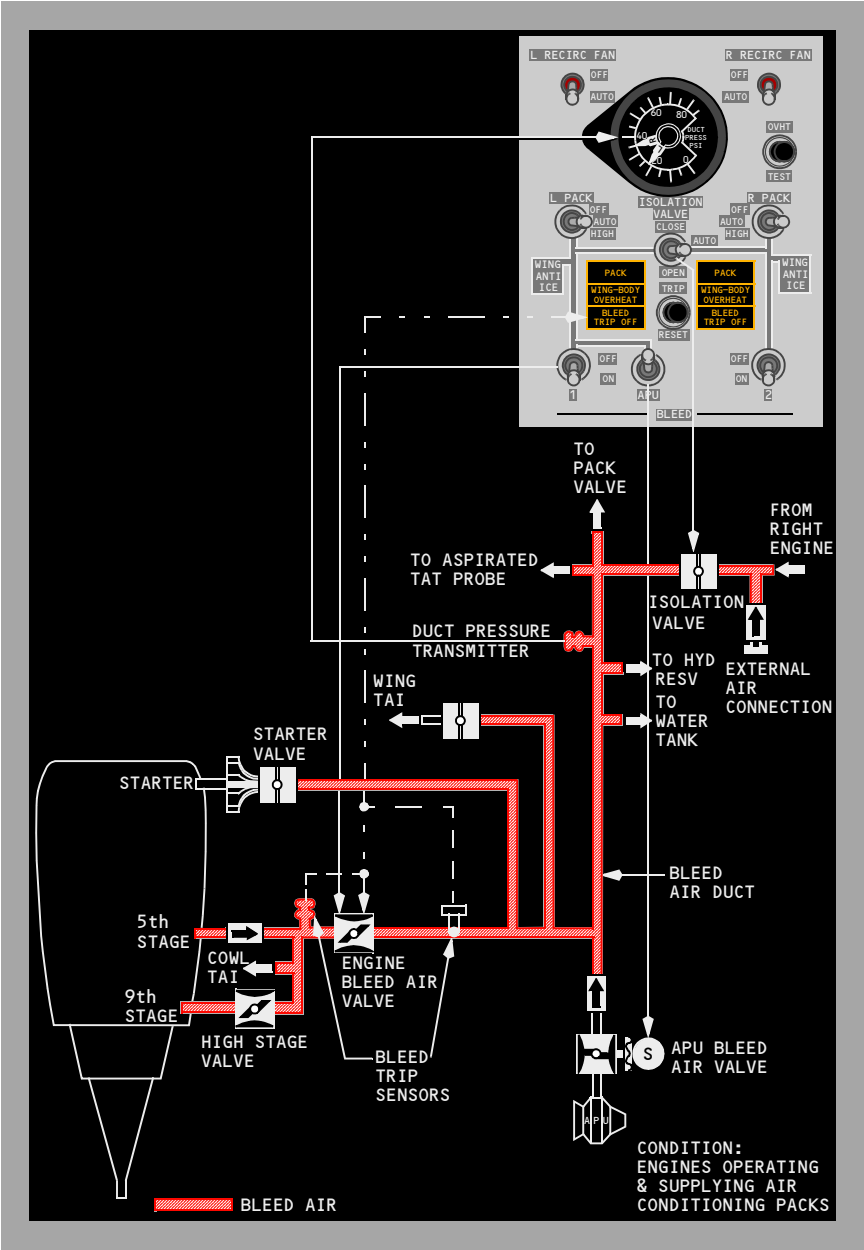


Wing-Body Overheat


A wing-body overheat condition is caused by a bleed air duct leak. It is sensed by the overheat sensors located as shown.

Wing-Body Overheat Ducts and Lights

[737 - 600/700]

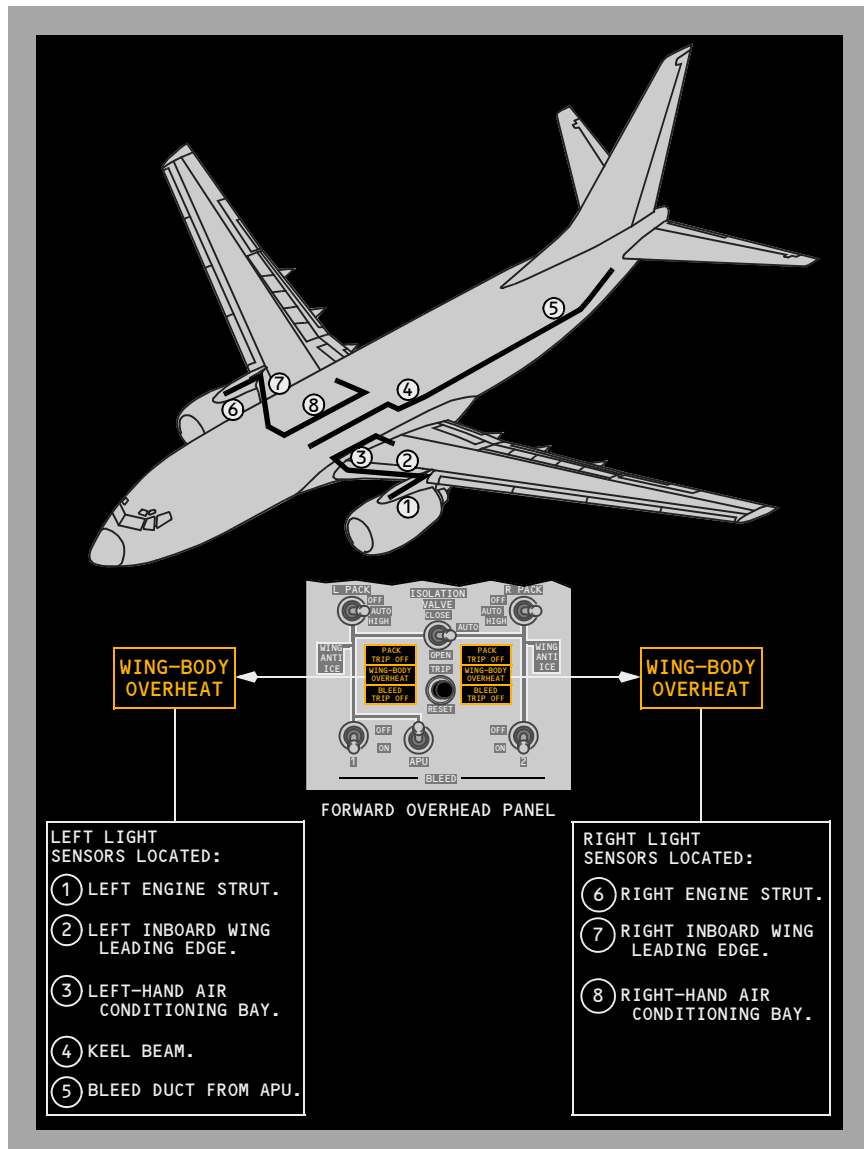

[737 - 800/900]

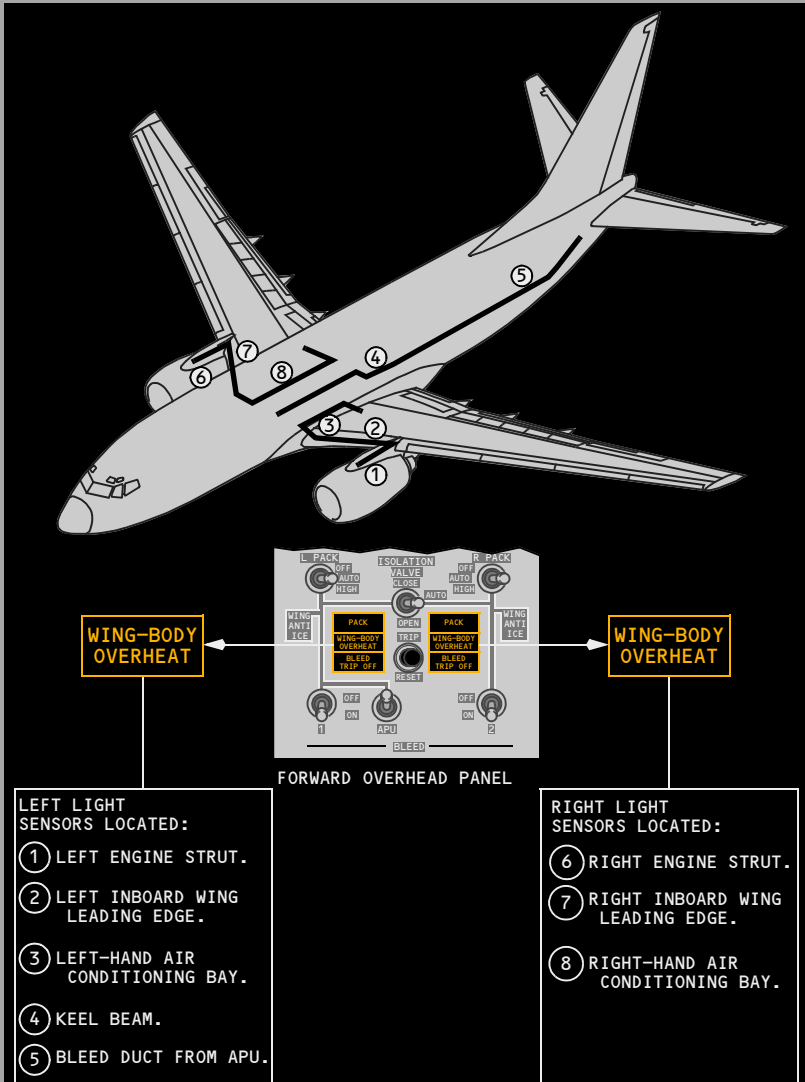

Intentionally
Blank

[\[737-600/700\]](#)

Introduction

The air conditioning system provides temperature controlled air by processing bleed air from the engines, APU, or a ground air source in air conditioning packs. Conditioned air from the left pack, upstream of the mix manifold, flows directly to the flight deck. Excess air from the left pack, air from the right pack, and air from the recirculation system is combined in the mix manifold. The mixed air is then distributed through the left and right sidewall risers to the passenger cabin.

Conditioned air for the cabin comes from either the airplane air conditioning system or a preconditioned ground source. Air from the preconditioned ground source enters the air conditioning system through the mix manifold.

Air Conditioning Pack

The flow of bleed air from the main bleed air duct through each air conditioning pack is controlled by the respective pack valve. Normally the left pack uses bleed air from engine No. 1 and the right pack uses bleed air from engine No. 2. A single pack in high flow is capable of maintaining pressurization and acceptable temperatures throughout the airplane up to the maximum certified ceiling.

The APU is capable of supplying bleed air for two packs on the ground, or one pack in flight. Most external air carts are capable of supplying adequate bleed air for two pack operation. Do not operate more than one pack from one engine.

Airflow Control

With both air conditioning pack switches in AUTO and both packs operating, the packs provide “normal air flow”. However, with one pack not operating, the other pack automatically switches to “high air flow” in order to maintain the necessary ventilation rate. This automatic switching is inhibited when the airplane is on the ground, or in flight with the flaps extended, to insure adequate engine power for single engine operation. Automatic switching to “high air flow” occurs if both engine bleed air switches are OFF and the APU bleed air switch is ON, regardless of flap position, air/ground status or number of packs operating.

With the air conditioning pack switch in HIGH, the pack provides “high air flow”. Additionally, an “APU high air flow” rate is available when the airplane is on the ground, the APU bleed air switch is ON and either or both pack switches are positioned to HIGH. This mode is designed to provide the maximum airflow when the APU is the only source of bleed air.

Ram Air System

The ram air system provides cooling air for the heat exchangers. Operation of the system is automatically controlled by the packs through operation of ram air inlet doors.

On the ground, or during slow flight with the flaps not fully retracted, the ram air inlet doors move to the full open position for maximum cooling. In normal cruise, the doors modulate between open and closed. A RAM DOOR FULL OPEN light illuminates whenever a ram door is fully open.

Deflector doors are installed forward of the ram air inlet doors to prevent slush ingestion prior to liftoff and after touchdown. Deflector doors extend when activated electrically by the air-ground safety sensor.

Cooling Cycle

The flow through the cooling cycle starts with bleed air passing through a heat exchanger for cooling. The air then flows to an air cycle machine for refrigeration and to a water separator which removes moisture. The processed cold air is then combined with hot air. The conditioned air flows into the mix manifold and distribution system.

Overheat protection is provided by temperature sensors located in the cooling cycle. An overheat condition causes the pack valve to close and the PACK TRIP OFF light to illuminate.


Air Mix Valves

The two air mix valves for each pack control hot and cold air according to the setting of the CONT CABIN or PASS CABIN temperature selector. Air that flows through the cold air mix valve is processed through a cooling cycle and then combined with hot air flowing from the hot air mix valve.

In the automatic temperature mode, the air mix valves are operated by the automatic temperature controller. The automatic temperature controller uses inputs from the respective temperature selector and cabin temperature sensor. The automatic temperature controller is bypassed when the temperature selector is positioned to MANUAL.

Anytime the pack valve closes, the air mix valves are driven to the full cold position automatically. This aids startup of the cooling cycle and prevents nuisance hot air trips when the pack is turned on.

Air Conditioning Pack Schematic

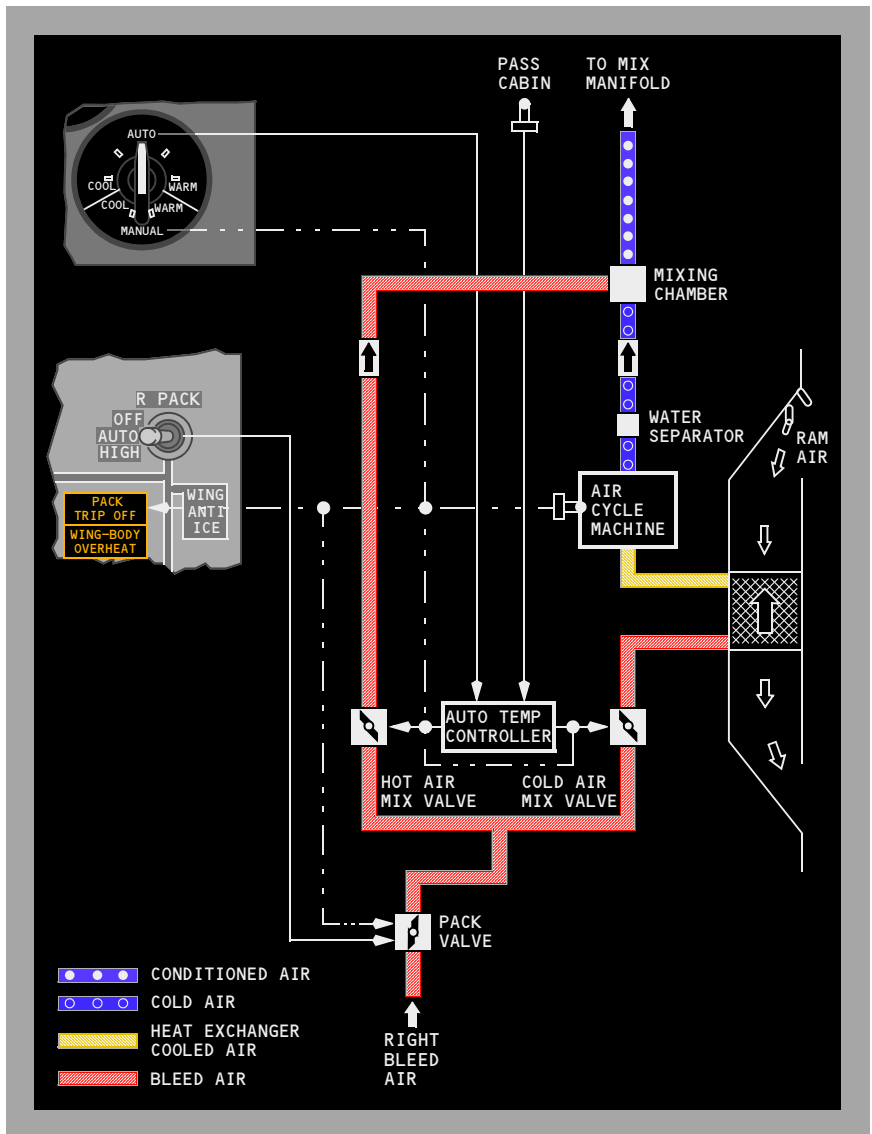

Air Conditioning Distribution

Conditioned air is collected in the mix manifold. The temperature of the air is directly related to the setting of the CONT CABIN and PASS CABIN temperature selectors.

Overheat detection is provided by temperature sensors located downstream of the packs. An overheat condition causes the appropriate mix valves to drive full cold and the DUCT OVERHEAT light to illuminate. A temperature higher than the duct overheat causes the appropriate pack valve to close and the PACK TRIP OFF light to illuminate.

Flight Deck

Since the flight deck requires only a fraction of the air supply provided by the left pack, most of the left pack air output is mixed with the right pack supply and routed to the passenger cabin.

Conditioned air for the flight deck branches into several risers which end at the floor, ceiling, and foot level outlets. Air diffusers on the floor under each seat deliver continuous air flow as long as the manifold is pressurized.

Overhead diffusers are located on the flight deck ceiling, above and aft of the No. 3 windows. Each of these outlets can be opened or closed as desired by turning a slotted adjusting screw.

There is also a dual purpose valve behind the rudder pedals of each pilot. These valves provide air for warming the pilots' feet and for defogging the inside of the No. 1 windshields. Each valve is controlled by knobs located on the Captain's and First Officer's panel, respectively.

Passenger Cabin

The passenger cabin air supply distribution system consists of the mix manifold, sidewall risers, and an overhead distribution duct.

Sidewall risers go up the right and left wall of the passenger cabin to supply air to the overhead distribution duct. The overhead distribution duct routes conditioned air to the passenger cabin. It extends from the forward to the aft end of the ceiling along the airplane centerline and also supplies the sidewall diffusers.

Recirculation Fan

The recirculation fan system reduces the air conditioning system pack load and the engine bleed air demand. Air from the passenger cabin and electrical equipment bay is drawn to the forward cargo bay where it is filtered and recirculated to the mix manifold. The fan is driven by an AC motor. The fan operates with the recirc fan switch in AUTO except with both packs on and one or both in HIGH.

Equipment Cooling

The equipment cooling system cools electronic equipment in the flight deck and the E & E bay.

The equipment cooling system consists of a supply duct and an exhaust duct. Each duct has a normal fan and an alternate fan. The supply duct supplies cool air to the flight deck displays and electronic equipment in the E & E bay. The exhaust duct collects and discards warm air from the flight deck displays, the overhead and aft electronic panels, circuit breaker panels in the flight deck, and electronic equipment in the E & E bay.

Loss of airflow due to failure of an equipment cooling fan results in illumination of the related equipment cooling OFF light. Selecting the alternate fan should restore airflow and extinguish the OFF light within approximately 5 seconds.

In the event of a forward cargo fire warning, the equipment cooling exhaust fan is shut off and the equipment cooling exhaust OFF light is inhibited.

If an overtemperature occurs on the ground, alerting is provided through the crew call horn in the nose wheel well.


Forward Cargo Compartment

The recirculation fan system circulates air from the passenger cabin around the lining of the forward cargo compartment. When the overboard exhaust valve is closed, exhaust air from the equipment cooling system is also diffused to the lining of the forward cargo compartment for additional inflight heating.

Conditioned Air Source Connection

A ground air conditioning source may be connected to the mix manifold to distribute preconditioned air throughout the airplane.

Air Conditioning Distribution Schematic

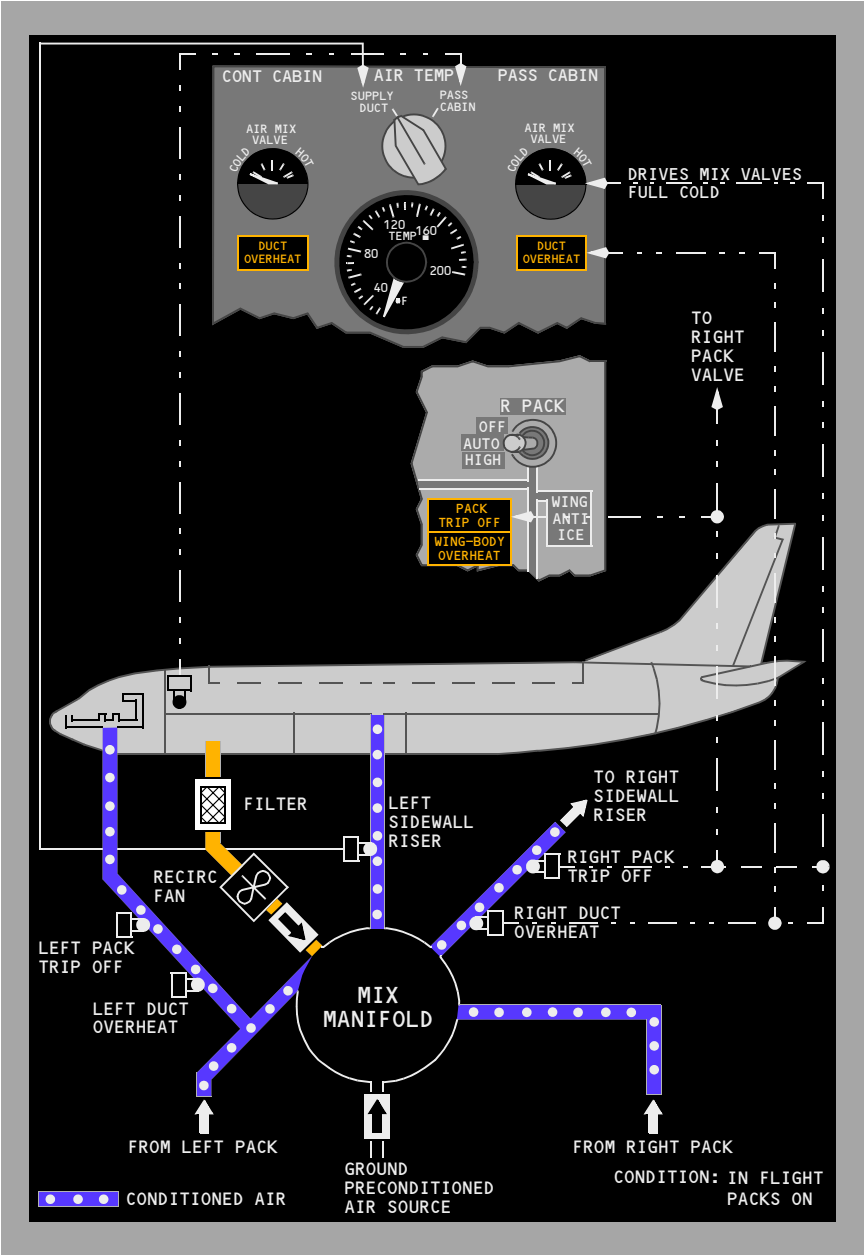

[\[737-800/900\]](#)

Introduction

The air conditioning system provides temperature controlled air by processing bleed air from the engines, APU, or a ground air source in air conditioning packs. Conditioned air from the left pack, upstream of the mix manifold, flows directly to the flight deck. Excess air from the left pack, air from the right pack, and air from the recirculation system is combined in the mix manifold. The mixed air is then distributed through the left and right sidewall risers to the passenger cabin.

Conditioned air for the cabin comes from either the airplane air conditioning system or a preconditioned ground source. Air from the preconditioned ground source enters the air conditioning system through the mix manifold.

Air Conditioning Pack

The flow of bleed air from the main bleed air duct through each air conditioning pack is controlled by the respective pack valve. Normally, the left pack uses bleed air from engine No. 1 and the right pack uses bleed air from engine No. 2. A single pack in high flow is capable of maintaining pressurization and acceptable temperatures throughout the airplane up to the maximum certified ceiling.

The APU is capable of supplying bleed air for two packs on the ground, or one pack in flight. Most external air carts are capable of supplying adequate bleed air for two pack operation. Do not operate more than one pack from one engine.

Airflow Control

With both air conditioning pack switches in AUTO and both packs operating, the packs provide “normal air flow”. However, with one pack not operating, the other pack automatically switches to “high air flow” in order to maintain the necessary ventilation rate. This automatic switching is inhibited when the airplane is on the ground, or in flight with the flaps extended, to insure adequate engine power for single engine operation. Automatic switching to “high air flow” occurs if both engine bleed air switches are OFF and the APU bleed air switch is ON, regardless of flap position, air/ground status or number of packs operating.

With the air conditioning pack switch in HIGH, the pack provides “high air flow”. Additionally, an “APU high air flow” rate is available when the airplane is on the ground, the APU bleed air switch is ON and either or both pack switches are positioned to HIGH. This mode is designed to provide the maximum airflow when the APU is the only source of bleed air.

Ram Air System

The ram air system provides cooling air for the heat exchangers. Operation of the system is automatically controlled by the packs through operation of ram air inlet doors.

On the ground, or during slow flight with the flaps not fully retracted, the ram air inlet doors move to the full open position for maximum cooling. In normal cruise, the doors modulate between open and closed. A RAM DOOR FULL OPEN light illuminates whenever a ram door is fully open.

Deflector doors are installed forward of the ram air inlet doors to prevent slush ingestion prior to liftoff and after touchdown. Deflector doors extend when activated electrically by the air-ground safety sensor.

Cooling Cycle

Flow through the cooling cycle starts with bleed air passing through a heat exchanger for cooling. The air then flows to an air cycle machine for refrigeration. The processed cold air is then combined with hot air which has bypassed the air cycle machine, then through a high pressure water separator which removes moisture. This conditioned air then flows into the mix manifold and distribution system.

Overheat protection is provided by temperature sensors located in the cooling cycle. An overheat condition causes the pack valve to close and the PACK light to illuminate.


Pack Temperature Control

Electronic controllers command the pack temperature control valve toward open or closed to satisfy pack discharge requirements.

If a primary pack control fails, the affected pack is controlled by the standby pack control in the opposite controller. A primary or standby pack control failure causes the PACK, MASTER CAUTION and AIR COND System Annunciator lights to illuminate during recall.

If both the primary and the standby pack controls fail for the same pack, the PACK, MASTER CAUTION, and AIR COND System Annunciator lights illuminate. The pack will continue to operate without control unless excessive temperatures cause the pack to trip off.

Air Conditioning Pack Schematic

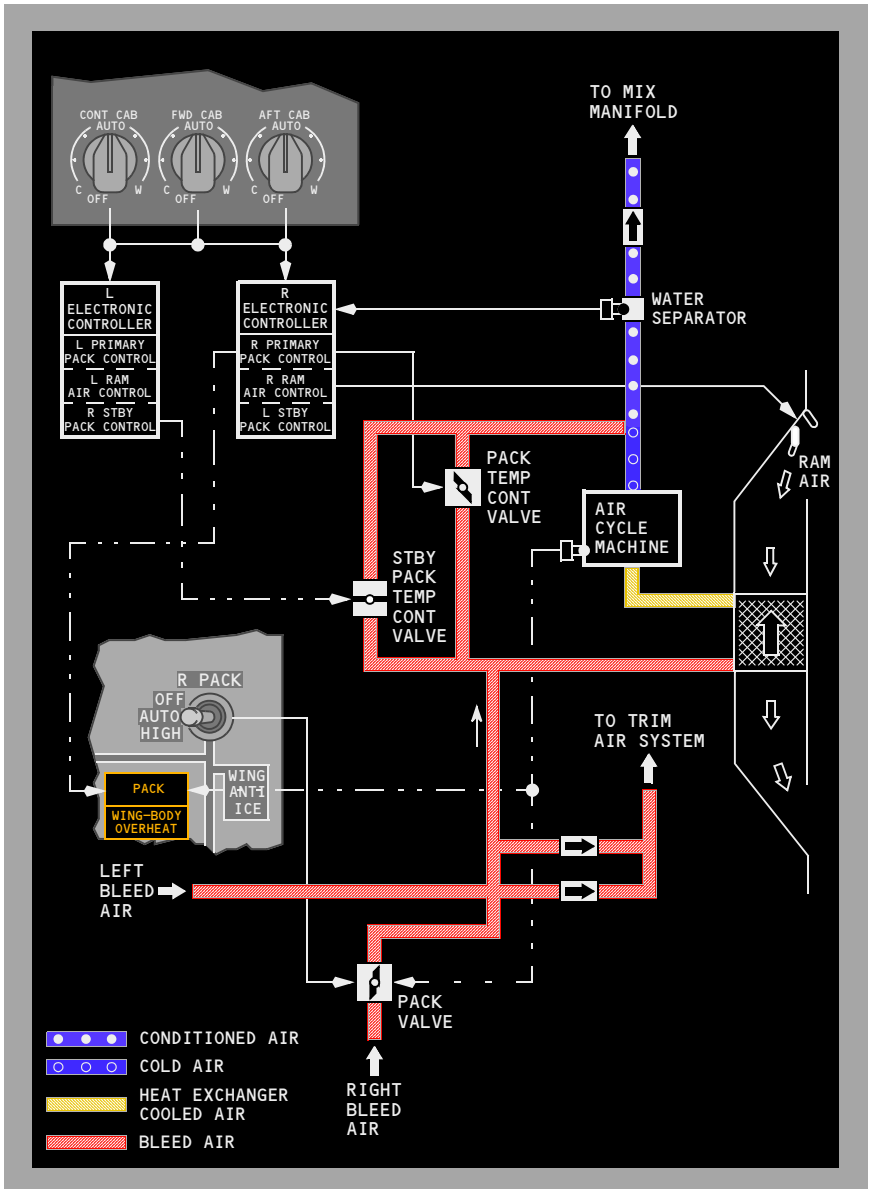

Zone Temperature Control

There are three zones: flight deck, forward cabin and aft cabin. Desired zone temperature is set by adjusting the individual Temperature Selectors. The selector range is approximately 65°F (18°C) to 85°F (30°C).

The packs produce an air temperature that satisfies the zone which requires the most cooling. Zone temperature is controlled by introducing the proper amount of trim air to the zone supply ducts. The quantity of trim air is regulated by individual trim air modulating valves.

During single pack operation with the TRIM AIR selected ON, zone temperature is controlled the same as during two pack operation. During single pack operation with the TRIM AIR selected OFF, the pack attempts to produce an air temperature to satisfy the average temperature demands of all three zones.

If air in a zone supply duct overheats, the associated amber ZONE TEMP light illuminates, and the associated trim air modulating valve closes. The trim air modulating valve may be reopened after the duct has cooled by pushing the TRIP RESET Switch.

Zone Temperature Control Modes

The left electronic controller controls the aft cabin zone and provides backup control for the flight deck. The right controller controls the forward cabin zone and provides primary control for the flight deck.

Failure of the primary flight deck temperature control will cause an automatic switch to the back up control and will illuminate the CONT CAB amber ZONE TEMP light upon Master Caution Recall. Failure of both the primary and standby controls will illuminate the lights automatically.

Failure of the forward or aft cabin temperature control will cause the associated trim air modulating valve to close. The Temperature Selectors operate normally, but the Temperature Selector settings of the two passenger cabin zones will be averaged. The amber ZONE TEMP light will illuminate upon Master Caution Recall to indicate failure of the associated zone control.

Unbalanced Pack Temperature Control Mode

Any failure affecting the supply of trim air will cause the temperature control system to control both packs independently. If flight deck trim air is lost, the left pack will provide conditioned air to the flight deck at the selected temperature and the right pack will satisfy the demand of the passenger zone which requires the most cooling. If a passenger cabin zone trim air, or all trim air is lost, the forward and aft zone temperature demands will be averaged for control of the right pack.

If any individual zone is switched OFF, the Temperature Selector setting will be ignored by the temperature control system.

Standby Pack Average Temperature

If all zone controls and primary pack controls fail, the standby pack controls command the packs to produce air temperatures which will satisfy the average temperature demand of the two cabin zones. The trim air modulating valves will close. The flight deck zone Temperature Selector will have no effect on the standby pack controls.

Fixed Cabin Temperature

If all Temperature Selectors are positioned OFF, the pack controls will cause the left pack to maintain a fixed temperature of 75°F (24°C) and the right pack to maintain 65°F (18°C) as measured at the pack temperature sensor.

Air Conditioning Distribution

Conditioned air is collected in the mix manifold. The temperature of the air is directly related to the setting of the Temperature Selectors.

Overheat detection is provided by temperature sensors located downstream of the packs and the mix manifold. An overheat condition causes the appropriate trim air modulating valve to close and the ZONE TEMP light to illuminate.

Flight Deck

Since the flight deck requires only a fraction of the air supply provided by the left pack, most of the left pack output is routed to the mix manifold.

Conditioned air for the flight deck branches into several risers which end at the floor, ceiling and foot level outlets. Air diffusers on the floor under each seat deliver continuous air flow as long as the manifold is pressurized.

Overhead diffusers are located on the flight deck ceiling, above and aft of the No. 3 windows. Each of these outlets can be opened or closed as desired by turning a slotted adjusting screw.

There is also a dual purpose valve behind the rudder pedal of each pilot. These valves provide air for warming the pilots' feet and for defogging the inside of the No. 1 windshields. Each valve is controlled by knobs located on the Captain's and First Officer's panels.

Passenger Cabin

The passenger cabin air supply distribution system consists of the mix manifold, sidewall risers, and an overhead distribution duct.

Sidewall risers go up the right and left walls of the passenger cabin to supply air to the overhead distribution duct. The overhead distribution duct routes conditioned air to the passenger cabin. It extends from the forward to the aft end of the ceiling along the airplane centerline and also supplies the sidewall diffusers.

Recirculation Fan

The recirculation fan system reduces the air conditioning system pack load and the engine bleed air demand. Air from the passenger cabin and electrical equipment bay is drawn to the forward cargo bay where it is filtered and recirculated to the mix manifold. The fans are driven by AC motors. Each recirculation fan operates only if the respective RECIRC FAN Switch is selected to AUTO. In flight, the left recirculation fan operates if both packs are operating unless either PACK switch is in HIGH. The right recirculation fan operates in flight if both packs are operating unless both PACK switches are in HIGH. On the ground, the left recirculation fan operates unless both PACK switches are in HIGH and the right recirculation fan operates even if both PACK switches are in HIGH.

Equipment Cooling

The equipment cooling system cools electronic equipment in the flight deck and the E & E bay.

The equipment cooling system consists of a supply duct and an exhaust duct. Each duct has a normal fan and an alternate fan. The supply duct supplies cool air to the flight deck displays and electronic equipment in the E & E bay. The exhaust duct collects and discards warm air from the flight deck displays, the overhead and aft electronic panels, circuit breaker panels in the flight deck, and electronic equipment in the E & E bay.

Loss of airflow due to failure of an equipment cooling fan results in illumination of the related equipment cooling OFF light. Selecting the alternate fan should restore airflow and extinguish the OFF light within approximately 5 seconds.

In the event of a forward cargo fire warning, the equipment cooling exhaust fan is shut off and the equipment cooling exhaust OFF light is inhibited..

If an overtemperature occurs on the ground, alerting is provided through the crew call horn in the nose wheel well.


Forward Cargo Compartment

The recirculation fan system circulates air from the passenger cabin around the lining of the forward cargo compartment. When the overboard exhaust valve is closed, exhaust air from the equipment cooling system is also diffused to the lining of the forward cargo compartment for additional inflight heating.

Conditioned Air Source Connection

A ground air conditioning source may be connected to the mix manifold to distribute preconditioned air throughout the airplane.

Air Conditioning Distribution Schematic

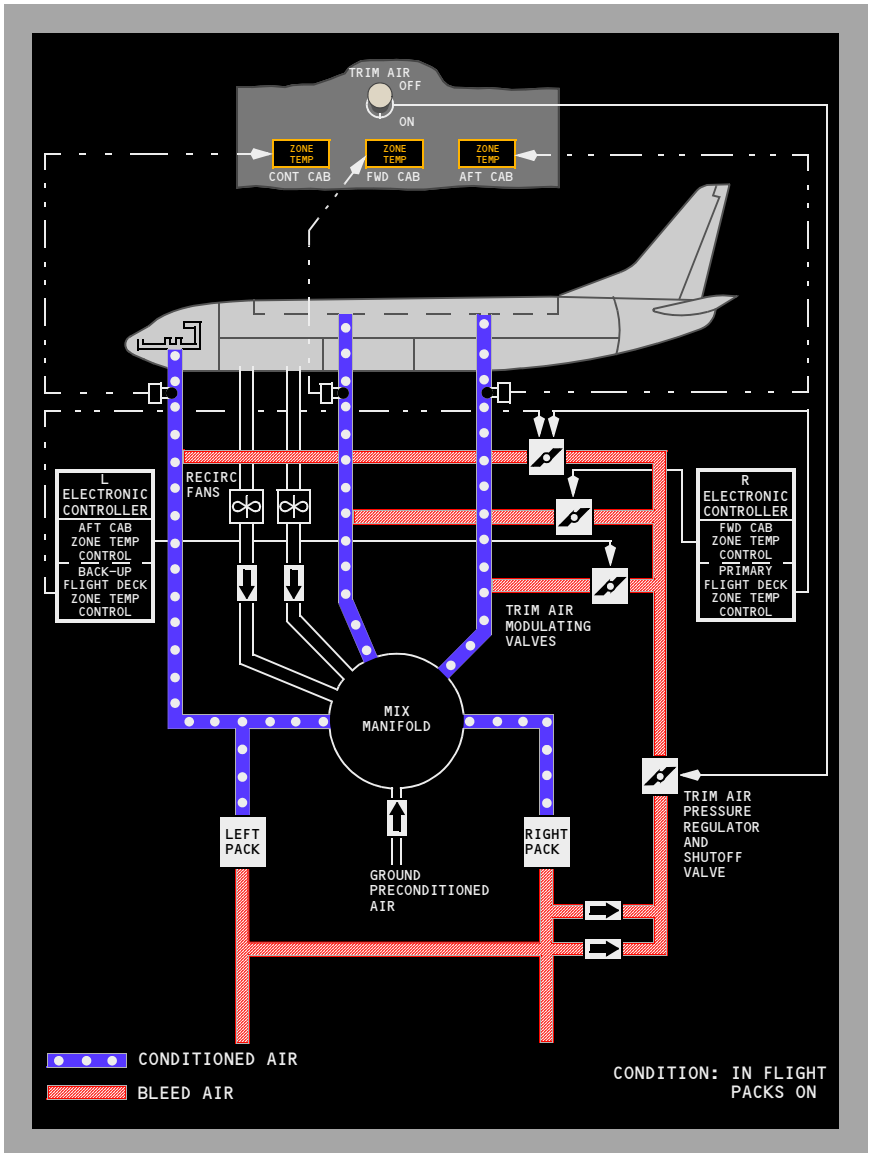

Intentionally
Blank

Introduction

Cabin pressurization is controlled during all phases of airplane operation by the cabin pressure control system. The cabin pressure control system includes two identical automatic controllers available by selecting AUTO or ALTN and a manual (MAN) pilot-controlled mode.

The system uses bleed air supplied to and distributed by the air conditioning system. Pressurization and ventilation are controlled by modulating the outflow valve and the overboard exhaust valve.

Pressure Relief Valves

Two pressure relief valves provide safety pressure relief by limiting the differential pressure to a maximum of 9.1 psi. A negative relief valve prevents external atmospheric pressure from exceeding internal cabin pressure.

[Option - 6,500 Foot Cabin Altitude]

Two pressure relief valves provide safety pressure relief by limiting the differential pressure to a maximum of 9.59 psi. A negative relief valve prevents external atmospheric pressure from exceeding internal cabin pressure.

Cabin Pressure Controller

Cabin altitude is normally rate-controlled by the cabin pressure controller up to a cabin altitude of 8,000 feet at the airplane maximum certified ceiling of 41,000 feet.

[Option - 6,500 Foot Cabin Altitude]

Cabin altitude is normally rate-controlled by the cabin pressure controller up to a cabin altitude of 6,500 feet at the airplane maximum certified ceiling of 41,000 feet.


The cabin pressure controller controls cabin pressure in the following modes:

- **AUTO** – Automatic pressurization control; the normal mode of operation. Uses DC motor.
- **ALTN** – Automatic pressurization control; the alternate mode of operation. Uses DC motor.
- **MAN** – Manual control of the system using DC motor.


The air data inertial reference units (ADIRUs) provides ambient static pressure, baro corrected altitude, non corrected altitude and calibrated airspeed to both automatic controllers. The ADIRUs receive barometric corrections from the Captain's and First Officer's BARO reference selectors.

The automatic controllers also receive throttle position from both stall management computers and signals from the air/ground sensors.

Cabin Pressure Control System Schematic

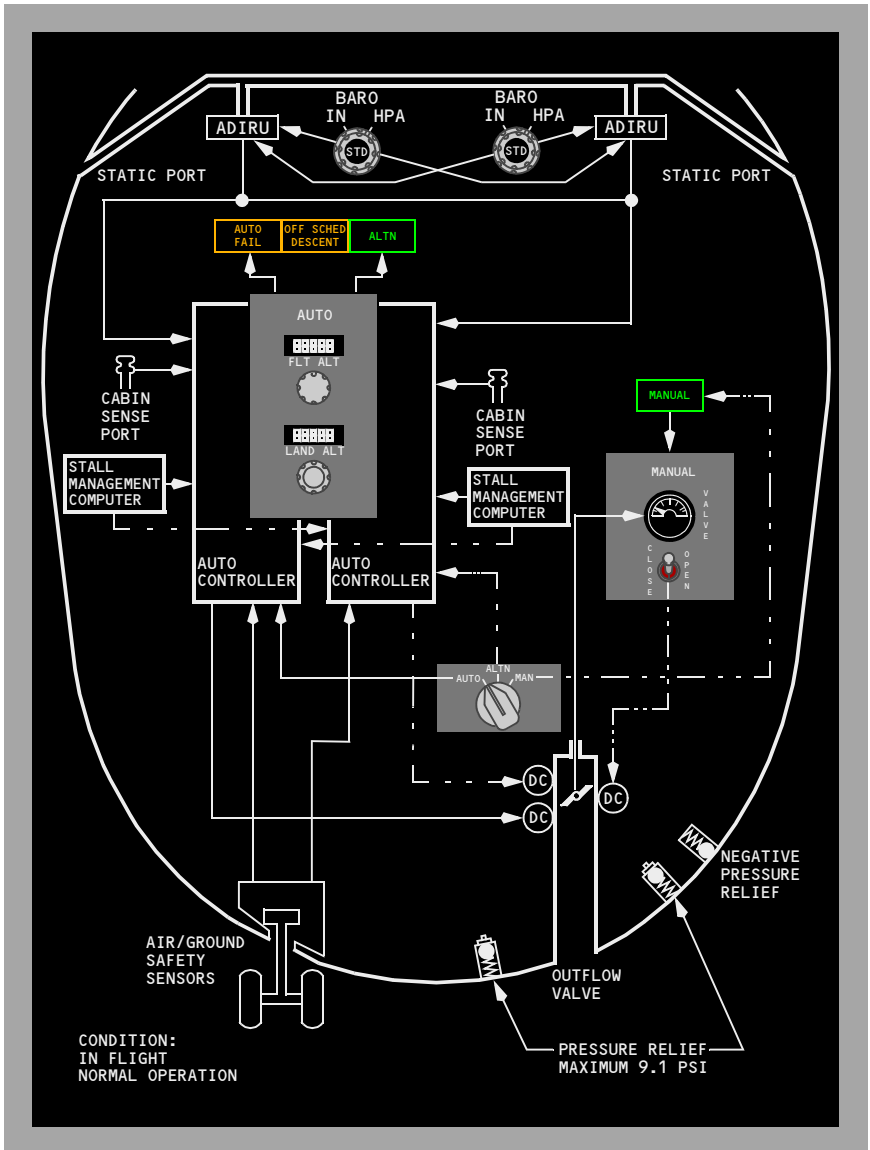

[Option - 6,500 Foot Cabin Altitude]

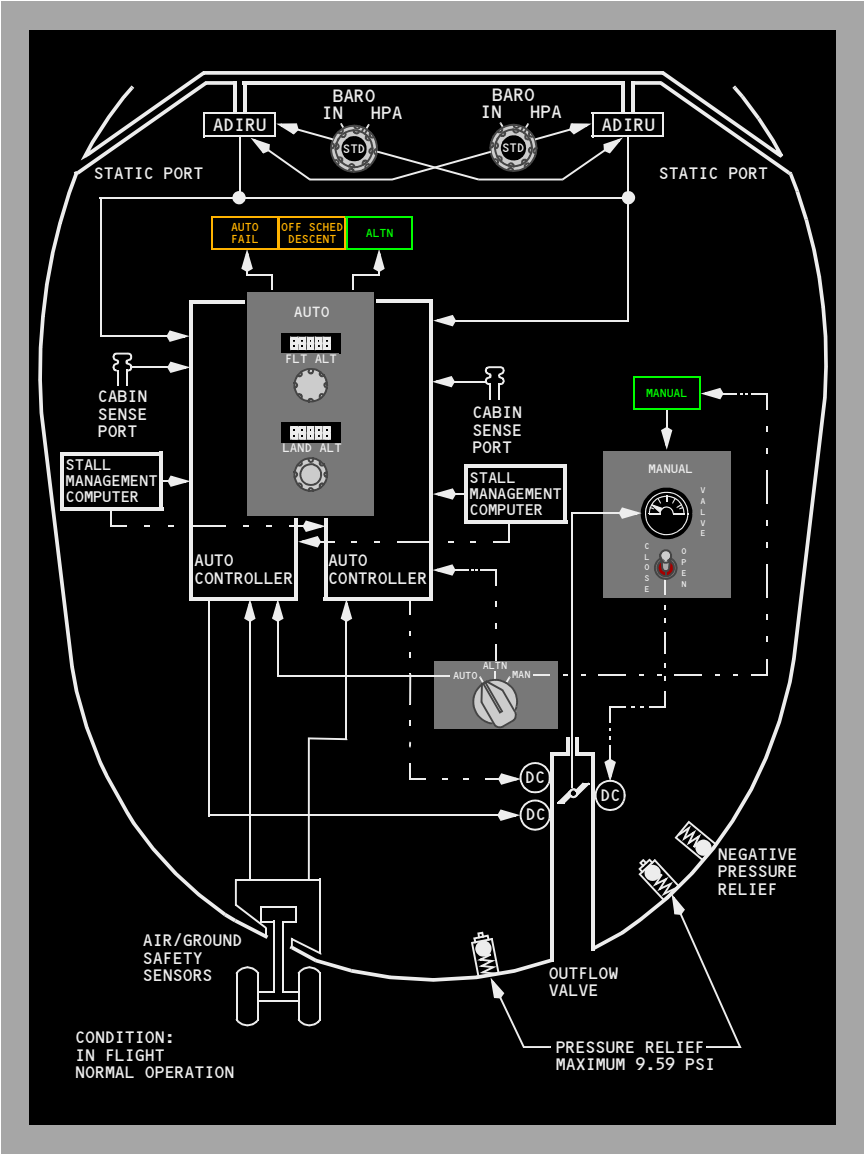

Pressurization Outflow

Cabin air outflow is controlled by the outflow valve and the overboard exhaust valve. A small amount is also exhausted through toilet and galley vents, miscellaneous fixed vents, and by seal leakage.

Outflow Valve

The outflow valve is the overboard exhaust exit for the majority of the air circulated through the passenger cabin. Passenger cabin air is drawn through foot level grills, down around the aft cargo compartment, where it provides heating, and is discharged overboard through the outflow valve.

Overboard Exhaust Valve


On the ground and in flight with low differential pressure, the overboard exhaust valve is open and warm air from the E & E bay is discharged overboard. In flight, at higher cabin differential pressures, the overboard exhaust valve is normally closed and exhaust air is diffused to the lining of the forward cargo compartment.

[737-600 or 737-700]

However, the overboard exhaust valve is driven open if either pack switch is in high and the recirculation fan is off. This allows for increased ventilation in the smoke removal configuration.

Note: During pressurized flight, the overboard exhaust valve will be commanded to a smoke mode upon a Forward Cargo Fire Alarm.

Pressurization Outflow Schematic

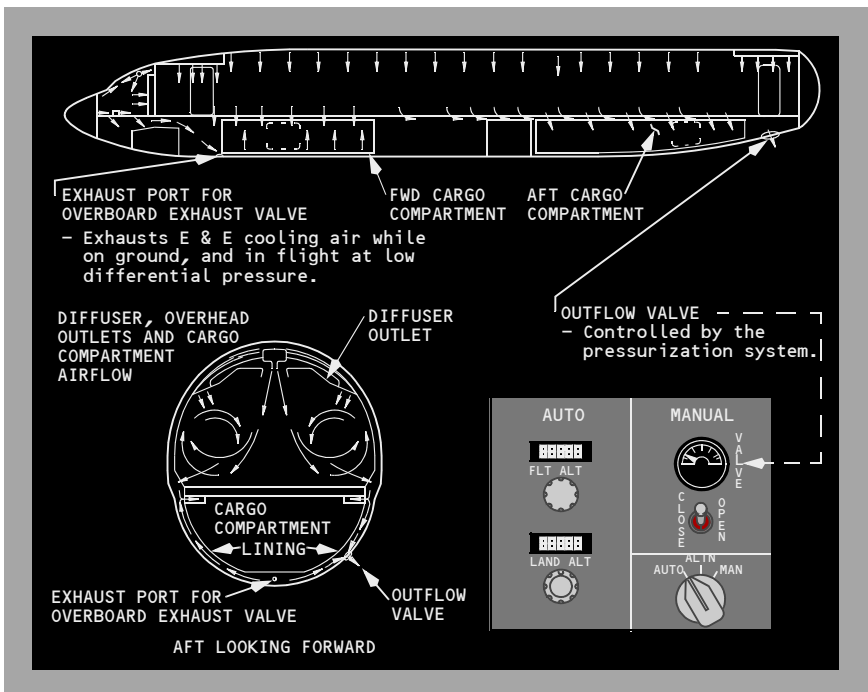

Auto Mode Operation

The AUTO system consists of two identical controllers, with one controller alternately sequenced as the primary operational controller for each new flight. The other automatic controller is immediately available as a backup.

In the AUTO or ALTN mode, the pressurization control panel is used to preset two altitudes into the auto controllers:

- FLT ALT (flight or cruise altitude).
- LAND ALT (landing or destination airport altitude).

Takeoff airport altitude (actually cabin altitude) is fed into the auto controllers at all times when on the ground.

The air/ground safety sensor signals whether the airplane is on the ground or in the air. On the ground and at lower power settings, the cabin is depressurized by driving the outflow valve to the full open position.

The cabin begins to pressurize on the ground at higher power settings. The controller modulates the outflow valve toward close, slightly pressurizing the cabin. This ground pressurization of the cabin makes the transition to pressurized flight more gradual for the passengers and crew, and also gives the system better response to ground effect pressure changes during takeoff.

In the air, the auto controller maintains a proportional pressure differential between airplane and cabin altitude. By increasing the altitude at a rate proportional to the airplane climb rate, cabin altitude change is held to the minimum rate required.

An amber OFF SCHED DESCENT light illuminates if the airplane begins to descend without having reached the preset cruise altitude; for example, a flight aborted in climb and returning to the takeoff airport. The controller programs the cabin to land at the takeoff field elevation without further pilot inputs. If the FLT ALT indicator is changed, the automatic abort capability to the original takeoff field elevation is lost.

The cruise mode is activated when the airplane climbs to within 0.25 psi of the selected FLT ALT. During cruise the controller maintains the cabin altitude slightly below the selected LAND ALT, if the differential pressure between the selected LAND ALT and FLT ALT is less than or equal to 8.35 psid above 37,000 feet, 7.80 psid with the FLT ALT between 28,000 and 37,000 feet, and 7.45 psid with FLT ALT less than 28,000 feet. If the differential pressure between the selected LAND ALT and FLT ALT is greater than these values, the controller maintains a pressure differential of 8.35 psid above 37,000 feet, 7.80 psid with the FLT ALT between 28,000 and 37,000 feet, and 7.45 psid with FLT ALT less than 28,000 feet. Deviations from flight altitude can cause the pressure differential to vary as the controller modulates the outflow valve to maintain a constant cabin altitude.

[Option - 6,500 Foot Cabin Altitude]

The cruise mode is activated when the airplane climbs to within 0.25 psi of the selected FLT ALT. During cruise the controller maintains the cabin altitude slightly below the selected LAND ALT, if the differential pressure between the selected LAND ALT and FLT ALT is less than or equal to 8.99 psid above 37,000 feet, 8.44 psid with the FLT ALT between 28,000 and 37,000 feet or 7.45 psid with FLT ALT less than 28,000 feet. If the differential pressure between the selected LAND ALT and FLT ALT is greater than these values, the controller maintains a pressure differential of 8.99 psid above 37,000 feet, 8.44 psid with the FLT ALT between 28,000 or 37,000 feet and 7.45 psid with FLT ALT less than 28,000 feet. Deviations from flight altitude can cause the pressure differential to vary as the controller modulates the outflow valve to maintain a constant cabin altitude.

The descent mode is activated when the airplane descends 0.25 psi below the selected FLT ALT. The cabin begins a proportional descent to slightly below the selected LAND ALT. The controller programs the cabin to land slightly pressurized so that rapid changes in altitude during approach result in minimum cabin pressure changes.

While taxiing in, the controller drives the outflow valve slowly to the full open position depressurizing the cabin.

An amber AUTO FAIL light illuminates if any of the following conditions occurs:


- Loss of DC power
- Controller fault
- Outflow valve control fault
- Excessive differential pressure (> 8.75 psi)*
- Excessive rate of cabin pressure change (± 2000 sea level feet/minute)*
- High cabin altitude (above 15,800 feet).*

*If controller is not responding properly

With illumination of the AUTO FAIL light, the pressure control automatically transfers to the other auto controller (ALTN mode).

Moving the pressurization mode selector to the ALTN position extinguishes the AUTO FAIL light, however the ALTN light remains illuminated to indicate single channel operation.


Flight Path Events – Auto Mode

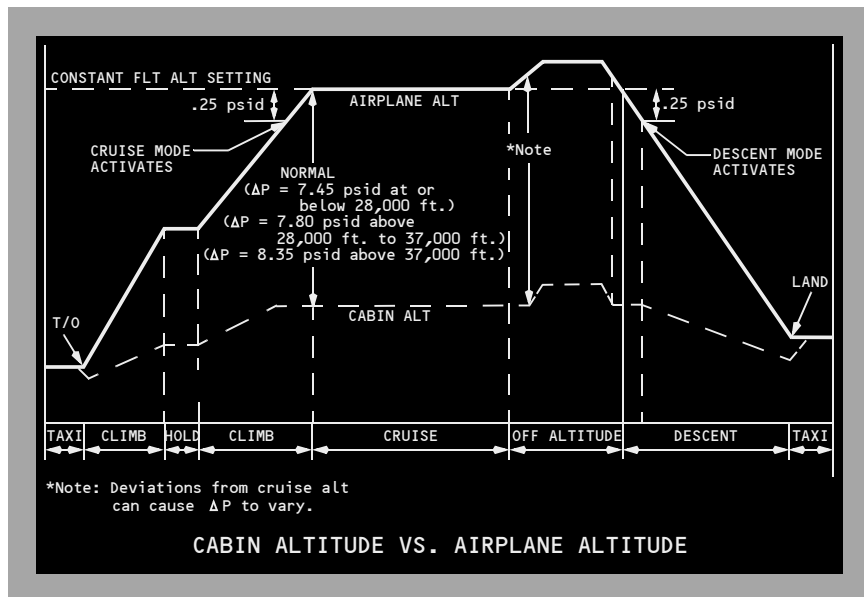

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Air Systems -
Pressurization System
Description

[Option - 6,500 Foot Cabin Altitude]

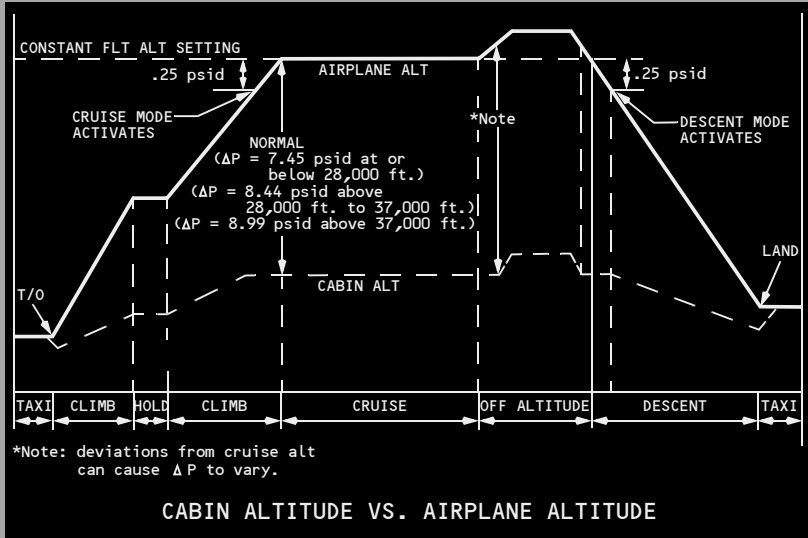

Manual Mode Operation

A green MANUAL Light illuminates with the pressurization mode selector in the MAN position.

Manual control of the cabin altitude is used if both the AUTO and ALTN modes are inoperative. In the MAN mode, the outflow valve position switch is used to modulate the outflow valve by monitoring the cabin altitude panel and valve position on the outflow valve position indicator. A separate DC motor, powered by the DC standby system, drives the outflow valve at a slower rate than the automatic modes. Outflow valve full range of motion takes up to 20 seconds.


Anti-Ice, Rain**Chapter 3****Table of Contents****Section 0**

Controls and Indicators	3.10
Window Heat Panel	3.10.1
Windshield/Foot Air Controls	3.10.2
Windshield Wiper Selector Panel	3.10.2
Probe Heat Panel	3.10.3
Engine Anti-Ice Panel	3.10.4
Thermal Anti-Ice Indication	3.10.5
Wing Anti-Ice Panel	3.10.5
System Description	3.20
Introduction	3.20.1
Anti-Ice Components Diagram	3.20.1
Flight Deck Window Heat	3.20.1
Flight Deck Window Heat Operation	3.20.2
Flight Deck Window Heat Schematic	3.20.3
Windshield Wipers	3.20.3
Probe and Sensor Heat	3.20.4
Engine Anti-Ice System	3.20.4
Engine Anti-Ice System Operation	3.20.4
Engine Anti-Ice System Schematic	3.20.5
Wing Anti-Ice System	3.20.5
Wing Anti-Ice System Operation	3.20.5
Wing Anti-Ice System Schematic	3.20.7

Intentionally
Blank

**Anti-Ice, Rain
Controls and Indicators****Chapter 3
Section 10****Window Heat Panel**

[Option – Green ON Lights]

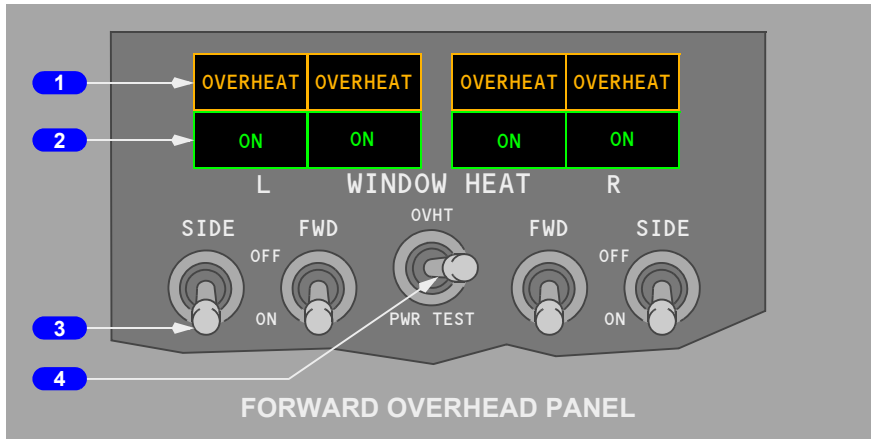**1 Window OVERHEAT Lights**

Illuminated (amber) – overheat condition is detected.

Note: OVERHEAT lights also illuminate if electrical power to window(s) is interrupted.

2 Window Heat ON Lights

[Option – Green ON Lights]

Illuminated (green) – window heat is being applied to selected window(s).

Extinguished –

- switch is OFF, or
- an overheat is detected, or
- a system failure has occurred
- system is at correct temperature.

3 WINDOW HEAT Switches

ON – window heat is applied to selected window(s).

OFF – window heat not in use.


4 WINDOW HEAT Test Switch (spring-loaded to neutral)

OVHT – simulates an overheat condition.

PWR TEST – provides a confidence test.

Note: Refer to Supplementary Normal Procedures for Window Heat Test procedures.

Windshield/Foot Air Controls

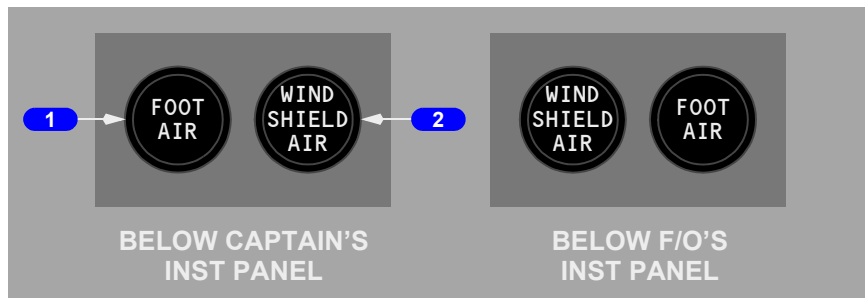


1 FOOT AIR Controls

PULL – supplies conditioned air to pilots' leg positions.

2 WINDSHIELD AIR Controls

PULL – supplies conditioned air to number 1 windows for defogging.

Windshield Wiper Selector Panel

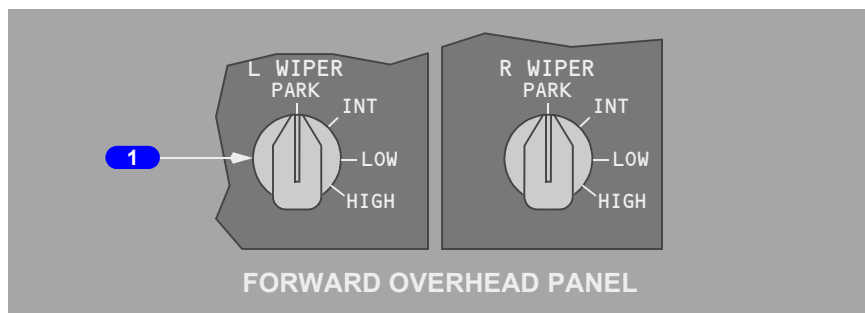

1 Windshield WIPER Selectors

PARK – turns off wiper motors and stows wiper blades.


INT – seven second intermittent operation.

LOW – low speed operation.

HIGH – high speed operation.

Probe Heat Panel

[Option - Aspirated TAT]

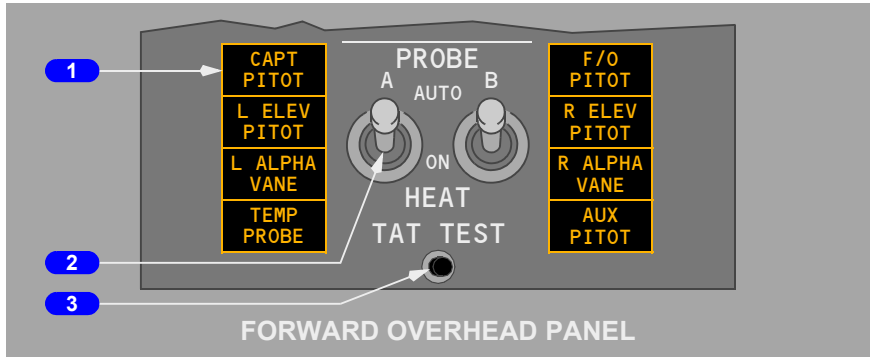

1 Probe Heat Lights

Illuminated (amber) – related probe not heated.

Note: If operating on standby power, probe heat lights do not indicate system status.

2 PROBE HEAT Switches

ON – power is supplied to heat related system.


AUTO – power is automatically supplied to both systems when either engine is started.

3 TAT TEST Switch

[Option - Aspirated TAT]

Push - Electrical power applied to TEMP PROBE on the ground.

Engine Anti-Ice Panel

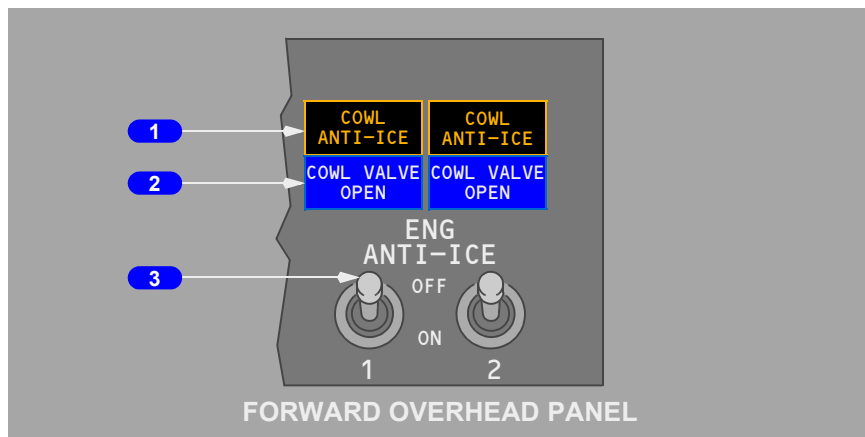

1 COWL ANTI-ICE Lights

Illuminated (amber) – indicates an overpressure condition in duct downstream of engine cowl anti-ice valve.

2 COWL VALVE OPEN Lights

Illuminated (blue) –

- bright – related cowl anti-ice valve is in transit, or, cowl anti-ice valve position disagrees with related ENGINE ANTI-ICE switch position
- dim – related cowl anti-ice valve is open (switch ON).

Extinguished – related cowl anti-ice valve is closed (switch OFF).

3 ENGINE ANTI-ICE Switches


ON –

- related engine anti-ice valve is open
- stick shaker logic is set for icing conditions.

OFF –

- related engine anti-ice valve is closed
- stick shaker logic returns to normal if wing anti-ice has not been used in flight.

Thermal Anti-Ice Indication

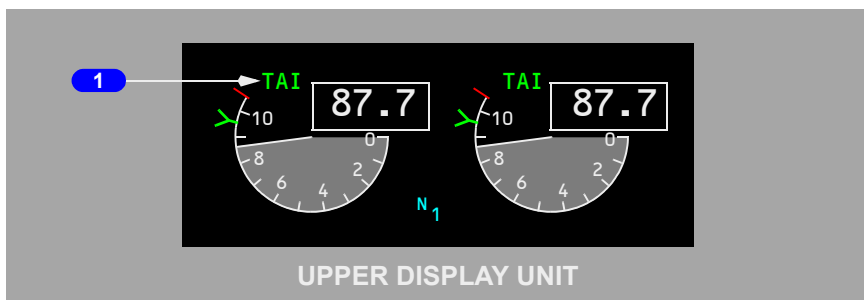


1 Thermal Anti-Ice Indications

Illuminated –

- Green – cowl anti-ice valve(s) open
- Amber – cowl anti-ice valve is not in position indicated by related engine anti-ice switch.

Wing Anti-Ice Panel

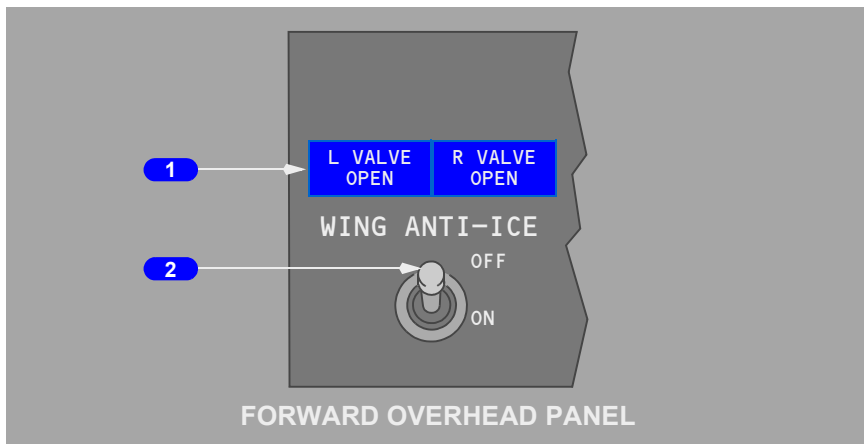

1 Wing Anti-Ice VALVE OPEN Lights

Illuminated (blue) –

- bright – related wing anti-ice control valve is in transit, or, related wing anti-ice control valve position disagrees with WING ANTI-ICE switch position
- dim – related wing anti-ice control valve is open (switch ON).

Extinguished – related wing anti-ice control valve is closed (switch OFF).

2 WING ANTI-ICE Switch

OFF – wing anti-ice control valves are closed.

ON (in the air) –

- wing anti-ice control valves are open
- stick shaker logic is set for icing conditions.

Note: Stick shaker logic remains set for icing conditions for the remainder of the flight, regardless of subsequent WING ANTI-ICE switch position.

ON (on the ground) –

- wing anti-ice control valves open if thrust on both engines is below takeoff warning setting and temperature inside both distribution ducts is below thermal switch activation temperature
- control valves close if either engine thrust is above takeoff warning setting or thermal switch is activated in either distribution duct. Switch remains ON
- switch trips OFF at lift-off.

Anti-Ice, Rain System Description

Chapter 3 Section 20


Introduction

Thermal anti-icing (TAI), electrical anti-icing, and windshield wipers are the systems provided for ice and rain protection.

The anti-ice and rain systems include:

- Flight Deck Window Heat
- Windshield Wipers
- Probe and Sensor Heat
- Engine Anti-Ice System
- Wing Anti-Ice System

Anti-Ice Components Diagram

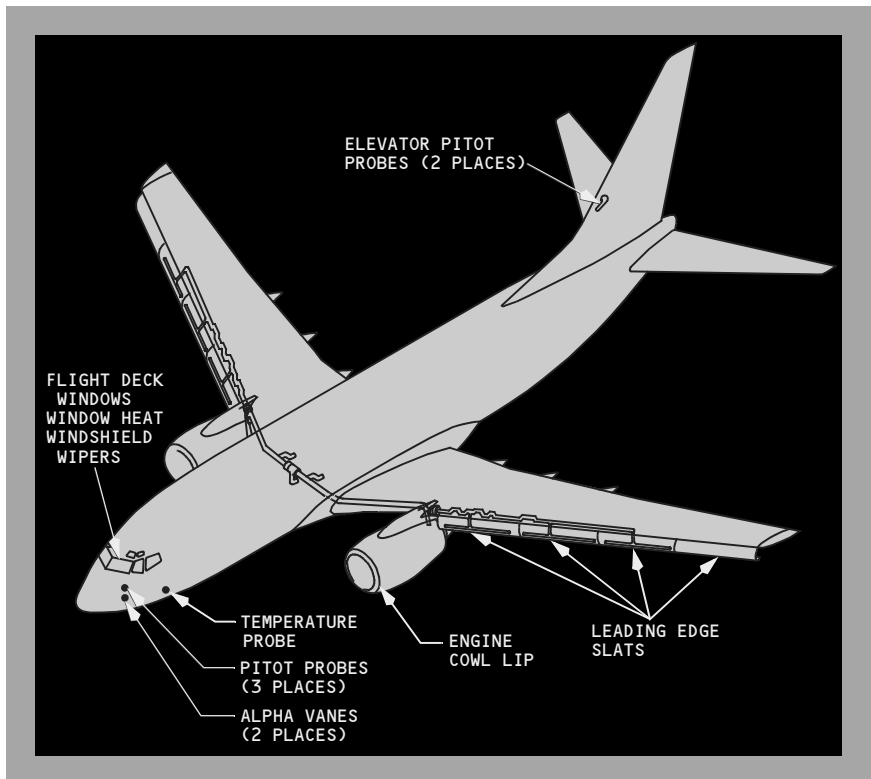

Flight Deck Window Heat

[Option – Window # 3 heated]

Flight deck windows consist of glass panes laminated to each side of a vinyl core.

[Option – Window # 3 heated]

A conductive coating on the outer glass pane of window numbers 1 and 2 permits electrical heating to prevent ice build-up and fogging. A conductive coating on the inner glass pane of window number 3 permits electrical heating to prevent fogging.

Flight Deck Window Heat Operation

[Option – Window # 3 heated]


The FWD WINDOW HEAT switches control heat to window number 1. The SIDE WINDOW HEAT switches control heat to window numbers 2 and 3.

[Option – Window # 3 heated]

Temperature controllers maintain windows numbers 1 and 2 at the correct temperature to ensure maximum strength of the windows in the event of bird impact. Power to window numbers 1 and 2 is automatically removed if an overheat condition is detected. Thermal switches, located on window number 3, open and close to maintain the correct temperature of window 3.

Flight Deck Window Heat Schematic

[Option –Window # 3 heated and green ON lights]

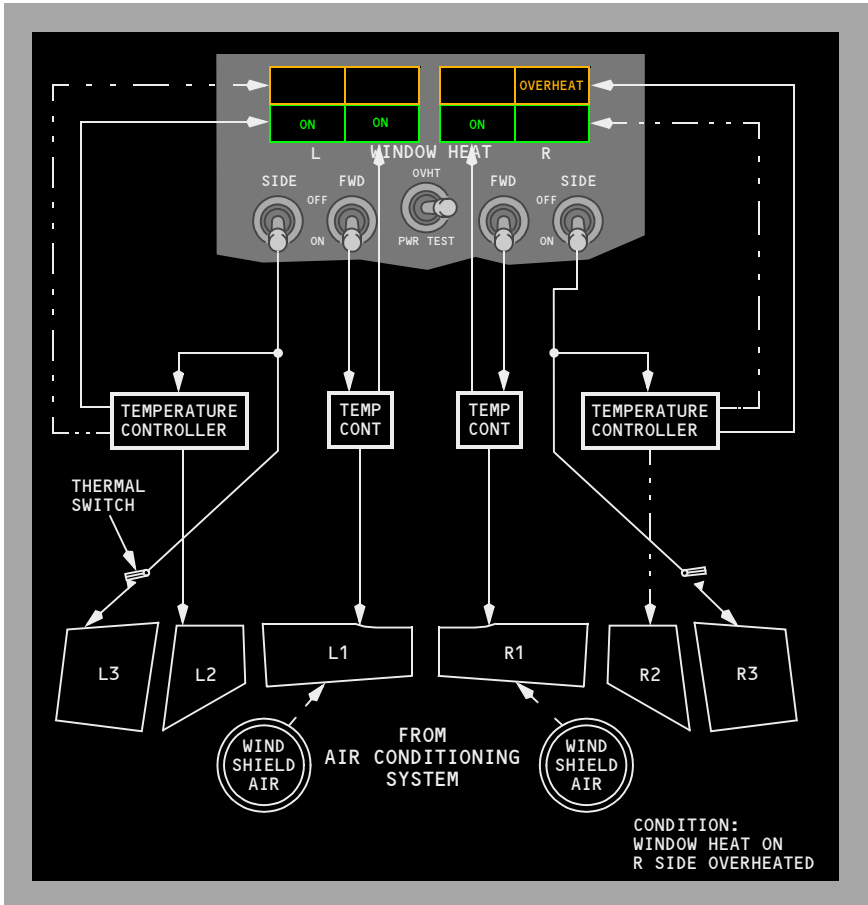

Windshield Wipers

The rain removal system for the forward windows consists of windshield wipers and a permanent rain repellent coating on the windows.

CAUTION: Windshield scratching will occur if the windshield wipers are operated on a dry windshield.

Probe and Sensor Heat

[Option - Captain's pitot probe on standby power]

Pitot probes, the total air temperature probe and the alpha vanes are electrically heated. Static ports are not heated. When operating on standby power, only the captain's pitot probe is heated, however, the CAPT PITOT light does not illuminate for a failure.

Note: The pitot probe for standby airspeed is not heated when the airplane is on standby power.

Engine Anti-Ice System

Engine bleed air thermal anti-icing prevents the formation of ice on the engine cowl lip. Engine anti-ice operation is controlled by individual ENG ANTI-ICE switches. The engine anti-ice system may be operated on the ground and in flight.

Engine Anti-Ice System Operation

Each cowl anti-ice valve is electrically controlled and pressure actuated. Positioning the ENG ANTI-ICE switches to ON:

- allows engine bleed air to flow through the cowl anti-ice valve for cowl lip anti-icing
- sets stall warning logic for icing conditions.


Note: Stall warning logic adjusts stick shaker and minimum maneuver speed bars on the airspeed indicator. FMC displayed VREF is not adjusted automatically.

Note: Stall warning logic, airspeed indications, and minimum maneuver speeds on the airspeed indicator return to normal when engine anti-ice is positioned OFF if wing anti-ice has not been used in flight.

If the cowl anti-ice valve fails to move to the position indicated by the ENG ANTI-ICE switch, the COWL VALVE OPEN light remains illuminated bright blue and an amber TAI indication illuminates on the CDS after a short delay.

The amber COWL ANTI-ICE light illuminates due to excessive pressure in the duct leading from the cowl anti-ice valve to the cowl lip.

Engine Anti-Ice System Schematic

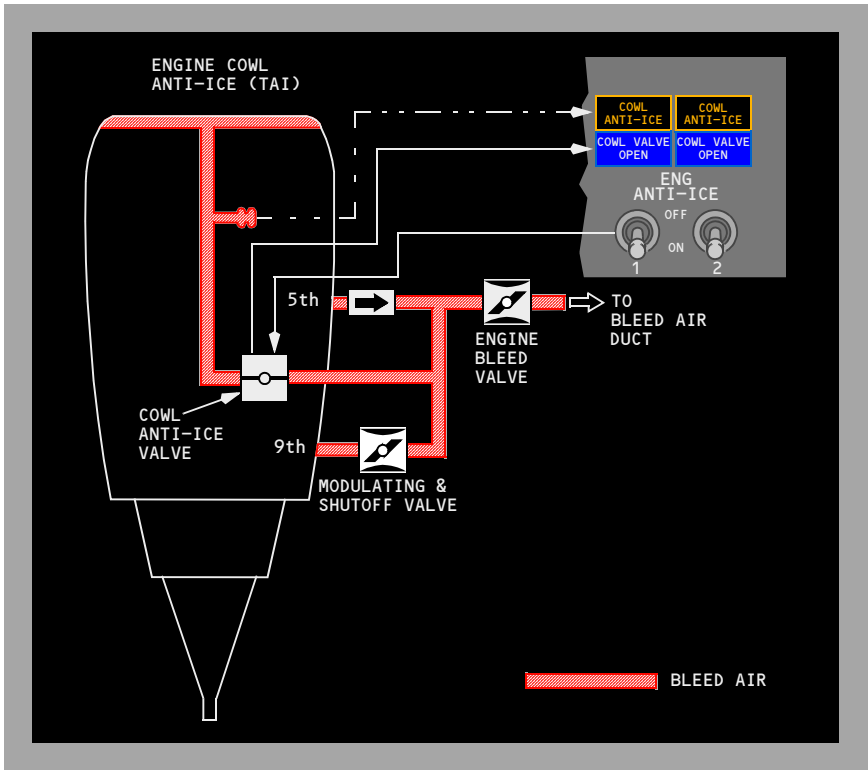

Wing Anti-Ice System

The wing anti-ice system provides protection for the three inboard leading edge slats by using bleed air. The wing anti-ice system does not include the leading edge flaps or the outboard leading edge slats.

The wing anti-ice control valves are AC motor-operated. With a valve open, bleed air flows to the three leading edge inboard slats, and is then exhausted overboard. The wing anti-ice system is effective with the slats in any position.

Wing Anti-Ice System Operation

On the ground, positioning the WING ANTI-ICE switch ON opens both control valves if thrust on both engines is below the setting for takeoff warning activation and the temperature inside both wing distribution ducts is less than the thermal switch activation temperature.

Both valves close if either engine thrust is above the takeoff warning setting or either temperature sensor senses a duct overtemperature. The valves automatically reopen if thrust on both engines is reduced and both temperature sensors are cool.

With the air/ground sensor in the ground mode and the WING ANTI-ICE switch ON, the switch remains in the ON position regardless of control valve position. The WING ANTI-ICE switch automatically trips OFF at lift-off when the air/ground sensor goes to the air mode.

Positioning the WING ANTI-ICE switch to ON in flight:


- opens both control valves
- sets stall warning logic for icing conditions.

Note: Stall warning logic adjusts stick shaker and minimum maneuver speed bars on airspeed indications. FMC displayed VREF is not adjusted automatically.

Note: Stall warning logic remains set for icing conditions for the remainder of the flight, regardless of subsequent WING ANTI-ICE switch position.

Valve position is monitored by the blue VALVE OPEN lights. Duct temperature and thrust setting logic are disabled and have no affect on control valve operation in flight.

Wing Anti-Ice System Schematic

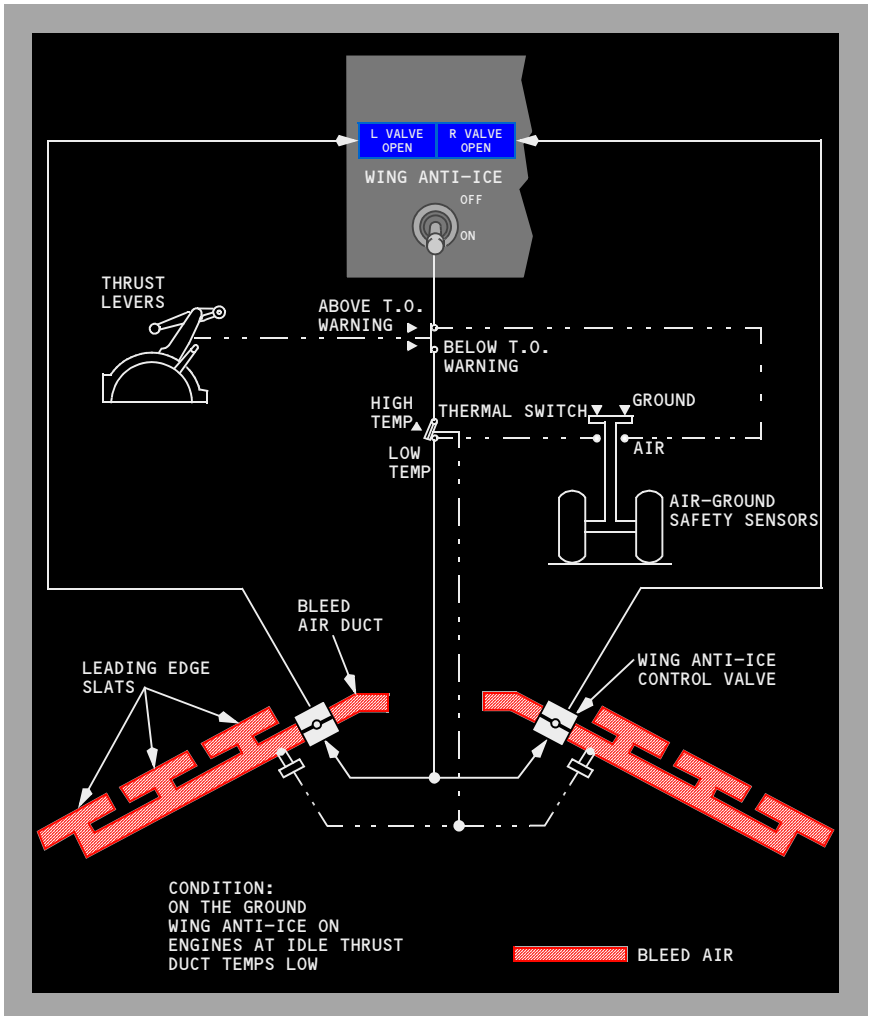

Intentionally
Blank

Automatic Flight**Chapter 4****Table of Contents****Section 0**

Controls and Indicators	4.10
Mode Control Panel (MCP)	4.10.1
Speed Controls	4.10.1
Vertical Navigation	4.10.5
Lateral Navigation	4.10.11
Autopilot / Flight Director	4.10.16
Autopilot / Autothrottle Controls	4.10.19
Autopilot / Autothrottle Indicators	4.10.20
Thrust Mode Display	4.10.21
Flight Mode Annunciations (FMAs)	4.10.23
System Description	4.20
General	4.20.1
Autopilot Flight Director System (AFDS)	4.20.1
MCP Mode Selector Switches	4.20.1
Autopilot Engagement Criteria	4.20.2
Autopilot Disengagement	4.20.2
Autopilot Operation with One IRU Inoperative	4.20.3
AFS Failures	4.20.3
Flight Director Display	4.20.3
AFDS Status Annunciation	4.20.4
AFDS Flight Mode Annunciations	4.20.4
Autopilot Control Wheel Steering	4.20.7
Autothrottle System	4.20.8
Autothrottle Engagement	4.20.8
Autothrottle Disengagement	4.20.9
Automatic Flight Operations	4.20.9
Automatic Flight Takeoff and Climb	4.20.10
Automatic Flight Takeoff Profile	4.20.12
Automatic Flight En Route	4.20.12
Automatic Flight Approach and Landing	4.20.13

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Automatic Flight Approach Profile	4.20.16
Go-Around	4.20.17
Automatic Flight Go-Around Profile	4.20.21
AFS Operation in Windshear	4.20.21
General	4.20.21
Takeoff or Go-Around	4.20.22
Approach and Landing	4.20.22
Command Speed Limiting and Reversion Modes	4.20.22
Command Speed Limiting	4.20.22
Reversion Modes.	4.20.23

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Automatic Flight Controls and Indicators

Chapter 4 Section 10

Mode Control Panel (MCP)

[Option - Collins MCP with speed and altitude intervention]

Below Vertical Speed window there is a white light sensor on all Collins MCP.




[Option - Honeywell MCP with speed and altitude intervention]




Speed Controls

[Option - With speed and altitude intervention]

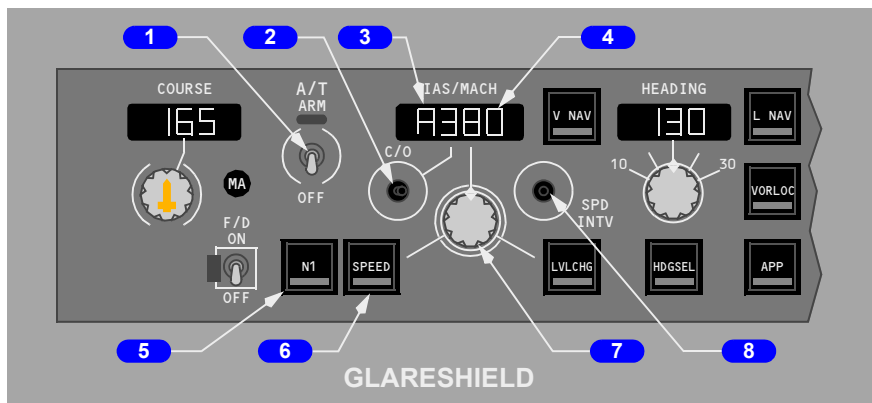

[Option - With speed and altitude intervention]

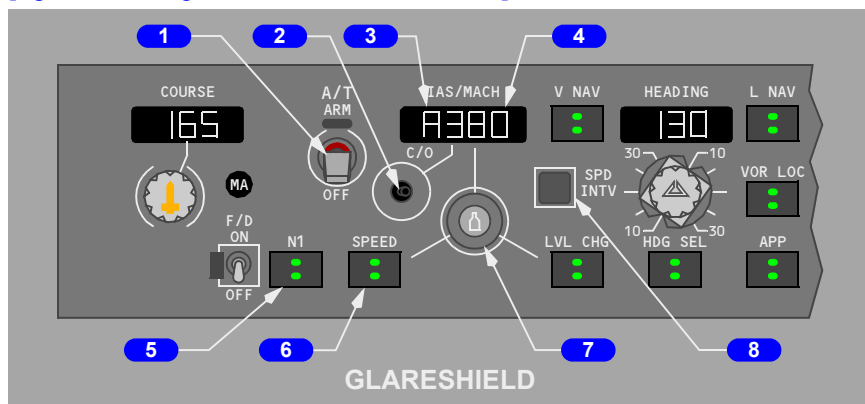

1 Autothrottle (A/T) ARM Switch

ARM – Arms A/T for engagement. Magnetically held at ARM. A/T engages automatically when following AFDS modes are engaged:

- LVL CHG
- ALT ACQ
- V/S
- VNAV
- ALT HOLD
- G/S capture
- TO/GA.

The indicator light illuminates green when A/T ARM switch is in the ARM position.

OFF – disengages A/T and prevents A/T engagement.

2 Changeover (C/O) Switch

Push –

- changes IAS/MACH display between IAS and MACH
- automatic changeover occurs at approximately FL260.

3 MCP Speed Condition Symbols

Overspeed or underspeed limiting symbol appears when commanded speed cannot be reached.

Underspeed limiting (flashing character “A”) – minimum speed

Overspeed limiting (flashing character “8”) –

- Vmo or Mmo limit
- landing gear limit
- flap limit.

4 IAS/MACH Display

Displays speed selected by IAS/MACH selector

- display is blank when:
 - VNAV mode engaged
 - A/T engaged in FMC SPD mode
 - during 2 engine AFDS go-around
- displays 100 knots when power is first applied
- display range is:
 - 100 KIAS – Vmo in 1 knot increments
 - .60M – Mmo in .01M increments.

5 N1 Switch

Push – (light not illuminated)

- engages A/T in N1 mode if compatible with AFDS modes already engaged
- illuminates N1 switch light
- annunciates N1 autothrottle mode.

Push – (light illuminated)

- deselects N1 mode and extinguishes switch light
- engages autothrottles in ARM mode.

N1 Mode

- A/T maintains thrust at N1 limit selected from FMC CDU. N1 mode engaged manually by pushing N1 switch if N1 mode is compatible with existing AFDS modes. N1 mode engages automatically when:
 - engaging LVL CHG in climb (except during inhibit period for 2 1/2 minutes after lift-off)
 - engaging VNAV in climb.

6 SPEED Switch

Push – (light not illuminated)

- engages A/T in SPEED mode if compatible with engaged AFDS modes
- illuminates SPEED switch light
- annunciates MCP SPD autothrottle mode
- maintains speed in MCP IAS/MACH display.

Push – (light illuminated)

- deselected speed mode and extinguishes switch light
- engages A/T in ARM mode.

Speed Mode

Autothrottle holds speed in IAS/MACH display or a performance or limit speed. Speed mode engaged manually by pushing SPEED switch if speed mode is compatible with existing AFDS modes. Speed mode engages automatically when:

- ALT ACQ engages
- ALT HOLD engages
- V/S engages
- G/S capture occurs.

A/T does not set thrust above displayed N1 limit, however, A/T can exceed N1 value manually set by N1 Manual Set Knob.

7 IAS/MACH Selector

Rotate –

- sets speed in IAS/MACH display and positions airspeed cursor
- selected speed is reference speed for AFDS and A/T
- not operative when IAS/MACH display is blank.

8 Speed Intervention (SPD INTV) Switch


[Option - With speed and altitude intervention]

Push (when VNAV engaged) –


- IAS/MACH display alternately shows selected IAS/Mach and blanks
- when IAS/MACH display is unblanked, FMC speed intervention is active, FMC target speed is displayed, and IAS/MACH Selector may be used to set desired speed
- when IAS/MACH display is blank, FMC computed target speed is active and displayed on the airspeed indicator.

Vertical Navigation

[Option - With speed and altitude intervention]

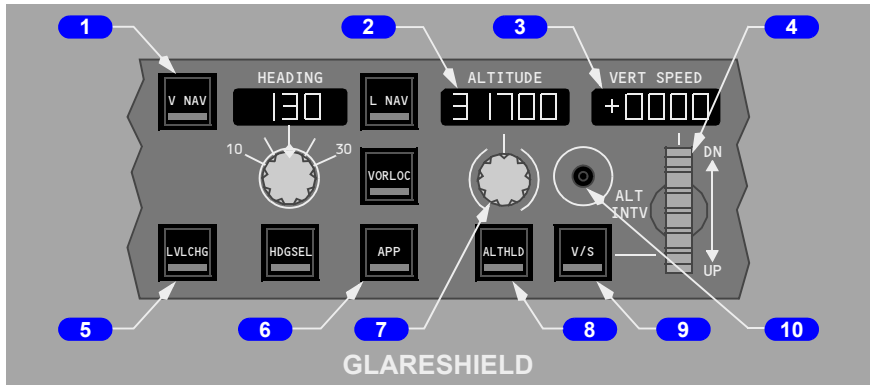

[Option - With speed and altitude intervention]

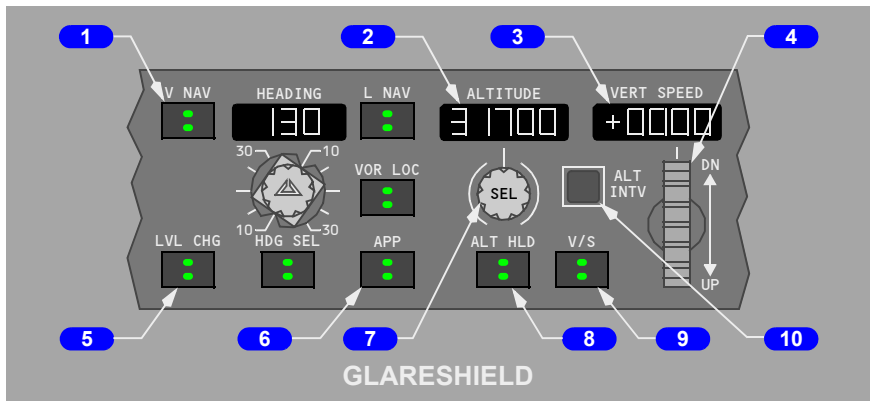

1 VNAV Switch

Push –

- VNAV switch light illuminates

[Option - Without VNAV ALT enabled]

- pitch mode annunciates VNAV SPD, VNAV PTH
- A/T mode annunciates FMC SPD, N1, RETARD, or ARM
- IAS/MACH display blanks and airspeed cursors positioned to FMC commanded airspeed.

VNAV Mode

The FMC commands AFDS pitch and autothrottle to fly vertical profile selected on FMC CDUs. Profile includes climb, cruise, descent, speeds, and can also include waypoint altitude constraints.

[Option - Without VNAV ALT enabled]

Note: If the airplane is between the FMC target altitude (depicted on the RTE LEGS page for the active waypoint) and the manually entered MCP target altitude, VNAV will not engage. To enable VNAV, adjust the FMC or MCP target altitude as appropriate.

Climb –

- autothrottle holds FMC thrust limit
- AFDS holds FMC target speed
- automatic level-off occurs at MCP altitude or VNAV altitude, whichever is reached first
 - VNAV constrained altitude annunciates VNAV PTH.

Cruise –

- autothrottle holds FMC target speed
- AFDS holds FMC altitude
- selecting a lower MCP altitude arms FMC to automatically begin descent upon arrival at FMC top of descent point.

Descent –

- VNAV SPD descent
 - autothrottle holds idle
 - AFDS holds FMC target speed.
- VNAV PTH descent
 - autothrottle holds idle but can command FMC SPD mode if ground speed becomes too low to maintain FMC vertical path
 - AFDS tracks FMC descent path.
- automatic level-off occurs at MCP altitude or VNAV altitude, whichever is reached first
 - VNAV constrained altitude annunciates VNAV PTH.

Inhibited below 400 ft RA or if performance initialization not complete.

VNAV mode is terminated by any one of the following:

- selecting another pitch mode
- glideslope capture
- reaching end of LNAV route

[Option - FMC update 10.3 and later]

- transition of glideslope intercept waypoint if G/S is armed

[Option - FMC update 10.3 and later]

- crosstrack deviation exceeds twice the RNP value during PTH descent for an active leg with a database vertical angle and LNAV not engaged

In the event of glideslope intercept waypoint transition, VNAV can be re-engaged.

[Option - Without VNAV ALT enabled]

When the pitch mode changes from VNAV SPD to ALT ACQ during an intermediate level off, the autothrottle will command a target IAS rather than Mach number. This is valid even at altitudes above the IAS/Mach changeover. If the climb is resumed in LVL CHG or V/S, the airspeed window opens at the target IAS which may result in an overspeed condition.

2 ALTITUDE Display

Displays selected altitude

- displayed altitude is reference for altitude alerting and automatic level-offs

[Option - With 100 foot increments]

- altitude range is 0 to 50,000 feet in 100 foot increments
- displays previously selected altitude when power first applied.

3 Vertical Speed (VERT SPEED) Display

Displays:

- blank when V/S mode not active
- present V/S when V/S mode is engaged with V/S switch
- selected V/S when V/S set with thumbwheel
- range is -7900 to +6000 fpm.

Display increments are:

- 50 fpm if V/S is less than 1000 fpm
- 100 fpm if V/S is 1000 fpm or greater.

4 Vertical Speed Thumbwheel

Rotate –

- DN –
 - sets vertical speed in VERT SPEED display
 - increases rate of descent or reduces rate of ascent.
- UP –
 - sets vertical speed in VERT SPEED display
 - increases rate of ascent or reduces rate of descent.

5 Level Change (LVL CHG) Switch

Push –

- LVL CHG switch light illuminates
- pitch mode annunciates MCP SPD for climb or descent
- autothrottle mode annunciates N1 for climb and RETARD followed by ARM for descent
- IAS/MACH display and airspeed cursors display target speed.

LVL CHG Mode

The LVL CHG mode coordinates pitch and thrust commands to make automatic climbs and descents to preselected altitudes at selected airspeeds.

A LVL CHG climb or descent is initiated by:

- selecting a new altitude
- pushing LVL CHG switch
- setting desired airspeed.

Climb –

- autothrottle holds limit thrust
- AFDS holds selected airspeed.

Descent –

- autothrottle holds idle thrust
- AFDS holds selected airspeed.

Airspeed –

- if a speed mode is active when LVL CHG is engaged, this speed is retained as target speed
- if a speed mode is not active when LVL CHG is engaged, existing speed becomes target speed
- speed can be changed with MCP IAS/MACH Selector.

The LVL CHG mode is inhibited after glideslope capture.

6 Approach (APP) Switch

(See Lateral Navigation)

7 Altitude Selector (SEL)

Rotate –

- sets altitude in ALTITUDE display in 100 foot increments
- arms V/S mode if rotated while in ALT HOLD at selected altitude.

8 Altitude Hold (ALT HLD) Switch

Push –

- engages ALT HOLD command mode
- commands pitch to hold uncorrected barometric altitude at which switch was pressed
- annunciates ALT HOLD pitch mode and illuminates ALT HLD switch light.

Altitude Hold Command Mode

ALT HOLD mode commands pitch to hold either:

- MCP selected altitude
 - pitch mode annunciates ALT HOLD
 - ALT HLD switch light extinguishes.
- uncorrected barometric altitude at which ALT HLD switch was pressed if not at MCP selected altitude
 - pitch mode annunciates ALT HOLD
 - ALT HLD switch light illuminates.

When in ALT HOLD at selected MCP altitude:

- selecting a new MCP altitude illuminates the ALT HLD switch light and arms V/S mode
- LVL CHG, V/S, and VNAV climb and descent functions are inhibited until a new MCP altitude is selected.

ALT HOLD mode is inhibited after G/S capture.

The selected MCP altitude is referenced to:

- Captain's barometric altimeter setting for A A/P and F/D
- First Officer's barometric altimeter setting for B A/P and F/D.

Note: After ALT HOLD engages, changes in altimeter barometric settings do not change the selected altitude reference.

9 Vertical Speed (V/S) Switch

Push –

- arms or engages V/S command mode
- commands pitch to hold vertical speed
- engages A/T in speed mode to hold selected airspeed
- annunciates V/S pitch mode and illuminates V/S switch light.

Vertical Speed Command Mode

The V/S mode commands pitch to hold selected vertical speed and engages A/T in SPEED mode to hold selected airspeed. V/S mode has both an armed and an engaged state.

Engaged –

- annunciates V/S pitch mode
- vertical speed display changes from blank to present vertical speed
- desired vertical speeds can be selected with vertical speed thumbwheel.

V/S becomes armed if:

- pitch mode is ALT HLD at selected MCP altitude and
- new MCP altitude is selected (more than 100 feet from current altitude).

With V/S armed, V/S mode is engaged by moving vertical speed thumbwheel.

V/S mode automatically engages if ALT ACQ mode is engaged and a new MCP altitude is selected which is more than 100 feet different from previously selected altitude.

- vertical speeds can be selected which command flight toward or away from selected altitude.

Inhibited if:

- ALT HOLD mode is active at selected MCP altitude
- glideslope captured in APP mode.

10 Altitude Intervention (ALT INTV) Switch

[Option - With speed and altitude intervention]

Allows manual deletion of next FMC altitude constraint via altitude SEL and ALT INTV switch.

Push – (during VNAV climb)

- lowest FMC altitude constraint below selected MCP altitude is deleted
- if airplane is currently at an FMC altitude constraint, deletion allows airplane to resume climb. MCP altitude must be set above current altitude
- for each press of switch, one deletion occurs
- if MCP altitude is set above current FMC altitude, FMC cruise altitude resets to MCP altitude. FMC cruise altitude cannot be decreased using ALT INTV switch.

Push – (during VNAV cruise)

- if MCP altitude is set above current FMC cruise altitude, FMC resets cruise altitude to MCP altitude and initiates a cruise climb
- if MCP altitude is set below current FMC cruise altitude, an early descent is initiated. Lower FMC cruise altitude cannot be entered using ALT INTV switch.

Push – (during VNAV descent)


- the highest FMC altitude constraint above MCP altitude is deleted
- if airplane is currently at an FMC altitude constraint, deletion allows airplane to continue descent. MCP altitude must be set below current altitude

[Option - FMC U10.6 and above]


- if all FMC altitude constraints are deleted during VNAV path descent, an automatic transition to a VNAV speed descent is made.

Lateral Navigation

[Option - With speed and altitude intervention]

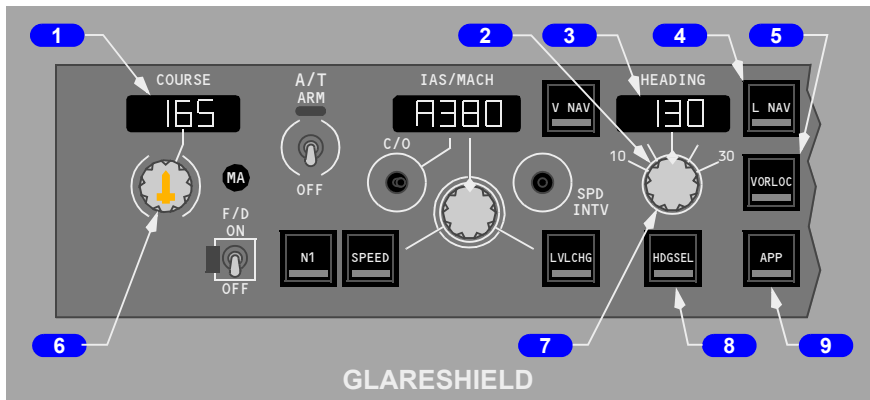

[Option - With speed and altitude intervention]

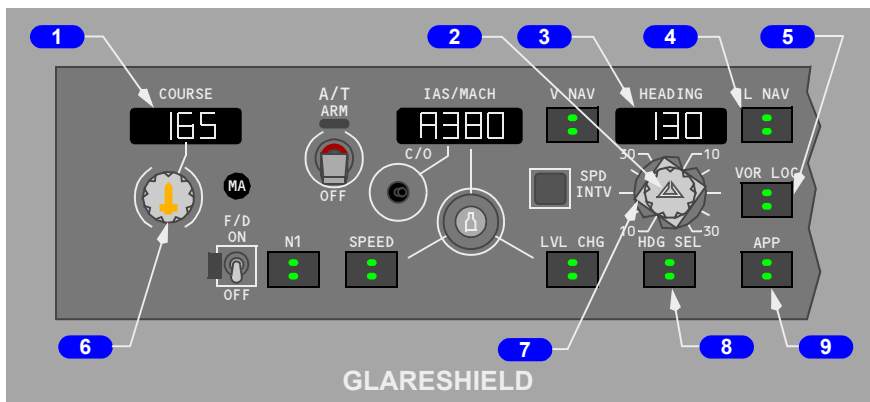

1 COURSE Display

Displays course set by course selector.

Note: Different courses and frequencies on two VHF NAV receivers can cause disagreement between Captain and FO F/D displays and affect A/P operation.

2 Heading Selector

Rotate –

- sets heading in HEADING display
- positions selected heading bugs on the DUs.

3 HEADING Display

Displays selected heading.

4 LNAV Switch

Push –

- commands AFDS roll to intercept and track the active FMC route
- annunciates LNAV as roll mode and illuminates LNAV switch light.

LNAV Mode

In LNAV mode, the FMC controls AFDS roll to intercept and track active FMC route. Active route is entered and modified through FMC CDUs and can include SIDs, STARs, and instrument approaches.

LNAV arming criteria on the ground:

- origin runway in flight plan
- active route entered in FMC
- track of first leg within 5 degrees of runway heading
- LNAV selected prior to TO/GA.
 - LNAV guidance becomes active at 50 feet AGL

[Option - Bank angle limit is 30 degrees above 200 AGL]

[Option - Honeywell FCC -708 and on]

- bank angle is limited to 8 degrees below 200 feet and 30 degrees above 200 feet AGL.

LNAV engagement criteria in flight:

- active route entered in FMC
- within 3 NM of active route, LNAV engagement occurs with any airplane heading
- outside of 3 NM, airplane must:
 - be on intercept course of 90 degrees or less

- intercept route segment before active waypoint.

LNAV automatically disconnects for following reasons:

- reaching end of active route
- reaching a route discontinuity
- intercepting a selected approach course in VOR LOC or APP modes (VOR/LOC armed)
- selecting HDG SEL
- loss of capture criteria.

5 VOR Localizer (LOC) Switch

Push –

- commands AFDS roll to capture and track selected VOR or LOC course
- annunciates VOR/LOC armed or engaged as roll mode and illuminates VOR LOC switch light.

VOR LOC Mode

Pushing the VOR LOC switch selects VOR mode if a VOR frequency is tuned or selects LOC mode if a localizer frequency is tuned.

The VOR mode provides roll commands to track selected VOR course.

The LOC mode provides roll commands to track selected localizer course along inbound front course bearing.

The selected course can be intercepted while engaged in:

- LNAV
- HDG SEL
- CWS R if an autopilot is engaged in CMD.

The capture point is variable and depends on intercept angle and closure rate.

Localizer capture occurs not later than 1/2 dot deviation. Course capture is indicated when VOR/LOC annunciation changes from armed to engaged.

While engaged in VOR or LOC modes:

- A autopilot and Captain's F/D use information from Captain's course selector and No. 1 VHF NAV receiver
- B autopilot and First Officer's F/D use information from First Officer's course selector and No. 2 VHF NAV receiver
- different courses and/or frequencies for two VHF NAV receivers can cause disagreement between the Captain's and First Officer's F/D displays and affect A/P operation.

Note: When a localizer frequency is selected, VHF NAV radios automatically switch from tail antenna to nose antenna when VOR/LOC is annunciated (armed or engaged). If antenna switching does not occur, LOC mode is inhibited.

Note: Localizer backcourse tracking is not available.

6 Course Selector

Sets course in COURSE display for related VHF NAV receiver, AFDS and DU. Two course selectors and COURSE displays are located on the MCP.

Rotate Captain's course selector – provides selected course information to:

- A FCC
- No. 1 VHF NAV receiver
- Captain's course pointer and course deviation bar.

Note: In VOR LOC or APP mode, the A A/P and Captain's F/D use selected course and navigation data from the No. 1 VHF NAV receiver.

Rotate First Officer's course selector – provides selected course information to:

- B FCC
- No. 2 VHF NAV receiver
- First Officer's course pointer and course deviation bar.

Note: In VOR LOC or APP mode, B A/P and First Officer's F/D use selected course and navigation data from No. 2 VHF NAV receiver.

7 Bank Angle Selector

Rotate –

- sets maximum bank angle for AFDS operation in HDG SEL or VOR modes
- commanded bank angle can be selected at 10, 15, 20, 25, or 30 degrees.

8 Heading Select (HDG SEL) Switch

Push –

- engages HDG SEL command mode
- commands roll to follow selected heading
- annunciates HDG SEL as FMA roll mode and illuminates HDG SEL switch light.

Heading Select Command Mode

The HDG SEL mode commands roll to turn to and maintain heading shown in MCP HEADING display:

- initial selection commands turn in shortest direction toward selected heading bug
- after mode engagement, roll commands are given to turn in same direction as rotation of heading selector
- bank angle limit is established by bank angle selector
- HDG SEL mode automatically disengages upon capture of selected radio course in VOR LOC and APP modes (VOR/LOC armed).

9 Approach (APP) Switch

Push –

- illuminates APP switch light
- arms the AFDS for localizer and glideslope capture
- roll mode annunciates VOR/LOC armed
- pitch mode annunciates G/S armed
- enables engagement of both autopilots.

APP Mode

The approach mode arms AFDS to capture and track localizer and glideslope and can be engaged for dual or single autopilot operation.

One VHF NAV receiver must be tuned to an ILS frequency before approach mode can be engaged. With one VHF NAV receiver tuned, onside AFDS is enabled for guidance and operation.

For dual autopilot operation, both VHF NAV receivers must be tuned to the ILS frequency and both autopilots must be selected in CMD prior to 800 feet RA.

APP mode operation:

[Option - G/S capture inhibited before LOC capture]

- localizer must be captured prior to glideslope
- localizer can be intercepted in HDG SEL, LNAV, or CWS R
- glideslope capture occurs at 2/5 dot below glideslope
- APP switch light extinguishes after localizer and glideslope capture.

After localizer and glideslope capture, APP mode can be disengaged by:



- pushing a TO/GA switch
- disengaging autopilot(s) and turning off both F/D switches
- retuning the VHF NAV receiver.

While engaged in the APP mode:

- the A autopilot and Captain's F/D use information from Captain's Course Selector and No. 1 VHF NAV receiver
- the B autopilot and First Officer's F/D use information from First Officer's Course Selector and No. 2 VHF NAV receiver
- different courses and/or frequencies for the two VHF NAV receivers can cause disagreement between Captain's and First Officer's F/D displays and affect A/P operation.

Autopilot / Flight Director

Pushing a CMD or CWS switch engages related A/P in CMD or CWS and illuminates switch lights. A/P can operate in CMD, CWS, or a combination of CMD and CWS.

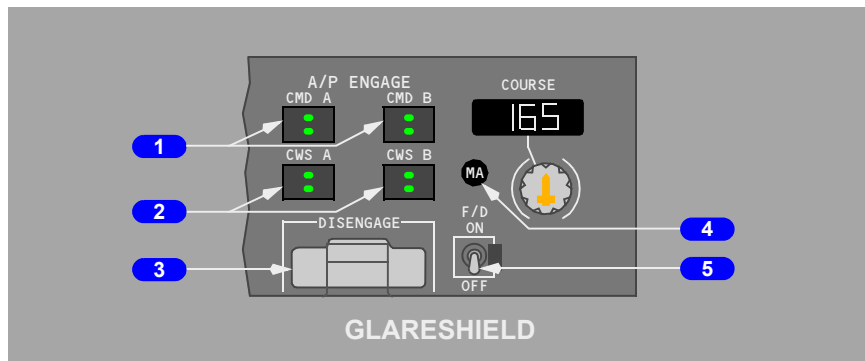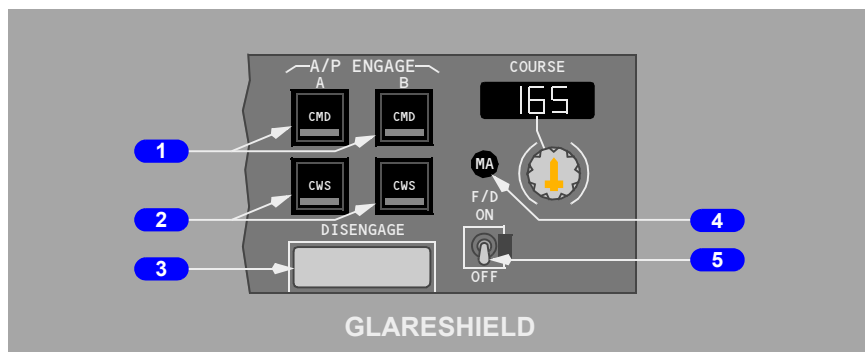

1 Command Engage (CMD ENGAGE) Switch (A or B):

Push –

- engages A/P
- enables all command modes
- displays CMD in A/P status display
- pushing an engage switch for second A/P, while not in approach mode, engages second A/P and disengages first A/P
- enables CWS operation
- CWS engages if:
 - pitch or roll mode not selected
 - pitch or roll mode deselected
 - pitch or roll mode manually overridden with control column force.
- CWS engaged displays:
 - CWS P and/or CWS R in A/P status display
 - blank in pitch and/or roll mode FMA
- when approaching a selected altitude in CWS P, the pitch mode engages in ALT ACQ and ALT HOLD when reaching selected altitude
- when approaching a selected radio course in CWS R with VOR/LOC or approach mode armed, VOR/LOC engages when course is intercepted
- if pitch is manually overridden while in ALT HOLD and control force is released within 250 feet of selected altitude, A/P pitch mode engages in ALT ACQ and returns to selected altitude in ALT HOLD mode.

Note: During F/D only operation while pitch or roll commands are more than 1/2 scale from center, pushing a CMD A or B switch engages the A/P in CWS for pitch and/or roll and the related F/D bar(s) retract.

2 Control Wheel Steering Engage (CWS ENGAGE) Switch (A or B):

Push –

- engages A/P
- engages pitch and roll modes in CWS. Other pitch and roll modes not enabled
- displays CWS P and CWS R in A/P status display
- CMD not displayed in A/P status display
- F/Ds, if ON, display guidance commands and FD annunciates in A/P status display. A/P does not follow commands while in CWS
- A/P pitch and roll controlled by pilot with control wheel pressure
- when control pressure released, A/P holds existing attitude. If aileron pressure released with 6 degrees or less bank, the A/P rolls wings level and holds existing heading. Heading hold feature inhibited:
 - below 1500 feet RA with gear down

- after LOC capture in APP mode
- after VOR capture with TAS 250 knots or less.

3 Autopilot Disengage (DISENGAGE) Bar

Pull down –

- exposes yellow background
- disengages both A/Ps
- prevents A/P engagement.

Lift up –

- conceals yellow background
- enables A/P engagement.

4 Master (MA) Flight Director Indicators (white letters)

If a F/D switch is ON, the light indicates which FCC is controlling the F/D modes.

- illuminated – related FCC is controlling F/D modes.
- extinguished – F/D modes are controlled from opposite FCC
- both lights illuminated – each FCC is controlling modes for related F/D.

5 Flight Director (F/D) Switch

[Option - Split Axis]

Left F/D switch activates command bars on the Captain's attitude indicator. Right F/D switch activates command bars on the First Officer's attitude indicator.

ON –

- in flight with A/P ON and F/Ds OFF, turning a F/D switch ON engages F/D in currently selected A/P modes
- displays FD in A/P status display if A/P is OFF or engaged in CWS
- enables command bar display on related pilot's attitude indicator

[Option - Split Axis]

- command bars are displayed if command pitch and/or roll modes are engaged


[Option - Heading Select Takeoff Roll Mode]

- on ground, arms pitch and roll modes for engagement in TO/GA and HDG SEL when TO/GA switch is pushed.

[Option - Split Axis]

OFF – command bars retract from related pilot's attitude indicator.

Autopilot / Autothrottle Controls

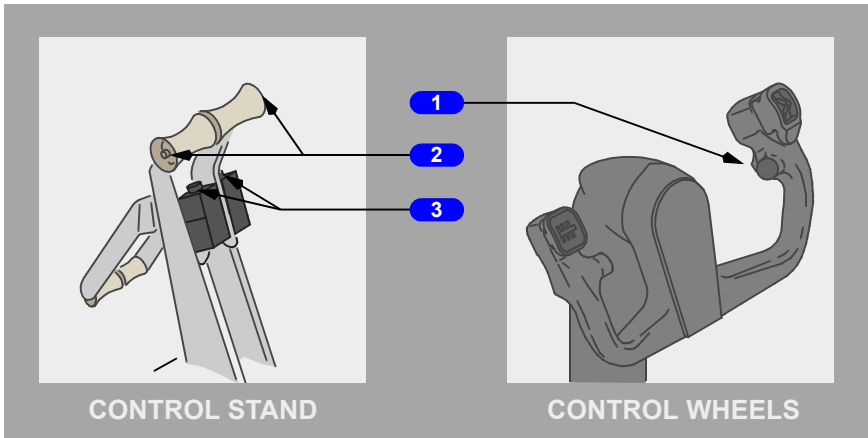

1 Autopilot Disengage Switch

Push –

- disengages both autopilots
- A/P disengage lights flash
- A/P disengage warning tone sounds for a minimum of two seconds
- second push extinguishes disengage lights and silences disengage warning tone
- if autopilot automatically disengages, extinguishes A/P Disengage lights and silences A/P warning tone.

2 Autothrottle Disengage Switches


Push –

- disengages autothrottle
- A/T disengage lights flash
- A/T ARM switch trips OFF
- second press extinguishes A/T disengage lights
- extinguishes A/T disengage lights after automatic A/T disengagement.

3 Takeoff/Go-Around (TO/GA) Switches

Push – engages AFDS and A/T in takeoff or go-around mode if previously armed.

Autopilot / Autothrottle Indicators

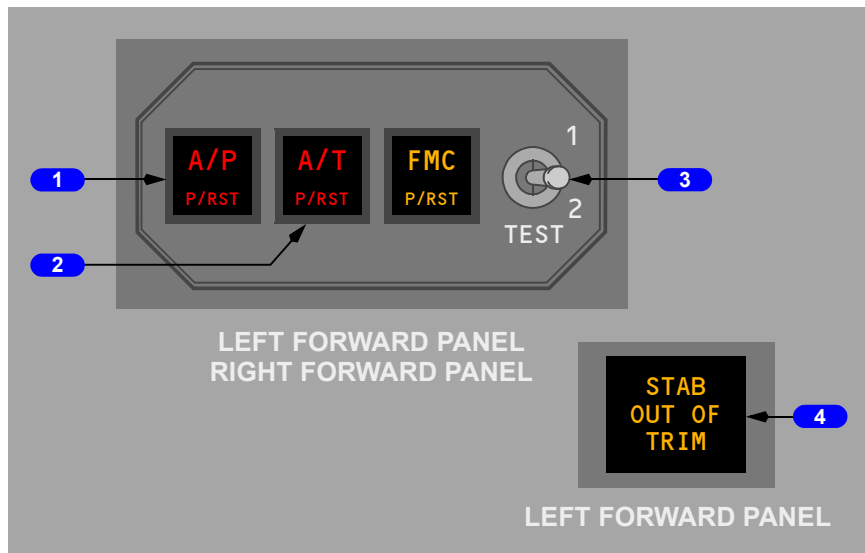

1 Autopilot (A/P) Disengage Light

Illuminated (red) –

- flashes and tone sounds when autopilot has disengaged
- reset by pushing either disengage light or either A/P disengage switch
- steady for any of following conditions:
 - stabilizer out of trim below 800 feet RA on dual channel approach
 - ALT ACQ mode inhibited during A/P go-around if stabilizer not trimmed for single A/P operation
 - disengage light test switch held in position 2
 - automatic ground system tests fail.

Illuminated (amber) –

- steady – disengage light test switch held in position 1.

[Option - CWS warning activated]

- flashing – A/P automatically reverts to CWS pitch or roll while in CMD. Resets by pushing either light or selecting another mode.

2 Autothrottle (A/T) Disengage Light

Illuminated (red) –

- flashing – autothrottle has disengaged
- steady – disengage light test switch held in position 2.

Illuminated (amber) –

- steady – disengage light test switch held in position 1

[Option - Airspeed deviation warning activated]

- flashing – indicates A/T airspeed error under following conditions:
 - inflight
 - flaps not up
 - airspeed differs from commanded value by +10 or -5 knots and is not approaching commanded value.

3 Disengage Light Test (TEST) Switch

TEST 1 – illuminates autopilot/autothrottle disengage and FMC alert lights steady amber.

TEST 2 – illuminates autopilot/autothrottle disengage lights steady red and FMC alert light steady amber.

Spring-loaded to center position.


4 Stabilizer Out Of Trim (STAB OUT OF TRIM) Light

Operates only with autopilot engaged. Remains extinguished with autopilot not engaged.


Illuminated (amber) – autopilot not trimming stabilizer properly.

Thrust Mode Display

[Option - Over/Under display]

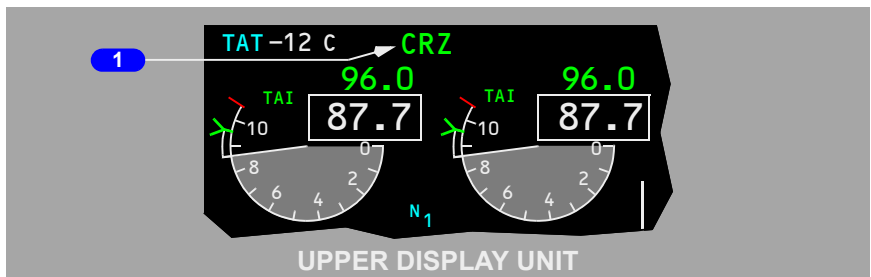

[Option - Over/Under display]

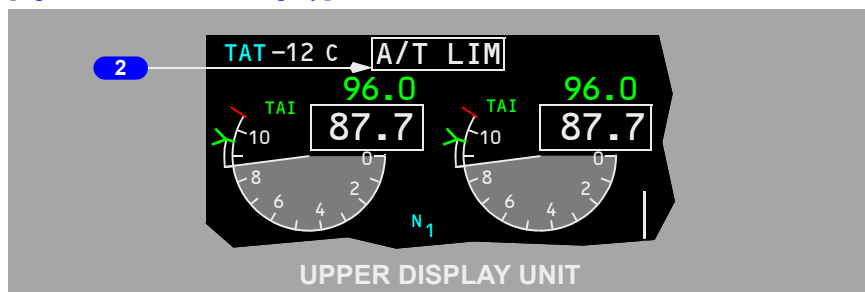

1 Thrust Mode Display

N1 limit reference is the active N1 limit for autothrottle and manual thrust control.

N1 limit reference is also displayed by N1 reference bugs with N1 SET control in AUTO position.

N1 limit reference is normally calculated by the FMC.

[Option]

Thrust mode display annunciations are:

- TO – takeoff
- TO 1 – derated takeoff one
- TO 2 – derated takeoff two
- D-TO – assumed temperature reduced thrust takeoff
- D-TO 1 – derate one and assumed temperature reduced thrust takeoff
- D-TO 2 – derate two and assumed temperature reduced thrust takeoff
- CLB – climb
- CLB 1 – derated climb one
- CLB 2 – derated climb two
- CRZ – cruise
- G/A – go-around
- CON – continuous
- — – FMC not computing thrust limit.

Thrust mode display annunciations are:

- TO – takeoff
- R-TO – reduced takeoff
- R-CLB – reduced climb
- CLB – climb
- CRZ – cruise
- G/A – go-around

- CON – continuous
- — – FMC not computing thrust limit.


Note: R-TO does not indicate the type of reduced takeoff. The N1 limit may be reduced due to the entry of an assumed temperature, a takeoff thrust derate or a combination of both assumed temperature and takeoff thrust derate.

2 Autothrottle Limit (A/T LIM) Indication

Illuminated (white) – the FMC is not providing the A/T system with N1 limit values. The A/T is using a degraded N1 thrust limit from the related EEC.

Flight Mode Annunciations (FMAs)

[Option – PFD/ND]

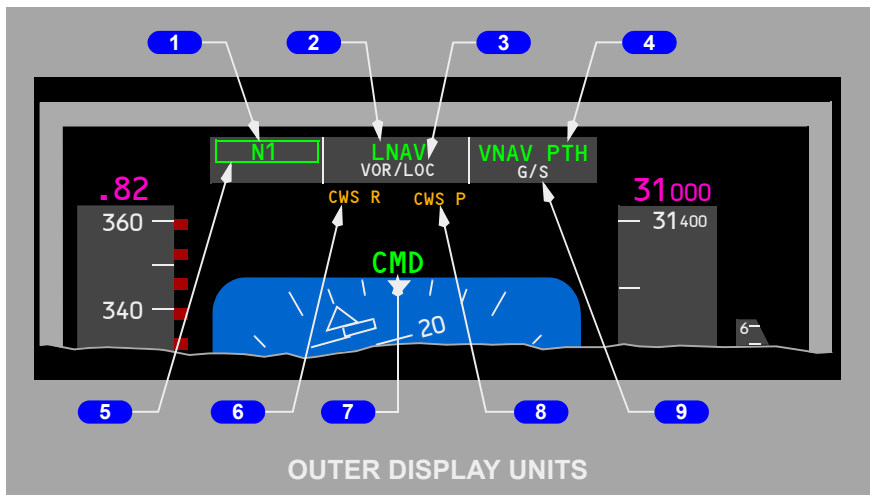

1 Autothrottle (A/T) Engaged Mode

- N1 (green)
- GA (green)
- Retard (green)
- FMC SPD (green)
- MCP SPD (green)
- THR HLD (green)
- ARM (white)

2 Roll Engaged Mode

- HDG SEL (green)
- VOR/LOC (green)
- LNAV (green)

3 Roll Armed Mode

- VOR/LOC (white)
- LNAV (white)

4 Pitch Engaged Mode

- TO/GA (green)
- V/S (green)
- MCP SPD (green)
- ALT/ACQ (green)
- ALT HOLD (green)
- G/S (green)
- FLARE (green)
- VNAV SPD (green)
- VNAV PTH (green)

5 Mode Highlight Change Symbol

A mode change highlight symbol (rectangle) is drawn around each pitch, roll, CWS, A/P status, and thrust engaged mode annunciation for a period of 10 seconds after each engagement.

6 CWS Roll Engaged

- CWS R (amber)

7 Autopilot Status

- CMD (green)
- FD (green)

8 CWS Pitch Engaged

- CWS P (amber)

9 Pitch Armed Mode

- G/S (white)
- V/S (white)
- VNAV (white)
- FLARE (white)
- G/S V/S (white)

**Automatic Flight
System Description****Chapter 4
Section 20**

General

The automatic flight system (AFS) consists of the autopilot flight director system (AFDS) and the autothrottle (A/T). The flight management computer (FMC) provides N1 limits and target N1 for the A/T and command airspeeds for the A/T and AFDS.

The AFDS and A/T are controlled using the AFDS mode control panel (MCP) and the FMC. Normally, the AFDS and A/T are controlled automatically by the FMC to fly an optimized lateral and vertical flight path through climb, cruise and descent.

AFS mode status is displayed on the flight mode annunciation on each pilot's primary display.

Autopilot Flight Director System (AFDS)

The AFDS is a dual system consisting of two individual flight control computers (FCCs) and a single mode control panel.

The two FCCs are identified as A and B. For A/P operation, they send control commands to their respective pitch and roll hydraulic servos, which operate the flight controls through two separate hydraulic systems.

For F/D operation, each FCC positions the F/D command bars on the respective attitude indicator.

MCP Mode Selector Switches

The mode selector switches are pushed to select desired command modes for the AFDS and A/T. The switch illuminates to indicate mode selection and that the mode can be deselected by pushing the switch again. While a mode is active, deselection can be automatically inhibited and is indicated by the switch being extinguished.

When engagement of a mode would conflict with current AFS operation, pushing the mode selector switch has no effect. All AFDS modes can be disengaged either by selecting another command mode or by disengaging the A/P and turning the F/Ds off.

Autopilot Engagement Criteria

Each A/P can be engaged by pushing a separate CMD or CWS engage switch. A/P engagement in CMD or CWS is inhibited unless both of the following pilot-controlled conditions are met:

- no force is being applied to the control wheel
- the STAB TRIM AUTOPILOT cutout switch is at NORMAL.

Only one A/P can be engaged at a given time unless the approach (APP) mode is engaged. Approach mode allows both A/Ps to be engaged at the same time. Dual A/P operation provides control through landing flare and touchdown or an automatic go-around.

In single A/P operation, full automatic flare and touchdown capability and A/P go-around capability are not available.

Autopilot Disengagement

The A/P automatically disengages when any of the following occurs:

- pushing either A/P disengage switch
- pushing either Takeoff/Go-around (TO/GA) switch with a single A/P engaged in CWS or CMD;
 - below 2000 feet RA or,
 - with flaps not up or,
 - G/S engaged

[Option - A/P auto-disengages for TO/GA above 2000 feet RA]

[Option - Honeywell -708 FCC and on]

- pushing either Takeoff/Go-around (TO/GA) switch with a single A/P engaged in CWS or CMD above 2000 feet RA with flaps not up or G/S engaged.
- pushing either TO/GA switch after touchdown with both A/Ps engaged in CMD
- pushing an illuminated A/P ENGAGE switch
- pushing the A/P DISENGAGE bar down
- activating either pilot's control wheel trim switch
- moving the STAB TRIM AUTOPILOT cutout switch to CUTOUT

[Option - Polar Navigation]

- changing the position of the HDG REF switch when the autopilot is in HDG SEL or roll CWS modes
- either left or right IRS system failure or FAULT light illuminated

- loss of electrical power or a sensor input which prevents proper operation of the engaged A/P and mode
- loss of respective hydraulic system pressure.

Note: Loss of the system A engine-driven hydraulic pump, and a heavy demand on system A, may cause A/P A to disengage.

Autopilot Operation with One IRU Inoperative

When the IRU instrument transfer switch is selected to the BOTH ON 1 or BOTH ON 2 position, either autopilot can be engaged. It is recommended that the autopilot associated with the unfaulted IRS be engaged. When the autopilot is engaged, the yaw damper will disengage and cannot be reconnected until the autopilot is disengaged.

AFS Failures

Power interruption or loss may cause disengagement of the AFDS and/or A/T. Re-engagement is possible after power is restored.

Dual channel A/P operation is possible only when two generators are powering the busses.

Two independent radio altimeters provide radio altitude to the respective FCCs. With a radio altimeter inoperative, the autopilot will disconnect two seconds after LOC and GS capture.

Flight Director Display

Turning a F/D switch ON displays command bars on the respective pilot's attitude indicator if command pitch and roll modes are engaged. If command pitch and roll modes are not engaged, the F/D command bars do not appear. The F/Ds can be operated with or without the A/P and A/T. F/D command modes can be used with an A/P engaged in CWS.

F/D commands operate in the same command modes as the A/P except:

- the takeoff mode is a F/D only mode
- dual F/D guidance is available for single engine operation
- the F/D has no landing flare capability. F/D command bars retract from view at approximately 50 feet RA on an ILS approach.

Normally, FCC A drives the captain's command bars and FCC B drives the first officer's command bars. With both F/D switches ON, the logic for both pilots' F/D modes is controlled by the master FCC, and both FMA displays show the same mode status.

The master FCC is indicated by illumination of the respective master (MA) F/D indicator light. The master FCC is determined as follows:

- with neither A/P engaged in CMD, the FCC for the first F/D turned on is the master
- with one or both A/Ps engaged in CMD, the FCC for the first A/P in CMD is the master FCC, regardless of which F/D is turned on first.

F/D modes are controlled directly from the respective FCC under certain conditions. This independent F/D operation occurs when neither A/P is engaged in CMD, both F/D switches are ON and one of the following mode conditions exists:

- APP mode engaged with LOC and G/S captured
- GA mode engaged and below 400 feet RA
- TO mode engaged and below 400 feet RA.

Independent F/D operation is indicated by illumination of both MA lights. When independent operation terminates, the MA light extinguishes on the slaved side.

If a generator is lost during a F/D TO or GA, or while in dual F/D APP mode below 800 feet, the FCC on the unaffected side positions the F/D command bars on both attitude indicators. If the F/D MA light on the affected side had been illuminated, it extinguishes upon electrical bus transfer.

AFDS Status Annunciation

The following AFDS status annunciations are displayed in the A/P status display located above the attitude indicator on the outboard display unit:

- CMD (one or both autopilots are engaged)
- FD (the flight director is ON and the autopilot is either OFF or engaged in CWS)
- CWS P (pitch mode engaged in CWS)
- CWS R (roll mode engaged in CWS)

AFDS Flight Mode Annunciations

The flight mode annunciations are displayed just above the attitude indicator on the outboard display unit. The mode annunciations, from left to right, are:

[Option - PFD/ND]

- autothrottle
- roll
- pitch.

Engaged or captured modes are shown at the top of the flight mode annunciation boxes in large green letters. Armed modes are shown in smaller white letters at the bottom of the flight mode annunciation boxes.

Autothrottle Modes

- N1 – the autothrottle maintains thrust at the selected N1 limit displayed on the thrust mode display, including full go-around N1 limit
- GA – the autothrottle maintains thrust at reduced go-around setting
- RETARD – displayed while autothrottle moves thrust levers to the aft stop. RETARD mode is followed by ARM mode
- FMC SPD – the autothrottle maintains speed commanded by the FMC. The autothrottle is limited to the N1 value shown on the thrust mode display
- MCP SPD – the autothrottle maintains speed set in the MCP IAS/MACH display. The autothrottle is limited to the N1 value shown on the thrust mode display
- THR HLD – the thrust lever autothrottle servos are inhibited; the pilot can set the thrust levers manually
- ARM – no autothrottle mode engaged. The thrust lever autothrottle servos are inhibited; the pilot can set thrust levers manually. Minimum speed protection is provided

Pitch Modes

- TO/GA – Takeoff

Engaged for takeoff by turning both F/D switches ON and pushing either TO/GA switch. Both F/Ds must be ON to engage TO/GA prior to starting takeoff.

The AFDS commands pitch attitude in the following order:

- 10 degrees nose down until 60 knots IAS
- 15 degrees nose up after 60 knots IAS
- 15 degrees nose up after lift-off until a sufficient climb rate is acquired. Then, pitch is commanded to maintain MCP speed plus 20 knots.

TO/GA can also be engaged for takeoff with F/D switches OFF if a TO/GA switch is pushed after 80 knots IAS below 2000 feet AGL and prior to 150 seconds after lift-off.

- TO/GA – Go-around

Engaged for go-around by pushing the TO/GA switch under the following conditions:

- inflight below 2000 feet radio altitude

[Option - A/P auto-disengages for TO/GA above 2000 feet RA]

[Option - Honeywell -708 FCC and on]

- inflight above 2000 feet radio altitude with flaps not up or G/S captured
- not in takeoff mode
- either F/D ON or OFF.

When engaged, the F/Ds command roll to hold the ground track, and 15 degrees nose up pitch. After reaching a programmed rate of climb, pitch commands the target airspeed for each flap setting based on maximum takeoff weight calculations.

- VNAV (armed) - displayed when VNAV is armed prior to takeoff. After takeoff, VNAV automatically engages at 400 feet RA.
- VNAV (engaged) – VNAV is engaged by pushing the VNAV switch. With a VNAV mode engaged, the FMC commands AFDS pitch and A/T modes to fly the vertical profile
 - VNAV SPD – the AFDS maintains the FMC speed displayed on the airspeed indicator and/or the CDU CLIMB or DESCENT pages
 - VNAV PTH – the AFDS maintains FMC altitude or descent path with pitch commands.
- V/S (armed) – V/S mode can be engaged by moving Vertical Speed thumbwheel
- V/S (engaged) – commands pitch to hold selected vertical speed
- ALT ACQ – transition maneuver entered automatically from a V/S, LVL CHG, or VNAV climb or descent to selected MCP altitude. Engages but does not annunciate during VNAV transition
- ALT HOLD – commands pitch to hold MCP selected altitude or uncorrected barometric altitude at which ALT HOLD switch was pushed
- MCP SPD – pitch commands maintain IAS/MACH window airspeed or Mach
- G/S (armed) – the AFDS is armed for G/S capture
- G/S (engaged) – the AFDS follows the ILS glideslope
- FLARE (armed) – during a dual A/P ILS approach, FLARE is displayed after LOC and G/S capture and below 1500 feet RA. The second A/P couples with the flight controls and A/P go-around mode arms
- FLARE (engaged) – during a dual A/P ILS approach, flare engages at 50 feet radio altitude. FLARE accomplishes the autoland flare maneuver.

Roll Modes

- LNAV (armed) – the AFDS is armed (prior to takeoff) to engage LNAV at 50 feet RA.
- LNAV (engaged) – the AFDS intercepts and tracks the active FMC route. Either of the following capture criteria must be met:
 - on any heading and within 3 NM of the active route segment
 - if outside of 3 NM of active route segment, airplane must be on an intercept course of 90 degrees or less and intercept the route segment before the active waypoint.
- HDG SEL – the airplane is turning to, or is on the heading selected in the MCP Heading Display

- VOR/LOC (armed) – AFDS is armed to capture selected VOR or LOC COURSE
- VOR/LOC (engaged) – AFDS tracks selected VOR course or tracks selected localizer course along the inbound front course bearing.

Autopilot Control Wheel Steering

CWS Engage Switch Selected

Pushing a CWS engage switch engages the A/P pitch and roll axes in the CWS mode and displays CWS P and CWS R on the FMAs.

With CWS engaged, the A/P maneuvers the airplane in response to control pressures applied by either pilot. The control pressure is similar to that required for manual flight. When control pressure is released, the A/P holds existing attitude.

If aileron pressure is released with 6 degrees or less bank, the A/P rolls the wings level and holds existing heading. This heading hold feature with bank less than 6 degrees is inhibited when any of the following conditions exists:

- below 1,500 feet RA with the landing gear down
- after F/D VOR capture with TAS 250 knots or less
- after F/D LOC capture in the APP mode.

Pitch CWS with a CMD Engage Switch Selected

The pitch axis engages in CWS while the roll axis is in CMD when:

- a command pitch mode has not been selected or was deselected
- A/P pitch has been manually overridden with control column force. The force required for override is greater than normal CWS control column force. This manual pitch override is inhibited in the APP mode with both A/Ps engaged.

CWS P is annunciated on the FMAs while this mode is engaged. Command pitch modes can then be selected.

When approaching a selected altitude in CWS P with a CMD engage switch selected, CWS P changes to ALT ACQ. When at the selected altitude, ALT HOLD engages.

If pitch is manually overridden while in ALT HOLD at the selected altitude, ALT HOLD changes to CWS P. If control force is released within 250 feet of the selected altitude, CWS P changes to ALT ACQ, the airplane returns to the selected altitude, and ALT HOLD engages. If the elevator force is held until more than 250 feet from the selected altitude, pitch remains in CWS P.

Roll CWS with a CMD Engage Switch Selected

The roll axis engages in CWS while the pitch axis is in CMD when:

- a command roll mode has not been selected or was deselected
- A/P roll has been manually overridden with control wheel force. The force required for override is greater than the normal CWS control wheel force. This manual roll override is inhibited in the APP mode with both A/Ps engaged.

CWS R is annunciated on the FMAs while this mode is engaged.

CWS R with a CMD engage switch illuminated can be used to capture a selected radio course while the VOR/LOC or APP mode is armed. Upon intercepting the radial or localizer, the F/D and A/P annunciations change from CWS R to VOR/LOC engaged, and the A/P tracks the selected course.

Autothrottle System

The A/T system provides automatic thrust control from the start of takeoff through climb, cruise, descent, approach and go-around or landing. In normal operation, the FMC provides the A/T system with N1 limit values.

The A/T moves the thrust levers with a separate servo motor on each thrust lever. Following manual positioning, the A/T may reposition the thrust levers to comply with computed thrust requirements except while in the THR HLD and ARM modes.

The A/T system operates properly with the EECs ON or in ALTN. In either case, the A/T uses the FMC N1 limits. During A/T operation, it is recommended that both EECs be ON or both be in ALTN, as this produces minimum thrust lever separation.

Autothrottle Engagement

Moving the A/T Arm switch to ARM, arms the A/T for engagement in the N1, MCP SPD or FMC SPD mode. The A/T Arm switch is magnetically held at ARM and releases to OFF when the A/T becomes disengaged.

A general summary of A/T mode engagement is as follows:

- A/T SPD or N1 modes automatically engage when AFDS command pitch modes become engaged
- engaging LVL CHG or VNAV climb modes automatically engages the A/T N1 mode
- engaging LVL CHG or VNAV descent modes automatically engages the A/T in RETARD and then ARM when thrust is at idle
- if not in a VNAV mode, engagement of ALT ACQ or ALT HOLD automatically engages the A/T in the MCP SPD mode; otherwise the A/T remains in FMC SPD

- engagement of G/S capture automatically engages the A/T in the MCP SPD mode
- alpha floor automatically engages the A/T when armed.

Autothrottle Disengagement

Any of the following conditions or actions disengages the A/T:

- moving the A/T Arm switch to OFF
- pushing either A/T Disengage switch
- an A/T system fault is detected
- two seconds have elapsed since landing touchdown

The thrust levers should normally be aligned to no more than one full knob width difference during all ranges of normal operation with symmetrical thrust.

The autothrottle also disengages if it is engaged in a Speed mode, Retard for descent mode, or an N1 mode other than A/T GA mode AND;

[Option - Throttle Split Monitor, Honeywell MCP and Smiths A/T computer, with or without Quiet Climb]

- thrust levers become separated more than 10 degrees during a dual channel approach after FLARE armed is annunciated

[Option - Throttle Split Monitor, Collins MCP with integrated A/T, without Quiet Climb]

- thrust levers become separated more than 10 degrees

[Option - Thrust Split Monitor, Honeywell MCP and Smiths A/T computer]

- significant thrust difference along with control wheel roll input of 10 degrees or more, and flap position up through 10

[Option - Thrust Split Monitor, Collins MCP with integrated A/T, without Quiet Climb]

- significant thrust difference along with control wheel roll input of 10 degrees or more at any point throughout the entire flight envelope

A/T disengagement is followed by A/T Arm switch releasing to OFF and flashing red A/T Disengage lights. The A/T Disengage lights do not illuminate when the A/T automatically disengages after landing touchdown.

Automatic Flight Operations

The phases of flight for automatic flight operations are:

- Takeoff and climb
- Enroute
- Approach and landing
- Go-around

Automatic Flight Takeoff and Climb

Takeoff is a flight director only function of the TO/GA mode. Flight director pitch and roll commands are displayed and the autothrottle maintains takeoff N1 thrust limit as selected from the FMC. The autopilot may be engaged after takeoff.

[Option - Flight director commands HDG SEL on takeoff]

Both F/Ds must be ON to engage the takeoff mode prior to starting the takeoff. The F/D takeoff mode is engaged by pushing the TO/GA switch on either thrust lever. The FMAs display FD as the A/P status, TO/GA as the pitch mode, and HDG SEL as the roll mode.

During takeoff, pushing a TO/GA switch engages the autothrottle in the N1 mode. The A/T annunciation changes from ARM to N1 and thrust levers advance toward takeoff thrust.

The F/D can also be engaged in the takeoff mode with the F/D switches off. If a TO/GA switch is pushed after 80 knots below 2000 feet AGL and prior to 150 seconds after lift-off, the F/D command bars automatically appear for both pilots.

[Option - Flight director commands HDG SEL on takeoff]

During takeoff, prior to 60 KIAS:

- the pitch command is 10 degrees nose down
- the roll command is HDG SEL
- the autothrottle is engaged in the N1 mode
- thrust levers advance until the engines reach takeoff thrust
- the FMAs display N1 for the autothrottle mode, TO/GA for the pitch mode, and HDG SEL for the roll mode.

At 60 knots, the F/D pitch commands 15 degrees nose up.

At 84 knots, the A/T mode annunciates THR HLD.

At LIFT-OFF:

- the pitch command continues at 15 degrees until sufficient climb rate is acquired. Pitch then commands MCP speed (normally V2) plus 20 knots
- if an engine failure occurs during takeoff, the pitch command target speed is:
 - V2, if airspeed is below V2
 - existing speed, if airspeed is between V2 and V2 + 20
 - V2 + 20, if airspeed is above V2 + 20

[Option - Flight director commands HDG SEL on takeoff]

- the roll command maintains HDG SEL. Bank angle is limited to 8 degrees below 400 feet, and 10–30 degrees selectable above 400 feet AGL.

After LIFT-OFF:

- the A/T remains in THR HLD until 800 feet RA. A/T annunciation then changes from THR HLD to ARM and reduction to climb thrust can be made by pushing the N1 switch.
- Note:** During a reduced thrust takeoff, a second press of the TO/GA switch below 800 feet RA will change the thrust limit mode to GA and N1 reference bugs to increase to full GA thrust, thrust levers will not be in motion. A second press of the TO/GA switch above 800 feet RA, thrust levers advance toward full GA thrust.

[Option - Without automatic thrust reduction after takeoff]

- automatic thrust reduction to climb power occurs when VNAV, ALT ACQ or ALT HOLD is engaged. Until 2 1/2 minutes after liftoff, automatic thrust reduction is inhibited when engaging LVL CHG or V/S modes.


[Option - Automatic thrust reduction after takeoff, FMC update 10.1 and later]

- automatic reduction to climb thrust occurs upon reaching the selected thrust reduction altitude which is shown on the FMC CDU TAKEOFF REF page 2/2 during preflight, or when the airplane levels off in ALT HOLD or VNAV PTH. Pilot entries can be made to override the default value. Allowable entries are 800 feet to 9999 feet
- flight director engaged status is terminated by engaging an autopilot in CMD (CMD replaces FD in A/P status display)
 - pitch engages in LVL CHG and pitch mode FMA is MCP SPD unless another pitch mode has been selected
 - MCP IAS/Mach display and airspeed cursor change to V2 + 20 knots
 - roll mode engages in HDG SEL unless another roll mode has been selected.

To terminate the takeoff mode below 400 feet RA, both F/D switches must be turned OFF. Above 400 feet RA, selection of another pitch mode or engaging an autopilot will terminate the takeoff mode; other F/D roll modes can be also selected.

Automatic Flight Takeoff Profile

[Option - PFD/ND, flight director commands HDG SEL on takeoff]

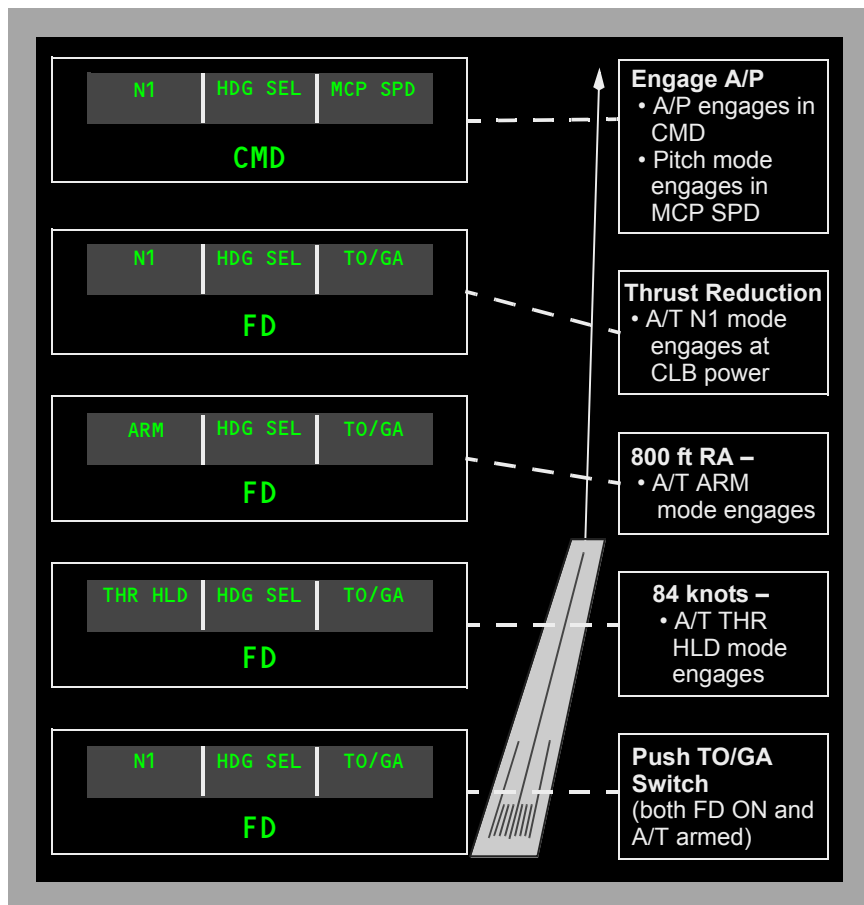

Automatic Flight En Route

The autopilot and/or the flight director can be used after takeoff to fly a lateral navigation track (LNAV) and a vertical navigation track (VNAV) provided by the FMC.

Other roll modes available are:

- VOR course (VOR/LOC)
- heading select (HDG SEL).

Other pitch modes available are:

- altitude hold (ALT HOLD)
- level change (MCP SPD)
- vertical speed (V/S).

Automatic Flight Approach and Landing

The AFDS provides guidance for single A/P non-precision approaches. The VOR/LOC switch arms the AFDS for VOR or localizer tracking. Descent may be accomplished using VNAV, LVL CHG, or V/S. VOR/LOC, LNAV, or HDG SEL may be used for the roll mode.

The AFDS provides guidance for single or dual A/P precision approaches. The approach mode arms the AFDS to capture and track the localizer and glideslope.

Approach (APP) Mode Dual A/Ps

Approach mode allows both A/Ps to be engaged at the same time. Dual A/P operation provides fail-passive operation through landing flare and touchdown or an automatic go-around. During fail passive operation, the flight controls respond to the A/P commanding the lesser control movement. If a failure occurs in one A/P, the failed channel is counteracted by the second channel such that both A/Ps disconnect with minimal airplane maneuvering and with aural and visual warnings to the pilot.

One VHF NAV receiver must be tuned to an ILS frequency before the approach mode can be selected. For a dual A/P approach, the second VHF NAV receiver must be tuned to the ILS frequency and the corresponding A/P engaged in CMD prior to 800 feet RA.

Localizer and Glideslope Armed

After setting the localizer frequency and course, pushing the APP switch selects the APP mode. The APP switch illuminates and VOR/LOC and G/S annunciate armed. The APP mode permits selecting the second A/P to engage in CMD. This arms the second A/P for automatic engagement after LOC and G/S capture and when descent below 1500 RA occurs.

The localizer can be intercepted in the HDG SEL, CWS R or LNAV mode.

[\[Option - G/S capture inhibited before LOC capture\]](#)

Glideslope (G/S) capture is inhibited prior to localizer capture.

Localizer Capture

The LOC capture point is variable and depends on intercept angle and rate of closure. Capture occurs no later than 1/2 dot. Upon LOC capture, VOR/LOC annunciates captured, the previous roll mode disengages and the airplane turns to track the LOC.

Glideslope Capture

[Option - G/S capture inhibited before LOC capture]

Glideslope capture is inhibited prior to localizer capture.

The G/S can be captured from above or below. Capture occurs at 2/5 dot and results in the following:

- G/S annunciates captured
- previous pitch mode disengages
- APP light extinguishes if localizer has also been captured
- airplane pitch tracks the G/S
- GA displayed on thrust mode display (N1 thrust limit).

After VOR/LOC and G/S are both captured, the APP mode can be exited by:

- pushing a TO/GA switch
- disengaging A/P and turning off both F/D switches
- retuning a VHF NAV receiver.

After LOC and G/S Capture

Shortly after capturing LOC or G/S and below 1500 feet RA:

- the second A/P couples with the flight controls
- test of the ILS deviation monitor system is performed and the G/S or LOC display turns amber and flashes
- FLARE armed is annunciated
- A/P go-around mode arms but is not annunciated.

The A/Ps disengage and the F/D command bars retract to indicate an invalid ILS signal.

800 Feet Radio Altitude

The second A/P must be engaged in CMD by 800 feet RA to execute a dual channel A/P approach. Otherwise, CMD engagement of the second A/P is inhibited.

400 Feet Radio Altitude

The stabilizer is automatically trimmed an additional amount nose up. If the A/Ps subsequently disengage, forward control column force may be required to hold the desired pitch attitude.

If FLARE is not armed by approximately 350 feet RA, both A/Ps automatically disengage.

Flare

The A/P flare maneuver starts at approximately 50 feet RA and is completed at touchdown:

- FLARE engaged is annunciated and F/D command bars retract.
- the A/T begins retarding thrust at approximately 27 feet RA so as to reach idle at touchdown. A/T FMA annunciates RETARD.
- the A/T automatically disengages approximately 2 seconds after touchdown.
- the A/P must be manually disengaged after touchdown. Landing rollout is executed manually after disengaging the A/P.

Approach (APP) Mode Single A/P


A single A/P ILS approach can be executed by engaging only one A/P in CMD after pushing the APP mode select switch. Single A/P approach operation is the same as dual, with the following exceptions:

- full automatic flare and touchdown capability is not available. FLARE is not annunciated and stabilizer trim bias is not applied
- an A/P go-around is not available.

ILS Beam Anomaly/Ground Station Failure Detection

For a single channel or F/D only approach, the autopilot will disconnect and/or the F/D bars will be removed if a persistent localizer/glideslope beam anomaly or ground station failure is detected.

Automatic Flight Approach Profile

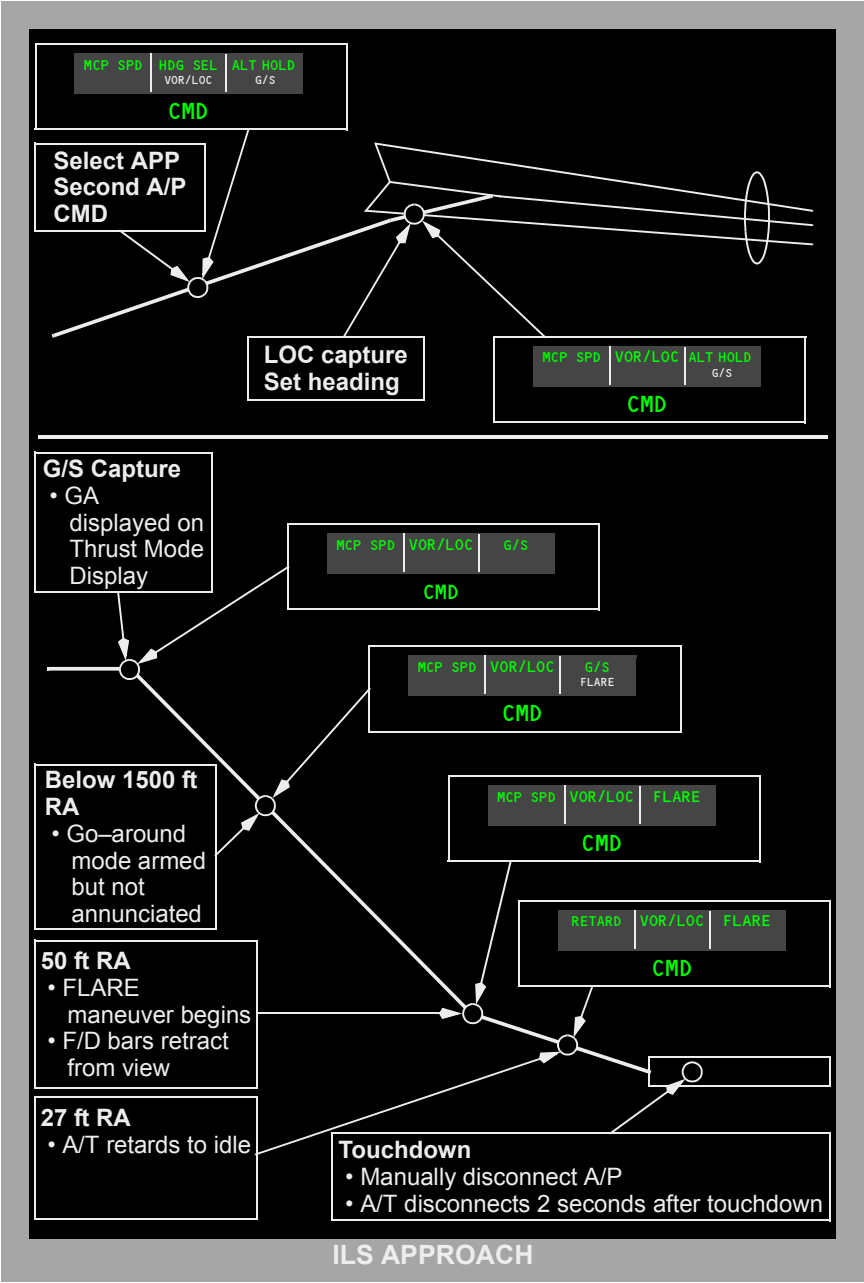

Go-Around

Go-Around (GA) mode is engaged by pushing either TO/GA switch. An A/P go-around requires dual A/P operation and is armed when FLARE armed is annunciated. If both A/Ps are not operating, a manual F/D go-around is available.

With the A/T Arm switch at ARM, the A/T go-around mode is armed:

- when descending below 2000 feet RA

[Option - A/P auto disengages for TO/GA above 2000 feet RA]

[Option - Honeywell -708 FCC and on]

- when above 2000 feet RA with flaps not up or G/S captured
- with or without the AFDS engaged.

A/P Go-Around

The A/P GA mode requires dual A/P operation and is available after FLARE armed is annunciated and prior to the A/P sensing touchdown.

With the first push of either TO/GA switch:

- A/T (if armed) engages in GA and the A/T Engaged Mode annunciation on the FMA indicates GA
- thrust advances toward the reduced go-around N1 to produce 1000 to 2000 fpm rate of climb
- pitch mode engages in TO/GA and the Pitch Engaged Mode annunciation on the FMA indicates TO/GA
- F/D pitch commands 15 degrees nose up until reaching programmed rate of climb. F/D pitch then commands target airspeed for each flap setting based on maximum takeoff weight calculations
- F/D roll commands hold current ground track. The Roll Engaged Mode annunciation on the FMA is blank
- the IAS/Mach display blanks
- the command airspeed cursor automatically moves to a target airspeed for the existing flap position based on maximum takeoff weight calculations.

[Option - Without Fail-Operational Autoland]

Note: If the TO/GA switch is pressed after touchdown and prior to A/T disengagement, A/P channel disengages and the A/T may command GA thrust.

With the second push of either TO/GA switch after A/T reaches reduced go-around thrust:

- the A/T advances to the full go-around N1 limit.

TO/GA mode termination from A/P go-around:

- below 400 feet RA, the AFDS remains in the go-around mode unless both A/Ps and F/Ds are disengaged
- above 400 feet RA, select a different pitch or roll mode.

- if the roll mode is changed first:
 - the selected mode engages in single A/P roll operation and is controlled by the A/P which was first in CMD
 - pitch remains in dual A/P control in TO/GA mode.
- if the pitch mode is changed first:
 - the selected mode engages in single A/P pitch operation and is controlled by the A/P which was first in CMD
 - the second A/P disengages
 - the roll mode engages in CWS R.
- the A/T GA mode is terminated when:
 - another pitch mode is selected
 - ALT ACQ annunciates engaged.

Note: The pitch mode cannot be changed from TO/GA until sufficient nose-down trim has been input to allow single channel A/P operation. This nose-down trim is automatically added by the A/P to reset the trim input made by the A/P at 400 feet RA and at 50 feet RA during the approach.

With pitch mode engaged in TO/GA, ALT ACQ engages when approaching the selected altitude and ALT HOLD engages at the selected altitude if the stabilizer position is satisfactory for single A/P operation.

- if stabilizer trim position is not satisfactory for single A/P operation:
 - ALT ACQ is inhibited
 - A/P disengage lights illuminate steady red
 - pitch remains in TO/GA.

Note: To extinguish A/P disengage lights, disengage A/Ps or select higher altitude on MCP.

F/D Go-Around

If both A/Ps are not engaged, a manual F/D only go-around is available under the following conditions:

- inflight below 2000 feet RA

[Option - A/P auto disengages for TO/GA above 2000 feet RA]

[Option - Honeywell -708 FCC and on]

- inflight above 2000 feet RA with flaps not up or G/S captured
- not in takeoff mode.

With the first push of either TO/GA switch:

- A/T (if armed) engages in GA and advances thrust toward the reduced go-around N1 to produce 1000 to 2000 fpm rate of climb. The A/T Engaged Mode annunciation on the FMA indicates GA
- autopilot (if engaged) disengages

- pitch mode engages in TO/GA and the Pitch Engaged Mode annunciation on the FMA indicates TO/GA
- F/D pitch commands 15 degrees nose up until reaching programmed rate of climb. F/D pitch then commands target airspeed for each flap setting based on maximum takeoff weight calculations
- F/D roll commands approach ground track at time of engagement. The Roll Engaged Mode annunciation on the FMA is blank
- the IAS/Mach display blanks
- the command airspeed cursor automatically moves to a target airspeed for the existing flap position based on maximum takeoff weight calculations.

With the second push of either TO/GA switch (if A/T engaged and after A/T reaches reduced go-around thrust):

- the A/T advances to the full go-around N1 limit

TO/GA mode termination from F/D go-around:

- below 400 feet RA, both F/D switches must be turned off.
- above 400 feet RA, select a different pitch or roll mode.
 - if the roll mode is changed first:
 - F/D roll engages in the selected mode
 - F/D pitch mode remains in TO/GA.
 - if the pitch mode is changed first:
 - F/D pitch engages in the selected mode.
 - F/D roll mode automatically changes to HDG SEL
 - the A/T GA mode (if engaged) is terminated when:
 - another pitch mode is selected
 - ALT ACQ annunciates engaged.

Note: Engaging an A/P in CMD automatically engages the A/P and F/Ds in LVL CHG for pitch and HDG SEL for roll.

Single Engine F/D Go-Around

With a push of either TO/GA switch:

- F/D roll commands hold current ground track. The Roll Engaged Mode annunciation on the FMA is blank
- pitch mode engages in TO/GA and the Pitch Engaged Mode annunciation on the FMA indicates TO/GA
- the F/D target speed is displayed on IAS/Mach display
- the F/D target speed is displayed on the airspeed cursor
- F/D pitch commands 13 degrees nose up. As climb rate increases, F/D pitch commands maintain a target speed.
 - if engine failure occurs prior to go-around engagement, then F/D target speed is the selected MCP speed.


- if engine failure occurs after go-around engagement, then F/D target speed depends on whether ten seconds have elapsed since go-around engagement:
 - if prior to ten seconds, the MCP selected approach speed becomes target speed
 - if after ten seconds and the airspeed at engine failure is within five knots of the go-around engagement speed, the airspeed that existed at go-around engagement becomes target speed
 - if after ten seconds and the airspeed at engine failure is more than five knots above go-around engagement speed, then the current airspeed becomes target speed.

Note: The target speed is never less than V2 speed based on flap position unless in windshear conditions.

F/D commanded acceleration cannot occur until a higher speed is selected on the MCP IAS/Mach display.

Automatic Flight Go-Around Profile

[Option - PFD/ND]

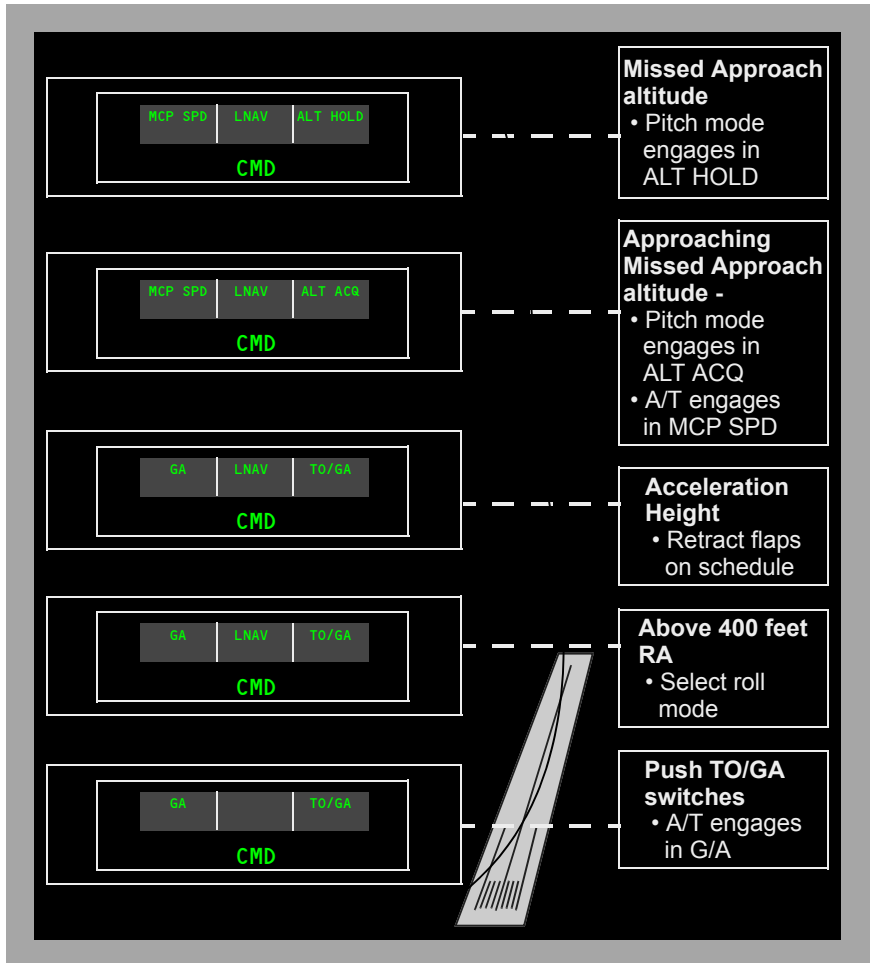

AFS Operation in Windshear

General

The autopilot and flight director provide positive corrective action to counteract most windshears. The autothrottle system also aids in windshear recovery by providing quick response to any increase or decrease in speed. The commanded levels of power may be beyond what the average pilot considers necessary but, in fact, are required by the situation.

Takeoff or Go-Around

If windshear is encountered during F/D takeoff or go-around, the F/D pitch command bar provides commands to maintain $V_2 + 20$ kts until vertical speed decreases to approximately +600 fpm. At this point, the F/D pitch bar commands a 15 degree nose-up pitch attitude. If vertical speed continues to decrease, the F/D continues to command a 15 degree pitch attitude until a speed of approximately stick shaker is reached. It then commands pitch attitudes which result in intermittent activation of the stick shaker. As the airplane transits the windshear condition, the F/D programming reverses. As climb rate increases above approximately +600 fpm, the F/D commands pitch attitudes which result in acceleration back to $V_2 + 20$ kts. The A/P and F/D both operate in a similar manner during A/P or F/D go-around.

Approach and Landing

If windshear is encountered during an ILS approach, both the F/D and A/P attempt to hold the airplane on altitude, or on glideslope after glideslope capture, without regard to angle of attack or stick shaker limitations. Airspeed could decrease below stick shaker and into a stall if the pilot does not intervene by pushing the TO/GA switch or disconnecting the A/P and flying manually.

WARNING: Although the F/D, A/P and A/T may be performing as previously described, severe windshear may exceed the performance capability of the system and/or the airplane. In this situation, the flight crew must, if necessary to avoid ground contact, be prepared to disconnect the autothrottle, advance thrust levers to the forward stop, disconnect the autopilot and manually fly the airplane.

Command Speed Limiting and Reversion Modes

AFS command limiting and reversion operation is independent of the stall warning and mach warning systems.

Command Speed Limiting

The AFS provides speed, pitch and thrust commands to avoid exceeding the following limit speeds:

- V_{mo}/M_{mo}
- wing flap placards
- landing gear placard
- minimum speed.

The commanded speed can be equal to, but does not exceed a limit speed.

Speeds greater than V_{mo}/M_{mo} cannot be selected from the MCP. Speeds can be selected which exceed flap and gear placards or are less than minimum speed.

Minimum speed is based on angle of attack and is approximately 1.3 Vs for the current flap configuration. It is sensed by the angle of attack vanes, one on either side of the forward fuselage.

If a speed greater than a placard speed, or less than minimum speed is selected, the AFS allows acceleration or deceleration to slightly short of the limit, then commands the limit speed. The overspeed or underspeed limiting symbol appears in the MCP IAS/Mach display when the commanded speed cannot be reached.

Either pitch or thrust, whichever is engaged in a speed mode, attempts to hold the limit speed. The commanded limit speed and MCP speed condition symbol, remain until another speed is selected which does not exceed the limit. A speed 15 knots greater than the minimum speed must be selected to remove the underspeed limiting symbol.

Reversion Modes

During some flight situations, speed control by the AFDS or A/T alone could be insufficient to prevent exceeding a limit speed. If this occurs, AFDS or A/T modes automatically revert to a more effective combination. The reversion modes are:

- placard limit reversion
- minimum airspeed reversion.

Mode reversion occurs slightly before reaching the limit speed. Both the AFDS and A/T have reversion modes which activate according to the condition causing the reversion.

Placard Limit Reversion

When one of the placard limit reversions (gear, flap or V_{mo}/M_{mo}) is reached, the overspeed limiting symbol appears in the MCP IAS/Mach display and the following occurs:

- if the AFDS is engaged but not in speed or CWS mode, and the A/T is armed but not in speed control, the A/T reverts to SPEED and controls speed to slightly below the placard limit
- if the AFDS or A/T is in speed control, speed is maintained slightly below the placard limit
- for V_{MO}/M_{MO} only, if the A/T is engaged in a speed mode and the thrust levers are at idle, the AFDS, if in a V/S mode, will automatically engage to LVL CHG mode.
- if the A/T is not available, no reversion response to gear or flap placard speeds is available. The AFDS reverts to speed control for V_{mo}/M_{mo} speed limiting.

Minimum Speed Reversion

The AFDS and A/T do not control to a speed which is less than minimum speed for the current flap configuration. This speed is approximately 1.3 Vs. Minimum speed, FMC speed, or selected speed, whichever is higher, becomes the AFS commanded speed. If actual speed becomes equal to or slightly less than the minimum speed, the underspeed limiting symbol appears in the MCP IAS/Mach Display, and if operating in the V/S mode, the AFDS reverts to LVL CHG. The AFDS will also revert to LVL CHG from VNAV PTH, except when flying a level segment.

The AFS commands a speed 5 knots greater than minimum speed. Reaching a speed 5 knots greater than minimum speed reactivates normal MCP speed selection control. The AFDS commands nose down pitch to increase airspeed if the thrust levers are not advanced. When actual speed becomes 5 knots greater than minimum speed, the underspeed limiting symbol disappears.

The A/P disengages and the F/D command bars retract when in a LVL CHG climb with a command speed equal to minimum speed and a minimum rate of climb cannot be maintained without decelerating.

Minimum speed reversion is not available when the A/T is OFF and the AFDS is in ALT HOLD or after G/S capture. Minimum speed reversion is also not available when in VNAV PTH and flying a level segment.

Communications

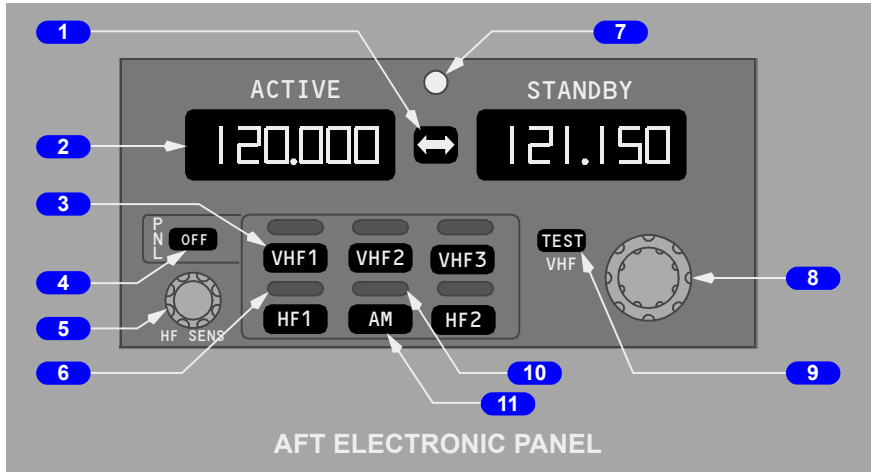
Chapter 5

Table of Contents

Section 0

Controls and Indicators	5.10
Radio Tuning Panel	5.10.1
Audio Control Panel (ACP)	5.10.4
Miscellaneous Communication Controls (Typical)	5.10.6
Interphone and Passenger Address Controls	5.10.8
Cockpit Voice Recorder	5.10.9
Cockpit Voice Recorder Switch	5.10.10
Call System	5.10.11
System Description	5.20
Introduction	5.20.1
Audio Systems and Audio Control Panels	5.20.1
Speakers and Headsets	5.20.1
Microphones	5.20.2
Normal Audio System Operation	5.20.2
Degraded Audio System Operation	5.20.2
Flight Interphone System	5.20.3
Service (Attendant) Interphone System	5.20.3
Passenger Address System	5.20.3
Call System	5.20.4
VHF Communications	5.20.5
HF Communications	5.20.5
Cockpit Voice Recorder	5.20.6

Intentionally
Blank

**Communications
Controls and Indicators****Chapter 5
Section 10****Radio Tuning Panel****1 Frequency Transfer Switch**

Push –

- transfers the STANDBY window frequency to the ACTIVE window and tunes the selected radio to the new active frequency
- transfers the ACTIVE window frequency to the STANDBY window.

2 Frequency Indicator

ACTIVE – displays the tuned frequency of the selected radio.

STANDBY – displays the preselected or previously tuned frequency of the selected radio

- displays six digit frequency in 8.33 KHz spacing.

Note: Illustration Typical

3 Radio Tuning Switch

Push –

- selects the VHF or HF radio to be tuned
- the tuned frequency is displayed in the ACTIVE frequency indicator
- the standby frequency is displayed in the STANDBY frequency indicator

4 Radio Tuning Panel OFF Switch

Push –

- disconnects the panel from the communication radios
- switch illuminates (white).

5 HF Sensitivity Control

Rotate – adjusts the sensitivity of the on-side HF receiver.

6 Radio Tuning Light

Illuminated (white) - indicates the selected radio.

7 Offside Tuning Light

Illuminated (white) –

- the radio normally associated with this panel is being tuned by another radio tuning panel, or
- the radio tuning panel is being used to tune a radio not normally associated with this radio tuning panel.

8 Frequency Selector

Rotate - selects frequency in the STANDBY frequency indicator:

- first digit is always 1
- outer selector changes second and third digits in 1 MHz increments
- inner selector changes fourth, fifth, and sixth digits in 8.33 KHz increments.

9 VHF TEST Switch

Push –

- removes automatic squelch feature, permitting reception of background noise and thereby testing receiver operation
- improves reception of weak signals.

10 AM Light


Illuminated (white) – HF AM is selected.

Extinguished – HF USB is selected.

11 AM Switch

Push – sets the AM (amplitude modulation) or USB (upper side band) mode for the selected HF.

Radio Tuning Panel Fail Modes

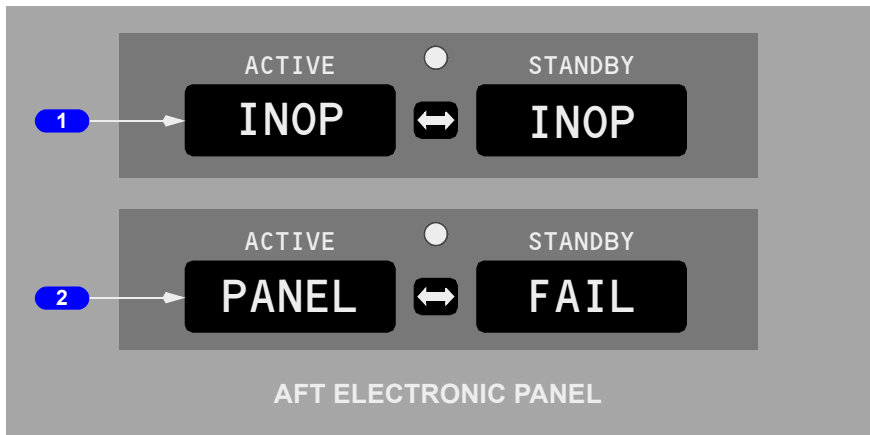

1 INOP Indication

The selected radio is not available.

2 PANEL FAIL

The radio tuning panel has failed.

Note: The selected frequencies may continue to be displayed in the frequency indicator when the radio is not available.

Audio Control Panel (ACP)



1 Transmitter Selector (MIC SELECTOR) Switches

Illuminated – related switch is active

Push –

- selects related communication system for subsequent transmission
- only one switch may be selected at a time; pushing a second switch deselects first switch
- reception possible over selected system regardless of whether related receiver switch is on.

2 Receiver Switches

Illuminated (white) – related switch is active

Rotate – adjusts volume

Push –

- allows reception of related communication system or navigation receiver
- multiple switches may be selected

Push again – deselects related system or receiver.

3 Push-to-Talk Switch

(spring-loaded to neutral position)

RADIO (radio-transmit) – keys oxygen mask or boom microphone for transmission as selected by transmitter selector.

INT (Intercom) – keys oxygen mask or boom microphone for direct transmission over flight interphone and bypasses transmitter selector.

4 Filter Switch

V (Voice) – receive NAV and ADF voice audio.

B (Both) – receive NAV and ADF voice and range audio.

R (Range) – receive NAV and ADF station identifier range (code) audio.

5 CALL Light

Illuminated (white) – Accompanied by a chime, indicates call received by SELCAL, ACARS (if installed), ground crew (INT), SATCOM (if installed), or flight crew (CABIN).

Resets when transmitter is selected and microphone is keyed.

PA does not have a CALL indication.

6 Speaker (SPKR) Switch

Illuminated (white) – SPKR switch is active.

Push – audio from selected receiver is heard on overhead speaker.

Rotate – adjusts overhead speaker volume.


Push again – deselects audio from selected receiver to be heard on overhead speaker.

7 Alternate-Normal (ALT-NORM) Switch

NORM (Normal) – ACP operates normally.

ALT (Alternate) – ACP operates in degraded mode.

Miscellaneous Communication Controls (Typical)

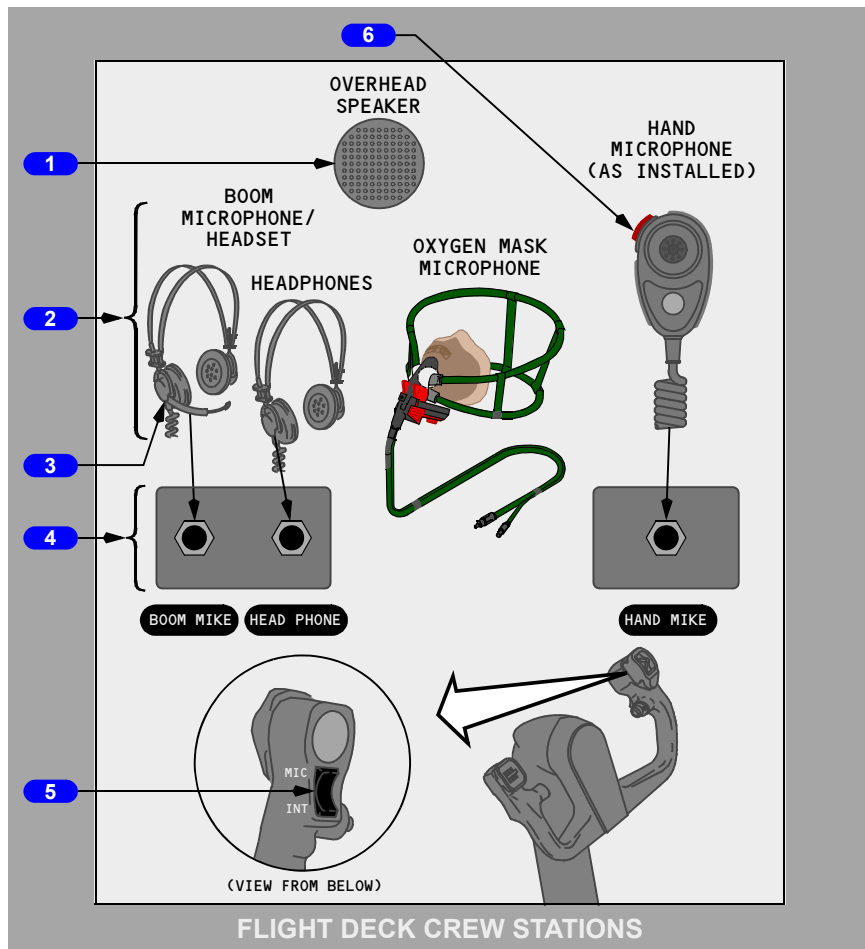

1 Overhead Speaker

Monitors audio from related pilot's ACP.

2 Headset or Headphones

Monitors audio from related ACP.

3 Standard Microphones

Choose desired microphone for voice transmission through selected radio, interphone system, or passenger address (PA). The oxygen mask microphone is automatically activated when the mask is removed from the mask stowage box.

4 Communication Jacks

Used for appropriate microphone or headphone plugs.

5 Push-To-Talk Switch

MIC (microphone) –

- selects oxygen mask or boom microphone for transmission, as selected by ACP transmitter selector.
- same as using ACP PTT switch (RADIO position).

OFF – center position.


INT (interphone) –

- selects oxygen mask or boom microphone for direct transmission over flight interphone
- bypasses ACP transmitter selector
- same as using ACP PTT switch (INT position)

6 Push-To-Talk Switch

Push – keys hand microphone for transmission, as selected by ACP transmitter selector.

Interphone and Passenger Address Controls

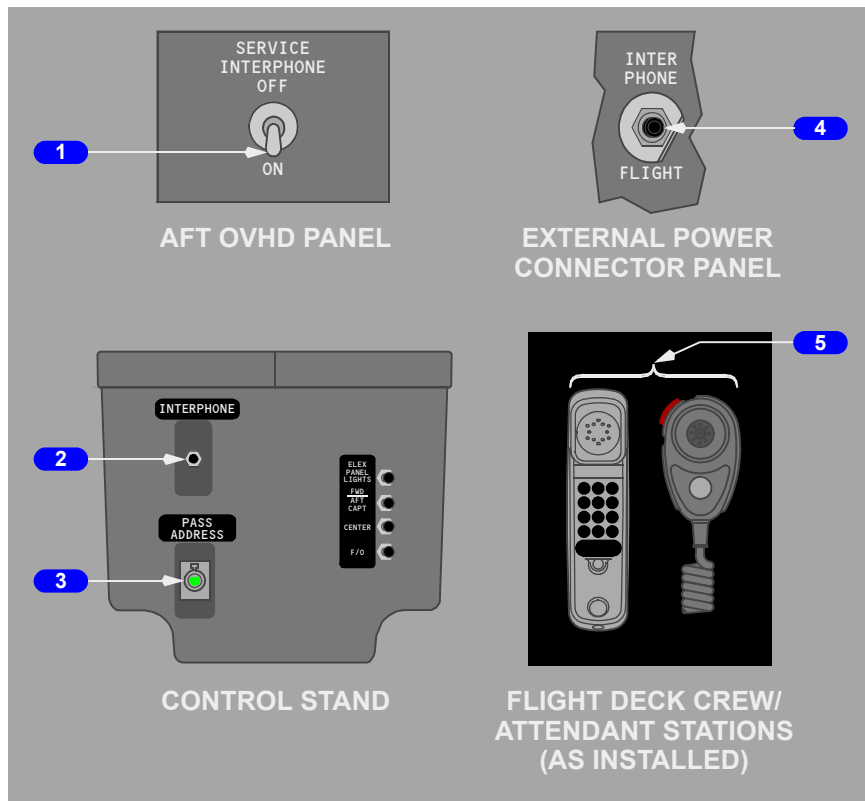

1 SERVICE INTERPHONE Switch

OFF –

- external jacks are deactivated
- communication between flight deck and flight attendants is still possible.

ON – adds external jacks to service interphone system.

2 Service INTERPHONE Handset Jack

With microphone installed, used to communicate with flight attendant stations:

- with SERVICE INTERPHONE switch ON, also used to communicate with any external jack location
- bypasses ACP.

3 Passenger Address (PASS ADDRESS) Hand Microphone Jack

With microphone installed:

- used to make PA announcements
- bypasses ACPs.


4 INTERPHONE FLIGHT Jack

Connects ground crew to flight interphone system.

5 Flight Deck / Attendant PA Hand Microphone

Used to make PA announcements.

Cockpit Voice Recorder

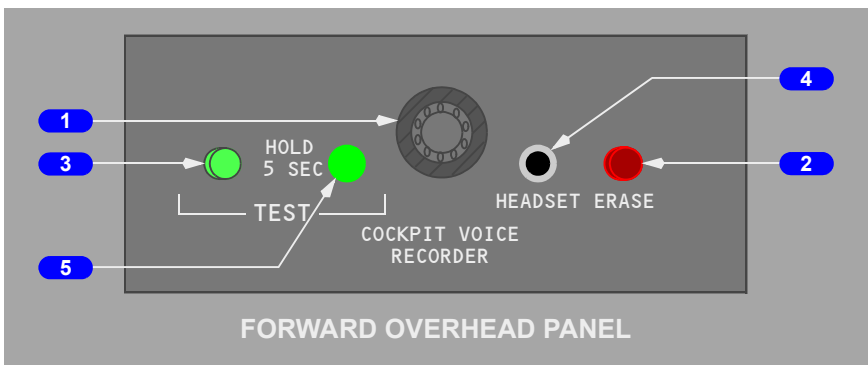

1 Area Microphone

Active anytime 115V AC is applied to airplane.

Activated when an engine is started or the VOICE RECORDER switch is placed in the ON position.

2 ERASE Switch (red)

Push (2 seconds) –

- all four channels are erased
- operative only when airplane is on ground and parking brake is set.

3 TEST Switch

Push – after a slight delay and no faults are detected:

- status light illuminates momentarily
- a tone may be heard through a headset plugged into HEADSET jack.

4 HEADSET Jack

Headset may be plugged into jack to monitor tone transmission during test, or to monitor playback of voice audio.

5 TEST Light


Illuminates (green) - when the TEST switch is depressed.

5 TEST Light

Illuminates (green) - when the TEST switch is depressed and either an engine is running or the Cockpit Voice Recorder Switch is in the ON position..

Cockpit Voice Recorder Switch

[Option]

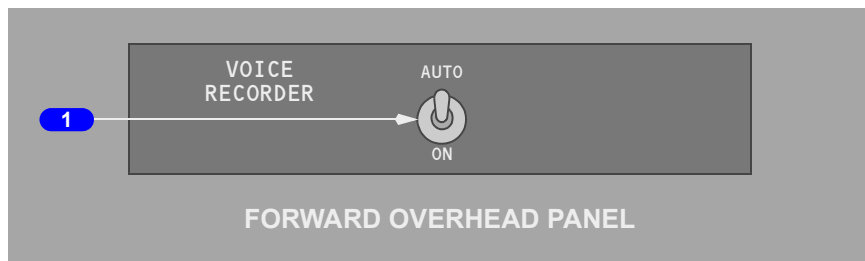


1 VOICE RECORDER Switch

AUTO - powers the cockpit voice recorder from first engine start until 5 minutes after last engine shutdown

ON - powers the cockpit voice recorder until first engine start, then trips the switch to AUTO.

Call System

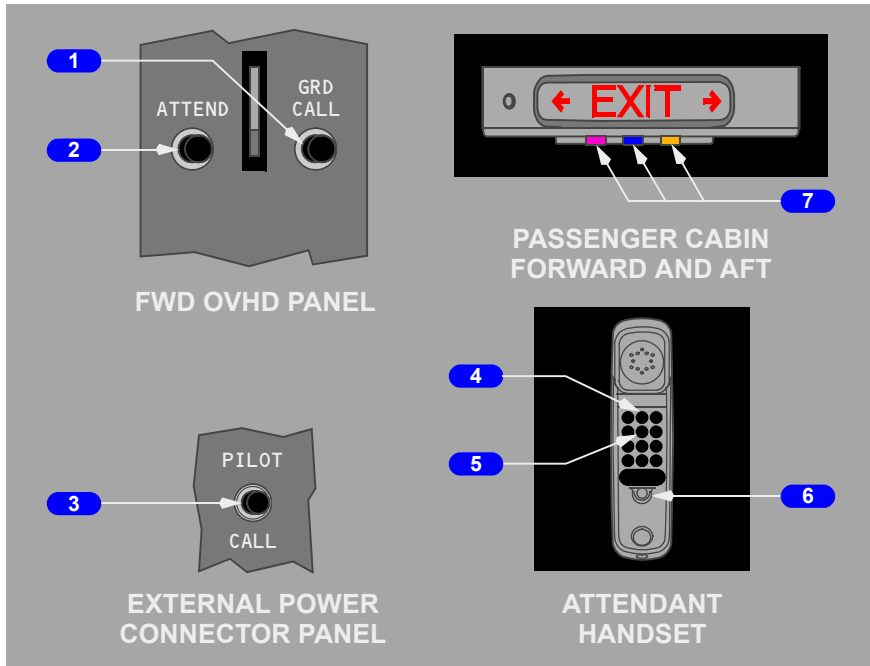

1 Ground Call (GRD CALL) Switch

Push – sounds a horn in nose wheel well until released.

2 Attendant Call (ATTEND) Switch

Push –

- sounds a two-tone chime in passenger cabin
- illuminates both pink master call lights.

3 PILOT CALL Switch

Push – sounds a single-tone chime in flight deck.

4 CAPTAIN Call Switch

Push – sounds a single-tone chime in flight deck.

5 ATTENDANT Call Switch

Push –

- sounds a two–tone chime in passenger cabin
- illuminates both pink master call lights.

6 Call RESET Switch

Push –

- extinguishes both pink master call lights
- cancels call
- disconnects the handset from the public address system.

7 Master Call Lights

Illuminated –

- amber – a lavatory call switch is activated.
- pink – flight deck or other flight attendant station is calling.
- blue – a passenger seat call switch is activated.

**Communications
System Description****Chapter 5
Section 20**

Introduction

The communication system includes:

- radio communication system
- interphone communication system
- cockpit voice recorder system
- communication crew alerting system

The communication systems are controlled using the:

- audio control panels

[\[Option - Radio tuning panel\]](#)

- radio tuning panels

Audio Systems and Audio Control Panels

An ACP is installed at the Captain, First Officer, and Observer stations. Each panel controls an independent crew station audio system and allows the crewmember to select the desired radios, navigation aids, interphones, and PA systems for monitoring and transmission.

Transmitter selectors on each ACP select one radio or system for transmission by that crewmember. Any microphone at that crew station may then be keyed to transmit on the selected system.

Receiver switches select the systems to be monitored. Any combination of systems may be selected. Receiver switches also control the volume for the headset and speaker at the related crew stations. Audio from each ACP is monitored using a headset/headphones or the related pilot's speaker.

Audio warnings for altitude alert, ground proximity warning, collision avoidance, and windshear are also heard through the speakers and headsets at preset volumes. They cannot be controlled or turned off by the crew.

Speakers and Headsets

Each crew station has a headset or headphone jack. The Captain and First Officer have speakers on the ceiling above their seats. There is no speaker at the observer station. Headset volume is controlled by the receiver switches. Speaker volume is controlled by the receiver switches and also the speaker switch.

Microphones

Hand microphones and boom microphones may be plugged into the related jacks at the flight deck crew stations. Each oxygen mask also has an integral microphone.

An oxygen mask microphone is enabled and the boom microphone is disabled when the left oxygen mask panel door is open. The oxygen mask microphone is disabled and the boom microphone is enabled when the left oxygen mask panel door is closed and the RESET/TEST Switch is pushed.

Each hand microphone has a PTT switch to key the selected audio system. The PTT switches on the control wheel or ACP are used to key the oxygen mask or boom microphone, as selected by the RADIO/INT switch. The RADIO/INT switch does not affect the operation of the hand microphone.

Normal Audio System Operation

The Captain, First Officer, and Observer audio systems are located in a common remote electronics unit in the E/E compartment. They function independently and have separate circuit breakers. The audio systems are normally controlled by the related ACPs through digital or computerized control circuits.

Degraded Audio System Operation

If the remote electronics unit or ACP malfunctions, the ACP cannot control the remote electronics unit. Audio system operation can be switched to a degraded mode by placing the ALT-NORM switch to ALT. In this mode, the ACP at that station is inoperative and the crewmember can only communicate on one radio.

The ACP transmitter selectors are not functional. Any transmission from that station must be from the radio shown on the chart below. The transmitter selector for the usable radio illuminates when a station is operating in the degraded mode. The receiver switches are not functional, and only the usable radio is heard at a preset volume, through the headset. The speaker and speaker switch are not functional at that station. In addition, the flight interphone and service interphone cannot be used. The control wheel PTT switch INT position and the ACP PTT switch INT position are not functional since the flight interphone is not functional.

The mask and boom microphones can be used for transmission on the usable radio. The mask and boom microphones can be keyed with the control wheel PTT switch in the MIC position or the ACP PTT switch in the RADIO position. The hand microphone is not usable in the degraded mode of operation.

Audio warnings for altitude alert, GPWS, and windshear are not heard on an audio system operating in the degraded mode.

An audio system operating in the degraded mode cannot access the passenger address system through the audio control panel. The crewmember can still use the service interphone handset and PA microphone if they are installed on the control stand.

CREW STATION AUDIO SYSTEM IN DEGRADED MODE	RADIO AVAILABLE FOR TRANSMISSION AND RECEPTION AT DEGRADED STATION
CAPTAIN	VHF-1
FIRST OFFICER	VHF-2
OBSERVER	VHF-1

Flight Interphone System

The flight interphone system is an independent communication network. Its primary purpose is to provide private communication between flight deck crewmembers without intrusion from the service interphone system. The ground crew may also use the flight interphone through a jack at the external power receptacle.

The pilots can transmit directly over the flight interphone by using the control wheel PTT switch. Alternately, any crewmember with an ACP can transmit/receive over the flight interphone by using their related ACP and normal PTT switches. Any standard microphone may be used with the flight interphone system.

Service (Attendant) Interphone System

The service interphone system provides intercommunication between the flight deck, Flight Attendants, and ground personnel. Flight deck crewmembers communicate using either a separate handset (if installed) or their related ACP and any standard microphone.

The Flight Attendants communicate between flight attendant stations or with the flight deck using any of the attendant handsets. Anyone who picks up a handset/microphone is automatically connected to the system.

External jacks for use by maintenance or service personnel can be added to the system by use of the service interphone switch.

Passenger Address System

The passenger address (PA) system allows flight deck crewmembers and flight attendants to make announcements to the passengers. Announcements are heard through speakers located in the cabin and in the lavatories.

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

The flight deck crewmembers can make announcements using a PA handset or by using any standard microphone and the related ACP. Flight Attendants make announcements using PA handset located at their stations. The attendants use the PA to play recorded music for passenger entertainment.

PA system use is prioritized. Flight deck announcements have first priority and override all others. Flight Attendant announcements override the music system.

Call System

The call system is used as a means for various crewmembers to gain the attention of other crewmembers and to indicate that interphone communication is desired. Attention is gained through the use of lights and aural signals (chimes or horn). The system can be activated from the flight deck, either flight attendant station, or from the external power receptacle. Passengers may also use the system to call an attendant, through the use of individual call switches at each seat.

The flight deck may be called from either flight attendant station or by the ground crew. The ground crew may only be called from the flight deck. Flight Attendants may be called from the flight deck, the other attendant station, or from any passenger seat or lavatory. Master call lights in the passenger cabin identify the source of incoming calls to the attendants.

Call system chime signals are audible in the passenger cabin through the PA system speakers. The PA speakers also provide an alerting chime signal whenever the NO SMOKING or FASTEN SEAT BELT signs illuminate or extinguish.

Location of Call Originator	Called Position	Visual Signal at Called Position	Aural Signal at Called Position
Flight deck	Attendant station	Pink master call light	Two-tone chime
Flight deck	Nose wheel well		Horn in nose wheel well
Attendant station	Flight deck	Call light on the integrated audio control panel	Single high-tone chime
External Power Connector Panel	Flight deck	Call light on the integrated audio control panel	Single high-tone chime
Flight deck	Passenger cabin	NO SMOKING or FASTEN BELT signs illuminate/extinguish	Single low-tone chime

VHF Communications

Primary short-range voice communications is provided in the VHF range by three independent radios. Each radio provides for selection of an active frequency and an inactive (preselected) frequency. Voice transmission and reception are controlled at the related ACP.

[Option - Typical for radio tuning panel equipped airplanes]

The VHF/HF RTP-1 is located on the forward left side of the aft electronic panel, VHF/HF RTP-2 is on the forward right side and VHF/HF RTP-3 is on the aft portion of the panel. The VHF-2 and VHF-3 antennae are located on the lower fuselage, VHF-1 is on the upper fuselage.

Note: VHF antennae located on the lower fuselage are susceptible to multipath interference from nearby structures or vehicles. This may disrupt VHF communications. VHF antennae located on the upper fuselage are not as susceptible to this interference.

HF Communications

There are two independent HF communication radios, designated HF 1 and HF 2. Each HF radio can be tuned by any radio tuning panel. HF radio sensitivity can only be set on the on-side radio tuning panel.

The audio control panels are used to control voice transmission and receiver monitoring. When an HF transmitter is keyed after a frequency change, the antenna tunes. A steady or intermittent tone may be heard through the audio system. While tuning, the tone can last as long as 7 seconds. If the system fails to tune, the tone will last more than 7 seconds, to a maximum of 15 seconds. The antenna is located in the vertical stabilizer.

Note: Data for the last 100 tuned frequencies is stored in memory. Tuning duration for these stored frequencies will be very short and a tune tone may not be noticeable.

Both HF radios use a common antenna. When either HF radio is transmitting, the antenna is disconnected from the other HF radio, and it cannot be used to transmit or receive. However, both HF radios can receive simultaneously if neither is being used for transmitting.

Cockpit Voice Recorder

The cockpit voice recorder uses four independent channels to record flight deck audio for 120 minutes. Recordings older than 120 minutes are automatically erased. One channel records flight deck area conversations using the area microphone. The other channels record individual ACP output (headset) audio and transmissions for the pilots and observer.

Electrical**Chapter 6****Table of Contents****Section 0**

Controls and Indicators	6.10
Electrical Panel	6.10.1
AC and DC Metering Panel	6.10.2
Generator Drive and Standby Power Panel	6.10.5
Ground Power Panel and Bus Switching Panel	6.10.6
Ground Service Switch	6.10.8
System Description	6.20
Introduction	6.20.1
Electrical Power Generation	6.20.1
Engine Generators	6.20.1
APU Generator	6.20.1
External Ground Power	6.20.1
Ground Service	6.20.2
Electrical Power Schematic	6.20.2
AC Power System	6.20.3
Bus Tie System	6.20.3
Automatic Load Shedding (Engine Generators)	6.20.4
APU Automatic Load Shedding	6.20.4
AC Power Schematic	6.20.5
Electrical Power Controls and Monitoring	6.20.5
Generator Drive	6.20.5
AC Voltmeter, Ammeter and Frequency Meter	6.20.6
DC Voltmeter and Ammeter	6.20.6
Electrical Power Controls and Monitoring Schematic	6.20.7
DC Power System	6.20.7
Transformer Rectifier Units	6.20.8
Battery Power	6.20.8
Battery Charger Transformer/Rectifier	6.20.9
DC Power System Schematic	6.20.10

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Standby Power System	6.20.11
Normal Operation	6.20.11
Alternate Operation	6.20.11
Static Inverter	6.20.12
Standby Power System Schematic	6.20.13
All Generators Inoperative	6.20.14
Basic Equipment Operating – Captain Instrument Panel	6.20.16
Basic Equipment Operating – First Officer Instrument Panel	6.20.17

DO NOT USE FOR FLIGHT


BBJ Flight Crew Operations Manual

Electrical Controls and Indicators

Chapter 6 Section 10

Electrical Panel


[Option - Dual battery with CAB/UTIL switch]

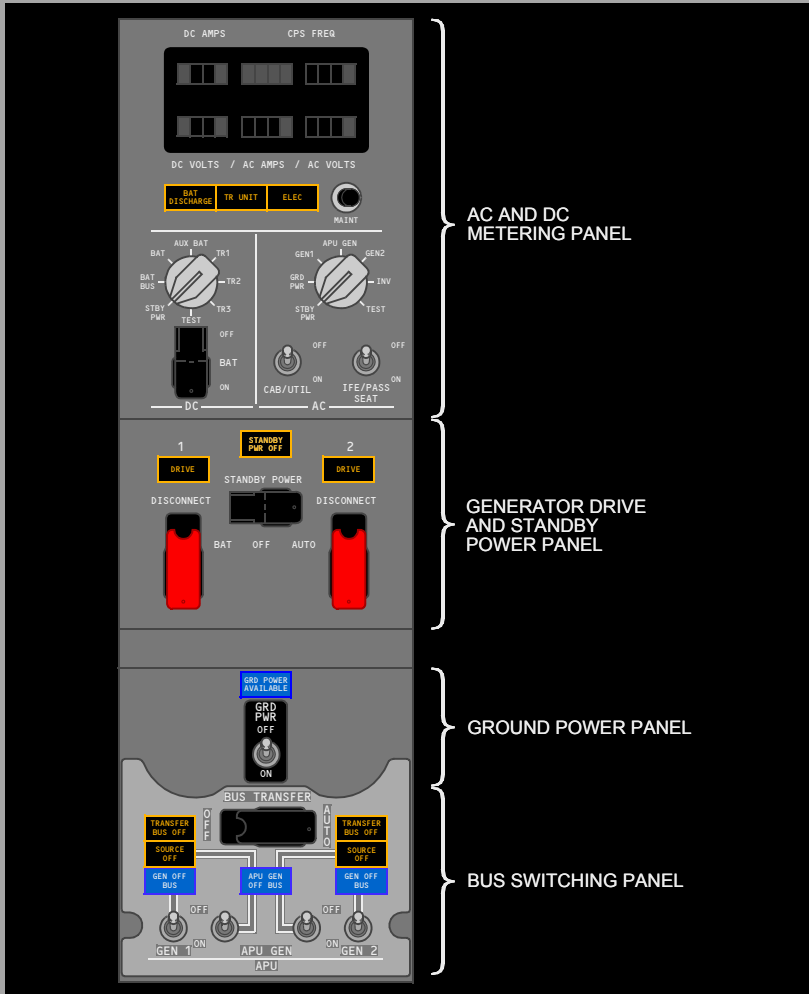

FORWARD OVERHEAD PANEL

AC and DC Metering Panel

[Option - Dual battery with CAB/UTIL switch]

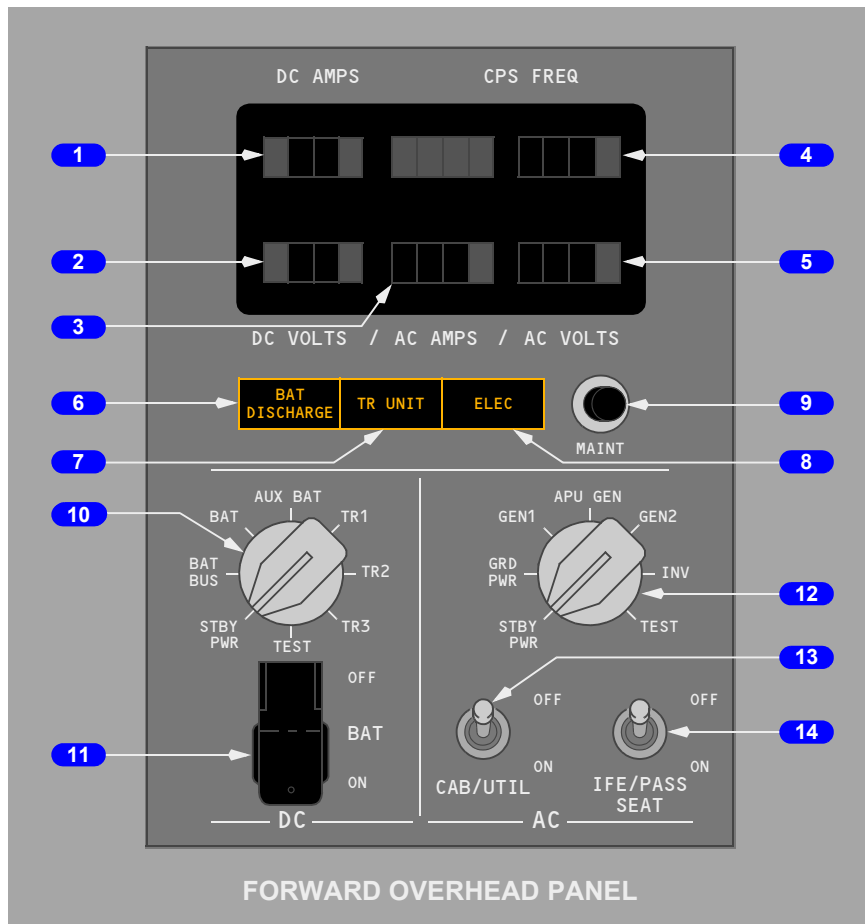

1 DC Ammeter

Indicates amperage of source selected by DC meters selector.

2 DC Voltmeter

Indicates voltage of source selected by DC meters selector.

3 AC Ammeter

Indicates amperage of source selected by AC meters selector.

4 Frequency Meter

Indicates frequency of source selected by AC meters selector.

5 AC Voltmeter

Indicates voltage of source selected by AC meters selector.

6 Battery Discharge (BAT DISCHARGE) Light

Illuminated (amber) – with BAT switch ON, excessive battery discharge detected.

7 TR UNIT Light

Illuminated (amber) –

- on the ground – any TR has failed.
- in flight –
 - TR1 failed; or
 - TR2 and TR3 failed.

8 Electrical (ELEC) Light

Illuminated (amber) – a fault exists in DC power system or standby power system.

Note: Operates only with airplane on ground.

9 Maintenance Test (MAINT) Switch

Used by maintenance.

10 DC Meters Selector

Selects DC source for DC voltmeter and DC ammeter indications.

TEST – used by maintenance.

11 Battery (BAT) Switch

OFF –

- removes power from battery bus and switched hot battery bus when operating with normal power sources available
- removes power from battery bus, switched hot battery bus, DC standby bus, static inverter, and AC standby bus when battery is only power source.

ON (guarded position) –

- provides power to switched hot battery bus
- energizes relays to provide automatic switching of standby electrical system to battery power with loss of normal power.

12 AC Meters Selector

Selects AC source for AC voltmeter, AC ammeter and frequency meter indications

TEST – used by maintenance.

13 CAB/UTIL Switch

OFF – removes electrical power from galley and cabin equipment systems including:

- all 115V AC galley busses

[737-600/700]

- cabin recirculation fan

[737-800/900]

- left & right recirculation fans
- fwd and aft door area heaters
- drain mast heaters
- lavatory water heaters
- logo lights
- potable water compressor
- 115V AC shaver outlets when installed

ON – supplies electrical power to galley and cabin equipment systems.


14 IFE/PASS SEAT Switch

OFF – removes electrical power from installed components of the passenger seats, in-flight entertainment systems, and other power systems including:

- 115V AC audio entertainment equipment
- 115V AC video entertainment equipment
- cabin telephone equipment
- FAX machine
- 28V DC video equipment and passenger seat electronic outlets

ON – supplies electrical power to installed components of the passenger seats, in-flight entertainment systems, and other power systems.

Generator Drive and Standby Power Panel

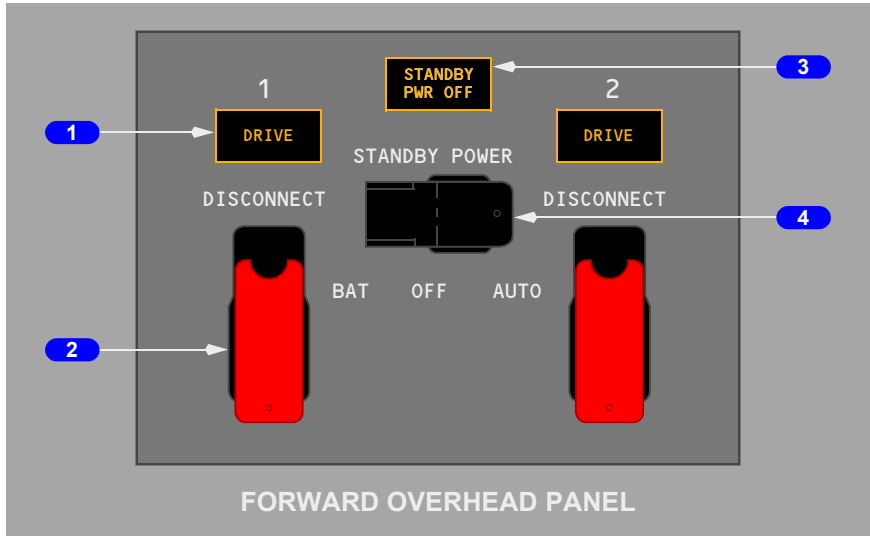

1 Generator Drive (DRIVE) Lights

Illuminated (amber) – Integrated drive generator (IDG) low oil pressure caused by one of the following:

- IDG failure
- engine shutdown
- IDG automatic disconnect due to high oil temperature
- IDG disconnected through generator drive DISCONNECT switch.

2 Generator Drive Disconnect (DISCONNECT) Switches (guarded)

Disconnects IDG if electrical power is available and engine start lever is in IDLE. IDG cannot be reconnected in the air.

3 STANDBY Power Off (PWR OFF) Light

Illuminated (amber) – one or more of the following busses are unpowered:

- AC standby bus
- DC standby bus
- battery bus.

4 STANDBY POWER Switch

AUTO (guarded position) –

- In flight, or on the ground, and AC transfer busses powered:
 - AC standby bus is powered by AC transfer bus 1
 - DC standby bus is powered by TR1, TR2 and TR3
- In flight, or on the ground, loss of all AC power
 - AC standby bus is powered by battery through static inverter
 - DC standby bus is powered by battery
 - Battery bus is powered by battery.


OFF (center position) –

- STANDBY PWR OFF light illuminates
- AC standby bus, static inverter, and DC standby bus are not powered.

BAT (unguarded position) –

- AC standby bus is powered by battery through static inverter
- DC standby bus and battery bus are powered directly by battery.

Ground Power Panel and Bus Switching Panel

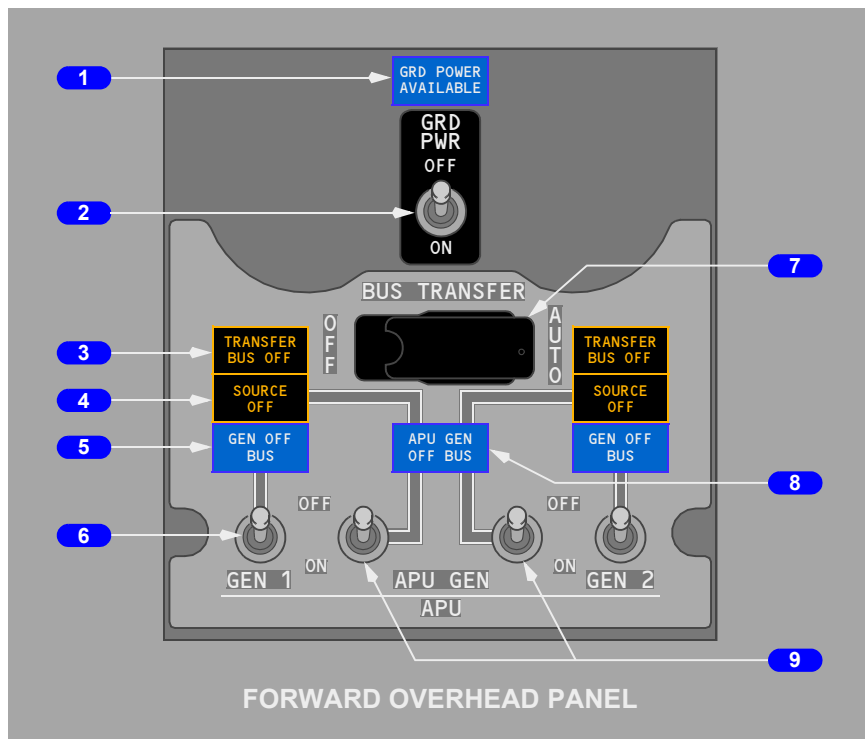

1 Ground Power Available (GRD POWER AVAILABLE) Light

Illuminated (blue) – ground power is connected and meets airplane power quality standards.

2 Ground Power (GRD PWR) Switch

Three position switch, spring-loaded to neutral

OFF – disconnects ground power from AC transfer busses.

ON – if momentarily moved to ON position and ground power is available:

- removes previously connected power from AC transfer busses
- connects ground power to AC transfer busses if power quality is correct.

3 TRANSFER BUS OFF Lights

Illuminated (amber) – related transfer bus is not powered.

4 SOURCE OFF Lights

Illuminated (amber) – no source has been manually selected to power the related transfer bus, or the manually selected source has been disconnected

- if a source has been selected to power the opposite transfer bus, both transfer busses are powered.

5 Generator Off Bus (GEN OFF BUS) Lights

Illuminated (blue) – IDG is not supplying power to the related transfer bus.

6 Generator (GEN) Switches

Three position switch, spring-loaded to neutral.

OFF – disconnects IDG from related AC transfer bus by opening generator circuit breaker.

ON – connects IDG to related AC transfer bus by disconnecting previous power source and closing generator circuit breaker,

7 BUS TRANSFER Switch

AUTO (guarded position) – BTBs operate automatically to maintain power to AC transfer busses from any operating generator or external power

- DC cross tie relay automatically provides normal or isolated operation as required.

OFF – isolates AC transfer bus 1 from AC transfer bus 2 if one IDG is supplying power to both AC transfer busses

- DC cross tie relay opens to isolate DC bus 1 from DC bus 2.

8 APU Generator Off Bus (GEN OFF BUS) Light

Illuminated (blue) – APU is running and not powering a bus.

9 APU Generator (GEN) Switches

Three position switch, spring-loaded to neutral.


OFF –

- APU generator powering both AC transfer busses
 - moving a single APU GEN switch to OFF illuminates related SOURCE OFF light. APU continues to power AC transfer busses
 - subsequently moving other APU GEN switch to OFF disconnects APU generator from tie bus and removes APU power from AC transfer busses
- APU generator powering one AC transfer bus; IDG powering one AC transfer bus
 - moving related APU GEN switch to OFF disconnects APU generator from tie bus and AC transfer bus. IDG powers AC transfer busses.

ON –

- Neither AC transfer bus powered by IDG – moving a single APU GEN switch to ON:
 - connects both AC transfer busses to the APU generator
 - disconnects external power, if connected
 - opposite SOURCE OFF light illuminates until the other APU GEN switch is moved to ON.
- Both AC transfer busses powered by IDGs – moving an APU GEN switch ON:
 - powers the related AC transfer bus from the APU generator
 - other AC transfer bus continues to receive power from the IDG.

Ground Service Switch

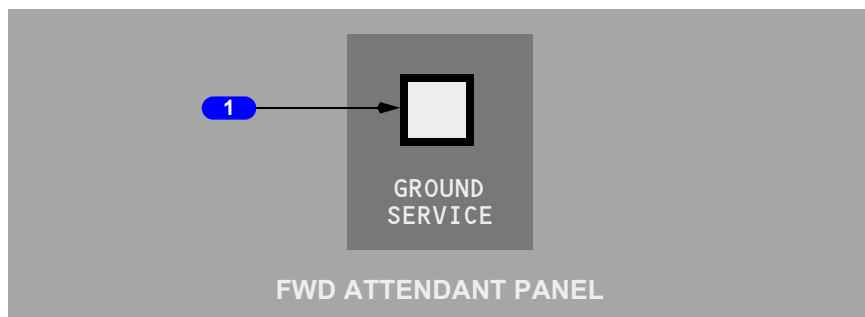

1 GROUND SERVICE Switch

Momentary push-button switch.

Provides manual control of ground service busses. Enables servicing airplane using external power without activating AC transfer busses.

Illuminated (white) –

- ON – connects external power to ground service busses
- OFF – disconnects external power from ground service busses.

Intentionally
Blank

**Electrical
System Description****Chapter 6
Section 20****Introduction****Dual Battery****[Option]**

Primary electrical power is provided by two engine integrated drive generators (IDGs) which supply three-phase, 115 volt, 400 cycle alternating current. Each IDG supplies its own bus system in normal operation and can also supply essential and non-essential loads of the opposite side bus system when one IDG is inoperative. Transformer rectifier (TR) units and the main battery/battery charger supply DC power. The main and auxiliary batteries also provide backup power for the AC and DC standby system. The APU operates a generator and can supply power to both AC transfer busses on the ground or in flight.

There are two basic principles of operation for the 737 electrical system:

- There is no paralleling of the AC sources of power.
- The source of power being connected to a transfer bus automatically disconnects an existing source.

The electrical power system may be categorized into three main divisions: the AC power system, the DC power system, and the standby power system.

Electrical Power Generation**Engine Generators**

Primary power is obtained from two engine IDGs. The IDG maintains a constant generator speed throughout the normal operating range of the engine. An integral electro-mechanical disconnect device provides for complete mechanical isolation of the IDG.

APU Generator

The APU generator can supply power to both AC transfer busses on the ground or in flight. As the only power source, the APU generator can meet electrical power requirements for all ground conditions and most flight conditions.

External Ground Power


An external AC power receptacle located near the nose gear wheel well, on the lower right side of the fuselage, allows the use of an external power source. Status lights on a panel adjacent to the receptacle permit the ground crew to determine if external power is being used. When connected, external power can supply power to both transfer busses.

Ground Service

For ground servicing, a ground service switch is on the forward attendant's panel. The switch provides ground power directly to the AC ground service busses for utility outlets, cabin lighting and the battery charger without powering all airplane electrical busses. The ground service switch is a momentary push button and is overridden when both AC transfer busses are powered.

Electrical Power Schematic

[Option – Dual battery]

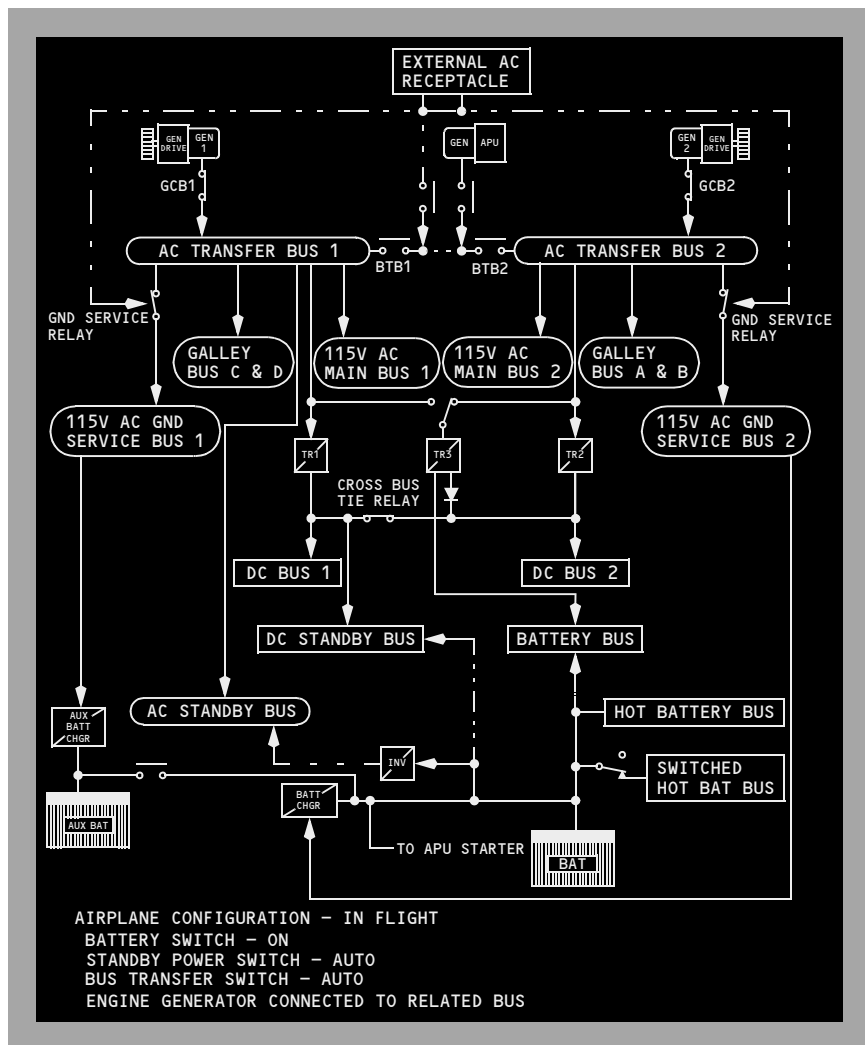

AC Power System

Each AC power system consists of a transfer bus, a main bus, two galley busses, and a ground service bus. Transfer bus 1 also supplies power to the AC standby bus. If the AC source powering either transfer bus fails or is disconnected, the transfer bus can be powered by any available source through the tie bus with the bus tie breakers (BTBs).

With the airplane on the ground and both generator control switches OFF, or with both engines shut down, selecting the GRD PWR switch ON connects external power to both transfer busses. Likewise, selecting either APU GEN switch ON connects APU power to both transfer busses. Whichever source is selected last powers both busses. It is not possible to power one transfer bus with external power and one transfer bus with APU power.

The transfer busses can be powered from the engine generators by momentarily positioning the related generator switch to ON. This closes the related generator circuit breaker (GCB) and connects the generator to the transfer bus. Whenever external power or APU is powering both transfer busses, and engine generator power is applied to its onside transfer bus, external power or APU continues to supply power to the remaining transfer bus.

In flight, each engine generator normally powers its own transfer bus. If an engine generator is no longer supplying power, the BTBs automatically close to allow the other engine generator to supply both transfer busses through the tie bus and BTBs. The APU can power either or both busses through the BTBs.

The system also incorporates an automatic generator on-line feature in case the airplane takes off with the APU powering both transfer busses. If the APU is either shut down or fails, the engine generators are automatically connected to their related transfer busses. This action occurs only once in flight and only under the circumstances described above.

Bus Tie System

Either generator or the APU can supply power to both transfer busses. If the BUS TRANS switch is in the AUTO position and the source powering the transfer bus is disconnected or fails, the source powering the opposite transfer bus automatically picks up the unpowered transfer bus through the BTBs.

Automatic Load Shedding (Engine Generators)

[Option - CAB/UTIL Power Switch]


For single generator operation, the system is designed to shed electrical load incrementally based on actual load sensing. The galleys and main bus on transfer bus 2 are shed first; if an overload is still sensed, the galleys and main bus on transfer bus 1 are shed; if overload still exists, the IFE busses are shed. When configuration changes to more source capacity (two generator operation), automatic load restoration of the main busses, galley busses and IFE busses occurs; manual restoration of galley and main bus power can be attempted by moving the CAB/UTIL Power Switch to OFF, then back ON.

APU Automatic Load Shedding

[Option - CAB/UTIL Power Switch]

In flight, if the APU is the only source of electrical power, all galley busses and main busses are automatically shed. If electrical load still exceeds design limits, both IFE busses are also automatically shed. On the ground, the APU attempts to carry a full electrical load. If an overload condition is sensed, the APU sheds galley busses and main busses until the load is within limits. Manual restoration of galley and main bus power can be attempted by moving the CAB/UTIL Power Switch to OFF, then back ON.

AC Power Schematic

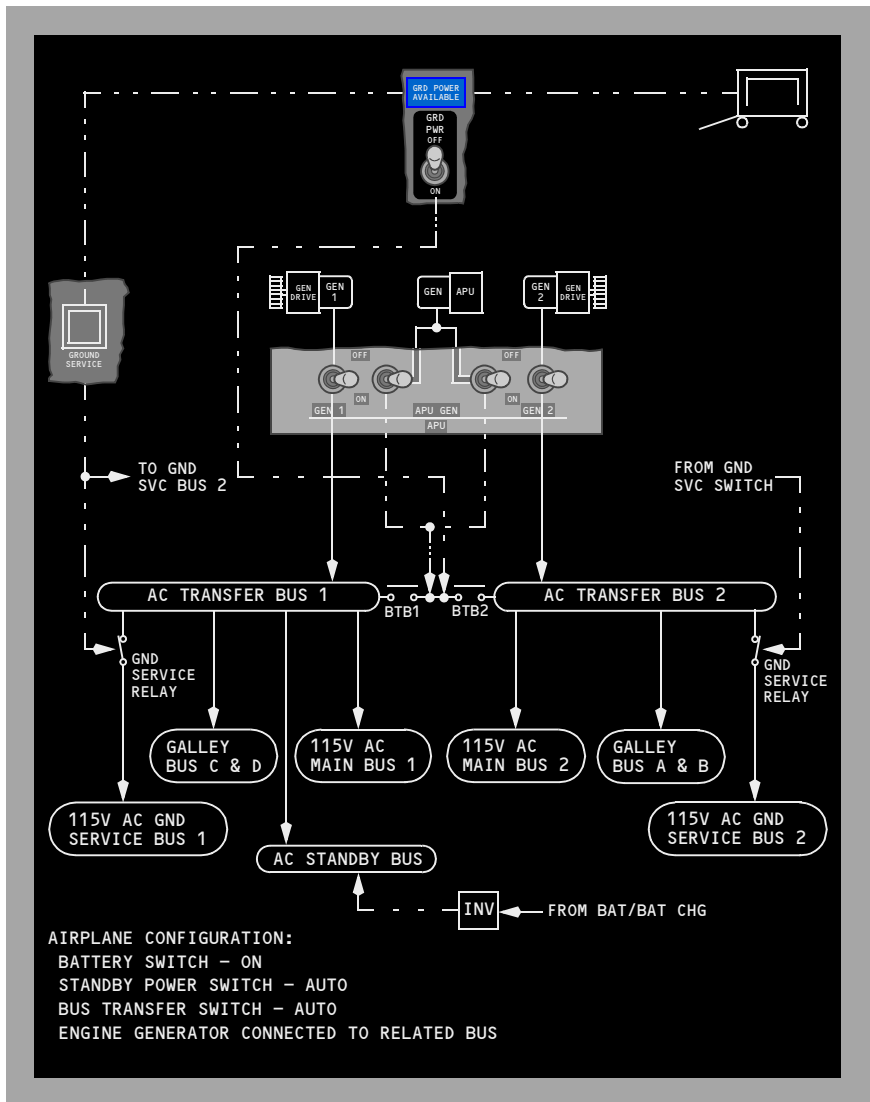

Electrical Power Controls and Monitoring

Generator Drive

The IDGs contain the generator and drive in a common housing, and are lubricated and cooled by a self-contained oil system. An integral electro-mechanical disconnect device provides for complete mechanical isolation of the IDG.

The generator drive (DRIVE) amber caution light is illuminated when low oil is sensed in the IDG. IDG low oil pressure is caused by one of the following:

- IDG failure
- engine shutdown
- IDG automatic disconnect due to high oil temperature
- IDG disconnected through generator drive DISCONNECT switch.

A generator drive disconnect switch is installed. This switch disconnects the generator from the engine in the event of a generator drive malfunction. Reactivation of the generator may be accomplished only on the ground by maintenance personnel.

AC Voltmeter, Ammeter and Frequency Meter

AC voltage and frequency may be read on the AC voltmeter and frequency meter for standby power, ground power, generator No. 1, APU generator, generator No. 2 and the static inverter. Frequency is indicated only when the generator is electrically excited. The voltage regulator automatically controls the generator output voltage.

Current readings for the two engine IDGs and the APU generator may be read on the AC ammeter.

The TEST position is used by maintenance and connects the voltage and frequency meter to the power systems test module for selection of additional reading points.


DC Voltmeter and Ammeter

DC voltage and amperage may be read on the DC voltmeter and ammeter for the battery and each of the three TRs. The standby power and battery bus displays only DC voltage.

The TEST position is used by maintenance.

Electrical Power Controls and Monitoring Schematic

[Option – Dual battery]

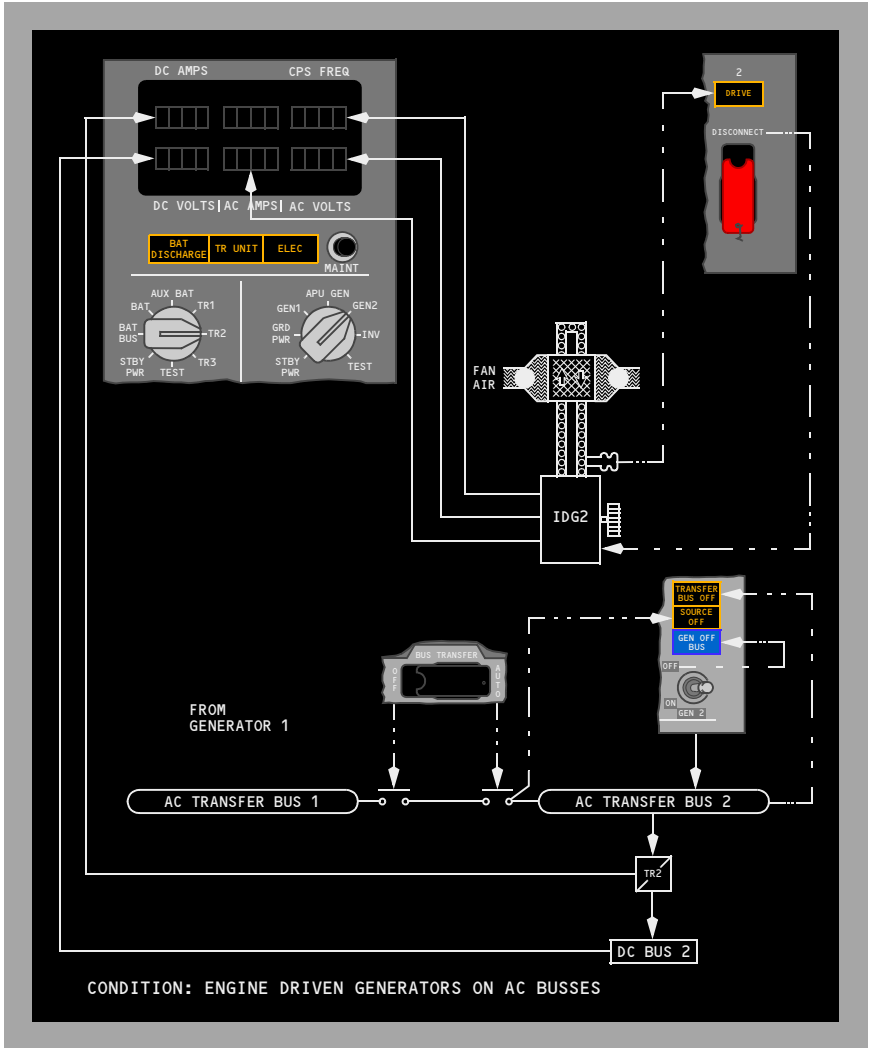

DC Power System

28 volt DC power is supplied by three TR units, which are energized from the AC transfer busses. The battery provides DC power to loads required to be operative when no other source is available.

On the ground, an amber ELEC light comes on to indicate that a fault exists in DC power system or standby power system. The ELEC light is inhibited in flight.

Transformer Rectifier Units

The TRs convert 115 volt AC to 28 volt DC, and are identified as TR1, TR2, and TR3.

TR1 receives AC power from transfer bus 1. TR2 receives AC power from transfer bus 2. TR3 normally receives AC power from transfer bus 2 and has a backup source of AC power from transfer bus 1. Any two TRs are capable of supplying the total connected load.

Under normal conditions, DC bus 1, DC bus 2, and the DC standby bus are connected via the cross bus tie relay. In this condition, TR1 and TR2 are each powering DC bus 1, DC bus 2, and the DC standby bus. TR3 powers the battery bus and serves as a backup power source for TR1 and TR2.

The cross bus tie relay automatically opens, isolating DC bus 1 from DC bus 2, under the following conditions:

- At glide slope capture during a flight director or autopilot ILS approach. This isolates the DC busses during approach to prevent a single failure from affecting both navigation receivers and flight control computers
- Bus transfer switch positioned to OFF.

In-flight, an amber TR UNIT light illuminates if TR1, or TR2 and TR3 has failed. On the ground, any TR fault causes the light to illuminate.

Battery Power

Dual Battery

[Option]

Two 24 volt nickel-cadmium batteries, main and auxiliary, are located in the electronics compartment. The batteries can supply part of the DC system. The auxiliary battery operates in parallel with the main battery when the battery is powering the standby system. At all other times, the auxiliary battery is isolated from the power distribution system. Battery charging is automatically controlled. Two fully charged batteries have sufficient capacity to provide standby power for a minimum of 60 minutes. Battery voltage range is 22–30 volts.

DC busses powered from the battery following a loss of both generators are:

- battery bus
- DC standby bus
- hot battery bus
- switched hot battery bus.

The switched hot battery bus is powered whenever the battery switch is ON.

The hot battery bus is always connected to the battery. There is no switch in this circuit. The battery must be above minimum voltage to operate units supplied by this bus. An amber BAT DISCHARGE light comes on when excessive battery discharge is detected.

Battery Charger Transformer/Rectifier

Dual Battery

[Option]


The purpose of the battery chargers is to restore and maintain the batteries at full electrical power. The main battery charger is powered through AC ground service bus 2. The auxiliary battery charger is powered through AC ground service bus 1.

The battery chargers provide a voltage output tailored to maximize the battery charge. Following completion of the primary charge cycle, the main battery charger reverts to a constant voltage TR mode. In the TR mode, it powers loads connected to the hot battery bus and the switched hot battery bus. The main battery charger TR also powers the battery bus if TR3 fails. With loss of AC transfer bus 1 or the source of power to DC bus 1, the AC and DC standby busses are powered by the main and auxiliary battery/battery chargers.

The auxiliary battery charger and battery are isolated from the power distribution system under normal operation. When the main battery is powering the standby system, the auxiliary battery is connected to operate in parallel with the main battery.

DC Power System Schematic

[Option – Dual battery]

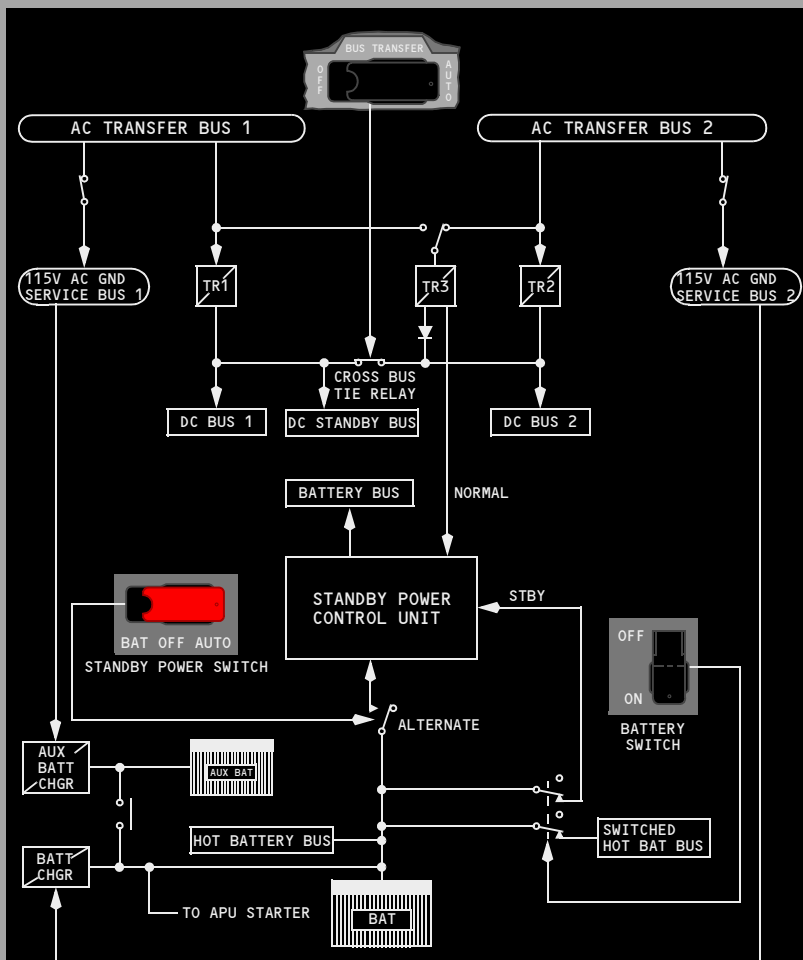

AIRPLANE CONFIGURATION - IN FLIGHT

BATTERY SWITCH - ON

STANDBY POWER SWITCH - AUTO

BUS TRANSFER SWITCH - AUTO

ENGINE GENERATOR CONNECTED TO RELATED BUS

Standby Power System

Normal Operation

The standby system provides 115V AC and 24V DC power to essential systems in the event of loss of all engine or APU-driven AC power. The standby power system consists of:

- static inverter
- AC standby bus
- DC standby bus
- battery bus
- hot battery bus
- switched hot battery bus
- main battery

[Option - Dual battery]

- auxiliary battery.

During normal operation the guarded standby power switch is in AUTO and the battery switch is ON. This configuration provides alternate power sources in case of partial power loss as well as complete transfer to battery power if all normal power is lost. Under normal conditions the AC standby bus is powered from AC transfer bus 1. The DC standby bus is powered by TR1, TR2, and TR3; the battery bus is powered by TR3; the hot battery bus and switched hot battery bus are powered by the battery/battery charger.

Alternate Operation

Dual Battery

[Option]

The alternate power sources for standby power are the main battery and auxiliary battery. With the standby power switch in the AUTO position, the loss of all engine or APU electrical power causes the batteries to power the standby loads, both in the air and on the ground. The AC standby bus is powered from the batteries via the static inverter. The DC standby bus, battery bus, hot battery bus, and switched hot battery bus are powered directly from the batteries.

The standby power switch provides for automatic or manual control of power to the standby buses.

In the AUTO position, automatic switching from normal to alternate power occurs if power from either AC transfer bus 1 or DC bus 1 is lost.

Positioning the switch to BAT overrides automatic switching and places the AC standby bus, DC standby bus, and battery bus on battery power. The battery switch may be ON or OFF. If the battery switch is OFF, the switched hot battery bus is not powered.


Positioning the standby power switch to OFF de-energizes both the AC standby bus and the DC standby bus and illuminates the STANDBY PWR OFF light.

Static Inverter

The static inverter converts 24 volt DC power from the battery to 115V AC power to supply the AC standby bus during the loss of normal electrical power. The power supply to the inverter is controlled by the standby power switch and the battery switch on the overhead panel.

Standby Power System Schematic

[Option – Dual battery]

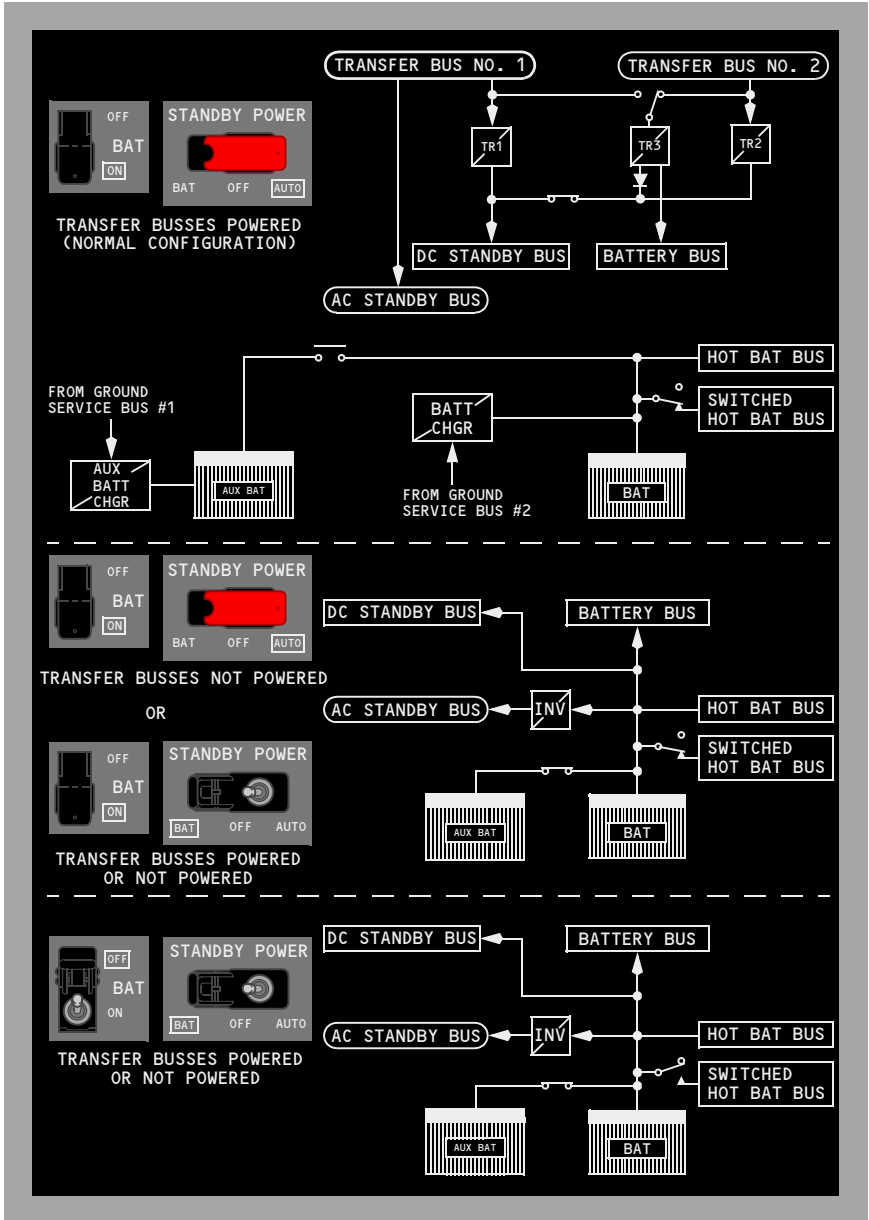

All Generators Inoperative

The following list identifies the significant equipment that operates when the main battery and the auxiliary battery are the only source of electrical power.

Airplane General

- standby compass light
- white dome lights
- emergency instrument flood lights
- flight crew oxygen
- passenger oxygen

[Option]

- standby forward airstair interior/exterior operation

Air Systems

- A/C pack valves
- BLEED TRIP OFF lights
- manual pressurization control
- altitude warning horn

[737-600/700]

- PACK TRIP OFF lights

[737-800/900]

- PACK lights

Anti-Ice

[Option]

- Captain's pitot probe heat

Communications

- flight interphone system
- service interphone system
- passenger address system
- VHF No. 1

Electrical

- STANDBY POWER OFF light

Engines, APU

- upper display unit
N1, N2, fuel flow, EGT, fuel quantity, oil pressure, oil temperature, oil quantity
- thrust reversers
- starter valves

- right igniters
- APU operation (start attempts not recommended above 25,000 feet)

Fire Protection

- APU and engine fire extinguisher bottles
- APU and engine fire detection system
- Cargo fire extinguisher bottles

Flight Instruments

[Option PFD/ND]

- Captain's outboard display unit with primary flight display.
- clocks
- left EFIS control panel
- Standby instruments
radio magnetic indicator (RMI), standby airspeed/altimeter, standby attitude indicator, standby magnetic compass

Flight Management, Navigation

- left FMC
- left CDU
- heading/track indications
- VHF NAV No. 1
- ILS No. 1
- left IRS
- left GPS
- marker beacon

[Option]

- ADF No. 1

[Option]

- transponder No. 1

[Option]

- DME No. 1

Fuel

- crossfeed valve
- engine fuel shutoff valves
- spar fuel shutoff valve
- FUEL VALVE CLOSED lights
- fuel quantity indicators

Hydraulic Power

- engine hydraulic shutoff valves
- standby rudder shutoff valves

Landing Gear


- inboard antiskid system
- ANTISKID INOP light
- parking brake
- air/ground system
- landing gear indicator lights

Warnings


- stall warning system
- aural warnings
- master caution light recall

Basic Equipment Operating – Captain Instrument Panel

The standby power system utilizes the battery as a source of power to supply the below depicted flight instruments. All of the Captain's instruments that are powered by standby power are integrally lighted on standby power

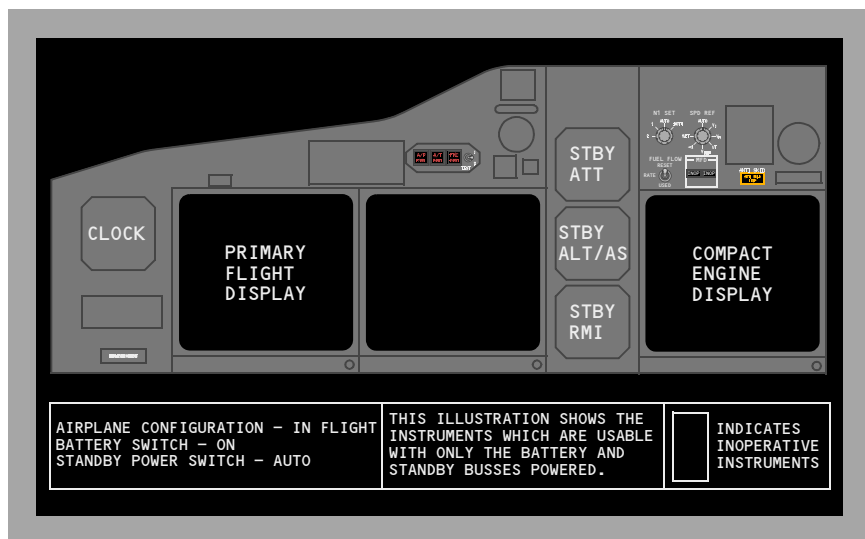

Basic Equipment Operating – First Officer Instrument Panel

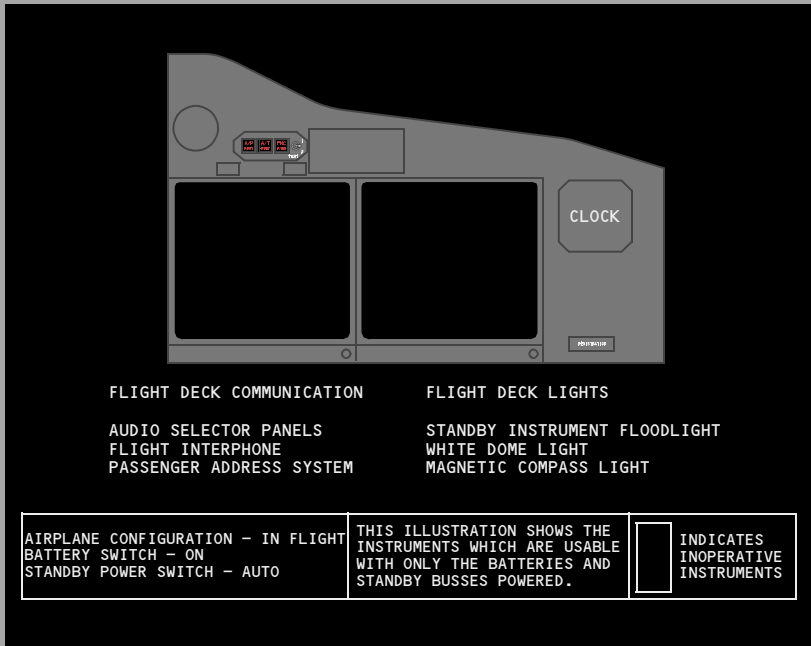

Intentionally
Blank

Engines, APU**Chapter 7****Table of Contents****Section 0**


Over/Under – Displays	7.11
Primary Engine Indications	7.11.1
Total Air Temperature, Thrust Mode Display, Selected Temperature and Autothrottle Limit	7.11.2
N1 Indications	7.11.4
Thrust Reverser Indications	7.11.6
Thermal Anti-Ice Indication	7.11.7
EGT Indications	7.11.7
Engine Fail Alert	7.11.8
Crew Alerts	7.11.9
Secondary Engine Indications	7.11.11
N2 Indications	7.11.12
Crossbleed Start Indication	7.11.12
Fuel Flow/Fuel Used Indications	7.11.13
Oil Pressure Indications	7.11.14
Oil Temperature Indications	7.11.15
Oil Quantity Indications	7.11.15
Engine Vibration Indications	7.11.16
Compact Engine Displays	7.11.17
General Controls and Indicators	7.15
Engine Start Switches	7.15.1
Engine Display Control Panel	7.15.2
Engine Panel	7.15.3
Engine Controls	7.15.5
APU	7.15.6
Engine System Description	7.20
Introduction	7.20.1
Engine Indications	7.20.1
Primary Engine Indications	7.20.1
Secondary Engine Indications	7.20.1

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Normal Display Format	7.20.2
Compact Display	7.20.3
Electronic Engine Control (EEC)	7.20.4
EEC Normal Mode	7.20.4
EEC Alternate Mode	7.20.5
Structural Limit Protection	7.20.5
Idle Operation	7.20.5
Power Plant Schematic	7.20.6
Engine Fuel System	7.20.7
Engine Oil System	7.20.7
Engine Fuel and Oil System Schematic	7.20.8
Engine Start System	7.20.9
Abnormal Start Protection (Ground Starts Only)	7.20.9
Engine Ignition System	7.20.10
Inflight Starting	7.20.10
Engine Start and Ignition System Schematic	7.20.11
Thrust Reverser	7.20.12
Thrust Reverser Schematic	7.20.14
APU System Description	7.30
Introduction	7.30.1
APU Location	7.30.1
APU Operation	7.30.1
APU Fuel Supply	7.30.2
APU Engine and Cooling Air	7.30.2
Electrical Requirements for APU Operation	7.30.2
APU Start	7.30.3
APU Shutdown	7.30.3
Electronic Control Unit (ECU)	7.30.3
APU Automatic Load Shedding	7.30.4


Engines, APU
Over/Under – Displays**Chapter 7**
Section 11**Primary Engine Indications**

[Option - Over/Under display, lbs]

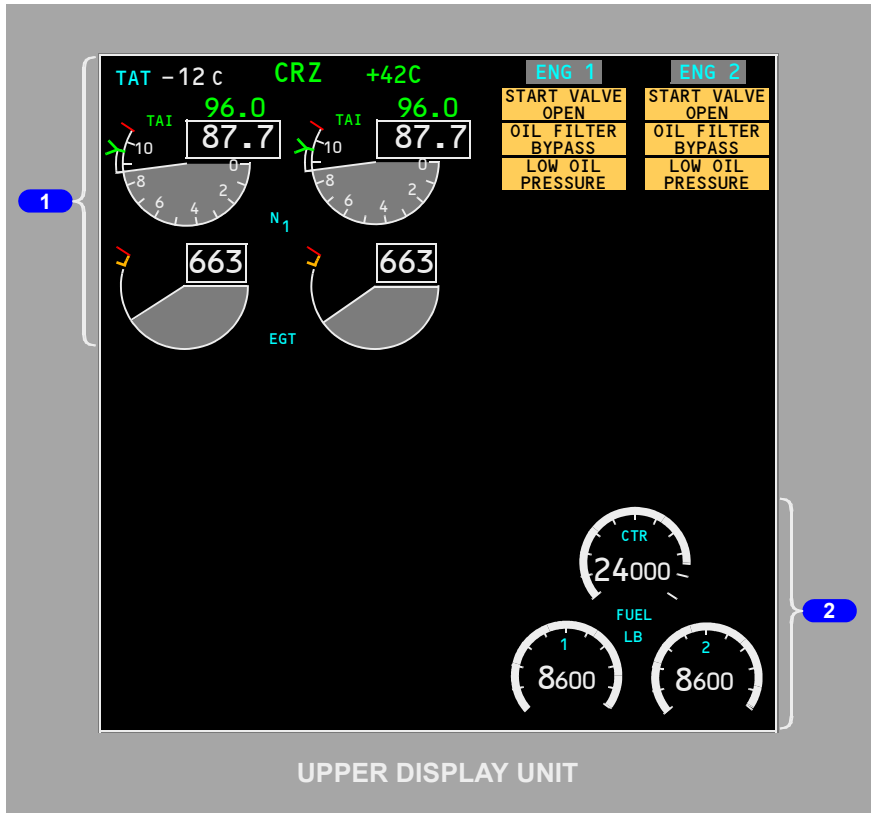**1 Primary Engine Indications****2 Fuel Quantity Indications**

Refer to Chapter 12, Fuel

Total Air Temperature, Thrust Mode Display, Selected Temperature and Autothrottle Limit

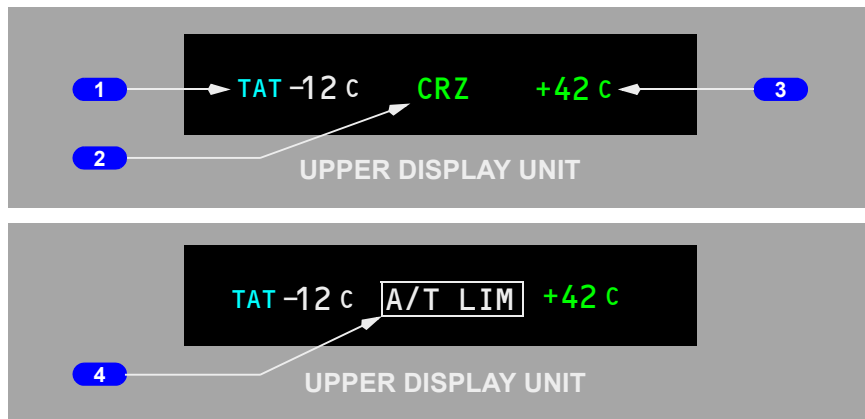

1 Total Air Temperature (TAT) Indication

Displayed (label – cyan, temp – white) – total air temperature (degrees C).

2 Thrust Mode Display

Displayed (green) – the active N1 limit reference mode.

With N1 Set Outer Knob (on engine display control panel) in AUTO, active N1 limit is displayed by reference N1 bugs.

With N1 Set Outer Knob (on engine display control panel) in either 1, 2 or BOTH (other than AUTO), the thrust mode display annunciation is MAN.

Active N1 limit is normally calculated by FMC.

[Option - without double derate]

Thrust mode display annunciations are:

- R-TO – reduced takeoff
- R-CLB – reduced climb
- TO – takeoff
- CLB – climb
- CRZ – cruise
- G/A – go-around
- CON – continuous
- – – – – FMC not computing thrust limit.

Note: R-TO does not indicate the type of reduced takeoff. The N1 limit may be reduced due to the entry of an assumed temperature, a takeoff thrust derate or a combination of both assumed temperature and takeoff thrust derate.

[Option - with double derate]

Thrust mode display annunciations are:

- TO – takeoff
- TO 1 – derated takeoff one
- TO 2 – derated takeoff two
- D-TO – assumed temperature reduced thrust takeoff
- D-TO 1 – derate one and assumed temperature reduced thrust takeoff
- D-TO 2 – derate two and assumed temperature reduced thrust takeoff
- CLB – climb
- CLB 1 – derated climb one
- CLB 2 – derated climb two
- CRZ – cruise
- G/A – go-around
- CON – continuous
- — – FMC not computing thrust limit.

3 Selected Temperature

Displayed (green) – selected assumed temperature (degrees C) for reduced thrust takeoff N1.

Repeats data selected on TAKEOFF REF page.


4 Autothrottle Limit (A/T LIM) Indication

Illuminated (white) – The FMC is not providing the A/T system with N1 limit values. The A/T is using a degraded N1 thrust limit from the related EEC.


Replaces thrust mode display annunciation when illuminated.

N1 Indications

[Option - without Double Derate]

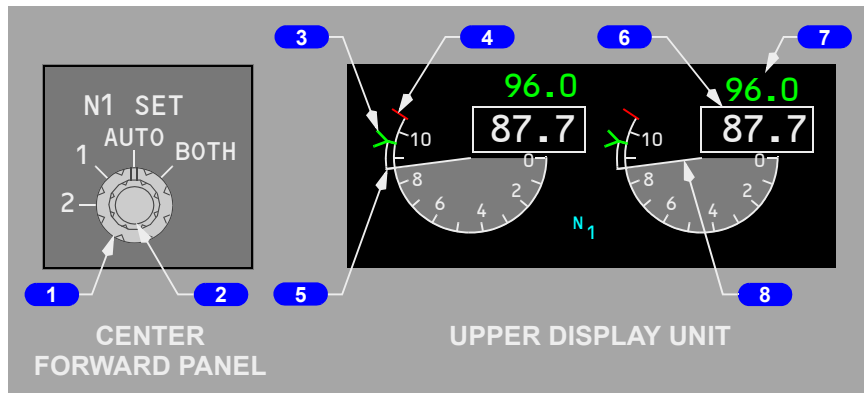

[Option - with Double Derate]

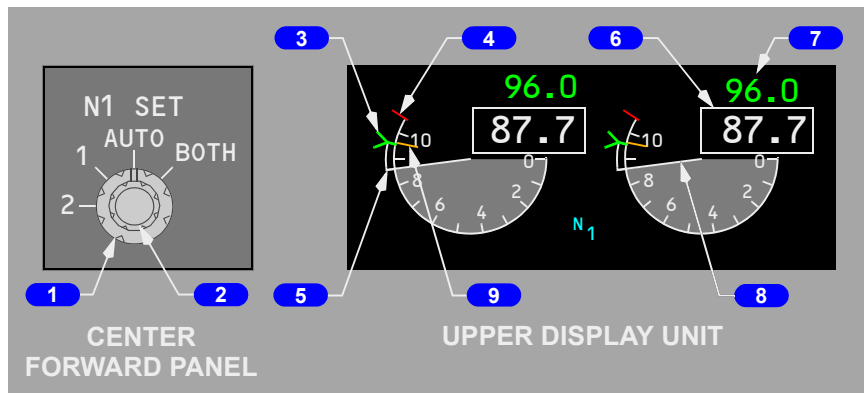

1 N1 SET Outer Knob

AUTO –

- both reference N1 bugs set by FMC based on N1 limit page and takeoff reference page
- displays reference N1 bugs at active N1 limit for A/T.

BOTH –

- both reference N1 bugs and readouts manually set by turning N1 SET inner knob
- has no effect on A/T operation.

1 or 2 –

- respective N1 reference bug and readout manually set by turning N1 SET inner knob
- has no effect on A/T operation.

2 N1 SET Inner Knob (spring-loaded to center)

Rotate – positions reference N1 bug(s) and readouts when N1 SET outer knob is set to BOTH, 1, or 2.

3 Reference N1 Bugs

Displayed (green) – with N1 SET outer knob in AUTO, 1, 2 or BOTH position.
Position corresponds to digital value on the Reference N1 Readout.

4 N1 Redlines

Displayed (red) – N1% RPM operating limit

5 N1 Command Sectors

Displayed (white) – momentary difference between actual N1 and value commanded by thrust lever position.

6 N1 RPM Readouts (digital)

Displayed (white) – normal operating range.

Displayed (red) –

- operating limit exceeded
- on ground after engine shutdown, red box indicates an inflight exceedance has occurred.

7 Reference N1 Readouts

Displayed (green) –

- manually set N1% RPM when N1 SET outer knob is in BOTH, 1, or 2 position
- – – – – when N1 SET outer knob is in AUTO position and FMC source invalid.

[Option - without Double Derate]
BBJ, BBJ3

- blank when N1 SET outer knob is in AUTO position

[Option - with Double Derate]

- when N1 SET outer knob is in AUTO position, may indicate fixed derate, assumed temperature derate, or a combination of fixed and assumed temperature derate

Not Displayed when Reverse Thrust is selected.

8 N1 RPM Indications

Displays N1% RPM:

- displayed (white) – normal operating range
- displayed (red) – operating limit exceeded.

9 N1 Maximum Bug


[Option - with Double Derate]

Displayed (amber) –

- N1 value for full rated thrust
- computed by the EEC through all phases of flight.
- upper limit for autothrottle operation.

Not Displayed when Reverse Thrust is selected.

Thrust Reverser Indications

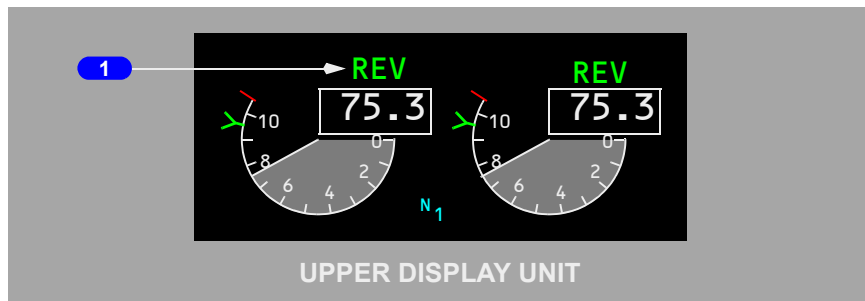


1 Thrust Reverser (REV) Indications

Displayed (amber) – thrust reverser is moved from stowed position.

Displayed (green) – thrust reverser is deployed.

Thermal Anti–Ice Indication

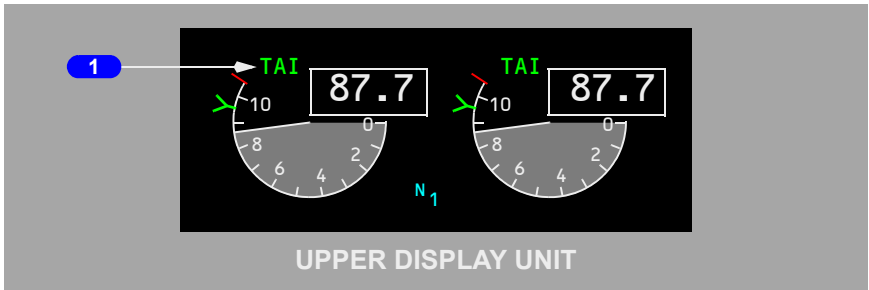


1 Thermal Anti–Ice (TAI) Indications

Displayed (green) – cowl anti–ice valve(s) open.

Displayed (amber) – cowl anti–ice valve is not in position indicated by related engine anti–ice switch.

EGT Indications

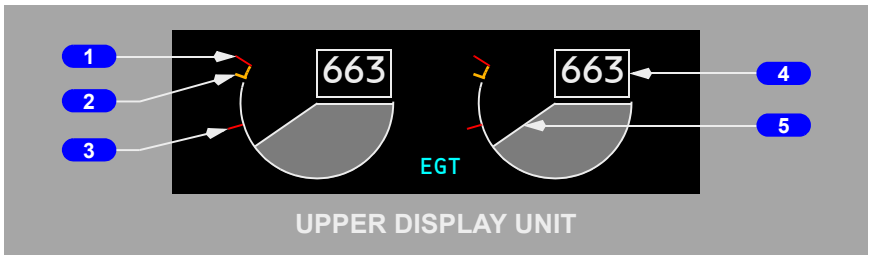

1 Exhaust Gas Temperature (EGT) Redlines

Displayed (red) – maximum takeoff EGT limit.

2 Exhaust Gas Temperature (EGT) Amber Bands

Displayed (amber) – lower end of band displays maximum continuous EGT limit.

3 Exhaust Gas Temperature (EGT) Start Limit Lines

Displayed (red) – until the engine achieves stabilized idle (approximately 59% N₂).

4 Exhaust Gas Temperature (EGT) Readouts (digital)

Displayed (white) – normal operating range (degrees C)

[Option - Color change inhibit 10 minutes]

Displayed (amber) – maximum continuous limit exceeded

- Color change inhibited for up to 5 minutes during takeoff or go-around (normal operation)
- color change inhibited for up to 10 minutes during takeoff or go-around (when an engine out condition occurs within the first 5 minutes of the inhibit)

Displayed (red) – maximum takeoff limit or start limit exceeded

On ground, after both engines are shut down, red box indicates an exceedance has occurred

Displayed (white-blinking) EEC senses conditions that may lead to hot start or stall during ground starting. Current versions of EEC software will automatically cut fuel for an impending hot start or stall during ground starting.

5 Exhaust Gas Temperature (EGT) Indications

Displayed (white) – normal operating range.


[Option - Color change inhibit 10 minutes]

Displayed (amber) – maximum continuous limit exceeded

- color change inhibited for up to 5 minutes during takeoff or go-around (normal operation)
- color change inhibited for up to 10 minutes during takeoff or go-around (when an engine out condition occurs within the first 5 minutes of the inhibit)

Displayed (red) – maximum takeoff limit or start limit exceeded.

Engine Fail Alert

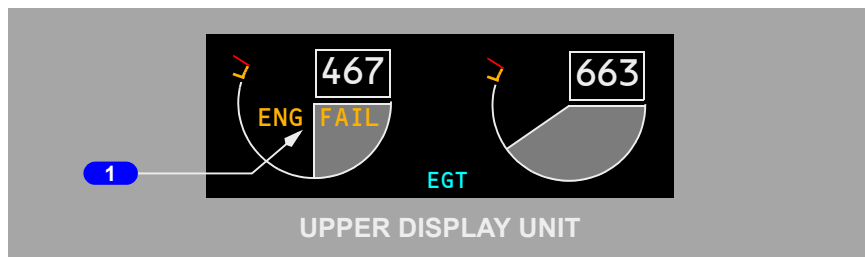

1 Engine Fail (ENG FAIL) Alert


Displayed (amber) –

- engine operating below sustainable idle (less than 50% N2); and
- engine start lever in IDLE position.

Alert remains until –

- engine recovers; or
- start lever moved to CUTOFF; or
- engine fire warning switch pulled.

Crew Alerts

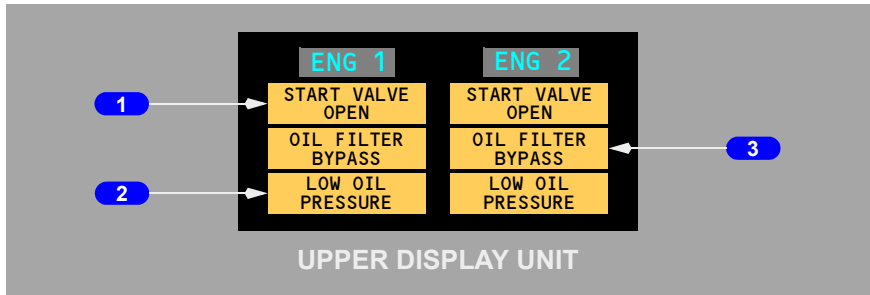

1 START VALVE OPEN Alert

Illuminated (amber) –

- steady – respective engine start valve open and air is supplied to starter
- blinking – uncommanded opening of start valve. Alert is displayed and solid amber boxes are displayed in unannunciated positions for that engine. All three boxes blink for ten seconds, then alert remains on steady and solid amber boxes are removed (see Note).

2 LOW OIL PRESSURE Alert

Illuminated (amber) –

- steady – oil pressure at or below red line
- blinking – with a condition of low oil pressure. Alert is displayed and solid amber boxes are displayed in unannunciated positions for that engine. All three boxes blink for ten seconds, then alert remains on steady and solid amber boxes are removed (see Note).

3 OIL FILTER BYPASS Alert

Illuminated (amber) –


- steady – indicates an impending bypass of scavenge oil filter
- blinking – with an impending bypass. Alert is displayed and solid amber boxes are displayed in unannunciated positions for that engine. All three boxes blink for ten seconds, then alert remains on steady and solid amber boxes are removed (see Note).

Note: Blinking is inhibited:

- during takeoff from 80 knots to 400 feet RA, or 30 seconds after reaching 80 knots, whichever occurs first
- during landing below 200 feet RA until 30 seconds after touchdown
- during periods when blinking is inhibited, alerts illuminate steady.

Secondary Engine Indications

[Option - Over/Under display, lbs]

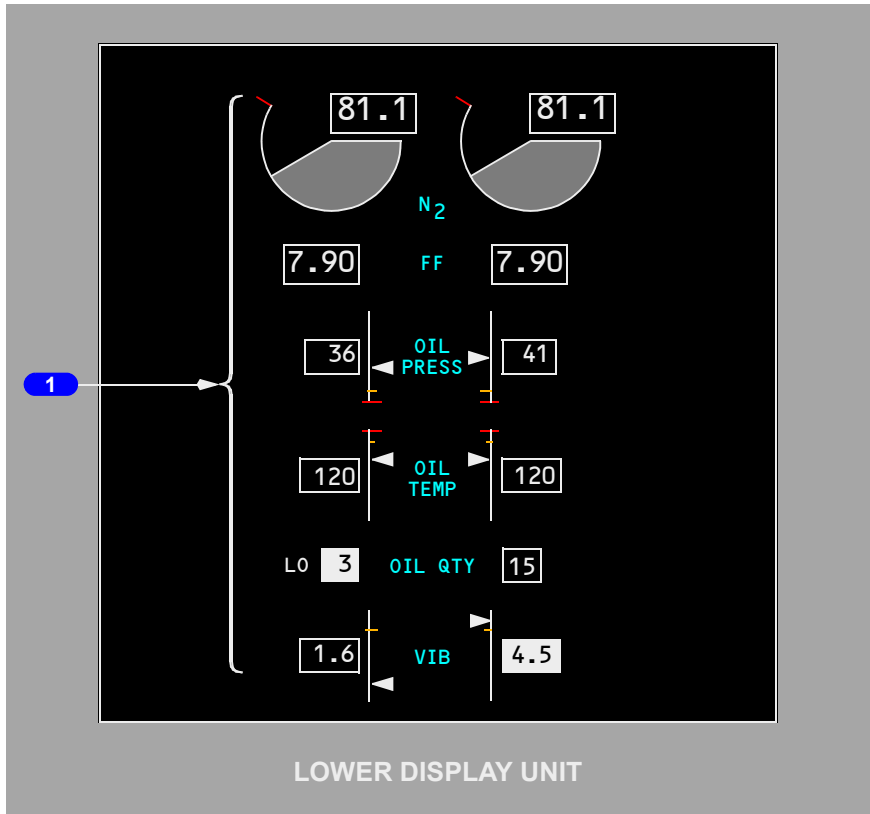


1 Secondary Engine Indications

Secondary engine indications are displayed:

- when CDS initially receives power
- when selected by the Multi-Function Display (MFD)
- in flight when an engine start lever moved to CUTOFF
- in flight when an engine fails
- when a secondary engine parameter exceeds normal operating range.

N2 Indications

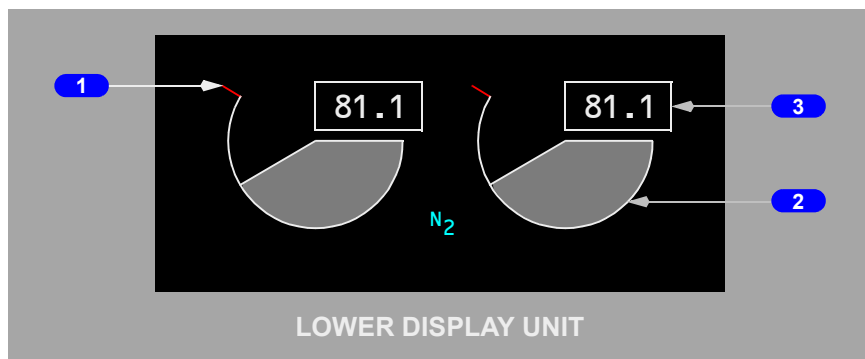

1 N2 Redlines

Displayed (red) – N2% RPM operating limit.

2 N2 RPM Indications

Displays N2% RPM

- displayed (white) – normal operating range
- displayed (red) – operating limit exceeded.


3 N2 Readouts (digital)

Displayed (white) – normal operating range.

Displayed (red) –

- operating limit exceeded
- on ground, after engine shutdown, red box indicates an inflight exceedance has occurred.

Crossbleed Start Indication

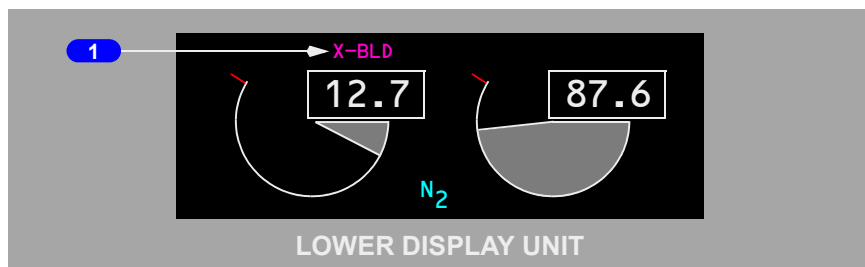


1 Crossbleed Start (X-BLD) Indication

Displayed (magenta) – crossbled air recommended for inflight start.

Displayed when airspeed is less than required for a windmilling start.

Fuel Flow/Fuel Used Indications

[Option - lbs]

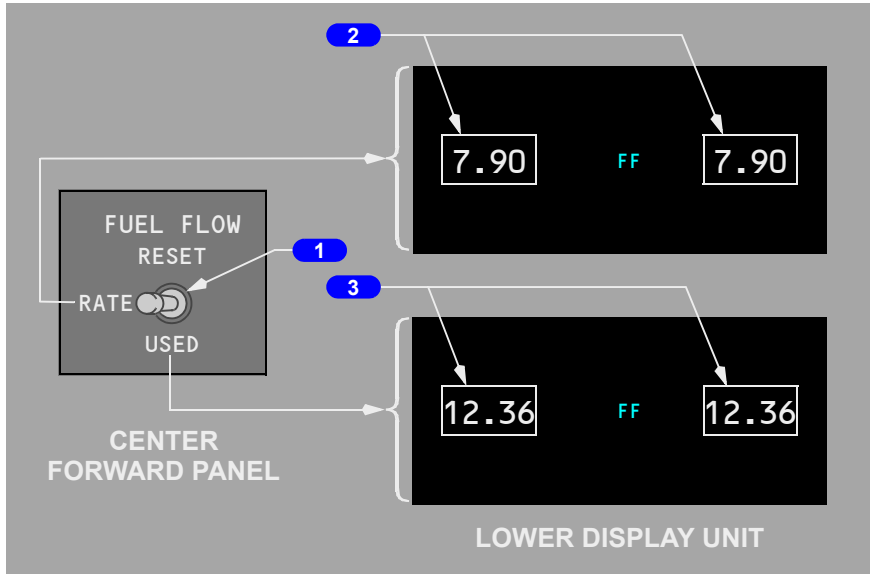

1 FUEL FLOW Switch (spring-loaded to RATE)

RATE – displays fuel flow to engine.

USED –

- displays fuel used since last reset
- after 10 seconds, display automatically reverts to fuel flow.

RESET –

- resets fuel used to zero
- displays fuel used for 1 second, decreases to zero, then displays fuel flow.

2 Fuel Flow (FF) Readout (digital)


[Option - lbs]

Displayed (white) – fuel flow to engine with FUEL FLOW switch in RATE position (pounds per hour x 1000).

3 Fuel Used Readout (digital)

Displayed (white) – when FUEL FLOW switch moved to USED or RESET.

Oil Pressure Indications

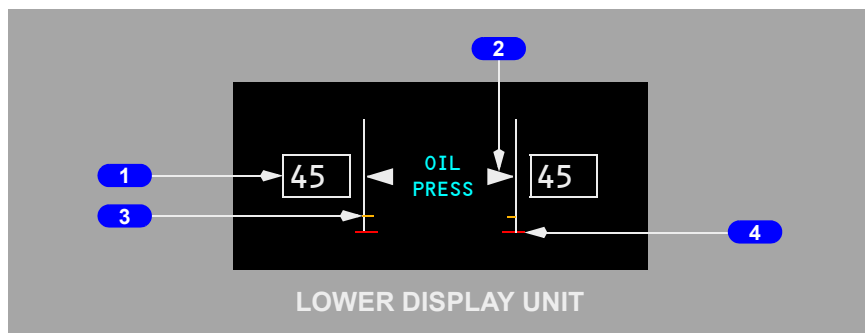

1 Oil Pressure (OIL PRESS) Readout

Displays engine oil pressure (psi)

- displayed (white) – normal operating range
- displayed (amber) – caution range
- displayed (red) – operating limit reached.

2 Oil Pressure (OIL PRESS) Pointer

Displays engine oil pressure:

- displayed (white) – normal operating range
- displayed (amber) – caution range reached
- displayed (red) – operating limit reached.

3 Low Oil Pressure (OIL PRESS) Amber Band


Displayed (amber) – low oil pressure caution range beginning at red line.:

- variable depending on N2% RPM above 65% N2
- amber band not displayed below 65% N2.

4 Low Oil Pressure (OIL PRESS) Redline

Displayed (red) – oil pressure operating limit.

Oil Temperature Indications

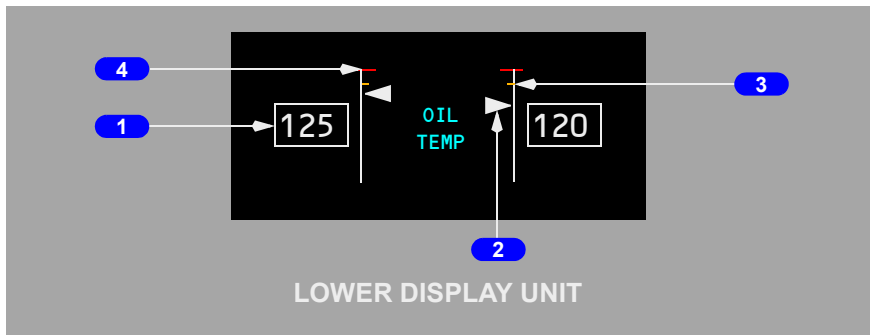

1 Oil Temperature (OIL TEMP) Readout

Displays oil temperature (degrees C):

- displayed (white) – normal operating range
- displayed (amber) – caution range reached
- displayed (red) – operating limit reached.

2 Oil Temperature (OIL TEMP) Pointer

Displays oil temperature (degrees C):

- displayed (white) – normal operating range
- displayed (amber) – caution range reached
- displayed (red) – operating limit reached.


3 High Oil Temperature (OIL TEMP) Amber Band

Displayed (amber) – oil temperature caution range.

4 High Oil Temperature (OIL TEMP) Redline

Displayed (red) – oil temperature operating limit.

Oil Quantity Indications

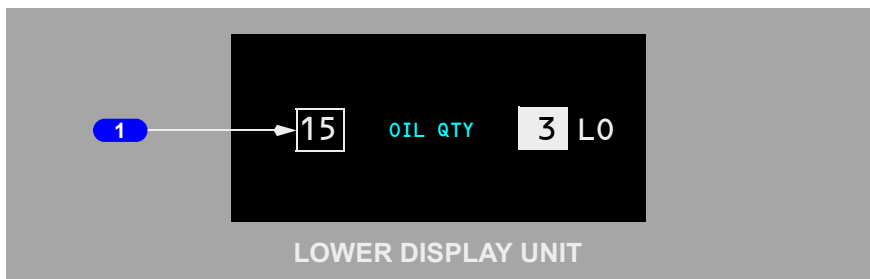

1 Oil Quantity (OIL QTY) Readout

[Option - quarts]


Displays usable oil quantity in quarts.

Video is reversed and LO (white) displayed for low oil quantity.

Note: Indicated oil quantity may decrease significantly during engine start, takeoff and climb out. If this occurs, engine operation is not impacted and the correct oil quantity should be indicated during level flight.

Note: An oil quantity indication as low as zero is normal if windmilling N2 RPM is below approximately 8%.

Engine Vibration Indications

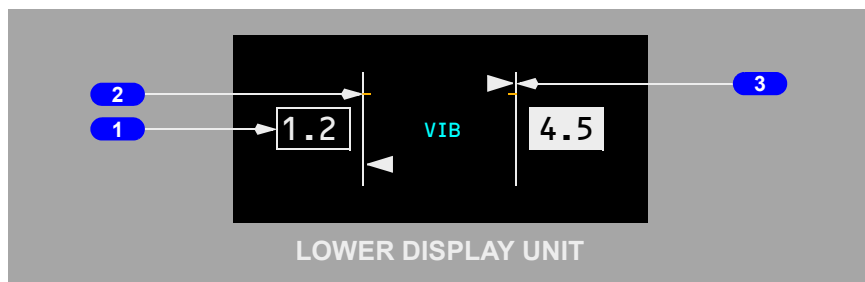

1 Vibration (VIB) Readout

Displayed (white) – engine vibration level.

Video is reversed for high vibration.

2 High Limit

Displays tick mark and thick line.


3 Vibration (VIB) Pointer

Displayed (white) – engine vibration level.


Compact Engine Displays

The following changes occur to the secondary engine display in the compact engine displays.

[Option - lbs]

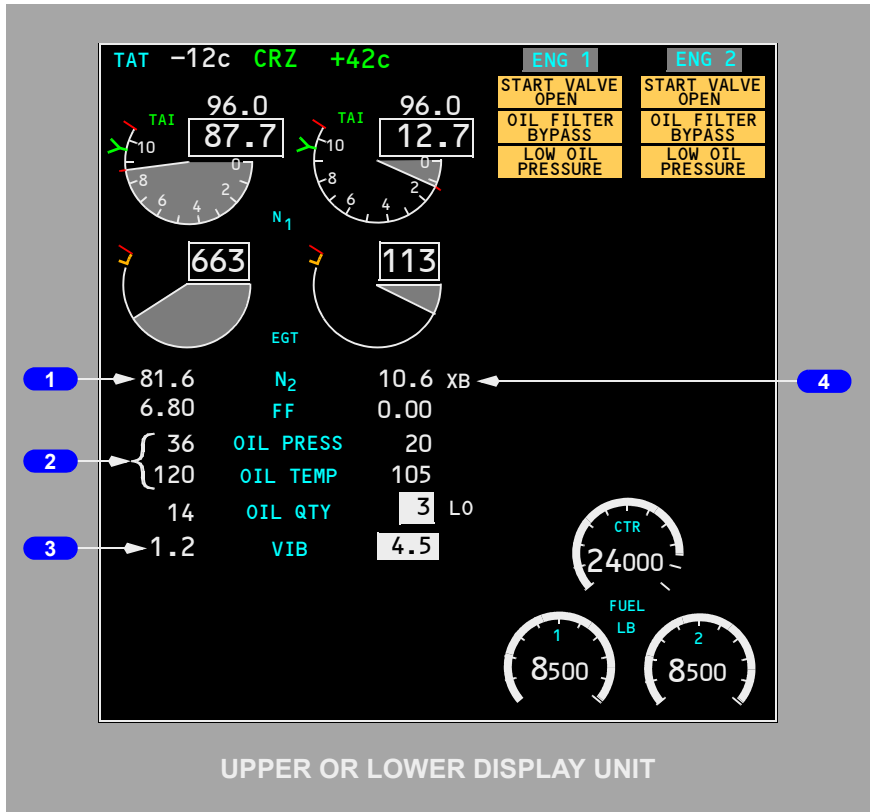

[Option - lbs with Selectable Compact Display]

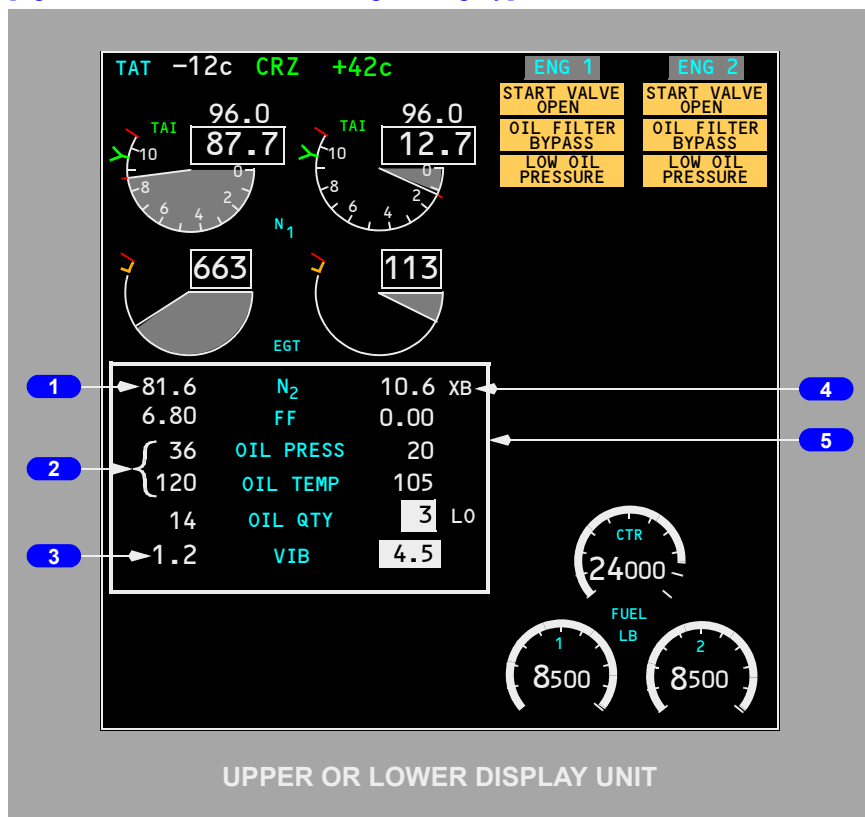

1 N2 RPM Indications

N2 changes from round dial display to a digital display.

The digital display is framed by a red box after engine shutdown on the ground if an inflight exceedance occurred.

2 OIL PRESS, OIL TEMP Indications

Displayed as digital readouts only

The digital readouts display amber or red if limits are exceeded.

3 Vibration (VIB) Indications

Displayed as digital readout only.

4 Crossbleed Start (XB) Indications

Displayed on the side of N2

5 Exceedance Indication

[Option - Selectable Compact Display]

Displayed as rectangular box outline around secondary engine parameters if limits are exceeded when compact display is selected.


The outline has thick lines and blinks for 10 seconds. After 10 seconds, the lines are thinner and do not blink.

The color of the outline matches the color of the exceedance - amber, red or white.

Intentionally
Blank

Engines, APU
General Controls and Indicators**Chapter 7**
Section 15**Engine Start Switches**

[Option - Without automatic ignition]

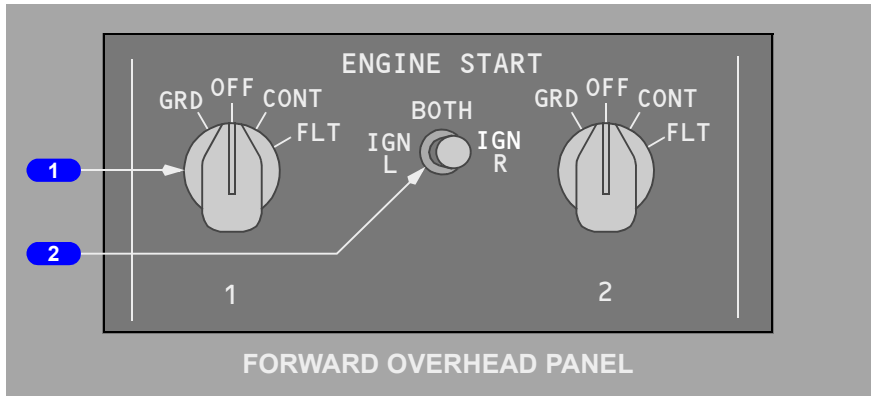**1 ENGINE START Switches**

GRD –

- opens start valve
- closes engine bleed valve
- for ground starts, arms selected igniter(s) to provide ignition when engine start lever is moved to IDLE
- for inflight starts, arms both igniters to provide ignition when engine start lever is moved to IDLE

[Option - Without automatic ignition]

- releases to OFF at start valve cutout.

[Option - Without automatic ignition]

OFF –

- ignition normally off
- both igniters are activated when engine start lever is in IDLE and:
 - an uncommanded rapid decrease in N₂ occurs or,
 - N₂ is between 57% and 50% or,
 - in flight - N₂ is between idle and 5%.

CONT –

- provides ignition to selected igniters when engine is operating and engine start lever is in IDLE
- in flight - provides ignition to both igniters when N2 is below idle and engine start lever is in IDLE.

FLT – provides ignition to both igniters when engine start lever is in IDLE.

2 Ignition Select Switch


IGN L – selects the left igniter for use on both engines.

BOTH – selects both igniters for use on both engines.

IGN R – selects the right igniter for use on both engines.

Engine Display Control Panel

[Option - Over/Under display]

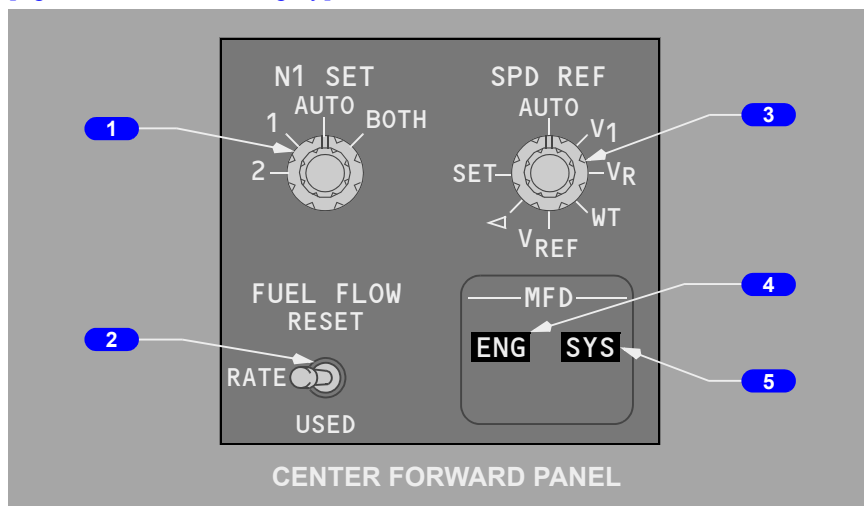

1 N1 SET Knob

[Option - Over/Under display]

Refer to section 11, Over/Under - Displays

2 FUEL FLOW Switch

[Option - Over/Under display]

Refer to section 11, Over/Under - Displays

3 Speed Reference Selector

Refer to Chapter 10, Flight Instruments, Displays.

4 MFD Engine (ENG) Switch

[Option - Over/Under display]

Push – ENG

- displays secondary engine indications on lower DU; or if the lower DU is unavailable, on upper or inboard DU based on the position of the display select panel selector
- second push blanks lower DU.

4 MFD Engine (ENG) Switch

[Option - Selectable Compact Engine Display]

Refer to section 20, Engines, APU - Engine System Description

5 MFD System (SYS) Switch


Refer to:

- Chapter 13, Hydraulics

[Option - Over/Under display with flight control surface position indicator]

- Chapter 9, Flight Controls

Engine Panel

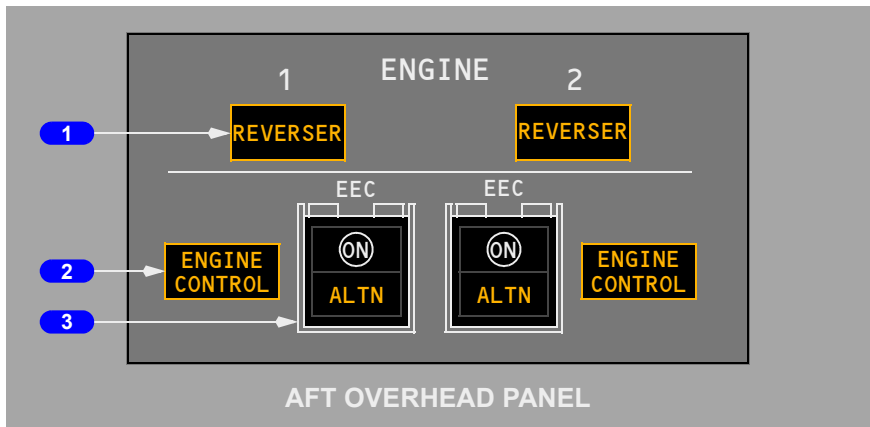

1 REVERSER Lights

Illuminated (amber) – one or more of following has occurred:

- isolation valve or thrust reverser control valve is not in commanded position
- one or more thrust reverser sleeves are not in commanded state
- auto–restow circuit has been activated
- a failure has been detected in synchronization shaft lock circuitry.

2 ENGINE CONTROL Lights

Illuminated (amber) – engine control system is not dispatchable due to faults in system.

Light operates when:

- engine is operating and,
- airplane on ground and:
 - below 80 kt prior to takeoff or,
 - approximately 30 seconds after touchdown.

3 Electronic Engine Control (EEC) Switches

ON – in view (white)

- indicates normal control mode is selected
- engine ratings calculated by EEC from sensed atmospheric conditions and bleed air demand
- when ON is not in view, the EEC has been manually selected to the alternate mode.


ALTN – in view (amber)

- indicated EEC has automatically switched to alternate control mode or it has been selected manually
- EEC provides rated thrust or higher.

Note: Both ON and ALTN may be in view if EEC has automatically switched to soft alternate mode.

Note: EGT limits must be observed in both normal and alternate control modes.

Engine Controls

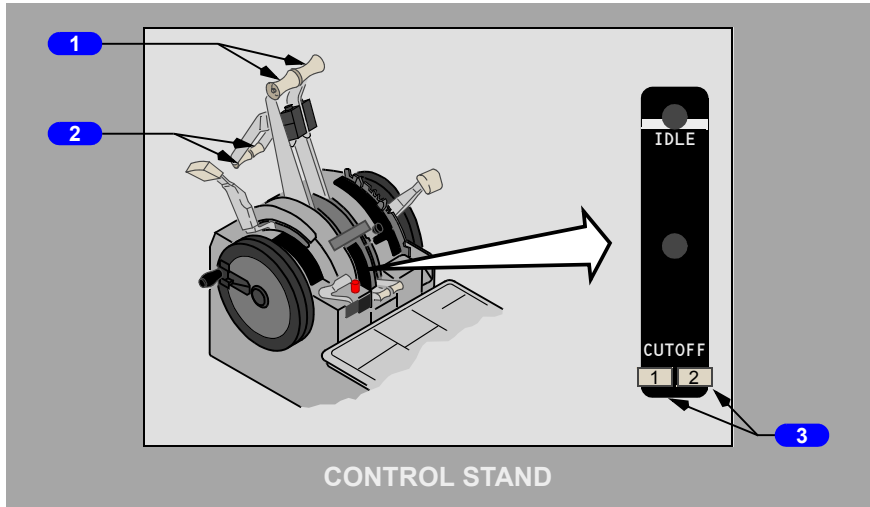

1 Forward Thrust Levers –

- controls engine thrust
- cannot be advanced if the reverse thrust lever is in the deployed position.

2 Reverse Thrust Levers –

- controls engine reverse thrust
- cannot select reverse thrust unless related forward thrust lever is at IDLE.

Note: Reverse thrust lever is blocked at reverse idle position until related thrust reverser is more than 60% deployed.

Note: Movement of reverse thrust lever into reverse thrust engages locking pawl preventing forward thrust lever from moving. Terminating reverse thrust removes locking pawl and restores forward thrust lever movement ability.

3 Engine Start Levers


IDLE –

- energizes ignition system through EEC
- electrically opens spar fuel shutoff valve in the wing leading edge outboard of the pylon
- electrically opens engine-mounted fuel shutoff valve via the EEC.

CUTOFF –

- closes both spar and engine fuel shutoff valves
- de-energizes ignition system.

APU

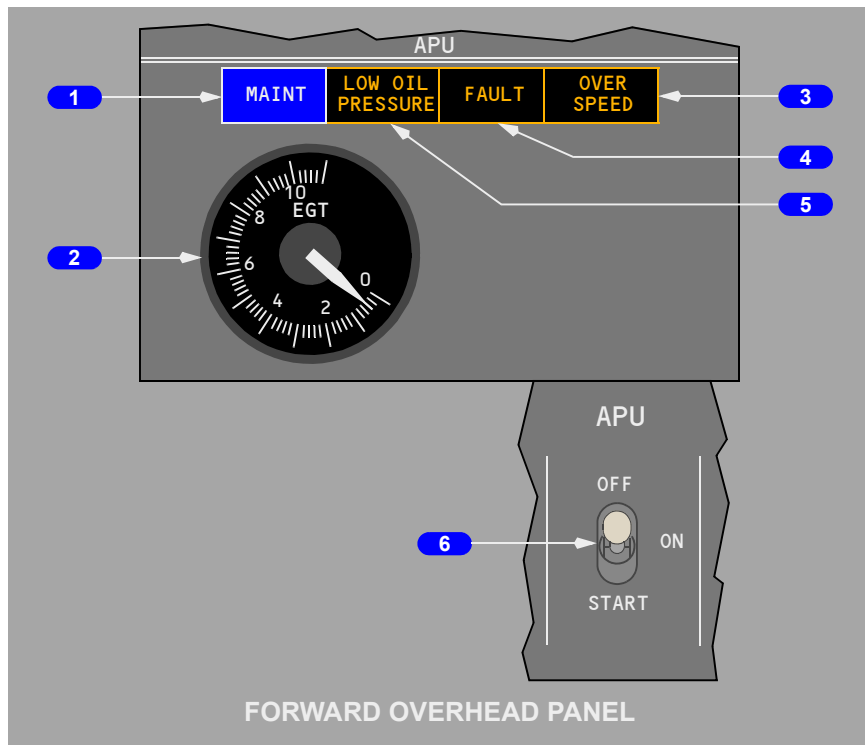

1 APU Maintenance (MAINT) Light

Illuminated (blue) – APU maintenance problem exists:

- APU may be operated
- light is disarmed when APU switch is in OFF.

2 APU Exhaust Gas Temperature (EGT) Indicator

Displays APU EGT

EGT indicator remains powered for 5 minutes after shutdown.

3 APU OVERSPEED Light

Illuminated (amber) –

- APU RPM limit has been exceeded resulting in an automatic shutdown
- overspeed shutdown protection feature has failed a self-test during a normal APU shutdown

- if light is illuminated when APU switch is placed to OFF, light extinguishes after 5 minutes
- light is disarmed when the APU switch is in OFF position.

4 APU FAULT Light

Illuminated (amber) –

- a malfunction exists causing APU to initiate an automatic shutdown
- if light is illuminated when APU switch is placed to OFF, light extinguishes after 5 minutes
- light is disarmed when APU switch is in OFF position.

5 APU LOW OIL PRESSURE Light

Illuminated (amber) –

- during start until the APU oil pressure is normal
- oil pressure is low causing an automatic shutdown (after start cycle is complete)
- if light is illuminated when APU switch is placed to OFF, light extinguishes after 5 minutes
- light is disarmed when APU switch is in OFF position.

6 APU Switch

OFF – normal position when APU is not running

- positioning switch to OFF with APU running trips APU generator off the bus(es), if connected, and closes APU bleed air valve. APU continues to run for a 60 second cooling period
- APU air inlet door automatically closes after shutdown.

ON – normal position when APU is running.

START (momentary) – positioning APU switch from OFF to START and releasing it to ON, initiates an automatic start sequence.

Intentionally
Blank

Engines, APU
Engine System Description**Chapter 7**
Section 20**Introduction**

The airplane is powered by two CFM56-7 engines. The engine is a dual-rotor, axial-flow turbofan. The N1 rotor consists of a fan, a low-pressure compressor and a low-pressure turbine. The N2 rotor consists of a high-pressure compressor and a high-pressure turbine. The N1 and N2 rotors are mechanically independent. The N2 rotor drives the engine gearboxes. A bleed-air-powered starter motor is connected to the N2 rotor.

A dual-channel electronic engine control (EEC) regulates each engine. The EEC monitors autothrottle and flight crew inputs to automatically set engine thrust.

Each engine has individual flight deck controls. Thrust is set by positioning the thrust levers. The thrust levers are positioned automatically by the autothrottle system or manually by the flight crew. The forward thrust levers control forward thrust from idle to maximum. If the EECs are in the alternate mode, advancing the thrust levers full forward provides some overboost and should be considered only during emergency situations when all other available actions have been taken and terrain contact is imminent. The reverse thrust levers control thrust from reverse idle to maximum reverse

Engine Indications**[Option - Over/Under display]**

Primary and secondary engine indications are provided. Engine indications are displayed on the center forward panel upper display unit (DU), lower DU or the Captain's or First Officer's inboard DU.

Primary Engine Indications

N1 and EGT are the primary engine indications. The primary engine indications are normally displayed on the center forward panel upper DU. If that unit fails, the display automatically moves to the lower DU. The primary engine indications can also be manually selected to either the Captain's or First Officer's inboard DU, or the lower DU, using the respective display select panel.

Secondary Engine Indications

N2, fuel flow, oil pressure, oil temperature, oil quantity, and engine vibration are the secondary engine indications. The secondary engine indications are manually selected to either the Captain's or First Officer's inboard DU, or the lower DU, using the respective display select panel and the ENG switch on the engine display control panel.

The secondary engine indications are automatically displayed when:

- the displays initially receive electrical power
- in flight when an engine start lever is moved to CUTOFF
- in flight when an engine N2 RPM is below idle
- a secondary engine parameter is exceeded.

When the secondary engine indications are automatically displayed, they cannot be cleared until the condition is no longer present.

Normal Display Format

N1, EGT, and N2 are displayed as both digital readouts and round dial/moving pointer indications. The digital readouts display numerical values while the moving pointers indicate relative value.

Oil pressure, oil temperature, and engine vibration indications are both digital readouts and vertical indication/moving pointers. Fuel flow and oil quantity are digital readouts only. All digital readouts are enclosed by boxes.

The dials and vertical indications display the normal operating range, caution range, and operating limits.

Normal operating range is displayed on a dial or vertical indication in white.

N1, EGT, and N2 have operating limits indicated by redlines. EGT also displays an amber caution limit. If one of these indications exceeds the red or amber line, the digital readout, box, pointer, and indicator change color to red or amber.

The oil temperature and oil pressure vertical indications have a caution range and an operating limit redline. If the oil temperature or pressure reaches the caution range, the digital readout, digital readout box, and pointer all change color to amber. If one of these indications reach the operating limit, the digital readout, digital readout box, and pointer all change color to red.

The EEC must receive electrical power to supply engine operating data to the flight deck engine indications. When the EEC is not powered, N1, N2, oil quantity and engine vibration are displayed directly from the engine sensors. Positioning the engine start switch to GRD supplies electrical power to the EEC and displays pointers/digits for all engine parameters.

During battery start with no power on the airplane, only N1, N2, and oil quantity are available. The EEC is not powered until the engine accelerates to a speed greater than 15% N2. At 15% N2, the EEC becomes energized and pointers/digits for all engine parameters are displayed.

An engine failure alert indication (ENG FAIL) is displayed in amber on the EGT indicator when the respective engine is operating at a condition below sustainable idle (50% N2) and the engine start lever is in the IDLE position. The alert remains until the engine recovers, the engine start lever is moved to CUTOFF, or the engine fire warning switch is pulled.

Compact Display

In compact format, the primary and secondary engine indications are combined on the same display. The N1 and EGT indications are displayed as they are normally. All other indications change to digital readouts only. N2, oil temperature, and oil pressure digital readouts turn red or amber if an exceedance occurs. The N2 digital display is framed with a red box after engine shutdown on the ground if an inflight exceedance occurred.

Primary and secondary engine indications are displayed in compact format on the upper DU when the secondary engine indications are selected for display (manually or automatically) and the lower DU is unavailable. Alternatively, the compacted indications are displayed on the lower DU if the upper DU is unavailable.

Selectable Compact Engine Display

[Option - Selectable Compact Engine Display]

The compact engine format may also be selected by pushing the MFD ENG key on the Engine Display Control panel.

Initial Formats Displayed on Center DUs (Upper/Lower)	After ENG Key is Pushed	When an Exceedance Occurs	Exceedance is Active & ENG Key is Pushed
Primary Eng/Blank	Primary Eng/ Secondary Eng	Primary Eng/ Secondary Eng	Comp Eng/Blank
Primary Eng/ Secondary Eng	Comp Eng/Blank	Comp Eng/Blank	Primary Eng/ Secondary Eng
Comp Eng/Blank	Primary Eng/Blank	Primary Eng/ Secondary Eng	Comp Eng/Blank
Primary Eng/Sys	Primary Eng/ Secondary Eng	Primary Eng/ Secondary Eng	Comp Eng/Blank
Comp Eng/Sys	Primary Eng/Sys	Comp Eng/Sys	Primary Eng/ Secondary Eng
Primary ENG/ND	Comp Eng/ND	Comp Eng/ND	Comp Eng/ND
Comp Eng/ND	Primary ENG/ND	Comp Eng/ND	Comp Eng/ND

If the compact engine format is displayed, the subsequent exceedance of a secondary engine parameter will cause a rectangular box outline to appear around the secondary engine parameter. For the initial 10 seconds, the box outline is displayed with thick lines and the box blinks. After 10 seconds, thinner lines are used for the box, and the box stops blinking. The color of the box will match the color of the digits of the exceedance: amber box for an amber exceedance, red box for a red exceedance, and white box for an exceedance indicated by reverse video. Once all exceedances are removed, the box outline will be removed. For multiple exceedances, the color of the box color will match the worst case exceedance.

Electronic Engine Control (EEC)

Each engine has a full authority digital EEC. Each EEC has two independent control channels, with automatic channel transfer if the operating channel fails. With each engine start or start attempt, the EEC alternates between control channels. The EEC uses thrust lever inputs to automatically control forward and reverse thrust. N1 is used by the EEC to set thrust in two control modes: normal and alternate. Manual selection of the control mode can be made with the EEC switches on engine panel.

EEC Normal Mode

In the normal mode, the EEC uses sensed flight conditions and bleed air demand to calculate N1 thrust ratings. The EEC compares commanded N1 to actual N1 and adjusts fuel flow to achieve the commanded N1.

The full rated takeoff thrust for the installed engine is available at a thrust lever position less than the forward stop. Fixed or assumed temperature derated takeoff thrust ratings are set at thrust lever positions less than full rated takeoff. The maximum rated thrust is available at the forward stop. The EEC limits the maximum thrust according to the airplane model as follows:

- BBJ – CFM56-7B27 rating
- BBJ2 – CFM56-7B27 rating
- BBJ3 – CFM56-7B27 rating

EEC Alternate Mode

The EEC can operate in either of two alternate modes, soft or hard. If required signals are not available to operate in the normal mode, the EEC automatically changes to the soft alternate mode. When this occurs, the ALTN switch illuminates and the ON indication remains visible. In the soft alternate mode, the EEC uses the last valid flight conditions to define engine parameters which allows the mode change to occur with no immediate change in engine thrust. Thrust rating shortfalls or exceedances may occur as flight conditions change. The soft alternate mode remains until the hard alternate mode is entered by either retarding the thrust lever to idle or manually selecting ALTN with the EEC switch on the aft overhead panel.

Note: Loss of either DEU results in a loss of signal to both EECs. The EEC ALTN lights illuminate and each EEC reverts to the alternate mode to prevent the engines from operating on a single source of data.

When the hard alternate mode is entered, the EEC reverts to the alternate mode thrust schedule. Hard alternate mode thrust is always equal to or greater than normal mode thrust for the same lever position. If the hard alternate mode is entered by reducing the thrust lever to idle while in the soft alternate mode, the ALTN switch remains illuminated and the ON indication remains visible. When ALTN is selected manually, the ON indication is blanked.

Structural Limit Protection

The EEC provides N1 and N2 redline overspeed protection in both normal and alternate modes. The EGT limit must be observed by the crew because the EEC does not provide EGT redline exceedance protection.

Idle Operation

The EEC automatically selects ground minimum idle, flight minimum idle, and approach idle. Ground minimum idle is selected for ground operations and flight minimum idle is selected for most phases of flight. Approach idle is selected in flight if flaps are in landing configuration or engine anti-ice is ON for either engine. At the same airspeed and altitude, N1 and N2% RPM will be higher for approach idle than for flight minimum idle. This higher% RPM improves engine acceleration time in the event of a go-around. Approach idle is maintained until after touchdown, when ground minimum idle is selected. In flight, if a fault prevents the EEC from receiving flap or anti-ice signals, approach idle schedule begins below 15,000 feet MSL.

Engine Fuel System

Fuel is delivered under pressure from fuel pumps located in the fuel tanks. The fuel flows through a fuel spar shutoff valve located at the engine mounting wing stations. The fuel passes through the first stage engine fuel pump where pressure is increased. It then passes through two fuel/oil heat exchangers where IDG oil and main engine oil heat the fuel. A fuel filter then removes contaminants. Fuel automatically bypasses the filter if the filter becomes saturated. Before the fuel bypass occurs, the fuel FILTER BYPASS alert illuminates on the fuel control panel. The second stage engine fuel pump adds more pressure before the fuel reaches the hydro mechanical unit (HMU). To meet thrust requirements, the EEC meters fuel through the HMU.

The spar fuel shutoff valve and engine fuel shutoff valve allow fuel flow to the engine when both valves are open. The valves are open when the engine fire warning switch is in and the start lever is in IDLE. Both valves close when either the start lever is in CUTOFF or the engine fire warning switch is out. SPAR VALVE CLOSED and ENG VALVE CLOSED lights located on the overhead panel indicate valve position.

Fuel flow is measured after passing through the engine fuel shutoff valve and is displayed on the display unit. Fuel flow information is also provided to the FMS.

Engine Oil System


Oil from the individual engine tank is circulated under pressure, through the engine to lubricate the engine bearings and accessory gearbox. The oil quantity indicator, oil temperature indicator, oil pressure indicator and LOW OIL PRESSURE alert are all located on the display unit.

The oil system is pressurized by the engine driven oil pump. Oil from the pump, goes to the engine bearings and gearbox. Sensors for the oil temperature indicator, oil pressure indicator and LOW OIL PRESSURE alert are located downstream of the oil pump prior to engine lubrication.

Oil is returned to the oil tank by engine driven scavenge pumps. From the scavenge pumps oil passes through a scavenge filter. If the filter becomes saturated with contaminants, oil automatically bypasses the filter. Prior to the oil bypassing the scavenge filter, the OIL FILTER BYPASS alert illuminates on the upper display unit.

Prior to returning to the oil tank, the oil passes through the main engine oil cooler where it is cooled by engine fuel to maintain proper oil temperature.

Engine Fuel and Oil System Schematic

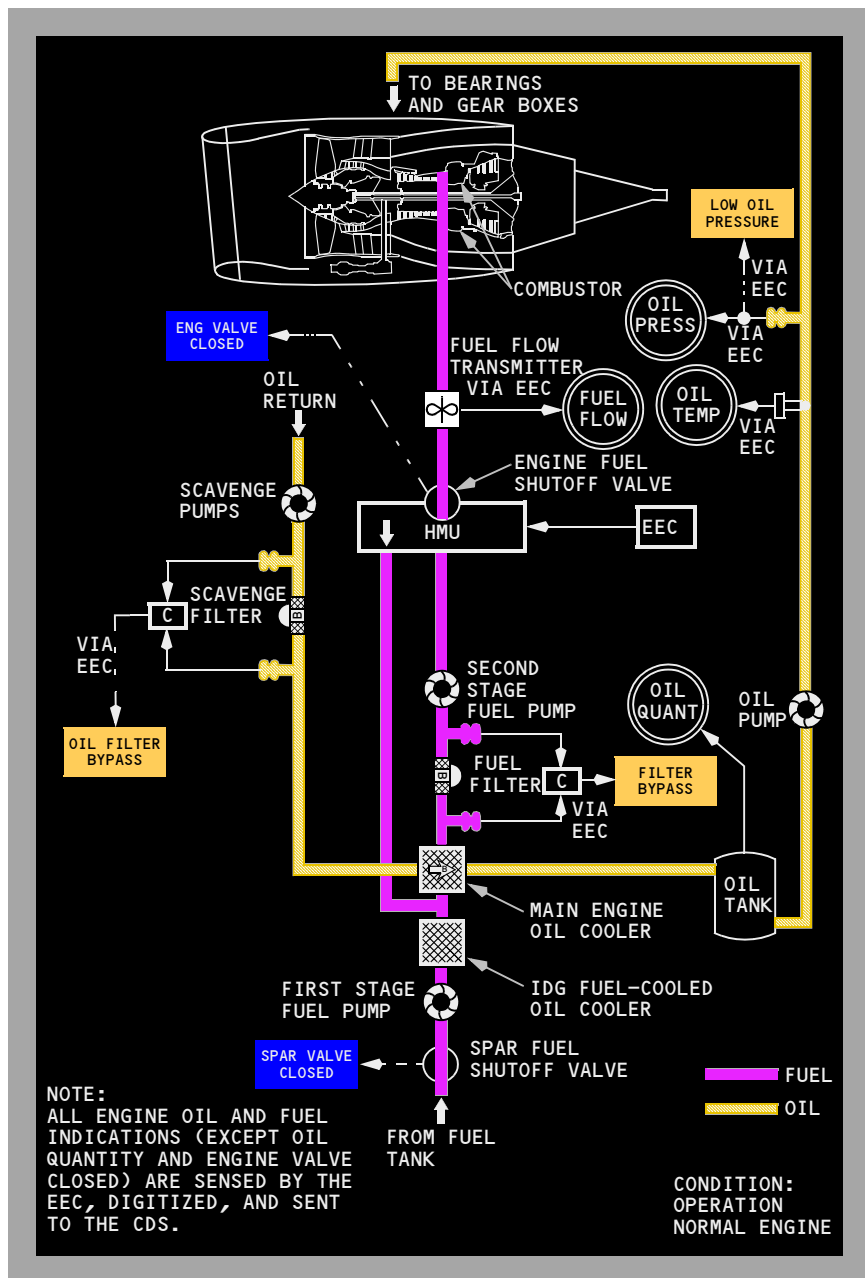

Engine Start System

Starter operation requires pressurized air and electrical power. Air from the bleed air system powers the starter motor. The APU, an external ground cart, or the other operating engine provides the bleed air source.

In the GRD position, the engine start switch uses battery power to close the engine bleed air valve and open the start valve to allow pressure to rotate the starter. When the start valve opens, an amber START VALVE OPEN alert is provided on the upper display unit. The starter rotates the N2 compressor through the accessory drive gear system. When the engine accelerates to the recommended value (25% N2 or max motoring), moving the engine start lever to the IDLE position opens the fuel valves on the wing spar and engine, and causes the EEC to supply fuel and ignition to the combustor where the fuel ignites. Initial fuel flow indications lag actual fuel flow by approximately two seconds, therefore, during engine start, an EGT rise may occur before fuel flow indication.

[Option - Without automatic ignition]

At starter cutout speed (approximately 56% N2), power is removed from the start switch holding solenoid. The engine start switch returns to OFF, the engine bleed air valve returns to the selected position, and the start valve closes.

Abnormal Start Protection (Ground Starts Only)

During ground starts, the EEC monitors engine parameters to detect impending hot starts, engine stalls, EGT start limit exceedances, and wet starts. These protection features do not function during inflight starts.

If an impending hot start is detected by a rapid rise in EGT or EGT approaching the start limit, or a compressor stall occurs, the white box surrounding the EGT digital readout flashes white. The flashing white box resets when the start lever is moved to CUTOFF or the engine reaches idle N2. Current versions of EEC software (7.B.Q and later) automatically turn off the ignition and shuts off fuel to the engine for an impending hot start or stall.

If the EGT exceeds the starting limit, the EGT display, both box and dial, turn red. The EEC automatically turns off the ignition and shuts off fuel to the engine. The alert terminates and the display returns to white when EGT drops below the start limit. Following shutdown of both engines, the EGT box turns red to remind the crew of the exceedance.

A wet start occurs if the EGT does not rise after the start lever is moved to IDLE. If a wet start is detected, the EEC turns off the ignition and shuts off fuel to the engine 15 seconds after the start lever is moved to IDLE.

Engine Ignition System

Each engine has two igniter plugs. The EEC arms the igniter plug(s) selected by the ignition select switch. The left igniter plug receives power from the associated AC transfer bus. The right igniter plug receives power from the AC standby bus.

Auto-Relight

An auto-relight capability is provided for flameout protection. Whenever the EEC detects an engine flameout, both igniters are activated. A flameout is detected when an uncommanded rapid decrease in N2 occurs, or N2 is below idle RPM.

Inflight Starting

Two methods of starting an engine inflight are available, windmill and crossbleed. None of the ground start protection features are functional during inflight start.


Note: At low N2 values, the oil scavenge pump may not provide enough pressure to return oil to the tank, causing a low oil quantity indication. Normal oil quantity should be indicated after start.

[Option - Over/Under display]

If crossbleed starting is required, the X-BLD indication (XB for the compact engine display) is displayed above the N2 dial. This indication is based on airplane altitude, airspeed and N2.

Engine Start and Ignition System Schematic

[Option - Without automatic ignition]

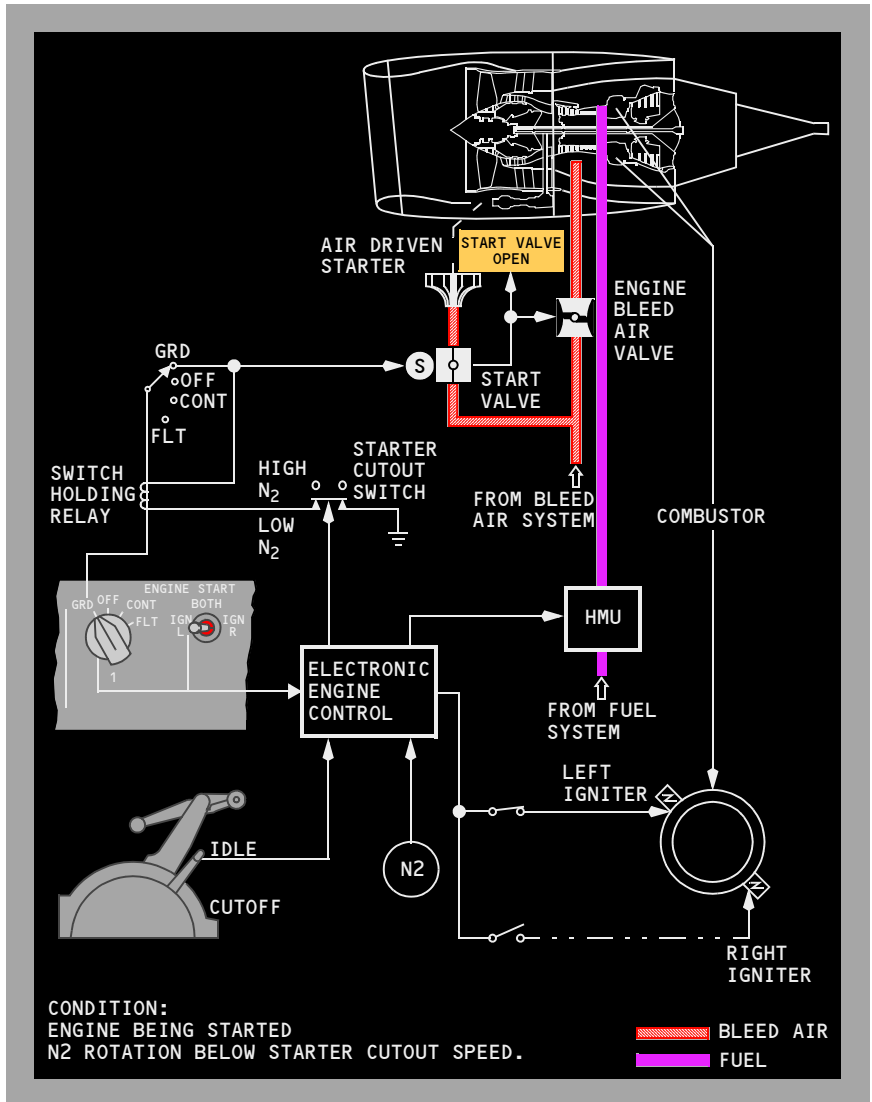

Thrust Reverser

Each engine is equipped with a hydraulically operated thrust reverser, consisting of left and right translating sleeves. Aft movement of the reverser sleeves causes blocker doors to deflect fan discharge air forward, through fixed cascade vanes, producing reverse thrust. The thrust reverser is for ground operations only and is used after touchdown to slow the airplane, reducing stopping distance and brake wear.

Hydraulic pressure for the operation of engine No. 1 and engine No. 2 thrust reversers comes from hydraulic systems A and B, respectively. If hydraulic system A and/or B fails, alternate operation for the affected thrust reverser is available through the standby hydraulic system. When the standby system is used, the affected thrust reverser deploys and retracts at a slower rate and some thrust asymmetry can be anticipated.

The thrust reverser can be deployed when either radio altimeter senses less than 10 feet altitude, or when the air/ground safety sensor is in the ground mode. Movement of the reverse thrust levers is mechanically restricted until the forward thrust levers are in the idle position.

When reverse thrust is selected, an electro-mechanical lock releases, the isolation valve opens and the thrust reverser control valve moves to the deploy position, allowing hydraulic pressure to unlock and deploy the reverser system. An interlock mechanism restricts movement of the reverse thrust lever until the reverser sleeves have approached the deployed position. When either reverser sleeve moves from the stowed position, the amber REV indication, located on the upper display unit, illuminates. As the thrust reverser reaches the deployed position, the REV indication illuminates green and the reverse thrust lever can be raised to detent No. 2. This position provides adequate reverse thrust for normal operations. When necessary, the reverse thrust lever can be pulled beyond detent No. 2, providing maximum reverse thrust.

Downward motion of the reverse thrust lever past detent No. 1 (reverse idle thrust) initiates the command to stow the reverser. When the lever reaches the full down position, the control valve moves to the stow position allowing hydraulic pressure to stow and lock the reverser sleeves. After the thrust reverser is stowed, the isolation valve closes and the electro-mechanical lock engages.


The REVERSER light, located on the aft overhead panel, illuminates when the thrust reverser is commanded to stow and extinguishes 10 seconds later when the isolation valve closes. Any time the REVERSER light illuminates for more than approximately 12 seconds, a malfunction has occurred and the MASTER CAUTION and ENG system annunciator lights illuminate.

Note: A pause in movement of the reverse thrust levers past detent No. 1 toward the stow position may cause MASTER CAUTION and ENG system annunciator lights to illuminate. A pause of approximately 18 seconds engages the electro-mechanical lock and prevents the thrust reverser sleeves from further movement. Cycling the thrust reversers may clear the fault and restore normal operation.

When the reverser sleeves are in the stow position, an electro-mechanical lock and a hydraulically operated locking actuator inhibit motion to each reverser sleeve until reverser extension is selected. Additionally, an auto-restow circuit compares the actual reverser sleeve position and the commanded reverser position. In the event of incomplete stowage or uncommanded movement of the reverser sleeves toward the deployed position, the auto-restow circuit opens the isolation valve and commands the control valve to the stow position directing hydraulic pressure to stow the reverser sleeves. Once the auto-restow circuit is activated, the isolation valve remains open and the control valve is held in the stowed position until the thrust reverser is commanded to deploy or until corrective maintenance action is taken.

WARNING: Actuation of the thrust reversers on the ground without suitable precautions is dangerous to ground personnel.


Thrust Reverser Schematic

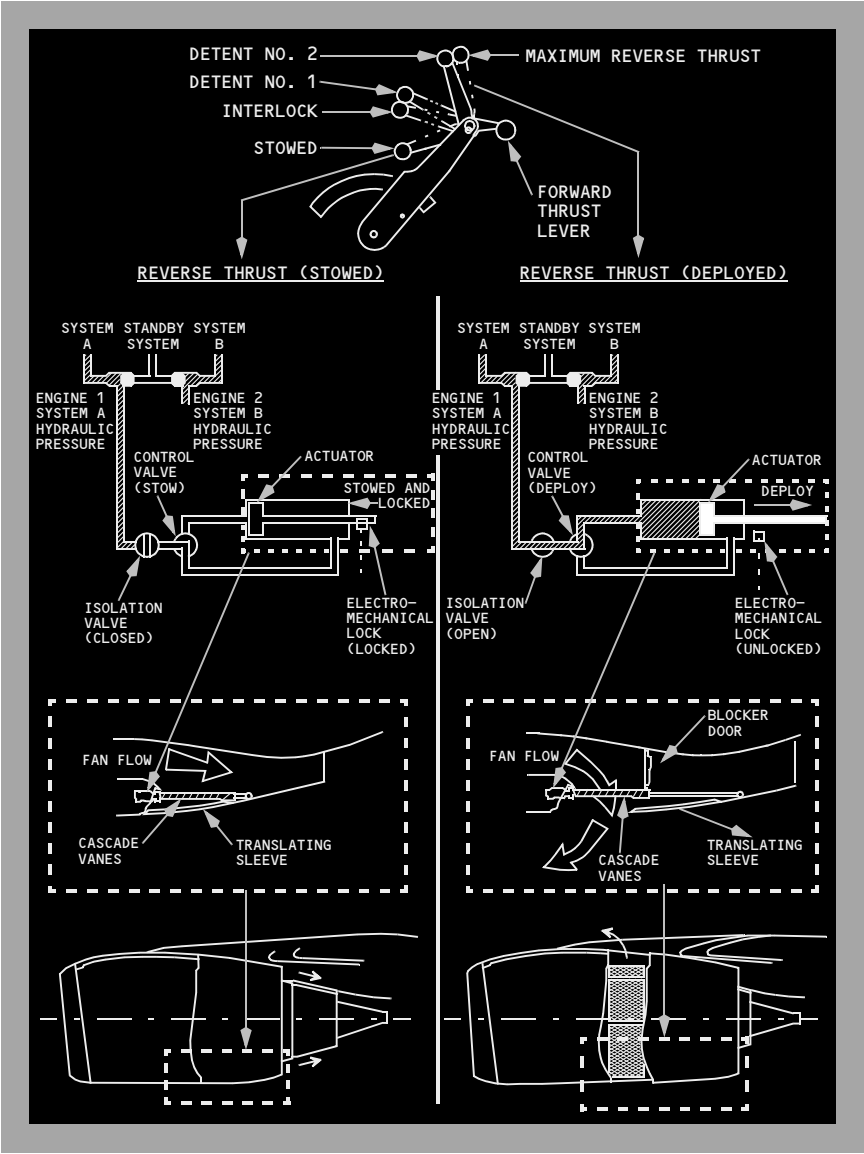

Engines, APU**APU System Description****Chapter 7****Section 30****Introduction**

The auxiliary power unit (APU) is a self-contained gas turbine engine installed within a fireproof compartment located in the tail of the airplane.

The APU supplies bleed air for engine starting or air conditioning. An AC electrical generator on the APU provides an auxiliary AC power source.

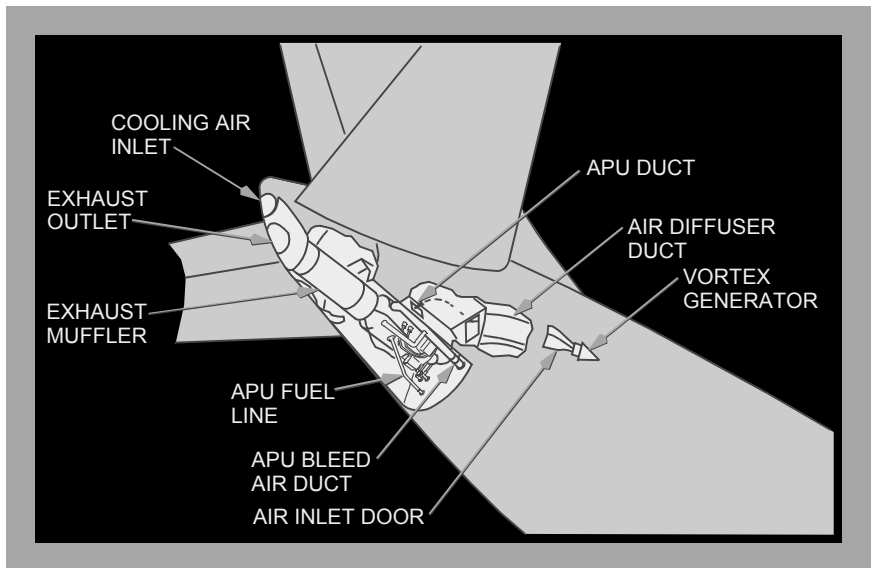APU Location**APU Operation**

The APU starts and operates up to the airplane maximum certified altitude.

The APU supplies bleed air for both air conditioning packs on the ground or one pack in flight. Both transfer busses can be powered on the ground or in flight.

APU Fuel Supply

[Option - APU DC fuel boost pump]

Fuel to start and operate the APU comes from the left side of the fuel manifold when the AC fuel pumps are operating. A DC operated APU fuel boost pump is installed to ensure positive fuel pressure to the APU fuel control unit. During APU start and operation, the pump operates automatically when the APU fuel control unit senses low fuel pressure. The pump shuts off automatically when an AC fuel pump pressurizes the fuel manifold. If the AC and DC fuel pumps are not operating, fuel is suction fed from the No. 1 tank. During APU operation, fuel is automatically heated to prevent icing.

APU Engine and Cooling Air

APU engine air routes to the APU through an automatically operated air inlet door located on the right side of the fuselage. APU exhaust gases discharge overboard through an exhaust muffler.

Air for APU cooling enters through a cooling air inlet above the APU exhaust outlet. This air circulates through the APU compartment, passes through the oil cooler and vents through the exhaust outlet.

Electrical Requirements for APU Operation

APU operation requires the following:

- APU fire switch on the overheat/fire panel must be IN
- APU fire control handle on the APU ground control panel must be IN
- battery switch must be ON.

Electrical power to start the APU comes from No. 1 transfer bus or the airplane main battery. With AC power available, the starter generator uses AC power to start the APU. With no AC power, the starter generator uses battery power to start the APU.

Moving the battery switch to OFF on the ground or in the air automatically shuts down the APU because of power loss to the electronic control unit.

APU Start

The automatic start sequence begins by moving the APU switch momentarily to START. This initiates opening of the air inlet door. When the APU inlet door reaches the full open position the start sequence begins. After the APU reaches the proper speed, ignition and fuel are provided. When the APU is ready to accept a bleed air or electrical load the APU GEN OFF BUS light illuminates.

Note: When the APU is started using battery power only, there is no indication on the electrical metering panel that the APU generator has come on line and is ready to be selected. Both the frequency and voltage readings are zero until the APU generator is placed on line.

Note: During the APU start cycle, the APU EGT indication may fluctuate from 0° to 1100° C prior to normal EGT rise and the LOW OIL PRESSURE light may cycle on and off several times. These indications have no adverse effect on starting the APU. It is not necessary to monitor EGT during start.

If the APU does not reach the proper speed with the proper acceleration rate within the time limit of the starter, the start cycle automatically terminates. The start cycle may take as long as 120 seconds. Automatic shutdown occurs in the event of EGT exceedance.

If the start fails or the APU GEN OFF BUS light fails to illuminate by the end of the start cycle, a system failure has occurred and the FAULT light illuminates.

Operate the APU for one full minute before using it as a bleed air source. This one minute stabilization is recommended to extend the service life of the APU.

APU Shutdown

Operate the APU for one full minute with no bleed air load prior to shutdown. This cooling period is recommended to extend the service life of the APU. When the APU switch is moved to OFF, this time delay is met automatically.

Moving the APU switch to OFF trips the APU generator, closes the APU bleed air valve and extinguishes the APU GEN OFF BUS light. Shutdown occurs automatically after 60 seconds. When the APU speed decreases sufficiently during shutdown, the fuel valve and inlet door close. If the fuel valve does not close, the FAULT light will illuminate after approximately 30 seconds. An immediate shutdown can be accomplished by pulling the APU fire switch.

Electronic Control Unit (ECU)

An electronic control unit (ECU) monitors and controls the APU. Automatic shutdown protection is provided for overspeed conditions, low oil pressure, high oil temperature, APU fire, fuel control unit failure, EGT exceedance, and other system faults monitored by the ECU.

The ECU automatically controls APU speed through the electronic fuel control. If speed or EGT exceed acceptable levels with the APU providing electrical load only, some electrical load is shed. When electrical load and air extraction raise the EGT above acceptable levels during engine starting, electrical load shedding occurs prior to reducing bleed air. When electrical load and air extraction raise the EGT above acceptable levels other than during engine starting, the inlet guide vanes move toward a closed position, reducing bleed air extraction while maintaining electrical load.

APU Automatic Load Shedding


[Option - CAB/UTIL Power Switch]

In flight, if the APU is the only source of electrical power, all galley busses and main buses are automatically shed. If electrical load still exceeds design limits, both IFE busses are also automatically shed. On the ground, the APU attempts to carry a full electrical load. If an overload condition is sensed, the APU sheds galley busses and main busses until the load is within limits. Manual restoration of galley and main bus power can be attempted by moving the CAB/UTIL Power Switch to OFF, then back ON.

Fire Protection**Chapter 8****Table of Contents****Section 0**

Controls and Indicators	8.10
Overheat/Fire Protection Panel Switches.	8.10.1
Overheat/Fire Protection Panel Lights.	8.10.3
Cargo Fire Panel.	8.10.4
Master Fire Warning Light	8.10.6
APU Ground Control Panel	8.10.7
System Description	8.20
Introduction	8.20.1
Engine Fire Protection	8.20.1
Engine Overheat and Fire Detection.	8.20.1
Engine Fire Extinguishing	8.20.2
Engine Fire Extinguisher Schematic	8.20.3
APU Fire Protection.	8.20.4
APU Fire Detection	8.20.4
APU Fire Extinguishing	8.20.4
Main Wheel Well Fire Protection	8.20.5
Main Wheel Well Fire Detection	8.20.5
Cargo Compartment Fire Protection	8.20.5
Cargo Compartment Smoke Detection.	8.20.5
Cargo Compartment Fire Warning	8.20.5
Cargo Compartment Fire Extinguishing.	8.20.6
Cargo Fire Extinguisher Schematic	8.20.6
Fire and Overheat System Tests.	8.20.6
FAULT/INOP Test Detection.	8.20.6
OVERHEAT/FIRE Test Detection.	8.20.7
Extinguisher Test	8.20.7
Cargo Fire System Tests	8.20.7
Cargo Fire TEST	8.20.7
Cargo Fire Extinguisher Test	8.20.8

Intentionally
Blank

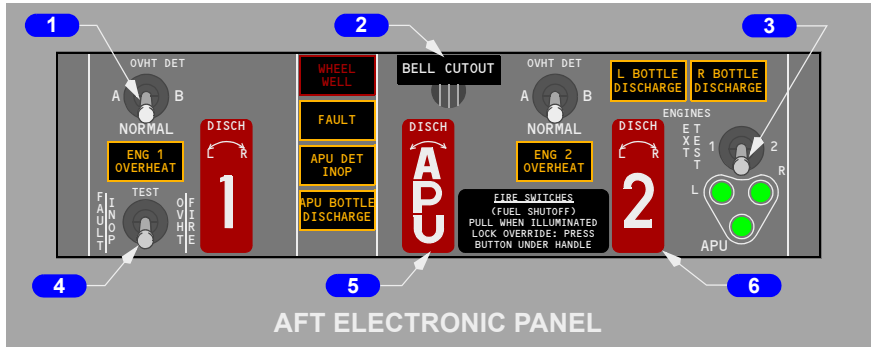**Fire Protection
Controls and Indicators****Chapter 8
Section 10****Overheat/Fire Protection Panel Switches****1 Overheat Detector (OVHT DET) Switch**

NORMAL – detection loop A and loop B are active.

A – detection loop A is active.

B – detection loop B is active.

2 Fire Warning BELL CUTOUT Switch

Push –

- extinguishes both master FIRE WARN lights
- silences the fire warning bell
- silences the remote APU fire warning horn (on the ground only)
- resets the system for additional warnings.

3 Extinguisher (EXT) TEST Switch

(spring-loaded to center)

1 or 2 – tests bottle discharge circuits for all three extinguisher bottles.

**4 Fault/Inoperative (FAULT/INOP) and
Overheat/Fire (OVHT/FIRE) TEST Switch**

(spring-loaded to center)

FAULT/INOP – tests fault detection circuits for both engines and the APU.

OVHT/FIRE – tests overheat and fire detection loops on both engines and APU, and wheel well fire detector

Note: See Fire and Overheat Detection System Fault Test in Section 20.

5 APU Fire Switch

Illuminated (red) –

- indicates fire in APU
- unlocks APU fire switch.

Note: Master FIRE WARN lights illuminate, fire warning bell sounds, and in the main wheel well the APU fire warning horn sounds (on ground only), and APU fire warning light flashes.

In – normal position, mechanically locked if no fire signal.

Up –

- arms APU extinguisher circuit
- closes fuel shutoff valve, APU bleed air valve, and APU inlet door
- trips generator control relay and breaker
- allows APU fire switch to rotate.

Rotate (left or right) –

- discharges APU fire bottle.

6 Engine Fire Switch

Illuminated (red) –

- indicates fire in related engine
- unlocks related engine fire switch.

Note: Master FIRE WARN lights illuminate and fire warning bell sounds.


In – normal position, mechanically locked if no fire signal.

Up –

- arms one discharge squib on each engine fire extinguisher
- closes fuel, hydraulic shutoff and engine bleed air valves
- disables thrust reverser
- trips generator control relay and breaker
- deactivates engine driven hydraulic pump LOW PRESSURE light
- allows engine fire switch to rotate.

Rotate (left or right) – discharges related fire bottle.


Fire Switch Override

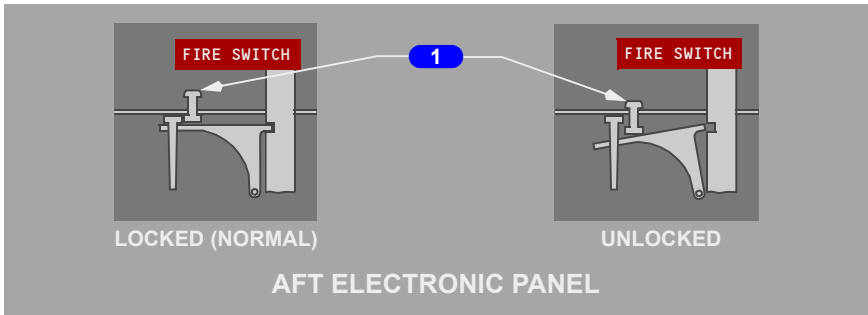

1 Fire Switch Override

Push – unlocks fire switch.

Overheat/Fire Protection Panel Lights

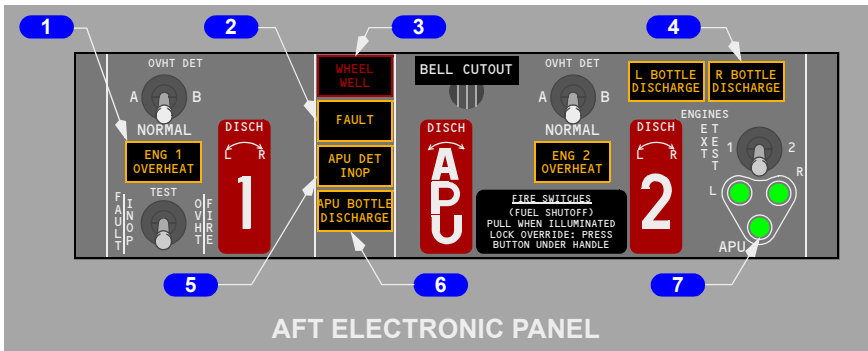

1 Engine (ENG) OVERHEAT Light

Illuminated (amber) – indicates overheat in related engine.

Note: MASTER CAUTION and OVHT/DET system annunciator lights illuminate.

2 FAULT Light

Illuminated (amber) – with the overheat detector switch in NORMAL - indicates both detector loops for an engine have failed.

Illuminated (amber) – with the overheat detector switch in A or B – indicates the selected loop for an engine has failed.

Note: MASTER CAUTION and OVHT/DET system annunciator lights do not illuminate.

3 WHEEL WELL Fire Warning Light

Illuminated (red) – indicates fire in main gear wheel well

Note: Master FIRE WARN lights illuminate and fire warning bell sounds.

4 Engine BOTTLE DISCHARGE Light

Illuminated (amber) – indicates related fire extinguisher bottle has discharged.

5 APU Detector Inoperative (DET INOP) Light

Illuminated (amber) – indicates APU detector loop has failed.

Note: MASTER CAUTION and OVHT/DET system annunciator lights illuminate.


6 APU BOTTLE DISCHARGE Light

Illuminated (amber) – indicates APU extinguisher bottle has discharged.

7 Extinguisher Test (EXT TEST) Lights

Illuminated (green) – EXT TEST switch is positioned to 1 or 2 and circuit continuity is normal.

Cargo Fire Panel

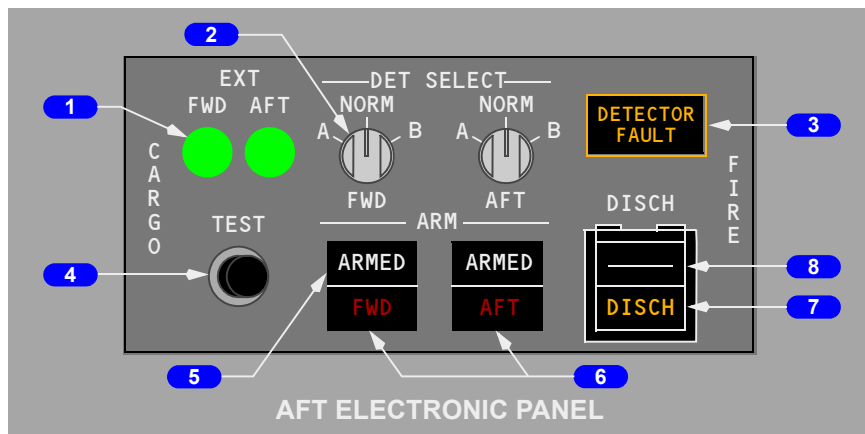

1 Extinguisher (EXT) Test Lights

Illuminated (green) - Cargo Fire TEST switch is pushed and fire bottle discharge squib circuit continuity is normal.

2 Detector Select (DET SELECT) Switches

NORM - detection loop A and B are active.

A - detection loop A is active.

B - detection loop B is active.

3 DETECTOR FAULT Light

Illuminated (amber) -

- One or more of the selected detector loop(s) in either cargo compartment has failed.

4 Cargo Fire TEST Switch

PUSH - tests circuits for both forward and aft cargo fire detector loops and suppression system.

Note: See Cargo Fire System Tests in Section 20.

5 Cargo Fire ARM Switches

PUSH -

- FWD ARMED - extinguisher armed for the forward cargo compartment
- AFT ARMED - extinguisher armed for the aft cargo compartment.

Note: If the first two bottles have discharged and the system remains armed, the third bottle discharge is inhibited upon landing. The third bottle discharge timer is disabled when the system is disarmed.

6 Cargo Fire (FWD/AFT) Warning Lights

Illuminated (red) -

- at least one detector in each loop detects smoke
- with power failed in one loop, at least one detector on the remaining loop detects smoke.

Note: Master FIRE WARN lights illuminate and fire warning bell sounds.


7 Cargo Fire Bottle Discharge (DISCH) Light

Illuminated (amber) - indicates that the first two extinguisher bottles have discharged.

8 Cargo Fire Discharge (DISCH) Switch

PUSH - if system is armed, discharges the first two extinguisher bottles. The timer is set for 60 minutes to discharge the third extinguisher bottle.

Master Fire Warning Light

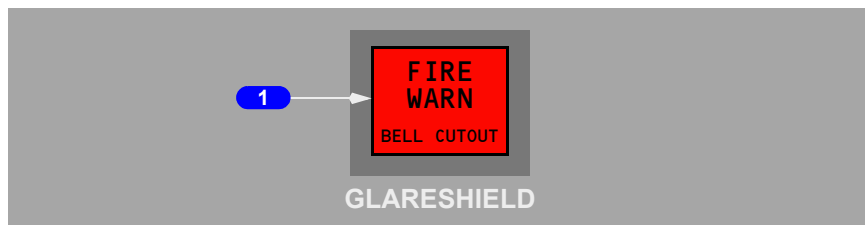

1 Master Fire Warning (FIRE WARN) Lights

Illuminated (red) – indicates a fire warning (or system test) in engine, APU, main gear wheel well or cargo compartment


- fire warning bell sounds
- if on ground, remote APU fire warning horn sounds.

Push –

- extinguishes both master FIRE WARN lights
- silences fire warning bell
- silences remote APU fire warning horn
- resets system for additional warnings.

Note: Pushing fire warning bell cutout switch on overheat/fire protection panel results in same actions.

APU Ground Control Panel

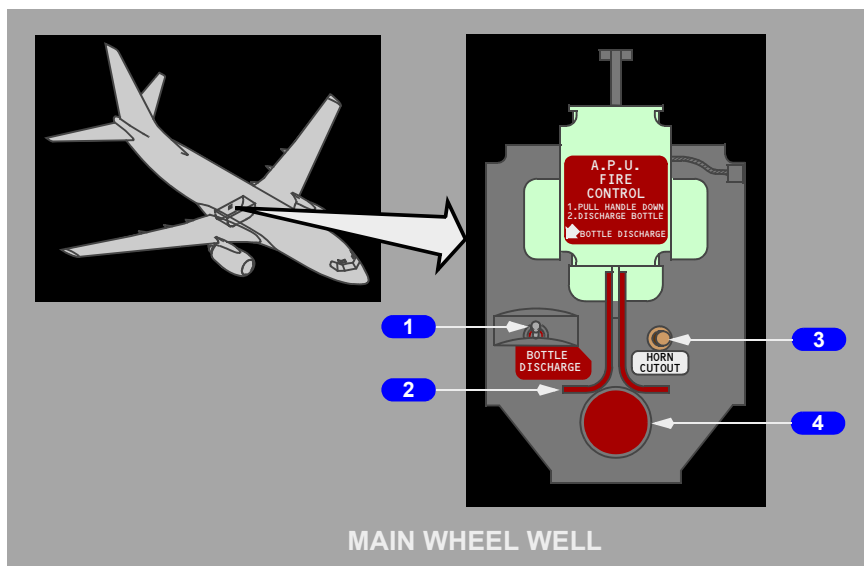

1 APU BOTTLE DISCHARGE Switch

(spring-loaded to the right and safety wired.)

Left – discharges APU extinguisher.

Note: Armed only if APU fire control handle is pulled at this panel.

2 APU Fire Control Handle

Up – normal position.

Down –

- arms APU BOTTLE DISCHARGE switch (on this panel only)
- closes APU fuel shutoff, bleed air valve and APU inlet door
- trips generator control relay and breaker.

3 APU Fire Warning HORN CUTOUT Switch

Push –

- silences fire alarm bell
- silences APU fire warning horn
- causes APU fire warning light to stop flashing but remain illuminated.

4 APU Fire Warning Light

Illuminated (red flashing) – indicates fire in APU.

Note: Also, flight deck fire warning bell sounds and APU fire warning horn in main wheel well sounds.

Illuminated (red steady) – indicates APU fire warning HORN CUTOUT switch has been pushed following an APU fire indication.

**Fire Protection
System Description****Chapter 8
Section 20****Introduction**

There are fire detection and extinguishing systems for:

- engines
- lavatories
- APU
- cargo compartments.

The engines also have overheat detection systems.

The main gear wheel well has a fire detection system, but no fire extinguishing system.

Engine Fire Protection

Engine fire protection consists of these systems:

- engine overheat and fire detection powered by the battery bus
- engine fire extinguishing powered by the hot battery bus.

Engine Overheat and Fire Detection

Each engine contains two overheat/fire detector loops. Each loop provides both fire and overheat detection. As the temperature of a detector increases to a predetermined limit, the detector senses an overheat condition. At higher temperatures, the detector senses a fire condition. Normally, both detector loops must sense a fire or overheat condition to cause an engine overheat or fire alert. The ENG OVERHEAT light or engine fire switch remains illuminated until the temperature drops below the onset temperature.

An OVHT DET switch for each engine, labeled A, B, and NORMAL, permits selection of either loop A or B, or both A and B, as the active detecting loops.

The system contains a fault monitoring circuit. If one loop fails with the OVHT DET switch in NORMAL, that loop is automatically deselected and the remaining loop functions as a single loop detector. There is no flight deck indication of single loop failure. If both loops fail on an engine, the FAULT light illuminates and the system is inoperative.

If the OVHT DET switch is positioned to A or B, the system operates as a single loop system. The non-selected loop is not monitored. If the selected loop fails, the FAULT light illuminates and the system is inoperative.

The indications of an engine overheat are:

- both MASTER CAUTION lights illuminate
- the OVHT/DET system annunciator light illuminates
- the related ENG OVERHEAT light illuminates.

The indications of an engine fire are:

- the fire warning bell sounds
- both master FIRE WARN lights illuminate
- the related engine fire switch illuminates
- all related engine overheat alert indications illuminate.

Engine Fire Extinguishing

The engine fire extinguisher system consists of two engine fire extinguisher bottles, two engine fire switches, two BOTTLE DISCHARGE lights, and an EXT TEST switch. Either or both bottles can be discharged into either engine.

The engine fire switches are normally locked down to prevent inadvertent shutdown of an engine. Illumination of an engine fire switch or ENG OVERHEAT light unlocks the engine fire switch. The switches may also be unlocked manually.


Pulling the engine fire switch up:

- closes both the engine fuel shutoff valve and the spar fuel shutoff valve
- closes the engine bleed air valve resulting in loss of wing anti-ice to the affected wing and closure of bleed air operated pack valve
- trips the generator control relay and breaker
- closes the hydraulic fluid shutoff valve. The engine driven hydraulic pump LOW PRESSURE light is deactivated
- disables thrust reverser for the related engine.
- allows the engine fire switch to be rotated for discharge
- arms one discharge squib on each engine fire extinguisher bottle.

Rotating the engine fire switch electrically “fires” a squib, discharging the extinguishing agent into the related engine. Rotating the switch the other way discharges the remaining bottle.

The L or R BOTTLE DISCHARGE light illuminates a few seconds after the engine fire switch is rotated, indicating the bottle has discharged.

Engine Fire Extinguisher Schematic

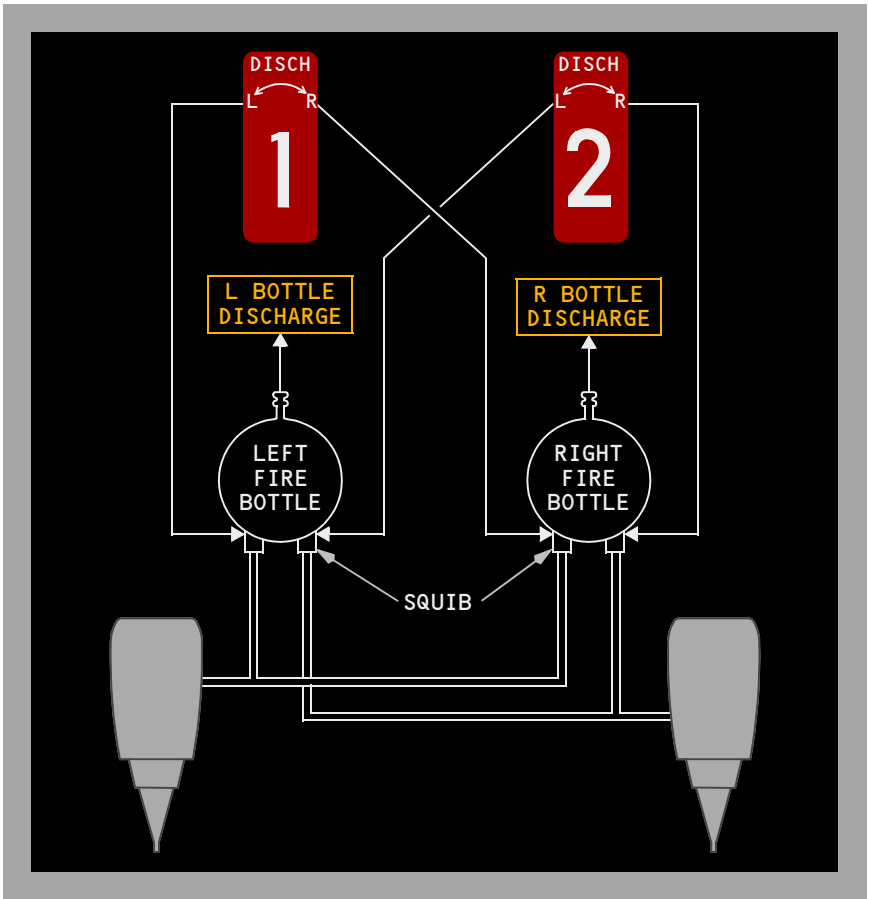

APU Fire Protection

APU fire protection consists of these systems:

- APU fire detection powered by the battery bus.
- APU fire extinguishing powered by the hot battery bus.

APU Fire Detection

A single fire detection loop is installed on the APU. As the temperature of the detector increases to a predetermined limit, the detector senses a fire condition. The APU fire switch remains illuminated until the temperature of the detector has decreased below the onset temperature.

The system contains a fault monitoring circuit. If the loop fails, the APU DET INOP light illuminates indicating the APU fire detection system is inoperative.

The indications of an APU fire are:

- the fire warning bell sounds
- both master FIRE WARN lights illuminate
- the APU fire switch illuminates
- the APU automatically shuts down
- the wheel well APU fire warning horn sounds, (on the ground only), and the wheel well APU fire warning light flashes.

APU Fire Extinguishing

The APU fire extinguisher system consists of one APU fire extinguisher bottle, an APU fire switch, an APU BOTTLE DISCHARGE light, and an EXT TEST switch. The APU ground control panel located in the right main wheel well also contains an APU fire warning light, an APU BOTTLE DISCHARGE switch, an APU fire control handle and APU HORN CUTOFF switch.

The APU fire switch is normally locked down to prevent inadvertent shutdown of the APU. Illumination of the APU fire switch unlocks the switch. The switch may also be unlocked manually.

Pulling the APU Fire switch up:

- provides backup for the automatic shutdown feature
- deactivates the fuel solenoid and closes the APU fuel shutoff valve
- closes the APU bleed air valve
- closes the APU air inlet door
- trips the APU generator control relay and breaker
- allows the APU fire switch to be rotated for discharge
- arms the APU fire extinguisher bottle squib.

Rotating the APU fire switch in either direction electrically “fires” the squib discharging the extinguishing agent into the APU. The APU BOTTLE DISCHARGE light illuminates after a few seconds, indicating the bottle has discharged.

Main Wheel Well Fire Protection

Main wheel well fire protection consists of fire detection powered by the No. 2 AC transfer bus.

Note: The main wheel well has no fire extinguishing system. The nose wheel well does not have a fire detection system.

Main Wheel Well Fire Detection

A single fire detector loop is installed in the main wheel well. As the temperature of the detector increases to a predetermined limit, the detector senses a fire condition. The WHEEL WELL fire warning light remains illuminated until the temperature of the detector has decreased below the onset temperature.

The indications for a main wheel well fire are:

- the fire warning bell sounds
- both master FIRE WARN lights illuminate
- the WHEEL WELL fire warning light illuminates.

Cargo Compartment Fire Protection

Cargo fire protection consists of these systems:

- cargo compartment smoke detection powered by DC bus 1 and DC bus 2
- cargo compartment fire extinguishing powered by the hot battery bus.

Cargo Compartment Smoke Detection

The forward and aft cargo compartments each have smoke detectors in a dual loop configuration. Normally, both detection loops must sense smoke to cause an alert. In the event of a detector failure, the system can be manually converted to single-loop detection through the DETECT SELECT switch on the cargo fire control panel. In the event of a power failure in one loop the system automatically converts to single-loop detection.

Cargo Compartment Fire Warning


The indications of a cargo compartment fire are:

- the fire warning bell sounds
- both master FIRE WARN lights illuminate
- the FWD/AFT cargo fire warning light(s) illuminates.

Cargo Compartment Fire Extinguishing

Three fire extinguisher bottles are installed in the cargo compartment. Detection of a fire in either the forward or aft compartment will cause the FWD or AFT cargo fire warning light to illuminate. The extinguishers are armed by pushing the appropriate cargo fire ARMED switch. Once armed, the first two bottles are discharged by pushing the cargo fire DISCH switch. This results in the total discharge of the bottles contents into the selected compartment. The third bottle discharge is metered to discharge at a reduced flow into the selected compartment. Discharge of the third bottle may be disabled if the system is disarmed. The cargo fire DISCH light illuminates when a bottle is discharged. It may take up to 30 seconds for the light to illuminate. On landing, if the first two bottles were discharged and the system remains armed, the third bottle discharge is inhibited.

Cargo Fire Extinguisher Schematic

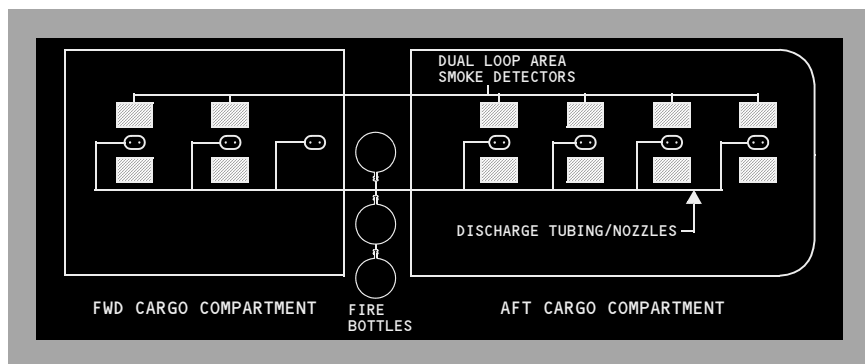

Note: The number of nozzles and detectors is dependant upon the number and configuration of auxiliary fuel tanks. The forward cargo compartment may have up to three nozzles and four smoke detectors. The aft cargo compartment may have up to four nozzles and eight smoke detectors.

Fire and Overheat System Tests

The fire and overheat detection systems can be tested by pushing and holding the FAULT/INOP and OVHT/FIRE TEST switch. Extinguisher continuity can be tested by pushing and holding the EXT TEST switch. All test indications clear when switches are released.

FAULT/INOP Test Detection

The fault detection circuits for both the engines and the APU are tested by pushing and holding the FAULT/INOP and OVHT/FIRE TEST switch in the FAULT/INOP position.

The indications for the FAULT/INOP test are:

- both MASTER CAUTION lights illuminate
- the OVHT/DET system annunciator light illuminates
- the FAULT light illuminates
- the APU DET INOP light illuminates.

OVERHEAT/FIRE Test Detection

The overheat and fire detection loops on both engines, the APU, and the fire detector in the wheel well are tested by pushing and holding the FAULT/INOP and OVHT/FIRE TEST switch in the OVHT/FIRE position.

The indications for the OVHT/FIRE test are:

- the fire warning bell sounds
- both master FIRE WARN lights illuminate
- both MASTER CAUTION lights illuminate
- the OVHT/DET system annunciator light illuminates
- both engine fire switches illuminate
- the APU fire switch illuminates
- both ENG OVERHEAT lights illuminate
- the WHEEL WELL fire warning light illuminates if AC power is available
- on the ground, the wheel well APU fire warning horn sounds and the wheel well APU fire warning light flashes.

Extinguisher Test

When the EXT TEST switch is positioned to 1 or 2, the green EXT TEST lights illuminate, verifying circuit continuity from the squib to the engine fire switch.

Cargo Fire System Tests

The cargo fire detection and suppression system can be tested by pushing and holding the cargo fire TEST switch. This sends a test signal to the forward and aft cargo fire detector loops and verifies continuity of the extinguisher bottle squib circuits. All test indications clear when the TEST switch is released

Cargo Fire TEST

The indications for the Cargo Fire test are:

- the fire warning bell sounds
- both master FIRE WARN lights illuminate
- the extinguisher test lights illuminate

- the FWD and AFT cargo fire warning lights illuminate when all detectors in selected loops (s) respond to the fire test
- the cargo fire bottle DISCH light illuminates

Note: The fire warning BELL CUTOUT switch on the Overheat/Fire Protection panel can silence the fire warning bell and extinguish the master FIRE WARN lights

Note: During a Cargo Fire Test, the DETECTOR Fault light will illuminate if one or more detectors in the loop(s) has failed.

Note: Individual detector faults can only be detected by a manually initiated test. The MASTER CAUTION light does not illuminate.

Note: At the end of cargo fire testing, up to a four second delay may occur to allow all applicable indications to extinguish at the same time.

Cargo Fire Extinguisher Test

When the Cargo Fire TEST button is pushed, the green EXT lights illuminate, verifying the fire bottle discharge squib circuit continuity is normal.

Flight Controls**Chapter 9****Table of Contents****Section 0**

Controls and Indicators	9.10
Flight Control Panel	9.10.1
Stabilizer	9.10.5
Rudder	9.10.7
Aileron / Elevator / Flight Spoilers	9.10.8
Speed Brakes	9.10.9
Trailing Edge Flaps	9.10.11
Leading Edge Devices	9.10.13
Flight Control Surface Position Indicator	9.10.14
System Description	9.20
Introduction	9.20.1
Pilot Controls	9.20.1
Flight Control Surfaces	9.20.1
Flight Control Surfaces Location	9.20.2
Roll Control	9.20.3
Ailerons	9.20.3
Flight Spoilers	9.20.4
Roll Control Schematic	9.20.5
Pitch Control	9.20.6
Elevators	9.20.6
Stabilizer	9.20.7
Pitch Control Schematic	9.20.9
Stall Identification	9.20.10
Yaw Control	9.20.11
Rudder (with Rudder System Enhancement Program (RSEP) installed)	9.20.11
Yaw Damper	9.20.12
Yaw Control Schematic	9.20.13
Speed Brakes	9.20.14
In-Flight Operation	9.20.14


Ground Operation	9.20.14
Speed Brakes Schematic	9.20.16
Flaps and Slats	9.20.17
Flap and Slat Sequencing	9.20.17
Flap Load Relief	9.20.18
Autoslats	9.20.18
Alternate Extension	9.20.18
Asymmetry and Skew Detection, Protection and Indication .	9.20.21
Uncommanded Motion Detection, Protection and Indication.	9.20.21

Flight Controls Controls and Indicators

Chapter 9 Section 10

Flight Control Panel

[Flight Control Panel for 737 modified rudder system.]

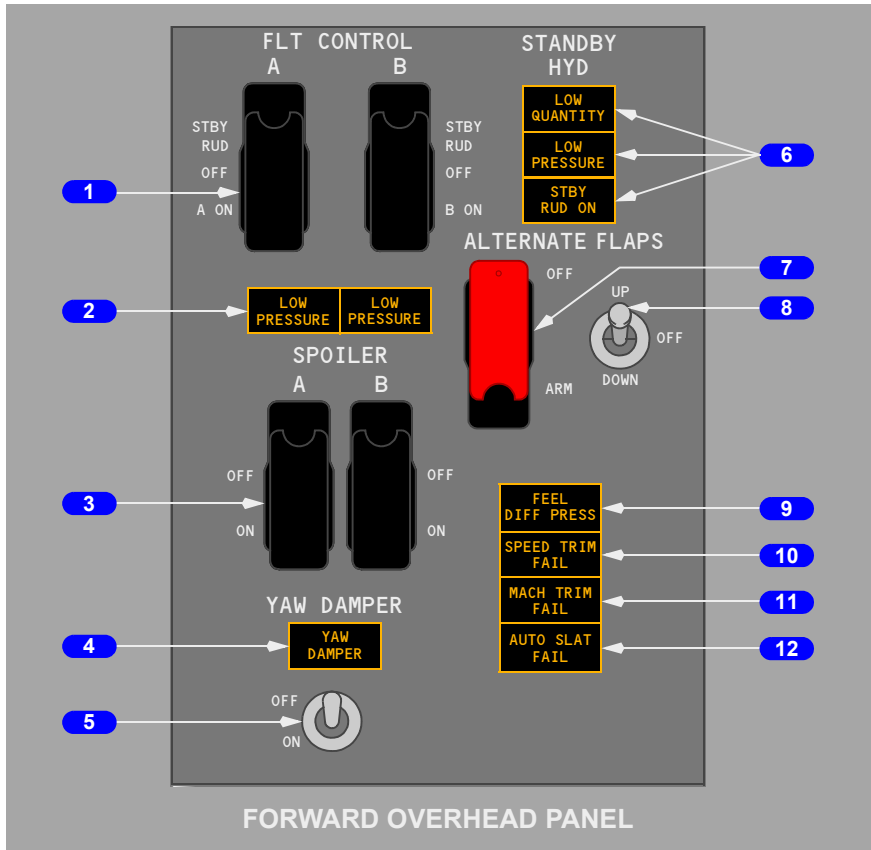

1 FLIGHT CONTROL Switches

STBY RUD - activates standby hydraulic system pump and opens standby rudder shutoff valve to pressurize standby rudder power control unit.

OFF - closes flight control shutoff valve isolating ailerons, elevators and rudder from associated hydraulic system pressure.

ON (guarded position) - normal operating position.

2 Flight Control LOW PRESSURE Lights

Illuminated (amber) -

- indicates low hydraulic system (A or B) pressure to ailerons, elevator and rudder
- deactivated when associated FLIGHT CONTROL switch is positioned to STBY RUD and standby rudder shutoff valve opens.

3 Flight SPOILER Switches

ON (guarded position) – normal operating position.

OFF – closes the respective flight spoiler shutoff valve.

Note: Used for maintenance purposes only.

4 YAW DAMPER Light

Illuminated (amber) – yaw damper is not engaged.

5 YAW DAMPER Switch

OFF – disengages yaw damper.

ON –

- engages main yaw damper to main rudder power control unit if the B FLT CONTROL switch is in the ON position
- engages standby yaw damper to standby rudder power control unit if both the A and B FLT CONTROL switches are in the STBY RUD position.

6 STANDBY HYD Lights

STANDBY HYDRAULIC LOW QUANTITY Light

Illuminated (amber) -

- indicates low quantity in standby hydraulic reservoir
- always armed.

STANDBY HYDRAULIC LOW PRESSURE Light

Illuminated (amber) -

- indicates output pressure of standby pump is low
- armed only when standby pump operation has been selected or automatic standby function is activated.

STBY RUD ON Light

- Illuminated (amber) - indicates the standby rudder system is commanded on to pressurize the standby rudder power control unit.

7 ALTERNATE FLAPS Master Switch

OFF (guarded position) – normal operating position.

ARM – closes TE flap bypass valve, activates standby pump, and arms the ALTERNATE FLAPS position switch.

8 ALTERNATE FLAPS Position Switch

Functions only when the ALTERNATE FLAPS master switch is in ARM.

UP –

- electrically retracts TE flaps
- LE devices remain extended and cannot be retracted by the alternate flaps system.

OFF – normal operating position.

DOWN (spring loaded to OFF) –

- (momentary) fully extends LE devices using standby hydraulic pressure
- (hold) electrically extends TE flaps until released.

9 Feel Differential Pressure (FEEL DIFF PRESS) Light

Armed when the TE flaps are up or down.

Illuminated (amber) -

- indicates excessive differential pressure in the elevator feel computer.

Note: Excessive differential pressure can be caused by erroneous activation of the Elevator Feel Shift module.

10 Speed Trim Failure (SPEED TRIM FAIL) Light

Illuminated (amber) –

- indicates failure of the speed trim system
- indicates failure of a single FCC channel when MASTER CAUTION light recall is activated and light extinguishes when Master Caution System is reset.

11 Mach Trim Failure (MACH TRIM FAIL) Light

Illuminated (amber) –


- indicates failure of the mach trim system
- indicates failure of a single FCC channel when MASTER CAUTION light recall is activated and light extinguishes when master caution system is reset.

12 Automatic Slat Failure (AUTO SLAT FAIL) Light

Illuminated (amber) –

- indicates failure of the auto slat system
- indicates failure of a single Stall Management/Yaw Damper (SMYD) computer when illuminated during MASTER CAUTION recall and extinguishes when master caution system is reset.

Stabilizer

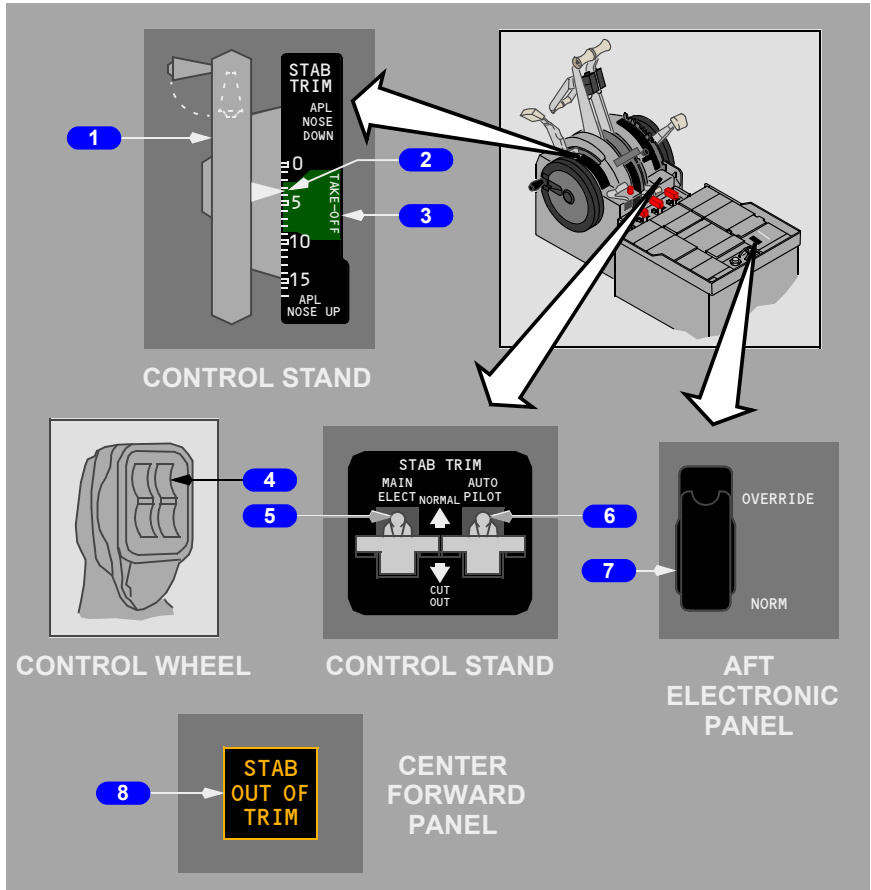

1 Stabilizer Trim Wheel

- provides for manual operation of stabilizer
- overrides any other stabilizer trim inputs
- rotates when stabilizer is in motion.

Note: Handle should be folded inside stabilizer trim wheel for normal operation

2 Stabilizer Trim Indicator

Indicates units of airplane trim on the adjacent scale.

3 Stabilizer Trim Green Band Range

Corresponds to allowable range of trim settings for takeoff.

4 Stabilizer Trim Switches (spring-loaded to neutral)

Push (both) –

- electrically commands stabilizer trim in desired direction
- autopilot disengages if engaged.

5 Stabilizer Trim Main Electric (MAIN ELECT) Cutout Switch

NORMAL – normal operating position.

CUTOUT – deactivates stabilizer trim switch operation.

6 Stabilizer Trim AUTOPILOT Cutout Switch

NORMAL – normal operating position.

CUTOUT –

- deactivates autopilot stabilizer trim operation
- autopilot disengages if engaged.

7 Stabilizer Trim Override Switch


OVERRIDE – bypasses the control column actuated stabilizer trim cutout switches to restore power to the Stabilizer Trim Switches

NORM (guarded position) – normal operating position.

8 Stabilizer Out of Trim (STAB OUT OF TRIM) Light

Refer to Chapter 4 – Automatic Flight

Rudder

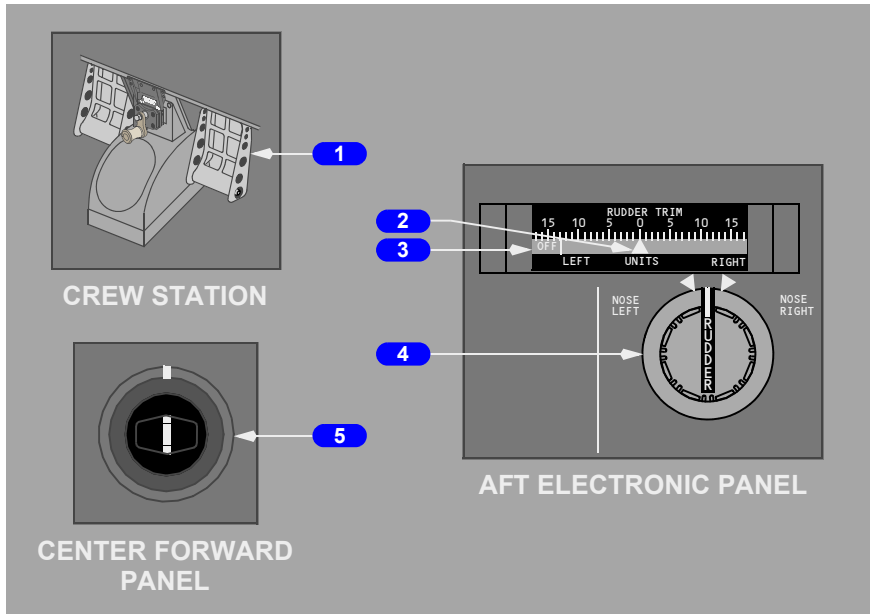

1 Rudder Pedals

Push –

- controls rudder position
- permits limited nose gear steering up to 7 degrees each side of center.

2 Rudder Trim Indicator

Indicates units of rudder trim.

3 Rudder Trim OFF Flag

Illuminated (amber) (in view) – rudder trim indicator is inoperative.


4 Rudder Trim Control (spring-loaded to neutral)

Rotate – electrically trims the rudder in the desired direction.

5 YAW DAMPER Indicator

- Indicates main yaw damper movement of rudder
- pilot rudder pedal inputs are not indicated.

Aileron / Elevator / Flight Spoilers

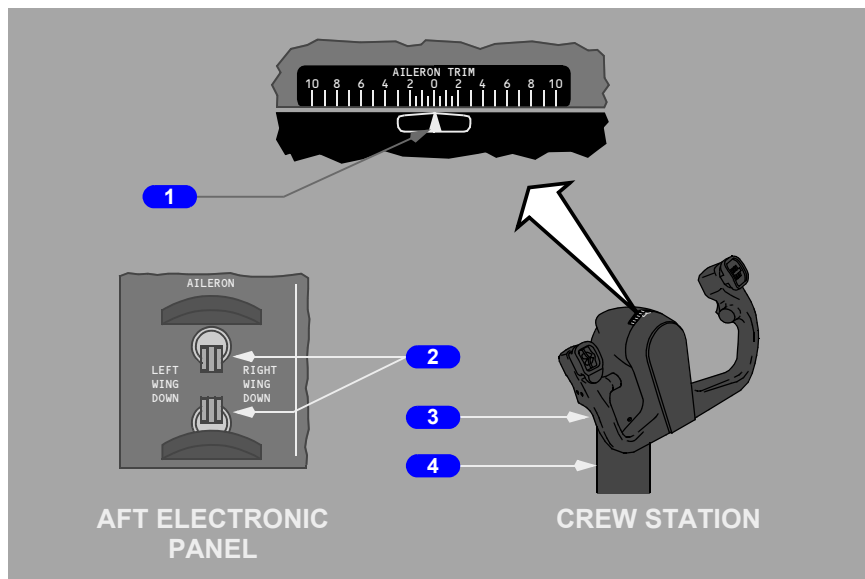

1 AILERON TRIM Indicator

Indicates units of aileron trim.

2 AILERON Trim Switches (spring-loaded to the neutral position)

Movement of both switches repositions the aileron neutral control position.

3 Control Wheel


Rotate – operates ailerons and flight spoilers in desired direction.

4 Control Column

Push/Pull –

- operates elevators in the desired direction
- movement opposing stabilizer trim stops electric trimming.

Speed Brakes

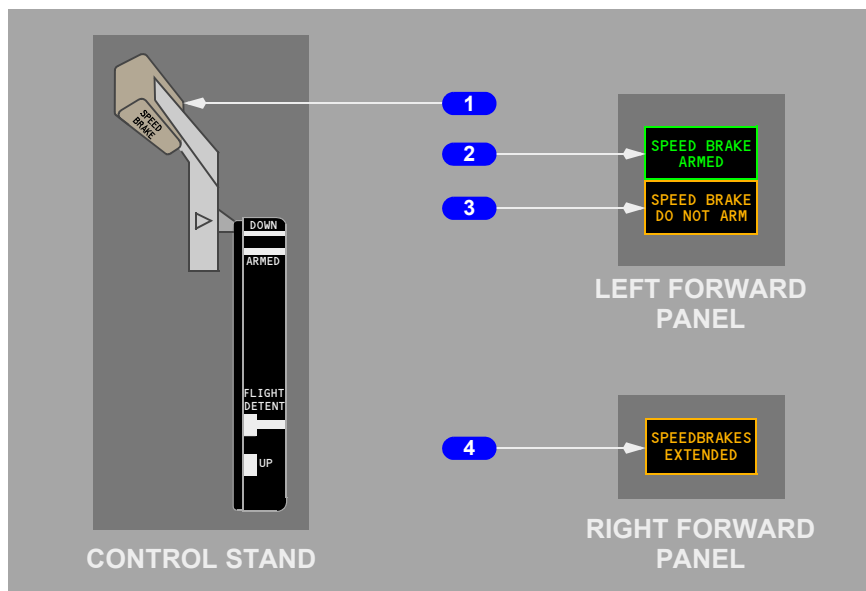

1 SPEED BRAKE Lever

DOWN (detent) – all flight and ground spoiler panels in faired position.

ARMED –

- automatic speed brake system armed
- upon touchdown, the SPEED BRAKE lever moves to the UP position, and all flight and ground spoilers extend.

FLIGHT DETENT – all flight spoilers are extended to their maximum position for inflight use.

UP – all flight and ground spoilers are extended to their maximum position for ground use.

2 SPEED BRAKE ARMED Light

Light deactivated when SPEED BRAKE lever is in the DOWN position.

Illuminated (green) – indicates valid automatic speed brake system inputs.

3 SPEED BRAKE DO NOT ARM Light

Light deactivated when SPEED BRAKE lever is in the DOWN position.

Illuminated (amber) –

- indicates abnormal condition or test inputs to the automatic speed brake system, or
- during landing, indicates wheel speed has dropped below 60 kts, and the speedbrake lever is not in the DOWN position.


4 SPEEDBRAKES EXTENDED Light


Illuminated (amber) –

- in-flight -
 - SPEED BRAKE lever is beyond the ARMED position, and
 - TE flaps extended more than flaps 10, or
 - radio altitude less than 800 feet
- on the ground -
 - SPEED BRAKE lever is in the DOWN detent,
 - ground spoilers are not stowed.

Note: On the ground, the SPEEDBRAKES EXTENDED light does not illuminate when hydraulic system A pressure is less than 750 psi.

Trailing Edge Flaps

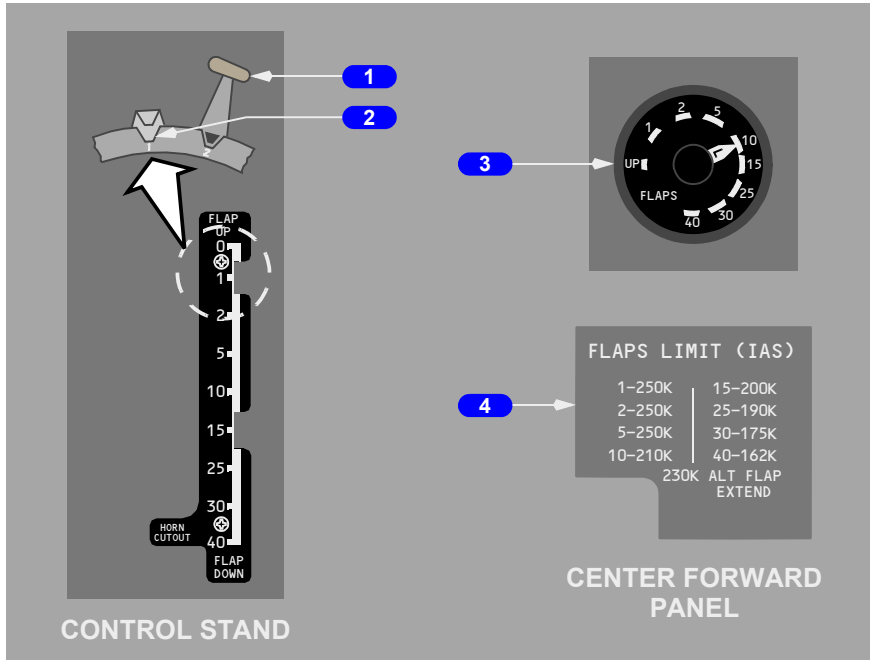

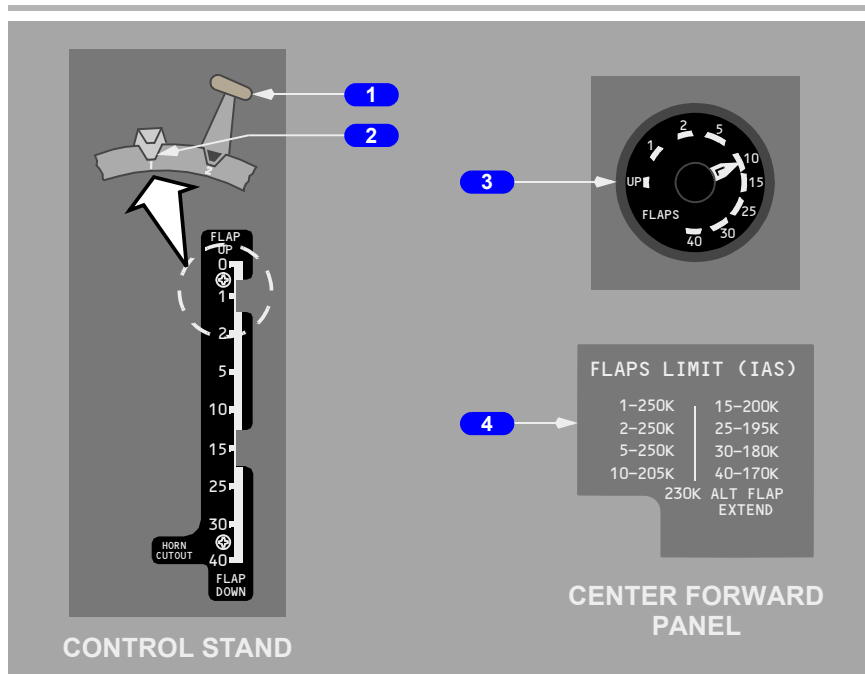

1 FLAP Lever

- selects position of flap control valve, directing hydraulic pressure for flap drive unit
- position of the LE devices is determined by selecting TE flap position
- flap lever positions 30 and 40 arms the flap load relief system as described in Section 9.20.

2 Flap Gates

Prevents inadvertent flap lever movement beyond:

- position 1 - to check flap position for one engine inoperative go-around
- position 15 - to check flap position for normal go-around.


3 Flap Position Indicator

- indicates position of left and right TE flaps
- provides TE flaps asymmetry and skew indication.

4 FLAPS LIMIT Placard

Indicates maximum speed for each flap setting.

Leading Edge Devices

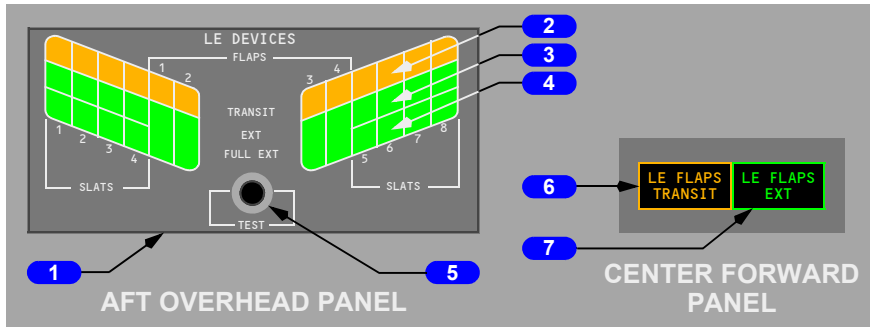

1 Leading Edge Devices (LE DEVICES) Annunciator Panel

Indicates position of individual LE flaps and slats.

Extinguished – related LE device retracted.

2 Leading Edge Devices TRANSIT Lights

Illuminated (amber) – related LE device in transit.

3 Leading Edge Devices Extended (EXT) Lights

Illuminated (green) – related LE slat in extended (intermediate) position.

4 Leading Edge Devices Full Extended (FULL EXT) Lights

Illuminated (green) – related LE device fully extended.

5 Leading Edge Annunciator Panel TEST Switch

Press – tests all annunciator panel lights.

6 Leading Edge Flaps Transit (LE FLAPS TRANSIT) Light

Illuminated (amber) –

- any LE device in transit
- any LE device not in programmed position with respect to TE flaps
- a LE uncommanded motion condition exists (two or more LE flaps or slats have moved away from their commanded position)
- during alternate flap extension until LE devices are fully extended and TE flaps reach flaps 10.

Note: Light is inhibited during autoslat operation in flight.


7 Leading Edge Flaps Extended (LE FLAPS EXT) Light

Illuminated (green) –

- all LE flaps extended and all LE slats in extended (intermediate) position (TE flap positions 1, 2 and 5)
- all LE devices fully extended (TE flap positions 10 through 40).

Flight Control Surface Position Indicator

[Option]

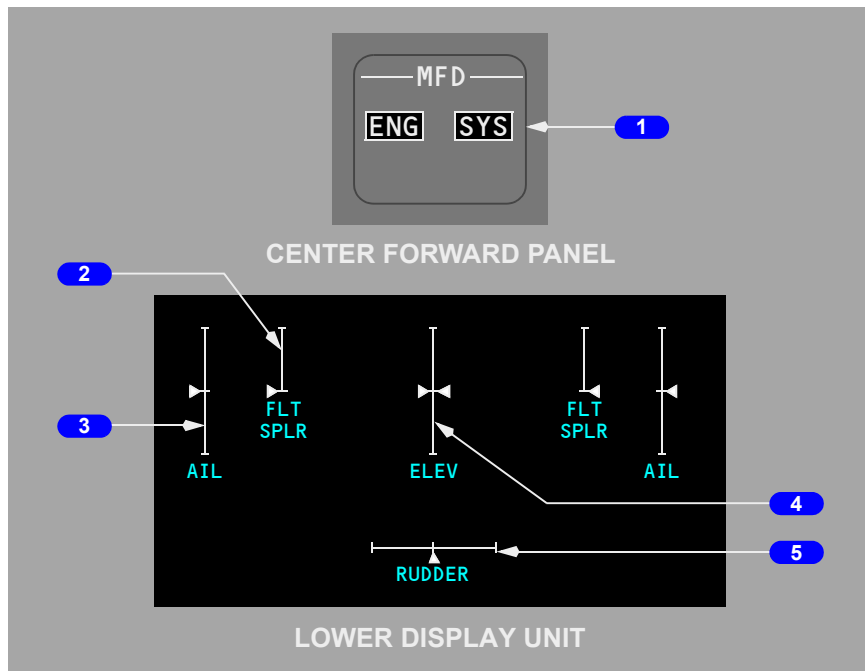

1 MFD System (SYS) Switch

Push – SYS

- displays flight control surface position indications on lower DU; or the inboard DU if the MAIN PANEL DUs switch is placed to the INBD MFD position.
- second push removes indications from the respective DU.

2 Flight Spoilers (FLT SPLR) (white)

Indicates related (left/right) flight spoilers position:

- top mark depicts flight spoilers fully deployed
- bottom mark depicts the spoilers down.

3 Aileron (AIL) (white)

Indicates related (left/right) aileron position:

- top mark depicts maximum up position
- center mark depicts neutral position
- bottom mark depicts maximum down position.

4 Elevator (ELEV) (white)

Indicates elevator position:

- top mark depicts maximum up position
- center mark depicts neutral position when on the ground and trimmed in the green band
- bottom mark depicts maximum down position.

Note: Elevator neutral position varies with stabilizer position, flap position and Mach. The center index mark is set for nominal takeoff conditions. With certain airplane nose up trim settings, the pointer will be somewhat displaced.

5 RUDDER (white)

Indicates rudder position:

- left mark depicts maximum left position
- center mark depicts neutral position
- right mark depicts maximum right position.

Intentionally
Blank

Flight Controls
System Description**Chapter 9**
Section 20

Introduction

The primary flight control system uses conventional control wheel, column and pedals linked mechanically to hydraulic power control units which command the primary flight control surfaces; ailerons, elevators and rudder. The flight controls are powered by redundant hydraulic sources; system A and system B. Either hydraulic system can operate all primary flight controls. The ailerons and elevators may be operated manually if required. The rudder may be operated by the standby hydraulic system if system A and system B pressure is not available.

The secondary flight controls, high lift devices consisting of trailing edge (TE) flaps and leading edge (LE) flaps and slats (LE devices), are powered by hydraulic system B. In the event hydraulic system B fails, the TE flaps can be operated electrically. Under certain conditions the power transfer unit (PTU) automatically powers the LE devices. (Refer to Chapter 13, Hydraulics, Power Transfer Unit). They can also be extended using standby hydraulic pressure.

Pilot Controls

The pilot controls consist of:

- two control columns
- two control wheels
- two pairs of rudder pedals
- SPEED BRAKE lever
- FLAP lever
- STAB TRIM cutout switches
- STAB TRIM override switch
- stabilizer trim switches
- stabilizer trim wheel
- AILERON trim switches
- RUDDER trim control
- YAW DAMPER switch
- ALTERNATE FLAPS master switch
- alternate flaps position switch
- FLT CONTROL switches
- flight SPOILER switches

The columns and wheels are connected through transfer mechanisms which allow the pilots to bypass a jammed control or surface.

There is a rigid connection between both pairs of rudder pedals.

The SPEED BRAKE lever allows manual or automatic symmetric actuation of the spoilers.

Flight Control Surfaces

Pitch control is provided by:

- two elevators
- a movable horizontal stabilizer.

Roll control is provided by:

- two ailerons
- eight flight spoilers.

Yaw control is provided by a single rudder. During takeoff, the rudder becomes aerodynamically effective between 40 and 60 knots.

TE flaps and LE flaps and slats provide high lift for takeoff, approach and landing.


[Option: Blended Winglets]

Blended winglets provide enhanced performance, extended range and increased fuel efficiency.

In the air symmetric flight spoilers are used as speed brakes. On the ground symmetric flight and ground spoilers destroy lift and increase braking efficiency.

Flight Control Surfaces Location

[Option: Blended Winglets]

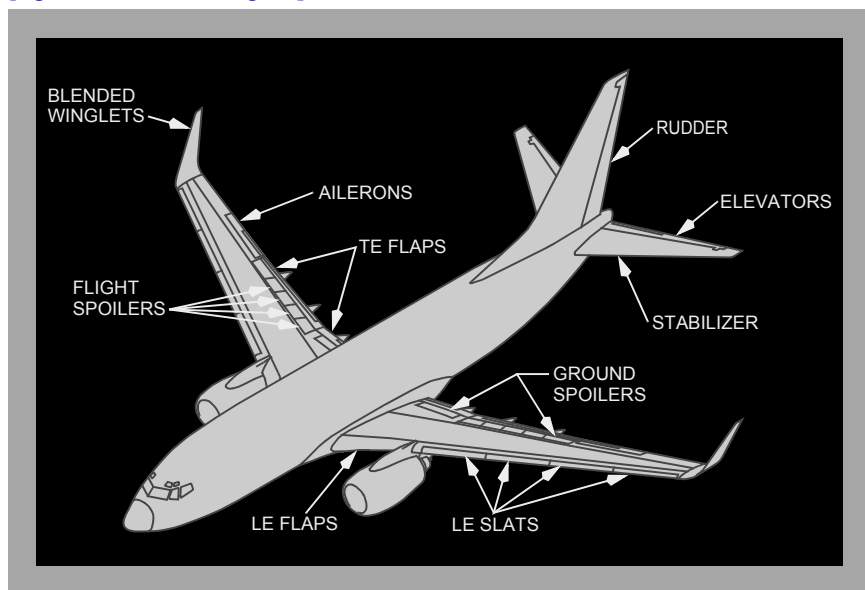

Roll Control

The roll control surfaces consist of hydraulically powered ailerons and flight spoilers, which are controlled by rotating either control wheel.

Ailerons

The ailerons provide roll control around the airplane's longitudinal axis. The ailerons are positioned by the pilots' control wheels. The A and B FLT CONTROL switches control hydraulic shutoff valves. These valves can be used to isolate each aileron, as well as the elevators and rudder, from related hydraulic system pressure.

The Captain's control wheel is connected by cables to the aileron power control units (PCUs) through the aileron feel and centering unit. The First Officer's control wheel is connected by cables to the spoiler PCUs through the spoiler mixer. The two control wheels are connected by a cable drive system which allows actuation of both ailerons and spoilers by either control wheel. With total hydraulic power failure the ailerons can be mechanically positioned by rotating the pilots' control wheels. Control forces are higher due to friction and aerodynamic loads.

Aileron Transfer Mechanism

If the ailerons or spoilers are jammed, force applied to the Captain's and the First Officer's control wheels will identify which system, ailerons or spoilers, is usable and which control wheel, Captain's or First Officer's, can provide roll control. If the aileron control system is jammed, force applied to the First Officer's control wheel provides roll control from the spoilers. The ailerons and the Captain's control wheel are inoperative. If the spoiler system is jammed, force applied to the Captain's control wheel provides roll control from the ailerons. The spoilers and the First Officer's control wheel are inoperative.

Aileron Trim

Dual AILERON trim switches, located on the aft electronic panel, must be pushed simultaneously to command trim changes. The trim electrically repositions the aileron feel and centering unit, which causes the control wheel to rotate and redefines the aileron neutral position. The amount of aileron trim is indicated on a scale on the top of each control column.

If aileron trim is used with the autopilot engaged, the trim is not reflected in the control wheel position. The autopilot overpowers the trim and holds the control wheel where it is required for heading/track control. Any aileron trim applied when the autopilot is engaged can result in an out of trim condition and an abrupt rolling movement when the autopilot is disconnected.

Flight Spoilers

Four flight spoilers are located on the upper surface of each wing. Each hydraulic system, A and B, is dedicated to a different set of spoiler pairs to provide isolation and maintain symmetric operation in the event of hydraulic system failure.

Hydraulic pressure shutoff valves are controlled by the two flight SPOILER switches.

Flight spoiler panels are used as speed brakes to increase drag and reduce lift, both in flight and on the ground. The flight spoilers also supplement roll control in response to control wheel commands. A spoiler mixer, connected to the aileron cable-drive, controls the hydraulic power control units on each spoiler panel to provide spoiler movement proportional to aileron movement.

The flight spoilers rise on the wing with up aileron and remain faired on the wing with down aileron. When the control wheel is displaced more than approximately 10°, spoiler deflection is initiated.

Pitch Control

The pitch control surfaces consist of hydraulically powered elevators and an electrically powered stabilizer. The elevators are controlled by forward or aft movement of the control column. The stabilizer is controlled by autopilot trim or manual trim.

Elevators

The elevators provide pitch control around the airplane's lateral axis. The elevators are positioned by the pilots' control columns. The A and B FLT CONTROL switches control hydraulic shutoff valves for the elevators.

Cables connect the pilots' control columns to elevator power control units (PCUs) which are powered by hydraulic system A and B. The elevators are interconnected by a torque tube. With loss of hydraulic system A and B the elevators can be mechanically positioned by forward or aft movement of the pilots' control columns. Control forces are higher due to friction and aerodynamic loads.

Elevator Control Column Override Mechanism

In the event of a control column jam, an override mechanism allows the control columns to be physically separated. Applying force against the jam will breakout either the Captain's or First Officer's control column. Whichever column moves freely after the breakout can provide adequate elevator control.

Although total available elevator travel is significantly reduced, there is sufficient elevator travel available for landing flare. Column forces are higher and exceed those experienced during manual reversion. If the jam exists during the landing phase, higher forces are required to generate sufficient elevator control to flare for landing. Stabilizer trim is available to counteract the sustained control column force.

Elevator Feel System

The elevator feel computer provides simulated aerodynamic forces using airspeed (from the elevator pitot system) and stabilizer position. Feel is transmitted to the control columns by the elevator feel and centering unit. To operate the feel system the elevator feel computer uses either hydraulic system A or B pressure, whichever is higher. When either hydraulic system or elevator feel pitot system fails, excessive differential hydraulic pressure is sensed in the elevator feel computer and the FEEL DIFF PRESS light illuminates.

Mach Trim System

A Mach trim system provides speed stability at the higher Mach numbers. Mach trim is automatically accomplished above Mach .615 by adjusting the elevators with respect to the stabilizer as speed increases. The flight control computers use Mach information from the ADIRU to compute a Mach trim actuator position. The Mach trim actuator repositions the elevator feel and centering unit which adjusts the control column neutral position.

Stabilizer

The horizontal stabilizer is positioned by a single electric trim motor controlled through either the stab trim switches on the control wheel or autopilot trim. The stabilizer may also be positioned by manually rotating the stabilizer trim wheel.

Stabilizer Trim

Stabilizer trim switches on each control wheel actuate the electric trim motor through the main electric stabilizer trim circuit when the airplane is flown manually. With the autopilot engaged, stabilizer trim is accomplished through the autopilot stabilizer trim circuit. The main electric and autopilot stabilizer trim have two speed modes: high speed with flaps extended and low speed with flaps retracted. If the autopilot is engaged, actuating either pair of stabilizer trim switches automatically disengages the autopilot. The stabilizer trim wheels rotate whenever electric stabilizer trim is actuated.

The STAB TRIM MAIN ELECT cutout switch and the STAB TRIM AUTOPILOT cutout switch, located on the control stand, are provided to allow the autopilot or main electric trim inputs to be disconnected from the stabilizer trim motor.

Control column actuated stabilizer trim cutout switches stop operation of the main electric and autopilot trim when the control column movement opposes trim direction. When the STAB TRIM override switch is positioned to OVERRIDE, electric trim can be used regardless of control column position.

Manual stabilizer control is accomplished through cables which allow the pilot to position the stabilizer by rotating the stabilizer trim wheels. The stabilizer is held in position by two independent brake systems. Manual rotation of the trim wheels can be used to override autopilot or main electric trim. The effort required to manually rotate the stabilizer trim wheels may be higher under certain flight conditions. Grasping the stabilizer trim wheel will stop stabilizer motion.

Stabilizer Trim Operation with Forward or Aft CG

In the event the stabilizer is trimmed to the end of the electrical trim limits, additional trim is available through the use of the manual trim wheels. If manual trim is used to position the stabilizer beyond the electrical trim limits, the stabilizer trim switches may be used to return the stabilizer to electrical trim limits.

Stabilizer Position Indication and Green Band

Stabilizer position is displayed in units on two STAB TRIM indicators located inboard of each stabilizer trim wheel. The STAB TRIM indicators also display the TAKEOFF green band indication.

The trim authority for each mode of trim is limited to:

- Main Electric Trim
 - flaps extended 0.05 to 14.5 units

[737-700]

- flaps retracted 4.30 to 14.5 units

[737-800]

- flaps retracted 3.95 to 14.5 units

[737-900]

- flaps retracted 3.90 to 14.5 units
- Autopilot Trim 0.05 to 14.5 units
- Manual Trim -0.20 to 16.9 units.

The green band range of the STAB TRIM indicator shows the takeoff trim range. An intermittent horn sounds if takeoff is attempted with the stabilizer trim outside the takeoff trim range.


Speed Trim System

The speed trim system (STS) is a speed stability augmentation system designed to improve flight characteristics during operations with a low gross weight, aft center of gravity and high thrust when the autopilot is not engaged. The purpose of the STS is to return the airplane to a trimmed speed by commanding the stabilizer in a direction opposite the speed change. The STS monitors inputs of stabilizer position, thrust lever position, airspeed and vertical speed and then trims the stabilizer using the autopilot stabilizer trim. As the airplane speed increases or decreases from the trimmed speed, the stabilizer is commanded in the direction to return the airplane to the trimmed speed. This increases control column forces to force the airplane to return to the trimmed speed. As the airplane returns to the trimmed speed, the STS commanded stabilizer movement is removed.

STS operates most frequently during takeoffs, climb and go-arounds. Conditions for speed trim operation are listed below:

- Airspeed between 100 KIAS and Mach 0.5
- 10 seconds after takeoff
- 5 seconds following release of trim switches
- Autopilot not engaged
- Sensing of trim requirement

Pitch Control Schematic

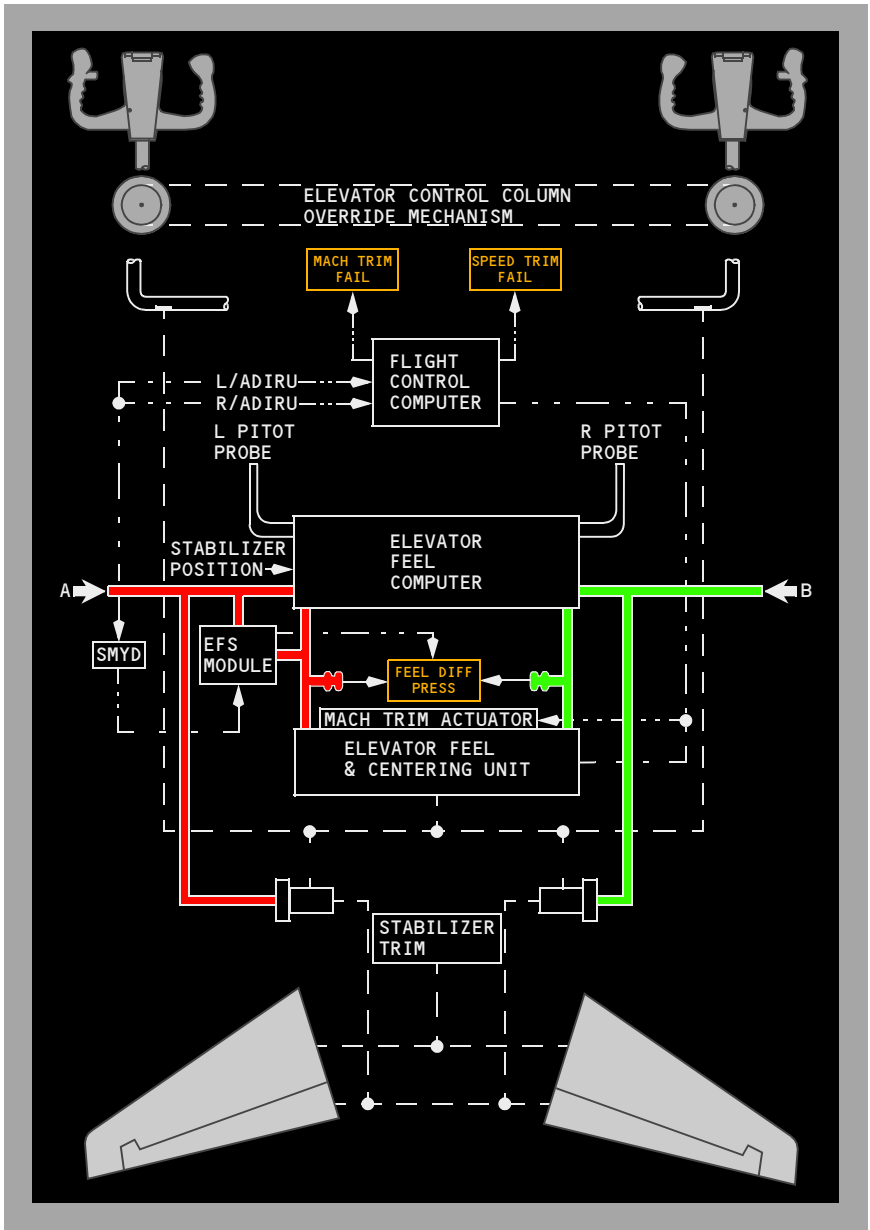

Stall Identification

Stall identification and control is enhanced by the yaw damper, the Elevator Feel Shift (EFS) module and the speed trim system. These three systems work together to help the pilot identify and prevent further movement into a stall condition.

During high AOA operations, the SMYD reduces yaw damper commanded rudder movement.

The EFS module increases hydraulic system A pressure to the elevator feel and centering unit during a stall. This increases forward control column force to approximately four times normal feel pressure. The EFS module is armed whenever an inhibit condition is not present. Inhibit conditions are: on the ground, radio altitude less than 100 feet and autopilot engaged. However, if EFS is active when descending through 100 feet RA, it remains active until AOA is reduced below approximately stickshaker threshold. There are no flight deck indications that the system is properly armed or activated.

As airspeed decreases towards stall speed, the speed trim system trims the stabilizer nose down and enables trim above stickshaker AOA. With this trim schedule the pilot must pull more aft column to stall the airplane. With the column aft, the amount of column force increase with the onset of EFS module is more pronounced.

Yaw Control

Yaw control is accomplished by a hydraulically powered rudder and a digital yaw damper system. The rudder is controlled by displacing the rudder pedals. The yaw damping functions are controlled through the stall management/yaw damper (SMYD) computers.

Rudder (with Rudder System Enhancement Program (RSEP) installed)

[737 modified rudder- installed]

The rudder provides yaw control about the airplane's vertical axis. The A and B FLT CONTROL switches control hydraulic shutoff valves for the rudder and the standby rudder.

Each set of rudder pedals is mechanically connected by cables to the input levers of the main and standby rudder PCUs. The main PCU consists of two independent input rods, two individual control valves, and two separate actuators; one for Hydraulic system A and one for Hydraulic system B. The standby rudder PCU is controlled by a separate input rod and control valve and powered by the standby hydraulic system. All three input rods have individual jam override mechanisms that allows input commands to continue to be transferred to the remaining free input rods if an input rod or downstream hardware is hindered or jammed.

At speeds above approximately 135 kts, both hydraulic system A and B pressure are each reduced within the main PCU by approximately 25% each. This function limits full rudder authority in flight after takeoff and before landing.

The main rudder PCU contains a Force Fight Monitor (FFM) that detects opposing pressure (force fight) between A and B actuators. This may occur if either system A or B input is jammed or disconnected. The FFM output is used to automatically turn on the Standby Hydraulic pump, open the standby rudder shutoff valve to pressurize the standby rudder PCU, and illuminate the STBY RUD ON, Master Caution, and Flight Control (FLT CONT) lights.

The standby rudder PCU is powered by the standby hydraulic system. The standby hydraulic system is provided as a backup if system A and/or B pressure is lost. With the standby PCU powered the pilot retains adequate rudder control capability. It can be operated manually through the FLT CONTROL switches or automatically. (Refer to Chapter 13, Hydraulics, Standby Hydraulic System)

An amber STBY RUD ON light illuminates when the standby rudder hydraulic system is pressurized. The standby rudder system can be pressurized with either Flight Control switch, automatically during takeoff or landing (Refer to Chapter 13, Hydraulics, Standby Hydraulic System) or automatically by the Force Fight Monitor. The STBY RUD ON light illumination activates Master Caution and Flight Control warning lights on the Systems Annunciation Panel.

Rudder Trim

The RUDDER trim control, located on the aft electronic panel, electrically repositions the rudder feel and centering unit which adjusts the rudder neutral position. The rudder pedals are displaced proportionately. The RUDDER TRIM indicator displays the rudder trim position in units.

Yaw Damper

The yaw damper system consists of a main and standby yaw damper. Both yaw dampers are controlled through Stall Management/Yaw Damper (SMYD) computers. The SMYD computers receive inputs from both ADIRUs, both control wheels and the YAW DAMPER switch. SMYDs provide yaw damper inputs to the main rudder power control unit (PCU) or standby rudder PCU, as appropriate.

Either yaw damper is capable of providing dutch roll prevention, gust damping and turn coordination. Yaw damper operation does not result in rudder pedal movement. Only main yaw damper inputs are shown on the yaw damper indicator. The pilot can override either main or standby yaw damper inputs using either the rudder pedals or trim inputs.


During normal operation the main yaw damper uses hydraulic system B and the SMYD computers provide continuous system monitoring. The YAW DAMPER Switch automatically moves to OFF, the amber YAW DAMPER light illuminates and the YAW DAMPER switch cannot be reset to ON when any of the following conditions occur:

- SMYD senses a yaw damper system fault,
- SMYD senses that the yaw damper does not respond to a command,
- B FLT CONTROL switch is positioned to OFF or STBY RUD.

During manual reversion flight (loss of hydraulic system A and B pressure), both FLT CONTROL switches are positioned to STBY RUD. In this case, the YAW DAMPER switch can be reset to ON and the standby hydraulic system powers the standby yaw damper. During Standby Yaw Damper operation, movement of the control wheel sends a signal to the standby rudder PCU to move the rudder. This gives rudder assist to help turn the airplane when control of the ailerons is through manual reversion.

Yaw Control Schematic

[RSEP installed]

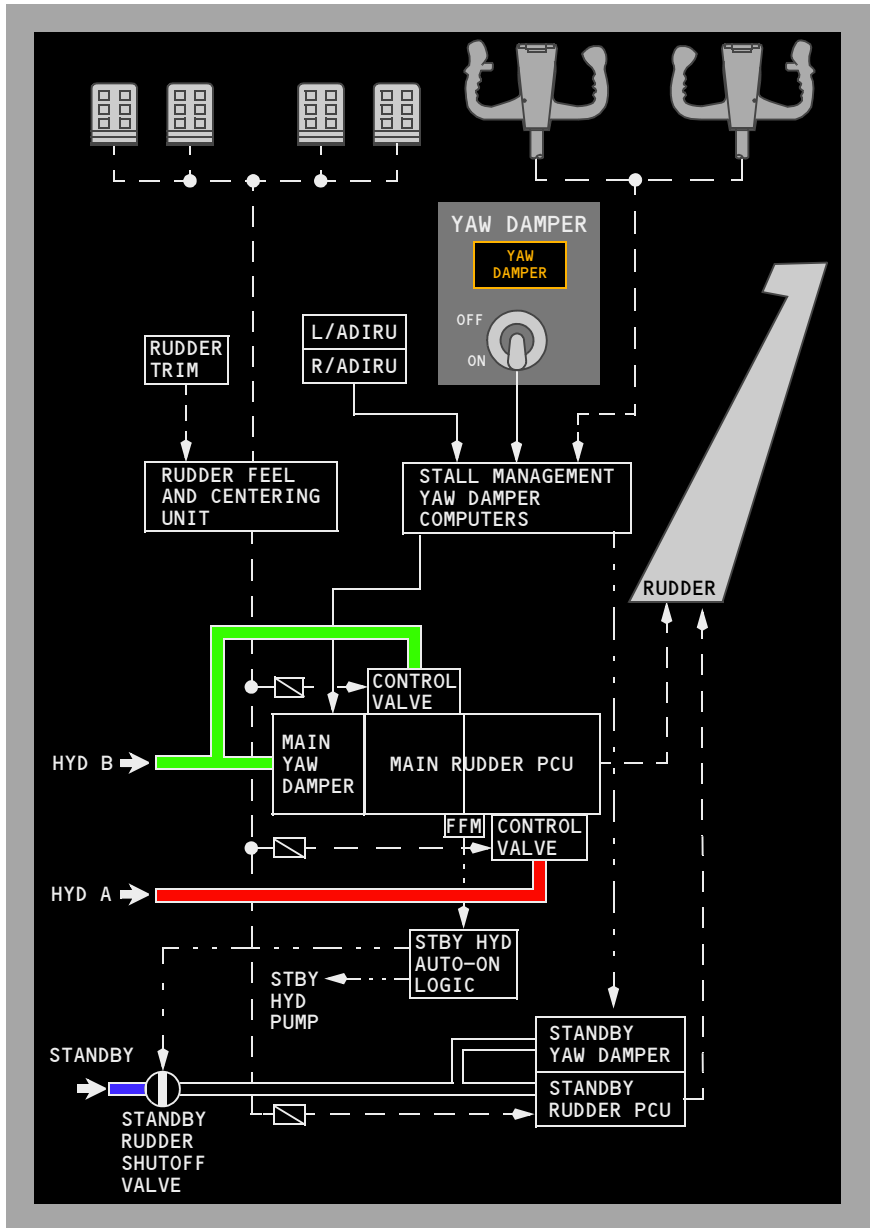

Speed Brakes

The speed brakes consist of flight spoilers and ground spoilers. Hydraulic system A powers all four ground spoilers, two on the upper surface of each wing. The SPEED BRAKE lever controls the spoilers. When the SPEED BRAKE lever is actuated all the spoilers extend when the airplane is on the ground and only the flight spoilers extend when the airplane is in the air.

The SPEEDBRAKES EXTENDED light provides an indication of spoiler operation in-flight and on the ground. In-flight, the light illuminates to warn the crew that the speed brakes are extended while in the landing configuration or below 800 feet AGL. On the ground, the light illuminates when hydraulic pressure is sensed in the ground spoiler shutoff valve with the speed brake lever in the DOWN position.

In-Flight Operation

Operating the SPEED BRAKE lever in flight causes all flight spoiler panels to rise symmetrically to act as speed brakes. Caution should be exercised when deploying flight spoilers during a turn, as they greatly increase roll rate. When the speed brakes are in an intermediate position roll rates increase significantly. Moving the SPEED BRAKE lever beyond the FLIGHT DETENT causes buffeting and is prohibited in flight.

Ground Operation

During landing, the auto speed brake system operates when these conditions occur:

- SPEED BRAKE lever is in the ARMED position
- SPEED BRAKE ARMED light is illuminated
- radio altitude is less than 10 feet
- landing gear strut compresses on touchdown

Note: Compression of any landing gear strut enables the flight spoilers to deploy. Compression of the right main landing gear strut enables the ground spoilers to deploy.

- both thrust levers are retarded to IDLE
- main landing gear wheels spin up (more than 60 kts).

The SPEED BRAKE lever automatically moves to the UP position and the spoilers deploy.

If a wheel spin-up signal is not detected, when the air/ground system senses ground mode (any gear strut compresses) the SPEED BRAKE lever moves to the UP position and flight spoiler panels deploy automatically. When the right main landing gear strut compresses, a mechanical linkage opens the ground spoiler bypass valve and the ground spoilers deploy.


If the SPEED BRAKE lever is in the DOWN position during landing or rejected takeoff, the auto speed brake system operates when these conditions occur:

- main landing gear wheels spin up (more than 60 kts)
- both thrust levers are retarded to IDLE
- reverse thrust levers are positioned for reverse thrust.

The SPEED BRAKE lever automatically moves to the UP position and spoilers deploy.

After an RTO or landing, if either thrust lever is advanced, the SPEED BRAKE lever automatically moves to the DOWN detent and all spoiler panels retract. The spoiler panels may also be retracted by manually moving the SPEED BRAKE lever to the DOWN detent.

Speed Brakes Schematic

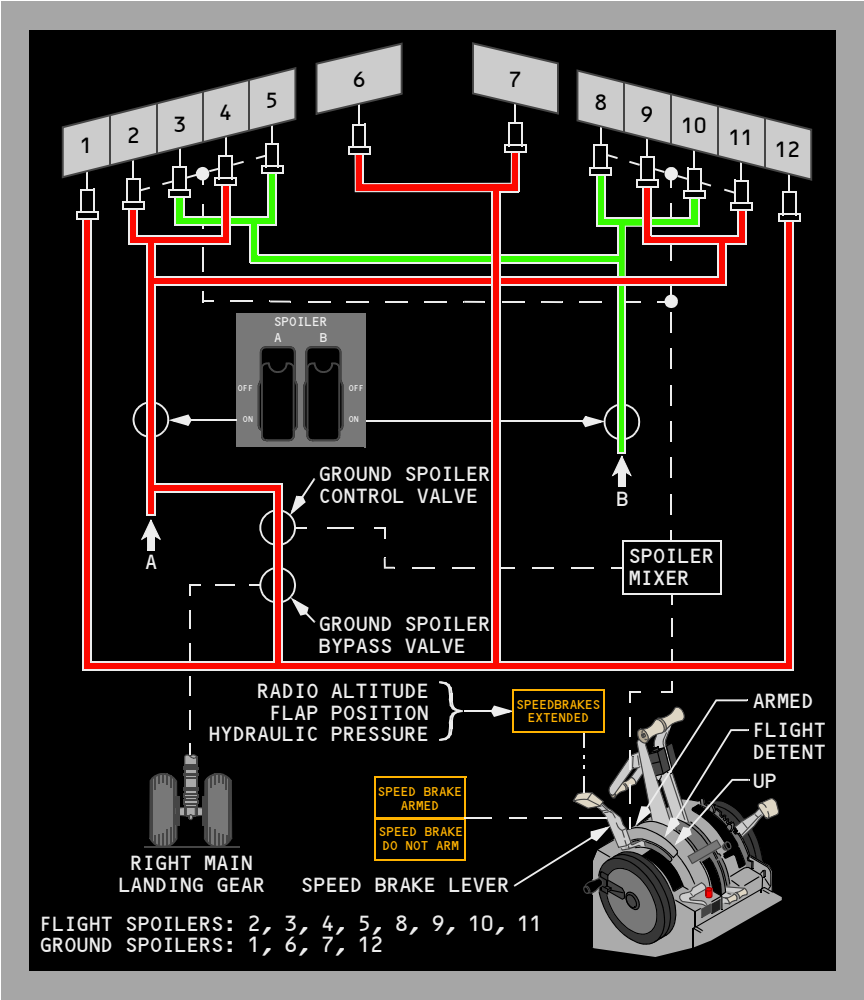

Flaps and Slats

The flaps and slats are high lift devices that increase wing lift and decrease stall speed during takeoff, low speed maneuvering and landing.

LE devices consist of four flaps and eight slats: two flaps inboard and four slats outboard of each engine. Slats extend to form a sealed or slotted leading edge depending on the TE flap setting. The TE devices consist of double slotted flaps inboard and outboard of each engine.

TE flap positions 1–15 provide increased lift; positions 15–40 provide increased lift and drag. Flaps 15, 30 and 40 are normal landing flap positions. Flaps 15 is normally limited to airports where approach climb performance is a factor. Runway length and conditions must be taken into account when selecting a landing flap position.

[Option: JAA]

TE flap positions 1–15 provide increased lift; positions 15–40 provide increased lift and drag. Flap positions 30 and 40 are normal landing flap positions.

To prevent excessive structural loads from increased Mach at higher altitude, flap extension above 20,000 feet should not be attempted.

Flap and Slat Sequencing

LE devices and TE flaps are normally extended and retracted by hydraulic power from system B. When the FLAP lever is in the UP detent, all flaps and LE devices are commanded to the retracted or up position. Moving the FLAP lever aft allows selection of flap detent positions 1, 2, 5, 10, 15, 25, 30 or 40. The LE devices deployment is sequenced as a function of TE flaps deployment.

When the FLAP lever is moved from the UP position to the 1, 2, or 5 position, the TE flaps extend to the commanded position and the LE:

- flaps extend to the full extended position and
- slats extend to the extend position.

When the FLAP lever is moved beyond the 5 position the TE flaps extend to the commanded position and the LE:

- flaps remain at the full extended position and
- slats extend to the full extended position.

The LE devices sequence is reversed upon retraction.

Mechanical gates hinder inadvertent FLAP lever movement beyond flaps 1 for one engine inoperative go-around and flaps 15 for normal go-around.

Indicator lights on the center instrument panel provide overall LE devices position status. The LE DEVICES annunciator panel on the aft overhead panel indicates the positions of the individual flaps and slats.

Flap Load Relief

The flaps/slat electronics unit (FSEU) provides a TE flap load relief function which protects the flaps from excessive air loads. This function is operative at the flaps 30 and flaps 40 positions only. The FLAP lever does not move, but the flap position indicator displays flap retraction and re-extension.

When the flaps are set at 40, the TE flaps:

- retract to 30 if airspeed exceeds 163 knots
- re-extend when airspeed is reduced below 158 knots.

When the flaps are set at 30, the TE flaps:

- retract to 25 if the airspeed exceeds 176 knots
- re-extend when airspeed is reduced below 171 knots.

Autoslats

Autoslat operation is normally powered by hydraulic system B. An alternate source of power is provided by system A through a power transfer unit (PTU) if a loss of pressure is sensed from the higher volume system B engine driven pump. The PTU uses system A pressure to power a hydraulic motorized pump, pressurizing system B fluid to provide power for the autoslat operation. (Refer to Chapter 13, Hydraulics, Power Transfer Unit)

At flap positions 1, 2 and 5 an autoslat function is available that moves the LE slats to full extended if the airplane approaches a stall condition.

The autoslat system is designed to enhance airplane stall characteristics at high angles of attack during takeoff or approach to landing. When TE flaps 1 through 5 are selected, the LE slats are in the extend position. As the airplane approaches the stall angle, the slats automatically begin driving to the full extended position prior to stick shaker activation. The slats return to the extend position when the pitch angle is sufficiently reduced below the stall critical attitude.

Alternate Extension

In the event that hydraulic system B fails, an alternate method of extending the LE devices and extending and retracting the TE flaps is provided.

The TE flaps can be operated electrically through the use of two alternate flap switches. The guarded ALTERNATE FLAPS master switch closes a flap bypass valve to prevent hydraulic lock of the flap drive unit and arms the alternate flaps position switch. The ALTERNATE FLAPS position switch controls an electric motor that extends or retracts the TE flaps. The switch must be held in the DOWN position until the flaps reach the desired position. No asymmetry or skew protection is provided through the alternate (electrical) flap drive system.


DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

**Flight Controls -
System Description**

When using alternate flap extension the LE flaps and slats are driven to the full extended position using power from the standby hydraulic system. In this case the ALTERNATE FLAPS master switch energizes the standby pump and the ALTERNATE FLAPS position switch, held in the down position momentarily, fully extends the LE devices.

Note: The LE devices cannot be retracted by the standby hydraulic system.

Leading Edge Devices and Trailing Edge Flaps Schematic

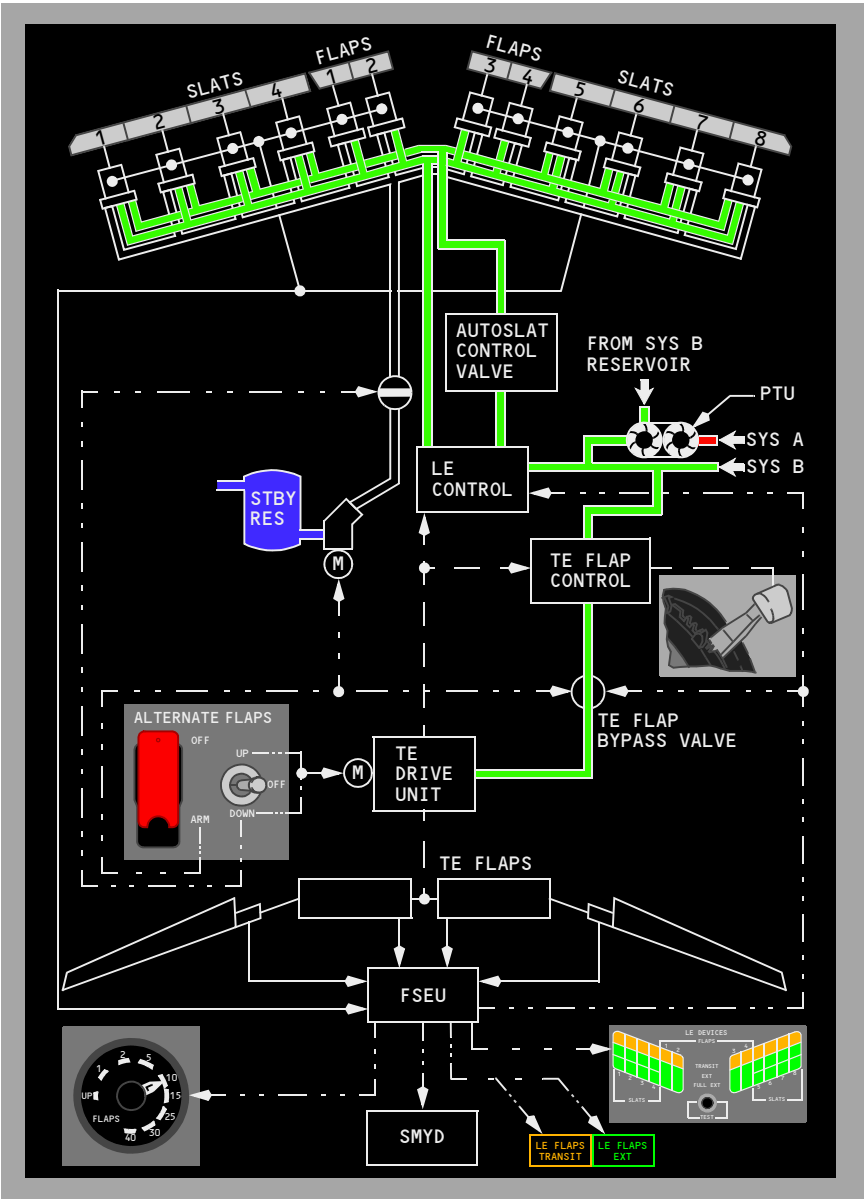

Asymmetry and Skew Detection, Protection and Indication

The FSEU monitors the TE flaps for asymmetry and skew conditions. It also monitors the LE devices for improper position and skew conditions on slats 2 through 7. If a flap on one wing does not align with the symmetrical flap on the other wing, there is a flap asymmetry condition. A skew condition occurs when a TE flap or LE slat panel does not operate at the same rate causing the panel to twist during extension or retraction.

Trailing Edge Flap Asymmetry and Skew

When the FSEU detects a trailing edge asymmetry or skew condition the FSEU:

- closes the TE flap bypass valve
- displays a needle split on the flap position indicator.

Leading Edge Device Improper Position or Skew

When the FSEU detects a LE device in an improper position or a LE slat skew condition, the LE FLAPS TRANSIT light remains illuminated and one of the following indications is displayed on the LE DEVICES annunciator panel:

- amber TRANSIT light illuminated
- incorrect green EXT or FULL EXT light illuminated
- no light illuminated.

There is no skew detection of the outboard slats, 1 and 8, or for the LE flaps. Slat skew detection is inhibited during autoslat operations.

Uncommanded Motion Detection, Protection and Indication

The FSEU provides protection from uncommanded motion by the LE devices or TE flaps.

Leading Edge Uncommanded Motion

Uncommanded motion is detected when no TE flap position or autoslat command is present and:

- two LE flaps move on one wing, or
- two or more slats move on one wing.

The FSEU shuts down the LE control and illuminates the amber LE FLAPS TRANSIT light.

In addition, to prevent uncommanded motion from occurring on the LE devices during cruise, the FSEU maintains pressure on the retract lines and depressurizes the extend and full extend lines.

Trailing Edge Uncommanded Motion

Uncommanded motion is detected when no FLAP lever or flap load relief command is present and the TE flaps:

- move away from the commanded position
- continue to move after reaching a commanded position, or
- move in a direction opposite to that commanded.

The FSEU shuts down the TE drive unit by closing the TE flap bypass valve. The TE flap shutdown cannot be reset by the flight crew and they must use the alternate flap system to control TE flaps. The shutdown is indicated by the flap position indicator disagreeing with the FLAP lever position. There is no flap needle split.

Flight Instruments, Displays**Chapter 10****Table of Contents****Section 0**

PFD/ND – Displays	10.11
PFD/ND Display System – Overview	10.11.1
Captain Outboard Display	10.11.2
Captain Inboard Display	10.11.3
First Officer Inboard Display	10.11.4
First Officer Outboard Display	10.11.5
Primary Flight Display (PFD)– PFD Airspeed Indications	10.11.6
PFD Airspeed Indications – General	10.11.6
PFD Airspeed Indications – Takeoff and Approach.	10.11.8
PFD – Attitude Indications	10.11.11
Attitude Indications – General	10.11.11
PFD Navigation Performance Scales (NPS) Indications . .	10.11.13
PFD Instrument Landing System Indications	10.11.15
Expanded Localizer Indications	10.11.17
PFD Radio Altitude Indications	10.11.17
Traffic Alert and Collision Avoidance Indications.	10.11.18
GPWS Annunciations	10.11.19
PFD – Altitude Indications	10.11.20
Altitude Indications– General	10.11.20
PFD Barometric Indications	10.11.21
Landing Altitude/Minimums Indications	10.11.23
PFD – Vertical Speed Indications	10.11.25
Vertical Speed Indications – General	10.11.25
PFD - Heading and Track Indications	10.11.26
Heading and Track Indications– General	10.11.26
PFD Failure Flags	10.11.27
Additional Annunciations and Alerts	10.11.29
Angle of Attack (AOA) Disagree Alert	10.11.29
Display System Annunciations	10.11.29
Displays Control Panel Annunciation	10.11.31
Instrument Switch Annunciation	10.11.31

Airspeed Disagree Alert	10.11.32
Altitude Disagree Alert	10.11.33
Navigation Displays – MAP Mode	10.11.33
Expanded and Center MAP Modes	10.11.34
Vertical Situation Display (VSD)	10.11.36
Navigation Displays – Approach Mode	10.11.42
Expanded and Center Approach Modes	10.11.42
Navigation Displays – VOR Mode	10.11.44
Expanded and Center VOR Modes	10.11.44
Navigation Displays – Plan Mode	10.11.46
Plan Mode	10.11.46
Navigation Displays – Advisory Messages	10.11.47
Navigation Advisory Messages	10.11.47
Mode/Frequency Disagree Annunciation	10.11.48
TCAS Messages	10.11.49
Look-Ahead Terrain Messages (GPWS)	10.11.50
Predictive Windshear System (PWS) Message	10.11.51
Navigation Displays – Failure Indications and Flags	10.11.52
Expanded MAP, Center MAP, Expanded APP, Expanded VOR Modes	10.11.52
Vertical Situation Display (VSD)	10.11.54
ND Failure Flags – Center APP and Center VOR Modes ..	10.11.55
Head-Up Display System - Displays	10.12
System Components	10.12.1
Combiner Display	10.12.2
Primary (PRI) Mode Display	10.12.2
Approach Mode Displays	10.12.9
Failure Indications and Flags	10.12.12
Control Panel Display	10.12.12
EFIS Instruments (PFD) – Controls	10.16
EFIS Control Panel (PFD/ND Display)	10.16.1
EFIS Control Panel Controls – Flight Instrument Displays ..	10.16.1

BBJ Flight Crew Operations Manual

EFIS Control Panel Controls – Navigation Displays	10.16.2
Displays Source Control Panel	10.16.4
Heading Reference Switch.	10.16.6
Display Select Panels.	10.16.7
Speed Reference Selector	10.16.8
Display Brightness Controls	10.16.9
Captain Brightness Controls.	10.16.9
First Officer Brightness Controls	10.16.10
Standby Flight Instruments	10.16.11
Standby Magnetic Compass	10.16.11
Standby Attitude Indicator	10.16.12
Standby Altimeter/Airspeed Indicator	10.16.17
Standby Radio Magnetic Indicator	10.16.18
Clock	10.16.19
Flight Recorder	10.16.21
Head-Up Display System – Controls.	10.17
Head-Up Display Control Panel Controls – Flight Instrument Displays.	10.17.1
HUD Annunciator Panel	10.17.2
Combiner Controls.	10.17.4
PFD/ND System Description	10.21
Introduction	10.21.1
Display Brightness Control	10.21.1
DISPLAYS SOURCE Panel	10.21.2
EFIS Control Panels.	10.21.3
Display Select Panel	10.21.3
Display Selection and Control Examples	10.21.4
Normal Display Configuration	10.21.4
Display Unit Failure Automatic Switching	10.21.5
EFIS Control Panel.	10.21.7
Outboard Display Switching	10.21.8

Inboard Display Switching	10.21.9
Lower Display Switching	10.21.11
Display System Information Sources	10.21.12
Air Data Inertial Reference System (ADIRS)	10.21.12
Standby Flight Instruments	10.21.13
Standby Magnetic Compass	10.21.14
Standby Attitude Indicator	10.21.14
Standby Altimeter/Airspeed Indicator	10.21.14
Standby Radio Magnetic Indicator	10.21.14
Clocks	10.21.15
Flight Recorder (DFDR)	10.21.15
Aircraft Condition Monitoring System (ACMS)	10.21.16
Head-Up Display System Description	10.22
Introduction	10.22.1
HUD Computer	10.22.1
Overhead Unit (OHU)	10.22.2
Combiner	10.22.2
Control Panel	10.22.2
Annunciator Panel	10.22.2
Modes of Operation	10.22.2
Primary (PRI) Mode	10.22.2
AIII Approach Mode	10.22.4
IMC Mode	10.22.5
VMC Mode	10.22.6
TCAS Resolution Advisory	10.22.6
Failure Flags and Data Source Annunciations	10.22.6
Primary Flight Display (PFD)	10.31
Introduction	10.31.1
Airspeed	10.31.1
Attitude	10.31.2
Steering Indications	10.31.2


BBJ Flight Crew Operations Manual

Instrument Landing System Indications	10.31.3
Approach Minimums	10.31.3
Radio Altitude	10.31.4
Altitude	10.31.4
Vertical Speed	10.31.5
Heading/Track Indications.	10.31.5
Traffic Alert and Collision Avoidance (TCAS) Indications	10.31.5
GPWS Warnings	10.31.5
PFD/ND Navigation Displays	10.41
Introduction	10.41.1
Map Mode	10.41.1
Navigation Data Points.	10.41.1
VOR and Approach Modes	10.41.1
Plan Mode	10.41.1
ND Information	10.41.2
Heading.	10.41.2
Track.	10.41.2
Traffic	10.41.2
Weather Radar	10.41.2
Failure Flags and Messages	10.41.2
ND Symbology	10.41.3
Heading, Track, and Speed.	10.41.3
Radio Navigation	10.41.5
Map.	10.41.8
Vertical Situation Display (VSD).	10.41.14
Look-Ahead Terrain	10.41.17
Predictive Windshear	10.41.19
TCAS	10.41.20
Head-Up Display System, Symbology.	10.42
Introduction	10.42.1

Head-Up Guidance Display Symbology	10.42.1
TCAS Resolution Advisory	10.42.17
Failure Flags and Data Source Annunciations	10.42.18
Standby Attitude Indicator, Symbology	10.43
Introduction	10.43.1
Standby Attitude Indicator Display Symbology	10.43.1
Electronic Flight Bag (EFB).	10.65
System Components.	10.65.1
System Description.	10.65.1
Display Unit	10.65.3
Display Description	10.65.5
Main Menu	10.65.7
Airport Maps (Typical).	10.65.10
Airport Track Up (moving) Map.	10.65.10
Airport North Up (static) Map	10.65.12
Airport Search.	10.65.14
IDENT page	10.65.16
SYSTEM page	10.65.18
Documents (Typical)	10.65.20
Performance (Typical)	10.65.24
Electronic Log Book (ELB Typical)	10.65.30
LOGBOOK page.	10.65.30
Electronic Log Book (Fault Locator)	10.65.33

PFD/ND Display System – Overview


Display Units

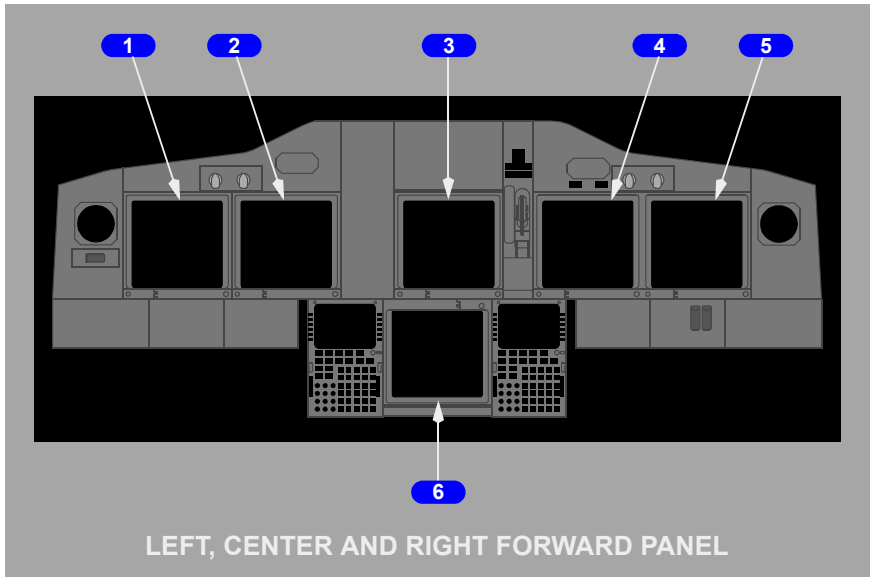

- 1** Captain Outboard Display Unit
- 2** Captain Inboard Display Unit
- 3** Upper Display Unit
- 4** First Officer Inboard Display Unit
- 5** First Officer Outboard Display Unit
- 6** Lower Display Unit

Captain Outboard Display

[Option - Split axis command bars]

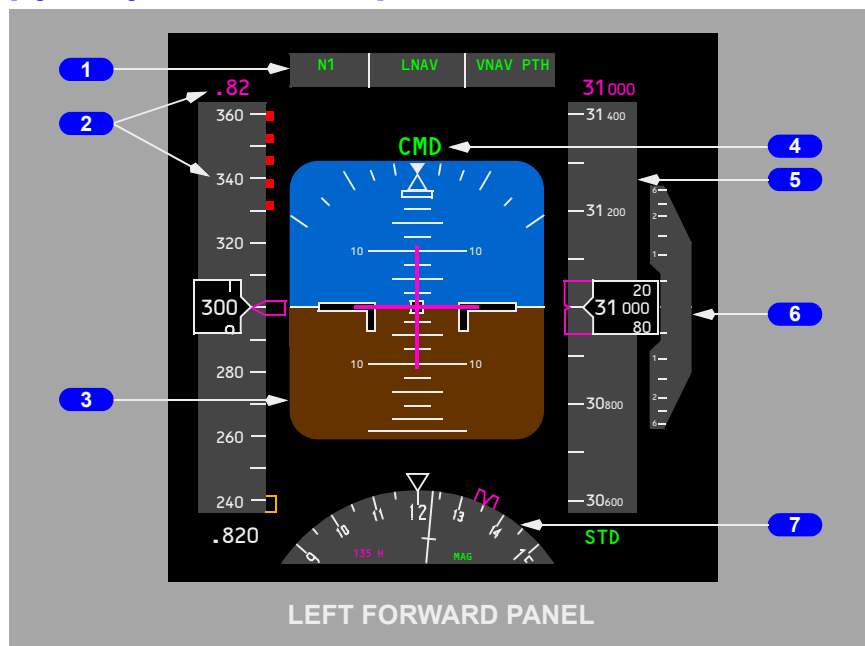

1 Flight Mode Annunciator

Displays current flight modes; refer to Chapter 4, Automatic Flight.

2 Airspeed/Mach Indications

3 Attitude Indications

4 Autopilot, Flight Director System Status

5 Altitude Indications

6 Vertical Speed Indications

7 Heading/Track Indications

Captain Inboard Display

[Option - Track-up display, dual FMC]



1 Navigation Display

Displays map, approach, VOR, or plan modes as selected on the EFIS control panel.

First Officer Inboard Display

[Option - Track-up display, dual FMC]




1 Navigation Display

Displays map, approach, VOR, or plan modes as selected on the EFIS control panel.

First Officer Outboard Display

[Option - Split axis command bars]

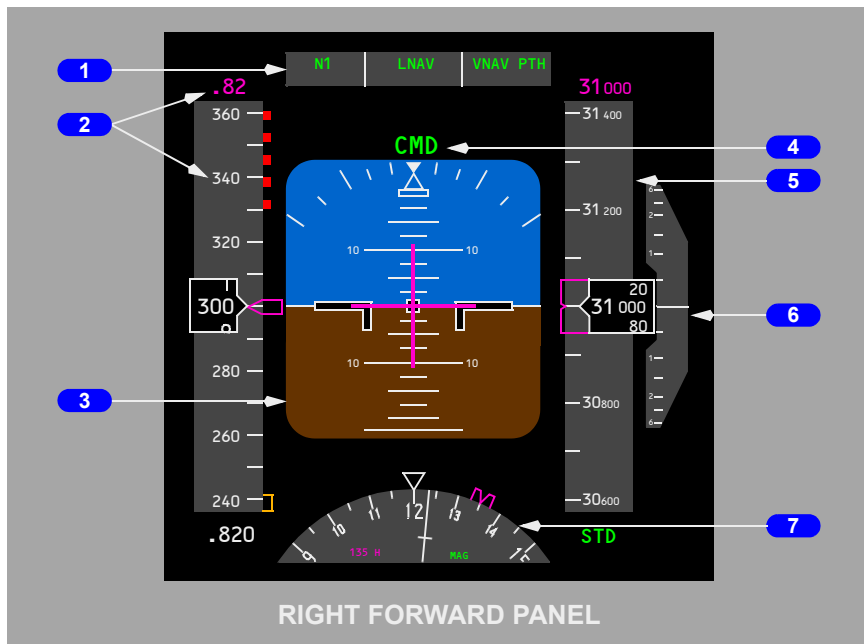

1 Flight Mode Annunciator

Displays current flight modes; refer to Chapter 4, Automatic Flight.

2 Airspeed/Mach Indications

3 Attitude Indications

4 Autopilot, Flight Director System Status

5 Altitude Indications

6 Vertical Speed Indications


7 Heading/Track Indications

Primary Flight Display (PFD)– PFD Airspeed Indications

PFD Airspeed Indications – General

The PFD airspeed indication displays air data inertial reference system (ADIRS) airspeed and other airspeed related information.

[Option - VNAV speed band]

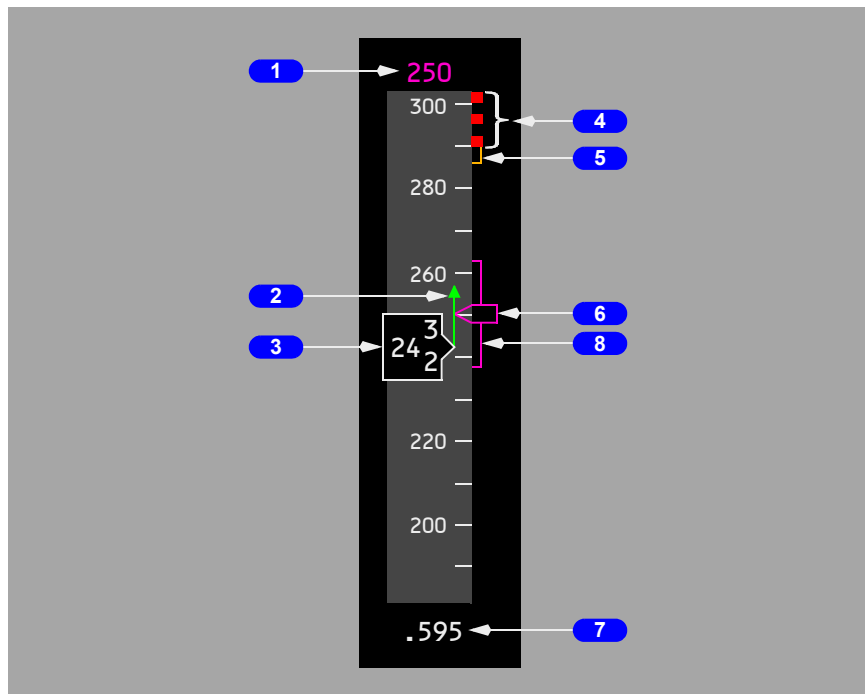

1 Selected Speed (magenta)

Displays target airspeed:

- indicates the airspeed manually selected in the IAS/MACH window
- indicates the FMC computed airspeed when the IAS/MACH window is blank.

2 Speed Trend Vector (green)

Tip of arrow indicates predicted airspeed in the next 10 seconds based on the current airspeed and acceleration.

3 Current Airspeed (white)

Indicates current calibrated airspeed in knots.

[Option - Low airspeed alert]

When current airspeed decreases into the minimum maneuver speed amber bar:

- airspeed readout box turns amber and flashes for 10 seconds
- box returns to white when airspeed is above minimum maneuver speed.

4 Maximum Speed (red and black)

Bottom of the bar indicates the maximum speed as limited by the lowest of the following:

- Vmo/Mmo
- landing gear placard speed
- flap placard speed.

5 Maximum Maneuvering Speed (amber)

Bottom of the bar indicates the airspeed that provides a 0.3 g maneuver margin to high speed buffet. May be displayed at high altitude with flaps up, at relatively high gross weights.

6 Speed Bug (magenta)

Points to the airspeed:

- manually selected in the IAS/MACH window
- indicates the FMC computed airspeed when the IAS/MACH window is blank.

When the selected speed is off scale, the bug is parked at the top or bottom of the tape, with only one half bug visible.

7 Current Mach (white)

[Option - Without groundspeed displayed]

Indicates current Mach number:


- displays when airspeed is 0.40 Mach and above
- blanks when airspeed decreases below 0.40 Mach.

8 VNAV Speed Band (magenta)


[Option - VNAV Speed Band]

Indicates the FMC target airspeed during VNAV PTH descents. The bottom of the bar indicates the autothrottle wake-up speed. The top of the bar indicates the speed at which VNAV will change VNAV PTH to VNAV SPD.

PFD Airspeed Indications – Takeoff and Approach

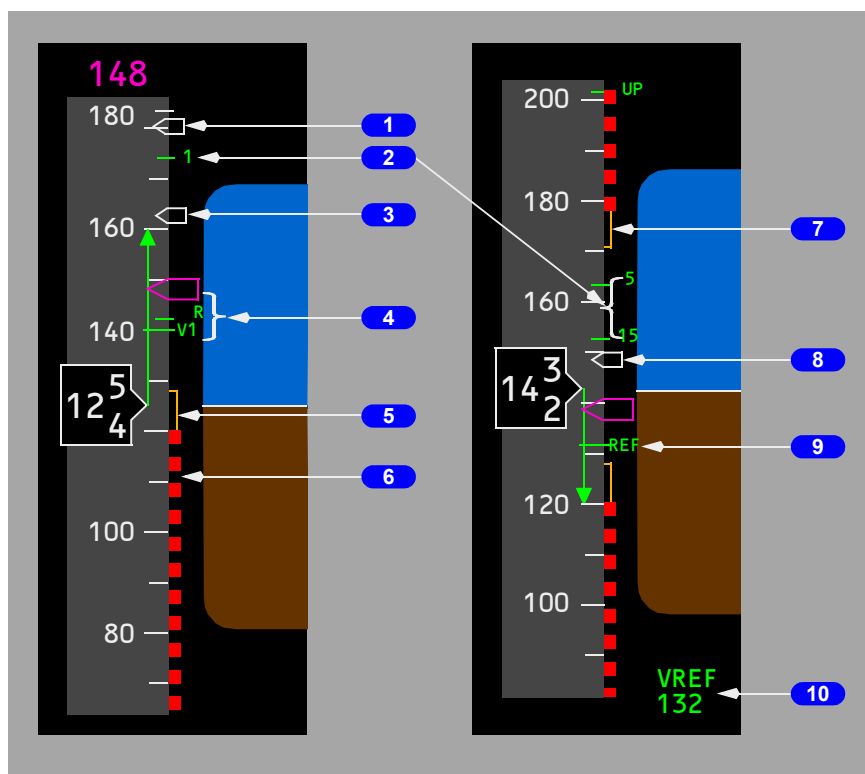

[Option - Flap/Ref Speed Annunciation]

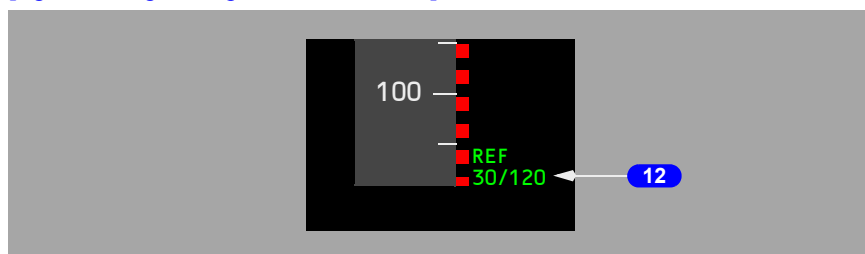

1 Bug 5 (white)

Displayed if speed reference selector on the engine display control panel is in the bug 5 position or SET position and a value greater than 60 knots has been selected. Not available if the speed reference selector is in the AUTO position.

2 Flaps Maneuvering Speeds (green)

Indicates flap maneuvering speed for the displayed flap position:

- displayed after gross weight is entered in the CDU or after takeoff gross weight is set with the speed reference selector
- when the V2+15 bug is displayed for takeoff, the flap maneuvering speed bug for the current flap setting is not displayed, except for flaps 1 takeoff
- numbered flap maneuvering speed bugs are removed when flap lever is moved to flaps 30 or 40
- flap bugs inhibited if less than VREF +4
- UP bug not displayed above approximately 20,000 feet altitude.

3 V2+15 (white)

Displayed for takeoff.

Removed when either of the following occurs:

- at first flap retraction
- when VREF is entered in the CDU.

4 Takeoff Reference Speeds (green)

Indicates V1 (decision speed “V1”) and VR (rotation speed “VR”) as selected on the CDU TAKEOFF REF page (refer to Chapter 11, Flight Management, Navigation) or as set with the SPD REF selector switch:

- amber NO VSPD is displayed on the ground if V1 and VR are not selected on the CDU or are not set with the SPD REF selector
- displayed for takeoff when speed is greater than 80 knots
- removed at lift-off
- V1 speed is displayed at the top of airspeed indication when selected and value is off scale

[Option - V1 aural alert]

- V1 is automatically called out by voice aural.

5 Minimum Maneuver Speed (amber)

Top of bar indicates minimum maneuver speed for full maneuver capability and provides 40° bank capability in 1g flight to stick shaker or initial buffet.

Inhibited on takeoff until first flap retraction or valid VREF entered.

6 Minimum Speed (red and black)

Top of bar indicates the speed at which stick shaker occurs.

7 Maximum Maneuvering Speed (amber)

[Option] - CDS Software Upgrade - BP02/04/06

When flaps are not up, bottom of the bar indicates flap limit placard speed for the next normal flap setting. The display logic is based on a normal flap setting sequence of 1, 5, 15, 30. The bar is removed when the flap lever is moved to the landing flap selected on the APPROACH REF page or when the flap lever is moved to flaps 40.

8 VREF+20 (white)

Displayed after selection of VREF. Points to target airspeed in the event an engine is lost during approach.

9 Landing Reference Speed (green)

Indicates REF (reference speed) as selected on the CDU APPROACH REF page (refer to Chapter 11, Flight Management, Navigation) or as set with the speed reference selector on the engine display control panel.

REF speed is displayed at the bottom of airspeed indication when selected and value is off scale.

10 Speed Reference Display (green)

Displayed if the airspeed and/or weight is entered via the speed reference selector on the engine display control panel:

- on the ground, V1, VR, and takeoff gross weight may be selected; if VREF is selected, INVALID ENTRY is displayed
- in flight, VREF and landing gross weight may be selected; if V1 or VR is selected, INVALID ENTRY is displayed
- removed when the speed reference selector is moved to the SET position.

12 Flap/VREF Speed Annunciation (green)

[Option - Flap/Ref speed annunciation]

Indicates selected landing flap position and VREF as selected on the CDU APPROACH REF page:


- displayed for flaps 15, 30 and 40
- not shown for VREF set with the speed reference selector.

PFD – Attitude Indications

Attitude Indications – General

The attitude indication displays ADIRS attitude information.

[Option - Split axis command bars, horizon line heading scale]

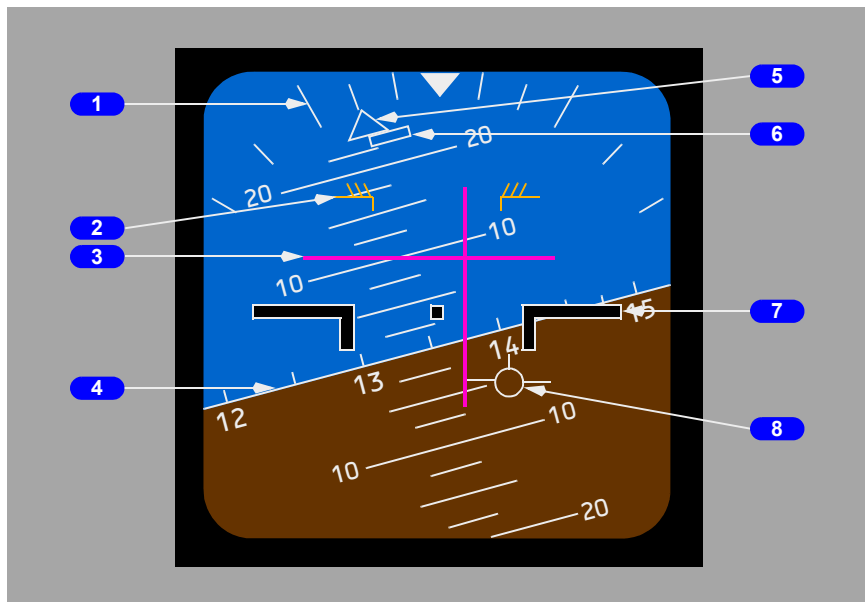

1 Bank Scale (white)

Provides fixed reference for the bank pointer; scale marks are at 0, 10, 20, 30, 45, and 60 degrees.

2 Pitch Limit Indication (amber)

Indicates pitch limit (stick shaker activation for existing flight conditions).

- displayed when the flaps are not up.

[Option - PLI pop-up]

- displayed at slow speeds with the flaps up.

3 Flight Director Bar (magenta)

Indicates flight director steering commands. (Refer to Chapter 4, Automatic Flight).

4 Horizon Line and Pitch Scale (white)

Indicates the horizon relative to the airplane symbol; pitch scale is in 2.5 degree increments.

[Option - horizon line heading scale]

Horizon scale is in 5 degree increments.

5 Bank Pointer

Indicates bank angle; fills and turns amber if bank angle is 35 degrees or more.

6 Slip/Skid Indication

Displaces beneath the bank pointer to indicate slip or skid:

- fills white at full scale deflection
- turns amber if bank angle is 35 degrees or more; fills amber if the slip/skid indication is also at full scale deflection.

7 Airplane Symbol

Indicates airplane attitude relative to the horizon.


8 Flight Path Vector (FPV) Indication (white)

Displays flight path angle and drift when selected on the EFIS control panel:

- flight path angle is displayed relative to the horizon line
- drift angle is displayed relative to display center.

PFD Navigation Performance Scales (NPS) Indications

[Option - NPS scale and pointer]

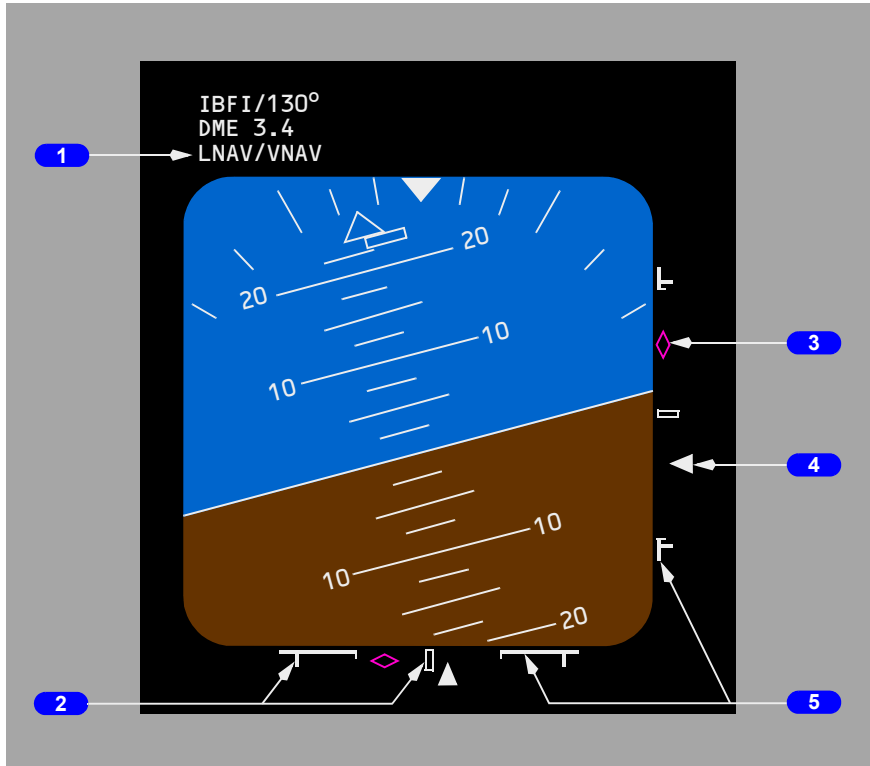

1 Scale ID Annunciation (white)

- displayed above the left corner of ADI
- indicates the source of displayed deviation for each scale
- displayed when LNAV, VNAV, HDG SEL, or TO/GA are engaged
- displayed when current aircraft position is laterally within 1nm or 2 x RNP of the flight plan route – will go out of NPS if lateral limits exceeded
- Possible annunciations include:
 - LNAV/VNAV – (LNAV and VNAV deviations)
 - LOC/VNAV – (ILS localizer course with VNAV deviation)
 - LNAV/ G/S – (LNAV deviation with glideslope)
 - LOC/ G/P – (ILS localizer course with FMC glidepath)
 - ILS – (ILS approach)
 - FMC – (IAN approach)

2 NPS Deviation Scale

- lateral NPS deviation scale represents current FMC lateral RNP
- vertical NPS deviation scale represents current FMC vertical RNP
- displayed if an approach mode is not engaged and either HDG SEL, TO/GA, LNAV or any VNAV mode is engaged.

3 Anticipation Cues

- displayed if valid approach course deviation information is being received while corresponding NPS deviation scale and pointer are displayed
- an unfilled white diamond symbol.
- if engaged lateral mode subsequently transitions to LOC, lateral NPS deviation indications will be removed, and normal ILS localizer indications will be displayed
- if engaged vertical mode subsequently transitions to G/S, vertical NPS deviation indications will be removed, and normal ILS G/S indications will be displayed.

4 NPS Pointer


- a filled magenta symbol when it is not parked at deflection limit
- an unfilled pointer outline when at deflection limit
- indicates lateral/vertical paths relative to the airplane
- will flash for 10 seconds if deviation is within ANP bar limits for 10 continuous seconds.

5 Actual Navigation Performance (ANP) Bars

- lateral/vertical indication of available flight technical error remaining based on total system error
- lateral ANP bars can be displayed in all phases of flight
- vertical ANP bars can be displayed only after reaching top-of-descent
- originate from outer scale and expand inward as a function of increasing ANP relative to RNP
- will just touch at center of scale when ANP equals RNP
- turn from white to amber if current deviation is within the ANP bar limits for 10 continuous seconds.

PFD Instrument Landing System Indications

[Option - Split axis command bars, rising runway]

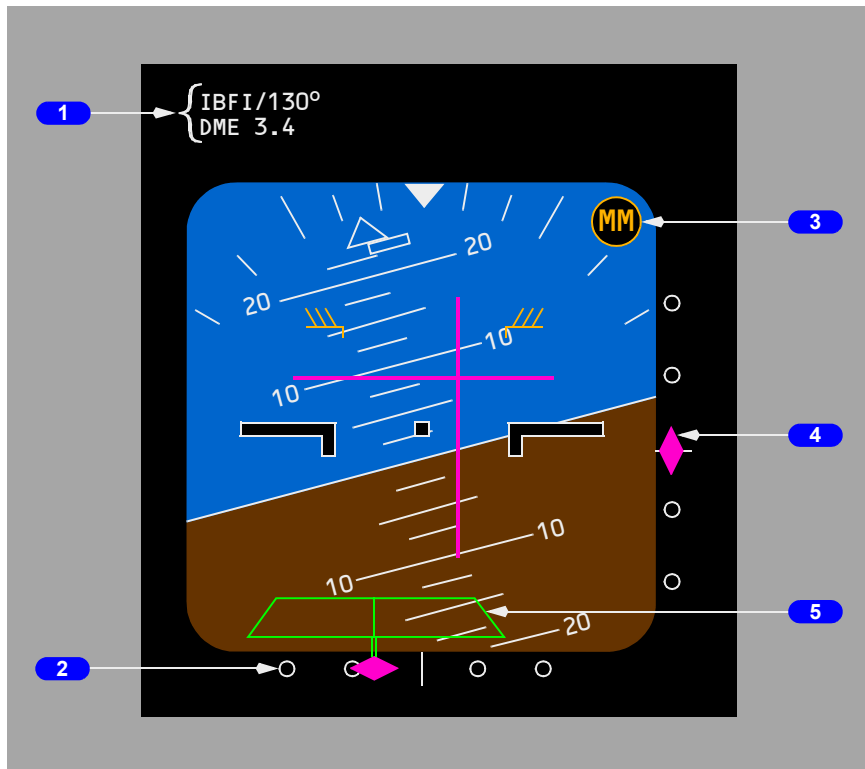

1 Approach Reference

Displays the selected ILS frequency or identifier, approach course, ILS/DME/FMC distance and source annunciation.

If the tuned ILS frequencies disagree (for longer than one minute of time), the frequency turns amber with an amber horizontal line until set identically.

If the approach courses entered in the MCP disagree (for longer than one minute of time), the course turns amber with an amber horizontal line through it.

2 Localizer Pointer and Deviation Scale

The pointer:

- indicates localizer position relative to the airplane
- in view when the localizer signal is received
- fills in solid magenta when within 2 ½ dots from center.

The scale:

- indicates deviation
- in view when the localizer frequency is tuned
- expands when the localizer is engaged and deviation is slightly more than ½ dot.

At low radio altitudes with autopilot engaged the scale turns amber and the pointer flashes to indicate excessive localizer deviation.

Below 1,000 feet AGL, with LNAV engaged and LOC armed, the localizer scale turns amber and the pointer flashes if the localizer is not captured.

Each pilot's deviation alerting system self-tests upon becoming armed at 1500 feet radio altitude. This self-test generates a two second LOC deviation alerting display on each attitude indicator.

3 Marker Beacon symbol

Flashes (and audible) when over one of the marker beacons:

OM (cyan) – outer marker beacon (two dashes per second).

MM (amber) – middle marker beacon (alternate dot and dash).

IM (white) – inner marker beacon (only dots).

4 Glide Slope Pointer and Deviation Scale

The pointer:

- indicates glide slope position
- in view when the glide slope signal is received
- fills in solid magenta when within 2 ½ dots from center.
- the pointer is not displayed when the track and the front course on the mode control panel differ by more than 90 degrees (backcourse).

The scale:

- indicates deviation
- in view when the localizer frequency is tuned.

At low radio altitudes with autopilot engaged the scale turns amber and the pointer flashes to indicate excessive glide slope deviation.

Each pilot's deviation alerting system self-tests upon becoming armed at 1500 feet radio altitude. This self-test generates a two second G/S deviation alerting display on each attitude indicator.

5 Rising Runway (green with magenta stem)


[Option - Rising runway]

Displayed when:

- localizer signal usable and pointer is in view.
- radio altitude is less than 2500 feet.

Rises towards airplane symbol when radio altitude is below 200 feet.

Expanded Localizer Indications

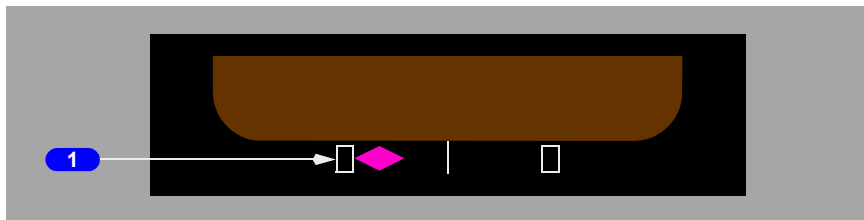

1 Expanded Localizer Scale

[Option - Autopilot or flight director activation]

Displayed when the autopilot or flight director is in LOC mode, deviation is slightly more than ½ dot and track is within 5 degrees of the MCP selected course.


As deviation increases, the deviation pointer remains filled in solid magenta and parks at the limit of the expanded scale. Once the deviation reaches the equivalent of 2.4 dots from center on the standard scale, the pointer becomes unfilled.

Reverts to standard scale when out of LOC mode, and groundspeed is less than 30 knots or radio altitude is greater than 200 feet.

A rectangle equals ½ dot deviation.

PFD Radio Altitude Indications

[Option - Radio altitude below]

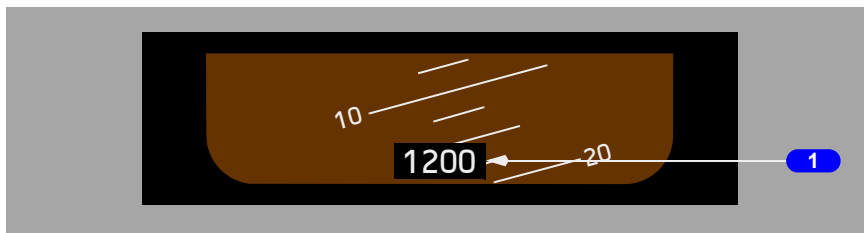


1 Radio Altitude

Displays current radio altitude:

- displayed below 2500 feet AGL
- box highlighted white for 10 seconds upon descent below 2500 feet
- turns amber when below radio altitude minimums.

Traffic Alert and Collision Avoidance Indications

[Option - Split axis command bars]

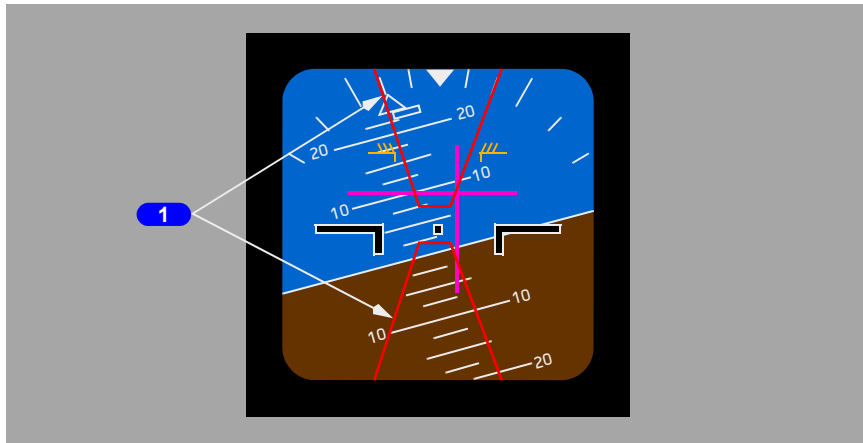


1 Traffic Alert and Collision Avoidance System Pitch Command (red)

The area(s) inside the red lines indicate(s) the pitch region(s) to avoid in order to resolve the traffic conflict. The airplane symbol must be outside the TCAS pitch command area(s) to ensure traffic avoidance. Refer to Chapter 15, Warning Systems.

GPWS Annunciations

[Option - Split axis command bars]

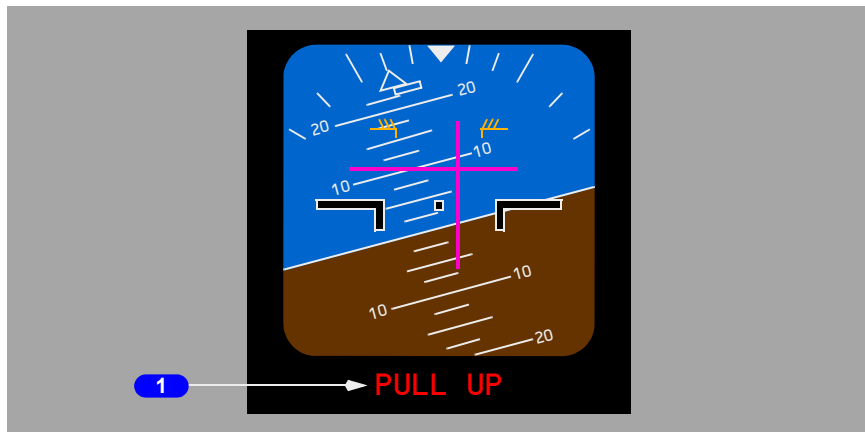

1 GPWS Annunciations (red)


Displays WINDSHEAR or Pull UP alert.

Refer to Chapter 15, Warning Systems.

PFD – Altitude Indications

Altitude Indications– General

The altitude indication displays ADIRS altitude and other altitude related information.

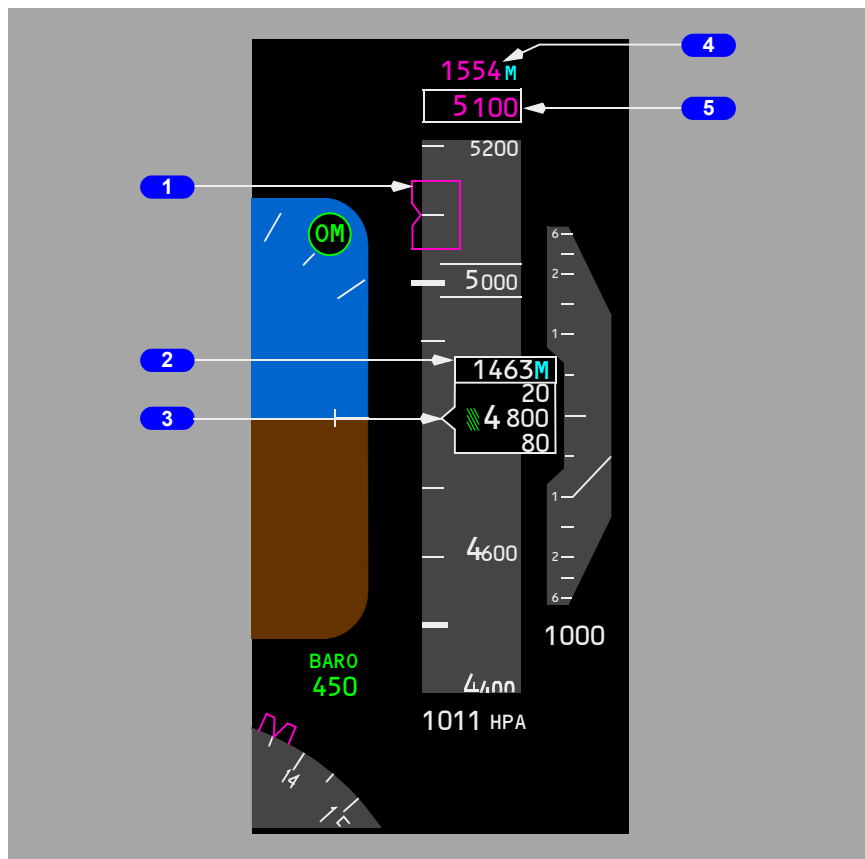

1 Selected Altitude Bug (magenta)

Indicates the altitude set in the MCP altitude window.

When the selected altitude is off scale, the bug is parked at the top or bottom of the tape, with only one half the bug visible.

2 Metric Digital Readout (readout and box–white, metric symbol–cyan)

Displays current altitude in meters when MTRS is selected on the EFIS control panel.

3 Current Altitude

Displays current altitude in increments of thousands, hundreds and twenty feet:

- for positive values of altitude below 10,000 feet, a green crosshatch symbol is displayed
- a negative sign appears when altitude below zero feet is displayed
- readout box becomes bold to denote altitude acquisition
- readout box is highlighted in amber and flashes to denote altitude deviation (refer to Chapter 4, Automatic Flight and Chapter 15, Warning Systems).

4 Metric Selected Altitude Readout (readout–magenta, metric symbol–cyan)

Displays MCP altitude in meters when MTRS is selected on the EFIS control panel.

5 Selected Altitude (magenta)

Displays the altitude set in the MCP altitude window.

The selected altitude box appears in white during an altitude alert. For more information, refer to Chapter 15, Warning Systems.

PFD Barometric Indications

[Option - Altimeter with QFE]

**1 Barometric Settings (green)**

Indicates the barometric setting in either inches of mercury (IN) or hectopascals (HPA) as selected on the EFIS control panel.

Display is boxed amber if numeric is set and airplane is climbing above transition altitude, or if STD is set and descending below transition flight level.

2 Preselected Barometric Setting (white)

STD is displayed when the Barometric Standard (STD) switch is selected on the EFIS control panel.

When STD is displayed, a barometric setting can be preselected on the EFIS control panel barometric selector and is displayed in small white characters below STD.

3 QFE Altitude Reference (green)

[Option - Altimeter with QFE]

Indicates QFE altitude reference if selected on the CDU APPROACH REF Page or TAKEOFF REF Page 2/2.

When selected, QFE is boxed for 10 seconds.


The altitude tape is shaded green during QFE operation.

When QNH is selected, the green shading is removed; QNH is displayed for 10 seconds, then blanks.

When STD is displayed, QFE in small white characters is displayed below STD, and a QFE altimeter setting can be preselected.

Landing Altitude/Minimums Indications

[Option - Radio altitude below ADI]

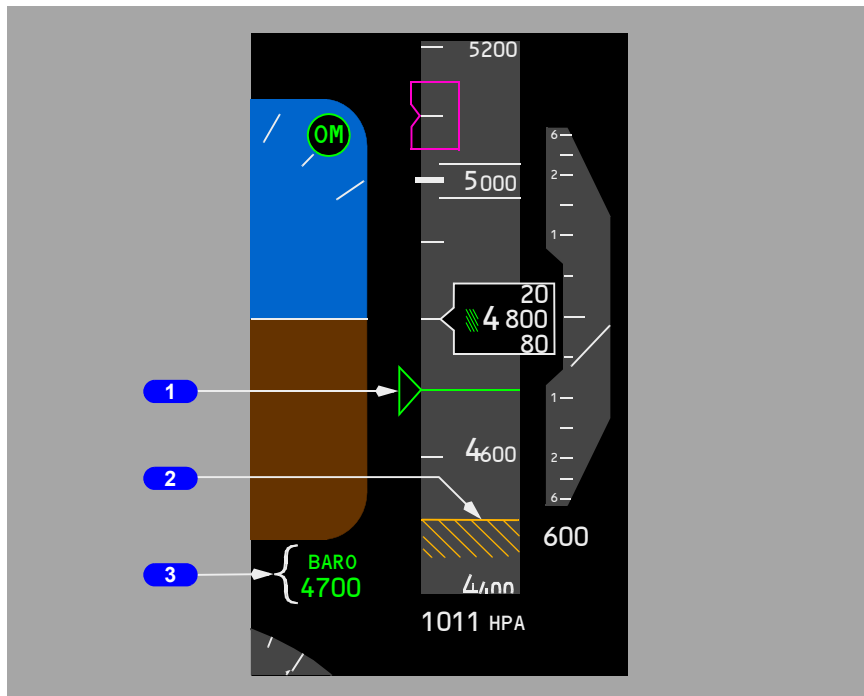

1 BARO Minimums Pointer (green)

Indicates the barometric minimums selected on the EFIS control panel:

- pointer and line turn amber when airplane descends below selected minimum altitude
- reset with the RST switch on the EFIS control panel.

[Option - MDA bug]

After the pointer is set with the BARO position, moving the Minimums Reference selector to RADIO displays only the pointer.

2 Landing Altitude Indication (amber)

The crosshatched area indicates:

- the FMC landing altitude for the destination runway or airport, or
- the landing altitude for departure runway or airport until 400 NM from departure or one-half the distance to destination, whichever occurs first.

3 Minimums Reference/Altitude (green)

[Option - Radio altitude below ADI]

Displays approach minimum reference and altitude set by the MINS selector on the EFIS control panel:

BARO –

- displayed when selector is set to BARO, minimums are in feet MSL
- turns amber and flashes for 3 seconds when airplane descends below selected minimum altitude
- changes back to green:
 - when passing the selected minimum altitude plus 75 feet during go-around
 - at touchdown
 - after pressing the RST switch on the EFIS control panel.


RADIO –

- displayed when selector is set to RADIO, minimums are in feet AGL
- blank when an altitude less than 0 feet is selected
- turns amber and flashes for 3 seconds when airplane descends below selected minimum altitude
- changes back to green:
 - when passing the selected minimum altitude plus 75 feet during go-around
 - at touchdown
 - after pressing the RST switch on the EFIS control panel.

PFD – Vertical Speed Indications

Vertical Speed Indications – General

The vertical speed indication displays ADIRS instantaneous vertical speed.

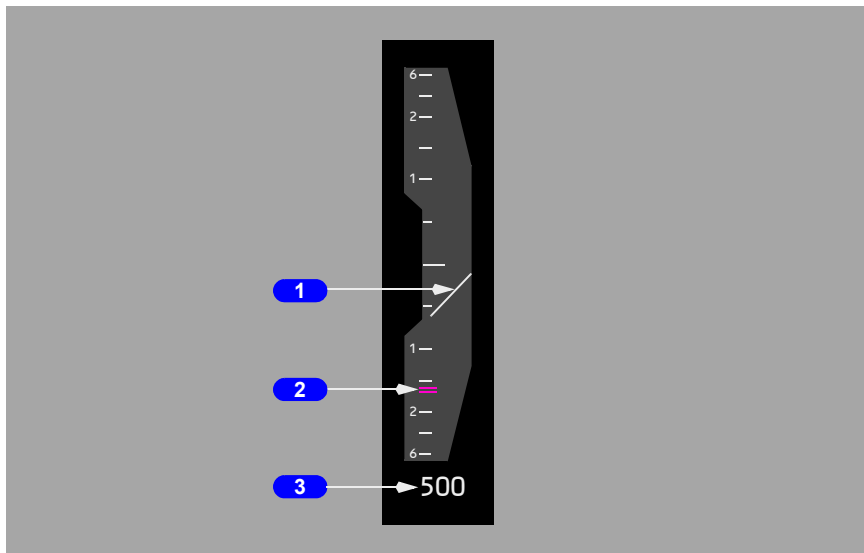

1 Vertical Speed Pointer (white)

Indicates current vertical speed.

2 Selected Vertical speed Bug (magenta)

Indicates the speed selected in the MCP vertical speed window with V/S pitch mode engaged.

3 Vertical speed (white)


Displays vertical speed when greater than 400 feet per minute.

The display is located above the vertical speed indication when climbing and below when descending.

PFD - Heading and Track Indications

Heading and Track Indications– General

The heading and track indications display current FMC/ADIRS heading, track and other information.

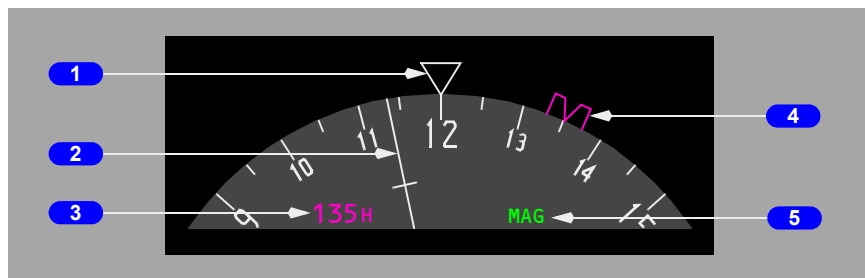

1 Current Heading Pointer (white)

Indicates current heading.

2 Track Pointer (white)

Indicates current track.

3 Selected Heading (magenta)

Digital display of the selected heading bug.

4 Selected Heading Bug (magenta)

Indicates the heading selected on the mode control panel. If the selected heading exceeds the display range, the bug parks on the side of the compass rose in the direction of the shorter turn to the heading.

5 Magnetic/True Heading Annunciation (green)


Displays selected heading reference:

- MAG indicates display is oriented relative to magnetic north
- TRU indicates display is oriented relative to true north; a white box is displayed continuously around TRU
- transition from TRU to MAG results in a green box around MAG for 10 seconds
- when TRU is displayed and the airplane descends more than 2000 feet at a descent rate greater than – 800 feet per minute, an amber box is drawn around TRU; the box flashes for 10 seconds, then turns steady amber.

PFD Failure Flags

The flag replaces the appropriate display to indicate system failure.

[Option - Radio altitude below ADI]

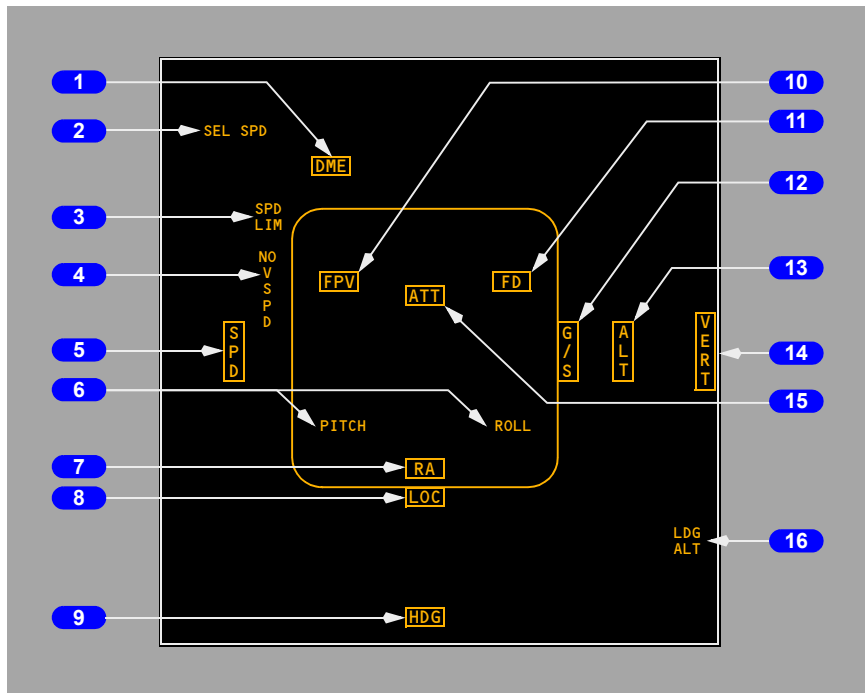

1 Distance Measuring Equipment (amber)

The DME system has failed.

2 Selected Speed (amber)

The selected airspeed data is invalid.

3 Speed Limit Flag (amber)

Displays related with stick shaker or maximum operating speed has failed:

- if the stick shaker warning has failed, the red and black stick shaker speed bar is removed
- if the maximum operating speed has failed, the red and black maximum operating speed bar is removed.

4 No V Speeds Flag (amber)

Displayed when the aircraft is on the ground and both V1 (decision speed) and VR (rotation speed) are not valid or are set to less than 80 knots.

5 Speed Flag (amber)

Speed indication is inoperative.

6 Pitch/Roll Comparator Annunciation (amber)

PITCH displayed when Captain's and F/O's pitch angle displays differ by more than 5 degrees.

ROLL displayed when Captain's and F/O's roll angle displays differ by more than 5 degrees.

7 Radio Altitude Flag (amber)

Radio altitude indication has failed.

8 Localizer Flag (amber)

An ILS frequency is tuned and localizer course indication has failed.

9 Heading Flag (amber)

Heading information failed. Heading cannot be displayed.

10 Flight Path Vector Flag (amber)

FPV is selected on the EFIS control panel, but has failed. De-selection of FPV removes the flag.

11 Flight Director Flag (amber)

The flight director has failed.

12 Glide Slope Flag (amber)

An ILS frequency is tuned and glide slope indication has failed.

13 Altitude Flag (amber)

The altitude display has failed.

14 Vertical Speed Flag (amber)


Vertical speed has failed.

15 Attitude Flag (amber)


The attitude display has failed.

16 Landing Altitude Flag (amber)

The landing altitude input is not available or invalid.

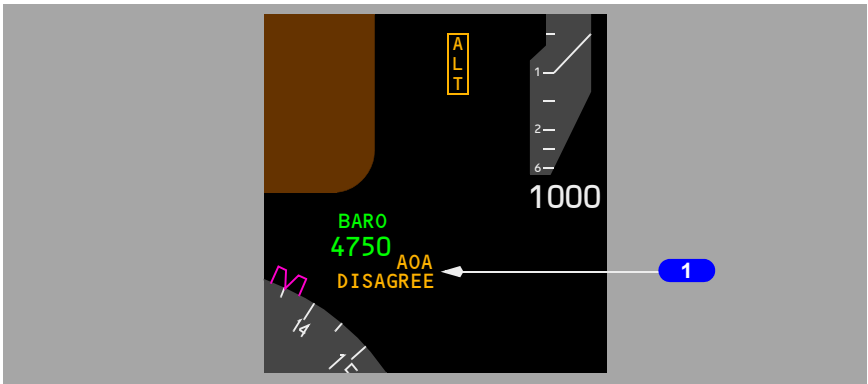Additional Annunciations and Alerts**Angle of Attack (AOA) Disagree Alert****1 AOA Disagree Alert (amber)**

Indicates the Captain's (left) and First Officer's (right) angle of attack values disagree by more than 10 degrees for more than 10 continuous seconds.

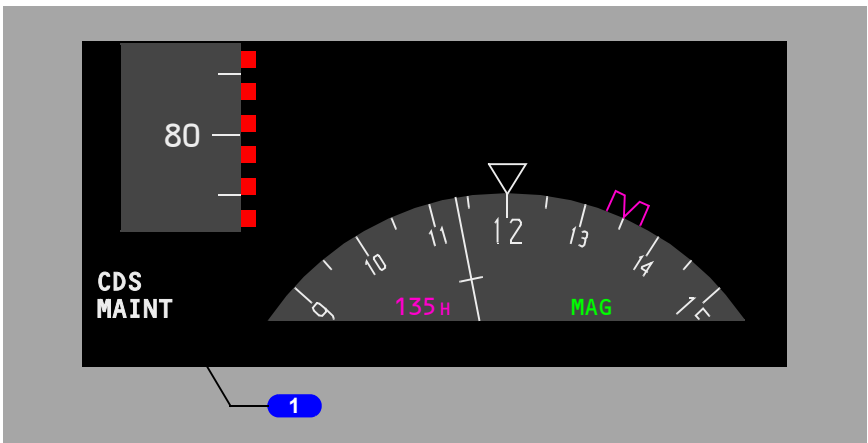Display System Annunciations

1 Display System Annunciations

When there is a problem with the DEU display system, one of the following indications will appear in the lower left corner of the primary flight display:

[Option - With CDS Block software upgrade]


CDS MAINT (white) – A dispatchable CDS fault has occurred. Displayed on the ground only, prior to start of the second engine.

CDS FAULT (amber) – A non-dispatchable CDS fault has occurred. Displayed on the ground only, prior to start of the second engine.

DSPLY SOURCE (amber) – A DEU has failed.

- If a DEU fails above FL220 –
 - the autopilot and flight directors are not affected
- If a DEU fails during climb or descent below FL220 with the failed side autopilot engaged –
 - the flight director pitch command bar is removed from both pilots' displays
 - the flight director pitch command bar reappears at ALT ACQ
 - the autopilot engages in CWS P
 - LVL CHG, VNAV, and V/S are not available with the failed side autopilot
- If a DEU fails during level flight below FL220 with the failed side autopilot engaged –
 - climb or descent to a new altitude is only possible in CWS P
- If a DEU fails in the approach mode above 400 feet with both flight directors on –
 - the flight director pitch and roll command bars are removed from the display on the failed side
- If a DEU fails prior to engaging the second autopilot for a dual autopilot approach –
 - engagement of the second autopilot is inhibited.

Displays Control Panel Annunciation

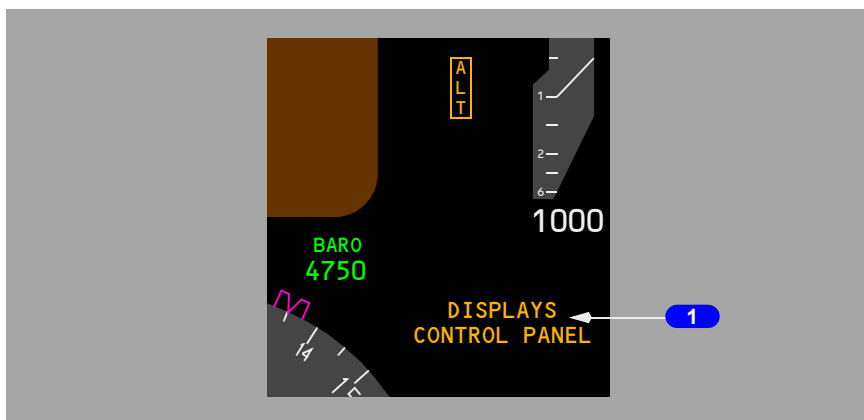


1 Displays Control Panel Annunciation (amber)

Indicates a failed EFIS control panel on the affected side. When DISPLAYS CONTROL PANEL appears in the lower right hand corner of the display, altitude information is removed.

With the CONTROL PANEL select switch on the overhead panel in:

- NORMAL – the corresponding (left or right) affected side EFIS control panel has failed
- BOTH ON 1 – the Captain's (left) affected side EFIS control panel has failed
- BOTH ON 2 – the First Officer's (right) affected side EFIS control panel has failed.

Instrument Switch Annunciation

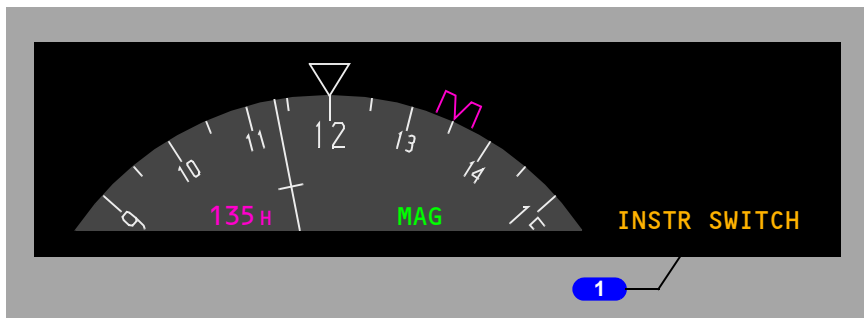


1 INSTR SWITCH Annunciation (amber)

Indicates both the Captain's and First Officer's displays are using the same source of IRU data.

Displayed when the IRS switch on the overhead panel is not in the NORMAL position. See Chapter 11, Section 10, for Inertial Reference System Transfer Switch information.


Airspeed Disagree Alert

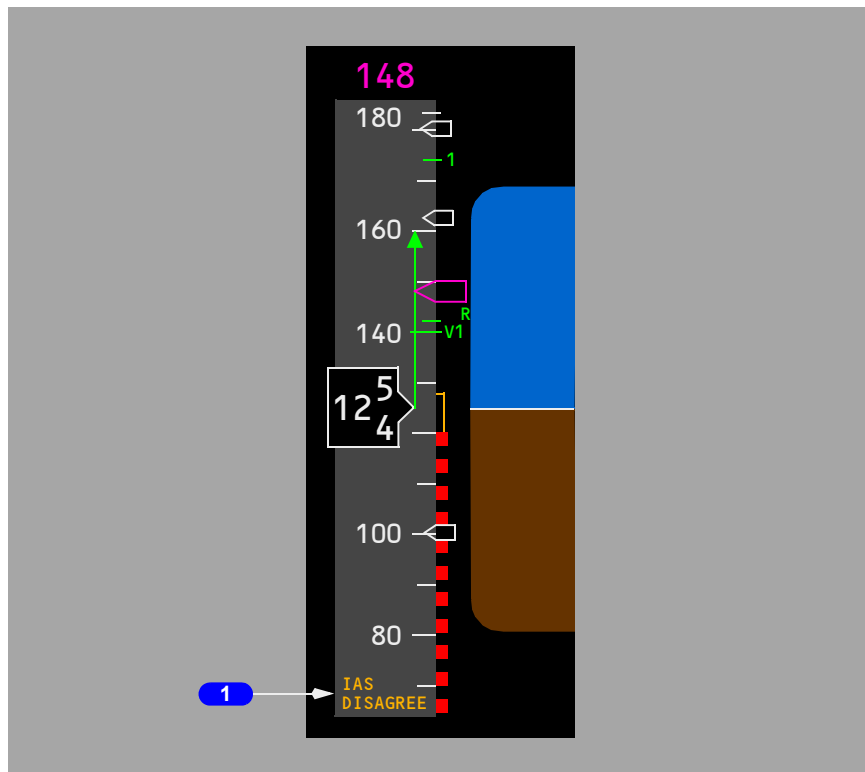

1 Airspeed Disagree Alert (amber)

Indicates the Captain's and F/O's airspeed indications disagree by more than 5 knots for 5 continuous seconds.

Altitude Disagree Alert

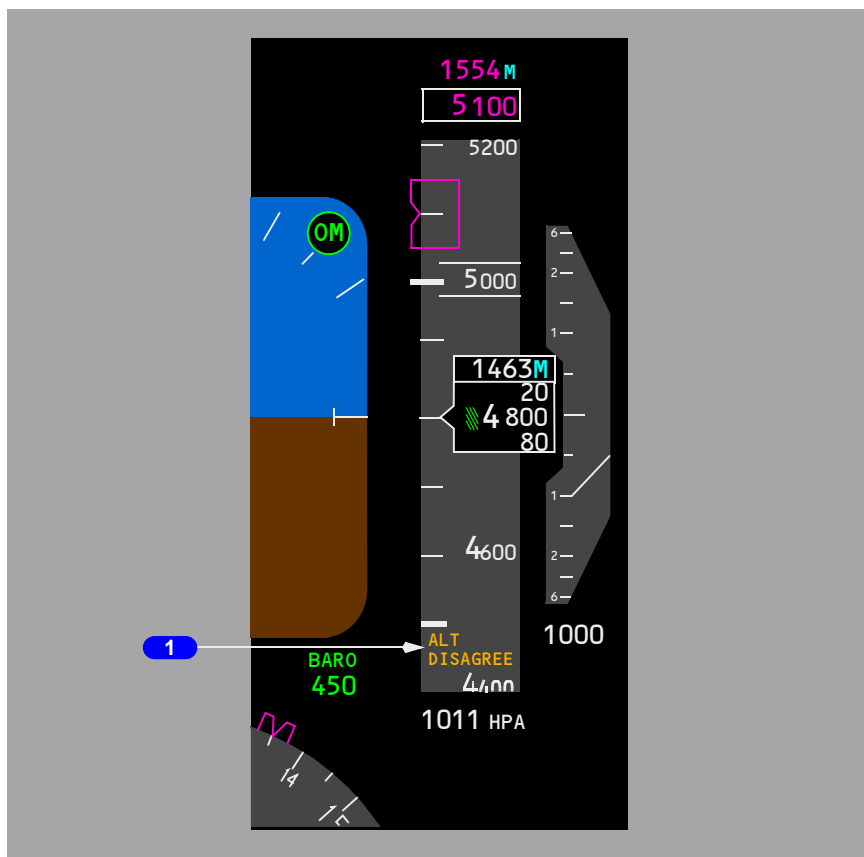

1 Altitude Disagree Alert (amber)

Indicates the Captain's and F/O's altitude indications disagree by more than 200 feet for more than 5 continuous seconds.

Navigation Displays – MAP Mode

Note: Refer to Section 41 of this chapter for a detailed explanation of the navigation symbology shown on the following pages.

The diagram illustrates the EICAS engine display, divided into two main sections: the main engine map and an expanded map.

Main Engine Map:

- 1:** GS 338 TAS 326 336°/15 (Engine 1 parameters)
- 2:** TRK 140 (Engine 1 track)
- 3:** MAG (Engine 1 magnetic field)
- 4:** GRH 0838.4z 32.5 NM (Engine 1 ground speed and distance)
- 5:** APRT WPT STA (Engine 1 airport, waypoint, and station)
- 6:** WX+T +15 VAR (Engine 1 weather and temperature variation)
- 7:** ADF 1 KXYZ (Engine 1 ADF frequency)
- 8:** FMC L (Engine 1 fuel management control)
- 9:** YKM (Engine 1 fuel management control)
- 10:** ELN (Engine 1 engine limit)
- 11:** VOR 2 ELN DME 28.5 (Engine 1 VOR frequency, engine limit, and DME distance)
- 12:** FRED (Engine 1 fuel reduction)
- 13:** GRH (Engine 1 ground speed)
- 14:** ELN (Engine 1 engine limit)
- 15:** VOR 2 ELN DME 28.5 (Engine 1 VOR frequency, engine limit, and DME distance)
- 16:** FMC L (Engine 1 fuel management control)
- 17:** YKM (Engine 1 fuel management control)
- 18:** ELN (Engine 1 engine limit)
- 19:** VOR 2 ELN DME 28.5 (Engine 1 VOR frequency, engine limit, and DME distance)
- 20:** FMC L (Engine 1 fuel management control)

Expanded Map:

- 21:** GS 336 TAS 351 330°/15 (Engine 1 parameters)
- 22:** TRK 330 (Engine 1 track)
- 23:** MAG (Engine 1 magnetic field)
- 24:** ELN01 (Engine 1 engine limit)
- 25:** ELN02 (Engine 1 engine limit)
- 26:** T/C (Engine 1 temperature/clearance)
- 27:** ELN (Engine 1 engine limit)
- 28:** APRT WPT STA (Engine 1 airport, waypoint, and station)
- 29:** WX+T +15 VAR (Engine 1 weather and temperature variation)
- 30:** ADF 1 KXYZ (Engine 1 ADF frequency)
- 31:** FMC L (Engine 1 fuel management control)
- 32:** 02L (Engine 1 fuel management control)
- 33:** VOR 2 ELN DME 18.5 (Engine 1 VOR frequency, engine limit, and DME distance)

Center Map:

- 34:** GS 336 TAS 351 330°/15 (Engine 1 parameters)
- 35:** TRK 330 (Engine 1 track)
- 36:** MAG (Engine 1 magnetic field)
- 37:** ELN01 (Engine 1 engine limit)
- 38:** ELN02 (Engine 1 engine limit)
- 39:** T/C (Engine 1 temperature/clearance)
- 40:** ELN (Engine 1 engine limit)
- 41:** APRT WPT STA (Engine 1 airport, waypoint, and station)
- 42:** WX+T +15 VAR (Engine 1 weather and temperature variation)
- 43:** ADF 1 KXYZ (Engine 1 ADF frequency)
- 44:** FMC L (Engine 1 fuel management control)
- 45:** 02L (Engine 1 fuel management control)
- 46:** VOR 2 ELN DME 18.5 (Engine 1 VOR frequency, engine limit, and DME distance)

- 1** Groundspeed/True Airspeed
- 2** Heading Pointer
- 3** Weather Radar Returns
- 4** Track Line and Range Scale
- 5** Map Options
- 6** Airplane Symbol
- 7** Map Source Annunciation
- 8** Wind Direction/Speed/Arrow
- 9** Current Track
- [Option - Track-up display]
- 10** Number 1 VOR/ADF Pointer
- [Option - ADF]
- 11** Weather Radar Annunciations
- 12** Active Waypoint/ETA/Distance-To-Go
- 13** Compass Rose
- 14** Selected Heading Bug
- 15** Active LNAV Route
- 16** Vertical Deviation Scale and Pointer
- 17** Position Trend Vector

18 Magnetic/True Reference

19 Number 2 VOR/ADF Pointer

[Option - 2 ADF receivers]

20 VOR/ADF Selection, Ident/Frequency, VOR DME

[Option - 2 ADF receivers]

Vertical Situation Display (VSD)

[Option VSD]

The VSD represents a profile view of the airplane and its environment along the current track. Information shown within the cyan dashed lines (enroute corridor) on the ND is shown in profile on the VSD.

Vertical Situation Display (VSD) - Reference Scales



1 Enroute Swath

Indicates area mapped by the VSD.

2 Altitude Reference Scale

Displays altitude in reference to the vertical position of the airplane symbol, terrain, and other objects in the VSD background display.


3 Airplane Symbol

Indicates current airplane altitude (bottom of the triangle) and lateral position (point of the triangle) relative to terrain.

4 Horizontal Reference Scale

Displays range in nautical miles. Actual range shown on VSD is one half the range selected on the EFIS control panel.

Vertical Situation Display (VSD) - General Background

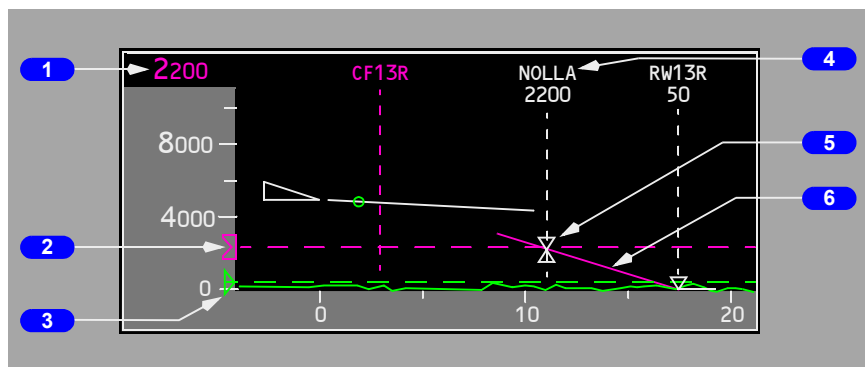

1 MCP Selected Altitude Readout

Displays the altitude set in the MCP altitude window.

2 Selected Altitude Bug

Indicates the altitude set in the MCP altitude window.

When the selected altitude is off scale, the bug is parked at the top or bottom, with only one half the bug visible. The dashed line does not park.

3 BARO Minimums Pointer

Indicates the barometric minimums selected on the EFIS control panel:

- pointer and dashed line turn amber when airplane descends below selected minimum altitude
- reset with the RST switch on the EFIS control panel.

[Option - MDA bug]

After the pointer is set with the BARO position, moving the Minimums Reference selector to RADIO displays only the pointer.

4 Waypoint ID and Anchor Line

Displayed with any altitude constraint directly beneath. Dashed vertical line depicts lateral position.

5 Altitude Constraint Symbol


Displayed as triangle(s) on waypoint anchor line.

6 FMC Approach Glidepath Angle Line

Displayed for approaches that include a designated approach angle.

- extends 10 NM for situational awareness
- anchored to the missed approach waypoint, not the runway.

Vertical Situation Display (VSD) - Flight Path Background

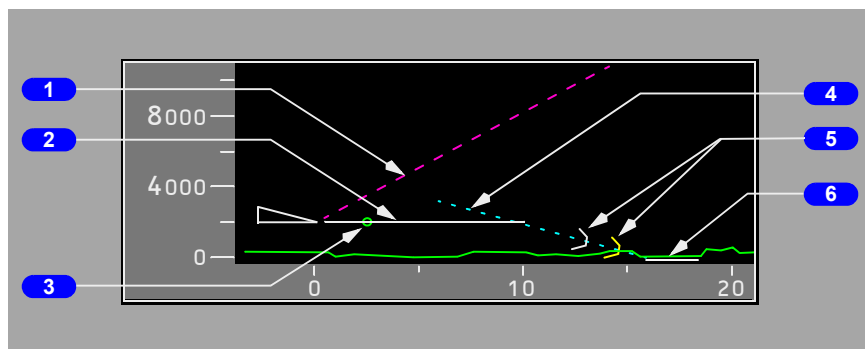

1 MCP Selected Vertical Speed (V/S)

Displays the selected vertical speed as a dashed target angle line when the MCP V/S mode is selected.

2 Vertical Flight Path Vector

Indicates current flight path angle as a function of vertical speed and ground speed. The length of the vector is fixed at one half of the VSD range.

3 Range to Target Speed Dot (RTSD)

Indicates where the airplane will achieve the FMC or MCP target speed.

- dot is blanked within 5 knots of target speed
- dot reappears if speed increases 10 knots or more faster than target speed
- replaced with an unfilled dot at vector end if target speed will not be achieved within length of the vertical flight path vector line.

4 3-Degree Reference Line

Displayed for approaches that do not have a designated approach angle.


- dashed line extends 10 NM for situational awareness
- anchored to the runway threshold
- for reference only, line may intersect terrain.

5 Decision Gates

Displayed on the FMC approach glidepath angle line or 3 degree reference line at 500 feet and 1000 feet above field elevation.

6 Runway

Represents the selected runway.

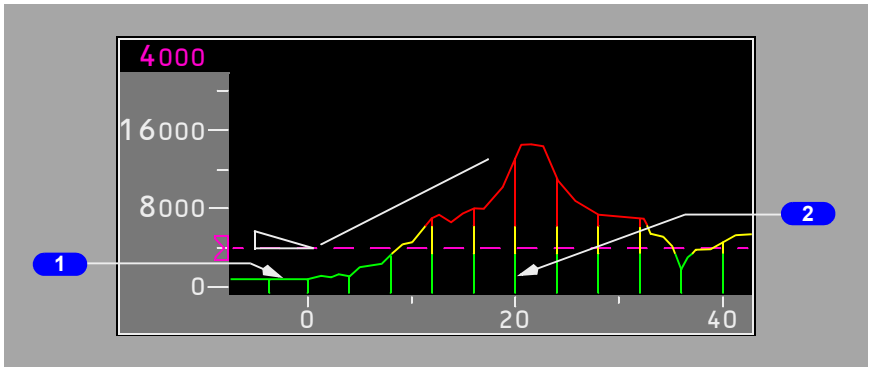Vertical Situation Display (VSD) - Terrain Background**1 Terrain Profile Line**

Represents the highest terrain within the enroute swath.

- highest points of the terrain below and ahead of the airplane
- terrain is depicted so the true altitude separation between the airplane and terrain is shown
- terrain behind the airplane is drawn equal to the terrain at the current position
- VSD terrain uses the same color coding that is used to depict EGPWS terrain on the lateral map –
 - green: terrain is more than 500 feet (250 feet gear down) below the airplane
 - amber: terrain ranges from 500 feet below (250 feet gear down) to 2000 feet above the airplane
 - red: terrain is 2000 feet above the airplane.

Note: See Chapter 15, Section 10, for Terrain Warnings.


2 Vertical Support Lines

Vertical terrain vectors placed at constant intervals along the terrain profile line.

Navigation Displays – Approach Mode

Expanded and Center Approach Modes

[Option - Weather radar range arcs, ADF]

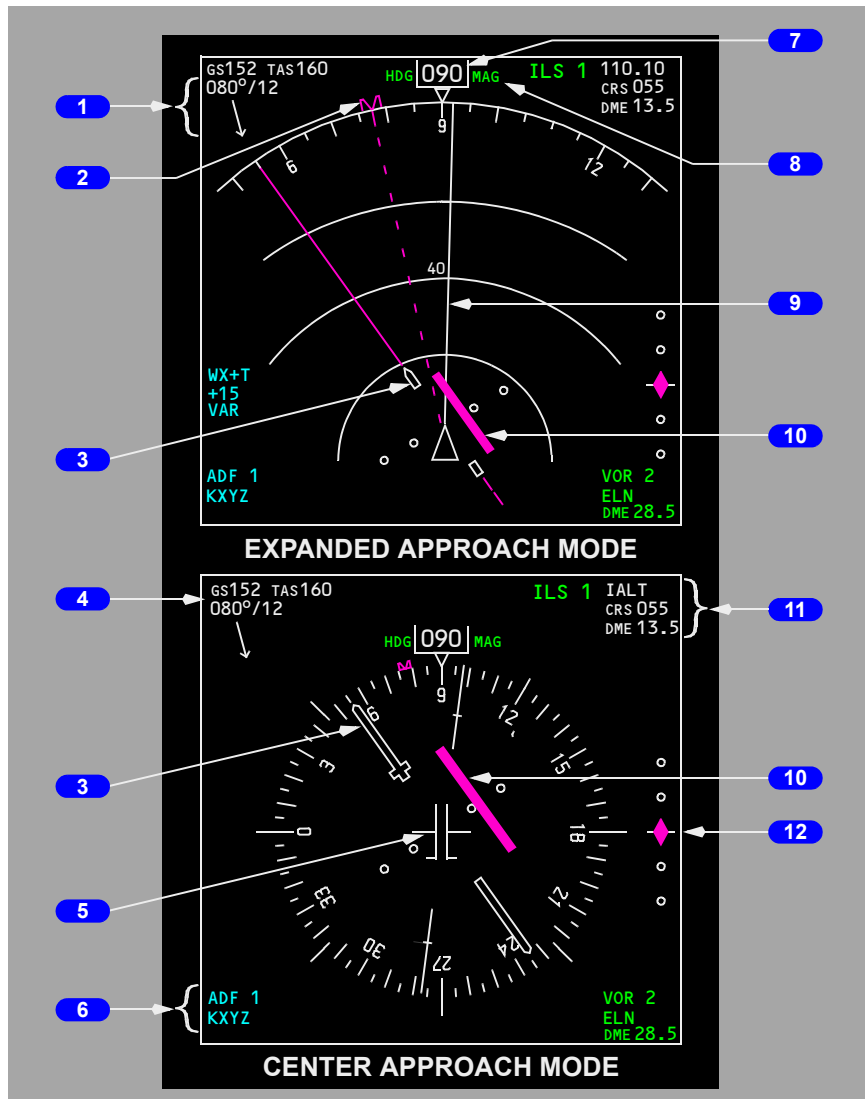


- 1** Wind Direction/Speed/Arrow
- 2** Selected Heading Bug
- 3** Selected Course Pointer
- 4** Groundspeed/True Airspeed
- 5** Airplane symbol
- 6** VOR/ADF Selection/Ident or Frequency/VOR DME
[Option - ADF]
- 7** Current Heading
- 8** Magnetic/True Reference
- 9** Track Line
- 10** Localizer Deviation Indication and Scale
- 11** Reference ILS Frequency or Ident/Course/DME
- 12** Glideslope Pointer and Scale

Navigation Displays – VOR Mode

Expanded and Center VOR Modes

[Option - Weather radar range arcs, ADF]

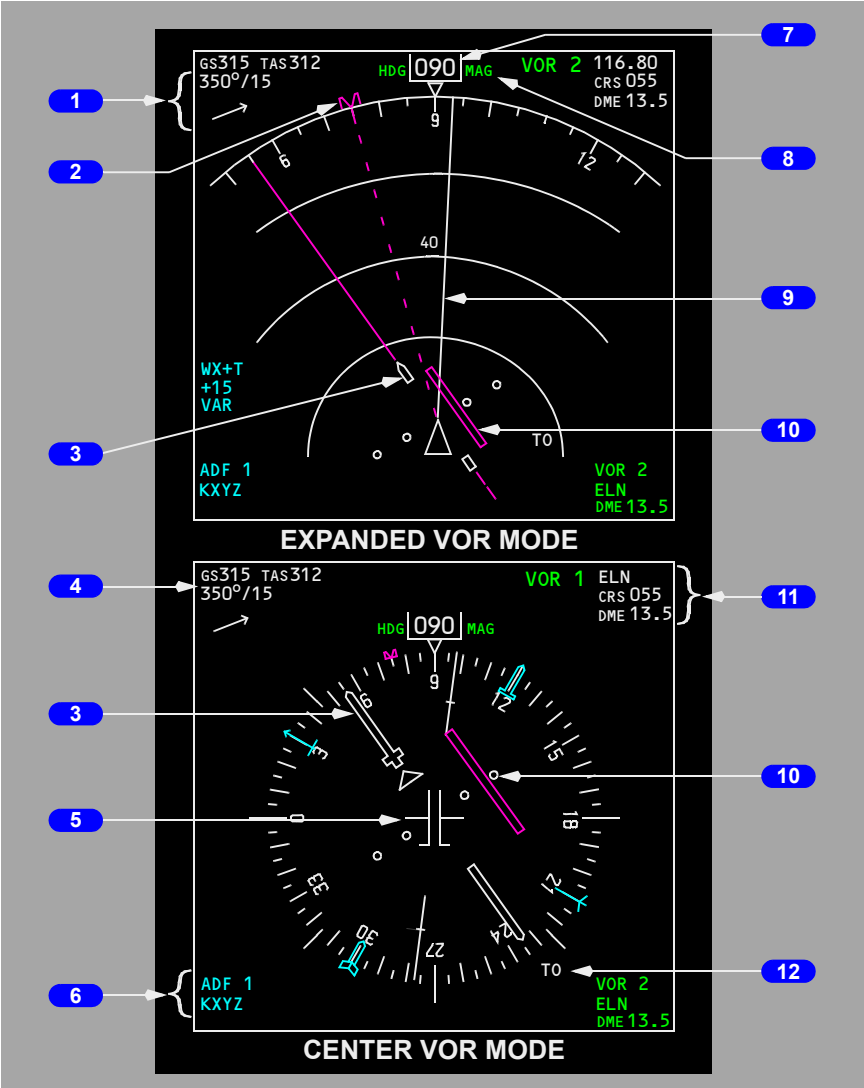


- 1 Wind Direction/Speed/Arrow**
- 2 Selected Heading Bug**
- 3 Selected Course Pointer**
- 4 Groundspeed/True Airspeed**
- 5 Airplane symbol**
- 6 VOR/ADF Selection/Ident or Frequency/VOR DME**
[Option - ADF]
- 7 Current Heading**
- 8 Magnetic/True Reference**
- 9 Track Line**
- 10 Course Deviation Indication and Scale**
- 11 Reference VOR Receiver/Frequency or Ident/Course/DME**
- 12 TO/FROM Indication and TO pointer**

Navigation Displays – Plan Mode

Plan Mode

[Option - Dual FMC]

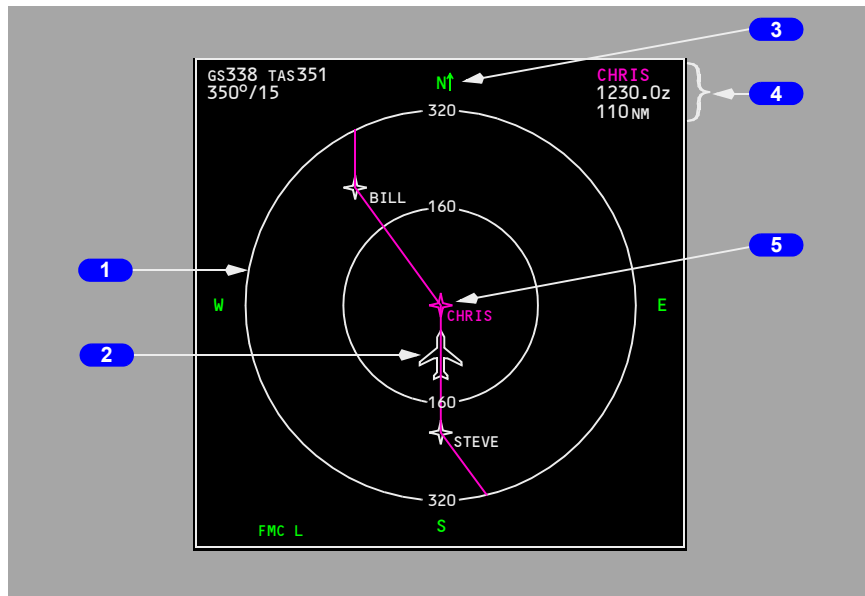

1 Range Circle

2 Airplane Symbol

3 True North Up Arrow


4 Active Waypoint Information

5 Center Waypoint

The waypoint located at the display center is identified as CTR on the CDU RTE LEGS page.

Navigation Displays – Advisory Messages

Navigation Advisory Messages

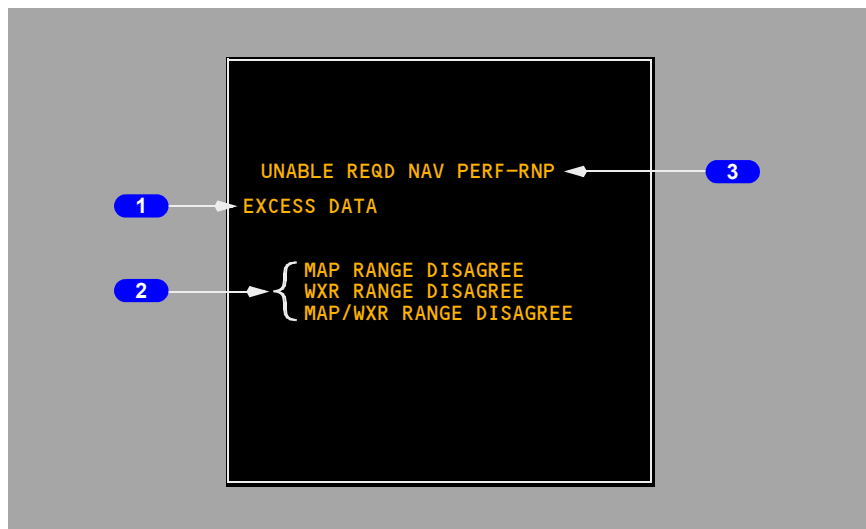

1 Excess Data Annunciation (amber)

The amount of map information sent to the primary display system is too great to display.

When this occurs, the primary display system removes information from the center of the display outward. Information near the outer selected range area is still displayed.

The message can be cleared by:

- decluttering - removing unnecessary navigation information
- reducing the display range
- deselecting one or more of the EFIS MAP switches (STA, WPT, ARPT, DATA, POS).

2 Range Disagreement Annunciations (amber)

MAP RANGE DISAGREE – Indicates selected range on the EFIS control panel is different than the MAP display range.

WXR RANGE DISAGREE – Indicates selected range on the EFIS control panel is different than the WXR display range.


MAP/WXR RANGE DISAGREE – Indicates selected range on the EFIS control panel is different than the MAP and WXR display ranges.

3 Nav Advisory Message (amber)

UNABLE REQD NAV PERF–RNP – Displayed in MAP modes when RNP (Required Navigation Performance) has insufficient navigational accuracy. Refer to Chapter 11, Section 60, FMC Messages.

Mode/Frequency Disagree Annunciation

[Option - Track-up display, ADF]

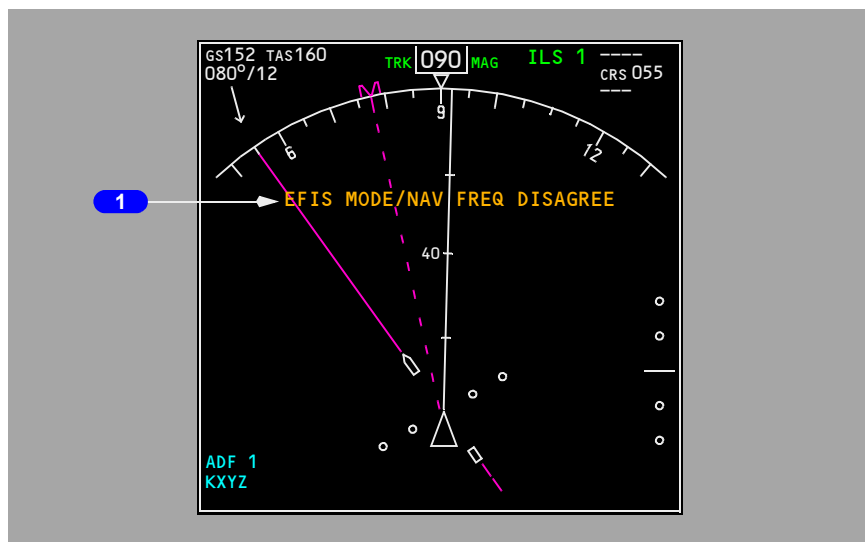

1 EFIS MODE/NAV FREQ DISAGREE (amber)

The ILS or VOR source annunciation corresponds to the position selected on the EFIS control panel and the tuned VOR/ILS frequency.

The annunciation is displayed:

- if APP is selected with a VOR frequency tuned
- if VOR is selected with an ILS frequency tuned.


The DME display and ILS/VOR frequency at the upper right corner display dashes.

The localizer deviation bar, VOR course deviation bar and glide slope pointer are not displayed.

The annunciation is displayed in the expanded APP, center APP, expanded VOR and center VOR modes.

TCAS Messages

[Option - Track-up display, weather radar range arcs, dual FMC]

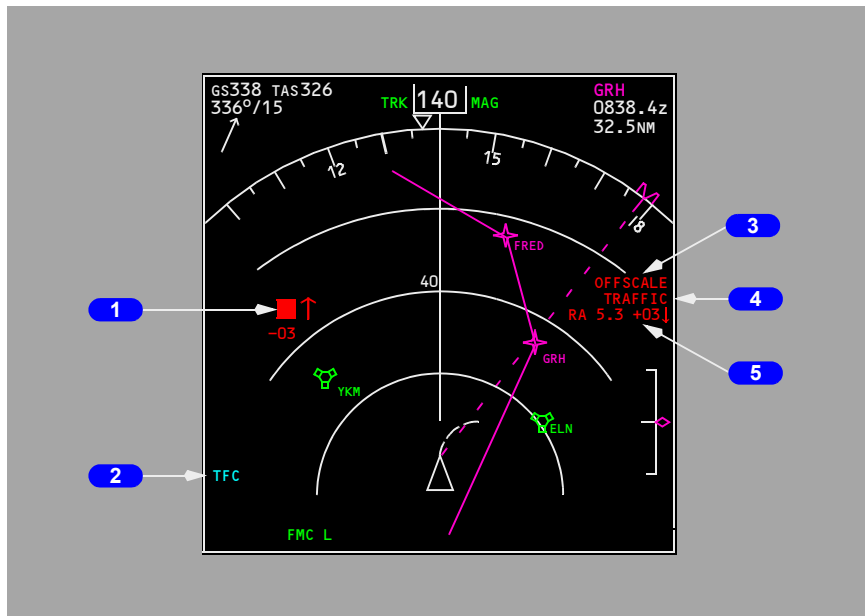

1 TCAS Traffic Symbols

Note: Refer to Section 41 of this chapter for a detailed explanation of the traffic symbology.

Indicates position of traffic targets.

Displayed in expanded MAP, center MAP, expanded APP and expanded VOR modes and TFC is selected on the EFIS control panel.

2 TCAS Annunciations

TFC (cyan) – Indicates TFC selected on EFIS control panel in expanded MAP, center MAP, expanded APP and expanded VOR.

TCAS TEST (cyan) – TCAS in test mode.

TA ONLY (cyan) – TCAS TA mode only.

TCAS OFF (amber) – TCAS off.

3 Offscale (red or amber)

TA (amber) or RA (red) is beyond the selected display range and TFC is selected on the EFIS control panel.


4 Traffic (red or amber)

Displayed during a TA (amber) or RA (red) condition whether or not TFC is selected on the EFIS control panel.

5 No-Bearing Messages (red or amber)

Textual description of TA (amber) or RA (red) traffic with no associated bearing. Message provides traffic type, range in NM, altitude and a vertical motion arrow. A maximum of two messages can be displayed simultaneously. TFC selected on the EFIS control panel.

Look-Ahead Terrain Messages (GPWS)

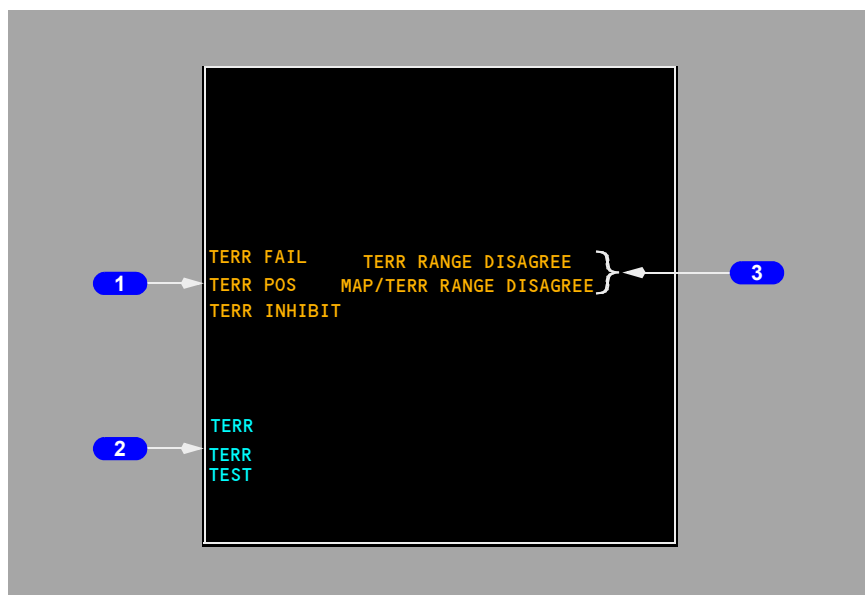

1 Terrain Status Annunciation (amber)

TERR FAIL – Look-ahead terrain alerting and display have failed.

TERR POSS – Look-ahead terrain alerting and display unavailable due to position uncertainty.

TERR INHIBIT – GPWS terrain inhibit switch in TERR INHIBIT position.

2 Terrain Mode Annunciation (cyan)

TERR – Terrain display enabled (manual or automatic display).

TERR TEST – GPWS is operating in self-test mode.


3 Terrain Range Status Annunciation (amber)

TERR RANGE DISAGREE –

- terrain display enabled, and
- terrain output range disagrees with selected EFIS control panel range.

MAP/TERR RANGE DISAGREE –

- terrain display enabled, and
- terrain output range disagrees with selected EFIS control panel range, and
- map display output range disagrees with selected EFIS control panel range.

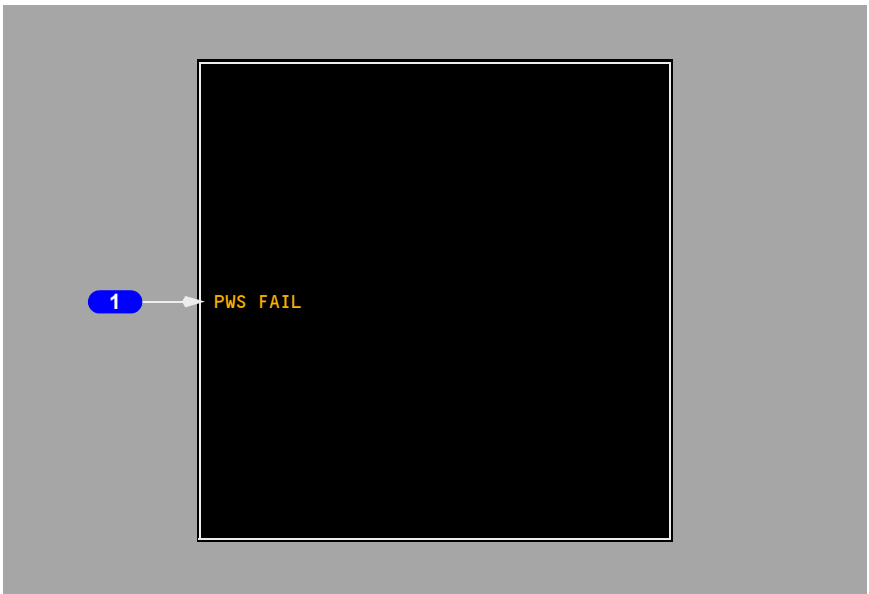Predictive Windshear System (PWS) Message**1 PWS FAIL Annunciation (amber)**


Predictive windshear alerting and display have failed.

Navigation Displays – Failure Indications and Flags

Dashes replace numbers if there is no computed information. Failure flags replace symbols or failure messages are displayed, as appropriate.

Expanded MAP, Center MAP, Expanded APP, Expanded VOR Modes

[Option - Track-up display, dual ADF]

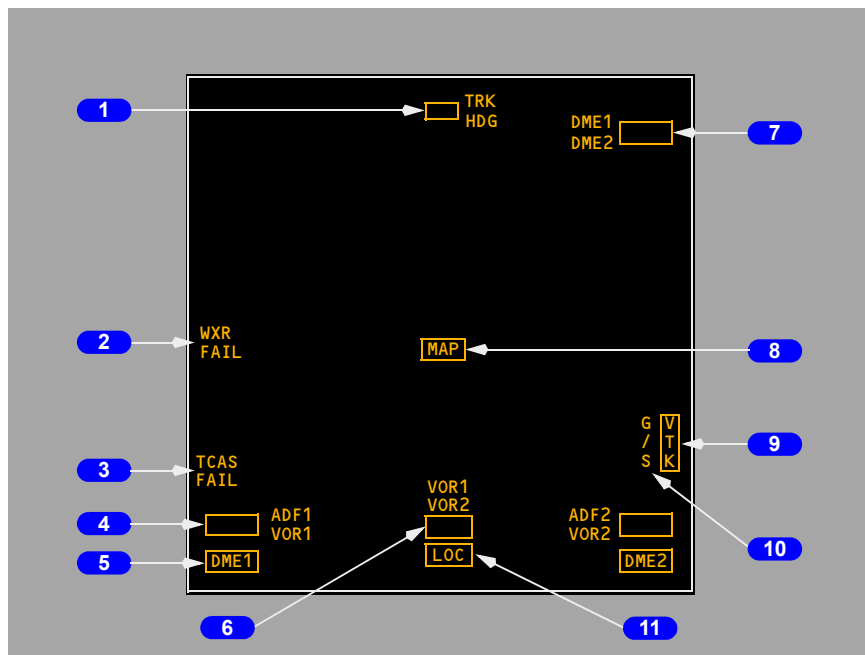

1 Track Failure Flag (expanded and center MAP modes)

[Option - Track-up display]

Track information failed. Track cannot be displayed.

2 Weather Radar Annunciations (expanded and center MAP, expanded APP, expanded VOR modes)

WXR FAIL – Weather radar has failed. No weather data are displayed.

WXR WEAK – Weather radar calibration fault.

WXR ATT – Attitude stabilization for antenna has been lost.

WXR STAB – Antenna stabilization is off.

WXR DSP – Range data input has failed. Only displayed in WXR TEST

- 3 TCAS Failure Flag (expanded and center MAP, expanded VOR, expanded APP, PLAN modes)**

TCAS has failed.

- 4 ADF 1 and ADF 2 or VOR 1 and VOR 2 Failure Flag (expanded and center MAP, expanded APP, expanded VOR modes)**

[Option - Dual ADF]

ADF or VOR has failed.

- 5 DME 1 and DME 2 Failure Flag (expanded and center MAP, expanded APP, expanded VOR modes)**

Selected VOR DME has failed.

- 6 VOR 1, 2 Failure Flag (expanded VOR mode)**

VOR has failed.

- 7 Reference VOR DME (expanded VOR mode) and Reference ILS DME (expanded APP mode)**

Reference VOR or ILS DME has failed.

- 8 MAP Failure Flag (expanded and center MAP, PLAN modes)**

The related FMC generated map display has failed.

- 9 Vertical Track Failure Flag (expanded and center MAP modes)**

FMC vertical track data is invalid.

- 10 ILS Glideslope Failure Flag (expanded APP mode)**


ILS glideslope has failed.

- 11 ILS Localizer Failure Flag (expanded APP mode)**

ILS localizer course indication has failed.

Vertical Situation Display (VSD)

[Option VSD]

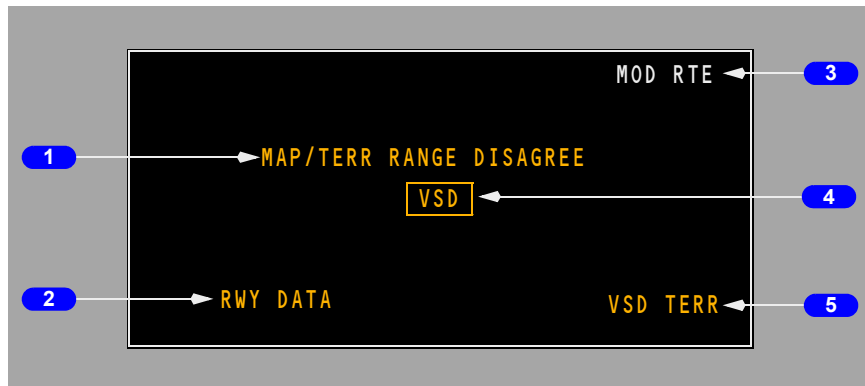

1 Range Disagreement Annunciations (amber)

MAP RANGE DISAGREE – Indicates selected range on the EFIS control panel is different than the MAP display range.

TERR RANGE DISAGREE – Indicates selected range on the EFIS control panel is different than the Terrain display range.

MAP/TERR RANGE DISAGREE – Indicates selected range on the EFIS control panel is different than the MAP and Terrain display ranges.

2 Runway Data Annunciation (amber)

FMC runway data is not available.

3 Route Waypoints Modification Annunciation (white)

FMC active route is being modified. Only active waypoint is displayed.

4 VSD Failure Flag (amber)


VSD cannot be displayed.

5 Terrain Data Failure Annunciation (amber)

EGPWS terrain data is not available. Annunciation is replaced with VSD TERR INHIBIT when GPWS control panel TERR INHIBIT switch is in the inhibit position.

ND Failure Flags – Center APP and Center VOR Modes

[Option - Dual ADF]

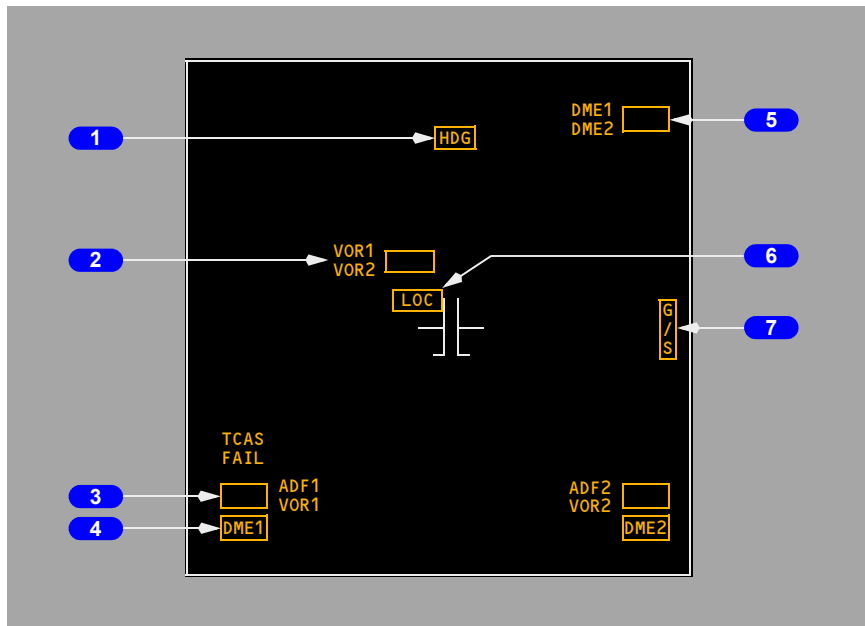

1 Heading Failure Flag (center APP, center VOR modes)

Heading indication failed. Heading cannot be displayed.

2 VOR Failure Flag (center VOR mode)

VOR has failed.

3 ADF 1 and ADF 2 or VOR 1 and VOR 2 Failure Flag (center APP, center VOR modes)

[Option - Dual ADF]

VOR or ADF has failed.

4 DME 1 and DME 2 Failure Flag (center APP, center VOR modes)

Selected VOR DME has failed.

5 Reference VOR DME (center VOR mode) and Reference ILS DME (center APP mode)

Reference VOR or ILS DME has failed.

6 ILS Localizer Failure Flag (center APP mode)


ILS localizer course indication has failed.

7 ILS Glideslope Failure Flag (center APP mode)

ILS glide slope has failed.

System Components

[Option - Model 4000 with PATS aux tanks]

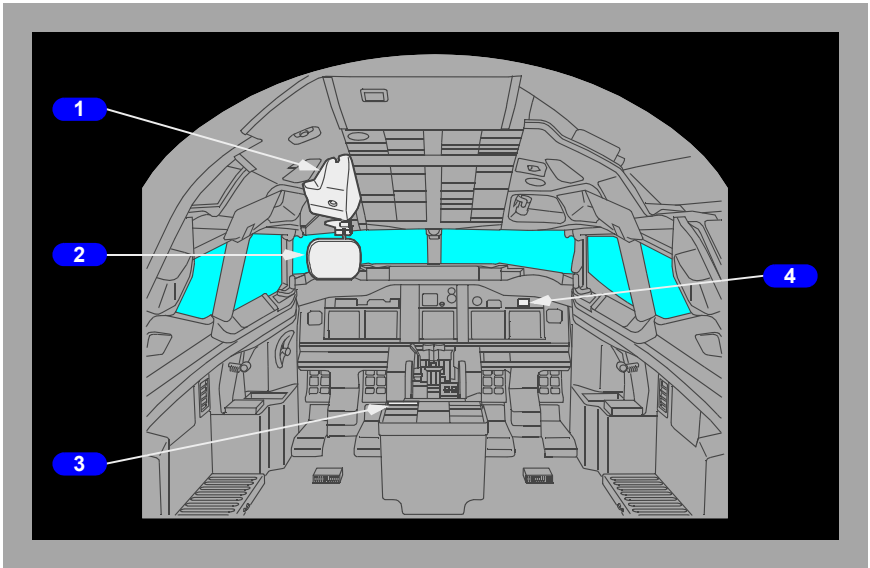

1 Overhead Unit

Contains the CRT and projection optics to display the symbolic image on the combiner.

2 Combiner

Combines displayed flight symbology with the pilot's view through window No. 1.

3 Control Panel

Used for data entry and to select modes of operation.

4 Annunciator

Provides system status and warning annunciations during a CAT III approach.

Combiner Display

The combiner displays symbology and fault indications for the HUD system. Display modes of operation include:

- Primary (PRI)
- AIII approach
- Instrument Meteorological Conditions (IMC) approach
- Visual Meteorological Conditions (VMC) approach.


Typical display modes are shown below.

Note: Not all symbols are represented in this section. Refer to Section 10-42, Head-Up Display System, Symbology, for a complete listing of HUD system symbology.

Primary (PRI) Mode Display

[Option - Model 4000]

The primary mode can be used for all phases of flight from takeoff to landing including low visibility takeoff and landing rollout operations.

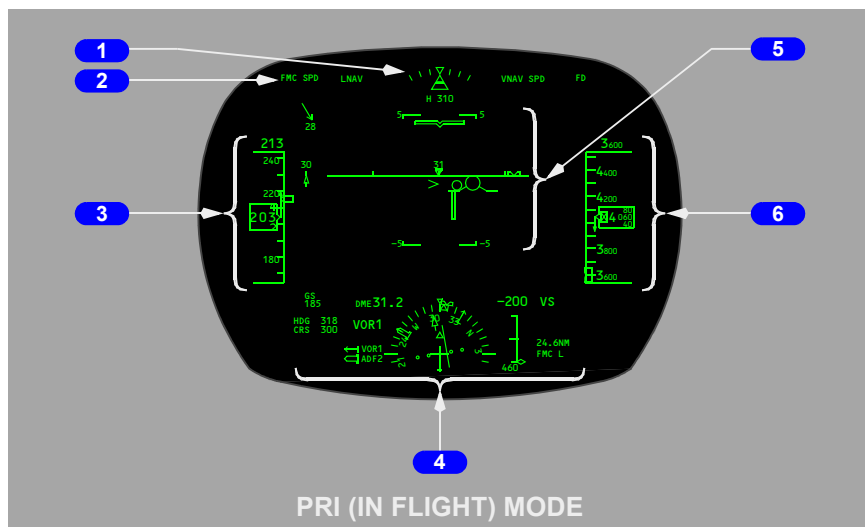



1 Bank Scale and Pointer

2 Flight Mode Annunciations (FMAs)

Refer to Chapter 4, Automatic Flight.

3 Airspeed Indications


4 Navigation Indications

5 Attitude Indications

6 Altitude Indications

7 Ground Localizer Line

Airspeed Indications - General

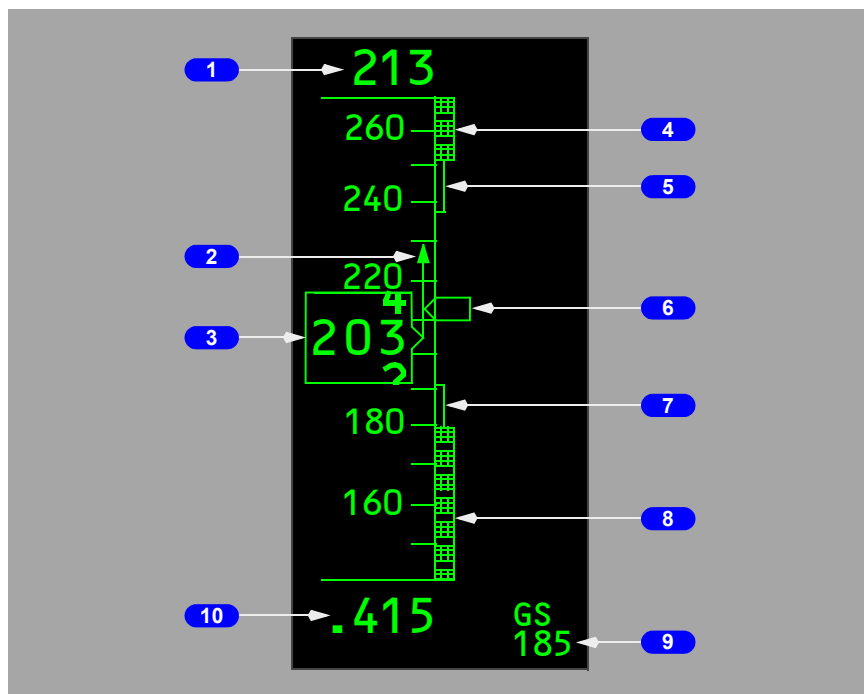

1 Selected Speed (all modes)

Displays target airspeed:

- manually selected in the IAS/MACH window
- indicates the FMC computed airspeed when the IAS/MACH window is blank.

2 Speed Trend Vector (PRI in flight, PRI ground modes)

Tip of arrow indicates predicted airspeed in the next 10 seconds based on the current airspeed and acceleration.

3 Computed Airspeed (PRI in flight, PRI ground modes)

Indicates current computed airspeed in knots.

Displayed relative to a vertical scale along the edge of the tape and as a digital value.

4 Maximum Speed (PRI in flight mode)

Bottom of bar indicates the maximum speed as limited by the lowest of the following:

- Vmo/Mmo
- landing gear placard speed
- flap placard speed.

Inhibited on the ground.

5 Maximum Maneuvering Speed (PRI in flight mode)

At high altitudes and flaps up, the bottom of the bar indicates the airspeed that provides a 0.3 g maneuver margin to high speed buffet. May be displayed at high altitude with flaps up, at relatively high gross weights.

When flaps are not up, bottom of the bar indicates flap limit placard speed for the next normal flap setting. The display logic is based on a normal flap setting sequence of 1, 5, 15, 30. The bar is removed when the flap lever is moved to the landing flap selected on the APPROACH REF page or when the flap lever is moved to flaps 30 or 40.

6 Speed Bug (PRI in flight, PRI ground modes)

Points to the airspeed:

- manually selected in the IAS/MACH window
- indicates the FMC computed airspeed when the IAS/MACH window is blank.

When the selected speed is off scale, the bug is parked at the top or bottom of the tape, with only one half bug visible.

7 Minimum Maneuver Speed (PRI in flight, PRI ground modes)

Top of bar indicates minimum maneuver speed.

8 Minimum Speed (PRI in flight mode)

Top of bar indicates the speed at which stick shaker occurs.

Inhibited on the ground.

9 Ground Speed (all modes)


Indicates current ground speed in one knot increments.

10 Mach Speed (PRI in flight)

Indicates current mach speed when mach increases above .400 and removed when mach decreases below .380.

Note: In other than the PRI mode, the airspeed scale and associated symbols are replaced with a digital readout. The readout is positioned relative to the flight path vector. If the flight path vector is not displayed, the readout is positioned relative to the airplane reference symbol.

Airspeed Indications - Takeoff and Approach

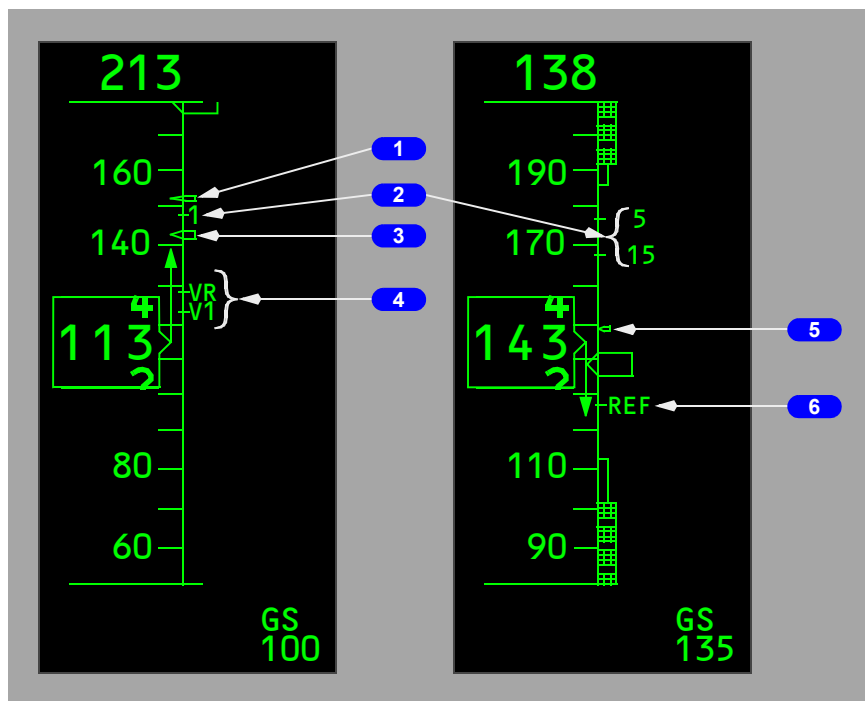

1 Bug 5 (PRI in flight, PRI ground modes)

Displayed if speed reference selector on the engine display control panel is in the bug 5 position or SET position and a value greater than 60 knots has been selected. Not available if the speed reference selector is in the AUTO position.

2 Flaps Maneuvering Speeds (PRI in flight mode)

Indicates flap maneuvering speed for the displayed flap position.

3 V2+15 (PRI in flight mode)

Displayed for takeoff.

Removed when either of the following occurs:

- at first flap retraction
- when VREF is entered in the CDU.

4 Takeoff Reference Speeds (PRI ground mode)

Indicates V1 (decision speed) and VR (rotation speed) as selected on the CDU TAKEOFF REF page (refer to Chapter 11, Flight Management, Navigation) or as set with the speed reference selector on the engine display control panel.

5 VREF+15 (PRI in flight, PRI ground modes)

Displayed after selection of VREF.


5 VREF+20 (PRI in flight, PRI ground modes)

Displayed after selection of VREF.

6 Landing Reference Speed (PRI in flight, PRI ground modes)

Indicates REF (reference speed) as selected on the CDU APPROACH REF page (refer to Chapter 11, Flight Management, Navigation) or as set with the speed reference selector on the engine display control panel. Replaced by a digital readout when off-scale at the bottom of the airspeed tape.

Altitude Indications

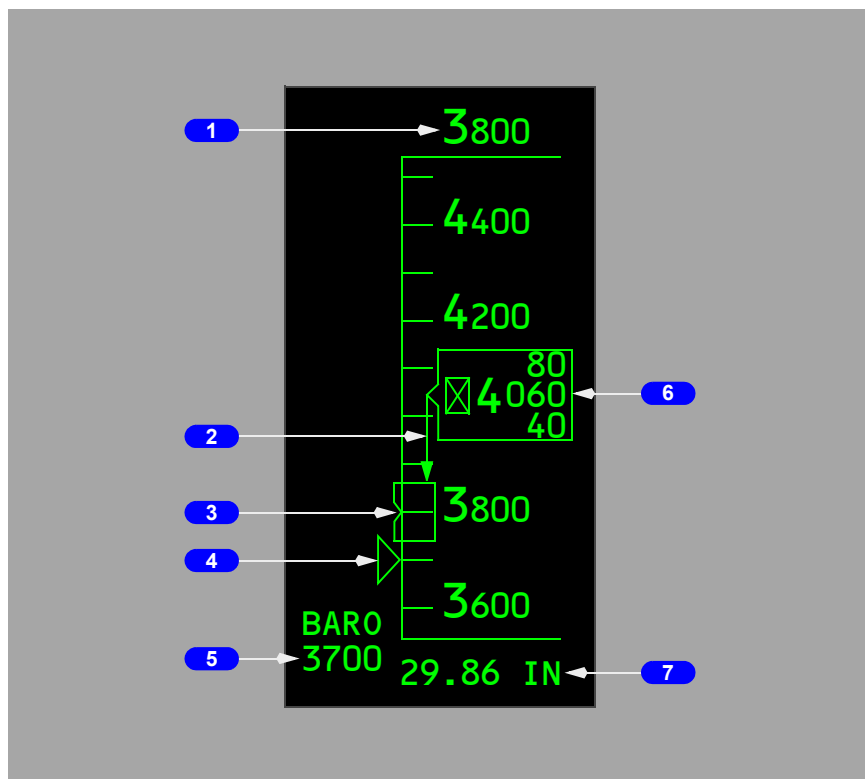

1 Selected Altitude (PRI in flight, PRI ground modes)

Displays the altitude set in the MCP altitude window.

2 Altitude Trend Vector (PRI in flight mode)

Tip of arrow indicates predicted altitude in the next 6 seconds based on the current vertical speed.

3 Selected Altitude Bug (PRI in flight, PRI ground modes)

Points to the altitude set in the MCP altitude window.

When the selected altitude is off scale, the bug is parked at the top or bottom of the tape, with only one half bug visible.

4 BARO Minimums Pointer (PRI in flight, PRI ground modes)

Displays the barometric minimums selected on the EFIS control panel.

5 Minimums Reference/Altitude (PRI in flight, PRI ground modes)

Displays approach minimum reference and altitude set by the MINS selector on the EFIS control panel.

6 Current Altitude (PRI in flight, PRI ground modes)

Displays current altitude in increments of thousands, hundreds and twenty feet. For positive values of altitude below 10,000 feet, an “X” symbol is displayed.

7 Barometric Setting (PRI in flight, PRI ground modes)


Displays the barometric setting in either inches of mercury (IN) or hectopascals (HPA) as selected on the EFIS control panel.



Note: In other than the PRI mode, the altitude scale and associated symbols are replaced with a digital readout. The readout is positioned relative to the flight path vector. If the flight path vector is not displayed, the readout is positioned relative to the airplane reference symbol.

Approach Mode Displays

[Option - Model 4000]

Refer to section 42 for symbology descriptions.

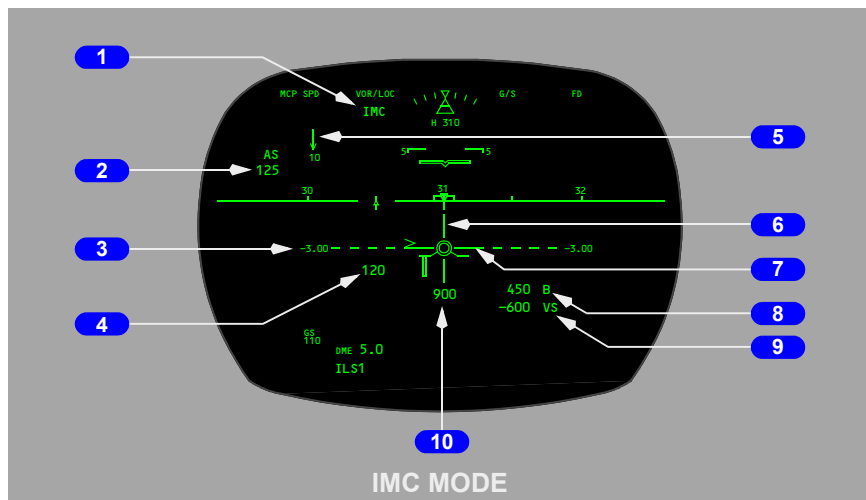

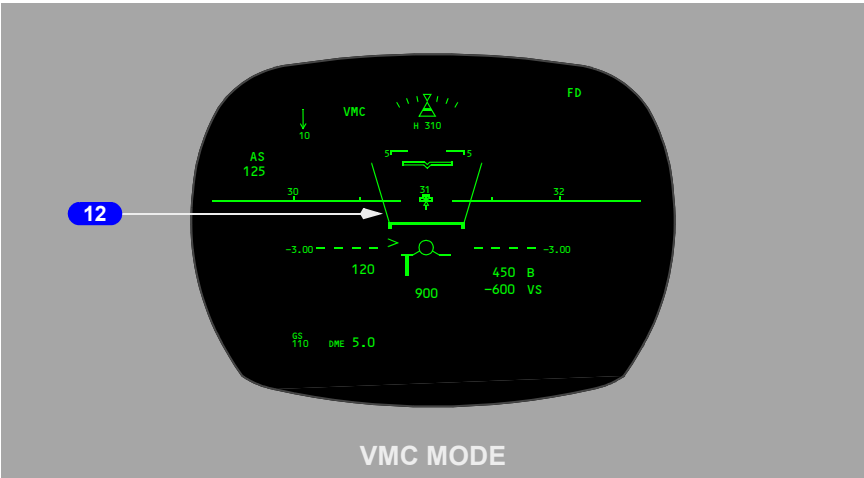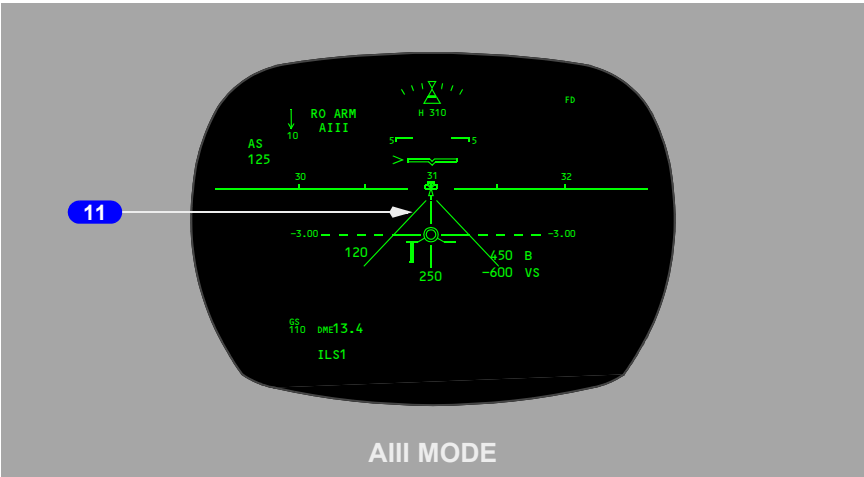


-
- 1 Mode/Status**
 - 2 Digital Selected Airspeed**
 - 3 Glideslope Reference Line**
 - 4 Digital Airspeed**
 - 5 Wind Indications**
 - 6 Lateral Deviation Line**
 - 7 Glideslope Deviation Line**
 - 8 Digital Barometric Altitude**
 - 9 Digital Vertical Speed**
 - 10 Radio Altitude**
 - 11 Runway Edge Lines**
 - 12 TCAS Resolution Advisory**

Failure Indications and Flags

Dashes replace numbers if there is no computed information. Failure flags replace symbols or failure messages are displayed, as appropriate.

Data source flags are provided in a few cases to annunciate the source of displayed data when other than normal.


[Option - Model 4000]

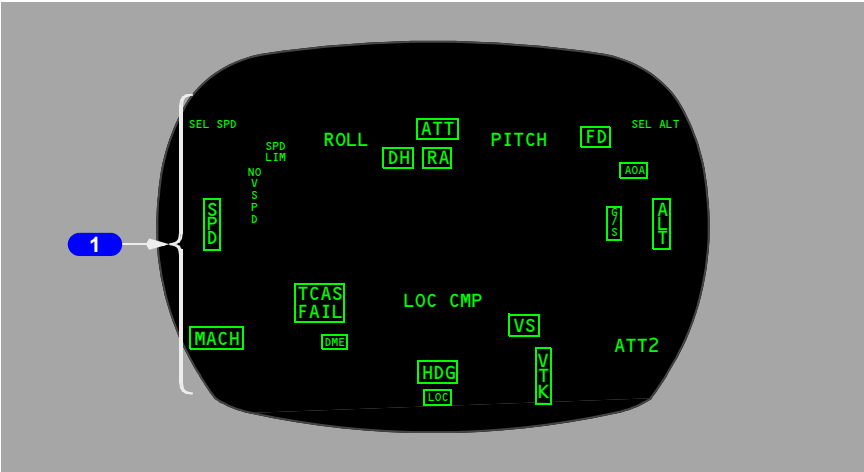

1 HUD System Failure Indications and Flags

See section 42 for detailed information on the HUD system failure indications and flags.

Control Panel Display

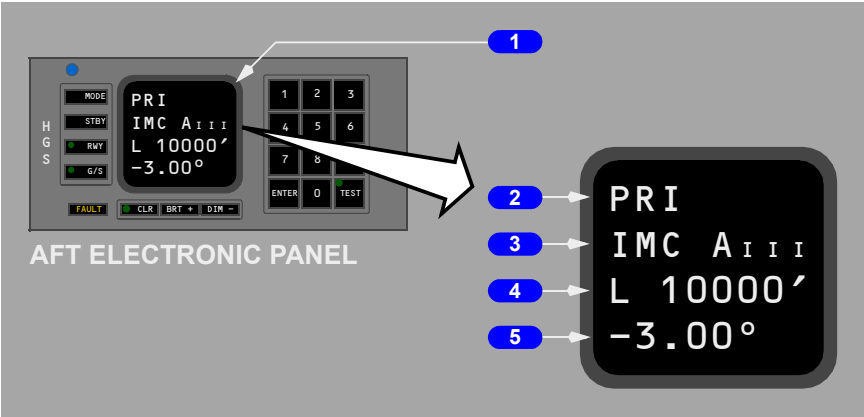

1 Control Panel Display Window

Displays selected modes, entered values, system test and system status.

2 Mode Display Line

Displays current mode:

- PRI - primary flight mode
- AIII - Cat III approach mode
- IMC - instrument meteorological conditions approach mode
- VMC - visual meteorological conditions approach mode
- NO AIII - AIII capability lost
- CLR - combiner display cleared.

3 Standby Mode Display Line

Displays standby mode:

- PRI - primary flight mode
- AIII - Cat III approach mode
- IMC - instrument meteorological conditions approach
- VMC - visual meteorological conditions approach.

[Option - Model 4000]

Automatic AIII arming is indicated by “AIII ARM” displayed as the standby mode. Once all requirements are satisfied for an AIII mode approach, AIII mode is automatically activated. Refer to Section 10-22, Head-Up Display System Description, for AIII mode arming requirements.

4 Runway Length/Elevation Line

Displays runway length or elevation:

- L XXXXX - valid entry is 0 to 99999 feet, however, entries between 7500 and 13500 feet are required to display ground roll guidance for low visibility takeoff operations
- E XXXXX - valid entry is -9999 to 99999 feet.

5 Reference Glideslope Line

Displays runway glideslope:

- valid entry is 0.00° to -9.99°
- entered values are required to be between -2.51° and -3.00° for AIII approach operations.

Intentionally
Blank

Flight Instruments, Displays

Chapter 10

EFIS Instruments (PFD) – Controls


Section 16

EFIS Control Panel (PFD/ND Display)

The left EFIS control panel controls the Captain outboard and inboard display units. The right EFIS control panel controls the First Officer outboard and inboard display units.

EFIS Control Panel Controls – Flight Instrument Displays

[Option - Dual ADF]

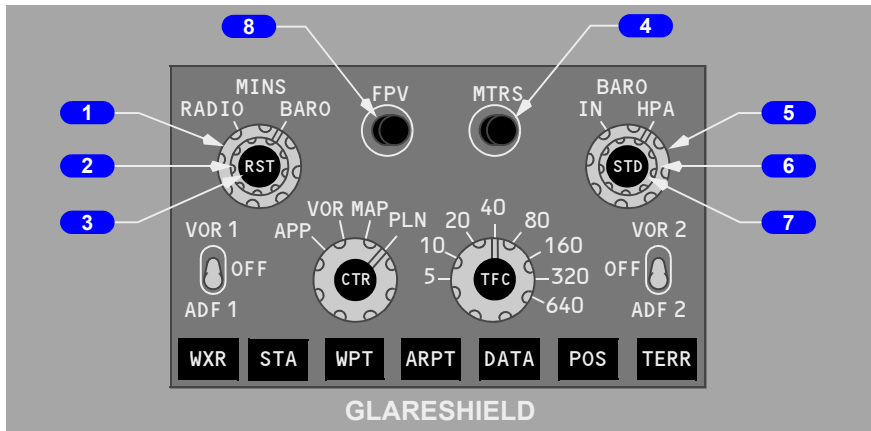

1 Minimums (MINS) Reference Selector (outer) (two position)

RADIO – selects radio altitude as the minimums reference.

BARO – selects barometric altitude as the minimums reference.

2 Minimums (MINS) Selector (middle) (slew)

ROTATE – adjusts the radio or baro minimums altitude.

3 Radio Minimums (MINS) Reset (RST) Switch (inner) (momentary action)

PUSH –

- resets the alert minimums annunciation
- blanks minimums display if alert is not active.

4 Meters (MTRS) Switch (momentary action)

PUSH – displays altitude indications in meters.

5 Barometric (BARO) Reference Selector (outer) (two position)

IN – selects inches of mercury as the barometric altitude reference.

HPA – selects hectopascals as the barometric altitude reference.

6 Barometric (BARO) Selector (middle) (slew)

ROTATE –

- adjusts the barometric altitude setting on the altitude tape
- if STD displayed, adjusts the preselected BARO reference.

7 Barometric (BARO) Standard (STD) Switch (inner) (momentary action)

PUSH –

- selects the standard barometric setting (29.92 inches Hg/1013 HPA) for barometric altitude reference
- if STD is displayed, selects the preselected barometric reference
- if no preselected barometric is displayed, displays the last value before STD was selected.


8 Flight Path Vector (FPV) Switch (momentary action)

[Option - Horizon line heading scale]

PUSH – displays flight path vector and horizon line heading scale on the attitude indicator.

EFIS Control Panel Controls – Navigation Displays

[Option - Dual ADF]

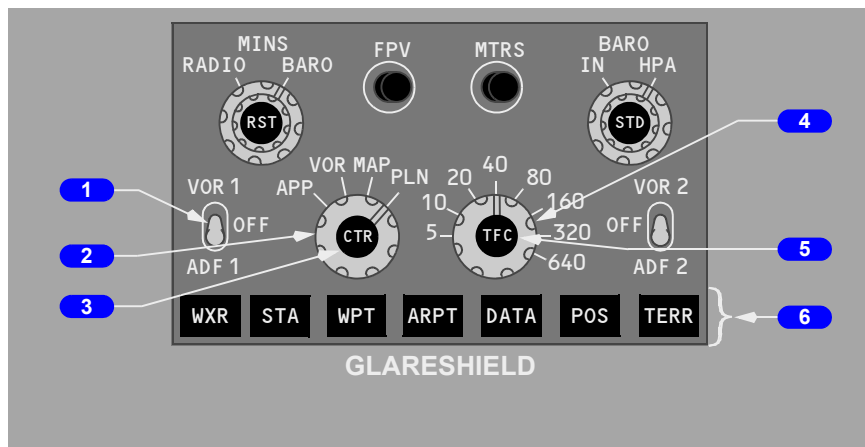

1 VOR/ADF Switch (three position)

Displays VOR or ADF information on all navigation modes except PLAN.

VOR – displays the selected VOR bearing pointer, frequency or identification and DME.

OFF – removes the VOR or ADF displays.

ADF – displays the selected ADF pointer and ADF frequency or identification.

2 Mode Selector (outer)

Selects the desired display.

APP –

- displays localizer and glideslope information in heading-up format.
- displays reference ILS receiver, ILS frequency or identification, course and DME.
- weather radar and TCAS are not displayed in center APP mode.

VOR –

- displays VOR navigation information in heading-up format
- displays reference VOR receiver, VOR frequency or identification, course, DME and TO/FROM information
- weather radar and TCAS are not displayed in center VOR mode.

MAP –

[Option - Track-up display]

- displays FMC generated route and MAP information, airplane position, heading and track, in a track-up format
- displays waypoints, including the active waypoint, within the selected range
- displays VNAV path deviation.

PLN –

- displays a non-moving, true north up, route depiction
- the airplane symbol represents actual airplane position and orientation
- allows route step-through using the CDU LEGS page
- weather radar and TCAS are not displayed.

3 Center (CTR) Switch (inner)

PUSH –

- displays the full compass rose (center) for APP, VOR and MAP modes

[Option - VSD]

- subsequent pushes alternate between center with VSD, expanded and center without VSD.

4 Range Selector (outer)

Selects desired display range in nautical miles for APP, VOR, MAP or PLN mode.

5 Traffic (TFC) Switch (inner)

PUSH – displays TCAS information on the navigation display (refer to Chapter 15, Warning Systems).

6 MAP Switches (momentary action)

The MAP switches:

- add background data/symbols to MAP and center MAP modes
- displays can be selected simultaneously
- second push removes the information.

WXR (weather radar) – energizes weather radar transmitter and displays weather radar returns in MAP, center MAP, expanded VOR, and expanded APP modes. When the 640 nm range is selected, weather radar returns are limited to 320 nm (refer to Chapter 11, Flight Management, Navigation).

STA (station) –

- displays all FMC data base navigation aids if on map scales 5, 10, 20 or 40 nm
- displays FMC data base high altitude navigation aids on map scales 80, 160, 320 or 640 nm.

WPT (waypoint) – displays the waypoints in the FMC data base which are not in the flight plan route if the selected range is 40 nm or less.

ARPT (airport) – displays all airports which are stored in the FMC data base and which are within the viewable map area.


DATA – displays altitude constraint, if applicable, and estimated time of arrival for each active route waypoint.

POS (position) – displays IRS positions, GPS positions and VOR bearing vectors extended from the nose of the airplane symbol to the stations.

TERR (terrain) – displays GPWS generated terrain data in MAP, center MAP, VOR, and APP modes (refer to Chapter 15, Warning Systems).

Displays Source Control Panel

Both a display source Display Electronics Unit (DEU) selector and an EFIS control switch are located above the Captain on the forward overhead (P5) panel.

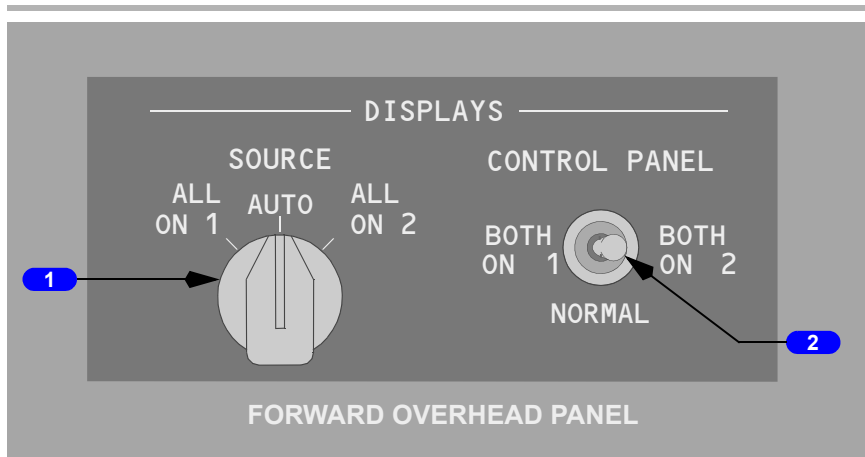

1 Displays Source Selector – DEU

Both DEUs or only one DEU can drive all six Captain and First Officer displays. There is a SOURCE selector on the overhead panel. The selector is normally set to the AUTO mode:

- ALL ON 1 – selects the Captain’s DEU to drive all six Captain and First Officer displays
- AUTO – allows DEU 1 to drive the Captain outboard, Captain inboard, and upper display units while DEU 2 drives the First Officer outboard, First Officer inboard, and lower display units. Provides automatic switching from both DEUs to one in case of single DEU failure
- ALL ON 2 – selects the First Officer’s DEU to drive all six Captain and First Officer displays.


Note: These source selectors and switches are normally used while the aircraft is on the ground for maintenance purposes.

2 Displays Control Panel Switch – EFIS

- BOTH ON 1 – both pilots’ displays are set to the Captain’s EFIS control panel
- NORMAL – the left EFIS control panel controls the Captain’s displays and the right EFIS control panel controls the First Officer’s displays
- BOTH ON 2 – both pilots’ displays are set to the First Officer’s EFIS control panel.

Heading Reference Switch

[Option]

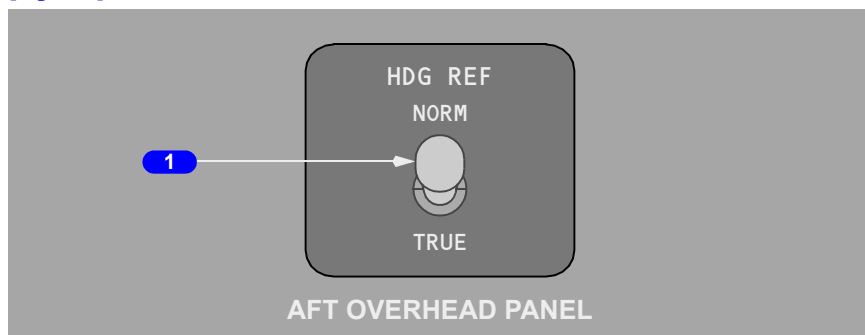

1 Heading Reference Switch

Selects heading reference information from the IRS to be supplied to all affected components.


NORM –

- normally references magnetic north
- automatically references true north when the calculated airplane position enters a polar region and:
 - the FCC is unusable in HDG SEL or CWS R
 - the heading warning flag displays on the standby radio magnetic indicator

TRUE –

- references true north regardless of latitude
- VOR bearing information is invalid.

Display Select Panels

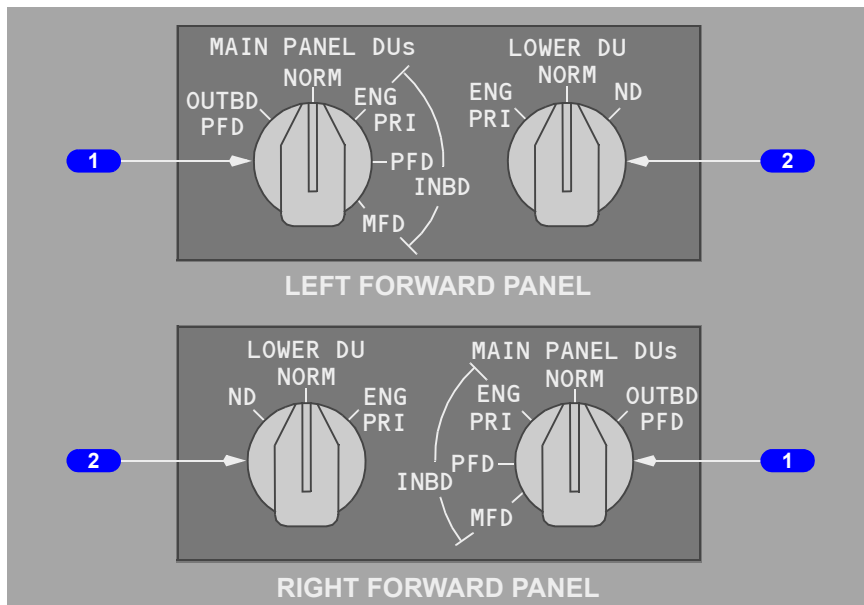

1 Main Panel Display Units (MAIN PANEL DUs) Selector

Selects what is displayed on the respective outboard and inboard display units:


- Outboard Primary Flight Display (OUTBD PFD) – displays the PFD on the outboard display unit and blanks the inboard display unit
- Normal (NORM) – displays PFD on the outboard display unit and ND on the inboard display unit
- Inboard Engine Primary (INBD ENG PRI) – displays the primary engine instruments on the inboard display unit and the PFD on the outboard display unit
- Inboard Primary Flight Display (INBD PFD) – displays the PFD on the inboard display unit and blanks the outboard display unit
- Inboard Multifunction Display (INBD MFD) – displays PFD on the outboard display unit and blanks the inboard display unit. The inboard display unit stays blank until system format (SYS) or secondary engine format (ENG) is selected with MFD switches on the engine display control panel.

2 Lower Display Unit (LOWER DU) Selector

Selects what is displayed on the lower display unit:

- Engine Primary (ENG PRI) – displays the primary engine instruments on the lower display unit and blanks the upper display unit
- Normal (NORM) – display unit is normally blank or displays MFD format selected on the engine display control panel
- Navigation Display (ND) – displays the navigation display on the lower unit.

Speed Reference Selector

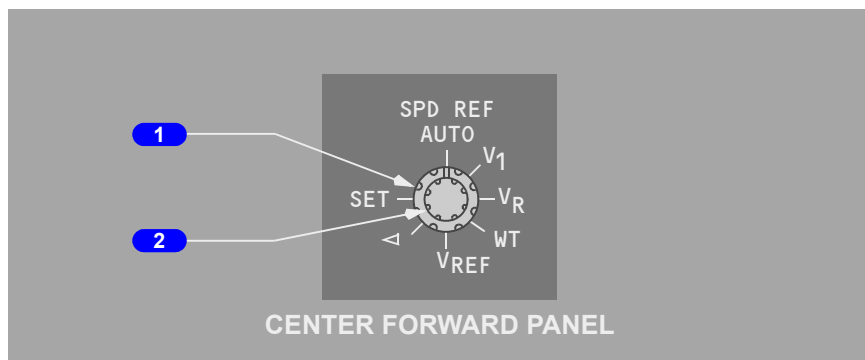

1 Speed Reference Selector (outer)

Sets the reference airspeed bugs on the airspeed indication:

- AUTO – the reference airspeeds and gross weight are provided automatically through the FMC
- V1 – used to manually set decision speed on the ground; in flight, displays “INVALID ENTRY”
- VR – used to manually set rotation speed on the ground; in flight, displays “INVALID ENTRY”
- WT – allows manual entry of reference gross weight
- VREF – used to manually set the landing reference speed in flight; on the ground, displays “INVALID ENTRY”
- Bug 5 – used to manually set the white bug 5 to the desired value
- SET – removes the speed reference display.


2 Speed Reference Selector (inner) (two speed slew)

ROTATE –

- manually sets the appropriate reference airspeed or gross weight
- the digital display appears below the airspeed indication.

Display Brightness Controls

Captain Brightness Controls

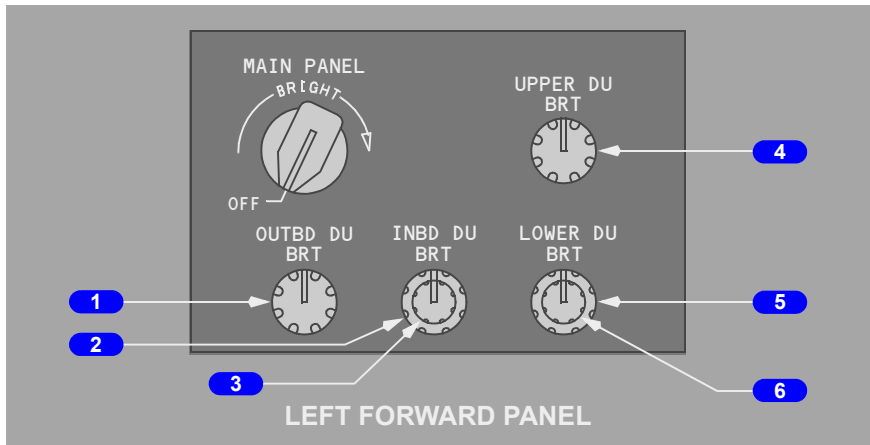

1 Outboard Display Unit Brightness (OUTBD DU BRT) Control (rotary)

ROTATE – adjusts the brightness of the Captain outboard display unit.

2 Inboard Display Unit Brightness (INBD DU BRT) Control (outer) (rotary)

ROTATE – adjusts the brightness of the Captain inboard display unit.

3 Inboard Display Unit Radar Brightness (INBD DU BRT) Control (inner) (rotary)

ROTATE – adjusts weather radar and terrain display brightness on the Captain inboard display unit.

4 Upper Display Unit Brightness (UPPER DU BRT) Control (rotary)

ROTATE – adjusts the brightness of the upper display unit.


5 Lower Display Unit Brightness (LOWER DU BRT) Control (outer) (rotary)

ROTATE – adjusts the brightness of the lower display unit.

6 Lower Display Unit Brightness (LOWER DU BRT) Control (inner) (rotary)

ROTATE – adjusts weather radar and terrain display brightness on the lower display unit.

First Officer Brightness Controls

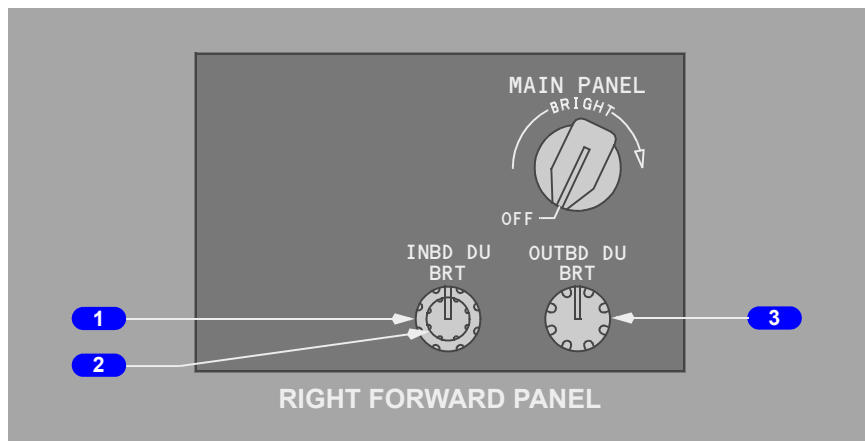

1 Inboard Display Unit Brightness (INBD DU BRT) Control (outer) (rotary)

ROTATE – adjusts the brightness of the First Officer inboard display unit.

2 Inboard Display Unit Radar Brightness (INBD DU BRT) Control (inner) (rotary)

ROTATE – adjusts weather radar and terrain display brightness on the First Officer inboard display unit.

3 Outboard Display Unit Brightness (OUTBD DU BRT) Control (rotary)


ROTATE – adjusts the brightness of the First Officer outboard display unit.

Standby Flight Instruments

The standby flight instruments include the:

- standby magnetic compass
- standby attitude indicator
- standby altimeter/airspeed indicator
- standby radio magnetic indicator

Standby Magnetic Compass

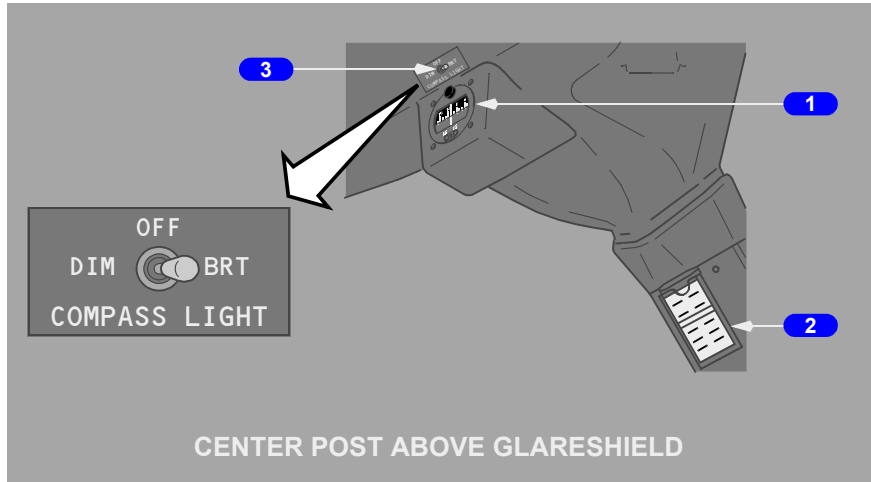

1 Standby Magnetic Compass

Displays magnetic heading.

2 Standby Magnetic Compass Correction Card

Provides appropriate heading corrections.

3 Compass Light Switch

OFF – compass light is extinguished.

BRT – sets compass light to full brightness.


DIM – sets compass light to low brightness.

Standby Attitude Indicator

[Option - Electronic Standby Attitude Indicator]

Note: Refer to section 43 of this chapter for a detailed explanation of the attitude indicator symbology and messages shown on the following pages.

Normal Display

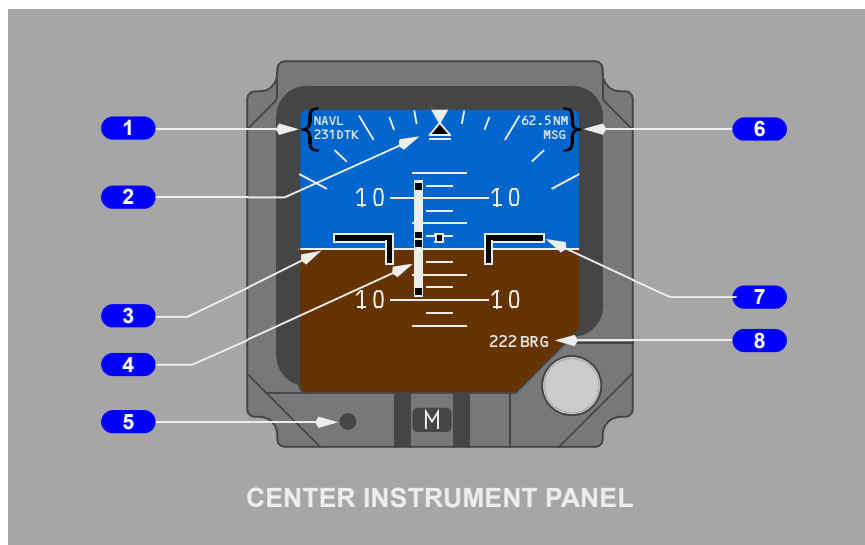

1 Navigation Mode and Course Information

Course information is relative to true north.

2 Bank Indicator and Scale

3 Horizon Line and Pitch Angle Scale

4 Course Deviation Indication

5 Ambient Light Sensor

Automatically adjusts the brightness of the display.

6 Distance-To-Go/FMS messages


7 Airplane Symbol

8 Bearing to Waypoint

Bearing information is relative to true north.

Note: Removal of navaid information from the screen will occur when the aircraft exceeds $\pm 65^\circ$ of center in roll and/or $\pm 30^\circ/\pm 20^\circ$ of center of pitch.

Menu Display

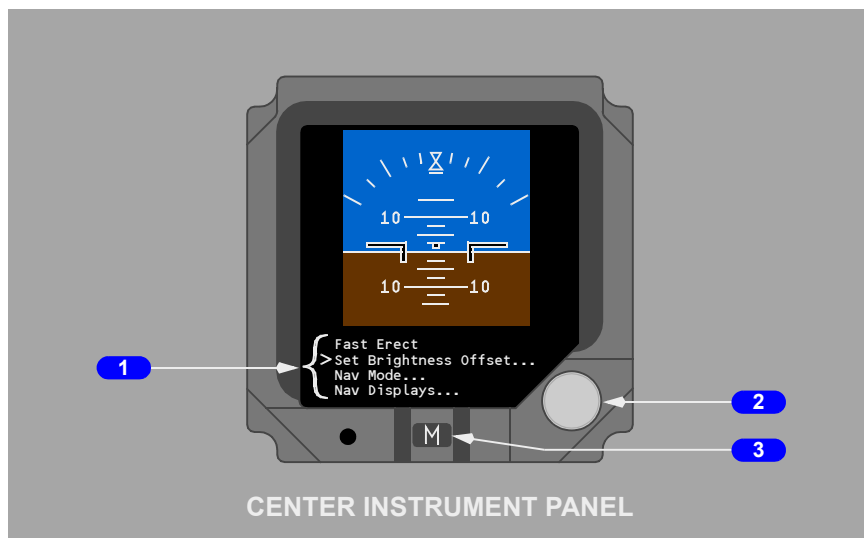

1 Menu

Allows setting of various display elements.

- four menu items visible at a time
- selected menu item is highlighted
- items ending with “...” have a submenu
- rotate the adjustment knob to scroll through the menu items
- menu access terminates when:
 - a setting is initiated, or
 - the menu select switch is pushed, or
 - automatically after 15-20 seconds of inactivity.

2 Adjustment Knob

Selects or adjusts menu items.

3 Menu Select Switch

Attitude display screen is reduced in size and the menu is displayed at the bottom.

Note: If a power interruption should occur, the last selected menu settings will be displayed once power is restored.


MENU	SUBMENU	REMARKS AND OPERATION
Fast Erect	None	Aligns horizon line with the airplane attitude. push adjustment knob to initiate.
Set Brightness Offset...	Rotate the knob to adjust the brightness.	Manually adjusts display brightness. - push adjustment knob for submenu - rotate knob to adjust - push knob to finish. For large adjustments, 5 to 10 rotations may be needed.
Nav Mode...	If Nav mode inactive the following modes available: > VOR/ILS NavL NavR If ILS mode active the following modes available: > Nav Off NavL NavR If NavL mode active the following modes available: > Nav Off VOR/ILS NavR If NavR mode active the following modes available: > Nav Off VOR/ILS NavL	Selects navigation mode. - push adjustment knob for submenu - rotate knob to select mode - push knob to finish. Note: VOR mode is inoperative.

MENU	SUBMENU	REMARKS AND OPERATION
ILS Normal	None	Available in ILS BC mode only. Glideslope and localizer pointers in view; ILS signals provided by the No. 1 ILS receiver. push adjustment knob to initiate.
ILS BC	None	Available in ILS mode only. Reverses sensing for localizer pointer during back course approaches; glideslope pointer not displayed. push adjustment knob to initiate.
Nav Displays...	FMS Bearing On or FMS Bearing Off	FMS bearing available in NavL or NavR modes only. - push adjustment knob for submenu - rotate knob to select - push knob to finish.

Note: Menus and submenus show items that are available for selection and not the current setting. For example, if FMS Bearing is currently off and the Nav Displays menu is selected, the submenu will display “FMS Bearing On”.

Note: Selected menus and settings remain in the indicator’s memory after power is removed. For example, if ILS BC mode is selected, and power is removed, the ILS BC mode is active once power is restored.

Standby Altimeter/Airspeed Indicator

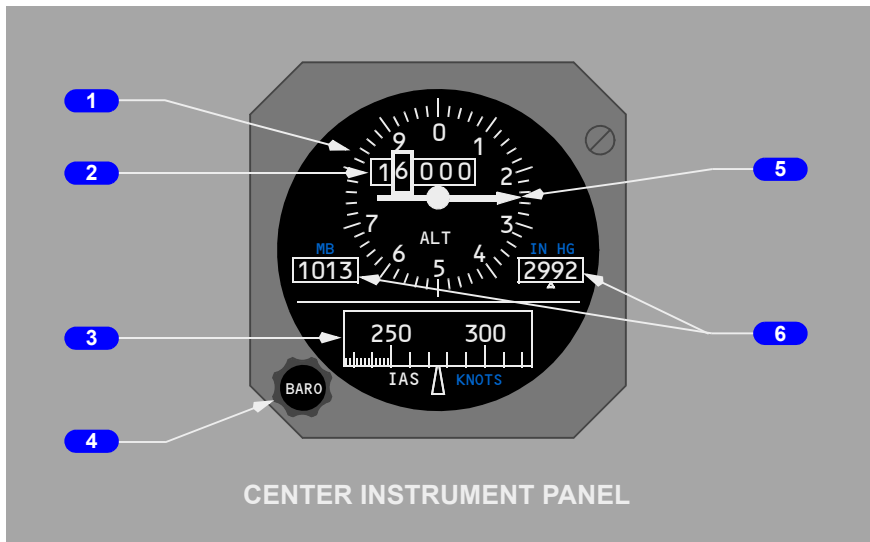

1 Standby Altimeter

Receives static pressure from the alternate static ports.

2 Digital Counter

- indicates thousand foot increments of current altitude
- a green flag appears in the left side of the window when altitude is less than 10,000 feet
- a striped flag appears in the left side of the window when altitude is less than zero feet.

3 Standby Airspeed Indicator

Receives ram air pressure from the auxiliary pitot probe and static pressure from the alternate static ports.

4 Barometric Setting Control

ROTATE – adjusts the barometric correction in both barometric windows.

5 Altitude Pointer


Indicates hundred foot increments of current altitude.

6 Barometric Setting Windows

Indicates barometric correction in millibars and inches of mercury as set by the barometric setting control.

Standby Radio Magnetic Indicator

[Option - Dual ADF]

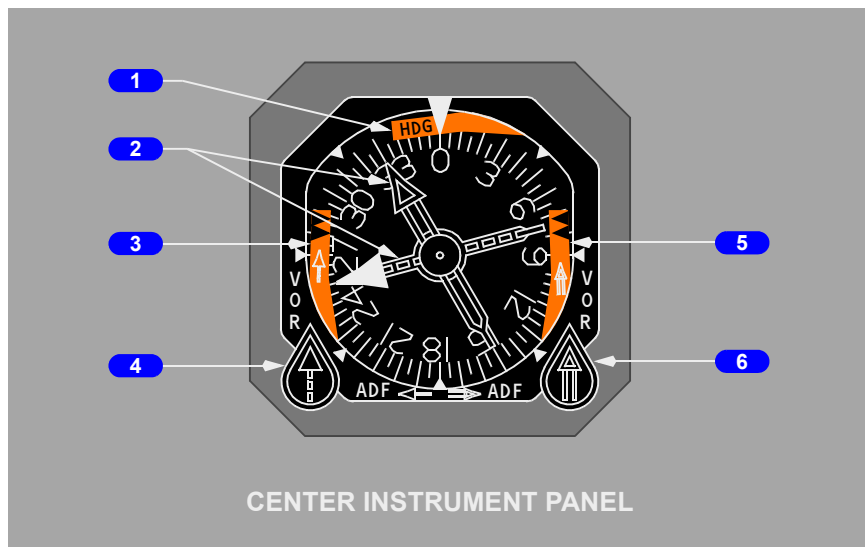

1 Heading Warning Flag

The compass signal from the air data inertial reference system is lost.

2 Bearing Pointers

- narrow pointer uses signals from the VHF NAV receiver No. 1 or ADF receiver No. 1

[Option - Dual ADF]

- wide pointer uses signals from the VHF NAV receiver No. 2 or ADF receiver No. 2.

3 Bearing Pointer No. 1 Warning Flag

VOR mode:

- RMI power failure
- VHF NAV signal unreliable.

ADF mode:

- RMI power failure
- ADF failure or signal unreliable.

4 VOR/ADF Bearing Pointer No. 1 Switch

ROTATE – selects VOR or ADF for the bearing pointer.

5 Bearing Pointer No. 2 Warning Flag

VOR mode:

- RMI power failure
- VHF NAV signal unreliable.

[Option - Dual ADF]

ADF mode:

- RMI power failure
- ADF failure or signal unreliable.


6 VOR/ADF Bearing Pointer No. 2 Switch

[Option - Dual ADF]

ROTATE – selects VOR or ADF for the bearing pointer.

Clock

[Option - GPS capable]

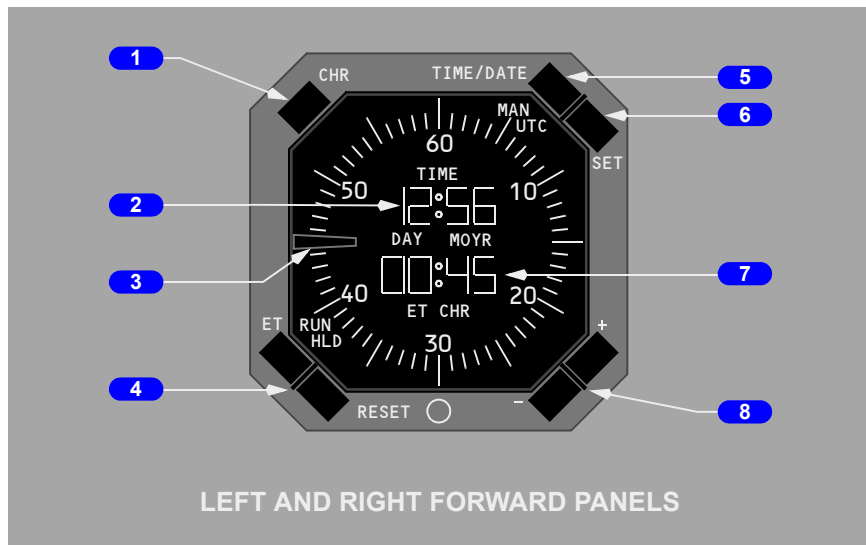

1 Chronograph (CHR) Control

PUSH –

- controls the start, stop and reset functions of the CHR display and second hand with successive pushing
- overrides any existing ET display.

2 Time/Date Indicator

- displays UTC or manual time (hours, minutes) when time is selected with the time/date pushbutton
- alternately displays day–month and year when date is selected with the time/date pushbutton.

3 Chronograph Second Hand

- indicates chronograph seconds
- controlled by the CHR control.

4 Elapsed Time (ET) and RESET Pushbutton

Controls the elapsed time function:

- select the ET pushbutton once to run the elapsed time
- select the ET pushbutton again to hold the elapsed time
- select the RESET pushbutton to set the elapsed time to 0.

The RUN or HLD symbol is displayed on the lower left part of the LCD display.

5 TIME/DATE Pushbutton

Controls the time/date function:

- select the TIME/DATE pushbutton once to see UTC time
- select the TIME/DATE pushbutton again to see UTC date
- select the TIME/DATE pushbutton again to see manual time
- select the TIME/DATE pushbutton again to see manual date.

The UTC or MAN symbol is displayed on the upper right part of the LCD display.

In MAN mode, clock time and date come from the clock. In UTC mode, clock time and date come from the global positioning system.

6 SET Pushbutton

Controls the setting of manual time and date:

With manual time displayed:

- select the SET pushbutton once and the hours flash, use the plus or minus pushbutton to adjust the hours
- select the SET pushbutton again and the minutes flash, use the plus or minus pushbutton to adjust the minutes
- select the SET pushbutton again to run the time.

With manual date displayed:

- select the SET pushbutton once and the day flashes, use the plus or minus pushbutton to adjust the day
- select the SET pushbutton again and the month flashes, use the plus or minus pushbutton to adjust the month
- select the SET pushbutton again and the year flashes, use the plus or minus pushbutton to adjust the year
- select the SET pushbutton again to run the date.

Note: A delay greater than one minute while setting the time or date results in the clock reverting to the previous time/date setting.

7 Elapsed Time (ET)/Chronograph Indicator

- displays elapsed time (hours, minutes) or chronograph minutes
- the chronograph display replaces the elapsed time display
- elapsed time continues to run in the background and displays after the chronograph is reset.


8 Plus (+) and Minus (-) Pushbuttons

Used to set the manual time and date:

- select the + pushbutton to increase the value
- select the - pushbutton to decrease the value.

Flight Recorder

[Option - Without QAR lights]

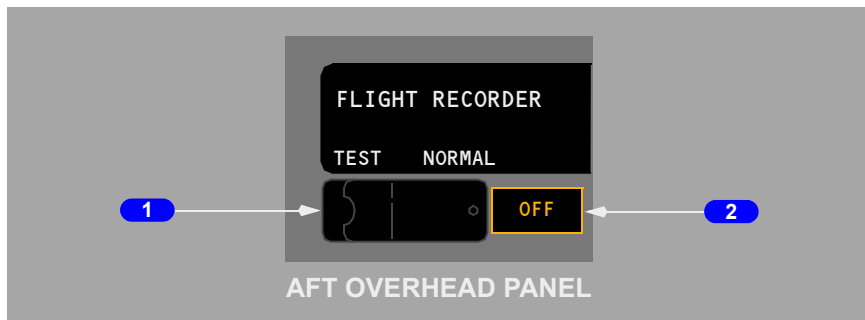

1 Flight Recorder Test Switch

NORMAL (guarded position) –

- in flight – the recorder operates anytime electrical power is available
- on the ground – either engine must also be operating.

TEST – powers the flight recorder on the ground.


2 OFF Light (amber)

ILLUMINATED –

- indicates the recorder is not operating or the test is invalid
- may indicate power failure, loss of input data, or electronic malfunction.

Flight Instruments, Displays
Head-Up Display System – Controls**Chapter 10**
Section 17**Head-Up Display Control Panel Controls – Flight Instrument Displays**

The HUD control panel controls modes of operation, display values, and system test and status information.

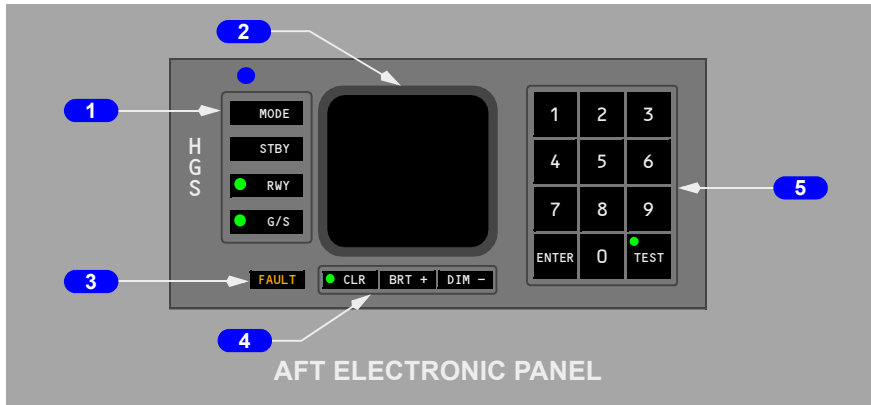**1 Mode/Function Keys**

Push - selects mode or allows data entry:

- **MODE** – selects desired mode from available modes on the standby display line
- **STBY** – selects standby mode
- **RWY** – used to enter runway length and elevation or to toggle between entered values. Select once to enter runway length, select again to enter runway elevation. Use the DIM - (minus) key to enter negative values
- **G/S** – used to enter the glideslope angle for the landing runway.

Note: Values entered using the mode/function keys are stored in the HUD computer. If a power interruption should occur, the last mode and value will be displayed once power is restored.

2 Control Panel Display

Displays information entered using the mode/function keys. Refer to Section 12, Head-Up Display System – Displays.

3 FAULT Light

Illuminated (amber) – HUD BITE fault.

4 Clear and Brightness Keys

CLR – used to clear all symbology from the combiner display. Symbology can be re-displayed by selecting CLR again, changing modes, or entering TEST. CLR can also be used as a backspace key during data entry and TEST operations.

BRT + (plus) – used to manually increase control panel display intensity.

DIM – (minus) – used to manually decrease control panel display intensity.

Note: Display brightness is adjusted automatically based on ambient light measured by a sensor located in the upper left corner of the control panel.


5 Numeric Keys

Push -

- 0 through 9 – puts selected number in display
- ENTER – used to enter selected values
- TEST – used by maintenance for system tests and troubleshooting.

HUD Annunciator Panel

[Option - Model 4000 Digital Twelve Light -Phases 1, 2, & 3]

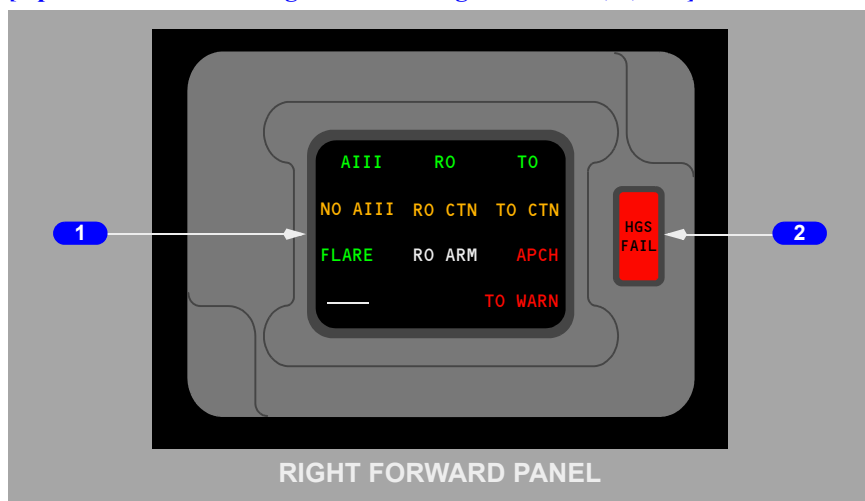

1 HGS Status Annunciations

- AIII (green) – AIII mode is active and all required systems and equipment are valid
- NO AIII (amber) – loss of AIII capability above 500 feet AGL.
- APCH WARN (Approach Warning) (red) – system or approach conditions out of tolerance

- FLARE (green) – system derived flare guidance is active
- RO ARM (Rollout Guidance Armed) (white) – system capable of providing ground roll guidance during rollout. Displayed prior to touchdown during an AIII approach
- RO CTN (Rollout Guidance Caution) (amber) – loss of rollout guidance below 500 feet AGL
- RO (Rollout Guidance) (green) – rollout guidance is active
- TO (green) – not used, displayed only during maintenance test.
- TO CTN (Takeoff Caution) (amber) – not used, displayed only during maintenance test
- TO WARN (Takeoff Warning) (red) – not used, displayed only during maintenance test.

2 HGS FAIL Light (red)

Illuminated (red) – indicates HGS failure below 500 ft AGL.


Push –


- extinguishes the HGS Fail Light
- will not illuminate again until failure is cleared and another failure occurs
- resets system for another failure.

Combiner Controls

[Option - Model 4000]

Brightness and Stow Controls

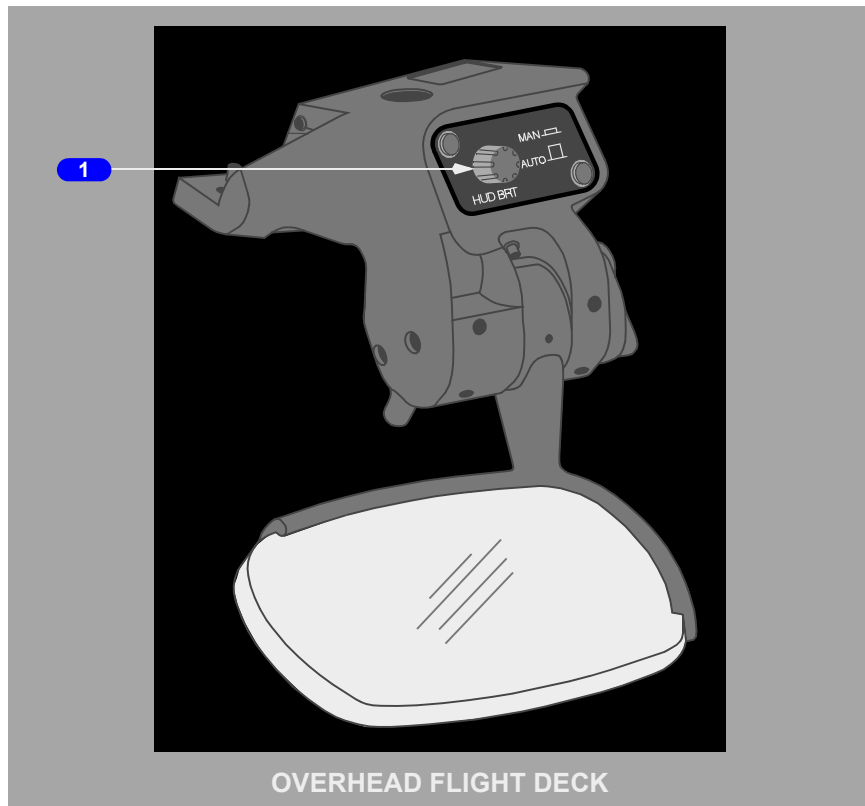

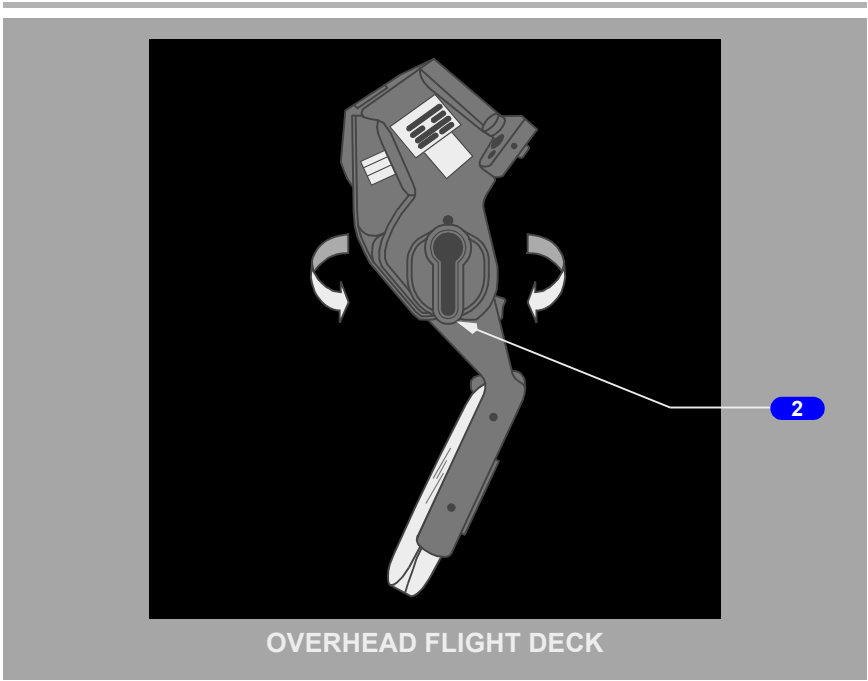

1 Brightness Control Knob

MAN – push knob in for manual brightness adjustment.

AUTO – pull knob out for automatic brightness adjustment. Display intensity varies based on ambient light detected by a sensor on the combiner.

HUD BRT – rotate knob clockwise to increase display intensity. Rotate knob counter-clockwise to decrease display intensity.

2 Stow Lever

There are three positions for the combiner:

- Stow – AFT/UP
- Normal operating detent – DOWN
- Breakaway – FWD

Pull lower portion of the stow lever toward the pilot and rotate the glass down and forward to the normal operating detent. To stow the combiner glass, grasp and rotate toward the pilot, aft and up, until it locks in the stowed position.

The forward breakaway position allows the combiner glass to be displaced forward from its normal operating position. The combiner glass can be returned from the breakaway position by rotating the stow lever away from the pilot and rotating the glass aft to the normal operating detent.

Note: If the combiner glass is not in the normal operating position (detent) the ALIGN HUD message will display when in IMC and VMC modes. If the ALIGN HUD message can not be extinguished by grasping and moving the combiner glass forward or aft, then back into its normal operating detent, IMC and VMC modes should not be used.

The ALIGN HUD restriction does not apply to use of the HUD in PRI mode.

Flight Instruments, Displays
PFD/ND System Description**Chapter 10**
Section 21

Introduction

The Common Display System (CDS) supplies information to the flight crew on six flat panel liquid crystal display units (DUs). The outboard and inboard display units present all primary flight and navigation information. Primary engine indications are normally displayed on the upper DU. Secondary engine indications or system data are normally displayed on the lower DU.


Detailed information on the following subjects is found in other sections of this chapter:

- Primary Flight Display (PFD)– Section 31
- Navigation display (ND)– Section 41.

Display Brightness Control

Adjustment of the brightness of each DU is controlled by a combination of light sensors and brightness controls. Two remote light sensors, located left and right on the top of the glareshield, compensate for the amount of ambient light entering through the flight deck windows and adjust the brightness of the related DUs. Each DU also has an integral light sensor which provides automatic control of brightness as a function of ambient light striking the face of the DU. Brightness controls are used by the pilot to further adjust the intensity of each display unit.

DISPLAYS SOURCE Panel

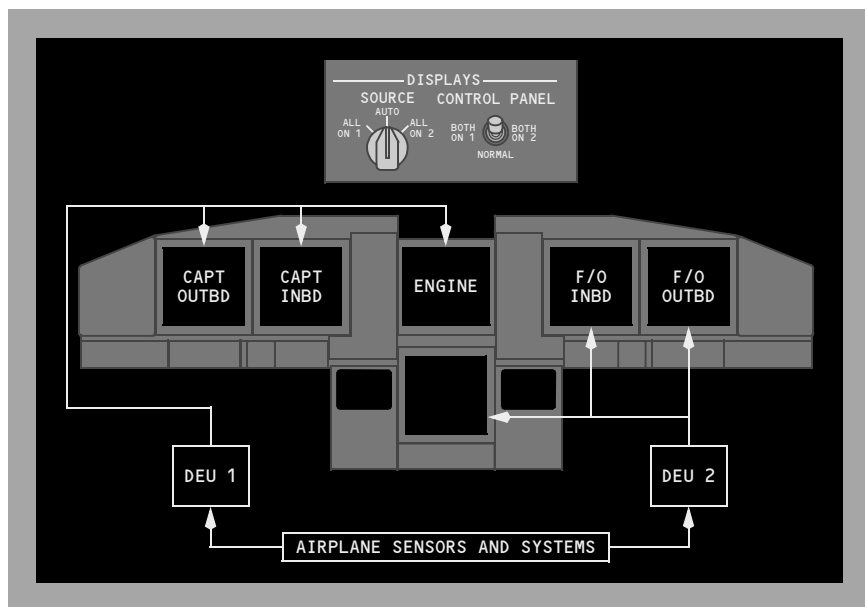

The DISPLAYS source panel, located on the forward overhead panel, contains source controls for the display electronic units (DEUs) and EFIS control panels.

Two DEUs receive data from sensors and airplane systems and supply data to the DUs. During normal operation, with the display SOURCE selector switch in the AUTO position, DEU 1 supplies data to the Captain outboard, Captain inboard and upper DUs while DEU 2 supplies data to the First Officer outboard, First Officer inboard and lower DUs. If a DEU fails, the remaining DEU automatically supplies data to all six displays. A single DEU failure will continue to supply each pilot with flight instrument information from independent sources. Each DEU receives data from both ADIRUs.

The display SOURCE selector, used on the ground for maintenance purposes, allows manual selection of either DEU 1 or DEU 2 for all six display units. If the displays are automatically or manually switched to a single DEU source, a "DSPLY SOURCE" annunciation illuminates on the primary flight displays.

The CONTROL PANEL select switch determines which EFIS control panel controls the pilots' display functions. This switch should remain in NORMAL. With the switch positioned to either BOTH ON 1 or BOTH ON 2, the selected EFIS control panel provides inputs for both sets of pilot displays.

EFIS Control Panels

Two EFIS control panels, located on the glare shield of the center main panel, control display options, mode, and range for the related pilot's displays.

If one EFIS control panel fails, the displays can be controlled by the remaining control panel. Refer to the PFD and ND sections of this chapter for more information.

Display Select Panel

The display select panel, located on the left and right forward panels, controls the displays on the inboard, outboard and lower DUs. Normal operation is all selectors in the NORMAL position. The pilots' outboard and inboard DUs display primary flight and navigation data and the upper DU displays primary engine data and fuel quantity.


If a DU fails, automatic display switching ensures critical information remains available to the pilots at all times. If the system detects an operational failure on an outboard DU, the primary flight display automatically moves to the inboard DU and the failed outboard DU blanks. The OUTBD/INDB selector no longer has control over that display unit. If the upper DU fails, the engine display automatically moves to the lower DU.

Manual control of display formats is provided for undetected failures. The outboard rotary switch on the display select panel controls the formats displayed on either the outboard or inboard DUs. The inboard rotary switch controls the display format shown on the lower DU.

Display Selection and Control Examples

The following examples show display selections.

Normal Display Configuration

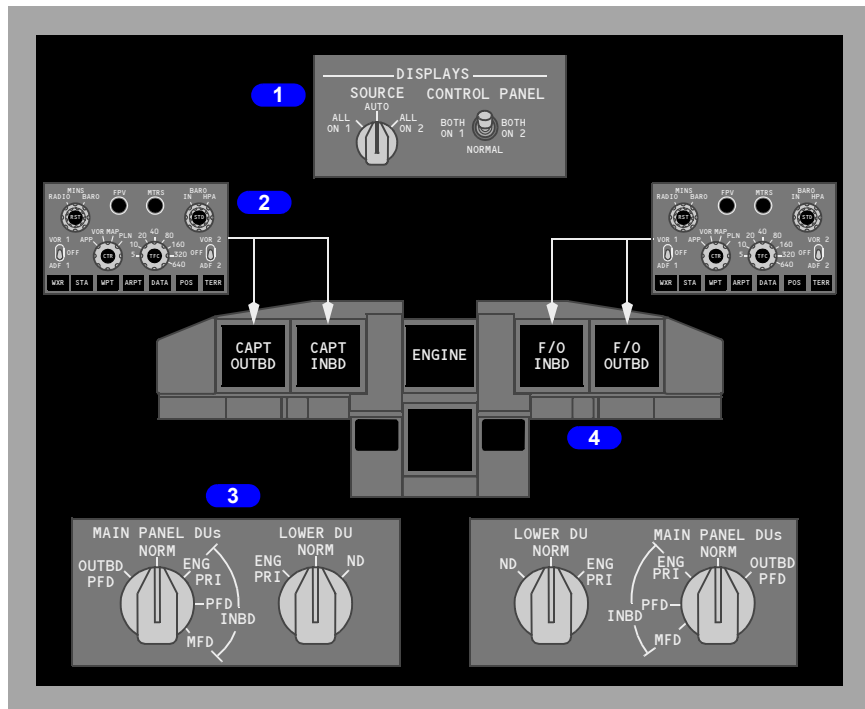

1 DISPLAYS Source Panel

The display SOURCE select switch is in AUTO and the CONTROL PANEL select switch is in NORMAL.

2 EFIS Control Panel

The left EFIS control panel controls the Captain outboard and inboard display units. The right EFIS control panel controls the First Officer outboard and inboard display units.


3 Display Select Panel

All selectors are in NORMAL.

4 Display Units

The pilots' outboard and inboard DUs show the normal PFD/ND displays.

Display Unit Failure Automatic Switching

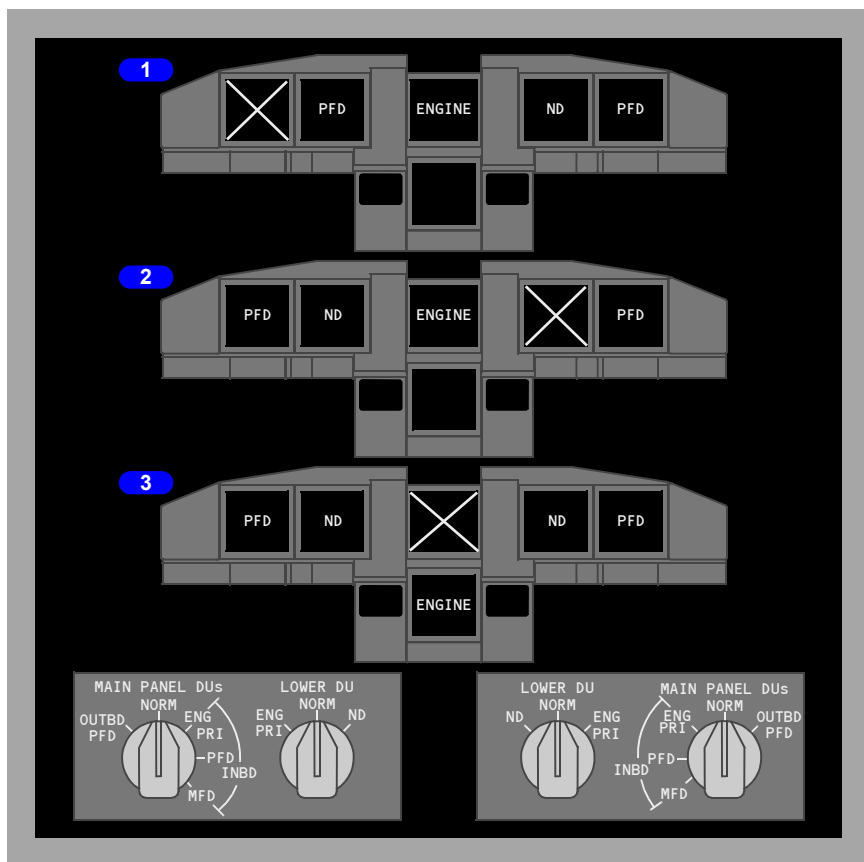

1 Outboard Display Unit Fails

If an outboard display unit fails, the PFD is automatically displayed on the inboard display unit and the outboard display unit blanks.

2 Inboard Display Unit Fails


If an inboard display unit fails, the PFD format remains displayed on the outboard display unit and the inboard display unit blanks.

3 Upper Display Unit Fails

If the upper display unit fails, the primary engine display automatically moves to the lower display unit and the upper display unit blanks. If the secondary engine display is already on the lower display unit, a compact engine display is then displayed.

Note: There is no automatic switching for a lower DU failure.

EFIS Control Panel

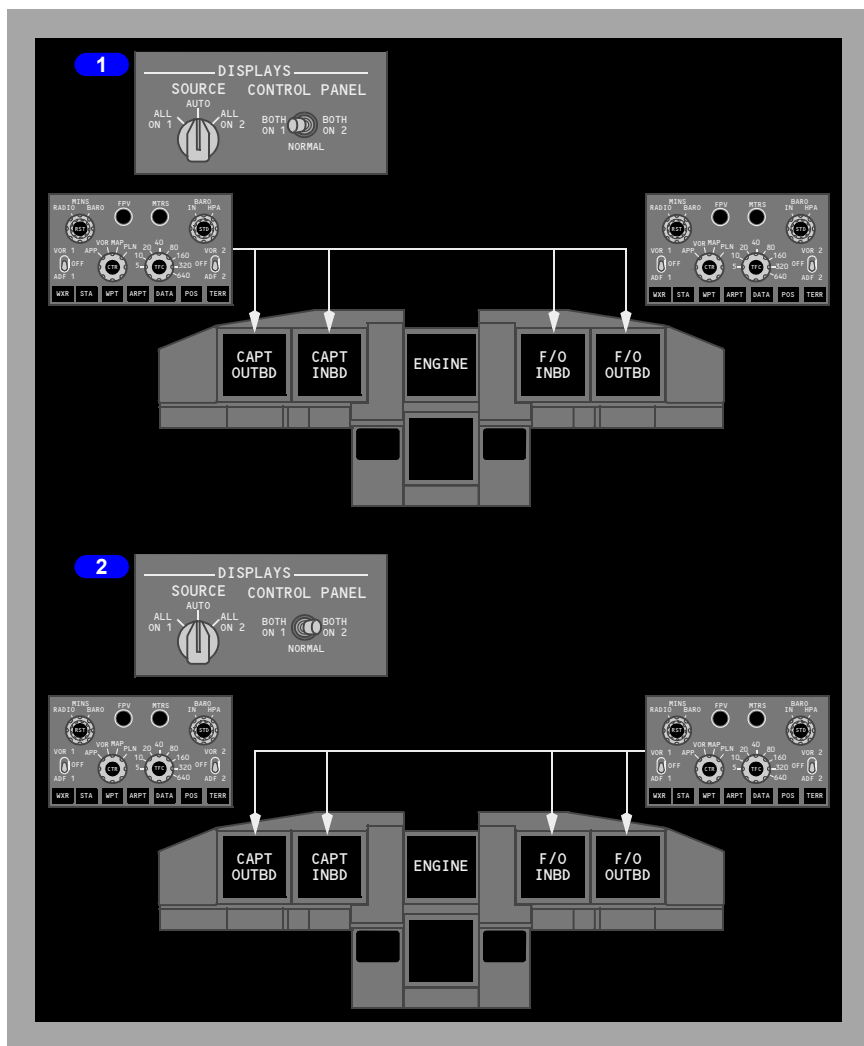


1 CONTROL PANEL Select Switch BOTH ON 1

The left EFIS control panel controls both pilots' outboard and inboard display units.

2 CONTROL PANEL Select Switch BOTH ON 2

The right EFIS control panel controls both pilots' outboard and inboard display units.


Outboard Display Switching

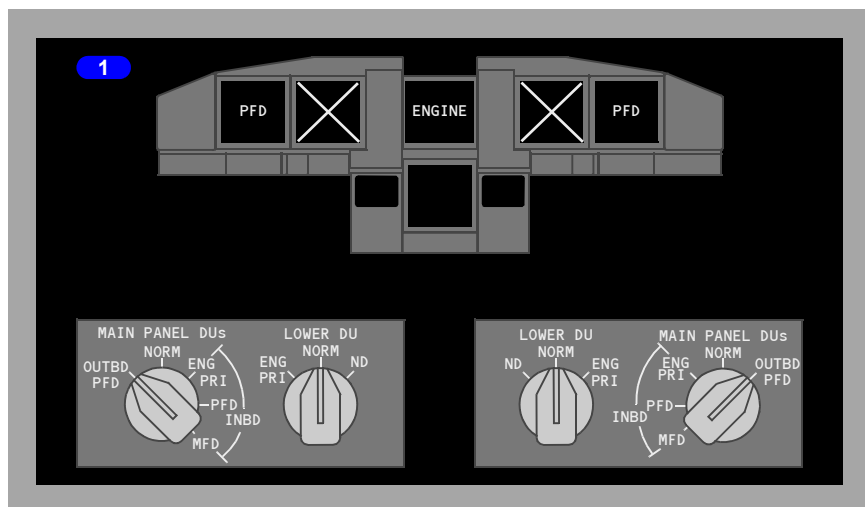


1 MAIN PANEL DUs Switch to OUTBD PFD

If the MAIN PANEL DUs switch is turned to Outboard Primary Flight Display (OUTBD PFD), the PFD format is displayed on the outboard display unit and the inboard display unit blanks.

Inboard Display Switching

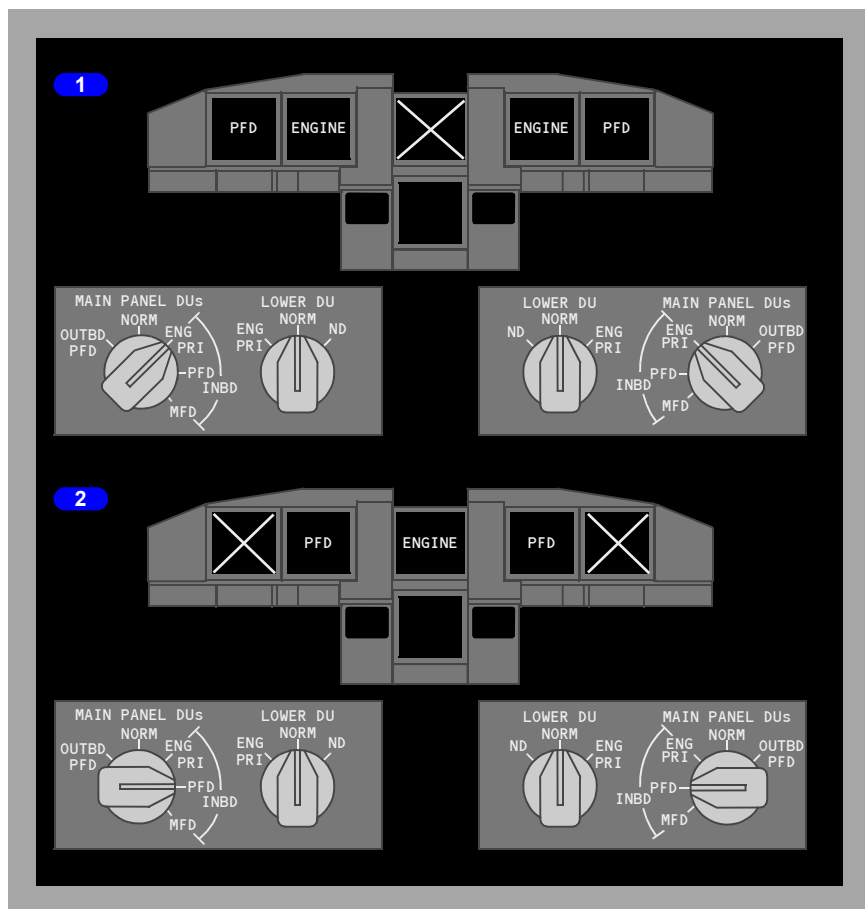

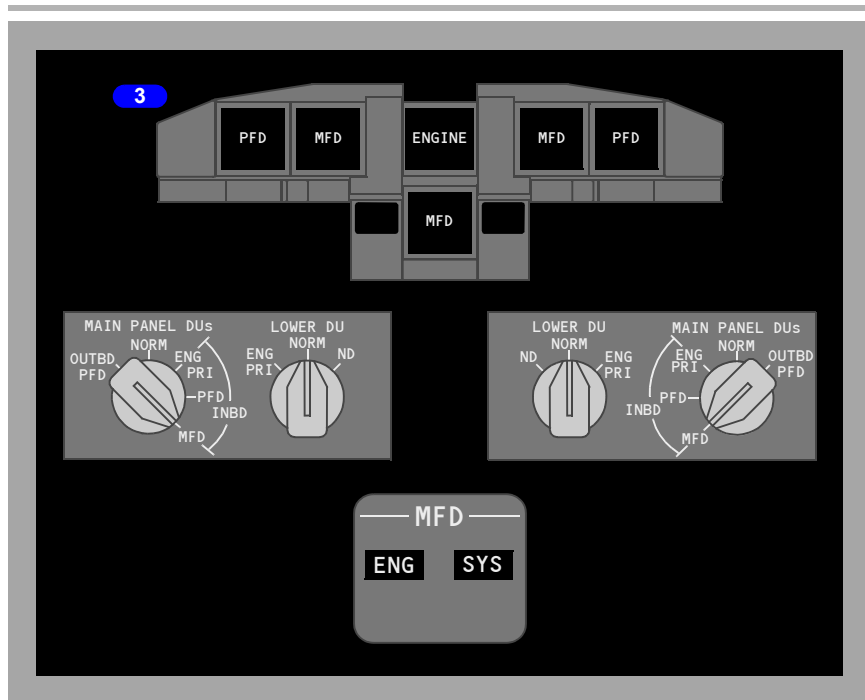

1 MAIN PANEL DUs Switch to INBD ENG PRI

If the MAIN PANEL DUs switch is turned to INBD ENG PRI, the primary engine display moves to the inboard DU, the PFD format is displayed on the outboard DU and the upper DU blanks.


2 MAIN PANEL DUs Switch to INBD PFD

If the MAIN PANEL DUs switch is turned to INBD PFD, the PFD format is displayed on the inboard DU and the outboard DU blanks.

3 MAIN PANEL DUs Switch to MFD

If the MAIN PANEL DUs switch is turned to INBD MFD, the PFD continues to be displayed on the outboard display unit and the inboard display is blank. The system format (SYS) or secondary engine format (ENG) can then be selected to the inboard display unit and lower display unit with the MFD switches on the engine display control unit.

Lower Display Switching

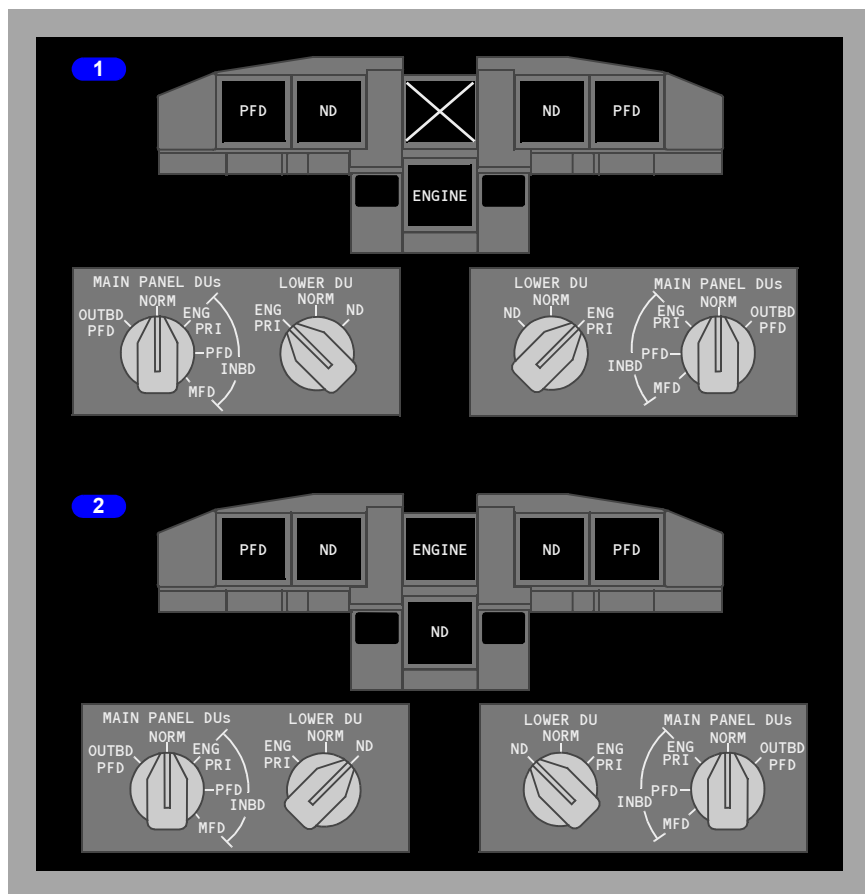

1 LOWER DU Switch to ENG PRI

If the LOWER DU switch is turned to ENG PRI, the engine display moves to the lower DU and the upper DU blanks.

2 LOWER DU Switch to ND

If the LOWER DU switch is turned to ND, the engine display is shown on the upper DU and the navigation display is shown on the lower DU. When the MFD ENG switch is selected, the compact engine display is shown on the upper DU.


Display System Information Sources

Air Data Inertial Reference System (ADIRS)

The ADIRS produces flight data such as position, speed, altitude and attitude for the flight displays, flight management computers, flight controls, engine controls and all other systems requiring inertial and air data.

The major components of the ADIRS are:

- two air data inertial reference units (ADIRUs)
- four air data modules (ADMs)
- one inertial system display unit (ISDU)
- one dual mode select unit (MSU)
- six static ports
- three pitot probes
- two alpha vanes
- one total air temperature probe

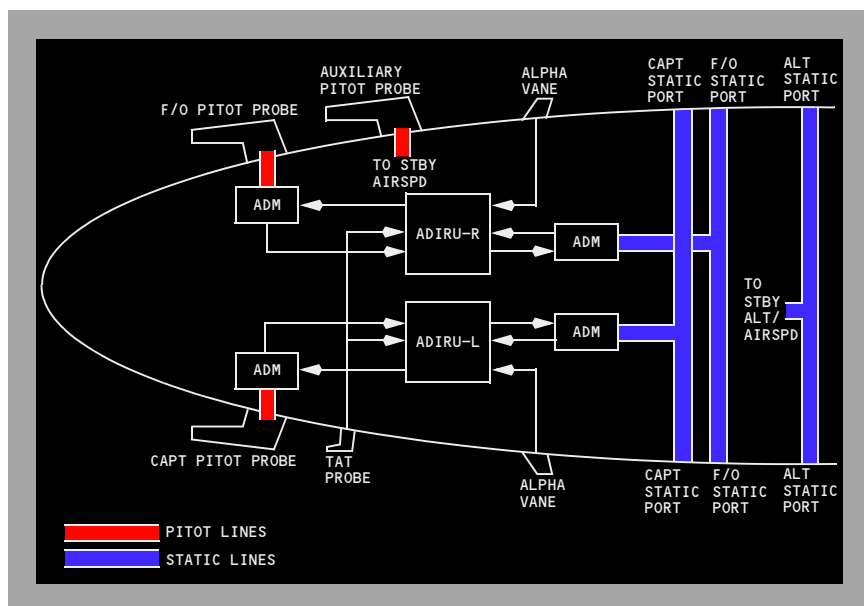

Air Data Inertial Reference Unit (ADIRU)

The ADIRUs provide inertial position and track data to the FMC as well as attitude, altitude and airspeed data to the displays. The ADIRUs process information measured by internal gyros and accelerometers, and from air data module inputs, the alpha vanes and other systems.

The ADIRUs are described in Chapter 11, Flight Management, Navigation.

Air Data

The pitot static system is comprised of three separate pitot probes and six flush static ports. Two pitot probes and four static ports interface with the air data modules. The remaining auxiliary pitot probe and alternate static ports provide pitot and static pressure to the standby instruments. The auxiliary pitot probe is located on the first officer's side of the airplane.

The air data modules convert pneumatic pressure to electrical signals and send these data to the ADIRUs. Each pitot air data module is connected to its on-side pitot probe; there is no cross connection. The air data module connected to the Captain's pitot probe sends information to the left ADIRU, while the air data module connected to the First Officer's pitot probe sends information to the right ADIRU. The remaining air data modules are located at the balance centers of the Captain's and First Officer's static ports. The air data module connected to the Captain's static ports sends information to the left ADIRU, while the air data module connected to the First Officer's static ports sends information to the right ADIRU.

Angle-of-Attack

There are two alpha vanes, one located on each side of the forward fuselage. The vanes measure airplane angle-of-attack relative to the air mass.

Total Air Temperature (TAT)

A total air temperature probe is mounted outside the airplane to sense air mass temperature. The temperature sensed by the probe is used by the ADIRUs to compute total air temperature.

Note: For manual CDU input of OAT on the ground, TAT indication is approximate and should not be used in lieu of ambient OAT for takeoff performance.

Static Air Temperature (SAT)

Static air temperature, displayed on the CDU PROGRESS page, comes from the ADIRUs, using total air temperature probe information.

Standby Flight Instruments

The standby flight instruments include:

- standby magnetic compass
- standby attitude indicator
- standby altimeter/airspeed indicator
- standby radio magnetic indicator

Standby Magnetic Compass

A standard liquid-damped magnetic standby compass is provided. A card located near the compass provides correction factors.

Standby Attitude Indicator

[Option - BFG 501-1741-2103]

The standby attitude indicator provides attitude and limited navigation information that is self-contained and independent of the primary attitude displays. The indicator is powered by the battery bus and remains powered after the loss of all normal AC power as long as battery power is available.

After power is applied, the indicator requires three minutes to complete the alignment sequence. Should there be motion during the alignment sequence, the indicator will reset and attempt to reach normal operation within six minutes of applying power.

Inflight alignment requires the airplane be in straight and level, non-accelerated flight for three minutes. Any momentary roll exceedance of 3 degrees during the alignment sequence can result in a restart of the sequence.

If alignment is unsuccessful, the ALIGNMENT FAILURE message shows and the indicator does not enter normal operation.

Standby Altimeter/Airspeed Indicator

Standby altitude and airspeed are displayed on a single indicator.

The standby altimeter receives static pressure from the alternate static ports. Current altitude is displayed digitally. A pointer indicates altitude in hundreds of feet. Barometric setting windows display the barometric setting in both millibars and inches of mercury as set by the barometric setting control. The altimeter has a range of -1000 to 50,000 feet.

The standby airspeed indicator receives ram air pressure from the auxiliary pitot probe and static pressure from the alternate static ports. It provides current airspeed in knots.

Standby Radio Magnetic Indicator

The standby Radio Magnetic Indicator (RMI) displays magnetic and VOR/ADF bearing to the station. The RMI is powered by the AC standby bus and remains powered after the loss of all normal AC power as long as battery power is available.

With the reference switch in NORM, magnetic is displayed if the airplane is outside polar regions. In polar regions, a flag shows. When the switch is in TRUE, true is displayed regardless of latitude. For more information on polar regions refer to Chapter 11, Flight Management, Navigation.

Clocks

[Option - GPS capable]

Two electronic clocks are installed, with two digital displays on each clock. Universal time coordinated (UTC) time, UTC date, manual time or manual date may be set on the upper time display. The lower ET/CHR display is used for either elapsed time or the chronograph. Separate controls are provided for each display.

Each clock is powered by the hot battery bus when the battery bus is not available. The clock reverts to hot battery bus power when the airplane is powered down. The hot battery bus power keeps the time base but does not provide power for the display or output of clock data and the clock reverts to manual mode. When the airplane is powered up and Global Position System (GPS) data is restored, the clock continues to operate in manual mode and will not automatically display UTC time. UTC time can be manually selected by using the TIME/DATE pushbutton.

Note: When on standby power, the F/O clock display is dim and UTC time is not available.

Flight Recorder (DFDR)

The Digital Flight Data Recorder (DFDR) provides a permanent record of operational and systems information including time, heading, altitude, airspeed, acceleration, attitude, engine thrust, and flight control surface position.

The recorder is a solid state device and complies with Federal Aviation Administration and European Aviation Safety Agency requirements for data sampling rates and number/type of parameters sampled.

Operational and systems information are automatically recorded whenever the flight recorder is powered.

The DFDR has the following features:

- Continuously records the most recent flight data, saving the most current data for the last 25 hours of operation
- The DFDR is housed in a sealed container located behind an access door in the far aft cabin ceiling
- Corrosion, fire and impact resistant, survives deep sea pressure to 13,451 feet (4,100 m)
- Locator beacon operable for 30 days
- Receptacle for downloading and copying data for analysis.

Aircraft Condition Monitoring System (ACMS)

[Option - ACMS]

No BRT or KLM_P2 per C/W REMCO at KLM on 03/17/2009

The Aircraft Condition Monitoring System (ACMS) contains software that provides the operator useful reports on the condition of the airframe, engines, trends monitoring, and maintenance.

The ACMS consists of:

- ACMS software containing applicable maintenance and operations algorithms for each phase of flight
- Digital Flight Data Acquisition Unit (DFDAU). The DFDAU receives signals representing certain flight condition and airplane systems operating performance and converts them to a digital form for recording on the DFDR
- ACARS air/ground message functionality continuing to expand with additional message formats.

Flight Instruments, Displays**Chapter 10****Head-Up Display System Description****Section 22****Introduction**

The Head-Up Display (HUD) system uses electronics and optics to calculate and display flight information. The flight information is displayed as flight symbols which project on to a transparent glass screen in front of the pilot. The flight symbols overlay and combine with the outside view through window No. 1.

The HUD system can be used during manual flight operations, or with the AFDS engaged during automatic flight operations. When used manually, internal HUD guidance is used to control flight symbology and is independent of any AFDS derived or displayed flight director guidance.

HUD system components, combined with other airplane systems, produce flight symbology displayed in four distinct modes of operation. Each mode of operation has unique characteristics, and is intended to be used during a particular phase of flight based on system capability and meteorological conditions. TCAS resolution advisories and system failure flags are also displayed when active. Detailed information on display symbology is found in Section 42 of this chapter.

The HUD system consists of the following components:

- HUD computer
- Overhead unit (OHU)
- Combiner
- Control panel
- Annunciator panel

HUD Computer

The HUD computer receives input signals from aircraft sensors and equipment and converts this data to symbology for display on the combiner. The computer also evaluates system and approach performance through extensive Built-In Test Equipment (BITE), input validation, and approach monitor processing. If an out of tolerance condition exists, the applicable annunciation appears on the combiner and/or annunciator panel. Internal components control the following functions:

- Guidance control
- Shape and position of flight symbols
- Airplane sensor status
- HUD system status
- HUD system mode.

Overhead Unit (OHU)

The OHU contains the CRT and projection optics to display flight symbology on the combiner. Electronic circuitry within the OHU controls display intensity and system monitoring.

Combiner

The combiner optically combines flight symbology from the OHU, with the pilot's view through window No.1. It acts as a wavelength selective mirror, reflecting only the flight symbology color (green) and lets other colors pass through.

The combiner alignment detector monitors the angular position of the combiner. The HUD computer uses the detector to verify correct combiner position for normal viewing. If the combiner is not in the correct position, and the HUD is in the IMC or VMC modes, the ALIGN HUD message appears on the combiner.

The combiner glass element has a break away safety feature which allows the element to rotate forward from the normal position, in case of abnormal deceleration.

Control Panel

The HUD control panel is used to select and display modes of operation and enter data. Display intensity is controlled by panel switches or by an ambient light sensor located on the upper left corner of the panel.

Annunciator Panel

The annunciator panel consists of lights to indicate HUD system status annunciations during AIII mode approach and landing operations.

Modes of Operation

The HUD system provides a mode-selectable display on the combiner. The modes are:

- PRI (Primary) - used for most HUD operations
- AIII - primarily used for manually flown CAT II or CAT IIIa ILS approach and landing operations
- IMC - used for AFDS autopilot/flight director approaches
- VMC - used for visual approaches.

Primary (PRI) Mode

The primary mode may be used during all phases of flight from takeoff to landing. This can include low visibility takeoff operations utilizing ground roll guidance, all enroute operations and either non-precision or precision approaches to CAT I or II minimums utilizing flight director guidance and/or raw data.

Attitude information is displayed in the form of a horizon line and pitch scales positioned relative to an airplane reference symbol. Airspeed and altitude are displayed in tapes along the left and right edges of the display. A sectorized HSI is displayed in flight in the lower center of the display. On the ground, the HSI, flight path and guidance cue are not displayed. These symbols are automatically displayed once the aircraft is in flight.

During takeoff, a TOGA pitch target line and a guidance cue are displayed. The TOGA pitch target line is displayed as a horizontal dash line initially positioned at the top of the display. As the pitch attitude increases during rotation, its vertical position relative to the airplane reference symbol is adjusted to display the pitch command from the Captain's flight director. Initially, the flight director guidance cue is displayed when the airplane reference is within 2 degrees of the TOGA pitch target line or when climbing through 50 feet radar altitude, whichever occurs first. The TOGA pitch target line remains until the TO/GA mode is exited. The flight director guidance cue is displayed throughout flight when the Captain's flight director is selected on and both pitch and roll commands remain valid.

A full time slip-skid symbol is displayed as part of the roll scale. During any takeoff (after rotation) or go-around (below 1000 feet), additional slip-skid symbols are displayed to enhance lateral control in the event of an engine failure. These two additional symbols are displayed relative to the airplane reference and the flight path symbols and are removed above 1500 feet.

AFDS engaged modes, autothrottle modes and autopilot status is indicated across the top of the display similar to the flight mode annunciator display. Navigation information is displayed dependent on the selected navigation source and active AFDS mode. During LNAV operations, vertical and lateral deviations are similarly displayed based on FMC data. During ILS/VOR operations, course deviation is displayed within the HSI. Glideslope data is presented on a glideslope deviation scale adjacent to the altitude tape.

If the HUD is in a mode other than primary, depressing a TO/GA switch activates the primary mode independent of the standby mode indicated on the HUD control panel.

Primary Mode - Low Visibility Takeoff

The primary mode includes special symbology used for a low visibility takeoff. The display supports visual runway centerline tracking and enhances situational awareness.

Note: Approval must be obtained from the appropriate regulatory authority prior to conducting HUD low visibility takeoff operations.

The low visibility takeoff display incorporates a ground roll reference symbol, ground roll guidance cue and a ground localizer line (if an ILS frequency is tuned on both nav receivers). The HUD derived ground roll guidance cue provides lateral guidance relative to the ground roll reference symbol to track the localizer. The ground localizer line provides raw localizer information any time the aircraft is on the ground and the Captain's navigation receiver is tuned to a localizer frequency. The localizer deviation is presented relative to the selected course mark on the horizon.

Primary Mode - Approach and Landing

[Option - Model 4000]

If the primary mode is used for an approach and landing, flight director guidance and navigation raw data is displayed. Once on the ground, the ground localizer line and ground localizer scale is displayed (if an ILS frequency is tuned on both nav receivers) to enhance centerline tracking.

AIII Approach Mode

[Option - Model 4000]

The HUD AIII mode is specifically designed for manual ILS approach and landing operations to CAT II or CAT IIIa minimums. Altitude and airspeed tape displays are replaced with digital values. The HSI is also replaced with ILS raw data displayed in proximity to the flight path group around the center of the display. In the AIII mode, flight path guidance is provided by the guidance cue which is derived from internal approach and landing guidance algorithms, and is independent of any AFDS derived or displayed flight director guidance.

Note: Approval must be obtained from the appropriate regulatory authority prior to conducting HUD Cat II or CAT IIIa operations.

AIII mode is dependent on the availability of all required systems and ILS approach criteria. Because of these requirements, the AIII mode is not identified as a selectable standby mode until these requirements are met. AIII capability is displayed on the control panel at any time, and on the combiner after LOC and G/S capture in the PRI mode.

ILS approach criteria requirements are satisfied when:

- Both VHF navigation receivers tuned to an ILS frequency, and
- VHF #1 or VHF #2 localizer deviation is less than approximately $\frac{1}{4}$ dot and glideslope deviation is less than approximately 1 and $\frac{1}{4}$ dots for at least five seconds, and

- The difference between the airplane's magnetic track and the captain's selected course is less than 15 degrees, and
- Radio altitude is greater than 500 feet.

Note: Once these criteria have been satisfied, subsequent deviations outside the criteria prior to AIII mode selection, will result in a loss of ability to select the AIII mode.

Automatic AIII mode arming requirements are satisfied when:

- PRI or IMC mode selected, and
- all required systems operating normally (AIII capable), and
- ILS frequency tuned on VHF NAV receiver No. 1 or No. 2, and
- radio altitude is greater than 500 feet, and
- TOGA mode not active.

To activate AIII ARM, push the STBY function key on the HUD control panel. When armed, "AIII ARM" is displayed on the standby mode display line and "AIII ARM" is displayed on the combiner. Approximately five seconds after the requirements for ILS approach criteria are satisfied, the AIII mode is automatically activated.

Once the AIII mode is active, the AIII mode symbology and related annunciations are displayed on the combiner, the control panel display, and the HUD annunciator panel.

Any sensor or equipment condition that results in a loss of AIII capability will cause a NO AIII annunciation displayed on the combiner and on the control panel display. The first officer's AIII annunciation is also extinguished. The annunciation will remain until another mode is selected or AIII capability is regained.

Below 500 feet radar altitude, with a loss of AIII capability or if the approach or flare performance does not ensure a safe touchdown within the required touchdown zone, an APCH WARN annunciation will be displayed on the combiner and on the HUD annunciator panel.

IMC Mode

The IMC mode is an alternate approach mode primarily intended for autopilot approaches. Like the PRI mode, the IMC mode guidance cue utilizes AFDS derived guidance. The guidance cue is displayed when the Captain's flight director is active and both pitch and roll commands are valid.

Approach symbology format for the IMC mode is similar to the AIII approach mode. Altitude and airspeed data is displayed as digital values and navigation raw data is displayed in close proximity to the flight path vector.

VMC Mode

The VMC mode is intended for visual approach operations. No flight director or HUD guidance is displayed. The flight path vector is used to control the approach to the runway.

Approach symbology format for the VMC mode is similar to the AIII and IMC modes. However, navigation data is not displayed.

The proper mechanical alignment of the combiner is critical during visual operations. Combiner position is monitored by the combiner alignment detector, to determine if the combiner is within allowable position tolerances while in the IMC or VMC mode. If its position is out of tolerance, an ALIGN HUD message is displayed on the combiner. Elimination of the message is accomplished by gently pushing the combiner in the breakaway direction and releasing. This allows the combiner to reposition itself. If the message cannot be removed, the IMC or VMC mode should not be used.

TCAS Resolution Advisory

TCAS resolution advisories are displayed as preventive and corrective symbols, and are similar to the pitch commands displayed on the attitude indicator.

Preventive advisories do not require any crew action, but indicate an unsafe zone, displayed as a double lined bracket. On the unsafe side of the bracket, two angled lines are extended from the corners. The position of the bracket is determined by TCAS, and represents the vertical flight path position that is safe.

Corrective advisories require positive action by the crew and are indicated by a double lined box. The position of the box is determined by the vertical speed requirements from TCAS, and represents the vertical flight path position that is safe.

For additional information on TCAS, refer to Chapter 15, Warning Systems.

Failure Flags and Data Source Annunciations

Failure flags are displayed for invalid sensor status and miscompares between similar parameters. These flags are generally indicated by boxed annunciations for the affected parameters, and in the case of failure, the removal of all symbols related to the fault. In some cases, symbols are removed as a result of other symbols being removed due to a fault.

Flags associated with a miscompare of similar data result in the display of a flag without the removal of the related symbols. The flag indicates the applicable data should be verified by cross-checks with other flight deck displays.

Data source annunciations are provided in a few cases to annunciate the source of displayed data when other than normal.

Dashes replace numbers if there is no computed data.

Intentionally
Blank

Flight Instruments, Displays
Primary Flight Display (PFD)**Chapter 10**
Section 31**Introduction**

The Primary Flight Displays (PFDs) present a dynamic color display of all the parameters necessary for flight path control. The displays provide the following information:

- flight mode annunciation
- airspeed
- altitude
- vertical speed
- attitude
- steering information
- radio altitude
- instrument landing system display
- approach minimums
- heading/track indications
- TCAS indications
- GPWS annunciations

Failure flags are displayed for airplane system failures. Displayed information is blanked or replaced by dashes if no valid information is available to the display system (because of out-of-range or malfunctioning navigation aids). Failure flags are displayed when aircraft systems cannot generate a reliable display.

Flight mode annunciations are described in Chapter 4, Automatic Flight.

Airspeed**[Option - Without groundspeed displayed]**

Airspeed is displayed on a tape and in a digital window on the left side of the PFD. The current Mach number is digitally displayed below the airspeed tape when the current Mach number is greater than 0.40. An airspeed trend vector indicates predicted airspeed in 10 seconds. Selected airspeed is displayed above the airspeed tape.

Takeoff and landing reference speeds and flap maneuvering speeds are shown along the right edge of the airspeed tape. Maximum and minimum airspeeds are also displayed along the right edge of the airspeed tape.

[Option - VNAV speed band]

During VNAV PTH descents, a magenta bar is added along the right edge of the speed tape that indicates the FMC target airspeed. The band is displayed only for flaps up configurations while the “VNAV PTH” FMA is displayed.

[\[Option - Flap/Ref speed annunciation\]](#)

Once the crew has set Flap/VREF in the MCDU APPROACH REF page, a green “REF” and numerical landing Flap/VREF appears on the PFD. The REF symbol will move vertically adjacent to the reference airspeed, and the numerical display will remain fixed at the base and to the right of the speed tape. In addition to the green VREF, a white VREF bug provides a ready target airspeed which allows sufficient tail clearance margin during a one engine inoperative flaps 15° landing.

Attitude

The attitude indication displays the airplane pitch and roll attitude referenced to the horizon.

Pitch attitude is displayed by an airplane symbol against a pitch scale. The pitch scale is in 2.5 degree increments.

A pointer indicates bank angle in increments of 10, 20, and 30 degrees. Single marks indicate 45 and 60 degrees of bank. A small rectangle under the bank angle pointer indicates slip and skid conditions. Bank angle is also represented by the attitude of the airplane symbol against the horizon line and pitch scale.

A pitch limit indication is displayed at all times when the flaps are not up.

[\[Option - PLI pop-up\]](#)

A pitch limit indication is displayed at all times when the flaps are not up, or when flaps are up and airspeed approaches stick shaker activation for existing flight conditions.

Steering Indications

[\[Option - Split axis command bars\]](#)

The flight director is displayed when the related flight director switch is on. Pitch and roll commands are displayed independently.

The Flight Path Vector (FPV) symbol represents airplane flight path angle vertically and drift angle laterally. The flight path vector is displayed on the PFD when the EFIS control panel FPV switch is selected on. The FPV shows the Flight Path Angle (FPA) above or below the horizon line and drift angle left or right of the pitch scale's center. The FPA uses inertial and barometric altitude inputs. The vertical FPA is unreliable with unreliable primary altitude displays.

The FPV symbol is displayed in two brightness levels. The FPV symbol is displayed dim when either the flight director or a TCAS resolution advisory is displayed. The FPV symbol is displayed bright when the flight director is off and there is no TCAS resolution advisory displayed.

Instrument Landing System Indications

ILS glide slope and localizer deviation, frequency/identification, DME, course, and marker beacon indications are provided.

The approach reference information appears above and to the left of the attitude display. The ILS station identification or frequency, course, and (if available) DME are displayed.

The marker beacon indication (OM – outer marker, IM – inner marker, or MM – middle marker) is displayed in the upper right corner of the attitude display area.

The glide slope pointer and scale appear on the right side of the attitude indication when a valid signal is received. At low radio altitudes with autopilot engaged the scale turns amber and the pointer flashes to indicate an excessive glide slope deviation. The pointer is not displayed when the glide slope signal is unusable or when the track and the front course on the mode control panel differ by more than 90 degrees (backcourse).

The localizer pointer and scale appear at the bottom of the attitude indication when a valid signal is received. When the course deviation is slightly more than ½ dot, the localizer mode is engaged and track is within 5 degrees of the MCP selected course, the scale automatically expands. At low radio altitudes with autopilot engaged the scale turns amber and the pointer flashes to indicate excessive deviation. Below 1,000 feet AGL with LNAV engaged and LOC armed, the localizer scale turns amber and the pointer flashes if the localizer is not captured.

Each pilot's deviation alerting system self-tests upon becoming armed at 1500 feet radio altitude. This self-test generates a two second LOC and G/S deviation alerting display on each attitude indicator.

[Option - Rising runway]

Below 2500 feet radio altitude with the localizer pointer in view, a rising runway symbol comes into view. The symbol provides lateral guidance. At 200 feet radio altitude, the symbol rises toward the airplane symbol.

Approach Minimums

[Option - Radio altitude below ADI]

The selected radio altitude or barometric approach minimums are set on the EFIS control panel. They are displayed near the bottom left of the altitude display.

Radio Altitude

[Option - Radio altitude below ADI]

The current radio altitude is displayed in the bottom center of the attitude indication area when radio altitude is below 2,500 feet AGL. The display turns amber when the radio altitude is below the radio altitude minimums.

Altitude

Altitude is displayed on an altitude tape along the right side of the PFD. It is also shown digitally in a window in the middle of the tape. When meters is selected on the EFIS control panel:

- current altitude in meters is also shown above the altitude window
- selected altitude in meters is displayed above the altitude tape.

Selected altitude is displayed above the altitude tape and is boxed when approaching the selected altitude. Selected altitude is also depicted with a bug on the altitude tape.

The selected barometric approach minimum is indicated on the altitude tape with a triangular pointer and a line when BARO minimums are selected. When RADIO minimums are selected, the pointer is still set at BARO minimums but there is no line.

A landing altitude indication is displayed as a crosshatched area and indicates:

- the FMC landing altitude for destination runway or airport, or
- the landing altitude for departure runway or airport until 400 NM from departure or one-half the distance to destination, whichever occurs first.

The current barometric reference is displayed below the altitude tape in either inches of mercury or hectopascals as selected on the EFIS control panel. A preselected barometric reference can be displayed when STD is displayed.

[Option - Altimeter with QFE]

Altitude reference is selectable between QNH and QFE. QNH is the normal operating mode. A description of QFE operation is contained in the CDU Approach Reference Page description in Chapter 11, Flight Management, Navigation.

Vertical Speed

Vertical speed is displayed to the right of the altitude tape with a tape and pointer. Vertical speed is digitally displayed above or below the vertical speed display when vertical speed is greater than 400 feet per minute. It is displayed above with positive vertical speed and below with negative vertical speed. The selected vertical speed bug shows the selected vertical speed when in the AFDS vertical speed (V/S) pitch mode.

Heading/Track Indications

Heading/track information is displayed in the bottom section of the PFD on a section of the compass rose. Current heading is displayed under a pointer at the top of the compass rose. The MCP selected heading is displayed as a bug on the outside of the compass rose and digitally in the left half of the compass rose.

The current heading/track reference (MAG/TRU) is shown in the right half of the compass rose. A line drawn perpendicular to the edge of the compass rose from the invisible center depicts the current airplane track.

[Option - Horizon line heading scale]

A heading scale is added to the horizon line when the flight path vector is selected on the EFIS control panel, the current bank angle is less than 50 degrees and the absolute pitch angle is less than 20 degrees. The heading scale includes 5 and 10 degree indices with numeric indications aligned with the 10 degree indices. A magenta heading bug is also displayed that represents the MCP selected heading value. For bank angles 50 degrees or greater, the scale is removed to avoid confusion between heading ticks and pitch ticks in the event of unusual attitude recovery.

Traffic Alert and Collision Avoidance (TCAS) Indications

TCAS resolution advisories are displayed in the attitude indication area.

Refer to Chapter 15, Warning Systems.

GPWS Warnings

GPWS warnings are displayed in large capital letters between the attitude display and the heading/track compass rose. Refer to Chapter 15, Warning Systems.

Intentionally
Blank

Flight Instruments, Displays PFD/ND Navigation Displays

Chapter 10 Section 41

Introduction

The NDs provide a mode-selectable color flight progress display. The modes are:

- MAP
- VOR
- APP (approach)
- PLN (plan)

The MAP, VOR, and APP modes can be switched between an expanded mode with a partial compass rose and a centered mode with a full compass rose.

Map Mode

The MAP mode is recommended for most phases of flight. This mode shows airplane position relative to the route of flight against a moving map background.

Displayed information can include:

- current track
- selected and current heading
- position trend vector
- range to selected altitude
- map range scale
- ground speed
- true airspeed
- wind direction and speed
- next waypoint distance
- waypoint estimated time of arrival
- selected navigation data points

Navigation Data Points

Additional navigation facility (STA), waypoint (WPT), airport (ARPT), route progress (DATA) and position (POS) data are available for display on the ND in both the expanded and center map modes.

VOR and Approach Modes

The VOR and APP modes are presented heading up. The VOR and APP modes display track, heading, and wind speed and direction with VOR navigation or approach information.

Plan Mode

The PLN mode is presented true north up. The active route may be viewed using the STEP prompt on the CDU LEGS pages.

ND Information

Heading

Heading is supplied by the FMC or air data inertial reference system (ADIRS). The ND compass rose can be referenced to magnetic north or true north.

Track

Track is supplied by the FMC during normal operation.

Traffic

Traffic information from the TCAS can be displayed on the ND. TCAS is described in Chapter 15, Warning Systems.

Weather Radar

Weather radar information can be displayed on the ND. The weather radar system is described in Chapter 11, Flight Management, Navigation.

Failure Flags and Messages

Failure flags are displayed for system failures or invalid information. Indications are blanked or replaced by dashes when source system information is not available.

The message EXCESS DATA is displayed if the amount of information sent to the ND exceeds the display capability. When this occurs, the primary display system removes information from the outer edge of the display. The message can be removed by:


- reducing the amount of map information
- reducing range, or
- deselecting one or more of the EFIS control panel map switches (STA, WPT, ARPT, DATA, POS).

ND Symbolology

The following symbols can be displayed on each ND, depending on EFIS control panel switch selections. Colors indicate the following:


- W (white) – present status, range scales
- G (green) – dynamic conditions
- M (magenta) – command information, pointers, symbols, fly-to condition
- C (cyan) – nonactive or background information
- A (amber) – cautions, faults, flags
- R (red) – warnings
- B (black) – blank area, off condition.

Heading, Track, and Speed



SYMBOL	NAME	MODE	REMARKS
	Selected heading bug (M)	All except PLN	Displays the MCP–selected heading. A dashed reference line (M) extends from the marker to the airplane symbol (VOR CTR and APP CTR do not display dashed line). In the MAP mode with LNAV or VORLOC engaged, the dashed line is removed 10 seconds after the selected heading bug is moved.
	Current heading pointer (W)	All except PLN	Points to current heading on the compass rose.
	Track line and range scale (W)	All except PLN	Indicates current track. Number indicates range (VOR CTR and APP CTR do not display range).
	Expanded compass (W)	MAP, VOR, APP	Displays 90 degrees of compass rose.
	Groundspeed (W)	All	Displays current groundspeed.
	True airspeed (W)	All	Displays current true airspeed above 100 knots.



SYMBOL	NAME	MODE	REMARKS
	Wind direction/ speed and wind arrow (W)	All	Indicates wind speed and direction, with respect to display orientation and heading/track reference. Displayed if wind magnitude is greater than 6 knots and blanked if wind magnitude becomes less than 4 knots. Blank until TAS is greater than 101 knots. PLN mode displays speed/direction only.

[Option - Track-up display]

	Track orientation (G), current track (W), track reference (G)	MAP, MAP CTR	Displays TRK as the orientation, the current track, and MAG or TRU as the reference, and points to the heading on the compass rose.
	Heading orientation (G), current heading (W), heading reference (G), heading pointer (W)	VOR, VOR CTR, APP, APP CTR	Displays HDG as the display orientation, current heading, MAG or TRU as the heading reference, and points to the heading on the compass rose.

Radio Navigation

SYMBOL	NAME	MODE	REMARKS
	ILS /VOR Reference receiver frequency or identifier display (W)	VOR, VOR CTR, APP, APP CTR	Located upper right corner. Frequency displayed before the identifier is decoded. The decoded identifier replaces the frequency. Medium size characters for VOR, small size characters for DME only.
	Reference ILS or VOR course (W)	VOR, VOR CTR, APP, APP CTR	Located upper right corner. Indicates the VOR course or ILS localizer course.
	Reference VOR or ILS DME (W)	VOR, VOR CTR, APP, APP CTR	Located upper right corner. Indicates DME distance to the reference navaid.
	DME distance (G)	All except PLN	Located lower left or right corner. Indicates DME distance to navaid.
	Selected course pointer (W) and line (M)	VOR, APP	Displays selected course as set by the related MCP course selector.
	Selected course pointer (W) TO/FROM pointer (W)	APP CTR, VOR CTR	Displays selected course as set by the related MCP course selector. TO/FROM pointer is displayed when VOR navigation is being used.
	To/from indication (W)	VOR, VOR CTR	Displays VOR to/from indication.

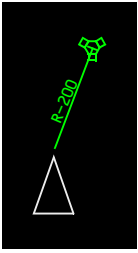
SYMBOL	NAME	MODE	REMARKS
	VOR (C, G), DME/TACAN (C, G), VORTAC (C, G)	MAP, MAP CTR, PLN	When the EFIS control panel STA map switch is selected on, appropriate navaids are displayed. All navaids contained in the FMC data base and within the MAP area are displayed when the selected range is 5, 10, 20 or 40 nm. Only high altitude navaids are displayed when the selected range is 80, 160, 320 or 640 nm. Nav aids not being used are displayed in cyan. Manually tuned VHF navaids are displayed in green, regardless of STA map switch selection.
	VOR/DME raw data radial and distance (G)	MAP, MAP CTR	When the POS map switch is selected on, the station radial extends to the airplane.
	System source annunciation (G)	VOR, VOR CTR, APP, APP CTR	Indicates the selected receiver as the display reference.
	ILS localizer or VOR course deviation indication (M) and scale (W)	VOR, VOR CTR, APP, APP CTR	Displays LOC or VOR course deviation. Deviation indicator points in direction of VOR or ILS selected course. For ILS deviation, indicator fills (M) when less than 2 1/2 dots from center.
	Glide slope pointer (M) and scale (W)	APP, APP CTR	Displays glide slope position and deviation.

SYMBOL	NAME	MODE	REMARKS
--------	------	------	---------

[Option - ADF]

	VOR frequency or identifier (G), ADF frequency or identifier (C)	All except PLN	Located lower left or right corner. Frequency is displayed before identifier is decoded. Decoded identifier replaces the frequency. For VORs, small size characters indicate only DME information is being received.
---	---	-------------------	--

[Option - Dual ADF]

	VOR (G) or ADF (C) selection	All except PLN	Located lower left or right corner. Represents positions of the EFIS control panel VOR/ADF switches.
	VOR 1 (G) or ADF 1 (C) pointer head and tail	All except PLN	Indicates bearing to (head) or from (tail) the tuned station, if selected on the respective EFIS control panel.
	VOR 2 (G) or ADF 2 (C) pointer head and tail	All except PLN	Indicates bearing to (head) or from (tail) the tuned station, if selected on the respective EFIS control panel.

Map

SYMBOL	NAME	MODE	REMARKS
	Airplane symbol (W)	VOR CTR, APP CTR	Current airplane position is at the center of the symbol.
	Airplane symbol (W)	PLN	Indicates actual position and track along the flight plan route. Inhibited north of 82N latitude and south of 82S latitude.


[Option - Polar Nav]




	Airplane symbol (W)	PLN	Indicates actual position and track along the flight plan route. Symbol changes to a circle north of 82N latitude and south of 82S latitude.
--	---------------------	-----	--

[Option - NPS]



	Airplane symbol (W), Lateral ANP/RNP values (G)	MAP, MAP CTR, VOR, APP	Current airplane position is at the apex of the triangle. Displays lateral path deviation distance in MAP and MAP CTR mode only. Whenever ANP exceeds RNP, the ANP/RNP labels and values are displayed in amber.
--	---	------------------------	--




[Option - BP04/BP06]

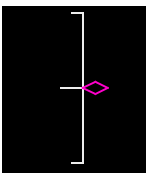	VNAV path pointer (M) and deviation scale (W)	MAP, MAP CTR	Displays vertical deviation from selected VNAV PATH during descent only. Scale indicates ± 400 feet deviation. Digital display is provided when the pointer deviates more than ± 30 feet from center.
--	---	--------------	---

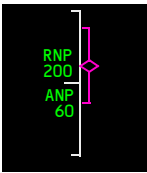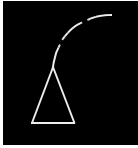
SYMBOL	NAME	MODE	REMARKS
[Option - NPS]			
	Path deviation band (M), Vertical ANP/RNP values (G)	MAP, MAP CTR	Path deviation band is symmetric about the pointer and represents vertical RNP. Whenever ANP exceeds RNP, the ANP/RNP labels and values are displayed in amber.
	Position trend vector (W) (dashed line)	MAP, MAP CTR	Predicts position at the end of 30, 60, and 90 second intervals. Each segment represents 30 seconds. Based on bank angle and ground speed. Selected range determines the number of segments displayed. For range: > 20 NM, 3 segments = 20 NM, 2 segments <= 10 NM, 1 segment.
	Active waypoint identifier (M)	MAP, MAP CTR, PLN	Indicates the active flight plan waypoint, the next waypoint on the route of flight.
	Active waypoint distance (W)	MAP, MAP CTR, PLN	Distance to the active waypoint.
	Active waypoint ETA (W)	MAP, MAP CTR, PLN	Indicates FMS-calculated ETA at the active waypoint.
	Waypoint: active (M), modified (W), inactive (C)	MAP, MAP CTR, PLN	Active – represents the waypoint the airplane is currently navigating to. Modified – represents the waypoints on the active route that are being modified. Inactive – represents the waypoints on the active route.

SYMBOL	NAME	MODE	REMARKS
	Off route waypoint (C)	MAP, MAP CTR, PLN	When the EFIS control panel WPT map switch is selected on, waypoints not on the selected route are displayed, for ranges of 5, 10, 20, or 40 NM.
	Flight plan route: active (M), modified (W), inactive (C), offset (M)	MAP, MAP CTR, PLN	The active route is displayed with a continuous line (M) between waypoints. Active route modifications are displayed with short dashes (W) between waypoints. Inactive routes are displayed with long dashes between waypoints. An offset route, selected through the FMC, is displayed with a dot-dash line (M) parallel to the active route.
	Route data: active (M), inactive (W)	MAP, MAP CTR, PLN	When the EFIS control panel DATA switch is selected on, entered or procedural altitude and ETAs for route waypoints are displayed.
	Holding pattern: active (M), modified (W), inactive (C)	MAP, MAP CTR, PLN	A holding pattern appears when in the flight plan. The holding pattern appears as a fixed size if the selected range is greater than 80 NM. A scaled representation of the holding pattern is displayed when the selected range is 80 NM or less and the airplane is within 3 minutes of the holding fix.

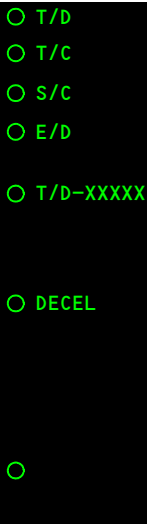SYMBOL	NAME	MODE	REMARKS
	Altitude range arc (G)	MAP, MAP CTR	Based on vertical speed and groundspeed, indicates the approximate map position where the MCP altitude will be reached.
	Conditional waypoint: active (M), inactive (W)	MAP, MAP CTR, PLN	Active - represents the conditional waypoint event the airplane is currently navigating to. Inactive - represents the conditional waypoints on the route. Data within parentheses for conditional waypoints indicates type of conditional waypoint (ALTITUDE, COURSE INTERCEPT, etc.).
	Altitude profile point and identifier (G)	MAP, MAP CTR, PLN	Indicates the approximate map position of the FMC-calculated T/C (top-of-climb), T/D (top- of-descent), S/C (step climb), and E/D (end of descent) points. Indicates intermediate T/D points for level flight path segments during descent. Level flight path segment altitude is displayed. Indicates the beginning of a deceleration segment resulting from deceleration to a holding pattern, a waypoint speed restriction or flaps up maneuvering speed. Indicates airport speed restriction deceleration point (no identifier).

SYMBOL	NAME	MODE	REMARKS
	Procedure turn: active (M), modified (W), inactive (C)	MAP, MAP CTR, PLN	A procedure turn appears when in the flight plan. The procedure turn appears as a fixed size if the selected range is greater than 80 NM. A scaled representation of the procedure turn is displayed when the selected range is 80 NM or less and the airplane is within 3 minutes of the procedure turn.
	Airport and runway (W)	MAP, MAP CTR, PLN	Displayed when selected as the origin or destination and selected range is 80, 160, 320, or 640 NM.
	Airport (C)	MAP, MAP CTR, PLN	Displayed if the EFIS control panel ARPT map switch is selected on. Origin and destination airports are always displayed, regardless of map switch selection.
	Airport and runway (W)	MAP, MAP CTR, PLN	Displayed when selected as the origin or destination and selected range is 5, 10, 20, or 40 NM. Dashed runway centerlines extend 14.2 NM.
	Selected reference point and bearing distance information (G)	MAP, MAP CTR, PLN	Displays the reference point selected on the CDU FIX page. Bearing and/or distance from the fix are displayed with dashes (G).
	GPS position (W)	MAP, MAP CTR	When the EFIS POS map switch is selected on, indicates GPS position relative to FMC position.
	ADIRU position (W)	MAP, MAP CTR	When the EFIS control panel POS map switch is selected on, the star indicates ADIRU position relative to FMC position.



DO NOT USE FOR FLIGHT Flight Instruments, Displays -
PFD/ND Navigation Displays
BBJ Flight Crew Operations Manual

SYMBOL	NAME	MODE	REMARKS
	Weather radar returns (R, A, G, M)	MAP, MAP CTR, VOR, APP	The most intense areas are displayed in red, lesser intensity in amber, and lowest intensity green. Turbulence is displayed in magenta.
	Selected map options (C)	MAP, MAP CTR, PLN	Displays EFIS control panel selected map options.

[Option - FMC Qty 2]

	MAP source annunciation (G)	MAP, MAP CTR, PLN	Displays source of FMC data used by CDS for data presentation.
---	-----------------------------	-------------------	--

[Option - Range Arcs]

	Range arcs (W)	MAP, VOR, APP	Displayed in APP and VOR modes when the WXR map, TERR map or TCAS TFC switches are selected.
	Weather radar annunciations: Mode (C), Tilt (C), Gain (C)	MAP, MAP CTR, VOR, APP	Annunciations vary with option selected.

Vertical Situation Display (VSD)

[Option VSD]

SYMBOL	NAME	REMARKS
A white triangle on a black background, representing the current airplane's position and altitude.	Airplane symbol (W)	Current airplane altitude is the bottom of the triangle. Current airplane lateral position relative to terrain is the point of the triangle.






[Option - BP04/BP06]



A vertical dashed line composed of small green dots on a black background, representing the enroute swath.	Enroute swath (C) (dashed line)	Indicates area of the map that is shown on the VSD. Display is inhibited both on takeoff and approach when the airplane is within 6 NM of the runway and less than 3000 feet above field elevation. During turns, the swath edge leading the turn opens in the direction of the turn.
--	---------------------------------	---

A magenta bug symbol (a small square with a diagonal line) followed by a dashed magenta line on a black background, representing the selected altitude.	Selected altitude bug and line (M)	Bug indicates the altitude set in the MCP altitude window. When the selected altitude is off scale, the bug is parked at the top or bottom, with only one half the bug visible. Dashed line extends from bug to background display boundary. Line does not park.
---	------------------------------------	---


[Option - MDA BUG]

A green pointer symbol (a small triangle) followed by a dashed green line on a black background, representing the barometric minimums.	BARO minimums pointer and line (G)	Pointer indicates the barometric minimums selected on the EFIS control panel. Dashed line extends from pointer to background display boundary. Pointer and line turn amber when airplane descends below selected minimum altitude. Reset with the RST switch on the EFIS control panel. After the pointer is set with the BARO position, moving the Minimums Reference selector to RADIO displays only the pointer.
--	------------------------------------	--

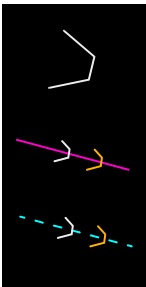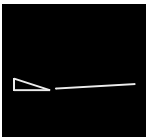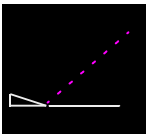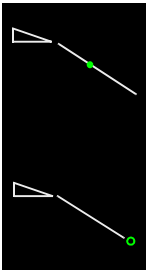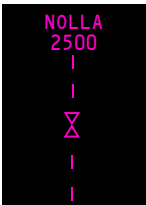SYMBOL	NAME	REMARKS
	Decision gates (W, A)	Indicates suggested points where airplane should be path and speed stable on approach. Gates are placed on the 3 Degree Reference Line or FMC Approach Glidepath Angle Line: - at 1000 feet above field elevation (W). - at 500 feet above field elevation (A). Decision gates that are below the missed approach waypoint altitude will not be displayed.
	Flight path vector (W)	Fixed length line indicates current flight path angle and rotates about the point of the triangle. Angle of the line is dependent on the vertical speed and ground speed of the airplane.
	MCP selected vertical speed vector (M)	Dashed line indicates the selected vertical speed as a target angle when the MCP V/S mode is selected. Extends to the edge of the background display and rotates about the point of the triangle.
	Range to target speed dot (G)	Indicates where the airplane will achieve the FMC or MCP target speed. If the airplane is within 5 knots of the target speed the dot will be blanked. If the airplane increases 10 knots or more faster than the target speed the dot will reappear. Displayed at the end of the Flight Path Vector as an unfilled dot if the target speed will not be achieved within the vector length.
	Waypoint altitude constraint: active (M), inactive (W)	At Altitude example.

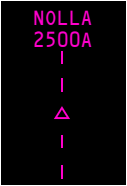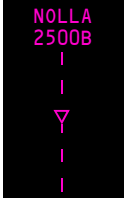SYMBOL	NAME	REMARKS
	Waypoint altitude constraint: active (M), inactive (W)	At or Above Altitude example.
	Waypoint altitude constraint: active (M), inactive (W)	At or Below Altitude example.
	Waypoint altitude constraint: active (M), inactive (W)	Block Altitude example.

Look-Ahead Terrain

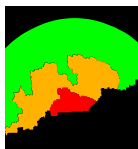SYMBOL	NAME	MODE	REMARKS
	Terrain display (R, A, G, M)	MAP, MAP CTR, VOR, APP	Displays terrain data from the GPWS terrain data base. Color and density vary based on terrain height vs. airplane altitude. Refer to Chapter 15, Warning Systems.

[Option - Obstacles]

	Terrain obstacle (R, A, G)	MAP, MAP CTR, VOR, APP	Obstacles are displayed from the GPWS data base and use the same display criteria as the terrain display.
	Obstacle annunciation (R, A)	All	Obstacle caution alert active (A), obstacle warning alert active (R).


[Option - Peaks]

	Terrain mode annunciation (C) Terrain elevation (R,A,G)	MAP, MAP CTR, VOR, APP	Terrain display enabled (manual or automatic display). Terrain elevation displayed in hundreds of feet showing highest and lowest displayed terrain. Colors correspond to terrain display. Terrain elevation not displayed when terrain data unavailable.
---	---	---------------------------------	---


	Terrain test mode annunciation (C)	All	GPWS operating in self-test mode.
	Terrain annunciation (R, A)	All	Look-ahead terrain caution alert active (A), look-ahead terrain warning alert active (R).
	Terrain status annunciations (A)	All	Look-ahead terrain alerting and display have failed.
	Terrain status annunciations (A)	All	Look-ahead terrain alerting and display unavailable due to position uncertainty.

SYMBOL	NAME	MODE	REMARKS
TERR INHIBIT	Terrain status annunciations (A)	All	GPWS terrain inhibit switch in TERR INHIBIT position.
TERR RANGE DISAGREE	Terrain range status annunciations (A)	MAP, MAP CTR, VOR, APP	Terrain output range disagrees with selected EFIS control panel range.
MAP/TERR RANGE DISAGREE	Terrain range status annunciations (A)	MAP, MAP CTR	Terrain output range and map display output range disagree with selected EFIS control panel range.



Predictive Windshear

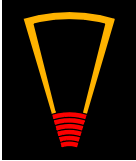SYMBOL	NAME	MODE	REMARKS
	Predictive windshear symbol (R, B, A)	MAP, MAP CTR, VOR, APP	Displays windshear location and approximate geometric size (width and depth). Amber radials extend from predictive windshear symbol to help identify location of windshear event.
	Windshear annunciation (R, A)	All	Predictive windshear caution active (A). Predictive windshear warning active (R).
	Predictive windshear status annunciation (A)	All	Predictive windshear alerting and display have failed.


TCAS

SYMBOL	NAME	MODE	REMARKS
	TCAS resolution advisory (RA), relative altitude (R)	MAP, MAP CTR, VOR, APP	These symbols are displayed only when the EFIS control panel traffic (TFC) switch is selected on. Refer to Chapter 15, Warning Systems. The arrow indicates traffic climbing or descending at a rate ≥ 500 fpm. At rates < 500 fpm, the arrow is not displayed. The number and associated signs indicate altitude of traffic in hundreds of feet relative to the airplane. The number is below the traffic symbol when the traffic is below, and above the traffic symbol when the traffic is above the airplane. Absence of the number implies altitude unknown.
	TCAS traffic advisory (TA), relative altitude (A)		
	TCAS proximate traffic, relative altitude (W)		
	TCAS other traffic, relative altitude (W)		
	TCAS no bearing message (RA–R, TA–A)	MAP, MAP CTR, VOR, APP	Message provides traffic type, range in NM, altitude and vertical direction. TFC must be selected on.
	TCAS traffic alert message (RA–R, TA–A)	All	Displayed whenever a TCAS RA or TA is active. EFIS control panel TFC switch does not have to be selected on.
	TCAS off scale message (RA–R, TA–A)	MAP, MAP CTR, VOR, APP	Displayed whenever RA or TA traffic is outside the traffic area covered by the ND range. Displayed only if the EFIS control panel TFC switch is selected on.
	TCAS mode (C)	MAP, MAP CTR, VOR, APP	Indicates the ND TCAS display is active; the EFIS control panel TFC switch is selected on.

DO NOT USE FOR FLIGHT Flight Instruments, Displays -
PFD/ND Navigation Displays
BBJ Flight Crew Operations Manual

SYMBOL	NAME	MODE	REMARKS
	TCAS mode (C)	All	Indicates TCAS computer is not computing RAs. Displayed whether the EFIS control panel TFC switch is selected on or off.
	TCAS mode (C)	All	Indicates TCAS is operating in the test mode. Displayed whether EFIS control panel TFC switch is selected on or off.
	TCAS mode (A)	All	Displayed when the TCAS/ATC mode switch is not in TA ONLY or TA/RA, if traffic is selected. Not displayed if TCAS is failed.
	TCAS mode (A)	All	Indicates TCAS failure, if traffic is selected.

[Option - 3NM TCAS range ring]

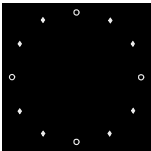	Range Ring (W)	MAP, MAP CTR, VOR, APP	Displayed when TFC selected on EFIS Control Panel. Shows 3 NM range ring oriented to aircraft heading. Displayed at ranges of 80 NM or less.
---	----------------	---------------------------------	--

Intentionally
Blank



Flight Instruments, Displays**Chapter 10****Head-Up Display System, Symbolology****Section 42****Introduction**




HUD symbology consists of green symbols projected on the combiner from the OHU. The PRI mode display symbols are similar to those on the CDS, and can be used for all phases of flight. The approach mode displays (AIII, IMC, VMC) are optimized to enhance aircraft control and situational awareness during final approach, flare, and touchdown.



In addition to flight symbology, TCAS resolution advisories and HUD system failure flags and data source annunciations are displayed when active.




Head-Up Guidance Display Symbolology**[Option - Model 4000]**




The following symbols can be displayed on the combiner, depending on HUD and EFIS control panel switch selections.


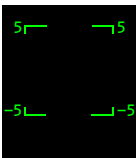
SYMBOL	NAME	MODE	REMARKS
	Airplane reference	All	Top center point of the symbol represents airplane projected centerline. The symbol is positioned at a fixed position 7 ° above the display's vertical center. Symbol is fixed at display center when the unusual attitude display is active.
	Horizon Line	All	Indicates the horizon relative to the airplane reference symbol. Position based on current airplane pitch and roll attitude.
	Pitch Scale	PRI in flight, AIII approach, IMC, VMC	Displays airplane pitch in five degree increments between -20 ° and +25 °.

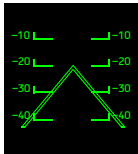


SYMBOL	NAME	MODE	REMARKS
	Compressed pitch scale	PRI in flight, AIII approach, IMC, VMC	Displays airplane pitch in ten degree increments between $\pm 30^\circ$ and $\pm 90^\circ$. A chevron appears on the pitch scale at -20° and $+30^\circ$.
	Bank Scale and Pointer	All	Displays the corresponding roll attitude in ten degree increments between 0° and $\pm 30^\circ$. Tic marks at $\pm 45^\circ$ and $\pm 60^\circ$ are added when the airplane exceeds $\pm 35^\circ$ and $\pm 50^\circ$ respectively.
	Horizon heading scale	All	Magnetic heading is displayed in five degree increments (and labeled every 10°) on the horizon line. A downward pointing triangle indicates current airplane magnetic heading.
	HSI heading scale	PRI in flight	Displays airplane magnetic heading in a 210° compass rose format.
	Heading pointer	PRI in flight	Indicates current heading.
	Drift angle pointer	PRI in flight	Indicates current drift angle or track.




SYMBOL	NAME	MODE	REMARKS
	Selected heading bug	All	Displays selected heading on the horizon line and on the HSI (when in view). Not displayed if the selected heading is outside of the currently displayed heading scale.
	Digital selected heading	All	Displayed full time in PRI mode and for five seconds after selection in the IMC, VMC or AIII modes.
	Digital heading	All	Displays current magnetic heading directly below the roll scale pointer.
	Ground roll reference	PRI ground	Provides a reference for ground roll guidance during low visibility takeoff operations. Displayed on the horizon line until 3° of attitude is achieved.
	Flight path symbol	PRI in flight, AIII approach, IMC, VMC	Displays the actual flight path vector of the aircraft. Has display priority over all other symbols except the guidance cue and the FLARE command.

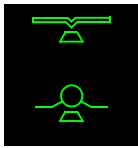SYMBOL	NAME	MODE	REMARKS
	Flight path acceleration	All	Positioned left of the flight path vector; indicates sum of all forces affecting the airplane including thrust, drag, and wind. Positioned above flight path vector; airplane is accelerating. Positioned below flight path vector; airplane is decelerating. Removed from display when a decreasing performance low-level windshear is detected below 400 feet AGL.
	Pitch limit indication (also called angle of attack limit)	PRI in flight, AIII approach, IMC, VMC	Displayed whenever the airplane's angle of attack is within 5 ° of stick shaker, any time stick shaker is active, or whenever WINDSHEAR guidance cue is displayed.
	Slip/skid indicator	All	The bottom portion of the bank scale pointer moves laterally with respect to the top triangle portion of the pointer.
	Additional slip/skid indicators	PRI in flight, AIII approach, IMC, VMC	Positioned below the airplane reference and flight path symbols. Displayed during takeoff or low altitude go-around.




SYMBOL	NAME	MODE	REMARKS
	Speed error tape	PRI in flight, AIII approach, IMC, VMC	Displays the difference between indicated airspeed and the reference speed selected on the mode control panel. Tape length equal to the diameter of the flight path circle represents approximately 5 knots of error. Maximum tape length is limited to 15 knots of error.
	Bank warning	PRI in flight, AIII approach, IMC, VMC	Displayed if radio altitude is less than 100 feet and airplane roll angle exceeds 5°. Symbol remains until roll angle is less than 3° or radio altitude greater than 100 feet.
	Tail strike pitch limit	PRI ground	Tail strike occurs if this symbol meets the aircraft reference symbol. Displayed if the airplane pitch angle approaches the tail strike angle or the pitch rate is too excessive during takeoff rotation, below 10 feet AGL.
	Unusual attitude	PRI in flight, AIII approach, IMC, VMC	Automatically displayed when pitch exceeds -20°/+35° or roll exceeds 55°.


SYMBOL	NAME	MODE	REMARKS
	Flight director guidance cue	PRI in flight, IMC	Functions similar to the flight director, but is designed for control of flight path. Automatically displayed when within 2° of pitch command or radio altimeter indicates 50 feet. The objective is to capture the guidance cue inside the flight path vector circle.
	HUD guidance cue	PRI ground, AIII approach	Similar to flight director guidance cue, but driven by HUD computer. During low visibility takeoff, the cue provides localizer tracking. During AIII approach, the cue provides approach and flare commands. The objective is to capture the guidance cue inside the flight path vector or ground roll reference circle.
	TO/GA pitch target line	PRI in flight	Displayed when greater than 65 knots, AFDS TO/GA mode active and a valid pitch command input of greater than 10 ° is received. Symbol remains until TO/GA mode is exited. The objective is to place the airplane reference symbol on the target line.


SYMBOL	NAME	MODE	REMARKS
	AIII flare command	AIII approach	Initially displayed 2-3 ° directly below the guidance cue at 105 feet above runway elevation. The symbol flashes for one second and rises toward the guidance cue at a rate proportional to the expected flare pitch rate. At an altitude between 45 and 55 feet, the flare command and guidance cue meet and continue rising to command the flare maneuver until touchdown.
	Flare cues	PRI in flight, IMC, VMC	Displayed on each side of the flight path symbol, indicating the flare maneuver must be accomplished. The cues flash continuously as the airplane descends through 55 feet radio altitude, until 10 feet radio altitude is reached.
	Rollout excessive deviation triangle	AIII rollout	Points in the direction of runway centerline during excessive deviation from the localizer on rollout.


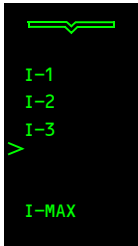


SYMBOL	NAME	MODE	REMARKS
	Ground deceleration scale	PRI ground, AIII rollout, IMC, VMC	Scale marks are labeled with autobrake settings. Displayed during all landings. Displayed during takeoff if deceleration is sensed when groundspeed above 50 knots. Removed when groundspeed below 25 knots, airplane is accelerating or after lift off.
	Wind speed and direction	PRI in flight, AIII approach, IMC, VMC	Indicates wind speed and direction, with respect to airplane magnetic heading. Displayed if wind magnitude is greater than 6 knots and blanked if wind magnitude becomes less than 4 knots.
	Windshear warning	PRI in flight, AIII approach, IMC, VMC	Displayed above the airplane reference symbol during a GPWS or PWS windshear warning.
	Ground proximity warning	PRI in flight, AIII approach, IMC, VMC	Displayed whenever the GPWS is activated.
	Windshear guidance cue	PRI in flight	During a windshear warning, and in TO/GA mode, the PRI mode is automatically selected and the guidance cue becomes a solid circle to provide guidance to exit windshear conditions.






DO NOT USE FOR FLIGHT Flight Instruments, Displays -
Head-Up Display System,
BBJ Flight Crew Operations Manual Symbology



SYMBOL	NAME	MODE	REMARKS
	Radio altitude	PRI in flight, AIII approach, IMC, VMC	Displayed below the flight path symbol, or relative to the airplane reference symbol if the flight path symbol is not displayed. The value is removed from the display at 1500 feet when ascending and again displayed at 1400 feet when descending. This value is displayed in ten foot increments between 50 and 1500 feet, five foot increments between 10 and 50 feet and one foot increments below 10 feet.
	Decision height	PRI in flight, AIII approach, IMC	Displayed left of radio altitude when selected decision height is reached. When decision height is reached, the message flashes for 3 seconds and then remains steady.
	Marker beacon	PRI in flight, AIII approach, IMC	Displayed below the airplane reference symbol for marker beacon passage.
	Digital airspeed	AIII approach, AIII rollout, IMC, VMC	Displays airspeed next to the flight path symbol if it is displayed, and next to the airplane reference symbol if flight path is not displayed.
	Digital selected airspeed	All	Displays speed selected on the MCP.


SYMBOL	NAME	MODE	REMARKS
	Digital ground speed	All	Displays digital ground speed.
	Digital mach	PRI in flight	Displays mach speed below airspeed scale when mach speed is above .400. Removed when below .380.
	Selected mach	All	Displays selected mach speed above airspeed scale (PFD/ND format only).
	Digital barometric altitude	AIII approach, AIII rollout, IMC, VMC	Displays barometric altitude relative to the flight path symbol if it is displayed, and relative to the airplane reference symbol if flight path is not displayed.
	Digital vertical speed	PRI in flight, AIII approach, IMC, VMC	In PRI mode, displayed in the lower right corner of the display. In all other modes, displayed to the right of the flight path symbol. Value displayed in 50 feet/minute increments.
	DME distance	PRI in flight, AIII approach, IMC, VMC	Indicates DME distance to the reference navaid.
	Digital runway elevation	AIII approach	Displays runway elevation entered on the HUD control panel for 5 seconds: • after AIII mode selected, or • runway elevation value changed during an AIII mode approach.

SYMBOL	NAME	MODE	REMARKS
	Digital runway length in feet. Digital runway length in meters.	AIII approach, AIII rollout	Displays runway length entered on the HUD control panel for 5 seconds: - after AIII mode selected, or - runway length value changed during an AIII mode approach. When AIII mode active and above 500 feet AGL, display flashes when runway length entered is outside of rollout guidance capability.
	Digital runway remaining in feet Digital runway remaining in meters	PRI ground, AIII rollout	Displays the length of runway remaining between airplane and end of runway based on runway length entered on the HUD control panel.
	Distance to go	PRI in flight, IMC	Distance to next waypoint.
	Selected course (digital)	All	Displayed full time in PRI mode and for five seconds after selection in the IMC, VMC or AIII modes.
	Selected course pointer	All	Displays MCP selected course below the horizon line and on the HSI (PRI mode only). The horizon line pointer is surrounded by a 3° gap in the horizon line.

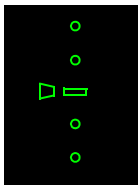SYMBOL	NAME	MODE	REMARKS
	System source annunciation	PRI in flight, PRI ground, AIII approach, AIII rollout IMC	Indicates the selected receiver as the display source.
			Indicates source cannot be determined.
	FMC source annunciation	All	Indicates the selected FMC as the system source.
	Glideslope reference line	AIII approach, IMC, VMC	Displays the glideslope value entered on the HUD control panel. Positioning the flight path symbol over the glideslope reference line results in a descent angle equal to the value entered.
	ILS localizer or VOR deviation indication and scale	PRI in flight	Displays LOC or VOR course deviation on the HSI. With excessive localizer deviation during an ILS approach, the symbol will flash until the excessive deviation is no longer present.
	Glideslope pointer and deviation scale	PRI in flight	Displays glideslope position and deviation during ILS approach. With excessive glideslope deviation, the pointer will flash until the excessive deviation is no longer present.


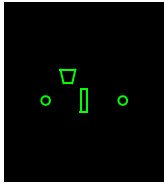
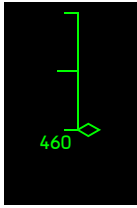



SYMBOL	NAME	MODE	REMARKS
	Ground localizer pointer and deviation scale	PR1 ground, AIII rollout	Displays airplane lateral deviation relative to the runway centerline.
	Vertical deviation pointer and scale	PR1 in flight, IMC	Full scale represents 400 feet of vertical deviation. When the deviation is off scale, the pointer is parked at the top or bottom of the tape, and the digital value is displayed at the appropriate end of the scale.
	Lateral deviation line	AIII approach, IMC	Displayed as vertical lines referenced to the selected course. In IMC mode, the line will flash during excessive localizer deviation.
	Glideslope deviation line	AIII approach, IMC	Displayed as horizontal lines referenced to the glideslope reference line. In IMC mode, the line will flash during excessive glideslope deviation. The line is removed below 70 feet radio altitude.
	Ground localizer line	PR1 ground, AIII rollout, IMC	Displays localizer deviation as a vertical line below the airplane reference symbol and is referenced to the selected course.

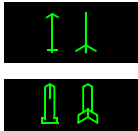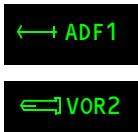SYMBOL	NAME	MODE	REMARKS
	VOR1/ADF 1 pointer head and tail VOR2/ADF 2 pointer head and tail	PRI in flight	Indicates bearing to (head) or from (tail) the tuned station.
	Bearing source annunciations	PRI in flight	Indicates pointer source.
	To/from pointer	PRI in flight, PRI ground	A triangle pointing in the same direction as the selected course indicates a “to” condition. Pointing away from the selected course indicates a “from” condition.
	TO/FROM annunciation	AIII approach, IMC	Displayed below the VOR system source annunciation. Indicates movement to or from a VOR station.
	Runway elevation	AIII approach	Indicates entered runway elevation for 5 seconds after AIII mode is selected or if elevation value is changed during AIII mode operation.
	Runway edge lines	AIII approach	Displayed between 300 and 60 feet radio altitude. The lines are scaled to a width of 200 feet and a length of 8000 feet. Tic marks are displayed at the touchdown aimpoint representing 1050 feet from the runway threshold.



SYMBOL	NAME	MODE	REMARKS
	IDLE message	AIII approach	Displayed below the radio altitude when flare guidance commands a thrust reduction to idle for touchdown. Message is displayed between 25 to 5 feet radio altitude, depending on airspeed.
	ALIGN HUD message	IMC, VMC	Indicates the combiner is not properly aligned with the OHU.
	HUD system mode	AIII approach, AIII rollout, IMC, VMC	Indicates current HUD system mode. The PRI mode is not indicated as it is uniquely identifiable by the airspeed and altitude tapes.
	AIII approach status	PRI in flight	A flashing “AIII” indicates availability of AIII approach mode.
		AIII approach	Indicates AIII mode selection once all AIII approach requirements have been satisfied. If AIII capability is lost, the “NO AIII” status message is displayed.




SYMBOL	NAME	MODE	REMARKS
	Approach warning	AIII approach	Displayed below 500 feet if approach monitoring tolerances are exceeded or AIII capability is lost.
	Tail strike warning	PRI in flight, AIII approach, IMC, VMC	Displayed when a tail strike is likely during landing. Tail strike monitoring is active below 100 feet AGL.
	Angle of attack scale and indicator	PRI in flight, AIII approach, IMC, VMC	Displays current angle of attack, stick shaker trip point and approach reference band. Tic marks every 5°. Approach reference band is added after the first flap retraction.


TCAS Resolution Advisory


SYMBOL	NAME	MODE	REMARKS
	Down preventive	PRI in flight, AIII approach, IMC, VMC	Area(s) inside the lines indicate the pitch region(s) to avoid in order to resolve the traffic conflict. The flight path symbol should be positioned outside the pitch command area(s) to ensure traffic avoidance. A double-lined box indicates a corrective action is required, and represents TCAS maneuver guidance to maintain or increase separation from the traffic.
	Up preventive		
	Up and down preventive		
	Descend corrective		
	Climb corrective		
	Combined corrective		

Failure Flags and Data Source Annunciations

SYMBOL	NAME	MODE	REMARKS
	IRS attitude flag	All	IRS pitch or roll attitude has failed.
	Pitch miscompare flag	All	Indicates a pitch miscompare of greater than 5 ° for more than 1.5 seconds.
	Roll miscompare flag	All	Indicates a roll miscompare of greater than 5 ° for more than 1.5 seconds.
	Heading flag	All	Heading data has failed.
	No heading	All	IRU heading has no computed data.
	Airspeed flag	All	Airspeed information has failed. In PRI mode, if airspeed has no computed data, airspeed data is removed and no failure flag is displayed. The boxed characters are positioned vertically in the PRI mode or horizontally in the AIII, IMC or VMC modes.

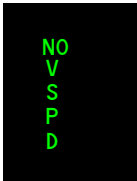SYMBOL	NAME	MODE	REMARKS
	Altitude flag	All	Altitude information has failed. In PRI mode, if altitude has no computed data, altitude data is removed and no failure flag is displayed. The boxed characters are positioned vertically in the PRI mode or horizontally in the AIII, IMC or VMC modes.
	Decision speed flag	PRI ground	V1 decision speed or VR rotation speed has not been entered or is invalid.
	Speed limit flag	PRI in flight, PRI ground	Maximum operating speed data has failed.
	Mach flag	PRI in flight, PRI ground	MACH airspeed has failed.
	Vertical speed flag	All	Vertical speed has failed. In AIII, IMC or VMC modes, may also show for no computed data.
	Vertical speed	PRI in flight	Vertical speed has no computed data.
	Selected altitude flag	PRI in flight, PRI ground	Selected altitude has failed.

SYMBOL	NAME	MODE	REMARKS
	Selected airspeed flag	All	Selected speed has failed.
	Radio altitude flag	All	Radio altitude has failed.
	Localizer miscompare flag	PRI in flight PRI ground; AIII rollout	Localizer miscompare has occurred during low visibility takeoff or rollout.
	Vertical deviation flag	PRI in flight, IMC	FMC vertical track data is invalid. Vertical deviation pointer is removed if there is no computed data.
	DME flag	All	DME has failed.
	DME	All	DME has no computed data.
	Flight director flag	PRI in flight, PRI ground, IMC	Flight director has failed.
	TCAS fault	PRI in flight, AIII approach, IMC, VMC	TCAS has a fault.
	Right (#2) IRS source	All	All IRS information used or displayed by the HUD is taken from the right (#2) IRS.

SYMBOL	NAME	MODE	REMARKS
	Glideslope flag	PRI in flight, AIII approach, IMC	ILS has failed.
	Ground speed	All	Ground speed has no computed data.
	Lateral deviation fault	PRI in flight, PRI ground	ILS has failed.
	Distance to next waypoint	PRI in flight, AIII approach, IMC, VMC	Distance to next waypoint has no computed data.
	Decision height flag	PRI in flight, AIII approach, IMC	Decision height data has failed. Displayed below 1500 feet radio altitude.
	VOR failure flag	PRI in flight, AIII approach, IMC	VOR has failed.
	Angle of attack fault	PRI in flight, AIII approach, IMC, VMC	Loss of valid angle of attack data.

Intentionally
Blank

Flight Instruments, Displays

Chapter 10

Standby Attitude Indicator, Symbolology

Section 43

Introduction




[Option - BFG 501-1741-2103]




The standby attitude indicator displays attitude and limited navigation information. Display symbology is similar to the CDS.


In addition to flight symbology, indicator failure flags and data source annunciations are displayed when active.

Standby Attitude Indicator Display Symbolology

The following symbols can be displayed depending on indicator switch selections.

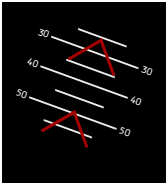SYMBOL	NAME	REMARKS
	Airplane symbol (B)	Center square represents airplane centerline.
	Horizon line and pitch scale (W)	Pitch scale is in 2.5 degree increments between 0 and 10 degrees and 5 degree increments when greater than 10 degrees.
	Bank indicator and scale (W)	Scale marks are at 0, 10, 20, 30, 45 and 60 degrees.
	Excessive attitude chevrons (R)	Displayed when horizon line approaches view limits. Chevrons point toward the horizon line. Note: Horizon line is always visible on the display as a reference for the pilot.
	Course deviation indicator (M)	Indicates selected course deviation.


SYMBOL	NAME	REMARKS
	Localizer and glideslope deviation pointers (M)	Displays localizer and glideslope deviation during ILS approach.
	Full scale deviation reference (Y)	Provides a reference for course deviation indicator full scale deviation. Located on the airplane symbol.
	FMS bearing (M)	Displays FMS waypoint bearing relative to true north.
	Alternate navigation source (M)	Displays selected alternate navigation source. Must be selected using menu select switch.
	Desired track (M)	Desired track course setting.
	Distance to waypoint (M)	Displays FMS distance to selected waypoint. Distances greater than 999 nautical miles shall be displayed as ---.
	ILS annunciation (M)	Indicates normal ILS mode.
	ILS annunciation (M)	Indicates back course ILS mode.
	FMS message annunciation (M)	An FMS message has been generated.
	Waypoint alert (M)	Flashes as airplane approaches the active FMS waypoint, stays on steady when nearing the waypoint and extinguishes when the waypoint is sequenced. Located in the lower left corner of the display.

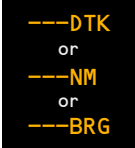SYMBOL	NAME	REMARKS
	Alignment message and counter (W)	Displayed after applying power and no system errors are detected. Normal alignment sequence is completed three minutes after applying power.
	Alignment failure message (W)	Displayed when alignment sequence has failed.
	Extended maneuver (W)	A long duration maneuver for greater than 6 minutes has been sensed. Located in the lower right corner of the display.
	Attitude failure (R)	Internal attitude sensors have unsuccessfully aligned or failed.
	Invalid information (A)	Loss of information from source unit.

Intentionally
Blank

[Option]

System Components

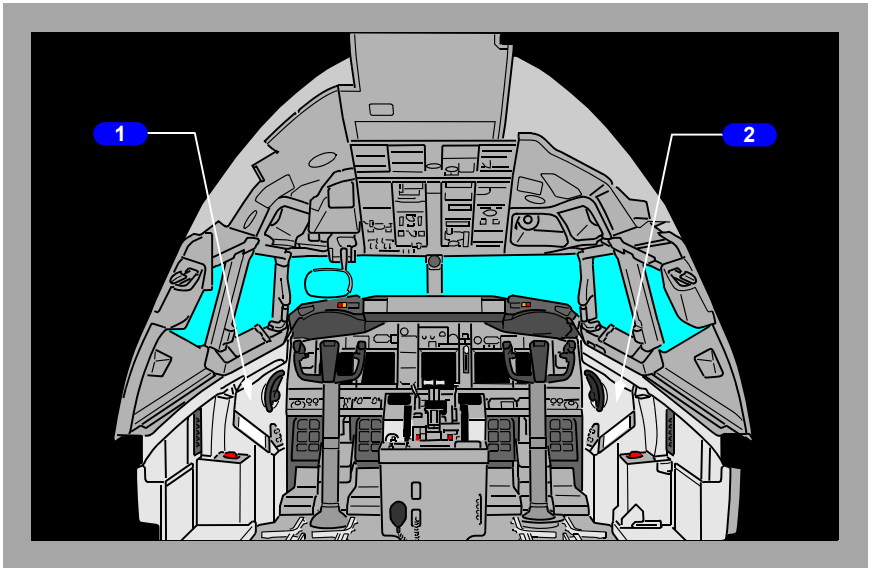

1 Captain Display Unit

Used for input and display of captain's pertinent flight information.

2 First Officer Display Unit

Used for input and display of first officer's pertinent flight information.

System Description


The Electronic Flight Bag (EFB) is a suite of applications designed to assist the flight crew with routine tasks and reduce the reliance on paper documents. The EFB allows flight crews to view pertinent flight data available through interactive display units located on the side panels.

Under typical flight conditions, the pilots manipulate Line Select Keys or the touch screen on a display unit to display data.

The suite of applications available to the flight crew may be customized by airlines. User modifiable portions of each application may be further customized. These customizing options include assigning applications to input keys, revising application names, defining the order in which applications appear, and choosing different colors, fonts, icons and cursors. Descriptions and illustrations provided in this section are examples of a typical Boeing Class 3 Electronic Flight Bag with the standard suite of applications installed, plus Electronic Log Book (ELB), and may not reflect the exact installed configuration.

Note: Line select keys and compass roses are company selectable. Key functions and map orientations may not always match those shown in this manual.

Display Unit

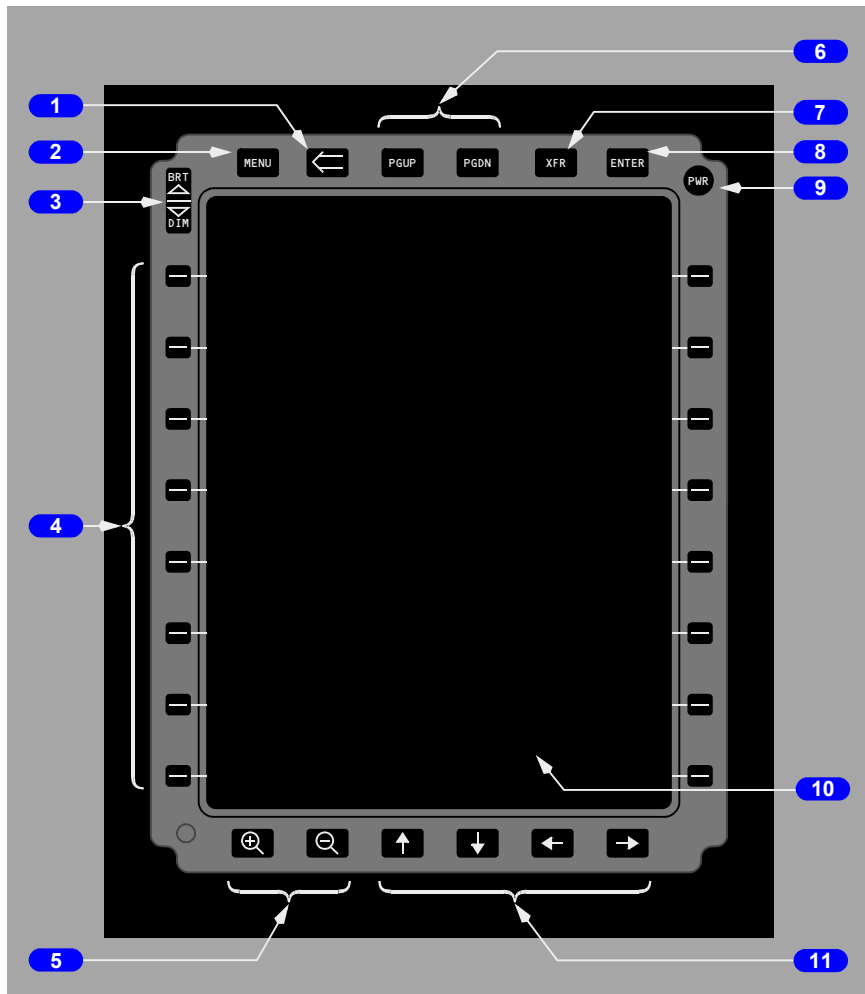

1 Back Key

Returns to the previous level.

2 Main Menu (MENU) key

Displays MAIN MENU.

- Cancels transfer mode [XFR].

3 Bright (BRT) Dim (DIM) Control

Rocker switch, upper portion brighter, lower portion dimmer.

4 Line Select Keys

Selects item next to key.

5 Zoom Keys

Left key is zoom in, right is zoom out. Repeated selection increases or decreases the zoom level.

6 Page Up (PGUP)/Page Down (PGDN) Keys

Moves up or down within an application where the display exceeds one display screen in length.

7 Transfer (XFR) Key

- View other pilot's EFB display on this display
- XFR displays in green text on upper right
- Selections made off-side are seen on the on-side display in real time
- XFR key (second push) exits transfer and returns display to last view prior to selecting XFR
- MENU key exits transfer and displays the MAIN MENU
- While XFR is selected, all other keys/switches are non-functional except PWR and MENU.

8 Enter (ENTER) Key

Activates a high-lighted item when applicable.

9 Power (PWR) Switch

Turns the display backlight on or off.


10 Touch sensitive screen

Enables direct selection on the display screen, and in some applications panning and scrolling.

11 Arrow Keys

Moves the viewing window over the display in the direction of the selected arrow.

Display Description

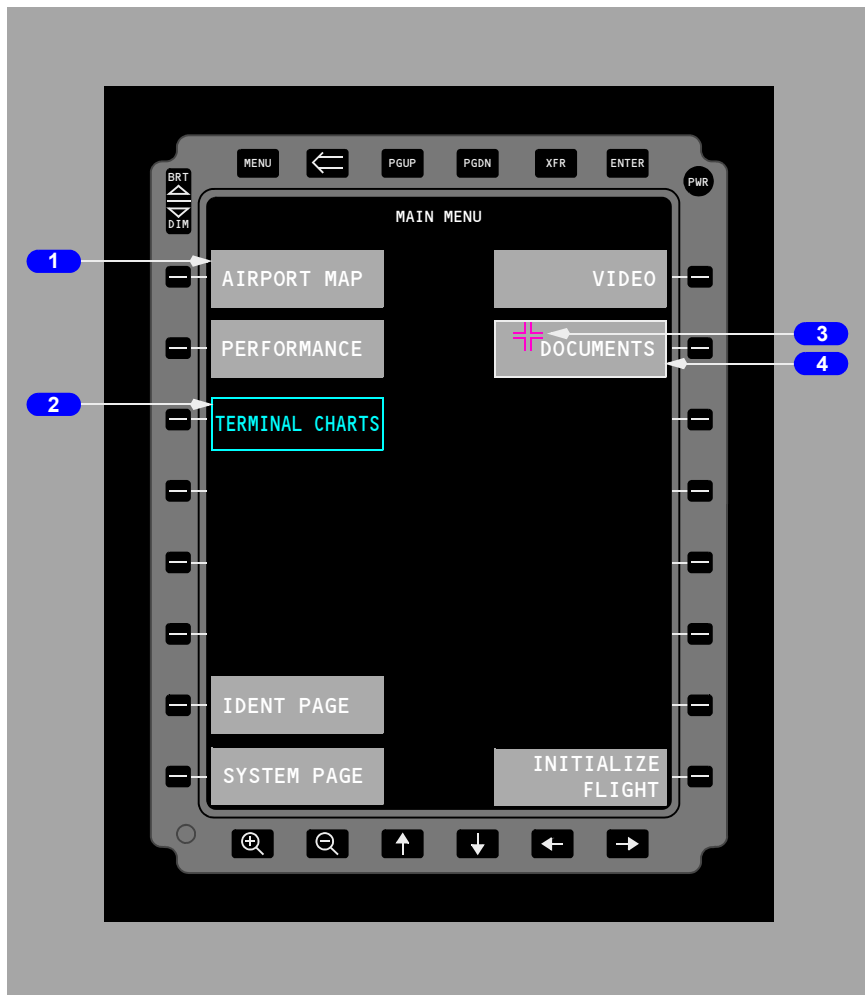

1 Selectable Applications (Soft Keys)

Menu items for selectable applications display in white text with gray background. Items may be selected using the Line Select Keys (Hard Keys) or touch screen (Soft Keys).

2 Applications not selectable

Menu items for applications that are installed but are not selectable display in cyan text in a cyan box. An application may be initializing and may become selectable later.

3 Cursor

A magenta cursor appears on the display when the SIDE switch is selected on a cursor control device.

4 High-light Box

A white high-light box displays around a selectable application when:


- The cursor is moved over the menu item
- The selectable menu item is touched
- The associated line select key is selected.

A selectable application is selected when:

- It is high-lighted with the cursor and the cursor select switch is pushed
- A menu item is touched and released
- The associated line select key is selected.

The menu item for a selected application displays a green background momentarily and then the selection displays.

Main Menu

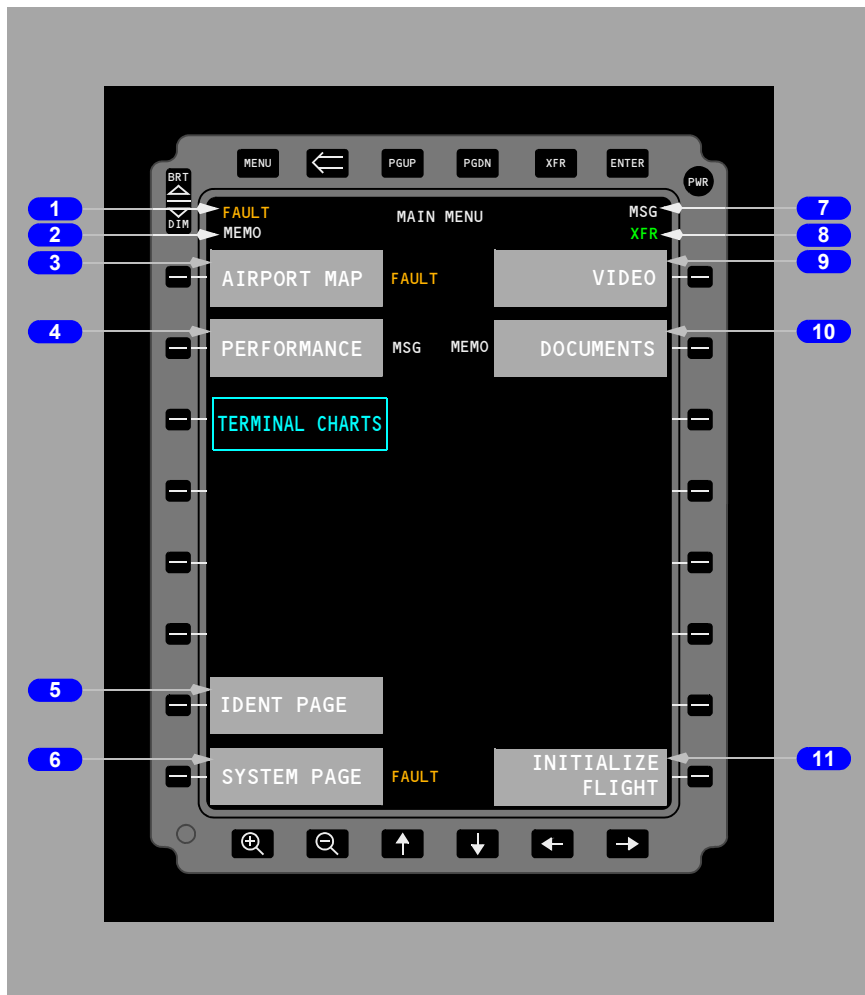

1 FAULT

Displayed (amber) -

- A fault has occurred within an application
- Displays in the header regardless of the application displayed
- Displays next to the affected application on the MAIN MENU
- Removed from header upon selection of the SYSTEM page and the fault is acknowledged.

Only one message at a time may display next to an application. FAULT takes priority over MEMO and MSG. MEMO or MSG display as applicable after the fault is cleared.

2 MEMO

Displayed (white) -

- One or more applications need attention
- Displays in the header regardless of the application displayed
- Displays next to the affected application on the MAIN MENU.

3 AIRPORT MAP Application

Selects the AIRPORT MAP application.

- After flight initialization, displays the departure airport in TRK-UP (track up) mode when on the ground at the departure airport
- Displays the destination airport NORTH UP when not on the ground.

4 PERFORMANCE Application

Selects the PERFORMANCE application.

- After flight initialization, displays the takeoff performance page
- Computes takeoff and landing performance based on user inputs
- Subsequent selections of the application display the selection that was in view when the application was last exited.

5 IDENT PAGE

Displays the IDENT page.

6 SYSTEM PAGE

Displays the SYSTEM page.

7 MSG

Displayed (white) -

- One or more applications has an uplink available
- Displays in the header regardless of the application displayed
- Displays next to the affected application on the main menu. Takes priority over MEMO.

8 XFR

Displayed (green) -

- The display is in transfer mode
- No line select keys/switches except MENU, PWR, and XFR are enabled.

9 VIDEO Application

Displays views from surveillance cameras.

10 DOCUMENTS Application

Selects the DOCUMENTS application

- After flight initialization, displays the documents library
- Subsequent selections of the application display the selection that was in view when the application was last exited.

11 INITIALIZE FLIGHT/CLOSE FLIGHT

Initializes all the installed applications for flight

- Performs cyclic redundancy checks of the hardware and software and shows EFB readiness for flight. If a fault was noted on the MAIN MENU, the reason will be displayed on the SYSTEM PAGE
- Clears search results of all previous searches in all applications
- All applications and functions restored to default settings
- Cross loads from FMC applicable data if it has been entered in the FMC
- Menu changes to CLOSE FLIGHT
- CLOSE FLIGHT is not selectable (cyan) during flight.

At the completion of the flight, the crew should close the EFB and prepare it for use by the next crew.

Select the CLOSE FLIGHT key from the MAIN MENU. This action cleans up the application data, effectively deleting all flight specific information from EFB memory. This includes all airport specific information, CHART CLIP data, and performance entries.

Close flight removes the following flight specific information from the EFB:

- ROUTE SETUP page
- CHART CLIP
- Performance pages
- History
- Bookmarks


Note: If you do not see CLOSE FLIGHT on the MAIN MENU page, someone has already closed out the flight in the EFB.

Airport Maps (Typical)

The maps are based on precise survey of airport geometry by satellite and other means. There may be differences between the electronic airport map and the airport diagrams that are part of the terminal charts, since these charts are derived from different survey methods.

Airport Track Up (moving) Map

The airplane symbol remains stationary and the map moves to provide the location and orientation of the airplane relative to the map.

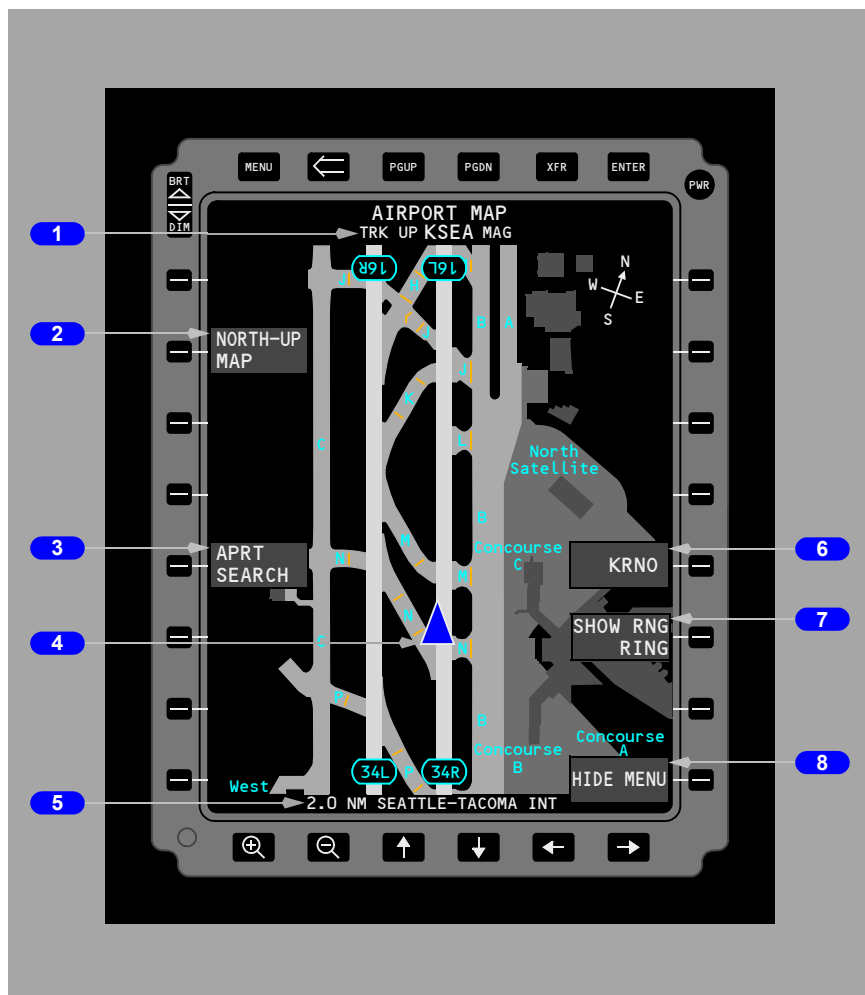

1 Map Reference

Displays the map reference.

- TRK-UP (track up) and MAG (magnetic).

2 NORTH-UP MAP

Selects north up (static) map display.

3 Airport (APRT) SEARCH

Allows searching the database for other airport maps.

4 Airplane symbol

Displays when airplane is on the ground at the displayed airport and groundspeed is less than 40 knots.

5 Display range

Indicates the map range from top to bottom of the display.

6 Airport Identifier

When departure airport is displayed, identifier is destination airport if entered in FMC.

- Selection displays the destination airport in TRK-UP (moving map) mode when on the ground at the destination airport
- Displays the destination airport in NORTH UP (static) mode when in the air.

When destination airport is displayed, identifier is departure airport.

7 SHOW/HIDE Range (RNG) RING


Displays or removes a 1000 foot radius range ring around the airplane symbol.

8 SHOW/HIDE MENU

Displays or hides all other menu selections.

Airport North Up (static) Map

The airplane symbol moves on a stationary map showing the airplanes general location and orientation on the ground at the selected airport. Using the touch screen to “touch and drag”, or using the arrow keys, the map may be repositioned on the display.

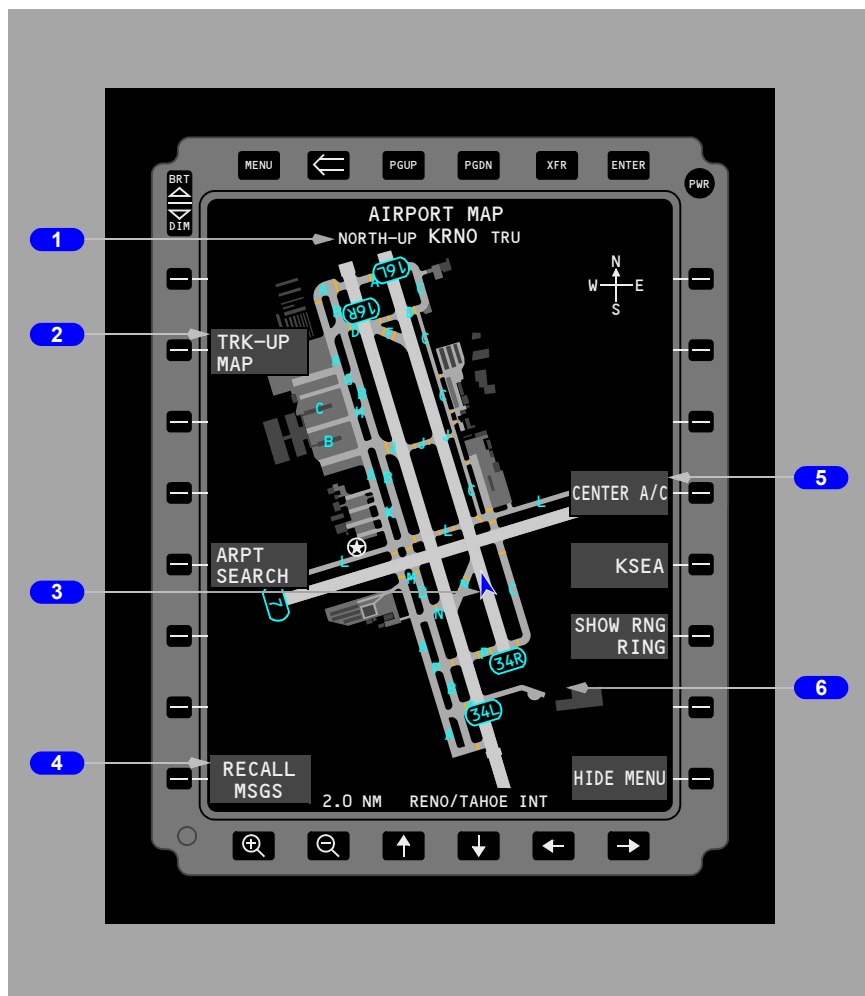

1 Map reference

Displays the map reference

- NORTH UP
- TRU (true) heading.

2 TRK-UP MAP

Selects track up moving map display.

3 Airplane Symbol

Displays when airplane is on the ground at the displayed airport and groundspeed is less than 40 knots.

4 CANCEL/RECALL MSGS (Messages)

Toggles between Cancel and Recall when map faults exist

- CANCEL removes fault messages from the display
- RECALL re-displays fault messages.

The menu item is inhibited when there are no faults to display.

5 CENTER A/C

Centers airplane symbol horizontally and vertically on the display.

6 Map fault message display area


Amber fault messages display in this area. More than one message may display at a time.

Faults may appear on both NORTH-UP and TRK-UP displays.

Fault	NORTH-UP	TRK-UP
ADIRU DATA (ADIRU data is lost or invalid.)	Airplane symbol is removed.	Airplane symbol is removed. Map freezes on position and last known heading.
GPS DATA (GPS position data is lost or invalid.)	Airplane symbol is removed.	Airplane symbol is removed. Map freezes on heading and last known position.
UNABLE POS ACCURACY (GPS position accuracy limits are exceeded. Inhibited by GPS DATA and when in flight.)	Airplane symbol is removed.	Airplane symbol is removed. Map freezes on heading and position

Airport Search

Airport search allows the search and display of other airport maps. Keypad operation for entering, clearing, and deleting characters is the same as with the FMS CDU. All EFB applications that have a search function use an identical keypad and scratchpad in the lower half of the respective search display.

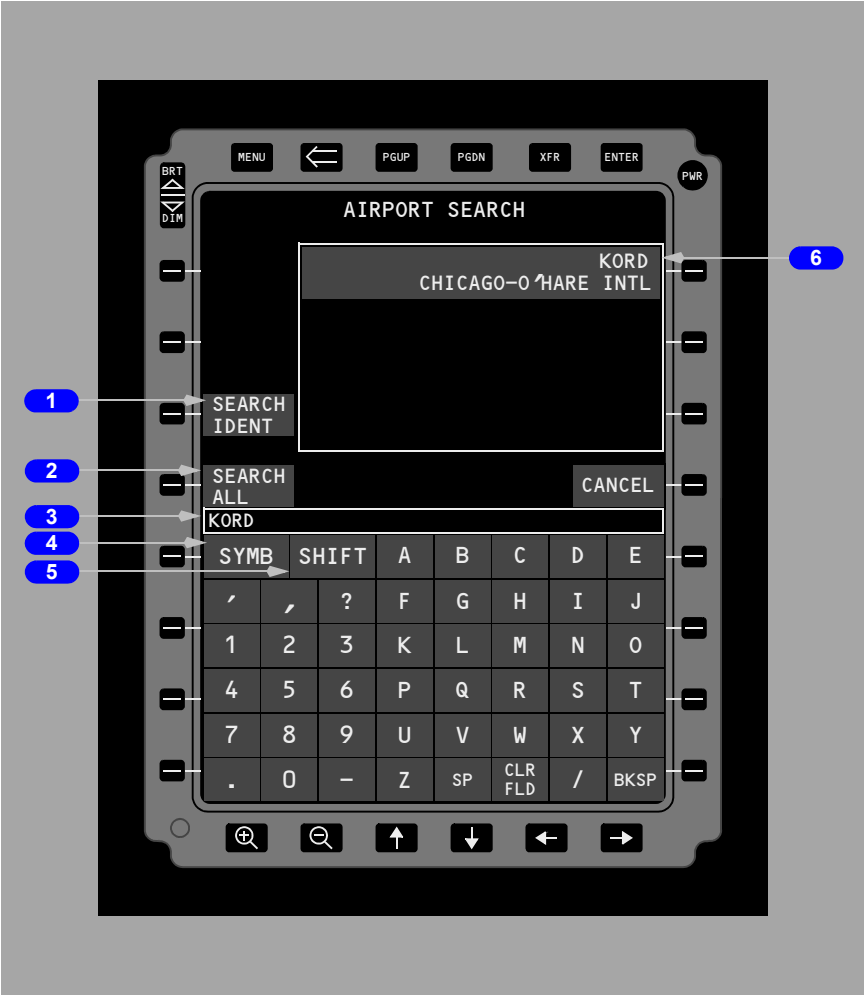

1 SEARCH IDENT

Initiates a search of the ident data base using the scratchpad entry.

2 SEARCH ALL

Initiates a search of the data base using the scratchpad entry.

3 Scratchpad

4 SYMB/NUM key

Alternates between SYMB and NUM.

- SYMB displays symbols on the keypad
- NUM displays numbers on the keypad.


5 SHIFT key

Changes letter keys between upper case and lower case.

6 Airport Identifier

The results of the airport search are displayed here. Selecting the airport displays the airport map in North Up mode.

IDENT page

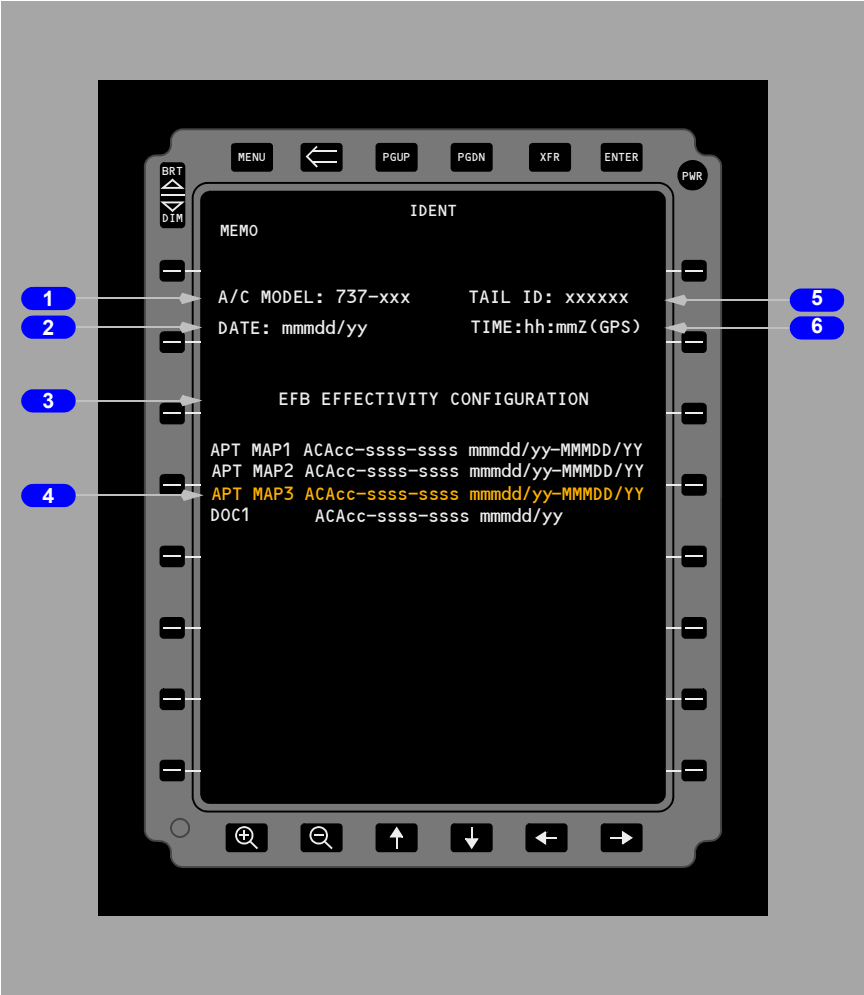

1 A/C MODEL
Display of aircraft model.

2 DATE
Display of current date.

3 EFB EFFECTIVITY CONFIGURATION
Display of effectivity dates for loaded databases.

4 Out of date data base (amber)

An out of date database displays in amber. MEMO displays in the header on all pages and next to affected applications on the Main Menu page.

5 TAIL ID

Display of tail identification number.

6 TIME

Display of time and source of time.

SYSTEM page



1 Acknowledged fault

Fault information is displayed in cyan.

2 Un-acknowledged fault

Fault information is displayed in white.

3 ACKNOWLEDGE NEW FAULTS

- Becomes selectable when there are un-acknowledged faults
- Selection acknowledges all new faults
- Selection removes FAULT on MAIN MENU next to SYSTEM.


4 EFB MAINTENANCE

Provides access to the maintenance menu page.

5 RESTART

Re-initializes Windows applications.

Documents (Typical)

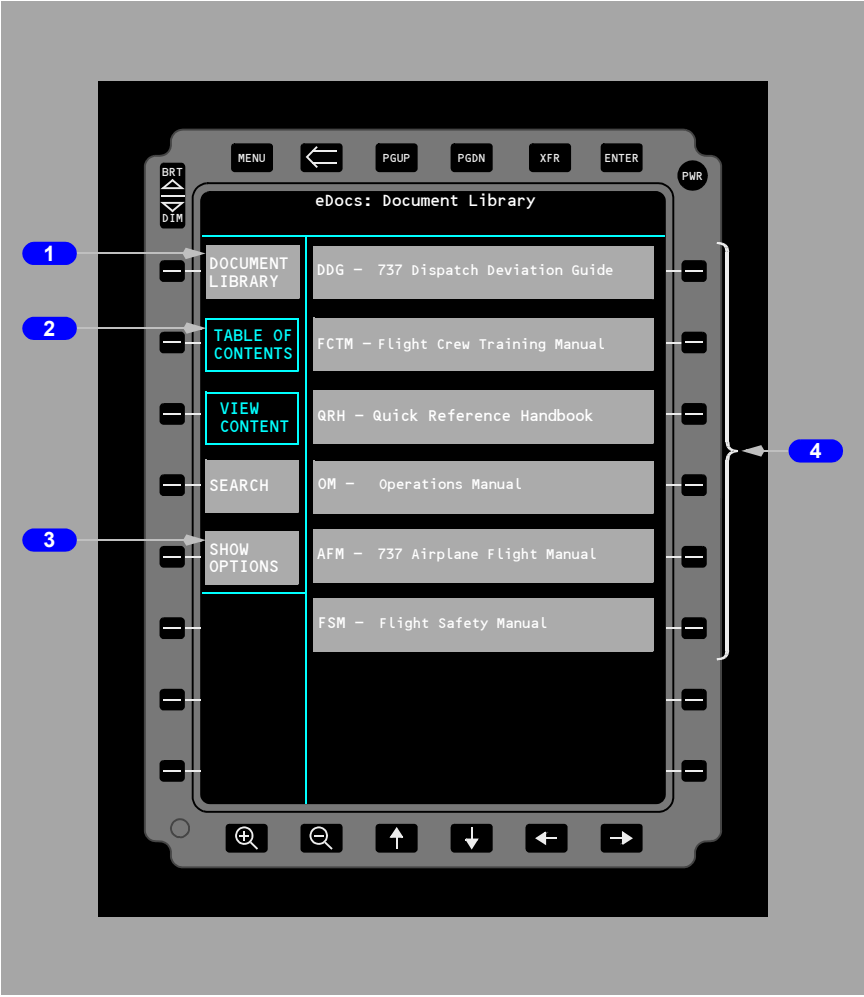

- 1 Application functions**
- Functions for this application display along the left side
 - Selectable functions display with gray background.

2 Functions not selectable


Functions that are not selectable display in cyan. In this example the TABLE OF CONTENTS function is not selectable because no document is selected. Once a document is selected, the function turns white with gray background and is selectable.

3 SHOW OPTIONS

- Displays a list of options along the right side of the display
- Menu changes to HIDE OPTIONS.

4 Selectable documents

Displays a list of the installed and selectable documents.

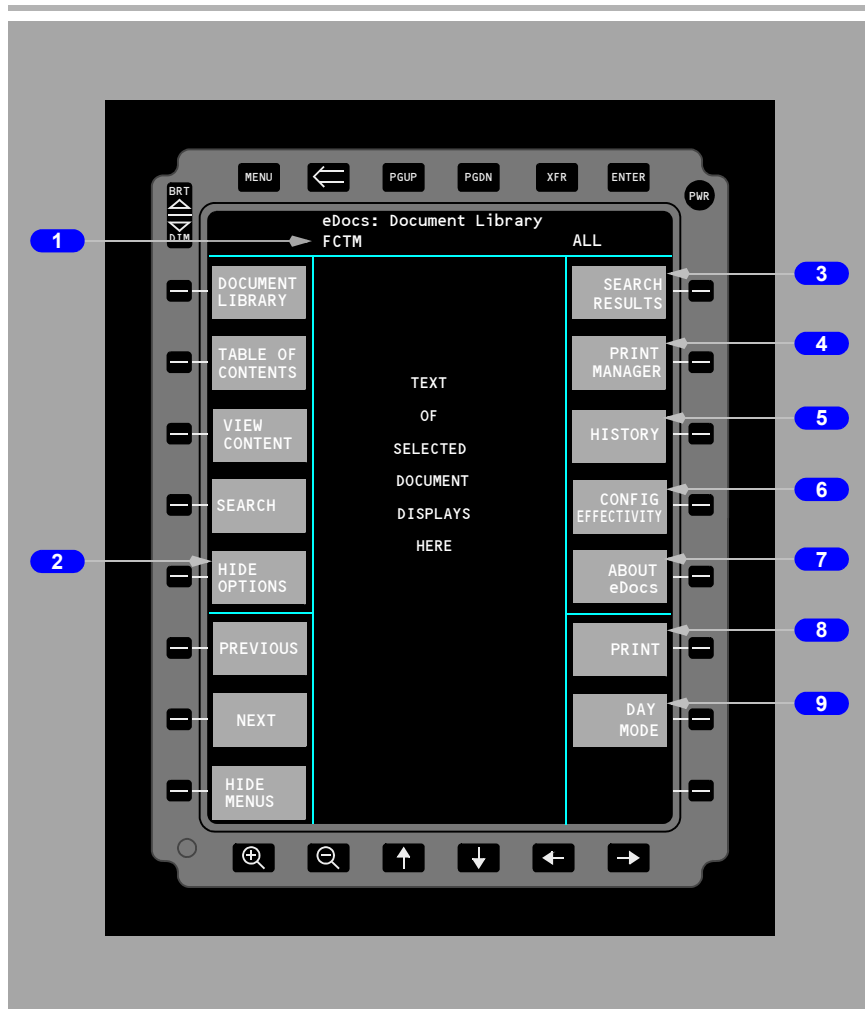

1 Selected document

Selected documents display their acronym in the header below the application title. The area is blank when no document is selected.

2 HIDE OPTIONS

- Removes the list of options from the right side of the display
- Menu is replaced with SHOW OPTIONS.

3 SEARCH RESULTS

Displays a list of results as links, based on a search of a particular manual.

4 PRINT MANAGER

Displays all pending print jobs.

5 HISTORY

Displays a list of entries as links for information previously displayed in the VIEW CONTENTS screen.

6 CONFIG EFFECTIVITY

A selectable list of all the configurations supported by the manual (if applicable).

7 ABOUT eDocs

Contains the latest application version information.

8 PRINT


Information displayed in the VIEW CONTENTS screen is printed on the flight deck printer (if applicable).

9 DAY/NIGHT MODE

Selects either day and night mode.

- DAY - dark text on a light background
- NIGHT - light text on a dark background.

Performance (Typical)

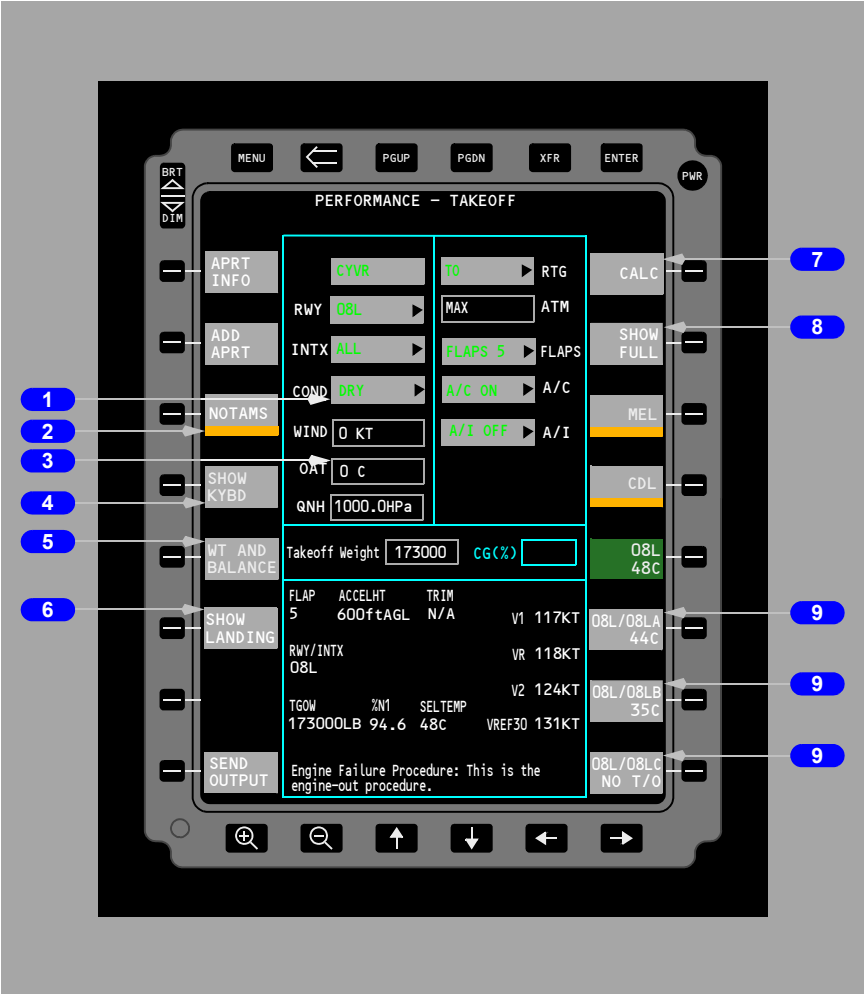

- 1** DRY (green)
- DRY has been selected for the runway condition
 - Triangle in right side of menu indicates a list of options exists
 - Selection display the options.
- 2** NOTAMS
- May be used to enter temporary data
 - Amber bar displays across menu when data has been entered.

3 Data field

Boxes display for fields that require data entry.

4 SHOW KYBD (Keyboard)

Displays a touch sensitive keyboard at the bottom of the page that is used for data entry.

5 WT (Weight) AND BALANCE

Displays the weight and balance page.

6 SHOW LANDING

Displays the landing page.

7 CALC (Calculate)

- Cyan - data has not been entered in all required fields
- White - all required fields have data.


Selection initiates the calculation of takeoff data.

8 SHOW FULL

Selection displays full thrust data for the airport/runway entered.

9 Intersection Takeoff Options

- Intersection takeoff options display on the right side when ALL is selected for INTX (intersection)
- Selection displays takeoff data for the selected intersection.

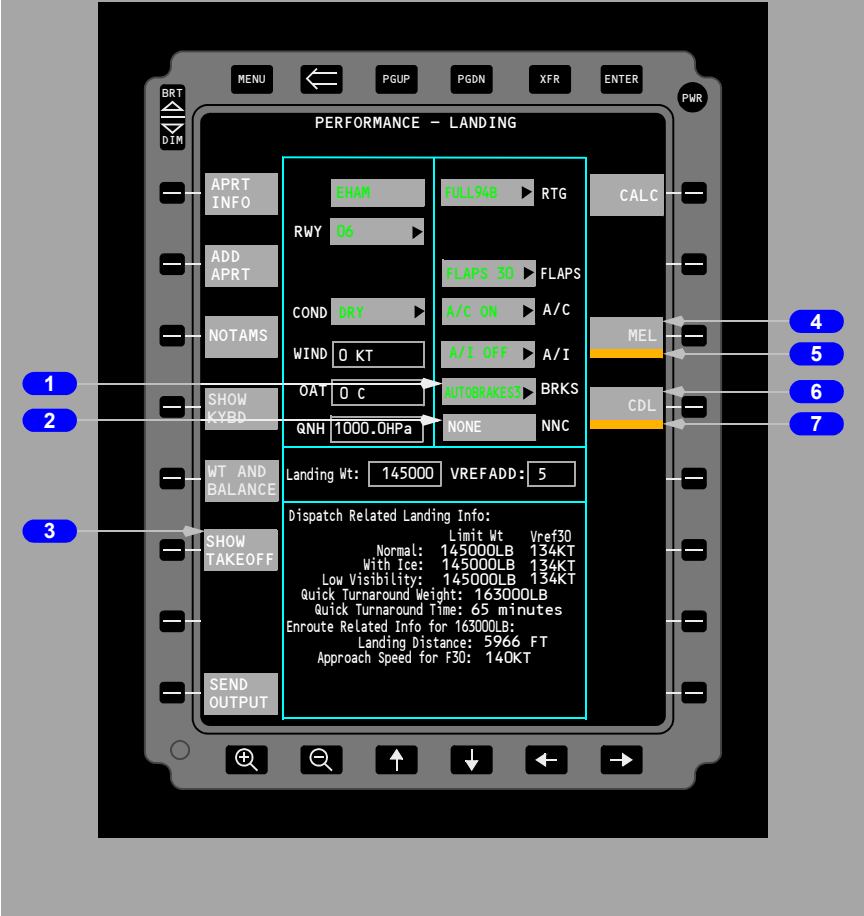

1 BRKS (Brakes)

Selection of a brake setting is required for in-flight landing calculations, not dispatch calculations.

2 NNC

Selection is required for in-flight calculations, not dispatch calculations.

3 SHOW TAKEOFF

Displays the takeoff page.

4 MEL

Displays MEL page.

5 Amber bar


Indicates an active MEL item exists that will be considered in the calculations.

6 CDL

Displays the CDL page.

7 Amber bar

Indicates an active CDL item exists that will be considered in the calculations.

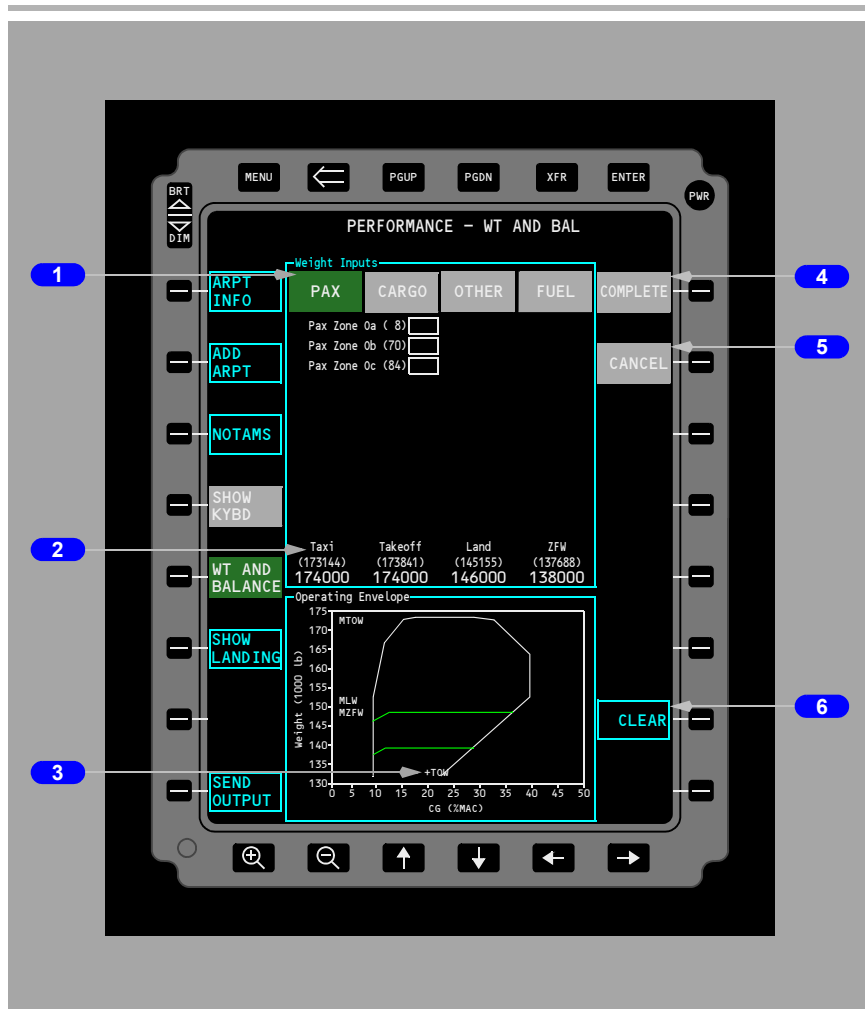

1 PAX/CARGO/OTHER/FUEL

Displays applicable input screen.

2 Aircraft weights

- Initially displays airplane operating empty weight
- Updates as data fields are filled.

3 +TOW

Symbol displays airplane CG relative to the CG limits.

4 COMPLETE

Selection loads the takeoff page with the calculated takeoff gross weight and CG.

5 CANCEL


Clears all entries and returns to the takeoff page.

6 CLEAR

Clears all entries.

Electronic Log Book (ELB Typical)

LOGBOOK page

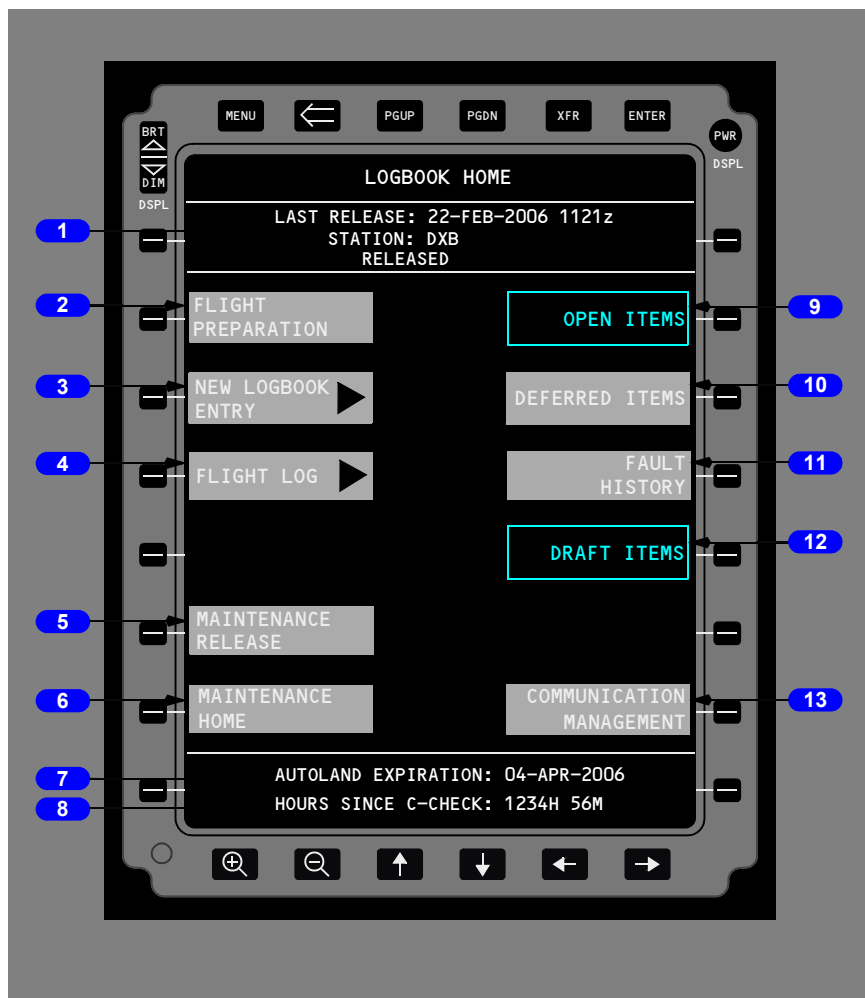

1 Release Information

- Date and time of last release for flight
- Station where the last release occurred
- Current state of the airplane.

2 FLIGHT PREPARATION

Starts a guided process that prepares a flight log to document the upcoming flight. This function is intended to be used prior to flight.

3 NEW LOGBOOK ENTRY

Documents observed faults into the logbook. Uses a graphical fault finder tool that navigates through a series of images to identify selection of a fault. The purpose is to find the appropriate fault description and have it associated with the respective Fault Reporting Manual (FRM) fault code.

4 FLIGHT LOG

Displays the flight log for the current flight.

5 MAINTENANCE RELEASE

The maintenance release form has 2 pages plus a summary page. The first page includes information such as comments and release date. The second page allows the maintenance crew to document any restrictions associated with this release. Before a release can be signed, the user is required to review the summary page 3 contents of the maintenance release.

6 MAINTENANCE HOME

The purpose of the maintenance home page is to provide maintenance crews a summary of the maintenance status of the airplane (release status, open & deferred item counts) and quick access to the maintenance functions. This page is accessible only when the airplane is in ground mode.

7 AUTOLAND EXPIRATION

Displays the date and time the autoland currency expires.

8 HOURS SINCE C-CHECK

Displays the hours and minutes since the last C-check was accomplished.

9 OPEN ITEMS

Displays all open faults that have been documented for this airplane. It also includes any expired deferrals.

10 DEFERRED ITEMS

Displays all deferred faults reported for the airplane. On this page the user can view a brief description, the expiration of the deferral and an indication if any Maintenance (M) or Operational (O) procedures related to this deferral exist.

11 FAULT HISTORY

Lists all fault reports for the aircraft. It provides a description of the fault report plus the time it was reported and the current status. This list is organized by the DATE/TIME field.


12 DRAFT ITEMS

Provides the user with a view of all fault reports that have been created but not signed for official entry into the logbook. If a record has not been signed the user will have a choice of either signing the report to make it an official record, modify, or delete.

13 COMMUNICATION MANAGEMENT

Select to receive and send messages to the ground databases. All messages are sent over a secure link to ensure the integrity of the information.

Electronic Log Book (Fault Locator)

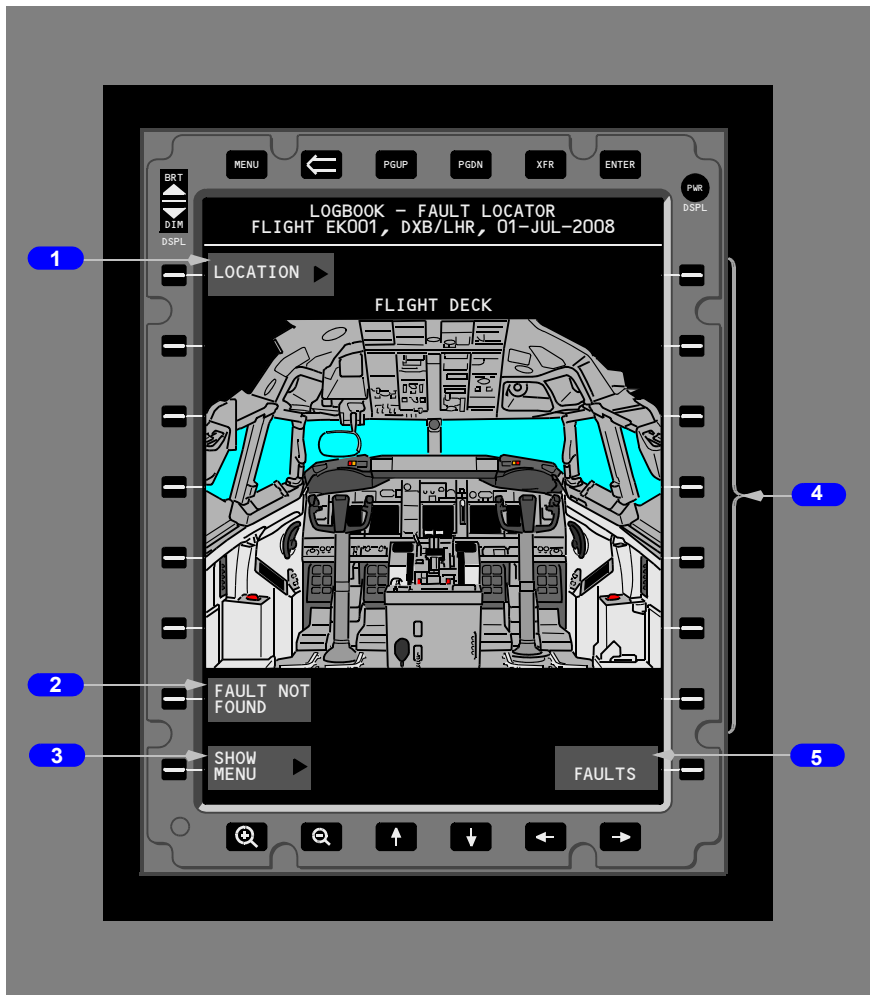

1 LOCATION

Displays a list of airplane areas (Flight Deck, Engine, Exterior, etc.) for use in locating an area where a fault has occurred.

2 FAULT NOT FOUND

Displays a blank fault report form for the user to complete. This is required when a fault can not be found in the selected area.

3 SHOW/HIDE MENU

Toggle button to either show or hide the extended menu selections.

4 Panel Selection Area

Selection of line select keys within the brackets navigates through a series of images to help identify a fault. The purpose is to narrow the search area to find the appropriate fault code.

5 VIEW FAULTS

Displays a list of all faults associated with the region displayed. The more the region is narrowed by selecting specific areas within a graphic, the fewer faults are returned.

Flight Management, Navigation**Chapter 11****Table of Contents****Section 0**

Controls and Indicators	11.10
Flight Management System	11.10.1
Control Display Unit (CDU)	11.10.1
Function and Execute Keys	11.10.2
Alpha/Numeric and Miscellaneous Keys	11.10.4
CDU Page Components	11.10.5
CDU Page Color	11.10.6
FMC Source Select Switch	11.10.9
FMC Alert Light	11.10.9
Global Positioning System (GPS) Light	11.10.10
Inertial System	11.10.11
IRS Display Unit (ISDU)	11.10.11
IRS Mode Selector Unit	11.10.13
IRS Transfer Switch	11.10.15
Heading Reference Switch	11.10.15
Radio Navigation Systems	11.10.16
Automatic Direction Finding (ADF) Control	11.10.16
Marker Beacon Annunciations	11.10.18
VHF Navigation Control	11.10.19
VHF NAV Transfer Switch	11.10.20
Transponder Panel	11.10.21
Weather Radar Panel	11.10.22
Navigation Systems Description	11.20
Introduction	11.20.1
Flight Management System	11.20.1
Global Positioning System (GPS)	11.20.2
GPS Displays	11.20.2
GPS Data	11.20.2
GPS System Schematic	11.20.3

Inertial System	11.20.4
Inertial Reference System	11.20.4
Inertial System Display Unit (ISDU)	11.20.6
Mode Select Unit (MSU)	11.20.6
IRS Transfer Switch	11.20.6
IRS Instrument Transfer Switch Schematic	11.20.7
Heading Reference Switch	11.20.7
Radio Navigation Systems	11.20.8
Automatic Direction Finding (ADF)	11.20.8
Distance Measuring Equipment (DME)	11.20.8
Instrument Landing System (ILS)	11.20.8
Navaid Identifier Decoding	11.20.9
Marker Beacon	11.20.9
Very High Frequency Omni Range (VOR)	11.20.9
VHF NAV Transfer Switch	11.20.9
ATC Transponder	11.20.9
Weather Radar	11.20.10
Flight Management System Description	11.30
Introduction	11.30.1
Flight Management Computer (FMC)	11.30.1
Control Display Units (CDUs)	11.30.3
Flight Management System Operation	11.31
Introduction	11.31.1
Preflight	11.31.1
Takeoff	11.31.2
Climb	11.31.2
Cruise	11.31.2
Descent	11.31.2
Approach	11.31.2
Flight Complete	11.31.2
FMC and CDU Terminology	11.31.2
Maintenance Index Page	11.31.4

BBJ Flight Crew Operations Manual

Navigation Position	11.31.4
FMC Position Update	11.31.5
Navigation Performance	11.31.6
FMC Polar Operations	11.31.11
Lateral Navigation (LNAV)	11.31.12
Waypoints	11.31.12
Navigation Displays	11.31.18
Vertical Navigation (VNAV)	11.31.19
Speed/Altitude Restrictions	11.31.19
Takeoff and Climb	11.31.20
MCP Altitude Intervention	11.31.22
Cruise	11.31.23
MCP Speed Intervention	11.31.23
Descent	11.31.24
Early Descent	11.31.32
Approach	11.31.33
Go-Around	11.31.34
VNAV Cruise (Engine Out Above Eng Out Max Alt)	11.31.36
Required Time of Arrival (RTA)	11.31.37
Data Entry Rules	11.31.37
Altitude Entry	11.31.37
Airspeed Entry	11.31.38
Data Pairs	11.31.39
Bearing Entry	11.31.39
Plus/Minus Signs	11.31.39
Flight Management Computer	11.32
FMC Databases	11.32.1
Thrust Management	11.32.2
Reduced Thrust Takeoff	11.32.2
Derated Thrust Climb	11.32.3
Fuel Monitoring	11.32.4
Loss of FMC Electrical Power	11.32.4

FMC Failure	11.32.5
Single FMC Failure	11.32.5
Dual FMC Failure	11.32.6
Company Data Link	11.33
Company Data Link	11.33.1
Data Link	11.33.2
Manual Downlinks	11.33.2
Automatic Downlinks	11.33.3
Uplinks	11.33.4
Long Delete Function	11.33.4
Requests	11.33.5
Request Status	11.33.6
FMC Data Link Uplinks (Accept/Reject)	11.33.7
FMC Data Link Uplinks (Load/Activate/Exec)	11.33.8
FMC Data Link Uplinks (Load/Exec-Erase)	11.33.8
FMC Data Link Uplinks (Request)	11.33.10
FMC Data Link Uplinks (Automatic)	11.33.10
Data Link Management	11.33.11
CDU Data Link Status Displays	11.33.11
Navlink ACARS	11.33.12
Navlink ACARS Main Menu Page	11.33.12
FMC Preflight	11.40
Introduction	11.40.1
Preflight Page Sequence	11.40.1
Minimum Preflight Sequence	11.40.2
Supplementary Pages	11.40.2
Preflight Pages	11.40.4
Initialization/Reference Index Page	11.40.4
Identification Page	11.40.7
Position Initialization Page 1/3	11.40.9
Position Reference Page 2/3	11.40.12
Route Page 1/X	11.40.14

BBJ Flight Crew Operations Manual

Additional Route Page Prompts for an Activated Route . . .	11.40.24
Departure/Arrival Index Page.	11.40.25
Departures Page	11.40.27
Performance Initialization Page	11.40.29
Performance Limits Page	11.40.32
N1 LIMIT Page - Preflight.	11.40.35
Takeoff Reference Page 1/2	11.40.38
Takeoff Reference Page 2/2	11.40.45
Menu Page	11.40.51
FMC Takeoff and Climb	11.41
Introduction	11.41.1
Takeoff Phase.	11.41.1
VNAV Armed for Takeoff.	11.41.2
Climb Phase	11.41.3
Climb Page	11.41.4
RTA Climb Page	11.41.10
RTE LEGS Page	11.41.11
Progress Page 1/X.	11.41.13
Progress Page 2/4	11.41.15
RTA Progress Page 3/4.	11.41.18
RNP Progress Page 4/4.	11.41.23
N1 Limit Page.	11.41.26
Engine Out Climb	11.41.28
Engine Out Climb Page	11.41.28
Air Turnback	11.41.30
Arrivals Page	11.41.30
FMC Cruise.	11.42
Introduction	11.42.1
LNAV Modifications.	11.42.1
RTE LEGS Page Modifications	11.42.2
Adding Waypoints	11.42.2
Deleting Waypoints	11.42.4

Resequencing Waypoints	11.42.5
Leg Bypass	11.42.6
Removing Discontinuities	11.42.7
Direct To and Intercept Course	11.42.8
Abeam Points	11.42.10
Select Desired Waypoint Page	11.42.12
Select Desired Route Page	11.42.13
Lateral Offset	11.42.14
VNAV Modifications	11.42.16
Cruise Page	11.42.16
RTA Cruise	11.42.18
Cruise with Step Climb	11.42.19
Cruise Climb	11.42.20
RTA Cruise Climb	11.42.21
Cruise Descent	11.42.22
RTA Cruise Descent	11.42.23
Engine Out Cruise	11.42.24
Early Descent	11.42.25
Route and Waypoint Data	11.42.26
Route Data (RTE DATA) Page	11.42.26
Position Shift Page 3/3	11.42.28
Inflight Position Update	11.42.30
Navigation Data	11.42.31
Reference Navigation Data (REF NAV DATA) Page	11.42.31
Waypoint Data Display	11.42.34
Navigation Aid Data Display	11.42.35
Airport Data Display	11.42.36
Runway Data Display	11.42.37
Navigation Summary (NAV SUMMARY)	11.42.38
Supplemental Nav Data	11.42.39
Flight Plan Summary	11.42.40
Navigation Status Display	11.42.41
Navigation Options (NAV OPTIONS)	11.42.43
Fix Information Page	11.42.45


BBJ Flight Crew Operations Manual

FMC Descent and Approach	11.43
Introduction	11.43.1
Early Descent	11.43.1
Descent	11.43.1
Descent Page (During Cruise)	11.43.1
Descent Page (During Descent)	11.43.4
RTA Descent Page	11.43.6
Descent Forecast Page	11.43.8
Engine Out Descent	11.43.9
Approach	11.43.10
Arrivals Page – IFR Approaches	11.43.11
Approach Reference Page	11.43.17
Alternate Airport Diversions	11.43.20
Alternate Dests Page 1/X	11.43.20
Alternate Dests Page X/X	11.43.22
Holding	11.43.24
HOLD Page	11.43.24
RTE LEGS HOLD AT (Fix in Route)	11.43.31
RTE LEGS HOLD AT (Fix not in Route)	11.43.33
 Alternate Navigation System (ANS)	 11.50
Introduction	11.50.1
General	11.50.1
System Components	11.50.1
Memory	11.50.2
Operation	11.50.2
Overview	11.50.2
Lateral Navigation	11.50.3
Vertical Navigation	11.50.3
Radio Tuning	11.50.3
Electrical Power	11.50.3
System Downloading	11.50.3
CDU Messages	11.50.3

Waypoints	11.50.3
Waypoint Identifiers	11.50.4
Preflight	11.50.4
Introduction	11.50.4
Preflight Page Sequence	11.50.5
Page Displays	11.50.5
Introduction	11.50.5
GPS Legs Page	11.50.5
GPS Progress Page	11.50.8
GPS Waypoint Data Page	11.50.10
FMC Messages	11.60
Introduction	11.60.1
FMC Alerting Messages	11.60.2
FMC Entry Error Messages	11.60.13
FMC Advisory Messages	11.60.15
FMC Data Link Messages	11.60.20
FMC Data Link Alerting Messages	11.60.21
FMC Data Link Advisory Messages	11.60.26
Navlink ACARS Messages	11.60.27
Navlink ACARS Advisory Messages	11.60.27
Navlink ACARS Status Messages	11.60.28
Navlink ACARS Entry Error Messages	11.60.29
ANCDU Messages	11.60.30
ANCDU Alerting Messages	11.60.30
ANCDU Entry Error Messages	11.60.31

**Flight Management, Navigation
Controls and Indicators****Chapter 11
Section 10****Flight Management System****Control Display Unit (CDU)**

[Option – Liquid crystal display MCDU]

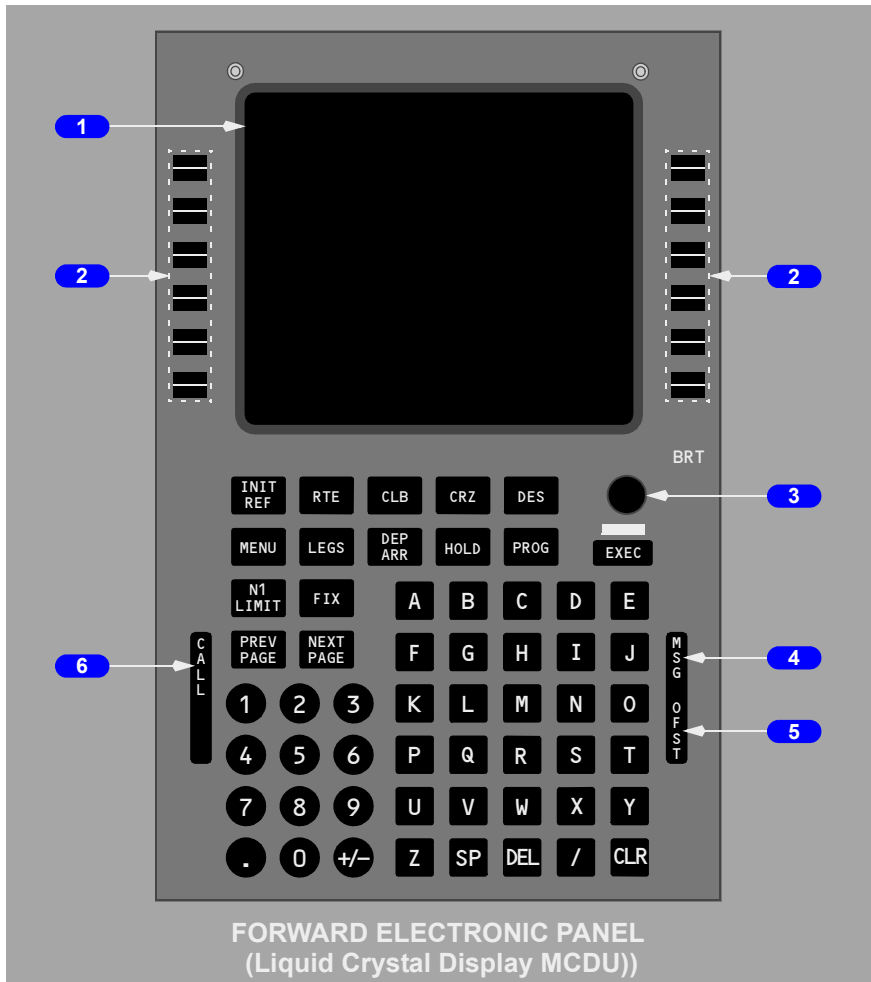**1 Control Display Unit (CDU) Display**

Shows FMS data pages.

2 Line Select Keys

Push –

- moves data from scratchpad to selected line
- moves data from selected line to scratchpad
- selects page, procedure, or performance mode as applicable
- deletes data from selected line when DELETE is shown in scratchpad.

3 Brightness Control

Rotate – controls display brightness.

4 Message (MSG) Light

Illuminated (white) – scratchpad message is shown.

5 Offset (OFST) Light

Illuminated (white) – LNAV gives guidance for lateral route offset.


6 CALL Light

[Option – MCDU]

Illuminated (white) – a subsystem other than the FMC is requesting control of the CDU.

Function and Execute Keys

[Option – Liquid crystal display MCDU]

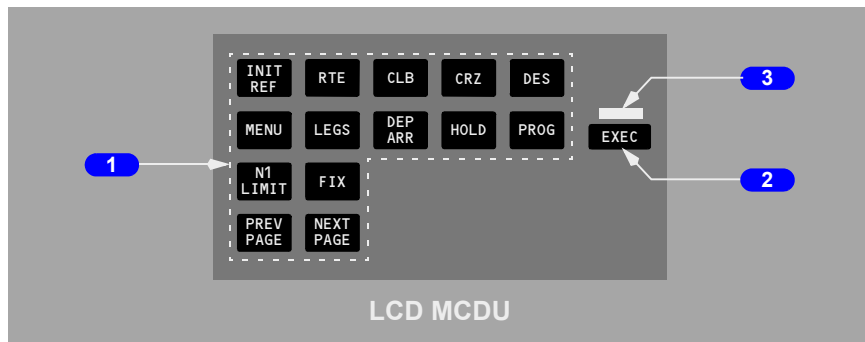

1 CDU Function Keys

Push –

- INIT REF – shows page for data initialization or for reference data
- RTE – shows page to input or change origin, destination, or route
- CLB – shows page to view or change climb data

- CRZ – shows page to view or change cruise data
- DES – shows page to view or change descent data

[Option – MCDU]

- MENU – shows page to choose subsystems controlled by CDU
- LEGS –
 - shows page to evaluate or modify lateral and vertical data
 - shows page to control PLAN mode display
- DEP ARR – shows page to input or change departure and arrival procedures
- HOLD – shows page to create holding patterns and show holding pattern data
- PROG – shows page to view dynamic flight and navigation data, including waypoint and destination ETAs, fuel remaining, and arrival estimates
- N1 LIMIT – shows page to view or change N1 thrust limits
- FIX – shows page to create reference points on map display
- PREV PAGE – shows previous page of related pages (for example, LEGS pages)
- NEXT PAGE – shows next page of related pages.

2 Execute (EXEC) Key

Push –


- makes data modification(s) active
- extinguishes execute light.

3 Execute Light

Illuminated (white) – active data is modified but not executed.

Alpha/Numeric and Miscellaneous Keys

[Option – MCDU]

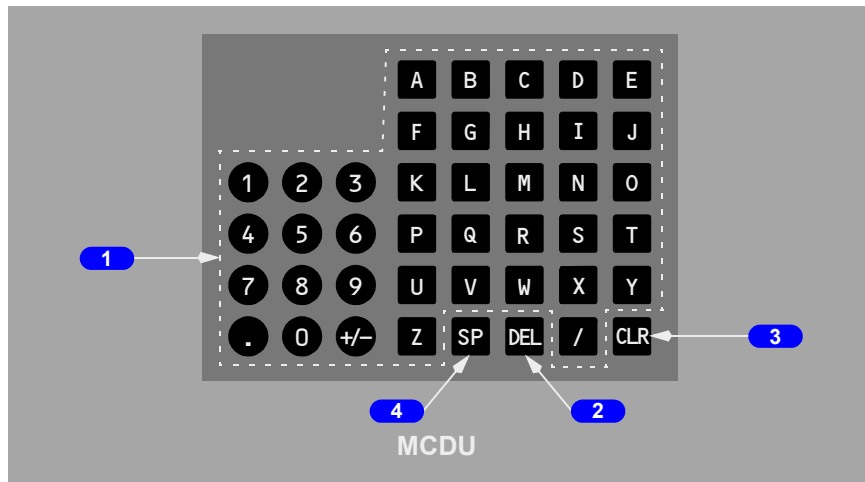

1 Alpha/Numeric Keys

Push –

- puts selected character in scratchpad
- Slash (/) key – puts “/” in scratchpad
- Plus Minus (+/–) key – first push puts “–” in scratchpad. Subsequent pushes alternate between “+” and “–”.

2 Delete (DEL) Key

Push – puts DELETE in scratchpad.

3 Clear (CLR) Key

Push –

- clears the last scratchpad character
- clears scratchpad message.

Push and hold – clears all scratchpad data.

4 Space (SP) Key

[Option – MCDU]

Push – puts space in scratchpad.

CDU Page Components

[Option – FMC U10.3 and later with flight number entry]



1 Page Title

Subject or name of data shown on page.

ACT (active) or MOD (modified) shows whether page contains active or modified data.

2 Line Title

Title of data on line below.

3 Line

Shows –

- prompts
- selections
- options
- data.

4 Scratchpad

Shows messages, alpha-numeric entries or line selected data.

5 Page Number

Left number is page number. Right number is total number of related pages.

6 Boxes

Data input is mandatory.

7 Dashes


Data input is optional. The data is not mandatory.

8 Prompts

Show pages, select modes, and control displays. Caret “<” or “>” is before or after prompt.



CDU Page Color

[Option]

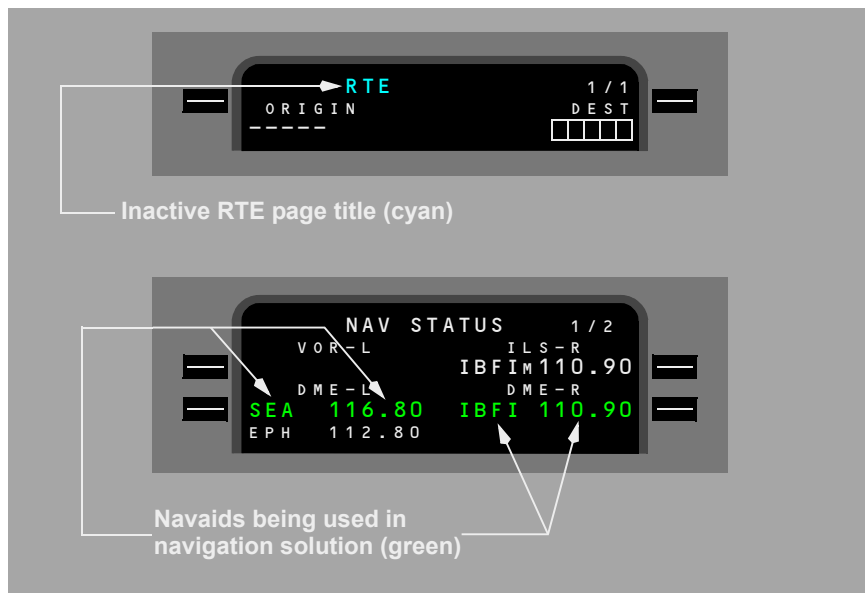

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Flight Management, Navigation -
Controls and Indicators

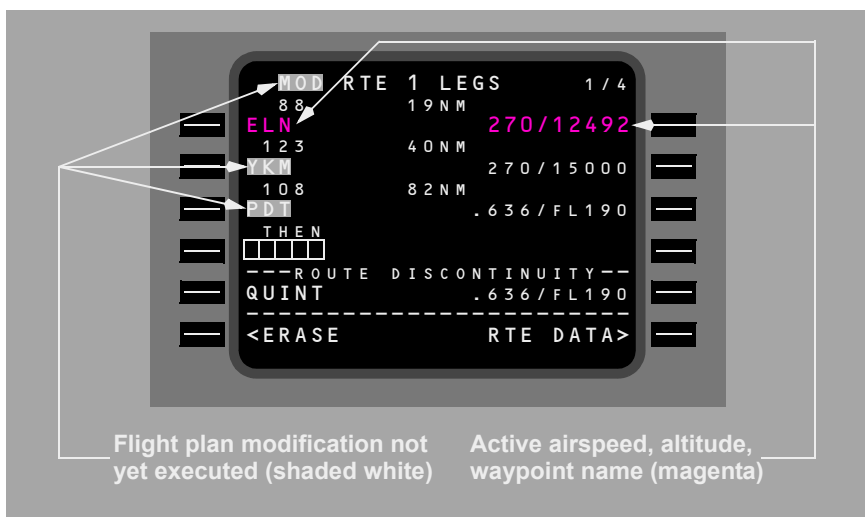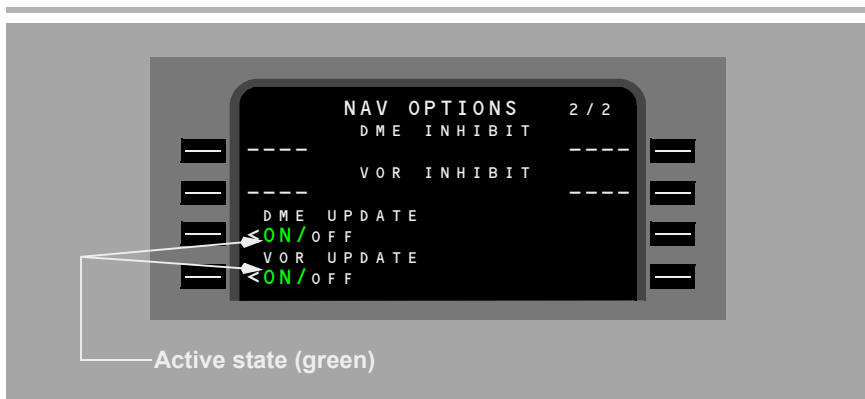




Holding pattern inbound course, direction of turn,
leg distance or leg time (magenta)

Color is used as follows:

- black – background color of page
- cyan –
 - inactive RTE, RTE LEGS and RTE HOLD page titles
- green –
 - actively tuned VOR, ILS, or DME data (frequency, station ID, course)
 - active state of two–position and three–position selectors.
- magenta – data used by FMC for lateral and vertical flight commands
 - active waypoint
 - active airspeed
 - active altitude
 - holding pattern inbound course, direction of turn, and leg time or leg distance
- shaded white –
 - modifications
 - MOD precedes page titles of modified pages
- white – most data

FMC Source Select Switch

[Option – Dual FMC]

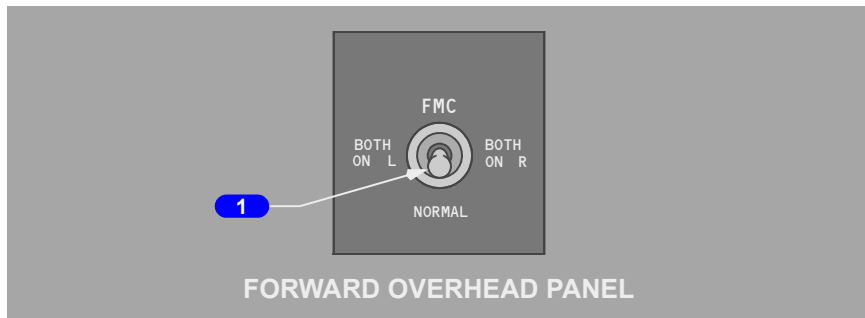

1 FMC Source Select Switch

BOTH ON L –

- selects left FMC for all FMC operations
- right map will annunciate “FMC L.”

NORMAL –


- left FMC controls CDUs and provides input to the autothrottle system
- right FMC operates in synchronization with left FMC
- maps display composite information from both FMCs

BOTH ON R –

- selects right FMC for all FMC operations
- left map will annunciate “FMC R.”

Note: Moving the source select switch will cause LNAV and VNAV to disengage.

FMC Alert Light

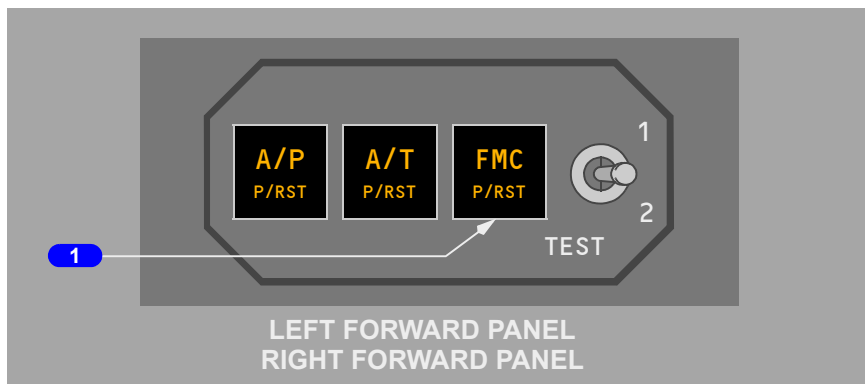

1 FMC Alert Light


Illuminated (amber) –

- an alerting message exists for both CDUs, or
- test switch is in position 1 or 2.

Push – both pilots' FMC alert lights extinguish.

Global Positioning System (GPS) Light

[Option – With GPS]

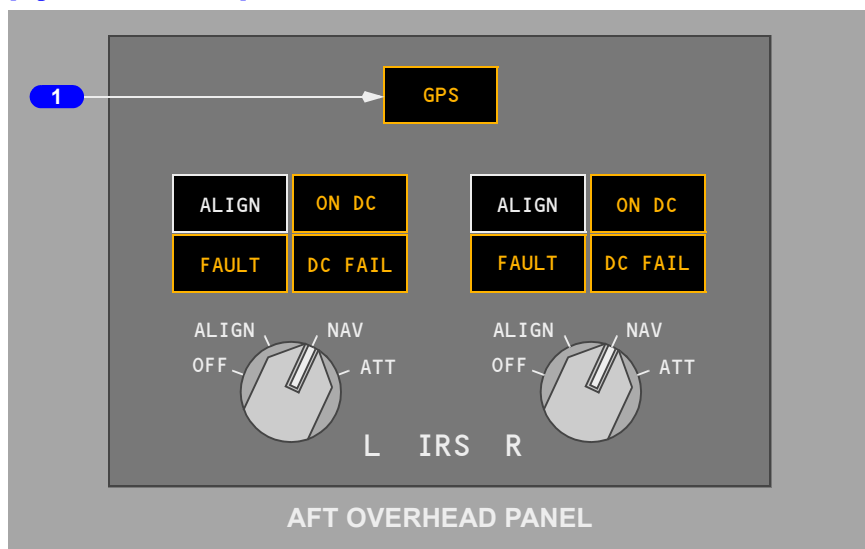


1 Global Positioning System (GPS) Light

Illuminated (amber) –

- indicates failure of both GPS sensor units
- indicates failure of a single GPS sensor unit when either system annunciator panel is pushed to initiate a recall
- with single GPS sensor failure, light extinguishes when the system recall is reset.

Inertial System

IRS Display Unit (ISDU)

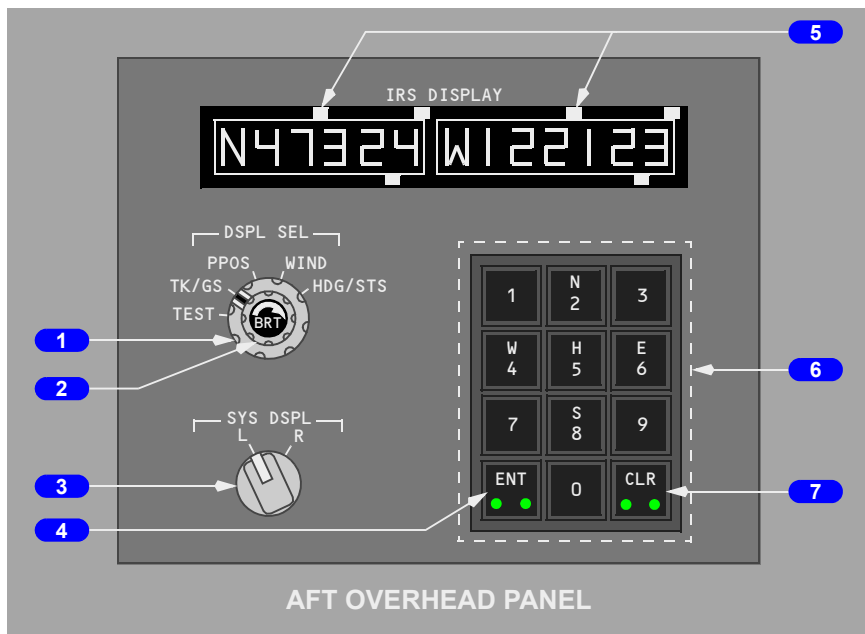

1 Display Selector (DSPL SEL)

TEST (spring-loaded to TK/GS) –

- all lights in data displays and on the mode selector unit momentarily illuminate, followed by a 10 second self-test
- use only during alignment.

TK/GS –

- left window displays true track (course)
- right window displays present ground speed (knots).

PPOS –

- left window displays present latitude
- right window displays present longitude.

WIND –

- left window displays present inflight true wind direction
- right window displays present inflight wind speed (knots).

HDG/STS –

- left window displays present true heading
- right window displays any applicable maintenance status codes
- during alignment, right window displays minutes remaining until alignment is complete. For alignments greater than 15 minutes, the window displays 15 until the time remaining reaches 14 minutes. The display then counts down in one minute intervals.

2 Brightness (BRT) Control

Rotate – adjusts brightness of the data displays.

3 System Display (SYS DSPL) Selector

L – selects left IRS for the data displays.

R – selects right IRS for the data displays.

4 Enter (ENT) Key

Illuminated (white) – N, S, E, W, or H entries are being keyed.

Push – keyed data is entered into IRS following completion of valid self-test for reasonableness.

5 Data Displays

Two windows display data for the IRS selected with the system display selector

- type of data displayed is normally determined by the display selector
- keyboard entry of present position or magnetic heading overrides the selected display
- last digit of each window is for a decimal place (tenths).

6 Keyboard

Push –

- alpha keys:
 - data displays are controlled by the keyboard when the N, S, E, W (latitude/longitude) or H (heading) keys are pushed
 - pushing an alpha key arms the keyboard for numeric entries.
- numeric keys:
 - permit manual entry of present position when ALIGN light is illuminated
 - permit manual entry of magnetic heading when either mode selector is in ATT.


7 Clear (CLR) Key

Illuminated (white) – an ENT attempt has failed (entry not accepted by IRS).

Push – clears data display of any data not yet entered or accepted. If illuminated, cue lights extinguish.

IRS Mode Selector Unit

[Option – With GPS]

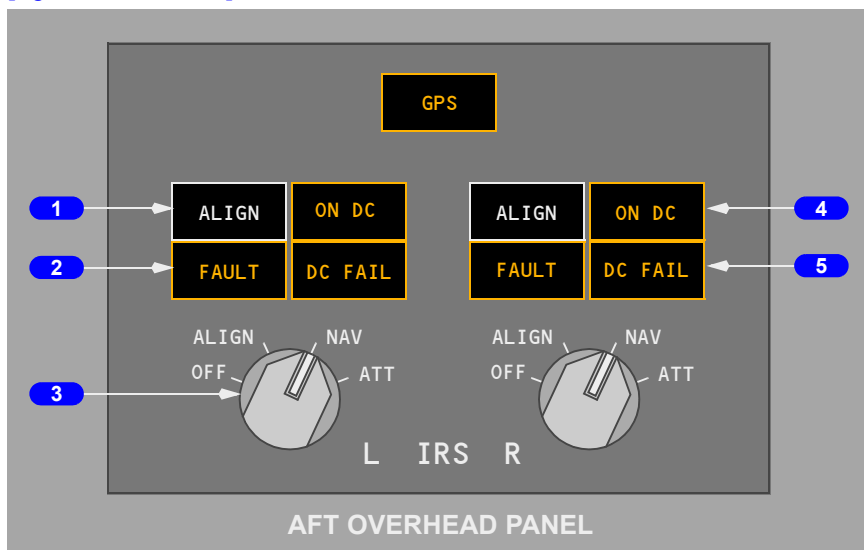

1 ALIGN Light

Illuminated (white) –

- steady – the related IRS is operating in the ALIGN mode, the initial ATT mode, or the shutdown cycle
- flashing – alignment cannot be completed due to IRS detection of:
 - significant difference between previous and entered positions or an unreasonable present position entry
 - no present position entry.

Extinguished –

- IRS not in ALIGN mode
- with mode selector in NAV, alignment is complete, and all IRS information is available
- with mode selector in ATT, attitude information is available. Heading information is available following entry of initial magnetic heading.

2 FAULT Light

Illuminated (amber) – a system fault affecting the related IRS ATT and/or NAV modes has been detected.

3 Inertial Reference System (IRS) Mode Selector

OFF –

- alignment is lost
- all electrical power is removed from the system after a 30 second shutdown cycle.

ALIGN –

- rotating the selector from OFF to ALIGN initiates the alignment cycle
- rotating the selector from NAV to ALIGN automatically updates alignment and zeroes ground speed error.

NAV (detented position) –

- system enters the NAV mode after completion of the alignment cycle and entry of present position
- in NAV mode, all IRS information is available to airplane systems for normal operations.

ATT – provides only attitude and heading information:

- attitude information is invalid (attitude flag in view) until ALIGN light is extinguished
- heading information is invalid (heading flags in view) until the actual magnetic heading is manually entered after the ALIGN light is extinguished
- position and ground speed information is not available until the IRS is aligned on the ground
- the selector must be cycled to OFF before reselecting ALIGN or NAV.

4 ON DC Light

Illuminated (amber) –


- the related IRS is operating on DC power from the switched hot battery bus (AC power not normal)
- if on the ground, the ground-call horn in the nose wheel well sounds, providing an alert that a battery drain condition exists
- momentary illumination is normal during alignment self-test.

5 DC FAIL Light

Illuminated (amber) –

- DC power for the related IRS is not normal
- if the other lights are extinguished, the IRS is operating normally on AC power.

IRS Transfer Switch

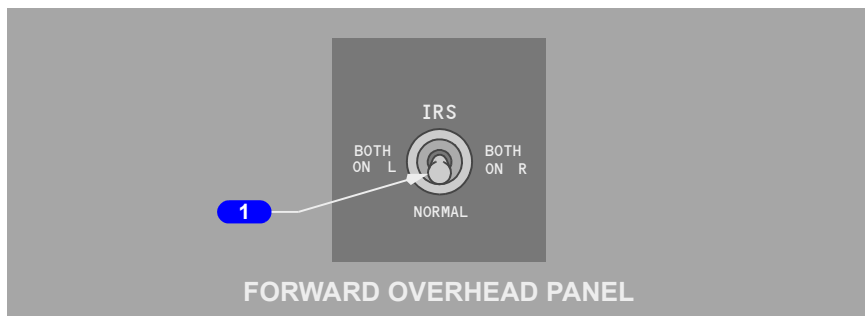

1 Inertial Reference System (IRS) Transfer Switch


BOTH ON L – switches the flight instruments attitude and heading source to left IRS.

NORMAL – flight instruments attitude and heading source is from default IRS.

BOTH ON R – switches the flight instruments attitude and heading source to right IRS.

Heading Reference Switch

[Option – Polar Navigation]

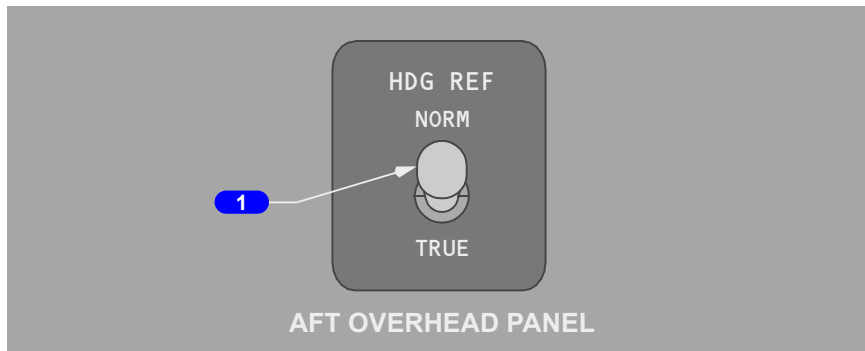

1 Heading Reference Switch

Selects heading reference information from the IRS to be supplied to all affected components.

NORM –

- normally references magnetic north
- automatically references true north when the calculated airplane position enters a polar region and:
 - the FCC is unusable in HDG SEL or CWS R
 - the heading warning flag displays on the standby radio magnetic indicator


TRUE –

- references true north regardless of latitude
- VOR bearing information is invalid.

Radio Navigation Systems

Automatic Direction Finding (ADF) Control

[Option – Gables G7403-03]

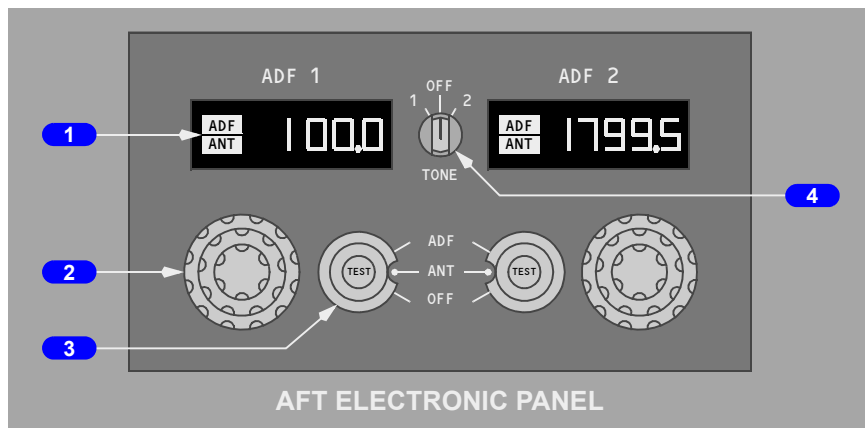

1 Frequency Indicator

Shows the frequency selected with the related frequency selector.

Shows if the system is in the ADF or antenna (ANT) mode.

2 Frequency Selector

Rotate –

- outer knob sets the hundreds number
- middle knob sets the tens number
- inner knob sets the tenths and ones number.

3 Mode Selector Switch

ADF –

- audio reception possible
- ADF bearing sent to the DUs and the standby radio magnetic indicator.

ANT –

- audio reception optimized
- no ADF bearing data available.

OFF – removes power from selected receiver.

TEST – tests related ADF bearing pointers and warning flags on the DUs and the standby radio magnetic indicator.

- DU ADF indications:
 - show ADF fail flag and ADF bearing pointer goes out of view
 - ADF fail flag goes out of view and ADF bearing pointer remains out of view
 - ADF bearing pointer slews to 135 degrees relative bearing.
- Standby radio magnetic indicator:
 - shows ADF fail flag
 - ADF fail flag goes out of view and ADF bearing pointer stays at its last position before test
 - ADF bearing pointer slews to 135 degrees relative bearing.

4 TONE Switch


1 – adds tone to ADF receiver No. 1 audio.

2 – adds tone to ADF receiver No. 2 audio.

OFF – disables tones.

Marker Beacon Annunciations

[Option – PFD/ND]

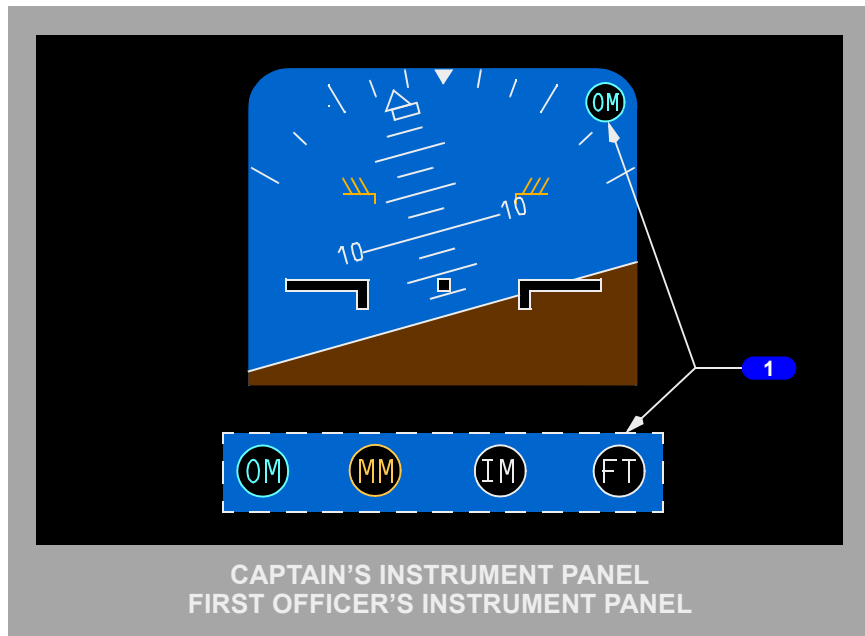

1 Marker Beacon Lights


OM (cyan) – illuminates over an outer marker beacon.

MM (amber) – illuminates over a middle marker beacon.

IM (white) – illuminates over an inner marker beacon.

FT (white) – illuminates during self test.

VHF Navigation Control

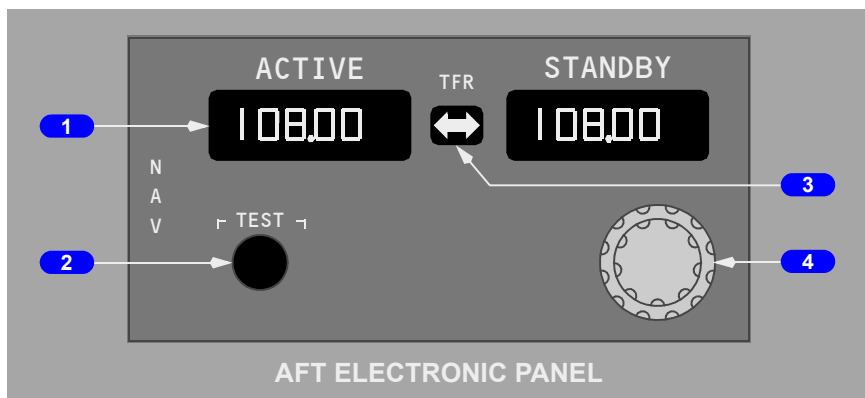

1 Frequency Indicator

Indicates the frequency selected by the frequency selector

- tuned frequency displayed in STANDBY display
- TFR switch moves STANDBY frequency to ACTIVE frequency.

2 TEST Switch

With a VOR frequency tuned and a course of 000 selected:

- shows VOR fail flag
- deviation bar biases out of view and then returns to centered position
- bearing pointer slews to 180 degrees
- DME displays:
 - DME fail flag
 - dashes
 - normal DME distance.

With ILS frequency tuned and a course within 90 degrees of airplane heading:

- pointers disappear and LOC and G/S flags appear momentarily
- pointers appear and display one dot up and one dot left
- pointers then display one dot low and one dot right
- pointers then return to normal display
- DME displays:
 - DME fail flag
 - dashes
 - normal DME distance.


3 Transfer (TFR) Switch

TFR – STANDBY frequency moved to ACTIVE frequency; ACTIVE frequency moved to STANDBY frequency.

4 Frequency Selector

Rotate – manually selects the standby frequency.

VHF NAV Transfer Switch

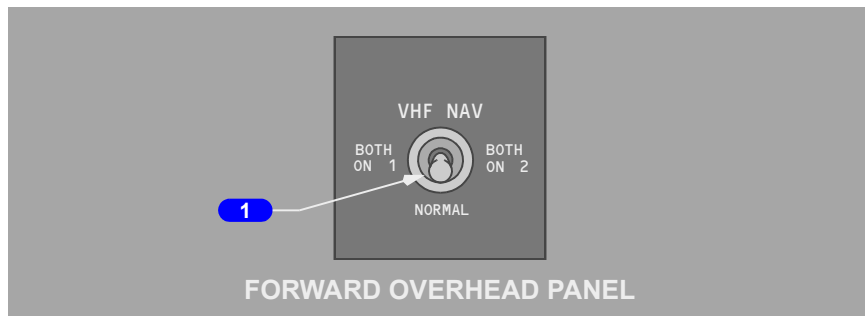

1 VHF NAV Transfer Switch

This switch changes the source of the data that the DEUs use for the ILS displays.

BOTH ON 1 – the DEUs use Multimode Receiver 1 as the source for the captains display and first officers display.


NORMAL – Multimode Receiver 1 supplies data for the captains display and Multimode Receiver 2 supplies data for the first officers display.

BOTH ON 2 – the DEUs use Multimode Receiver 2 as the source for the captains display and first officers display.

Note: The Digital Flight Control System cannot use VOR/ILS data that is not shown on the displays. Thus, when the Autopilot (A/P) system is engaged the VHF Navigation Control must match the primary Autopilot system that is ENGAGED for proper ILS/VOR operations; i.e. (CMD A uses VHF NAV 1 for control and CMD B uses VHF NAV 2 for control).

Transponder Panel

[Option – Gables G6992-02]

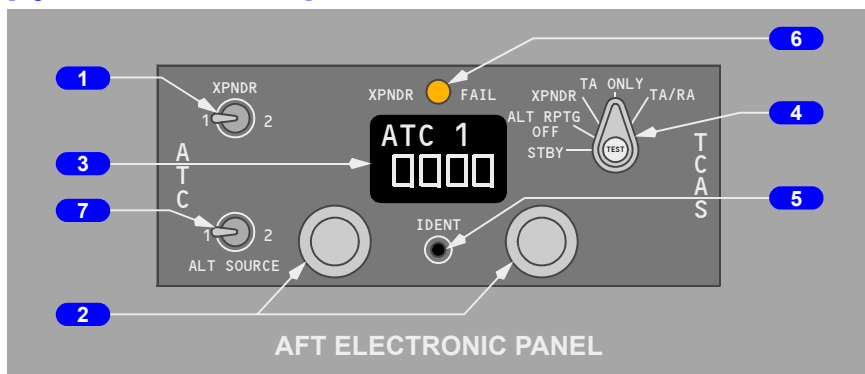

1 Transponder (XPNDR) Selector

1 – selects transponder No. 1.

2 – selects transponder No. 2.

2 Air Traffic Control (ATC) Code Selector

Rotate – sets transponder code in transponder.

3 Air Traffic Control (ATC) Code Indicator

Shows transponder code.

Shows operating transponder (1 or 2).

4 Transponder Mode Selector

TEST – starts ATC transponder functional test.

STBY (standby) – does not transmit.

ALT RPTG (altitude reporting) OFF – transponder operates without altitude reporting.

XPNDR (transponder) – transponder operates with altitude reporting.

TA (traffic advisory) ONLY, and TA/RA (resolution advisory) – Refer to Chapter 15, Warning Systems.

5 Identification (IDENT) Switch

Push – transmits an identification signal.

6 Transponder (XPNDR) FAIL Light

Illuminated (amber) – indicates transponder malfunction.


7 Altitude (ALT) SOURCE Selector

1 – enables altitude reporting from air data computer No. 1.

2 – enables altitude reporting from air data computer No. 2.

Weather Radar Panel

[Option – Collins 622-5129-203 or -223]

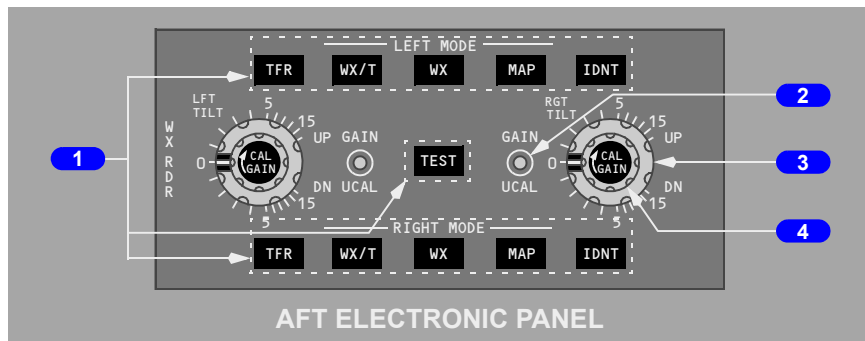

1 Weather Radar Mode Switches

Push – selects mode. Left mode switches control the Captain's radar display, right mode switches control the First Officer's radar display.

- TFR (transfer) – transfers other map display selections to related map
- WX/T (turbulence) – shows weather radar returns and turbulence. Turbulence display is available on displays of 40 nm or less.

Note: Turbulence detection requires presence of detectable precipitation.

Clear air turbulence cannot be detected by radar.

- WX – shows weather radar returns at selected gain level
- MAP – shows ground returns at selected gain level
- IDNT – suppresses ground return in WX and WX/T modes
- TEST –
 - tests weather radar system operation without transmitting
 - shows test pattern and any fault messages on navigation display MAP, center MAP, VOR, and APP modes, with WXR selected.

[Option – With predictive windshear]

Note: If the airplane is on the ground and the thrust levers are not advanced for takeoff, WXR tests the predictive windshear system (PWS) indications. These include PWS caution, PWS FAIL, and PWS warning. Deactivating WXR on the EFIS control panel will not discontinue the test and can result in automatic WXR activation on both pilot displays. The PWS test lasts approximately 15 seconds.

2 Gain Uncalibrated (GAIN UCAL) Lights

Illuminated – related gain control is in an uncalibrated position.

3 TILT Control

Rotate clockwise – radar antenna tilts up to selected degrees from horizon.

Rotate counterclockwise – radar antenna tilts down to selected degrees from horizon.

4 GAIN Control

Rotate – sets gain in WX, WX/T and MAP modes.

Intentionally
Blank

Flight Management, Navigation
Navigation Systems Description**Chapter 11**
Section 20

Introduction**[Option – With GPS]**

Navigation systems include the flight management system (FMS); global positioning system (GPS); air data inertial reference system (ADIRS); radio navigation systems (ADF, DME, ILS, marker beacons, and VOR); transponder; and weather radar.

[Option – HUD]

Many of the flight instrument display symbols listed in this chapter also appear on the Heads Up Display (HUD) System. Refer to Chapter 10, Flight Instruments, for HUD system display symbol descriptions.

Flight Management System

The flight management system (FMS) is comprised of the following components:

- flight management computer system (FMCS)
- autopilot/flight director system (AFDS)
- autothrottle (A/T)
- inertial reference systems (IRS)
- global positioning system (GPS).

Each of these components is an independent system, and each can be used independently or in various combinations. The term FMS refers to the concept of joining these independent components together into one integrated system which provides continuous automatic navigation, guidance, and performance management.

The integrated FMS provides centralized flight deck control of the airplane's flight path and performance parameters. The flight management computer, or FMC, is the heart of the system, performing navigational and performance computations and providing control and guidance commands.

[Option – Dual FMC]

The primary flight deck controls are the AFDS MCP, two control display units (CDU's), two electronic flight instrument system (EFIS) control panels, and an FMC source selector switch. The primary displays are the CDUs, outboard display units, inboard display units, and upper display unit.

The FMC uses crew entered flight plan information, airplane systems data, and data from the FMC navigation database and performance database to calculate airplane present position, and pitch, roll, and thrust commands required to fly an optimum flight profile. The FMC sends these commands to the autothrottle, autopilot, and flight director. Map and route information are sent to the respective pilot's navigation displays. The EFIS control panels are used to select the desired information for navigation display. The mode control panel is used to select the autothrottle, autopilot, and flight director operating modes.

Global Positioning System (GPS)

[Option]

Two GPS receivers receive GPS satellite positioning signals. The left and right GPS receivers are independent and each provides an accurate airplane geographical position to the FMC and other aircraft systems. GPS operation is automatic.

GPS Displays

POS REF page 2/3 shows the left and right GPS latitude and longitude position. POS SHIFT page 3/3 shows the left and right GPS position relative to the FMC position. NAV STATUS page 1/2 shows the GPS currently in use by the FMC for position calculation.

[Option – PFD/ND]

When the POS (position) switch on the EFIS control panel is selected, the navigation display shows the left and right GPS symbols. The GPS symbols are identical and show as a single symbol when the GPS receivers calculate the same position.


An amber GPS light illuminates to indicate a failure of both GPS sensor units. Failure of a single GPS sensor causes the light to illuminate when either system annunciator panel is pushed.

GPS Data

FMC logic selects the position from one of the GPS sensor units as the primary update to the FMC position. When GPS position data is available, radio updating can also occur. If all GPS data becomes unavailable, the FMC position will be determined by radio or inertial (IRS) updating.

GPS navigational information can be manually deselected on the NAV OPTIONS page 2/2. No other controls are provided because the operation of the GPS is completely automatic.

GPS System Schematic

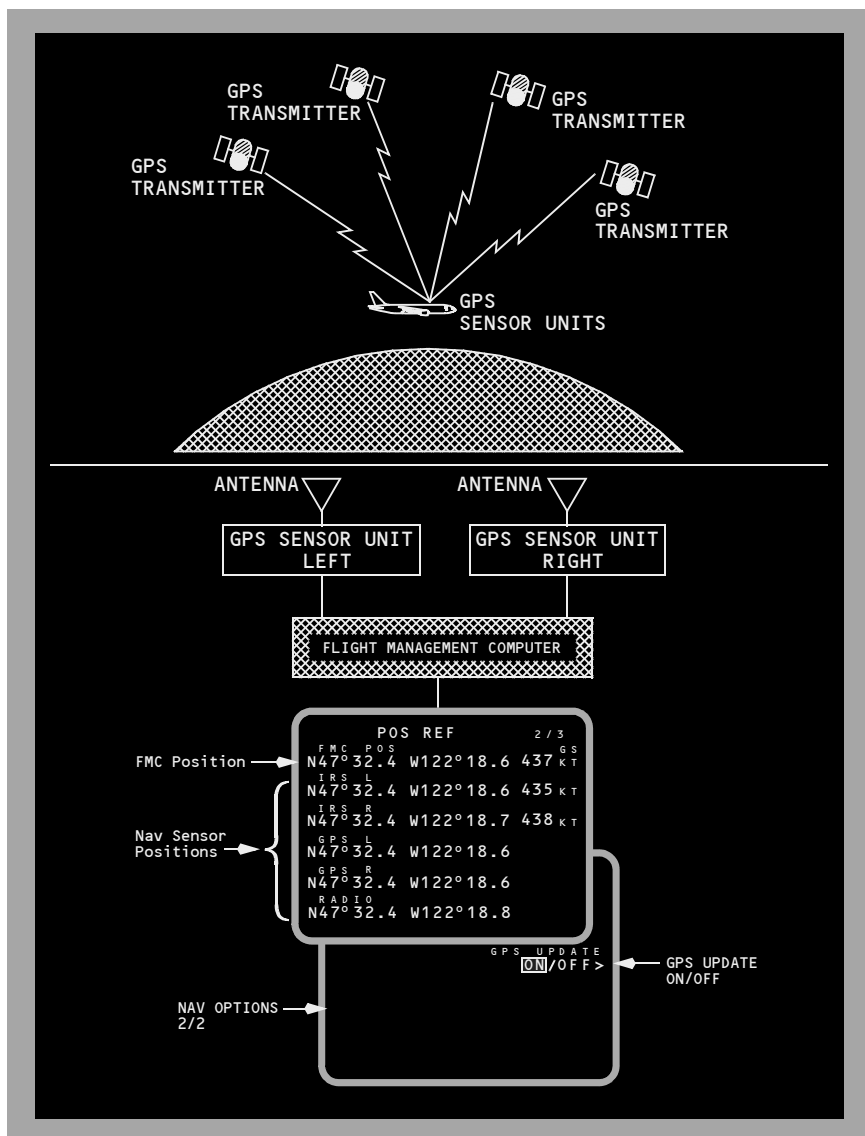

Inertial System

The inertial system computes airplane position, ground speed, and attitude data for the DUs, flight management system, autoflight system, and other systems. The major components of the inertial system are the air data inertial reference units (ADIRU), an inertial system display unit (ISDU), IRS mode select unit (MSU), and an IRS transfer switch. For information about the air data part of the system, see chapter 10. The ADIRUs provide inertial position and track data to the FMC, and attitude, altitude, and airspeed data to the CDS. Each ADIRU has an IRS section and an air data section.

Inertial Reference System

Two independent IRSs are installed. Each IRS has three sets of laser gyros and accelerometers. The IRSs are the airplane's sole source of attitude and heading information, except for the standby attitude indicator and standby magnetic compass.

In their normal navigation mode, the IRSs provide attitude, true and magnetic heading, acceleration, vertical speed, ground speed, track, present position, and wind data to appropriate airplane systems. IRS outputs are independent of external navigation aids.

IRS Alignment

An IRS must be aligned and initialized with airplane present position before it can enter the navigation mode. The present position is normally entered through the FMC CDU. If the present position cannot be entered through the FMC CDU, it may be entered through the ISDU keyboard. The airplane must remain stationary during alignment.

Normal alignment between 78 degrees 15 minutes North or South is initiated by rotating the MSU switch from OFF to NAV. The IRS performs a short power test, during which the ON DC light illuminates. When the ON DC light extinguishes and the ALIGN light illuminates, the alignment process begins. Airplane present position should be entered at this time. Alignment time varies from five minutes to seventeen minutes depending on airplane latitude.

Magnetic variation between 82 degrees north and 82 degrees south is stored in each IRS memory. The data corresponding to the present position are combined with the true heading to determine magnetic heading.

If the latitude/longitude position is not within 4 NM of the origin airport, the CDU scratchpad message VERIFY POSITION is displayed. If the entered latitude/longitude position does not pass the IRS internal comparison tests, the scratchpad message ENTER IRS POSITION is displayed.

The flashing ALIGN light alerts the crew that the position entered does not pass one of the two internal comparison tests and should be checked for accuracy. If the entered position does not agree with the last stored position, the first internal test is failed, and the ALIGN light will flash. If the same position is reentered, the IRS will accept the position and continue the alignment process. A second internal position test compares the entered latitude with the system-computed latitude. If this test is failed, the ALIGN light will again flash. If two consecutive entries of the same position do not pass the second internal position test, the FAULT light will illuminate. If the test is passed, the IRS will proceed to complete the alignment process and enter NAV mode.

During transit or through-flight stops with brief ground times, a thirty second fast realignment and zeroing of ground speed error may be performed by selecting ALIGN while the airplane is parked. Present position should be simultaneously updated by manually entering latitude and longitude prior to selecting NAV.

Note: If the airplane is moved during alignment or fast realignment, the IRS automatically begins the full alignment process.

Loss of Alignment

If an IRS loses both AC and DC power, the alignment is lost. Alignment can be lost if the MSU switch is moved out of the NAV position.

If alignment is lost in-flight, the navigation mode (including present position and ground speed outputs) is inoperative for the remainder of the flight. However, selecting ATT allows the attitude mode to be used to relevel the system and provide an attitude reference. The attitude mode requires approximately thirty seconds of straight and level unaccelerated flight to complete releveing. Some attitude errors may occur during acceleration, but will be slowly removed after acceleration stops.

The attitude mode can also provide heading information, but to establish compass synchronization the crew must manually enter the initial magnetic heading. Drift of up to 15 degrees per hour can occur in the IRS heading. Therefore, when in attitude mode, an operating compass system must be periodically cross-checked and an updated magnetic heading entered in the IRS, as required.

IRS Entries

Manual IRS entries of present position or magnetic heading are normally accomplished on the POS INIT page of the FMC/CDU. The ISDU may also be used.

IRS Power

The IRSs can operate on either AC or DC power. The left IRS is normally powered from the AC standby bus, and the right IRS from the AC transfer bus 2. If AC power is not normal, either or both systems automatically switch to backup DC power from the switched hot battery bus. Backup DC power to the right IRS is automatically terminated if AC power is not restored within five minutes.

Initial power-up requires battery bus power available and the IRS mode selector to be in ALIGN, NAV, or ATT. If the IRS is turned off, it must complete a full realignment cycle before the airplane can be moved.

If AC electrical power is subsequently removed from the airplane, the switched hot battery bus continues to supply electrical power to the IRS. The ON DC light illuminates, and the ground-call horn in the nose wheel well sounds to alert maintenance personnel that the IRS is on battery power.

When the IRS mode selector is turned OFF, the IRS remains powered for approximately 30 seconds. The ALIGN light illuminates until the system is completely shut down.

Inertial System Display Unit (ISDU)

The ISDU is located on the aft overhead panel and displays data according to the position of the display selector and system selector. The ISDU also contains a keyboard for entry of present position and heading.


Mode Select Unit (MSU)

The MSU is located on the aft overhead panel and is used to select the operating mode for each IRS. Indicator lights on the MSU show status of each IRS.

IRS Transfer Switch

Should either IRS fail, the IRS transfer switch is used to switch all associated systems to the functioning IRS.

IRS Instrument Transfer Switch Schematic

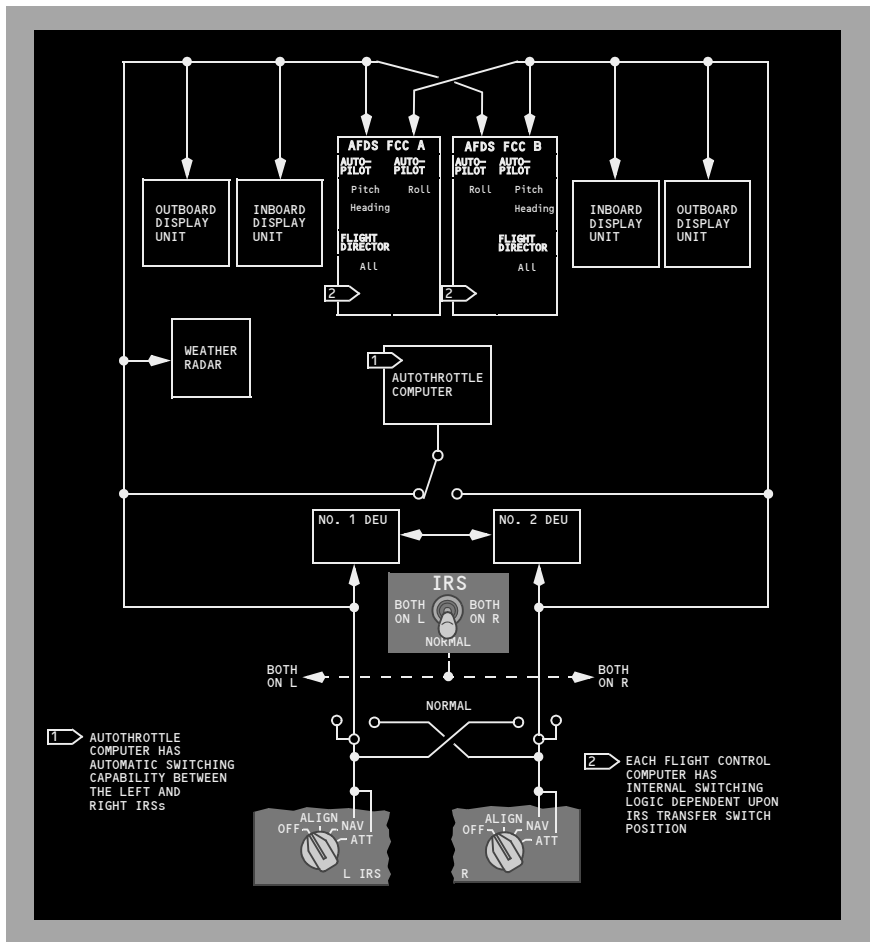

Heading Reference Switch

[Option – Polar Navigation]

The heading reference switch is used to select magnetic or true heading information from the IRS to be supplied to all affected components. The switch is set to NORM when operating outside the polar region and is set to TRUE when operating within the polar region, or in a region requiring true north reference.

The heading reference switch should be set to TRUE prior to the first ADIRU position leaving the region of valid magnetic north referenced data to avoid loss of autopilot functions.

Radio Navigation Systems

Automatic Direction Finding (ADF)

An automatic direction finding (ADF) system enables automatic determination of magnetic and relative bearings to selected facilities.

[Option – With 2 ADF receivers]

Two ADF receivers are installed. The ADF bearing signals are sent to the pointers on the DUs and the standby radio magnetic indicator. The audio is heard by using the ADF receiver control on the audio selector panel.

If heading or track information is lost or invalid, ADF bearing pointers on the DUs will be removed, and ADF bearing pointers on the standby radio magnetic indicator will not display correct magnetic bearing. Relative bearings indicated by pointers may be correct if the receiver is operating.

Distance Measuring Equipment (DME)

Two frequency scanning DME systems are installed.

The FMC autotunes DME receivers as necessary for position updating. During normal operations, two different DME signals or a signal from a collocated VOR/DME pair provide an accurate radio geographical position to the FMC. The identifiers of DMEs currently providing update data to the FMC are displayed on the NAV STATUS page 1/2. The radio position is displayed on the POS REF page 2/3. Specific DME station tuning for FMC position updating can be inhibited on the NAV OPTIONS page 2/2.

The flight crew must manually tune the DME on the VHF navigation control panel and the respective EFIS control panel VOR/ADF switch must be in the VOR position for DME to be displayed on the CDS. DME distance is also displayed on the CDS when the ILS receivers are tuned to a collocated DME and localizer facility.

Instrument Landing System (ILS)

Two ILS receivers are installed.

The ILS receivers are tuned manually on the VHF navigation control panel. The flight crew must manually tune the ILS for display on CDS. The ILS localizer and glideslope can also be displayed on the standby attitude indicator.

LOC updating of the FMC occurs only after the ILS is manually tuned. The tuned ILS frequency is displayed on the navigation display in the APP modes.

Navaid Identifier Decoding

[Option – PFD/ND]

The Morse code identifier of a tuned VOR, ILS, or ADF can be converted to alpha characters. The decoded identifier is then shown on the PFD and ND. The crew should monitor this identifier for correct navigation radio reception. The identifier name is not compared with the FMC database.

Due to the large variation in ground station identifier quality, the decode feature may incorrectly convert the intended identifier name. Examples: the Hong Kong localizer “KL” may show as “KAI,” or the Boeing Field ILS may show as “QBFI” or “TTTT” instead of “IBFI.”

Pilots should verify the identity of the tuned navigation station from the audio Morse code when the tuned frequency remains shown or an incorrect identifier is shown.

Marker Beacon

[Option – PFD/ND]

Marker beacon indications for outer, middle and inner marker are displayed on the upper right hand corner of the attitude display located on the Captain’s and First Officer’s Primary Flight Display (PFD) units.

Very High Frequency Omni Range (VOR)

Two VOR receivers are installed.

The flight crew must manually tune the VOR on the navigation control panel for display on the DUs and the standby radio magnetic indicator. VOR–DME radio updating is available if the crew manually tunes a valid in–range VOR station.

[Option – PFD/ND]

Left and right VOR bearings are displayed on the DUs when a valid in–range VOR station is tuned and the respective EFIS control panel VOR/ADF switch is in the VOR position. The DUs also show course deviation.

VHF NAV Transfer Switch

Should either VOR receiver fail, the VHF NAV transfer switch enables selection of the opposite VHF NAV receiver for display.

ATC Transponder

Two ATC transponders are installed and controlled by a single control panel. The ATC transponder system transmits a coded radio signal when interrogated by ATC ground radar. Altitude reporting capability is provided.

Transmissions are automatically enabled when the air/ground system indicates air mode.

TCAS is also controlled from the transponder panel. The TCAS system is described in Chapter 15.

Transponders may also transmit information, such as flight number, airspeed or groundspeed, magnetic heading, altitude, GPS position, etc., depending on the level of enhancement. Airport equipment monitors airplane position on the ground when the transponder is active (mode selector not in STANDBY or OFF). TCAS modes should not be used on the ground for ground tracking.

Weather Radar

The weather radar system detects and locates various types of precipitation bearing clouds along the flight path of the airplane and gives the pilot a visual indication in color of the clouds' intensity. The radar antenna sweeps a forward arc of 180 degrees.

The radar indicates a cloud's rainfall intensity by displaying colors contrasted against a black background. Areas of heaviest rainfall appear in red, the next level of rainfall in yellow, and the least rainfall in green.

In map mode, the radar displays surfaces in red, yellow, and green (most reflective to least reflective).

These displays enable identification of coastlines, hilly or mountainous regions, cities, or large structures. Ground mapping mode can be useful in areas where ground-based navigation aids are limited.

The radar system performs only the functions of weather detection and ground mapping. It should not be used or relied upon for proximity warning or anticollision protection.

The turbulence mode displays normal precipitation and precipitation associated with turbulence. When the radar detects a horizontal flow of precipitation with velocities of 5 or more meters per second toward or away from the radar antenna, that target display becomes magenta. This magenta area is associated with heavy turbulence. The detection of turbulence is automatically limited to a 40 nautical mile range, regardless of the selected range.

[Option – Weather radar with IDNT]

The IDNT position activates the ground clutter reduction feature. Signals that are determined to have a high probability of originating from ground returns will be automatically removed from the display. Some portions of weather targets may be removed as well. The IDNT position is provided for analysis by the pilot and is not for continuous use.

[Option – With predictive windshear]

The weather radar also provides predictive windshear alerting below 1,200 feet RA. On the ground or in flight below 2,300 feet RA, radar antenna scan sweep is limited to 120 degrees with PWS enabled. Above 2,300 feet RA the radar sweep reverts to 180 degrees. (Refer to Chapter 15, Warnings.)

Intentionally
Blank

Flight Management, Navigation
Flight Management System Description**Chapter 11**
Section 30

Introduction

The flight management system (FMS) aids the flight crew in managing automatic navigation, in-flight performance optimization, fuel monitoring, and flight deck displays. Automatic flight functions manage the airplane lateral flight path (LNAV) and vertical flight path (VNAV). The displays include a map for airplane orientation and command markers (bugs) on the airspeed and N1 indicators to assist in flying efficient profiles.

The flight crew enters the desired route and flight data into the CDUs. The FMS then uses its navigation database, airplane position and supporting system data to calculate commands for manual or automatic flight path control.

The FMS can automatically tune the navigation radios and determine LNAV courses. The FMS navigation database provides the necessary data to fly routes, SIDs, STARs, holding patterns, and procedure turns. Lateral offsets from the programmed route can be calculated and commanded.

For vertical navigation, computations include items such as fuel burn data, optimum speeds, and recommended altitudes. Cruise altitudes and crossing altitude restrictions are used to compute VNAV commands. When operating in the Required Time of Arrival (RTA) mode, the computations include required speeds, takeoff times, and enroute progress information.

Flight Management Computer (FMC)

The basis of the flight management system is the flight management computer. Since the term FMC is universally understood, it is used here for standardization and simplification.

The FMC uses flight crew-entered flight plan information, airplane systems data, and data from the FMC navigation database to calculate airplane present position, and pitch, roll, and thrust commands required to fly an optimum flight profile. The FMC sends these commands to the autothrottle, autopilot, and flight director. Map and route information are sent to DUs. The EFIS control panels are used to select the desired information for the navigation displays. The mode control panel is used to select the autothrottle, autopilot, and flight director operating modes. Refer to the following chapters for operation of these other systems:

- Chapter 4, Automatic Flight
- Chapter 10, Flight Instruments, Displays.

The FMC and CDU are used for enroute and terminal area navigation, RNAV approaches and to supplement primary navigation means when conducting all types of instrument approaches.

[Option – Dual FMC]

The dual FMC installation is certified as a “sole source” navigation system. Airplanes equipped with two FMCs are certified to operate outside radio navaid coverage. The second FMC serves as a backup, providing complete navigational functions if the other FMC fails.

[Option – Dual FMC]

With a dual FMC installation, one FMC is always designated as primary. This is controlled by the position of the FMC Source Select switch. Refer to Chapter 11, FMC Source Select Switch.

[Option – Dual FMC]

The primary FMC:

- allocates navaid tuning and updating functions between FMCs
- insures synchronization between FMCs
- controls CDU displays
- provides input to the autopilot
- provides input to the autothrottle system
- processes ACARS (data link) messages.

[Option – Dual FMC]

Positioning the FMC Source Select Switch to BOTH ON L or BOTH ON R isolates FMC operation to use only the left or right FMC respectively. In the NORMAL position, the left FMC is primary by default. Although the aircrew can enter information into either CDU, the primary FMC is responsible for synchronizing this information with the secondary FMC and updating both CDU displays.

[Option – With alternate navigation system]

Airplanes which are equipped with Alternate Navigation System (ANS) are certified for operations outside radio navaid coverage, due to the independent position monitoring capability afforded by the ANCDU and the capability to navigate using the GPS positions if the FMC position should become unreliable. The ANCDU provides enroute lateral navigation capability only.

When external position updating is not available, the FMC uses the IRS position as reference. When the IRS is the only position reference, the FMC applies an automatic correction to the IRS position to determine the most probable FMC position. This correction factor is developed by the FMC's monitoring IRS performance during periods of normal position updating to determine the typical IRS error value. It is important to note that, when external position updating is not available, navigation accuracy may be less than required. Flight crews should closely monitor FMC navigation, especially when approaching the destination. The accuracy of the FMC navigation should be determined during descent phase by using radio navaids and radar information if available.

Note: Inaccurate position updating may cause the airplane to deviate from the desired track.

Control Display Units (CDUs)

Two identical, independent CDUs provide the means for the flight crew to communicate with the FMC. The crew may enter data into the FMC using either CDU, although simultaneous entries should be avoided. The same FMC data and computations are available on both CDUs; however, each pilot has control over what is displayed on an individual CDU.

[Option – ANCDU]

Each CDU also has an alternate mode of operation using its own internal computer. The ANCDU provides enroute lateral navigation capability only. ANCDU is always based on GPS position only.

Intentionally
Blank

Flight Management, Navigation Flight Management System Operation

Chapter 11 Section 31

Introduction

When first powered, the FMS is in the preflight phase. As a phase is completed, the FMS automatically transitions to the next phase in this order:

- preflight
- takeoff
- climb
- cruise
- descent
- approach
- flight complete.

Preflight

During preflight, flight plan and load sheet information are entered into the CDU. The flight plan defines the route of flight from the origin to the destination and initializes LNAV. Flight plan and load sheet information provide performance information to initialize VNAV.

Required preflight information consists of:

- initial position
- route of flight
- performance data
- takeoff data.

Optional preflight data includes:

- navigation database
- SID
- STAR
- RTA data
- cruise wind
- reduced takeoff and climb thrust limits.

Each required or optional data item is entered on specific preRNPflight pages.

Preflight begins with the IDENT page. If the IDENT page is not displayed, it can be selected from the IDENT prompt on the INIT/REF INDEX page. Visual prompts provide assistance in selecting the appropriate CDU pages. Preflight pages can be manually selected in any order.

After entering and checking the necessary data on each preflight page, the lower right line select key is pushed to select the next page. When ACTIVATE is selected on the RTE page, the execute light illuminates. The EXEC key is then pushed to complete the task of making the route active before continuing with the preflight.

If a standard instrument departure (SID) is to be entered into the route, the departure/arrival (DEP/ARR) page is selected. After selecting the desired SID, the resulting modification must be appropriately linked to the existing route and executed. This can be accomplished on the RTE or RTE LEGS page.

When all required preflight entries are complete, the preflight status prompts on the TAKEOFF REF page are no longer displayed.

Takeoff

The takeoff phase begins with selection of TO/GA and extends to the thrust reduction altitude where climb thrust is normally selected.

Climb

The climb phase begins at the thrust reduction altitude and extends to the top of climb (T/C) point. The T/C point is where the airplane reaches the cruise altitude entered on the PERF INIT page.

Cruise

The cruise phase begins at the T/C point and extends to the top of descent (T/D) point. Cruise can include step climbs and en route descents.

Descent

The descent phase begins at the T/D point or when either a level change or vertical speed descent is initiated. The descent phase extends to the beginning of the approach phase.

Approach

The approach phase begins two miles from the first waypoint of a published approach or approach transition selected from the ARRIVALS page.

Flight Complete

After landing, the flight complete phase clears the active flight plan and load data. Some preflight data fields initialize to default values in preparation for the next flight.

FMC and CDU Terminology

The following paragraphs describe FMC and CDU terminology.

Active – flight plan information currently being used to calculate LNAV or VNAV guidance commands.

Activate – designating an entered route as the active route for navigation. It is a two step process:

- push the ACTIVATE prompt
- push the execute (EXEC) key.

Altitude restriction – a crossing restriction at a waypoint.

Delete – remove FMC data and revert to default values, dash or box prompts, or a blank entry using the DELETE key.

Econ – a speed schedule calculated to minimize operating cost. The economy speed is based on the flight crew CDU–entered cost index. A low cost index reflects high fuel costs and results in a lower cruise speed.

Enter – placing an entry into the CDU scratchpad and then line selecting the information to the desired location. New characters can be typed, or existing data can be line selected into the scratchpad.

Erase – removing flight crew–entered information, which has resulted in a modification, by pushing the ERASE prompt.

Execute – making modified information part of the active flight plan by pushing the EXEC key.

Inactive – route, climb, cruise, or descent information not currently being used to calculate LNAV or VNAV commands.

Initialize – entering information required to make the system operational.

Message – information the FMC automatically writes in the scratchpad to inform the flight crew of a system condition.

Modify – active data that is changed but not yet executed. When a modification is made to the active route or performance mode, MOD is displayed in the page title, ERASE appears next to line select key 6 left, and the execute key illuminates.

Prompt – CDU displays that aid the flight crew in accomplishing a task. Prompts can be boxes, dashes, or a caret (< or >) line to remind the flight crew to enter or validate information.


Select – pushing a key to obtain the desired information or action, or to copy selected data to the scratchpad.

Speed restriction – an airspeed limit associated with a specified altitude or waypoint.

Waypoint – a point on the route. It can be a fixed point such as a latitude and longitude, VOR or ADF station, airway intersection, or a non–fixed point such as a conditional waypoint. A conditional waypoint is not necessarily associated with a land reference; it reflects a time position, or altitude requirement. An example of a conditional waypoint is “when reaching 1000 feet.”

Maintenance Index Page

The MAINT BITE INDEX page is available only on the ground and provides access to data for use by maintenance personnel.

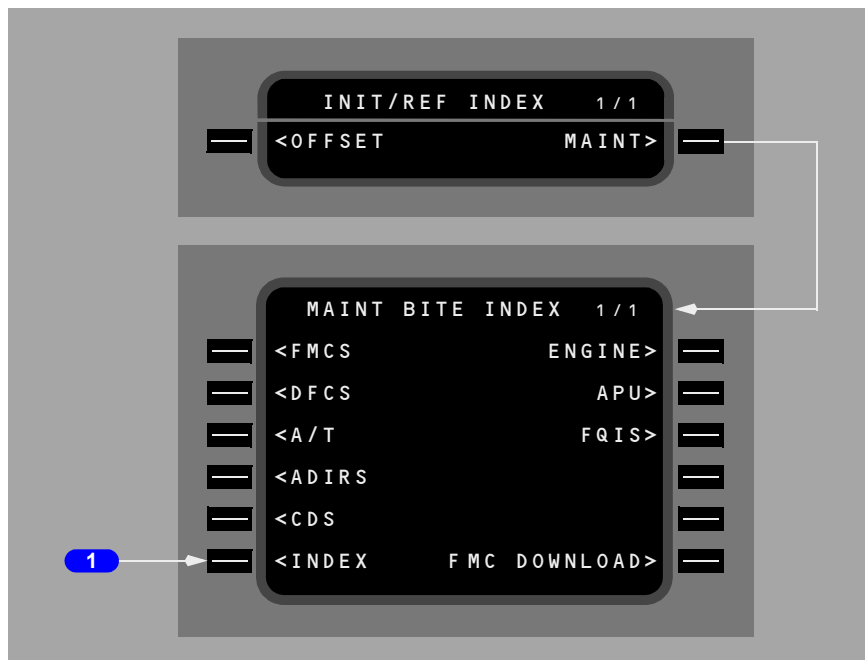

1 INDEX

Push – displays the INIT/REF INDEX page.

Navigation Position

[Option – With GPS]

The FMC determines present position from the IRS, GPS, and navigation radios. The FMC uses its calculated present position to generate lateral steering commands along the active leg to the active waypoint.

[Option – Dual FMC with GPS]

When the FMC Source Select Switch is positioned to NORMAL, the left FMC becomes primary, however, data from both FMCs is combined to determine a composite position and velocity for guidance and map displays.

FMC Position Update

[Option – With GPS]

On the ground, the FMC calculates present position based on GPS data. If GPS data is not available, the FMC calculates present position based on IRS data.

[Option – FMC U10.2 and later]

If GPS UPDATE is OFF, the FMC updates position to the takeoff runway threshold when a TO/GA switch is pushed. When making an intersection takeoff, the intersection data must be entered on the TAKEOFF REF page. If GPS UPDATE is ON, the TO/GA update is inhibited. GPS UPDATE is on the NAV OPTIONS page.

[Option – With GPS]

In flight, the FMC position is continually updated from the GPS, navigation radios, and IRS. Updating priority is based on the availability of valid data from the supporting systems.

FMC position updates from navigation sensor positions are used in the following priority order:

- GPS
- two or more DME stations
- one VOR with a collocated DME
- one localizer and collocated DME
- one localizer.

The station identifiers and frequencies of the selected radio navigation aids are displayed on the NAV STATUS page 1/2.

FMC logic selects the GPS position as the primary update to the FMC position. If all GPS data becomes unavailable, the FMC reverts to radio or IRS updating.

The dual frequency–scanning DME radios are automatically tuned by the FMC. The stations to be tuned are selected based upon the best available signals (in terms of geometry and strength) for updating the FMC position, unless a specific station is required by the flight plan. Radio position is determined by the intersection of two DME arcs.

If the DME radios fail, or if suitable DME stations are not available, FMC navigation is based on IRS position information only. The two VHF Nav radios are used by the FMC for localizer updating during an ILS approach and by the crew for navigation monitoring.

Note: The FMC is designed to automatically reject unreliable navaid data during FMC position updating. However, in certain conditions, navaids which are in error may satisfy the reasonableness criteria and provide the FMC with an inaccurate radio position. One of the most vulnerable times is when a radio position update occurs just after takeoff. This is usually manifested in an abrupt heading correction after engaging LNAV. The position shift can be seen on the map which will shift the desired track and runway symbol to a position significantly different from that displayed during ground roll.

[Option – FMC U10.3 and later]

Note: If the flight crew observes either of these indications, the FMC should be carefully monitored.

When adequate radio updating is not available, navigation display map mode may display a shift error. This error results in the displayed position of the airplane, route, waypoints, and navigation aids shifted from their actual positions.

An across track, undetected map shift may result in the airplane flying a ground track that is offset from the desired track. An along track, undetected map shift may result in the flight crew initiating altitude changes earlier or later than desired. In either case, an undetected map shift may compromise terrain or traffic separation.

Map shift errors can be detected by comparing the position of the airplane on the navigation display map mode with data from the ILS, VOR, DME, and ADF systems.

Navigation Performance

The FMC uses data from the navigation systems to accurately calculate the position of the airplane. The current FMC position is shown on line 1 of the POS REF page 2/3.

[Option – With GPS]

The FMC position is derived from a mathematical combination of the positions determined by the IRS, radio, and GPS systems. It represents the FMC's estimate of the actual position of the airplane. Its accuracy varies according to the accuracy of the other position determining systems.



[Option – FMC U10.4 and later]

Note: If the GPS position update is excessive, GPS updating is suspended until the GPS position can be determined to be reasonable.

Actual Navigation Performance (ANP)

Actual navigation performance (ANP) is the FMC's estimate of the quality of its position determination. It is shown on POS SHIFT page 3/3 and on RTE LEGS pages. ANP represents the estimated maximum position error with 95% probability. That is, the FMC is 95% certain that the airplane's actual position lies within a circle with a radius of the ANP value around the FMC position. The lower the ANP value, the more confident the FMC is of its position estimate.

[Option – Dual FMC with GPS]

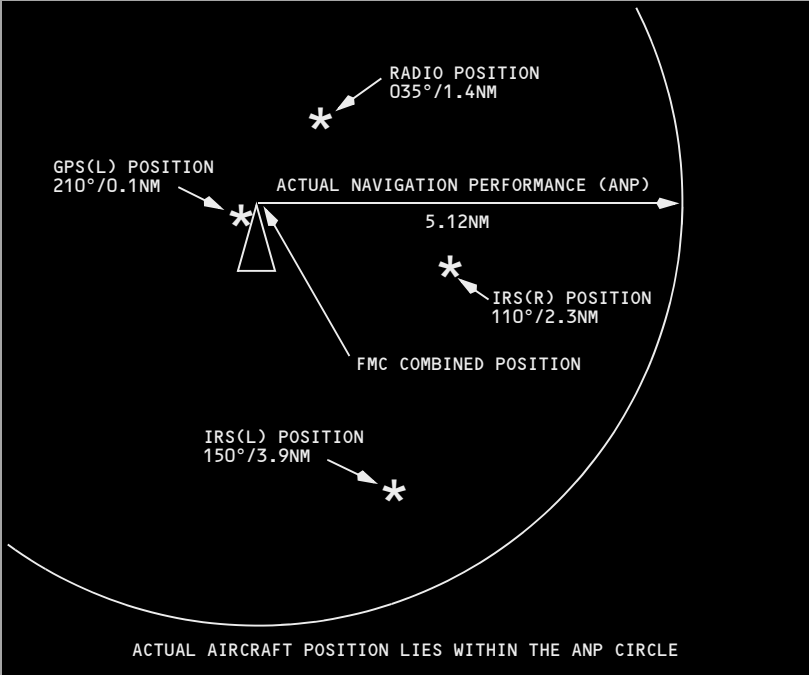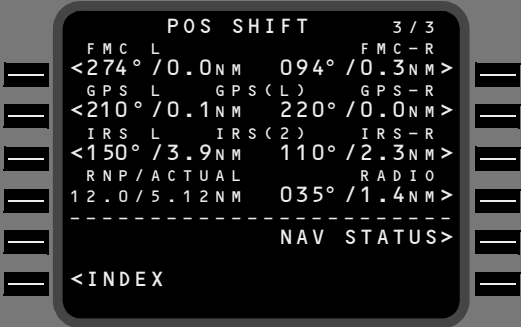

Vertical Actual Navigation Performance (VANP)

[Option – FMC U10.5 and later with NPS enabled]

Vertical Actual Navigation Performance (VANP) is the FMC's estimate of the quality of its altitude determination. It is shown on RNP PROGRESS page 4/4. VANP represents the estimated maximum altitude error with 99.7% probability. That is, the FMC is 99.7% certain that the airplane's actual altitude lies within a vertical band equal to plus or minus the ANP value. The lower the VANP value, the more confident the FMC is of its altitude estimate.

Note: VANP is calculated from the baro-corrected altitude provided by the Air Data System. The pilot must set the baro setting reported by ATIS or provided in the approach clearance for the 99.7% confidence level to be valid.

Required Navigation Performance (RNP)

The FMC supplies a default required navigation performance (RNP) value for oceanic, en route, terminal, and approach environments. RNP can also be supplied by the Navigation Database or may be entered by the crew. Actual navigation performance (ANP) should not exceed RNP.

Environment	Default RNP	Time to Alert
Oceanic	12.0 NM	80 sec. [Option – FMC U10.7] 60 sec.
En route	2.0 NM	80 sec. [Option – FMC U10.7] 30 sec.
Terminal	1.0 NM	60 sec. [Option – FMC U10.7] 10 sec.
Approach	[Option] 0.3 NM	10 sec.

[Option – FMC U10.5 and later]

If ANP exceeds the displayed RNP value, the UNABLE REQD NAV PERF–RNP message will be displayed on the CDU scratchpad after the designated time to alert has elapsed. When in the approach environment an additional amber UNABLE REQD NAV PERF–RNP will be displayed on the MAP. The amber FMC lights located on the forward instrument panel will also illuminate with the annunciation of this message. RNP is shown on the POS SHIFT, RNP PROGRESS 4/4 and the RTE LEGS pages.


[Option – FMC U10.7 and later]

If ANP exceeds the displayed RNP value, the UNABLE REQD NAV PERF–RNP message will be displayed on the CDU scratchpad after the designated time to alert has elapsed. An additional amber UNABLE REQD NAV PERF–RNP will be displayed on the MAP. The amber FMC lights located on the forward instrument panel will also illuminate with the annunciation of this message. RNP is shown on the POS SHIFT, RNP PROGRESS 4/4 and the RTE LEGS pages.

Vertical Required Navigation Performance (VRNP)

[Option – FMC U10.5 and later with NPS enabled]

The FMC uses 400 feet as a default Vertical Required Navigation Performance (VRNP) value for oceanic, en route, and terminal phases of flight.

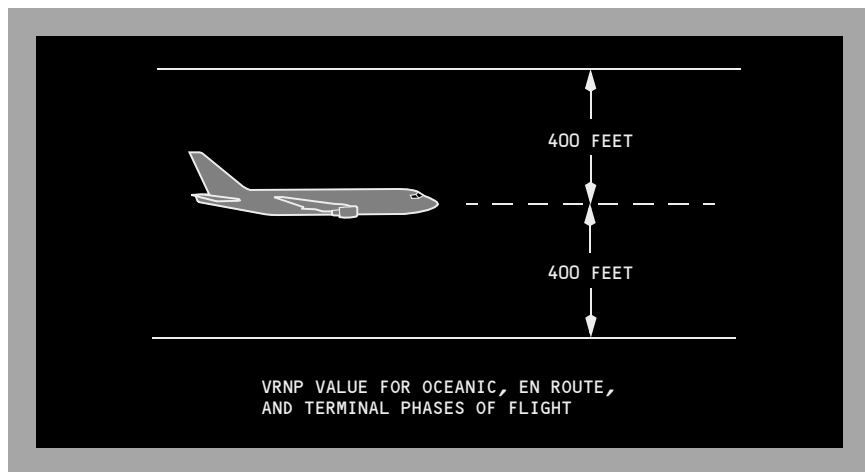

When required, VRNP values may be manually entered or displayed on RNP PROGRESS page 4/4. The FMC will accept manual entry of a VRNP value greater than the default value, but the VERIFY VERT RNP VALUE advisory message will be displayed in the scratchpad. Manual entries are cleared at flight completion.

FMC Polar Operations

[Option]

The FMC automatically begins polar operations when the computed airplane position enters a polar region as depicted by the shaded area in the FMC Polar Regions figure. The FMC provides all inputs to the flight displays referenced to true north while in these regions.

Entry into a polar region and automatic switching to a true north reference are annunciated by a flashing white box around the word TRU on the navigation display. Transition back to magnetic reference is annunciated by the presence of a green box around the letter M on the navigation display. If a descent is accomplished with the heading reference in TRU, an amber box is displayed around TRU.


A true heading reference can be selected with the heading reference switch inside or outside the polar region. The switch should be set to TRUE, however, prior to the first IRU position leaving the region of valid magnetic north referenced data to avoid loss of flight control computer functions.

For a fix at the North or South Pole, the FMC treats radial/course entries between 0 and 179 as E000 to E179 longitude. Similarly, radial/course entries between 180 and 360 are treated as W180 to W000. The FMC treats any waypoint within 300 feet of the pole as being at the pole.

Note: HDG SEL and ROLL CWS should not be used north of N89°30' or south of S89°30'.

Note: When operating in the polar region at latitudes greater than 82°, with the plan mode displayed, the airplane position symbol is displayed as a circle symbol.

FMC Polar Regions

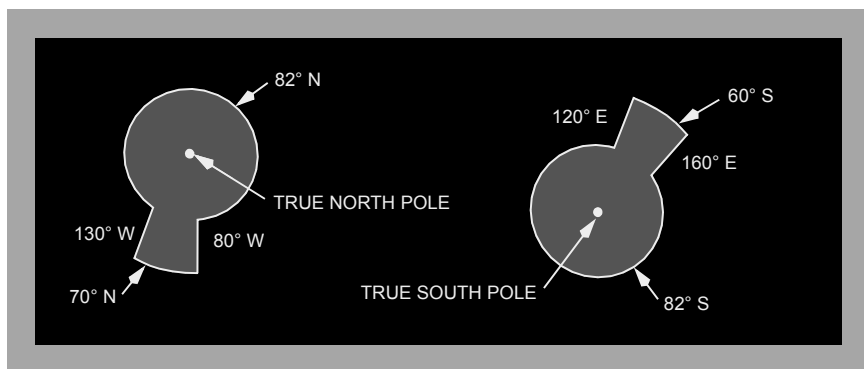

Lateral Navigation (LNAV)

LNAV provides steering commands to the next waypoint. If selected, LNAV engages when laterally within 3 nautical miles of the active route leg. If outside of 3 nautical miles of the active route leg, LNAV engages if on an intercept heading of 90 degrees or less and the intercept will occur before the active waypoint. FMC LNAV guidance normally provides great circle courses between waypoints. However, when an arrival or approach from the FMC database is entered into the active route, the FMC can supply commands to fly a constant heading, track, or follow an arc, as required by the procedure.

Waypoints

Waypoint (navigation fix) identifiers are displayed on the CDU and navigation display.

The CDU message NOT IN DATA BASE is displayed if a manually entered waypoint identifier is not stored in the database. The waypoint can still be entered as a latitude/longitude, place–bearing/distance or place–bearing/place–bearing waypoint.

FMC–generated waypoints contain a maximum of five characters assigned according to the following rules.

Navaid Waypoint Names

VHF – waypoints located at VHF nav aids (VOR/DME/LOC) are identified by the official one, two, three or four character facility identifier. Examples:

- Los Angeles VORTAC – LAX
- Tyndall TACAN – PAM
- Riga, Latvia – RIX.

NDB – waypoints located at NDBs are identified by use of the station identifier. Example:

- Fort Nelson, CAN – YE.

Fix Waypoint Names

Fixes with one–word names – waypoints located at fixes with names containing five or fewer characters are identified by the name. Examples:

- DOT
- ACRA
- ALPHA.

Long Waypoint Names

Names with more than five characters are abbreviated using the following rules sequentially until five characters remain. Double letters are deleted. Examples:

- KIMMEL becomes KIMEL
- COTTON becomes COTON
- RABBITT becomes RABIT.

Keep the first letter, first vowel and last letter. Delete other vowels starting from right to left. Examples:

- ADOLPH becomes ADLPH
- BAILEY becomes BAILY
- BURWELL becomes BURWL.

Keep the last letter, then delete consonants from right to left. Examples:

- ANDREWS becomes ANDRS
- BRIDGEPORT becomes BRIDT
- HORSBA becomes HORS.

Fixes with multiword names use the first letter of the first word and abbreviate the last word, using the above rules sequentially until a total of five characters remain. Examples:

- CLEAR LAKE becomes CLAKE
- ROUGH ROAD becomes RROAD.

Unnamed Point Waypoint Names

Unnamed turn points, intersections and DME fixes – if an unnamed turn point, intersection or fix is collocated with a named waypoint or navaid on a different route structure (such as low altitude routes or an approach), the name or identifier of the collocated waypoint is used. Example:

- Unnamed turn point on J2 between the Lake Charles (LCH) and New Orleans (MSY) VORTACs is coincidental with the Lafayette (LFT) low altitude VORTAC. LFT is used as the identifier for the turn point.

Identifier codes for unnamed turn points not coincidental with named waypoints are constructed from the identifier of a navaid serving the point and the distance from the navaid to the point. If the distance is 99 nautical miles or less, the navaid identifier is placed first, followed by the distance. If the distance is 100 nautical miles or more, the last two digits are used and placed ahead of the navaid identifier. Examples (NAVAID – DISTANCE – IDENT):

- INW – 18 – INW18
- CSN – 106 – 06CSN
- TCS – 89 – TCS89.

Unnamed flight information region (FIR), upper flight information region (UIR), and controlled airspace reporting points – waypoints located at unnamed FIR, UIR, and controlled airspace reporting points are identified by the three-letter airspace type identification followed by a two-digit sequence number.

Unnamed oceanic control area reporting points – positions in the northern hemisphere use the letters N and E, while positions in the southern hemisphere use the letters S and W. Latitude always precedes longitude. For longitude, only the last two digits of the three digit value are used.

Placement of the designator in the five character set indicates whether the first longitude digit is 0 or 1. The letter is the last character if the longitude is less than 100° and is the third character if the longitude is 100° or greater.

N is used for north latitude, west longitude. E is used for north latitude, east longitude. S is used for south latitude, east longitude. W is used for south latitude, west longitude. Examples:

- N50° W040° becomes 5040N
- N75° W170° becomes 75N70
- N50° E020° becomes 5020E
- N06° E110° becomes 06E10
- S52° W075° becomes 5275W
- S07° W120° becomes 07W20
- S50° E020° becomes 5020S
- S06° E110° becomes 06S10.

Procedure Arc Fix Waypoint Names

Unnamed terminal area fixes along a DME arc procedure – unnamed fixes along a DME arc procedure are identified with the first character D. Characters 2 through 4 indicate the radial on which the fix lies. The last character indicates the arc radius. The radius is expressed by a letter of the alphabet where A = 1 mile, B = 2 miles, C = 3 miles, and so forth. Examples:

- EPH252°/24 = D252X
- EPH145°/24 = D145X
- GEG006°/20 = D006T.

An unnamed waypoint along a DME arc with a radius greater than 26 miles is identified as an unnamed turn point that is not coincidental with a named waypoint. Examples:

- CPR338°/29 = CPR29
- GEG079°/30 = GEG30.

When there are multiple unnamed waypoints along a DME arc with a radius greater than 26 miles, the station identifier is reduced to two characters, followed by the radius, and then a sequence character. Examples:

- CPR134°/29 = CP29A
- CPR190° /29 = CP29B
- CPR201°/29 = CP29C.

Procedure Fix Waypoint Names

Marker beacons – a marker beacon is identified by the marker type identifier followed by the runway number. Examples:

- Outer Marker 13R = OM13R
- Middle Marker 21 = MM21.

Runway-related fixes – waypoints located at unnamed runway-related fixes are identified by adding a two-letter prefix to the runway number. The following list is used to determine the appropriate prefix:

- | | |
|----------------------------------|--|
| • RX – runway extension fix | • BM – back course marker |
| • FA – VFR final approach fix | • MD – minimum descent altitude |
| • CF – final approach course fix | • A – (+ an alpha) step down fix |
| • FF – final approach fix | • RW – runway threshold |
| • IF – initial approach fix | • MA – missed approach point other than RW |
| • OM – outer marker | • TD – touchdown point inboard of RW. |
| • MM – middle marker | |
| • IM – inner marker | |

Examples: OM25L, MM09, IM23, RW04, RW18L.

For airports with more than one approach to the same runway, the two letter prefix may change to allow different identifiers for the same waypoint. The first letter identifies the type of fix and the second letter identifies the type approach as follows:

- | | |
|---------------------------------------|---|
| • C() – final approach course fix | • ()L – localizer only()B –backcourse ILS |
| • F() – final approach fix | • ()D – VOR/DME |
| • P() – missed approach point | • ()V – VOR only |
| • I() – initial approach fix | • ()S – VOR with DME points |
| • D() – minimum descent altitude | • ()N – NDB |
| • T() – touch down point | • ()Q – NDB with DME points |
| • R() – runway centerline intercept. | • ()M – MLS |
| • ()I – ILS | • ()T – Tacan |
| | • ()R – RNAV. |

Examples: CI32R, PV15, FN24L.

Unnamed turn points – unnamed turn points that are part of a procedure are identified as a latitude and longitude waypoint. These include waypoints (except conditional waypoints) defined by flying a course or track from a waypoint (except conditional waypoints) to a radial or DME distance. These waypoints are automatically entered in a route by selection of a procedure using these waypoints, from the departures or arrivals page.

Airport reference points – airport reference points are identified by the ICAO identifier.

Duplicate Waypoint Names

Duplicate identifiers – should application of these rules result in more than one waypoint having the same identifier, then a CDU page change occurs when an attempt is made to enter the duplicated identifier.

[Option – FMC U10.6 and later]

The page title is SELECT DESIRED XXX, where XXX is the three letter identifier of the waypoint in question.

The page lists the latitude and longitude of waypoints with the same identifier and the type of facility or waypoint. Selecting the latitude/longitude of the desired waypoint enters the correct waypoint on the original page. See chapter 11, section 42, “Select Desired Waypoint Page” for additional information.


When a waypoint identifier is listed in the route more than once, certain route modifications (such as DIRECT TO or HOLD) use the first occurrence of the waypoint even if the second occurrence is selected. If a new waypoint entry is attempted that has the same identifier as a waypoint already in the route, the select desired waypoint page will not be displayed and the first waypoint will be used. To use the second occurrence waypoint, the first occurrence waypoint must be deleted from the route.

Conditional Waypoint Names

Conditional waypoints are automatically entered into a route as a result of selecting a procedure on a DEPARTURES or ARRIVALS page. Normally, conditional waypoints cannot be manually entered on a route or legs page. These waypoints are events when a condition occurs and are not at a geographically-fixed position. The types of conditions are:

- passing through an altitude
- flying a heading to a radial or DME distance
- intercepting a course
- heading vector to a course or fix.

Altitude and course intercept conditional waypoints are displayed on the CDU inside (parentheses) marks. The following diagram depicts conditional waypoints.

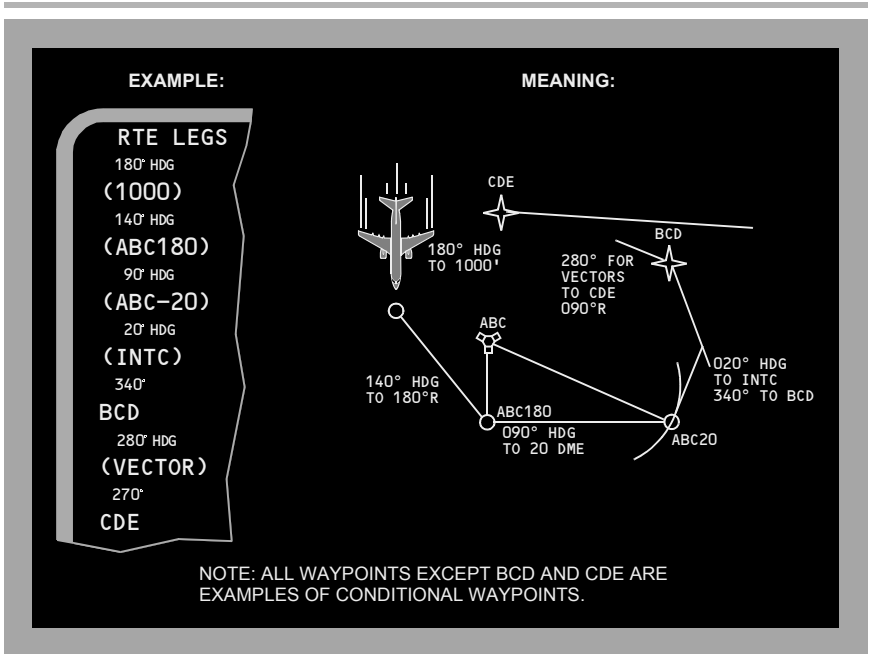

Note: When (VECTOR) is the active leg and LNAV is not engaged, the FMC automatically sequence to the next waypoint when within 3 nm of the next leg. If (VECTOR) is the active waypoint and LNAV is engaged, the FMC does not automatically sequence to the next waypoint. The next waypoint becomes active only upon EXECution of the procedures for Proceeding Direct To a Waypoint or Intercepting a Leg to a Waypoint.

Manually Entered Latitude/ Longitude Waypoint Names

Pilot defined waypoints entered as a latitude and longitude are displayed in a five-character format. The first three characters are WPT followed by a two digit sequence number. Latitude and longitude waypoints are entered with no space or slash between the latitude and longitude entries. Leading zeroes must be entered. All digits and decimal points (to 1/10 minute) must be entered unless the latitude or longitude are full degrees. Examples:

- N47° W008° is entered as N47W008 and displayed as WPT01
- N47° 15.4' W008° 3.4' is entered as N4715.4W00803.4 and displayed as WPT02.

Manually Entered Place–Bearing/Distance or Place–Bearing/Place–Bearing Waypoint Names

Waypoints entered as a place–bearing/distance or place–bearing/place–bearing are identified by the first three characters of the entry followed by a two–digit sequence number. Examples:

- SEA330/10 becomes SEA01
- SEA330/OLM020 becomes SEA02.

Manually Entered Along–Track Waypoint Names

Along–track waypoints are a special case of place–bearing/distance waypoints applied to the current route. When a waypoint is desired on the route where none exists, the along–track waypoint feature creates the desired waypoint without creating a route discontinuity.

Along–track waypoints are entered using the waypoint name (the place), followed by a slash and minus sign, for points before the waypoint, or no sign for points after the waypoint, followed by the mileage offset for the newly defined waypoint. The route course takes the place of the bearing which is not entered. The created waypoint is then inserted over the original waypoint. The distance offset must be less than the distance between the originating waypoint and next (positive value) or preceding (negative value) waypoint. Latitude and longitude waypoints cannot be used to create along–track waypoints. Examples:

- VAMPS/25 is 25 miles after VAMPS on the present route, and is displayed as VAM01
- ELN/–30 is 30 miles before ELN on the present route, and is displayed as ELN01.

Greater Than 99 Numbered Waypoints

[Option – FMC U10.6 and later]

When the quantity of numbered waypoints exceeds 99 the identifier shall use the first two characters of the entry followed by the smallest three-digit sequence number beginning with 100. Examples:

- SEA104/74 becomes SE100
- SEA104/OLM064 becomes SE101.

Navigation Displays

The route is displayed on the navigation display in the map, map center, and plan modes. The display color and format represent the following status:

- an inactive route is displayed as a cyan dashed line
- an activated but not yet executed route is displayed as a cyan dashed line
- the active route is displayed in magenta

- modifications to an active route are displayed as dashed white lines
 - modified waypoints are displayed in white
 - executed route offsets are displayed as a dot and dash magenta line.
-

Vertical Navigation (VNAV)

VNAV provides vertical profile guidance through the climb, cruise, and descent phases of flight.

Speed/Altitude Restrictions

VNAV controls the path and speed to comply with waypoint crossing restrictions. Waypoint crossing restrictions are entered on the LEGS page waypoint line by pushing the applicable key on the right side of the CDU. Barometric altitude restrictions must be below the cruise altitude to be valid. Values entered as part of a procedure and manually entered restrictions are shown in large font. FMC predicted values do not act as restrictions, and are shown in small font.

[Option – With color]

A waypoint restriction is magenta when it is active. The restriction does not have to be in line 1 to be active.

[Option – With color]

Modified waypoint restrictions are shaded white until they are executed.

All speed restrictions are considered by the FMC as “at or below” restrictions.

[Option – U10.7 and later]

All speed restrictions are considered by the FMC as “at” restrictions, unless modified by the pilot.

[Option – U10.7 and later]

When modified by the pilot:

- “At or above” airspeed restrictions are entered with a suffix letter A (example: 250A/).
- “At or below” airspeed restrictions are entered with a suffix letter B (example: 200B/).
- Mandatory airspeed restrictions are entered without any suffix letter (example: 220/).


At or above altitude restrictions are entered with a suffix letter A (example: 220A).

At or below altitude restrictions are entered with a suffix letter B (example: 240B).

Mandatory altitude restrictions are entered without any suffix letter (example: 270).

Altitude restrictions that are between two altitudes are displayed with the lower limit first, followed by a suffix letter A, then the upper limit, followed by a suffix letter B (example: 220A240B).

Takeoff and Climb

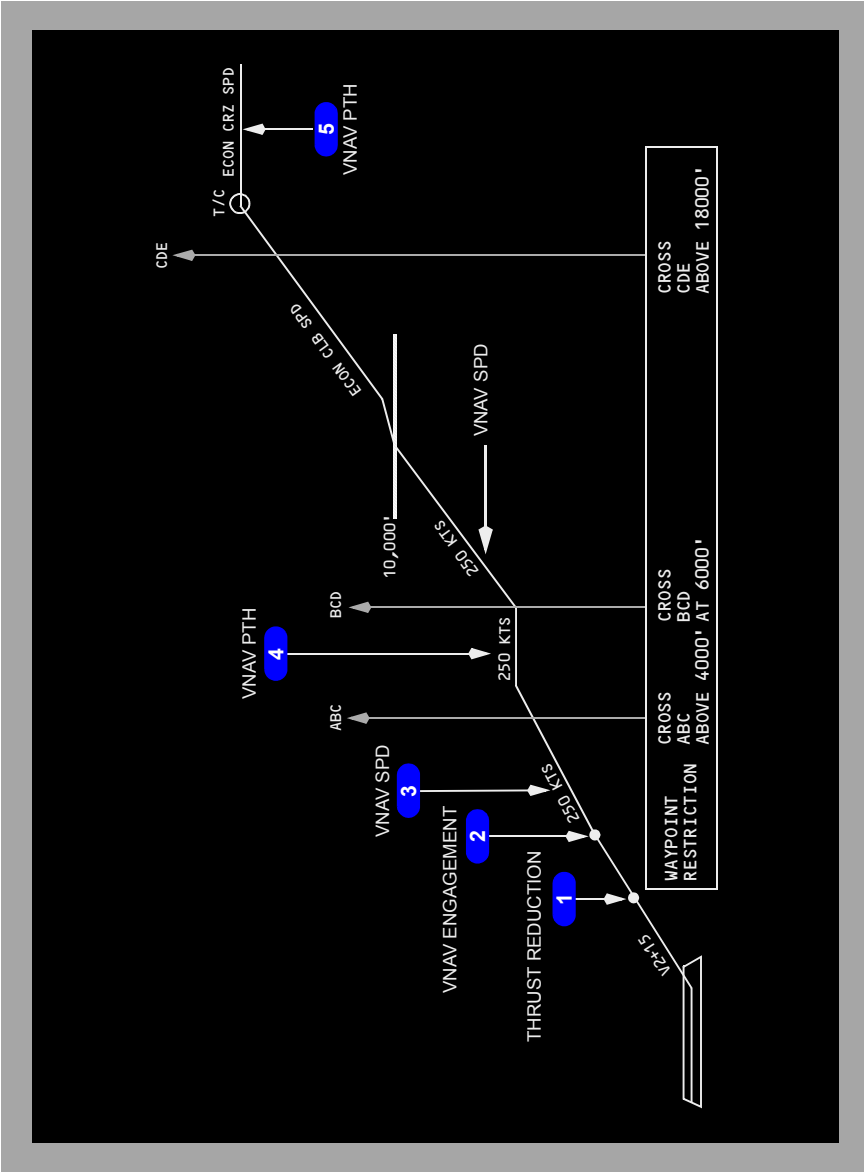

1 Thrust Reduction

Climb thrust is selected by pushing the N1 switch.

[Option – With automatic thrust reduction after takeoff]

Climb thrust is selected by pushing the N1 switch or automatically upon reaching the thrust reduction altitude.

2 VNAV Engagement

VNAV commands an airspeed increase to the planned climb speed profile, limited by configuration.

3 VNAV Climb

The VNAV climb profile uses VNAV SPD at the default climb speed or pilot selected climb speed to remain within all airspeed and altitude restrictions that are part of the SID entered into the active route. Autothrottle uses selected climb thrust limit.

Note: Selection of ENG OUT on the CLB page provides the crew with advisory engine out performance information.

If the climb speed profile cannot achieve an altitude restriction, the UNABLE NEXT ALTITUDE scratchpad message is shown.

4 Climb Restrictions

VNAV enters the VNAV PTH mode to remain within departure or waypoint restrictions. Speed maintained during this time can be:

- procedure based speed restriction
- waypoint speed restriction
- default VNAV climb speed
- manually entered climb speed.

5 Top Of Climb (T/C)


The point where the climb phase meets the cruise altitude is called the top of climb. Approaching this point, the FMC changes from the climb phase to the cruise phase. The T/C is shown any time the FMC calculates a change from a climb phase to a cruise phase, such as a step climb.

The T/C point is shown on the map as a green open circle with the label T/C.

MCP Altitude Intervention


[Option]

The altitude intervention switch may be used during climb or descent to delete altitude restrictions between the current altitude and the MCP altitude. When level at a restriction altitude, and cleared to a higher altitude prior to crossing the restriction waypoint, reset the MCP altitude to the new clearance altitude and push the altitude intervention switch.

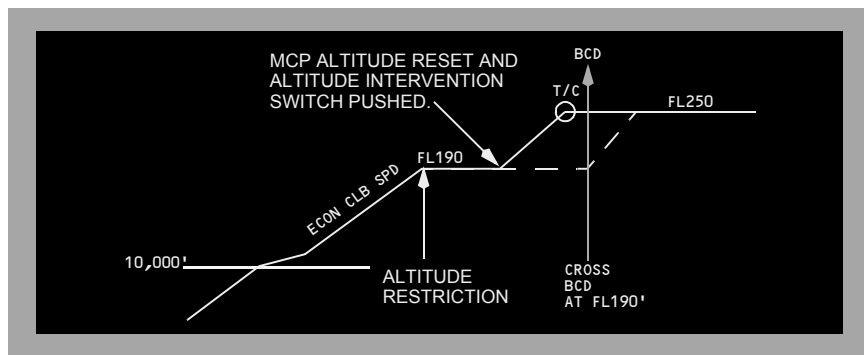

In the illustration above, the current altitude restriction is deleted and the airplane continues VNAV climb to the cruise altitude. T/C moves to match the new climb profile.

The altitude intervention switch may be used to increase cruise altitude. When level at a cruise altitude, and then cleared to a higher cruise altitude, reset the MCP altitude to the new cruise altitude and push the altitude intervention switch.

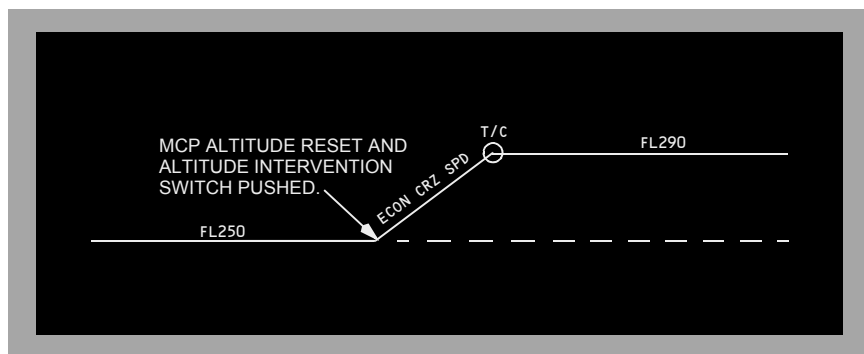

In the illustration above, the cruise altitude is increased and the airplane enters a VNAV cruise climb at the economy cruise speed.

Altitude intervention cannot be used to decrease cruise altitude. Setting a lower altitude then pushing the altitude intervention switch causes the FMC to enter an early descent in the selected descent mode.

Cruise

At cruise altitude, the FMC sets cruise speed at the default or pilot entered speed until reaching the top-of-descent (T/D) point. Alternate cruise speed options are:

- long range (LRC)
- flight crew entered speed.

Cruise thrust is set as required to maintain level flight at the target speed, with the autothrottle engaged. The FMC uses maximum range cruise speed if cost index is set to zero.

Fuel and ETA predictions are based on a constant altitude cruise unless a step climb altitude is entered.

Step Climb


If a step climb altitude is entered in the CRZ page STEP altitude, the FMC calculates the point where the step climb should begin.

The distance and ETA to the next step point are shown on the CRZ and PROGRESS pages. The next step point is shown on the map as a green open circle with the label S/C.

MCP Speed Intervention

[Option – Speed intervention]

[Option – Speed intervention with geometric descent path]

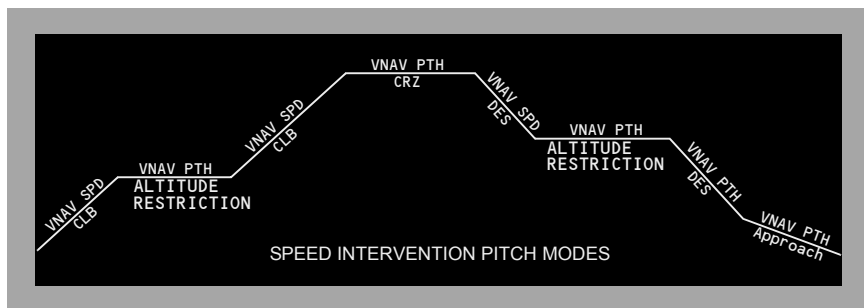

The above illustration shows VNAV mode for each phase of flight during speed intervention.

With VNAV engaged, pushing the speed intervention switch enables speed intervention. Speed intervention allows the flight crew to change airplane speed with the IAS/MACH selector.

In a path descent using speed intervention, VNAV PTH changes to VNAV SPD when the active descent segment is an idle thrust segment.

Note: Aircraft equipped with geometric descent path will transition to VNAV PTH after the first altitude restriction.

[\[Option – FMC U10.6 and later\]](#)

On non-idle descent segments, the pitch mode will switch to VNAV PTH if not already in VNAV PTH. In VNAV PTH, thrust controls speed.

When a navigation data base vertical angle leg is flown (GP x.xx on RTE LEGS page), VNAV switches to VNAV PTH if not already in VNAV PTH.

In approach phase during speed intervention, the pitch mode remains in VNAV PTH after speed intervention is exited. The FMC shall remain in the current vertical mode regardless of IAS MACH selector changes.

[\[Option – FMC U10.4 and later\]](#)

When speed intervention is exited the descent mode will switch back to path mode.

Descent

VNAV can perform a descent in either of two modes – path descent or speed descent. During a path descent, the FMC uses idle thrust and pitch control to maintain a vertical path, similar to a glideslope in three dimensions. During a speed descent, the FMC uses idle thrust and pitch control to maintain a target descent speed, similar to a level change descent.

Top Of Descent (T/D)

The point where the cruise phase changes to the descent phase is the top of descent. The T/D point is shown on the map as a green open circle with the label T/D. T/D is calculated from an end of descent (E/D) point.

Intermediate T/D points show on the map as green open circles with the label T/D–XXXXX (altitude). Intermediate T/D points exist when path segments between altitude restricted waypoints produce a level path segment. The intermediate T/D point shows where the descent will resume.

End of Descent (E/D)

The FMC calculates a descent path based on airspeed restrictions, altitude restrictions and the end of descent (E/D) point. The E/D point is shown on the map as a green open circle with the label E/D. The E/D is the last of the following which is not preceded by a lateral discontinuity:

- the runway threshold for approaches with a runway waypoint on the RTE LEGS page, or
- the missed approach point for approaches not showing a runway waypoint on the RTE LEGS page, or

[\[Option – FMC U10.6 or later\]](#)

- the last descent waypoint, or
- the lowest “at” altitude restriction if no arrival procedure is entered.

Entering an instrument arrival procedure provides an E/D point.

If there is no E/D point, FMC predictions assume a computed profile to 1000 feet above the destination field elevation, at a position which will vary according to selection of arrival procedures. The FMC will provide a slowdown profile for approach. VNAV path descent is not available if there is no E/D point.

VNAV Descent and Approach Path

The descent path starts at the calculated top of descent (T/D) point and includes waypoint altitude restrictions. The path is based on:

- idle thrust
- speedbrakes retracted
- descent wind speed decreasing with decreasing altitude
- applicable target speed.

[Option – With geometric descent path]

After the first “at” or “at or below” restriction, the path angle is constant between waypoints.

[Option – FMC U10.2 and later]

Note: When passing top of descent and using high target speeds (within approximately 6 knots of Vmo/Mmo), VNAV may revert to LVL CHG to prevent overspeed. Reduce airspeed to the VNAV target descent speed prior to reengaging VNAV.

Normally, the target speed is economy speed above the airspeed restriction altitude and 240 knots below that altitude, until deceleration for approach. VNAV will not permit descent below the airspeed restriction altitude until the airspeed is at or below the restricted value plus ten knots. The start and end of the airport speed restriction deceleration segment is shown on the map as a green open circles with no labels.

The descent path assumes deceleration to reach the final approach fix (FAF), or the glideslope intercept point at VREF 40+20 knots.

Target speeds are changed by entries on the DESCENT page. Entries made on the LEGS page are “at or below” and may limit the target speed. Wind and thrust assumptions are changed on the DES FORECASTS page.

Deceleration points show on the map as green open circles with the label DECEL. Deceleration points show prior to:

- airspeed constrained waypoints
- holding patterns
- approach flap extension.

If more than one deceleration segment exists in the flight plan, only the next deceleration point shows. Deceleration points can also show prior to cruise holding patterns or other speed reductions.

VNAV Path Descent

An E/D point must be defined in order to accomplish a path descent. It may be defined manually or by the selection of an arrival procedure.

[Option – FMC U10.5A and earlier]

The FMC defaults to the path descent mode for planning purposes. If the necessary information for a path descent is not available by the time the airplane reaches the T/D point, the FMC will revert to the speed descent mode.

The path descent normally begins automatically at the calculated T/D point, provided the MCP altitude is reset for the descent. If descent is not initiated by the T/D, a path descent may not be achievable. At the T/D, the FMC commands idle thrust and pitch to follow the descent path.

The descent complies with waypoint altitude restrictions by following the calculated vertical path.

Note: A path descent uses the target speed for planning purposes only. There is no attempt to maintain the target speed during the idle portion of the descent.

Note: When descending in VNAV PTH, the FCC will disengage VNAV and switch to LVL CHG if actual speed becomes equal to or slightly less than the minimum speed, denoted by the underspeed limiting symbol in the MCP IAS/Mach window. This can also happen in turbulence or gusty conditions when the minimum speed may momentarily increase due to G loading. See section 4.20, Minimum Speed Reversion.

The FMC uses a special program called “Energy Compensation” at certain times during an ACT PATH DES. This program goes into effect when the MCP has been temporarily set to an altitude above the planned descent path. The airspeed cursor will slowly move toward a slower airspeed while the “TARGET” speed on the FMC remains constant. The airspeed reduction improves the capability of recapturing the planned descent path. When the airplane is cleared to resume the descent, the airspeed will slowly build up to the FMC target speed as the airplane recaptures the planned descent path.


The CDU message DRAG REQUIRED is displayed if an unexpected tailwind results in a significant increase in airspeed to maintain path. The CDU message DES PATH UNACHIEVEABLE is displayed if the FMC determines that the planned descent profile cannot be accomplished. VNAV disengages if a limit speed will be exceeded.

[Option – FMC U10.4 and later]

A path descent must be initiated while within the allowable cross-track error for LNAV, however LNAV may be disengaged during descent while remaining in the path mode. VNAV will remain in path regardless of cross-track.

VNAV Cruise and Path Descent Profile (Instrument Approach using VNAV)

[Option – With geometric descent path]

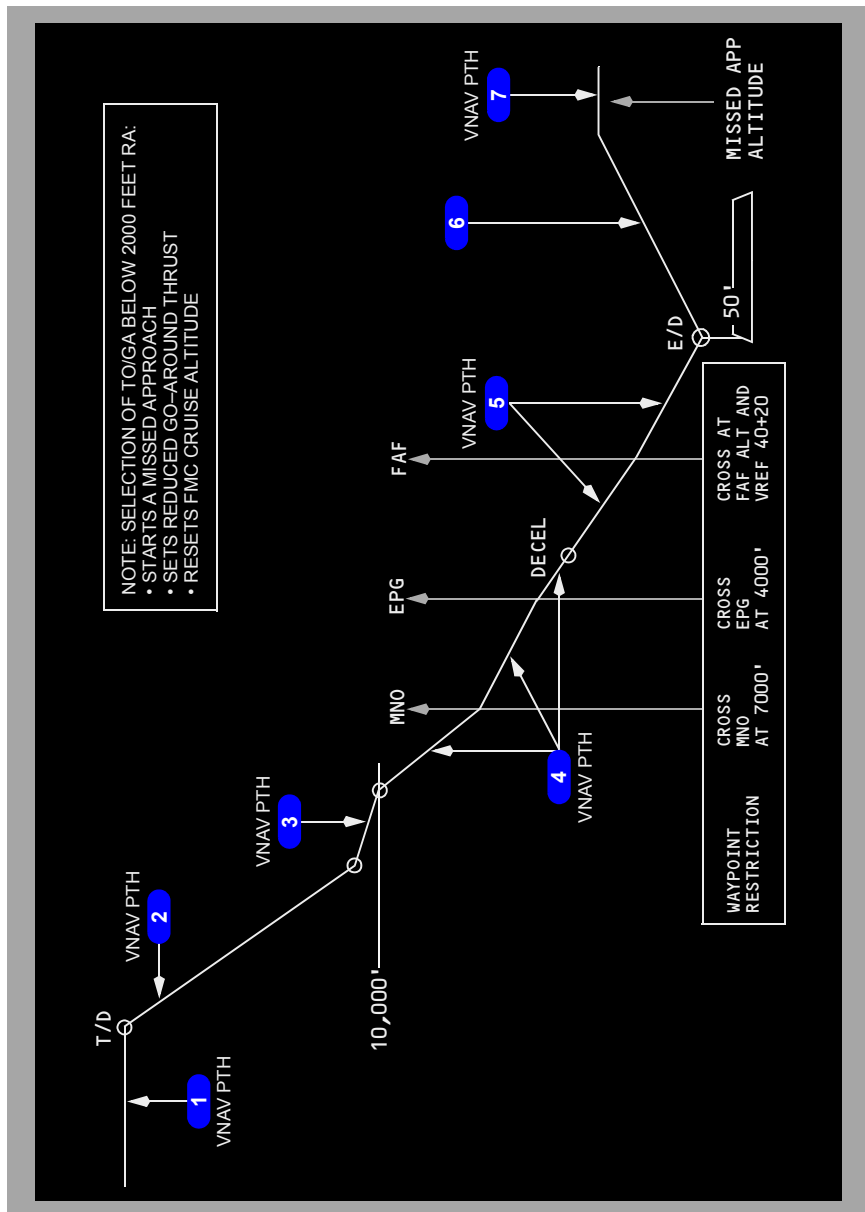

1 Cruise

Before the top of descent, FMC is in cruise mode and uses VNAV PTH and ECON cruise speed.

2 Descent

After top of descent, FMC is in descent mode and VNAV changes to economy descent speed and descends in VNAV PTH.

3 Speed Restriction Deceleration

Before the speed restriction altitude, VNAV decelerates to commanded speed using VNAV PTH.

When at restricted speed, VNAV commands decreased pitch and descends in VNAV PTH.

4 Altitude Restrictions

[Option – With geometric descent path]

The VNAV path conforms to altitude restrictions at MNO, EPG, and the FAF. The thrust mode changes to FMC SPD as required to maintain the target speed.

5 Approach

VNAV descends and starts approach in VNAV PTH at the commanded speed.

6 Missed Approach

When TOGA is pushed during approach, or when crossing the missed approach point, VNAV disengages.

When selected during missed approach, VNAV engages in VNAV SPD.

7 Missed Approach Level Off

At missed approach altitude VNAV changes to VNAV PTH.

VNAV Speed Descent

A speed descent may be selected manually by selecting the SPEED prompt on the PATH DES page. With no E/D specified, the speed descent is the only descent mode available.

The speed descent maintains the target speed. Normally, the target speed is economy above the airspeed restriction altitude and 240 knots below that altitude, until deceleration is necessary for the approach. VNAV will not permit descent below the altitude restriction until the airspeed is at or below the restricted value.


The speed descent normally begins automatically at the calculated T/D, provided the MCP altitude is reset for the descent. At the T/D, the FMC commands pitch to maintain target descent speed. LNAV does not have to be engaged in order to fly a VNAV speed descent.

The descent attempts to comply with waypoint altitude restrictions, and will not violate these restrictions. The VNAV speed descent will not, however, guarantee the airplane reaches an altitude restriction at the required point.

A speed descent cannot automatically revert to a path descent, except during STAR, approach transition, or approach leg with a vertical angle. However, if all required parameters for a path descent are available, a path descent may be manually selected at any time by selecting the PATH prompt on the speed descent page.

VNAV Cruise and Speed Descent Profile (Instrument Approach using VNAV)

[Option – With geometric descent path]

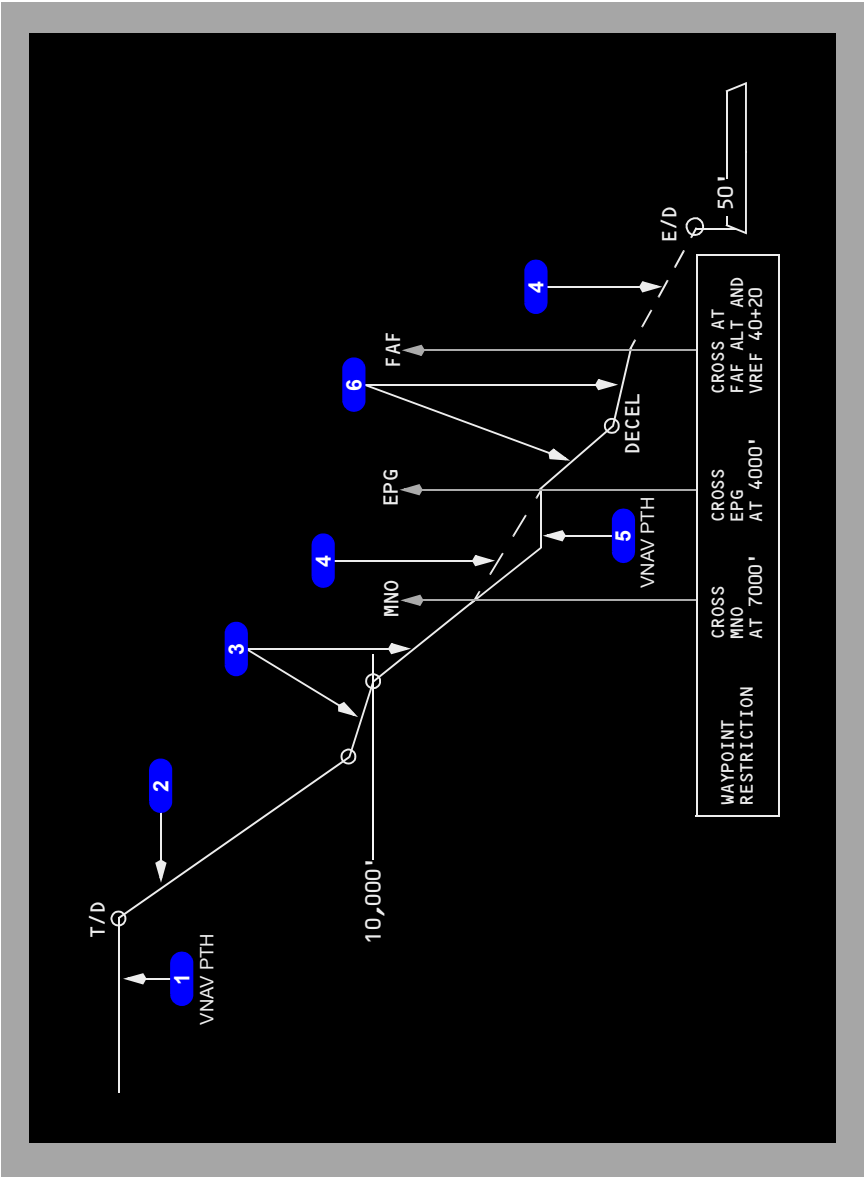

1 Cruise

Before the top of descent, FMC is in cruise mode and uses VNAV PTH and ECON cruise speed.

2 Descent

After top of descent, FMC is in descent mode and VNAV changes to economy descent speed and descends in VNAV SPD.

3 Speed Restriction Deceleration

Before the speed restriction altitude, VNAV decelerates to commanded speed using VNAV SPD.

When at restricted speed, VNAV commands decreased pitch and descends in VNAV SPD.

4 VNAV Path

During a speed descent, VNAV may not maintain the FMC computed VNAV path. However, if E/D shows, a VNAV path is available.

5 Altitude Restrictions

VNAV conforms to altitude restrictions at MNO and EPG. After MNO VNAV continues an idle thrust descent using VNAV SPD.

Upon reaching the next altitude restriction, VNAV commands level flight using VNAV PTH. The thrust mode changes to FMC SPD.

6 Descent and Approach

After EPG, VNAV continues the idle thrust descent using VNAV SPD.

Prior to the approach, VNAV decelerates to approach speed. The FMC prompts manual flap extension.

Vertical Angle

A vertical angle can be assigned to a waypoint from the navigation database. This vertical angle defines a VNAV path between the waypoint and the waypoint preceding it. This feature can be available in approaches, approach transitions, and STARs. For example, the vertical angle for the glidepath of an ILS approach would typically be 3 degrees. This angle is displayed on the ACT RTE LEGS page above the speed/altitude line for the associated waypoint. Vertical angles may be expected in any approach ending at RWXXX or MAXXX. The E/D will be RWXXX or MAXXX, and the E/D altitude will be either threshold crossing height (TCH – typically 50 feet above the touchdown zone elevation) or the altitude specified at MAXXX.

If a path (VNAV PTH) descent is active when a vertical angle leg becomes active, the path mode will remain active, but VNAV will follow the vertical angle rather than the idle thrust descent path.

If the vertical angle leg becomes active during a speed (VNAV SPD) descent, the VNAV mode will change to VNAV PTH automatically, and there will be no SPEED prompt on the descent page.


Early Descent

A descent in VNAV started before the top of descent point is an early descent. If a path descent is planned, VNAV commands a 1000 fpm descent until the idle descent path is intercepted. If a speed descent is planned, VNAV commands an idle thrust descent.

To start an early descent, use DES NOW prompt on the DES page.

[Option – With speed and altitude intervention]

An early descent can also be started by pushing the altitude intervention switch.

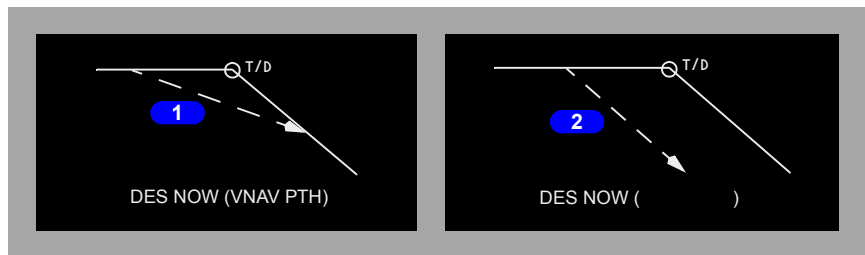

1 DES NOW (VNAV PTH)

With a VNAV path descent planned, VNAV starts an early descent at 1000 fpm and captures the idle descent path. VNAV uses FMC SPD for the autothrottle mode and VNAV PTH for the pitch mode.

2 DES NOW (VNAV SPD)

With a VNAV speed descent planned, VNAV starts an idle thrust early descent. VNAV does not attempt to capture the VNAV descent path. VNAV uses VNAV SPD for the pitch mode and the autothrottle commands IDLE, followed by ARM.

Approach

The FMC transitions to “on approach” when the airplane is within:

- 2 NM of the first approach waypoint (including approach transitions such as arcs and procedure turns), or
- 2000 feet of airport elevation, whichever occurs first.

When the FMC is “on approach”, the following features are available:

- UNABLE RNP alerting levels are higher
- when preparing for a missed approach and the MCP altitude is set at least 300 feet above the current airplane altitude, VNAV will continue to command a descent
- if the airplane is more than 200 feet below the vertical path, VNAV commands zero vertical speed until intercepting the path.

Note: Display of a specified path angle is not limited to approaches. A path angle may be defined for a leg in a STAR and displays on the RTE LEGS page for the procedure.

The FMC transitions out of “on approach” under the following conditions:

- selecting TO/GA
- the airplane lands
- the waypoint cycles to the first waypoint of the missed approach
- executing a direct-to waypoint in the missed approach.

The following situations are generally encountered during approach operations, but are not determined by “on approach” logic:

- If speed intervention is engaged:
 - during a path descent with flaps up on an idle leg, VNAV switches to VNAV SPD
 - with flaps down, VNAV remains in VNAV PTH
- when a point to point (geometric path) leg is active, VNAV remains in VNAV PTH
- while a vertical angle leg (GP x.xx on RTE LEGS page) is active, VNAV remains in VNAV PTH
- if a vertical angle leg (GP x.xx on RTE LEGS page) becomes active, VNAV switches to VNAV PTH without pilot action
- if on a vertical angle leg, and cross track exceeds two times the RNP value, while LNAV is not engaged, VNAV will disengage.

VNAV will remain engaged at all flap settings, allowing approaches to be flown using the vertical angle guidance. Speed for final approach can be set on the APPROACH REF page.

[Option – FMC U10.3 and later]

If an ILS approach is flown in VNAV using vertical angle guidance, VNAV will disconnect when passing the GS-XXX point if G/S is armed, but it can be reengaged. If the GS-XXX point is deleted, VNAV will remain engaged throughout the approach.

For an approach without a runway waypoint on the RTE LEGS page, the VNAV path is calculated to the MDA or a calculated altitude at the missed approach point. The calculated altitude may be below the MDA to ensure a flight path angle and normal threshold crossing height.

Note: It is the flight crew's responsibility not to descend below the MDA until adequate visual contact is achieved.

Go-Around

Below 2000 feet radio altitude, the FMC transitions to go-around logic from approach logic when any of the following events occur:

- pushing either TO/GA switch while in a descent
- executing a direct-to waypoint in the missed approach (other than the missed approach point)
- automatically while in a descent and the last waypoint of the approach cycles to the first waypoint of the missed approach.
- the airplane climbs at a vertical speed greater than 600 fpm and the flaps are retracted from a landing setting toward a flap setting of 15 or 1

Once the FMC go-around logic is established:

- the FMC transitions from active descent to active climb
- the thrust limit changes to go-around thrust
- all descent altitude constraints below the current airplane altitude are deleted and replaced with predicted altitudes
- the original destination airport (airport from which the go-around was just initiated) becomes the new origin airport allowing SID selection if a diversion to another airport is required.

Note: LNAV may be engaged when the airplane climbs above 400 feet radio altitude, but VNAV should not be engaged until after flap retraction.

If the go-around was initiated by pushing a TO/GA switch or selection of go-around thrust, the CRZ ALT will change to the highest of:

- the highest constraint in the missed approach
- 1500 feet above airport elevation
- the MCP altitude.

Note: If the MCP altitude is the lowest of the three, the autopilot, if engaged, will level off at the MCP altitude.


If the go-around was initiated by direct-to or waypoint sequencing, the CRZ ALT will change to the highest of:

- the highest constraint in the missed approach
- 1500 feet above airport elevation.

Refer to section NP21.xx, Go-Around Procedure and section 4.20, Go-Around for additional information.

VNAV Cruise (Engine Out Above Eng Out Max Alt)

[Option – FMC U10.3 and later]

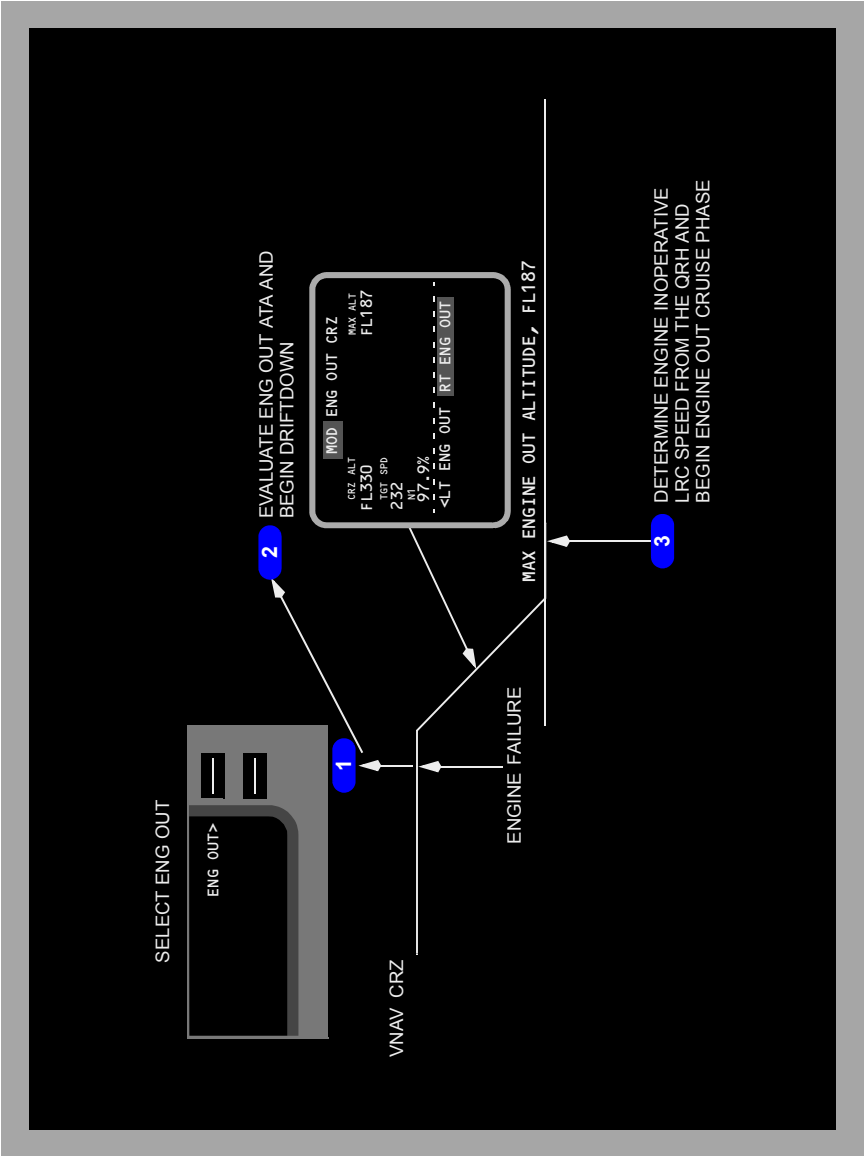

1 Engine Out Modification

Select the ENG OUT prompt on the CRZ page. The ENG OUT page displays the appropriate engine out driftdown performance data to enable the airplane to descend to the engine out maximum altitude. Refer to FMC Cruise, section 11.42 for a complete description of the ENG OUT CRZ page.

2 Drift Down Execution

After selecting the left or right ENG OUT mode, perform the driftdown as follows:

- disconnect A/T
- set maximum continuous thrust on operating engine (N1 line)

[Option – FMC U10.3 and later]

- set MCP speed to ENG OUT SPD
- set MCP altitude to MAX ALT or lower altitude as required
- select LVL CHG.

The airplane then descends at CON thrust and the driftdown airspeed to the MAX ALT. As the driftdown proceeds and airplane gross weight decreases, the maximum altitude may increase.

Note: The engine out cruise page provides advisory performance data for operating with one engine.

3 Engine Out Cruise

Engine out cruise operates like normal cruise with engine out cruise speeds. If range is a factor, determine Engine Inoperative LRC speed from the QRH. Thrust limit remains in CON.

Required Time of Arrival (RTA)

VNAV controls cruise speed to achieve a flight crew specified arrival time at a specified waypoint. After the appropriate waypoint and RTA are input to the FMC, the FMC will compute a recommended takeoff time, speeds required to comply with the RTA, and progress information for the flight. If the RTA is not achievable, the RTA UNACHIEVABLE scratchpad message is displayed.

Data Entry Rules

Altitude Entry

Altitudes can be entered into the FMC as three digit (xxx), four digit (xxxx), five digit (xxxxx), or flight level (FLxxx) numbers. The FMC automatically displays altitude or flight level entries in the proper form based on the transition altitude. Some data lines further restrict the valid entry forms.

Three digit entries represent altitude or flight levels in increments of 100 feet. Leading zeros are required.

Examples of three digit (xxx, FLxxx) entries with transition altitude = 10,000 feet:

- 800 feet is entered as 008 or FL008 and displayed as 800
- 1,500 feet is entered as 015 or FL015 and displayed as 1500
- 11,500 feet is entered as 115 or FL115 and displayed as FL115
- 25,000 feet is entered as 250 or FL250 and displayed as FL250.

Four digit entries represent feet, rounded to the nearest ten feet. Leading zeros are required. This form is used when the altitude does not exceed 9,994 feet.

Examples of four digit (xxxx) entries with transition altitude = 18,000 feet:

- 50 feet is entered as 0050 and displayed as 50
- 835 feet is entered as 0835 and displayed as 840
- 1,500 feet is entered as 1500 and displayed as 1500
- 8,500 feet is entered as 8500 and displayed as 8500
- 9,994 feet is entered as 9994 and displayed as 9990.

Five digit entries represent feet, rounded to the nearest ten feet. This form is used when the altitude exceeds 9,994 feet.

Examples of five (xxxxx) digit entries with transition altitude = 4,000 feet:

- 50 feet is entered as 00050 and displayed as 50
- 835 feet is entered as 00835 and displayed as 840
- 1,500 feet is entered as 01500 and displayed as 1500
- 8,500 feet is entered as 08500 and displayed as FL085
- 9,995 feet is entered as 09995 and displayed as FL100
- 11,500 feet is entered as 11500 and displayed as FL115
- 25,000 feet is entered as 25000 and displayed as FL250.

Negative altitude entries are allowed to -1000 feet.

Airspeed Entry

Airspeeds can be entered into the FMC as calibrated airspeed or Mach number. Calibrated airspeeds are entered as three digits (xxx) in knots. Mach numbers are entered as one, two, or three digits following a decimal point.

Data Pairs

Many CDU pages display data in pairs separated by a slash “/.” Examples of these pairs include wind direction/speed and waypoint airspeed/altitude restrictions. When entering both values in a pair, the slash is inserted between the values. When it is possible to enter only one value of the pair, the slash may not be required. When entering only the outboard value of a pair, the trailing or leading slash may be entered, but is not required before transferring to the data line. When entering the inboard value of a pair, the trailing or leading slash must be entered before transferring to the data line. Omission of the required slash normally results in an INVALID ENTRY message.

Bearing Entry

Entry of a bearing value requires three digits. For example, key 090, not 90. A bearing entry of 360 is displayed as 000.

Plus/Minus Signs

When entering temperature or an along-track displacement distance, positive values are assumed by the FMC and + signs are not required. For negative values, key in the – sign.

Intentionally
Blank

FMC Databases

The FMC contains two databases:

- performance database
- navigation database.

The performance database eliminates the need for the flight crew to refer to a performance manual during flight, and provides the FMC with the information required to calculate pitch and thrust commands. All information normally required can be displayed on the CDU. The database includes:

- airplane drag and engine characteristics
- maximum and optimum altitudes
- maximum and minimum speeds.

Maintenance personnel can refine the database by entering correction factors for drag and fuel flow.

The navigation database includes most information normally determined by referring to navigation charts. This information can be displayed on the CDU or navigation display. The database contains:

- the location of VHF navigation aids
- waypoints
- airports
- runways
- other airline selected information, such as SIDs, STARs, approaches, and company routes.

If the permanent database does not contain all of the required flight plan data, additional airports, nav aids, and waypoints can be defined by the crew and stored in either a supplemental or a temporary navigation database. Use of these additional databases provides world-wide navigational capability, with the crew manually entering desired data into the FMC via various CDU pages. Information in the supplemental navigation database is stored indefinitely, requiring specific crew action for erasure; the temporary navigation database is automatically erased at flight completion.

The supplemental and temporary databases share storage capacity for forty nav aids and six airports, the entries being stored in either database on a first come, first served basis. For the waypoint category, exclusive storage is reserved in the temporary database for twenty entries (including those created on the RTE or RTE LEGS pages). An additional twenty waypoints (up to a maximum of forty) can be stored in either the temporary or supplemental database on a first come, first served basis.

When any storage capacity is full, entries which are no longer required should be deleted by the crew to make space for additional new entries. Created waypoints cannot be stored in the database runway category.

The FMC contains two sets of navigation data, each valid for 28 days. Each set corresponds to the normal navigation chart revision cycle. The FMC uses the active set for navigation calculations. The contents of the navigation database are periodically updated and are transferred to the FMC before the expiration date of the current data.

Thrust Management

The autothrottle operates in response to flight crew mode control panel inputs or to automatic FMC commands. Reference thrust can be selected on the N1 LIMIT page. Automatic FMC autothrottle commands are made while VNAV is engaged. The autothrottle system:

- uses reference thrust limits calculated by the FMC
- commands the thrust levers
- commands thrust equalization through the electronic engine controls.

Thrust limits are expressed as N1 limits. Thrust equalization references N1.

The FMC calculates a reference thrust for the following modes:

- | | |
|-------------------------------|-----------------|
| • takeoff | • reduced climb |
| • derated takeoff | • cruise |
| • assumed temperature takeoff | • continuous |
| • climb | • go-around. |

The thrust reference mode automatically transitions for the respective phase of flight. These modes can be selected on the N1 LIMIT page. The selected thrust reference mode is displayed on the thrust mode display.

[Option – FMC U10.1 and later, with automatic thrust reduction after takeoff]

The flight crew can specify the thrust reduction height where the transition from takeoff to climb thrust takes place by making an entry on TAKEOFF REF page 2. Allowable entries are 800 feet to 9,999 feet.

[Option – FMC U10.3 and later]

The default value is determined by the airline and is stored in the model/engine database.

Reduced Thrust Takeoff

Reduced thrust takeoffs lower EGT and extend engine life. They are used whenever performance limits and noise abatement procedures permit.

Takeoff Derate

[Option – FMC U10.1 and later]

Fixed derates can be selected on the N1 LIMIT page. Performance data for these derates is provided in the Airplane Flight Manual (AFM).

With derated takeoff selected, the thrust setting parameter is considered a limitation for takeoff; therefore, thrust levers should not be advanced further except in an emergency. A further thrust increase following an engine failure could result in a loss of directional control while on the ground. Use the takeoff speeds supplied by the FMC or specified in Chapter PI, Performance-Inflight, for the selected derate condition.

Derated takeoff rating can be further reduced by assumed temperature.

[Option – With FMC computed QRH takeoff speeds]

Use the takeoff speeds provided by the FMC or specified in Chapter PI, Performance-Inflight, for the selected derate or variable takeoff rating condition.

Assumed Temperature Thrust Reduction Takeoff

[Option – FMC U10.1 and later]

A takeoff thrust less than the full rated thrust may be achieved by using an assumed temperature that is higher than the actual temperature. The desired thrust level is obtained through entry of a SEL TEMP value on the N1 LIMIT page or TAKEOFF REF page 2. Use approved sources for selecting the assumed temperature.

The maximum thrust reduction authorized is 25 percent below any certified rating. Do not use assumed temperature reduced thrust if conditions exist that affect braking, such as slush, snow, or ice on the runway, or if potential windshear conditions exist.

If the assumed temperature method is applied to a fixed derate, application of additional power should not exceed the fixed derate N1 limit as loss of directional control could occur while on the ground.

When the assumed temperature method is used with full rate, the reduced thrust setting is not considered a limitation. If conditions are encountered where additional thrust is desired, the crew can manually apply full thrust.

Derated Thrust Climb

Two fixed climb thrust derates can be selected on the N1 LIMIT page. CLB-1 provides a climb limit reduced by 3% N1 (approximately 10% thrust). CLB-2 provides a climb limit reduced by 6% N1 (approximately 20% thrust). The reduced climb setting gradually increases to full rated climb thrust by 15,000 feet. In cruise, the thrust reference automatically changes to CRZ. The reference can be manually selected on the N1 LIMIT page.

Use of an assumed temperature reduced thrust takeoff or takeoff derate affects the FMCs climb derate computation. If a reduced thrust takeoff has been specified on the TAKEOFF REF page, the FMC will re-compute CLB-1 and CLB-2 values as required to avoid a climb N1 value greater than the reduced thrust takeoff N1 value.

Use of derated climb thrust reduces engine maintenance costs, but increases total trip fuel.

Fuel Monitoring

The FMC receives fuel data from the fuel quantity indicating system. Fuel quantity values show on the PERF INIT page and on PROGRESS page 1/3.

The scratchpad message VERIFY GW AND FUEL shows if total fuel quantity data is invalid. The PERF INIT page FUEL line changes to dashes. The FMC uses the last valid fuel quantity for performance predictions and VNAV operation. The flight crew should manually enter estimated fuel weight. Periodic fuel weight update is required for the remainder of the flight to keep gross weight current. The FMC does not update the manual fuel weight entry. The scratchpad message VERIFY GW AND FUEL shows again each 30 minutes if subsequent entries are not performed. The scratchpad message does not show during descent with Vref selected.

The scratchpad message CHECK FMC FUEL QUANTITY shows if the FMC has detected an unexpected drop in fuel quantity.

The FMC continually estimates the amount of fuel that will remain when the destination airport is reached if the active route is flown. The CDU message USING RSV FUEL is displayed if the estimate is less than the fuel reserve value entered on the PERF INIT page. The CDU message INSUFFICIENT FUEL is displayed if predicted fuel at destination will be 2000 lb. (900 kg) or less.

Loss of FMC Electrical Power

The FMC requires continuous electrical power to operate. When the electrical power is interrupted for less than ten seconds:

- LNAV and VNAV disengage
- all entered data is retained by the FMC
- the FMC resumes normal operation when power is restored.

If power is lost for ten seconds or more on the ground, all preflight procedures and entries must be done again when power is restored.

If power is lost for more than ten seconds in flight:

- LNAV and VNAV disengage
- all entered data is retained by the FMC, and when power is restored the RTE LEGS page is displayed with the scratchpad message
SELECT ACTIVE WPT/LEG

Before LNAV can engage, the FMC must be instructed how to return to the route. Select the desired active waypoint and proceed direct or intercept a course to the waypoint.

FMC Failure

[Option – Dual FMC]

Single FMC Failure

The FMC/CDU is designed to automatically preserve the most capable modes of navigation and guidance that can be maintained with the equipment and navigation aids available. If an error or system failure results in reduced capability, then the FMC may generate a crew message for display in the CDU scratchpad. If other system inputs to the FMC should fail, affected CDU displays are blanked to prevent the display of misleading or erroneous data. For example, loss of the total fuel input causes some performance related data to be blank. The messages and FMC internal responses provide an orderly transition from full FMC guided flight to less automated capability.

If the right FMC fails, the FMC alert light and the FMC message light will illuminate. The message SINGLE FMC OPERATION will be displayed in both scratchpads. VTK will display on the right navigation display. LNAV and VNAV will disengage if autopilot B is in use (can be reengaged if autopilot A is selected). After 25 to 30 seconds, the right navigation display will display failure information. The right navigation display may be restored by placing the FMC source select switch to BOTH ON L.

Note: If the above indications are observed with no VTK on the right navigation display, there is a disagreement between left and right FMC data. Moving the FMC Source Select Switch to BOTH ON L should allow the two FMCs to resynchronize. The switch may then be returned to NORMAL when the message DUAL FMC OP RESTORED is displayed on both scratch pads.

[Option – MCDU]

If the left FMC fails, the FMC alert light will illuminate. The MENU page will appear on both CDUs. VTK will appear on the left navigation display. LNAV and VNAV will disengage, but can be reengaged if autopilot B is in use or is selected. After 25 to 30 seconds, the left navigation display will display failure information. To restore full operation, the FMC source select switch must be moved to BOTH ON R.

[Option – FMC U10.2 and later]

Note: During an FMC software restart, the navigation display map track may rapidly slew to 0 degrees then to the correct value.


Dual FMC Failure

[Option – MCDU]

If both FMCs fail, the FMC alert light will illuminate. The MENU page will appear on both CDUs. VTK will appear on both navigation displays. LNAV and VNAV will disengage. After 25 to 30 seconds, both navigation displays will display failure information.

**Flight Management, Navigation
Company Data Link****Chapter 11
Section 33**[\[Option\]](#)**Company Data Link**

The airplane communications system enables two-way data link communications between the FMC and airline operations. A downlink occurs when data is transferred from the FMC and transmitted through the airplane communications system to a receiver on the ground. Data may be downlinked from the FMC either manually or automatically. An uplink is the opposite of a downlink; data is transmitted from a ground station for input to the FMC. Data may be uplinked at the discretion of the airline operations dispatcher or in response to a downlink request.

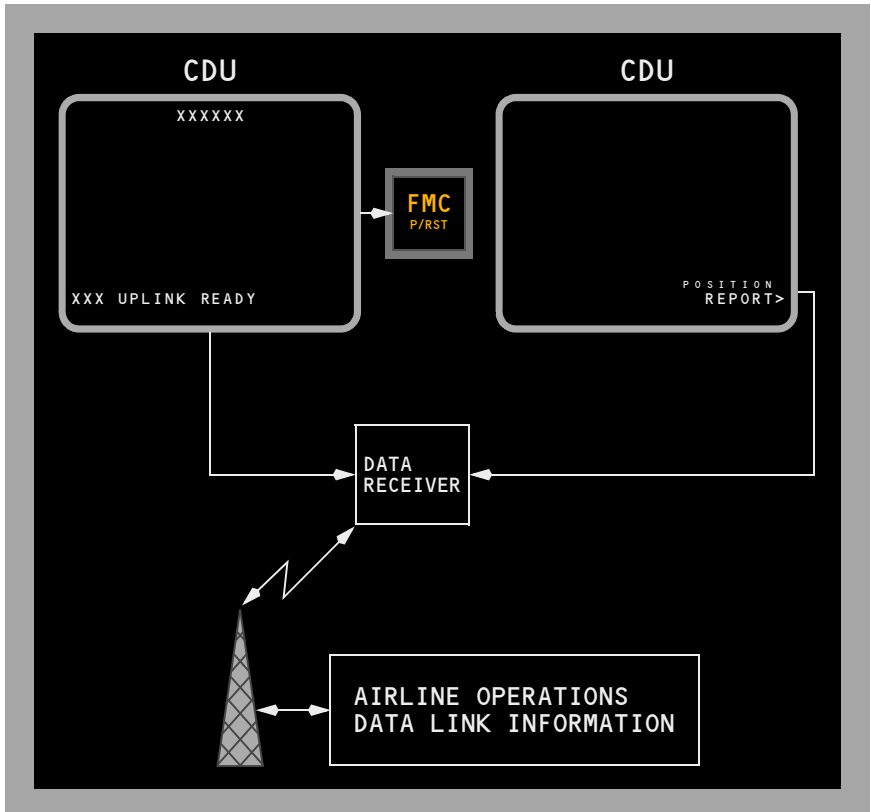

Data Link

Downlinks are data link messages transmitted to a ground station. Requests for data and reports of FMC information are two types of downlinks. Requests are made manually by the flight crew. Reports can be made manually or may occur automatically.

Uplinks are messages transmitted to the airplane. Most uplinks require manual selections by the flight crew. Some uplinks are input automatically.

Manual Downlinks


Select a REQUEST prompt to start the downlink request for data. REQUEST prompts are on PERF INIT, PERF LIMITS, TAKEOFF REF, PROGRESS, DES FORECASTS, RTE, ALTERNATE DEST, RTE DATA, and SUPP NAV DATA pages. Downlink reports of the active route may be accomplished by selection of the REPORT prompt on the PERF LIMITS or PROGRESS page and a position report may be downlinked by selection of the REPORT prompt on the PROGRESS page. The contents of the supplemental navigation database can be downlinked by selection of the REPORT prompt on the SUPP NAV DATA page.

When the communications function is unable to process FMC downlinks, the words FAIL, VOICE, NO COMM, or FULL are displayed on the CDU pages in place of the REQUEST and REPORT prompts and the header line displays the word DATALINK. The status messages are:

- FAIL
 - the ACARS management unit is inoperative
- VOICE
 - radio is operating in the VOICE mode
- NO COMM
 - radio is operational but not available
- FULL
 - all available downlink space is full.


Reports

A REPORT prompt on each page downlinks a unique report applicable to that page. The pages below contain report prompts.

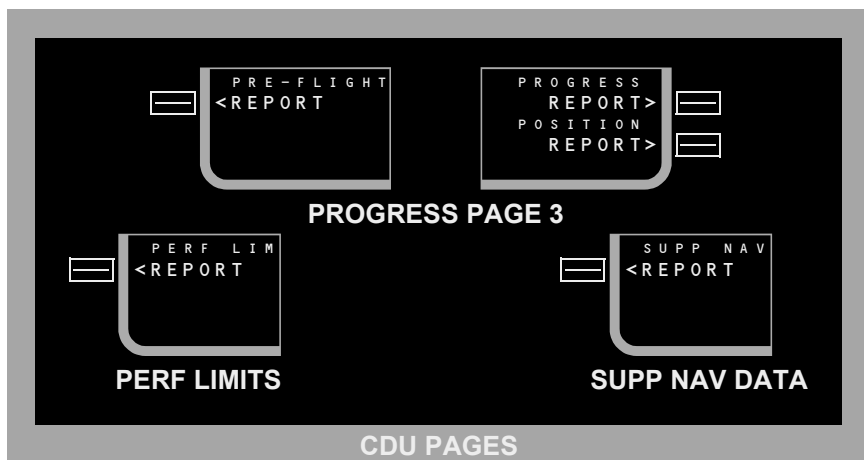

Report Status

Below is a typical sequence of status in response to sending a report.

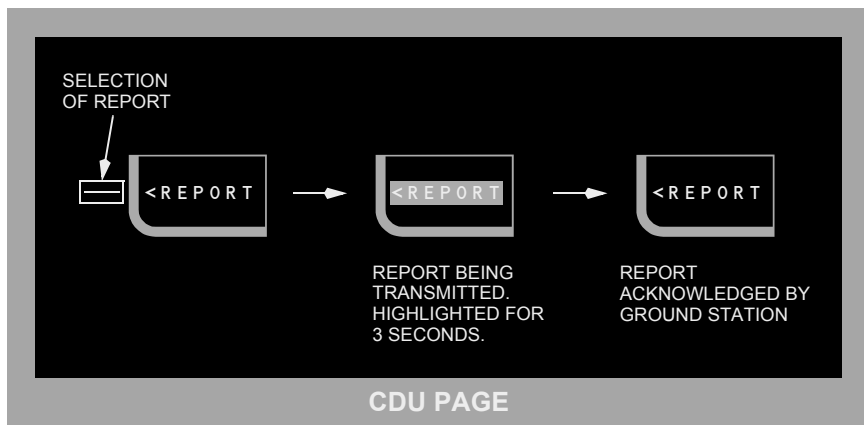

Automatic Downlinks

The FMC can be configured by the airline to automatically transmit downlinks of FMC data at predetermined points during the flight or in response to specific information requests from the airline dispatcher. The FMC response in these cases is completely automatic and no crew action is necessary.

Uplinks

Uplinked data may be loaded automatically or may require flight crew action. Three uplinks automatically load data into the FMC when the REQUEST prompt is selected and do not require execution.

Uplinked data that waits in system memory for flight crew action are considered to be pending. A pending uplink is included or discarded when the flight crew selects the applicable prompt. Flight crew response to an uplink depends on the type of uplink. Flight crew action is made with ACCEPT/REJECT or LOAD prompts, FMC modification ERASE prompt or EXEC key, or when the page with the uplink is selected.

Data can be uplinked from the airline dispatcher directly to the FMC. The uplinks are annunciated to the crew by the FMC alert lights. The uplink is identified by a CDU scratchpad message.

PERF INIT uplinks are available only on the ground and after an origin airport has been entered on the RTE page.

RTE DATA cruise winds are available when not in descent and a cruise altitude and a flight plan route exist.

DES FORECASTS winds are available if a cruise altitude exists.

Long Delete Function


[Option – MCDU]

During uplink, CDU keys are ignored until data is loaded into the FMC. The uplink may be suspended by pressing and holding down the DEL key for at least one second. For all uplinks, except SUPP NAV DATA uplinks, the loaded data is then removed from the flight plan and placed back into the ready to be loaded state. Uplinks that do not generate a modified plan are reloaded when there has been no CDU pushbutton activity for 30 seconds. Uplinks that do generate a modified plan can be reloaded using the LOAD prompt on the appropriate page.

When the long delete is used during a SUPP NAV DATA uplink, the uplink is suspended, but the data loaded up to that point remains in the database. After 30 seconds of keyboard inactivity, the remaining data is loaded.


Requests

A REQUEST prompt on each page downlinks a unique request applicable to that page. The pages below contain request prompts.

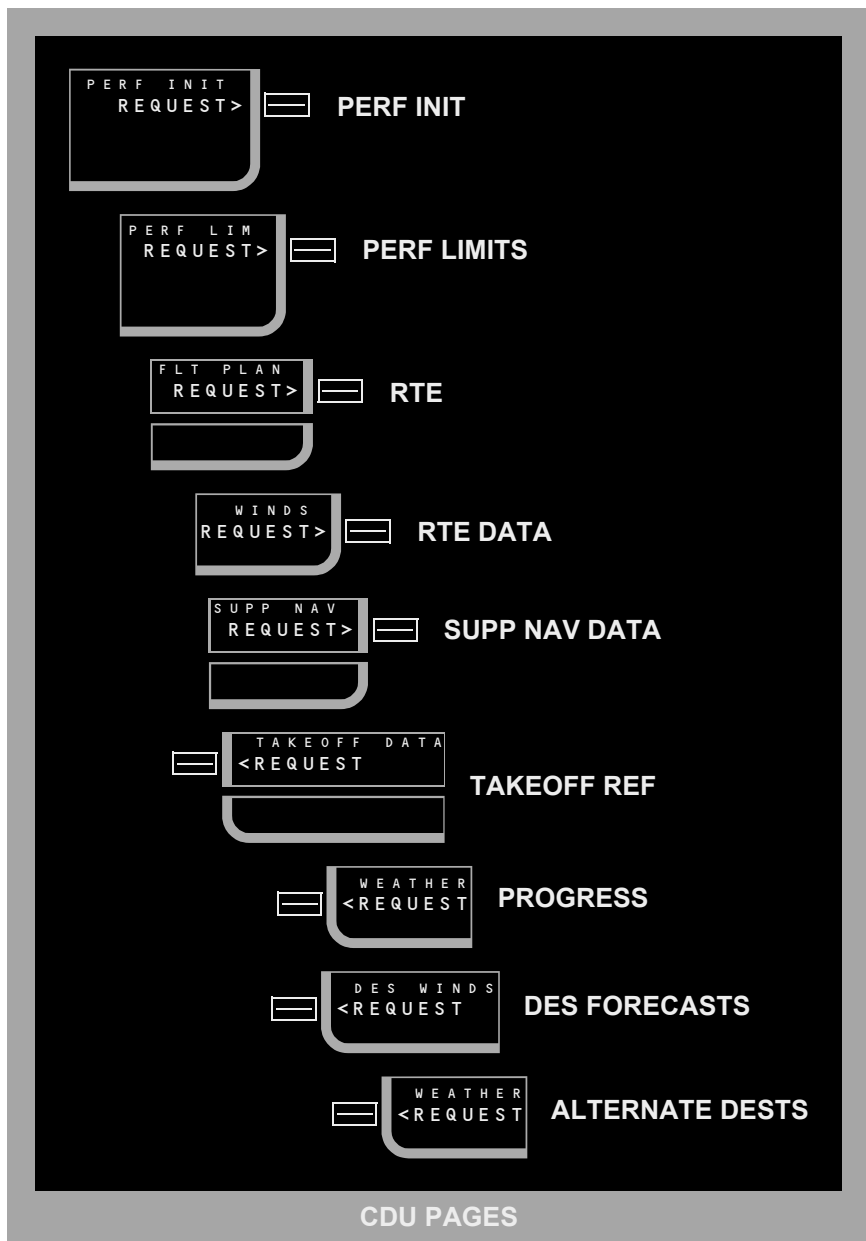

Request Status

Below is a typical sequence of status in response to sending a request.

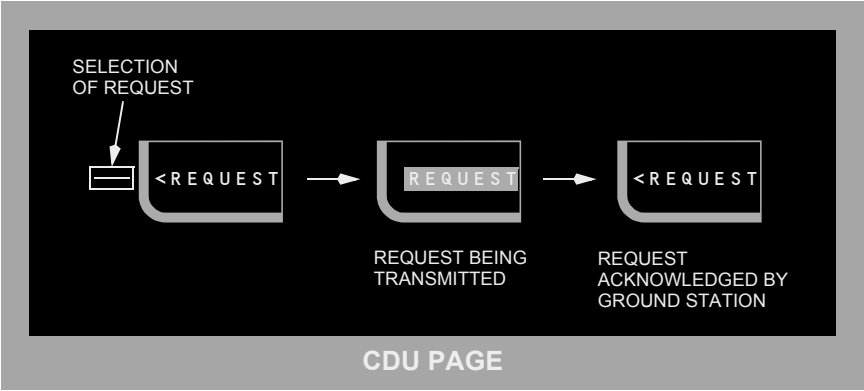

FMC Data Link Uplinks (Accept/Reject)

ACCEPT and REJECT are shown on the TAKEOFF REF 1/2 page following receipt of uplink data.


Uplink data for the current runway is shown initially in small font for preview.

Selecting ACCEPT:

- displays uplinked data in large font
- replaces previous data with uplinked data
- returns page display to normal (pre-uplink) format
- clears scratchpad message
- transmits a downlink accept message (if enabled) to acknowledge acceptance.

Selecting REJECT:

- replaces uplinked data with previous data
- returns page display to normal (pre-uplink) format
- clears scratchpad message
- transmits a downlink reject message (if enabled) to inform of rejection.

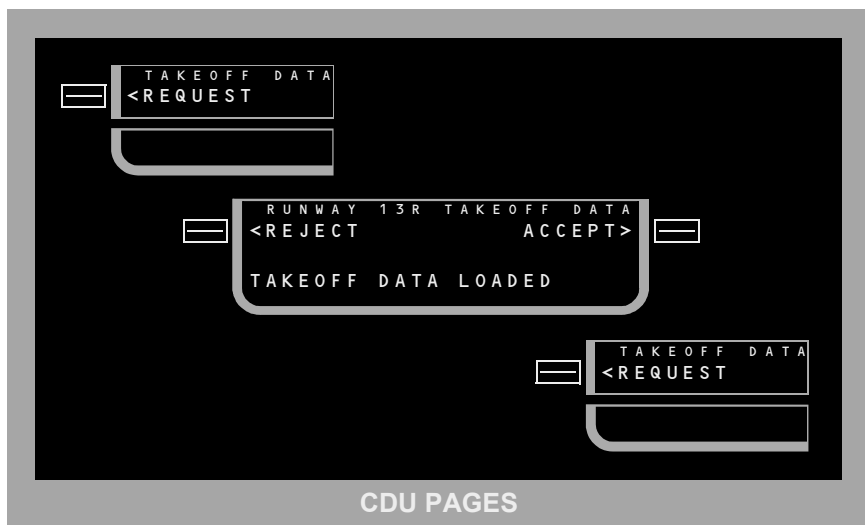

FMC Data Link Uplinks (Load/Activate/Exec)

LOAD is shown on the RTE page after receipt of uplink data. After the uplinked data is loaded, the ACTIVATE prompt is shown. After selecting ACTIVATE, the EXEC light illuminates.


Selecting LOAD:

- loads uplinked data into FMC for viewing
- updates scratchpad message
- transmits a downlink accept message (if enabled) to acknowledge acceptance.

Selecting ACTIVATE and EXEC:

- puts uplinked data in active flight plan
- returns page display to normal (pre-uplink) format
- clears scratchpad message
- transmits a downlink accept message (if enabled) to acknowledge acceptance.

[Option – Liquid crystal display CDU or Liquid crystal display MCDU or Liquid crystal FANS MCDU]

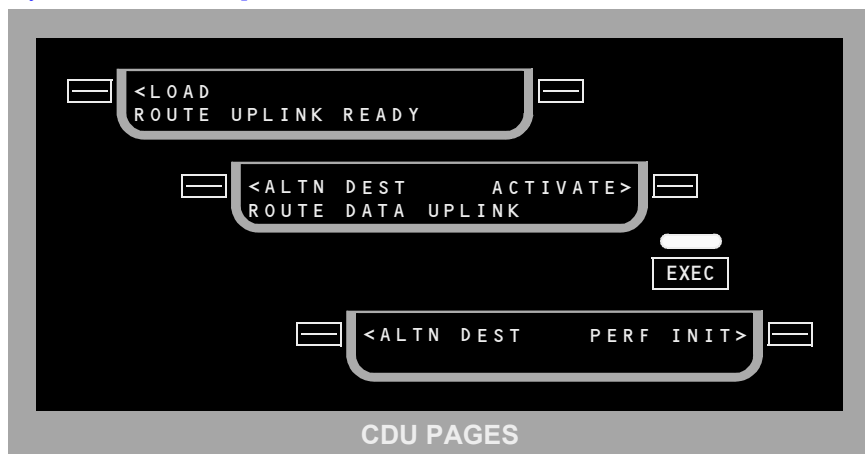

FMC Data Link Uplinks (Load/Exec–Erase)

LOAD shows on the PERF INIT, PERF LIMITS, RTE DATA, and DES FORECASTS pages after receipt of uplink data.

After the uplinked data is loaded, the EXEC light illuminates and the ERASE prompt is displayed.

Selecting LOAD:

- loads uplinked data into FMC for viewing
- updates scratchpad message

- uplinked data modifies previous data
- ERASE prompt displays
- EXEC light illuminates.


Pushing the EXEC key:

- incorporates modified data into active flight plan
- clears scratchpad message
- returns page display to normal (pre-uplink) format
- transmits a downlink accept message (if enabled) to acknowledge acceptance.

Selecting ERASE:

- removes modified data
- clears scratchpad message
- returns page display to normal (pre-uplink) format.
- transmits a downlink reject message (if enabled) to inform of rejection.

[Option – Liquid crystal display CDU or Liquid crystal display MCDU or Liquid crystal FANS MCDU]

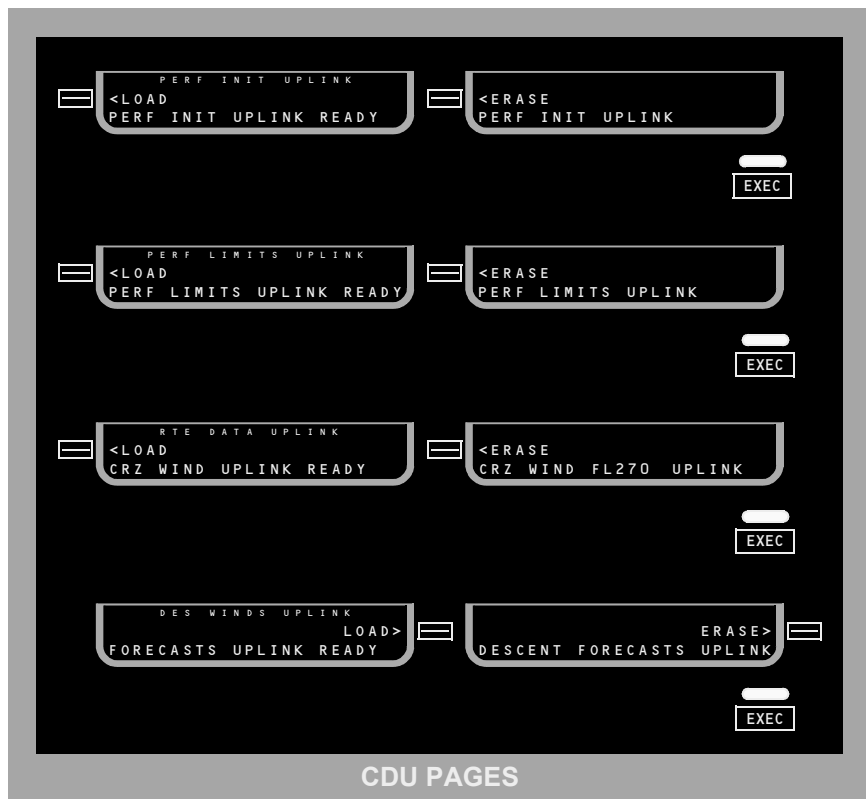


FMC Data Link Uplinks (Request)

Selecting the REQUEST prompt is the only action required to uplink data on the PROGRESS, ALTERNATE DEST, and SUPP NAV DATA pages.

After the uplinked data is loaded, an uplink message appears in the scratchpad.

Selecting REQUEST:

- loads uplinked data into FMC
- displays scratchpad message when uplink complete
- uplinked data modifies previous data.

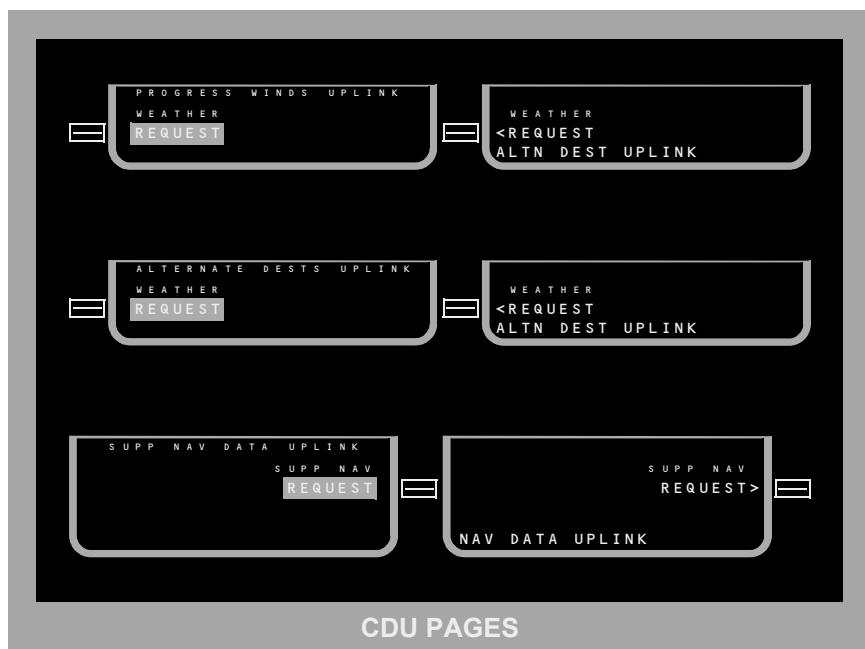

FMC Data Link Uplinks (Automatic)

Data can be automatically uplinked.

The scratchpad message XXXXX UPLINK READY is displayed and the FMC alert light illuminates.




Data Link Management


The flight crew should monitor system status of FMC data link by observing status displays on CDU pages.

CDU Data Link Status Displays

Data link operation is verified when the correct line title is above the related prompt. In the example below, the line title TAKEOFF DATA is above the REQUEST prompt on the TAKEOFF REF page.

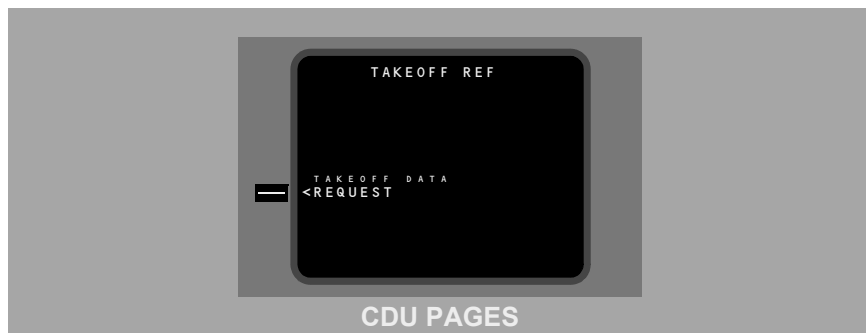

When the data link system is not operating, CDU page prompts change to FAIL, VOICE, NO COMM or FULL and the headings change to DATALINK. A typical example is shown below.

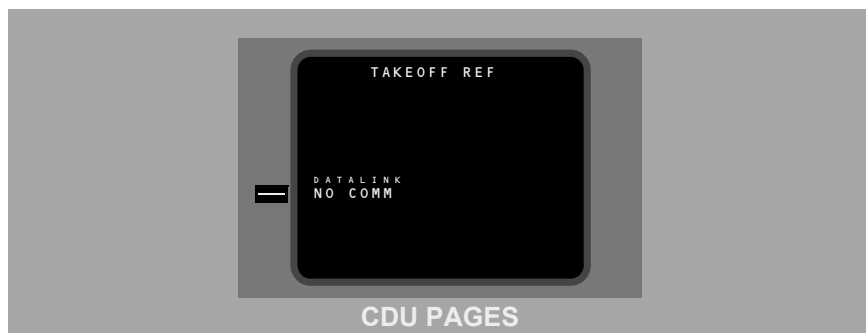

Navlink ACARS


[Option]

The Navlink portion of the Airplane Communication Addressing and Recording System (ACARS) provides upload and download capability for preflight and in flight information.

Note: Refer to Telelink™ Pilot's Guide document PG-8400021-30-A for further system description.

Navlink ACARS Main Menu Page

Navlink ACARS access is gained by selecting the ACARS prompt on the MENU page. This temporarily suspends the FMC functions of the CDU and allows the CDU to be used by the Navlink ACARS system.

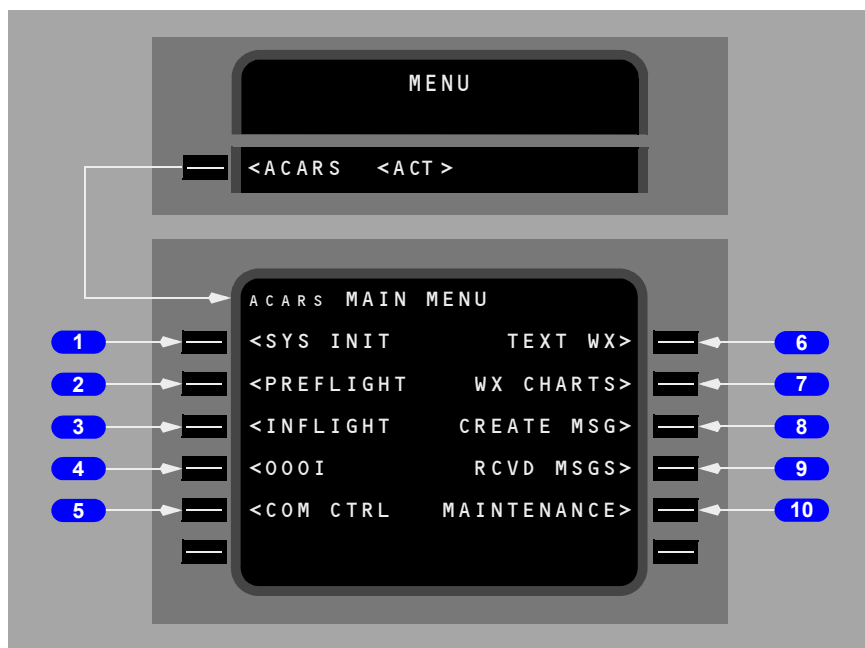

1 System Initialization (SYS INIT)

Push – selects SYS INIT page.

Provides origin, destination, and clock information.

2 PREFLIGHT

Push – selects PREFLIGHT page.

Provides access to departure, clearance, and weather information.

3 INFLIGHT

Push – selects INFLIGHT page.

Provides two way communications for en route and airplane diversion information.

4 OOOI

Push – selects OOOI page.

Provides datalink to ground support station of takeoff, landing, and flight times.

5 Communications Control (COM CTRL)

Push – selects COMM CONTROL page.

Provides access to various types of communications networks, typically VHF network, telephony, and SATCOM.

6 Text Weather (TEXT WX)

Push – selects TEXT WX page.

Provides access to text based weather information including winds, forecasts, PIREPS, and SIGMETS.

7 Weather Charts (WX CHARTS)

Push – selects WEATHER CHARTS page.

Provides access to request various graphic based weather charts.

8 Create Message (CREATE MSG)

Push – selects CREATE MSG page.

Provides crew with ability to create free text messages for downlink to supporting ground station.

9 Received Message List (RCVD MSGS)

Push – selects RCVD MSGS page.

Provides list of messages received and ability to view selected message text.


10 MAINTENANCE

Push – selects MAINTENANCE page.

Provides access to various maintenance reports for ground maintenance crew use.

System Initialization Page (SYS INIT)

The system initialization page provides the ability to view and change initial system information.

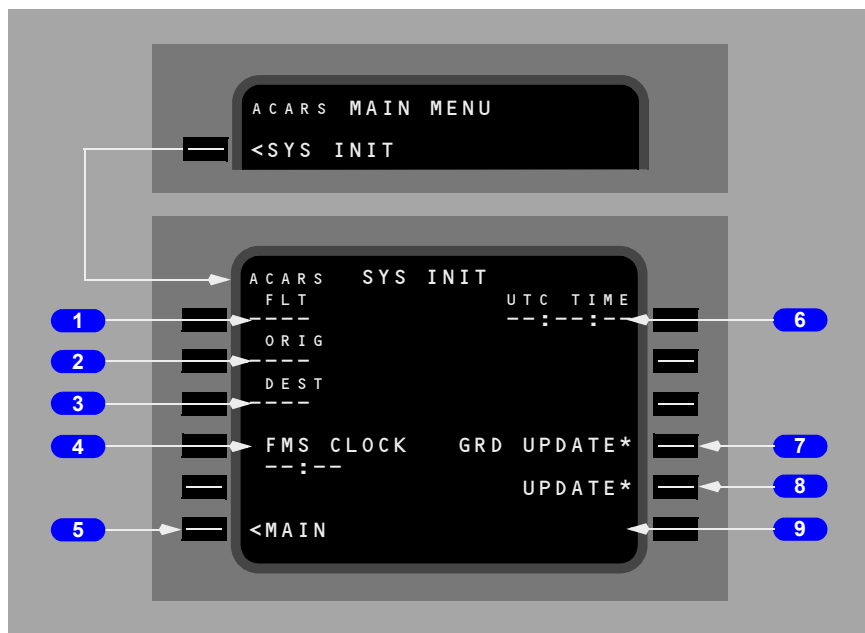

1 Flight Number (FLT)

Automatically displays four digit flight number received from the flight management system.

Defaults to dashes if flight number not received. The flight number can also be changed or manually entered.

2 Origin (ORIG)

Automatically displays four letter origin identifier received from flight management system.

Defaults to dashes if origin identifier not received. The three or four letter identifier for the origin may also be changed or manually entered.

3 Destination (DEST)

Automatically displays four letter destination identifier received from flight management system.

Defaults to dashes if destination identifier not received. A three or four letter identifier for the destination may also be changed or manually entered.

4 Flight Management System Clock (FMS CLOCK)

Displays time received from FMS clock.

5 MAIN

Push – selects Navlink ACARS MAIN MENU page.

6 UTC TIME

Displays universal time coordinated data.

Current time may be entered manually.

7 Ground Update (GRD UPDATE*)

Push – updates UTC time with ground clock.


8 UPDATE*

Push – copies FMS time to the UTC time.

9 Advisory Message

Displays advisory message, if applicable. See Navlink ACARS message section.

PREFLIGHT Page

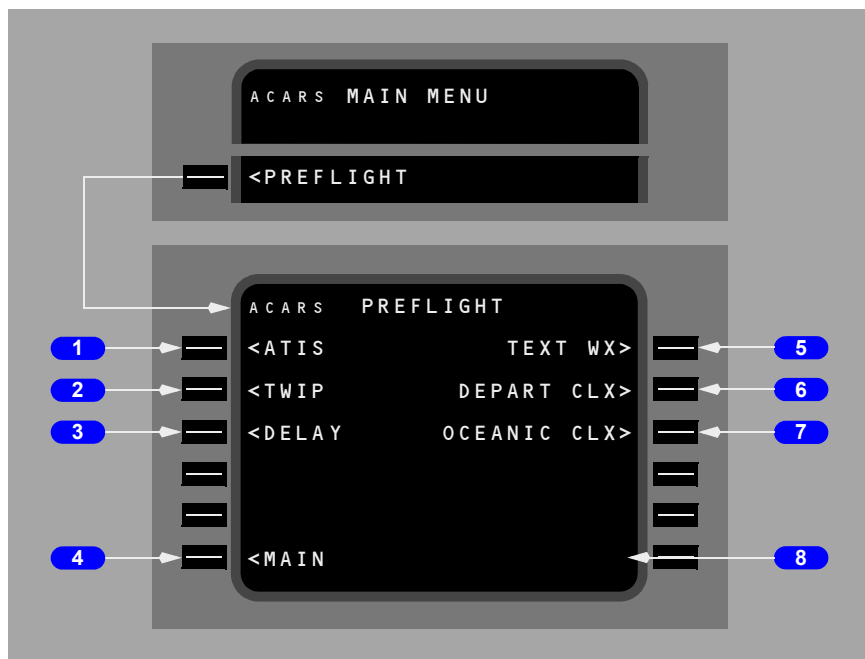

1 ATIS

Push – selects ATIS request page.

Provides the ability to request automatic terminal information system (ATIS) information from airports that support ATIS functionality.

2 TWIP

Push – selects TWIP page.

Provides the ability to request terminal weather information for pilots (TWIP) from airports that support TWIP functionality.

3 DELAY

Push – selects DELAY page.

The DELAY page and DELAY REASON sub–page provides the ability to inform ground support station of flight delays and reason for delay.

4 MAIN

Push – selects Navlink ACARS MAIN MENU page.

5 TEXT WX

Push – selects TEXT WX page.

Provides the ability to request terminal weather, winds, PIREPS, or SIGMETs reports for up to two stations. STATION 1, defaults to the destination station. Station requests may be manually entered or over written.

6 Departure Clearance (DEPART CLX)

Push – selects DEPART CLX page.

Provides the ability to request departure clearance for airports that support pre-departure clearance functionality.

7 Oceanic Clearance (OCEANIC CLX)


Push – selects OCEANIC CLX page.

The OCEANIC CLX page and ATC STATIONS sub-page, provides the ability to request oceanic clearance for airports that support departure clearance functionality.

8 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

INFLIGHT Page

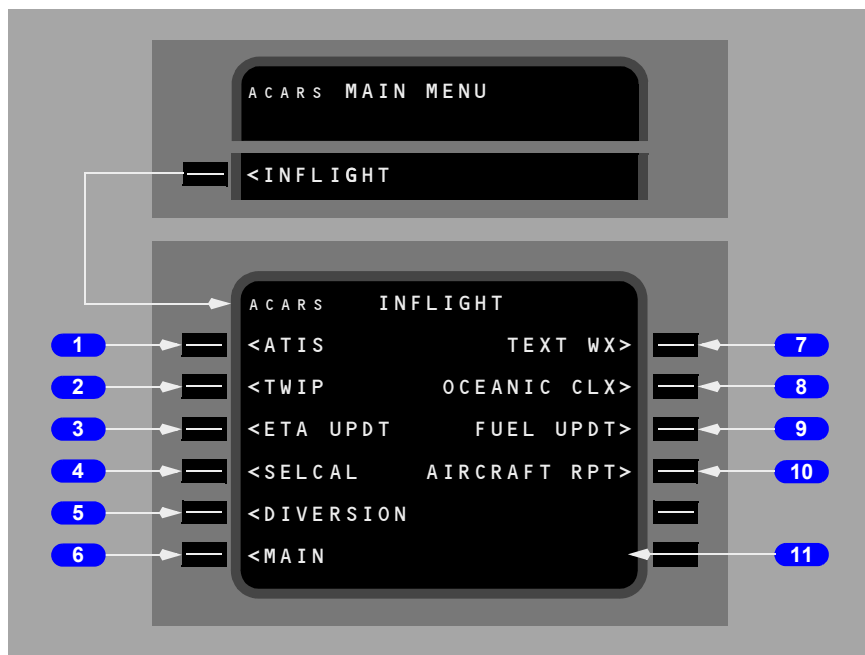

1 ATIS

Push – selects ATIS request page.

Provides the ability to request automatic terminal information system (ATIS) information from airports that support ATIS functionality.

2 TWIP

Push – selects TWIP page.

Provides the ability to request terminal weather information for pilots (TWIP) from airports that support TWIP functionality.

3 Estimated Time of Arrival Update (ETA UPDT)

Push – selects ETA UPDT page.

The ETA UPDATE page and ETA REASONS sub-page, provides the ability to inform the ground support station that the ETA has been updated and the reason for the change.

4 Selective Call (SELCAL)

Push – selects SELCAL page.

Provides the ability to view the VHF frequency uplinked in the Voice Go-Ahead message and the time last SELCAL uplink was received. The SELCAL page can also be accessed from the SELCAL advisory prompt.

5 DIVERSION

Push – selects DIVERSION page.

The DIVERSION page and DIVERT REASON sub-page, provides the ability to inform the ground support station of a diversion and the reason for the diversion.

6 MAIN

Push – selects Navlink ACARS MAIN MENU page.

7 TEXT WX

Push – selects TEXT WX page.

Provides the ability to request terminal weather, winds, PIREPS, or SIGMETS reports for up to two stations. STATION 1, defaults to the destination station. Station requests may be manually entered or over written.

8 Oceanic Clearance (OCEANIC CLX)

Push – selects OCEANIC CLX page.

The OCEANIC CLX page and ATC STATIONS sub-page, provides the ability to request oceanic clearance for airports that support departure clearance functionality.

9 Fuel Update (FUEL UPDT)

Push – selects FUEL UPDATE page.

The FUEL UPDATE and FUEL REASONS sub-page, provides the ability to inform the ground support station of the estimated fuel at any waypoint and the reason for the change in fuel quantity.

10 Aircraft Report (AIRCRAFT RPT)

Push – selects AIRCRAFT RPT page.


Provides the ability to send a maintenance report to the ground support maintenance department.

11 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

OOOI Page

The OOOI provides the ability to display the detected takeoff, land, and calculated flight time.

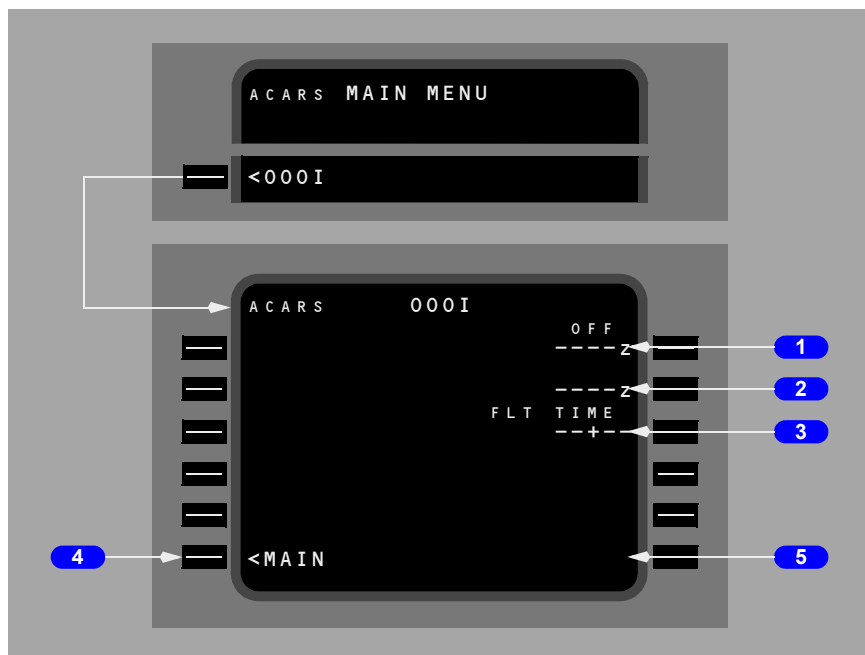

1 OFF

Displays the actual takeoff time.

2 ON

Displays the actual land time.

3 Flight Time (FLT TIME)


Displays the difference between the OFF and ON time for that leg.

4 MAIN

Push – selects Navlink ACARS MAIN MENU page.

5 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

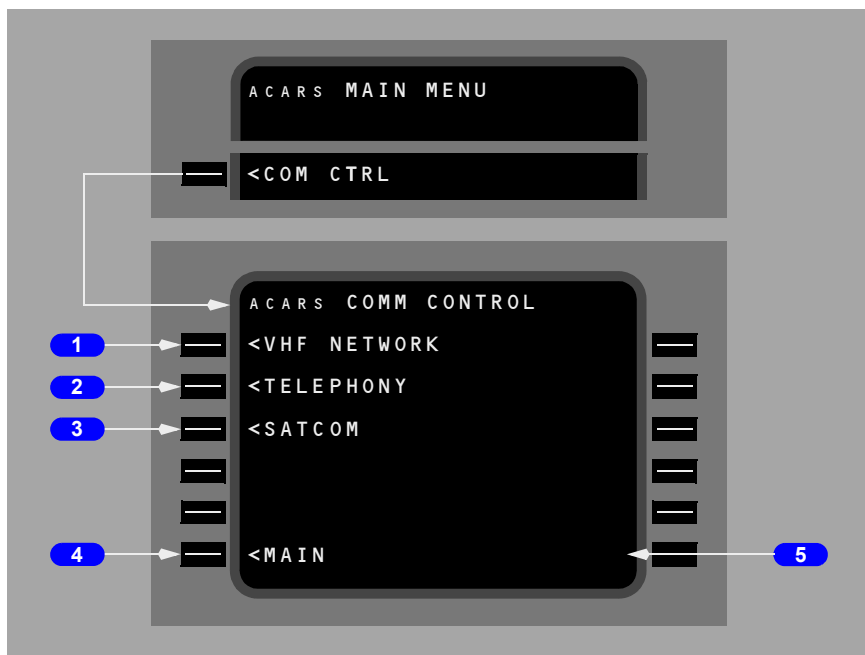Communication Control Page (COMM CONTROL)**1 VHF NETWORK**

Push – selects VHF NETWORK page.

The VHF NETWORK page and VHF FREQUENCY sub-page provides ability to disable VHF ground support station providers.

2 TELEPHONY

Push – selects TELEPHONY page.

Provides ability to set up telephone numbers used to contact the ground support station providers.

3 SATCOM

Push – selects SATCOM page.

Provides the ability to control various SATCOM functions.

4 MAIN


Push – selects Navlink ACARS MAIN MENU page.

5 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

Text Weather Page (TEXT WX)

The test weather page provides the ability to request various text weather reports for specified airports.

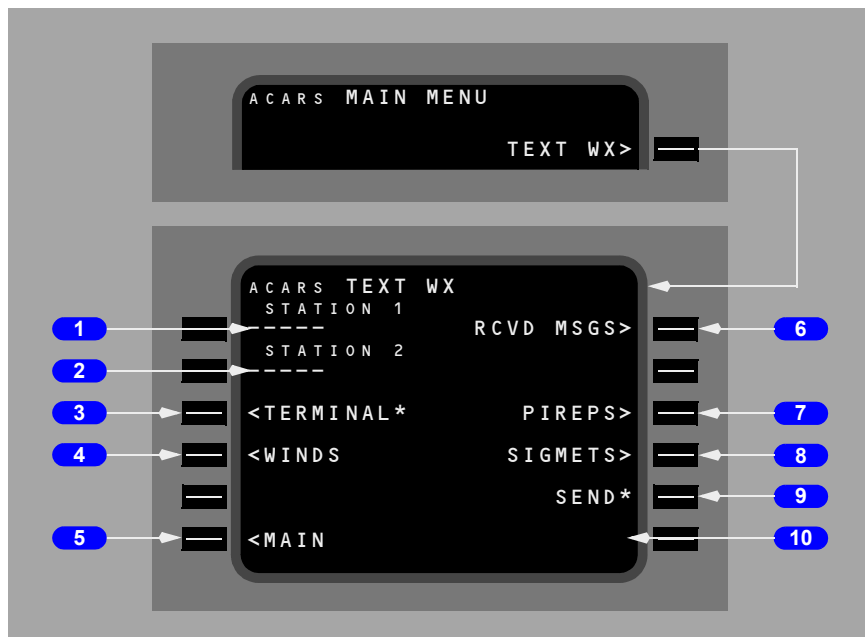

1 STATION 1

Defaults to destination airport. Manual entry of from 1 to 5 alphanumeric characters permits specific airport weather requests.

2 STATION 2

Manual entry of from 1 to 5 alphanumeric characters permits alternate airport weather request selection.

3 TERMINAL*

Push – includes terminal forecast information in request message.

4 WINDS

Push – includes winds information in request message.

5 MAIN/PREFLIGHT/INFLIGHT

Push – selects appropriate page to return to, based on page used to select TEXT WX page. Options are Navlink ACARS MAIN MENU, PREFLIGHT, or INFLIGHT page.

6 Received Messages (RCVD MSGS)

Push – selects RCVD MSGS list page.

7 PIREPS

Push – includes PIREPS in request message.

8 SIGMETS

Push – includes SIGMETS in request message.

9 SENDS*


Push – queues text weather downlink request.

10 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

Weather Charts Page (WX CHARTS)

The weather charts page provides the ability to request graphic weather charts and to list of charts already received from ground support station.

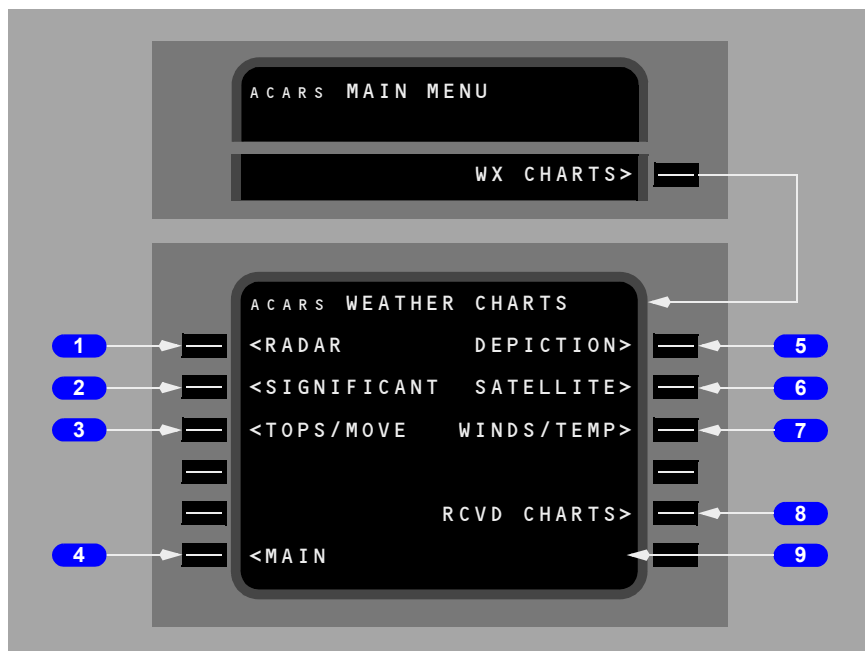

1 Radar Composite Charts (RADAR)

Push – selects COMPOSITE RADAR page.

The COMPOSITE RADAR page provides the ability to request radar charts for specified station and area coverage.

2 SIGNIFICANT Weather Charts

Push – selects SIGNIFICANT WX page.

The SIGNIFICANT WX page provides the ability to request significant weather charts for specified region.

3 Tops/Movement Page (TOPS/MOVE)

Push – selects TOPS/MOVEMENT page.

The TOPS/MOVEMENT page and TOPS/MOVEMENT REGION sub-page, provides the ability to request radar summary with tops and movement graphical images by region.

4 MAIN

Push – selects Navlink ACARS MAIN MENU page.

5 Weather Depiction Page (DEPICTION)

Push – selects WX DEPICTION page.

The WX DEPICTION page and WX DEPICT REGION sub–page, provides the ability to request weather depiction graphical images by region.

6 SATELLITE

Push – selects IR SATELLITE page.

The IR SATELLITE page and SATELLITE REGION sub–page, provides the ability to request infrared satellite images by region.

7 Winds/Temperature Aloft Page (WINDS/TEMP)

Push – selects WINDS/TEMP ALOFT page.

The WINDS/TEMP ALOFT page and WINDS/TEMP REGION sub–page, provides the ability to request winds aloft graphical images by region.

8 Received Weather Charts Page (RCVD CHARTS)

Push – selects RCVD CHARTS page.


Provides ability to view titles of all graphic weather messages received and to select specific messages for viewing.

9 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

Create Message Pages (CREATE MSG)

CREATE MSG provides up to six pages for free form text messages. Page one provides the address information. Pages two through six provides up to 17 lines of 24 characters each of text. Movement between pages is accomplished by using the NEXT or PREV function keys.

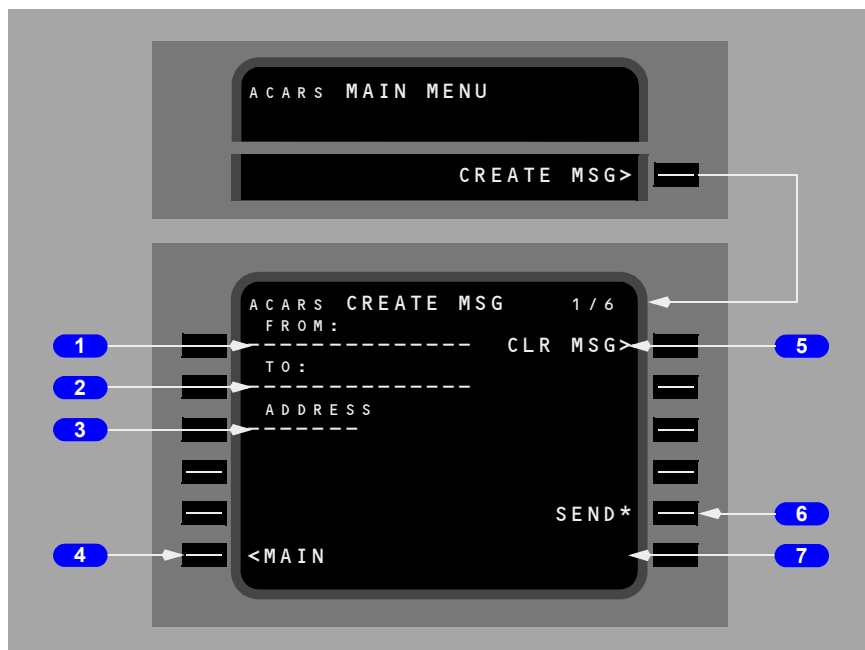

1 FROM

Provides entry of up to 14 alphanumeric characters of information.

2 TO

Provides entry of up to 14 alphanumeric characters of information.

3 ADDRESS

Provides of up to seven alphanumeric characters of ARINC telex address information.⁴⁰

4 MAIN

Push – selects Navlink ACARS MAIN MENU page.

5 Clear Message (CLR MSG)

Deletes the entire contents of the message.

6 SENDS*

Push – sends queues text weather downlink request.

7 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

Received Message List Page (RCVD MSGS)

RCVD MSGS provides ability to view titles of all received non-text weather messages and select specific messages for viewing. The message titles are displayed in reverse chronological order, most recent first. The page numbers shall reflect the current page number and the total number of pages (MM/NN).



1 NEWEST MESSAGE

Push – selects most recently received weather message for display.

2 NEXT MESSAGE

Push – selects next newest message for display.

3 NEXT +1 MESSAGE

Push – selects next older message for display.

4 NEXT +2 MESSAGE

Push – selects next older message for display.

5 NEXT +3 MESSAGE

Push – selects next older message for display.

6 MAIN


Push – selects Navlink ACARS MAIN MENU page.

7 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

MAINTENANCE Page

The MAINTENANCE menu page provides ground support crews with the ability to view and change Navlink ACARS configuration information and system fault logs for troubleshooting.

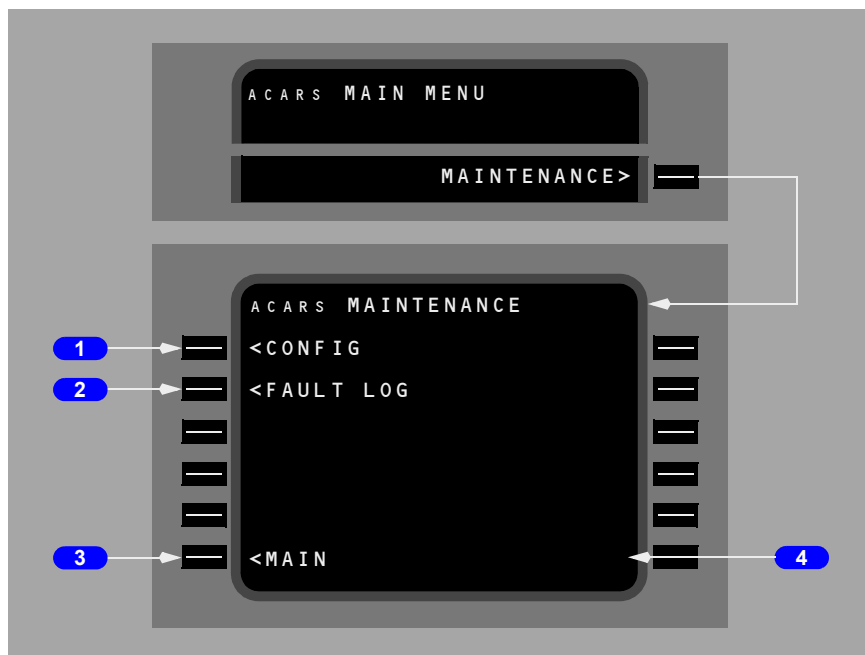

1 Configuration (CONFIG)

Push – selects CONFIG page.

Provides ability to view and change Navlink ACARS system configuration.

2 FAULT LOG

Push – displays FAULT LOG page.

The FAULT LOG and FAULT sub-page provides the ability to view Navlink ACARS fault indications and troubleshoot system faults.

3 MAIN

Push – selects Navlink ACARS MAIN MENU page.

4 Advisory Messages

Displays advisory message, if applicable. See Navlink ACARS message section.

Intentionally
Blank

Introduction

Completion of the FMC preflight requires data entry in all minimum required data locations. Completing all required and optional preflight data entries ensures the most accurate performance possible.

[\[Option – With company data link\]](#)

Data link can be used to load preflight data from airline ground stations. Using data link reduces the required crew actions. Manual crew entries replace existing data. Data link can also be used to load takeoff data onto the TAKEOFF REF pages.

Preflight Page Sequence

The normal preflight sequence follows paging prompts on each CDU page.

The normal FMC power-up page is the identification page. Preflight flow continues in this sequence:

- identification (IDENT) page
- position initialization (POS INIT) page
- route (RTE) page
- DEPARTURES page (no automatic prompt)
- performance initialization (PERF INIT) page


[\[Option – FMC U10.1 and later\]](#)

- with U10.1 or later installed:
 - N1 LIMIT page
 - takeoff reference (TAKEOFF REF) page.

Some of these pages are also used in flight.

Minimum Preflight Sequence

[Option – FMC U10.1 and later]

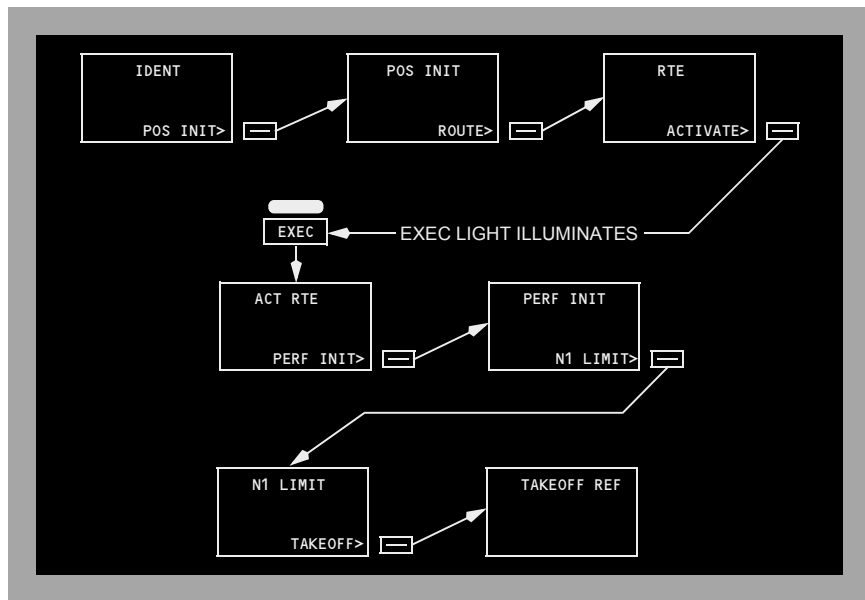

During preflight, a prompt in the lower right of the CDU page automatically directs the crew through the minimum requirements for preflight completion. Pushing the prompt key for the next page in the flow presents new entry requirements. Additional entries are made on pages to refine the performance and route calculations. If a required entry is missed, a prompt on the TAKEOFF page leads the crew to the preflight page that is missing data.

The airplane inertial position is required for FMC preflight and flight instrument operation.

A route must be entered and activated. The minimum route information is origin and destination airports and a route leg.

Performance information requires the airplane weight and cruising altitude.

Supplementary Pages

Supplementary pages are sometimes required. These pages must be manually selected. Manual selection interrupts the normal automatic sequence. Discussions of each normal page include methods to display the page when the automatic sequence is interrupted.

When the route includes SIDs and STARs, they can be entered into the preflight using the DEPARTURES or ARRIVALS pages.

Route discontinuities are removed, the route is modified, and speed/altitude restrictions are entered on the RTE LEGS page. The RTE LEGS page is described in the FMC Takeoff and Climb and FMC Cruise sections of this chapter.

[\[Option – With alternate destination prediction\]](#)

Alternate airports are added on the ALTERNATE DESTS page. The ALTERNATE DESTS page is described in the FMC Descent/Approach section of this chapter.

Waypoint, navigation, airport, and runway data is referenced on the REF NAV DATA page or the SUPP NAV DATA page. The REF NAV DATA page and SUPP NAV DATA page are described in the FMC Cruise section of this chapter.

VNAV performance is improved if the forecast winds and temperatures are entered during the preflight.

A single wind and temperature for cruise may be entered on the PERF INIT page. Wind and temperature data for specific cruise waypoints are entered on the RTE DATA page. The RTE DATA page is described in the FMC Cruise section. Wind and temperature for descent is entered on the DES FORECASTS page. The DES FORECASTS page is described in the FMC Descent section.


Preflight Pages

The preflight pages are presented in the sequence used during a typical preflight.

Initialization/Reference Index Page

The initialization/reference index page provides manual selection of FMC pages. It provides access to pages used during preflight and not normally used in flight.

[\[Option – With alternate destination prediction and message recall\]](#)

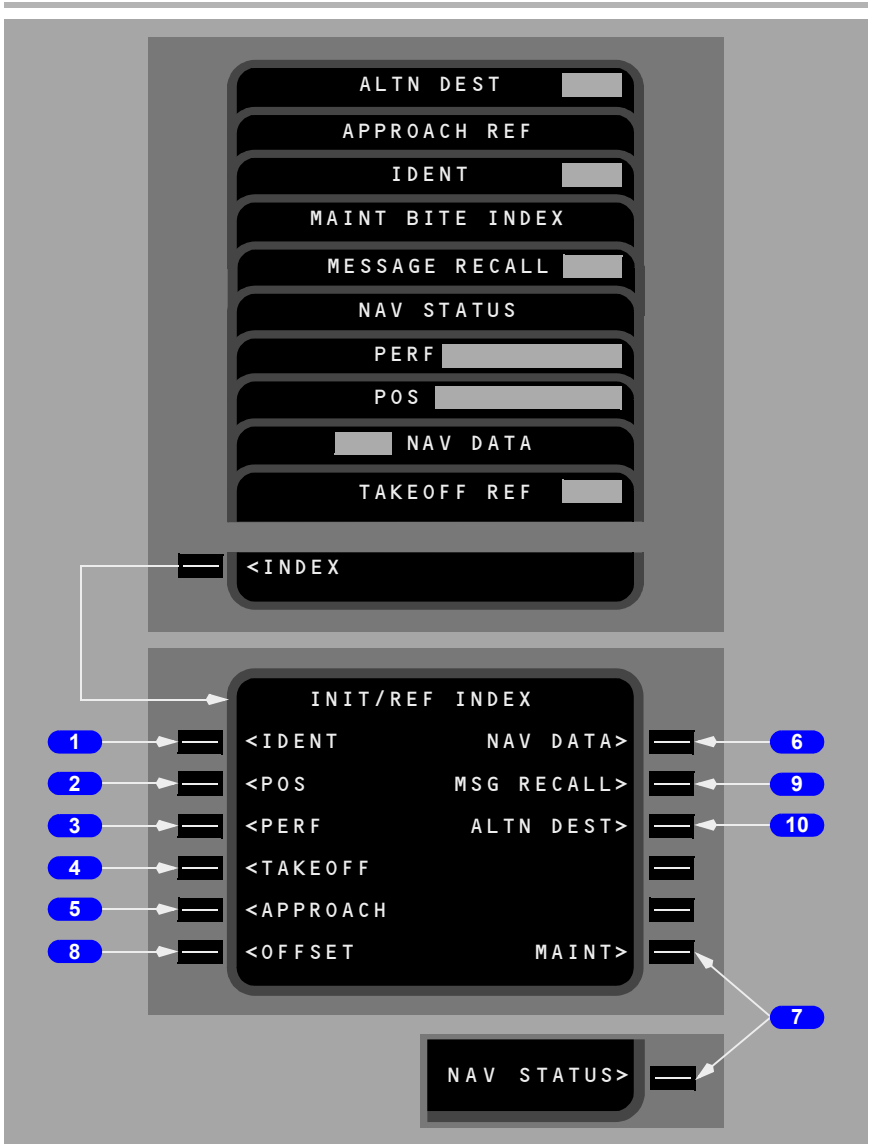

1 IDENT

Push – displays the IDENT page, the first page in the automatic preflight sequence.

2 Position Initialization (POS)

- Push – displays the POS INIT page used for IRS initialization.
- POS INIT page is also used to enter/update magnetic heading for an IRS which is in the ATT mode.

3 Performance Initialization (PERF)

Push – displays the PERF INIT page for initialization of data required for VNAV operations and performance predictions.

4 Takeoff Reference (TAKEOFF)

Push – displays the TAKEOFF REF page to enter takeoff reference information and V speeds.

5 APPROACH

Push – displays the APPROACH REF page for entry of the approach VREF speed.

6 Navigation Data (NAV DATA)

Push – displays the REF NAV DATA page to display information about waypoints, navaids, airports, and runways. On the ground, displays the SUPP NAV DATA page if SUPP is entered in the scratchpad prior to selection.

7 Maintenance (MAINT) or Navigation Status (NAV STATUS)

- MAINT – On ground only.
Push – displays maintenance pages for maintenance use.
- NAV STATUS – Replaces MAINT prompt when in air.
Push – displays NAV STATUS page which shows status of navigation aids being tuned by the FMC. Replaces MAINT prompt when in air.

8 OFFSET

Push – displays the LATERAL OFFSET page for initiating a lateral offset.

9 Message Recall (MSG RECALL)

[Option – With message recall]

Push – displays the MESSAGE RECALL page to view active messages.

10 Alternate Destinations (ALTN DEST)


[Option – With alternate destination prediction]

Push – displays the ALTERNATE DESTS page used for alternate airport planning and diversions.

Identification Page

Most of the data on this page is for crew verification. Active date accepts manual entries.

The crew verifies FMC data and selects a navigation database on the identification page.

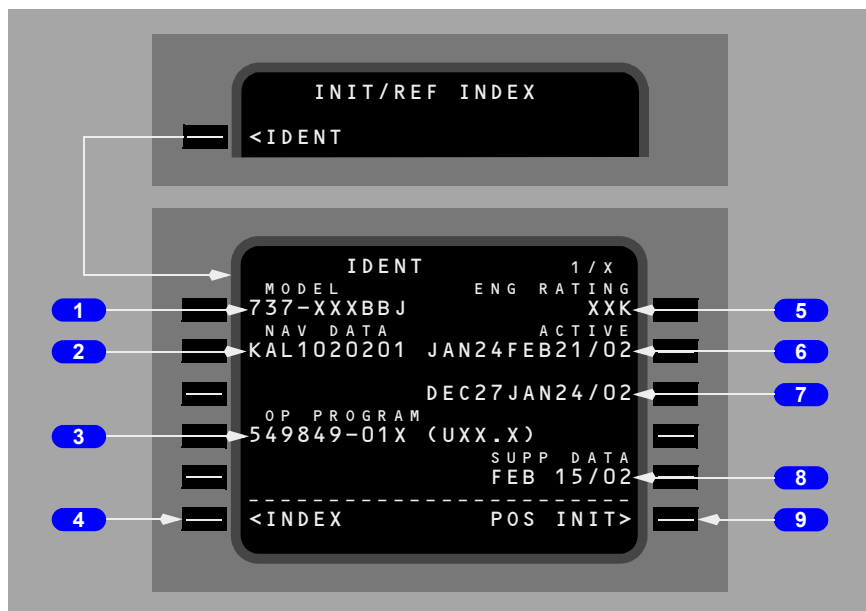

1 MODEL

Displays the airplane model from the FMC performance database (e.g., 737-700BBJ or 737-800BBJ).

2 Navigation Data (NAV DATA)

Displays the navigation database identifier.

3 Operational Program (OP PROGRAM)

Displays the Boeing software part number and update version. Update version installed at delivery:

[\[Option – FMC U10.6\]](#)

- Update 10.6 (U10.6)

[\[Option – FMC U10.7\]](#)

- Update 10.7 (U10.7)

4 INDEX

Push – displays the INIT/REF INDEX page.

5 Engine Rating (ENG RATING)

Displays the engine thrust stored in the FMC performance database (e.g., 20K, 22K, 24K, 26K or 27K).

6 ACTIVE Date Range

Displays the effectivity date range for the active navigation database.

Database activation is accomplished by pushing the proper date range prompt to copy that date into the scratchpad. The scratchpad date may then be transferred to the ACTIVE database line. The previous active date moves down to the inactive date line.

The ACTIVE label appears above the active navigation database date. No label appears above the inactive navigation database date. The navigation database date can be changed only on the ground. Changing the navigation database removes all previously entered route data.

When an active database expires in flight, the expired database continues to be used until the active date is changed after landing.

7 Inactive Date Range

Displays the effectivity date range for the inactive navigation database.

8 Supplemental Data (SUPP DATA)

Displays the effective date of supplemental data. Blank if supplemental database is empty.

9 Position Initialization (POS INIT)

Push – displays the POS INIT page.

Position Initialization Page 1/3

The position initialization page 1/3 allows airplane present position entry for IRS alignment and FMC initialization. The same page is used to enter/update the magnetic heading for an IRS which is in the ATT mode. There are three POS pages.

The diagram illustrates the Position Initialization Page 1/3. It shows a sequence of pages: INIT REF, POS REF, POS SHIFT, IDENT, POS INIT, and INIT/REF INDEX. The POS INIT page is shown in detail with numbered callouts 1 through 8.

INIT REF (INITIAL POSITION NOT ENTERED)

POS REF (2 / 3)

POS SHIFT (3 / 3)

IDENT

POS INIT (1 / 3)

INIT/REF INDEX

POS INIT (1 / 3) details:

- 1: REF AIRPORT
- 2: GATE
- 3: GMT-MON/DY
- 4: <INDEX
- 5: LAST POS
- 6: SET IRS POS
- 7: SET IRS HDG
- 8: ROUTE

1 Reference Airport (REF AIRPORT)

The reference airport entry allows entry of the current airport for display of the airport latitude/longitude.

Optional entry.

Valid entries are ICAO four letter airport identifiers.

Displays the latitude and longitude of the reference airport.

Removes previous GATE entry.

Entry blanks at lift-off.

2 GATE

The gate entry allows further refinement of the latitude/longitude position.

Optional entry after the reference airport is entered.

Valid entry is a gate number at the reference airport.

Displays the latitude and longitude of the reference airport gate from the navigation database.

Changes to dashes when a new reference airport is entered.

Entry blanks at lift-off.

3 GMT – Month/Day (GMT – MON/DY)

[Option – With GPS]

Displays GPS time and date. If the GPS time is not valid, GMT starts at 0000.0Z when the FMC is first powered. MON/DY is blank. Manually enter the correct GMT.

4 INDEX

Push – displays the INIT/REF INDEX page.

5 Last Position (LAST POS)

Displays the last FMC computed position.

6 Set IRS Position (SET IRS POS)

The set inertial position entry is required to initialize the IRS. Select the most accurate latitude/longitude for the initialization. A displayed latitude/longitude can be selected or a manual entry can be used.

If an entry is not made before the IRS finishes the initial alignment, the scratchpad message ENTER IRS POS is displayed.

Failure of the manually entered position to pass the IRS internal check displays the scratchpad message ENTER IRS POS.

Enter airplane position latitude and longitude.

Box prompts are displayed when either IRS is in the ALIGN mode and IRS present position has not been entered.

Blanks when the IRS transitions from the alignment to the navigation mode.

7 Set IRS Heading (SET IRS HDG)

Enter/update magnetic heading for any IRS which is in ATT mode. Line blanks when IRS not in ATT mode.

8 ROUTE

Push – displays the ROUTE page.


Position Reference Page 2/3

[Option – With GPS]

Position reference page 2 displays the airplane positions as calculated by the FMC, IRS, GPS, and radio navigation receivers.

This page displays latitude/longitude. All position displays are in actual latitude and longitude, as calculated by the respective system. Ground speed is displayed for the FMC and each IRS.

[Option – With GPS]

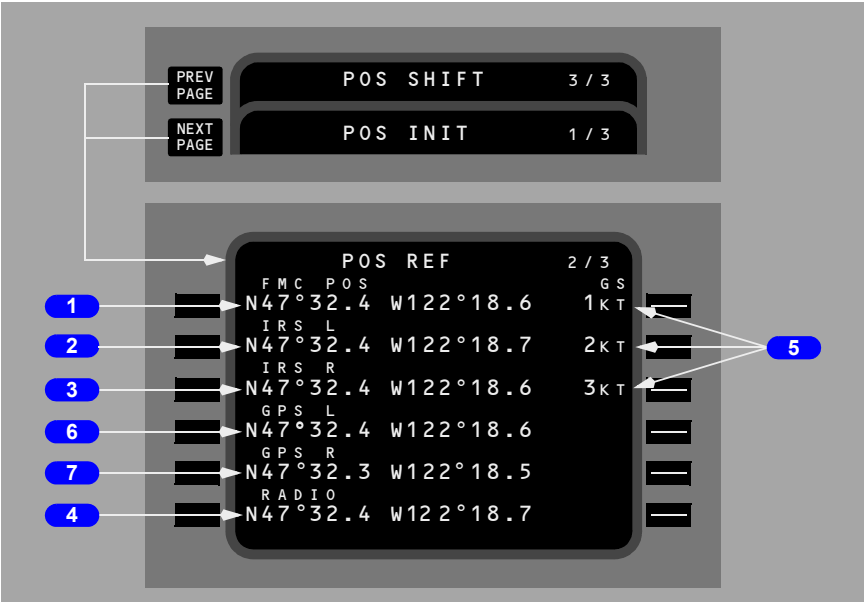

1 FMC Position (FMC POS)

Displays the FMC calculated latitude/longitude.

Blank if FMC position is invalid.

2 IRS L

Displays the latitude/longitude position as determined by the left IRS.

Blank if IRS position is invalid.

3 IRS R

Displays the latitude/longitude position as determined by the right IRS.

Blank if IRS position is invalid.

4 RADIO

Displays the latitude/longitude position as determined by the navigation radios.
Blank if on the ground or if radio position is invalid in flight.

5 Groundspeed (GS)

Displays the ground speed for FMC and IRS.
Blank if ground speed of related system is invalid.

6 GPS L

[Option – With GPS]

Displays the latitude/longitude position as determined by the left GPS.
Blank if GPS position is invalid.

7 GPS R

[Option – With GPS]

Displays the latitude/longitude position as determined by the right GPS.
Blank if GPS position is invalid.

Route Page 1/X

The route is entered and displayed in air traffic control format.

[Option – FMC U10.3 and later]


The first route page displays origin and destination data. Route segments are displayed on subsequent route pages.

Individual portions of the route may be manually entered by the flight crew. An pre-defined route may be loaded using the CO ROUTE line. CO ROUTE entries must correspond to a company defined route in the navigation database.

[Option – With company data link]

The route may also be uplinked.

[Option – FMC U10.3 and later, with flight number entry and company data link]

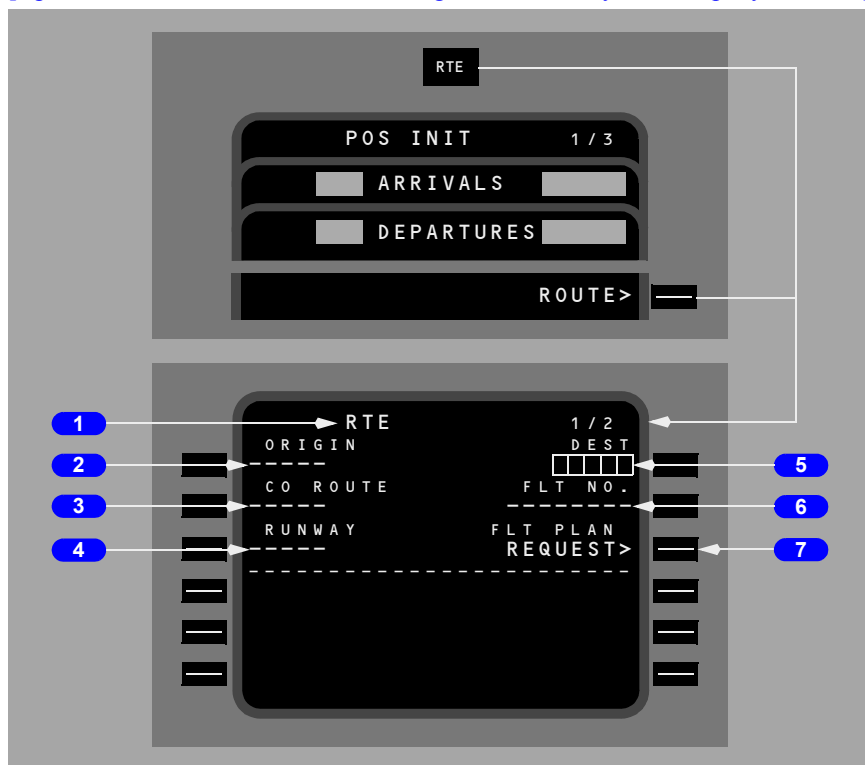

1 Page Title

The word ACT appears to the left of the title when the route has been activated and executed.

The word MOD appears to the left of the normal title when the route is modified and the change is not executed.

Multiple route pages are indicated by the page sequence number to the right of the title.

2 ORIGIN

Enter the ICAO airport identifier for the origin.

An entry is required for route activation.

Valid entries must be in the navigation database.

[Option – FMC U10.3 and later]

Entry is allowed for all phases of flight. Entry of a new origin erases the previous route.

New entries on an active route display MOD in the route title.

Enables direct selection of departure and arrival procedures for the origin airport.

Automatically entered as part of a company route.

3 Company Route (CO ROUTE)

A company route can be called from the navigation database by entering the route identifier. The data provided with a company route can include origin and destination airports, departure runway, SID, and STAR, and the route of flight. All company route data is automatically entered when the route identifier is entered.

An entry is optional for activation of the route.

Enter a company route identifier.

Valid entry is any crew entered company route name. If the name is not contained in the NAV database, the scratchpad message NOT IN DATA BASE is displayed.

Entry of a new company route replaces the previous route.

Inflight entry is inhibited for the active route.

4 RUNWAY

Line title does not display until after entry of origin airport.

Enter the desired runway for the origin airport.

An entry is optional for activation of the route.

Entries must be in the navigation database.

New entries on an active route display MOD in the route title.

Can be entered from the DEPARTURES page.

Entry is deleted upon takeoff.

5 Destination (DEST)

Enter the ICAO airport identifier for the destination of the route.

An entry is required for route activation.

Entries must be in the navigation database.

New entries on an active route display MOD in the route title.

Enables direct selection of arrival procedures for the destination airport.

Automatically entered as part of a company route.

Entry and execution of a new destination clears any runway and runway dependent approach procedure of the previous destination. If the active leg is part of the affected procedure, then all subsequent (inactive) legs are cleared.

6 Flight Number (FLT NO.)

[Option – With flight number entry]

Enter the company flight number.

Entry is optional for activation of the route.

Limited to 8 characters.

Crew entered.

Flight number is included in the PROGRESS page title.

[Option – With Elementary Surveillance]

As installed:

Transponder transmits flight number to ATC.

7 FLT PLAN REQUEST

[Option – With company data link]

Push – transmits a data link request for a flight plan route uplink

Route Pages 1/X and 2/X with Data Entries

[Option – FMC U10.3 and later]

[Option – With flight number entry and company data link]

The diagram shows two FMC route pages. The top page is Route Page 1/3, and the bottom page is Route Page 2/3. Both pages have a central display area with a black background and white text. The top page shows the origin (KBFI), destination (KMWH), flight number (430), and runway (13R). The bottom page shows the via point (LACRE3.VAMPS) and the termination point (VAMPS). Annotations 1, 2, and 3 point to specific fields: 1 points to the VIA field, 2 points to the TO field, and 3 points to the ACTIVATE field.

Route Page 1/3	
RTE	1 / 3
ORIGIN	DEST
KBFI	KMWH
CO ROUTE	FLT NO.
BFIMWH	430
RUNWAY	FLT PLAN
13R	REQUEST>

ACTIVATE>	

Route Page 2/3	
RTE	2 / 3
VIA	TO
LACRE3.VAMPS	VAMPS
V2	ELN
V336	EPH
----	----

ACTIVATE>	

1 VIA

The VIA column displays the route segment to the waypoint or termination displayed in the TO column. Enter the path which describes the route segment between the previous waypoint and the segment termination.

Enter an airway in the VIA column and box prompts are displayed in the TO column if the previous TO line contains a waypoint on the airway.

Valid entries can also include procedures or DIRECT. Procedures are normally entered through selections on DEPARTURES and ARRIVALS pages. DIRECT is normally entered as a result of entering a TO waypoint first.

Valid airways must:

- contain the fix entered in the TO waypoint, and
- contain the previous TO waypoint, or

Dashed prompts change to DIRECT if the TO waypoint is entered first.

Dash prompts appear for the first VIA beyond the end of the route.

Invalid VIA entries display the scratchpad entry INVALID ENTRY.

Invalid VIA entries are:

- airways and company routes which do not contain the TO waypoint of the previous line
- airways or company routes that are not in the navigation database.

When entering airways, the beginning and ending waypoints determine if the entry is valid. The route segment must contain the waypoint entered in the TO position. The TO waypoint of the previous route segment must be the same as the beginning point of the current route segment, or a route discontinuity is created between the segments.

Entry of a SID or transition automatically enters the VIA and TO data for the route segments of the SID. A SID automatically links to the next route segment when the final SID waypoint is part of the route segment.

LACRE3.VAMPS is an example of a SID selection made on the DEPARTURES page.

V2 is an example of airway entry.

2 TO

Enter the end point of the route segment specified by the VIA entry.

Entry of a waypoint in the TO column without first entering a VIA airway displays DIRECT in the VIA column.

Box prompts indicate that an entry is required.

Valid waypoint entries for a DIRECT route segment are any valid waypoint, fix, navaid, airport, or runway.

Valid waypoint entries for airways are waypoints or fixes on the airway.

Dash prompts appear on the first TO waypoint following the end of the route.

3 ACTIVATE

Pushing the ACTIVATE key arms the route for execution as the active route.

When the EXEC key is pushed, the route becomes the active route and the ACTIVATE prompt is replaced with the next required preflight page prompt.

Push – prepares the selected route for execution as the active route.

Activation of a route is required for completion of the preflight.

Displayed on inactive route pages.

After route activation, the ACTIVATE prompt is replaced by:

- PERF INIT, when the required performance data is incomplete, or
- TAKEOFF when the required performance data is complete.

Route Page 1/X with Data Entries

[Option – FMC U10.3 and later with pilot defined route]

[Option – With flight number entry and company data link]

The screenshots show the Route Page 1/X with Data Entries. The page is divided into three sections, each showing a different state of the route entry process.

Section 1: The top section shows the initial state of the route entry page. The page is titled "RTE" and "1 / 3". The data fields are: ORIGIN (KBFI), DEST (KMWH), CO ROUTE (BFIMWH), FLT NO. (430), RUNWAY (13R), and FLT PLAN (REQUEST). The bottom of the page has two buttons: "<SAVE" and "REVERSE>".

Section 2: The middle section shows the next step in the process. The "REF CO ROUTE" field is now active, and the "REF" field is highlighted. The "CO ROUTE" field is empty. The "FLT NO." field is still 430. The bottom of the page has two buttons: "<SAVE" and "REVERSE>".

Section 3: The bottom section shows the final step in the process. The "REF CO ROUTE" field is now active, and the "REF" field is highlighted. The "CO ROUTE" field is now filled with "12". The "FLT NO." field is still 430. The bottom of the page has two buttons: "<CONFIRM SAVE" and "REVERSE>".

1 SAVE

Push – saves the route to the Supplemental Nav database.

2 CANCEL

Push – cancels the route. The displayed page reverts to the RTE page before the SAVE prompt was selected.

3 Reference Company Route (REF CO ROUTE)

If the Supplemental Nav database contains less than ten routes, selecting SAVE replaces the previously entered company route with box prompts and changes the header to REF CO ROUTE.

4 CONFIRM SAVE

Displayed following entry of a valid REF CO ROUTE.

Push – saves the route to the Supplemental Nav database and the prompt reverts to SAVE.

The flight plan is saved with the following exceptions:

- terminal area procedures are removed
- speed and altitude constraints are removed
- holding patterns are removed
- lateral offsets are removed
- RTAs are removed
- abeam points are removed
- manually entered cruise winds are removed
- CO ROUTE identifier is removed.

5 REVERSE


Push – creates a MOD RTE by reversing the previous flight plan with the following exceptions:

- terminal area procedures are removed
- speed and altitude constraints are removed
- holding patterns are removed
- lateral offsets are removed
- RTAs are removed
- abeam points are removed
- manually entered cruise winds are removed
- CO ROUTE identifier is removed.

If airborne, the flight plan will be preceded by a discontinuity.

Route Pages 2/X with Data Entries

[Option – With pilot defined route]

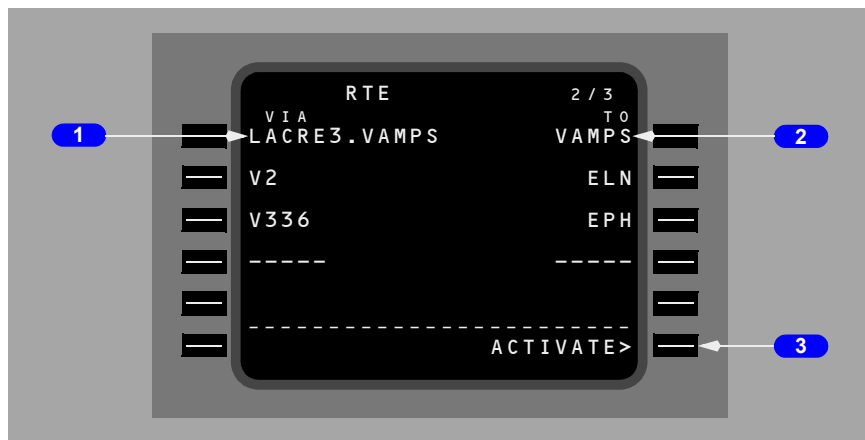

1 VIA

The VIA column displays the route segment to the waypoint or termination displayed in the TO column. Enter the path which describes the route segment between the previous waypoint and the segment termination.

Enter an airway in the VIA column and box prompts are displayed in the TO column if the previous TO line contains a waypoint on the airway.

Valid entries can also include procedures or DIRECT. Procedures are normally entered through selections on DEPARTURES and ARRIVALS pages. DIRECT is normally entered as a result of entering a TO waypoint first.

Valid airways must:

- contain the fix entered in the TO waypoint, and
- contain the previous TO waypoint, or

Dashed prompts change to DIRECT if the TO waypoint is entered first.

Dash prompts appear for the first VIA beyond the end of the route.

Invalid VIA entries display the scratchpad entry INVALID ENTRY.

Invalid VIA entries are:

- airways and company routes which do not contain the TO waypoint of the previous line
- airways or company routes that are not in the navigation database.

When entering airways, the beginning and ending waypoints determine if the entry is valid. The route segment must contain the waypoint entered in the TO position. The TO waypoint of the previous route segment must be the same as the beginning point of the current route segment, or a route discontinuity is created between the segments.

Entry of a SID or transition automatically enters the VIA and TO data for the route segments of the SID. A SID automatically links to the next route segment when the final SID waypoint is part of the route segment.

LACRE3.VAMPS is an example of a SID selection made on the DEPARTURES page.

V2 is an example of airway entry.

2 TO

Enter the end point of the route segment specified by the VIA entry.

Entry of a waypoint in the TO column without first entering a VIA airway displays DIRECT in the VIA column.

Box prompts indicate that an entry is required.

Valid waypoint entries for a DIRECT route segment are any valid waypoint, fix, navaid, airport, or runway.

Valid waypoint entries for airways are waypoints or fixes on the airway.

Dash prompts appear on the first TO waypoint following the end of the route.

3 ACTIVATE

Pushing the ACTIVATE key arms the route for execution as the active route. When the EXEC key is pushed, the route becomes the active route and the ACTIVATE prompt is replaced with the next required preflight page prompt.

Push – prepares the selected route for execution as the active route.

Activation of a route is required for completion of the preflight.


Displayed on inactive route pages.

After route activation, the ACTIVATE prompt is replaced by:

- PERF INIT, when the required performance data is incomplete, or
- TAKEOFF when the required performance data is complete.

Additional Route Page Prompts for an Activated Route

[Option – With alternate destination prediction]

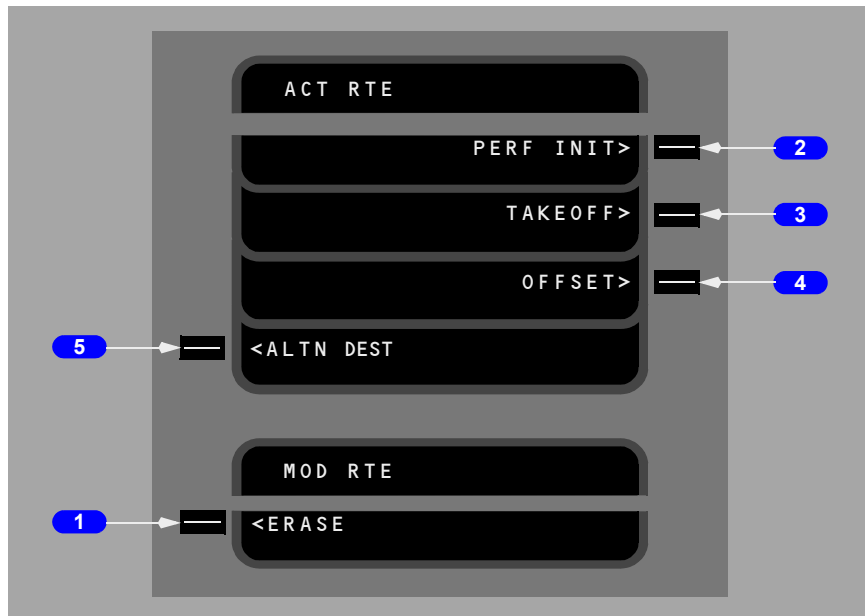

1 ERASE

Push – removes all pending modifications.

Displayed only during modifications.

2 Performance Initialization (PERF INIT)

Push – displays PERF INIT page.

Displayed only on the ground when required entries on the PERF INIT page are incomplete.

3 TAKEOFF

Push – displays TAKEOFF REF page 1/2.

Displayed only on the ground when all required entries on the PERF INIT page are complete.

4 OFFSET

Push – displays LATERAL OFFSET page.

Displayed only in flight.

5 Alternate Destination (ALTN DEST)


[Option – With alternate destination prediction]

Push – displays ALTERNATE DESTS page 1/6.

Departure/Arrival Index Page

The departure and arrival index page is used to select the departure or arrival page for the origin and destination airports for each route. The index also allows reference to departure or arrival information for any other airport in the navigation database.

Departure and arrival prompts are available for the origin airport. Destination airports have only arrival prompts.

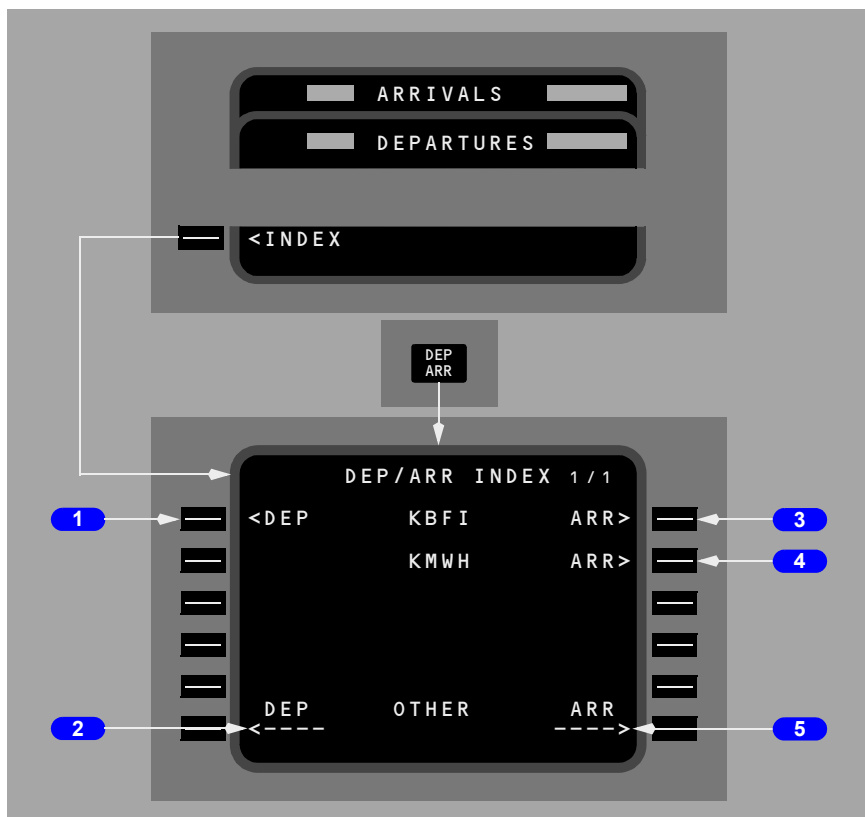

1 Departure (DEP) – Origin

Push – displays the departure page for origin airport.

2 Departure (DEP) – OTHER

Displays the departure page for the airport entered into this line through the scratchpad.

DEP prompt for OTHER allows display of departure information about airports that are not an origin or destination. The displayed information can be viewed but cannot be selected, because the airport is not on the route.

3 Arrival (ARR) – Origin

Push – displays the arrival page for origin airport. Origin airport arrivals selection is used during a turn-back situation.

4 Arrival (ARR) – Destination

Push – displays the arrival page for destination airport.


5 Arrival (ARR) – OTHER

Displays the arrival page for the airport entered into this line through the scratchpad.

ARR prompt for OTHER allows display of arrival information about airports that are not an origin or destination. The displayed information can be viewed but cannot be selected, because the airport is not on the route.

Departures Page

The departures page is used to select the departure runway, SID, and transition for the route origin airport.

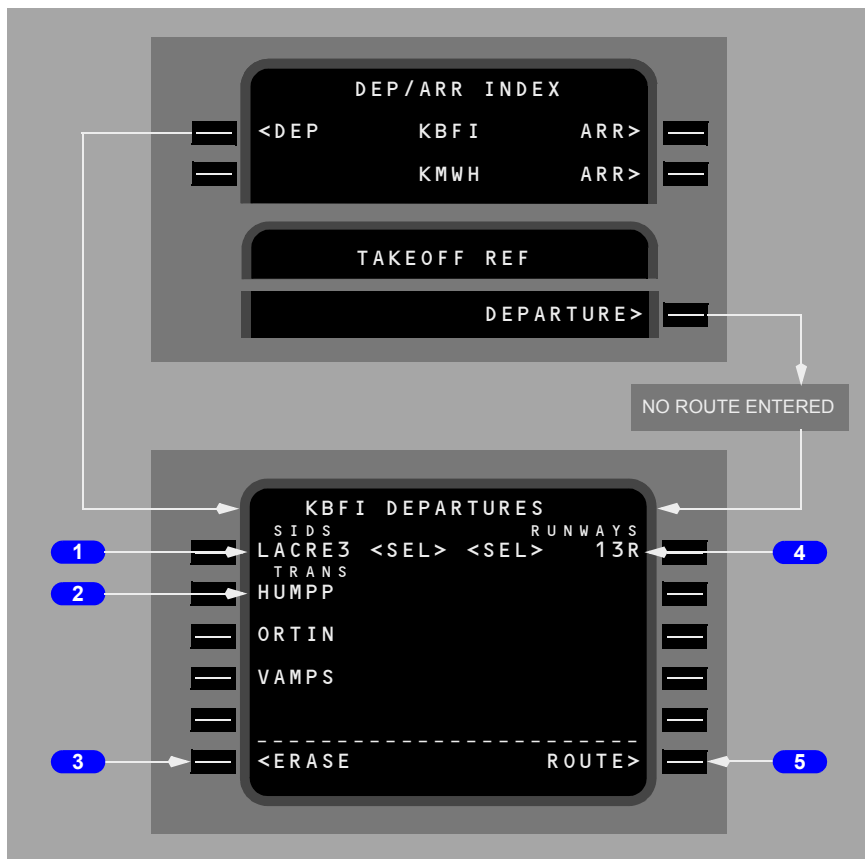

1 Standard Instrument Departures (SIDS)

Displays SIDS for the airport and runway selections.

Without the selection of a runway on the RTE page, the initial display contains all of the information for the airport runways and SIDS. As selections are made, incompatible options are removed. SID transitions are displayed after a SID is selected.

2 Transitions (TRANS)

Displays transitions compatible with the selected SID.

3 ERASE/INDEX

ERASE is displayed when a route modification is pending.

Push – removes route modifications that are not executed and restores the original route.

INDEX is displayed when no route modification is pending.

Push – displays the DEP/ARR INDEX page.

4 RUNWAYS

Displays a list of runways for the selected airport.

The runway selected on the RTE page is displayed as <SEL> or <ACT> when this page is displayed.

5 ROUTE

Push – displays the RTE page.

Selecting Options

Selecting an option displays <SEL> inboard of the option, and a route modification is created. When the modification is executed, the <SEL> becomes <ACT>. Leaving the page and returning displays all options and the <SEL> or <ACT> prompts.

Performance Initialization Page

The performance initialization page allows the entry of airplane and route data to initialize performance calculations. This information is required for VNAV calculations.

[Option – FMC U10.1 and later, with company data link and PLAN FUEL line]

PERF LIMITS 2 / 2

INIT/REF INDEX

<PERF>

RTE

TAKEOFF REF

<PERF INIT>

**ON GROUND,
PERF INIT INCOMPLETE**

PERF INIT 1 / 2

1	GW/CRZ CG	8.0%	TRIP/CRZ ALT	FL190	7
2	PLAN/FUEL	34.0	CRZ WIND		8
3	ZFW		T/C OAT		9
4	RESERVES		TRANS ALT	18000	10
5	COST INDEX		PERF INIT REQUEST>		11
6	<INDEX>		N1 LIMIT>		12

1 Gross Weight/Cruise Center of Gravity (GW/ CRZ CG)

Airplane gross weight is required. The entry can be made by the flight crew or automatically calculated by the FMC, following entry of zero fuel weight.

Enter airplane gross weight.

Valid entries are xxx or xxx.x.

Automatically displays calculated weight when zero fuel weight is entered first.

Displays default or manually entered cruise CG. Entry of actual cruise CG may increase maximum altitude capability.

2 PLAN/FUEL

[Option – With PLAN FUEL line]

Fuel on board is automatically displayed as received from the airplane fuel quantity indication system.

[Option – FMC U10.3 and later]

PLAN entry allows fuel predictions before actual fuel is known. Entry is blanked with flaps extended or in flight.

In flight, when the FMC is not receiving the required fuel data, the CDU displays dashes and allows manual entry of fuel weight. After manual entry, MAN (manual) appears next to the fuel weight. Manual entry of fuel weight should continue approximately every 30 minutes for the remainder of the flight to keep gross weight current.

3 Zero Fuel Weight (ZFW)

Airplane zero fuel weight is required. Normally the ZFW is entered from the airplane dispatch papers and the FMC calculates the airplane gross weight.

Enter the airplane zero fuel weight.

Valid entry is xxx or xxx.x.

Calculated zero fuel weight is automatically displayed if airplane gross weight is entered first and fuel on board is valid.

4 RESERVES

Enter fuel reserves for the route.

Entry is required to complete the preflight.

Valid entry is xx or xx.x.

5 COST INDEX

The cost index is used to calculate ECON climb and cruise speeds. The value reflects the relative impacts on overall trip cost of fuel cost as compared to other direct hourly operating costs.

Enter the cost index for ECON calculations.

Entry is required to enable use of VNAV mode.

Valid entries are 0 to 500. 0 causes the ECON speed to be MAX RANGE; 500 results in a minimum time flight.

Entry of a company route on RTE page causes any company stored value of cost index to be automatically displayed. A manual entry has priority.

6 INDEX

Push – displays the INIT/REF INDEX page.

7 Trip/Cruise Altitude (TRIP/CRZ ALT)

Trip altitude is automatically computed and displayed whenever entries have been made for the ORIGIN, DEST, GROSS WT, and COST INDEX. Otherwise, the field is blank.

Trip altitude is the predicted minimum cost altitude determined by operator constraints. Provides crew a reference for selecting a planned cruise altitude.

Cruise altitude is required.

Enter the cruise altitude for the route.

Automatically displays this cruise altitude on the CLB, CRZ, and RTE Legs pages.

8 Cruise Wind (CRZ WIND)

Cruise wind entry provides input to optimize FMC calculations.

Enter the forecast cruise wind.

Entry is propagated onto the RTE DATA page.

If no entry made, the FMC assumes zero wind for preflight predictions.

9 Top of Climb Outside Air Temperature (T/C OAT)

[Option – With company data link]

T/C OAT entry provides input to optimize FMC calculations.

Entry causes ISA DEV to be computed and displayed.

Enter top of climb OAT.

If no entry made, FMC assumes ISA value.

Note: On FMC Updates prior to Update U10.7, the FMC computes maximum altitude (MAX) as a function of the forecast top-of-climb outside air temperature (T/C OAT) entered on the PERF INIT page. If no T/C OAT entry is made, the FMC assumes an ISA with a deviation of zero degrees to calculate the MAX altitude and limit speeds. This can lead to degraded accuracy for MAX altitude if the current ambient temperature is significantly different than forecast or if the temperature is not subsequently updated by the crew on the PERF INIT page during flight.

Note: FMC Update U10.7 and later takes advantage of sensed static air temperature (SAT) to automatically provide updating of the MAX altitude. The revised temperature model applies after climbing 5000 feet above the departure runway elevation. Calculation of MAX altitude uses the actual ISA deviation derived from the actual sensed SAT projected up to the MAX and OPT altitude solutions. The temperature model prior to U10.7 is still applied below 5000 feet. T/C OAT, if entered on the PERF INIT page, is used for the preflight planning forecast of MAX/OPT altitude.

10 Transition Altitude (TRANS ALT)

[\[Option – With company data link\]](#)

Displays 18,000 feet at FMC power up.

Changes automatically after selecting a departure procedure with a different transition altitude.

Manual entry has priority.

11 PERF INIT REQUEST

[\[Option – With company data link\]](#)

Push – transmits a data link request for a PERF INIT uplink

12 N1 LIMIT

[\[Option – FMC U10.1 and later\]](#)

Push – displays the N1 LIMIT page.

Performance Limits Page

The performance limits page allows the entry of performance limits affecting RTA and ECON calculations.

[Option – With company data link]

The diagram shows the FMC display with the following pages visible: **PERF INIT 1 / 2**, **RTA PROGRESS**, and **<LIMITS**. The main display shows the **PERF LIMITS 2 / 2** page with the following data:

TIME ERROR TOLERANCE			
8 SEC AT RTA WPT			
MIN SPD	--CLB--	MAX SPD	
100 / .400		340 / .820	
--CRZ--			
100 / .400		340 / .820	
--DES--			
100 / .400		340 / .820	
PERF LIM		PERF LIM	
<REPORT		REQUEST>	
-----		-----	
<INDEX		RTA>	

Numbered callouts point to the following fields:

- 1**: TIME ERROR TOLERANCE (8 SEC AT RTA WPT)
- 2**: MIN SPD (100 / .400)
- 3**: INDEX (<INDEX)
- 4**: RTA (<RTA>)
- 5**: PERF LIM (<REPORT)
- 6**: REQUEST (>REQUEST)

1 TIME ERROR TOLERANCE

Used during RTA calculations to establish a boundary on computed speeds.

Valid entry range is from 5 to 30 seconds.

Default value is 30 seconds and is displayed in small font.

2 Minimum Speed/Maximum Speed (MIN SPD/MAX SPD)

Establishes lower and upper speed limits for each phase of flight.

Default is 100/.400 for lower limit and 340/.820 for upper limit. Default values are displayed in small font and entered values are displayed in large font.

Either CAS or Mach can be entered.

Limits both RTA and ECON modes in flight.

3 INDEX

Push – selects INIT /REF INDEX page.

4 Required Time of Arrival (RTA)

Push – selects RTA PROGRESS page.

5 PERF LIM REPORT

[Option – [With company data link](#)]

Push – transmits displayed performance limits to ground station.

6 PERF LIM REQUEST

[Option – [With company data link](#)]

Push – transmits a data link request for a performance limits uplink.

N1 LIMIT Page - Preflight

[Option – FMC U10.1 and later]

This section describes the preflight version of the N1 LIMIT page. See the FMC Takeoff and Climb section for a description of the in-flight version of the N1 LIMIT page.

The N1 LIMIT page is used during preflight to manage takeoff and climb thrust. Temperature data is entered, allowing the FMC to make N1 computations for normal or reduced thrust takeoff. Fixed takeoff and climb thrust derates may be selected.

[Option – Aspirated TAT]

The diagram illustrates the N1 LIMIT preflight page layout. At the top, a label 'N1 LIMIT' points to the page title. Below it, a 'PERF INIT' button with a '1 / 2' indicator is shown. The main display area is titled 'ON GROUND' and contains the 'N1 LIMIT' page. The page is divided into two sections: '1 / 1' and '1 / 2'. The '1 / 1' section displays 'SEL / OAT' with a temperature entry field showing '+15 °C' and '94.6 / 94.6'. Below this, there are fields for 'XKK' and 'XKK DERATE'. The '1 / 2' section displays 'CLB' and 'CLB-1' fields. The '1 / 1' section also includes a 'TAKEOFF' button. Numbered callouts (1-9) point to specific fields and controls: 1 points to the 'SEL / OAT' field, 2 points to the temperature entry field, 3 points to the 'XKK' field, 4 points to the 'XKK DERATE' field, 5 points to the 'TAKEOFF' button, 6 points to the 'CLB' field, 7 points to the 'CLB-1' field, 8 points to the 'CLB-2' field, and 9 points to the 'PERF INIT' button.

1 Selected Temperature (SEL)

Entry of an assumed temperature calculates a reduced thrust takeoff N1.

Entry can be made in degrees C or degrees F.

Maximum allowable entry is 70 degrees C (158 degrees F). The FMC, however, will limit the N1 to 25% takeoff reduction.

2 Outside Air Temperature (OAT)

[Option – Aspirated TAT]

Aspirated TAT displays the sensed OAT in small-size characters. Manual entry of actual takeoff OAT is displayed in large-sized characters.

Sensed or manually entered OAT is used by the FMC to calculate the takeoff N1 limits.

Entry can be made in degrees C or degrees F.

3 Takeoff Thrust Limit (TO XXX)

Push – selects full rated takeoff thrust limit.

Selection of TO automatically selects CLB thrust.

Data line title displays full rated thrust. Typical line titles display as “24K” or “22K.”

Selection of a new rating after V speeds are selected on the TAKEOFF REF page causes the V speeds to display in small font, and the NO VSPD flag to show on the airspeed indication.

4 Takeoff Derates (TO–1 and TO–2)

Push – selects the associated takeoff thrust limit.

[Option – With company data link]

Takeoff data uplink may automatically select a thrust derate.

Data line title displays the associated reduced thrust rating. Typical line titles display as “22K DERATE” or “20K DERATE”

Normally, selecting TO–1 automatically arms CLB–1 and selecting TO–2 automatically arms CLB–2.

Note: If a reduced thrust takeoff has been specified, then either CLB–1 or CLB–2 may be automatically specified if required to avoid a climb N1 value greater than the specified reduced thrust takeoff N1.

Selection of a new rating after V speeds are selected on the TAKEOFF REF page causes the V speeds to display in small font, and the NO VSPD flag to show on the airspeed indication.

5 PERF INIT

Push – displays the PERF INIT page.

6 Takeoff N1 (XXX N1)

Displays the FMC computed N1 for takeoff

Data line title displays full rated thrust or selected takeoff derate thrust. Typical line titles display as “24K N1” or “22K N1”

Data line title changes to RED XXK N1 when an assumed temperature (SEL TEMP) entry results in a reduced N1 value. If a SEL TEMP and a DERATE are both selected the data line title will change to "RED XXK N1," and the effect on thrust will be additive.

7 Climb (CLB)

Push – selects full rated climb thrust limit.

[\[Option – Automatic takeoff thrust reduction\]](#)

Climb thrust is automatically selected at the thrust reduction point on the TAKEOFF REF page 2.

8 Reduced Climb (CLB-1 and CLB-2)

Push – selects the associated reduced thrust climb mode.

CLB-1 provides a climb limit reduced by 3% N1 (approximately 10% thrust).

CLB-2 provides a climb limit reduced by 6% N1 (approximately 20% thrust).

Deletion results in the selection of CLB thrust.

Manual selection of a climb thrust rating overrides the automatic selection.

[\[Option – With company data link\]](#)

Takeoff data uplink may automatically select a thrust derate.

9 TAKEOFF

Push – displays the TAKEOFF REF page.

Selecting Takeoff Thrust

Selecting the maximum takeoff thrust or a derate (TO, TO-1, TO-2) displays <ACT> inboard of the option. The FMC automatically selects the highest climb thrust available (CLB, CLB-1, CLB-2) which would not result in a thrust lever push, when the aircraft transitions from takeoff to climb. <SEL> is displayed inboard of the selected climb N1 limit.

Takeoff Reference Page 1/2

The takeoff reference page allows the crew to manage takeoff performance.

[\[Option – FMC U10.1 and later\]](#)

Takeoff flap setting and V speeds are entered and verified. Thrust limits, takeoff position, CG, and trim can be verified or changed.

Preflight pages are selectively displayed to indicate preflight status whenever required entries on those pages are incomplete. Takeoff reference page entries finish the normal preflight. V speeds should be set before completion. FMC position can be updated prior to takeoff.

[Option – FMC U10.1 and later, with company data link and FMC computed QRH takeoff speeds]

INIT/REF INDEX

<TAKEOFF

PREV
PAGE TAKEOFF REF 2 / 2

ON GROUND

N1 LIMIT 1 / 1

TAKEOFF>

ON GROUND AND PERF INIT COMPLETE

RTE 1 / X

TAKEOFF>

TAKEOFF REF 1 / 2

FLAPS	QRH	V1
XXK N1	---	VR
94.6 / 94.6%	---	V2
CG TRIM	---	---
22.5%	---	---
TAKEOFF DATA	GW / TOW	---
<REQUEST	---	---
INTERSECT	---	---
-----SELECT	---	---
<PERF INIT	QRH OFF>	---

* SEE SUBSEQUENT PAGES FOR DESCRIPTION

1 FLAPS

Enter takeoff flaps setting. Manual entry of 1, 5, 10, 15, or 25 allowed.

2 Takeoff N1 (XXK N1)

Displays the FMC computed N1 for takeoff.

Data line title displays full rated thrust or selected takeoff derate thrust. Typical line titles display as “24K N1” or “22K N1.”

Data line title changes to RED XXK N1 when an assumed temperature (SEL TEMP) entry results in a reduced N1 value. If a SEL TEMP and a DERATE are both selected the data line title will change to "RED XXK N1," and the effect on thrust will be additive.

3 Center of Gravity (CG)

Initial display is dashes.

After CG is entered, the FMC calculates and displays stabilizer takeoff trim settings.

4 TRIM

Displays stabilizer takeoff trim setting.

Display is blank unless FLAPS and CG are entered.

Company Data Link

[Option – With company data link]



1 TAKEOFF DATA REQUEST

Push – transmits a data link request for a takeoff data uplink. Resulting TAKEOFF REF uplink may contain takeoff data for up to 6 runways, which are stored in FMC uplink memory.

2 Intersection (INTERSECT)

Displays active runway.


An intersection may be entered. Valid entries are 1 to 3 alphanumerics.

If an intersection is entered and TAKEOFF DATA REQUEST is made, the runway/intersection pair is included in the request downlink.

If the displayed runway or runway/intersection pair matches a runway or runway/intersection pair in FMC uplink memory, the associated TAKEOFF REF UPLINK is annunciated for flight crew ACCEPT/REJECT.

FMC Computed V Speed Data

[Option – With FMC computed QRH takeoff speeds]

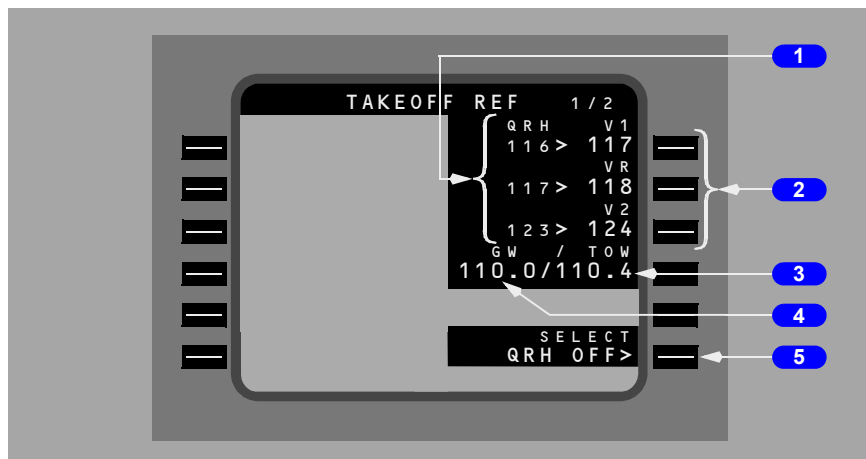

1 QRH

[Option – With FMC computed QRH takeoff speeds]

Displays FMC computed V speeds, based on assumed temperature, current gross weight and flap setting.

2 V Speeds (V1, VR, and V2)

Push – selects associated FMC computed V speed from center column.

Manual entry may be made.

Large font V speeds are displayed on the airspeed indication.

3 Takeoff Weight (TOW)

Displays gross weight that the large font V speeds in the column above are based on.

Blank if there are no large font V speeds in the column above.

4 Gross Weight (GW)

Displays current gross weight.

FMC computed V speeds in the column above are based on this weight.

5 Select FMC Computed V Speeds On/Off (SELECT QRH ON/OFF)

[Option – With FMC computed QRH takeoff speeds]

When SELECT QRH OFF displayed

- Push – Removes FMC computed V speeds from display.

When SELECT QRH ON displayed

- Push – Displays FMC computed V speeds.

Default is FMC Computed V speeds displayed.

Change of Performance Data After V Speed Entry

V speeds should be entered on the TAKEOFF REF page as a final step of FMC preflight. If V speeds are entered and then performance data (for example, OAT or takeoff thrust) is subsequently changed, the FMC automatically removes the previously entered V speeds and the NO VSPD flag shows on the airspeed indication.


In addition, the scratchpad message VERIFY TAKEOFF SPEEDS displays if any of the following items are changed after V speeds have been entered:

- gross weight
- zero fuel weight
- plan fuel.

[Option – With company data link or FMC computed takeoff speeds]

The previously entered V speeds are displayed in small font on the TAKEOFF REF page.

[Option – With FMC computed QRH takeoff speeds]

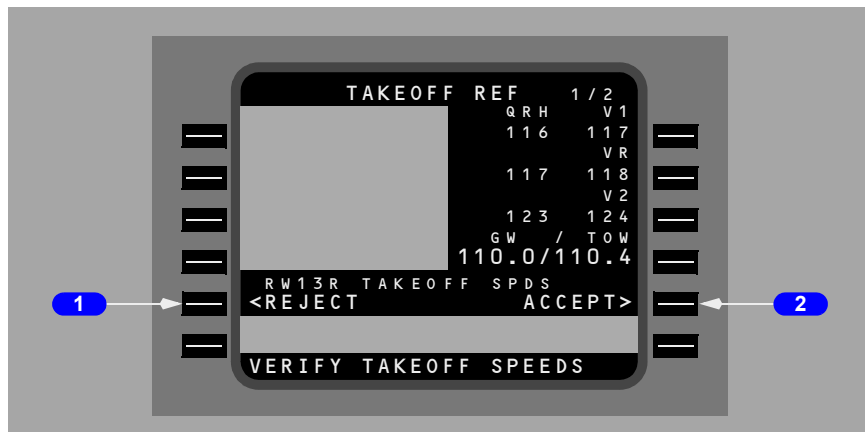

1 REJECT

[Option – With plan fuel]

Displayed if V speeds have been entered and airplane gross weight, ZFW, or plan fuel has been changed.

Push – causes the now small font takeoff speeds to disappear.


2 ACCEPT

[Option – With plan fuel]

Displayed if V speeds have been entered and airplane gross weight, ZFW, or plan fuel has been changed.

Push – changes the small font takeoff speeds to large font.

Preflight Status

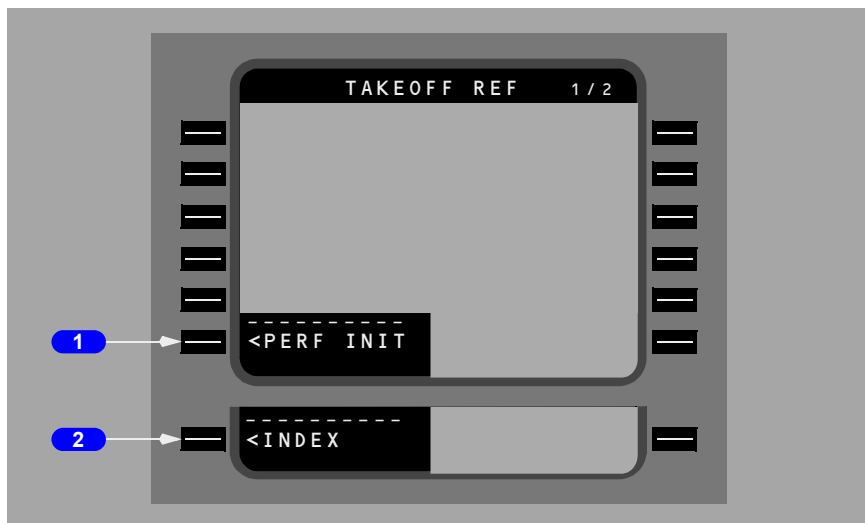

1 Preflight Incomplete

When required preflight entries are not complete, the related page title displays

- POS INIT – IRS position not entered or invalid
- PERF INIT – required performance data not entered or executed
- ROUTE – required RTE page data not entered
- DEPARTURE – runway or route data not entered on the RTE page.

Push – Displays associated page.

2 Preflight Complete (INDEX)


When the required preflight entries are complete, the index prompt is displayed below the takeoff reference page data. When required preflight entries are not complete, the related page title replaces the INDEX prompt.

Displayed following completion of required preflight entries on the POS INIT, RTE, and PERF INIT pages.

Push – Displays INIT REF INDEX page.

FMC Takeoff Position Update

[Option – Runway remaining update with TO/GA activation, feet]

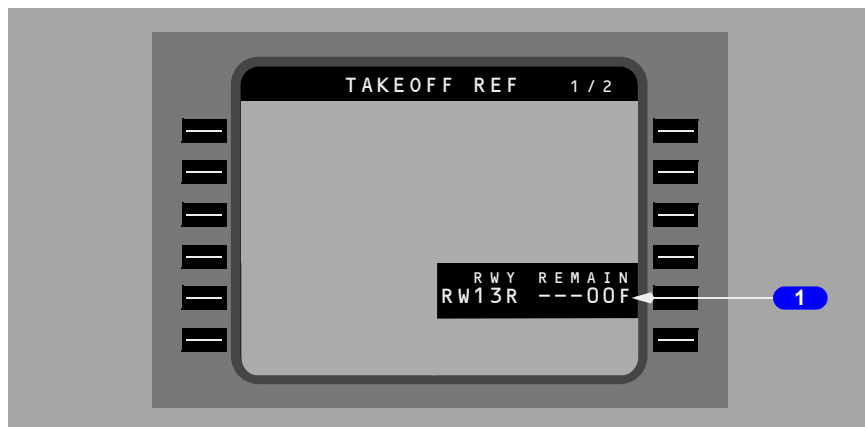

1 Runway Remaining (RWY REMAIN)

[Option – Runway remaining update with TO/GA activation, FMC U10.2 and later]

Automatically displays the departure runway from the RTE page.

If a runway remaining distance is not entered and GPS UPDATE is OFF, the FMC updates to the runway threshold when TO/GA is pushed.

If a runway remaining distance is entered and GPS UPDATE is OFF, the FMC updates to the runway length remaining when the TO/GA switch is pushed.

TO/GA position update inhibited if GPS UPDATE is ON.

Following TO/GA update, the runway identifier and any entered shift value are highlighted in reverse video characters.

To remove a RWY REMAIN entry, reselect RWY on RTE page.

Takeoff Reference Page 2/2

[Option – FMC U10.1 and later, with company data link or FMC computed takeoff speeds]

Diagram illustrating the Takeoff Reference Page 2/2 display. The page shows fields for Runway Wind (RW WIND), Runway Slope/Heading (RW SLOPE/HDG), and Runway Condition (RW COND). The Runway Condition field is currently set to DRY. The page is numbered 2/2. A 'NEXT PAGE' button is visible at the top left. Numbered callouts 1, 2, and 3 point to the RW WIND, RW SLOPE/HDG, and RW COND fields respectively.

* SEE SUBSEQUENT PAGES FOR DESCRIPTION

1 Runway Wind (RW WIND)

Enter surface wind direction and speed.

Entry is optional for preflight completion.

2 Runway Slope/Heading (RW SLOPE/HDG)

Enter runway slope.

Entry is optional for preflight completion.

Valid runway slope is U or + for up or D or – for down followed by slope in percent gradient.

HDG displays runway heading for origin airport.

3 Runway Condition (RWY COND)

Active runway condition is highlighted:

- DRY – Dry runway computations
- WET – Wet runway computations
- SK–R – Skid resistant runway computations

Default condition is DRY.


[Option – With company data link and FMC computed takeoff speeds]

Runway condition can be selected by the flight crew or uplinked.

Takeoff Thrust

[Option – FMC U10.1 thru 10.6]

[Option – With automatic thrust reduction after takeoff and QFE/QNH selection]

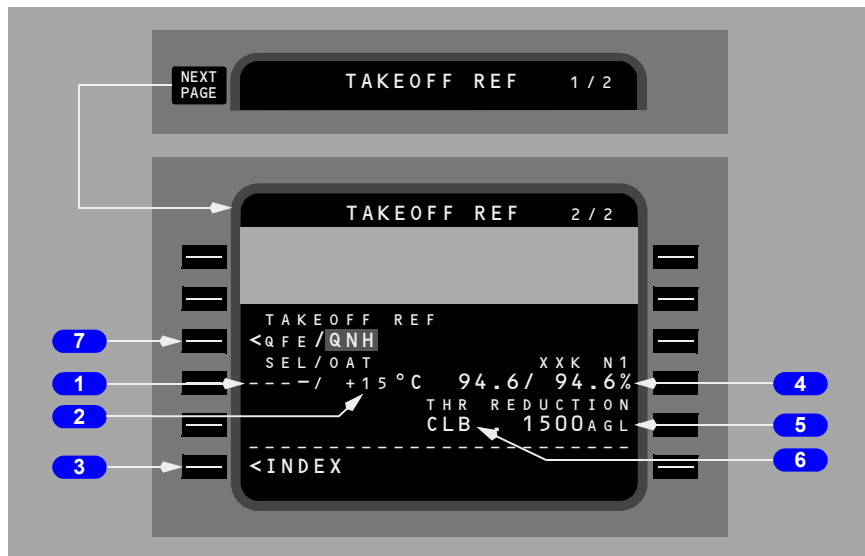

1 Selected Temperature (SEL)

Entry of an assumed temperature calculates a reduced thrust takeoff N1.

Entry can be made in degrees C or degrees F.

Maximum allowable entry is 70 degrees C (158 degrees F). The FMC, however, will limit the N1 to 25% takeoff reduction.

Repeats data shown on the preflight version of the N1 LIMIT page.

2 Outside Air Temperature (OAT)

[Option –Aspirated TAT]

Aspirated TAT displays the sensed OAT in small-size characters. Manual entry of actual takeoff OAT is displayed in large-sized characters.

Sensed or manually entered OAT is used by the FMC to calculate the takeoff N1 limits.

Entry can be made in degrees C or degrees F.

3 INDEX

Push – displays the INIT/REF INDEX page.

4 Takeoff N1 (XXK N1)

Displays the FMC computed N1 for takeoff.

Data line title displays full rated thrust or selected takeoff derate thrust. Typical line titles display as “24K N1” or “22K N1.”

Data line title changes to RED XXK N1 when an assumed temperature (SEL TEMP) entry results in a reduced N1 value.

Repeats the same information shown on TAKEOFF REF page 1 and the preflight version of the N1 LIMIT page.

5 Thrust Reduction (THR REDUCTION)

[Option – With automatic takeoff thrust reduction]

Altitude above origin airport elevation at which the autothrottle reduces from takeoff N1 to climb N1.

[Option – FMC U10.3 and later]

The default value is determined by the airline and is stored in the model/engine database. The default is displayed in small font.

Manual entries allowed on the ground. Entries must be between 800 to 9,999 feet and are displayed in large font.

Deletion of a manual entry returns the display to the default value.

6 Selected Climb Rating

[Option – With automatic takeoff thrust reduction]

Displays the climb rating that will be set at the THR REDUCTION altitude, as selected on the preflight version of the N1 LIMIT page.

7 Takeoff Reference (TAKEOFF REF)

[Option – With QFE/QNH selection, with automatic takeoff thrust reduction]

Push – Toggles altimeter reference between QFE and QNH.

Default is QNH.


Resets to QNH at flight complete.

Reflects LANDING REF selection on APPROACH REF page.

Active altimeter reference is highlighted.

During preflight with QFE selected, the PFD altitude indications show zero feet at the departure runway threshold. The PFD altitude indication background colors change to green.

If QFE is the current altimeter reference, and the EFIS control panel STD switch is pushed, The takeoff reference automatically toggles to QNH.

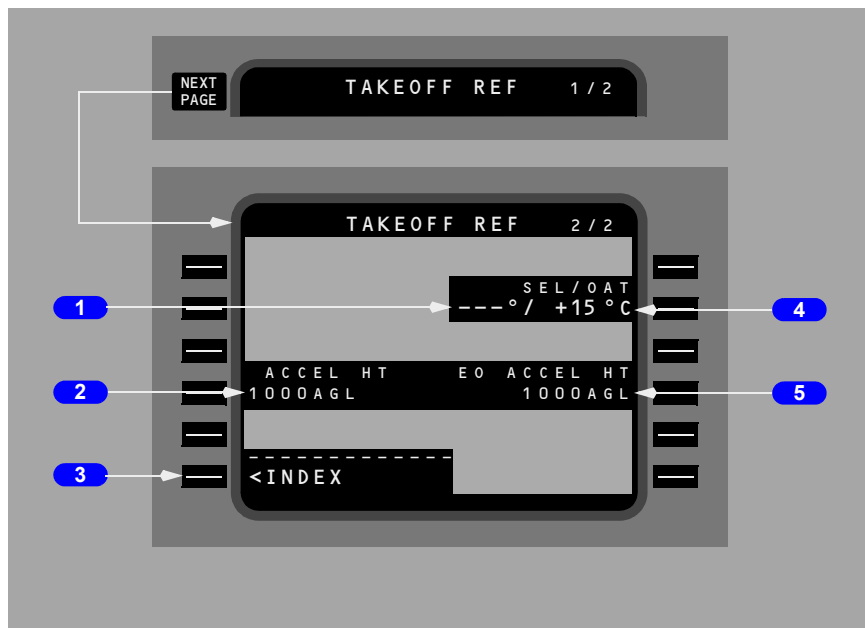

1 Selected Temperature (SEL)

Entry of an assumed temperature calculates a reduced thrust takeoff N1.

Entry can be made in degrees C or degrees F.

Maximum allowable entry is 70 degrees C (158 degrees F). The FMC, however, will limit the N1 to 25% takeoff reduction.

Repeats data shown on the preflight version of the N1 LIMIT page.

2 Acceleration Height (ACCEL HT)

Displays acceleration height for flap retraction.

Default value is from the airline.

Entry is optional. Value is a height from 400 to 9999 feet.

3 INDEX

Push – displays the INIT/REF INDEX page.

4 Outside Air Temperature (OAT)

Aspirated TAT displays the sensed OAT in small-size characters. Manual entry of actual takeoff OAT is displayed in large-sized characters.

Sensed or manually entered OAT is used by the FMC to calculate the takeoff N1 limits.

Entry can be made in degrees C or degrees F.


5 Engine Out Acceleration Height (EO ACCEL HT)

Displays acceleration height for flap retraction with an engine out.

Default value is from the airline.

Entry is optional. Value is a height from 400 to 9999 feet.

Takeoff Reference

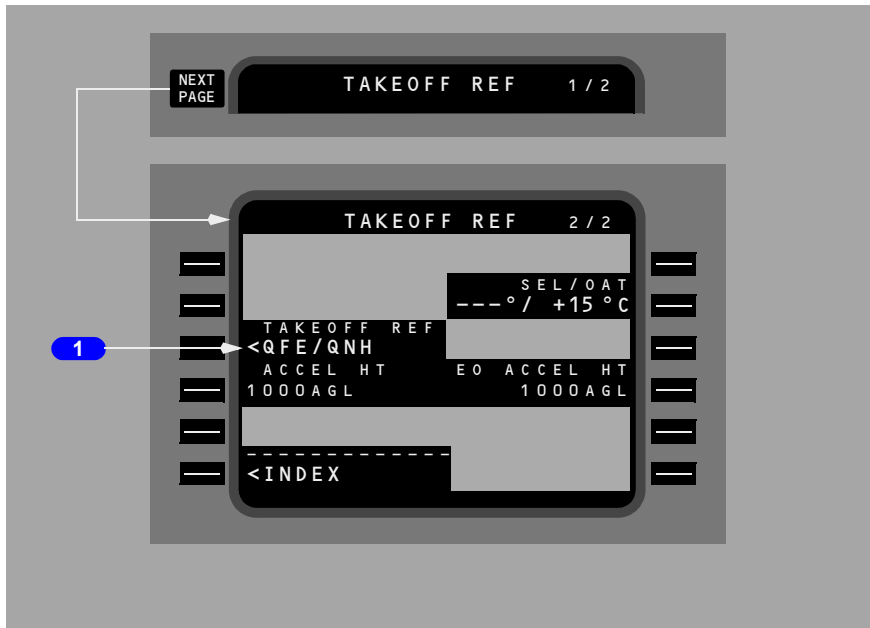

1 Takeoff Reference (TAKEOFF REF)

Push – Toggles altimeter reference between QFE and QNH.

Default is QNH.

Resets to QNH at flight complete.

Reflects LANDING REF selection on APPROACH REF page.

Active altimeter reference is highlighted.

During preflight with QFE selected, the PFD altitude indications show zero feet at the departure runway threshold. The PFD altitude indication background colors change to green.

If QFE is the current altimeter reference, and the EFIS control panel STD switch is pushed, the takeoff reference automatically changes to QNH.


Menu Page

[Option – MCDU]


The menu page is selected with the MENU key or is automatically displayed when the currently active subsystem fails or on initial power up if the FMC system is not detected.

The menu page displays subsystems (ACARS, DFDAU, etc.) that require control/display functions through the MCDU and provides a means to temporarily access to these subsystems. The active system is indicated by <ACT> displayed next to the system title. A subsystem that requires use of the CDU displays a request message <REQ> next to the subsystem title. The FMC system or a requesting subsystem is accessed by using the line select key next to the title. The FMC can be reselected by selecting the FMC prompt on the MENU page or selecting any mode key (INIT/REF, RTE, etc.). A subsystem can be temporarily placed on hold <HLD> by selecting the subsystem XXXXXX HOLD> line select key returning the CDU display to the currently active FMC page (XXXXXX represents the system name). While the subsystem is on hold the MCDU CALL light is illuminated. To reselect the subsystem on hold, push the subsystem line select key again. When a subsystem is placed on hold a XXXXXX LOGOFF prompt appears to allow for release of the subsystem being held. No more than one subsystem can be selected at a time. If an attempt is made to select more than one subsystem, a FIRST LOGOFF XXXXXX prompt is displayed as a reminder to logoff the currently active subsystem.

[Option – Liquid crystal display MCDU]

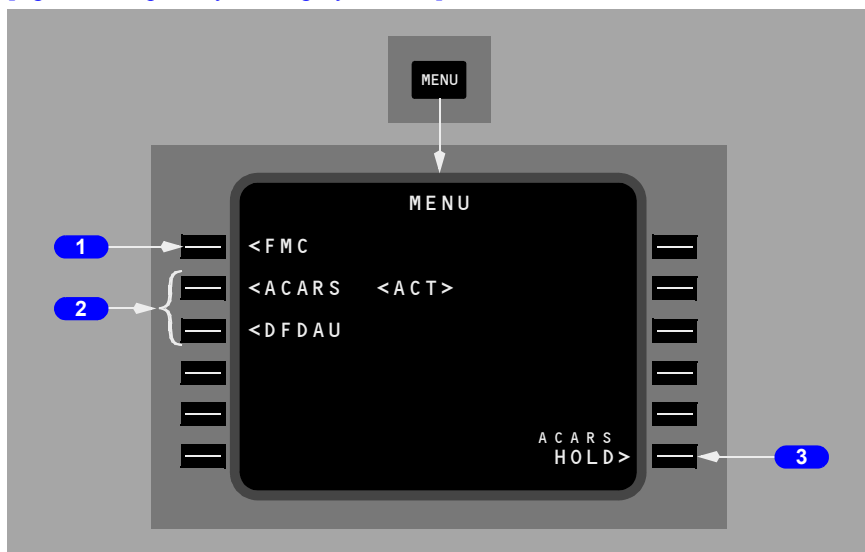

[Option – With alternate navigation system]

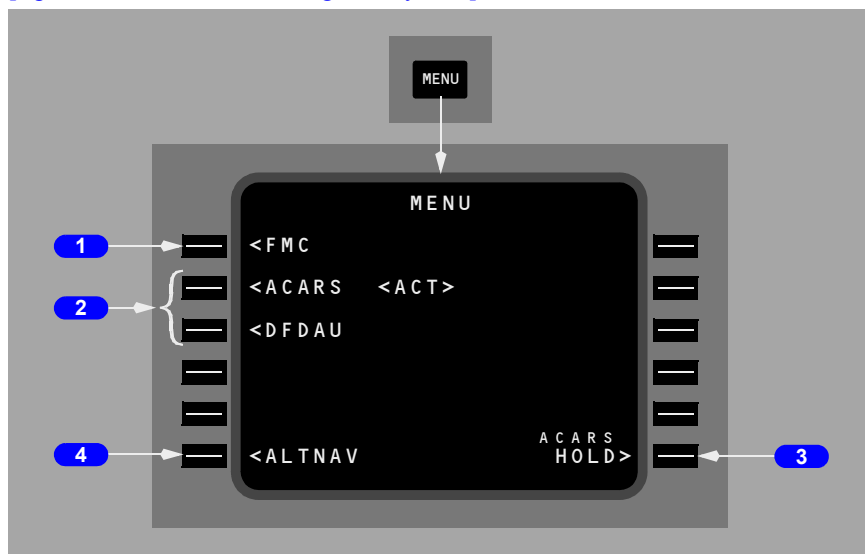

1 FMC

Push – selects FMC as the system for which the MCDU will be active in providing control/display function.

2 Other Aircraft Subsystems (typical)

Push – selects the subsystem for which the MCDU will be active in providing control/display function.

3 XXXXXX HOLD/LOGOFF

Push - places active subsystem on hold or logs off subsystem and returns control to the FMC.

4 Alternate Navigation (ALTNV)

[Option – With alternate navigation system]

Push - selects GPS LEGS page.

Blank if GPS inputs to the CDU are invalid.

Flight Management, Navigation
FMC Takeoff and Climb**Chapter 11**
Section 41

Introduction

The FMC takeoff phase begins with the selection of takeoff/go-around (TO/GA). Preparation for this phase begins in the preflight phase and includes entry of the TAKEOFF REF page data.

The takeoff phase automatically changes to the climb phase when climb thrust is selected. The climb phase continues to the top of climb point, where the cruise phase begins.

During these phases, the following pages are normally used:

- TAKEOFF REF page – to make last minute changes to the departure runway
- DEPARTURES page – to make last minute changes to the SID
- CLIMB page – to modify climb parameters and monitor airplane climb performance
- RTE LEGS page – to modify the route and monitor route progress
- PROGRESS page – to monitor the overall progress of the flight
- N1 LIMIT page – to select alternate climb thrust limits
- DEP/ARR INDEX page – to select an approach during a turn-back.

Takeoff Phase

When last minute changes are made to the departure runway and SID, the TAKEOFF REF and DEPARTURES pages must be modified to agree. The modifications are performed the same as during preflight.

With correct takeoff parameters, the FMC commands the selected takeoff thrust when the TO/GA switch is pushed. During the takeoff roll, the autothrottle commands the thrust and the FMC commands acceleration to between V2+15 and V2+25 knots.

LNAV can be armed prior to takeoff. Prior to 50 feet radio altitude, roll command is wings level. At 50 feet radio altitude, if within engagement criteria, LNAV engages and provides roll commands to fly the route leg. VNAV may be engaged to control the climb profile.

Note: For LNAV to be armed on the ground, the departure runway must be selected and the course, to the first waypoint, must be within 5 degrees of the runway heading.

VNAV Armed for Takeoff

[Option – FMC U10.7 and later]

VNAV may be armed on the MCP prior to takeoff provided the following requirements have been met:

- a valid flight plan has been entered
- performance data has been entered and executed
- both flight director switches have been switched on
- NG aircraft equipped with Collins P4 FCC or later; or Honeywell -710 FCC or later; and CDS BP06 software.

Note: If an older version of FCC or CDS software is installed, VNAV will not engage nor arm on the ground.

Target Speeds will follow the profile listed in the Climb Phase.

VNAV Takeoff -One Engine Out


During the all engine takeoff flight phase, VNAV will be enabled to automatically adjust the target airspeed profile upon engine out detection.

A split throttle condition on the ground with taxi speeds above 30 knots could result in the FMC engine-out mode being activated. The engine out mode would stay set until either, the ALL ENGINES prompt was selected and executed or all power is removed from the FMC on the ground prior to the next flight. If the engine-out is set in takeoff or climb, the engine-out will be cleared and the target speed and predictions will return to normal two engine values when the crew selects and EXECutes the ALL ENGINE prompt on the CLB page, or the CRZ or DES phase is entered, or a Flight Complete occurs, regardless of how many engines are running

When an engine failure has been detected, the thrust reduction height and the all engine acceleration height specified on TAKEOFF REF page two will be ignored. All waypoint fuel, ETA, Progress page and LEGS page performance predictions will be blanked. Upon exiting the engine out takeoff flight phase, the performance predictions will be displayed.

If an engine failure is detected after the all engine takeoff flight phase is complete, there will be no automatic engine out VNAV function as well as no modification of the Climb page.

Note: Prior to the all engine flight phase completion, with an engine failure detected, the Climb page is modified as depicted in the following illustration.

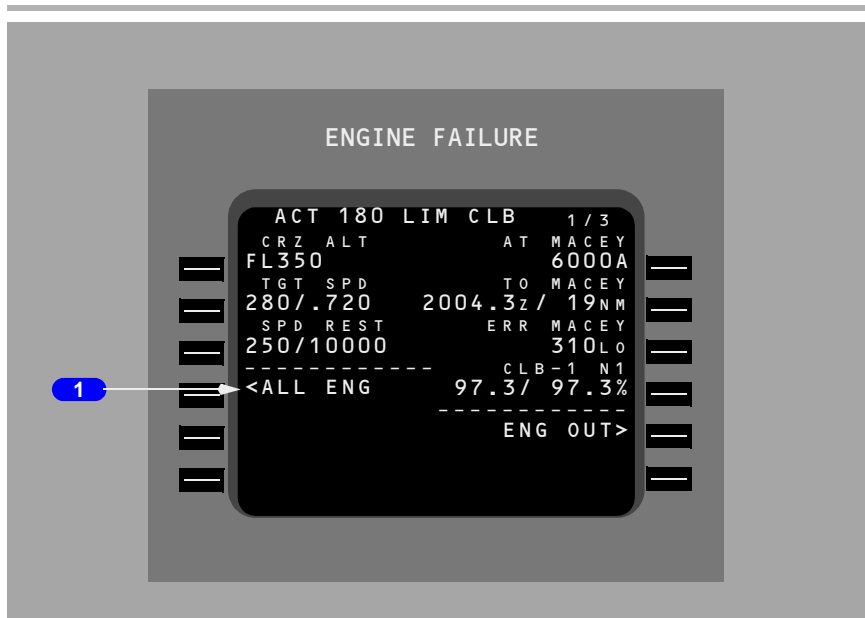

1 All Engines

Line select key 4L terminates the engine out takeoff mode and activates the normal climb mode.

Climb Phase

With VNAV armed before takeoff, VNAV engages at 400 feet and commands acceleration to:

- last MCP speed (V2) + 20 kts until acceleration height
- if an engine failure is detected, target speed will be last MCP speed (V2) + 20 kts if the airplane is at that speed or greater, or the existing speed if the airplane is between V2 and V2 + 20 kts
- the flap placard speed minus 5 kts
- 230 kts or less when leading edge flaps are not fully retracted
- 250 knots with flaps retracted
- the active target speed
- waypoint speed constraints, or
- the speed restriction associated with the origin airport, whichever is more restrictive.

VNAV commands acceleration to:

- the active target speed
- 250 knots

- waypoint speed constraints, or
- the speed restriction associated with the origin airport, whichever is more restrictive.

At the climb thrust reduction point, climb thrust can be selected. Passing 10,000 feet, VNAV commands an acceleration to the economy climb speed, which is maintained until entering the cruise phase. Waypoint speed constraints take priority if slower than target speed.

[Option – With automatic thrust reduction after takeoff]

At the climb thrust reduction point, the FMC commands a reduction to the selected climb thrust. Passing 10,000 feet, VNAV commands an acceleration to the economy climb speed, which is maintained until entering the cruise phase. Waypoint speed constraints take priority if slower than target speed.

During the climb, VNAV complies with the LEGS page waypoint altitude and speed constraints. A temporary level-off for a crossing altitude restriction is accomplished at the current commanded speed.

When the climb speed profile causes an anticipated violation of a waypoint altitude constraint, the FMC displays the CDU scratchpad message UNABLE NEXT ALTITUDE. A different speed profile that provides a steeper climb angle must be manually selected.

When the speed profile causes an anticipated violation of a waypoint speed constraint, the FMC displays the CDU scratchpad message UNABLE YYY KNOTS AT XXXXX, where speed is YYY and waypoint is XXXXX. When a waypoint speed constraint greater than 10 kts above the predicted speed at the waypoint exists, the FMC displays the CDU scratchpad message DRAG REQUIRED AFTER XXXXX where waypoint is XXXXX.

If a CLB 1 or CLB 2 derate is selected, the derate is maintained for the initial part of the climb. Thrust eventually increases to maximum climb thrust by 15,000 feet.

Climb Page

The climb page is used to evaluate, monitor, and modify the climb path. The data on the climb page comes from preflight entries made on the route and performance pages.


[Option – FMC U10.3 and later]


The climb page is automatically selected by pushing the CLB function key on the ground and during takeoff and climb. The TAKEOFF REF page automatically transitions to the climb page after takeoff.

The FMC climb mode can be economy or fixed speed. In either mode, similar data is displayed on the page.

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Flight Management, Navigation -
FMC Takeoff and Climb

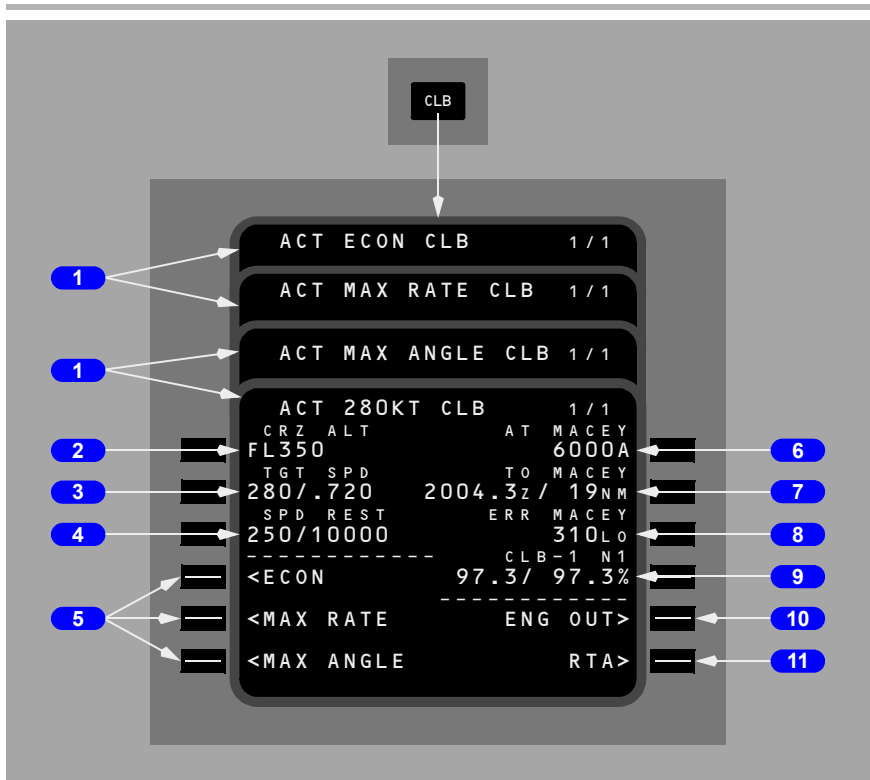

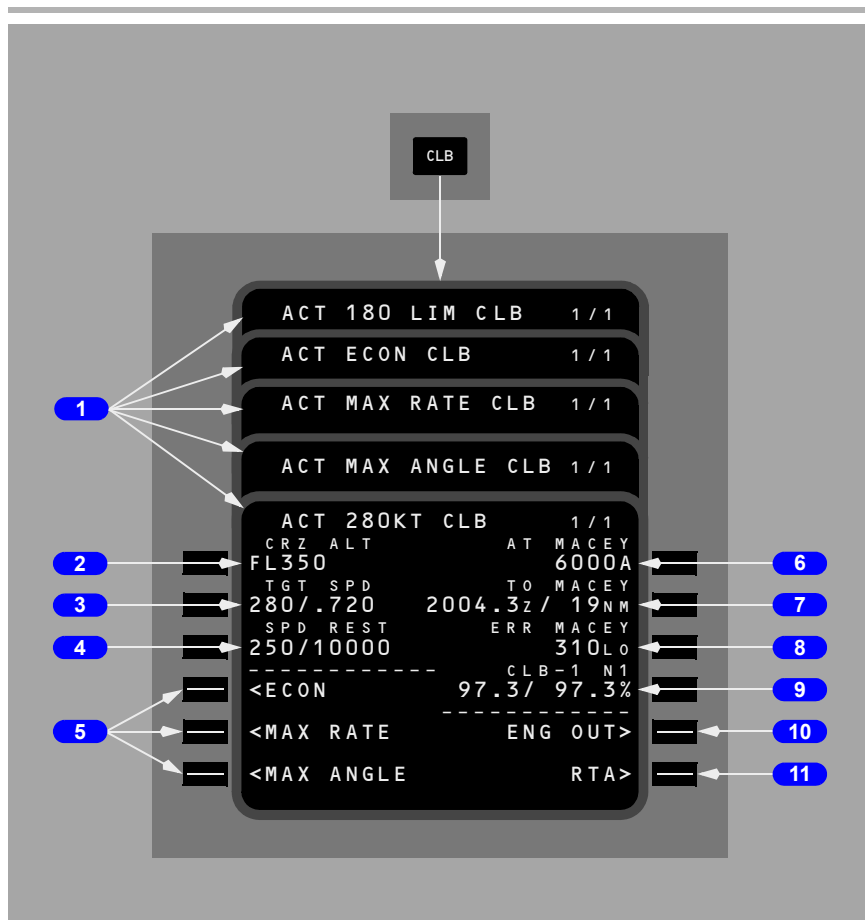

1 Page Title

The page title displays the type of climb. Normally, the title displays ECON for the economy climb mode. Fixed speed climbs modify the title.

XXX LIM CLB indicates the limit speed, XXX, is based on leading or trailing edge flaps:

- target speed is 5 knots below trailing edge flap placard speed
- speed is limited to 230 kts if leading edge devices are not completely retracted

ECON indicates the speed is based on a cost index.

MAX RATE indicates the speed is based on the maximum altitude over the shortest period of time.

MAX ANGLE indicates the speed is based on the maximum altitude over the shortest horizontal distance.

Fixed climb speeds display XXXKT for a fixed CAS climb speed or M.XXX for a fixed Mach climb speed profile. Reasons for fixed speeds are:

- takeoff/climb acceleration segment constraints
- waypoint speed constraints
- an altitude constraint associated with a speed constraint
- a speed restriction
- a crew entered speed.

Displays ACT when the climb phase is active.

2 Cruise Altitude (CRZ ALT)

[\[Option – With speed and altitude intervention\]](#)

The cruise altitude from the PERF INIT page is displayed. The altitude can be changed by two methods:

- a new altitude can be manually entered from the CDU at any time. Changing the altitude in this manner creates a modification.
- setting the MCP altitude above the current FMC CRZ altitude, provided no intermediate altitude constraints exist between the current airplane altitude and the MCP target altitude. Selecting the new altitude on the MCP and pushing the altitude intervention button places the new altitude in the CRZ ALT data line. Entering a new cruise altitude in this manner does not create a modification.

3 Target Speed (TGT SPD)

Displays computed values or manually entered values for the selected mode.

Displays XXX/MCP when speed intervention is active and plan is active.

Airspeed and/or Mach may be entered using the keyboard. Title will display manually entered value.

The active controlling speed is highlighted in reverse video.

4 Speed Restriction (SPD REST)

The speed restriction line displays the speed restriction/altitude from one of the following sources:

- the navigation database value for the origin airport (dashes displayed when no speed restriction exists for the listed airport)
- waypoint related restriction from the RTE LEGS page if restriction limits climb speed
- a default speed of 250 knots and 10,000 feet for airports not listed in the navigation database (example 250/10000)

- displays XXX/FLAPS if the active speed restriction is lower than the minimum speed for the selected flap setting
- displays XXX/HOLD when decelerating to hold speed prior to hold entry fix.

Dashes displayed if no active speed restriction exists.

Manual crew entries or deletions may be made. HOLD or FLAPS speed may not be deleted or modified.

Note: If the FMC default speed restriction is overwritten, it will be deleted and not return after the overwrite condition passes (e.g. the default of 250/10000 is overwritten to 230/3000, after 3000 feet is passed there will be no speed restriction and VNAV will accelerate to the unrestricted climb speed).

The active controlling speed is highlighted in reverse video.

5 Climb Page Prompts

Push – selects various CLB pages.

Following line selection, the prompt for that page blanks.

6 AT XXXXX

The waypoint constraint line displays the next waypoint having an altitude constraint. Constraints are entered on the RTE LEGS page or by departure procedure selection. The constraints can be deleted on this page or the RTE LEGS page. The waypoint may be a HOLD AT point.

Display is blank if no restriction exists.

7 TO XXXXXX

Displays ETA and distance to go to waypoint on AT XXXXXX line.

If no waypoint constraint exists, values are for CRZ ALT.

8 Error (ERR XXXXX)

Displays predicted altitude undershoot for the waypoint on AT XXXXXX line.

During VNAV operation, the FMC commands a level off if an overshoot is predicted.

Display is blank, including the label, if no error exists.

9 Climb N1 (CLB N1, CLB – X N1)

[Option – FMC U10.3 and later]

Displays the computed climb N1 value.

10 Engine Out (ENG OUT)

Push – displays RT ENG OUT and LT ENG OUT prompts. See ENG OUT CLB page description.

11 Required Time of Arrival (RTA)

Push – displays the RTA PROGRESS page.


ERASE prompt replaces RTA during a page modification.

RTA Climb Page

The RTA climb page is displayed when a required time of arrival is active.

The RTA climb page is automatically selected by pushing the CLB function key when RTA is active.

Displays on this page are the same as other climb pages except as noted.

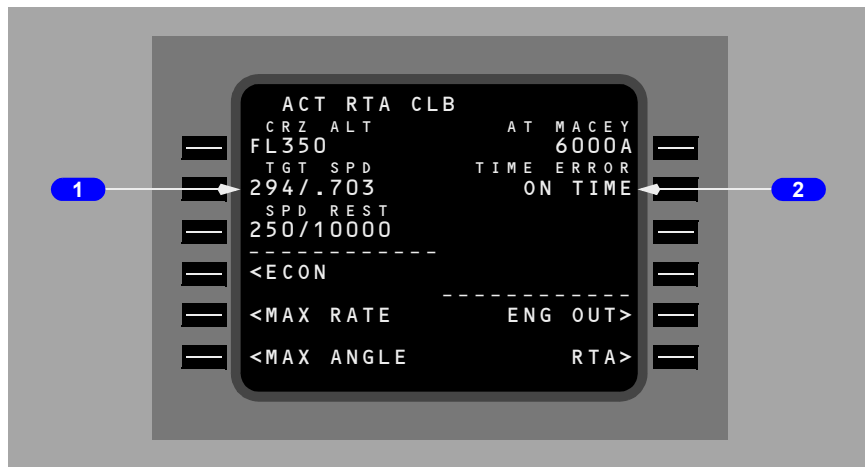

1 Target Speed (TGT SPD)


Displays computed speed required to meet entered RTA.

When RTA is exited by waypoint sequence or deletion, this speed changes to FMC target speed.

2 TIME ERROR

Displays computed time error at RTA waypoint. Same as RTA PROGRESS page.

RTE LEGS Page

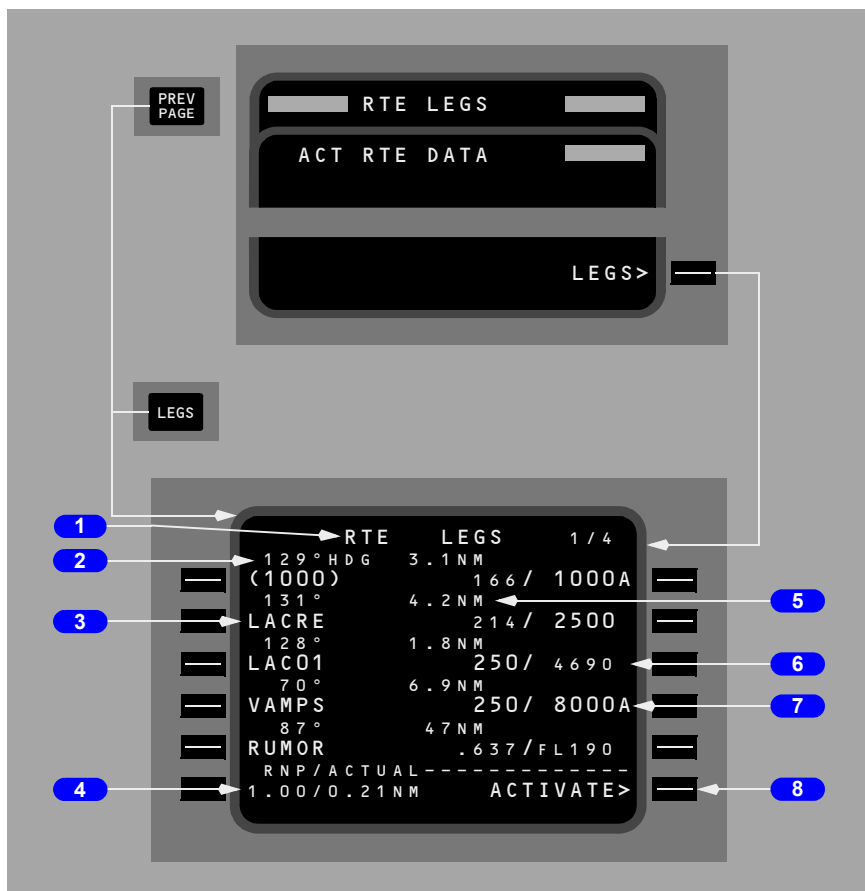

1 Page Title

An active route legs page title is displayed with ACT as part of the title. A modified page title displays a reverse video MOD.

2 Leg Direction

The leg segment direction is displayed as the title of the waypoint line. Courses are displayed in magnetic (xxx°) or true (xxx° T). Directions to maintain an arc display the arc distance, the word ARC followed by the direction, and left or right (24 ARC L). The computed great circle route leg directions may be different than chart values. Heading leg segments to conditional waypoints are displayed as (xxx° HDG) and track leg segments are displayed as (xxx° TRK). Directions may be displayed as special procedural instructions, such as HOLD AT or PROC TURN.

Display is blank for an undefined course.

3 Waypoint Identifier

The current active leg is always displayed at the top of the first active RTE LEGS page.

All route waypoints are displayed. Waypoints on an airway are included on the route legs page. Waypoints appear in flight sequence.

Waypoints can be entered and moved. This includes:

- adding new waypoints
- removing existing waypoints
- resequencing existing waypoints
- linking route discontinuities.

Displays the waypoint by name or condition.

Box prompts are displayed for route discontinuities.

Dashes are displayed for the next line beyond the end of the route.

4 Required Navigational Position/Actual (RNP/ACTUAL)

Displays the required navigation accuracy compared to actual navigation accuracy.

Manual entry is allowed.

5 Distance to Waypoint

Displays the distance from the airplane or the waypoint to the next waypoint.

6 Calculated Waypoint Speed/Altitude

Displays the calculated speed or altitude at the waypoint in small font.

7 Specified Waypoint Speed/Altitude

Displays any waypoint speed or altitude constraint in large font.

Manual entry is allowed.

8 ACTIVATE, RTE DATA

The activate prompt is displayed on the legs page when the route is not active.

Push –

- ACTIVATE arms the execute function. Pushing the EXEC key activates the route and changes the ACTIVATE prompt to RTE DATA
- RTE DATA displays the route data page. The RTE DATA prompt is used to review or modify additional information about the route.

Map Center Step Display

The map center step prompt replaces ACTIVATE or RTE DATA when the EFIS control panel mode selector is placed in the PLAN position. Pushing the prompt key advances the waypoint that is displayed in the center of the navigation display. The label <CTR> is displayed to the right of the corresponding waypoint on the RTE LEGS page.



1 Map Center Label (<CTR>)

Identifies the waypoint around which the map display is centered.

Whenever the EFIS Mode selector is positioned to PLAN, the label is automatically displayed for the first geographically fixed waypoint on the displayed page.

2 STEP

Displayed on a CDU when PLAN is selected on the associated EFIS control panel. Replaces the RTE DATA or ACTIVATE prompt.

Push – moves the map center label to the next geographically fixed waypoint in the route.

Progress Page 1/X


The progress page provides general flight progress information along the route of flight such as:

- waypoints (last, active and next)
- waypoint ETA
- waypoint ATA
- distance to go information
- destination information
- altitude change points
- current wind
- fuel quantity

[Option – With flight number entry]

The page title displays the company flight number from the RTE page.

[Option – FMC U10.5 and later with flight number entry]

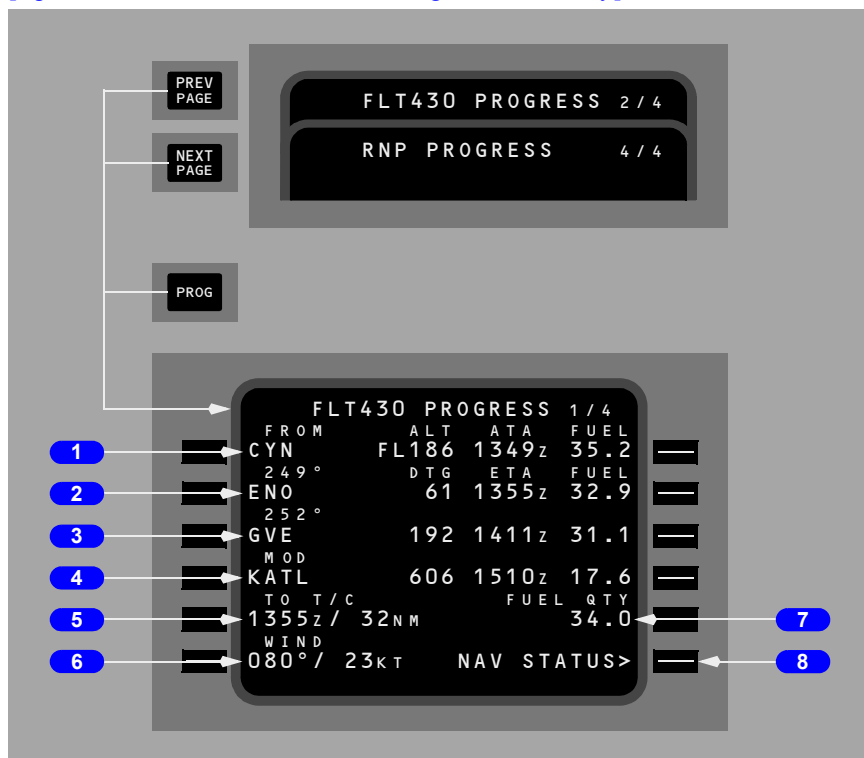

1 FROM

Displays the identifier of the last (FROM) waypoint, the altitude (ALT), the actual time of arrival (ATA), and the fuel at that waypoint.

2 Active Waypoint

Displays the identifier of the active waypoint, the flight plan course to the active waypoint, and distance-to-go (DTG) from present position to the active waypoint. Also displays the estimated time of arrival (ETA) and predicted fuel remaining at the active waypoint. The active waypoint is highlighted by reverse video.

3 Next Waypoint

Displays the identifier of the next waypoint which follows the active waypoint, the flight plan course for that leg, and flight plan distance-to-go (DTG) from present position to the next waypoint. Also displays the estimated time of arrival (ETA) and predicted fuel remaining at the next waypoint.

4 Destination

Displays the identifier of the destination airport (DEST) and flight plan distance-to-go (DTG) from present position to the destination. Also displays estimated time of arrival (ETA) and predicted fuel remaining at the destination.

When a route modification is in progress, the destination line label displays MOD. Performance predictions include the modification.

5 Altitude Change Point (TO XXXXX)

Displays ETA and distance to go to the following altitude change points as appropriate to phase of flight:

- TO T/C: to top of climb for the active climb
- TO STEP POINT: to the step point if a STEP TO entry is made on CRZ page
- TO T/D: to top of descent, if no STEP TO entry is made on CRZ page
- TO E/D: to the end of descent waypoint for an active path descent; blank if a path descent is not available.

6 WIND

Displays current true wind direction and speed.

7 Fuel Quantity (FUEL QTY)

Displays the present total fuel quantity remaining as obtained from the airplane fuel quantity indication system.

8 NAV STATUS

Push – displays the navigation status page.

Progress Page 2/4

[Option – FMC U10.5 and later]

The progress page 2/4 displays wind, track, path, temperature, and speed data.

[Option – FMC U10.5 and later, with flight number entry, company data link and GPS]



1 HEADWIND or TAILWIND

Displays the present headwind or tailwind component.

2 WIND

Displays the present true wind direction/speed.

3 Crosstrack Error (XTK ERROR)

Displays present cross-track error from the desired LNAV course.

Blank if error is greater than 99.9 nm.

4 CROSSWIND

Displays present crosswind component (left or right).

5 Static Air Temperature/ISA Deviation (SAT/ISA DEV)

Displays present SAT and the equivalent ISA deviation.

6 Vertical Descent Path Deviation (VERT DEV)

Displays present computed deviation (HI or LO) from the FMC vertical path.

Blank if descent not active or path not available.

7 TAS

Displays present TAS.

8 PRE-FLIGHT REPORT

[Option – With company data link]

Push – transmits downlink report of preflight data.

9 WEATHER REQUEST

[Option – With company data link]

Push – transmits a data link request for a weather uplink.

10 PROGRESS REPORT

[Option – With company data link]

Push – transmits a downlink report of progress data.

11 POSITION REPORT

[Option – With company data link]

Push – transmits a downlink report of position data.

12 GPS-L TRK


[Option – With GPS]

Displays GPS track.

RTA Progress Page 3/4

[Option – FMC U10.5 and later]

RTA Progress page is used to initiate the required time of arrival (RTA) mode. The RTA page provides advisory data on flight progress in the RTA mode and advises of control times such as recommended takeoff time to meet RTA.

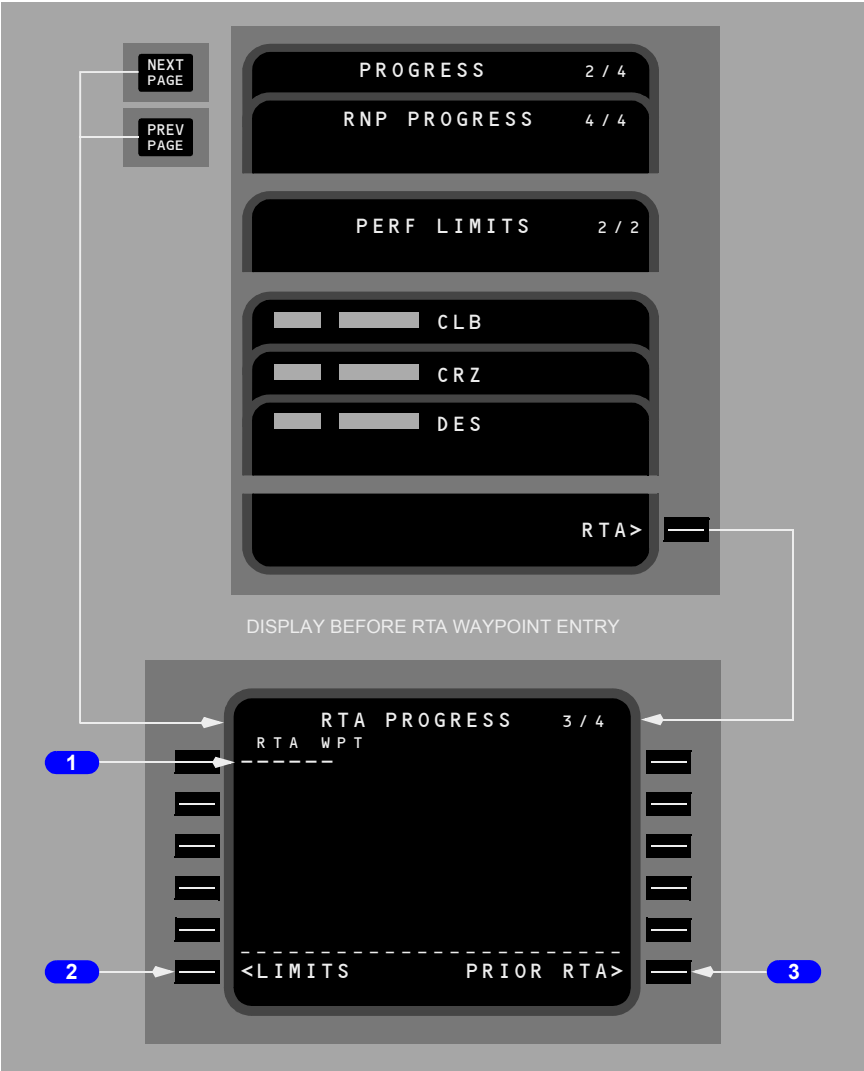

1 Required Time of Arrival Waypoint (RTA WPT)

Displays dashes when entry allowed.

2 LIMITS


Push – displays the PERF LIMITS page.

3 Prior RTA Waypoint (PRIOR RTA)

Prompt displayed when the RTA waypoint field contains dashes and a previous RTA waypoint is still in the flight plan; otherwise blank.

Push – displays last active RTA waypoint data.

RTA Progress on Ground and in Flight

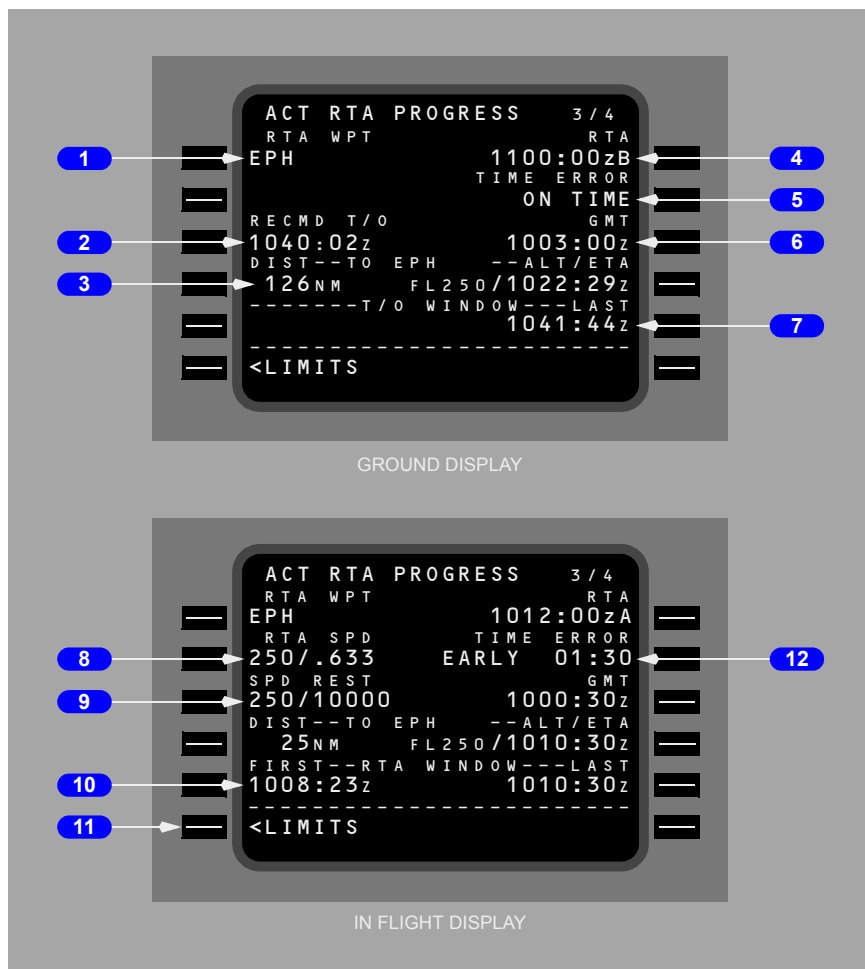

1 Required Time of Arrival Waypoint (RTA WPT)

Waypoint entry must be in flight plan or the CDU message NOT IN FLIGHT PLAN will be displayed.

Entering a valid waypoint will generate a MOD RTA PROGRESS page and illuminate the EXEC light.

Deletion of the RTA waypoint will create a MOD RTA PROGRESS page with all data blanked and EXEC light illuminated. Execution will exit the RTA mode.

Deletion of the RTA waypoint does not remove the waypoint from the flight plan.

Automatically clears the RTA waypoint and exits the RTA waypoint after sequencing the RTA waypoint out of the flight plan.

2 Recommended Takeoff Time (RECMD T/O)

Displays the recommended takeoff time (brake release time) to meet the planned RTA.

Time is based on entered Cost Index as well as the earliest and latest times to achieve RTA..

3 Distance To, Altitude, and ETA at the RTA Waypoint (DIST -- TO XXX -- ALT/ETA)

Displays the distance to the RTA waypoint.

Displays the predicted altitude at the RTA waypoint.

Displays ETA to the RTA waypoint based on:

- immediate takeoff
- MIN/MAX speeds on PERF LIMITS page
- entered forecast winds.

4 Required Time of Arrival (RTA)

After RTA waypoint entry, initially displays current ETA based on the active flight plan and performance parameters at time of waypoint entry.

Desired RTA may be entered by overwriting displayed data.

Entry must be in one of the following forms:

- XXXXXX (hr/min/sec)
- XXXX (hr/min)
- XXXX.X (hr/min/tenths of min).

Entry of “A” after RTA specifies arrival time of at or after.

Entry of “B” after RTA specifies arrival time of at or before.

5 TIME ERROR

Displays the most recent time error in minutes and seconds up to a maximum of 59:59 minutes.

Displays ON TIME if GMT is within current T/O WINDOW.

Displays EARLY or LATE as appropriate if GMT is not within current T/O WINDOW.

6 GMT

Displays the actual GMT.

**7 Takeoff Window (----- T/O WINDOW --- LAST) or
(FIRST -- T/O WINDOW -----)**

Displays latest takeoff time to meet the planned RTA.

If the entered RTA time is “At or After” time, only the FIRST field shall be displayed.

If the entered RTA time is “At or Before” time, only the LAST field shall be displayed.

Time is based on minimum and maximum speeds on the PERF LIMITS page.

8 Required Time of Arrival Speed (RTA SPD)

Displays the target speed required to meet the planned RTA.

Same as speed displayed on RTA CLB, CRZ, or DES page.

Limited by MIN/MAX speeds on the PERF LIMITS page and the SPD REST line.

During cruise, displays XXX/HOLD when decelerating to hold speed prior to hold entry fix.

9 Speed Restriction (SPD REST)

Displays the current speed restriction affecting RTA progress.

When not in cruise, displays XXX/HOLD when decelerating to hold speed prior to hold entry fix.

10 Arrival Time Window (FIRST -- RTA WINDOW --- LAST)

Displays earliest and latest achievable arrival times at the RTA waypoint.

Times based on MIN/MAX speeds on PERF LIMITS page, existing winds, and entered forecast winds.

11 LIMITS

Push – displays PERF LIMITS page.

12 TIME ERROR


In flight, displays difference between the ETA and the RTA plus the TIME ERROR TOLERANCE on the PERF LIMITS page.

RNP Progress Page 4/4

[Option – FMC U10.5 and later]

Progress page 4/4 displays essential Required Navigation Performance (RNP) information. The items displayed include waypoint identifier, RNP and ANP values, course, distance, glidepath, cross track error, speeds, altitudes and vertical deviation.

[Option – FMC U10.5 and later with navigation performance scales enabled and Vertical Required Navigation Performance (Vertical RNP) enabled]

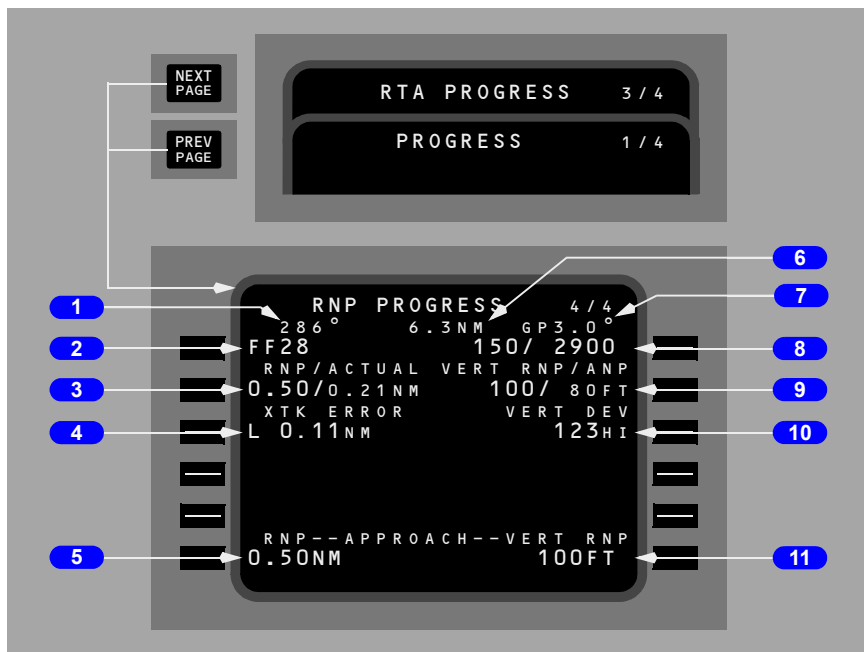

1 Leg Direction

The leg segment direction is displayed as the title of the waypoint line. Courses are displayed in magnetic (xxx°) or true (xxx° T). Directions to maintain an arc display the arc distance, the word ARC followed by the direction, and left or right (24 ARC L). The computed great circle route leg directions may be different than chart values. Heading leg segments to conditional waypoints are displayed as (xxx° HDG) and track leg segments are displayed as (xxx° TRK). Directions may be displayed as special procedural instructions, such as HOLD AT or PROC TURN.

Display is blank for an undefined course.

2 Waypoint Identifier

Displays the next waypoint.

Same as displayed on the RTE LEGS page.

3 RNP / ACTUAL

Displays the current FMC RNP / ANP values. The RNP may be overwritten (manual entries are displayed in large font) and affects the approach RNP 6L value. The RNP value displayed is selected from the performance defaults database if not specified in the navigation database.

Same as displayed on the POS SHIFT page.

4 Crosstrack Error (XTK ERROR)

Displays present cross-track error from the desired LNAV course.

L or R indicates left or right of course.

Blank if error is greater than 99.9 nm.

5 Lateral RNP (Approach)

Displays the lowest applicable RNP for the approach.

Displays in large font for 3L manually entered RNP values.

Displays in small font for values provided by the navigation database.

6 Distance To Go

Displays the distance remaining to the next waypoint.

7 Glidepath

Displays the FMC computed glidepath for the approach.

8 Waypoint Speed/Altitude

Displays waypoint speed or altitude constraints in large font.

Displays FMC predicted values in small font when no restrictions have been specified.

9 Vertical Navigation Performance

[Option – With navigation performance scales enabled]

Displays both the vertical RNP (Required Navigation Performance) and the vertical ANP (Actual Navigation Performance) for the current leg.

Valid display range for vertical ANP is 0 to 999 feet.

Manual entries are allowed and are displayed in large font.

Valid entries are 10 to 999 feet and may be suffixed with an optional “/”

Entries are cleared at flight completion.

Values from the navigation database are displayed in small font.

10 Vertical Deviation

[Option – With navigation performance scales enabled]

Displays present vertical deviation from the FMC computed glidepath.

11 Vertical RNP (Approach)

[Option – With navigation performance scales enabled]

Displays the lowest applicable vertical RNP for the approach.

Manual entries (entered in 2R) are displayed in large font.

Values from the navigation database are displayed in small font.

N1 Limit Page

[Option – FMC U10.1 and later]

This section describes the in-flight version of the N1 LIMIT page. See the FMC Preflight section for a description of the preflight version of the N1 LIMIT page.


Normally, N1 limits are automatically specified. Pilot selection of other limits is allowed.

Pilot selection of a reduced climb mode does not change the automatic selection for other phases of flight.

Pilot selected mode is automatically replaced by AUTO selection when the autopilot next changes vertical mode.

The active thrust limit is used by the autopilot and is displayed on the thrust mode display.

[Option – FMC U10.1 and later]

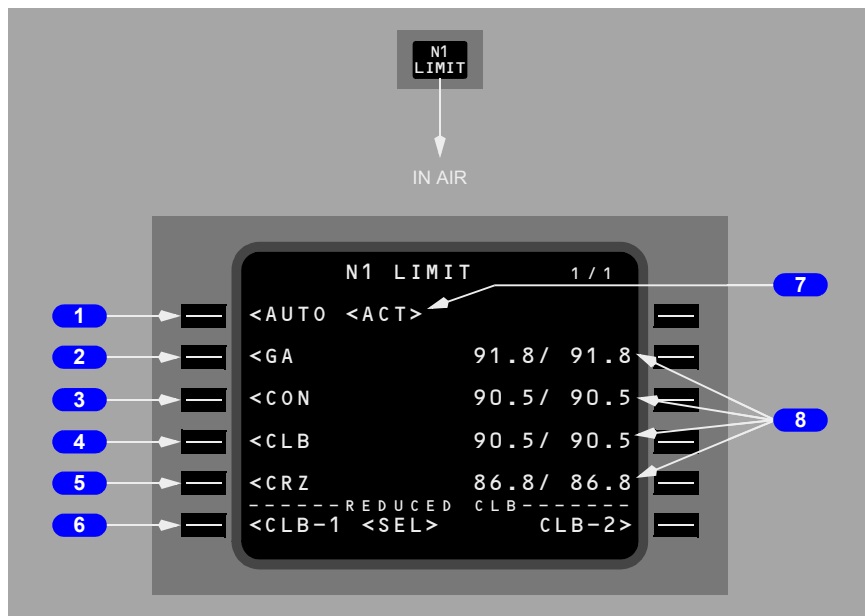

1 AUTO

Push – selects automatic computation of N1 limits for all phases of flight.

2 Go Around (GA)

Push – selects the go-around thrust limit.

3 Continuous (CON)

Push – selects the maximum continuous thrust limit.

4 Climb (CLB)

Push – changes the thrust mode from AUTO to the active climb thrust, i.e. CLB, CLB-1, or CLB-2.

5 Cruise (CRZ)

Push – selects the cruise thrust limit.

6 Reduced Climb (REDUCED-CLB)

Push – selects either of two reduced climb thrust modes.

CLB-1 provides a climb limit reduced by 3% N1 (approximately 10% thrust).

CLB-2 provides a climb limit reduced by 6% N1 (approximately 20% thrust).

The reduced climb N1 value is displayed on the CLB pages.

If either mode is <SEL>, deletion allows return to full rated climb thrust.

Any reduced climb selection is automatically deleted above 15,000 feet.

Note: If a reduced thrust takeoff has been specified on the TAKEOFF REF page, the FMC will re-compute CLB-1 and CLB-2 values as required to avoid a climb N1 value greater than the reduced thrust takeoff N1 value.

7 <ACT> STATUS LABEL

Identifies the active N1 thrust limit.

8 N1

Displays the N1 for individual thrust limits based on present conditions and bleed air configuration.

If CLB-1 or CLB-2 is selected, the N1% for CLB and the N1 cursors still display values for full rated climb.


Engine Out Climb

Engine out climb advisory data is available on the CLB page. Engine out data is also available with both engines operating. The engine out climb phase automatically transitions to the engine out cruise phase when reaching the cruise altitude.

Engine Out Climb Page

Displays advisory information for an engine inoperative condition. Once the page is selected, it cannot be executed.

[Option – FMC U10.3 and later]

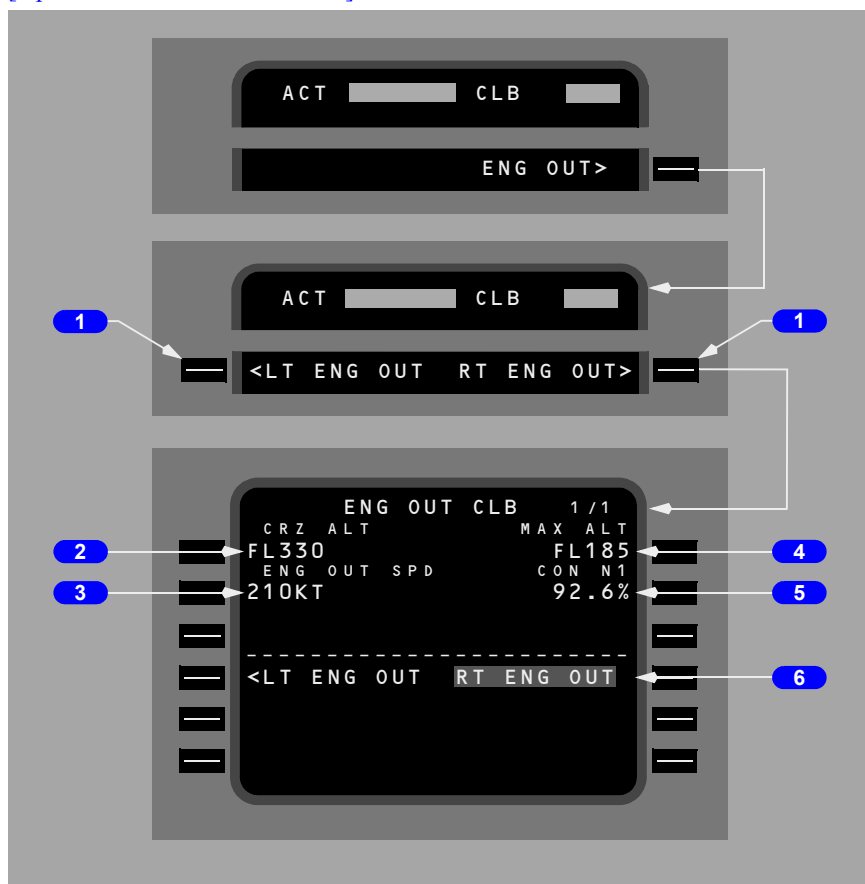

1 Left/Right Engine Out (LT ENG OUT/RT ENG OUT)

Displayed after selection of ENG OUT prompt.

2 Cruise Altitude (CRZ ALT)

[Option – FMC U10.3 and later]

Displays the current active cruise altitude. Value is forwarded from either the PERF INIT, CRZ, CRZ CLB, or CRZ DES pages. Manual entry not allowed.

3 Engine Out Speed (ENG OUT SPD)

[Option – FMC U10.3 and later]

Displays the minimum drag engine out climb speed.

4 Maximum Altitude (MAX ALT)

Displays the maximum altitude at which company specified rate of climb can be achieved using one engine at maximum continuous thrust.

After page selection, the FMC accounts for wing and engine anti-ice, air conditioning and engine bleed of the operating engine.

5 Continuous N1 (CON N1)

[Option – FMC U10.3 and later]

Displays the N1 for maximum continuous thrust.


6 LT ENG OUT/RT ENG OUT

Selected engine is shown in reverse highlighting.

Air Turnback

Arrivals Page

During a turn-back situation, the crew requires quick access to the arrivals information for the origin airport. The departure/arrivals index and arrivals page provide access without changing the destination on the route page. See Chapter 11, Section 43 for additional information on the arrivals page.

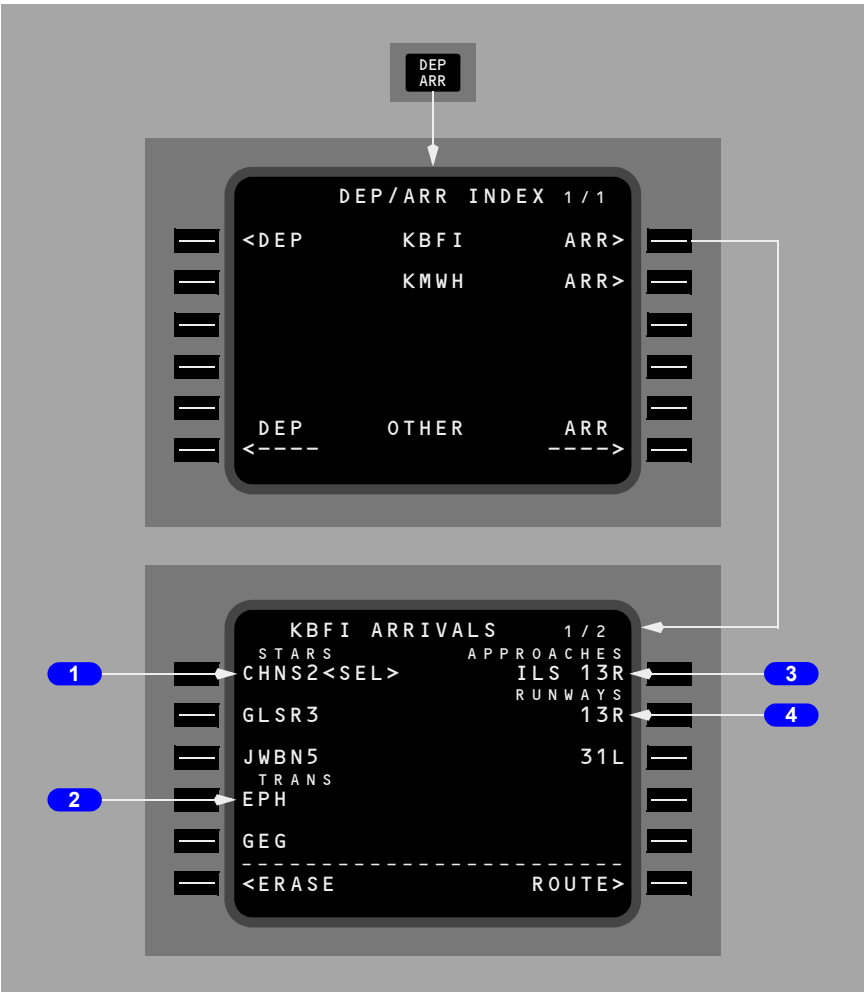

1 Standard Terminal Arrival Routes (STARS)

Displays STARS for the origin airport.

2 Transitions (TRANS)

Displays transitions for the origin airport.

3 APPROACHES

Displays approaches for the origin airport.

4 RUNWAYS

Displays runways for the origin airport.

Intentionally
Blank

Flight Management, Navigation
FMC Cruise**Chapter 11**
Section 42

Introduction

The cruise phase automatically begins when the top of climb is reached.

During cruise, the primary FMC pages are:

- RTE LEGS
- PROGRESS
- CRZ.

The RTE LEGS pages are used to manage route restrictions and modify the route. The PROGRESS pages display flight progress information. RTA requirements are also specified on the PROGRESS pages. The CRZ pages display VNAV related information. Other pages include:

- POS REF page – verifies the FMC position (refer to Section 40 of this chapter)
- POS SHIFT page – permits selection of preferred position from list of references
- RTE DATA page – displays progress data for each waypoint on the RTE LEGS page. Displays wind data for cruise waypoints.
- REF NAV DATA page – displays information about waypoints, navaids, airports, or runways
- LATERAL OFFSET page – permits selection of a route offset
- FIX INFO page – displays information about waypoints, and can be used to create new waypoints and fixes
- SELECT DESIRED WAYPOINT page – permits selection of the desired waypoint from a list of duplicate named waypoints
- NAV STATUS page – displays information about available navigation aids.

The only cruise mode automatic page changes are the transition from climb to cruise at the top of climb point and from cruise to descent at the top of descent point.

LNAV Modifications

This section presents the normal techniques for modifying the route. The modifications include:

- adding and deleting waypoints
- linking discontinuities
- resequencing waypoints
- intercepting a course.

RTE LEGS Page Modifications

When modifications are made to the RTE LEGS page, several automatic prompt or identifying features assist in managing and executing the modifications, such as:

- ERASE
- INTC CRS.

Adding Waypoints


A waypoint can be added to the route whenever necessary.

The new waypoint must first be placed into the CDU scratchpad. Existing waypoints can be copied from a RTE LEGS page into the scratchpad by pushing the line select key adjacent to the desired waypoint.

The new waypoint is then inserted into the route at the desired sequence point by pushing the line select key adjacent to the desired location for the new waypoint. Using the NEXT PAGE/PREV PAGE function keys to select the desired location does not alter the CDU scratchpad. The new entry automatically links to the preceding waypoint via a direct route. Placing the new waypoint into the active waypoint line is a special case and is discussed under Intercept Course in this section.

All new waypoints, except along track waypoints, cause a route discontinuity between the new waypoint and the following waypoint.

Note: If the FMC NAV database contains a HOLD pattern at the FAF, executing a database approach with a procedure turn and then executing a HOLD at the same FAF, using any inbound course, may cause a discontinuity between the FAF and the procedure turn. If the discontinuity is removed, LNAV guidance is available to fly the approach from the published holding pattern. LNAV guidance is not available to fly the published procedure turn.

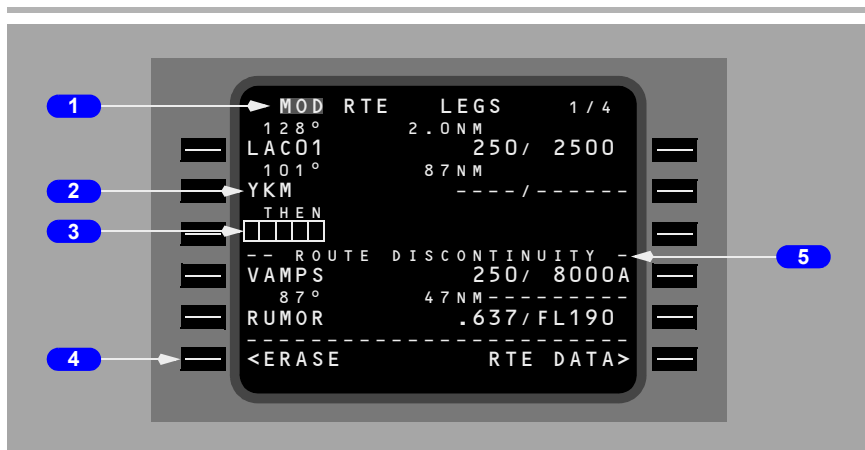

1 Page Title

When the page is modified, MOD appears in front of the title in reverse highlighting. This means the route is now altered. The MOD title also shows that the modifications are not yet executed and can be removed using the ERASE prompt.

2 Modified Waypoint

YKM waypoint is entered into the route between LAC01 and VAMPS. This modification creates a route discontinuity.

3 Discontinuity Waypoint

Box prompts indicate the requirement to link the route by entering a route waypoint into the discontinuity waypoint position.

4 ERASE

The ERASE prompt is displayed when the first modification is entered. The prompt remains on the page until the modifications are erased or executed. Push – removes all modifications and restores all active data.

5 Discontinuity Header


Indicates that the route is not continuous. Distance to destination on the PROGRESS page is not correct.

Deleting Waypoints

Waypoints can be removed from the RTE LEGS page. There are two normal methods to remove a waypoint:

- delete the waypoint using the DEL function key (not possible for the active waypoint and some conditional waypoints)
- resequence the route by moving a down-route waypoint up in the sequence and automatically removing all waypoints that are between.

During the deletion process, all of the route prior to the deletion point remains unchanged. Removing a waypoint using the DEL function key causes a route discontinuity to replace the deleted waypoint.

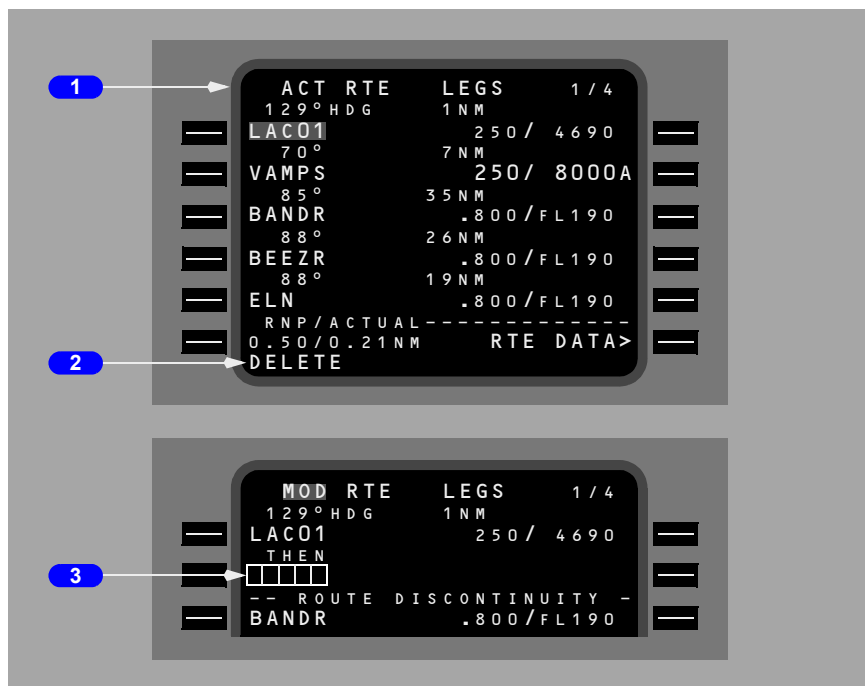

1 Active Route

The existing route shows VAMPS followed by BANDR, BEEZR, and ELN.


2 DELETE Entry

Push the DEL key to arm the delete function. DELETE is displayed in the scratchpad.

3 Delete VAMPS

With DELETE displayed in the scratchpad, push the line select key left of VAMPS to delete the waypoint. Box prompts replace VAMPS and a route discontinuity follows the box prompts.

Resequencing Waypoints

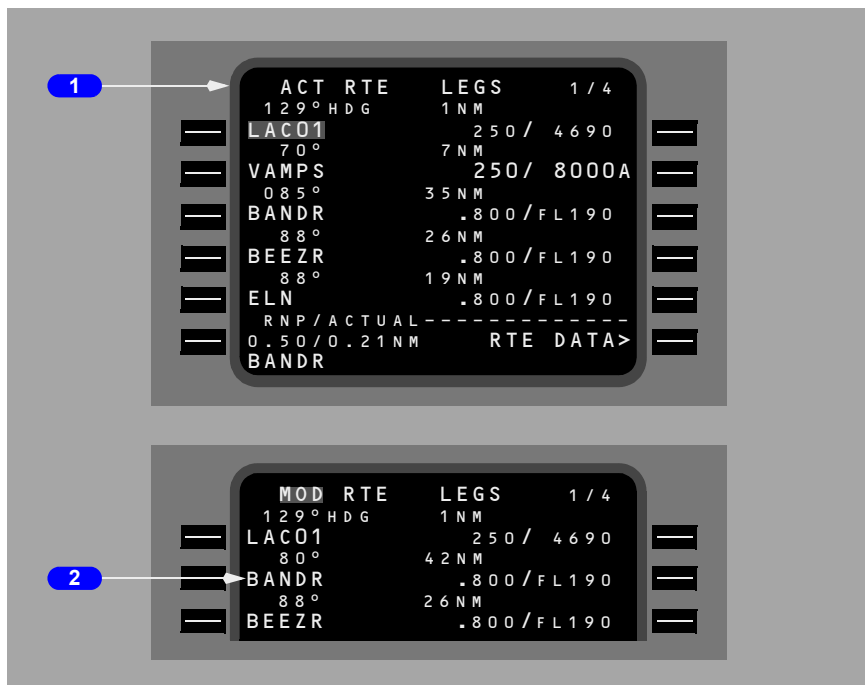


1 Active Route

The existing route shows VAMPS followed by BANDR, BEEZR, and ELN. The airplane must fly direct from LAC01 to BANDR. The BANDR waypoint is copied into the scratchpad.

2 Resequence BANDR

BANDR is transferred to the waypoint following LAC01. VAMPS is removed, and the route remains continuous.

Leg Bypass

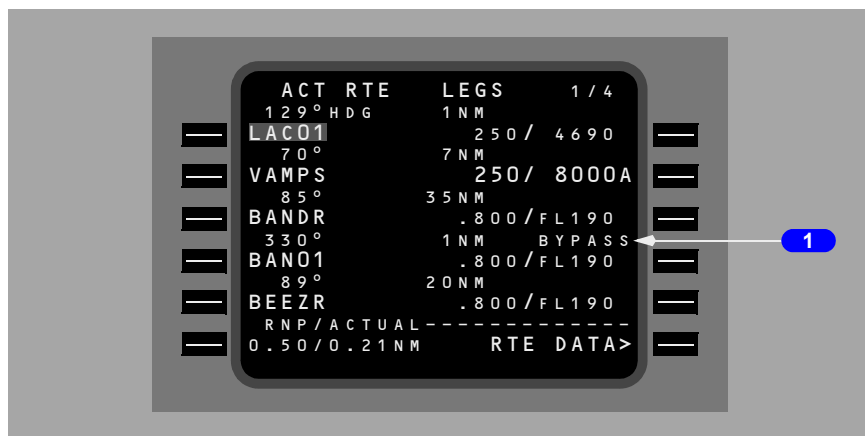

1 Bypass Notification

A waypoint (BAN01) has been entered into the route which is very close to another route waypoint (BANDR). It is impossible for the airplane to turn and capture the leg between BANDR and BAN01, so a bypass is noted.

Turn construction is based upon FMC criteria which assume that LNAV is engaged. Normal turn construction may not be possible under certain combinations of airspeed, short leg length, and a significant change in leg direction. If normal turn construction cannot provide a continuous path, the FMC bypasses the affected leg and uses alternative turn construction to intercept the leg to the subsequent waypoint. When the bypass is for the active waypoint, the waypoint remains active until the airplane passes abeam.


Any mandatory altitude-crossing restriction for the bypass waypoint is still observed if VNAV is engaged, based on passing abeam the waypoint.

If a triple bypass condition occurs (bypass of three consecutive legs), a route discontinuity will be inserted.

Removing Discontinuities

A discontinuity exists when the FMC is unable to determine the route leg following a waypoint. Discontinuities are removed by linking the route segment following the discontinuity to the route segment preceding the discontinuity.

The next desired waypoint from the subsequent route is copied into the CDU scratchpad and entered into the discontinuity, just as when adding a waypoint.

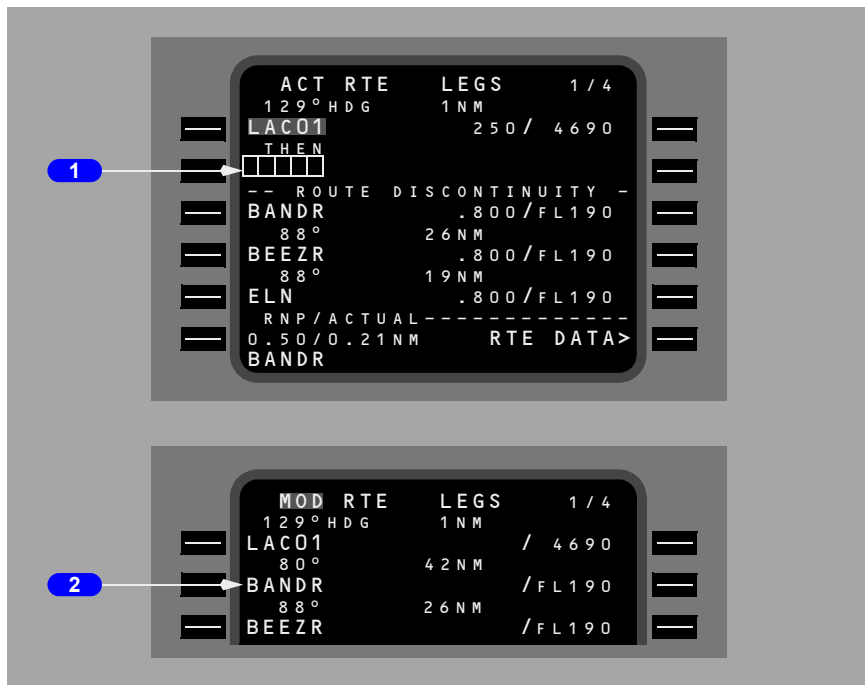

1 ROUTE DISCONTINUITY

The active route shows a discontinuity. The airplane must fly direct from LAC01 to BANDR. The BANDR waypoint is copied into the scratchpad in preparation to remove the discontinuity. Any waypoint from the route can be copied into the scratchpad to remove the discontinuity.


2 Continuous Route

BANDR is copied into the box prompts to remove the discontinuity.

Entering a waypoint which does not already exist on the route moves the discontinuity one waypoint farther down the route.

Direct To and Intercept Course

To fly direct to a waypoint or intercept a course to a waypoint, enter the waypoint name on RTE LEGS page 1 active waypoint line. The INTC CRS prompt displays in line 6R. The example shows the result with YKM entered into the active waypoint line.

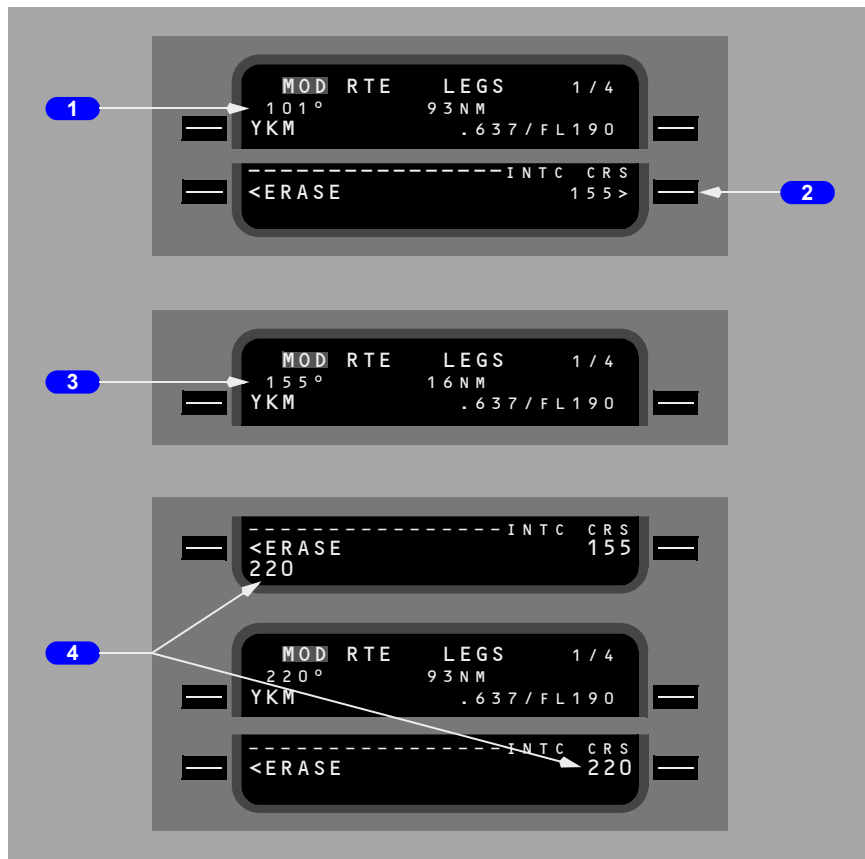

1 Direct Course

Direct course from airplane present position to entered waypoint.

Execute to proceed direct to active waypoint.

2 Intercept Course (INTC CRS)

Push – puts displayed course (155) into active waypoint leg direction. Enables intercept course function.

Displayed whenever the active waypoint name is modified.

Displays flight plan leg direction to entered waypoint in small font. Displays dashes if entered waypoint was not in the flight plan.

Valid input is any course from 000 through 360. May be changed until executed. Entered or selected value displays in large font.

3 Leg Direction

Displays the course inbound to the active waypoint after selecting the course displayed in the INTC CRS line.

4 Intercept Course (INTC CRS) – Change

Enter the inbound intercept course to the modified waypoint in the scratchpad.

Select the INTC CRS line to change the leg direction.

The example shows 220° intercept course to YKM entered in the INTC CRS line.

Abeam Points

[Option]

When a direct-to modification bypasses existing route waypoints, these bypassed points can be projected onto the new route as abeam points. Abeam points are perpendicular to the bypassed waypoints.

The following table represents the data shown in the screenshots:

ACT	RTE	LEGS	1 / XX
312°		15NM	
CYN		250/	6000
328°		27NM	
ENO		320/	10500
249°		68NM	
OTT		.800/FL230	
249°		71NM	
GVE		.800/FL350	
252°		118NM	
PSK		.800/FL350	
RNP / ACTUAL -----			
2.00 / 0.21NM		RTE DATA>	

MOD	RTE	LEGS	1 / XX
280°		152NM	
OTT		.800/FL270	
249°		71NM	
GVE		.800/FL350	
252°		118NM	
PSK		.800/FL350	

ABEAM PTS>			
-----INTC CRS			
<ERASE 249			

MOD	RTE	LEGS	1 / XX
280°		12NM	
CYN01		250/	5820
280°		16NM	
ENO01		320/	9750
280°		61NM	
OTT		.800/FL230	
249°		71NM	
GVE		.800/FL350	
252°		118NM	
PSK		.800/FL350	
RNP / ACTUAL -----			
2.00 / 0.21NM		RTE DATA>	

1 Abeam Points (ABEAM PTS)


Selecting the prompt permits the retention of waypoints following a direct-to modification. The FMC creates and displays points on the new route which are abeam the waypoints bypassed by the route modification.

In the example, the route has been modified to proceed direct to OTT. This modification bypasses CYN and ENO.

2 Abeam Waypoints

CYN01 and ENO01 have been created. Data and status corresponding to the parent waypoints is passed to the abeam waypoints. If abeam distance is less than 100 nm, only the wind data is passed to the abeam waypoint.

The following diagram depicts the situation.

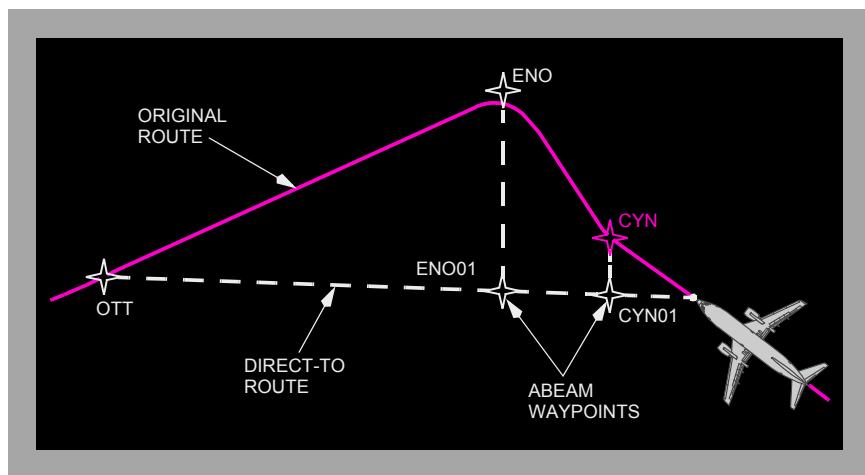

[Option – FMC U10.3 and later]

The ABEAM PTS prompt will not appear if no abeam waypoints are possible or if selection would increase the total number of waypoints to more than 150.

Abeam waypoints will not be generated for floating (non-fixed) waypoints; if the abeam distance exceeds 700 nm; or if the abeam waypoint would fall within 10 nm of either the present position or the direct-to waypoint.

If two or more identical (within 1 nm of each other) abeam waypoints are generated, only one will be designated.

Abeam waypoints use the same naming conventions as used for place-bearing/distance waypoints. See chapter 11, section 31, “Manually Entered Place-Bearing/Distance or ...” for additional information.

Select Desired Waypoint Page

When a waypoint identifier is not unique (other database waypoints have the same name), a selection of which latitude/longitude to use must be made before that waypoint can be used in the route.

[FMC U10.6 and later]

The SELECT DESIRED XXX page is automatically displayed when the FMC encounters more than one identifier for the same waypoint name after a waypoint entry.

[FMC U10.6 and later]



1 Identifier

Displays the identifier for the duplicate named waypoints. Select the proper waypoint by pushing the appropriate left or right line select key. This page is automatically removed after a waypoint is selected.

2 Type

Shows type of navaid.

Available types include VOR, VORTAC, VORDME, NDB, LOC, ILS, DME, ILSDME, LOCDME, APT or WPT.

3 Frequency

Displays the frequency of the navaid.

Blank if the waypoint is not a navaid.

4 Waypoint Name

Displays the name of the waypoint.

Blank if the waypoint is not a navaid.

5 Latitude/Longitude

The latitude/longitude is displayed for each duplicate name.

Select Desired Route Page

[Option – With pilot defined route]

When a pilot defined route identifier is not unique (other database routes have the same name), the SELECTED DESIRED RTE page is automatically displayed. A selection of the appropriate route use must be made.



1 Route Identifier

Displays each non-unique route from the three navigation databases. The database header indicates the database the route is associated with. Select the proper route by pushing the appropriate left or right line select key. This page is automatically removed after the route is selected.

[Option – With company data link]


When the non-unique route identifier is due to the initial loading of a data link uplink message this page will not be accessed.

Lateral Offset

A lateral offset may be specified up to 99.9 nautical miles left or right of course. The OFFSET prompt is displayed on the INIT/REF INDEX page and in flight on the RTE page. Selection displays the LATERAL OFFSET (or ACT LATERAL OFFSET page if an offset already exists).

Some legs are invalid for offset. These include:


- End of flight plan waypoint
- Discontinuity
- Beginning of approach transition
- Approach procedure
- DME arc
- Heading leg
- Holding pattern (except PPOS)
- Certain legs containing flyover waypoints
- Course change greater than 135 degrees
- Preplanned termination waypoint.

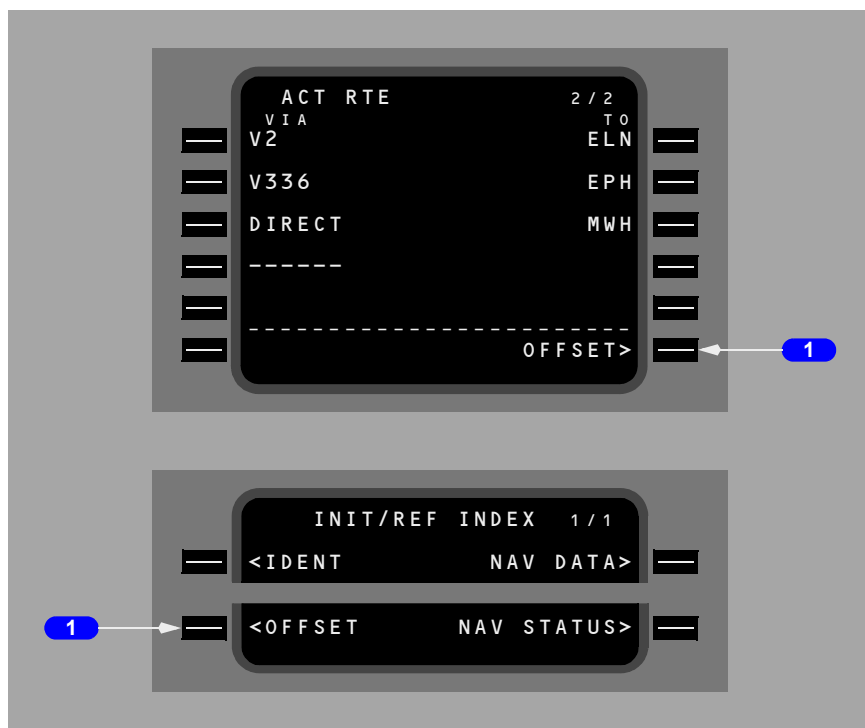

1 OFFSET

Push – displays the lateral offset page.

Lateral Offset Page

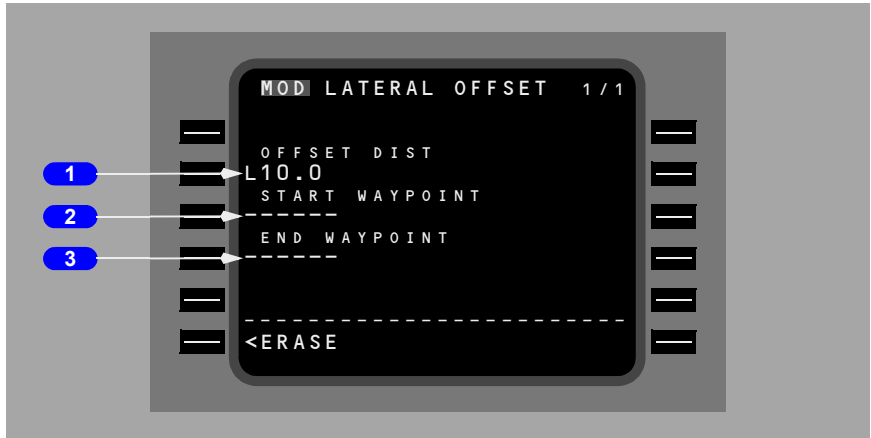

1 Offset Distance (OFFSET DIST)

The desired lateral offset distance is entered on line 2L. In the example, the 10.0 nm offset left of course could be entered L10.0, L10, 10.0L, or 10L.

Entry results in display of start and end waypoint fields.

2 START WAYPOINT

The waypoint at which the offset is to begin may be entered (up to 6 characters).

Dashes are displayed if current leg is valid for offset. Box prompts are displayed if current leg is invalid for offset.

Offset will begin at first valid offset leg after the start waypoint.

Deletion of start waypoint (or no entry) will result in offset beginning at first valid offset leg in the flight plan.

3 END WAYPOINT

The waypoint at which the offset is to end may be entered (up to 6 characters).

Offset will propagate through flight plan until end waypoint is encountered.


Deletion of end waypoint (or no entry) will result in offset propagating until an invalid offset leg is encountered.

VNAV Modifications

Three primary cruise modes are available – economy (ECON) cruise, long range cruise (LRC), and cruise with a manually selected speed.

Access to the various cruise pages is obtained by pushing the CRZ mode select key.

Cruise Page

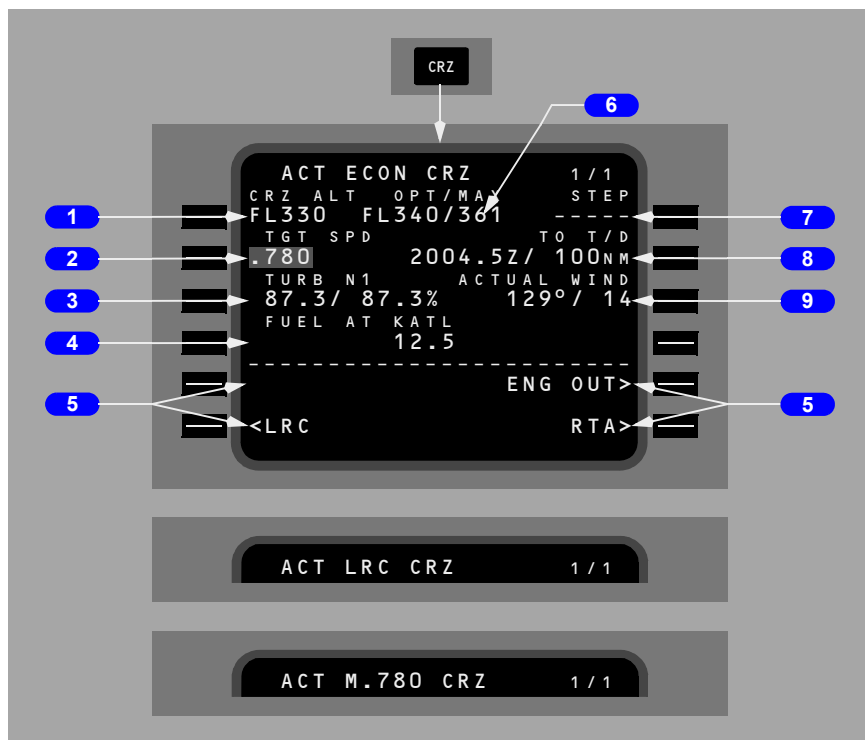

1 Cruise Altitude (CRZ ALT)

Displays present cruise altitude in flight level or feet x 100. Value may be entered via the keyboard or propagated from the PERF INIT, CLB, CRZ CLB, or CRZ DES pages.

During active cruise, entry of a new value propagates to all other pages which display cruise altitude and causes the MOD CRZ CLB or MOD CRZ DES page to appear.

[Option – With speed and altitude intervention]

Value may be increased using altitude intervention.

2 Target Speed (TGT SPD)

The computed target speed displays one of the following:

- computed or manually selected value for target airspeed or Mach
- XXX/MCP when speed intervention is active and the plan is active
 - deletion or modification of XXX/MCP is not allowed
- XXX/HOLD when decelerating to hold speed prior to the hold entry fix
 - deletion or modification of hold speed is not allowed.

The value is reverse highlighted on an active cruise page.

3 Turbulence N1 (TURB N1)

Displays proper N1 for turbulence penetration.

Value is for reference only. It is not commanded to the autothrottle.

4 Fuel at Destination (FUEL AT XXXX)

Displays the predicted fuel remaining at destination.

The value assumes continued flight per the displayed cruise and planned descent modes along the active route.

If a step to altitude is entered on line 1R, the computation assumes that the step will occur at the step point. After passing the step climb point, the predicted fuel weight is based on an immediate step climb from current position.

5 Cruise Page Prompts

Allow line selection of the various cruise pages.

The RTA prompt is replaced with ERASE when a MOD page is displayed.

6 Optimum/Maximum Altitude (OPT/MAX)

Displays the computed optimum altitude for the displayed cruise mode. The value is not constrained by minimum cruise time criteria (as is the TRIP ALT on the PERF INIT page).

Also displays the maximum possible altitude based on the selected target speed and the specified maneuver margin.

Values are advisory only. They are provided for crew reference.

7 Step to Altitude Line (STEP)

This line may be used to enter a possible step climb or descent altitude for crew evaluation.

The line will be blank when within 100 nm of top of descent or when RTA mode is active.

8 Top of Descent (TO T/D) Line

Displays time of arrival at and distance to top of descent point.

The data is always displayed when the distance is less than 100 nm. If the distance is more than 100 nm, the data will be displayed only if a step to altitude has not been entered.

9 ACTUAL WIND


Displays computed or manually entered true wind for present altitude.

A manual entry has priority. The data line title then changes to EST WIND (estimated wind).

The displayed value is used as the assumed true wind at the step to altitude for making wind/altitude trade computations.

RTA Cruise

If an RTA waypoint has been specified, the cruise page will reflect the RTA data.

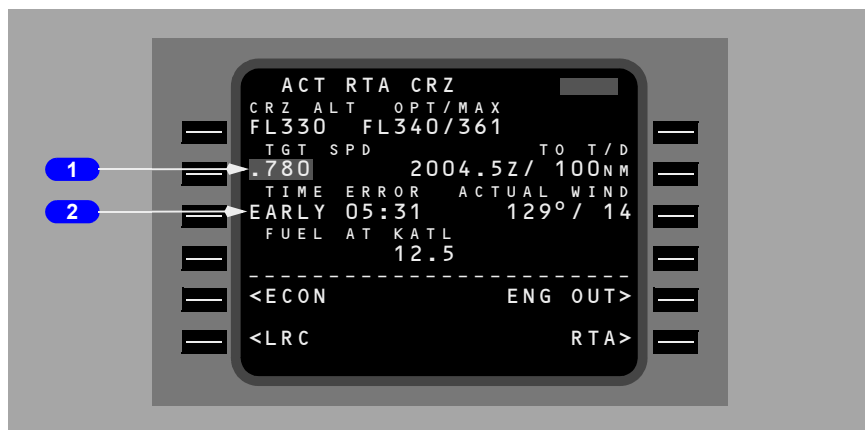

1 Target Speed (TGT SPD)

Displays the computed speed required to meet the RTA.

When RTA mode is exited by waypoint sequence or by deletion, this speed becomes the FMC target speed on a manual speed cruise page and the scratchpad message SELECT MODE AFTER RTA is displayed.

2 TIME ERROR

Displays the computed time error at the RTA waypoint.

Same as time error on RTA PROGRESS page.

Cruise with Step Climb



1 Fuel at Destination with Step Climb Altitude (FUEL AT XXXX)

The computation assumes the step climb will occur at the STEP point, and the value is prefixed by W/STEP.

2 Step To Altitude (STEP)

Used to enter step climb or step descent altitudes for crew evaluation.

Blank when within 100 nm of top of descent or when RTA mode is active.

3 STEP POINT

Displays the computed ETA at, and distance to, the first possible step climb point based on gross weight.

Blank if no entry on STEP TO line.

4 Wind (ACTUAL WIND or EST WIND)

Used as the assumed true wind at the STEP TO altitude for making wind-altitude trade computations.

5 Savings/Penalty (SAVINGS or PENALTY)

Displays the predicted cost savings or penalty associated with flying the displayed speed/altitude step climb or descent profile, as compared to flying the current cruise speed schedule and maintaining present altitude to top of descent.

Blank if no step data entered.


Cruise Climb

The cruise climb page displays data for a cruise climb to a new altitude.

MOD CRZ CLB is automatically displayed during cruise if a higher cruise altitude is entered on the CRZ page.

During VNAV operation, execution initiates a climb at climb thrust and cruise target speed to the new altitude.

The VNAV climb mode is active until reaching the selected altitude. The mode then automatically changes back to cruise.

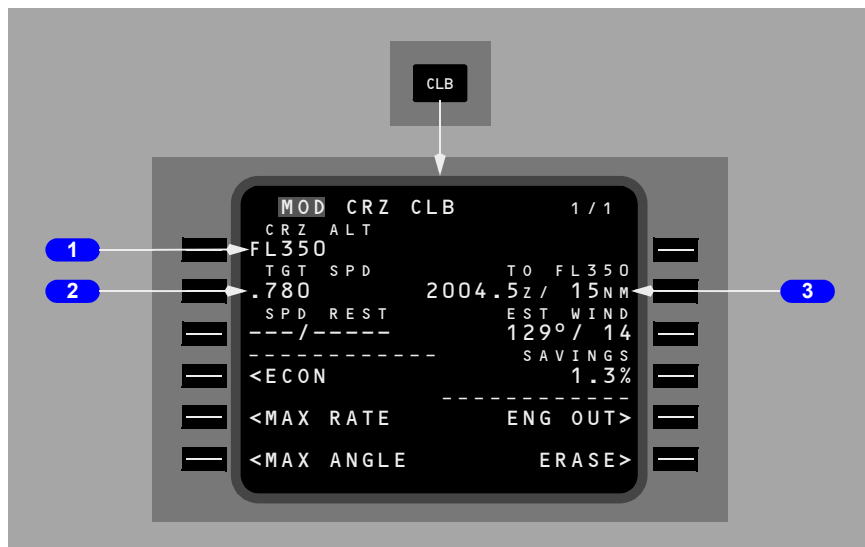

1 Cruise Altitude (CRZ ALT)

Initially displays the CRZ ALT entered on the CRZ page.

Manual entry may be made.

2 Target Speed (TGT SPD)

Displays target cruise speed for the displayed cruise altitude.


Manual entry may be made.

3 TO FLXXX

Displays ETA at, and distance to, the displayed cruise altitude.

RTA Cruise Climb

The RTA cruise climb page displays the same data as the cruise climb page except for the TIME ERROR line.

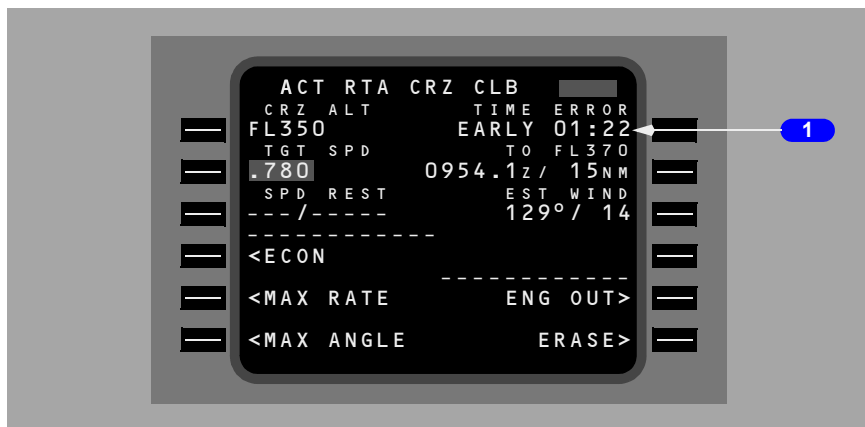

1 TIME ERROR

Displays the computed time error at the RTA waypoint.

Same as time error on RTA PROGRESS page.

Cruise Descent

The cruise descent page displays data for a cruise descent to a new altitude.

MOD CRZ DES is automatically displayed during cruise if a lower cruise altitude is entered on the CRZ page.

During VNAV operation, execution initiates a descent at 1,000 feet per minute and cruise target speed to the new altitude.



1 Cruise Altitude (CRZ ALT)

Initially displays the CRZ ALT entered on the CRZ page.

Manual entry may be made.

2 Target Speed (TGT SPD)

Displays target cruise speed for the displayed cruise altitude.

Manual entry may be made.

3 TO FLXXX

Displays ETA at, and distance to, the displayed cruise altitude.

4 Planned Descent (PLANNED DES)

Push – displays the planned DES page and allows access to the planned standard descent mode.

RTA Cruise Descent

The RTA cruise descent page displays the same data as the cruise descent page except for the TIME ERROR line.



1 TIME ERROR


Displays the computed time error at the RTA waypoint.

Same as time error on RTA PROGRESS page.

Engine Out Cruise

The engine out cruise page may be accessed by selecting the ENG OUT prompt on the cruise page. The page displays advisory data for a one engine inoperative condition.

[Option – FMC U10.3 and later]

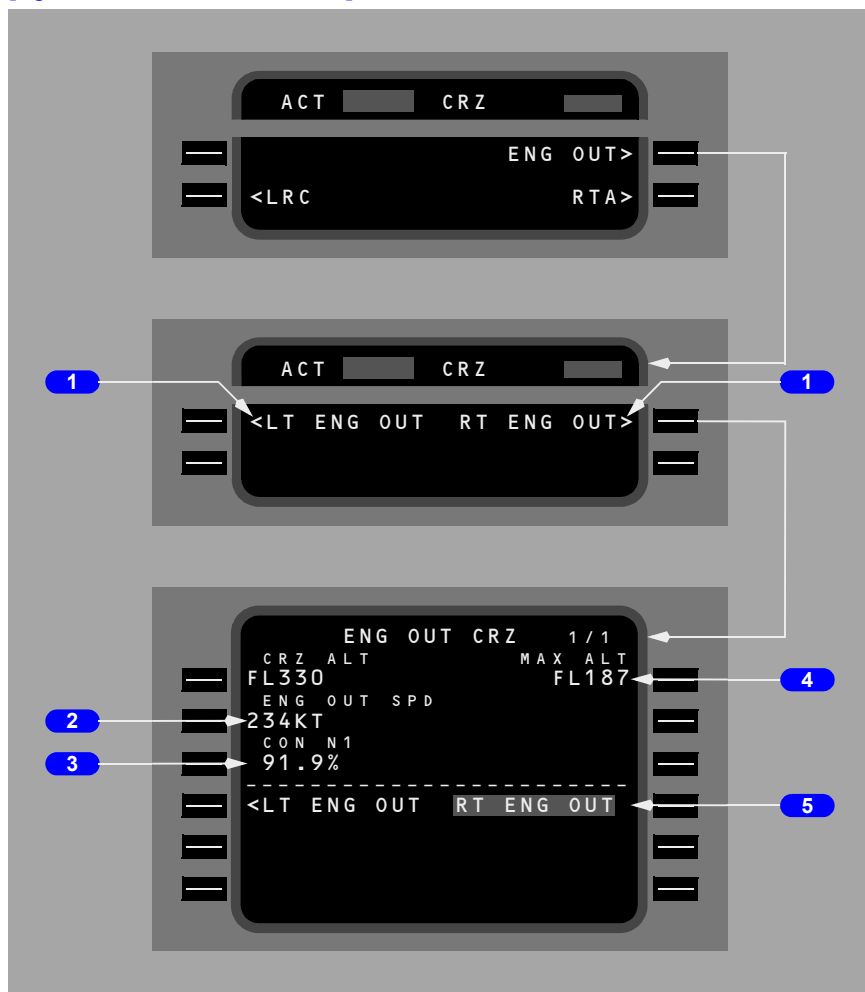

1 Left/Right Engine Out (LT ENG OUT/RT ENG OUT)

[Option – FMC U10.3 and later]

Selection changes display to ENG OUT CRZ page. The ENG OUT CRZ page is information only.

2 Engine Out Speed (ENG OUT SPD)

[Option – FMC U10.3 and later]

Displays the optimum speed based on minimum drag.

3 Continuous N1 (CON N1)

[Option – FMC U10.3 and later]

Displays N1 for maximum continuous thrust.

N1 is computed using actual bleed conditions.

4 Maximum Altitude (MAX ALT)

Displays the computed maximum altitude at which a company–specified rate of climb can be achieved, using one engine at maximum continuous thrust (default climb rate is 100 feet per minute).

After page selection, the FMC accounts for wing and engine anti–ice, air conditioning, and the engine bleed of the operating engine.

5 LT ENG OUT/RT ENG OUT

Selected engine is shown in reverse highlighting.

Early Descent

Early descents are initiated from the DES page. Once an early descent is executed, VNAV transitions to the descent mode and cruise features are no longer available.

For a path descent the DES NOW prompt will not be displayed until a descent path is established. Once executed, the autothrottle adjusts thrust to maintain 1000 feet per minute until intercepting the descent path.

For a speed descent, the autothrottle retards to idle and pitch maintains target speed.



1 Descend Now (DES NOW)

Selecting the PATH DES page before reaching the top of descent displays the normal descent page with the prompt DES NOW on the bottom right of the page. Selecting and executing the DES NOW prompt initiates a VNAV descent of 1000 feet per minute at ECON speed. Upon reaching the planned descent path, VNAV transitions to maintain the planned descent path.

Selecting the SPD DES page and executing the DES NOW prompt initiates a VNAV descent at idle thrust and target speed.

Route and Waypoint Data

Route Data (RTE DATA) Page

The RTE DATA page displays ETA for each waypoint on the RTE LEGS page. This page also displays forecast wind data for cruise waypoints.

One page displays data for five waypoints.

[Option – With company data link]



1 Waypoint

Displays the identifier for the waypoint from the ACT RTE LEGS page.

2 WIND

Used for entry and/or display of the true winds at the cruise waypoint identified on the same line.

Entry may be via the keyboard, or propagated from the CRZ WIND entry on the PERF INIT page.

The CRZ WIND value (075°/45 is depicted) propagates to all cruise waypoints (ABC to GHI is the depicted cruise segment).

If no CRZ WIND entry was made, the FMC assumes 000°/000.

A keyboard entry has priority and propagates to all down path cruise waypoints (an entry of 080°/140) at DEF is depicted). The entry must be executed.

Any entries propagated from the CRZ WIND entry are displayed in small font. Keyboard entries are displayed in large font.

Crew entries of forecast winds (or default 000°/000) are automatically biased with the actual wind computed by the FMC when within 100 NM of a cruise waypoint and within 2000 feet of a cruise altitude. Biased values are not displayed.

Blank for non-cruise waypoints (VERNO and JKL are depicted). Entry is inhibited.

3 Estimated Time of Arrival (ETA)

Displays the FMC calculated waypoint ETA.

4 LEGS

Push – displays the RTE LEGS page.

5 WINDS REQUEST

[\[Option – With company data link\]](#)


Push – transmits a data link request for winds uplink.

Position Shift Page 3/3

On the POS SHIFT page, each prompt indicates the bearing and distance of the indicated system relative to the FMC position. FMC position is displayed on line 1R of POS REF page 2/3. The entries with parentheses in the center of the page show the active position references.

Data fields are blank when on the ground.

[Option – Dual FMC with GPS]

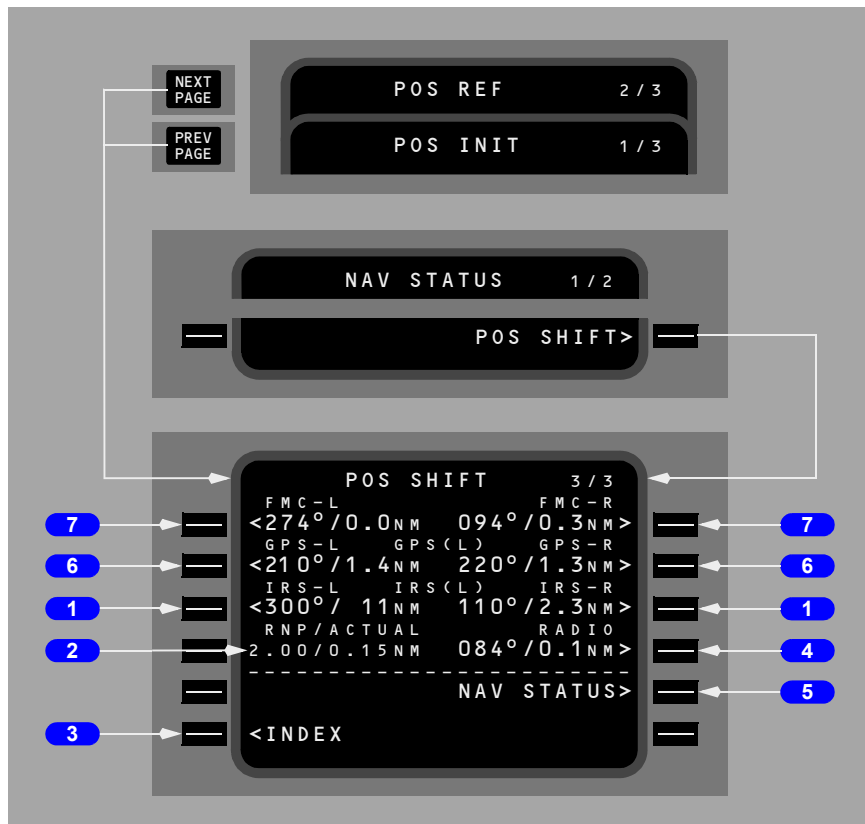

1 IRS Position L/R

Displays left and right IRS position relative to FMC position using current mag/true reference. Blank if IRS position is invalid.

Push – highlights the line, illuminates the EXEC key, and displays the CANCEL prompt.

2 Required Navigation Position/Actual (RNP/ACTUAL)

Displays the required navigation accuracy compared to actual navigation accuracy.

Manual entry is allowed.

3 INDEX

Push – displays the INIT/REF INDEX page.

4 RADIO Position

Displays radio position relative to FMC position using current mag/true reference. Blank if radio position is invalid.

Push – highlights the line, illuminates the EXEC key, and displays the CANCEL prompt.

5 Navigation Status (NAV STATUS)

Push – displays the NAV STATUS page.

6 GPS Position L/R**[Option – With GPS]**

Displays left and right GPS position relative to FMC position using current mag/true reference. Blank if GPS position is invalid.

Push – highlights the line, illuminates the EXEC key, and displays the CANCEL prompt.

7 FMC Position L/R**[Option – With dual FMC]**

Displays left and right FMC position relative to FMC position using current mag/true reference. Blank if FMC position is invalid.


Push – highlights the line, illuminates the EXEC key, and displays the CANCEL prompt.

Inflight Position Update

FMC position update is accomplished on the POS SHIFT 3/3 page in flight. Selecting a prompt stops the updating of the relative position. The selection is highlighted, the associated caret is removed, the execute key is illuminated, and the CANCEL prompt is displayed in line 6R.

When the position shift is executed, UPDATE COMPLETE is displayed.

[Option – Dual FMC with GPS]

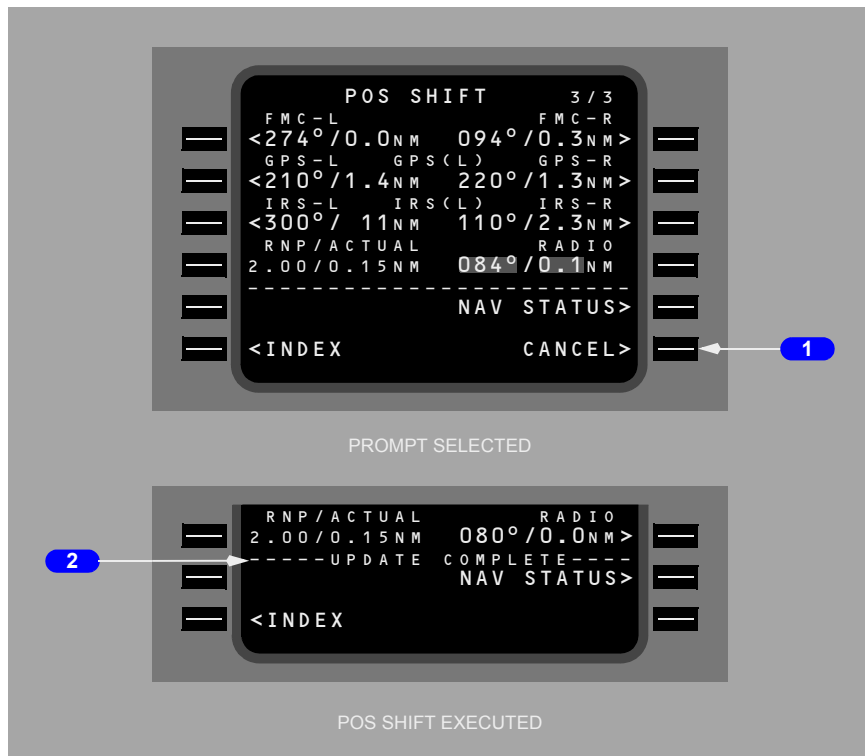

1 CANCEL

Displayed when a line selection is made for position update.

Push – prior to execution cancels the line selection.


2 UPDATE COMPLETE

Displayed after a position shift has been selected and executed.


Navigation Data

Reference Navigation Data (REF NAV DATA) Page

The reference navigation data page provides information about waypoints, navaids, airports, and runways. Entering the appropriate identifier initiates the display. Writing SUPP in the scratch pad prior to selecting NAV DATA results in display of the supplemental navigation data (SUPP NAV DATA) page.

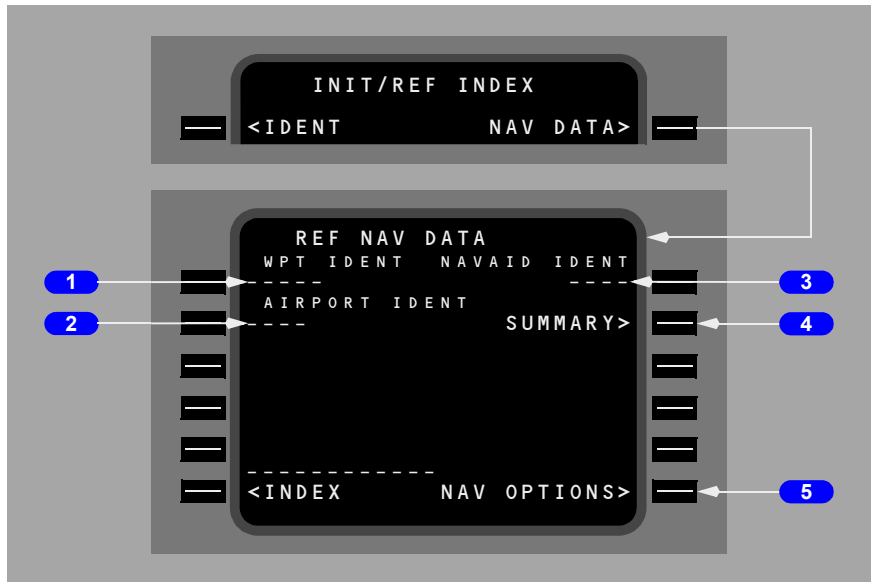

[Option – With pilot defined route]

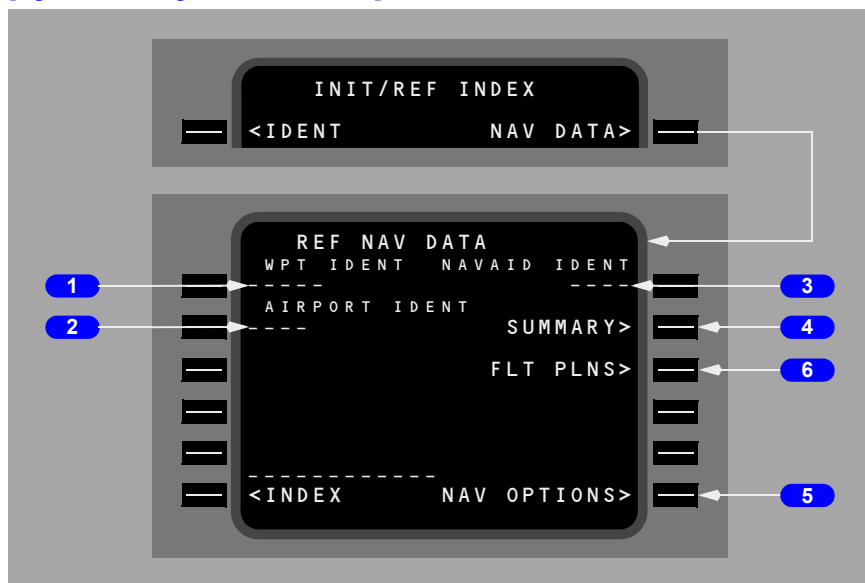

1 Waypoint Identifier (WPT IDENT)

Displays dashes initially.

Any waypoint, navaid or runway can be entered.

Format for runway entry is "RWnnn" where "nn" is a one or two digit numeric (with or without leading zeros) and "a" is an optional character L, R, or C.

In order to access runway data, an airport must be identified.

2 Airport Identifier (AIRPORT IDENT)

Displays dashes initially.

Displays box prompts if runway is entered into 1L prior to airport entry.

An invalid airport/runway pair will result in "NOT IN DATA BASE" displayed in the scratchpad.

3 Navigation Aid Identifier (NAVAID IDENT)

Displays dashes initially.

Valid entries are up to 4 alphanumeric characters.

If the navaid is not contained in the databases, box prompts will appear in related data fields needing entry.

4 SUMMARY

Push – displays NAV SUMMARY pages.

Blank if supplemental and temporary databases are empty.

5 Navigation Options (NAV OPTIONS)

Push – displays NAV OPTIONS page.

If the entered identifier is already stored in the permanent, supplemental, or temporary database, then relevant data propagates to the subsequent REF NAV DATA display.

If the entered identifier is not stored in any database, the subsequent REF NAV DATA display contains box prompts. Following entry of the required information, the new data may be stored in the temporary database by executing (except for runway data). Data may be subsequently deleted from the temporary database by deleting the individual identifier, if the identifier is not presently being displayed on another page (e.g., RTE LEGS, PROGRESS, etc.).


All data stored in the temporary database is cleared at flight completion.

6 Flight Plans (FLT PLNS)

[Option – With pilot defined route]

Push – displays FLIGHT PLAN SUMMARY page.

Waypoint Data Display

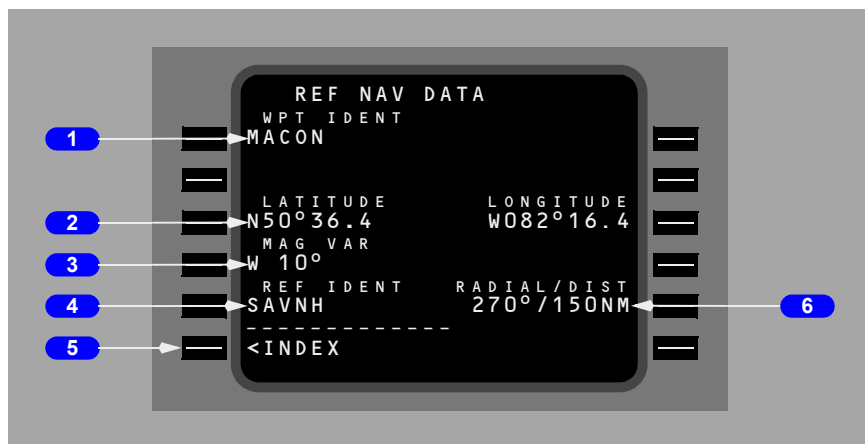

1 Waypoint Identifier (WPT IDENT)

Displays or permits entry of the desired waypoint. When this entry is complete, the associated data lines are displayed.

2 LATITUDE/LONGITUDE

Displays or permits entry of waypoint latitude and longitude. Entry on the REF IDENT and RADIAL/DIST lines cause latitude and longitude to be computed and displayed.

3 Magnetic Variation (MAG VAR)

Displays or permits entry of waypoint magnetic variation. Data is automatically computed based on latitude and longitude.

Manual entry has priority.

4 Reference Identifier (REF IDENT)

Together with RADIAL/DIST, displays or permits entry of reference point for a created waypoint.


5 INDEX

Push – displays INIT/REF INDEX page.

6 Radial/Distance (RADIAL/DIST)

Together with REF IDENT, displays or permits entry of bearing and distance for a created waypoint.

Navigation Aid Data Display

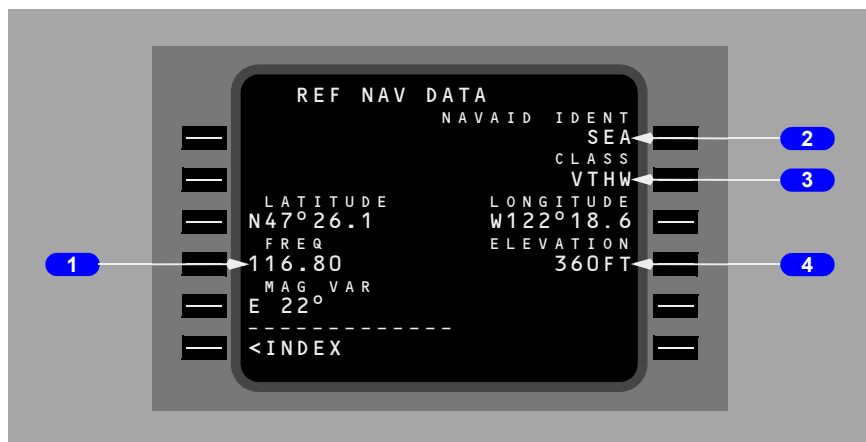

1 Frequency (FREQ)

Displays or permits entry of the frequency of the entered navaid.

2 Navigation Aid Identifier (NAVAID IDENT)

Displays or permits entry of navaid identifier (5 characters maximum). Following entry, the associated data lines are displayed.


3 Classification (CLASS)

Displays or permits entry of the classification of the entered navaid.

4 ELEVATION

Displays or permits entry of the elevation (feet above MSL) of the entered navaid.

Airport Data Display

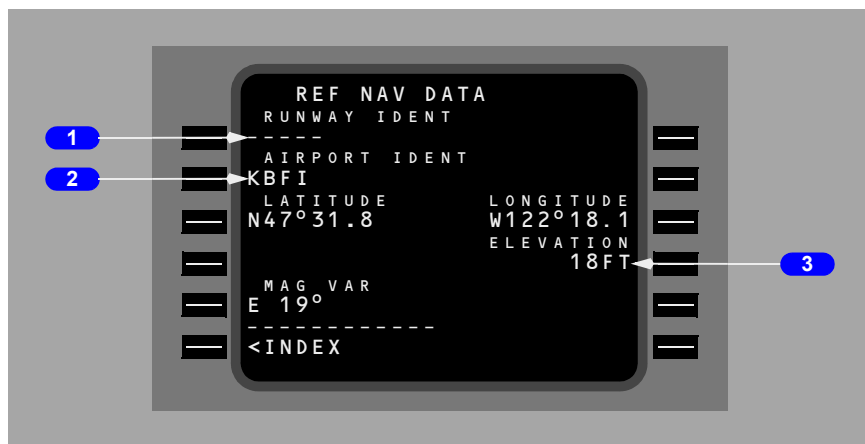

1 Runway Identifier (RUNWAY IDENT)

Permits entry of runway identifier.

2 Airport Identifier (AIRPORT IDENT)


Displays airport identifier.

3 ELEVATION

Displays or permits entry of the elevation (feet above MSL) of the entered airport.

Runway Data Display

A runway identifier may be entered on the airport data display page or as a waypoint on the REF NAV DATA page. On the airport data display page, entry may be in the form of 13R or RW13R. Single digit entries are possible, with or without leading zeros. If the waypoint method is used, entry must be in the form RW13R, and the proper airport identifier must be entered on the runway data display page. Runways must be stored in the permanent navigation database.

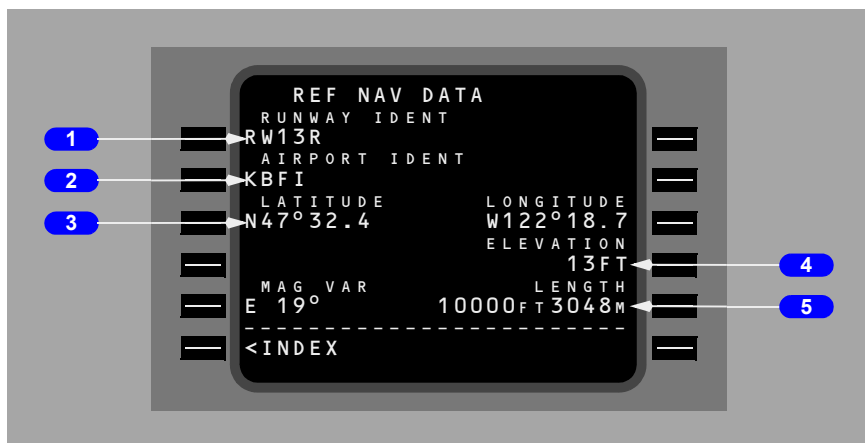

1 Runway Identifier (RUNWAY IDENT)

Displays runway identifier.

2 Airport Identifier (AIRPORT IDENT)

Displays airport identifier.

3 LATITUDE/LONGITUDE

Displays latitude and longitude of entered runway.

4 ELEVATION


Displays elevation (feet above MSL) of the entered runway.

5 Runway Length (LENGTH)

Displays length of entered runway in feet and meters.

Navigation Summary (NAV SUMMARY)

The NAV SUMMARY pages show the contents of the temporary and supplemental navigation databases. Contents of the temporary navigation database show first, followed by contents of the supplemental navigation database.

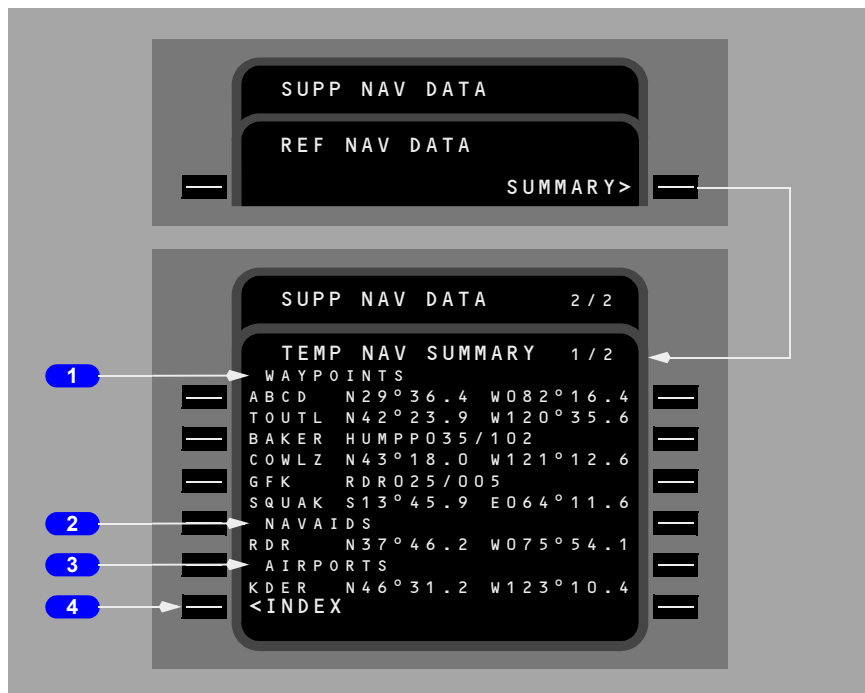

1 WAYPOINTS

Shows waypoints stored in related database.

Waypoints show in defining format.

2 NAVAIDS

Shows navaids stored in related database.

3 AIRPORTS

Shows airports stored in related database.

4 INDEX

Push – shows page (REF NAV DATA or SUPP NAV DATA) used to access NAV SUMMARY pages.

Supplemental Nav Data

[Option – With company data link]

1 SUPP Scratchpad Entry

The supplemental navigation database is accessed by typing SUPP in the scratchpad while on the INIT/REF INDEX page, then selecting the NAV DATA prompt. Access is only available on the ground.

2 Effectivity Date (EFF FRM MON DY/YR)

Allows entry of month, day, and year that the supplemental database becomes valid. The date will be displayed on IDENT page 1/2 after entry. Box prompts are displayed if an effectivity date is not entered.

3 Delete All Supplemental Data (DELETE ALL SUPP DATA)

Data may be deleted from the supplemental database by two methods. Deletion may be accomplished one item at a time on the display pages, or the entire database may be deleted by selecting this prompt. The prompt is only available before entry of an origin airport.

4 SUPP NAV REPORT

[Option – With company data link]

Push – transmits a copy of supplemental navigation database.


5 SUPP NAV REQUEST

[Option – With company data link]

Push – transmits a data link request for a supplemental navigation database uplink.

Flight Plan Summary

[Option – With pilot defined route]

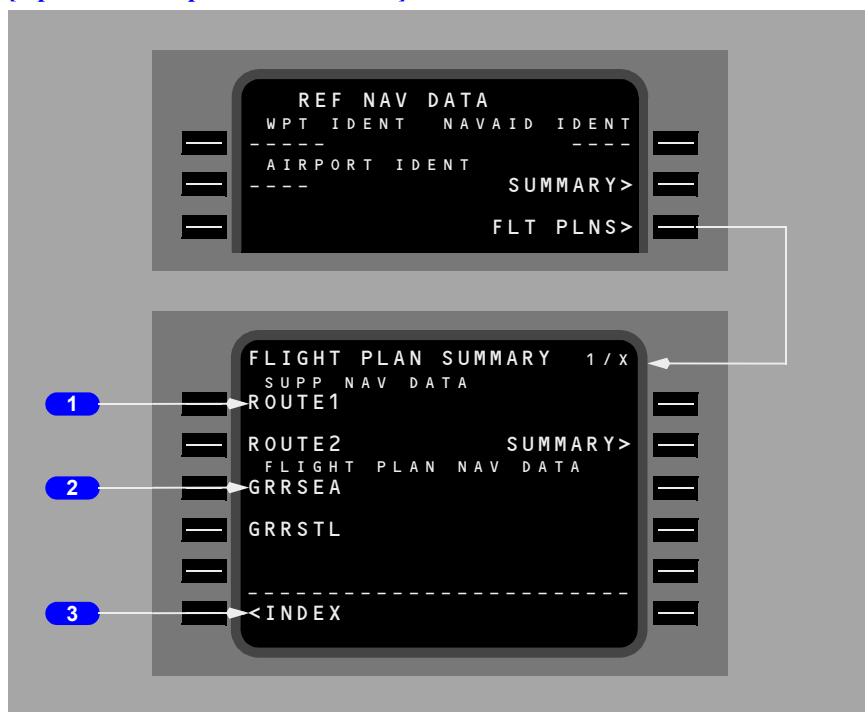

1 SUPP NAV DATA Routes

Shows routes stored in Supp Nav Data memory.

Routes can be deleted.

2 FLIGHT PLAN NAV DATA Routes

Shows routes stored in the Loadable Flight Plan database.

3 INDEX


Selection displays the REF NAV DATA page.

Navigation Status Display

The NAV STATUS page displays the current status of the navaids being tuned.

Access to the NAV STATUS display is from the NAV STATUS prompt on the POS SHIFT page 3/3, the PROGRESS page 1/4, and (in flight) the INIT/REF INDEX page or from the NAV OPTIONS page 2/2, NEXT or PREV PAGE.

[Option – Dual FMC with GPS]

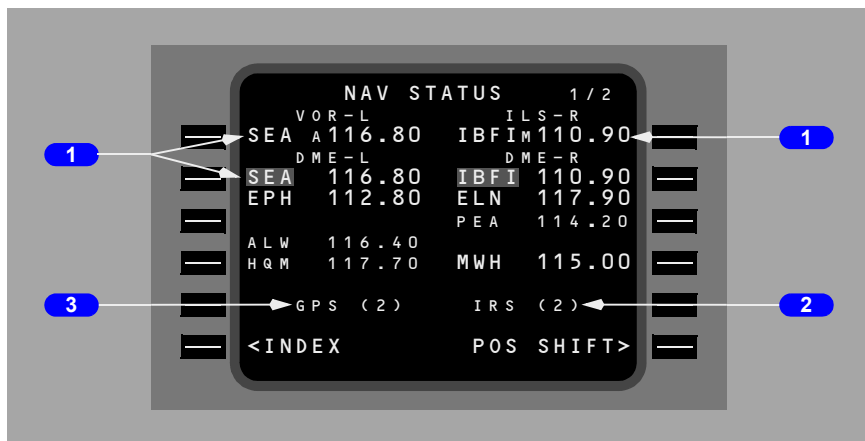

1 VOR/ILS and DME Lines

Lines 1L and 1R display VOR or ILS identifier and frequency tuned on the corresponding VHF NAV control panel.

Lines 2L – 2R through 4L – 4R display up to five DME identifiers and frequencies tuned by the corresponding scanning DME receiver.

Data is displayed in large font with the identifier highlighted if that facility is being used for navigation.

Data is displayed in large font with the identifier not highlighted if that facility is being received but not used for navigation.

Data is displayed in small font if that facility is being tuned but not received.

If the navaid has failed, FAIL will be displayed in small font.

If there is no corresponding identifier for the displayed frequency, then the identifier field will be blank and only the frequency will be displayed.

On lines 1L or 1R, for VOR/ILS displays, the mode of tuning will be shown:

- M – Manual
- P – Procedural
- A – Automatic.

On lines 2L – 2R through 4L – 4R, if no DME information is received then the identifier and frequency field is blank.

2 IRS Status Display

Displays the IRS currently selected for use in navigation. “L” or “R” indicates left or right IRS is being used in the FMC position calculation.

[Option – Dual FMC]

“2” indicates a dual system with both IRSs used in the FMC position calculation.

3 GPS Status Display

[Option – With GPS]

Displays the GPS currently selected for use in navigation. “L” or “R” indicates left or right GPS is being used in the FMC position calculation.

[Option – Dual FMC with GPS]

“2” indicates dual system with both GPSs used in the FMC position calculation.


The display will be blank if GPS is inhibited for use in navigation.

Navigation Options (NAV OPTIONS)

The FMC normally rejects the use of navaids that are not suitable for navigation. However, when the aircrew is aware that unreliable navaids exist (either by NOTAM, ATC, etc.) they should manually exclude these navaids from the FMCs navigation solution. This will prevent the possibility of incorrect position calculations and maximize the FMCs reliability. This is accomplished through the NAV OPTIONS page.

Access to the NAV OPTIONS page may be gained by selecting the NAV OPTIONS prompt on the REF NAV DATA page or by selecting NEXT or PREV PAGE on the NAV STATUS page.

[Option – With GPS]

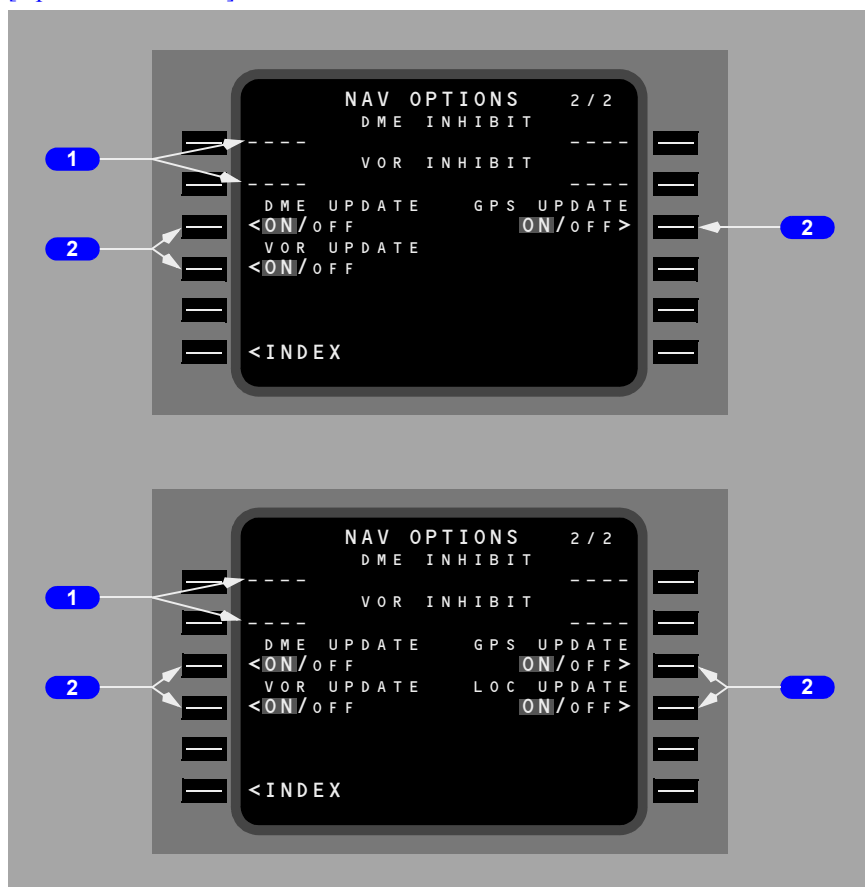

1 DME/VOR INHIBIT

Enter the identifier of up to two VOR/DME, VORTAC, or DME stations that must not be used for FMC position updates.

Entries are blanked at flight completion.

Deleting or overwriting removes a previous inhibit.

The FMC normally uses DME from two different ground stations to update its position solution. When two DME stations are not available, the FMC reverts to single station radial-DME updating to determine position. Only two of the four inhibit entries are utilized at any one time depending upon which update mode the FMC is operating in. The DME INHIBIT entries are excluded from the FMCs update solution whenever the FMC is updating from two DME stations. The VOR INHIBIT entries are excluded from the FMCs update solution whenever the FMC is radial-DME updating.

2 DME/VOR/GPS UPDATE

[Option – With GPS]

Push – permits switching between ON and OFF modes for updating FMC position. Default mode is ON. The current mode is highlighted.

Note: When the DME UPDATE is OFF, the VOR-DME UPDATE is also inhibited even if the VOR UPDATE is selected ON.

Selection is reset to ON at flight completion.

2 DME/VOR/GPS/LOC UPDATE

[Option – With GPS and U10.7]

Push – permits switching between ON and OFF modes for updating FMC position. Default mode is ON. The current mode is highlighted.


Note: When the DME UPDATE is OFF, the VOR-DME and LOC-DME UPDATES are also inhibited even if the VOR and LOC UPDATES are selected ON. If the FMC hasn't done a GPS UPDATE in the last 5 seconds then the FMC can do a LOC only UPDATE without DME if the LOC UPDATE is selected ON and the DME UPDATE is selected OFF.

Selection is reset to ON at flight completion.

Fix Information Page

Two identical FIX INFO pages are used to identify waypoint fixes for display on the navigation display map mode. If desired, fix information can be copied into the route. Page access is via the FIX key.

Radial or distance entries from the fix may be made on any line 2L to 4L. Valid format is a three character numeric entry. Slash rule is used to differentiate between radial and distance in the scratch pad.

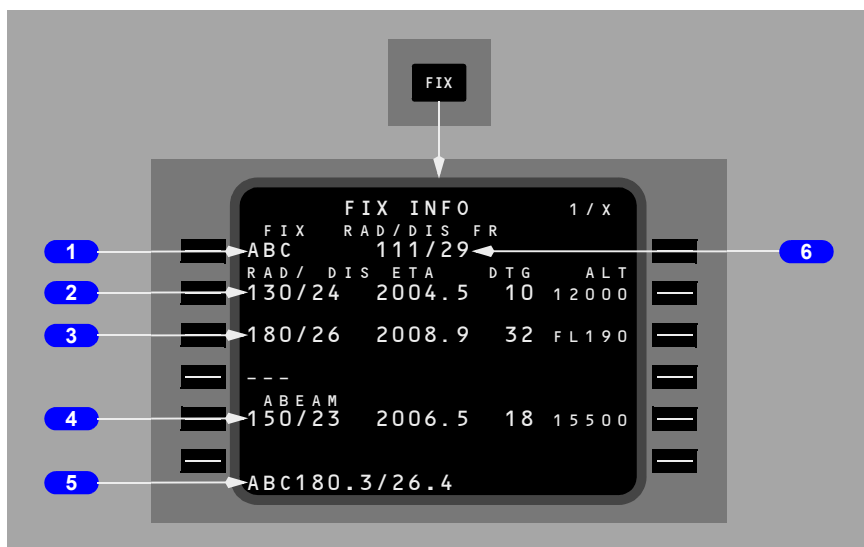

1 FIX Name

Enter the desired fix.

Valid entries are airports, nav aids, waypoints or runway identifiers from the navigation database.

The selected fix is displayed on the navigation display map mode and highlighted by a green circle.

2 Distance Entry (example)

Enter a distance from the fix. Distances from the fix are displayed on the navigation display map mode as a dashed green circle around the fix.

When the distance intersects the active route, the ETA, DTG, and predicted altitude at the intersection are displayed for that intersection.

If there is more than one intersection, the data will apply to the first occurrence and will sequence as each intersection is passed.

Valid entries are xxx.x:

- distance is limited to 511 NM or less and may contain 1/10 NM entry
- leading zeros can be omitted for distance
- decimal values can be omitted
- distance only entries must start with a /.

ETA – displays the estimated time of arrival to the intersection point.

DTG – displays the distance to go to the intersection point.

ALT – displays the predicted altitude at the intersection point.

3 Radial Entry (example)

Enter a radial from the fix. Radials are displayed on the navigation display map mode as green dashed lines from the fix.

When the radial intersects the active route, the ETA, DTG, and predicted altitude at the intersection are displayed.

If there is more than one intersection, the data will apply to the first occurrence and will sequence as each intersection is passed.

Valid entries are xxx or xxx/.

4 ABEAM

Displays the abeam point and calculates the ETA, DTG, and ALT information.

The fix abeam point ahead of the airplane is displayed by a radial line from the waypoint ending at the nearest perpendicular route leg intersection.

If there is more than one intersection, the data will apply to the first occurrence and will sequence as each intersection is passed.

5 Route Intersection Point Copied

Pushing the line select key for one of the RAD/DIS entries copies the fix place/bearing/distance definition into the scratchpad. This fix can be placed into the route on a LEGS page as a waypoint.

6 Radial/Distance From Fix (RAD/DIS FR)

Displays the radial and distance from the fix to the airplane. This information is continually updated as the airplane position changes.

Flight Management, Navigation
FMC Descent and Approach**Chapter 11**
Section 43

Introduction

The descent phase begins at the top of descent point and continues to the end of descent point. Planning for the descent phase begins during cruise.

The approach phase begins at the end of descent point and continues to touchdown or go-around. When a go-around is accomplished, the FMC enters the cruise phase.

The only automatic page change provided in the descent/approach modes is the transition from cruise to descent at the top of descent.

Early Descent

Early descent may be commenced prior to reaching the top of descent by using the DES NOW prompt.

Descent

During descent, LNAV progress is managed using the RTE LEGS and PROGRESS pages, as in the cruise phase. VNAV descent management is accomplished primarily on the DES page.

[Option – With alternate destination prediction]


Other pages which support descent are:

- DES FORECASTS page – to enter forecast wind data to aid descent planning
- ALTERNATE DESTS page – to manage the selection of alternate airports and diversions.

Descent Page (During Cruise)

The descent page is used to monitor, revise, or select the descent path. Descent modes are economy (ECON) path or speed and manual path or speed. The default VNAV descent mode is ECON PATH. The crew must select a manual speed descent mode.

The page title reflects the VNAV descent mode. The path mode controls descent to fly a vertical path which complies with altitude and speed restrictions in the flight plan. The speed mode controls descent at a fixed speed and complies with altitude and speed restrictions in the flight plan.

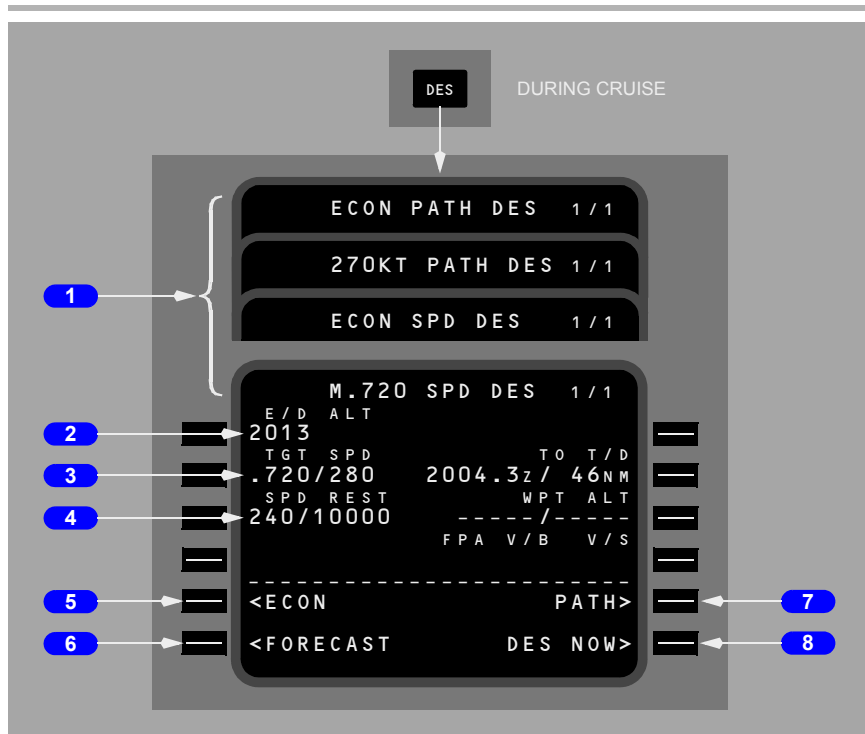

1 Page Title

The page title identifies the selected mode. When a manual speed is selected, the title includes XXXKT for fixed CAS or M.XXX for fixed Mach selections.

Displays ACT when the descent phase is active.

2 End of Descent Altitude (E/D ALT)

Displays the end of descent altitude.

- for a PATH DES page, displays the altitude restriction for the E/D waypoint; blank if path descent not available
- for a SPD DES page, displays the altitude restriction for the E/D waypoint, if an E/D waypoint is present
- if an approach is selected which ends at RWXXX, the E/D altitude will be Threshold Crossing Height (TCH), 50 feet above the runway.

[Option – FMC U10.6 or later]

The end of descent altitude is the altitude constraint or predicted altitude of the last descent waypoint. End of descent may follow a lateral discontinuity. If a lateral discontinuity exists, the FMC will construct a great circle path across the discontinuity and VNAV shall be valid while flying the discontinuity.

3 Target Speed (TGT SPD)

Displays the command speed maintained by VNAV while descending to waypoints, constraints, or speed restrictions.

Displays XXX/MCP when speed intervention is active.

On ECON PATH or ECON SPD DES pages, displays the computed values for target Mach and airspeed. Speeds are performance limited.

Manual entries may be made and cause the manual PATH or manual SPD DES page for that value to display (M.720 SPD DES is depicted).

Blank for any PATH DES page if a path descent is not available.

4 Speed Restriction (SPD REST)

Displays the most restrictive of the following speeds:

- destination airport speed minus 10 knots
- waypoint speed restriction if greater than minimum flaps up maneuvering speed
- minimum flaps up maneuvering speed
- selected Vref + wind correction for landing flap setting
- whenever flaps are extended, the, appropriate flap speed shall be displayed as XXX/FLAPS. This shall supersede any other speed restriction
- displays XXX/HOLD when decelerating to hold speed prior to hold entry fix.

Dash prompts displayed when there is no active speed restriction.

Manual crew entries or deletions may be made. HOLD or FLAPS speed may not be deleted or modified.

5 Economy (ECON)

Displayed on the manual DES pages.

Push – selects the corresponding ECON SPD or ECON PATH DES page.

6 Descent Forecasts (FORECAST)

Push – selects the DES FORECASTS page.

7 PATH

Displayed on the SPD DES pages if a path descent is available.

Push – selects the corresponding PATH DES page.

8 Descend Now (DES NOW)

Displayed on the standard DES pages whenever descent is not ACT or MOD.


Blank for any PATH DES page if a path descent is not available.

Push – arms the DES NOW function and illuminates the EXEC light.

On a PATH DES page, execution allows early initiation of PATH descent at 1000 fpm until intercepting the computed path. On a SPD DES page, execution allows early initiation of a SPD descent at the specified speed (ECON or manual).

Descent Page (During Descent)

Display when any descent mode is active after beginning of descent.

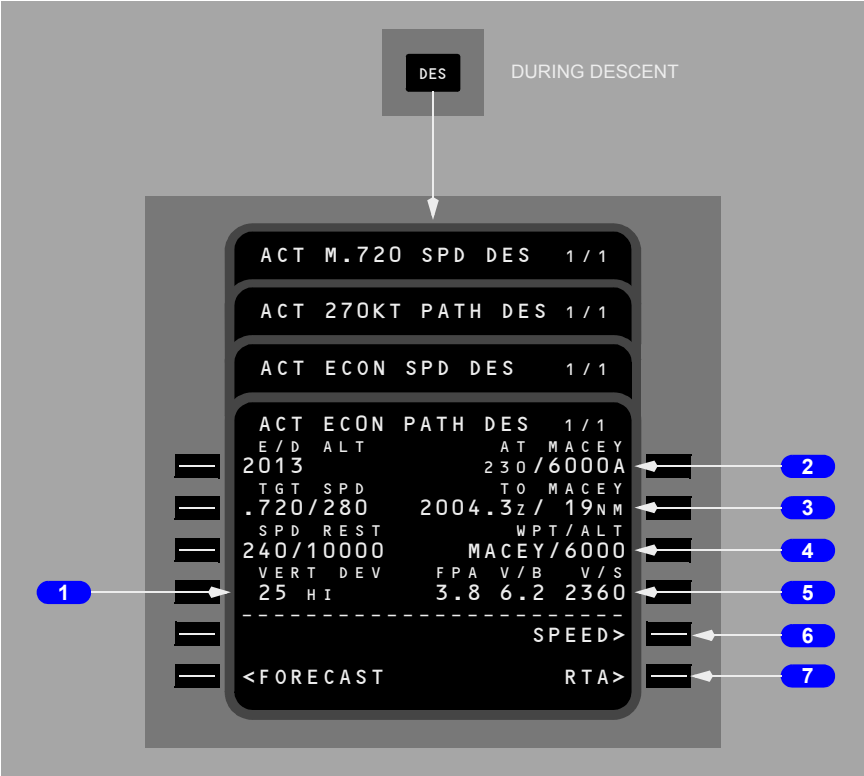

1 Vertical Deviation (VERT DEV)

Displays present deviation (feet HI or LO) from the computed vertical path.

The deviation is always in relation to the path descent profile, regardless of which page is active (PATH DES or SPD DES).

Blank if a path is not available.

2 Altitude Restriction (AT XXXXX)

Displays the next waypoint constraint from the RTE LEGS page.

The constraint is speed/altitude. If an airspeed restriction exists at the waypoint, it will be displayed in large font; otherwise the predicted speed will be displayed in small font.

Can be deleted on this page.

The display is blank when no constraint exists, or for any PATH DES page if a path descent is not available.

3 To Waypoint (TO XXXXX)

Displays computed ETA and distance to go to T/D when not in an active descent mode.

If an early descent is in progress (initiated using DES NOW prompt), ETA and distance to go to original T/D is displayed until passing the T/D.

If a descent mode is active, displays ETA and distance to go to the first of the following points:

- the waypoint in the AT XXXXX line
- an intermediate T/D (TO T/D – XXXXX, where XXXXX is the altitude).

The display is blank if a path descent is not available, or if the AT XXXXX line is blank and no T/D information is displayed.

4 Waypoint/Altitude (WPT/ALT)

Displays the waypoint and altitude that serves as the basis for the vertical bearing (V/B) display on line 4R.

Normally displays the same waypoint/altitude restriction that is displayed on the AT XXXXX line.

May be overwritten by pilot entry.

[Option – FMC U10.5 and later]

A runway identifier may be entered for a runway at the destination airport of the displayed flight plan. Format may be either RWXX/, RWXXX/, RWXX/AA, or RWXXX/AA where XX or XXX is the runway designation and AA is the altitude. When RWXX/ or RWXXX/ is used the altitude will automatically be set to runway elevation plus threshold crossing height.

Dash prompts are displayed if there is no entry.

5 Vertical Path Parameters (FPA V/B V/S)

Displays the following parameters related to the present vertical path:.

- FPA – actual flight path angle based on present ground speed and vertical speed (that is, the present vertical bearing being flown)
- V/B – vertical bearing direct from present position on the WPT/ALT line (that is, the flight path angle required if flying direct to the waypoint and altitude on the WPT/ALT line).
- V/S – the required vertical speed (in fpm, based on present ground speed) to fly the displayed V/B.

Blank if no entry on the WPT/ALT line.

6 SPEED

Displayed on PATH DES pages.

Push – selects the related SPD DES page.


7 RTA

Displayed when DES NOW or ERASE prompt is not displayed.

Push – selects the RTA PROGRESS page.

RTA Descent Page

RTA Descent pages are displayed when an RTA mode is active. Displays are the same as on other descent pages except as noted.

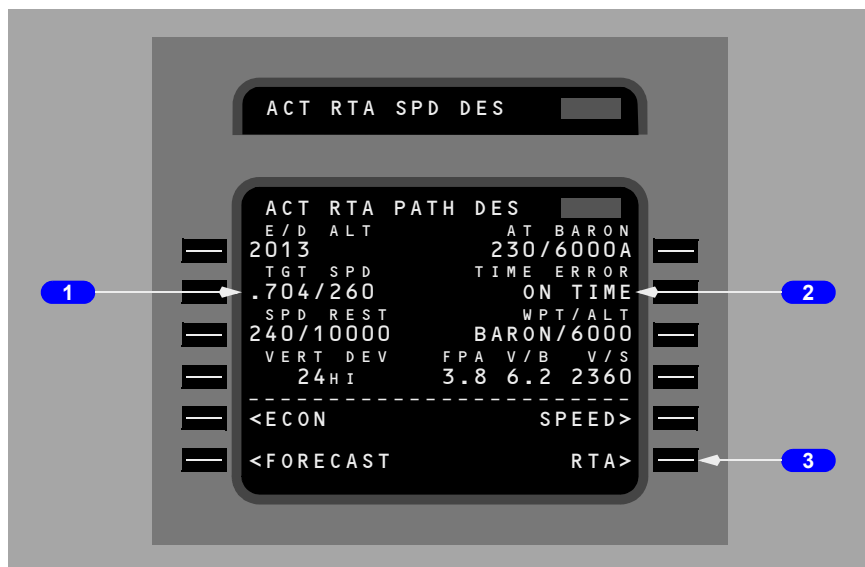

1 Target Speed (TGT SPD)

Displays computed RTA target speed.

Changes to FMC target speed if the RTA mode is exited.

2 TIME ERROR

Displays computed time error at the RTA waypoint.

Same as time error line on RTA PROGRESS page.

3 RTA

Push – selects the RTA PROGRESS page.

The primary entries are wind direction and speed for up to three descent altitudes, and the altitude that anti-icing is turned on and off.

[Option – With company data link]



1 Transition Level (TRANS LVL)

Changes automatically if an arrival procedure having a different stored value is entered.

Manual entry allowed and takes priority.

Data may be up-linked via ACARS message. The up-linked value will appear in small font until EXECuted at which time it will be displayed in large font.

2 CABIN RATE

Displays the predicted cabin rate of descent required by the flight plan descent profile.

3 Descent Wind (ALT ----- WIND ----- DIR/SPD)

Allows entry of altitude and wind direction/speed for up to three forecast wind values.

Entries may be made in any altitude sequence and will be automatically ordered by altitude from highest to lowest.

Data may be up-linked via ACARS message. The up-linked value will appear in small font until EXECuted at which time it will be displayed in large font.

4 Thermal Anti-Ice On/Off (TAI ON/OFF)

Enter the altitudes in flight level or feet at which anti-ice is expected to be turned on and off.

Data may be up-linked via ACARS message. The up-linked value will appear in small font until EXECuted at which time it will be displayed in large font.

5 ISA Deviation and QNH (DEV/QNH)

Enter the average ISA deviation for descent in °C (+/-XX°C) or °F (+/-XX°F)

Enter the destination QNH altimeter setting (IN. HG. or MB). Do not enter a QFE altimeter setting.

Data may be up-linked via ACARS message. The up-linked value will appear in small font until EXECuted at which time it will be displayed in large font.

6 ERASE or LOAD

Push – (ERASE) deletes modification and returns page to previously displayed descent page.

Push – (LOAD) initiates the loading of ACARS up-linked descent forecasts data.

LOAD is displayed when ACARS descent forecasts has the highest load priority and no EXECutes or ACCEPT/REJECTs are pending.

7 DES WINDS REQUEST

[Option – With company data link]

Push – transmits a data link request for descent winds.

Engine Out Descent

There are no specific engine out pages for descent. Use the normal descent planning features and pages.

Approach

During approach, LNAV and VNAV guidance normally transitions to the approach guidance provided by navigation radios. The FMC continues to calculate and display present position and can provide LNAV and VNAV approach guidance for certain types of approaches when radio navigation is not used.

The RTE LEGS and PROGRESS pages are used to manage the airplane until other approach guidance becomes active. Other pages which support approaches are:


- APPROACH REF page – to select the approach VREF
- ARRIVALS page – to select the desired arrival and approach procedures
- HOLD page – to manage holding patterns.

Holding is described in this section but it can be used during any phase of flight.

Arrivals Page – IFR Approaches

The arrivals page allows selection of an approach, standard terminal arrival route (STAR), and arrival transitions to the destination airport. This page can also be used to view information about a selected airport that is not the destination. Only procedures for the origin and destination airport can be selected for entry into the flight plan.

The approaches, STARS/profile descents, and transitions are displayed and selected on this page.

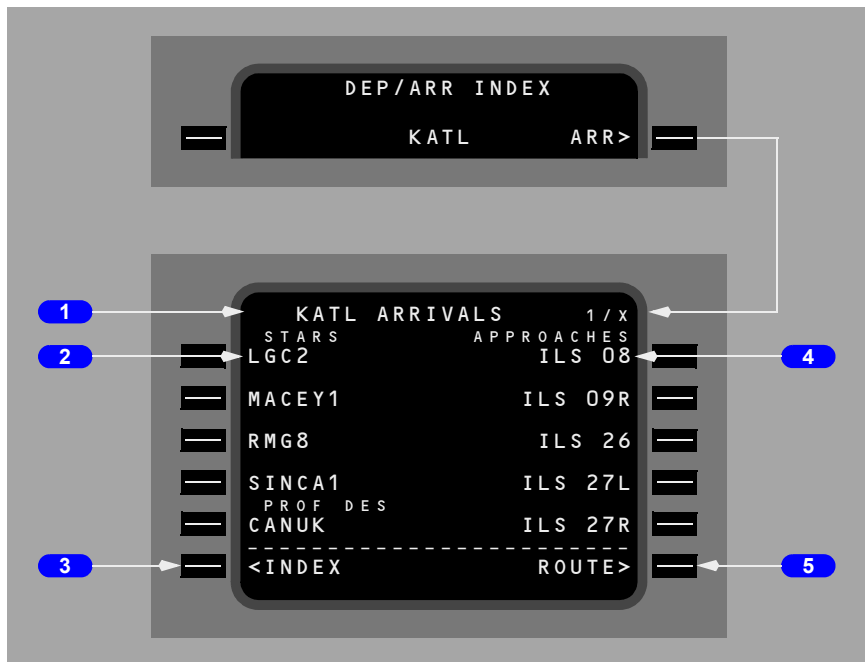

1 Page Title

The destination airport identifier is displayed in the title.

Airports with more than 5 runways or STARS produce multiple arrivals pages.

2 Standard Terminal Arrival Routes (STARS)

Upon initial selection, an alphabetical listing of all STARS and profile descents is displayed.

STARS are displayed first in a list under the STAR label. Profile descents are listed after the STARS under the PROF DES label.

Selection of the desired STAR deletes all other STARs and non-applicable approaches/runways, and displays a listing of any arrival transitions applicable to that STAR.

The selection of an approach or runway deletes all STARs not related to that approach/runway.

3 INDEX

Push – displays the DEP/ARR INDEX page.

4 Approaches and Runways (APPROACHES)

Upon initial page display, an alphabetical listing of all approaches for the airport, followed by a numerical listing of all runways, is displayed.

Selection of the desired approach or runway deletes all other approaches/runways.

5 ROUTE

Push – displays the RTE page.

Arrivals Page during approach selection

DISPLAY AFTER STAR SELECTED

DISPLAY AFTER STAR TRANSITION AND APPROACH/RUNWAY SELECTED

DISPLAY AFTER EXECUTING

1 STARS

Displays the selected STAR.

2 Arrival Transitions (TRANS)

Displays all arrival transitions related to the selected STAR.

3 Selected Status Label (<SEL>)

Identifies arrival/approach procedures or a runway which has been selected for entry into the route, but not executed.

All <SEL> entries propagate to the MOD RTE and MOD RTE LEGS pages for subsequent execution.

4 Approach and Runway (APPROACHES, RUNWAYS)

Displays all approaches related to the selected STAR, followed by all related runways (unless the desired approach/runway was selected on the initial display).

5 Arrival Transition (TRANS)

Displays the selected arrival transition.

6 APPROACHES

Displays selected approach/runway.

7 Approach Transition (TRANS)

Displays all approach transitions related to the selected approach.


8 Active Status Labels (<ACT>)

Following execution of the selected entries, the arrival/approach procedures and runway are identified as active.

Note: For an existing active route, the execute key illuminates upon STAR or approach/runway selection. Following selections, the ERASE prompt is available. Selections should be executed on the RTE or RTE LEGS pages after linking any route discontinuities.

Arrivals Page – Runway Extension Fix and Flight Path Angle

[Option – FMC U10.6 and later]

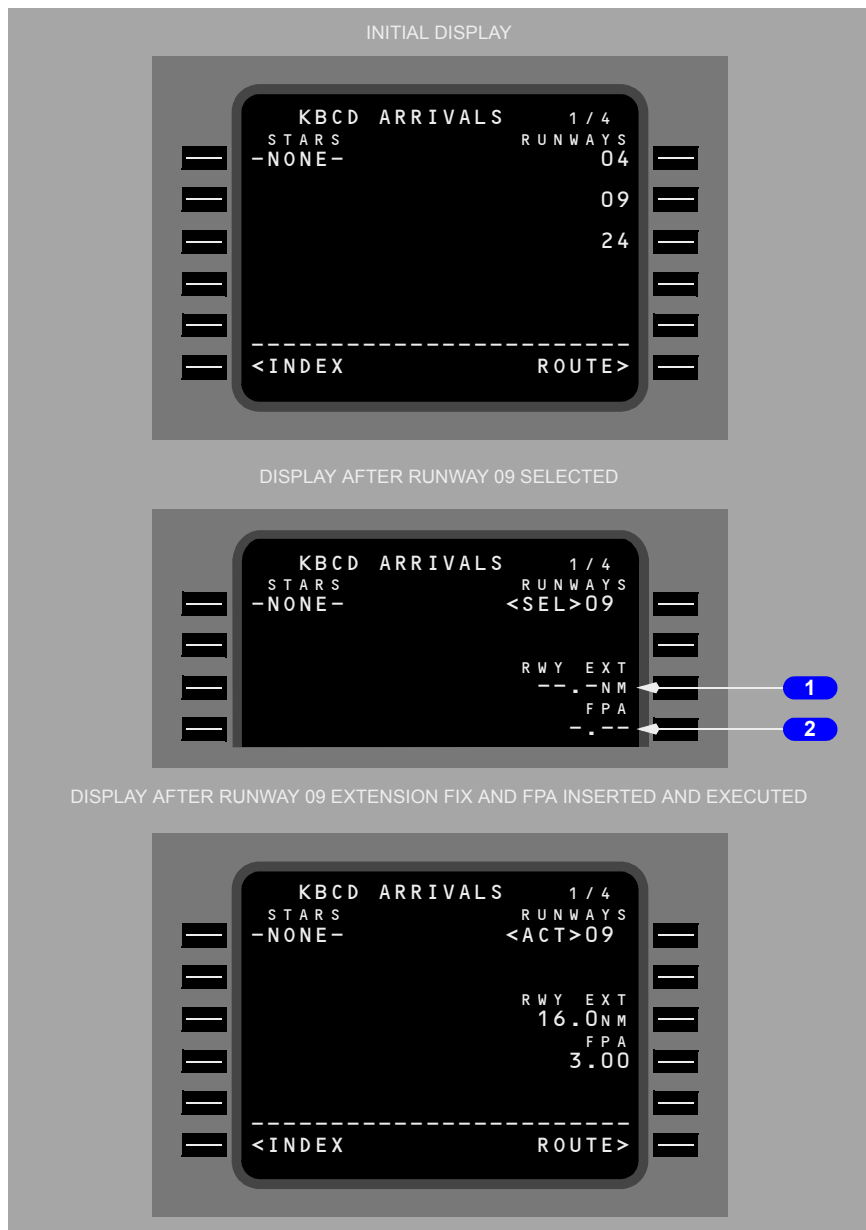

1 Runway Extension (RWY EXT)

Permits optional entry of a runway extension waypoint following selection of desired runway.

Desired extension distance is entered in scratch pad, then inserted on RWY EXT line. Valid entries are between 1 and 25 NM (.1 NM resolution). This creates a waypoint on the extended runway centerline at the specified distance from the runway threshold.

Waypoint is identified on the RTE and RTE LEGS pages as RX-YYY, where YYY is the runway designation.

A speed/altitude constraint may be entered for the RWY EXT fix from the RTE LEGS page.

2 Flight Path Angle (FPA)

Permits optional entry of a flight path angle between the runway threshold and the runway extension fix. Default is 3.0 degrees. Valid entries are from 2.0 to 5.5 degrees.


Note: Dashes (— —) are displayed on the DEP/ARR page when the default is used.

Approach Reference Page

The approach reference page displays approach planning information and approach reference speed (VREF) selection. The displayed data is for the DEST airport and the arrival/ approach entered into the FMC flight plan.

[Option – FMC U10.4 and later]

[Option – With QFE/QNH selection and alternate destination prediction]

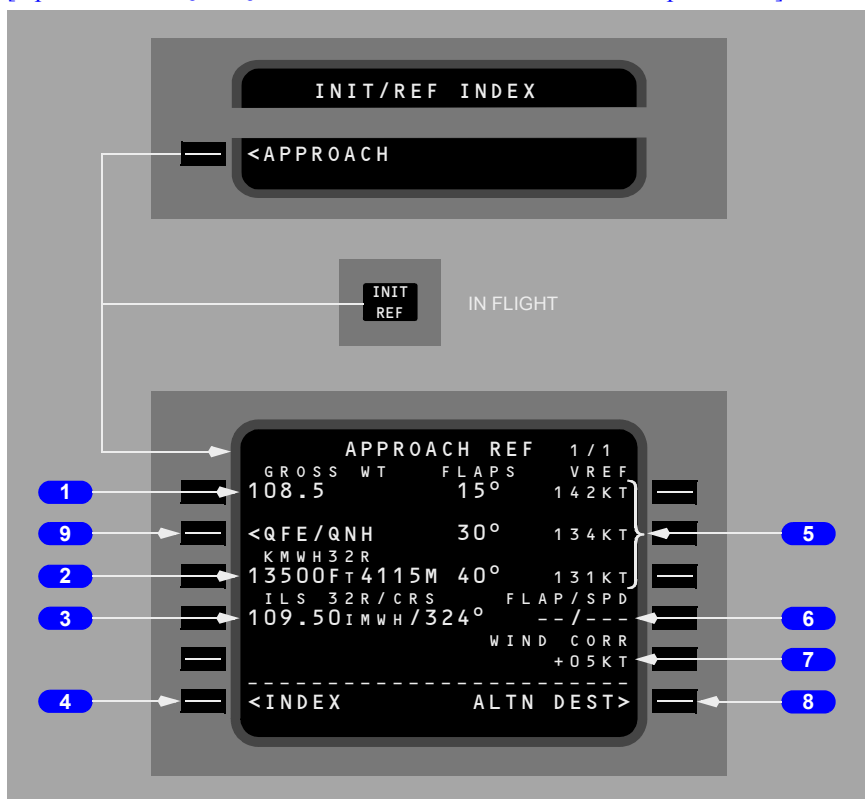

1 Airplane Gross Weight (GROSS WT)

Normally displays the FMC calculated airplane gross weight.

A manual entry of gross weight is allowed.

Displays box prompts when gross weight is not available from the FMC.

Valid entry is XXX.X.

Leaving and returning to this page replaces a manually entered weight with FMC computed gross weight.

2 Runway Length

Displays the length in feet and meters of the referenced runway.

Blank if no runway has been entered and executed.

3 Approach Information

Displays the runway number and associated ILS frequency/identifier for the ILS, LOC, or back course approach in the active flight plan.

Displays front course, if an ILS, localizer, or localizer backcourse is displayed on 4L. If the course is true displays is suffixed with “T”.

Blank if no approach has been executed.

4 INDEX

Push – selects the INIT/REF INDEX page.

5 Vref (FLAPS – – – VREF)

Displays landing Vref for three flap settings as computed by the FMC. Displayed in small size characters.

Selection causes the flap and VREF speed to be placed in 4R.

Double line selection of a displayed Vref, or manual entry of another value, causes the flap and VREF speed to be placed in 4R and causes Vref to be displayed on the airspeed display. CDU display changes to large size characters.

Speeds are based on displayed gross weights.

Double line selection provides Vref to be used by VNAV in combination with wind correction.

Vref, once selected, will not be updated. To obtain an updated speed, the current speed must be deleted or a different Vref selected or entered.

6 Flap/Speed (FLAP/SPD)

Displays selected approach reference flap and speed setting.

Manual input of desired flap and/or speed settings may be made.

Valid entry format is FF/SSS, SSS, /SSS, FF/ or F/, where F or FF is a flap setting of 0, 1, 2, 5, 10, 15, 25, 30, 40 and SSS is a speed within the range allowed in 1R to 3R.

Entries may be deleted and are blanked at flight completion..

7 Wind Correction (WIND CORR)

Displays current wind correction for approach. Default is +05 knots.

Manual input of desired wind correction may be made up to +20 knots.

8 Alternate Destination (ALTN DEST)

[Option – With alternate destination prediction]

Push – selects alternate Destination page.

9 Landing Reference (LANDING REF)

[Option – With QFE/QNH selection]

Push – Toggles altimeter reference between QFE and QNH.

Default is QNH.

Resets to QNH at flight complete.

Reflects TAKEOFF REF selection on TAKEOFF REF page 2.

Active altimeter reference is highlighted.

During descent with QFE selected, the PFD altitude indications show zero feet at the arrival runway. The PFD altitude indication background colors change to green.

If QFE is the current altimeter reference, and the EFIS control panel STD switch is pushed, The takeoff reference automatically toggles to QNH.

Alternate Airport Diversions

[Option – With alternate destination prediction]

Alternate Dests Page 1/X

The alternate destinations pages allow the selection of alternate airports and the display of data about the alternates.

The ALTERNATE DESTS page 1/X allows entry and display of up to five alternate airports. Pages 2 through 6 allow entry and display of data related only to the selected alternate.

[Option – With company data link]

INIT/REF INDEX

ALTN DEST> _____

APPROACH REF 1 / 1

ALTN DEST> _____

ACT RTE 1 / X

<ALTN DEST _____

ALTERNATE DESTS 1 / 6

ALTN	VIA	DTG	ETA	FUEL
KCHA	D	300	1525z	5.1>
KCLT	M	432	1338z	3.5>
KLGA	D	85	1358z	18.6>
-----				>
-----				>
WEATHER				
<REQUEST				NEAREST ARPTS>

1

2

3

1 Alternate Airports (ALTN)

Allows entry of alternate destination. Valid entries are airports, nav aids, or waypoints.

Related data (VIA, DTG, ETA, FUEL) is automatically displayed.

Push – selects page 2/X–6/X for data on selected alternate.

The DELETE function key can be used to remove manually entered alternates.

2 Nearest Airport (NEAREST ARPTS)

Push – commands FMC to search navigation database for the five airports nearest to the airplane's present position. The following actions occur:

- any alternates already entered are saved
- page title changes to NEAREST ARPTS
- the five nearest airports are displayed on lines 1L to 5L
- the NEAREST ARPTS prompt is replaced with PREVIOUS prompt
 - selection of the PREVIOUS prompt returns the display to the ALTERNATE DESTS page.

Selection cannot be overwritten or deleted.

3 WEATHER REQUEST

[Option – With company data link]

Push – transmits data link request for alternate destination weather uplink.


Alternate Dests Page X/X

The ALTERNATE DESTS pages 2 through 6 display specific information about alternate airports and the route used for diversion. All data on the page is related to the alternate airport displayed in the page title.

Two routes to the airport can be selected:

- DIRECT-TO
- MISSED APP

The calculation of ETA and fuel remaining are based on the selected route.

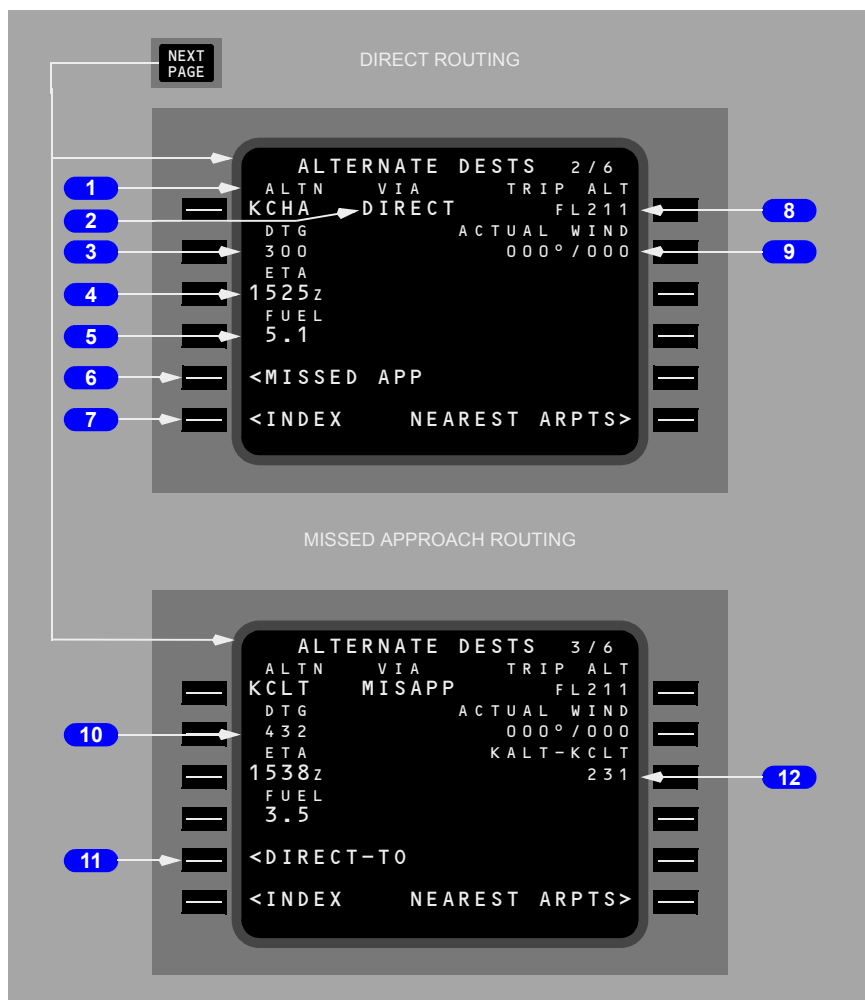

1 Alternate (ALTN)

Allows entry of alternate destination. Alternate and related information will also display on page 1/6.

2 VIA

Displays routing method used for alternate predictions.

3 Distance To Go (DTG)

Displays distance to go to alternate.

Manual entry allowed if DIRECT method is selected. Entered value will be displayed in large font.

4 Estimated Time of Arrival (ETA)

Displays estimated time of arrival at alternate.

5 FUEL

Displays fuel remaining at alternate.

6 Missed Approach (MISSED APP)

Push – changes routing method to missed approach for alternate predictions.

7 INDEX

Push – displays ALTERNATE DESTS Page 1/X.

8 Trip Altitude (TRIP ALT)

Displays computed optimum cruise altitude..

Manual entry is allowed and will be displayed in large font. If manual entry is unsuitable, display will show UNABLE.

9 ACTUAL WIND

Displays current wind direction and velocity..

If manual entry is made, heading will change to EST WIND.

10 Distance To Go (DTG)

Displays distance to go. Manual entry not allowed for missed approach routing.

11 DIRECT-TO

Push – changes routing method to direct to for alternate predictions.

12 Destination–Alternate

Displays computed distance from destination to alternate when missed approach is selected. Distance includes missed approach procedure plus great circle distance from last waypoint in missed approach to alternate.

Manual entry is displayed in large font.

Holding

The FMC computes holding patterns with constant radius turns based on current winds and FMC commanded airspeed. The pattern size is limited to FAA or ICAO protected airspace. In LNAV, the AFDS tracks the holding pattern using up to a 30 degree bank angle. Strong winds or airspeed in excess of FAA or ICAO entry speeds may result in the airplane flying outside the protected airspace.

With LNAV active before sequencing the holding fix, holding pattern entries are determined by the following:

- the angle between the flight plan leg into the holding fix and the holding inbound course determines the entry method used (parallel, teardrop or direct entry)
- the airplane flies the initial outbound leg for a specified time (1.0 minute at or below 14,000 feet and 1.5 minutes above 14,000 feet)
- teardrop entries use an FMC calculated offset angle designed to intercept the outbound leg at the point where the inbound turn begins
- parallel and teardrop entries may cause the airplane to fly beyond the displayed holding pattern; however, the airplane remains in protected FAA or ICAO limits.

HOLD Page

The hold page is used to enter a holding pattern into the route.

When the flight plan does not have a holding pattern, push the HOLD function key to show the LEGS page with the HOLD AT line.

Two versions of the hold page are possible:

- an airway or procedure holding pattern (from the navigation database)
- a flight crew–entered holding pattern.

The holding page shows actual or default data about the holding pattern.


Entries make route modifications, which can be erased or executed.

Active holding patterns are magenta on the navigation display.

[Option – FMC U10.2 and later]

Note: During FMC guided entrance to a hold, portions of the LNAV magenta holding pattern on the navigation display may not show. This may only occur when the holding pattern is within 5000 feet of the FMC computed MAX ALT, and after the UNABLE HOLD AIRSPACE scratchpad message shows. LNAV hold entry guidance will function normally.

[Option – FMC U10.2 and later]

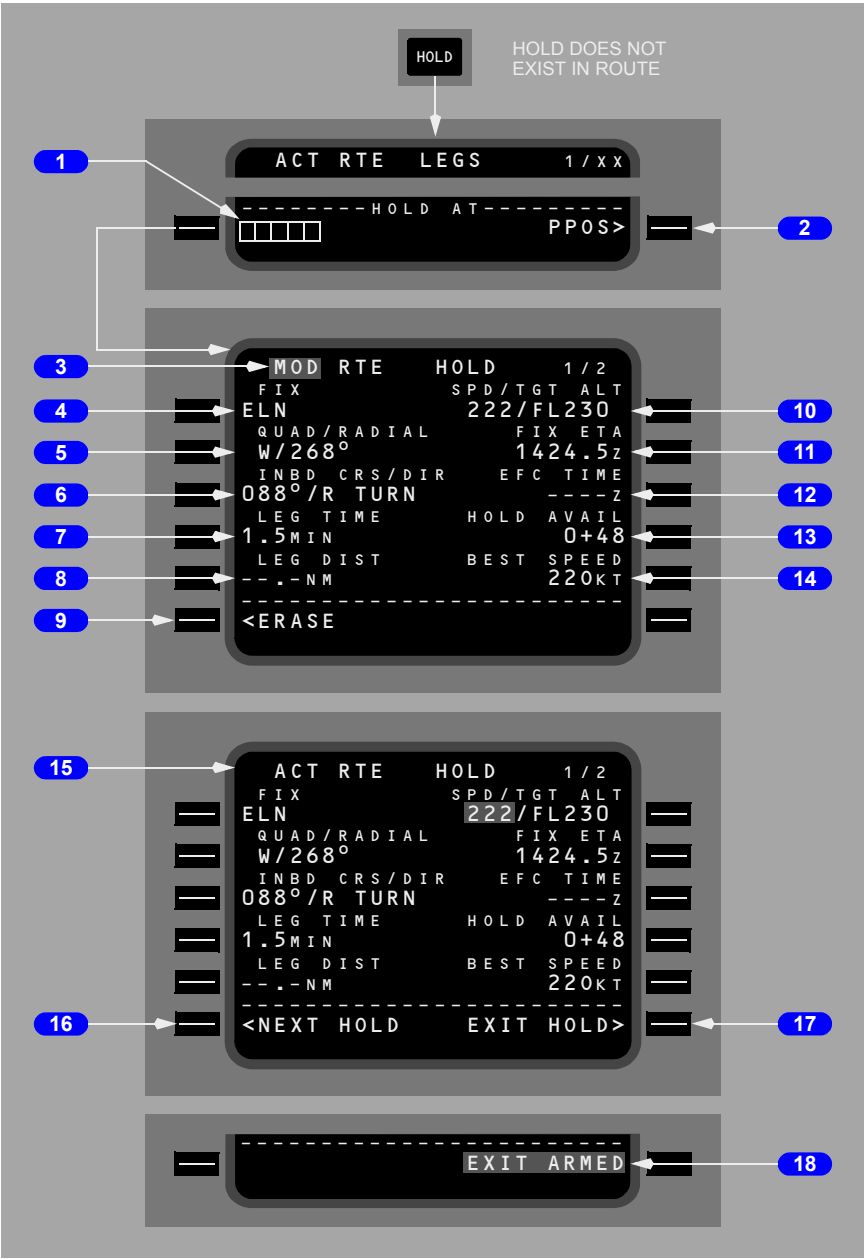

1 HOLD AT

When the HOLD function key is pushed and no holding pattern exists in the route, the LEGS page shows prompts to enter the holding fix. Enter the holding fix to show the RTE HOLD page.

Displays a prompt to enter the holding fix, a route waypoint, or present position. A waypoint is entered as the holding fix.

2 HOLD AT Present Position (PPOS)

Selects the airplane present position as the holding fix.

Only displayed during flight when not in a holding pattern.

3 Modified Route Hold Status

MOD indicates that the holding fix has not been executed.

Execution changes the page title to RTE HOLD (ACT RTE HOLD if holding at PPOS).

4 FIX

Displays waypoint identifier of the holding fix.

Entry is propagated either automatically from the database, or from a manual entry on the HOLD AT page.

If PPOS was selected on the HOLD AT page, then the FMC assigns PPOS as the fix identifier.

5 Quadrant/Radial (QUAD/RADIAL)

Displays holding pattern quadrant and radial.

Entry is propagated either automatically from the database, or from a manual entry on the HOLD AT page.

[Option – FMC U10.4 and later]

The default holding pattern inbound course and turn direction are in small font. Crew entered or holding patterns extracted from the database are in large font.

Valid entry is XXX (radial) or XX/XXX (quadrant/radial). Valid quadrant entry is N, NE, E, SE, S, SW, W, NW.

Quadrant shall be determined by the resulting inbound course.

6 Inbound Course/Direction (INBD CRS/DIR)

Displays holding inbound course and turn direction.

Entry is propagated either automatically from the database, or from a manual entry on the HOLD AT page.

[Option – FMC U10.4 and later]

The default holding pattern inbound course and turn direction are in small font. Crew entered or holding patterns extracted from the database are in large font.

Valid entry is XXX (inbound course), XXX/X (inbound course/turn direction), /X or X (turn direction).

Automatically changes QUAD/RADIAL to agree.

For a flight crew–entered holding pattern, the inbound course is initially the same as the preceding leg to the fix.

For a flight crew–entered holding pattern, if no entry is made, the FMC assumes right turns.

[Option – With color]

Magenta when the holding fix is the active waypoint.

7 LEG TIME

Displays holding pattern leg time.

Valid entry is XXX.X. Manual entry has priority.

If no entry is made, the FMC assumes the standard times of 1.0 minute at or below 14,000 feet and 1.5 minutes above 14,000 feet.

[Option – FMC U10.4 and later]

The default leg times are displayed in small font. Crew entered or holding patterns extracted from the database are displayed in large font.

[Option – FMC U10.4 and later]

The holding pattern will automatically be resized when climbing or descending through 14,000 feet if the holding pattern size is not defined in the database or has not been manually entered.

If a LEG DIST is manually entered, then dashes will be displayed.

8 Leg Distance (LEG DIST)

Dash prompts are normally displayed.

Entry may be propagated either automatically from the database, or made by manual entry.

Manual entry has priority.

Overrides LEG TIME.

9 ERASE

Displayed only while modification is in progress.

Push – deletes modification and returns to ACT RTE HOLD page, if one exists; otherwise returns to the ACT RTE LEGS page.

10 Speed/Target Altitude (SPD/TGT ALT)

Displays current speed and altitude (small font).

Speed or altitude constraint may be entered. Manual entries are in large font and propagate to LEGS page.

Note: When a cruise hold exists, cruise speed changes propagate around the hold but have no effect on holding speed.

11 Fix Estimated Time of Arrival (FIX ETA)

Displays computed time for next passage over holding fix.

12 Expect Further Clearance Time (EFC TIME)

Entry of the EFC time will help optimize FMC performance computations.

Computation of destination fuel assumes that departure from the holding fix will occur at this time.

13 Hold Available (HOLD AVAIL)

Displays available holding time in hours + minutes remaining if destination is to be reached with planned fuel reserves as entered on PERF INIT page.

14 BEST SPEED

Displays computed best holding speed based on present altitude and conditions.

Note: May exceed maximum speed permitted by regulatory agency.

15 Active Route Hold Status

ACT indicates that the airplane has entered the holding pattern.

16 NEXT HOLD

Displayed when the route contains less than five holding patterns and there is no route modification in progress.

Push – displays (RTE LEGS) HOLD AT page and prompts for new holding fix entry.

17 EXIT HOLD

Displayed on the holding page when in the holding pattern.

Used when preparing to depart holding pattern.

Push – changes prompt to EXIT ARMED and illuminates execute key.

18 EXIT ARMED

Displayed on the holding page when in the holding pattern and after line selection of EXIT HOLD prompt.

Execution activates LNAV flight back to the holding fix via a shortened holding pattern, departure from holding pattern, and continued flight along the active route. ACT RTE LEGS page 1/XX appears after holding exited.

Highlighted in reverse video after execution.

RTE LEGS HOLD AT (Fix in Route)

Used to enter proposed fix for racetrack holding pattern at either present position or any waypoint.

A maximum of five holding patterns may exist at one time.

Two holding patterns may exist at the same waypoint if one is in the route and the other is in the missed approach.

HOLD

PROPOSED HOLDING FIX IN CURRENT
ROUTE; NO HOLDING PATTERN
CURRENTLY EXISTS IN ROUTE

BEFORE EXECUTION:

ACT	RTE	LEGS	1 / xx
87°	11 NM		
BANDR		310 / FL190	
89°	26 NM	320 / FL190	
BEEZR			
89°	19 NM	320 / FL190	
ELN			
69°	42 NM	240 / 6279	
D182X			
92°	4 NM	240 / 5352	
D160X			
----- HOLD AT -----		PPOS>	
ELN			

AFTER EXECUTING ROUTE HOLD AT DOWNTRACK WAYPOINT

ACT	RTE	LEGS	1 / xx
87°	11 NM		
BANDR		310 / FL190	
89°	26 NM	320 / FL190	
BEEZR			
89°	19 NM	320 / FL190	
ELN			
HOLD AT			
ELN		225 / FL190	
69°	42 NM	240 / 6279	
D189X			
----- RNP / ACTUAL -----		RTE DATA>	
12.0 / 0.21 NM			

1 Data Lines

Display same data as the corresponding RTE LEGS page.

2 HOLD AT

Used to enter any waypoint identifier, which then defines a holding fix.

Entry may be via keyboard, or by transfer of any downpath waypoint which is in the existing route (the example depicts ELN line selected into the scratch pad).

Following line selection of the desired waypoint into the box prompts, the MOD RTE HOLD page appears and the execute key illuminates.

3 Present Position (PPOS)

Push – selects holding fix at present position. The MOD RTE HOLD page appears and the execute key illuminates (“present” is at the time of execution of the MOD RTE HOLD page).

Displayed only in flight.


Default parameters are a standard holding pattern on the inbound leg.

4 Hold at Waypoints (HOLD AT)

A holding fix creates a new HOLD AT waypoint following the leg to that waypoint.

Displayed on the RTE LEGS page in the proper route sequence after executing the related MOD RTE HOLD page.

RTE LEGS HOLD AT (Fix not in Route)

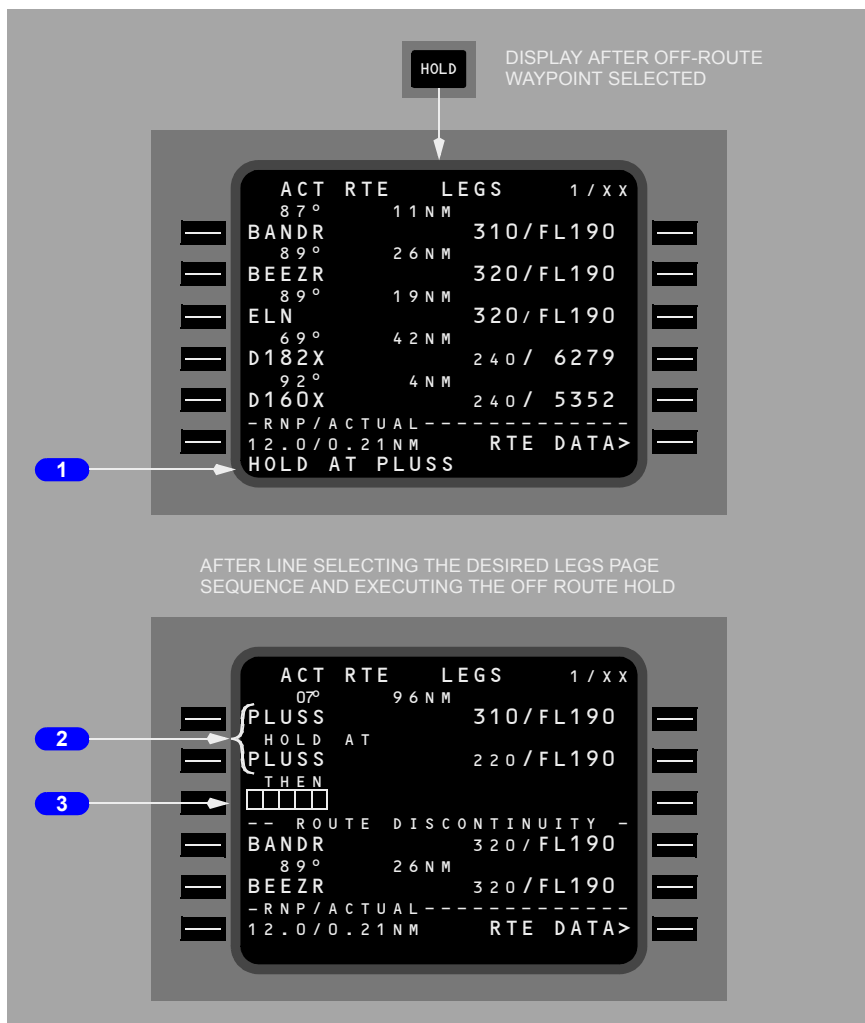

1 Hold at Waypoint (HOLD AT XXXX)

Displayed in the scratch pad whenever the entry in the HOLD AT line is not a waypoint in the existing route (the example above depicts entry of PLUSS).

Route position of the holding fix is defined by line selecting to the desired LEGS page sequence.

Following line selection to the desired LEGS page sequence, the MOD RTE HOLD page appears and the execute key illuminates.

2 Hold at Waypoints (HOLD AT)

A holding fix creates a new HOLD AT waypoint following the leg to that waypoint.

Displayed on the RTE LEGS page in the proper route sequence after executing the related MOD RTE HOLD page.

3 ROUTE DISCONTINUITY

The entered route must always form a continuous path of linked legs.

The example depicts a HOLD AT entry where the entry was not a downpath waypoint.

The FMC computes a direct course to the off-route holding fix.

The HOLD AT waypoint becomes a termination identifier which is not part of the existing route. The resulting route discontinuity is identified by box prompts, requiring entries to define the route after PLUSS.

**Flight Management, Navigation
Alternate Navigation System (ANS)****Chapter 11
Section 50**

[Option]

Introduction

This section provides a detailed description of the Alternate Navigation System (ANS). Information in this section is limited to that which is unique to the ANS. Information which is common with the flight management computer system (FMCS) is not repeated.

General

The ANS is a GPS-based system which provides lateral navigation capability independent of the FMCS. In the event of FMC failure, the ANS provides a backup mode of operation which is immediately available for use.

The ANS performs computations related to lateral navigation. The following information is provided by the ANCDU for display on the standby attitude indicator:

- desired track
- distance to active waypoint
- bearing to active waypoint
- crosstrack error
- impending waypoint sequence indications
- indication for message on ANCDU.

The standby attitude indicator is described in Chapter 10, Flight Instruments, Displays.

System Components

The ANS consists of the Alternate Navigation CDU (ANCDU) and “on-side” GPS.

During FMC/CDU operation, all memory and computing capability are contained within the FMC. The same information is available for display on either CDU.

During ANCDU operation, each CDU uses its own internal memory and computing capability. Since each ANCDU performs its own computations based on inputs from its on-side GPS, the information available for display on each CDU is independent of that displayed on the other CDU.

Memory

In contrast to the FMC, the ANCDU has neither a performance database nor a permanent navigation database. Thus, there is no stored information from which the desired waypoints can be extracted by use of their identifiers. All waypoints in the ANCDU flight plan must be defined in terms of latitude and longitude. The ANCDU has a limited memory which can store up to 60 waypoints. The ANCDU flight plan is then assembled from this memory. Waypoints can be entered into the ANCDU flight plan either during preflight or while in flight. Nav aids and airports can also be entered as “waypoints,” as well as certain procedural waypoints (only those defined by latitude and longitude).

The ANCDU automatically stores the last active FMC flight plan separate from its active plan. This makes a flight plan available for the ANCDU in the event of FMC failure. All waypoints in the ANCDU memory and flight plan are automatically erased at flight completion.

Operation

Overview

When the FMC is operable, the CDUs are used in the normal manner during preflight to activate an FMC flight plan. With the FMC/CDU preflight complete, the GPS LEGS page may be used to crossload (copy) the FMC flight plan into the ANCDU. If executed, the ANCDU flight plan becomes identical to the FMC flight plan (except that the ANCDU bypasses any undefined procedural legs contained in the FMC flight plan). If desired, the flight plan may be modified prior to execution. Additionally, the entire ANCDU flight plan may be entered manually. When entering flight plans into both ANCDUs, note that each flight plan (whether identical or not), must be entered and executed individually.

ANCDU operation requires valid inputs from the related GPS for present position, ground speed, track and wind. Based on the flight plan and GPS inputs, the ANCDU computes and displays courses to fly, leg lengths, estimated time of arrival and crosstrack deviation.

If the FMC flight plan was crossloaded into the ANCDU, up to 60 waypoints can appear in the initial ANCDU flight plan. Anytime the FMC flight plan is modified, the ANCDU last active FMC flight plan is automatically updated with applicable changes. The ANCDU active plan is not automatically changed.

If the FMC should fail, the MENU page is automatically displayed. The pilot can then access the GPS LEGS page through the ALT NAV prompt. The most recent FMC flight plan is stored in the ANCDU memory and can be activated if desired, or a new flight plan may be manually entered. The ANS is capable of supporting flight plans consisting of a maximum of 60 waypoints.

Lateral Navigation

All computations and commands from the ANCDU are based on a direct great-circle course between waypoints. Complete departure and arrival/approach procedures cannot be manually entered or crossloaded from the FMC. This is because the ANCDU does not accept “undefined” waypoints/legs, that is, no fixed heading or course legs, and no conditional waypoints. The ANCDU automatically constructs a great-circle course to bypass such legs. However, individual legs of a procedure, if they are great-circle courses, can be manually entered or crossloaded.

Computed courses are referenced to true north for the active leg. Downpath legs are displayed as true courses.

Vertical Navigation

The ANCDU does not perform computations related to vertical navigation and does not provide VNAV or autothrottle commands. Autothrottle commands are provided by MCP speed and mode selection.

Radio Tuning

The ANCDU cannot tune the VHF navigation radios and does not use radio information for position updating.

Electrical Power

Both ANCDUs are powered via transfer bus No. 1. Response to power loss is the same as for the FMC/CDU, except that the MENU page is displayed in flight following a power interruption of ten seconds or more.

System Downloading

The ANS may fail due to either the loss of GPS navigation mode inputs or ANCDU malfunction. If continual self-tests detect a failure, the CDU display is blanked.

CDU Messages

There are seven messages associated specifically with ANS operation. See section 11.60.

Waypoints

All waypoints in the ANCDU flight plan must be defined in terms of latitude and longitude.

Waypoint Identifiers

When an FMC flight plan is crossloaded, the ANCDU flight plan maintains the same waypoint identifiers used by the FMC. The associated latitude/longitude of those waypoints is also automatically crossloaded from the FMC.

If manually entering waypoints on the GPS LEGS or GPS WPT DATA pages, the waypoint identifier is limited to a maximum of 6 alpha/numeric characters. Manually entered waypoints are keyed into the scratch pad as any of the following:


- an identifier which already exists in the ANCDU flight plan (e.g., SEA, KBFI, ELN01, or WPT03)
- a crew-assigned identifier and associated latitude/longitude (e.g., SIMONE/N4802.2W12241.3)
- latitude/longitude (e.g., S3618.5E14136.9). Upon entry, the ANCDU assigns a sequential identifier number such as WPT04, etc.

Preflight

Introduction

Preflight entry of an ANCDU flight plan is accomplished after entry of the FMC/CDU flight plan is complete. The following diagram depicts crossloading of the FMC flight plan into the ANCDU.

Preflight Page Sequence

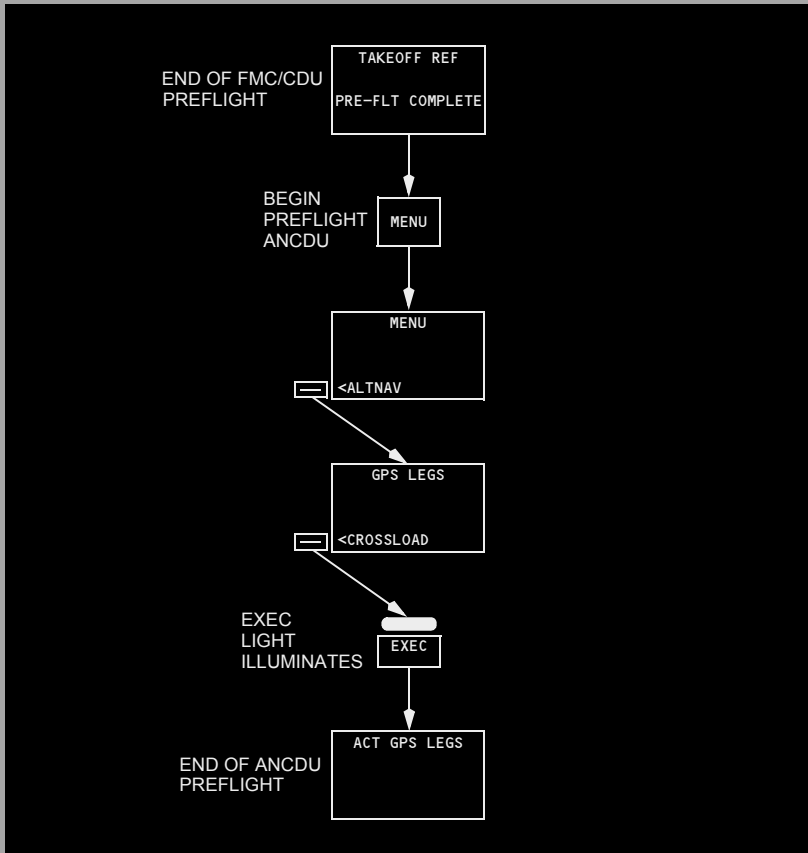

Page Displays

Introduction


This section provides detailed descriptions and examples of the three page displays which are unique to the ANCDU mode of operation. These page displays are only intended to provide a general description of overall system capability; they are not intended to reflect valid navigational data.

GPS Legs Page

The GPS LEGS page displays details of the ANCDU flight plan (60 waypoints maximum). It has no required entries.

The page allows review of the crossloaded FMC flight plan, or it may be used to enter or modify a unique ANCDU flight plan.

The flight plan is cleared at flight completion.

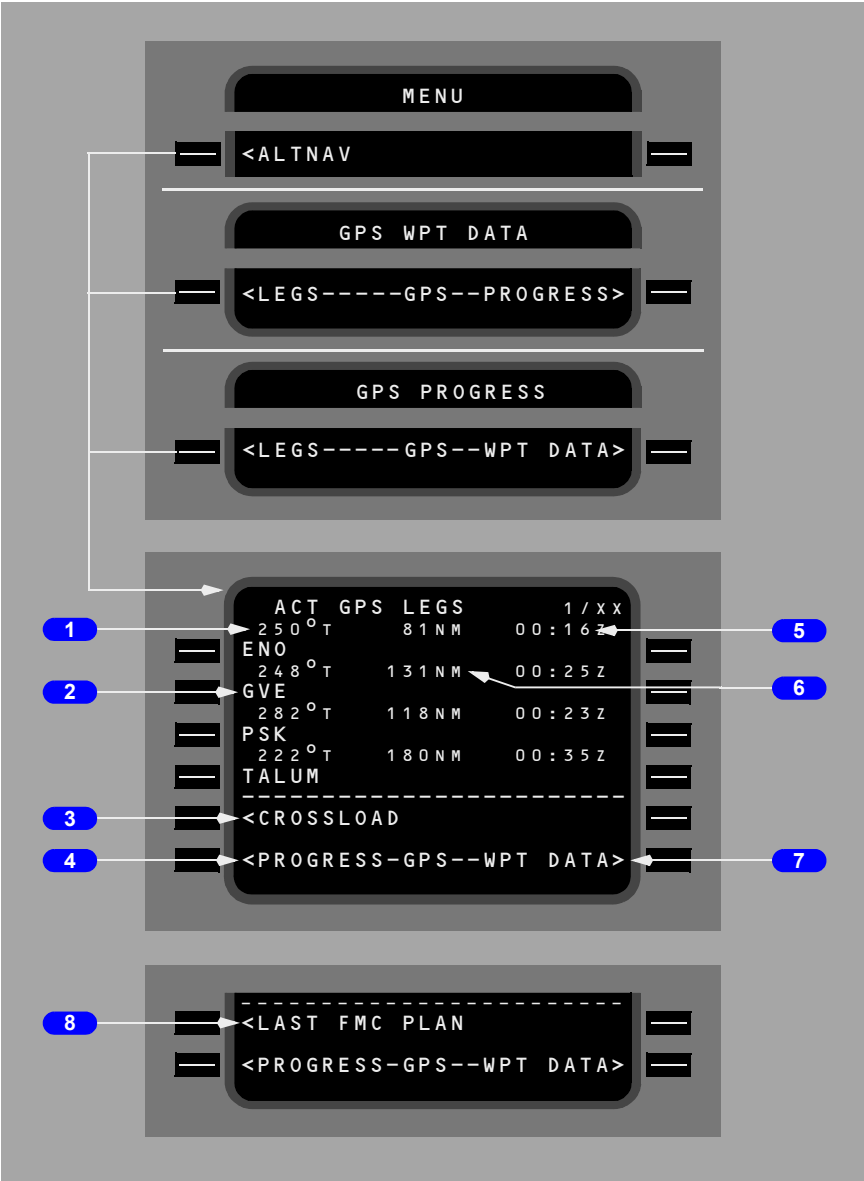

1 Leg Direction

Applies to the leg to the waypoint identified on the line below.

Displays the GPS computed great-circle course. For the active waypoint, the displayed course is the present true course to be flown. For all downpath waypoints, displayed course is the initial true course for that leg.

2 Waypoint Identifier (lines 1L–4L)

Used for entry and/or display of any valid waypoint identifier.

Entry may be made via the keyboard or propagated from either the RTE LEGS page or GPS WPT DATA page.

Entries are propagated to the GPS WPT DATA pages.

The active waypoint identifier is shown in magenta. It cannot be deleted, but it can be overwritten.

3 CROSSLOAD

Used to crossload (copy) the FMC flight plan into the ANCDU.

If there is no flight plan in the ANCDU, initial lines selection displays the FMC flight plan which is proposed to be stored in the ANCDU.

If an ANCDU flight plan already exists, line selection changes the page title to MOD.

Line selection “arms” the execution function, and the EXEC light illuminates. Subsequent execution activates the ANCDU flight plan (page title change to ACT).

Upon FMC failure, the CROSSLOAD prompt is replaced by the LAST FMC PLAN prompt.

4 GPS PROGRESS

Allows selection of the GPS PROGRESS page.

5 Estimated Time of Arrival

Applies to the leg to the waypoint identified on the line below. Displayed only when ground speed exceeds 100 knots.

6 Leg Length

Applies to the leg to the waypoint identified on the line below.

For the active waypoint, displays computed distance-to-go from present position to the waypoint.

For all downpath waypoints, displays flight plan leg length.

Blank if distance-to-go is greater than 9,999 NM.

Displayed values are in tenths of nautical miles if the leg length is less than 10 NM.

7 GPS Waypoint Data

Allows selection of the corresponding GPS WPT DATA page.

8 Last FMC Plan


Displayed upon FMC failure.

Line selection displays the FMC flight plan which existed at the time of FMC failure. The EXEC key illuminates.

Subsequent execution activates the ANCDU flight plan.

GPS Progress Page

The GPS PROGRESS page is an advisory page which displays current dynamic data concerning progress along the active ANCDU flight plan route. No entries are permitted.

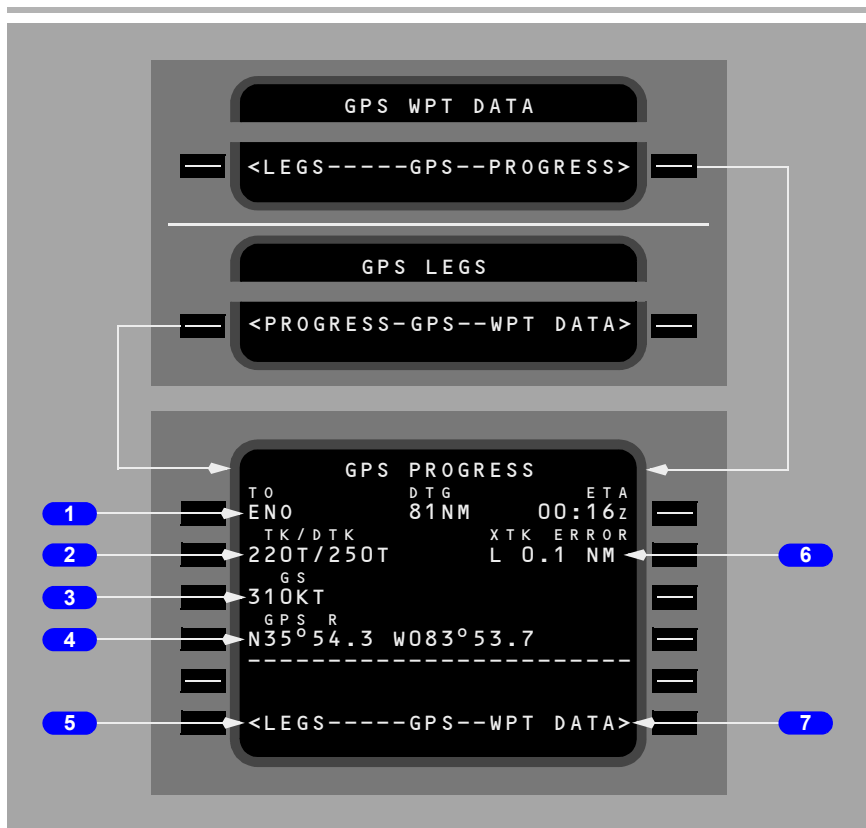

1 Active Waypoint Line (TO)

Displays:

- identifier of the active waypoint (highlighted in reverse video)
- distance to go (DTG) from present position to the active waypoint
- estimated time of arrival (ETA) to the active waypoint.

2 Track/Desired Track (TK/DTK)

Displays present GPS track/desired track (i.e., the flight plan great-circle course).

3 Groundspeed (GS)

Displays current GPS ground speed in knots.

4 GPS Present Position

Displays latitude and longitude of GPS present position.

Data is from the “on-side” GPS (L or R).

All displays on this ANCDU are based on inputs from this GPS.

5 GPS LEGS

Allows selection of GPS LEGS page 1.

6 Cross-Track Error (XTK ERROR)

Displays present deviation (NM left or right) from the DTK flight plan course.

7 GPS Waypoint Data (WPT DATA)


Allows selection of GPS WPT DATA page 1.

GPS Waypoint Data Page

The GPS WPT DATA page displays latitude and longitude for each waypoint in the ANCDU flight plan (60 waypoints maximum). It has no required entries.

The page can be used to enter or modify the ANCDU flight plan.

Page access is from GPS LEGS page or GPS PROGRESS page.

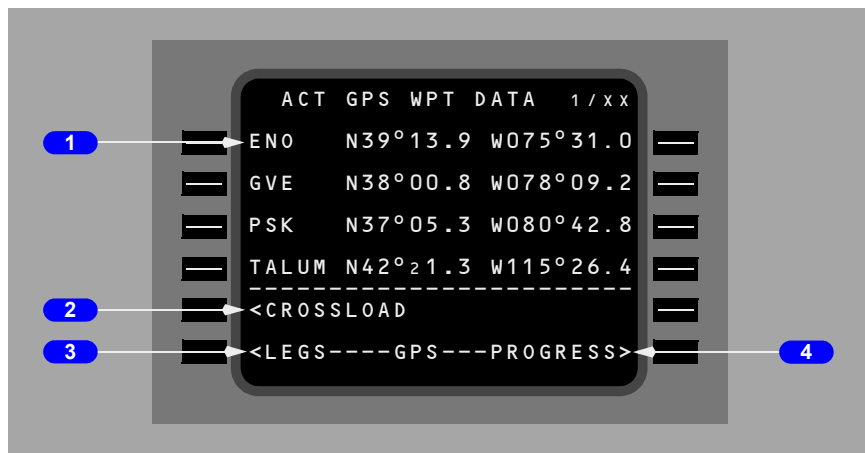

1 Waypoint Line (lines 1L–4L)

Used for entry and/or display of any valid waypoint identifier and the associated latitude and longitude.

Entry may be via the keyboard or propagated from either the RTE LEGS page or the GPS LEGS page.

Entries are propagated to the GPS LEGS pages.

The active waypoint cannot be deleted, but it can be overwritten.

2 CROSSLOAD

Functions the same as on GPS LEGS page.

3 GPS Legs

Allows selection of the GPS LEGS page.

4 GPS Progress

Allows selection of the GPS PROGRESS page.

Intentionally
Blank

Flight Management, Navigation
FMC Messages**Chapter 11**
Section 60**Introduction**

FMC messages tell the flight crew when system operation is degraded or if there are data input errors.

FMC messages show in the CDU scratchpad. The messages are categorized as:

- alerting messages
- entry error messages
- advisory messages.

[Option – With company data link]

- FMC data link messages (alerting and advisory)

[Option – With Navlink]

- FMC Navlink ACARS messages (advisory, status, and entry error)

[Option – With ANCDU]

- ANCDU messages (advisory and entry error)

The FMC messages are shown according to their level of importance. Alerting messages are most important, followed by entry error messages. Advisory messages are least important. If multiple messages exist, a less important message replaces another message in the scratchpad when the CLR key is pushed or the condition is corrected.

The amber FMC alert light on each pilot's instrument panel illuminates when there is an FMC alerting message. All FMC messages illuminate the CDU message (MSG) light. Clear the message or correct the condition to cancel the message.

The following tables are general lists; some messages may not apply to all FMC configurations.

FMC Alerting Messages

These messages relate to operationally significant conditions which affect FMC operation.

FMC alerting messages:

- are shown in the CDU scratchpad
- cause the amber FMC alert light on each pilot's instrument panel to illuminate
- illuminate message lights (MSG) on both CDUs.

Use the CLR key or correct the condition responsible for the message to remove the message. The message is temporarily removed from the scratchpad when manually entering data. The message returns when the data is removed from the scratchpad.

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.4 and later]

CRZ ALT CHANGED TO XXXXX (U10.4 and later)	During a missed approach a STAR or approach has been selected that conflicts with the cruise altitude.	Clear the message.
--	--	--------------------

[Option – U10.5 and later]

CHECK ALT TGT (U10.5 and later)	VNAV disengages while airplane is between MCP and FMC altitudes or VNAV button pressed while airplane is between MCP and FMC altitudes.	Clear the message.
------------------------------------	---	--------------------

[Option – U10.6 and later]

CUTBACK DISARMED (U10.6 and later)	Cutback turned off as a result of changing or deleting the flight plan runway while on the ground.	Clear the message. Re-arm as required.
---------------------------------------	--	---

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.3 and later]

CUTBACK UNAVAILABLE (U10.3 and later)	The FMC is unable to compute a Cutback N1 value.	Clear the message.
---	--	--------------------

CYCLE IRS OFF–NAV	IRS is unable to complete alignment under current conditions.	Cycle IRS mode selector to “OFF” and back to “NAV.”
DATA BASE INVALID	The automatic validity test of the permanent navigation database has failed.	Advise maintenance personnel to check the FMC and reload the database, as required. If desired, consider the use of the temporary nav database.
DISCO INSRTD AFTR XXXXX (waypoint identifier)	A ROUTE DISCONTINUITY has been inserted into the flight plan due to undefined termination of a downpath leg or a triple waypoint BYPASS.	Select the RTE or RTE LEGS pages and modify the waypoints for a continuous route.
DISCONTINUITY	Passing the last waypoint in the route prior to a ROUTE DISCONTINUITY (LNAV disengages) or pressing LNAV while in a discontinuity.	Select the RTE LEGS page. Enter the desired active waypoint into the box prompts. Correct any ROUTE DISCONTINUITY and EXECute. Reengage LNAV.

[Option – U10.7 and later]

DRAW REQ AFTER XXXXX (U10.7 and later)	A waypoint speed constraint greater than 10 knots above the predicted speed exists at waypoint XXXXX.	Modify flight plan as required. Clear the message.
--	---	---

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
DUAL FMC OP RESTORED	Dual FMC operation has been successfully restored. (Dual FMC as installed)	Clear message and set FMC source select switch to NORMAL.
END OF OFFSET	Two minutes prior to passing offset leg termination.	Confirm clearance.
END OF ROUTE	LNAV engaged and passing the last waypoint in the route (LNAV disengages).	Select the RTE LEGS page. Enter the desired active waypoint into the dash prompts and EXECute. Reengage LNAV.

[Option – U10.3 and later]

ENG OUT SID MOD (U10.3 and later)	An engine–out SID has been automatically inserted into the flight plan as a modification.	Clear the message.
--------------------------------------	---	--------------------

ENTER IRS POSITION	IRS in the alignment mode needs present position to complete alignment. Previous present position entry was not received back from the IRS.	Enter IRS present position into the scratchpad pad and line select 4R on the POS INIT page of the CDU. If present position was previously entered, overwrite displayed data. If necessary, enter present position directly into the IRS control /display unit.
--------------------	---	--

[Option – U10.5 and later]

FMC APP/TUNE DISAGREE (U10.5 and later)	An approach that utilizes FMC generated glidepath is in the active flight plan but an approach navaid (ILS/GLS) has been tuned with G/S ON.	Confirm the tuned frequency and approach selected in the FMC are both consistent with the actual approach intended to be flown. Resolve tuning or approach selection inconsistency. Clear the message.
--	---	--

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.5 and later]

FMC APP MODE UNAVAIL–QFE (U10.5 and later)	An approach that utilizes FMC generated glide path is in the flight plan (active or inactive) but QFE is selected on the FMC.	Select QNH as the landing altimeter reference on the APPROACH REF page. Clear the message.
--	---	--

[Option – U10.6 and later]

FMC DISAGREE (U10.6 and U10.7)	During approach or on the ground, monitored parameters required for dual FMC operation are in disagreement. (Dual FMC as installed)	Monitor FMCs closely. Both FMCs remain online. Limit approaches to single FMC only. If desired, revert to SINGLE FMC OPERATION in this section.
-----------------------------------	---	---

[Option – U10.7 and later]

FMC POS/RW DISAGREE (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
---	--	--

[Option – U10.7 and later]

GPS-L INVALID GPS-R INVALID (U10.7 and later)	FMC is no longer receiving information from the displayed GPS system.	Clear the message. If both GPS-L INVALID and GPS-R INVALID messages show, refer to FMC Navigation Check supplementary procedure.
---	---	---

INSUFFICIENT FUEL	A change in conditions or flight plan route causes predicted fuel at destination to be 900 kilograms/2000 lbs or less.	Modify the route plan or cruising altitude, or divert for additional fuel.
IRS MOTION	IRS has automatically restarted the alignment due to detection of excessive motion.	Clear message and attempt to reduce airplane movement, if practicable.

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.7 and later]

IRS POS/ORIGIN DISAGREE (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
---	--	--

[Option – U10.6 and later]

LNAV BANK ANGLE LIMITED (U10.6 and later)	LNAV is engaged and the airplane is not on a lateral offset and is not near or in an orbit or hold and the airplane is within 5 minutes or less from an LNAV guided course change, and will exceed the airway/route boundaries for non-flyover turns less than or equal to 135 degrees due to performance limited bank angle. This message does not apply to fixed radius turns.	Review the LNAV course change. If course change exceeds airway/route boundary, consider flight plan change.
---	--	---

MAX ALT FLXXX (flight level value)	Altitude intervention (as installed) attempt to raise cruise altitude when MCP altitude is above maximum altitude.	Clear the message.
MISSED CAPTURE	Proper localizer capture maneuver was performed, but the AFDS did not capture.	Clear the message.
MODEL/ENG DATA INVALID	A valid performance database is not available.	Contact maintenance personnel.
NAV DATA OUT OF DATE	Effectivity dates of nav database do not agree with date input from clock.	Check the IDENT page and reverse the dates for ACTIVE NAV DATA if required.

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
NAV INVALID-TUNE XXXXXX (navaid identifier)	FMC is unable to auto-tune or receive the navaid for a RNAV or VOR approach procedure.	Cross-check radios and manually tune the desired navaid.

[Option – U10.2 and later]

OVERSPEED DISCONNECT (U10.2 and later)	During path descent and above or below the speed restriction altitude, VNAV disengages when airspeed exceeds FMC speed restriction by more than 15 knots.	Manually reduce speed and reengage VNAV.
--	---	--

[Option – U10.3 and later]

PARTIAL ROUTE LOADED (U10.3 and later)	A route is loaded which references data not contained in the database.	Clear the message.
--	--	--------------------

PERF DEFAULTS INVALID	Validity check of performance defaults database has failed.	Contact maintenance personnel.
--------------------------	---	--------------------------------

[Option – U10.5A and later]

RESET MCP ALT (U10.5A and later)	During the FMC cruise phase with VNAV engaged, when within 5 NM of the top-of-descent point without selecting a lower altitude on the AFDS MCP.	Select lower MCP altitude values as clearances permit.
-------------------------------------	---	--

RTA UNACHIEVABLE	The RTA is not in the computed RTA window under current parameters.	Enter an achievable RTA or discontinue the RTA mode of navigation. Adjust parameters to meet the RTA.
------------------	---	---

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.4 and later]

RW/APP TUNE DISAGREE (U10.4 and later)	During approach, manual tuned approach frequency or channel does not match active flight plan.	Clear the message and select correct approach frequency.
--	--	--

[Option – U10.4 and later]

RW/APP CRS ERROR (U10.4 and later)	During approach, MCP selected course does not match front course for the approach in the active flight plan.	Clear the message and select correct MCP course.
---------------------------------------	--	--

SCANNING DME FAIL	Inputs from both frequency scanning DME radios have failed.	Clear the message and check position. Radio updating of FMC position is not available.
SELECT MODE AFTER RTA	RTA mode has been discontinued due to sequencing of RTA waypoint or RTA waypoint has been removed from the flight plan.	Select alternate performance mode. (ECON, manual speed, etc.)
SINGLE FMC OPERATION	The primary FMC has determined that the secondary FMC is not available. (Dual FMC as installed)	If the FMC source selector switch is in the “Normal” position, move to “BOTH ON L”. No action is required if the FMC source selector switch is already positioned to “BOTH ON L” or “BOTH ON R”.

[Option – U10.6 and later]

TAKEOFF SPEEDS DELETED (U10.6 and later)	A change to runway, runway data, takeoff thrust selection or performance data is made after the V speeds have been selected, or entered V speeds fail to meet relative value check.	Reselect new V speeds and clear message.
--	---	--

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.5 and later]

THRUST REQUIRED (U10.5 and later)	Airplane is in an underspeed condition.	Clear the message. Increase airspeed to within 15 knots of speed target.
--------------------------------------	---	--

[Option – U10.2 and later]

UNABLE HOLD AIRSPACE (U10.2 and later)	LNAV guided holding pattern may exceed allowable hold airspace due to LNAV performance limited bank angle.	Review the holding pattern. If holding pattern exceeds allowable holding airspace, consider flight plan change.
---	--	---

[Option – U10.4 and later]

UNABLE NEXT ALTITUDE (U10.4 and later)	Unable to meet the next flight plan altitude constraint in a VNAV climb or descent. The message appears only with VNAV engaged.	Clear the message and review the prediction. For undershoot condition during climb, consider selection of MAX RATE CLB or MAX ANGLE CLB, or a different N1 limit as appropriate.
---	---	--

[Option – U10.6 and later]

UNABLE PROC AIRSPACE (U10.6 and later)	Minimum procedure turn built by guidance exceeds the allowable excursion distance.	Modify flight plan as required. Clear the message.
---	--	---

[Option – U10.7 and later]

UNABLE YYY KTS AT XXXXX (U10.7 and later)	Next waypoint speed restriction (speed YYY, at waypoint XXXXX) cannot be met.	Modify flight plan as required. Clear the message.
--	---	---

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.3 and later]

UNABLE REQD NAV PERF–RNP (U10.3 and later)	FMC actual navigation performance is not sufficient for the displayed RNP.	During approach: Refer to UNABLE REQD NAV PERF - RNP non-normal checklist in the QRH. During other phases of flight: Refer to the FMC Navigation Check supplementary procedure in SP.11.
--	--	---

VERIFY GW AND FUEL	Fuel data becomes invalid, PERF INIT fuel value is replaced with dashes. FMC uses last valid fuel quantity for performance predictions until manual entry is made. Shows if 30 minutes have elapsed since last manual entry. Does not show in descent with Vref selected.	Enter fuel weight on PERF INIT page 1/2. Periodic update of fuel weight is required to keep gross weight value current.
--------------------	---	---

[Option – U10.7 and later]

VERIFY POS: FMC-FMC (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
--	--	--

[Option – U10.7 and later]

VERIFY POS: FMC-GPS (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
--	--	--

[Option – U10.7 and later]

VERIFY POS: FMC-RADIO (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
---	--	--

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Flight Management, Navigation -
FMC Messages

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.7 and later]

VERIFY POS: IRS-FMC (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
--	--	--

[Option – U10.7 and later]

VERIFY POS: IRS-IRS (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
--	--	--

[Option – U10.7 and later]

VERIFY POS: IRS-RADIO (U10.7 and later)	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
---	--	--

VERIFY POSITION	Position information is contradictory.	Refer to FMC Navigation Check Supplementary Procedure.
-----------------	--	--

[Option – U10.3 and later]

VERIFY RNP (U10.3 and later)	Underlying RNP value is less than manually entered value.	Enter appropriate RNP.
---------------------------------	---	------------------------

VERIFY TAKEOFF SPEEDS	A PERF INIT change has been made after takeoff speeds were specified.	On TAKEOFF REF page 1, accept previous V speeds, or reject previous V speeds and enter new V speeds.
-----------------------	---	--

[Option – U10.5 and later]

VERIFY VERT RNP (U10.5 and later)	During an active descent with CDS navigation performance scales enabled, a manually entered vertical RNP is greater than the default vertical RNP.	Clear CDU message. Enter appropriate vertical RNP.
--------------------------------------	--	--

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.4 and later]

VNAV DISCONNECT (U10.4 and later)	The criteria for VNAV engagement is not satisfied (VNAV disengages). On approach, with VNAV engaged, the FCC has switched to LVL CHG.	Manually control the vertical path.
--------------------------------------	--	-------------------------------------

FMC Entry Error Messages

These messages relate to incorrect scratchpad entries. FMC entry error messages:

- are shown in the CDU scratchpad
- illuminate the message light (MSG) of the CDU where the entry error was made
- temporarily overwrite data in the scratchpad.

Use the CLR key or key in new data to remove the message. If the CLR key is used to remove the message, the data previously entered is once again displayed. If new data is keyed in over the message, the message and the data previously entered are removed.

ENTRY ERROR MESSAGE	CAUSE	CORRECTIVE ACTION
ALT CONSTRAINT XXXXXX (waypoint identifier)	A flight plan modification has caused an altitude conflict with a waypoint that has an altitude constraint.	Clear the message and revise the entry.
DATA BASE FULL	Entry attempted into a supplemental or temporary navigation database category which is full.	Go to the NAV DATA pages and delete unneeded waypoints, nav aids, or airports from the appropriate database and re-attempt entry.

[Option – U10.3 and later]

DUPLICATE FLIGHT PLAN ID (U10.3 and later)	The entry attempted is a duplicate of an existing supplemental flight plan name.	Clear the message and select a unique flight plan name.
INVALID DELETE	DEL key operation was attempted for a data line to which it was not applicable.	Clear the message and select the proper line after the DEL key is pressed.
INVALID ENTRY	Attempted data entry has incorrect format, range, etc. for the selected data line. Entered RTA waypoint is not in the flight plan.	Clear the message and scratchpad entry, and repeat the entry with the correct data.

ENTRY ERROR MESSAGE	CAUSE	CORRECTIVE ACTION
----------------------------	--------------	--------------------------

[Option – U10.2 and later]

INVALID QUAD (U10.2 and later)	Attempted HOLD page QUAD entry has incorrect format or range.	Clear the message and revise the QUAD entry.
-----------------------------------	---	---

NO OFFSET AT LEG XXXXXX (waypoint)	Attempted entry of a lateral offset start or end waypoint XXXXXX that is not offsetable (lateral offset as installed).	Clear the message and amend the route.
---------------------------------------	--	---

NOT IN DATA BASE	FMC does not contain the required data for the entered identifier.	Clear the message and check data entry, or enter the required information into the supplemental or temporary navigation database via the NAV DATA pages.
------------------	--	--

NOT IN FLIGHT PLAN	RTA waypoint or lateral offset (as installed) start/end waypoint entry is not in active flight plan.	Clear the message and amend the entry.
--------------------	---	---

ROUTE FULL	Entry of more than maximum allowed number of waypoints or holding patterns attempted.	Clear the message and review existing and desired waypoints and holding patterns for possible deletion.
------------	--	---

[Option – U10.3 and later]

SUPP RTE DATA BASE FULL (U10.3 and later)	Attempted save of the 11th supplemental flight plan.	Clear the message, delete unnneeded supplemental flight plans and re-attempt entry.
---	---	--

FMC Advisory Messages

These messages relate to FMC status. FMC advisory messages:

- are shown in the CDU scratchpad
- illuminate message lights (MSG) on both CDUs.

Use the CLR key or correct the condition responsible for the message to remove the message. The message is temporarily removed from the scratchpad when manually entering data. The message returns when the data is removed from the scratchpad.

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
ABOVE MAX CERT ALT	The airplane is above its maximum certified altitude.	Descend to an altitude below the maximum certified altitude.
APPRCH VREF NOT SELECTED	Airplane has transitioned into approach environment and Vref has not been selected on APPROACH REF page.	Select Vref on APPROACH REF page.
ARR N/A FOR RUNWAY	Runway or approach does not match the selected arrival procedure.	Go to the ARRIVALS page and modify selection.
BUFFET ALERT	Current conditions result in a maneuver margin less than specified.	Bring the airplane back within the operating envelope.
CHECK FMC FUEL QUANTITY	The FMC has detected an unexpected drop in the fuel quantity.	Check the fuel quantity indications for correctness.
DES PATH UNACHIEVABLE	When in path descent and above the path, the FMC predictions show the profile restrictions at the next waypoint cannot be achieved (LNAV remains engaged).	Modify the restrictions.
DRAG REQUIRED	Airspeed is 10 kts or more above FMC target speed or within 5 kts of Vmo/Vmmo.	Use speedbrakes, trim or reduced thrust, as required, to bring the airplane within 5 kts of FMC target speed.

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.5 and later]

FMC APP MODE UNAVAIL–GP (U10.5 and later)	The approach selected in the FMC does not have a specified glidepath angle for final approach. The FMC approach mode cannot be used for this approach.	Select an alternate approach. Clear the message.
---	--	--

INVALID OFFSET	Desired offset does not meet FMC offset criteria.	Clear the message and amend the entry.
KEY/FUNCTION INOP	A mode key is pressed for which an FMC function has not been implemented or has not been enabled. (FANS MCDU only)	Clear the message or select another CDU page for display.
LOC CAP ACTIVE	The airplane is approaching its turn onto the localizer or GLS course and will maintain an intercept heading.	Clear the message manually, or wait for the AFDS to signal reset status to the FMC.
LOC CAP CANCELLED	Flight plan modifications or the airplane condition did not facilitate localizer capture.	Clear the message manually, or wait for the AFDS to reset to LOC CAP ACTIVE.
MAX ALT FLXXX (flight level value)	Altitude entry on any page is above the maximum altitude for current selected performance margins.	Clear the message or amend the data entry.
MAX MACH .XXX/MIN MACH .XXX OR MAX CAS .XXX/MIN CAS .XXX	FMC target speed is greater than the maximum or less than the minimum buffet speed for the entered cruise or step climb altitude.	Change the target speed to within the message limits or enter a lower altitude.
NO DES PATH AFTER XXXXX (waypoint)	FMC is unable to construct a PATH DES that satisfies all altitude restrictions after XXXXX.	Modify speed or altitude restrictions on the RTE LEGS pages.

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
NOT ON INTERCEPT HEADING	Airplane is not within the LNAV capture criteria for the active leg (LNAV disengages).	Manually place the airplane on an intercept heading and reengage LNAV.
OFFSET DELETED	The entered start waypoint has been deleted from the flight plan. (lateral offset as installed)	Clear the message and amend the route.
OFST ENDS ABEAM XXXXXX	An invalid offset leg exists between the end waypoint (XXXXXX) and the start of offset or no end waypoint exists.	Clear the message and amend the route.
PERF DEFAULTS DELETED	Performance database has been automatically deleted due to conflict with performance database limits.	Contact maintenance personnel.

[Option – U10.6 and later]

POS SHIFT OVER 50NM (U10.6 and later)	A viable position shift is currently selected that will result in an FMC position shift in excess of 50nm when executed.	Clear the message.
--	--	--------------------

PROGRAM PIN ERROR	FMC connector wiring is incorrect.	System unusable; advise maintenance personnel. The CLR key will not clear the message.
PROGRAM PIN NOT IN DB	FMC connector wiring or performance database is incorrect.	
RESET MCP ALT	Normal FMC operation would require flying away from MCP altitude.	Select a MCP altitude value in the proper direction (higher for climb, lower for descent).

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
------------------	-------	-------------------

[Option – U10.5 and later]

RESET MCP APP MODE (U10.5 and later)	A change in the expected approach is made with an FCC approach mode armed or engaged.	Clear and rearm FCC approach mode. Clear the message.
---	---	---

RUNWAY N/A FOR SID	The selected runway is not applicable to the selected departure procedure.	Clear the message and check selections on the DEPARTURES page. Modify as required.
SELECT ACTIVE WPT/LEG	Power-up restart or insertion of a different flight plan while airborne.	EXECute a direct-to or leg intercept to tell the FMC which leg of the route is active.
STEEP DESCENT AFTER XXXXXX	An excessive vertical discontinuity exists after point XXXXXX.	Check routing.
TAI ON ABOVE 10°C	Airplane is operating with anti-icing with TAT above +10°C.	Clear the message and check the use of anti-icing for engines and/or wings.
UNABLE CRZ ALT	FMC predicts that no cruise time is possible at the entered CRZ ALT.	Clear the message and review the CRZ ALT selection.
UNABLE MACH .XXX	The entered cruise Mach is unattainable based on present gross weight.	Select a smaller Mach number or wait until gross weight is reduced sufficiently.
UNABLE TO OFFSET	A valid offset cannot be constructed due to geometric limitations.	Clear the message and amend the route.
USING RSV FUEL	Predicted fuel remaining at DEST is less than the RESERVES entry on the PERF INIT page.	Clear the message and change routing if required.

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
V SPEEDS UNAVAILABLE	FMC cannot compute V speeds (as installed) due to unreasonable inputs on the RTE, PERF INIT, or TAKEOFF REF pages.	Correct inputs that affect V speed computation.
VERIFY RNP VALUE	When entering an RNP the underlying RNP value is smaller than the manually entered value or the ANP is greater than the manually entered RNP.	Change or delete the manually entered RNP.

[Option – U10.5 and later]

VERIFY VERT RNP VALUE (U10.5 and later)	With CDS navigation performance scales enabled, a manually entered vertical RNP is greater than the default vertical RNP or manually entered vertical RNP is less than vertical ANP.	Clear the message. Change or delete the manually entered RNP.
---	--	---

XXXX (airport identifier)	A REF AIRPORT is entered on the POS INIT page and no entry of ORIGIN yet appears on RTE page 1.	Enter the airport identifier on the ORIGIN data line.
XXXXXX (MCP altitude value)	With the CRZ page displayed, resetting the AFDS MCP altitude to a value different from the CRZ ALT causes the value to appear in the scratchpad.	Enter the MCP altitude value on the appropriate target altitude data line.

FMC Data Link Messages

[Option – With company data link]

These messages relate to FMC data link message status. FMC data link alerting and advisory messages function the same as the alerting and advisory messages described above:

FMC Data Link Alerting Messages

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
ALTN DEST UPLINK	An FMC alternate destinations uplink message has been loaded on the ALTERNATE DESTS page, and is ready for flight crew review. (Alternate destinations as installed)	Review the alternate destinations uplink.
CRZ WIND UPLINK LOADING	An FMC cruise wind uplink message is loading (after LOAD selected on the RTE DATA page).	Wait for load to complete.
CRZ WIND UPLINK READY	An FMC cruise wind uplink message has been received and is available for loading on the RTE DATA page.	Select RTE DATA page, LOAD cruise wind, and execute or ERASE.
CRZ WIND XXXXX (cruise altitude) UPLINK	An FMC cruise wind uplink message has been loaded on the RTE DATA page, and is ready for flight crew review.	Review the cruise wind uplink, and execute or ERASE.
DATALINK CONFIG INVALID	Validity check of the FMC datalink configuration file has failed.	Contact maintenance personnel.
DESCENT FORECASTS UPLINK	An FMC descent forecasts uplink message has been loaded on the DESCENT FORECASTS page, and is ready for flight crew review.	Review the descent forecasts uplink, and execute or ERASE.
FORECASTS UPLINK READY	An FMC descent forecasts uplink message has been received and is available for loading on the DESCENT FORECASTS page.	Select DESCENT FORECASTS page, LOAD descent forecasts winds, and execute or ERASE.

BBJ Flight Crew Operations Manual

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
INVALID TAKEOFF XXX/YYY (runway or runway/intersection identifier)	Runway (RTE page) or runway/intersection (TAKEOFF REF page) has been entered that matches runway takeoff data in FMC memory. However, the airplane is performance limited for the selected runway.	Clear the message. Enter correct takeoff data, request new takeoff data uplink, or enter new runway or runway/intersection identifier.
NAV DATA LOADING	An FMC supplemental navigation data uplink message has been received and is loading.	Wait for load to complete.
NAV DATA UPLINK	An FMC supplemental navigation data uplink message has been loaded on the SUPP NAV DATA page, and is ready for flight crew review.	Review the supplemental navigation data uplink, and execute or ERASE.
PARTIAL ALTN DEST UPLINK	An FMC alternate destinations uplink message has been loaded on the ALTERNATE DESTS page, but errors were encountered during the loading process. (Alternate destinations as installed)	Review the alternate destinations uplink, and execute or ERASE.
PARTIAL FORECASTS UPLINK	An FMC descent forecasts uplink message has been loaded on the DESCENT FORECASTS page, but errors were encountered during the loading process.	Review the descent forecasts uplink, and execute or ERASE.
PARTIAL LIMITS UPLINK	An FMC performance limits uplink message has been loaded on the PERF LIMITS page, but errors were encountered during the loading process.	Review the performance limits uplink, and execute or ERASE.

BBJ Flight Crew Operations Manual

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
PARTIAL NAV DATA UPLINK	An FMC supplemental navigation data uplink message has been loaded on the SUPP NAV DATA page, but errors were encountered during the loading process.	Review the supplemental navigation data uplink, and execute or ERASE.
PARTIAL PERF INIT UPLINK	An FMC performance initialization uplink message has been loaded on the PERF INIT page, but errors were encountered during the loading process.	Review the performance initialization uplink, and execute or ERASE.
PARTIAL ROUTE UPLINK	An FMC route uplink message has been loaded on the RTE page, but errors were encountered during the loading process.	Review the route uplink, and execute or ERASE.
PERF INIT UPLINK	An FMC performance initialization uplink message has been loaded on the PERF INIT page, and is ready for flight crew review.	Review the performance initialization uplink, and execute or ERASE.
PERF INIT UPLINK READY	An FMC performance initialization uplink message has been received and is available for loading on the PERF INIT page.	Select PERF INIT page, LOAD performance initialization data, and execute or ERASE.
PERF LIMITS UPLINK	An FMC performance limits uplink message has been loaded on the PERF LIMITS page, and is ready for flight crew review.	Review the performance limits uplink, and execute or ERASE.
PERF LIMITS UPLINK READY	An FMC performance limits uplink message has been received and is available for loading on the PERF LIMITS page.	Select PERF LIMITS page, LOAD performance limits, and execute or ERASE.

BBJ Flight Crew Operations Manual

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
RESEND MESSAGE	An FMC downlink message was attempted, but the FMC was unable to deliver the message to the ACARS MU.	Re-send the downlink message.
ROUTE DATA UPLINK	An FMC route uplink message has been loaded on the RTE page, and is ready for flight crew review.	Review the route uplink, and execute or ERASE.
ROUTE UPLINK LOADING	An FMC route uplink message is loading (after LOAD selected on the RTE page).	Wait for load to complete.
ROUTE UPLINK READY	An FMC route uplink message has been received and is available for loading on the RTE page.	Select RTE page, LOAD route, and execute or ERASE.
RTA DATA UPLINK	An FMC RTA uplink message has been loaded on the RTA PROGRESS page, and is ready for flight crew review.	Review the RTA uplink, and execute or ERASE.

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
RTA UPLINK READY	An FMC RTA uplink message is has been received and is available for loading on the RTA PROGRESS page.	Select RTA PROGRESS page, LOAD RTA data, and execute or ERASE.
TAKEOFF DATA LOADED	Uplink takeoff data matching Runway (RTE page) or runway/intersection (TAKEOFF REF page) has been loaded on the TAKEOFF REF page, and is ready for flight crew review.	Select TAKEOFF REF page, accept or reject takeoff data.
TAKEOFF DATA UPLINK	An FMC takeoff data uplink message containing one or more sets of runway takeoff data has been received and loaded in FMC memory.	Enter appropriate runway (RTE page) or runway/intersection (TAKEOFF REF page) to access runway takeoff data.

FMC Data Link Advisory Messages

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
INVALID ALTN DEST UPLINK	An FMC alternate destinations uplink message was received, but was rejected due to errors.	Clear the message.
INVALID CRZ WIND UPLINK	An FMC cruise wind uplink message was received, but was rejected due to errors.	Clear the message.
INVALID FORECASTS UPLINK	An FMC descent forecasts uplink message was received, but was rejected due to errors.	Clear the message.
INVALID LIMITS UPLINK	An FMC performance limits uplink message was received, but was rejected due to errors.	Clear the message.
INVALID NAV DATA UPLINK	An FMC supplemental navigation data uplink message was received, but was rejected due to errors.	Clear the message.
INVALID PERF INIT UPLINK	An FMC performance initialization uplink message was received, but was rejected due to errors.	Clear the message.
INVALID ROUTE UPLINK	An FMC route uplink message was received, but was rejected due to errors.	Clear the message.
INVALID RTA UPLINK	An FMC RTA uplink message was received, but was rejected due to errors.	Clear the message.
INVALID TAKEOFF UPLINK	An FMC takeoff data uplink message was received, but was rejected due to errors.	Clear the message.

Navlink ACARS Messages

[Option – With Navlink]

Navlink ACARS Advisory Messages

Advisors messages denote status and are displayed in the 6R position when applicable. When more than one message applies they are displayed in the order listed.

ADVISORY MESSAGE	CAUSE	CORRECTIVE ACTION
FAIL	A fault record exists that has not been viewed.	Display fault page. Display last fault record.
VOICE	System is in voice mode.	Change to data mode.
ACKNOWLEDGE	An ATC message requiring acknowledgement is received.	Acknowledge message.
SELCAL	Voice go-ahead uplink message received.	Selected SELCAL message.
NEW MSG	An uplink message that has not been viewed exists.	Select detailed message page and review message.
NEW WX MAP	A graphic exists that has not been viewed.	View graphic.
NOCOMM	No air/ground links are available.	Reestablish communication link.
VHF NOCOMM	VHF link not available.	Reestablish VHF communication link.
TEL NOCOMM	Telephonic communication link is unavailable.	Reestablish telephonic communication link.
SAT NOCOMM	SATCOM communication link is unavailable.	Reestablish SATCOM communication link.

Navlink ACARS Status Messages

Status messages apply only to downlink message status and appear above the SEND* prompt.

STATUS MESSAGE	CAUSE	MESSAGE CLEARED
QUEUED	Message is stored for downlink.	When message is downlinked.
SENDING	Message sent but not acknowledged.	When message acknowledged.
SENT	Message has been acknowledged.	Exiting current page.
NOT SENT	All media for sending message exhausted without receiving acknowledgement.	When message status changes.

BBJ Flight Crew Operations Manual**Navlink ACARS Entry Error Messages**

Entry error messages appear in the scratchpad and advise of invalid entries or system inability to perform functions.

ENTRY ERROR MESSAGE	CAUSE	CLEARED WHEN
DOWNLINK QUEUE FULL	A queued message would exceed the maximum number of messages of that type.	Message is successfully queued or page selection is changed.
UNABLE TO SEND	An attempt to transmit a message was unsuccessful on all available media.	No messages are in the download queue.
INVALID DATA	An attempt to enter data into a field fails due to incorrect data format or data is not within data field range.	Clear the message.
MESSAGE PRINTING	PRINT> key pressed.	Cleared 30 seconds after successful transfer of data to printer.
UNABLE TO PRINT	An attempt to send data to printer fails.	Select PRINT> again or exit page.
PRINT COMPLETE	Displayed when printing finished.	Clear the message.
MANUAL ENTRY REQUIRED	A downlink message cannot be generated due to lack of data required to generate message.	Message is corrected and successfully re-generated.
PASSWORD ACCEPTED	Correct password enter on CONFIG page.	Clear the message.
INVALID MAP-FILE DELETED	When MCDU deletes a bad graphic file during decompression.	Clear the message.

ANCDU Messages

[Option – With ANCDU]

ANCDU Alerting Messages

These messages relate to operationally significant conditions and are unique to ANCDU operation. They trigger the “MSG” indication on the standby attitude indicator.

ALERTING MESSAGE	CAUSE	CORRECTIVE ACTION
GPS INTEGRITY LOST	GPS can no longer assure adequate detection of a GPS satellite.	Discontinue use of Alternate Navigation System. Refer to FMC Navigation Check supplementary procedure.
LO POS ACCURACY	GPS position accuracy is no longer adequate for RNP 1nm.	Discontinue use of Alternate Navigation System. Refer to FMC Navigation Check supplementary procedure.
GPS FAIL	The onside GPS has failed or is providing invalid data.	Discontinue use of Alternate Navigation System. Refer to FMC Navigation Check supplementary procedure.

ANCDU Entry Error Messages

These messages relate to incorrect scratchpad entries or to flight plan status and are unique to ANCDU operation.


ENTRY ERROR MESSAGE	CAUSE	CORRECTIVE ACTION
INVALID ENTRY	Invalid format or range for selected data field.	Clear message and reenter the data correctly.
ROUTE FULL	Attempted entry of more than 60 waypoints.	Clear message. Review flight plan for possible deletions or wait until less than 60 waypoints remain in flight plan.
WAYPOINT NOT DEFINED	Entered waypoint identifier does not have a known position.	Reenter waypoint with a valid latitude and longitude.
WPT PREVIOUSLY DEFINED	Attempted entry of an existing waypoint identifier using a position different from existing waypoint position.	Delete previous waypoint identifier and reenter or rename new waypoint identifier.

Intentionally
Blank

Fuel**Chapter 12****Table of Contents****Section 0**

Controls and Indicators	12.10
Fuel Control Panel	12.10.1
Fuel Quantity Indications	12.10.4
Fuel Alert Indications	12.10.5
Auxiliary Fuel Control Panels	12.10.7
Auxiliary Fuel Cockpit Display Panel	12.10.7
Auxiliary Fuel Transfer Panel	12.10.8
Auxiliary Fuel Bleed Air Panel	12.10.9
Isolation Valve Panel	12.10.10
Fueling / Defueling / Measurement	12.10.11
Test Gages and Fueling Panel	12.10.13
System Description	12.20
Introduction	12.20.1
Fuel Feed	12.20.1
Fuel Pumps	12.20.1
Fuel Crossfeed	12.20.2
Fuel Shutoff Valves	12.20.2
Center Tank Fuel Scavenge Jet Pump	12.20.2
Fuel Temperature	12.20.2
APU Fuel Feed	12.20.3
Fuel Quantity Indication	12.20.3
Auxiliary Fuel System	12.20.3
Auxiliary Fuel Tank Configurations	12.20.3
Auxiliary Fuel System Operation	12.20.3
System Status Display	12.20.4
Fueling/Defueling/Ground Transfer	12.20.4
Auxiliary Tank Fueling/Defueling	12.20.4
Fuel Tank Location and Capacities (Usable Fuel)	12.20.5
Fuel Schematic	12.20.10
Auxiliary Fuel Schematic	12.20.11

Intentionally
Blank

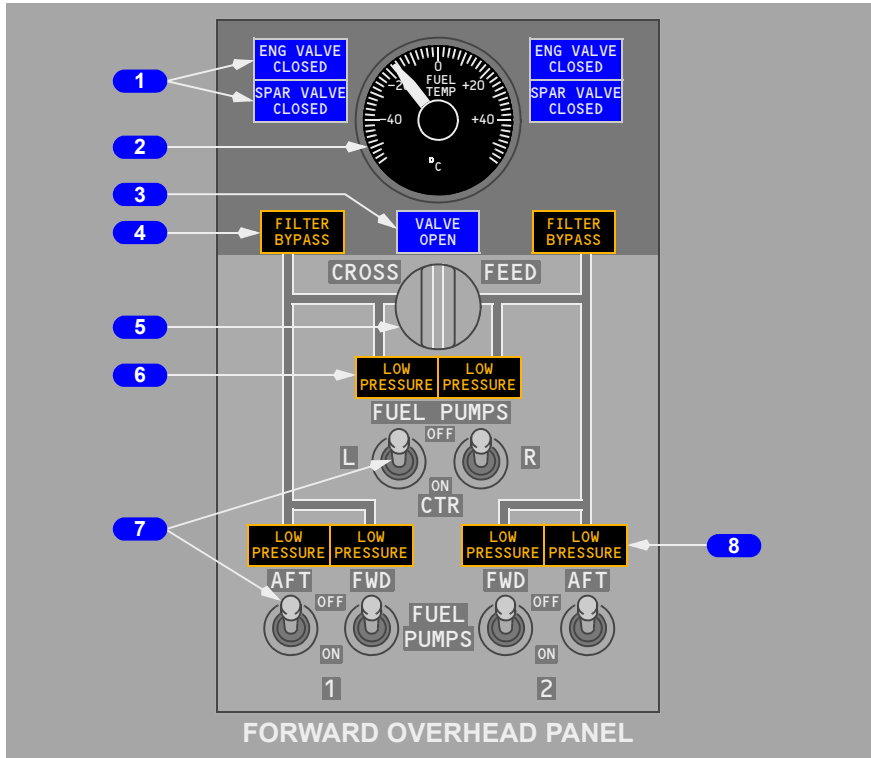**Fuel
Controls and Indicators****Chapter 12
Section 10****Fuel Control Panel****1 Engine Valve Closed (ENG VALVE CLOSED) and SPAR VALVE CLOSED Lights**

Extinguished – related engine or spar fuel shutoff valve is open.

Illuminated (blue) –

- bright – related engine or spar fuel shutoff valve is in transit, or valve position and engine start lever or engine fire switch disagree.
- dim – related engine or spar fuel shutoff valve is closed.

2 FUEL Temperature (TEMP) Indicator

Indicates fuel temperature in No. 1 tank.

3 Crossfeed VALVE OPEN Light

Extinguished – crossfeed valve is closed.

Illuminated (blue) –

- bright – crossfeed valve is in transit, or valve position and CROSSFEED selector disagree.
- dim – crossfeed valve is open.

4 FILTER BYPASS Lights

Extinguished – fuel filter operating normally.

Illuminated (amber) – impending fuel filter bypass due to a contaminated filter.

5 CROSSFEED Selector

Controls fuel crossfeed valve.

Closed – isolates engine No. 1 and No. 2 fuel feed lines.

Open – connects engine No. 1 and No. 2 fuel feed lines.

6 Center Tank FUEL PUMP LOW PRESSURE Lights

[Option - without Center Tank Fuel Pump Auto-shutoff]

Illuminated (amber) – fuel pump output pressure is low and FUEL PUMP switch is ON.

Note: With both Center (CTR) tank FUEL PUMP switches ON, illumination of both LOW PRESSURE lights illuminate MASTER CAUTION and FUEL system annunciator lights. Illumination of one LOW PRESSURE light illuminates MASTER CAUTION and FUEL system annunciator lights on MASTER CAUTION light recall.

Note: With one CTR tank FUEL PUMP switch OFF, illumination of opposite CTR tank LOW PRESSURE light illuminates the MASTER CAUTION and FUEL system annunciator lights.

Extinguished – fuel pump output pressure is normal, or FUEL PUMP switch is OFF.

6 Center Tank FUEL PUMP LOW PRESSURE Lights

[Option - with Center Tank Fuel Pump Auto-shutoff]

Illuminated (amber) – fuel pump output pressure is low and FUEL PUMP switch is ON.

Note: With the Center (CTR) tank FUEL PUMP switches ON, continuous illumination of one LOW PRESSURE light for 10 seconds illuminates MASTER CAUTION and FUEL system annunciator lights.

Extinguished – fuel pump output pressure is normal, or FUEL PUMP switch is OFF.

7 FUEL PUMP Switches

ON – activates fuel pump.

OFF – deactivates fuel pump.

[Option - with Center Tank Fuel Pump Auto-shutoff]

Note: When a center tank fuel pump switch is set to OFF, the auto shutoff logic for that pump is reset. When the center tank fuel pump switch is set to ON after being OFF, the pump will again activate until the switch is set to OFF or auto shutoff logic deactivates it.


8 Main Tank FUEL PUMP LOW PRESSURE Lights

Illuminated (amber) – fuel pump output pressure is low, or FUEL PUMP switch is OFF.

Note: Two LOW PRESSURE lights illuminated in same tank illuminate MASTER CAUTION and FUEL system annunciator lights. One LOW PRESSURE light causes MASTER CAUTION and FUEL system annunciator lights to illuminate on MASTER CAUTION light recall.

Extinguished – fuel pump output pressure is normal.

Fuel Quantity Indications

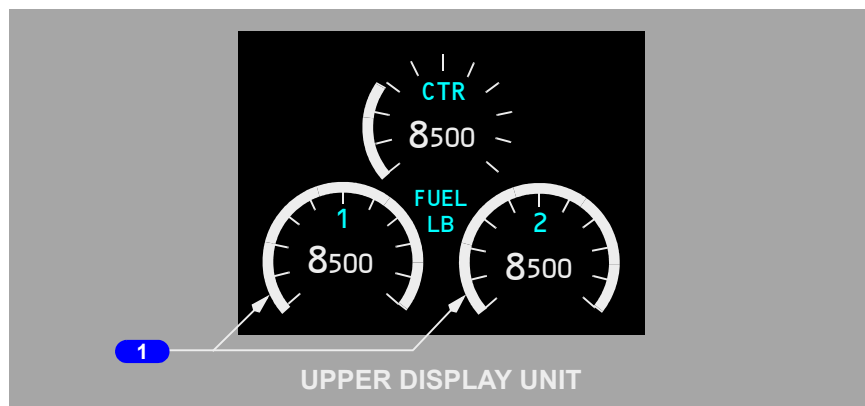


1 FUEL Quantity Indicators

Displayed (white) – indicates usable fuel in related tank:

- standby AC power is required.
- accuracy is $\pm 2.0\%$ of the fuel tank's maximum capacity.

Fuel Alert Indications

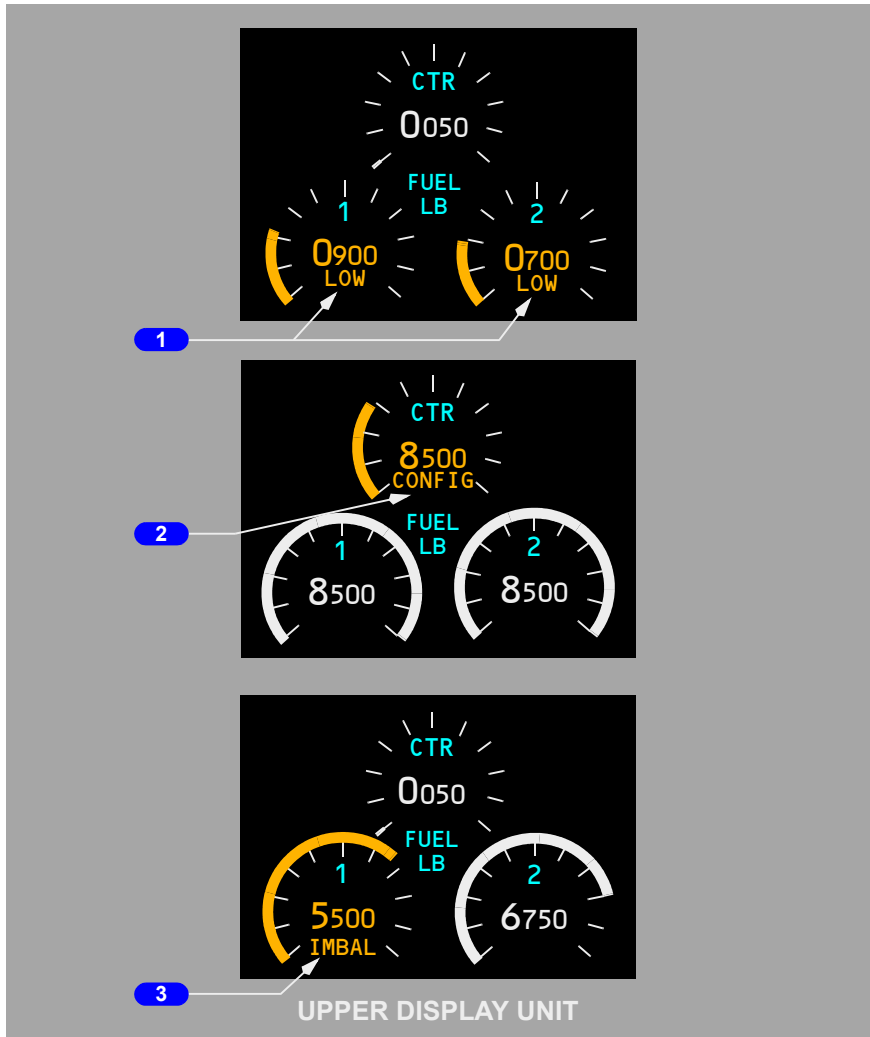

1 Fuel LOW Alert

Displayed (amber) –

- fuel quantity less than 2000 lbs/907 kg in related main tank
- display remains until fuel tank quantity is increased to 2500 lbs/1134 kgs

[Option - LOW Alert below 1000 lbs/453 kgs]

- fuel quantity less than 1000 lbs/453 kg in related main tank
- display remains until fuel tank quantity is increased to 1250 lbs/567 kgs

The fuel quantity arc and digits on tank(s) with low fuel quantity turn amber.

2 Fuel Configuration (CONFIG) Alert

Displayed (amber) –

- either engine running
- center fuel tank quantity greater than 1600 lbs/726 kgs; and

[Option - CONFIG Alert Prior to L/N 1494]

- both center fuel tank pumps producing low or no pressure

[Option - CONFIG Alert, L/N 1494 and On]

- both center fuel tank pump switches positioned OFF

The quantity arc and digits on the center tank fuel quantity indicator turn amber.

Display remains until –

- both engines not running
- center fuel tank quantity less than 800 lbs/363 kgs

[Option - CONFIG Alert Prior To L/N 1494]

- one center fuel tank pump producing high pressure

[Option - CONFIG Alert, L/N 1494 and On]

- one center fuel tank pump switch ON

The quantity arc and digits on the center tank fuel quantity indicator return to normal.

3 Fuel Imbalance (IMBAL) Alert


Displayed (amber) –

- main tanks differ by more than 1000 lbs/453 kgs
- displayed below main tank with lower fuel quantity
- inhibited when airplane is on ground
- inhibited by fuel LOW indication when both indications exist
- displayed until imbalance is reduced to 200 lbs/91 kgs

The fuel quantity arc and digits on tank with lower fuel quantity turn amber.

Auxiliary Fuel Control Panels

Auxiliary Fuel Cockpit Display Panel

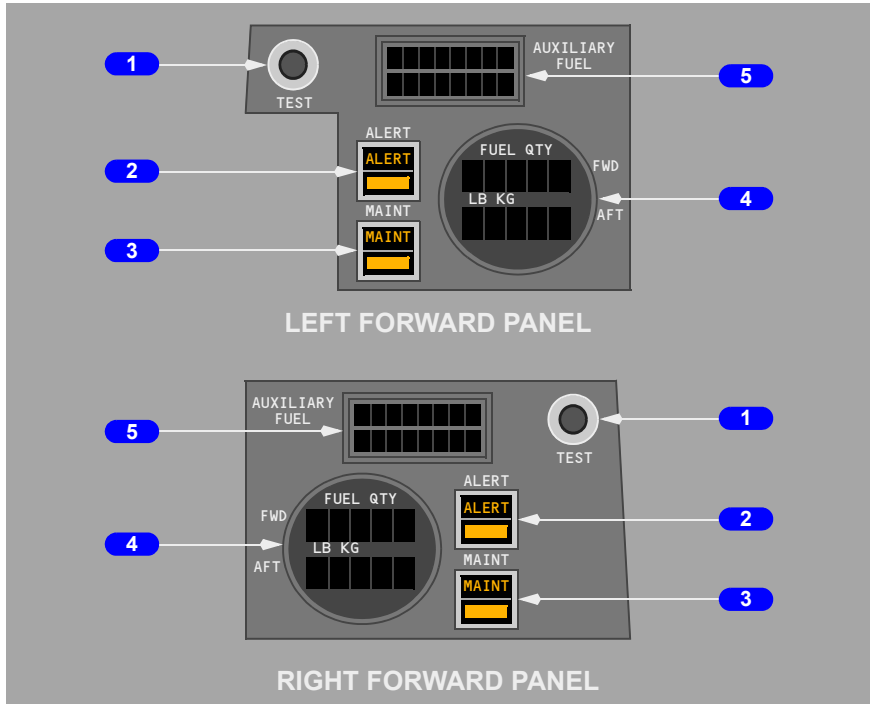

1 TEST Switch

PUSH - tests displays for auxiliary fuel quantity, ALERT Messages and MAINT Messages.

2 ALERT Switch

Illuminated (amber) - ALERT message being displayed.

PUSH -

- with ALERT message present and light illuminated; clears message and extinguishes ALERT light
- if more than one message is active, repeated depressions cycle display through all existing ALERT messages.
 - following display of last active ALERT message, display is blanked and ALERT light is extinguished.

3 Maintenance (MAINT) Switch

Illuminated (amber) -

- on the ground - MAINT message active
- in flight - MAINT message being displayed.

Note: MAINT messages will not display in flight without operator action. Pushing the MAINT switch in flight with active MAINT messages causes the MAINT light to illuminate and message to display. Engaging the auxiliary fuel Maintenance Switch in flight is prohibited.

PUSH -

- with MAINT message active, illuminates MAINT light and displays MAINT message
- if more than one message is active, repeated depressions cycles display through all existing MAINT messages
 - following display of last active MAINT message, display is blanked and MAINT light is extinguished.

4 Auxiliary FUEL Quantity Indicators (FWD and AFT)


Indicate usable fuel in related auxiliary fuel tank.

Note: FWD indicator is blanked when only AFT auxiliary fuel tanks are installed.

5 ALERT and MAINT Message Displays

Displays ALERT messages and MAINT messages.

Auxiliary Fuel Transfer Panel

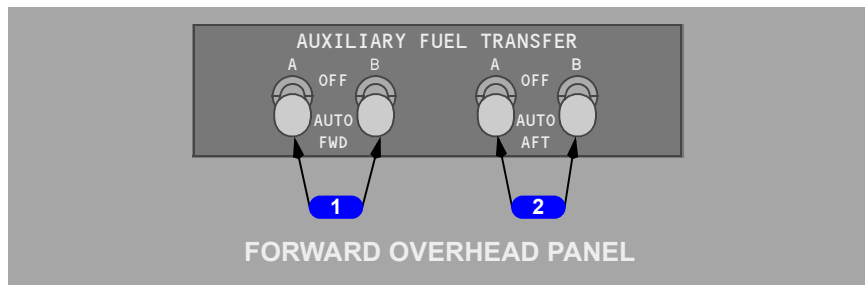

1 FWD AUXILIARY FUEL TRANSFER Valve Switches (A and B)

OFF - closes forward auxiliary fuel transfer valves.

AUTO - arms forward auxiliary fuel transfer valves to begin fuel transfer.


Note: FWD Auxiliary Fuel Transfer Valve Switches (A and B) are INOP when only AFT auxiliary fuel tanks are installed.

2 AFT AUXILIARY FUEL TRANSFER Valve Switches (A and B)

OFF - closes aft auxiliary fuel transfer valves.

AUTO - arms aft auxiliary fuel transfer valve to begin fuel transfer.

Auxiliary Fuel Bleed Air Panel

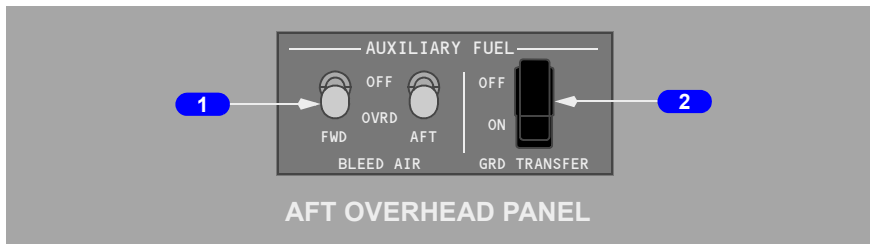

1 AUXILIARY FUEL BLEED AIR Switches (FWD and AFT)

OFF - closes auxiliary fuel bleed air valve.

Note: When GRD TRANSFER switch is ON, auxiliary fuel bleed air valves are automatically armed, enabling bleed air to pressurize auxiliary fuel tanks for fuel transfer while airplane is on the ground.

OVRD- allows bleed air valve to operate if A or B auxiliary fuel transfer valve is open and auxiliary fuel tank pressure is less than 4.5 psi.


Note: FWD Auxiliary Fuel Bleed Air Switch is INOP when only aft auxiliary fuel tanks are installed.

2 AUXILIARY FUEL Ground (GRD) TRANSFER Switch

OFF (Guarded Position) - prevents fuel transfer from auxiliary tanks while airplane is on the ground.

ON - disables air/ground logic and arms auxiliary fuel bleed air valves, allowing bleed air to pressurize auxiliary fuel tanks for fuel transfer while airplane is on the ground.

Isolation Valve Panel

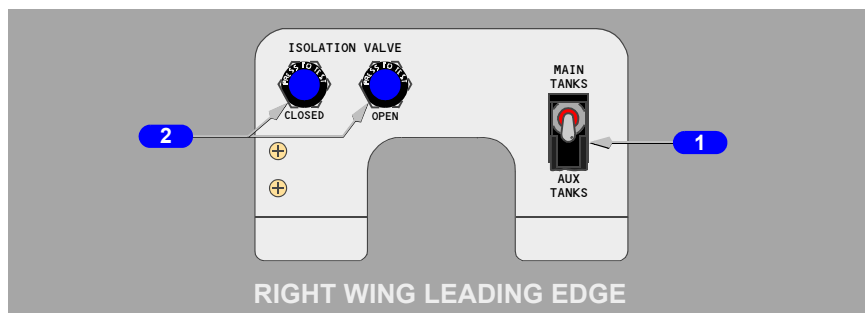

1 ISOLATION VALVE Switch

AUX TANKS-

- enables fueling into auxiliary fuel tanks
 - closes isolation valve, which illuminates the Isolation Valve CLOSED light
 - displays FWD and AFT auxiliary fuel quantity on #1 or AA and #2 or FA quantity indicator
 - FA appears in the “#2 or FA” preselect window and AA appears in the “#1 or AA” preselect window
 - connects FWD and AFT auxiliary fuel refueling valve control to TANK 1 and TANK 2 refueling valve switches.

MAIN TANKS -


- enables fueling into main tanks No. 1 and No. 2 and the center tank.
 - opens isolation valve, which illuminates the Isolation Valve OPEN light
 - displays main tank No. 1 and 2 fuel quantity on #1 or AA and #2 or FA quantity indicators
 - 2 appears in the “#2 or FA” preselect window and 1 appears in the “#1 or AA” preselect window

2 Isolation Valve OPEN/CLOSED Indicator Lights

CLOSED - illuminated (blue) indicates isolation valve is closed.

OPEN - illuminated (blue) indicates isolation valve is open.

Fueling / Defueling / Measurement

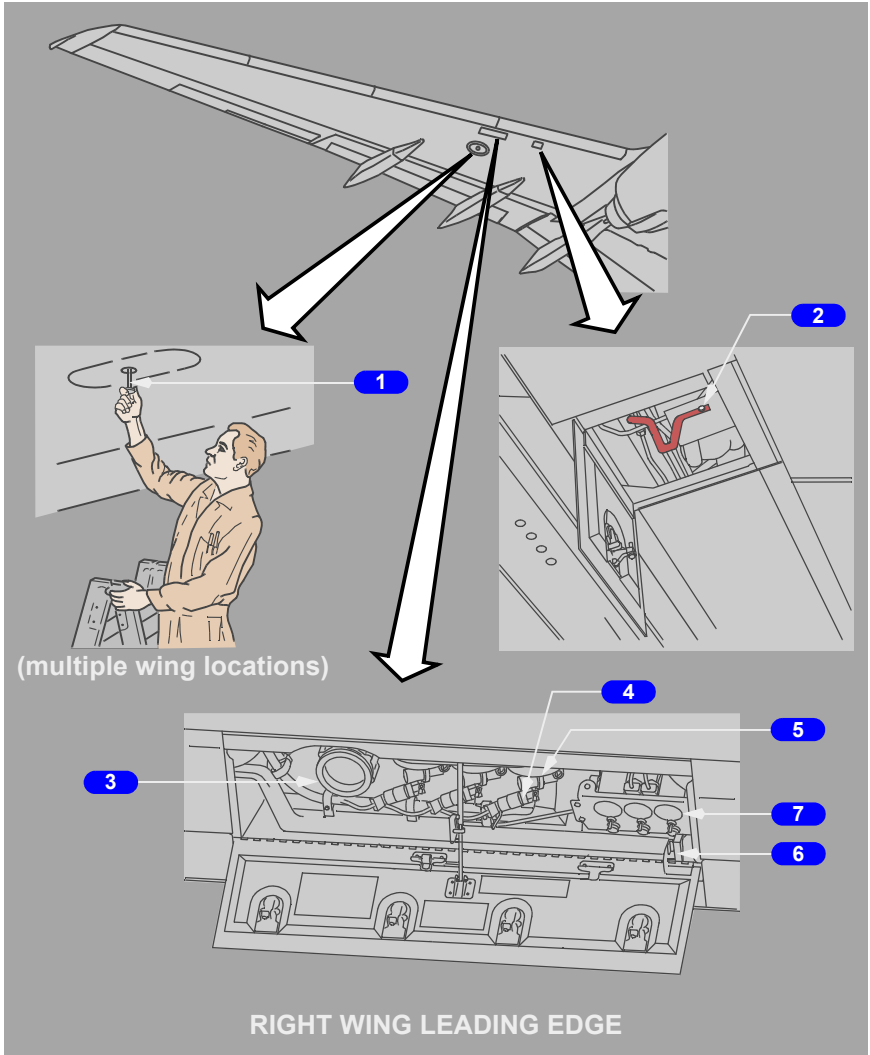

1 Fuel Measuring Stick

Allows comparison of fuel quantity or weight as determined from measuring stick reading and fuel weight indicated by fuel quantity indicators:

- six fuel measuring sticks are installed in each main tank and four are installed in center tank
- reading is obtained by withdrawing measuring stick from tank and latching it magnetically to an internal float. Fuel depth is read where stick passes through wing skin.

2 Manual Defueling Valve

Open – interconnects engine feed system and fueling station for:

- defueling
- ground transfer of fuel.

Closed – isolates engine feed system from fueling station.

3 Fueling Receptacle

Hose connection receptacle for single point fueling.

4 Solenoid Override

Mechanically opens solenoid operated valve. Fuel valve opens if fuel pressure is available.

5 Fueling Valves

With the battery switch ON, and the refueling door open, fuel pressure opens valve.

6 Refueling Power Control Relay

Door closed – proximity sensor deactivates power to fueling system.

Door open – the fueling system is powered and panel lights illuminate.

7 Test Gages & Fueling Panel

Test Gages and Fueling Panel



8 FUELING INDICATION TEST SWITCH

(spring-loaded to OFF position)

TEST GAGES – checks operation of fuel quantity indicators.

FUEL DOOR SWITCH BYPASS – energizes fueling panel if refueling power control relay fails.

9 Fueling VALVE POSITION LIGHTS

Extinguished –

- fueling valve switch is OPEN and related tank is full
- fueling valve switch is CLOSED.

Illuminated (blue) – fueling valve switch is OPEN and related tank is not full.

10 Fueling Valve Switches

OPEN – energizes fueling valve in related tank.

CLOSED – de-energizes fueling valve in related tank.

Note: With MAIN TANKS/AUX TANKS switch on MAIN TANKS/AUX TANKS Switch Panel in AUX TANKS position, #2 or FA and #1 or AA Fueling Valve Switches control FWD and AFT auxiliary fuel refueling valves.

11 FUEL Quantity (QTY) Indicators

Indicates total usable fuel tank quantity in related tank.

Placing MAIN TANKS/AUX TANKS switch on MAIN TANKS/AUX TANKS Switch Panel to AUX TANKS position causes #2 or FA and #1 or AA fuel quantity displays to show FWD and AFT auxiliary tank quantities, respectively.

12 Fuel Quantity Selectors

[Option]

Rotate – sets total fuel quantity desired in related tank.

Volumetric Shutoff occurs when the pounds or kilograms of fuel measured equals the preselected quantity.

Fuel
System Description**Chapter 12**
Section 20**Introduction**

The fuel system supplies fuel to the engines and the APU. Fuel is contained in three tanks located within the wings and wing center section.

Auxiliary fuel tanks are located in the forward and aft cargo compartments. Certain configurations have auxiliary fuel tanks located only in the aft cargo compartment.

Refer to Chapter 7, Engines, APU, for a description of the engine and APU fuel systems.

Fuel Feed

Both engines are normally pressure fed from the center tank until the center tank quantity decreases to near zero. The engines are normally then pressure fed from their respective main tanks. Check valves are located throughout the fuel system to ensure the proper direction of fuel flow and to prevent transfer of fuel between tanks.

Fuel Pumps

Each fuel tank uses two AC powered fuel pumps which are cooled and lubricated by fuel passing through the pump. Center tank pumps produce higher pressure than main tank pumps. This ensures that center tank fuel is used before main tank fuel, even though all fuel pumps are operating. Individual pressure sensors monitor the output pressure of each pump.

[Option - with Center Tank Fuel Pump Auto-shutoff]

Each center tank pump will automatically shut off, after a short delay, when that pump's sensor detects low output pressure.

Note: Fuel pump LOW PRESSURE lights may flicker when tank quantity is low and the airplane is in a climb, descent, or on the ground with a nose-down attitude.

Note: Center tank fuel pump LOW PRESSURE lights may flicker when tank quantity is low and the airplane is in cruise. One pump may indicate low pressure sooner than the other due to aircraft attitude and/or slight variation between pump inlet position. Low pressure indication may occur after center tank quantity reads zero. Low pressure light flickering can continue for as long as 5 minutes before the Fuel System Annunciator light and the Master Caution lights are illuminated for the associated center tank pump.

Suction Feed

When main tank fuel pump pressure is low, each engine can draw fuel from its corresponding main tank through a suction feed line that bypasses the pumps. As the airplane climbs, dissolved air is released from the fuel in the tank due to the decrease in air pressure. This air may collect in the suction feed line and restrict fuel flow. At high altitude, thrust deterioration or engine flameout may occur as a result of the fuel flow reduction.

The dissolved air in the fuel tank will eventually deplete after reaching cruise altitude. The depletion time is dependent upon airplane altitude, fuel temperature, and type of fuel. Once the dissolved air is depleted, the engine may be capable of suction feed operation at cruise power.

The main tank bypass valves may also be used for suction defueling.

Fuel Crossfeed

The engine fuel manifolds are interconnected by use of the crossfeed valve. The valve is DC motor operated from the battery bus.

Fuel pressure can be provided from a main tank with operating fuel pumps to both engines by opening the fuel crossfeed valve. Continued crossfeed use will result in a progressive fuel imbalance.

Fuel Shutoff Valves

Spar fuel shutoff valves are located at the engine-mounting wing stations. The valves are DC motor operated from the hot battery bus. The engine fuel shutoff valves are fuel actuated, solenoid controlled valves powered from the battery bus. Both the spar fuel shutoff valve and the engine fuel shutoff valve close whenever their respective engine fire switch is pulled or engine start lever is placed to CUTOFF.

Center Tank Fuel Scavenge Jet Pump

With the main tank fuel pump No. 1 FWD Switch ON, the center tank fuel scavenge jet pump operates automatically to transfer any remaining center tank fuel to main tank No. 1. Fuel transfer begins when main tank No. 1 quantity is about one-half. Once the fuel scavenge process begins, it continues for the remainder of the flight.

Fuel Temperature

The FUEL TEMP indicator located on the fuel control panel displays fuel temperature. A sensor in main tank No. 1 allows monitoring of fuel temperature. The temperature indicating system uses AC electrical power.

APU Fuel Feed

[Option - APU DC Fuel Pump]

A DC operated APU fuel boost pump is installed to ensure positive fuel pressure to the APU fuel control unit. During APU start and operation, the pump operates automatically when the APU fuel control unit senses low fuel pressure. The pump shuts off automatically when an AC fuel pump pressurizes the fuel manifold.

Fuel Quantity Indication

The fuel quantity indication system calculates the usable fuel quantity in each tank. The fuel quantity in each tank is displayed on the upper display unit and on the fueling station panel.

Auxiliary Fuel System

The Auxiliary Fuel System provides for extended range operations. Auxiliary fuel tanks are located in the cargo compartments. Controls for the auxiliary fuel system are located on the Forward Overhead Panel. Auxiliary fuel quantity, and system status messages are displayed on the Auxiliary Fuel Cockpit Display Panels. Auxiliary fuel quantity is included in the airplane total fuel quantity sent to the FMC for fuel computations.

Auxiliary Fuel Tank Configurations

Each auxiliary fuel tank group (forward and aft) consists of a number of individual fuel cells. Possible fuel cell configurations include:

- | | |
|--------------------------------|--------------------------------|
| • 1 cell aft | • 4 cells aft |
| • 1 cell aft, 1 cell forward | • 4 cells aft, 1 cell forward |
| • 1 cell aft, 2 cells forward | • 4 cells aft, 2 cells forward |
| • 2 cells aft | • 4 cells aft, 3 cells forward |
| • 2 cells aft, 1 cell forward | • 4 cells aft, 4 cells forward |
| • 2 cells aft, 2 cells forward | • 5 cells aft |
| • 3 cells aft | • 5 cells aft, 1 cell forward |
| • 3 cells aft, 1 cell forward | • 5 cells aft, 2 cells forward |
| • 3 cells aft, 2 cells forward | • 5 cells aft, 3 cells forward |
| • 3 cells aft, 3 cells forward | • 5 cells aft, 4 cells forward |

Auxiliary Fuel System Operation

During normal operation, fuel is transferred from the auxiliary fuel tanks into the center fuel tank. This transfer is accomplished using pressurized air from the cabin. If the cabin pressure is not adequate for fuel transfer, bleed air can be selected for fuel transfer. The bleed air valves cycle open and closed to regulate the bleed air pressure to the auxiliary fuel tanks. A pressure relief valve protects the auxiliary fuel tanks from over pressurization.

The auxiliary fuel tanks are connected to the main tank No. 1 refuel manifold and center tank vent system. Each auxiliary fuel tank is equipped with two vent valves. When auxiliary fuel transfer is selected, a signal is sent to close the auxiliary tank vent valves. Closing either valve allows the auxiliary fuel tank to be pressurized. The valves are automatically opened upon landing.

The Auxiliary Fuel Control Unit (AFCU) provides the interface between the airplane systems, flight deck controls, refueling controls and the auxiliary fuel tanks. The AFCU monitors switch and valve position, fuel quantity, auxiliary fuel tank pressure and air/ground status. It sends output signals for valve control, and system ALERT and MAINT messages.

System Status Display

System ALERT and MAINT messages, displayed on the Auxiliary Fuel Cockpit Display Panel, provide system status information. ALERT messages relate to auxiliary fuel system faults which effect auxiliary fuel operation. MAINT messages are for single point system faults and may require maintenance action. Automatic illumination of the MAINT light and display of MAINT messages is inhibited from takeoff until 30 seconds after landing.

If more than one ALERT or MAINT message is active, repeated pushing of the related switch will cycle through all active messages. Pushing the ALERT or MAINT switch following the display of the last active message will cause the display to blank. MAINT messages should be recorded prior to engine shut down.

Fueling/Defueling/Ground Transfer

Rapid fueling and defueling is accomplished at the single-point pressure fueling station in the right wing. The fueling station is also used for the ground transfer of fuel between tanks.

The manual defueling valve, located outboard of engine No. 2, interconnects the engine feed system and the fueling station. It is opened for defueling and tank to tank transfer operations.

A shutoff system is used during fueling to automatically close the fueling valve in each fuel tank when the tank is full.

Auxiliary Tank Fueling/Defueling

The auxiliary fuel tanks are filled via the airplane refueling system. Selecting the AUX TANKS position on the MAIN TANKS/AUX TANKS Switch Panel closes the isolation valve, and connects the auxiliary fuel system to the Tank 1 and Tank 2 fueling valve controls and quantity indicators on the Fueling Panel. The auxiliary tank fueling valves automatically close when the auxiliary tank is filled.

The auxiliary tanks can be defueled using ground transfer to the center tank.

Fuel Tank Location and Capacities (Usable Fuel)

Main tanks No. 1 and No. 2 are integral with the wing structure. The center tank lies between the wing roots within the fuselage area and extends out into the wing structure.

Auxiliary fuel tanks are installed in the cargo compartments.

These figures represent approximate amounts of usable fuel. The appropriate weight and balance control and loading manual gives exact figures for all conditions.

TANK	GALLONS	POUNDS*	LITERS	KILOGRAMS*
NO. 1	1,288	8,630	4,876	3,915
NO. 2	1,288	8,630	4,876	3,915
CENTER	4,299	28,803	16,273	13,066
TOTAL	6,875	46,063	26,025	20,896

*Usable fuel at level attitude, fuel density = 6.7 pounds per U.S. Gallon/0.8029 kilograms per liter.

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

[BBJ-1]

AUX FUEL CELLS	GALLONS /LITERS	POUNDS/ KILOS*	TOTAL GALLONS/ LITERS (ALL TANKS)	TOTAL POUNDS/ KILOS* (ALL TANKS)
1 AFT	523/ 1,980	3,504/ 1,590	7,398/ 28,005	49,567/ 22,486
1 AFT - 1 FWD	1,055/ 3,994	7,069/ 3,207	7,930/ 30,019	53,132/ 24,103
1 AFT - 2 FWD	1,587/ 6,007	10,633/ 4,823	8,462/ 32,032	56,696/ 25,719
2 AFT	984/ 3,725	6,593/ 2,991	7,859/ 29,750	52,656/ 23,887
2 AFT - 1 FWD	1,516/ 5,739	10,157/ 4,608	8,391/ 33,766	59,765/ 27,111
2 AFT - 2 FWD	2,048/ 7,753	13,722/ 6,225	8,923/ 33,778	59,785/ 27,121
3 AFT	1,513/ 5,727	10,137/ 4,598	8,388/ 31,752	56,200/ 25,494
3 AFT - 1 FWD	2,045/ 7,741	13,702/ 6,215	8,920/ 33,596	59,463/ 26,974
3 AFT - 2 FWD	2,577/ 9,755	17,266/ 7,832	9,452/ 35,780	63,329/ 28,728
3 AFT - 3 FWD	2,816/ 10,660	18,867/ 8,559	9,691/ 36,685	64,930/ 29,455
4 AFT	2,042/ 7,730	13,681/ 6,206	8,917/ 33,755	59,744/ 27,102
4 AFT - 1 FWD	2,574/ 9,744	17,246/ 7,823	9,449/ 35,769	63,309/ 28,719
4 AFT - 2 FWD	3,106/ 11,757	20,810/ 9,440	9,981/ 37,782	66,873/ 30,336
4 AFT - 3 FWD	3,345/ 12,662	22,412/ 10,166	10,220/ 38,687	68,475/ 31,062
4 AFT - 4 FWD	3,584/ 13,567	24,013/ 10,893	10,459/ 39,592	70,076/ 31,789

* Usable fuel at level attitude, fuel density = 6.7 pounds per U.S. Gallon

* Usable fuel at level attitude, fuel density = 0.8029 kilograms per liter

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Fuel -
System Description

AUX FUEL CELLS	GALLONS /LITERS	POUNDS/ KILOS*	TOTAL GALLONS/ LITERS (ALL TANKS)	TOTAL POUNDS/ KILOS* (ALL TANKS)
5 AFT	2,343/ 8,869	15,698/ 7,121	9,218/ 34,894	61,761/ 28,017
5 AFT - 1 FWD	2,875/ 10,883	19,263/ 8,738	9,750/ 36,908	65,326/ 29,634
5 AFT - 2 FWD	3,407/ 12,897	22,827/ 10,355	10,282/ 38,922	68,890/ 31,251
5 AFT - 3 FWD	3,646/ 13,802	24,428/ 11,082	10,521/ 39,827	70,491/ 31,978
5 AFT - 4 FWD	3,885/ 14,706	26,030/ 11,807	10,760/ 40,731	72,093/ 32,703

* Usable fuel at level attitude, fuel density = 6.7 pounds per U.S. Gallon

* Usable fuel at level attitude, fuel density = 0.8029 kilograms per liter

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

[BBJ-2]

AUX FUEL CELLS	GALLONS /LITERS	POUNDS/ KILOS*	TOTAL GALLONS/ LITERS (ALL TANKS)	TOTAL POUNDS/ KILOS* (ALL TANKS)
1 AFT	523/ 1,980	3,504/ 1,590	7,398/ 28,005	49,567/ 22,486
1 AFT - 1 FWD	1,055/ 3,994	7,069/ 3,207	7,930/ 30,019	53,132/ 24,103
2 AFT	984/ 3,725	6,593/ 2,991	7,859/ 29,750	52,656/ 23,887
2 AFT - 1 FWD	1,516/ 5,739	10,157/ 4,608	8,391/ 31,764	56,220/ 25,504
3 AFT	1,513/ 5,727	10,137/ 4,598	8,388/ 31,752	56,200/ 25,494
3 AFT - 1 FWD	2,045/ 7,741	13,702/ 6,215	8,920/ 33,766	59,765/ 27,111

* Usable fuel at level attitude, fuel density = 6.7 pounds per U.S. Gallon

* Usable fuel at level attitude, fuel density = 0.8029 kilograms per liter

3 AFT - 2 FWD	2,577/ 9,755	17,266/ 7,832	9,452/ 35,780	63,329/ 28,728
4 AFT	2,042/ 7,730	13,681/ 6,206	8,917/ 33,755	59,744/ 27,102
4 AFT - 1 FWD	2,574/ 9,744	17,246/ 7,823	9,449/ 35,769	63,309/ 28,719
4 AFT - 2 FWD	3,106/ 11,757	20,810/ 9,440	9,981/ 37,782	66,873/ 30,336
4 AFT - 3 FWD	3,638/ 13,771	24,375/ 11,057	10,513/ 39,796	70,438/ 31,953
5 AFT - 1 FWD	3,103/ 11,746	20,790/ 9,431	9,978/ 37,771	66,853/ 30,327
5 AFT - 2 FWD	3,635/ 13,760	24,355/ 11,048	10,510/ 39,785	70,418/ 31,944

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

Fuel -
System Description

[BBJ-3]


AUX FUEL CELLS	GALLONS /LITERS	POUNDS/ KILOS*	TOTAL GALLONS/ LITERS (ALL TANKS)	TOTAL POUNDS/ KILOS* (ALL TANKS)
3 AFT	1,513/ 5,727	10,137/ 4,598	8,388/ 31,752	56,200/ 25,494
3 AFT - 1 FWD	2,045/ 7,741	13,702/ 6,215	8,920/ 33,766	59,765/ 27,111
3 AFT - 2 FWD	2,577/ 9,755	17,266/ 7,832	9,452/ 35,780	63,329/ 28,728
4 AFT	2,042/ 7,730	13,681/ 6,206	8,917/ 33,755	59,744/ 27,102
4 AFT - 1 FWD	2,574/ 9,744	17,246/ 7,823	9,449/ 35,769	63,309/ 28,719
4 AFT - 2 FWD	3,106/ 11,757	20,810/ 9,440	9,981/ 37,782	66,873/ 30,336
4 AFT - 3 FWD	3,638/ 13,771	24,375/ 11,057	10,513/ 39,796	70,438/ 31,953
5 AFT - 1 FWD	3,103/ 11,746	20,790/ 9,431	9,978/ 37,771	66,853/ 30,327
5 AFT - 2 FWD	3,635/ 13,760	24,355/ 11,048	10,510/ 39,785	70,418/ 31,944
5 AFT - 3 FWD	4,167/ 15,774	30,934/ 12,665	11,042/ 41,799	76,997/ 33,561

* Usable fuel at level attitude, fuel density = 6.7 pounds per U.S. Gallon

* Usable fuel at level attitude, fuel density = 0.8029 kilograms per liter

Fuel Schematic

[Option - APU DC Fuel Pump]

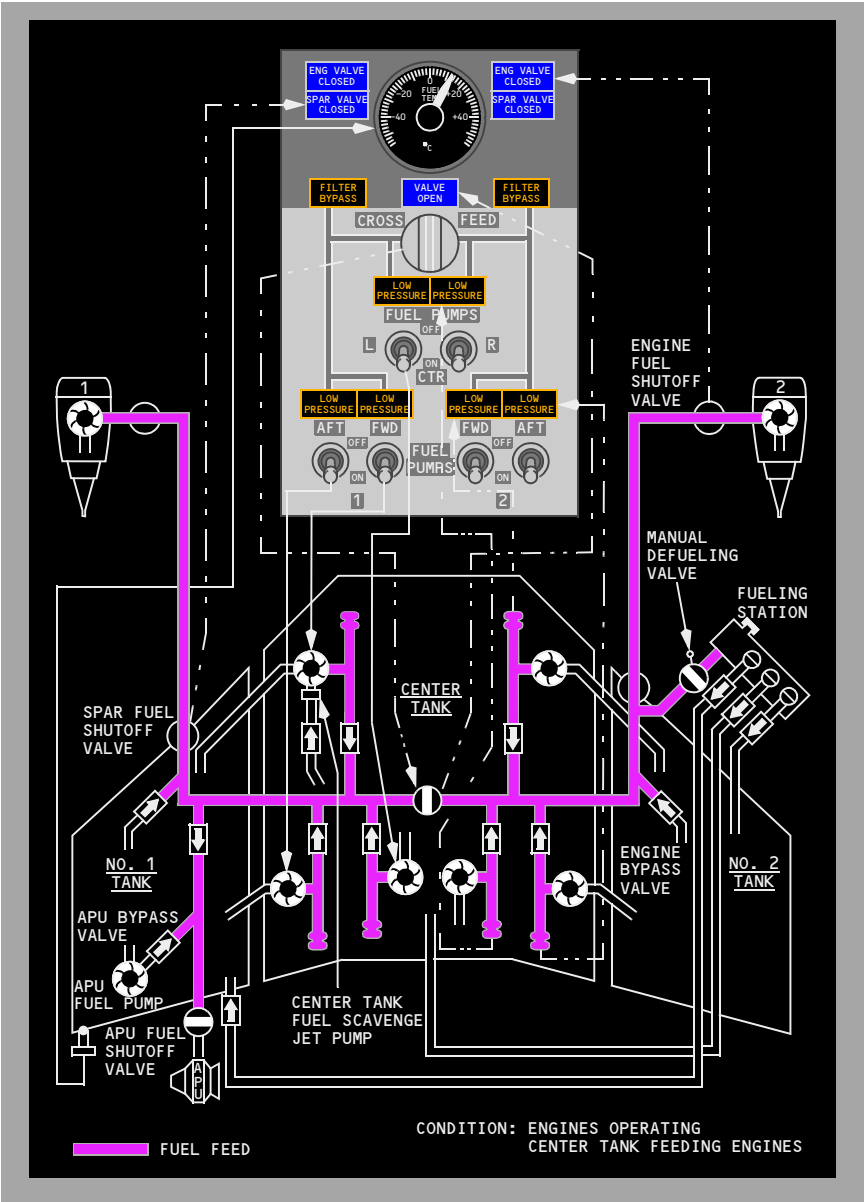


Intentionally
Blank

Hydraulics**Chapter 13****Table of Contents****Section 0**

Controls and Indicators	13.10
Hydraulic Panel	13.10.1
Hydraulic Indications	13.10.2
Flight Control Panel	13.10.3
System Description	13.20
Introduction	13.20.1
Hydraulic Power Distribution Schematic	13.20.1
A and B Hydraulic Systems	13.20.2
A and B Hydraulic System Pumps	13.20.3
System A Hydraulic Leak	13.20.3
System B Hydraulic Leak	13.20.4
Power Transfer Unit	13.20.4
Landing Gear Transfer Unit	13.20.4
Standby Hydraulic System	13.20.4
Automatic Operation	13.20.5
Standby Hydraulic System Schematic	13.20.6
Standby Hydraulic System Leak	13.20.7
Variations in Hydraulic Quantity Indications	13.20.7

Intentionally
Blank

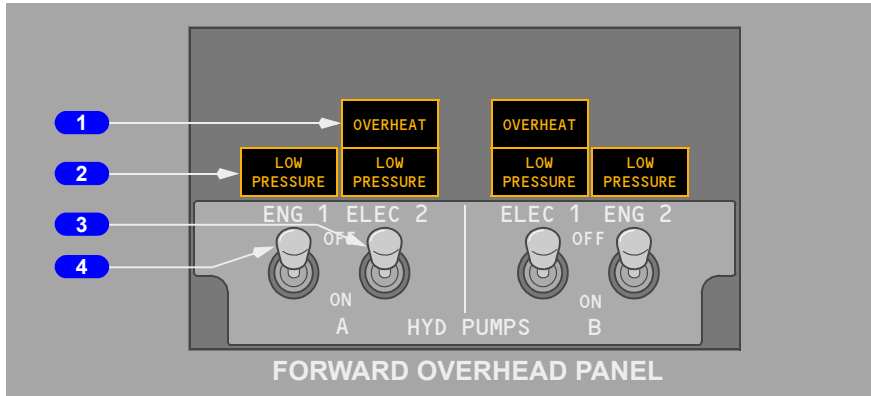Hydraulics
Controls and Indicators**Chapter 13**
Section 10**Hydraulic Panel****1 Electric Hydraulic Pump OVERHEAT Lights**

Illuminated (amber) – Hydraulic fluid used to cool and lubricate the corresponding electric motor driven pump has overheated or the pump itself has overheated.

2 Hydraulic Pump LOW PRESSURE Lights

Illuminated (amber) – output pressure of associated pump is low.

Note: When an engine fire switch is pulled, the low pressure light is deactivated.

3 ELECTRIC HYDRAULIC PUMPS Switches

ON – provides power to associated electric motor-driven pump.

OFF – electrical power removed from pump.

4 ENGINE HYDRAULIC PUMPS Switches


ON – de-energizes blocking valve in pump to allow pump pressure to enter system.

Note: Should remain ON at shutdown to prolong solenoid life.

OFF – energizes blocking valve to block pump output.

Hydraulic Indications

[Option - Over/Under display]

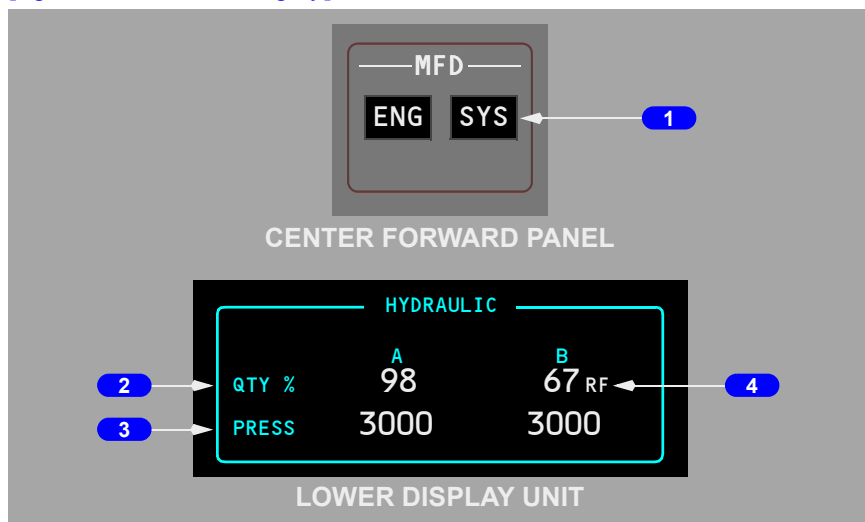

1 MFD System (SYS) Switch

Push – SYS

- displays hydraulic indications on lower DU; or the inboard DU if the MAIN PANEL DUs switch is placed to the INBD MFD position.
- second push removes indications from the respective DU.

2 HYDRAULIC System QUANTITY Indications (white)

Indicates digital percentage (0% to 106%) of hydraulic quantity.

Note: Quantity also displayed at each reservoir.

3 HYDRAULIC System PRESSURE Indications (white)

Indicates system pressure:

- Normal pressure – 3000 psi
- Maximum pressure – 3500 psi.

Note: When both pumps for a system are OFF, the indication may read hydraulic system reservoir pressure, normally less than 100 psi.


4 REFILL Indication (RF) (white)

Illuminated (white) – hydraulic quantity below 76%.

Note: Valid only when airplane is on ground with both engines shutdown or after landing with flaps up during taxi-in.

Flight Control Panel

[737 modified rudder - installed]

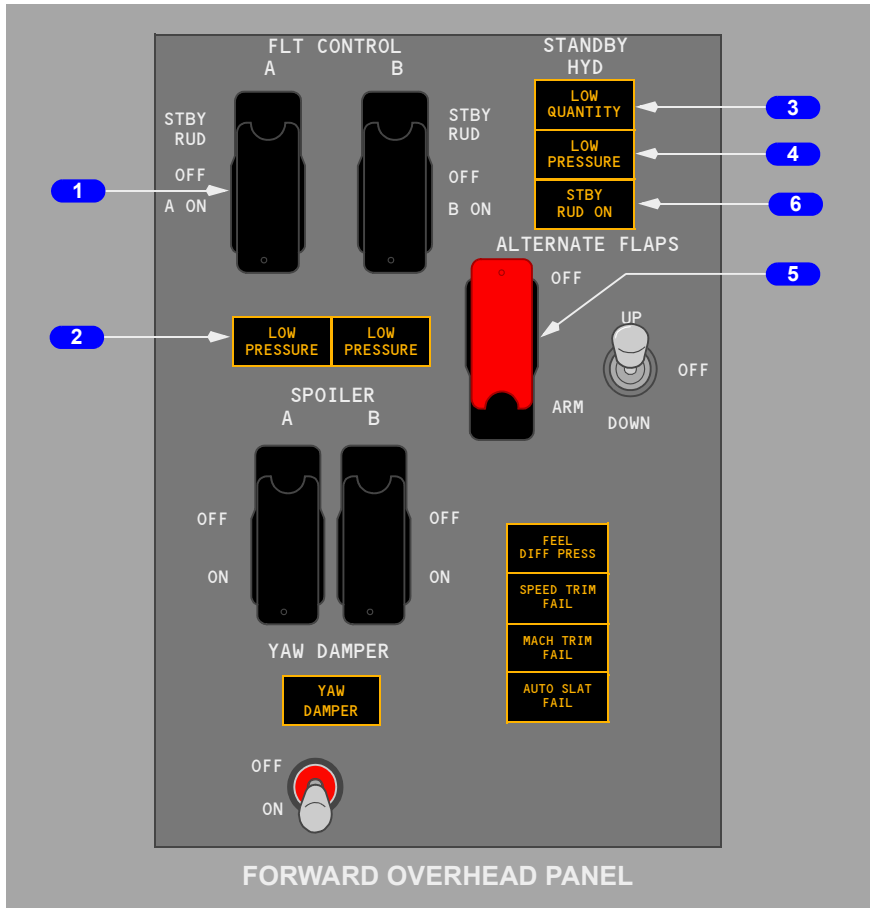

1 FLIGHT CONTROL Switches

STBY RUD – activates standby pump and opens standby rudder shutoff valve to pressurize standby rudder power control unit.

OFF – closes flight control shutoff valve isolating ailerons, elevators and rudder from associated hydraulic system pressure.

ON (guarded position) – normal operating position.

2 Flight Control LOW PRESSURE Lights

Illuminated (amber) –

- indicates low hydraulic system (A or B) pressure to ailerons, elevator and rudder
- deactivated when associated FLIGHT CONTROL switch is positioned to STBY RUD and standby rudder shutoff valve opens.

3 STANDBY HYDRAULIC LOW QUANTITY Light

Illuminated (amber) –

- indicates low quantity in standby hydraulic reservoir
- always armed.

4 STANDBY HYDRAULIC LOW PRESSURE Light

Illuminated (amber) –

- indicates output pressure of standby pump is low
- armed only when standby pump operation has been selected or automatic standby function is activated.

5 ALTERNATE FLAPS Master Switch

OFF (guarded position) – normal operating position.

ARM – closes trailing edge flap bypass valve, activates standby pump, and arms ALTERNATE FLAPS position switch.

6 STBY RUD ON Light

[737 modified rudder - installed]

Illuminated (amber) - indicates the standby hydraulic system is commanded on to pressurize the standby rudder power control unit.

Hydraulics System Description

Chapter 13 Section 20

Introduction


The airplane has three hydraulic systems: A, B and standby. The standby system is used if system A and/or B pressure is lost. The hydraulic systems power the following airplane systems:


- flight controls
- leading edge flaps and slats
- trailing edge flaps
- landing gear
- wheel brakes
- nose wheel steering
- thrust reversers
- autopilots.

Either A or B hydraulic system can power all flight controls with no decrease in airplane controllability.

Each hydraulic system has a fluid reservoir located in the main wheel well area. System A and B reservoirs are pressurized by bleed air. The standby system reservoir is connected to the system B reservoir for pressurization and servicing. Pressurization of all reservoirs ensures positive fluid flow to all hydraulic pumps.

Hydraulic Power Distribution Schematic

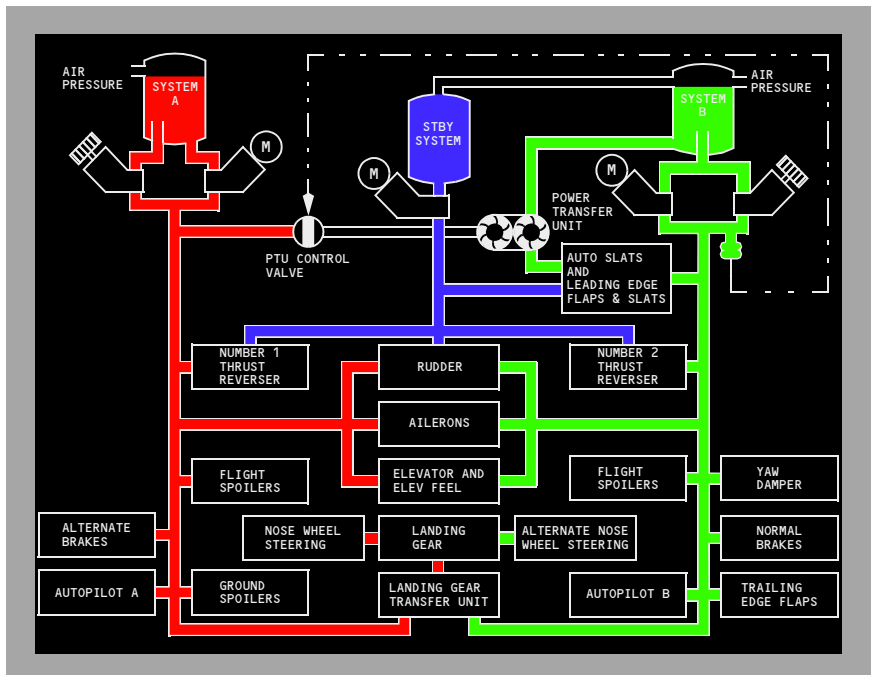

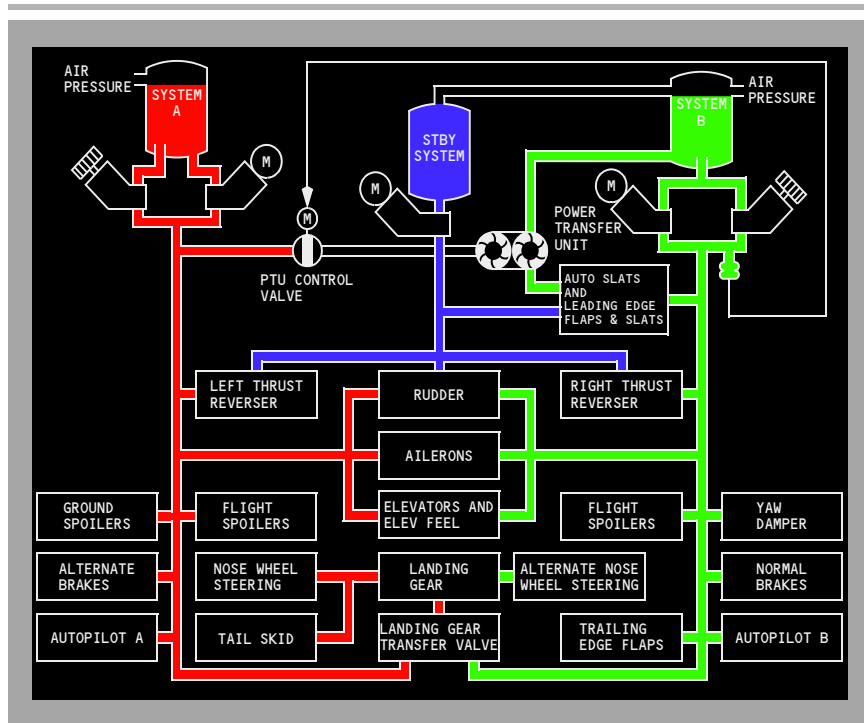

A and B Hydraulic Systems

Components powered by hydraulic systems A and B are:

System A

- ailerons
- rudder
- elevator and elevator feel
- flight spoilers (two on each wing)
- ground spoilers
- alternate brakes
- No. 1 thrust reverser
- autopilot A
- normal nose wheel steering
- landing gear
- power transfer unit (PTU)

System B

- ailerons
- rudder
- elevator and elevator feel
- flight spoilers (two on each wing)
- leading edge flaps and slats
- normal brakes
- No. 2 thrust reverser
- autopilot B
- alternate nose wheel steering
- landing gear transfer unit.
- autoslats
- yaw damper
- trailing edge flaps.

A and B Hydraulic System Pumps

Both A and B hydraulic systems have an engine-driven pump and an AC electric motor-driven pump. The system A engine-driven pump is powered by the No. 1 engine and the system B engine-driven pump is powered by the No. 2 engine. An engine-driven hydraulic pump supplies approximately 4 times the fluid volume of the related electric motor-driven hydraulic pump.

The ENG 1 (system A) or ENG 2 (system B) pump ON/OFF switch controls the engine-driven pump output pressure. Positioning the switch to OFF isolates fluid flow from the system components. However, the engine-driven pump continues to rotate as long as the engine is operating. Pulling the engine fire switch shuts off the fluid flow to the engine-driven pump and deactivates the related LOW PRESSURE light.

[Option - Abex electric motor driven hydraulic pumps]

The ELEC 2 (system A) or ELEC 1 (system B) pump ON/OFF switch controls the related electric motor-driven pump. If an overheat is detected in either system, the related OVERHEAT light illuminates.

Note: Loss of the system A engine-driven hydraulic pump, and a heavy demand on system A, may result in an intermittent LOW PRESSURE light for the remaining electric motor-driven hydraulic pump. The system A flight controls LOW PRESSURE light, Master Caution light, and the FLT CONT and HYD system annunciator lights also illuminate.

Hydraulic fluid used for cooling and lubrication of the pumps passes through a heat exchanger before returning to the reservoir. The heat exchanger for system A is located in main fuel tank No. 1 and for system B is in main fuel tank No. 2.

CAUTION: Minimum fuel for ground operation of electric motor-driven pumps is 1675 Lbs in the related main tank.

Pressure switches, located in the engine-driven and electric motor-driven pump output lines, send signals to illuminate the related LOW PRESSURE light if pump output pressure is low. A check valve, located in each output line, isolates the related pump from the system. The related system pressure transmitter sends the combined pressure of the engine-driven and electric motor-driven pump to the related hydraulic system pressure indication.

System A Hydraulic Leak

If a leak develops in the engine-driven pump or its related lines, a standpipe in the reservoir prevents a total system fluid loss. With fluid level at the top of the standpipe, the reservoir quantity displayed indicates approximately 20% full. System A hydraulic pressure is maintained by the electric motor-driven pump.

If a leak develops in the electric motor-driven pump or its related lines, or components common to both the engine and electric motor-driven pumps, the quantity in the reservoir steadily decreases to zero and all system pressure is lost.

System B Hydraulic Leak

If a leak develops in either pump, line or component of system B, the quantity decreases until it indicates approximately zero and system B pressure is lost. The system B reservoir has one standpipe which supplies fluid to both the engine-driven pump and the electric motor-driven pump. However, with fluid level at the top of the standpipe, fluid remaining in the system B reservoir is sufficient for power transfer unit operation.

A leak in system B does not affect the operation of the standby hydraulic system.

Power Transfer Unit

The purpose of the PTU is to supply the additional volume of hydraulic fluid needed to operate the autoslats and leading edge flaps and slats at the normal rate when system B engine-driven hydraulic pump volume is lost. The PTU uses system A pressure to power a hydraulic motor-driven pump, which pressurizes system B hydraulic fluid. The PTU operates automatically when all of the following conditions exist:

- system B engine-driven pump hydraulic pressure drops below limits
- airborne
- flaps are less than 15 but not up.

Landing Gear Transfer Unit

The purpose of the landing gear transfer unit is to supply the volume of hydraulic fluid needed to raise the landing gear at the normal rate when system A engine-driven pump volume is lost. The system B engine-driven pump supplies the volume of hydraulic fluid needed to operate the landing gear transfer unit when all of the following conditions exist:

- airborne
- No. 1 engine RPM drops below a limit value
- landing gear lever is positioned UP
- either main landing gear is not up and locked.

Standby Hydraulic System

The standby hydraulic system is provided as a backup if system A and/or B pressure is lost. The standby system can be activated manually or automatically and uses a single electric motor-driven pump to power:

- thrust reversers
- rudder

- leading edge flaps and slats (extend only)
- standby yaw damper.

Manual Operation

Positioning either FLT CONTROL switch to STBY RUD:

- activates the standby electric motor–driven pump
- shuts off the related hydraulic system pressure to ailerons, elevators and rudder by closing the flight control shutoff valve
- opens the standby rudder shutoff valve
- deactivates the related flight control LOW PRESSURE light when the standby rudder shutoff valve opens
- allows the standby system to power the rudder and thrust reversers.

[737 modified rudder- installed]

- illuminates the STBY RUD ON, Master Caution, and Flight Controls (FLT CONT) lights.

Positioning the ALTERNATE FLAPS master switch to ARM, (refer to Chapter 9, Flight Controls for a more complete explanation):

- activates the standby electric motor–driven pump
- closes the trailing edge flap bypass valve
- arms the ALTERNATE FLAPS position switch
- allows the standby system to power the leading edge flaps and slats and thrust reversers.

Automatic Operation

Automatic operation is initiated when the following conditions exist:

- loss of system A or B, and
- flaps extended, and
- airborne, or wheel speed greater than 60 kts, and
- FLT CONTROL switch A or B Hydraulic System ON

[737 modified rudder- installed]

OR:

- the main PCU Force Flight Monitor (FFM) trips


Automatic operation:

- activates the standby electric motor–driven pump
- opens the standby rudder shutoff valve
- allows the standby system to power the rudder and thrust reversers.

[737 modified rudder- installed]

- illuminates the STBY RUD ON, Master Caution, and Flight Controls (FLT CONT) lights.

[737 modified rudder - installed]



Standby Hydraulic System Leak

If a leak occurs in the standby system, the standby reservoir quantity decreases to zero. The LOW QUANTITY light illuminates when the standby reservoir is approximately half empty. System B continues to operate normally, however, the system B reservoir fluid level indication decreases and stabilizes at approximately 72% full.

Variations in Hydraulic Quantity Indications

During normal operations, variations in hydraulic quantity indications occur when:

- the system becomes pressurized after engine start
- raising or lowering the landing gear or leading edge devices
- cold soaking occurs during long periods of cruise.

These variations have little effect on systems operation.

If the hydraulic system is not properly pressurized, foaming can occur at higher altitudes. Foaming can be recognized by pressure fluctuations and the blinking of the related LOW PRESSURE lights. The MASTER CAUTION and HYD annunciator lights may also illuminate momentarily.

Intentionally
Blank

**Landing Gear
Table of Contents****Chapter 14
Section 0**


Controls and Indicators	14.10
Landing Gear Panel	14.10.1
Landing Gear Indicator Lights	14.10.2
Manual Gear Extension	14.10.3
Autobrake and Antiskid Controls	14.10.4
Parking Brake	14.10.5
Hydraulic Brake Pressure Indicator	14.10.6
Rudder/Brake Pedals	14.10.6
Nose Wheel Steering Switch	14.10.7
Nose Wheel Steering Wheel	14.10.7
System Description	14.20
Introduction	14.20.1
Landing Gear Operation	14.20.1
Landing Gear Retraction	14.20.1
Landing Gear Extension	14.20.2
Landing Gear Manual Extension	14.20.2
Nose Wheel Steering	14.20.3
Brake System	14.20.3
Normal Brake System	14.20.3
Alternate Brake System	14.20.3
Brake Accumulator	14.20.3
Antiskid Protection	14.20.4
Autobrake System	14.20.4
Parking Brake	14.20.6
Air/Ground System	14.20.6
Air/Ground System Logic Table	14.20.6

Intentionally
Blank

Landing Gear Controls and Indicators

Chapter 14 Section 10

Landing Gear Panel

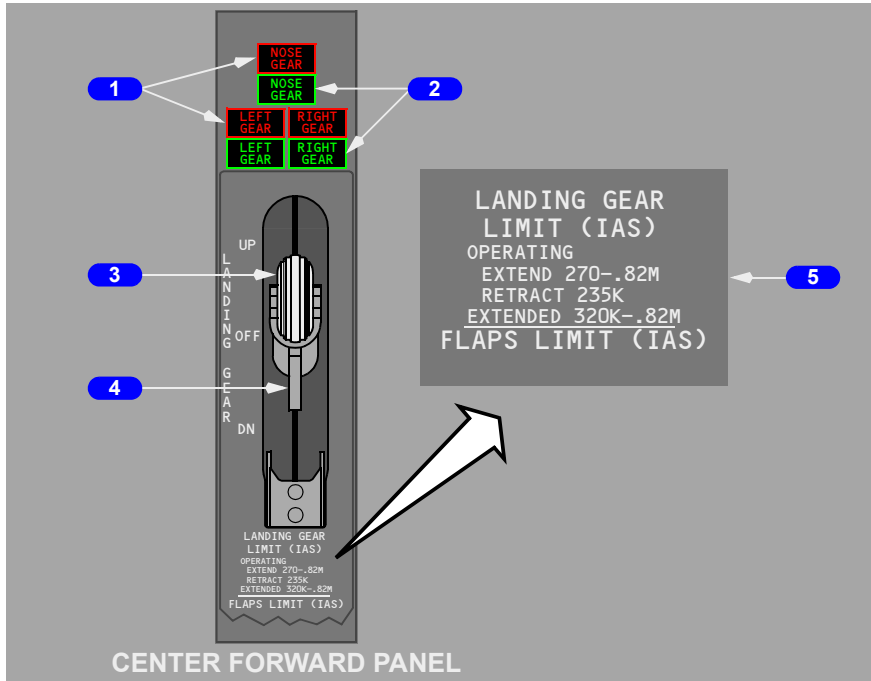

1 Landing Gear Indicator Lights (top)

Illuminated (red) –

- landing gear is not down and locked (with either or both forward thrust levers retarded to idle, and below 800 feet AGL).
- related landing gear is in disagreement with LANDING GEAR lever position (in transit or unsafe).

Extinguished -

- landing gear is up and locked with landing gear lever UP or OFF
- landing gear is down and locked with landing gear lever DN.

2 Landing Gear Indicator Lights (bottom)

Illuminated (green) – related gear down and locked.

Note: Landing gear warning horn is deactivated with all gear down and locked.

Note: Landing gear is down and locked as long as one green landing gear indicator light (center panel or overhead panel) for each gear is illuminated.

Extinguished – landing gear is not down and locked.

3 LANDING GEAR Lever

UP – landing gear retract.

OFF – hydraulic pressure is removed from landing gear system.

DN – landing gear extend.

4 Override Trigger


Allows LANDING GEAR lever to be raised, bypassing the landing gear lever lock.

5 LANDING GEAR LIMIT Speed Placard

Indicates maximum speed while operating landing gear and after gear extension.

Landing Gear Indicator Lights

This is a redundant but separate set of landing gear indicator circuits and lights.

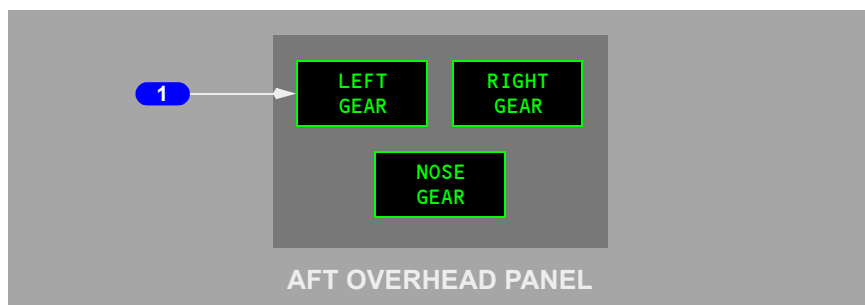

1 Landing Gear Indicator Lights (overhead)


Illuminated (green) – related gear down and locked.

Note: Landing gear warning horn is deactivated with all gear down and locked.

Note: Landing gear is down and locked as long as one green landing gear indicator light (center panel or overhead panel) for each gear is illuminated.

Extinguished – landing gear is not down and locked.

Manual Gear Extension

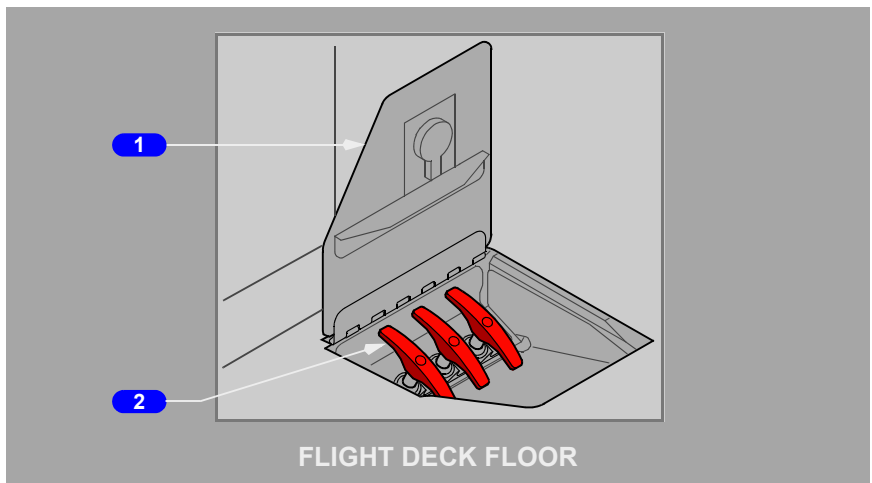

1 Manual Extension Access Door

Open –


- manual landing gear extension is possible with landing gear lever in any position
- normal landing gear extension is still possible if hydraulic system A pressure is available
- landing gear retraction is disabled.

Closed – landing gear operate normally.

2 Manual Gear Extension Handles

Right main, nose, left main – Each landing gear uplock is released when related handle is pulled to its limit, approximately 24 inches (61 cm).

Autobrake and Antiskid Controls

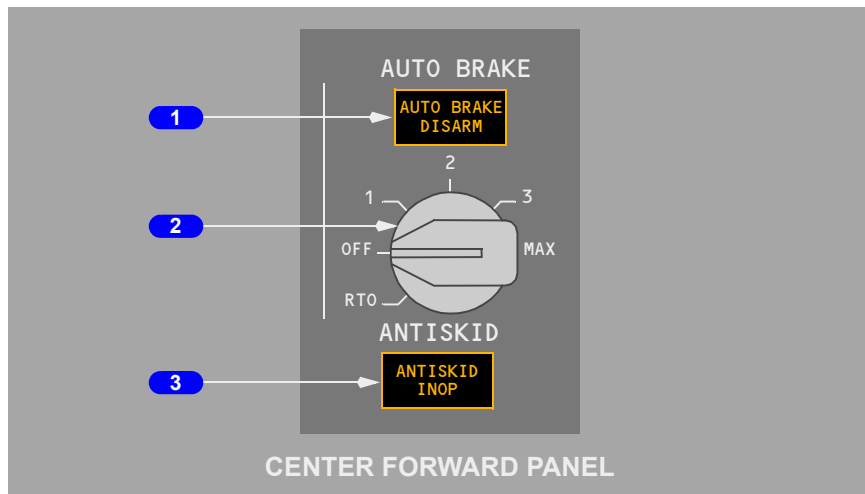

1 AUTO BRAKE DISARM Light

Illuminated (amber) –

- SPEED BRAKE lever moved to down detent during RTO or landing
- manual brakes applied during RTO or landing
- thrust lever(s) advanced during RTO or landing
 - except during first 3 seconds after touchdown for landing
- landing made with RTO selected
- RTO mode selected on ground
 - illuminates for one to two seconds then extinguishes
- a malfunction exists in automatic braking system.

Extinguished –

- AUTO BRAKE select switch set to OFF
- autobrake armed.

2 AUTO BRAKE Select Switch

OFF – autobrake system deactivated.

1, 2, 3, or MAX –


- selects desired deceleration rate for landing
- switch must be pulled out to select MAX deceleration.

RTO – automatically applies maximum brake pressure when thrust levers are retarded to idle at or above 90 knots.

3 Antiskid Inoperative (ANTISKID INOP) Light

Illuminated (amber) – a system fault is detected by antiskid monitoring system.
Extinguished – antiskid system operating normally.

Parking Brake

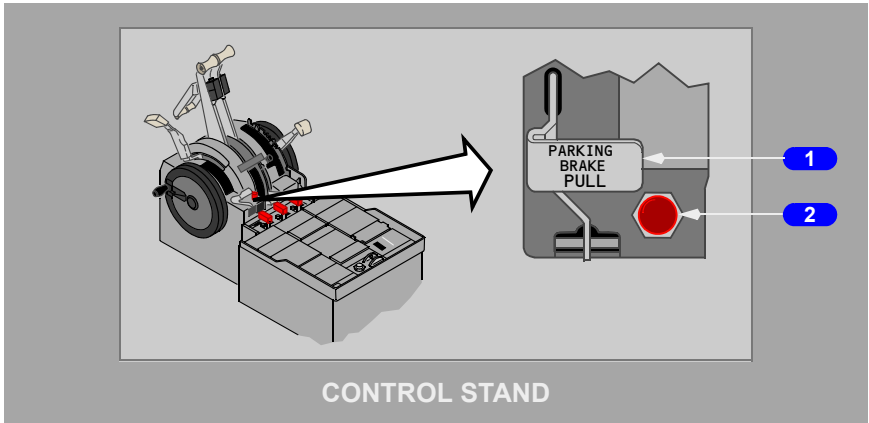

1 PARKING BRAKE Lever

Forward – parking brakes released.


Aft – sets parking brakes when either Captain's or First Officer's brake pedals are fully depressed.

2 Parking Brake Warning Light

Illuminated (red) – parking brake is set (light operates from battery power).

Extinguished – parking brake is released.

Hydraulic Brake Pressure Indicator

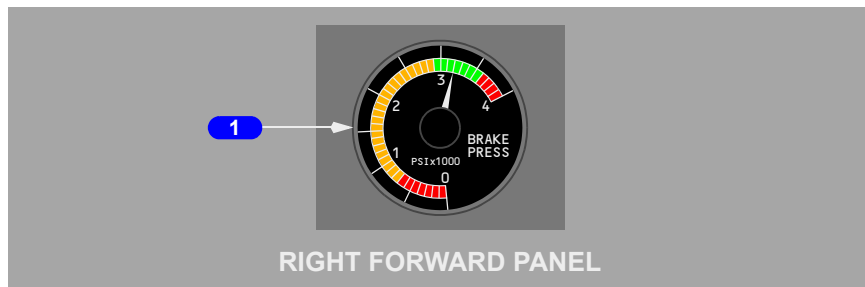


1 Hydraulic Brake Pressure (HYD BRAKE PRESS) Indicator

Indicates brake accumulator pressure:

- normal pressure – 3000 psi
- maximum pressure – 3500 psi
- normal precharge – 1000 psi.

Rudder/Brake Pedals

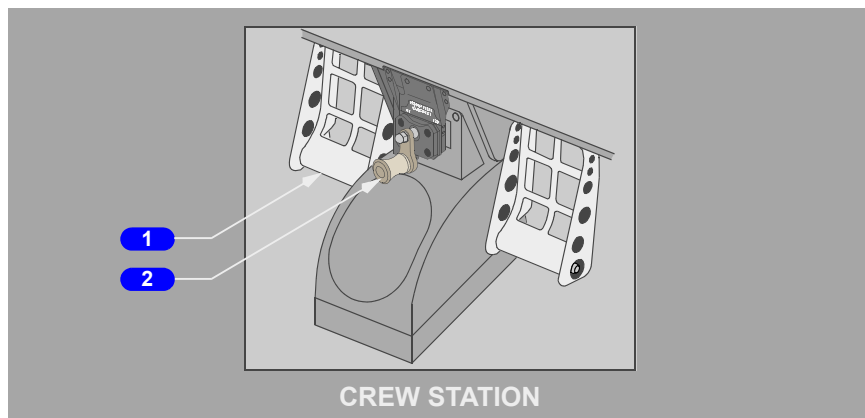

1 Rudder/Brake Pedals

Push full pedal – turns nose wheel up to 7 degrees in either direction.

Push top of pedal only – activates wheel brakes.


Refer to Chapter 9 Flight Controls for rudder description.

2 RUDDER PEDAL ADJUSTMENT Crank

AFT (counter-clockwise) – adjusts rudder pedals aft.

FWD (clockwise) – adjusts rudder pedals forward.

Nose Wheel Steering Switch

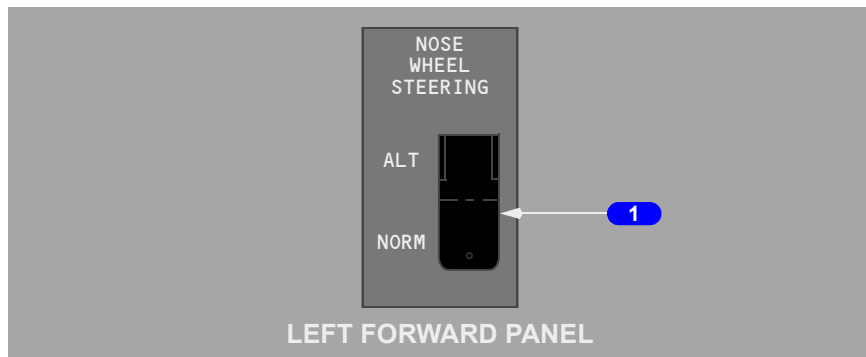


1 NOSE WHEEL STEERING Switch

ALT – hydraulic system B provides power for nose wheel steering.

NORM (guarded position) – hydraulic system A provides power for nose wheel steering.

Nose Wheel Steering Wheel

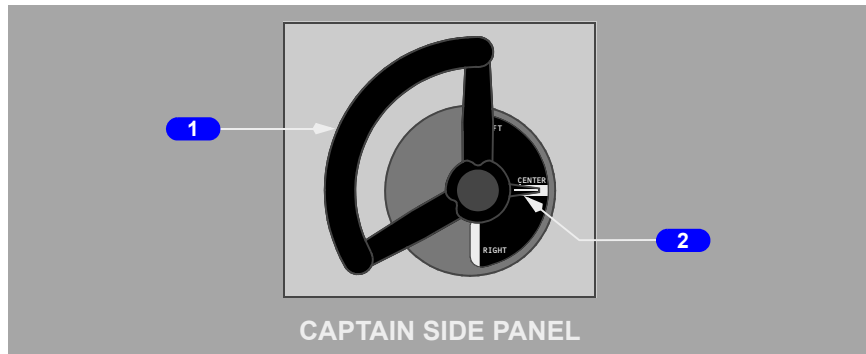

1 Nose Wheel Steering Wheel

Rotate –

- turns nose wheel up to 78 degrees in either direction.
Note: Refer to Chapter 1 for effective steering angle and turning radius.
- overrides rudder pedal steering.

2 Nose Wheel Steering Indicator

LEFT – indicates nose wheel steering displacement left of center position.

CENTER – normal straight ahead position.

RIGHT – indicates nose wheel steering displacement right of center position.

**Landing Gear
System Description****Chapter 14
Section 20****Introduction**

The airplane has two main landing gear and a single nose gear. Each main gear is a conventional two-wheel landing gear unit. The nose gear is a conventional steerable two-wheel unit.

Hydraulic power for retraction, extension, and nose wheel steering is normally supplied by hydraulic system A. A manual landing gear extension system and an alternate source of hydraulic power for nose wheel steering are also provided.

The normal brake system is powered by hydraulic system B. The alternate brake system is powered by hydraulic system A. Antiskid protection is provided on both brake systems, but the autobrake system is available only with the normal brake system.

Landing Gear Operation

The landing gear are normally controlled by the LANDING GEAR lever. On the ground, a landing gear lever lock, prevents the LANDING GEAR lever from moving to the up position. An override trigger in the lever may be used to bypass the landing gear lever lock. In flight, the air/ground system energizes a solenoid which opens the lever lock.

Landing Gear Retraction

When the LANDING GEAR lever is moved to UP, the landing gear begins to retract. During retraction, the brakes automatically stop rotation of the main gear wheels. After retraction, the main gear are held in place by mechanical uplocks. Rubber seals and oversized hubcaps complete the fairing of the outboard wheels.

The nose wheels retract forward into the wheel well and nose wheel rotation is stopped by snubbers. The nose gear is held in place by an overcenter lock and enclosed by doors which are mechanically linked to the gear.

Hydraulic pressure is removed from the landing gear system with the LANDING GEAR lever in the OFF position.

If a main landing gear tire is damaged during takeoff, it is possible that braking of the main gear wheels during retraction may be affected. A spinning tire with a loose tread must be stopped prior to entering the wheel well or it can cause damage to wheel well components. When a spinning tire with loose tread impacts a fitting in the wheel well ring opening, that gear stops retracting and free falls back to the down position. The affected gear cannot be retracted until the fitting is replaced.

Landing Gear Transfer Unit

Hydraulic system B pressure is available for raising the landing gear through the landing gear transfer unit. Hydraulic system B supplies the volume of hydraulic fluid required to raise the landing gear at the normal rate when all of the following conditions exist:

- airborne
- No. 1 engine RPM drops below a limit value
- LANDING GEAR lever is positioned UP
- either main landing gear is not up and locked.

Landing Gear Extension

When the LANDING GEAR lever is moved to DN, hydraulic system A pressure is used to release the uplocks. The landing gear extends by hydraulic pressure, gravity and air loads. Overcenter mechanical and hydraulic locks hold the gear at full extension. The nose wheel doors remain open when the gear is down.

Landing Gear Manual Extension

If hydraulic system A pressure is lost, the manual extension system provides another means of landing gear extension. Manual gear releases on the flight deck are used to release uplocks that allow the gear to free-fall to the down and locked position. The forces that pull the gear down are gravity and air loads.

With the manual extension access door open:

- manual landing gear extension is possible with the LANDING GEAR lever in any position
- normal landing gear extension is possible if hydraulic system A pressure is available
- landing gear retraction is disabled.

Following a manual extension, the landing gear may be retracted normally by accomplishing the following steps:

- close the manual extension access door
- move the LANDING GEAR lever to DOWN with hydraulic system A pressure available, and then
- position the LANDING GEAR lever to UP.

Nose Wheel Steering

Nose wheel steering is available when the nose gear is in the down position and compressed by weight of the airplane. Positioning the landing gear control lever to down makes system A hydraulic pressure available to the steering metering valve. Alternate nose wheel steering can be activated to provide system B pressure to the nose wheels when the NOSE WHEEL STEERING switch is placed to ALT, normal quantity is in the system B reservoir, and the airplane is on the ground. In the event of a hydraulic leak downstream of the Landing Gear Transfer Unit, resulting in a loss of hydraulic system B fluid in the reservoir, a sensor closes the Landing Gear Transfer Valve and alternate steering will be lost.

Primary steering is controlled through the nose wheel steering wheel. Limited steering control is available through the rudder pedals. A pointer on the nose steering wheel assembly shows nose wheel steering position relative to the neutral setting. Rudder pedal steering is deactivated as the nose gear strut extends.

A lockout pin may be installed in the towing lever to depressurize nose wheel steering. This allows airplane pushback or towing without depressurizing the hydraulic systems.

Brake System

Each main gear wheel has a multi-disc hydraulic powered brake. The brake pedals provide independent control of the left and right brakes. The nose wheels have no brakes. The brake system includes:

- normal brake system
- alternate brake system
- brake accumulator
- antiskid protection
- autobrake system
- parking brake

Normal Brake System

The normal brake system is powered by hydraulic system B.

Alternate Brake System

The alternate brake system is powered by hydraulic system A. If hydraulic system B is low or fails, hydraulic system A automatically supplies pressure to the alternate brake system.

Brake Accumulator

The brake accumulator is pressurized by hydraulic system B. If both normal and alternate brake system pressure is lost, trapped hydraulic pressure in the brake accumulator can still provide several braking applications or parking brake application.

Antiskid Protection

Antiskid protection is provided in the normal and alternate brake systems.

The normal brake hydraulic system provides each main gear wheel with individual antiskid protection. When the system detects a skid, the associated antiskid valve reduces brake pressure until skidding stops. The alternate brake hydraulic system works similar to the normal system however antiskid protection is applied to main gear wheel pairs instead of individual wheels.

Both normal and alternate brake systems provide skid, locked wheel, touchdown and hydroplane protection.

Antiskid protection is available even with loss of both hydraulic systems.

Autobrake System

The autobrake system uses hydraulic system B pressure to provide maximum deceleration for rejected takeoff and automatic braking at preselected deceleration rates immediately after touchdown. The system operates only when the normal brake system is functioning. Antiskid system protection is provided during autobrake operation.

Rejected Takeoff (RTO)

The RTO mode can be selected only when on the ground. Upon selection, the AUTO BRAKE DISARM light illuminates for one to two seconds and then extinguishes, indicating that an automatic self-test has been successfully accomplished.

To arm the RTO mode prior to takeoff the following conditions must exist:

- airplane on the ground
- antiskid and autobrake systems operational
- AUTO BRAKE select switch positioned to RTO
- wheel speed less than 60 knots
- forward thrust levers positioned to IDLE.

With RTO selected, if the takeoff is rejected prior to wheel speed reaching 90 knots autobraking is not initiated, the AUTO BRAKE DISARM light does not illuminate and the RTO autobrake function remains armed. If the takeoff is rejected after reaching a wheel speed of 90 knots, maximum braking is applied automatically when the forward thrust levers are retarded to IDLE.

The RTO mode is automatically disarmed when both air/ground systems indicate the air mode. The AUTO BRAKE DISARM light does not illuminate and the AUTO BRAKE select switch remains in the RTO position. To reset or manually disarm the autobrake system, position the selector to OFF. If a landing is made with RTO selected (AUTO BRAKE select switch not cycled through OFF), no automatic braking action occurs and the AUTO BRAKE DISARM light illuminates two seconds after touchdown.

Landing

When a landing autobrake selection is made, the system performs a turn-on–self–test. If the turn-on–self–test is not successful, the AUTO BRAKE DISARM light illuminates and the autobrake system does not arm.

Four levels of deceleration can be selected for landing. However, on dry runways, the maximum autobrake deceleration rate in the landing mode is less than that produced by full pedal braking.

After landing, autobrake application begins when:

- both forward thrust levers are retarded to IDLE
- the main wheels spin-up.

Note: Landing autobrake settings may be selected after touchdown prior to decelerating through 30 kts of ground speed. Braking initiates immediately if the above conditions are met.

To maintain the selected landing deceleration rate, autobrake pressure is reduced as other controls, such as thrust reversers and spoilers, contribute to total deceleration. The deceleration level can be changed (without disarming the system) by rotating the selector. The autobrake system brings the airplane to a complete stop unless the braking is terminated by the pilot.

Autobrake – Disarm

The pilots may disarm the autobrake system by moving the selector switch to the OFF position. This action does not cause the AUTO BRAKE DISARM light to illuminate. After braking has started, any of the following pilot actions disarm the system immediately and illuminate the AUTO BRAKE DISARM light:

- moving the SPEED BRAKE lever to the down detent
- advancing the forward thrust lever(s), except during the first 3 seconds after touchdown for landing
- applying manual brakes.

Parking Brake

The parking brake can be set with either A or B hydraulic systems pressurized. If A and B hydraulic systems are not pressurized, parking brake pressure is maintained by the brake accumulator. Accumulator pressure is shown on the HYD BRAKE PRESS indicator.

The parking brake is set by depressing both brake pedals fully, while simultaneously pulling the PARKING BRAKE lever up. This mechanically latches the pedals in the depressed position and commands the parking brake valve to close.

The parking brake is released by depressing the pedals until the PARKING BRAKE lever releases. A fault in the parking brake system may cause the ANTISKID INOP light to illuminate.

The TAKEOFF CONFIG lights illuminate and the takeoff configuration warning horn sounds if either forward thrust lever is advanced for takeoff with the parking brake set.

Air/Ground System

In flight and ground operation of various airplane systems are controlled by the air/ground system.

The system receives air/ground logic signals from six sensors, two on each landing gear. These signals are used to configure the airplane systems to the appropriate air or ground status.

Air/Ground System Logic Table

SYSTEMS	NORMAL INFLIGHT OPERATION	NORMAL ON GROUND OPERATION	REFER TO CH
Emergency Exit Doors	Flight locks engaged when either engine N2 is more than 50% and 3 or more Entry/Service doors are closed.	Flight locks disengaged when either thrust lever is set below approximately 53 degrees.	1
Pack Valves	With one pack operating, regulates to high flow with flaps up.	With one pack operating, regulates to high flow only when pack is operating from the APU and both engine bleed switches are OFF.	2
Pressurization	Allows programmed pressurization in the automatic modes.	Allows pressurization only at high power settings.	2

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

**Landing Gear -
System Description**

SYSTEMS	NORMAL INFLIGHT OPERATION	NORMAL ON GROUND OPERATION	REFER TO CH
Ram Air	Ram Air fans operate whenever air conditioning packs operate.	Ram Air fans operate whenever air conditioning packs operate. Deflectors are extended.	2
Wing Anti-ice	Control valves open when switch is ON. Thrust setting and duct temperature logic is bypassed.	With switch ON, valves cycle open and closed. Switch trips to OFF at lift-off.	3
Autothrottle	Enables go-around below 2000 ft radio altitude.	Disengaged 2 seconds after landing. Takeoff mode enabled.	4
TO/GA switch	Flight director engages go-around mode.	Flight director engages takeoff mode.	4
ACARS	Sends out signal on strut extension for takeoff signal.	Sends out signal on strut compression for landing signal.	5
Voice Recorder	Prevents tape erasure.	Allows tape erasure when parking brake is set.	5
Engine Idle Control	Enables minimum flight idle.	Enables minimum ground idle.	7
Thrust Reverser	Thrust reverse disabled.	Thrust reverse enabled.	7
APU Fire Horn	Wheel well horn disabled.	Wheel well horn enabled.	8
Cargo Fire Protection	Third extinguishing bottle timer enabled.	Third extinguishing bottle timer disabled.	8
Speed Brake Lever Actuator	Can be armed to raise ground spoilers for landing.	Activates SPEED BRAKE lever on landing if armed. Rejected take-off feature available. Drives to DOWN when thrust lever advanced.	9
Auto Slat	System enabled with flaps 1, 2, or 5 selected. PTU available if system B pressure is lost.	System disabled.	9

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

SYSTEMS	NORMAL INFIGHT OPERATION	NORMAL ON GROUND OPERATION	REFER TO CH
Flight Recorder	Operates anytime electrical power is available.	Operates anytime electrical power is available and either engine is operating.	10
FMC	FMC position updated from GPS, DME or VOR/DME.	FMC position updated from GPS.	11
Auxiliary Fuel	Bleed air pressurization of auxiliary fuel tanks - ENABLED. Automatic display of MAINT messages inhibited.	Bleed air pressurization of auxiliary fuel tanks - DISABLED, unless GRD TRANSFER switch - ON. MAINT messages display automatically.	12
Standby Hydraulic	Pump automatic operation with flaps extended and A or B pressure lost.	Wheel speed must be greater than 60 knots for automatic operation.	13
Antiskid	Releases normal or alternate brakes for touchdown protection.	Allows normal antiskid braking after wheel spin-up.	14
Autobrake	Allows selection of landing mode.	RTO mode available and landing mode may be selected after touchdown if wheel speed is greater than 30 knots.	14
Landing Gear Lever Lock	Lever lock solenoid released.	Lever lock solenoid latched.	14
Landing Gear Transfer Unit	Enabled.	Disabled.	14
Stall Warning	Enabled.	Disabled.	15
Takeoff Warning	Disabled.	Enabled.	15

Warning Systems**Chapter 15****Table of Contents****Section 0**


Controls and Indicators	15.10
Fire Warning and Master Caution System	15.10.1
Proximity Switch Electronic Unit Light	15.10.2
Takeoff Configuration and Cabin Altitude Warning Lights . . .	15.10.3
Mach/Airspeed Warning and Stall Warning Test Switches. . . .	15.10.4
Landing Gear Warning Cutout Switch.	15.10.5
Altitude Alert	15.10.6
Ground Proximity Warning System (GPWS)	15.10.7
GPWS Controls	15.10.7
Terrain Display	15.10.9
Predictive Windshear Display and Annunciations.	15.10.11
TCAS Controls (Transponder Panel)	15.10.12
System Description	15.20
Introduction	15.20.1
Master Fire Warning Lights	15.20.2
Master Caution Lights	15.20.2
System Annunciator Lights	15.20.2
Warning Systems	15.20.5
Intermittent Cabin Altitude/Configuration Warning	15.20.5
Landing Gear Configuration Warnings	15.20.6
Proximity Switch Electronic Unit (PSEU)	15.20.7
Mach/Airspeed Warning System	15.20.7
Stall Warning System	15.20.8
Altitude Alerting System	15.20.9
Acquisition Alerting	15.20.9
Deviation Alerting	15.20.9
Altitude Alert Profile	15.20.10
Ground Proximity Alerts	15.20.10
Look-Ahead Terrain Alerting	15.20.11
Radio Altitude Based Alerts	15.20.13

Obstacle Alerts	15.20.13
Windshear Alerts	15.20.14
Windshear Warning (Airplane in Windshear)	15.20.14
Predictive Windshear Alerts	15.20.15
Bank Angle Alert	15.20.17
Approach Callouts	15.20.17
Radio Altitude Callouts	15.20.17
DH/MDA Callouts	15.20.18
Traffic Alert and Collision Avoidance System (TCAS)	15.20.18
Advisories and Displays	15.20.18
Inhibits	15.20.19
Mode Control	15.20.20
Resolution Advisory Aural	15.20.21
Tail Skid	15.20.22
Tail Skid Detail	15.20.23
Two-Position Tail Skid Detail	15.20.24

Warning Systems Controls and Indicators

Chapter 15 Section 10

Fire Warning and Master Caution System

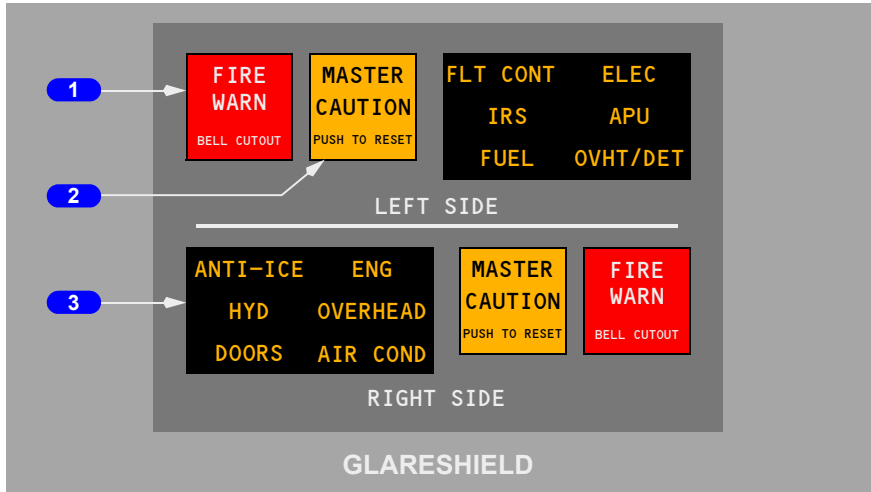

1 Master Fire Warning (FIRE WARN) Lights

Illuminated (red) – indicates a fire warning (or system test) in engine, cargo, APU or main gear wheel well

- fire warning bell sounds
- if on ground, remote APU fire warning horn sounds.

Push –

- extinguishes both master FIRE WARN lights
- silences fire warning bell
- silences remote APU fire warning horn
- resets system for additional warnings.

Note: Pushing fire warning bell cutout switch on overheat/fire protection panel results in same actions.

2 MASTER CAUTION Lights

Illuminated (amber) – a system annunciator light has illuminated.

Push – extinguishes both MASTER CAUTION lights

- system annunciator light(s) extinguish
- resets system for additional master caution conditions.

3 System Annunciator Panel

Illuminated (amber) – an amber light, relating to illuminated system annunciator, has illuminated on forward overhead, aft overhead or overheat/fire protection panel.

To extinguish – push either MASTER CAUTION light.

To recall – push and release either system annunciator panel

- if a master caution condition exists, appropriate system annunciator(s) and MASTER CAUTION lights illuminate
- a single fault in certain redundant systems, or some simple faults, cause the system annunciator light to illuminate during a recall. The system annunciator light will extinguish when the MASTER CAUTION light is pushed.

Proximity Switch Electronic Unit Light




1 Proximity Switch Electronic Unit (PSEU) Light

Illuminated (amber) –

- on the ground –
 - a fault is detected in the PSEU, or
 - an overwing exit flight lock fails to disengage when commanded.
- in-flight –
 - inhibited from thrust lever advance for takeoff until 30 seconds after landing.

Takeoff Configuration and Cabin Altitude Warning Lights

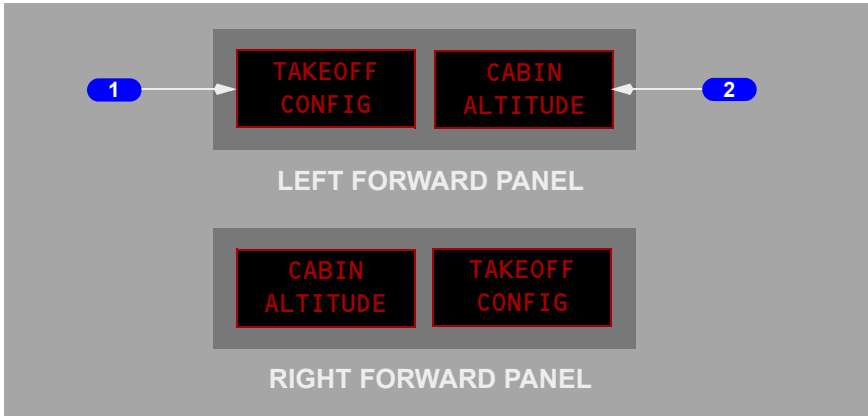

1 Takeoff Configuration Warning Light

Illuminated (red) –


- activates on the ground as the throttles are advanced if the airplane is not configured correctly for takeoff
- activation is simultaneous with aural warning intermittent horn for TAKEOFF CONFIGURATION alert.

2 Cabin Altitude Warning Light

Illuminated (red) –

- illuminates at 10,000 feet if the cabin has not been pressurized
- illuminates during flight when loss of cabin pressure occurs
- activation is simultaneous with aural warning intermittent horn for CABIN ALTITUDE alert.

Mach/Airspeed Warning and Stall Warning Test Switches

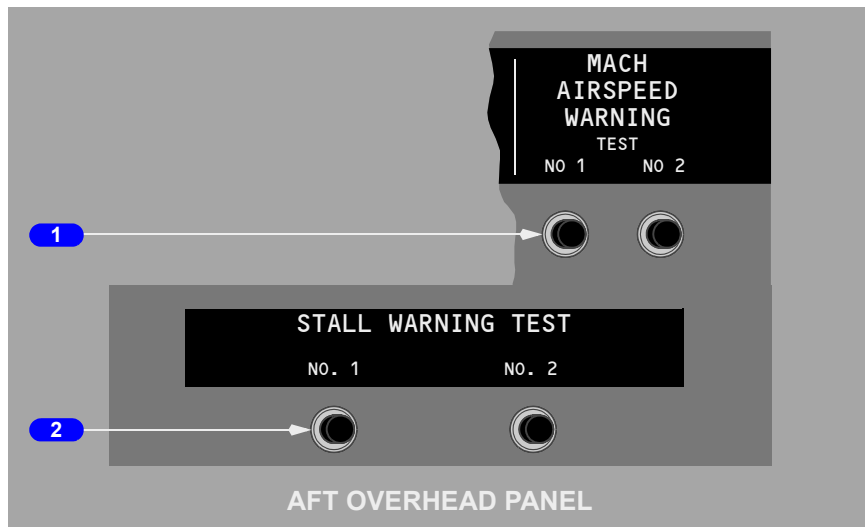

1 MACH AIRSPEED WARNING TEST Switches

Push – tests respective mach/airspeed warning system


- clacker sounds
- inhibited while airborne.

2 STALL WARNING TEST Switches

Push – on ground with AC power available: each test switch tests its respective stall management yaw damper (SMYD) computer. No.1 SMYD computer shakes Captain's control column, No.2 SMYD computer shakes First Officer's control column. Vibrations can be felt on both columns

- inhibited while airborne.

Landing Gear Warning Cutout Switch

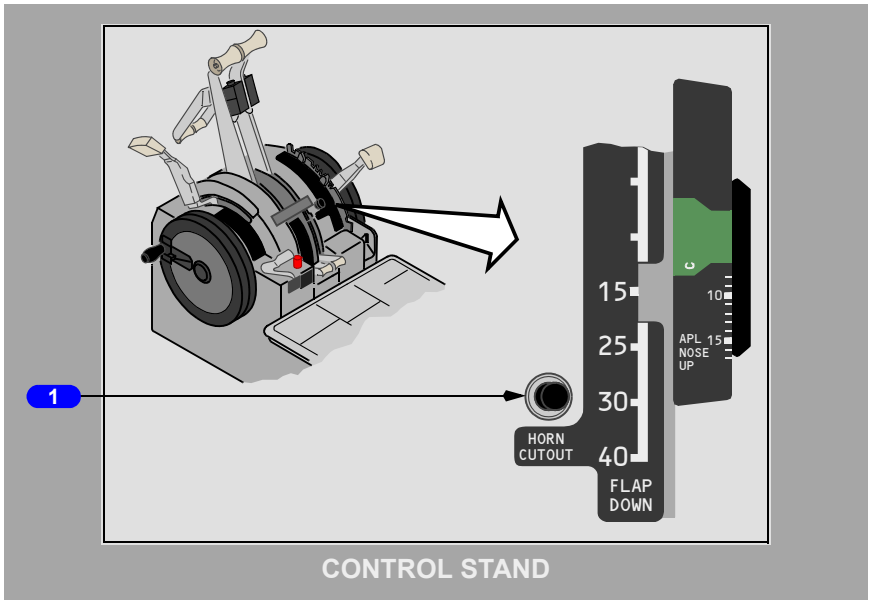


1 Landing Gear Warning Cutout Switch

Push – silences landing gear configuration warning aural indication at flaps up through 10 and above 200 feet RA.

Note: The aural indication cannot be silenced with the cutout switch at flaps greater than 10.

Altitude Alert

[Option - PFD/ND]

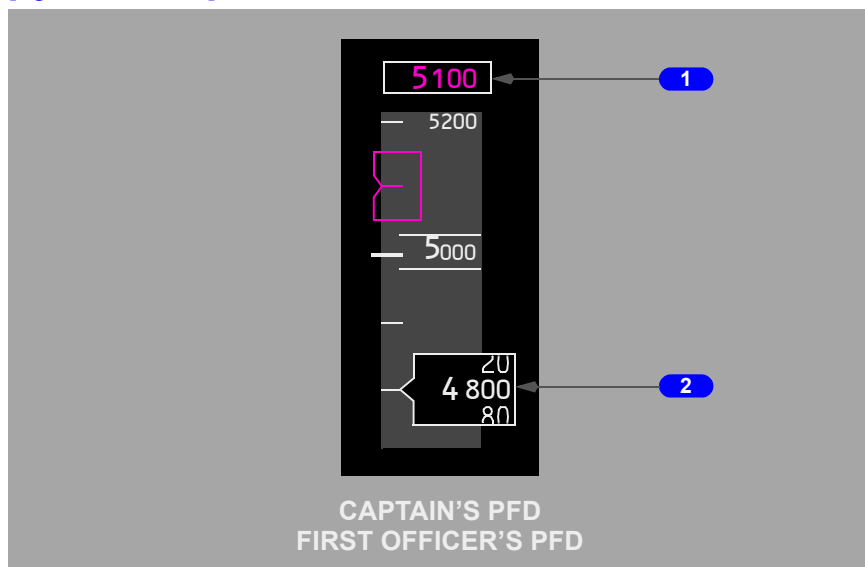

1 Selected Altitude Alert

[Option - 300/900 Altitude alert]

A white box shows around the selected altitude display between 900 feet and 300 feet before reaching the selected altitude.

2 Current Altitude Alert

[Option - 300/900 Altitude alert]


The white box around the current altitude display becomes bold between 900 feet and 300 feet before reaching the selected altitude.

The box turns amber and flashes for 300 feet to 900 feet deviation from the selected altitude.

Ground Proximity Warning System (GPWS)

GPWS Controls

[Option - With gear inhibit switch]

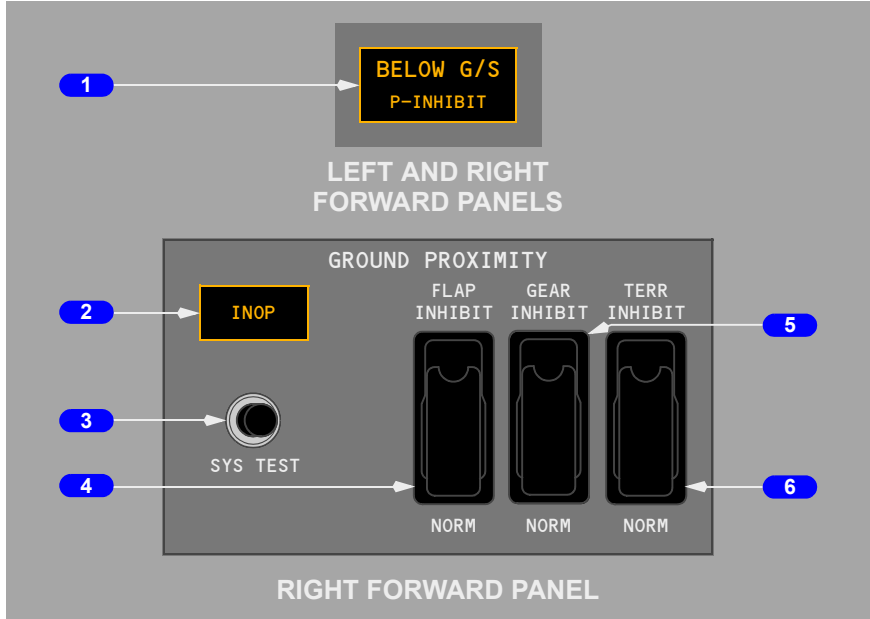

1 BELOW Glide Slope (G/S) light

Illuminated (amber) – below glide slope alert is active.

Push – inhibits ground proximity GLIDE SLOPE alert when below 1,000 feet radio altitude.

2 Inoperative (INOP) light

Illuminated (amber) – GPWS computer malfunction or power loss

- invalid inputs are being received from radio altimeter, ADIRU, ILS receiver, IRS, FMC, stall management computers, or EFIS control panel.

3 Ground Proximity System Test (SYS TEST) Switch

Push –

- momentarily on ground:
 - BELOW G/S and GPWS INOP lights illuminate
 - TERR FAIL and TERR TEST show on navigation displays
 - PULL UP and WINDSHEAR alerts illuminate

- GLIDE SLOPE, PULL UP, and WINDSHEAR aural sound
- terrain display test pattern shows on navigation displays
- CAUTION TERRAIN aural sounds and TERRAIN caution message shows on navigation displays.
- until self-test aural begin, on ground, above indications always occur first, followed by these additional aural, as described in section 15-20:
 - radio altitude based alerts
 - bank angle alert
 - approach callouts
 - windshear alert
 - look ahead terrain alerts
- system test inhibited in-flight.

4 Ground Proximity FLAP INHIBIT Switch

FLAP INHIBIT – inhibits ground proximity TOO LOW FLAPS alert.

NORM (guarded position) – Normal TOO LOW FLAPS alert active.

5 Ground Proximity GEAR INHIBIT Switch

[Option - With gear inhibit switch]

GEAR INHIBIT – inhibits ground proximity TOO LOW GEAR alert.


NORM (guarded position) – Normal TOO LOW GEAR alert active.

6 Ground Proximity Terrain Inhibit (TERR INHIBIT) Switch

TERR INHIBIT – inhibits look-ahead terrain alerts and terrain display.

NORM (guarded position) – Normal terrain alerts and terrain display active.

GPWS Terrain Display Select Switch

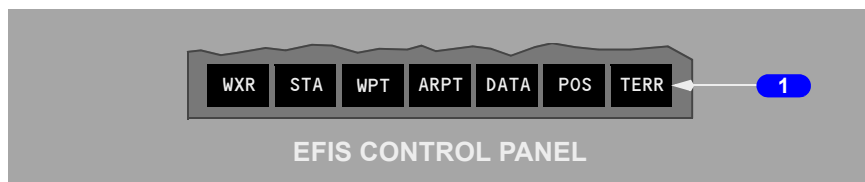

1 Terrain (TERR) Display Select Switch


Push –

- shows terrain data in expanded MAP, center MAP, expanded VOR, and expanded APP modes
- arms terrain data in PLN, center VOR, and center APP modes

- deselects weather radar display regardless of mode selector position
- second push deselects terrain display.

Terrain Display

[Option - PFD/ND]

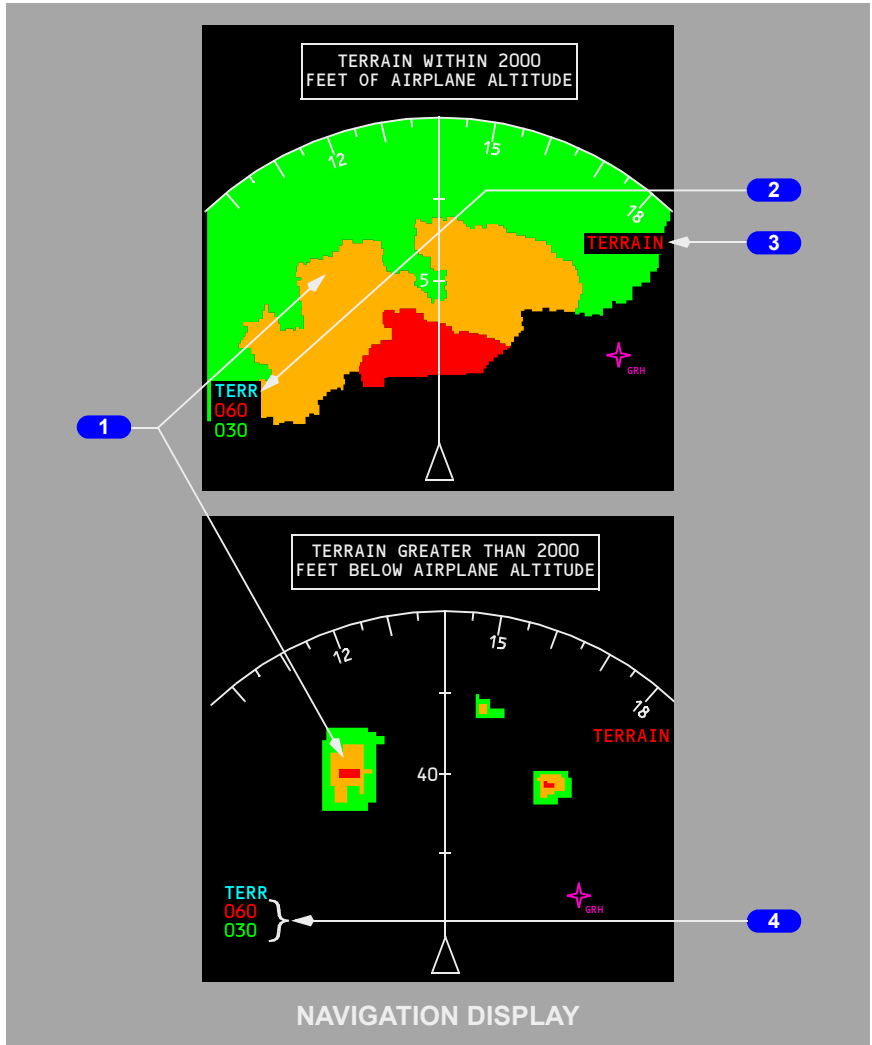

1 Terrain Display

Color and density vary based on terrain height vs. airplane altitude:

- dotted green: terrain from 2,000 feet below to 500 feet (250 feet with gear down) below the airplane's current altitude

Note: When all terrain (within the display range) is greater than 2,000 feet below airplane altitude, only the highest peaks are displayed. A peak is defined as any terrain that is equal to or higher than the top 50% of the highest terrain within the display range. For example, if an airplane is at 6,000 feet (20 nm display range selected), and the highest terrain within the display range is a 3,000 foot mountain, only the top 1,500 feet of this mountain and all other terrain that is at least 1,500 feet high, is displayed.

- dotted amber: terrain 500 feet (250 feet with gear down) below to 2,000 feet above the airplane's current altitude
- dotted red: terrain more than 2,000 feet above airplane's current altitude
- dotted magenta: no terrain data available
- solid amber: look-ahead terrain caution active
- solid red: look-ahead terrain warning active.

Note: In areas without terrain data, look-ahead terrain alerting and display functions not available. Radio altitude based terrain alerts function normally.

Note: Terrain within 400 feet of nearest airport runway elevation does not show.

Automatically shows when:

- a look-ahead terrain alert occurs, and
- neither pilot has the terrain display selected, and
- in expanded MAP, center MAP, expanded VOR, or expanded APP modes.

Updates with a display sweep, similar to weather radar display.

2 Terrain Mode Annunciation

TERR (cyan) – Terrain display enabled (manual or automatic display).

3 TERRAIN/OBSTACLE Annunciation

TERRAIN (amber) – look-ahead terrain caution alert active.

TERRAIN (red) – look-ahead terrain warning alert active.

OBSTACLE (amber) – obstacle alert caution active.

OBSTACLE (red) – obstacle alert warning active.

Shows in all navigation display modes.

4 TERR (Terrain) Elevation

Displays elevation of highest and lowest terrain.


The color of the digital elevation display corresponds to the terrain elevation:

- green - terrain elevation is more than 500 ft below airplane altitude.
- amber- terrain elevation is between 500 ft below and 2000 ft above airplane altitude
- red - terrain elevation is more than 2000 ft above airplane altitude

Note: Values displayed are applicable to terrain that is generally ahead of the airplane flight path. Terrain near the left and right margins of the display may not be included in the calculations.

Predictive Windshear Display and Annunciations

[Option - PFD/ND]

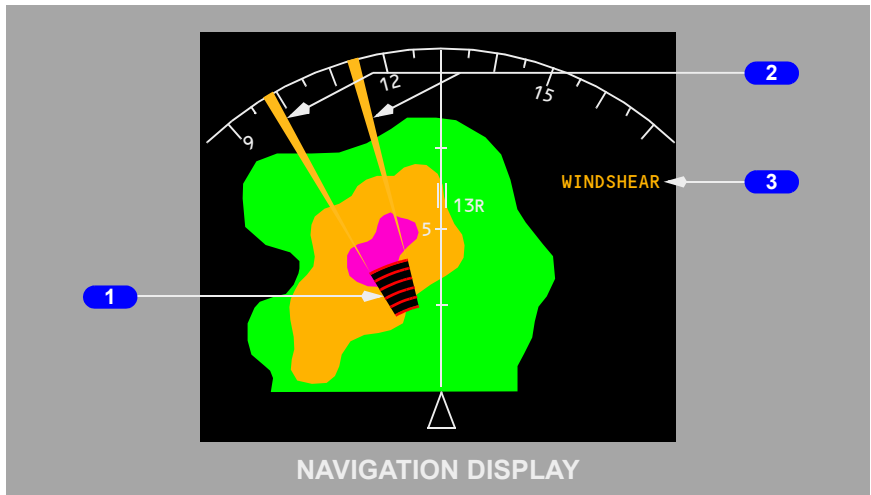

1 Predictive Windshear Symbol

Displayed (red and black) – Predictive windshear alert active.

Shows windshear location and approximate geometric size (width and depth).

Symbol, radials, and weather radar returns automatically show when:

- predictive windshear alert occurs, and
- neither pilot has WXR display selected, and
- in expanded MAP, center MAP, VOR, or APP modes.

When terrain display is active, weather radar display replaces terrain display.

2 Predictive Windshear Symbol Radials

Displayed (amber) – Predictive windshear alert active.

Extend from predictive windshear symbol to help identify location of windshear event

3 WINDSHEAR Annunciation

WINDSHEAR (amber) – predictive windshear caution active.

WINDSHEAR (red) – predictive windshear warning active.

Shows in all navigation display modes.

TCAS Controls (Transponder Panel)

[Option - Gables G6992-02 Transponder Panel]



1 Transponder Mode Selector

TA (traffic advisory) ONLY – enables the display of traffic advisory (TA) targets.

TA/RA (resolution advisory) – enables the display of traffic advisory (TA) and resolution advisory (RA) targets.

Warning Systems
System Description**Chapter 15**
Section 20**Introduction**

Aural, tactile and visual warning signals alert the flight crew to conditions requiring action or caution in the operation of the airplane. The character of the signals varies, depending upon the degree of urgency or hazards involved. Aural, tactile, and visual signals are used singularly or in combination to simultaneously provide both warnings and information regarding the nature of the condition.

Mach/airspeed warnings, landing gear warnings, takeoff configuration warnings, windshear warnings, and ground proximity warnings are discussed in this section. Cabin altitude warning is discussed in this section and in the Air Systems chapter, and autopilot and autothrottle disconnect warnings are discussed in the Automatic Flight chapter. The conditions which excite the fire warning bell are discussed in the Fire Protection chapter.

Many of the flight instrument display symbols and annunciations listed in this chapter also appear on the Head Up Display (HUD) System. Refer to Chapter 10, Flight Instruments, for HUD display symbol descriptions.

Conditions which require the immediate attention of the flight crew are indicated by red warning lights located in the area of the pilots' primary field of vision. These lights indicate engine, wheel well, cargo, or APU fires; autopilot, autothrottle disconnects; and landing gear unsafe conditions.

Conditions which require the timely attention of the flight crew are indicated by amber caution lights.

Blue lights inform the flight crew of electrical power availability, valve position, equipment status, and flight attendant or ground communications. Blue lights are for information and do not require immediate flight crew attention. Some system blue lights indicate a transitional state by illuminating bright as valves or components reposition, then returning to a dim blue when the required configuration is reached.

Green lights indicate a fully extended configuration, e.g., landing gear and leading edge devices.

For specific information regarding red, amber, blue, and green lights refer to the appropriate systems chapters.

Stall warning is provided by a control column shaker on each control column.

Various aural signals call attention to warnings and cautions. An aural warning for airspeed limits is given by a clacker, the autopilot disconnect by a warning tone, takeoff configuration and cabin altitude by an intermittent horn, and landing gear positions by a steady horn. The fire warning by a fire warning bell. Ground proximity warnings and alerts, and windshear warnings and alerts are given by voice warnings.

Generally, aural automatically silence when the associated non-normal condition no longer exists.

Master Fire Warning Lights

Two master FIRE WARN lights illuminate when any fire warning condition occurs. The lights remain illuminated as long as the condition exists. Pushing either master FIRE WARN light or fire warning bell cutout switch extinguishes both lights, silences the fire warning bell and resets the system for future warnings. Further information appears in the Fire Protection chapter.

Master Caution Lights

Two MASTER CAUTION lights illuminate when any caution occurs outside the normal field of vision of the flight crew. The lights remain illuminated as long as the caution condition exists, or until the crew resets the system. Pushing either MASTER CAUTION light extinguishes both lights and resets the master caution system for further cautions. Pushing either annunciator light panel recalls all existing fault annunciations.

A single fault in certain redundant systems, or some simple faults, do not illuminate the MASTER CAUTION or system annunciator lights. These faults, however, are stored in the master caution system. Pushing the system annunciator recalls the single fault on the system annunciator panel.

When the MASTER CAUTION recall is pressed, all twelve system lights should illuminate while the press-to-test feature is held. If a system annunciator light does not illuminate, refer to the dispatch deviation procedures guide (DDPG).

System Annunciator Lights

Two system annunciator light panels are located on the glare shield. The annunciator light panels include only those systems located on the forward overhead, aft overhead, and fire control panels. If a caution condition exists, the appropriate system annunciator(s) and MASTER CAUTION lights illuminate.

System Annunciators and Related Amber Lights – Left Side

FLT CONT	FLT CONT IRS FUEL ELEC APU OVHT/DET	ELEC
LOW QUANTITY LOW PRESSURE FEEL DIFF PRESS SPEED TRIM FAIL MACH TRIM FAIL AUTO SLAT FAIL YAW DAMPER STBY RUD ON		DRIVE STANDBY PWR OFF TRANSFER BUS OFF SOURCE OFF TR UNIT BATTERY DISCHARGE ELEC
IRS		APU
FAULT ON DC DC FAIL GPS		LOW OIL PRESSURE FAULT OVERSPEED
FUEL		OVHT/DET
LOW PRESSURE FILTER BYPASS		ENGINE 1 OVERHEAT ENGINE 2 OVERHEAT APU DET INOP

System Annunciators and Related Amber Lights – Right Side

[Option - 737-600/700]

ANTI-ICE	ANTI-ICEENG HYDOVERHEAD DOORSAIR COND RIGHT SIDE GLARESHIELD	ENG
WINDOW OVERHEAT PITOT HEAT COWL ANTI-ICE		REVERSER EEC ALTN MODE ENGINE CONTROL
HYD		OVERHEAD
OVERHEAT LOW PRESSURE		EQUIP COOLING-OFF EMER EXIT LIGHTS-NOT ARMED FLIGHT RECORDER-OFF PASS OXY-ON PSEU
DOORS		AIR COND
FWD/AFT ENTRY EQUIP FWD/AFT CARGO FWD/AFT SERVICE LEFT/RIGHT OVERWING AIRSTAIR		DUAL BLEED WING-BODY OVERHEAT BLEED TRIP OFF AUTO FAIL OFF SCHED DESCENT DUCT OVERHEAT PACK TRIP OFF

[Option - 737-800/900]

ANTI-ICE	ANTI-ICEENG HYDOVERHEAD DOORSAIR COND	ENG
WINDOW OVERHEAT PITOT HEAT COWL ANTI-ICE		REVERSER EEC ALTN MODE ENGINE CONTROL
HYD		OVERHEAD
OVERHEAT LOW PRESSURE		EQUIP COOLING-OFF EMER EXIT LIGHTS-NOT ARMED FLIGHT RECORDER-OFF PASS OXY-ON PSEU ELT
DOORS		AIR COND
FWD/AFT ENTRY EQUIP FWD/AFT CARGO FWD/AFT SERVICE LEFT/RIGHT OVERWING AIRSTAIR	RIGHT SIDE GLARESHIELD	DUAL BLEED WING-BODY OVERHEAT BLEED TRIP OFF AUTO FAIL OFF SCHED DESCENT ZONE TEMP PACK

Warning Systems

Intermittent Cabin Altitude/Configuration Warning

The takeoff configuration warning is armed when the airplane is on the ground and either or both forward thrust levers are advanced for takeoff. An intermittent warning horn sounds if:

- trailing edge flaps are not in the flaps 1 through 25 takeoff range, or
- trailing edge flaps are in a skew or asymmetry condition, or have uncommanded motion, or
- leading edge devices are not configured for takeoff or have uncommanded motion, or
- speed brake lever is not in the DOWN position, or

- spoiler control valve is open providing pressurized hydraulic fluid to the ground spoiler interlock valve, or
- parking brake is set, or
- stabilizer trim not set in the takeoff range.

The Cabin Altitude Warning Horn activates when cabin altitude exceeds 10,000 feet. An intermittent warning horn is heard. The Cabin Altitude Warning Horn may be silenced by momentarily pressing the ALT HORN CUTOUT switch on the Cabin Altitude Panel.

WARNING: The Cabin Altitude and Takeoff Configuration Warnings use the same intermittent tone when activated.

Landing Gear Configuration Warnings

Visual indications and aural warnings of landing gear position are provided by the landing gear indicator lights and landing gear warning horn.

Visual Indications

The landing gear indication lights are activated by signals from each gear, the LANDING GEAR lever, and the forward thrust lever position as follows:

Green light illuminated – landing gear is down and locked.

Red light illuminated –

- landing gear is in disagreement with LANDING GEAR lever position (in transit or unsafe).
- landing gear is not down and locked (with either or both forward thrust levers retarded to idle, and below 800 feet AGL).

All lights extinguished – landing gear is up and locked with the LANDING GEAR lever UP or OFF.

Aural Indications

A steady warning horn is provided to alert the flight crew whenever a landing is attempted and any gear is not down and locked. The landing gear warning horn is activated by forward thrust lever and flap position as follows:

Flaps up through 10 –

- altitude below 800 feet RA, when either forward thrust lever set between idle and approximately 20 degrees thrust lever angle or an engine not operating and the other thrust lever less than 34 degrees. The landing gear warning horn can be silenced (reset) with the landing gear warning HORN CUTOUT switch
- if the airplane descends below 200 feet RA, the warning horn cannot be silenced by the warning HORN CUTOUT switch.

Flaps 15 through 25 –

- either forward thrust lever set below approximately 20 degrees or an engine not running, and the other thrust lever less than 34 degrees; the landing gear warning horn cannot be silenced with the landing gear warning HORN CUTOFF switch.

Flaps greater than 25 –

- regardless of forward thrust lever position; the landing gear warning horn cannot be silenced with the landing gear warning HORN CUTOFF switch.

The warning indication is cancelled when the configuration error is corrected.

Proximity Switch Electronic Unit (PSEU)

The PSEU monitors the following systems:

- takeoff configuration warnings
- landing configurations warnings
- landing gear
- air/ground sensing.

The PSEU, its sensors, and its input signals are monitored for internal faults. When designated faults are detected, a PSEU light on the aft overhead panel illuminates, and the OVERHEAD system annunciator light and MASTER CAUTION lights illuminate. The PSEU light can be reset following a maintenance BITE check or repair of the cause of the fault.

The PSEU light and OVERHEAD system annunciator do not illuminate for simple faults unless a system annunciator panel is pushed for recall. In this case, a simple fault, resetting the MASTER CAUTION system extinguishes the PSEU light.

The PSEU light is inhibited:

- in flight
- when the thrust levers are advanced toward takeoff power
- for 30 seconds after landing.

Mach/Airspeed Warning System

Two independent Mach/airspeed warning systems provide a distinct aural warning, a clacker, any time the maximum operating airspeed of V_{mo}/M_{mo} is exceeded. The warning clackers can be silenced only by reducing airspeed below V_{mo}/M_{mo}.

[Option - Airspeed Indicator, 737-600/700/800/900]

The airspeed indicator displays red warning bands indicating maximum and minimum airspeeds. Amber bands indicate maximum and minimum maneuvering airspeeds. The top of the lower amber band indicates the minimum maneuver speed. It is the slowest speed that provides full maneuvering: 0.3 g maneuver margin (40° bank) to stick shaker (below approximately 20,000 ft.) or initial buffet (above approximately 20,000 ft.).

When either an overspeed condition or a system test occurs, the ADIRU transmits a signal to the aural warning module, sounding the clacker. The system can only be tested on the ground.

Stall Warning System

Natural stall warning (buffet) usually occurs at a speed prior to stall. In some configurations the margin between stall and natural stall warning is less than desired. Therefore, an artificial stall warning device, a stick shaker, is used to provide the required warning.

The stall warning “stick shaker” consists of two eccentric weight motors, one on each control column. They are designed to alert the pilots before a stall develops. The warning is given by vibrating both control columns. The system is armed in flight at all times. The system is deactivated on the ground.

Two independent, identical stall management yaw damper (SMYD) computers determine when stall warning is required based upon:

- alpha vane angle of attack outputs
- ADIRU outputs
- anti-ice controls
- wing configurations
- air/ground sensing
- thrust
- FMC outputs.
- mach compensation

The SMYD computers provide outputs for all stall warning to include stick shaker and signals to the pitch limit indicator and airspeed displays and the GPWS windshear detection and alert.

Two test switches are installed in the aft overhead panel. Pushing either of these initiates a self-test of the respective stall warning channel. The No.1 activates the Captain stick shaker, and the No. 2 activates the F/O stick shaker. Either stick shaker vibrates both columns through column interconnects.

Altitude Alerting System

[Option - PFD/ND, 300/900 altitude alert]

Altitude alerting occurs when approaching or departing the MCP–selected altitude. Altitude alerting is inhibited when trailing edge flaps are extended to 25 or greater, or while G/S is captured.

Acquisition Alerting


900 feet before reaching the selected altitude, a white box shows around the selected altitude display and the box around the current altitude becomes bold. A momentary tone sounds. At 300 feet from selected altitude, the selected altitude box no longer shows.

Deviation Alerting

When deviating by 300 feet from the selected altitude, a momentary tone sounds and the current altitude box turns amber and begins to flash. The amber flashing continues until:

- altitude deviation becomes less than 300 feet
- altitude deviation becomes more than 900 feet
- a new altitude is selected.

Altitude Alert Profile

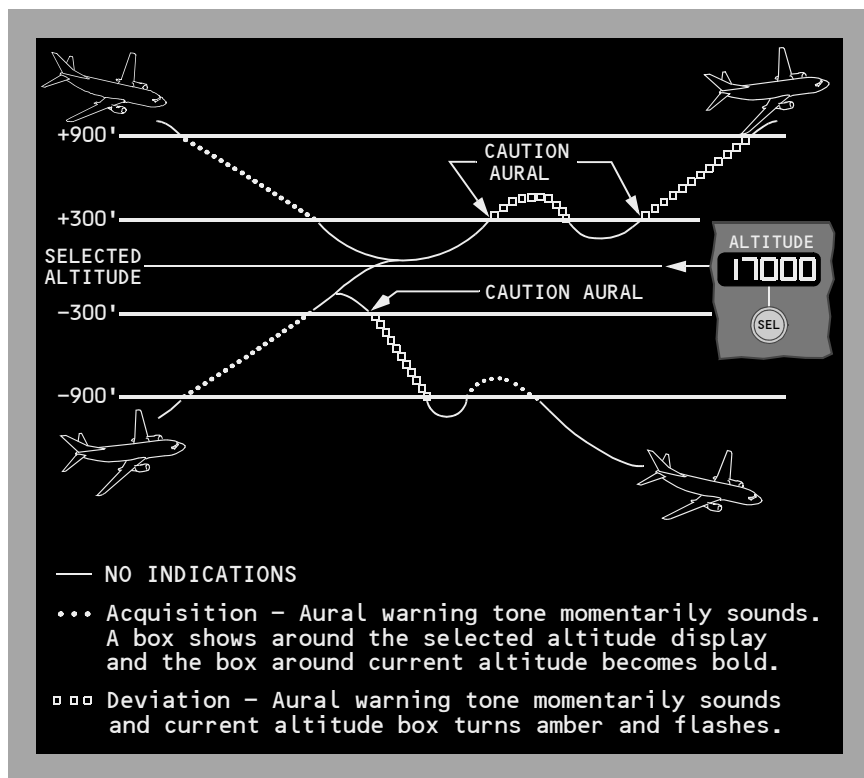

Ground Proximity Alerts

The GPWS provides alerts for potentially hazardous flight conditions involving imminent impact with the ground.

The GPWS monitors terrain proximity using an internal world wide terrain data base. Proximate terrain data shows on the navigation display. If there is a potential terrain conflict, alerts are provided based on estimated time to impact. These alerts are “look-ahead terrain alerts.”

The GPWS provides alerts based on radio altitude and combinations of barometric altitude, airspeed, glide slope deviation, and airplane configuration. The alerts are for:

- excessive descent rate
- excessive terrain closure rate
- altitude loss after takeoff or go-around
- unsafe terrain clearance when not in the landing configuration
- excessive deviation below an ILS glide slope

These alerts are “radio altitude based alerts.”

Ground proximity alerts are accompanied by voice aural alerts and the PULL UP annunciation on the attitude indicators or, for deviation below glide slope alert, the BELOW G/S light.

Note: Terrain ahead of the airplane may exceed available climb performance. A ground proximity alert does not guarantee terrain clearance.

Look-ahead terrain alerts and radio altitude based alerts are prioritized based on the level of hazard and the required flight crew reaction time. Look-ahead terrain alerts and radio altitude based alerts are inhibited by an actual windshear warning (airplane in windshear).

Look–Ahead Terrain Alerting

The GPWS terrain data base contains detailed terrain data near major airports, and data in lesser detail for areas between airports. Terrain within 2,000 feet of airplane barometric altitude shows on the navigation display. The terrain data is not designed to be an independent navigation aid.

The terrain display is generated from a data base contained in the GPWS computer and correlated to GPS position.

Terrain and weather radar cannot show together on a display. If one pilot selects terrain and the other pilot selects weather radar, each display updates on alternating sweeps. All other displays (TCAS, LNAV routing, etc.) can show with terrain data.

Look-ahead terrain alerts are based on the airplane’s position, barometric altitude, vertical flight path, and ground speed.

DO NOT USE FOR FLIGHT
BBJ Flight Crew Operations Manual

Look Ahead Terrain Alerts

AURAL ALERT	VISUAL ALERT	DESCRIPTION
TERRAIN TERRAIN PULL UP	PULL UP on both attitude indicators Red TERRAIN message on navigation display (all modes) Solid red terrain on navigation display	20 to 30 seconds from projected impact with terrain shown solid red on the navigation display (in expanded MAP, center MAP, expanded VOR, or expanded APP modes only). Moving the ground proximity terrain inhibit switch to TERRAIN INHIBIT inhibits the alert.
CAUTION TERRAIN	Amber TERRAIN message on navigation display (all modes) Solid amber terrain on navigation displays	40 to 60 seconds from projected impact with terrain shown solid amber on the navigation display (in expanded MAP, center MAP, expanded VOR, or expanded APP modes only). Moving the ground proximity terrain inhibit switch to TERRAIN INHIBIT inhibits the alert.
TOO LOW, TERRAIN	PULL UP on both attitude indicators	Descent below unsafe radio altitude while too far from any airport in the terrain database. Moving the ground proximity terrain inhibit switch to TERRAIN INHIBIT inhibits the alert.

Radio Altitude Based Alerts

AURAL ALERT	VISUAL ALERT	DESCRIPTION
PULL UP	PULL UP on both attitude indicators	Follows SINK RATE alert if descent rate becomes severe. Follows radio altitude based TERRAIN alert if excessive terrain closure rate continues and landing gear and/or flaps are not in landing configuration.
TERRAIN	PULL UP on both attitude indicators	Excessive terrain closure rate.
DON'T SINK	PULL UP on both attitude indicators	Excessive altitude loss after takeoff or go-around.
GLIDE SLOPE	BELOW G/S P-INHIBIT lights	Deviation below glide slope. Volume and repetition rate increase as deviation increases. Pushing the ground proximity BELOW G/S P-INHIBIT light cancels or inhibits the alert below 1,000 feet RA.
SINK RATE	PULL UP on both attitude indicators	Excessive descent rate.
TOO LOW, FLAPS	PULL UP on both attitude indicators	Unsafe terrain clearance at low airspeed with flaps not in a normal landing position. Pushing the ground proximity flap inhibit switch to FLAP INHIBIT inhibits the alert.
TOO LOW, GEAR	PULL UP on both attitude indicators	Unsafe terrain clearance at low airspeed with landing gear not down. Pushing the ground proximity gear inhibit switch to GEAR INHIBIT inhibits the alert.
TOO LOW, TERRAIN	PULL UP on both attitude indicators	Unsafe terrain clearance at high airspeed with either landing gear not down or flaps not in landing position. Follows DON'T SINK if another descent is initiated after initial alert, before climbing to the altitude where the initial descent began.

Obstacle Alerts

Obstacle display and alerting provides caution and warning level alerts for man-made obstacles 100 feet and higher.

Aural Alert	Visual Alert	Description
OBSTACLE OBSTACLE PULL UP	PULL UP on both attitude indicators Red OBSTACLE message on ND (all modes) Solid red terrain on ND	20 to 30 seconds from projected impact with obstacle shown solid red on the ND (in MAP, MAP CTR, VOR, or APP modes only). Moving the ground proximity terrain inhibit switch to TERRAIN INHIBIT inhibits the alert.
CAUTION OBSTACLE	Amber OBSTACLE message on ND (all modes) Solid amber terrain on ND	40 to 60 seconds from projected impact with obstacle shown solid amber on the ND (in MAP, MAP CTR, VOR, or APP modes only). Moving the ground proximity terrain inhibit switch to TERRAIN INHIBIT inhibits the alert.

Windshear Alerts

Windshear alerts are available during takeoff, approach, and landing:

- The GPWS provides a warning when the airplane is in a windshear.
- The weather radar provides alerts for excessive windshear ahead of the airplane. These are “predictive windshear alerts.”

Windshear warnings are accompanied by WINDSHEAR on the attitude indicators and voice aural alerts.

Windshear cautions are accompanied by a voice aural alert.

Windshear alerts are prioritized based on the level of hazard and the required flight crew reaction time. Predictive windshear alerts are inhibited by an actual windshear warning (airplane in windshear), look-ahead terrain alerts, or radio altitude based alerts.

Windshear Warning (Airplane in Windshear)

AURAL ALERT	VISUAL ALERT	DESCRIPTION
Two-tone siren followed by WINDSHEAR	Red WINDSHEAR on both attitude indicators.	Excessive windshear at the current airplane position detected by GPWS. Enabled below 1,500 feet RA. GPWS Windshear detection begins at rotation.

Predictive Windshear Alerts

The weather radar uses radar imaging to detect disturbed air prior to entering a windshear.

Note: The weather radar provides windshear alerts for windshear events containing some level of moisture or particulate matter.

Note: The weather radar detects microbursts and other windshears with similar characteristics. The weather radar does not provide alerting for all types of windshear. The flight crew must continue to rely on traditional windshear avoidance methods.

DO NOT USE FOR FLIGHT

BBJ Flight Crew Operations Manual

AURAL ALERT	VISUAL ALERT	DESCRIPTION
WINDSHEAR AHEAD	Red WINDSHEAR on both attitude indicators RED windshear symbol on navigation display Red WINDSHEAR message on navigation display (all modes)	Windshear close to and directly ahead of the airplane detected by the weather radar. Enabled during takeoff, below 1,200 feet RA. Predictive windshear symbol on the navigation display shows windshear position (expanded MAP, center MAP, expanded VOR or expanded APP modes only).
GO AROUND, WINDSHEAR AHEAD	Red WINDSHEAR on both attitude indicators RED windshear symbol on navigation display Red WINDSHEAR message on navigation display (all modes)	Windshear within 1.5 miles and directly ahead of the airplane detected by the weather radar. Enabled during approach, below 1,200 feet RA. Predictive windshear symbol on the navigation display shows windshear position (expanded MAP, center MAP, expanded VOR or expanded APP modes only).
MONITOR RADAR DISPLAY	RED windshear symbol on navigation display Amber WINDSHEAR message on navigation display (all modes)	Windshear within 3 miles and ahead of the airplane detected by the weather radar. Enabled during takeoff and approach, below 1,200 feet RA. Predictive windshear symbol on the navigation display shows windshear position (expanded MAP, center MAP, expanded VOR or expanded APP modes only).


The weather radar automatically begins scanning for windshear when:

- thrust levers set for takeoff, even if engine is off or IRS not aligned, or
- in flight below 2,300 feet RA (predictive windshear alerts are issued below 1,200 feet RA).

[\[Option - With Collins weather radar 622-5132-632 or 622-5132-633\]](#)

Alerts are available approximately 12 seconds after the weather radar begins scanning for windshear. Predictive windshear alerts can be enabled prior to takeoff by pushing the EFIS control panel WXR switch. When PWS is enabled, radar antenna scan sweep is reduced.

If windshear is not detected, weather radar returns show only after pushing the EFIS control panel WXR switch.

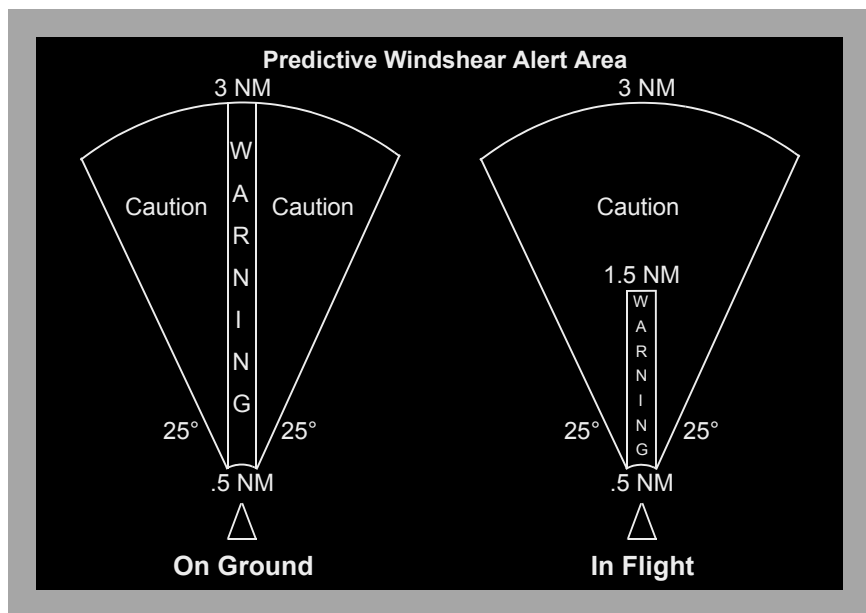

Predictive Windshear Inhibits

During takeoff and landing, new predictive windshear caution alerts are inhibited between 80 knots and 400 feet RA, and new warning alerts between 100 knots and 50 feet RA. These inhibits do not remove existing predictive windshear alerts. If a warning/caution event occurs before those boundaries, it will remain on the display and the complete aural callout will be annunciated.

Bank Angle Alert

The GPWS provides the aural alert BANK ANGLE, BANK ANGLE when roll angle exceeds 35 degrees, 40 degrees, and 45 degrees. Once sounded, the alert is silent for that bank angle (35, 40, or 45 degrees) until the system is reset by decreasing bank angle to 30 degrees or less.

Approach Callouts

Radio Altitude Callouts

The GPWS provides the following altitude callouts during approach:

- 2,500 feet – TWENTY FIVE HUNDRED
- 1,000 feet – ONE THOUSAND
- 50 feet – FIFTY

-
- 40 feet – FORTY
 - 30 feet – THIRTY
 - 20 feet – TWENTY
 - 10 feet – TEN.

DH/MDA Callouts

The GPWS provides height callouts based on the altitude set by the Captain's Minimums selector.

Callouts are based on radio altitude when the MINS selector is set to RADIO. Callouts are based on barometric altitude when the MINS selector is set to BARO:

- DH/MDA plus 100 feet – APPROACHING DECISION HEIGHT
- at DH/MDA – MINIMUMS

Traffic Alert and Collision Avoidance System (TCAS)

TCAS alerts the crew to possible conflicting traffic. TCAS interrogates operating transponders in other airplanes, tracks the other airplanes by analyzing the transponder replies, and predicts the flight paths and positions. TCAS provides advisory and traffic displays of the other airplanes to the flight crew. Neither advisory, guidance, nor traffic display is provided for other airplanes which do not have operating transponders. TCAS operation is independent of ground-based air traffic control.

To provide advisories, TCAS identifies a three dimensional airspace around the airplane where a high likelihood of traffic conflict exists. The dimensions of this airspace are based upon the closure rate with conflicting traffic.

TCAS equipment interrogates the transponders of other airplanes to determine their range, bearing, and altitude. A traffic advisory (TA) is generated when the other airplane is approximately 40 seconds from the point of closest approach. If the other airplane continues to close, a resolution advisory (RA) is generated when the other airplane is approximately 25 seconds from the point of closest approach. The RA provides aural warning and guidance as well as maneuver guidance to maintain or increase separation from the traffic.

Non-transponder equipped airplanes are invisible to TCAS. RAs can be generated if the other airplane has a mode C transponder. Coordinated RAs require both airplanes to have TCAS.

Advisories and Displays

Annunciations associated with TCAS and the traffic displays are discussed further in Chapter 10.

TAs are indicated by the aural “TRAFFIC, TRAFFIC” which sounds once and is then reset until the next TA occurs. The TRAFFIC annunciation appears on the navigation display. The TA symbol appears at the proper range and relative bearing of the other airplane. Altitude and vertical motion are included with the symbol if the other airplane is using transponder mode S or C.

RAs are indicated by one or more aural listed in the RA aural table. The TRAFFIC annunciation and RA symbol which depicts the traffic’s relative bearing, range, altitude, and vertical motion are on the navigation display similar to the TA symbol.

Additional symbols are proximate traffic and other traffic. Proximate traffic is within six miles and 1200 feet vertically, but is not expected to cause a TA or RA alert. Other traffic is beyond the six mile and 1200 feet vertical criteria. Traffic symbols are revised as the TCAS system constantly reevaluates the motion of other airplanes.

If the range of the navigation display does not permit the display of a TA or RA an OFFSCALE annunciation appears on the navigation display.

TA or RA traffic detected by TCAS which do not provide a bearing generate a no-bearing text block beneath the TRAFFIC text on the navigation display. The text block contains distance, altitude, and vertical motion information.

Vertical motion information is indicated by an arrow depicting a climb or descent if a change of greater than 500 feet per minute is detected.

TCAS display automatically shows when:

- the transponder mode selector is in TA ONLY or TA/RA, and
- a TCAS TA or RA occurs, and
- neither pilot has the TCAS (TFC) display selected, and
- in MAP, center MAP, VOR, or APP modes.

Inhibits

[Option - With TCAS change 7.0 update]

INCREASE DESCENT RAs are inhibited below approximately 1,500 feet radio altitude.

DESCEND RAs are inhibited below approximately 1,100 feet radio altitude.

RAs are inhibited below approximately 1,000 feet radio altitude. Below 1,000 feet when the TA/RA mode is selected on the transponder panel, TA only mode is enabled automatically and the TCAS message TA ONLY displays on the ND.

All TCAS voice annunciations are inhibited below approximately 500 feet radio altitude.

All TCAS alerts are inhibited by GPWS and windshear warnings.

Mode Control

The TCAS operating mode is controlled from the TCAS/ATC transponder panel. TCAS is normally operated in the TA/RA mode. However, sometimes it is necessary to operate in the TA ONLY mode to prevent undesired RAs. For example, TA ONLY may be selected when intentionally operating near other airplanes such as might be found in VFR conditions at a busy airport, or on parallel approach.

ATC transponders on TCAS equipped airplanes communicate to provide appropriate coordinated avoidance maneuvers. When performance is limited, such as with an inoperative engine, select TA ONLY to prevent receiving RAs beyond the airplane's capabilities, and to prevent communicating to other airplanes an ability to perform a RA maneuver.

Resolution Advisory Aural

The following table identifies the possible callouts associated with RAs and the vertical restrictions or maneuver recommended in each case.

[Option - With TCAS change 7.0 update]

AURAL ALERTS	VERTICAL RESTRICTIONS/MANEUVER
MONITOR VERTICAL SPEED	Present pitch attitude is outside the RA pitch command area. Keep pitch attitude away from red area.
MAINTAIN VERTICAL SPEED, MAINTAIN	
MAINTAIN VERTICAL SPEED, CROSSING MAINTAIN	
CLIMB, CLIMB	Climb at the displayed pitch
DESCEND, DESCEND	Descend at the displayed pitch
ADJUST VERTICAL SPEED, ADJUST	Reduce climb or descent rate
CLIMB, CROSSING CLIMB, CLIMB, CROSSING CLIMB	Climb at displayed pitch. Airplane climbs through traffic's altitude.
DESCEND, CROSSING DESCEND DESCEND, CROSSING DESCEND	Descend at displayed pitch. Airplane descends through traffic's altitude.
INCREASE CLIMB, INCREASE CLIMB	Increase climb rate from initial pitch attitude.
INCREASE DESCENT, INCREASE DESCENT	Increase descent rate from initial pitch attitude.
CLIMB – CLIMB NOW, CLIMB – CLIMB NOW	Reversal maneuver from initial descent RA.
DESCEND – DESCEND NOW, DESCEND – DESCEND NOW	Reversal maneuver from initial climb RA.
CLEAR OF CONFLICT	RA encounter terminated. Maneuver guidance no longer displayed.

Tail Skid

[737-800/-900]

The tail skid assembly consists of a cartridge assembly, tail skid, fairing (skirt) and shoe. The fairing provides an enclosure for the actual tail skid structure. The shoe is fitted to the bottom of the fairing.


The cartridge assembly consists of a crushable honeycomb material. When the tail skid strikes the runway the skid moves upward and the honeycomb material crushes. The tail skid is serviceable when the cartridge warning decal shows both green and red. The green disappears gradually as the cartridge is crushed. When the warning decal is all red, the cartridge must be replaced.

The shoe is what contacts the runway in the event of an over rotation. The shoe surface displays “wear dimples” which serve as a reference for shoe replacement.

[Option]

The two-position tail skid is powered by hydraulic system A. It is extended for landing and retracted for takeoff.

Tail Skid Detail

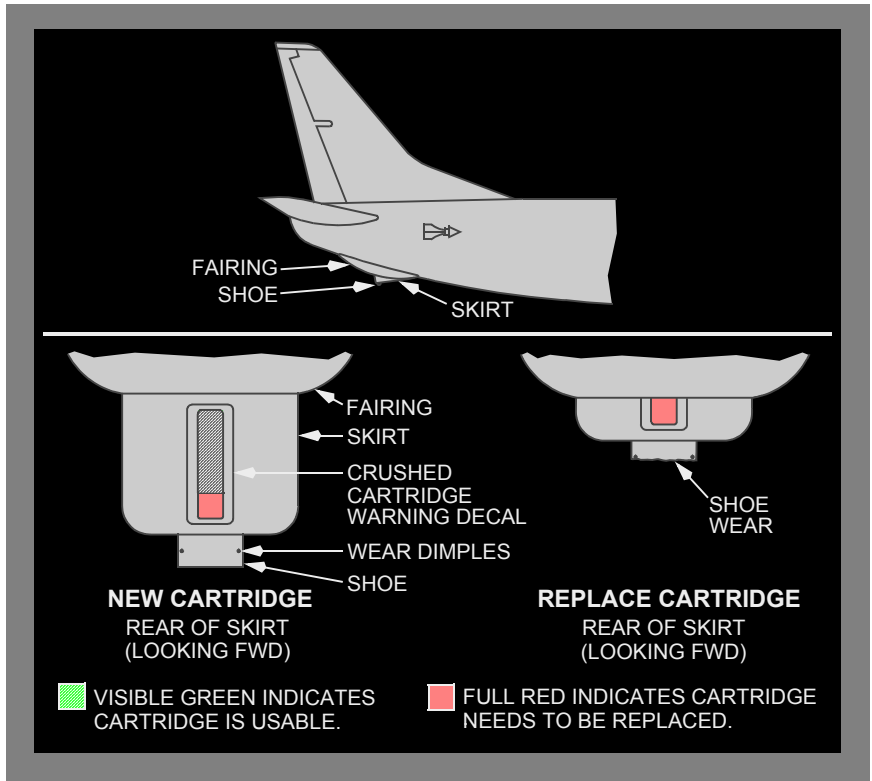

Two-Position Tail Skid Detail

[Option]

